

Installing FRE-4-PPC Ethernet Link Modules in BN Platforms

Part No. 302156-A Rev 00
March 1999

NORTEL
NETWORKS™

Copyright © 1999 Bay Networks, Inc.

All rights reserved. Printed in the USA. March 1999.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Bay Networks, Inc.

Trademarks

BCN, BLN, BN, FRE, PPX, and Bay Networks are registered trademarks and BCC is a trademark of Bay Networks, Inc.

All other trademarks and registered trademarks are the property of their respective owners.

Statement of Conditions

In the interest of improving internal design, operational function, and/or reliability, Bay Networks, Inc. reserves the right to make changes to the products described in this document without notice.

Bay Networks, Inc. does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

USA Requirements Only

Federal Communications Commission (FCC) Compliance Notice: Radio Frequency Notice

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy. If it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to take whatever measures may be necessary to correct the interference at their own expense.

European Requirements Only

EN 55 022 Statement

This is to certify that the Bay Networks BN is shielded against the generation of radio interference in accordance with the application of Council Directive 89/336/EEC, Article 4a. Conformity is declared by the application of EN 55 022 Class A (CISPR 22).

Warning: This is a Class A product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take appropriate measures.

EC Declaration of Conformity

This product conforms (or these products conform) to the provisions of Council Directive 89/336/EEC and 73/23/EEC. The Declaration of Conformity is available on the Bay Networks World Wide Web site at www.baynetworks.com.

Japan/Nippon Requirements Only

Voluntary Control Council for Interference (VCCI) Statement

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

Voluntary Control Council for Interference (VCCI) Statement

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

Taiwan Requirements

Bureau of Commodity Inspection Quarantine (BCIQ) Statement

警告使用者:

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Bureau of Commodity Inspection Quarantine (BCIQ) Statement

Warning: This is a Class A information technology product. In a domestic environment, this product may cause radio interference, in that case, the user may be required to take appropriate measures.

Canada Requirements Only

Canadian Department of Communications Radio Interference Regulations

This digital apparatus (BN) does not exceed the Class A limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Règlement sur le brouillage radioélectrique du ministère des Communications

Cet appareil numérique (BN) respecte les limites de bruits radioélectriques visant les appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada.

Bay Networks, Inc. Software License Agreement

NOTICE: Please carefully read this license agreement before copying or using the accompanying software or installing the hardware unit with pre-enabled software (each of which is referred to as “Software” in this Agreement). BY COPYING OR USING THE SOFTWARE, YOU ACCEPT ALL OF THE TERMS AND CONDITIONS OF THIS LICENSE AGREEMENT. THE TERMS EXPRESSED IN THIS AGREEMENT ARE THE ONLY TERMS UNDER WHICH BAY NETWORKS WILL PERMIT YOU TO USE THE SOFTWARE. If you do not accept these terms and conditions, return the product, unused and in the original shipping container, within 30 days of purchase to obtain a credit for the full purchase price.

1. License Grant. Bay Networks, Inc. (“Bay Networks”) grants the end user of the Software (“Licensee”) a personal, nonexclusive, nontransferable license: a) to use the Software either on a single computer or, if applicable, on a single authorized device identified by host ID, for which it was originally acquired; b) to copy the Software solely for backup purposes in support of authorized use of the Software; and c) to use and copy the associated user manual solely in support of authorized use of the Software by Licensee. This license applies to the Software only and does not extend to Bay Networks Agent software or other Bay Networks software products. Bay Networks Agent software or other Bay Networks software products are licensed for use under the terms of the applicable Bay Networks, Inc. Software License Agreement that accompanies such software and upon payment by the end user of the applicable license fees for such software.

2. Restrictions on use; reservation of rights. The Software and user manuals are protected under copyright laws. Bay Networks and/or its licensors retain all title and ownership in both the Software and user manuals, including any revisions made by Bay Networks or its licensors. The copyright notice must be reproduced and included with any copy of any portion of the Software or user manuals. Licensee may not modify, translate, decompile, disassemble, use for any competitive analysis, reverse engineer, distribute, or create derivative works from the Software or user manuals or any copy, in whole or in part. Except as expressly provided in this Agreement, Licensee may not copy or transfer the Software or user manuals, in whole or in part. The Software and user manuals embody Bay Networks’ and its licensors’ confidential and proprietary intellectual property. Licensee shall not sublicense, assign, or otherwise disclose to any third party the Software, or any information about the operation, design, performance, or implementation of the Software and user manuals that is confidential to Bay Networks and its licensors; however, Licensee may grant permission to its consultants, subcontractors, and agents to use the Software at Licensee’s facility, provided they have agreed to use the Software only in accordance with the terms of this license.

3. Limited warranty. Bay Networks warrants each item of Software, as delivered by Bay Networks and properly installed and operated on Bay Networks hardware or other equipment it is originally licensed for, to function substantially as described in its accompanying user manual during its warranty period, which begins on the date Software is first shipped to Licensee. If any item of Software fails to so function during its warranty period, as the sole remedy Bay Networks will at its discretion provide a suitable fix, patch, or workaround for the problem that may be included in a future Software release. Bay Networks further warrants to Licensee that the media on which the Software is provided will be free from defects in materials and workmanship under normal use for a period of 90 days from the date Software is first shipped to Licensee. Bay Networks will replace defective media at no charge if it is returned to Bay Networks during the warranty period along with proof of the date of shipment. This warranty does not apply if the media has been damaged as a result of accident, misuse, or abuse. The Licensee assumes all responsibility for selection of the Software to achieve Licensee’s intended results and for the installation, use, and results obtained from the Software. Bay Networks does not warrant a) that the functions contained in the software will meet the Licensee’s requirements, b) that the Software will operate in the hardware or software combinations that the Licensee may select, c) that the operation of the Software will be uninterrupted or error free, or d) that all defects in the operation of the Software will be corrected. Bay Networks is not obligated to remedy any Software defect that cannot be reproduced with the latest Software release. These warranties do not apply to the Software if it has been (i) altered, except by Bay Networks or in accordance with its instructions; (ii) used in conjunction with another vendor’s product, resulting in the defect; or (iii) damaged by improper environment, abuse, misuse, accident, or negligence. THE FOREGOING WARRANTIES AND LIMITATIONS ARE EXCLUSIVE REMEDIES AND ARE IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Licensee is responsible for the security of its own data and information and for maintaining adequate procedures apart from the Software to reconstruct lost or altered files, data, or programs.

4. Limitation of liability. IN NO EVENT WILL BAY NETWORKS OR ITS LICENSORS BE LIABLE FOR ANY COST OF SUBSTITUTE PROCUREMENT; SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES; OR ANY DAMAGES RESULTING FROM INACCURATE OR LOST DATA OR LOSS OF USE OR PROFITS ARISING OUT OF OR IN CONNECTION WITH THE PERFORMANCE OF THE SOFTWARE, EVEN IF BAY NETWORKS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL THE LIABILITY OF BAY NETWORKS RELATING TO THE SOFTWARE OR THIS AGREEMENT EXCEED THE PRICE PAID TO BAY NETWORKS FOR THE SOFTWARE LICENSE.

5. Government Licensees. This provision applies to all Software and documentation acquired directly or indirectly by or on behalf of the United States Government. The Software and documentation are commercial products, licensed on the open market at market prices, and were developed entirely at private expense and without the use of any U.S. Government funds. The license to the U.S. Government is granted only with restricted rights, and use, duplication, or disclosure by the U.S. Government is subject to the restrictions set forth in subparagraph (c)(1) of the Commercial Computer Software—Restricted Rights clause of FAR 52.227-19 and the limitations set out in this license for civilian agencies, and subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause of DFARS 252.227-7013, for agencies of the Department of Defense or their successors, whichever is applicable.

6. Use of Software in the European Community. This provision applies to all Software acquired for use within the European Community. If Licensee uses the Software within a country in the European Community, the Software Directive enacted by the Council of European Communities Directive dated 14 May, 1991, will apply to the examination of the Software to facilitate interoperability. Licensee agrees to notify Bay Networks of any such intended examination of the Software and may procure support and assistance from Bay Networks.

7. Term and termination. This license is effective until terminated; however, all of the restrictions with respect to Bay Networks' copyright in the Software and user manuals will cease being effective at the date of expiration of the Bay Networks copyright; those restrictions relating to use and disclosure of Bay Networks' confidential information shall continue in effect. Licensee may terminate this license at any time. The license will automatically terminate if Licensee fails to comply with any of the terms and conditions of the license. Upon termination for any reason, Licensee will immediately destroy or return to Bay Networks the Software, user manuals, and all copies. Bay Networks is not liable to Licensee for damages in any form solely by reason of the termination of this license.

8. Export and Re-export. Licensee agrees not to export, directly or indirectly, the Software or related technical data or information without first obtaining any required export licenses or other governmental approvals. Without limiting the foregoing, Licensee, on behalf of itself and its subsidiaries and affiliates, agrees that it will not, without first obtaining all export licenses and approvals required by the U.S. Government: (i) export, re-export, transfer, or divert any such Software or technical data, or any direct product thereof, to any country to which such exports or re-exports are restricted or embargoed under United States export control laws and regulations, or to any national or resident of such restricted or embargoed countries; or (ii) provide the Software or related technical data or information to any military end user or for any military end use, including the design, development, or production of any chemical, nuclear, or biological weapons.

9. General. If any provision of this Agreement is held to be invalid or unenforceable by a court of competent jurisdiction, the remainder of the provisions of this Agreement shall remain in full force and effect. This Agreement will be governed by the laws of the state of California.

Should you have any questions concerning this Agreement, contact Bay Networks, Inc., 4401 Great America Parkway, P.O. Box 58185, Santa Clara, California 95054-8185.

LICENSEE ACKNOWLEDGES THAT LICENSEE HAS READ THIS AGREEMENT, UNDERSTANDS IT, AND AGREES TO BE BOUND BY ITS TERMS AND CONDITIONS. LICENSEE FURTHER AGREES THAT THIS AGREEMENT IS THE ENTIRE AND EXCLUSIVE AGREEMENT BETWEEN BAY NETWORKS AND LICENSEE, WHICH SUPERSEDES ALL PRIOR ORAL AND WRITTEN AGREEMENTS AND COMMUNICATIONS BETWEEN THE PARTIES PERTAINING TO THE SUBJECT MATTER OF THIS AGREEMENT. NO DIFFERENT OR ADDITIONAL TERMS WILL BE ENFORCEABLE AGAINST BAY NETWORKS UNLESS BAY NETWORKS GIVES ITS EXPRESS WRITTEN CONSENT, INCLUDING AN EXPRESS WAIVER OF THE TERMS OF THIS AGREEMENT.

Contents

Preface

Before You Begin	xiii
Text Conventions	xiii
Acronyms	xiv
Bay Networks Technical Publications	xiv
How to Get Help	xv

Chapter 1

Installing the Link Module

Choosing a Slot	1-2
Removing a Link Module	1-5
Inserting the Link Module	1-7
Connecting Cables	1-8
Using Multimode Fiber with the 1000BASE-LX Link Module	1-9

Chapter 2

Checking Status Indicators

1000BASE-SX Ethernet Link Module LEDs	2-1
1000BASE-LX Ethernet Link Module LEDs	2-3
10/100BASE-TX Ethernet Link Module LEDs	2-4
100BASE-FX Ethernet Link Module LEDs	2-5

Appendix A

Technical Specifications

Figures

Figure 1-1.	FRE-4-PPC Ethernet Link Modules in a BLN	1-2
Figure 1-2.	FRE-4-PPC Ethernet Link Modules in a BLN-2	1-3
Figure 1-3.	FRE-4-PPC Ethernet Link Modules in a BCN	1-4
Figure 1-4.	Removing a Link Module (BCN Example)	1-6
Figure 1-5.	Installing a Link Module (BCN Example)	1-7
Figure 1-6.	Connecting an Ethernet UTP Cable to a 100BASE-TX Link Module	1-8
Figure 1-7.	Connecting a Fiber Optic Cable to a 100BASE-FX Link Module	1-8
Figure 1-8.	Connecting a Fiber Optic Cable to a 1000BASE-SX Link Module	1-9
Figure 2-1.	1000BASE-SX Ethernet Link Module	2-1
Figure 2-2.	1000BASE-LX Ethernet Link Module	2-3
Figure 2-3.	10/100BASE-TX Ethernet Link Module	2-4
Figure 2-4.	100BASE-FX Ethernet Link Module	2-5

Tables

Table 2-1.	1000BASE-SX Ethernet Link Module LEDs	2-2
Table 2-2.	1000BASE-LX Ethernet Link Module LEDs	2-3
Table 2-3.	10/100BASE-TX Ethernet Link Module LEDs	2-4
Table 2-4.	100BASE-FX Ethernet Link Module LEDs	2-5
Table A-1.	Gigabit Ethernet Minimum Distance Ranges	A-1
Table A-2.	Gigabit Ethernet Optical Parameters	A-2

The Bay Networks® FRE®-4-PPC Ethernet link modules connect network cables and the FRE-4-PPC processor module.

Before You Begin

This guide is intended for qualified service personnel who need to install or replace a FRE-4-PPC link module in these Backbone Node (BN®) platforms:

- Backbone Link Node (BLN®)
- Backbone Link Node-2 (BLN-2)
- Backbone Concentrator Node (BCN®)

A qualified service person should have appropriate technical training and experience and be aware of the hazards involved in installing and replacing link modules.

The FRE-4-PPC Ethernet link module fits into any link module slot in the rear panel of a BN platform.

Text Conventions

This guide uses the following text conventions:

italic text

Indicates new terms and book titles.

Acronyms

This guide uses the following acronyms:

DMD	differential mode delay
EMC	electromagnetic compatibility
GAME	Gate Access Management Entity
HDCM	Harpoon Diagnostic Console Monitor
ILI	Intelligent Link Interface
LED	light-emitting diode
MMF	multimode fiber
SMF	single-mode fiber
SRM-L	System Resource Module-Link

Bay Networks Technical Publications

You can now print Bay Networks technical manuals and release notes free, directly from the Internet. Go to support.baynetworks.com/library/tpubs/. Find the Bay Networks product for which you need documentation. Then locate the specific category and model or version for your hardware or software product. Using Adobe Acrobat Reader, you can open the manuals and release notes, search for the sections you need, and print them on most standard printers. You can download Acrobat Reader free from the Adobe Systems Web site, www.adobe.com.

You can purchase Bay Networks documentation sets, CDs, and selected technical publications through the Bay Networks Collateral Catalog. The catalog is located on the World Wide Web at support.baynetworks.com/catalog.html and is divided into sections arranged alphabetically:

- The “CD ROMs” section lists available CDs.
- The “Guides/Books” section lists books on technical topics.
- The “Technical Manuals” section lists available printed documentation sets.

Make a note of the part numbers and prices of the items that you want to order. Use the “Marketing Collateral Catalog description” link to place an order and to print the order form.

How to Get Help

For product assistance, support contracts, information about educational services, and the telephone numbers of our global support offices, go to the following URL:

<http://www.baynetworks.com/corporate/contacts/>

In the United States and Canada, you can dial 800-2LANWAN for assistance.

Chapter 1

Installing the Link Module

In this guide, the term *FRE-4-PPC Ethernet link module* refers to the following modules:

- 1000BASE-SX Ethernet
- 1000BASE-LX Ethernet
- 10/100BASE-TX Ethernet
- 100BASE-FX Ethernet



Note: Use FRE-4-PPC Ethernet link modules with the FRE-4-PPC processor module *only*.

Complete these tasks as needed to install the link module:

1. **Choose a slot.**
2. **Remove a link module.**
3. **Install a link module.**
4. **Connect cables.**




Note: The jumpers on Ethernet link modules are not user-configurable. Changing a jumper setting on any of these link modules can disrupt module functioning.

Choosing a Slot


You can install a FRE-4-PPC Ethernet link module in in:

- Slots 2 through 5 in the BLN platform ([Figure 1-1](#))
- Slots 2 through 5 in the BLN-2 platform ([Figure 1-2](#))
- Slots 1 through 6 and slots 8 through 14 in the BCN platform ([Figure 1-3](#))

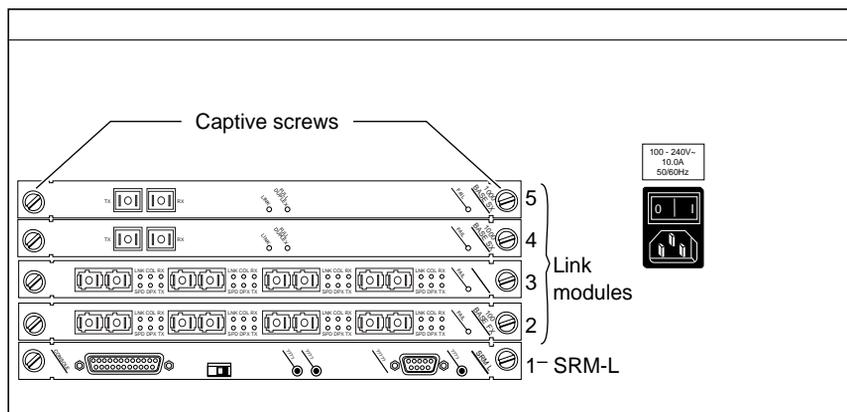


FR40015A

Figure 1-1. FRE-4-PPC Ethernet Link Modules in a BLN

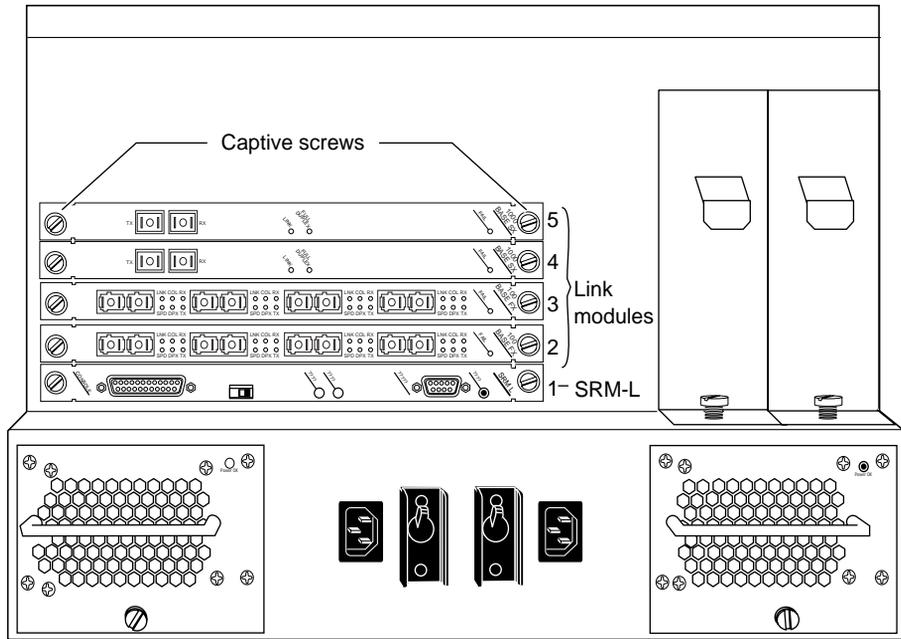

FR40016A

Figure 1-2. FRE-4-PPC Ethernet Link Modules in a BLN-2

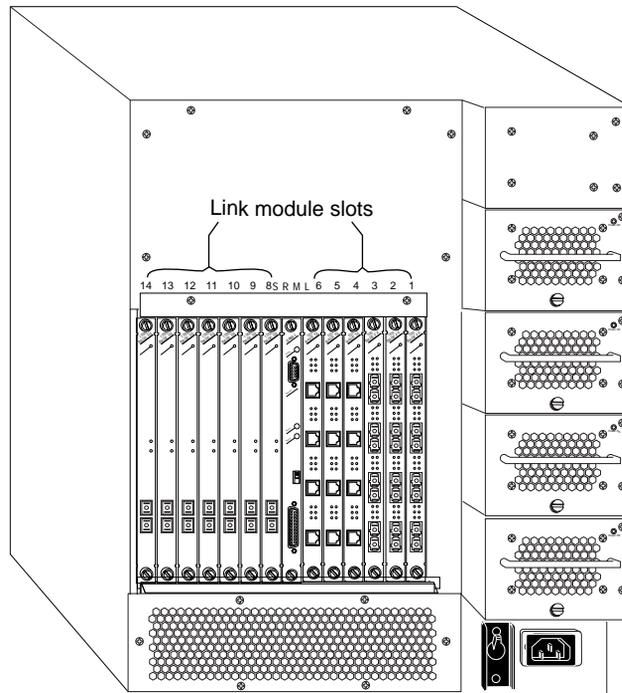

FR40017A

Figure 1-3. FRE-4-PPC Ethernet Link Modules in a BCN

Removing a Link Module

If there are no empty slots in your BN platform, you must remove a link module to install the FRE-4-PPC Ethernet link module. When replacing a configured link module, you must delete all configured circuits (ports) from the slot so that your software can properly configure the new link module.

For instructions on editing a configuration file and deleting circuits, see *Configuring and Managing Routers with Site Manager* or *Using the Bay Command Console (BCC)*.

You can install and remove a link module with the chassis power on or off.



Danger: A potential energy hazard exists during insertion and removal of link modules with the power on. Do *not* remove more than two adjacent modules without turning off the BN.

When you remove a FRE-4-PPC link module with the power on, the services that slot provides are disrupted. After the slot fails to receive packets, the other link modules in the chassis resynchronize their routing tables and continue uninterrupted.

To remove a link module from a BLN, BLN-2, or BCN platform:

1. **Disconnect any cables from the link module.**
2. **Attach an antistatic wrist strap.**


BN platforms and link modules ship with an antistatic wrist strap. You must wear one of these straps whenever you access components in BN platforms. The antistatic wrist strap directs the discharge of static electricity from your body to the chassis, thereby avoiding discharge and possible damage to sensitive electronic components.



Caution: Electrostatic discharge can damage hardware. Always use the antistatic wrist strap when handling any component in your BN platform.

3. **Loosen the captive screw on each end of the module ([Figure 1-4](#)).**

Figure 1-4 shows the captive screws on a 100BASE-FX Ethernet link module; these screws are the same on all link modules.

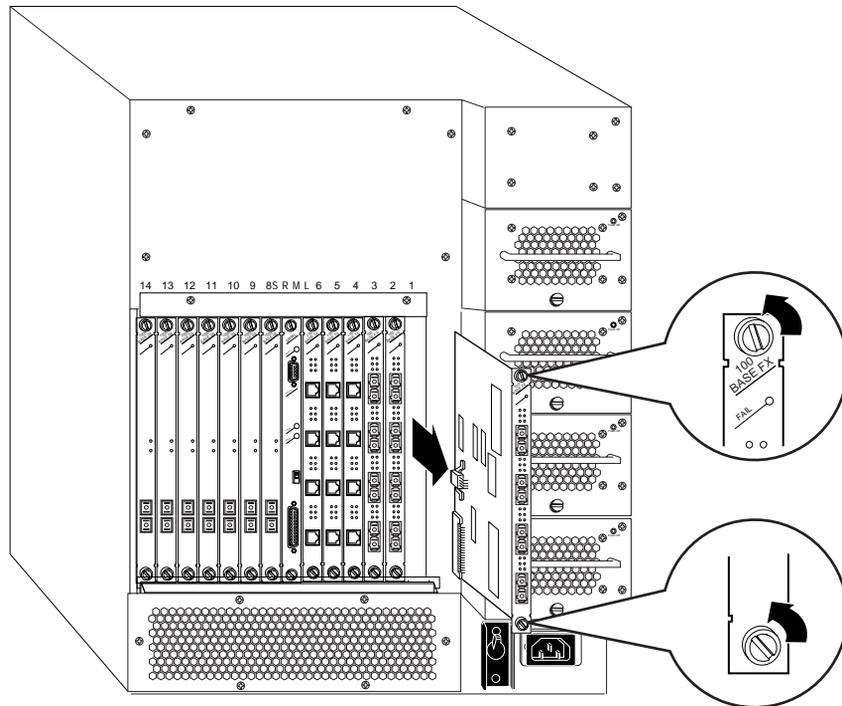

FR40018A

Figure 1-4. Removing a Link Module (BCN Example)

4. Grasp the sides of the module and pull it out of the slot.
5. Place the module in an antistatic protective bag.


Inserting the Link Module

To install a FRE-4-PPC link module in a BLN, BLN-2, or BCN:

1. Slide the module into the appropriate slot, using the slot card guides.

Refer to [Figure 1-1](#) (BLN) on [page 1-2](#), [Figure 1-2](#) (BLN-2) on [page 1-3](#), or [Figure 1-3](#) (BCN) on [page 1-4](#) for slot locations.

2. Insert the module until its connector panel touches the BN back panel.
3. Secure the captive screw on each end of the module ([Figure 1-5](#)).

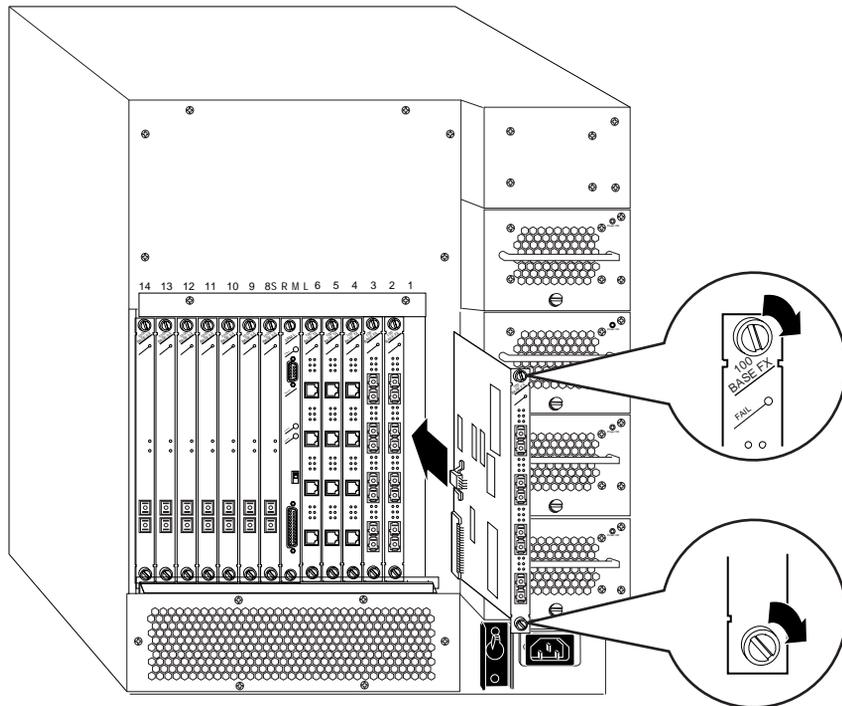

FR40019A

Figure 1-5. Installing a Link Module (BCN Example)


4. When you finish accessing the interior of the chassis, remove the antistatic wrist strap.

Connecting Cables

Connect the appropriate cables to the link module ports (Figures 1-6 through 1-8).




Danger: Fiber optic equipment can emit laser or infrared light that can injure your eyes. Never look into an optical fiber or connector port. Always assume that fiber optic cables are connected to a light source.

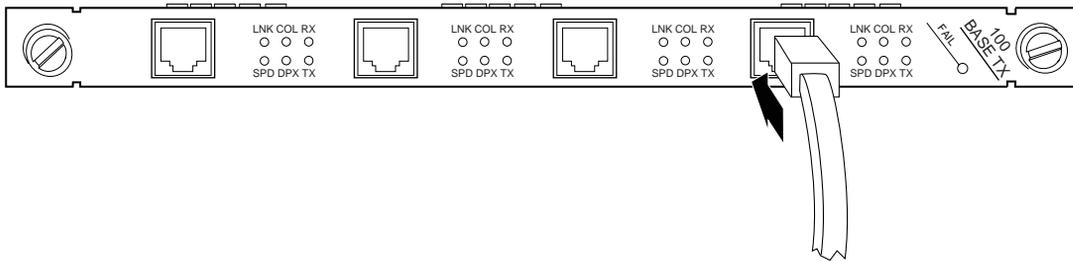


FR40020A

Figure 1-6. Connecting an Ethernet UTP Cable to a 100BASE-TX Link Module

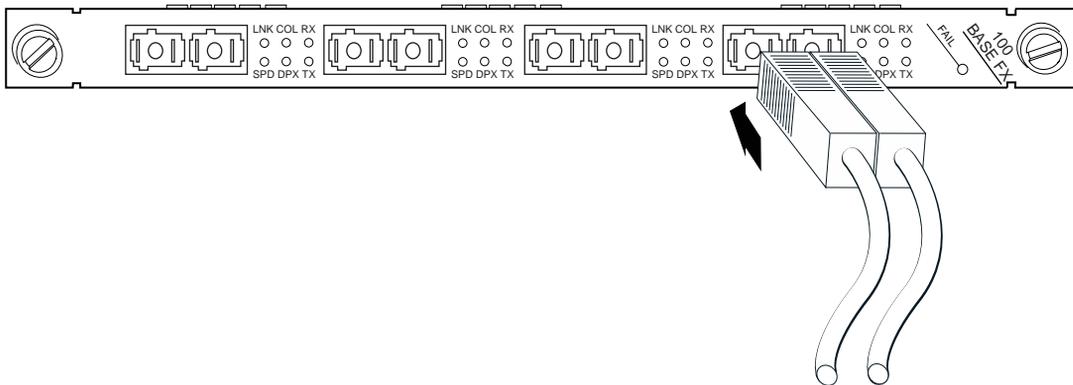

FR40021A

Figure 1-7. Connecting a Fiber Optic Cable to a 100BASE-FX Link Module

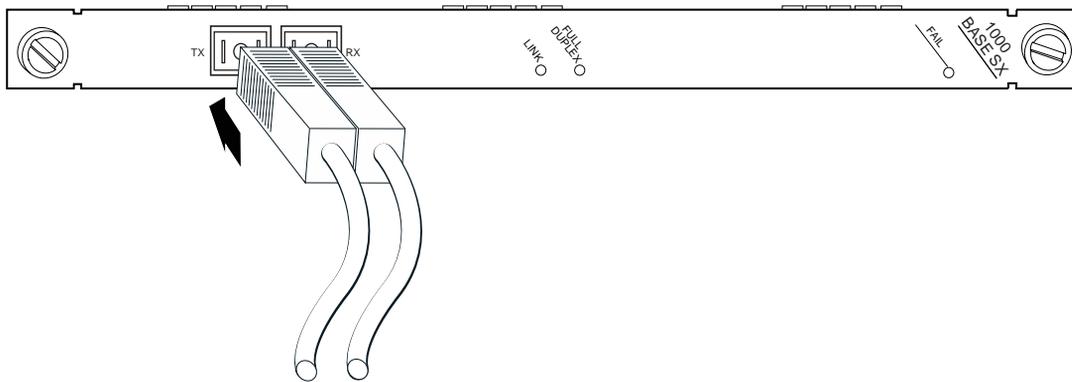

FR40022A

Figure 1-8. Connecting a Fiber Optic Cable to a 1000BASE-SX Link Module

Using Multimode Fiber with the 1000BASE-LX Link Module

If you use multimode fiber (MMF) with the 1000BASE-LX Ethernet link module, you may need to use external, removable mode-conditioning patch cords to prevent differential mode delay (DMD).

You can order mode-conditioning patch cords through Bay Networks (SC-SC Mode Conditioning Patch Cord 62.5/125, Part No. AA0018035). This patch cord is also available from other vendors including Computer Crafts, Methode Electronics, Inc., and SIECOR.

For more information about DMD in 1000BASE-LX applications, refer to *Reference Note: Gigabit Ethernet Physical Layer Considerations* (Bay Networks Part No. 201540-B).

Chapter 2

Checking Status Indicators

This chapter describes the status indicator lights (LEDs) on the FRE-4-PPC Ethernet link modules. Use the LEDs to verify that the link module is operating after installation.

You should issue the **diags** command for the associated slot immediately after you insert a link module (see *Using the Bay Command Console (BCC)*). Otherwise, the link module FAIL LED will remain lit, indicating that diagnostics have not run on the Intelligent Link Interface (ILI). However, even if you do not issue the **diags** command, the link module initializes and becomes operational as long as the module functions properly and contains the correct interface configurations.

1000BASE-SX Ethernet Link Module LEDs

[Figure 2-1](#) shows the LEDs on the 1000BASE-SX Ethernet link module.

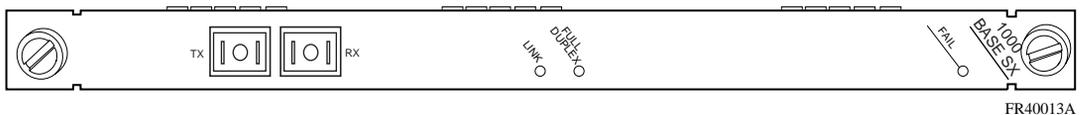


Figure 2-1. 1000BASE-SX Ethernet Link Module

[Table 2-1](#) describes the 1000BASE-SX Ethernet link module LEDs.

Table 2-1. 1000BASE-SX Ethernet Link Module LEDs

LED	State	Meaning
LINK	Off	Port has not established a valid link with another node or repeater in gigabit mode.
	On (Green)	Port has established a valid link with another node or repeater in gigabit mode.
FULL DUPLEX	Off	Port is in half-duplex mode and is sending and receiving data.
	On (Green)	Port is in full-duplex mode and is sending and receiving data.
FAIL	Off	Diagnostics completed successfully and the BN platform booted.
	On (Red)	<ul style="list-style-type: none">Diagnostic testing is in progress. Diagnostic testing occurs when you cold-start the module by cycling power, issuing the diags command from the BCC™, or installing the link module with the power on.Power-up diagnostic testing failed and the link module is waiting for an automatic attempt to reinitiate diagnostic testing. If the FAIL LED lights red again, call the Bay Networks Technical Solutions Center.A link module hardware problem exists and the link module is waiting for an automatic attempt to reinitiate diagnostic testing. If the FAIL LED lights red again, call the Bay Networks Technical Solutions Center.

1000BASE-LX Ethernet Link Module LEDs

[Figure 2-2](#) shows the LEDs on the 1000BASE-LX Ethernet link module.

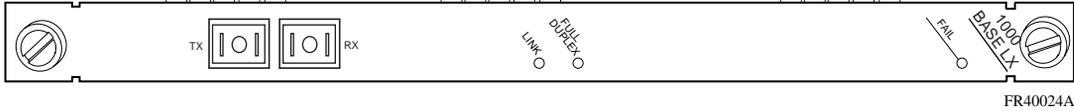


Figure 2-2. 1000BASE-LX Ethernet Link Module

[Table 2-2](#) describes the meaning of the 1000BASE-LX Ethernet link module LEDs.

Table 2-2. 1000BASE-LX Ethernet Link Module LEDs

LED	State	Meaning
LINK	Off	Port has not established a valid link with another node or repeater in gigabit mode.
	On (Green)	Port has established a valid link with another node or repeater in gigabit mode.
FULL DUPLEX	Off	Port is in half-duplex mode and is sending and receiving data.
	On (Green)	Port is in full-duplex mode and is sending and receiving data.
FAIL	Off	Diagnostics completed successfully and the BN platform booted.
	On (Red)	<ul style="list-style-type: none"> Diagnostic testing is in progress. Diagnostic testing occurs when you cold-start the module by cycling power, issuing the diags command from the BCC, or installing the link module with the power on. Power-up diagnostic testing failed and the link module is waiting for an automatic attempt to reinitiate diagnostic testing. If the FAIL LED lights red again, call the Bay Networks Technical Solutions Center. A link module hardware problem exists and the link module is waiting for an automatic attempt to reinitiate diagnostic testing. If the FAIL LED lights red again, call the Bay Networks Technical Solutions Center.

10/100BASE-TX Ethernet Link Module LEDs

[Figure 2-3](#) shows the LEDs on the 10/100BASE-TX Ethernet link module.

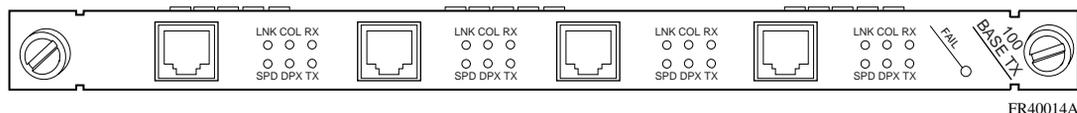


Figure 2-3. 10/100BASE-TX Ethernet Link Module

[Table 2-3](#) describes the 10/100BASE-TX Ethernet link module LEDs.

Table 2-3. 10/100BASE-TX Ethernet Link Module LEDs

LED	State	Meaning
LNK	Off	Port has not established a valid link with another node or repeater in 10 or 100 MB mode.
	On (Green)	Port has established a valid link with another node or repeater in 10 or 100 MB mode.
COL	Off	Port has not detected an Ethernet wire collision.
	On (Amber)	Port has detected an Ethernet wire collision in simplex mode, or is transmit-congested in duplex mode.
TX and RX	Off	Port is neither transmitting nor receiving data.
	On (Green)	Port is transmitting and receiving data.
SPD	Off	Port is in 10 MB mode.
	On (Green)	Port is in 100 MB mode.
DPX	Off	Port is in half-duplex mode and is sending and receiving data.
	On (Amber)	Port is in full-duplex mode and is sending and receiving data.
FAIL	Off	Diagnostics completed successfully and the BN platform booted.
	On (Red)	Lights during power-up, and may flash during diagnostic testing. It remains lit if the link module or any connector on the link module fails diagnostics. In this case, the DIAG LED on the BN front panel will also light, and you should contact the Bay Networks Technical Solutions Center.

100BASE-FX Ethernet Link Module LEDs

[Figure 2-4](#) shows the LEDs on the 100BASE-FX Ethernet link module.

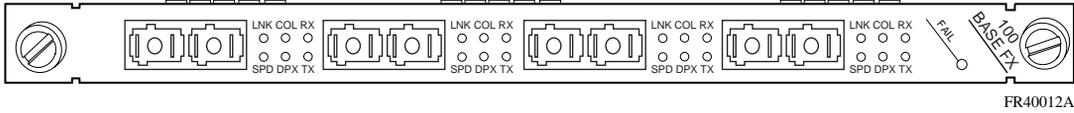


Figure 2-4. 100BASE-FX Ethernet Link Module

[Table 2-4](#) describes the 100BASE-FX Ethernet link module LEDs.

Table 2-4. 100BASE-FX Ethernet Link Module LEDs

LED	State	Meaning
LNK	Off	Port has not established a link.
	On (Green)	Port has established a valid link with another node or repeater in 10 or 100 MB mode.
COL	Off	Not used
TX and RX	Off	Port is neither transmitting nor receiving data.
	On (Green)	Port is transmitting and receiving data.
SPD	Off	Port is in 10 MB mode.
	On (Green)	Port is in 100 MB mode.
DPX	Off	Port is in half-duplex mode and is sending and receiving data.
	On (Amber)	Port is in full-duplex mode and is sending and receiving data.
FAIL	Off	Diagnostics completed successfully and the BN platform booted.
	On (Red)	Lights during power-up, and may flash during diagnostic testing. It remains lit if the link module or any connector on the link module fails diagnostics. In this case, the DIAG LED on the BN front panel will also light, and you should contact the Bay Networks Technical Solutions Center.

Appendix A

Technical Specifications

This appendix provides technical specifications for the 1000BASE-SX and 1000BASE-LX Ethernet link modules.

[Table A-1](#) lists the minimum distance ranges for the 1000BASE-SX and 1000BASE-LX Ethernet link modules.

Table A-1. Gigabit Ethernet Minimum Distance Ranges

Transceiver	Fiber Type	Diameter (Microns)	Modal Bandwidth (MHz/km)	Minimum Range (Meters)
1000BASE-SX	MMF	62.5	160	2-220
	MMF	62.5	200	2-275
	MMF	50	400	2-500
	MMF	50	500	2-550
1000BASE-LX	MMF	62.5	500	2-550
	MMF	50	400	2-550
	MMF	50	500	2-550
	SMF	10	N/A	2-5000

[Table A-2](#) lists the optical parameters for the 1000BASE-SX and 1000BASE-LX Ethernet link modules.

Table A-2. Gigabit Ethernet Optical Parameters

Parameter	Gigabit Ethernet Module Type	
	1000BASE-SX	1000BASE-LX
Link Power Budget	7.5 dB	7.5 dB for 62.5 and 50 micron MMF; 8.0 dB for 10 micron SMF
Laser Transmitter Characteristics		
Minimum Launch Power	-9.5 dBm	-11.5 dBm
Maximum Launch Power	-3 dBm	-3 dBm
Receiver Characteristics		
Minimum Receiver Sensitivity	-17 dBm	-19 dBm
Maximum Input Power	0 dBm	-3 dBm