

# **IBM** CUSTOMER INSTALLATION INSTRUCTIONS

## **Install FC 7004 Barcode Reader 3581 Model H17/L17 or H13/L13**

Document Number 19P1522 EC H80113

SSD, Tucson

**Written by:** D. Gormley  
**Updated by:** C. Kovalik  
**Checked by:** E. Bengds  
**Approved by:** P. Webster  
**Support/DPCE Review by:** S. Moulton  
**Status:** Field Use

**Note:** This Field Feature Bill of Material (FFBM) must be installed only on the 3581 Model H17/L17 or H13/L13 for which it is shipped.

PN 19P1522 1 of 3	EC H27554 16 NOV 00	EC H80113 17 MAY 02			
----------------------	------------------------	------------------------	--	--	--

## Before Installation

### 1.0 Machines Affected

All 3581 Models H17/L17 or H13/L13

### 2.0 B/M To Be Installed

FFBM	Description
19P1405	Barcode Reader (FC 7004) and Instructions

### 3.0 Preparation

Read and understand the purpose and details of this installation instruction. Check all items and count parts listed on the B/M to be installed to determine that all parts have been received.

### 4.0 Purpose and Description

This FFBM provides the instructions to install a Barcode Reader in a 3581 autoloader.

### 5.0 Installation Time

Install Hours	Machine Hours	System Hours	No Of Persons
1.0	0.5	0	1

### 6.0 Special Tools and/or Materials Required

Refer to the Setup, Operator, and Service Guide for required tools.

PN 19P1522 2 of 3	EC H27554 16 NOV 00	EC H80113 17 MAY 02			
----------------------	------------------------	------------------------	--	--	--

---

# Installation

---

## 7.0 Details Of Installation

---

### 7.1 Installing A Barcode Reader in 3581 Models H17/L17 or H13/L13.

GA32-0415-01 or higher, Appendix C or for 3581 H13/L13 refer to 3581 Setup, Operator and Service guide GA32-0456-00 or higher, Appendix C when installing a Barcode Reader.

- 1. For 3581 H11/L11 refer to 3581 Setup, Operator, and Service guide

PN 19P1522 3 of 3	EC H27554 16 NOV 00	EC H80113 17 MAY 02			
----------------------	------------------------	------------------------	--	--	--