

IBM CUSTOMER INSTALLATION INSTRUCTIONS

**Install FC 2895, 5099 Interposer for:
3580 Model H11/L11, H13/L13 or H23/L23
3581 Model H17/L17 or H13/L13
3583 Model L18/L36/L72.**

Document Number 19P1498 EC H80250A

SSD, Tucson

Written by: D. Gormley
Updated by: C. Kovalik
Checked by: R. Roberts
Approved by: P. Webster
Support/DPCE Review by: S. Moulton
Status: Field Use

Note: This Field Feature Bill of Material (FFBM) must be installed only on the 3580 Model H11/L11, H13/L13 or H23/L23, 3581 Model H17/L17 or H13/L13, 3583 Model L18/L36/L72 for which it is shipped.

PN 19P1498 1 of 4	EC H27554 16 NOV 00	EC H80113 17 MAY 02	EC H80250A 17 DEC 02		
----------------------	------------------------	------------------------	-------------------------	--	--

Before Installation

1.0 Machines Affected

All 3580 Models H11/L11, H13/L13 or H23/L23, All 3
 3581 Models H17/L17 or H13/L1, All 3583
 Models L18/L36/L72. 3

2.0 B/M To Be Installed

FFBM	Description
19P1397	Interposer (FC 2895) and Instructions
19P1398	Interposer (FC 5099) and Instructions

3.0 Preparation

Read and understand the purpose and details of this installation instruction. Check all items and count parts listed on the B/M to be installed to determine that all parts have been received.

4.0 Purpose and Description

This FFBM provides an Interposer for either host-to-device or drive-to-drive attachment.

5.0 Installation Time

Install Hours	Machine Hours	System Hours	No Of Persons
1.0	0.5	0	1

6.0 Special Tools and/or Materials Required

None.

PN 19P1498 2 of 4	EC H27554 16 NOV 00	EC H80113 17 MAY 02	EC H80250A 17 DEC 02		
----------------------	------------------------	------------------------	-------------------------	--	--

Installation

7.0 Details Of Installation

7.1 Installation of Interposer for 3580 Models H11/L11, H13/L13

or H23/L23

When installing to SCSI adapter -

- 1. For 3580 H11/L11, refer to 3580 Setup, Operator, and Service guide GA32-0415-01, or higher, Chapter 2 or for 3580 H13/L13, refer to 3580 Setup, Operator, and Service guide GA32-0456-00 or higher, Chapter 2 or for 3580 H23/L23 refer to 3580 Setup, Operator and Service guide GAxx-xxxx-xx or higher, Chapter X.

Refer to Figure 1 and Figure 2 on page 4.

7.2 Installation of Interposer for 3581 Models H17/L17 & H13/L13

- 1. For 3581 H17/L17, refer to 3581 Setup, Operator, and Service guide GA32-0412-01, or higher, Chapter 2 or for 3581 H13/L13, refer to 3581 Setup, Operator, and Service guide GA32-0457-00, or higher, Chapter 2 when installing to SCSI adapter

Refer to Figure 1 and Figure 2 on page 4.

7.3 Installation of Interposer for 3583 Models L18/L36/L72

- 1. Refer to 3583 Setup, Operator, and Service guide, GA32-0411-03, or higher, Chapter 2 when installing to SCSI adapter.

Refer to Figure 1 and Figure 2 on page 4.

AS/400 SCSI Cable Attachment

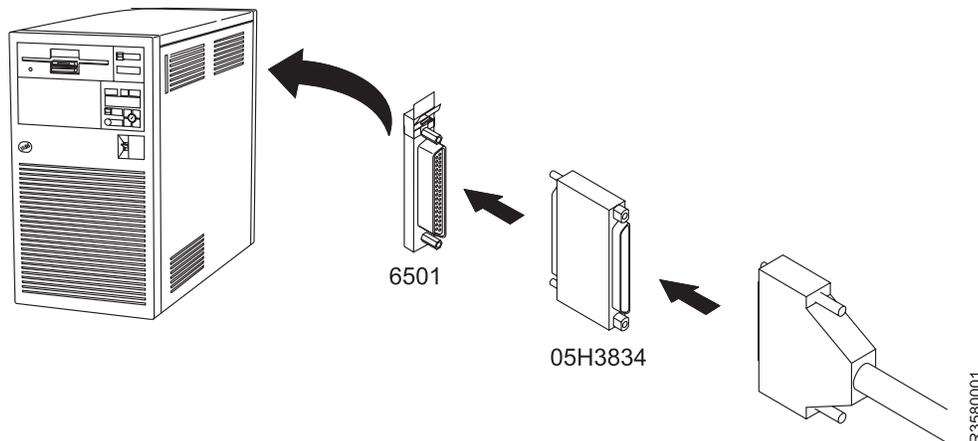


Figure 1. Interposer Installation

PN 19P1498 3 of 4	EC H27554 16 NOV 00	EC H80113 17 MAY 02	EC H80250A 17 DEC 02		
----------------------	------------------------	------------------------	-------------------------	--	--

Sun/PCI SCSI Cable Attachment

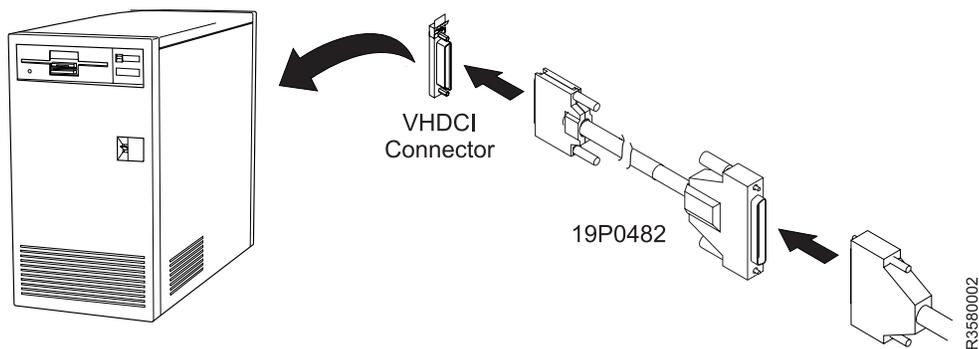


Figure 2. Interposer Installation

PN 19P1498 4 of 4	EC H27554 16 NOV 00	EC H80113 17 MAY 02	EC H80250A 17 DEC 02		
----------------------	------------------------	------------------------	-------------------------	--	--