

IBM INSTALLATION INSTRUCTIONS

Install FC 8008 Redundant DC Power Supply 3583 Model L18/L36/72

Document Number 19P1502 EC H27917

SSD, Tucson

Written by: C. Kovalik / Jim Dowell

Checked by: M. Auvil

Approved by:

Support/DPCE Review by: S. Moulton

Status: Field Use

Note: This Field Feature Bill of Material (FFBM) must be installed only on the 3583 Model L18/L36/L72 for which it is shipped.

PN 19P1502 1 of 5	EC H27554 16 NOV 00	EC H27917 28 FEB 02			
----------------------	------------------------	------------------------	--	--	--

Before Installation (Sections 1 through 8)

1.0 Machines Affected

All 3583 Models L17/L36/L72

2.0 Prerequisites / Concurrent / Companion

None

3.0 B/M To Be Installed

FFBM	Description
19P1410	New(W/NPA sticker)Redundant DC PowerSupply (FC 8008) and Instructions
19P5052	Old, Redundant DC Power Supply (FC 8008 and Instructions)

4.0 Preparation

Read and understand the purpose and details of this installation instruction. Check all items and count parts listed on the B/M to be installed to determine that all parts have been received.

PN 19P1502 2 of 5	EC H27554 16 NOV 00	EC H27917 28 FEB 02			
----------------------	------------------------	------------------------	--	--	--

5.0 Programming Updates

None.

6.0 Purpose and Description

This FFBM provides the instructions to install either new (NPA) or old Redundant DC power supply in a 3583 library.

7.0 Installation Time

CE Hours	Machine Hours	System Hours	No Of CEs
1.0	0.5	0	1

8.0 Special Tools and/or Materials Required

Refer to the Maintenance Information Manual for the required tools.

PN 19P1502 3 of 5	EC H27554 16 NOV 00	EC H27917 28 FEB 02			
----------------------	------------------------	------------------------	--	--	--

Installation (Step 10)

9.0 Safety

10.0 Details Of Installation

Note: Any parts that are removed during this change and not specified for reinstallation are to be set to the side for disposition as explained in Section 13.0.

10.1 Installing A Redundant DC Power Supply in 3583 Models L18/L36/L72

- 1. Refer to 3583 Maintenance Informaton Manual,SA37-0425-01, IBM pn 19P3612, Chapter 7 when installing an Redundant DC Power Supply.

PN 19P1502 4 of 5	EC H27554 16 NOV 00	EC H27917 28 FEB 02			
----------------------	------------------------	------------------------	--	--	--

After Installation (Sections 11 through 14)

11.0 Field Updating

None.

12.0 Field Support Publications

None.

13.0 Parts Disposition

Any removed parts are the property of the customer.

14.0 Machine Records

- ___ 1. Using existing procedures, update all appropriate records to reflect that feature code 8008 as installed.
- ___ 2. Using existing procedures, report installation and quality.

PN 19P1502 5 of 5	EC H27554 16 NOV 00	EC H27917 28 FEB 02			
----------------------	------------------------	------------------------	--	--	--