

AIX Version 7.1



Keyboard Technical Reference

AIX Version 7.1



Keyboard Technical Reference

Note

Before using this information and the product it supports, read the information in “Notices,” on page 9.

First Edition (September 2010)

This edition applies to AIX Version 7.1 and to all subsequent releases and modifications until otherwise indicated in new editions.

© Copyright IBM Corporation 2010.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

| | |
|---|----|
| About This Book | v |
| Highlighting | v |
| Case-Sensitivity in AIX | v |
| ISO 9000 | v |
| Related Publications | v |
| | |
| Keyboard Overview | 1 |
| Understanding Keyboard States | 1 |
| Understanding Key Sequences | 2 |
| Understanding Nonspacing Characters | 3 |
| Understanding Keyboard Table Information | 4 |
| Key Position Codes and Scan Codes for Keyboards | 4 |
| Text Fonts for the Operating System | 6 |
| Display Symbols | 7 |
| | |
| Appendix. Notices | 9 |
| Trademarks. | 11 |
| | |
| Index | 13 |

About This Book

This book provides programmers with complete, detailed information about keyboard layouts and translation tables for national languages supported by the AIX[®] operating system. Translation tables are listed alphabetically, and complete descriptions are given for the supported languages. Also included is a key to abbreviations used in the tables and an explanation of keyboard states with valid and invalid key sequences.

Highlighting

The following highlighting conventions are used in this book:

| | |
|----------------|---|
| Bold | Identifies commands, subroutines, keywords, files, structures, directories, and other items whose names are predefined by the system. Also identifies graphical objects such as buttons, labels, and icons that the user selects. |
| <i>Italics</i> | Identifies parameters whose actual names or values are to be supplied by the user. |
| Monospace | Identifies examples of specific data values, examples of text similar to what you might see displayed, examples of portions of program code similar to what you might write as a programmer, messages from the system, or information you should actually type. |

Case-Sensitivity in AIX[®]

Everything in the AIX[®] operating system is case-sensitive, which means that it distinguishes between uppercase and lowercase letters. For example, you can use the **ls** command to list files. If you type **LS**, the system responds that the command is "not found." Likewise, **FILEA**, **FiLea**, and **filea** are three distinct file names, even if they reside in the same directory. To avoid causing undesirable actions to be performed, always ensure that you use the correct case.

ISO 9000

ISO 9000 registered quality systems were used in the development and manufacturing of this product.

Related Publications

The following books contain information about or related to keyboards:

- *AIX Version 7.1 Commands Reference, Volume 1*
- *AIX Version 7.1 Commands Reference, Volume 2*
- *AIX Version 7.1 Commands Reference, Volume 3*
- *AIX Version 7.1 Commands Reference, Volume 4*
- *AIX Version 7.1 Commands Reference, Volume 5*
- *AIX Version 7.1 Commands Reference, Volume 6*
- *AIX Version 7.1 General Programming Concepts: Writing and Debugging Programs*
- *AIX Version 7.1 Kernel Extensions and Device Support Programming Concepts*

Keyboard Overview

The operating system supports two different types of keyboards: X server and low function terminal (LFT) keyboards. Although these two keyboard maps appear to be the same, they are separate and distinct.

An X server has an attached keyboard. The server uses mapping tables to manage the mapping of keyboard events. The mapping of an X server keyboard can be changed by using the **xmodmap** command. This command converts the keyboard so that it returns the key symbol supported by this system. The **xmodmap** command can also be used to switch keys to more convenient locations.

You can use several commands and operations to control the mapping of LFT keyboards. You can specify which keyboard map is to be used by the LFT subsystem. You can also add new keyboard maps or change existing maps.

The operating system supports three types of keyboards: the 101-key keyboard, 102-key keyboard, and 106-key keyboard. Each keyboard differs slightly in its layout and function.

Understanding Keyboard States

The keyboard mapping table maps a key position to an ASCII character, extended character, function, or string of characters. Each key on the keyboard has a numeric position code that is combined with the keyboard state when the key position is reported.

Available keyboard states are:

- Base
- Shift
- Control
- Alternate
- Alternate Graphics
- Kana Base
- Kana Shift

The operating system supports three types of keyboards:

- | | |
|----------------|--|
| 101-key | The 101-key keyboards have all available states. However, the Alt-Graphics state and the Alt state are identical and the Kana Base state and the Kana Shift state are identical. |
| 102-key | The 102-key keyboards have all of the available states except the Kana Base state and the Kana Shift state. |
| 106-key | The 106-key keyboards have all of the available states except the Alt-Graphics state. Only the right Alt key is available. |

Depending on the keyboard, some of these keys are governed by the Caps Lock key or the Shift Lock key.

On keyboards that support the Caps Lock key, Caps Lock affects only those keys whose Shift state yields the uppercase character (A, B, C) of the Base state lowercase character (a, b, c) of the key. On keyboards that support the Shift Lock key, Shift Lock has the same effect as pressing a key while the Shift key is pressed.

Each of the hardware keyboards can produce some, but not all, of these states.

A software keyboard is selected at installation. A customized keyboard can be used as the system default after keyboard reconfiguration. The workstation must be restarted before the customized keyboard can be used.

The following keys are not redefinable by the keyboard device driver:

Note: The Caps Lock key can be redefined for the 106-key keyboard using the **chhwkbd** command.

Table 1. Keys with Predefined Functions

| Key Position | Function | States That Cannot Be Remapped |
|--------------|---------------------------------|---|
| 30 | Caps Lock key or Shift Lock key | All states |
| 44 | Left Shift key | All states |
| 57 | Right Shift key | All states |
| 58 | Control key | All states |
| 60 | Left Alt key | All states |
| 62 | Right Alt key | All states |
| 64 | Action key | Shift, Control, Alternate, and Alternate Graphics |
| 90 | Num Lock key | Base and Shift states |
| 133 | Hiragana | All states |

Understanding Key Sequences

Most keying is done with either one-key or two-key sequences. For example, the a character is most often produced by one key (the A key) and the A character by two keys (Shift-A key sequence). If more than one state key is pressed when a character is keyed, (for example, Ctrl-Shift-A) only one state key affects the conversion of the character. With the Ctrl-Shift-A key sequence, the control state takes precedence over the shift state.

Some three-key sequences have special meanings for this operating system. The following keystroke combinations start the indicated system function. The notation Pad*n*, where *n* is a digit, indicates the *n* key on the numeric keypad to the right of the main keyboard area.

Note: Functions started with the Alt-key (or Shift-key) sequence can be selected with either the left or right Alt key (or Shift key).

There are two types of key sequences that have special meaning for this operating system:

- Kernel debugger key sequences
- System dump key sequences

Note: See "System Dump Facility" in *AIX Version 7.1 Kernel Extensions and Device Support Programming Concepts* before attempting to use any of the key sequences that perform system dumps.

The following key sequences issue special instructions to the operating system:

| | |
|----------------------|--|
| Ctrl-Alt-Pad4 | Invokes the kernel debugger. |
| Ctrl-Alt-Pad1 | Performs a system dump to the primary device. This key sequence works only from the native keyboard. |
| Ctrl-Alt-Pad2 | Performs a system dump to the secondary device. This key sequence works only from the native keyboard. Supports dumping to a logical volume or tape. Requires user intervention in releases prior to AIX® 4.2.1. |

Understanding Nonspacing Characters

A *nonspacing character sequence* is a two-key sequence consisting of a diacritic mark followed by an alphabetic character.

Valid Sequences

Valid nonspacing character sequences are restricted to combinations of diacritical marks and alphabetic characters. Nonspacing character sequences are folded into a single character before passing the keyboard input to the application.

A special case exists when the nonspacing character sequence consists of a diacritic mark followed by a space. In this case, the diacritic mark is displayed and sent to the application.

A valid nonspacing character sequence causes a single accented character to be returned.

Examples of a valid nonspacing character are:

| Valid Nonspacing Character Examples | | |
|-------------------------------------|-----------------|----------------------------|
| 1st Key Pressed | 2nd Key Pressed | Returned |
| Grave | e | e Grave - 1 character |
| Grave | Space | Grave accent - 1 character |

Invalid Sequences

If the nonspacing character sequence is not valid, the LFT subsystem passes the nonspacing character to the application followed by the second character of the sequence. Nonspacing character sequences that are not valid include sequences that start with one of the following three parameters:

- A nonspacing character followed by an alphabetic character. (The resulting diacritical mark does not exist in the system.)
- A nonspacing character followed by a nonalphabetic character (numeric, control, and function key).
- A nonspacing character followed by another nonspacing character.

A nonspacing character sequence that is not valid returns the accent character, followed by the code for the key pressed after the nonspacing key.

Examples of an not valid nonspacing character are:

| Not valid Nonspacing Character Examples | | |
|---|-----------------|--|
| 1st Key Pressed | 2nd Key Pressed | Returned |
| Grave | z | Grave accent - 2 z characters |
| Acute | PF1 | Acute accent (0xef) - 1 character PF1 (0x1b5b313731xx) |

An not valid nonspacing character sequence (*nonspacing character - nonspacing character*) causes the first nonspacing character of the sequence to be passed to the application. The next nonspacing character starts a new nonspacing character sequence.

Understanding Keyboard Table Information

The keyboard table:

- Specifies the key assignments to be used on keyboards.
- Provides a link to the symbol engraved on the key.
- Lists the character sequences that are to be produced.


Refer to the following listing for the meanings of the column headings:

| Heading | Meaning |
|----------------------------|--|
| Key Posn | Keyboard key position. |
| Shift State | The shift state of the Base, Shift, Ctrl, Alt, or AltGr positions. |
| Assignment Returned | The character or control assigned to that key. |
| Returned String | Specifies the data that is returned to the program reading the keyboard. |

The Alt key, followed by one or more numbered keys on the numeric pad, returns a single character when the value is entered on the numeric pad. The value accumulates while the Alt key is held down and returns when the key is released.


Key Position Codes and Scan Codes for Keyboards

The diagrams depict the key position codes for the 101-key keyboard, the 102-key keyboard, and the 106-key keyboard, respectively.

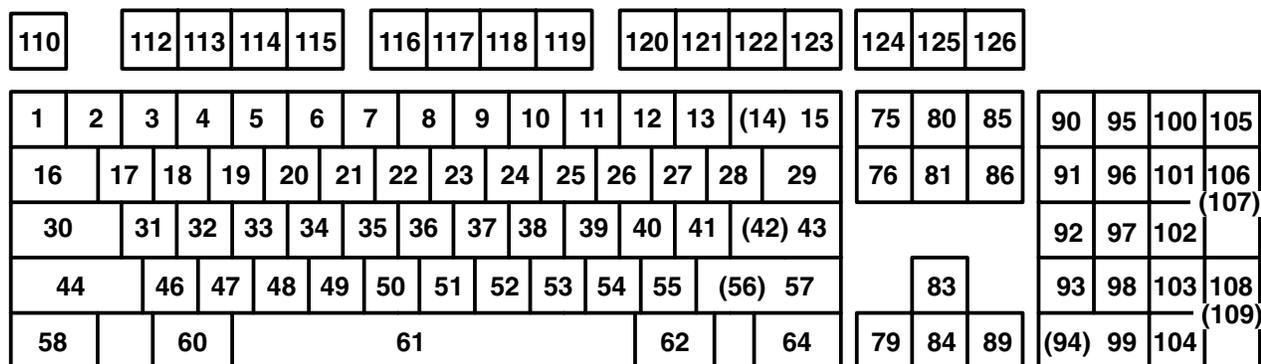


101-Key Keyboard Position Codes

. This illustration shows the key position codes for the 101-key keyboard.

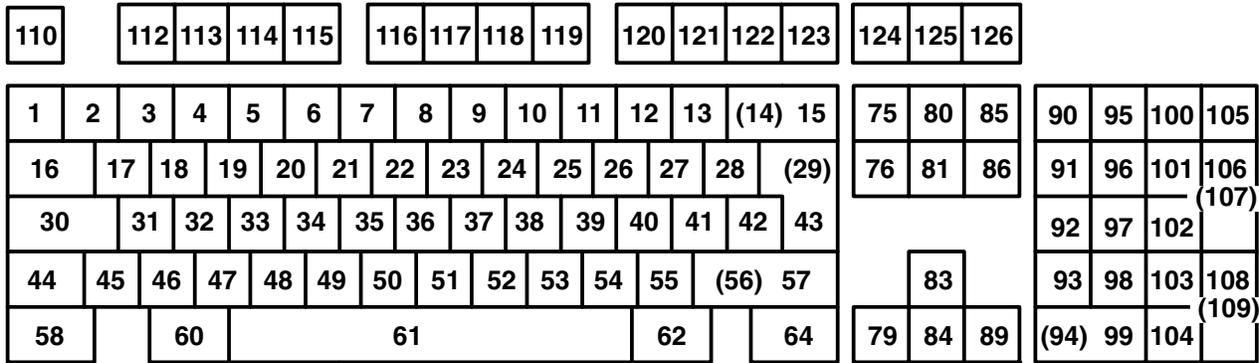

102-Key Keyboard Position Codes

. This illustration shows the key position codes for the 102-key keyboard.

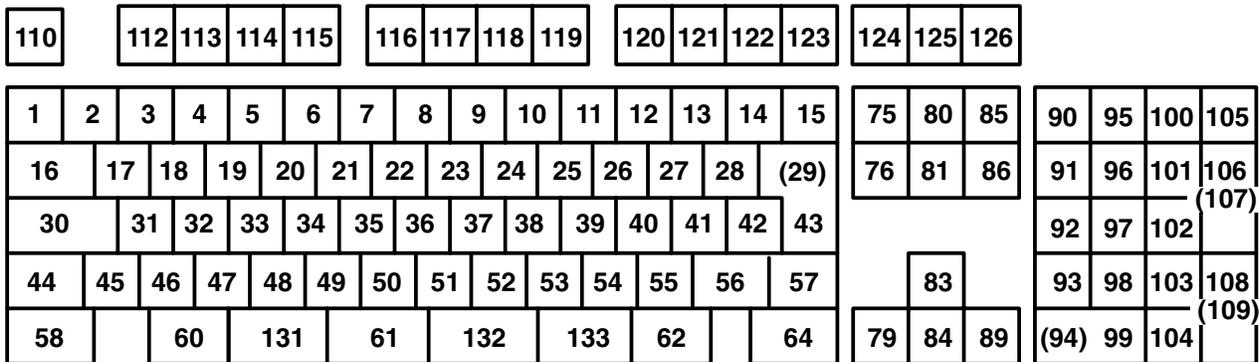

106-Key Keyboard Position Codes

. This illustration shows the key position codes for the 106-key keyboard.

The following table contains the keyboard scan codes for all keyboards. Each key on the keyboard is assigned a unique 8-bit scan code that is sent when the key is pressed.

Table 2. Key Positions and Their Scan Codes

| Key Posn | Scan Code | | | | | | | | | | |
|----------|-----------|----|------|----|------|----|------|-----|------|-----|------|
| 1 | 0x0e | 23 | 0x3c | 45 | 0x13 | 67 | N/A | 89 | 0x6a | 111 | N/A |
| 2 | 0x16 | 24 | 0x43 | 46 | 0x1a | 68 | N/A | 90 | 0x76 | 112 | 0x07 |
| 3 | 0x1e | 25 | 0x44 | 47 | 0x22 | 69 | N/A | 91 | 0x6c | 113 | 0x0f |
| 4 | 0x26 | 26 | 0x4d | 48 | 0x21 | 70 | N/A | 92 | 0x6b | 114 | 0x17 |
| 5 | 0x25 | 27 | 0x54 | 49 | 0x2a | 71 | N/A | 93 | 0x69 | 115 | 0x1f |
| 6 | 0x2e | 28 | 0x5b | 50 | 0x32 | 72 | N/A | 94 | 0x68 | 116 | 0x27 |
| 7 | 0x36 | 29 | 0x5c | 51 | 0x31 | 73 | N/A | 95 | 0x77 | 117 | 0x2f |
| 8 | 0x3d | 30 | 0x14 | 52 | 0x3a | 74 | N/A | 96 | 0x75 | 118 | 0x37 |
| 9 | 0x3e | 31 | 0x1c | 53 | 0x41 | 75 | 0x67 | 97 | 0x73 | 119 | 0x3f |
| 10 | 0x46 | 32 | 0x1b | 54 | 0x49 | 76 | 0x64 | 98 | 0x72 | 120 | 0x47 |
| 11 | 0x45 | 33 | 0x23 | 55 | 0x4a | 77 | N/A | 99 | 0x70 | 121 | 0x4f |
| 12 | 0x4e | 34 | 0x2b | 56 | 0x51 | 78 | N/A | 100 | 0x7e | 122 | 0x56 |

Table 2. Key Positions and Their Scan Codes (continued)

| Key Posn | Scan Code | | | | | | | | | | |
|----------|-----------|----|------|----|------|----|------|-----|------|-----|------|
| 13 | 0x55 | 35 | 0x34 | 57 | 0x59 | 79 | 0x61 | 101 | 0x7d | 123 | 0x5e |
| 14 | 0x5d | 36 | 0x33 | 58 | 0x11 | 80 | 0x6e | 102 | 0x74 | 124 | 0x57 |
| 15 | 0x66 | 37 | 0x3b | 59 | N/A | 81 | 0x65 | 103 | 0x7a | 125 | 0x5f |
| 16 | 0x0d | 38 | 0x42 | 60 | 0x19 | 82 | N/A | 104 | 0x71 | 126 | 0x62 |
| 17 | 0x15 | 39 | 0x4b | 61 | 0x29 | 83 | 0x63 | 105 | 0x84 | 127 | N/A |
| 18 | 0x1d | 40 | 0x4c | 62 | 0x39 | 84 | 0x60 | 106 | 0x7c | 128 | N/A |
| 19 | 0x24 | 41 | 0x52 | 63 | N/A | 85 | 0x6f | 107 | 0x7b | 129 | N/A |
| 20 | 0x2d | 42 | 0x53 | 64 | 0x58 | 86 | 0x6d | 108 | 0x79 | 130 | N/A |
| 21 | 0x20 | 43 | 0x5a | 65 | N/A | 87 | N/A | 109 | 0x78 | 131 | 0x20 |
| 22 | 0x35 | 44 | 0x12 | 66 | N/A | 88 | N/A | 110 | 0x08 | 132 | 0x28 |
| | | | | | | | | | | 133 | 0x30 |

Text Fonts for the Operating System

A set of precompiled text fonts are supplied with AIX® Version 4. The set is for all display devices supported by the operating system. Font definitions can be supplied to the LFT by configuring new font files into the system. This is done by issuing the **mkfont** command. The fonts supplied are compatible with Enhanced X-Windows and AIX® Computer Graphics Interface Toolkit/6000.

Text Font Format

The text font definition file has four major parts in the following sequence:

1. A font header that describes the font. The header is the same for all text fonts.
2. A set of character descriptions and lookup information to find the glyph data in the font.
3. Glyph data.
4. Property strings.

Font Header

The font header is a structure common to all fonts for all display screens. It is a fixed length. This structure is called *aixFontInfo* and is defined in the **aixfont.h** file. It contains the following members:

| | |
|------------------------|--|
| version1 | This field contains the version stamp. |
| allExist | For the number of glyph sets indicated below, all glyphs exist. |
| drawDirection | Used for stroke fonts only. |
| noOverlap | The glyph has a border zone that contains no glyph data. Indicated as true if $\max(\text{rightSidebearing} - \text{characterWidth}) \leq \text{minbounds} \rightarrow \text{metrics.leftSideBearing}$. |
| constantMetrics | If true, indicates that all glyphs are a constant size. |
| terminalFont | True if constant metrics && $\text{leftSideBearing} = 0$ && $\text{rightSideBearing} = \text{characterWidth}$ && $\text{ascent} = \text{fontAscent}$ && $\text{descent} = \text{fontDescent}$. |
| linear | True if $\text{firstRow} = \text{lastRow}$. |
| constantWidth | Indicates that all glyphs are the same width. |
| inkInside | Indicates whether all character information is contained within a distinct box. |
| inkMetrics | Ink metricw != bitmap metrics used with terminalFont. |
| strokes | Glyphs are strokes, not rasters. |
| firstCol | Defines the first Column of ink data within the glyph. |
| lastCol | Defines the last column of ink data within the glyph. |
| firstRow | Defines the first row of ink data within the glyph. |

| | |
|--------------------|--|
| lastRow | Defines the last row of ink data within the glyph. |
| nProps | Indicates the number of aixFontProp structures to follow. |
| lenStrings | Total length in bytes of all the property strings. |
| chDefault | Default character. |
| fontDescent | Extent below baseline for spacing; minimum for quality typography. |
| fontAscent | The extent above baseline for spacing; minimum for quality typography. |
| minbounds | MIN of glyph metrics over all characters in the font. |
| maxbounds | MAX of glyph metrics over all characters in the font. |
| pixDepth | Intensity bits per pixel. |
| glyphSets | Number of glyph sets. |
| version2 | Version stamp double-check. |

Character Descriptions

Character descriptions contain offsets into the character data structure, also known as character glyphs. Because the data bytes within the data stream are used to access the character descriptions, there must be 256 entries. Entries for which a character is not defined should be set to offset values of a valid default character. One such valid offset is zero. Because each font has at least one character defined, there is always a first character pointed to by the offset zero, the first character in the glyph data.

The character data, or glyph, can be drawn relative to any point in a given x, y coordinate system. The pel box is the area where the glyph is positioned on the display screen when the font is used. The character description information is contained in the **aixCharInfo** structure, as defined in the **aixfont.h** file. This structure contains the following elements:

| | |
|-------------------------|--|
| leftSideBearing | Character origin to the left edge of the raster. Assuming that this character's pel box is referenced from position (x, y), the left vertical edge of the pel box is located at x+ leftSideBearing. |
| rightSideBearing | Character origin to the right edge of the raster. Assuming that this character's pel box is referenced from position x, y, the right vertical edge of the pel box is located at x+ rightSideBearing. |
| characterWidth | Advance to next character origin. Assuming that this character's pel box is referenced from position (x, y), the origin for the next character is at point (x + characterWidth,y). |
| ascent | Baseline to the top edge of the raster. Assuming that this character's pel box is reference from position (x, y), the upper horizontal edge of the pel box is located at y - ascent. |
| descent | Baseline to the bottom edge of the raster. Assuming that this character's pel box is reference from position (x, y), the lower horizontal edge of the pel box is located at y + descent. |
| attributes | Must be zero. |
| byteOffset | Byte offset of raster from the beginning of the glyph data. |
| exists | True if glyph exists for this character. |

Glyph Data

The glyph data includes information pertinent to each character in the font. The information for each character is a set of bits representing the character image.

Property Strings

| | |
|-----------------|-----------------------------|
| name | Offset of a string |
| value | A number or a string offset |
| indirect | Value is a string offset. |

Display Symbols

Display symbols are the set of character symbols that can be displayed on an LFT.

Each character code passed in KSR data is translated into one of 256 10-bit display symbol codes. Display symbols 0 through 31 (0x1f) represent control functions and have no graphic representations. The display symbols 32 (0x20) through 126 (0x7e) represent the 7-bit ASCII range of characters. These characters, with minor exceptions, are invariant across all of the display symbols. The display symbols 128 (0x80) through 255 (0xff) vary based on the selected font. These codes are predefined to be common across all shared terminals. See *AIX® Version 7.1 General Programming Concepts* for an illustration of each of the supported code sets.

Related Information

Understanding Keyboard Mapping.

The **chhwkbd** command, the **mkfont** command and the **xmodmap** command.

Appendix. Notices

This information was developed for products and services offered in the U.S.A.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

IBM Director of Licensing
IBM Corporation
North Castle Drive
Armonk, NY 10504-1785
U.S.A.

For license inquiries regarding double-byte character set (DBCS) information, contact the IBM Intellectual Property Department in your country or send inquiries, in writing, to:

Intellectual Property Licensing
Legal and Intellectual Property Law
IBM Japan, Ltd.
1623-14, Shimotsuruma, Yamato-shi
Kanagawa 242-8502 Japan

The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law: INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM websites are provided for convenience only and do not in any manner serve as an endorsement of those websites. The materials at those websites are not part of the materials for this IBM product and use of those websites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Licensees of this program who wish to have information about it for the purpose of enabling: (i) the exchange of information between independently created programs and other programs (including this one) and (ii) the mutual use of the information which has been exchanged, should contact:

IBM Corporation
Dept. LRAS/Bldg. 903

11501 Burnet Road
Austin, TX 78758-3400
U.S.A.

Such information may be available, subject to appropriate terms and conditions, including in some cases, payment of a fee.

The licensed program described in this document and all licensed material available for it are provided by IBM under terms of the IBM Customer Agreement, IBM International Program License Agreement or any equivalent agreement between us.

Any performance data contained herein was determined in a controlled environment. Therefore, the results obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

All statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

All IBM prices shown are IBM's suggested retail prices, are current and are subject to change without notice. Dealer prices may vary.

This information is for planning purposes only. The information herein is subject to change before the products described become available.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to the names and addresses used by an actual business enterprise is entirely coincidental.

COPYRIGHT LICENSE:

This information contains sample application programs in source language, which illustrate programming techniques on various operating platforms. You may copy, modify, and distribute these sample programs in any form without payment to IBM, for the purposes of developing, using, marketing or distributing application programs conforming to the application programming interface for the operating platform for which the sample programs are written. These examples have not been thoroughly tested under all conditions. IBM, therefore, cannot guarantee or imply reliability, serviceability, or function of these programs. The sample programs are provided "AS IS", without warranty of any kind. IBM shall not be liable for any damages arising out of your use of the sample programs.

Each copy or any portion of these sample programs or any derivative work, must include a copyright notice as follows:

(c) (your company name) (year). Portions of this code are derived from IBM Corp. Sample Programs.
(c) Copyright IBM Corp. _enter the year or years_.

If you are viewing this information softcopy, the photographs and color illustrations may not appear.

Trademarks

IBM, the IBM logo, and ibm.com are trademarks or registered trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the Web at Copyright and trademark information at www.ibm.com/legal/copytrade.shtml.

Microsoft, Windows, Windows NT, and the Windows logo are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.

Index

A

About This Book v

C

Case-Sensitivity in AIX® v

D

display symbols
use in Low Function Terminal Subsystem 7

H

HFT
keyboard
introduction 1
Highlighting v

I

ISO 9000 v

K

key sequences
kernel debugger 2
system dump 2
keyboard
key sequences 2
overview 1
position codes 4
predefined keys 1
states, key 1
states, overview 1
keyboard table
headings
information on 4

L

Low Function Terminal Subsystem
display symbols
use of 7

N

nonspacing characters 3
invalid sequences 3
valid, understanding 3

R

Related Publications v

T

text fonts
fonts, text 6



Printed in U.S.A.

SC23-6725-00

