

# Replenish Emergency Unlock Activations

---

## OPERATING INSTRUCTIONS

**Copyright**

© Ericsson AB 2014, 2015. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

**Disclaimer**

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

**Trademark List**

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
1.1	Prerequisites	1
<b>2</b>	<b>Procedure</b>	<b>3</b>



Replenish Emergency Unlock Activations



# 1 Introduction

This document describes how to replenish the Emergency Unlock activation.

The number of Emergency Unlock activations is restricted. By default, Emergency Unlock mode can only be activated twice. Once the two activations have been used, an Emergency Unlock reset key must be ordered from the Ericsson software supply organization. The corresponding key file must then be installed on the Managed Element (ME) to reset the number of Emergency Unlock activations to two.



---

---

## Do!

Carefully read the following information before proceeding.

---

---

Follow these instructions when attribute `activationsLeft` is below 2. Do not leave the ME with `activationsLeft` equal to zero. Preventively run this instruction when the value is below 2. Omitting to follow these instructions can lead to future service impact on the ME.

## 1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

### 1.1.1 Conditions

The following conditions must apply:

- A license key file with an `emergencyResetKey` has been ordered and received from the Ericsson supplier.
- The new license key file is installed.
- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.





## 2 Procedure

To replenish the Emergency Unlock activation:

1. Navigate to the *Lm* managed object, for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,Lm=1
```

2. Refresh the license inventory to ensure that the license changes are applied:

```
(Lm=1)>refreshLicenseInventory
```

The system returns `true` if the operation is successful.

3. Verify that the value of counter `activationsLeft` has been reset:

```
(Lm=1)>EmergencyUnlock=1
```

```
(EmergencyUnlock=1)>show activationsLeft
```

When counter `activationsLeft` has been reset, the system returns the following:

```
activationsLeft=2
```

**Note:** The value is back to 2. Alarm *License Management, Emergency Unlock Reset Key Required* is cleared.

4. If the counter has not been reset, order an extra refresh of the license inventory:

```
(Lm=1)>refreshLicenseInventory
```

The system returns `true` if the operation is successful.