

Delete Measurement Collection Job

OPERATING INSTRUCTIONS

Copyright

© Ericsson AB 2014, 2015. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



Contents

1	Introduction	1
1.1	Prerequisites	1
2	Procedure	3



Delete Measurement Collection Job



1 Introduction

This document describes how to delete a measurement collection job. This is to be done when the performance measurement collection job is no longer of interest due to, for example, a new network performance monitoring strategy.

1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

1.1.1 Conditions

The following conditions must apply:

- The job name is known.

The job name is PU_15min_Job in this document.

- `currentJobState` for the job is STOPPED.
- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.





2 Procedure

To delete a measurement collection job:

1. Navigate to the **Pm** MO, for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,Pm=1
```

2. Enter Config mode:

```
(Pm=1)>configure
```

3. Delete the measurement collection job, for example:

```
(config-Pm=1)>no PmJob=PU_15min_Job
```

4. Commit the deletion:

```
(config-Pm=1)>commit
```

5. Verify the result:

```
(Pm=1)>show-table -m PmJob -p currentJobState,jobPriority,jobType,pmJobId
```

The following is an example output:

currentJobState	jobPriority	jobType	pmJobId
ACTIVE	MEDIUM	MEASUREMENTJOB	POT_15min_Job
STOPPED	MEDIUM	THRESHOLDJOB	VM_15min_Job