


Emergency Call Guide

Set a Digital Emergency

1. Go to: "Conventional-> Emergency ->Digital Emergency"
2. Select the emergency type

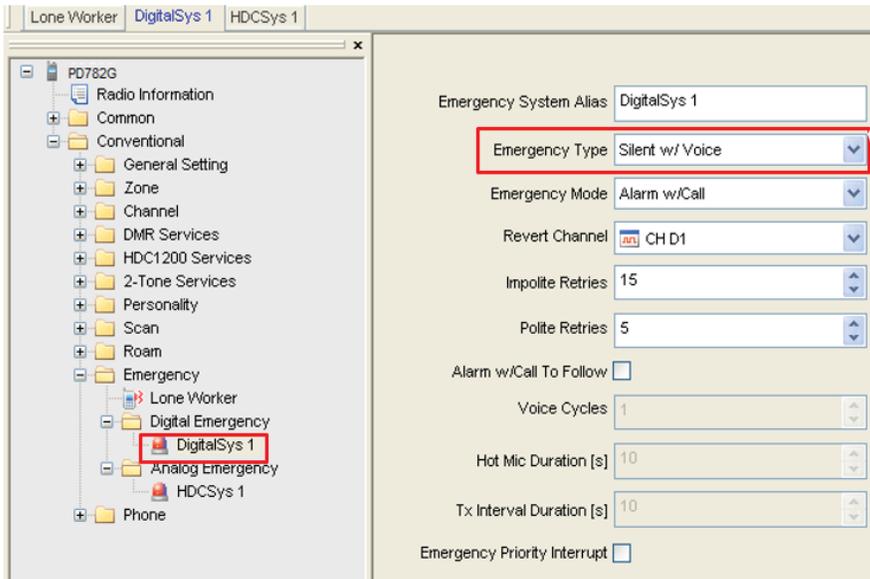

Disable: The emergency feature is disabled.


Siren Only: The radio emits a siren locally.

Regular: The radio gives visible and audible indications during emergency state.

Silent: The radio gives no indication during emergency state.

Silent w/ Voice: The radio gives no indication during emergency state, but will un-mute its speaker once it receives a call.

3. Select the emergency mode

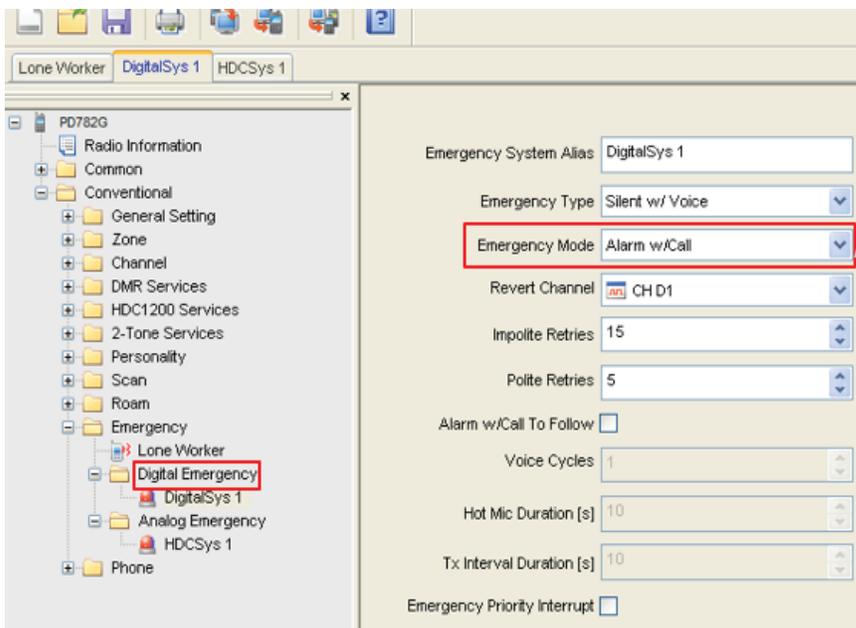

Alarm: The radio only sends emergency alarm requests upon emergency activation.

Alarm w/ Call: The radio sends emergency alarm request before the emergency call upon emergency activation.

Call Only: The radio only transmit Emergency call upon emergency activation.

If you are still having trouble with this please contact:

Email: support@hytera.us

EmergencyCallGuide05272015

Hytera America

Address: 3315 Commerce Parkway
Miramar, Florida 33025, USA


Tel: 800-845-1230 **Fax:** 954-846-1672

http: www.hytera.us

Emergency Call Guide

Set a Digital Emergency

4. Select revert channel

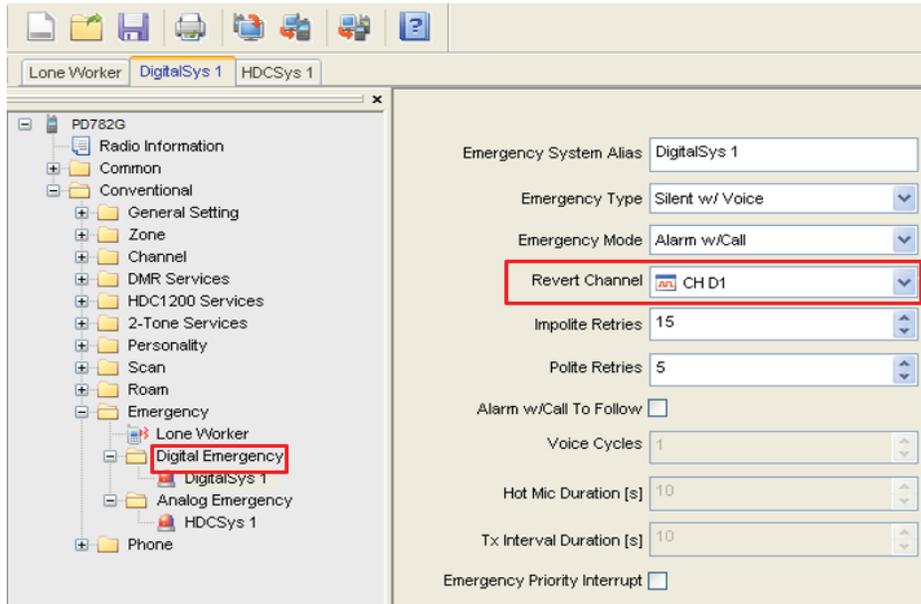


Selected: The current channel where the emergency is activated.

Available channel: All channels in the Digital Channel list with TX Contacts Name set as *Group Call* are available.

5. When Emergency mode is Alarm or Alarm w/call the impolite retries and polite retries will be active

6. When Emergency mode is Alarm w/call or call only the Alarm w/call to follow will be active

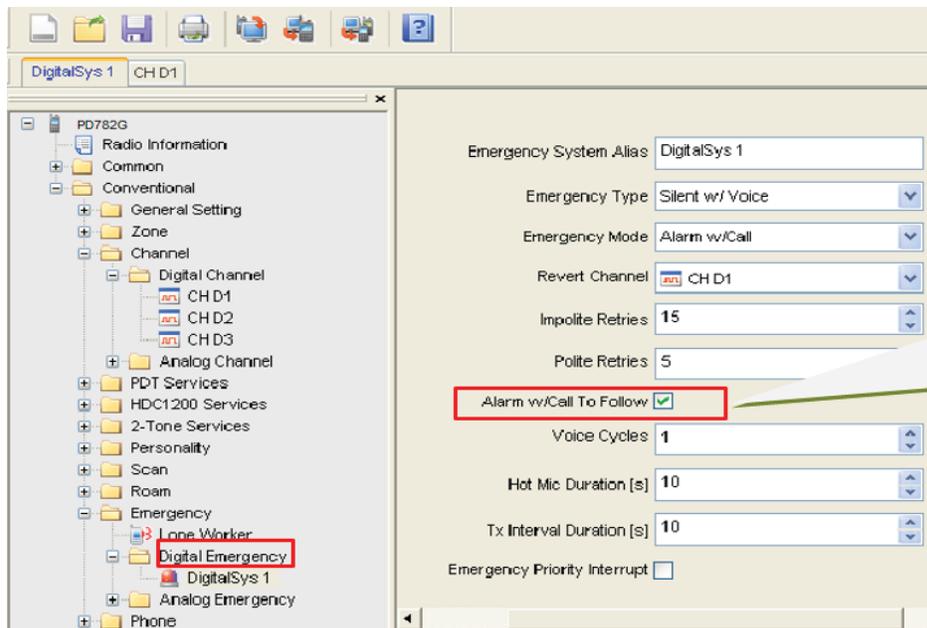

Checked: The radio will initiate an emergency call automatically during an emergency process.
Unchecked: The radio will not initiate an emergency call during an emergency process.

If you are still having trouble with this please contact:

Email: support@hytera.us

EmergencyCallGuide05272015

Hytera America


Address: 3315 Commerce Parkway
Miramar, Florida 33025, USA

Tel: 800-845-1230 **Fax:** 954-846-1672

http: www.hytera.us

Emergency Call Guide

Set a Digital Emergency

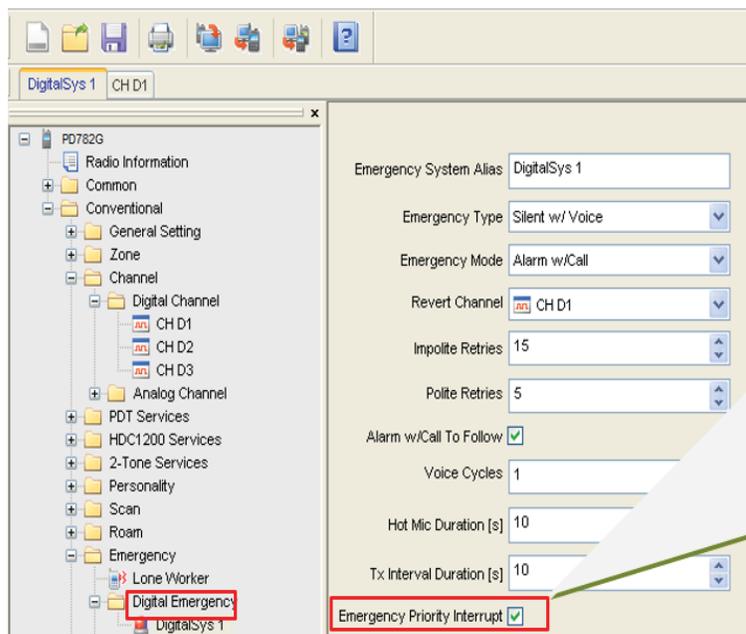


This function allows a user to send an emergency alarm by interrupting a call in progress. To carry out the function, any of the following ways if available:
Press the programmed "Emergency" button .

Press PTT key in Emergency mode .

The radio would trigger this function automatically when the preset conditions are met .

7. Go to Conventional->Channel->Digital Channel->CH D1 to select the Emergency System

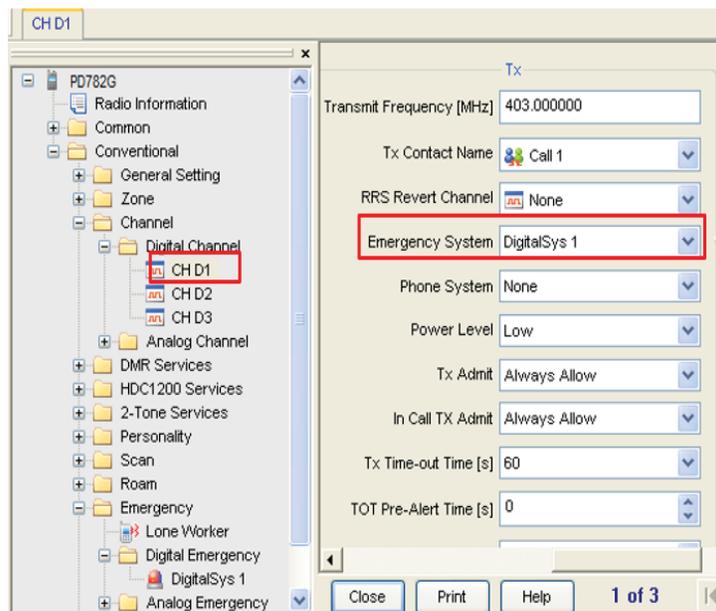

This option associates a defined digital emergency system to the current channel.

If you are still having trouble with this please contact:

Email: support@hytera.us

EmergencyCallGuide05272015

Hytera America


Address: 3315 Commerce Parkway
Miramar, Florida 33025, USA

Tel: 800-845-1230 **Fax:** 954-846-1672

http: //www.hytera.us

Emergency Call Guide


Set a Digital Emergency

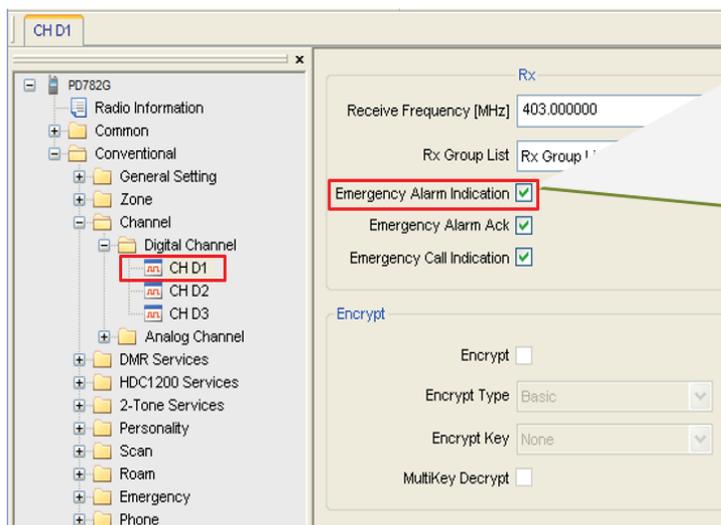

This option allows users to set whether audio and visual indication is given by the radio when an emergency alarm is received. The setting is available for the current channel only.

Checked: The radio gives audio and visual indications when receiving an emergency alarm.

Unchecked: The radio gives no indication when receiving an emergency alarm.

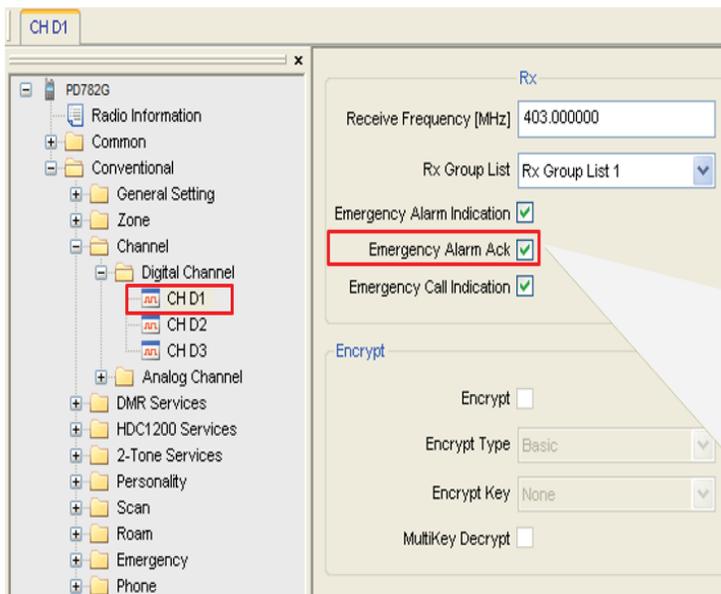

This option determines whether to acknowledge an emergency alarm automatically when an emergency alarm request is decoded. The Emergency Alarm Indication option must be checked to *Enable* this feature.

Checked: The radio will acknowledge automatically when it receives an emergency alarm request.

Unchecked: The radio will not acknowledge when it receives an emergency alarm.

If you are still having trouble with this please contact:

Email: support@hytera.us

EmergencyCallGuide05272015

Hytera America


Address: 3315 Commerce Parkway
Miramar, Florida 33025, USA

Tel: 800-845-1230 **Fax:** 954-846-1672

http: www.hytera.us

Emergency Call Guide

Set a Digital Emergency

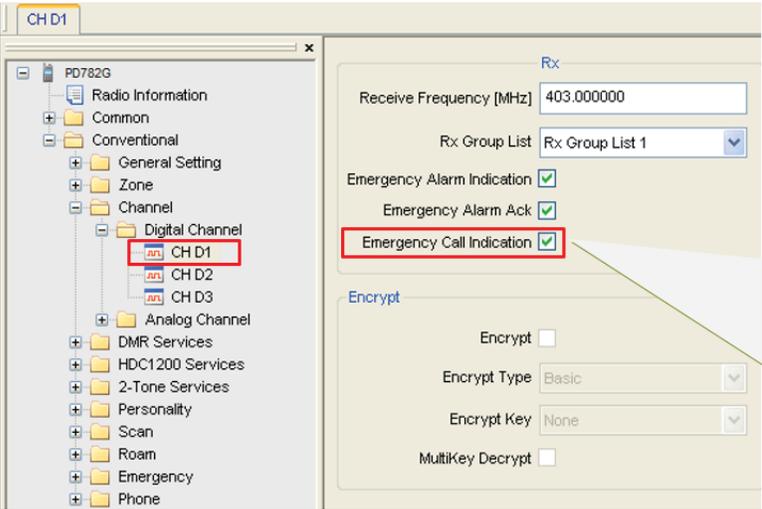

The screenshot shows the configuration interface for a PD782G radio. On the left, a tree view shows the 'Digital Channel' folder expanded to 'CH D1'. On the right, the 'Rx' section is visible, with the 'Emergency Call Indication' checkbox checked. A callout box points to this checkbox with the following text:

This option determines whether to give an audio and visual indication when an emergency call is received.

Checked: The radio will generate an audio and visual indication when it decodes an emergency call.

Unchecked: The radio will not generate an audio and visual indication when it decodes an emergency call.

8. To Clear the Emergency:

- For the Radio that Initiates the Emergency Short Presses the TK Button
- All Other Radio Must Press the Back Button and Then the TK Button

**If you are still having trouble
with this please contact:**

Email: support@hytera.us

EmergencyCallGuide05272015

Hytera America

Address: 3315 Commerce Parkway
Miramar, Florida 33025, USA
Tel: 800-845-1230 **Fax:** 954-846-1672
http: www.hytera.us