

Introduction

Inspection and Unpacking.....	1
Warnings, Cautions, and Notes	1

Getting Started

Antennas.....	2
Battery Installation	3
Battery Removal	3
Belt Clip Installation and Removal (on Nickel-Cadmium Batteries Only)	4
Universal Connector Seal Removal.....	6
Controls, Switches, Indicators, and Connectors.....	6
Keypad.....	7
Display	7
Display Light	7
Status Annunciators.....	8

Basic Radio Operation

Radio On/Off, Power-Up	9
Selective Channel Display and HOME Key.....	9
Monitoring.....	10
Receiving a Transmission	10
Transmitting.....	11
Low-Battery Alert.....	11

Radio Operation with Features

General	12
Coded Squelch Operation	12
Variable RF Power	12
Programmable Features	12
Channel Scan™ Features.....	16
Quik-Call II™ Decode Signalling.....	20
Touch-Code™, Dual-Tone Multi-frequency (DTMF).....	21
Repeater Talkaround	22
Smart PTT.....	22
Time-Out Timer.....	23
PAC•RT™	23
Receive-Only Channel.....	23
Single Tone™ Signalling	23

Batteries and Accessories

Battery Information	24
Recharging Nickel-Cadmium Batteries.....	24
Charging Temperature.....	24
Short Circuit	24
Memory Effect (Reduced Charge Capacity).....	24
Battery Disposal	25
Nickel-Cadmium Battery Recycling Facilities.....	26
Accessories List	27

Ⓜ, Motorola, JT 1000, Private-Line, Digital Private-Line, PAC•RT, Quik-Call II, Channel Scan, Touch-Code, and Single Tone are trademarks of Motorola, Inc.

© 1994, 1995 by Motorola, Inc., Radio Products Group
 8000 W. Sunrise Blvd., Ft. Lauderdale, FL 33322
 Printed in U.S.A. 04/95. All Rights Reserved.

General Information


Transmitting Distance.....29
Radio Care30
Safety Standards31
Restrictions32
Service.....33
Express Service Plus (ESP), U.S.A. only.....34
Product Service Information35
Parts Information.....35
Computer Software Copyrights36
Patent Disclosure36



Welcome to the Motorola JT 1000 Portable Radio. JT 1000 radios are sophisticated, state-of-the-art communication units, with models available in VHF and UHF frequency ranges, with up to 16 user-programmable channels. Pioneering the latest technology in radio electronics, Motorola JT 1000 radios provide features that were once only available in more expensive radios. Intelligent and flexible software increases the radio's capability, decreases the radio's physical size, and permits many of the radio's features to be customized for your specific needs.


Inspection and Unpacking

Inspect the shipping carton for any signs of damage. Remove and check the contents to be sure that all ordered items have been shipped. If items have been damaged during transit, report the damage to the shipping company immediately.

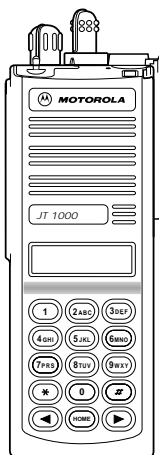

Radio Packing Box Contents:

- Radio
- Antenna
- Nickel-Cadmium Battery
- Belt Clip (with Nickel-Cadmium Battery Only)
- Help Card (with some shipments)
- Radio Information Sheet
- Operating Instructions Manual
- Universal Connector Seal

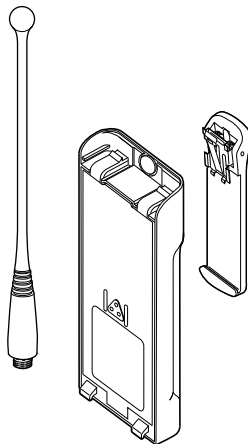

Warnings, Cautions, and Notes

Throughout this publication, you will notice the use of **WARNINGS**, **CAUTIONS**, and **Notes**. These notations are used to emphasize that safety hazards exist, and care must be taken or observed.



WARNING

An operational procedure, practice, or condition, etc., which may result in injury or death if not carefully observed.



CAUTION

An operational procedure, practice, or condition, etc., which may result in damage to the equipment if not carefully observed.

Note: An operational procedure, practice, or condition, etc., which is important to emphasize.

Antennas

Radio Operating-Frequency Chart

Fourth-Position Character	Frequency Band
K	136 - 178 MHz
R	403 - 470 MHz
S	450 - 512 MHz

Radio/Antenna Identification

An information label is attached to the back of your radio (chassis), just under the battery contacts. A radio model number is identified on this label. A typical model number might be H01KDH9PA3AN. The fourth position of the model number (in this case "K") identifies the


operating frequency band of the radio. The Radio Operating-Frequency Chart lists all fourth-position alpha characters and corresponding frequency band.

Antennas are frequency sensitive and are color coded according to the frequency range of the antenna. The color code indicator is the insulator in the center of the base of the antenna. The following illustrations and chart will help identify the antenna, antenna frequency range, and corresponding color code.

Refer to the **Radio Operating-Frequency Chart** and the **Antenna Identification Chart** on this page to ensure that the match between your radio and antenna is correct.

Antenna Installation

Screw the threaded end of the antenna into the antenna receptacle located on top of the radio. Rotate the antenna clockwise until it fits firmly against the bushing.

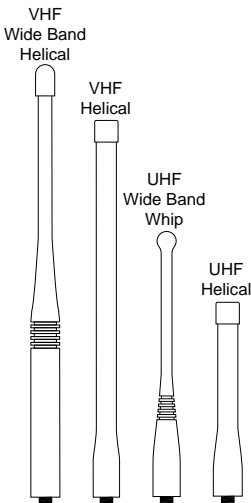


Antenna Identification Chart


Antenna Type	Approx. Length		Insulator Color Code	Frequency Range	Antenna Kit No.
	In.	MM			
VHF Wide Band Helical	8.1	203	RED	136-178MHz	NAD6563
VHF Helical	7.8	195	YELLOW	136-151MHz	NAD6566
	7.3	183	BLACK	151-162MHz	NAD6567
	6.9	172	BLUE	162-178MHz	NAD6568
UHF Wide Band Whip	5.2	130	GREY	403-520MHz	NAE6549
UHF Helical	3.3	83	RED	403-435MHz	NAE6546
	3.2	80	GREEN	435-470MHz	NAE6547
	3.2	79	BLACK	470-520MHz	NAE6548

Battery Installation

1. Turn off the radio and hold it with the back of the radio facing up.
2. Place the two tabs of the battery (located at the inside base of the battery) into the metal cutouts of the radio (located at the inside base of the radio).
3. Rotate the battery toward the radio and press the top of the battery into the radio until both battery release levers “click” into place.


Note: The battery is shipped uncharged. Batteries must be charged before use. (See Battery Information section.)

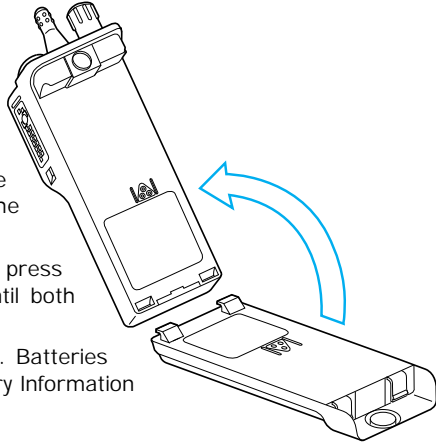

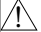
 <p>CAUTION</p>
<p>The disposable, non-rechargeable alkaline battery (NTN7319) can be used with the JT 1000 Model Only.</p>

Battery Removal


1. Turn off the radio and hold it such that the battery side of the radio is tilted down.
2. Press down on the two battery release levers.

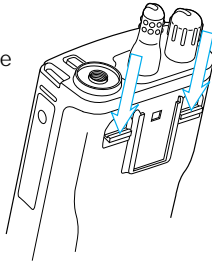


3. With release levers pulled down, the top of the battery will fall away from the radio.
4. Remove the battery from the radio.

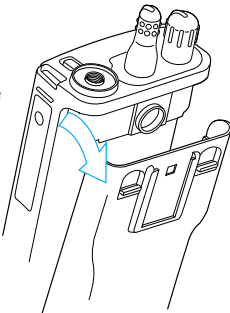


Belt Clip Installation and Removal (on Nickel-Cadmium Batteries Only)

 <p>CAUTION</p>
<p>Installation and removal of the belt clip assembly should be done with the battery removed from the radio or damage could be done to the radio housing.</p>

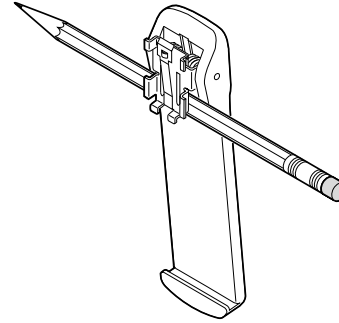


Installing the Belt Clip

1. Insert a pencil or equivalent size instrument between the inside of the belt clip and the metal clip assembly to hold the metal clip partially sprung (metal clip should be approximately parallel with the plastic portion of the belt clip).
2. Align the metal tabs of the belt clip with the plastic slots of the battery housing.
3. Slide the belt clip onto the battery, pushing firmly until you hear a click.
4. Remove the pencil from the clip.

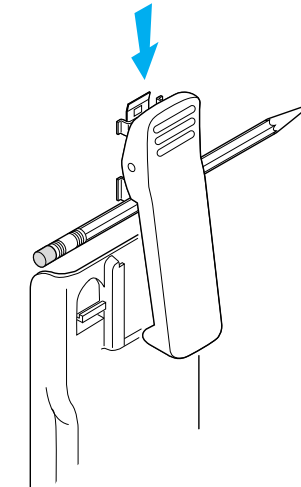

Removing the Belt Clip

1. Insert a pencil or equivalent size instrument between the inside of the belt clip and the metal clip assembly to hold the metal clip partially sprung (metal clip should be approximately parallel with the plastic portion of the belt clip).
2. Push the flat blade of a #2 slotted screwdriver (or like instrument) between the battery housing and the belt clip release tab.
3. While performing step 2, slide the belt clip out and away from the battery, and remove the screwdriver.
4. Remove the pencil from the clip.

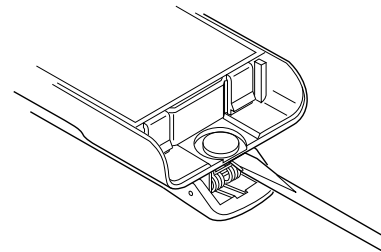

5 Getting Started (cont.)

Figure 1. Controls, Switches, Indicators, and Connectors

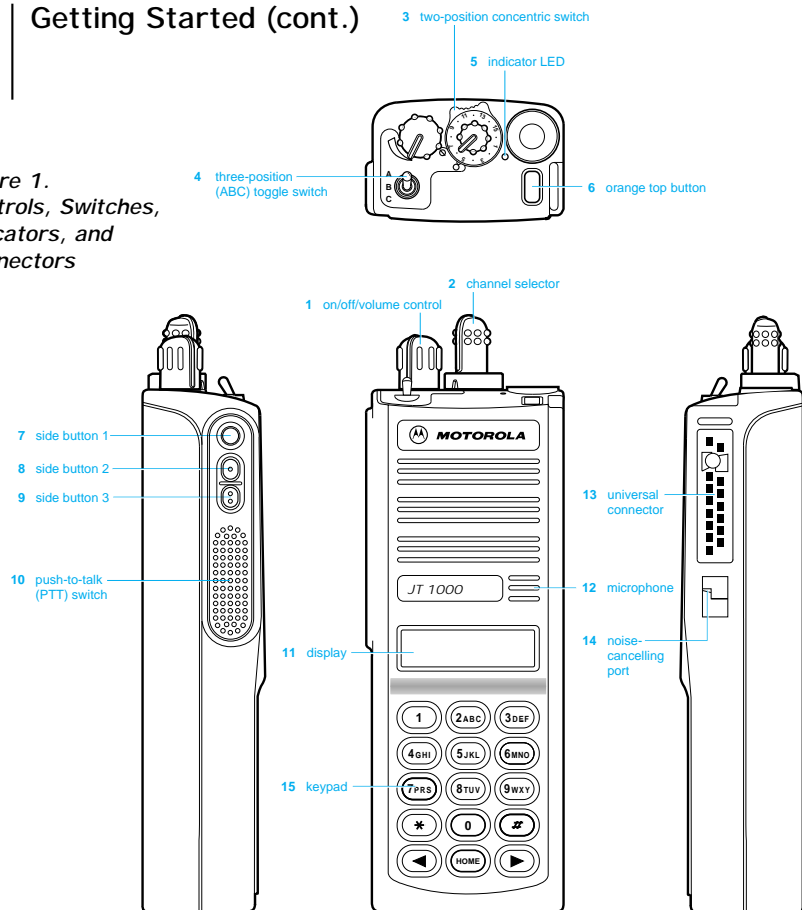


Table 1. Switch, Button, and Keypad Programming

Feature	3-Position Toggle			Top Button	Side Button			2-Position Concentric	Keypad Menu
	A	B	C		1	2	3		
Carrier Squelch		X*	X*						
Change Squelch Setting									X
DTMF Access/Exit				X*					
Keypad Lock								X*	
Light					X	X	X		
Mode-Slaved Squelch	X*								
Monitor					X	X	X*		
Mon/Scan Program Status					X	X	X		
Multiple Select PL							X*		
PAC+RT	X	X	X						
Repeat/Talkaround	X	X	X						
Single Tone Encode					X	X	X		
Scan On/Off	X	X	X		X	X	X		
Scan/Program Status					X	X	X		
Scan/Scan Program	X		X		X	X	X		
Sel/Program/Number-Edit					X*				
Variable RF Power	X	X	X						X

Note: * = Feature is programmed at shipment to this switch or button.
X = Feature can be programmed to this switch or button.


6 Getting Started (cont.)

Universal Connector Seal Removal

WARNING

When not in use, keep the side connector covered using the universal connector seal provided.

Touching the top two contacts of the universal connector when transmitting could result in a radio frequency burn.

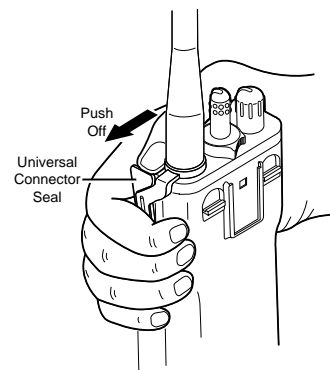

If the universal connector seal is attached to the radio:

1. Turn the radio off when removing the seal.
2. Grasp the radio as illustrated, and push your thumb against the tabbed portion of the seal with enough force to unsnap the universal connector seal from the radio.
3. Rotate the seal around the antenna to move it away from the universal connector; slide the seal off of the antenna and completely away from the radio.


Controls, Switches, Indicators, and Connectors

(Refer to Table 1/ Figure 1 for Switch and Button Programming Information)

- 1 **On/Off/Volume Control** – Turns the radio on and off, and adjusts the volume level.
- 2 **Channel Selector** – Selects the operating channel (1-16).
- 3 **Two-Position Concentric Switch (□)** - Keypad Lock, orange button (DTMF), and Multiple Select PL lock/unlock.
- 4 **3-Position Toggle Switch (A B C)** – RSS programmable. User selects feature.
- 5 **LED Indicator** – Indicates the radio operating status; green/red light-emitting diode (LED).
- 6 **Orange Top Button** – DTMF mode enable/disable.
- 7 **Side Button 1 (Blue/Teal)** – Radio Service Software programmable, serves as a program/edit button.
- 8 **Side Button 2** – Radio Service Software programmable, and inputs Multiple select PL.
- 9 **Side Button 3** – Radio Service Software programmable, default from factory is monitor.
- 10 **Push-To-Talk (PTT) Switch** – Engages the transmitter and puts the radio in the transmit mode.
- 11 **Display** – Provides visual information to the user.
- 12 **Microphone Port** – Accepts voice input to the radio's microphone.
- 13 **Universal Connector** – Provides access for Radio Service Software programming and side-connector programming key, testing, and accessory connections.
- 14 **Noise-Cancelling Port** – Reduces background noise during transmit.
- 15 **Keypad** – Provides control and data interface.

Keypad

The radio includes a 15-button keypad that activates or inputs data. The keypad's upper 12 keys are arranged, and function, like a standard telephone keypad. In addition, the keypad's top three keys access menu selections. The keypad's bottom three keys are the left arrow key, **HOME** key, and right arrow key. The left and right arrow keys are used to enter the Programming Features mode. The left arrow key is also used for editing when you are entering information manually from the keypad when in program mode. Pressing the left arrow key will backspace and erase the display, one character at a time.

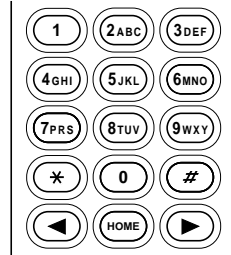


Display

The radio has a 14-character, one-line liquid crystal display (LCD), which displays either alphanumeric messages or feature-selection information. Above the character displays are status annunciators that indicate some of the radio's operating conditions.

Display Light

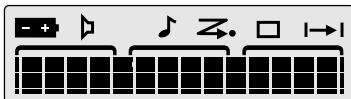


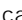
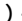
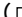


If poor light conditions make the display difficult to read, turn on the radio's display backlight by pressing the **HOME** button. The light will remain on for a preprogrammed time period before it turns off automatically. If, while the light is on, any key or button is pressed (except for the PTT switch), any knob is turned (except for On/Off volume control), or any toggle switch is moved, the light will remain on for an additional time period.



LCD and Status Annunciators

Status Annunciators

The status annunciators indicate the status of the following radio functions:


- **Battery Status** () – Indicates the state of the radio's battery. Flashes when the battery is low.
- **Coded Squelch** () – Indicates the type of receive squelch that is in effect for the active conventional channel; ON = CARRIER SQUELCH; OFF = CODED SQUELCH.
- **Call Received** () – Flashes when a Quik-Call II page is received.
- **Scan** () – Indicates when the radio is scanning; ON = SCANNING; OFF = NOT SCANNING.
- **Priority Scan** () – The presence of a dot along with the scan annunciator indicates the scanning of a priority mode; FLASHING DOT = PRIORITY
- **Programming Mode** () – A flashing annunciator box Indicates that the radio is in the programming mode; FLASHING = IN PROGRAMMING MODE; OFF = NOT IN PROGRAMMING MODE.
- **Keypad Lock** () – Disables the keypad, orange top button (DTMF), and Side Button 2 (Multiple Select PL). The annunciator does **not** flash.
- **Direct** () – Indicates whether you are talking directly to another radio (talkaround), or through a repeater; ON = DIRECT; OFF = REPEATER.

Radio On/Off, Power-Up

Turn the radio on by rotating the on/off/volume control 1/4-turn clockwise. The LED on top of the radio will light green, and a **SELF TEST** screen will appear on the LCD to indicate that the radio is performing a self test. A high-pitched tone (Radio Service Software programmable) is generated to indicate that the radio has passed the self test. If a low-pitched tone, screen display **FAIL 01/82**, or any combination of the two occurs (indicating a malfunction), turn the radio off, check the battery, and turn the radio back on.



On/Off
Volume Control

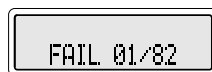

CAUTION

Do not remove the battery from the radio during power-up or during any programming sequence. This could corrupt codeplug data.

Note: The power-up self test verifies the operational status of the microprocessor-based systems but does not check all of the radio frequency components and does not check the operation of all customer specific features. Motorola recommends that the functionality of the radio be periodically checked by an authorized Motorola service shop.


Selective Channel Display and HOME Key

After power-up, a selective channel display is shown. This display is a per radio feature programmed by Radio Service Software one of two ways:

- one way, the **dispatch display**, shows the channel number (selected by the channel selector) and a number that represents the squelch code assigned to that receive channel. If the PTT is pressed while viewing the dispatch display, the display will not change.
- the other way, the **numeric display**, shows the receive frequency of the channel (selected by the channel selector) and the squelch type or squelch code assigned to that receive frequency. If the PTT is pressed while viewing the numeric display, the display will change to show the transmit frequency and the transmit squelch type or squelch code.




OR

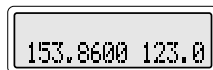

When in the programming mode, if no keys are pressed in 15 seconds (Radio Service Software programmable), the radio will automatically exit that mode and return to the selective channel display.

The HOME key is used to exit the current menu screen and return to the previous menu screen. If the existing menu allowed data entry and side button 1 was not pressed, pressing the HOME key will cause that data to be lost.

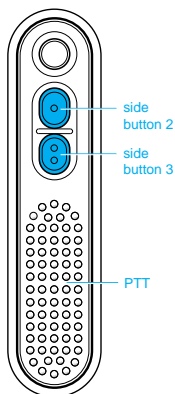

Monitoring

Turn the radio on, momentarily press side button 3 (default setting from factory), and listen for channel activity. To place the radio in the permanent, forced-monitor mode, press and hold side button 3 for approximately five seconds (time programmable via Radio Service Software). The radio emits a brief high-pitched tone as it enters the forced-monitor mode. To return the radio to its original squelch state, one of the following can be done: press side button 3 again (silent-monitor mode on carrier squelch channels), press the PTT, change channels, or turn the radio off and on.

Receiving a Transmission

1. Turn the radio on and set the channel selector to the desired channel position.
2. Listen for a transmission and adjust the volume control to a comfortable listening level. If no transmission is heard, press the monitor button to unsquelch the radio, and adjust the background noise to a comfortable listening level.

Note: The squelch level is a per-channel setting that can be reprogrammed using the keypad. Refer to Radio Operation with Features section, Front Panel Programming, *Adjust Squelch* for details.

3. Your radio is now set to receive transmissions on the selected frequency.
4. Refer to Radio Operation with Features section, Coded Squelch Operation paragraph for Tone Private-Line® (PL) and Digital Private-Line™ (DPL) operation.

Notes:

- If the channel selector control is placed on an unprogrammed channel (blank channel), an error tone is emitted until the channel selector control is rotated to a programmed (valid) channel.
- The LED will blink red in the receive mode to indicate that the channel is busy.

Transmitting

1. Turn the radio on and set the channel selector to the desired channel position.
2. Listen for a transmission and adjust the volume control to a comfortable listening level. If no transmission is heard, press side button 3 to unsquelch the radio, and adjust the background noise to a comfortable listening level.
3. Do not interrupt another user. If the channel on which you are transmitting is programmed for coded squelch operation, ensure that the channel is not in use by momentarily depressing the monitor button to listen for activity, or check for the LED to be flashing red.
4. To transmit, hold the radio in a vertical position with the microphone two to three inches away from the lips. When the channel is clear, press and hold the PTT on the side of the radio and speak slowly and clearly into the microphone area. The LED will be red while in the transmit mode. When your transmission is completed, release the PTT to listen.


Note: Avoid blocking the noise-cancelling port while transmitting to take full advantage of the noise-cancelling feature.

Low-Battery Alert



While in transmit mode, the LED will blink red if the battery falls below a low voltage level (Radio Service Software programmable, blinking LED is factory default). The radio can be programmed via Radio Service Software to emit a double-chirp tone to indicate a low-battery condition. If a low-battery condition exists, the tone will be emitted when the PTT is released in transmit mode, and when the low-battery condition is detected in receive mode.

Also, in the transmit and receive modes, when a low-voltage level is detected, the LCD battery-status annunciator will blink.


Note: If the JT 1000 radio is using an NTN7319 Alkaline battery pack, the low-battery alert point is automatically reconfigured.

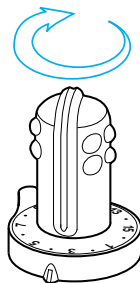

Channel Selector

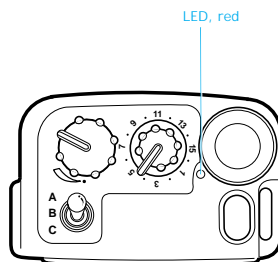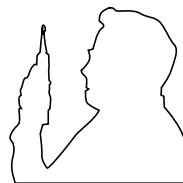

Control Top

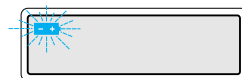

Low-Battery
Annunciator Display

General

All discussions of radio features assume specific combinations of the 3-position toggle switch, side button programming, and radio model capability. Your particular radio operation may vary depending on these choices.

Coded Squelch Operation

Tone Private-Line (PL), Digital Private-Line (DPL), and carrier squelch operation are all available in the same radio, on a per-channel basis. When operating in carrier squelch mode, all traffic on that channel is heard. When operating PL or DPL, your radio hears those messages intended for you. When this feature is channel-slaved, PL, DPL, or carrier squelch is programmed to each transmit and receive frequency, and you need not move any switches for activation. Alternatively, this feature can be programmed to the 3-position toggle switch. See Table 2 toward the rear of this manual.

Variable RF Power

Transmit power on JT 1000 radios is programmed on a per channel basis, one or more channels (as required) for high power and other channels for low power. Programming of this feature can be done by:

- the user, via the keypad and display (see page 15), or by
- Radio Service Software.

Note: Unless programmed otherwise by Radio Service Software, JT 1000 radios will transmit low power only when using an alkaline battery.

Programmable Features

The JT 1000 Radio uses the display and keypad to give you quick access to the following features, programmable per channel:

- multi-selectable PL/DPL/CSQ,
- squelch level adjust, and
- power selection.


Important Note: While programming any one of these features, all transmit and receive functions are disabled.

Once the radio is turned on and the HOME display is shown, pressing either the left (◀) or the right arrow key (▶) prompts the radio to show two softkey features (**SQL** and **PWR**) on the 14-character display, with key-like outlines, known as “softkeys,” to make them look like keys.





Selecting the **SQL** or **PWR** feature is accomplished by pressing the softkey button directly below it. The softkey buttons (1), (ZAND), (3000) are the top row of keys on the keypad. The left key controls the left feature and the middle key controls the middle feature. For detailed information, refer to “Adjust Squelch (SQL)” and “Select Power (PWR)” paragraphs on page 15.

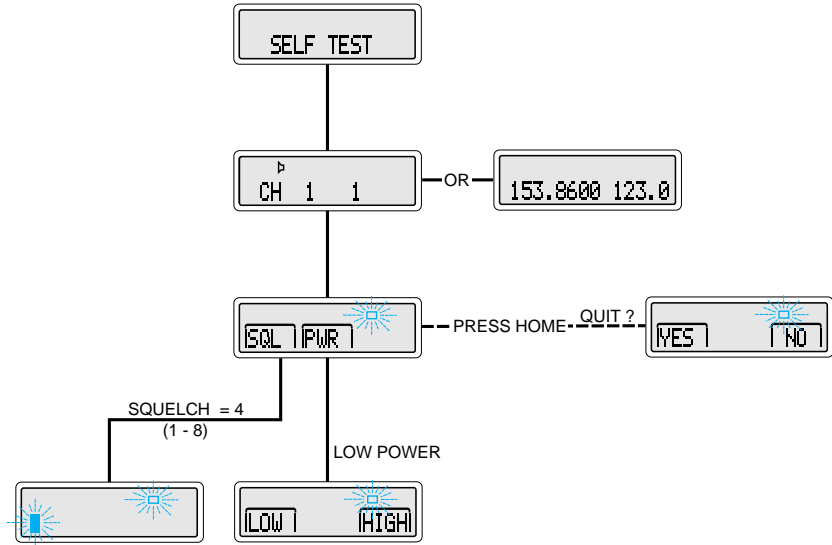
LCD Display/Menu Screen Tree



- **Multi-Selectable PL/DPL/CSQ Mode**

A numeric-display screen and a dispatch-display screen,(see Basic Radio Operation section) apply to Multi-Selectable PL/DPL/CSQ Mode. For the description of Multi-Selectable PL/DPL/CSQ Mode, the dispatch-display screens are used.


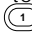

Turn the radio on and select a channel, for example channel 3. The screen will display the channel number and the squelch code assigned to that channel (**CH 3 3**). The squelch code is for both transmit and receive. Press side-button 2; the display will show the channel number, indicate the type of squelch, and display the DPL code or PL frequency if applicable. For example (**CH 3 = #131**). The # sign signifies DPL squelch. Use the arrow keys to scroll through and select any of the other channel codes to be moved to the channel that you are on. For example, while scrolling, the screen would display: **CH 3 = C4**, **CH 3 = C5**, **CH 3 = C6**, etc. Stop on the desired channel code (for example **CH 3 = C5**) and press side button 2 again to move channel 5's squelch code to channel 3. Channel 5's code will remain on channel 3 even if the radio is turned off and back on. To return to original channel programming, press the  key followed by the  key within two seconds.

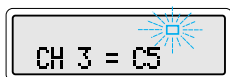

This function is enabled from the factory, but can be disabled by Radio Service Software.


Note: Multi-Selectable channel programming can be cleared (reset) on the selected channel by pressing the **HOME** key while in the Multi-Selectable PL/DPL/CSQ Mode.

- **Program Edit Mode**


Turn the radio on and select a channel. The LCD shows the channel number and the squelch code assignment. To enter the program edit mode, press either one of the arrow keys on the keypad. The **SQL PWR** softkey menu screen will be displayed. When in this menu, pressing the  key changes the display to **QUIT?**, which lasts for two seconds. The screen changes to display **YES NO**. Press softkey button  to return to radio operation. Press softkey button  and return to the **SQL PWR** softkey menu.




Note: Programming/editing will be only for the channel selected.

Adjust Squelch (SQL) - Press softkey button . The display will show the current squelch setting on the selected channel for two seconds (for example **SQUELCH = 4**). The screen will prompt for a new setting (1-8), 4 nominal, and press the top side (blue/teal, edit) button. Choose setting 1 for loose squelch, 8 for tight squelch. The display returns to the **SQL PWR** menu screen. Repeat for each channel as applicable.



Select Power (PWR) - Press softkey button . The display will show the current power selection for two seconds (for example **LOW POWER**). The screen will prompt for a new selection (**LOW HIGH**). Press the softkey under the desired power setting if a power setting change is desired. The display returns to the **SQL PWR** menu screen.

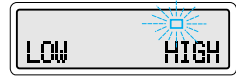

Channel Scan™ Features

A. Description

The scan feature allows the user to monitor activity on different channels. The radio is capable of scanning up to 16 channels in the scan list, with one list available per radio. A radio can be programmed via Radio Service Software for either non-priority or priority channel scan with PL/DPL or carrier squelch operation.

Notes:

- A radio programmed for non-priority channel scan, will not have priority-channel capability.
- With scan on, the menu system and the DTMF feature are both non-functional.

Non-priority channel scan means no scan channel has priority over another. The scanner stops on the first scan channel with activity. When activity is over and the “hang time” has expired, scan proceeds to the next active channel. Hang time is the amount of time that the radio user has to respond to a received transmission. Hang time is programmable on a per-radio basis.

Priority channel scan means that any one of the radio's scan channels may be designated as a priority channel. The priority channel is checked for activity more frequently than non-priority channels. If the radio is locked on a non-priority channel and activity is detected on the priority channel, the radio will leave the non-priority channel and lock onto the priority channel. An alert tone is generated to indicate that a priority message is being received.

Note: With scan on, the channel selected automatically becomes a member of the scan list.

Three types of scan are available:

1. **Automatic Scanning (Auto Scan)** – is preprogrammed in the radio using Radio Service Software, and slaved to one or more channels. A radio with auto scan will automatically begin scanning whenever the auto scan channel position is selected. When auto scan is programmed to a channel, that channel will always operate in the scan mode. The number of auto-scan channels is equal to one less than the number of channels in the radio.
2. **Preprogrammed Conventional Channel Scan** – is preprogrammed in the radio using Radio Service Software.
3. **Operator-Selectable Conventional Channel Scan** - lets the user program the scan list by using a combination of side buttons or toggle switch, and the channel selector knob. The programming procedure is explained, in detail, in paragraphs titled “Programming Operator-Selectable Channel Scan.”

Transmitting (pressing the PTT) while in the scan mode is accomplished in one of three ways (programmed via Radio Service Software):

- **Revert to Selected Mode** – lets you transmit while scanning is in progress. The transmission will occur on the channel selected by the channel selector.

Channel Scan™ Features (cont.)

- **Talk-Back Scan** – lets the user respond on the channel with activity within a specified “hang-time”. Hang time is the amount of time that the radio user has to respond to a received transmission. If the user misses the allotted time and tries to transmit, transmission occurs on the channel currently selected by the channel selector.
- **Designated Tx Channel** – transmission will always occur on this channel, whether or not there is activity on a scan channel.

B. Operation

How to Turn Channel Scan On

Turn the radio on and place the radio in the scan-on mode (for units with preprogrammed and/or operator-selectable channel scan), or rotate the channel selector and stop on the preprogrammed scan channel (for units with auto scan). Scanning begins.

During scan, the display shows the channel that the rotary knob is set on. When activity is detected on a channel, the radio locks onto it, monitors the conversation, and the display shows the active scan channel. When activity is over and the “hang time” (programmable) has expired, the scanner proceeds to the next active channel.

Scan Annunciators



When scan is turned on, the scan status annunciator on the display turns on, and remains on until scan is turned off. If scanning stops on a priority channel, the priority scan status annunciator (dot) will be flashing.

How to Turn Channel Scan Off

Place the 3-position switch in the scan off position or press the scan off button (for units with preprogrammed and/or operator-selectable channel scan), or rotate the channel selector to any position other than a channel with channel scan (for units with auto scan). Scanning stops.

How to Delete a Nuisance Channel from the Scan List

While in channel scan operation, if conversation on a particular non-priority channel (nuisance channel) bothers you, **temporarily** delete that channel from the scan list by pressing side button 1 when the radio is locked onto the channel. The channel will be temporarily deleted from the list until scan is turned off. The channel is put back into the list upon re-entry into scan. The channel is also put back into the scan list if you change modes by rotating the channel selector. All scan list channels except one, may be nuisance deleted. The priority channel may not be nuisance deleted.

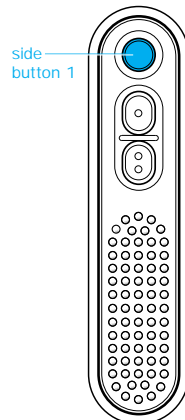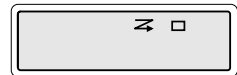

Channel Scan™ Features (cont.)

Programming "Operator-Selectable Channel Scan"


1. Enter the scan programming mode in one of two ways, programmed by Radio Service Software:
 - by placing the 3-position toggle switch in the scan program position, or
 - by selecting the proper side button.



An alert tone will sound and the display will show **SCAN PROGRAM**.


Note: The **SCAN PROGRAM** display is shown for the duration of scan programming. The display does not indicate scan programming status. Scan programming status is indicated by the LED.

2A. Add a non-priority scan channel to the scan list by rotating the channel selector to the desired channel to be added, and press the select button. The LED will illuminate green to indicate that the channel is now in the scan list. Add another non-priority scan channel to the scan list by rotating the channel selector to the next channel to be added. Press the select button to enter the channel as a non-priority channel, and again the LED will illuminate green to indicate that the channel is in the scan list. A total of 16 non-priority channels can be entered into the scan list in this manner.

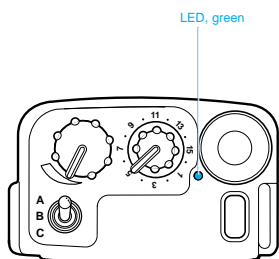

2B. Add a priority scan channel to the scan list by rotating the channel selector to the desired channel.

If the selected channel is already in the scan list (LED illuminated green), pressing the select button again makes that channel the priority channel. The LED will change from green to red.

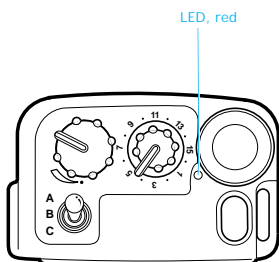

If the selected channel is not already in the scan list (LED off), add it by pressing the select button. The LED will illuminate green. Press the select button again to select this channel as the priority channel. The LED will change from green to red.

Channel Scan™ Features (cont.)

3. **Change the priority scan channel** in the same manner as you would add a priority scan channel. When any scan channel is made the priority channel, the previous priority channel automatically becomes a non-priority channel.
- 4A. **Delete a non-priority scan channel** from the scan list as follows:
 - Ensure that the radio is in the scan program mode.
 - Rotate the channel selector to the channel you want to delete. The LED should be green, indicating that the channel selected is in the scan list.
 - Press the select button twice to delete the channel from the list. On the first press, the LED will illuminate red and on the second press, the LED will go off.
- 4B. **Delete the priority scan channel** from the scan list by rotating the channel selector to the priority channel (LED illuminated red). Press the select button. The channel will be deleted from the scan list, and the LED will go off. Add the channel back to the scan list as a non-priority scan channel by pressing the select button again (LED will illuminate green).
5. **Exit the scan programming mode** in one of two ways:
 - If scan is Radio Service Software programmed to the 3-position switch, place the switch in the off position, thus selecting another radio function, or
 - If scan is Radio Service Software programmed to a side button, press the button again.

A tone is generated and **SCAN PROGRAM** is removed from the display to indicate that scan programming has been exited.

Quik-Call II™ Decode Signalling

A. Description

Quik-Call II decode is a convenient way for a dispatcher to voice page an individual or group. Quik-Call II decode also eliminates the need for you to listen to traffic that is of no concern. This feature is enabled on a per-channel basis, and available as individual call, group call, or dual call.

B. Operation


To turn on and operate Quik-Call II:

1. Turn the radio on.
2. Activate Quik-Call II by placing the 3-position toggle switch in the (A) position (if so programmed), or by rotating the channel selector to the desired channel with Quik-Call II programmed. The display will show **QC**.
3. When a page is received, the LED flashes green, the call-received annunciator flashes, and an interrupted alert tone (individual call) or continuous alert tone (group call) is heard. A voice message will follow. The LED will continue to flash for the entire length of the message.
4. Return the radio to the Quik-Call II paging mode by pressing the monitor button. If the monitor button is not pressed, the radio will "auto-reset".

The Quik-Call II feature is factory programmed for auto-reset. When carrier is detected, the automatic reset timer is stopped; when carrier is lost, the auto-reset timer is started over.

Notes:


- Quik-Call II auto-reset is cancelled when the monitor button is pressed or when the channel is changed. The auto-reset timer is started over if it was running when a Quik-Call II was decoded, or when a successful transmission was initiated.
- Quik-Call II will be decoded and an alert generated regardless of the PL or DPL squelch configuration on that channel.

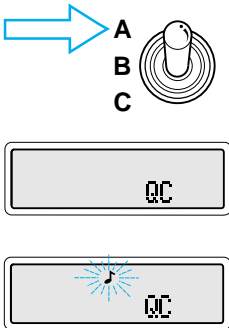

Touch-Code™, Dual-Tone Multi-frequency (DTMF)

The JT 1000 radio is programmed to allow DTMF calls. It has a keypad that consists of the numeric keys 0-9, the * key, the # key, and three keys used for programming functions (two arrow keys and a HOME key (◀) (HOME) (▶)). The two arrow keys and HOME key are non-functional during DTMF operation.

Each time a key is pressed, an audible sidetone is heard. The sidetone is Radio Service Software programmable to be either a timed duration or last as long as the key is depressed. The DTMF sidetone default is for the tone to last for as long as the key is depressed.

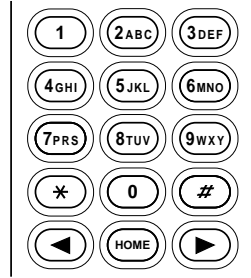

Using DTMF With Auto Access and Deaccess For Phone And Control Applications

1. Enter the DTMF mode by pressing the orange top button. The Radio Service Software preprogrammed access code is sent automatically, and **DTMF** is displayed.
2. When you hear the go-ahead tone, enter the numbers using the keypad. The numbers are sent as you key them.
3. Listen for the phone to ring and wait for the called party to answer.
4. Press the PTT to transmit.
5. When the conversation is finished, hang-up by pressing the orange top button. The deaccess code is sent automatically.



Note: Changing channels anytime during DTMF automatically sends deaccess.


Placing a Call With Manual Dial (No Auto Access)

1. Enter the DTMF mode by pressing the orange top button.
2. If an access code is required before you enter the phone number, enter it using the keypad.
3. When you hear the go-ahead tone, enter the phone number using the keypad. The numbers are sent as you key them.
4. Listen for the phone to ring and wait for the called party to answer.
5. Press the PTT to transmit.
6. When the conversation is finished, hang-up by entering the deaccess code from the keypad.

Note: DTMF does not function if the radio is in the scan mode.

Repeater Talkaround

Repeater talkaround allows you to bypass the repeater. This is referred to as the DIRECT mode, when you talk portable-to-portable. The transmit frequency is the same as the receive frequency (Tx = Rx). The direct annunciator (↔) appears on the display when you are in direct communication with another radio.

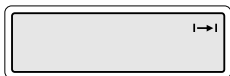

In the REPEAT mode, you talk through the repeater, which increases the radio's operating range. The transmit frequency is not the same as the receive frequency.

The repeater talkaround feature is programmed to the three-position toggle switch, one position on the switch will select the REPEAT mode, and another position will select the DIRECT mode. See Table 2 located toward the rear of this manual.

Note: Channel-slaved talkaround overrides the 3-position toggle switch if the transmit and receive frequencies are the same.

Smart PTT

A. Description

Smart PTT is a per-channel feature which increases the system manager's control of radio operations. When smart PTT is enabled in your radio (using Radio Service Software), the user will not be able to transmit on an active channel. In addition, the monitor function can be disabled on channels programmed with smart PTT. Three radio-wide variations of smart PTT are available:

1. **Transmit Inhibit on Busy Channel:** With this feature enabled, you will be inhibited from transmitting if any activity is detected on the channel.
2. **Transmit Inhibit on Busy Channel with Wrong Squelch Code:** With this feature enabled, you will be inhibited from transmitting on an active channel with a squelch code other than your own. If the squelch code is the same as yours, the transmission will not be inhibited.
3. **Quick-Key Override:** This feature can work in conjunction with variation one or two. With this feature enabled, you will be able to override the transmit inhibit state by quick-keying (two PTT activations within one second of each other) the radio.

B. Operation

Smart PTT radio operation is exactly the same as standard radio operation, except that if you try to transmit (press PTT) on a busy Smart PTT channel, a continuous alert tone is generated until the PTT is released; the transmission is inhibited.

Time-Out Timer

Time-out timer is a per-channel feature that limits the amount of time you can continuously transmit on a channel. If you hold down the PTT longer than the allotted time:

- a pre-alert warning tone will be generated four seconds prior to termination of the transmission to give you an indication that your conversation is about to be cut off.
- the transmission is terminated at a selected time (pre-programmed by Radio Service Software) and an alert tone is heard until the PTT is released.

Note: The time-out timer function ships disabled from the factory. When activated using Radio Service Software, the default time is 60 seconds

PAC•RT™

PAC•RT is a per-channel feature that allows you to communicate with the mobile vehicular repeater system, transmitting through a PAC•RT vehicular repeater (for increased power) to the base station. When you select PAC•RT operation, all messages are communicated portable-to-base. In radios with PAC•RT programmed to the 3-position toggle switch, if the (B) or (C) position of the 3-position toggle switch is selected, all messages are communicated portable-to-portable, and the PAC•RT repeater is not activated. See Table 2 located toward the rear of this manual.


Note: PAC•RT ships disabled from the factory.

Receive-Only Channel

JT 1000 radios can be programmed to operate receive-only on a per-channel basis. A channel programmed for receive-only will not transmit. Pressing the PTT will result in a low-pitch alert tone.

Single Tone™ Signalling

Single Tone is an “encode-only” signalling feature programmed by radio service software. With this feature a timed tone is transmitted with the push of a button. The feature is programmed to the PTT switch or to any of the three side buttons. A maximum of two different tones can be programmed, each to any one of the four buttons (PTT, SB1, SB2, or SB3). If one of two single tones is programmed to the PTT switch, it must be single tone one.

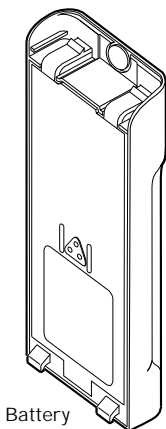

Battery Information

The JT 1000 radio receives its power from an alkaline battery or a rechargeable nickel-cadmium (NiCd) battery as listed in the accessories section. These batteries are a safe, dependable power source for your radio. Proper care of the battery will ensure its effectiveness and allow for peak radio performance.

Notes:

- The NTN7319 alkaline battery is compatible with JT 1000 radios only.
- The alkaline battery is not rechargeable.
- When the alkaline battery is used on a JT 1000 radio, the radio is not compatible with the mobile vehicular adapter(MTVA).

Recharging Nickel-Cadmium Batteries

Recharge the battery before use to ensure optimum capacity and performance. The battery was designed specifically to be used with a Motorola charger. Charging in non-Motorola equipment may lead to battery damage and void the battery warranty.

Note: When charging a battery that is attached to the radio, turn the radio off to ensure a full charge.

WARNING

Do not attempt to change or charge the battery in a hazardous atmosphere. See Safety Standards section of this manual.

Charging Temperature

The battery should be at about 77° F (room temperature) whenever possible. Charging a cold battery (below 50° F) may result in leakage of electrolyte and ultimately, in failure of the battery. Charging a hot battery (above 95° F) results in reduced discharge capacity, affecting the performance of the radio. JT 1000 rapid-rate battery chargers contain a temperature-sensing circuit to ensure that the battery is charged within these temperature limits.

Short Circuit

Care should be taken to avoid external short-circuiting of the battery.

WARNING

A sustained high-rate discharge (for example, a paper clip placed accidentally across the battery contacts) may permanently damage the battery, void the battery warranty, and create a burn or fire hazard.

Memory Effect (Reduced Charge Capacity)

Memory effect is a phenomenon which causes a temporary loss in battery capacity or voltage due to repetitive shallow discharging or long-term overcharging. This memory effect has been virtually eliminated from Motorola batteries through the use of new cell technology.



Battery Disposal

For disposal, nickel-cadmium sealed rechargeable batteries should be delivered to an authorized metals-reclamation dealer.

Alkaline batteries and nickel-metal-hydride batteries, although they contain no designated toxic metals, are recommended to be disposed of through an authorized metals-reclamation dealer.



WARNING

Do not dispose of any batteries in a fire as they may explode!

This product is powered by an alkaline battery or a nickel-cadmium rechargeable battery. At the end of its useful life, the battery can be recycled. However, recycling facilities may not be available in all areas. Under various state or local laws, the battery must be recycled or disposed of properly, and cannot be disposed of in landfills or incinerators.

In addition, U.S. Environmental Protection Agency (EPA) regulations classify used nickel-cadmium batteries as hazardous waste, unless certain exemptions apply.

Motorola fully endorses and encourages the recycling of nickel-cadmium batteries. If you are located in the United States, you can ship, postpaid, your used Motorola nickel-cadmium batteries to **INMETCO**, an EPA-approved recycling facility, at the address given on the next page. We recommend used batteries be sent to the nickel-cadmium recycling facility most convenient for you. If you are not located in the United States, you may ship your used Motorola nickel-cadmium batteries to one of the nearest international locations listed on the next page. Should you have any questions, contact the facility first.

Consideration should be given to the methods of collecting, labeling, and shipping used nickel-cadmium batteries. Your federal, state, or local EPA should be consulted for specific requirements and for recycling options in your area.

Motorola, as a responsible corporate citizen, has always been concerned with the protection of the environment. For further information, you may call the Motorola America's Parts Division, Customer Service Department, toll-free at 1-800-422-4210.

Nickel-Cadmium Battery Recycling Facilities**INMETCO, Bin #M1**

P.O. Box 720
245 Portersville Road
Ellwood City, PA 16117
Phone: (412) 758-2800
Fax: (412) 758-9311

HANIL METAL RECYCLE CO., LTD.

24-4, Palryong-dong, Changwon-Shi
Kyongsangnam-Do, Korea
Phone: 082 551 93 1911
Fax: 082 551 96 0050

S.N.A.M.

Rue de la Gareene
Z.I. Chesnes-Tharabie,
B.P. 733-38297 St. Quentin Fallavier
Cedex, France
Phone: 033 74 94 59 85
Fax: 033 74 94 13 18

NIPPON RECYCLE CTR. CORP.

6-13-19, Nishitama, Kita-Ku
Osaka, 530, Japan
Phone: 081 6 311 9071
Fax: 081 6 311 0949

For additional information on Motorola's batteries, write to:

Motorola
Energy Products Division
Customer Care Department
1700 Belle Meade Court
Lawrenceville, Ga 30243-5854

Accessories List

Motorola offers several accessories to increase communications efficiency. Many of the accessories available are listed below, but for a complete list, consult your local Motorola representative.

Antennas:

- NAD6566 * Helical (136-151MHz)
- NAD6567 * Helical (151-162MHz)
- NAD6568 * Helical (162-178MHz)
- NAD6563 * Helical, Wideband (136-178MHz)
- NAE6546 * Helical (403-435MHz)
- NAE6547 * Helical (435-470MHz)
- NAE6548 * Helical (470-520MHz)
- NAE6549 * Whip (403-520MHz)

Batteries:

- NTN7319 Alkaline, 14-cell (Non-rechargeable, sealed)
- NTN7143 High-Capacity Nickel-Cadmium (Non-incentive, groups A, B, C, D)
- NTN7144 Ultra High-Capacity Nickel-Cadmium (Non-incentive, groups A, B, C, D)
- NTN7146 * High-Capacity Nickel-Cadmium FMRC Intrinsically Safe (groups D, F, G)
- NTN7147 * Ultra-High-Capacity Nickel-Cadmium FMRC Intrinsically Safe (groups D, F, G)
- NTN7341 * Ultra-High-Capacity Nickel-Cadmium FMRC Intrinsically Safe (groups C, D, E, F, G)
- NTN7372 * Ultra-High-Capacity Nickel-Cadmium FMRC Intrinsically Safe (groups C, D, E, F, G)

Single-Unit Slow-Charge Battery Chargers, 50/60Hz Desk-Top:

- NTN1174 117Vac, with 117Vac Wall-Mount Transformer
- NTN1175 220Vac, with International 220Vac Wall-Mount Transformer
- NTN1176 240Vac, with International 240Vac Wall-Mount Transformer

Single-Unit Rapid-Charge Battery Chargers, 50/60Hz Desk-Top:

- NTN1171 117Vac with 117Vac Cord and Plug
- NTN1172 International 220Vac with International 220Vac Cord and 2-Prong Plug
- NTN1173 International 240Vac with International 240Vac Cord and 3-Prong Plug

Single-Unit Dual-Rate Battery Chargers, 50/60Hz:

- NTN1168 117Vac with 117Vac Cord and Plug
- NTN1169 International 220Vac with International 220Vac Cord and 2-Prong Plug
- NTN1170 International 240Vac with International 240Vac Cord and 3-Prong Plug

Multi-Unit Battery Chargers, Six-Pocket Dual-Rate 50/60Hz:

- NTN1177 90-240Vac, with 117Vac Cord and Plug
- NTN1178 90-240Vac with International 220Vac Cord and 2-Prong Plug
- NTN1179 90-240Vac with International 240Vac Cord and 3-Prong Plug

Accessories List (cont.)

Remote Speaker/Microphones:

- NMN6191* Noise Cancelling Microphone; Includes Coiled Cord Assembly, 3.5mm Earjack, and Swivel Clip
- NMN6193* Standard Microphone; Includes Coiled Cord Assembly, 3.5mm Earjack, and Swivel Clip
- NMN6228 Public Safety Speaker/Microphone; Includes Antenna (S.M.A.) UHF (VHF capable), Straight Cord Assembly, 3.5mm Earjack, Swivel Clip, and Receive Audio High-/Low-Volume Toggle Switch.

Carry Accessories:

- NLN6042 3" Black Belt
- NLN6349 Shoulder Carry Strap
- NTN7238 Leather Carry Case with Belt Loop and T-Strap for High-Capacity Battery
- NTN7239 Leather Case with Belt Loop and T-Strap for Ultra-High-Capacity Battery
- NTN7241 Leather Carry Case with 2.5" Swivel Belt Loop and T-Strap for High-Capacity Battery
- NTN7242 Leather Case with 2.5" Swivel Belt Loop and T-Strap for Ultra-High-Capacity Battery
- NTN7244 Leather Carry Case with 3" Swivel Belt Loop and T-Strap for High-Capacity Battery
- NTN7245 Leather Case with 3" Swivel Belt Loop and T-Strap for Ultra-High-Capacity Battery
- NTN7247 Fabric Carry Case with Belt Loop for High and Ultra-High-Capacity Battery
- NTN7894 Nylon Carry Case with Belt Loop for Alkaline Battery
- NTN7317 Belt Clip (Fits 2.5" Belt)
- NTN7318 Belt Clip (Fits 3" Belt)
- NTN7484 Swivel "D" Clip for Radio
- NTN7166 Snap Fastener for Remote Speaker/Microphone
- NTN7167 Velcro Patch for Remote Speaker/Microphone
(Requires Shoulder Velcro Patch NLN8410)

* These accessories are approved as being intrinsically safe by Factory Mutual Research Corporation (FMRC). Refer to the radio label for intrinsic safety ratings and required batteries. Only the accessories and antennas noted (by *) may be used on approved radios.



WARNING

Substitution of components may impair the intrinsic safety of the radio.

Transmitting Distance

Several conditions determine the distance that your radio will transmit a clear data/voice communication. The following list describes many conditions and their typical affect on your radio's transmitting distance.

Condition	Description	Effect
radio's power radio's frequency radio's tuning stormy weather at sea city in a building on a tall building's roof	more power lower frequency (VHF compared to UHF) properly tuned radio (on frequency, more power) adverse atmospheric conditions better ground plane (clearer line-of-site) large/tall buildings (interference problems) structural boundaries (interference problems) less interference (clearer line-of-site)	longer distance longer distance longer distance shorter distance longer distance shorter distance shorter distance longer distance

Table 2. 3-Position Toggle Switch Programmable Feature List

Feature	Position A	Position B	Position C
PL/Carrier Squelch (default feature)	PL On	Carrier Squelch	Carrier Squelch
Scan/Talkaround	Direct/Scan Off	Repeat/Scan Off	Repeat/Scan On
Scan/Quik-Call II	Quik-Call II	Carrier Squelch Scan Off	Scan On
Scan/Squelch	PL On Scan Off	Carrier Squelch Scan Off	Scan On
Scan/PAC•RT	Transmit PL Scan Off	Carrier Squelch Scan Off	Scan On
Scan/Scan Programming 1	Scan Program On	Scan Off	Scan On
Scan/Scan Programming 2	Scan On	Scan Off	Scan Program On
Talkaround	Direct	Repeat	Repeat
Quik-Call II	Quik-Call II	Carrier Squelch	Carrier Squelch
PAC•RT	Transmit PL	Carrier Squelch	Carrier Squelch

For more detailed information on programmable parameters, contact your Motorola sales representative for radio service software.

Note: The 3-position toggle switch can be programmed to be non-functional using radio service software.

Radio Care

Cleaning

Clean external surfaces of the radio with a mild detergent and a stiff, non-metallic, short-bristled brush. A suitable detergent solution may be mixed by adding one teaspoon of mild dishwashing detergent to one gallon of water (0.5% solution). Apply the detergent solution sparingly with the brush, being careful not to allow excess detergent to remain entrapped near connectors and controls or in cracks and crevices. Do not submerge the radio in the detergent solution. Dry the radio thoroughly with a soft, lint-free cloth.

Clean all battery contacts with a lint-free cloth to remove dirt, grease, or other foreign material that may prevent good electrical connections.

Handling

- Avoid physical abuse; do not pound, drop, or throw the radio unnecessarily. Do not carry the radio by the antenna.
- Avoid subjecting the radio to an excess of liquids. Never allow the radio to become submersed.
- Avoid subjecting the radio to corrosives, solvents, or spirits.




Clean the radio with the recommended solution only.
Cleaning the radio with solvents or spirits may be harmful
and permanently damage the radio housing.

Do not disassemble the radio in any way. Keep the connector cover in place until ready to use the accessory connector. Replace the cover immediately after the accessory has been disconnected.

Safety Standards

The Federal Communications Commission (FCC), has adopted a safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated equipment. Motorola subscribes to the same safety standard for the use of its products. Proper operation of this radio will result in user exposure substantially below FCC recommended limits:

- *Do not* hold the radio with the antenna very close to, or touching, exposed parts of the body, especially the face, ears, or eyes, while transmitting. Hold the radio in a vertical position with the microphone two to three inches away from the lips.
- *Do not* hold the transmit switch (PTT) on when not actually desiring to transmit.
- *Do not* allow children to play with any radio equipment containing a transmitter.
- *Do not* operate this equipment near electrical blasting caps or in an explosive atmosphere. Under certain conditions, radios can interfere with blasting operations. When you are in the vicinity of construction work, look for, and observe, signs cautioning against radio transmission. If radio transmission is prohibited, you must not transmit until out of the area. Furthermore, *you must turn off* your radio to prevent any accidental transmission.
- *Do not* replace or charge batteries in a hazardous atmosphere. Contact sparking may occur while installing or removing batteries and cause an explosion.
- Turn radio off when removing or installing a battery.

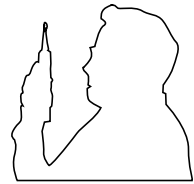

Safety Standards (cont.)

Anyone intending to use a radio in a hazardous area is advised to become familiar with the subject of intrinsic safety and with Section 70 of the National Fire Code, which is commonly referred to as Article 500 of the National Electric Code. Use of anything but factory supplied components may affect the approval and safety of the radio. Likewise, it is advised that servicing should be performed only by qualified personnel who adhere to the following Factory Mutual Research Corporation (FMRC) required warning:

 **WARNING**

Modification of FMRC-Approved intrinsically safe radios will negate Factory Mutual Research Corporation Approval.

Certain JT 1000 radios and batteries have been declared intrinsically safe by FMRC of Norwood, Massachusetts, for use in hazardous atmospheres. FM Approved radios are identified by attached certification labels and by matching green dots found on the bottom of radios and batteries. The intrinsically safe rating by Factory Mutual Research Corporation states that electrical equipment is incapable of releasing sufficient electrical or thermal energy, under normal or abnormal operating conditions, to cause ignition of a specific hazardous atmosphere. This means the JT 1000 radio has been thoroughly tested by Factory Mutual Research Corporation and carries its certification for operation in the hazardous atmospheres designated on the radio label. **Radios must ship from the Motorola factory with the hazardous atmosphere capability and cannot be modified in the field.** Failure to use the radio with the approved battery will negate the approval. JT 1000 radios that are approved by Factory Mutual Research Corporation can be used in those applications requiring reliable two way hand-held radios in the listed specific hazardous atmospheres. Motorola approved equipment and accessories, along with competitive equipment approvals, are listed in the yearly approval guide published by Factory Mutual Research Corporation. This guide can be ordered from the following address:

Training Resource Center, Publications-Order Processing Dept.
Factory Mutual Engineering and Research,
1151 Boston-Providence Turnpike
P.O. Box 9102, Norwood, MA 02062
Telephone: (617) 762-4300, extension 2152

Restrictions

Because this radio contains a transmitter, federal law prohibits unauthorized, non-licensed personnel from adjusting or maintaining it. If any operational difficulties should arise while using this product, report them to authorized service personnel as soon as possible.

 **WARNING**

Do not attempt any unauthorized modification to the radio or accessories.

Service

Proper repair and maintenance procedures will assure efficient operation and long life for this product. A Motorola maintenance agreement will provide expert service to keep this and all other communication equipment in perfect operating condition. A nationwide service organization is provided by Motorola to support maintenance services. Through its maintenance and installation program, Motorola makes available the finest service to those desiring reliable, continuous communications on a contract basis.

Motorola's Customer Service Division is the largest service organization specializing in mobile communications. It includes over 900 authorized or company-owned stations. In addition, our products are serviced throughout the world by a wide network of company or authorized independent distributor service organizations. For a contract service agreement, please contact your nearest Motorola service representative, authorized Motorola dealer, or Motorola sales representative. If you suspect a radio problem, check the following items before requesting service.

1. Radio Checks

- Be sure the radio is turned on and the channel selector is in the proper position.
- Replace or recharge the battery. The first time a new battery is used, it should charge a minimum of 16 hours.
- Antenna must be screwed on properly; the base flush against the radio top.
- Be sure that the 3-position toggle switch is in the proper position.
- Could your radio problem be caused by accessories improperly connected?

2. Operating Instructions

Review your operation instructions to ensure proper radio use.

3. Problem(s) Not Solved

After following steps 1 and 2, if your radio still exhibits a problem, review your service agreement and call the applicable Motorola service representative.

If you do not have a service agreement on your radio, contact your nearest authorized Motorola service shop for guidance toward a prompt and expedient evaluation and/or repair, or call 1-800-247-2346, extension 8615.

Express Service Plus (ESP), U.S.A. only

Express Service Plus (ESP) is an optional extended service coverage plan. ESP provides for the repair of this product, at the Motorola Factory Service Center listed in step 3, below, for a period of three years (one year warranty plus two years of extended service) from the date of shipment from the factory, or the date of delivery if purchased from an authorized Motorola two-way radio dealer. If ESP has been purchased, the serial number of this product has been registered for coverage under Express Service Plus at the depot listed in step 3, below.

To obtain service under Extended Service Plus:

1. Check to make sure the battery or battery charger of the unit is not defective. (Batteries and chargers are excluded from this service plan).

2. Include the following information:

Your name

Company name

Address

Telephone number

A brief description of the nature of the problem or failure (be specific)

3. Pack and ship the unit (prepaid) to:

Motorola Factory Service Center

1318 N. Plum Grove Road

Schaumburg, IL 60173

Express Service Plus is subject to Motorola standard terms and conditions. ESP does not include repairs which will be necessary due to damage caused by accidents, physical abuse or misuse of the product(s), acts of God, and fires. Batteries, battery chargers, and external accessories are excluded from this plan. Service under ESP is available only at the service center listed herein.

If you are unsure as to whether your radio is covered under Express Service Plus, call the depot at (708) 576-5760.

Product Service Information

If any questions arise, please call Florida Product Services.
1-800-523-4007 or 1-305-475-5269
TELEX: 441464 MOTC UI
FAX: 1-305-475-5984

Parts Information

7:00 A.M. - 7:00 P.M. (CST) Monday - Friday (Chicago, U.S.A.)
Domestic (U.S.A.) 1-800-422-4210
1-800-826-1913 (Federal Government)
TELEX: 280127
FAX: 1-708-538-8198
FAX: 1-301-925-2690 (Federal Government)

Domestic (U.S.A.) after hours or weekends
1-800-325-4036 or 1-708-576-5111
International 1-708-576-9271
TELEX: 403305 MOTO PART SHBU UD
FAX: 1-708-576-3023
TWX: 910-693-0869

No International weekend service is available.

Computer Software Copyrights

The Motorola equipment described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola equipment described in this manual may not be copied or reproduced in any manner without the express permission of Motorola. Furthermore, the purchase of Motorola equipment shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal nonexclusive, royalty free license to use that arises by operation of law in the sales of a product.

Patent Disclosure

This product is covered by one or more of the following United States patents:

4,512,035	4,551,856	4,653,117	4,816,774
4,829,594	4,837,853	4,864,252	4,885,550
4,914,321	4,918,403	4,959,617	4,975,650
4,994,768	5,006,730	5,021,754	5,079,526

OPERATING INSTRUCTIONS QUESTIONNAIRE

We believe that reports from users provide valuable information for producing quality operating instructions. Your comments and answers to the following questions will aid us in preparing manuals that contain accurate and complete information of maximum benefit to you.

In reference to Manual No. **68P81078C45-A**


JT 1000™ Portable Radios

1. Please check all the appropriate boxes:

		Clear	Confusing	Too Detailed	Too Brief	Adequate	Complete	Incomplete	Incorrect	Not Covered in This Manual
Controls and Features	text									
	illustrations									
Operating Procedures	text									
	illustrations									
Alert Tone Explanations										
Battery Information										
Options										
Model Information										
Accessories										
General Care Information										
Other (specify)										

2. For illustrating procedures, do you prefer:
 photographs line drawings no preference
3. How would you rate the overall organization of this manual?
 excellent very good good fair poor
- 4a. If this manual has a "quick reference card," do you use it?
 yes no
- 4b. If yes, how useful is it to you?
 extremely very somewhat not very
5. How do you rate this manual overall?
 excellent very good good fair poor
6. Comments/Recommendations for improving operating instructions.

From: _____

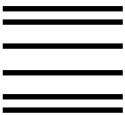

PLACE
POSTAGE
HERE



MOTOROLA
Radio Products Group

Attn: Bindery
8000 W. SUNRISE BOULEVARD
FT. LAUDERDALE, FLORIDA 33322



JT 1000™ Portable Radios Quick Reference Card


Basic Operation


Install the antenna, battery, and belt clip.


Turn the radio on (or off) using the On/Off Volume control.



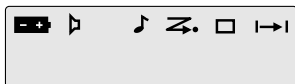

LCD and Status Annunciators





 Flashing = low battery.


 Receive function, on = carrier squelch; off = coded squelch.

 Flashing = in program mode; not flashing = keypad is disabled.

 Flashes when a Quik-Call II page is received.

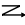 On = scanning; off = not scanning.

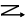
 Flashing dot = priority scan.

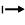 On = direct communication, radio to radio; off = communication through a repeater.

Selective-Channel Display


After the radio is turned on and following a power-up sequence, a preprogrammed selective-channel display is shown one of two ways:

dispatch display

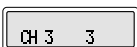

or


numeric display

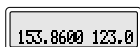

To monitor and adjust volume, press side button 3 (SB3) and adjust the On/Off Volume control to a comfortable listening level.

To receive, turn the radio on, select the desired channel, and monitor for activity. Selecting a blank channel causes an error tone.

To transmit, turn the radio on, select the desired channel, and monitor for activity. When clear, press the PTT (LED lights red) and speak into microphone area. Release PTT to receive.

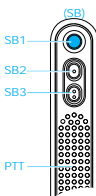

Channel Scan™

Three types of channel scan are offered:

- Auto Scan (AS)
- Preprogrammed Scan (PS)
- Operator Selectable Scan (OSS)

To turn scan on, turn the radio on and:

- AS- rotate the channel selector to the preprogrammed scan channel.
- PS- and OSS- place the proper switch in the scan position.

In AS and PS radios, the priority channel is preprogrammed and is not user programmable. In OSS radios, the priority channel is user programmable and is the channel selected by the position of the channel selector knob.



To temporarily delete a nuisance channel from the scan list, press SB1 when locked on to that channel. The channel is put back into the scan list upon turning scan off and re-entering into scan.

For OSS radio programming information, refer to your operating instructions manual.

.....

Programming Features

The radio display and keypad provide fast access to three programming features:

- Multi-selectable PL/DPL/CSQ,
- Squelch Level Adjust, and
- Power Level Selection

For programming information on these three features, refer to your operating instructions manual.

.....

Quik-Call II™ Decode Signalling

Quik-Call II is a per-radio feature enabled on a per-channel basis and offered as individual call, group call, and dual call.

To activate Quik-Call, turn the radio on and place the ABC switch in the A position (if so programmed) or rotate the channel selector to the channel programmed for Quik-Call II. The display will show QC. When a page is received, the green LED flashes and an alert tone is emitted. The radio resets to the signalling muting state automatically (if programmed for auto reset) or when the monitor button is pressed.

.....

Touch-Code™ DTMF

A DTMF programmed radio can transmit and receive phone calls through the public telephone system.

- Calling with Auto Access: Press the orange button, listen for the dial tone, and dial using the keypad. Press the orange button to hang up.
- Calling with Manual Dial: Press the orange button to enter the phone mode. Enter any required access code using the keypad. Enter the deaccess code to hang up.

.....

Repeater Talkaround

Transmit DIRECT (portable-to-portable), bypassing the repeater, or transmit in the REPEAT mode, through a repeater for increased range. This feature can be programmed to the ABC switch (DIRECT on one position and REPEAT on another position), or to selected channels.

.....

Smart PTT

With this feature enabled, your radio:

- will not transmit on a busy channel, or
- will not transmit on a busy channel with PL/DPL squelch code other than your own.

Pressing the PTT on a busy channel causes a continuous alert tone until the PTT is released, (no transmission occurs).