

PROFESSIONAL DIGITAL TWO-WAY RADIO



MOTOTRBO™ SL SERIES SL7550e PORTABLE BASIC SERVICE MANUAL



Foreword

This manual covers all models of the SL7500e series Portable Radios, unless otherwise specified. It includes all the information necessary to maintain peak product performance and maximum working time, using levels 1 and 2 maintenance procedures. This level of service goes down to the board replacement level and is typical of some local service centers, self-maintained customers, and distributors.

Product Safety and RF Exposure Compliance

<p>ATTENTION! Before using this radio, read the guide enclosed with your radio which contains important operating instructions for safe usage and RF energy awareness and control for compliance with applicable standards and regulations.</p>
--

For a list of Motorola-approved antennas, batteries, and other accessories, visit the following web site:
<http://www.motorolasolutions.com/slseries>

Computer Software Copyrights

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs, including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

Document Copyrights

No duplication or distribution of this document or any portion thereof shall take place without the express written permission of Motorola. No part of this manual may be reproduced, distributed, or transmitted in any form or by any means, electronic or mechanical, for any purpose without the express written permission of Motorola.

Disclaimer

The information in this document is carefully examined, and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. Furthermore, Motorola reserves the right to make changes to any products herein to improve readability, function, or design. Motorola does not assume any liability arising out of the applications or use of any product or circuit described herein; nor does it cover any license under its patent rights nor the rights of others.

Trademarks

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.

© 2016 Motorola Solutions, Inc.

All rights reserved.

Notes

Document History

The following major changes have been implemented in this manual since the previous edition:

Edition	Description	Date
MN002193A01-AA	Initial Edition	Jan. 2016

Notes

Table of Contents

.....	ii
Foreword	iii
Product Safety and RF Exposure Compliance	iii
Computer Software Copyrights	iii
Document Copyrights	iii
Disclaimer	iii
Trademarks	iii
Document History	v
Commercial Warranty	xvii
Limited Warranty	xvii
MOTOROLA COMMUNICATION PRODUCTS	xvii
I. What This Warranty Covers And For How Long	xvii
II. General Provisions	xviii
III. State Law Rights	xviii
IV. How To Get Warranty Service	xviii
V. What This Warranty Does Not Cover	xviii
VI. Patent And Software Provisions	xix
VII. Governing Law	xix
Battery and Charger Warranty	xx
Workmanship Warranty	xx
Capacity Warranty	xx
Chapter 1 Introduction	1-1
1.1 Notations Used in This Manual	1-1
1.2 Radio Description	1-1
1.2.1 Radio Overview	1-2
1.3 Portable Radio Model Numbering Scheme	1-3
1.4 Model Charts	1-4
1.4.1 UHF1 3W GOB Enabled (403 – 470 MHz) Model Chart	1-4
1.4.2 UHF2 3W GOB Enabled (450 – 512 MHz) Model Chart	1-5
1.4.3 900 MHz 2W GOB Enabled (896 – 941 MHz) Model Chart	1-6
1.4.4 800 MHz 2W GOB Enabled (806 – 870 MHz) Model Chart	1-6
1.5 Specifications	1-7
Chapter 2 Test Equipment and Service Aids	2-1

2.1	Recommended Test Equipment	2-1
2.2	Service Aids	2-2
Chapter 3	Transceiver Performance Testing	3-1
3.1	General	3-1
3.2	Setup.....	3-1
3.3	Test Mode	3-4
3.3.1	Radio Test Mode	3-4
3.3.2	RF Test Mode	3-5
3.3.3	Flicker Test Mode	3-7
3.3.4	Display Test Mode	3-7
3.3.5	Photosensor Test Mode.....	3-8
3.3.6	Accelerometer Test Mode.....	3-8
3.3.7	Vibrator Test Mode	3-9
3.3.8	LED Test Mode.....	3-9
3.3.9	Backlight Test Mode	3-9
3.3.10	Speaker Tone Test Mode	3-9
3.3.11	Earpiece Tone Test Mode	3-9
3.3.12	Audio Loopback Earpiece Test.....	3-9
3.3.13	Battery Check Test Mode	3-9
3.3.14	Button/Knob/PTT Test Mode	3-10
Chapter 4	Radio Programming and Tuning	4-1
4.1	Introduction	4-1
4.2	Customer Programming Software Setup	4-1
4.3	AirTracer Application Tool.....	4-2
4.4	Radio Tuning Setup	4-2
Chapter 5	Disassembly/Re-assembly Procedures	5-1
5.1	Introduction	5-1
5.2	Preventive Maintenance	5-1
5.2.1	Inspection	5-2
5.2.2	Cleaning Procedures	5-2
5.3	Safe Handling of CMOS and LDMOS Devices	5-3
5.4	Repair Procedures and Techniques – General.....	5-4
5.5	Disassembling and Reassembling the Radio – General.....	5-5
5.6	Radio Disassembly – Detailed	5-6
5.6.1	Holster Removal	5-6
5.6.2	External Antenna Disassembly.....	5-7
5.6.3	Back Housing Disassembly	5-10
5.6.4	Internal Antenna Disassembly	5-12
5.6.5	PCB Disassembly	5-13
5.6.6	Audio Jack Flex and Keypad Flex Disassembly	5-14
5.6.7	LCD Display Disassembly	5-16
5.7	Radio Re-assembly – Detailed	5-20
5.7.1	LCD Display Re-assembly.....	5-20
5.7.2	Audio Jack Flex Re-assembly	5-23
5.7.3	Interface Board Re-assembly	5-24

5.7.4	Internal Antenna Re-assembly	5-26
5.7.5	Back Housing Re-assembly	5-26
5.7.6	Holster Re-attachment.....	5-32
5.8	Radio Exploded Mechanical Views and Parts Lists	5-33
5.8.1	GOB Model Exploded View and Parts List	5-33
5.9	Torque Chart.....	5-35
Chapter 6	Basic Troubleshooting	6-1
6.1	Introduction	6-1
6.2	Power-Up Error Codes	6-1
6.3	Operational Error Codes	6-3
Chapter 7	Accessories	7-1
7.1	Introduction	7-1
7.1.1	Antennas	7-1
7.1.2	Audio	7-2
7.1.3	Batteries	7-2
7.1.4	Bluetooth	7-2
7.1.5	Cable	7-3
7.1.6	Carry Devices	7-3
7.1.7	Chargers.....	7-4
7.1.8	Power Supplies.....	7-4
7.1.9	Miscellaneous Accessories	7-4
Appendix A	Replacement Parts Ordering.....	A-1
A.1	Basic Ordering Information	A-1
A.2	Motorola Online	A-1
Appendix B	Motorola Service Centers.....	B-1
B.1	Servicing Information	B-1
B.2	Motorola Service Center	B-1
B.3	Motorola Federal Technical Center	B-1
B.4	Motorola Canadian Technical Logistics Center	B-1
Glossary.....	Glossary-1	

Notes

List of Figures

Figure 1-1.	Display Model	1-2
Figure 1-2.	Portable Radio Model Numbering Scheme	1-3
Figure 3-1.	DMR Radio Transmitter and Receiver Testing Setup	3-2
Figure 3-2.	Name plate label	3-2
Figure 3-3.	RF plug	3-3
Figure 3-4.	Connect RF Antenna adaptor to radio RF input/output port.....	3-3
Figure 3-5.	Battery Check Test Mode Display	3-9
Figure 4-1.	CPS Programming Setup.....	4-1
Figure 4-2.	Radio Transmitter and Receiver Tuning Setup	4-2
Figure 5-1.	Holster removal.....	5-6
Figure 5-2.	Antenna plug removal with fingers.....	5-8
Figure 5-3.	Escutcheon cover removal with tweezer.....	5-8
Figure 5-4.	Antenna screw removal	5-9
Figure 5-5.	Antenna removal.....	5-9
Figure 5-6.	Unlatching battery door.....	5-10
Figure 5-7.	Battery door removal.....	5-10
Figure 5-8.	Battery removal.....	5-11
Figure 5-9.	Corner screws and middle screws removal	5-11
Figure 5-10.	Back housing removal.....	5-12
Figure 5-11.	Internal antenna removal	5-12
Figure 5-12.	Coax cable connector disassembly.....	5-13
Figure 5-13.	Flex cable connector disassembly	5-13
Figure 5-14.	Interface board removal	5-14
Figure 5-15.	Keypad flex disassembly.....	5-14
Figure 5-16.	Audio jack flex disassembly	5-15
Figure 5-17.	Audio jack flex removal	5-15
Figure 5-18.	LCD display disassembly	5-16
Figure 5-19.	Lifting of PCB board	5-16
Figure 5-20.	PCB board removal.....	5-17
Figure 5-21.	Speaker seal removal	5-17
Figure 5-22.	Display retainer lock removal	5-18
Figure 5-23.	Display retainer disassembly	5-18
Figure 5-24.	LCD display removal	5-19
Figure 5-25.	LCD display re-assembly	5-20
Figure 5-26.	Flex connector tab re-assembly	5-20
Figure 5-27.	PCB board re-assembly	5-21
Figure 5-28.	Display flex flattening	5-21
Figure 5-29.	Display retainer re-assembly.....	5-22
Figure 5-30.	Securing the display retainer.....	5-22
Figure 5-31.	Speaker seal re-assembly.....	5-23
Figure 5-32.	Audio jack flex connector re-assembly.....	5-23
Figure 5-33.	Audio jack flex connector and keypad connector re-assembly	5-24
Figure 5-34.	Interface board re-assembly	5-24
Figure 5-35.	Board-to-board flex cable re-assembly	5-25
Figure 5-36.	Coax cable connector re-assembly.....	5-25
Figure 5-37.	Internal antenna re-assembly	5-26
Figure 5-38.	Back housing re-assembly	5-26
Figure 5-39.	Screws re-assembly.....	5-27
Figure 5-40.	Screws re-assembly completed	5-27
Figure 5-41.	Battery re-assembly	5-28

Figure 5-42. Battery door re-assembly	5-28
Figure 5-43. Latching battery door	5-29
Figure 5-44. Antenna re-assembly	5-29
Figure 5-45. Antenna screw re-assembly	5-30
Figure 5-46. Antenna plug re-assembly	5-30
Figure 5-47. New escutcheon cover re-assembly	5-31
Figure 5-48. Holster re-attachment.....	5-32
Figure 5-49. GOB Model Exploded View.....	5-33

List of Tables

Table 1-1.	Radio Frequency Ranges and Power Levels.....	1-1
Table 2-1.	Recommended Test Equipment.....	2-1
Table 2-2.	Service Aids.....	2-2
Table 3-1.	Front Panel Access Test Mode Displays.....	3-4
Table 3-2.	Test Frequencies for UHF.....	3-5
Table 3-3.	Test Frequencies for 900MHz.....	3-5
Table 3-4.	Test Frequencies for 800MHz.....	3-6
Table 3-5.	Transmitter Performance Checks.....	3-7
Table 3-6.	Receiver Performance Checks.....	3-7
Table 4-1.	Software Installation Kits Radio Tuning Setup.....	4-1
Table 5-1.	Lead Free Solder Wire Part Number List.....	5-4
Table 5-2.	Lead Free Solder Paste Part Number List.....	5-4
Table 5-3.	GOB Model Exploded View Parts List.....	5-35
Table 5-4.	Torque Specifications for Screws.....	5-35
Table 6-1.	Power-Up Error Codes.....	6-1
Table 6-2.	Operational Error Codes.....	6-3

Notes

Related Publications

MOTOTRBO SL7500e Portable User Guide	68009554001
MOTOTRBO SL7500e Portable Quick Reference Guide/ Product Safety and RF Exposure	68009553001
MOTOTRBO SL Series Digital Portable Radios Quick Reference Guide.....	MN002331A01

Notes

Commercial Warranty

Limited Warranty

MOTOROLA COMMUNICATION PRODUCTS

I. What This Warranty Covers And For How Long

MOTOROLA SOLUTIONS INC. ("MOTOROLA") warrants the MOTOROLA manufactured Communication Products listed below ("Product") against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below: The portables additionally ship with a standard 1-year Repair Service Advantage (RSA)

Series Digital Portable Radios	Two (2) Years
Product Accessories (Excluding Batteries and Chargers)	One (1) Year

(for U.S. customers) or 1-year Extended Warranty (for Canada customers). However, at the time of order, you may choose to omit these warranties. For more RSA or Extended Warranty information, please refer to the portable price pages or Motorola Online (<https://businessonline.motorola.com>) > Resource Center > Services > Service Product Offerings > Repair Service Advantage or Extended Warranty.

Motorola, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA. Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

II. General Provisions

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product. Repair, replacement or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

III. State Law Rights

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY.

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

IV. How To Get Warranty Service

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by Motorola through one of its authorized warranty service locations. If you first contact the company which sold you the Product, it can facilitate your obtaining warranty service. call Motorola at 1-800-927-2744 US/Canada.

V. What This Warranty Does Not Cover

- A. Defects or damage resulting from use of the Product in other than its normal and customary manner.
- B. Defects or damage from misuse, accident, water, or neglect.
- C. Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- D. Breakage or damage to antennas unless caused directly by defects in material workmanship.
- E. A Product subjected to unauthorized Product modifications, disassemblies or repairs (including, without limitation, the addition to the Product of non-Motorola supplied equipment) which adversely affect performance of the Product or interfere with Motorola's normal warranty inspection and testing of the Product to verify any warranty claim.
- F. Product which has had the serial number removed or made illegible.
- G. Rechargeable batteries if:
 - any of the seals on the battery enclosure or cells are broken or show evidence of tampering.
 - the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- H. Freight costs to the repair depot.

- I. A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA's published specifications or the FCC type acceptance labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.
- J. Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.
- K. Normal and customary wear and tear.

VI. Patent And Software Provisions

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- A. that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- B. that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- C. should the Product or parts become, or in MOTOROLA's opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes noninfringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product. The foregoing states the entire liability of MOTOROLA with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software such as the exclusive rights to reproduce in copies and distribute copies of such Motorola software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise of rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

VII. Governing Law

This Warranty is governed by the laws of the State of Illinois, USA.

Battery and Charger Warranty

Workmanship Warranty

The workmanship warranty guarantees against defects in workmanship under normal use and service.

Lithium-Ion (Li-Ion) Batteries (BT70, BT90 and BT100x)	One (1) Year
Chargers	One (1) Year

Capacity Warranty

The capacity warranty guarantees 80% of the rated capacity for the warranty duration.



Lithium-Ion (Li-Ion) Batteries (BT70, BT90 and BT100x)	12 Months
--	-----------

Chapter 1 Introduction

1.1 Notations Used in This Manual

Throughout the text in this publication, you will notice the use of note and caution notations. These notations are used to emphasize that safety hazards exist, and due care must be taken and observed.

NOTE An operational procedure, practice, or condition that is essential to emphasize.

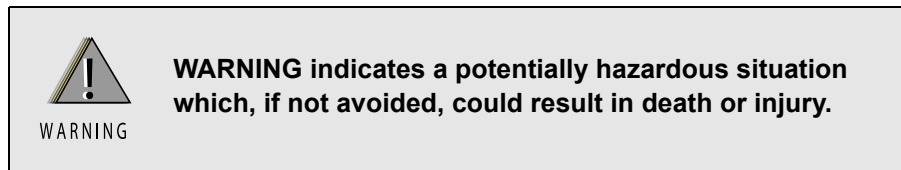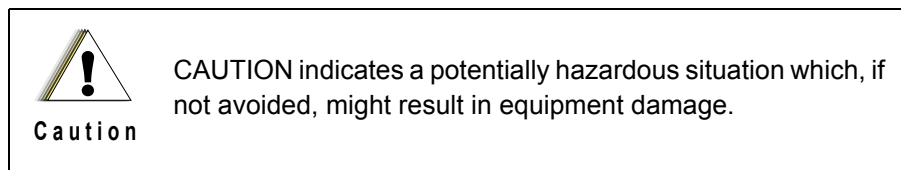

1.2 Radio Description

The SL7500e series portable radios are available in the following frequency ranges and power levels.

Table 1-1. Radio Frequency Ranges and Power Levels

Frequency Band	Bandwidth	Power Level
UHF1	403 – 470 MHz	1 Watt (Low Power) 2 Watt (BT70) 3 Watt (BT90 and BT100x)
UHF2	450 – 512 MHz	1 Watt (Low Power) 2 Watt (BT70) 3 Watt (BT90 and BT100x)
800 MHz	806 – 825MHz (Tx only) 851 – 870 MHz (Tx and Rx)	1 Watt (Low Power) 2 Watt (High Power)
900 MHz	896 – 902MHz (Tx only) 935 – 941 MHz (Tx and Rx)	1 Watt (Low Power) 2 Watt (High Power)

These digital radios are among the most sophisticated two-way radios available. They have a robust design for radio users who need high performance, quality, and reliability in their daily communications. This architecture provides the capability of supporting a multitude of legacy and advanced features resulting in a more cost-effective two-way radio communications solution.

1.2.1 Radio Overview

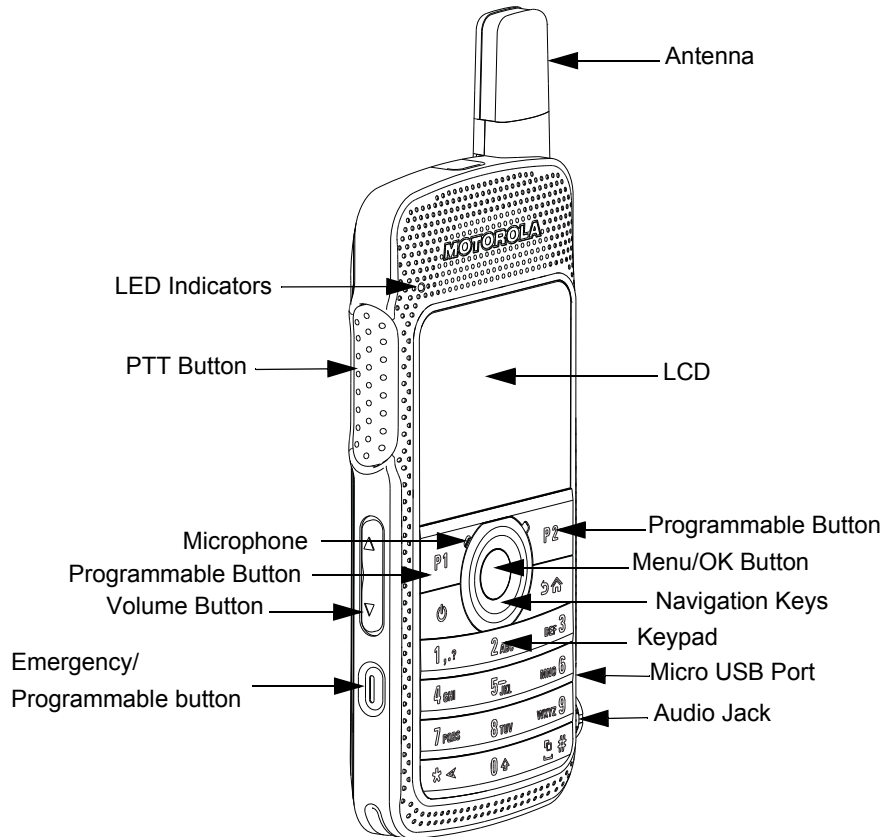


Figure 1-1. Display Model

- LED INDICATORS – Red, green and orange light-emitting diodes indicate operating status.
- LCD (Liquid Crystal Display) – 320x240 Liquid Crystal Display provides visual information about many radio features.
- NAVIGATION KEYS and MENU/OK– To provide menu navigation and to select the interface.
- VOLUME BUTTON – To adjust speaker volume.
- KEYPAD – Twelve keys that allow the user to input characters for various text based operations.
- FRONT and SIDE PROGRAMMABLE BUTTONS – These three buttons are field programmable using the CPS.
- PUSH-TO-TALK (PTT) BUTTON– Press to execute voice operations (e.g. Group call and Private Call).
- ANTENNA – Provides the needed RF radiation when transmitting or receiving.
- MICROPHONE – Allows voice to be sent when PTT or voice operations are activated.
- AUDIO JACK – Interface point for audio accessories to be used with the radio.
- MICRO USB PORT – Programs the radio through the computer and charges the radio through a wall charger.

NOTE Charging the radio through the computer is not supported.

- EMERGENCY/ PROGRAMMABLE BUTTON – Turns on and off the programmable Emergency Operations.
- SPEAKER – Outputs all tones and audio generated by the radio (e.g. features such as keypad tones and voice audio).

1.3 Portable Radio Model Numbering Scheme

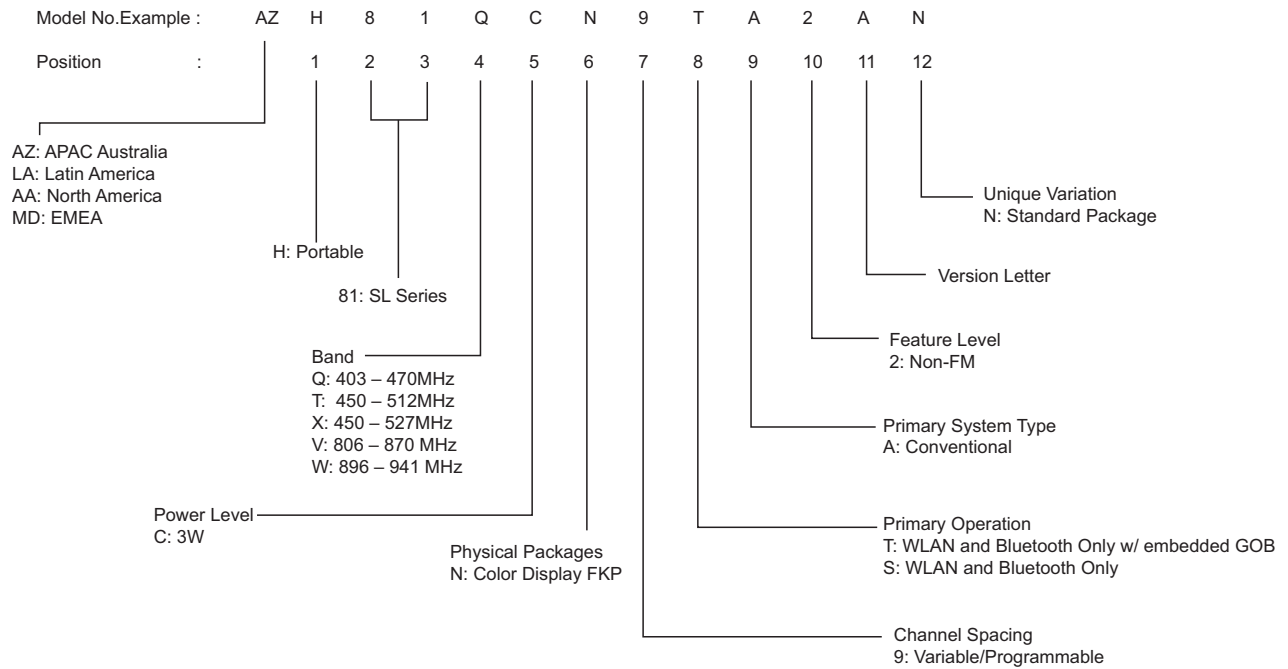


Figure 1-2. Portable Radio Model Numbering Scheme

1.4 Model Charts

1.4.1 UHF1 3W GOB Enabled (403 – 470 MHz) Model Chart

SL7550e, UHF1, 403 – 470 MHz, 3W, GOB Enabled	
Model	Description
AAH81QCN9TA2AN	MOTOTRBO SL7550e, 403 – 470 MHz, 3 W, Full Keypad Alphanumeric Display Portable, WIFI, GOB Enabled
Item	Description
X PMUE3877_	MOTOTRBO™ Display Portable (GOB Enabled)
X PMAE4078_	Antenna Kit - Band 1 (403 – 425 MHz)
X PMAE4076_	Antenna Kit - Band 2 (420 – 445 MHz)
X PMAE4077_	Antenna Kit - Band 3 (438 – 470 MHz)
X PMHN4332_	Front Housing Assembly with English Keypad
X PMHN4330_	Back Housing Assembly
X PMLE5083_S	Interface Board Assembly Service Kit
X PMLE5082_S	Main Board Assembly Service Kit
X 68009553001	MOTOTRBO SL Series SL7550e Digital Portable Radios Quick Reference Guide
X MN002331A01	MOTOTRBO SL Series Digital Portable Radios Quick Reference Guide
X 68009554001	MOTOTRBO SL7550e Portables User Guide
X = Item Included _ = The latest version kit. When ordering a kit, refer to your specific kit for the suffix number.	

1.4.2 UHF2 3W GOB Enabled (450 – 512 MHz) Model Chart

SL7550e, UHF2, 450 – 512 MHz, 3W, GOB Enabled	
Model	Description
AAH81TCN9TA2AN	MOTOTRBO SL7550e, 450 – 512 MHz, 3 W, Full Keypad Alphanumeric Display Portable, WIFI, GOB Enabled
Item	Description
X PMUE4402_	MOTOTRBO™ Display Portable (GOB Enabled)
X PMAE4091_	Antenna Kit - Band 4 (450 – 490 MHz)
X PMAE4092_	Antenna Kit - Band 5 (480 – 512 MHz)
X PMHN4332_	Front Housing Assembly with English Keypad
X PMHN4330_	Back Housing Assembly
X PMLE5102_S	Interface Board Assembly Service Kit
X PMLE5101_S	Main Board Assembly Service Kit
X 68009553001	MOTOTRBO SL Series SL7550e Digital Portable Radios Quick Reference Guide
X MN002331A01	MOTOTRBO SL Series Digital Portable Radios Quick Reference Guide
X 68009554001	MOTOTRBO SL7550e Portables User Guide
X = Item Included	
_ = The latest version kit. When ordering a kit, refer to your specific kit for the suffix number.	

1.4.3 900 MHz 2W GOB Enabled (896 – 941 MHz) Model Chart

SL7590e, 900 MHz, 896 – 941 MHz, 2W, GOB Enabled																					
Model	Description																				
AAH81WCN9TB2AN	MOTOTRBO SL7590e, 896 – 941 MHz, 2 W, Full Keypad Alphanumeric Display Portable, WIFI, GOB Enabled																				
	<table border="1"> <thead> <tr> <th>Item</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>X PMUF1629_</td> <td>MOTOTRBO™ Display Portable (GOB Enabled)</td> </tr> <tr> <td>X PMAF4018_</td> <td>Antenna 900 MHz (896 – 941 MHz)</td> </tr> <tr> <td>X PMLF4171_S</td> <td>Main Board Service Kit, 900 MHz</td> </tr> <tr> <td>X PMLF4170_S</td> <td>Interface Board Service Kit, 800/900 MHz</td> </tr> <tr> <td>X PMHN4332_</td> <td>Front Housing Assembly with English Keypad</td> </tr> <tr> <td>X PMHN4330_</td> <td>Back Housing Assembly</td> </tr> <tr> <td>X 68009553001</td> <td>MOTOTRBO SL Series SL7550e Digital Portable Radios Quick Reference Guide</td> </tr> <tr> <td>X MN002331A01</td> <td>MOTOTRBO SL Series Digital Portable Radios Quick Reference Guide</td> </tr> <tr> <td>X 68009554001</td> <td>MOTOTRBO SL7550e Portables User Guide</td> </tr> </tbody> </table>	Item	Description	X PMUF1629_	MOTOTRBO™ Display Portable (GOB Enabled)	X PMAF4018_	Antenna 900 MHz (896 – 941 MHz)	X PMLF4171_S	Main Board Service Kit, 900 MHz	X PMLF4170_S	Interface Board Service Kit, 800/900 MHz	X PMHN4332_	Front Housing Assembly with English Keypad	X PMHN4330_	Back Housing Assembly	X 68009553001	MOTOTRBO SL Series SL7550e Digital Portable Radios Quick Reference Guide	X MN002331A01	MOTOTRBO SL Series Digital Portable Radios Quick Reference Guide	X 68009554001	MOTOTRBO SL7550e Portables User Guide
Item	Description																				
X PMUF1629_	MOTOTRBO™ Display Portable (GOB Enabled)																				
X PMAF4018_	Antenna 900 MHz (896 – 941 MHz)																				
X PMLF4171_S	Main Board Service Kit, 900 MHz																				
X PMLF4170_S	Interface Board Service Kit, 800/900 MHz																				
X PMHN4332_	Front Housing Assembly with English Keypad																				
X PMHN4330_	Back Housing Assembly																				
X 68009553001	MOTOTRBO SL Series SL7550e Digital Portable Radios Quick Reference Guide																				
X MN002331A01	MOTOTRBO SL Series Digital Portable Radios Quick Reference Guide																				
X 68009554001	MOTOTRBO SL7550e Portables User Guide																				
X = Item Included _ = The latest version kit. When ordering a kit, refer to your specific kit for the suffix number.																					

1.4.4 800 MHz 2W GOB Enabled (806 – 870 MHz) Model Chart

SL7580e, 800 MHz, 806 – 870 MHz, 2W, GOB Enabled																					
Model	Description																				
AAH81VCN9TB2AN	MOTOTRBO SL7580e, 806 – 870 MHz, 2W, Full Keypad Alphanumeric Display Portable, WIFI, GOB Enabled																				
	<table border="1"> <thead> <tr> <th>Item</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>X PMUF1630_</td> <td>MOTOTRBO™ Display Portable (GOB Enabled)</td> </tr> <tr> <td>X PMAF4017_</td> <td>Antenna 800 MHz (806 – 870 MHz)</td> </tr> <tr> <td>X PMLF4169_S</td> <td>Main Board Service Kit, 800 MHz</td> </tr> <tr> <td>X PMLF4170_S</td> <td>Interface Board Service Kit, 800/900 MHz</td> </tr> <tr> <td>X PMHN4332_</td> <td>Front Housing Assembly with English Keypad</td> </tr> <tr> <td>X PMHN4330_</td> <td>Back Housing Assembly</td> </tr> <tr> <td>X 68009553001</td> <td>MOTOTRBO SL Series SL7550e Digital Portable Radios Quick Reference Guide</td> </tr> <tr> <td>X MN002331A01</td> <td>MOTOTRBO SL Series Digital Portable Radios Quick Reference Guide</td> </tr> <tr> <td>X 68009554001</td> <td>MOTOTRBO SL7550e Portables User Guide</td> </tr> </tbody> </table>	Item	Description	X PMUF1630_	MOTOTRBO™ Display Portable (GOB Enabled)	X PMAF4017_	Antenna 800 MHz (806 – 870 MHz)	X PMLF4169_S	Main Board Service Kit, 800 MHz	X PMLF4170_S	Interface Board Service Kit, 800/900 MHz	X PMHN4332_	Front Housing Assembly with English Keypad	X PMHN4330_	Back Housing Assembly	X 68009553001	MOTOTRBO SL Series SL7550e Digital Portable Radios Quick Reference Guide	X MN002331A01	MOTOTRBO SL Series Digital Portable Radios Quick Reference Guide	X 68009554001	MOTOTRBO SL7550e Portables User Guide
Item	Description																				
X PMUF1630_	MOTOTRBO™ Display Portable (GOB Enabled)																				
X PMAF4017_	Antenna 800 MHz (806 – 870 MHz)																				
X PMLF4169_S	Main Board Service Kit, 800 MHz																				
X PMLF4170_S	Interface Board Service Kit, 800/900 MHz																				
X PMHN4332_	Front Housing Assembly with English Keypad																				
X PMHN4330_	Back Housing Assembly																				
X 68009553001	MOTOTRBO SL Series SL7550e Digital Portable Radios Quick Reference Guide																				
X MN002331A01	MOTOTRBO SL Series Digital Portable Radios Quick Reference Guide																				
X 68009554001	MOTOTRBO SL7550e Portables User Guide																				
X = Item Included _ = The latest version kit. When ordering a kit, refer to your specific kit for the suffix number.																					

1.5 Specifications

General	SL7500e
Channel Capacity	1000
Frequency	UHF1: 403 – 470 MHz UHF2: 450 – 512MHz 800MHz: 806 – 825 MHz (Tx Only) 851 – 870 MHz (Rx and Tx) 900MHz: 896 – 902 MHz (Tx Only) 935 – 941 MHz (Rx and Tx)
Dimensions (HxWxT) with BT70 battery with BT90 battery with BT100x battery	121 x 55 x 17.4 mm 121 x 55 x 19.8 mm 121 x 55 x 22.9 mm
Weight with BT70 battery with BT90 battery with BT100x battery	154g 164g 174g
Power Supply	3.7 V nominal
FCC Description	UHF1: AZ489FT7072 UHF2: AZ489FT7073 800MHz: AZ489FT7074 900MHz: AZ489FT7075
IC Description	UHF1: 109U-89FT7072 UHF2: 109U-89FT7073 800MHz: 109U-89FT7074 900MHz: 109U-89FT7075
Average battery life at 5/5/90 duty cycle with battery saver enabled	
BT70 1370 mAh battery	UHF1/ UHF2: N/A
BT90 1800 mAh battery	UHF1/ UHF2: 11.3 hrs 800MHz/900MHz: 11.3 hrs
BT100x 2300 mAh battery	UHF1/ UHF2: 14.3 hrs 800MHz/900MHz: 13.5 hrs

Receiver	SL7500e
Frequencies	UHF1: 403 – 470 MHz UHF2: 450 – 512 MHz 800MHz: 851 – 870 MHz 900MHz: 935 – 941 MHz
Channel Spacing	12.5 kHz
Frequency Stability (-30°C to +60°C)	+/-1.5 ppm
Digital Sensitivity	5% BER: 0.3µV
Intermodulation (ETSI-EN300 113-1)	65 dB
Adjacent Channel Selectivity (ETSI-EN300 113-1)	60 dB @ 12.5 kHz
Spurious Rejection (ETSI-EN300 113-1)	70 dB
Rated Audio	500 mW
Audio Distortion @ Rated Audio	3% (typical)
Digital Hum and Noise	-40 dB @ 12.5 kHz
Conducted Spurious Emission (ETSI-EN300 113-1)	-57 dBm

Transmitter	SL7500e
Frequencies	UHF1: 403 – 470 MHz UHF2: 450 – 512 MHz 800MHz: 806 – 870 MHz 900MHz: 896 – 941 MHz
Frequency Stability (-30°C to +60°C)	+/-1.5 ppm
Power Output (Low Power)	1 W
Power Output (High Power)	UHF1/ UHF2: 3 Watt 800MHz/900MHz: 2 Watt
Digital Hum and Noise	-40 dB @ 12.5 kHz
Conducted / Radiated Emission	-36 dBm < 1 GHz -30 dBm > 1 GHz
Digital Adjacent Channel Power	60 dB @ 12.5 kHz
Audio Response	+1, -3 dBm
Audio Distortion	3%
4FSK Digital Modulation	12.5 kHz Data: 7K60F1D & 7K60FXD 12.5 kHz Voice: 7K60F1E & 7K60FXE Combination of 12.5 kHz Data & Voice: 7K60F1W
Digital Vocoder Type	AMBE+2™
Digital Protocol	ETSI TS 102 361 -1,-2,-3

UHF1 Self-Quieter Frequencies
403.200 MHz \pm 5 kHz
405.600 MHz \pm 5 kHz
408.000 MHz \pm 5 kHz
410.400 MHz \pm 5 kHz
412.800 MHz \pm 5 kHz
415.200 MHz \pm 5 kHz
417.600 MHz \pm 5 kHz
420.000 MHz \pm 5 kHz
422.400 MHz \pm 5 kHz
424.800 MHz \pm 5 kHz
427.200 MHz \pm 5 kHz
429.600 MHz \pm 5 kHz
431.960 MHz \pm 40 kHz
432.040 MHz \pm 40 kHz
434.400 MHz \pm 5 kHz
436.800 MHz \pm 5 kHz
439.200 MHz \pm 5 kHz
440.000 MHz \pm 5 kHz
441.600 MHz \pm 5 kHz
444.000 MHz \pm 5 kHz
446.400 MHz \pm 5 kHz
448.800 MHz \pm 5 kHz
451.200 MHz \pm 5 kHz
456.000 MHz \pm 5 kHz
460.800 MHz \pm 5 kHz
465.600 MHz \pm 5 kHz
467.960 MHz \pm 40 kHz
468.040 MHz \pm 40 kHz

UHF2 Self-Quieter Frequencies
451.200 MHz \pm 5kHz
453.600 MHz \pm 5kHz
455.000 MHz \pm 5kHz
456.000 MHz \pm 5kHz
459.800 MHz \pm 5kHz
460.800 MHz \pm 5kHz
465.600 MHz \pm 5kHz
467.840 MHz \pm 40kHz
468.040 MHz \pm 40kHz
468.160 MHz \pm 40kHz
470.400 MHz \pm 5kHz
472.800 MHz \pm 5kHz
475.200 MHz \pm 5kHz
477.600 MHz \pm 5kHz
480.000 MHz \pm 5kHz
484.800 MHz \pm 5kHz
487.200 MHz \pm 5kHz
489.600 MHz \pm 5kHz
492.000 MHz \pm 5kHz
494.400 MHz \pm 5kHz
499.200 MHz \pm 5kHz
501.600 MHz \pm 5kHz
504.000 MHz \pm 40kHz
506.400 MHz \pm 5kHz
508.800 MHz \pm 5kHz
511.200 MHz \pm 5kHz
513.600 MHz \pm 5kHz
517.400 MHz \pm 5kHz
518.400 MHz \pm 5kHz

UHF2 Self-Quieter Frequencies
520.000 MHz± 5kHz
523.200 MHz± 5kHz

900 MHz Self-Quieter Frequencies
935.840 MHz ± 5kHz
935.960 MHz ± 40kHz
936.040 MHz ± 40kHz
936.200 MHz ± 5kHz
938.400 MHz ± 5kHz
940.800 MHz ± 5kHz

800 MHz Self-Quieter Frequencies
852.000 MHz ± 5kHz
853.335 MHz ± 5kHz
854.320 MHz ± 5kHz
854.400 MHz ± 5kHz
854.480 MHz ± 5kHz
856.800 MHz ± 5kHz
859.200 MHz ± 5kHz
862.000 MHz ± 5kHz
863.960 MHz ± 5kHz
864.040 MHz ± 40kHz
866.400 MHz ± 5kHz
868.800 MHz ± 5kHz

Military Standards		
Applicable MIL-STD	MIL 810F Methods/ Procedures	MIL 810G Methods/ Procedures
Low Pressure	500.4/ Procedure II	500.5/ Procedure II
High Temperature	501.4/ Procedure I/Hot, Procedure II/Hot	501.5/ Procedure I/ A1, Procedure II/A1
Low Temperature	502.4/ Procedure I/ C1, Procedure II/ C1	502.5/ Procedure I/ C1, Procedure II/ C1
Temperature Shock	503.4/ Procedure I	503.5/ Procedure I/C
Solar Radiation	505.4/ Procedure I	505.5/ Procedure I/ A1
Rain	506.4/ Procedure I	506.5/ Procedure I
Dust	510.4/ Procedure I	510.5/ Procedure I
Vibration	514.5/ Procedure I/24	514.6/ Procedure I/24
Shock	516.5/ Procedure IV	516.6/ Procedure IV, VI

Environmental Specifications	
*Operating Temperature	-10 °C to +60 °C
Storage Temperature	-30 °C to +70 °C
ESD	IEC 61000-4-2
Water & Dust Intrusion	IP54
Humidity	8 hour soak @ +50 °C and 95% RH
Salt Fog	8 hours exposure to 5% saline solution Sodium Chloride (NaCl) at 35 °C, 16 hours standing period

* Operating temperature specification for a Non Lithium-Ion (Li-Ion) battery is -20 °C to +60 °C.

Notes

Chapter 2 Test Equipment and Service Aids

2.1 Recommended Test Equipment

The list of equipment contained in Table includes most of the standard test equipment required for servicing Motorola portable radios.

Table 2-1. Recommended Test Equipment

Equipment	Characteristics	Example	Application
Service Monitor	Can be used as a substitute for items marked with an asterisk (*)	Aeroflex Digital Radio Test Set Model 3920 with DMR option	Frequency/deviation meter and signal generator for wide-range troubleshooting and alignment
Digital RMS Multimeter *	100 μ V to 300 V 5 Hz to 1 MHz 10 Mega Ohm Impedance	Fluke 179 or equivalent (www.fluke.com)	AC/DC voltage and current measurements. Audio voltage measurements
RF Signal Generator *	100 MHz to 1 GHz -130 dBm to +10 dBm FM Modulation 0 kHz to 10 kHz Audio Frequency 100 Hz to 10 kHz	Agilent 443X R&S Signal Generator	Receiver measurements
Oscilloscope*	2 Channel 50 MHz Bandwidth 5 mV/div to 20 V/div	Leader LS8050 (www.leaderusa.com), Tektronix TDS1001b (www.tektronix.com), or equivalent	Waveform measurements
Power Meter and Sensor *	5% Accuracy 100 MHz to 500 MHz 50 Watts	Bird 43 Thruline Watt Meter (www.bird-electronic.com) or equivalent	Transmitter power output measurements
RF Millivolt Meter	100 mV to 3 V RF 10 kHz to 1 GHz	Boonton 92EA (www.boonton.com) or equivalent	RF level measurements
Power Supply	0 V to 32 V 0 A to 20 A	B&K Precision 1790 (www.bkprecision.com) or equivalent	Voltage supply

NOTE Service Monitor can be used as a substitute to the items marked with (*).

2.2 Service Aids

Table 2-2 lists the service aids recommended for working on the radio. While all of these items are available from Motorola, most are standard workshop equipment items, and any equivalent item capable of the same performance may be substituted for the item listed.

Table 2-2. Service Aids

Motorola Part No.	Description	Application
CB000262A01	Micro USB Programming Cable	Cable connects the radio to a USB port for radio programming and data applications.
TL000068A01	RF Antenna Adaptor (SMA Female)	Adapts radio's antenna port to test equipment.
EN000099A01	RF Antenna Adaptor Holder	Holds the RF antenna adaptor.
PMNN4429_	Battery Eliminator	Connects to radio via battery eliminator cable.
PMVN4130_	MOTOTRBO CPS, AirTracer CD	CPS allows Dealers/Distributors to program radio parameters. AirTracer allows the capturing of radio traffic into logs for analysis by Motorola.
PMVN4131_	MOTOTRBO Tuner CD	This tuner tunes and test MOTOTRBO subscriber, repeater and base station products in the available systems.


Chapter 3 Transceiver Performance Testing

3.1 General

These radios meet published specifications through their manufacturing process by utilizing high accuracy laboratory-quality test equipment. The recommended field service equipment approaches the accuracy of the manufacturing equipment with few exceptions.

3.2 Setup

Supply voltage is provided using a 3.7 VDC power supply. The equipment required for alignment procedures is connected as shown in the Radio Tuning Equipment Setup Diagram, Figure 4-2.

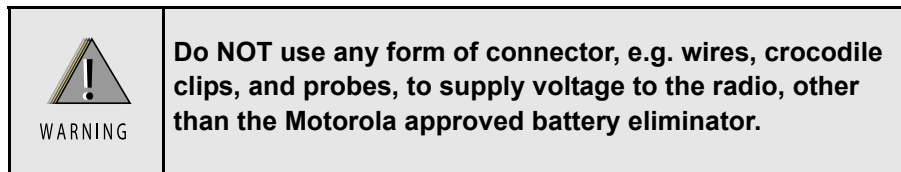

The tables in this chapter contain the following related technical data:

Table Number	Title
Table 3-1	Front Panel Access Test Mode Displays
Table 3-2	Test Frequencies for UHF
Table 3-3	Test Frequencies for 900 MHz
Table 3-4	Test Frequencies for 800 MHz
Table 3-5	Transmitter Performance Checks
Table 3-6	Receiver Performance Checks

Setup:

Set up the DMR Transmitter and Receiver Test as per Figure 3-1.

- a. Connect the Micro USB Programming Cable to the radio and to the computer.
- b. Remove the radio's name plate label and the RF Plug (blue) as shown in Figure 3-2. and Figure 3-3.
- c. Connect the RF antenna adaptor to the 50 Ohm RF Input/Output port of the radio using the RF antenna adaptor holder as shown in Figure 3-4.
- d. Connect the other end of the RF antenna adaptor to the T/R port of the Radio Test Set 3920 using the RF cable shown in Figure 3-1.

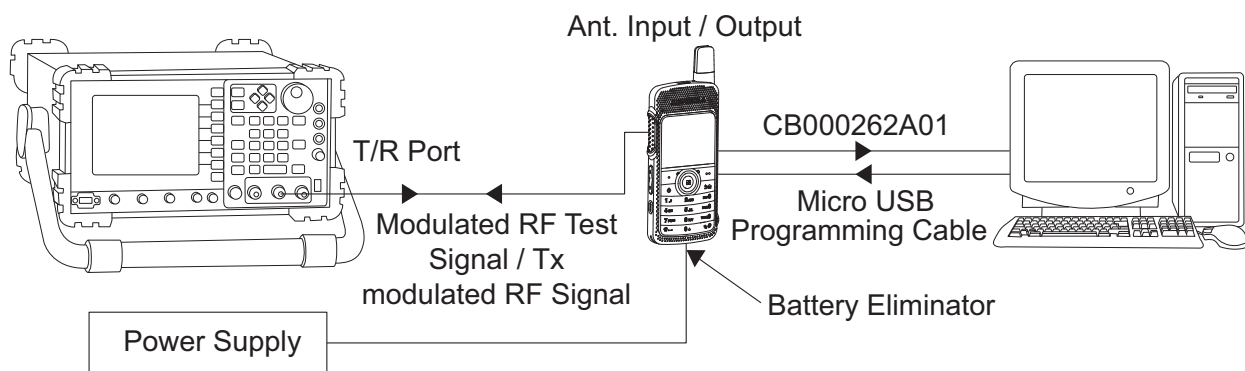


Figure 3-1. DMR Radio Transmitter and Receiver Testing Setup

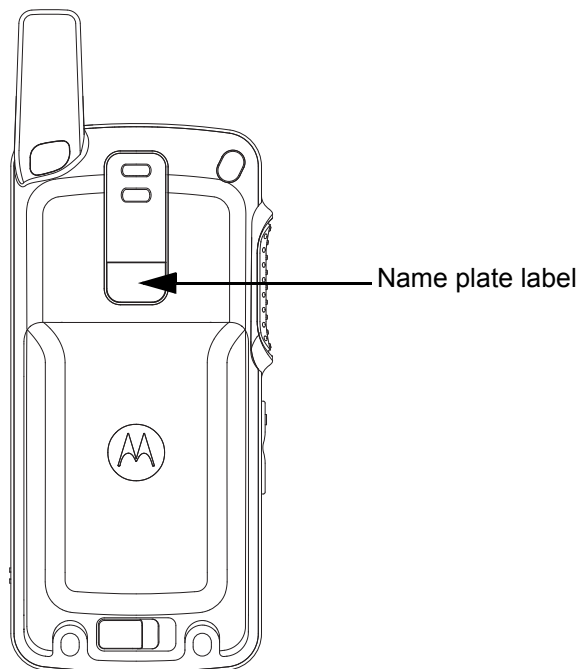


Figure 3-2. Name plate label

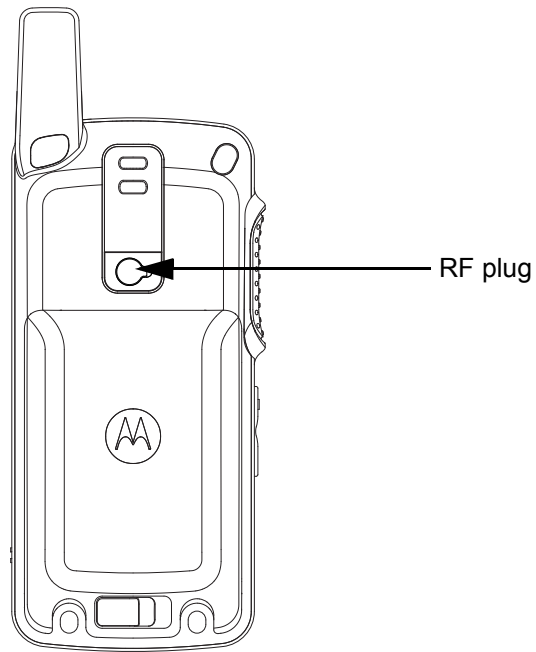


Figure 3-3. RF plug

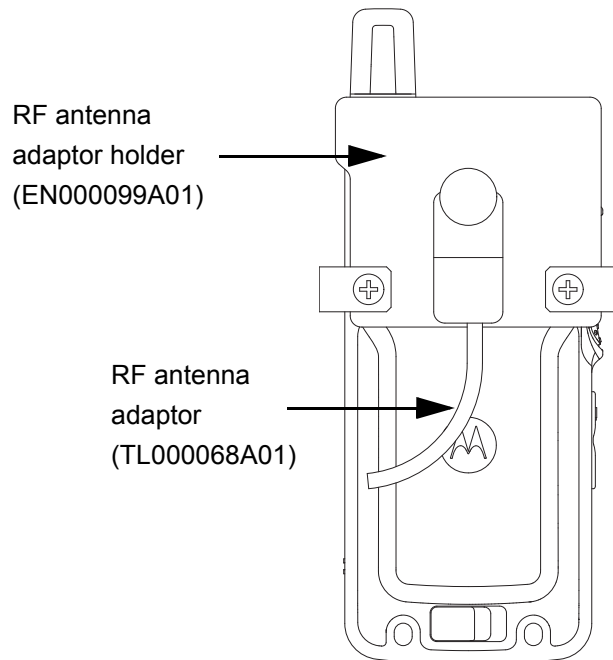


Figure 3-4. Connect RF Antenna adaptor to radio RF input/output port

3.3 Test Mode

3.3.1 Radio Test Mode

1. Turn the radio on.
2. Within 10 seconds after Self Test is complete, press the **P2 button** five times in succession.
3. The radio beeps and shows a series of display that gives information regarding various version numbers and subscriber specific information.

The displays are described in Table 3-1.

Table 3-1. Front Panel Access Test Mode Displays

Name of Display	Description	Appears
Service Mode	The literal string indicates the radio has entered test mode.	Always
Host Version	The version of host firmware.	Always
DSP Version	The version of DSP firmware.	Always
Model Number	The radio's model number as programmed in the codeplug.	Always
MSN	The radio's serial number as programmed in the codeplug.	Always
FLASHCODE	The FLASH codes as programmed in the codeplug.	Always
RF Band	The radio's band.	Always

NOTE The radio stops at each display for 2 seconds before moving to the next information display. If the information cannot fit into 1 line, the radio display scrolls automatically character by character after 1 second to view the whole information. If the Left Navigation Key (◀) is pressed before the last information display, the radio will suspend the information display until the user presses the Right Navigation Key (▶) to resume the information display. The radio beeps when each button is pressed. After the last display, RF Test Mode will be displayed.

3.3.2 RF Test Mode

When the radio is operating in its normal environment, the radio's micro controller controls the RF channel selection, transmitter key-up, and receiver muting, according to the customer codeplug configuration. However, when the unit is on the bench for testing, alignment, or repair, it must be removed from its normal environment via a special routine, called **TEST MODE**.

In RF Test Mode, the display upon the first line is "RF Test". The display upon the second line is the test environment, the channel number and channel spacing. The default test environment is DIG.

NOTE DIG is digital mode.

1. Press of channel selector button will cycle through the test channel 1->2->3->4->5->6->7->8->9->10->11->12->13->14->15->16->1 as described in Table 3-2. The radio beeps in each position. Frequency units in the table below is in MHz.

Table 3-2. Test Frequencies for UHF

Frequency	UHF1 RX	UHF1 TX	UHF2 RX	UHF2 TX
F1 & F9	403.075	403.075	450.05	450.05
F2 & F10	414.075	414.075	462.55	462.55
F3 & F11	425.075	425.075	474.95	474.95
F4 & F12	436.075	436.075	487.35	487.35
F5 & F13	447.075	447.075	499.75	499.75
F6 & F14	458.075	458.075	512.15	512.15
F7 & F15	469.075	469.075	519.65	519.65
F8 & F16	470.0	470.0	526.975	526.975

NOTE: UHF frequency channels F1 to F8 are high power while channels F9 to F16 are low power.

Table 3-3. Test Frequencies for 900MHz

Frequency	RX Frequency (MHz)	TX Frequency (MHz)	Power Level
F1	935.025	896.025	Low Power
F2	936.225	898.225	Low Power
F3	937.425	900.525	Low Power
F4	938.625	901.975	Low Power
F5	939.125	935.025	Low Power
F6	939.725	937.225	Low Power
F7	940.225	939.525	Low Power
F8	940.975	940.975	Low Power

Frequency	RX Frequency (MHz)	TX Frequency (MHz)	Power Level
F9	935.025	896.025	High Power
F10	936.225	898.225	High Power
F11	937.425	900.525	High Power
F12	938.625	901.975	High Power
F13	939.125	935.025	High Power
F14	939.725	937.225	High Power
F15	940.225	939.525	High Power
F16	940.975	940.975	High Power

Table 3-4. Test Frequencies for 800MHz

Frequency	RX Frequency (MHz)	TX Frequency (MHz)	Power Level
F1	851.025	806.025	Low Power
F2	854.125	816.525	Low Power
F3	856.225	824.975	Low Power
F4	859.325	851.025	Low Power
F5	861.455	856.225	Low Power
F6	864.525	861.455	Low Power
F7	866.775	866.775	Low Power
F8	869.975	869.975	Low Power
F9	851.025	806.025	High Power
F10	854.125	816.525	High Power
F11	856.225	824.975	High Power
F12	859.325	851.025	High Power
F13	861.455	856.225	High Power
F14	864.525	861.455	High Power
F15	866.775	866.775	High Power
F16	869.975	869.975	High Power

Table 3-5. Transmitter Performance Checks

Test Name	IFR Setting	Radio	Test Set	Comments
RF Power	DMR mode. Slot 1 Power and Slot 2 Power	TEST MODE, Digital mode, transmit without modulation	Key up radio without modulation using Tuner	TTR Enable is needed and IFR to be set to trigger mode with signal level ~1.5V
FSK Error	DMR mode. FSK error	TEST MODE, Digital mode, transmit with O.153. test pattern	Key up radio with O.513. test pattern modulation using Tuner	Not Exceed 5%
Magnitude Error	DMR mode. Magnitude error	As above	As above,	Not Exceed 1%.
Symbol Deviation	DMR mode. Symbol deviation	As above	As above	Symbol Deviation should be within 648Hz +/-10% and 1944Hz +/-10%
Transmitter BER	DMR mode	As above	As above	Transmitter BER should be 0%

Table 3-6. Receiver Performance Checks

Test Name	IFR Setting	Radio	Test Set	Comments
Receiver BER	IFR DMR mode. Signal generator with O.153. test pattern	Test Mode, Digital mode, receive O.153. test pattern	Read BER using Tuner. Adjust RF level to get 5% BER	RF level to be <0.35uV for 5% BER

3.3.3 Flicker Test Mode

1. Press and hold the **P1 button** in RF Test Mode. The radio beeps once and momentarily displays "Flicker Test Mode."
2. Upon entering this mode, the radio displays a black horizontal line in between two white horizontal lines.
3. Press and hold the **P1 button**. The radio beeps once and displays "Display Test Mode".

3.3.4 Display Test Mode

1. Press and hold the **P1 button** in Flicker Test Mode. The radio beeps once and momentarily displays "Display Test Mode."
2. Upon entering the Display Test Mode, the radio displays a white background with "Display Test Mode" in black font.
3. Upon any button/key press, the radio displays black active background with "Display Test Mode" in white font.

4. Upon any button/key press, the radio shows solid red color display.
5. Upon any button/key press following the above display, the radio shows green color display.
6. Upon any button/key press following the above display, the radio shows blue color display.
7. Upon any button/key press following the above display, the radio shows a big 46% grey “+” on black background.
8. Upon any button/key press following the above display, the radio shows a big 46% grey 90 degrees rotated “H” on black background.
9. Upon any button/key press following the above display, the radio shows a big 46% grey “H” on black background.
10. Upon any button/key press following the above display, the radio displays a black horizontal line in between two white horizontal lines.
11. Upon any button/key press following the above display, the radio displays a red horizontal line in between two white horizontal lines (increasing one colored horizontal line above and one below the center row). Once the horizontal lines cover up the screen, the radio shows red color display.

NOTE Each key press will change the screen color from, red->green->blue->black->red.

12. When the screen is filled up with horizontal lines, any button/key press clears the screen and displays red and white vertical lines at column 0,3,6,9,12,15,18,21,24,27,30. Any button/ key press fills the screen with vertical lines of the next color, (1 line to the right of any existing line) until the display is filled up with black display.

NOTE Each key press will change the screen color from red->green->blue->black->red->black.

13. The radio shows solid black color display.

3.3.5 Photosensor Test Mode

1. Press and hold the **P1 button** after Display Test Mode. The radio beeps once and displays “Photosensor Test Mode”.
2. Upon any button/ key press, the radio displays “Step 1”, then “Place Radio in Light”, followed by **Menu/OK Button** press.
3. Upon the **Menu/OK Button** press, the radio takes few seconds to read the photosensor and to compare it with the predefined value, the result of this test is shown at the end of photosensor mode. The radio displays “Step 2”, then “Cover Photosensor”, followed by **Menu/OK Button** press.
4. By pressing the **Menu/OK Button** the second time, the radio takes a few seconds to read the photosensor and compares it with the predefined value, the result will then be shown on the screen. The four possible results are:- Photosensor Test Step 1 Failed, Photosensor Test Step 2 Failed, Photosensor Test Both Steps Failed, or Photosensor Test Passed.

NOTE Select “Press OK” by pressing the center button of the navigation keys.

3.3.6 Accelerometer Test Mode

1. Press and hold the **P1 button** after Photosensor Mode. The radio beeps once and displays “Accelerometer Test Mode”.
2. Upon any button/ key press, the radio reads the x,y,z positions and compares them with the predefined values (x,y,z) and displays the result on the screen. A pass result will only occur when the radio is placed in a horizontal position. The possible results are: Accelerometer Test Failed, Accelerometer Test Passed.

3.3.7 Vibrator Test Mode

Press and hold the **P1 button** after the Accelerometer Mode. The radio beeps once and vibrates twice, first a short vibration and second a longer vibration, and displays “Vibrator Test Mode”.

3.3.8 LED Test Mode

1. Press and hold the **P1 button** after Vibrator Test Mode. The radio beeps once and displays “LED Test Mode”.
2. Upon any button/key press, the radio’s red LED lights up and displays “Red LED On”.
3. Upon any button/key press following the above display, the red LED turns off. The green LED will then light up and displays “Green LED On”.
4. Upon any button/key press following the above display, the green LED turns off. Both the LEDs will then light up and displays “Both LEDs On”.

NOTE As there is only one LED on the radio, the LED color is in orange when both the LED lights up.

3.3.9 Backlight Test Mode

1. Press and hold the **P1 button** after LED Test Mode. The radio beeps once and displays “Backlight Test Mode”.
2. The radio turns on both LCD and keypad backlight at the same time.

3.3.10 Speaker Tone Test Mode

1. Press and hold the **P1 button** after Backlight Test Mode. The radio beeps once and displays “Speaker Tone Test Mode”.
2. The radio generates a 1 kHz tone with the internal speaker.

3.3.11 Earpiece Tone Test Mode

1. Press and hold the **P1 button** after Speaker Tone Test Mode. The radio beeps once and displays “Earpiece Tone Test Mode”.
2. The radio generates a 1 kHz tone with the earpiece.

3.3.12 Audio Loopback Earpiece Test

1. Press and hold the **P1 button** after Earpiece Tone Test Mode. The radio beeps once and displays “Audio Loopback Earpiece Test Mode”.
2. The radio shall route any audio on the external mic to the earpiece.

3.3.13 Battery Check Test Mode

1. Press and hold the **P1 button** after Audio Loopback Earpiece Test Mode. The radio beeps once and momentarily displays “Battery Check Test Mode”.
2. The radio will display the following:



Figure 3-5. Battery Check Test Mode Display

3.3.14 Button/Knob/PTT Test Mode

1. Press and hold the **P1 button** after Battery Check Test Mode. The radio beeps once and displays "Button Test"(line 1) and displays "160/1".
2. Press the **Volume Up Button**; "80/1" appears and radio beeps; release, "80/0" appears and radio beeps.
3. Press the **Volume Down Button**; "81/1" appears and radio beeps; release, "80/1" appears and radio beeps.
4. Press the **PTT Button**; "1/1" appears and radio beeps; release, "1/0" appears and radio beeps.
5. Press the **Emergency/ Programmable Button**; "148/1" appears and radio beeps; release, "148/0" appears and radio beeps.
6. Keypad Checks:
 - Press **0**, "48/1" appears and radio beeps; release, "48/0" appears and radio beeps.
 - Press **1**, "49/1" appears and radio beeps; release, "49/0" appears and radio beeps.
 - Press **2**, "50/1" appears and radio beeps; release, "50/0" appears and radio beeps.
 - Press **3**, "51/1" appears and radio beeps; release, "51/0" appears and radio beeps.
 - Press **4**, "52/1" appears and radio beeps; release, "52/0" appears and radio beeps.
 - Press **5**, "53/1" appears and radio beeps; release, "53/0" appears and radio beeps.
 - Press **6**, "54/1" appears and radio beeps; release, "54/0" appears and radio beeps.
 - Press **7**, "55/1" appears and radio beeps; release, "55/0" appears and radio beeps.
 - Press **8**, "56/1" appears and radio beeps; release, "56/0" appears and radio beeps.
 - Press **9**, "57/1" appears and radio beeps; release, "57/0" appears and radio beeps.
 - Press *****, "58/1" appears and radio beeps; release, "58/0" appears and radio beeps.
 - Press **#**, "59/1" appears and radio beeps; release, "59/0" appears and radio beeps.
 - Press **P1**, "160/1" appears and radio beeps; release, "160/0" appears and radio beeps.
 - Press **P2**, "161/1" appears and radio beeps; release, "161/0" appears and radio beeps.
 - Press **Menu/OK**, "85/1" appears and radio beeps; release, "85/0" appears and radio beeps.
 - Press **Back/Home**, "140/1" appears and radio beeps; release, "140/0" appears and radio beeps.
 - Press **◀**, "128/1" appears and radio beeps; release, "128/0" appears and radio beeps.
 - Press **▶**, "130/1" appears and radio beeps; release, "130/0" appears and radio beeps.
 - Press **▲**, "135/1" appears and radio beeps; release, "135/0" appears and radio beeps.
 - Press **▼**, "136/1" appears and radio beeps; release, "136/0" appears and radio beeps.
7. After the test mode is completed, turn the radio off.
8. Turn the radio on.

Chapter 4 Radio Programming and Tuning

4.1 Introduction

This chapter provides an overview of the MOTOTRBO Customer Programming Software (CPS), as well as the Tuner and AirTracer applications, which are all designed for use in Windows XP/Vista/Win7/Win8 environment. These programs are available in one kit as listed in Table 4-1. An Installation Guide is also included with the kit.

NOTE Refer to the appropriate program on-line help files for the programming procedures.


Description	Kit Number
MOTOTRBO CPS, Tuner and AirTracer Applications CD	PMVN4130_ PMVN4131_

Table 4-1. Software Installation Kits Radio Tuning Setup

4.2 Customer Programming Software Setup

The CPS programming setup, shown in Figure 4-1 is used to program the radio.

NOTE Refer to the appropriate program on-line help files for the programming procedures.



Caution Computer USB ports can be sensitive to Electrostatic Discharge. Do not touch exposed contacts on cable when connected to a computer.

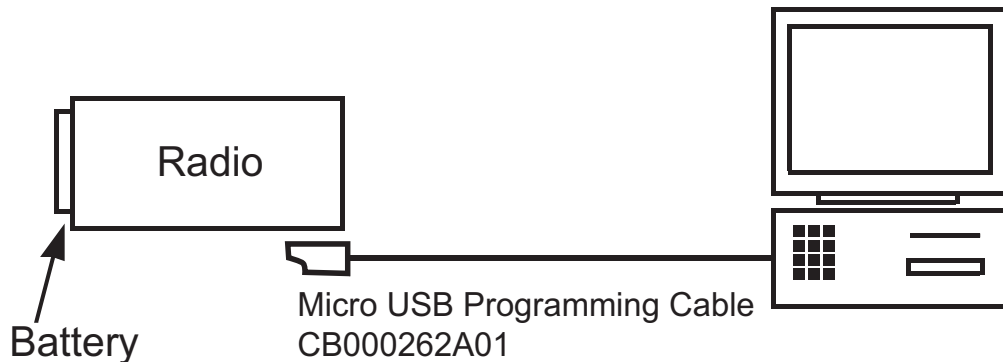


Figure 4-1. CPS Programming Setup

4.3 AirTracer Application Tool

The MOTOTRBO AirTracer application tool has the ability to capture over-the-air digital radio traffic and save the captured data into a file. The AirTracer application tool can also retrieve and save internal error logs from MOTOTRBO radios. The saved files can be analyzed by trained Motorola personnel to suggest improvements in system configurations or to help isolate problems.

4.4 Radio Tuning Setup

A personal computer (PC), Windows XP/Vista/Win7/Win8 and a tuner program are required to tune the radio. To perform the tuning procedures, the radio must be connected to the PC and test equipment setup as shown in Figure 4-2.

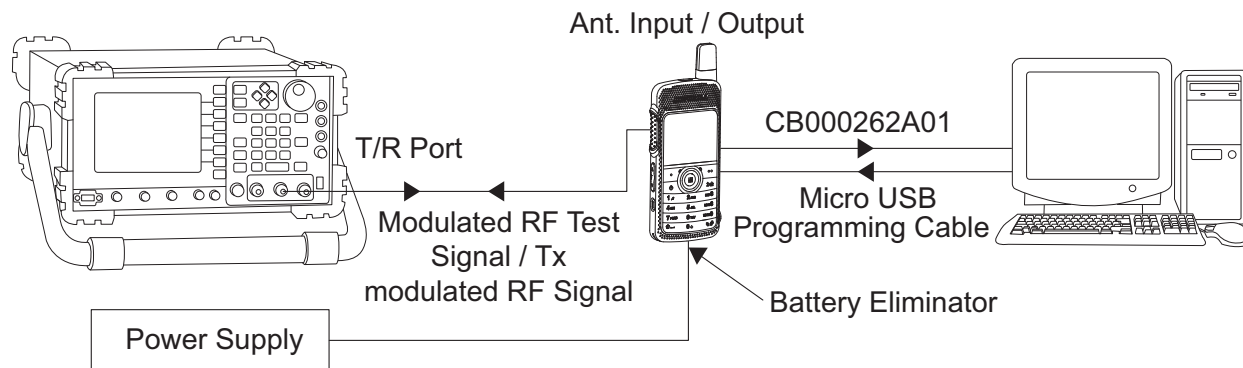


Figure 4-2. Radio Transmitter and Receiver Tuning Setup

Chapter 5 Disassembly/Re-assembly Procedures

5.1 Introduction

This chapter provides details about the following:

- Preventive maintenance (inspection and cleaning).
- Safe handling of CMOS and LDMOS devices.
- Repair procedures and techniques.
- Disassembly and re-assembly of the radio.

5.2 Preventive Maintenance

Periodic visual inspection and cleaning is recommended.

5.2.1 Inspection

Check that the external surfaces of the radio are clean, and that all external controls and switches are functional. It is not recommended to inspect the interior electronic circuitry.

5.2.2 Cleaning Procedures

The following procedures describe the recommended cleaning agents and the methods to be used when cleaning the external and internal surfaces of the radio. External surfaces include the front housing, housing assembly and battery case. These surfaces should be cleaned whenever a periodic visual inspection reveals the presence of smudges, grease, and/or grime.

NOTE Internal surfaces should be cleaned only when the radio is disassembled for service or repair.

The only recommended agent for cleaning the external radio surfaces is a 0.5% solution of a mild dishwashing detergent in water. The only factory recommended liquid for cleaning the printed circuit boards and their components is isopropyl alcohol (100% by volume).



Caution

Use all chemicals as prescribed by the manufacturer. Be sure to follow all safety precautions as defined on the label or material safety data sheet.

The effects of certain chemicals and their vapors can have harmful results on certain plastics. Avoid using aerosol sprays, tuner cleaners and other chemicals.

Cleaning External Plastic Surfaces

Apply the 0.5% detergent-water solution sparingly with a stiff, non-metallic, short-bristled brush to work all loose dirt away from the radio. Use a soft, absorbent, lintless cloth or tissue to remove the solution and dry the radio. Make sure that no water remains entrapped near the connectors, cracks, or crevices.

Cleaning Internal Circuit Boards and Components

Isopropyl alcohol (100%) may be applied with a stiff, non-metallic, short-bristled brush to dislodge embedded or caked materials located in hard-to-reach areas. The brush stroke should direct the dislodged material out and away from the inside of the radio. Make sure that controls or tunable components are not soaked with alcohol. Do not use high-pressure air to hasten the drying process since this could cause the liquid to collect in unwanted places. After completing of the cleaning process, use a soft, absorbent, lintless cloth to dry the area. Do not brush or apply any isopropyl alcohol to the frame, front housing or back housing.

NOTE Always use a fresh supply of alcohol and a clean container to prevent contamination by dissolved material (from previous usage).

5.3 Safe Handling of CMOS and LDMOS Devices

Complementary metal-oxide semiconductor (CMOS) and Laterally Diffused Metal Oxide Semiconductor (LDMOS) devices are used in this family of radios, and are susceptible to damage by electrostatic or high voltage charges. Damage can be latent, resulting in failures occurring weeks or months later. Therefore, special precautions must be taken to prevent device damage during disassembly, troubleshooting, and repair.

Handling precautions are mandatory for CMOS/LDMOS circuits and are especially important in low humidity conditions. DO NOT attempt to disassemble the radio without first referring to the CMOS CAUTION paragraph in the Disassembly and Re-assembly section of the manual.

DO NOT attempt to disassemble the radio without first referring to the following CAUTION statement.





Caution

This radio contains static-sensitive devices. Do not open the radio unless you are properly grounded. Take the following precautions when working on this unit:

- Store and transport all CMOS/LDMOS devices in conductive material so that all exposed leads are shorted together. Do not insert CMOS/LDMOS devices into conventional plastic “snow” trays used for storage and transportation of other semiconductor devices.
- Ground the working surface of the service bench to protect the CMOS/LDMOS device. We recommend using the Motorola Static Protection Assembly (part number 0180386A82), which includes a wrist strap, two ground cords, a table mat, and a floor mat.
- Wear a conductive wrist strap in series with a 100k resistor to ground. (Replacement wrist straps that connect to the bench top covering are Motorola part number 4280385A59).
- Do not wear nylon clothing while handling CMOS/LDMOS devices.
- Do not insert or remove CMOS/LDMOS devices with power applied. Check all power supplies used for testing CMOS/LDMOS devices to be certain that there are no voltage transients present.
- When straightening CMOS/LDMOS pins, provide ground straps for the apparatus used.
- When soldering, use a grounded soldering iron.
- If at all possible, handle CMOS/LDMOS devices by the package and not by the leads. Prior to touching the unit, touch an electrical ground to remove any static charge that you may have accumulated. The package and substrate may be electrically common. If so, the reaction of a discharge to the case would cause the same damage as touching the leads.

5.4 Repair Procedures and Techniques – General

NOTE Environmentally Preferred Products (EPP) (refer to the marking on the printed circuit boards — examples shown below) were developed and assembled using environmentally preferred components and solder assembly techniques to comply with the European Union's Restriction of Hazardous Substances (ROHS 2) Directive 2011/65/EU and (Waste Electrical and Electronic Equipment (WEEE) Directive 2012/19/EU. To maintain product compliance and reliability, use only the Motorola specified parts in this manual.

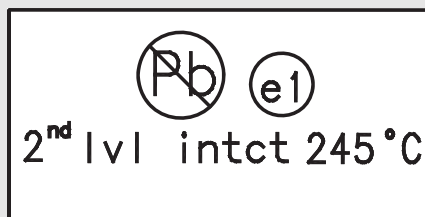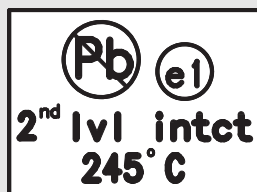

Any rework or repair on Environmentally Preferred Products must be done using the appropriate lead-free solder wire and lead-free solder paste as stated in the following table:

Table 5-1. Lead Free Solder Wire Part Number List

Motorola Part Number	Alloy	Flux Type	Flux Content by Weight	Melting Point	Supplier Part number	Diameter	Weight
1088929Y01	95.5Sn/3.8Ag/0.7Cu	RMA Version	2.7-3.2%	217°C	52171	0.015"	1lb spool

Table 5-2. Lead Free Solder Paste Part Number List

Motorola Part Number	Manufacturer Part Number	Viscosity	Type	Composition & Percent Metal	Liquid Temperature
1085674C03	NC-SMQ230	900-1000KCPs Brookfield (5rpm)	Type 3 (-325/+500)	(95.5%Sn-3.8%Ag-0.7%Cu) 89.3%	217°C

Parts Replacement and Substitution

When damaged parts are replaced, identical parts should be used. If the identical replacement part is not locally available, check the parts list for the proper Motorola part number and order the part from the nearest Motorola Radio Products and Solutions Organization (RPSO) listed in Appendix A of this manual.

Rigid Circuit Boards

This family of radios uses bonded, multi-layer, printed circuit boards. Since the inner layers are not accessible, some special considerations are required when soldering and unsoldering components. The printed-through holes may interconnect multiple layers of the printed circuit. Therefore, exercise care to avoid pulling the plated circuit out of the hole.

When soldering near a connector:

- Avoid accidentally getting solder in the connector.
- Be careful not to form solder bridges between the connector pins.
- Examine your work closely for shorts due to solder bridges.

For soldering components with Hot-Air or infra red solder systems, please check your user guide of the solder system to get information on solder temperature and time for the different housings of the integrated circuits and other components.

5.5 Disassembling and Reassembling the Radio – General

When disassembling and reassembling the radio, it is important to pay particular attention to the snaps and tabs, and how parts align with each other.

The following tools are required for disassembling and reassembling the radio:

- 6IP Torx Plus™
- 4IP Torx Plus
- Torque wrench
- Tweezer

If a unit requires further testing or service than is customarily performed at the basic level, please send the radio to a Motorola Service Center listed in Appendix B.



Caution

To assure the safety and regulatory compliance of the SL7500e, the radio must be repaired only at Motorola service facilities. Please contact your local dealer or Point of sale for further instructions.

5.6 Radio Disassembly – Detailed

5.6.1 Holster Removal

1. Remove the holster from the front housing by unlocking the top latch and removing the radio upwards as shown in Figure 5-1.



Figure 5-1. Holster removal

5.6.2 External Antenna Disassembly

1. Turn off the radio.



2. Remove the antenna plug and the escutcheon cover from the back housing as shown in Figure 5-2 and Figure 5-3.

NOTE

- a) Remove the antenna plug with fingers.
- b) Remove the escutcheon cover with tweezers. Dispose the escutcheon cover once it has been removed.
- c) Use a cotton bud and IPA (Isopropyl alcohol) to remove the glue residue on the back cover.



Figure 5-2. Antenna plug removal with fingers



Figure 5-3. Escutcheon cover removal with tweezers

3. Remove the antenna screw with the 4IP Torx Plus screwdriver as shown in Figure 5-4.

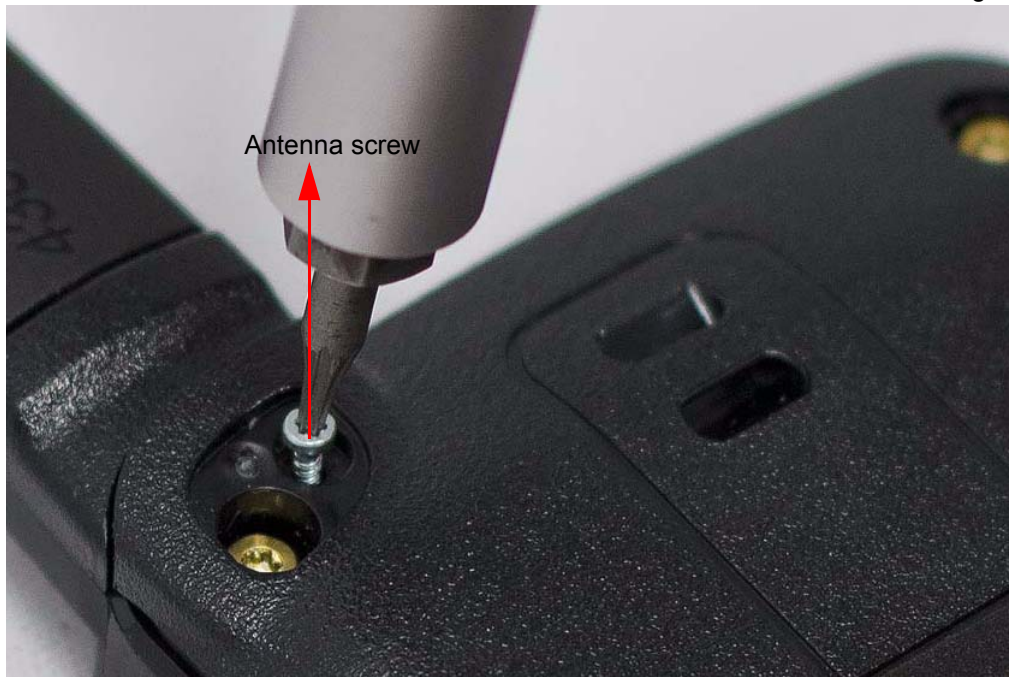


Figure 5-4. Antenna screw removal

4. Remove the antenna from the radio by pulling it upwards as shown in Figure 5-5.



Figure 5-5. Antenna removal

5.6.3 Back Housing Disassembly

1. Remove the battery door from the back housing by unlocking the latch as shown in Figure 5-6.



Figure 5-6. Unlatching battery door

2. Remove the battery door by lifting it upwards as shown in Figure 5-7.



Figure 5-7. Battery door removal

3. After removing the battery door, remove battery from battery compartment as shown in Figure 5-8. To remove battery, grasp the battery groove at the top of the battery and lift up the battery.

NOTE The battery cannot be removed bottom first.



Figure 5-8. Battery removal

4. Remove the corner screws from four corners of the back housing marked (a,b,c,d) by using the 6IP Torx Plus as shown in Figure 5-9.
5. Remove the two middle screws in the battery compartment marked (e and f) by using the 6IP Torx Plus as shown in Figure 5-9.

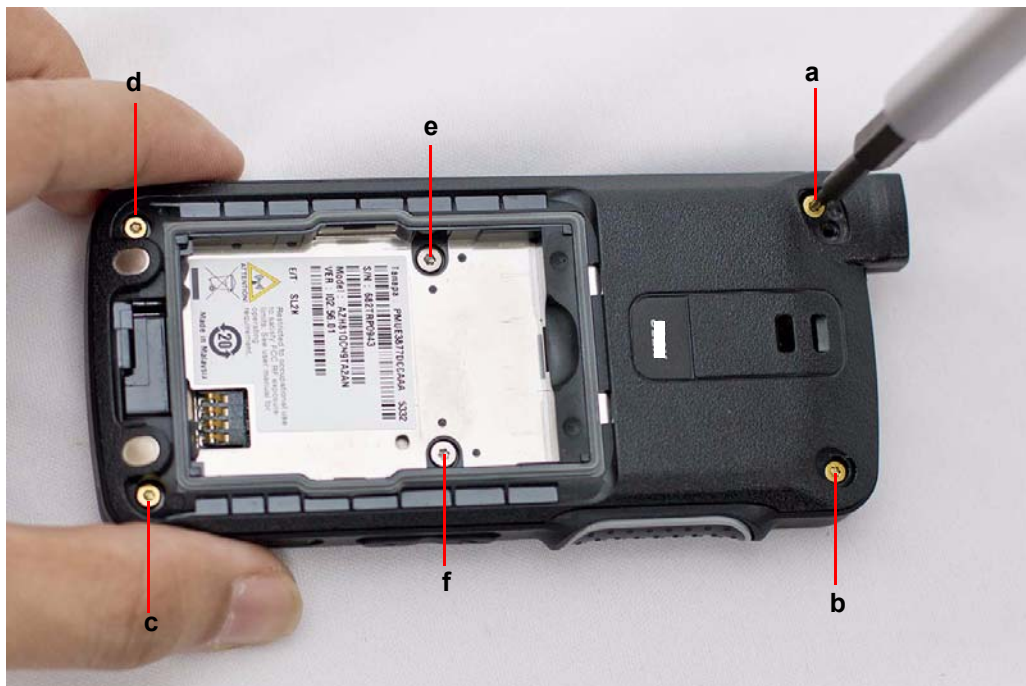


Figure 5-9. Corner screws and middle screws removal

6. Lift back housing from the front housing as shown in Figure 5-10.



Figure 5-10. Back housing removal

5.6.4 Internal Antenna Disassembly

1. Remove the internal antenna upwards by using tweezers as shown in Figure 5-11.

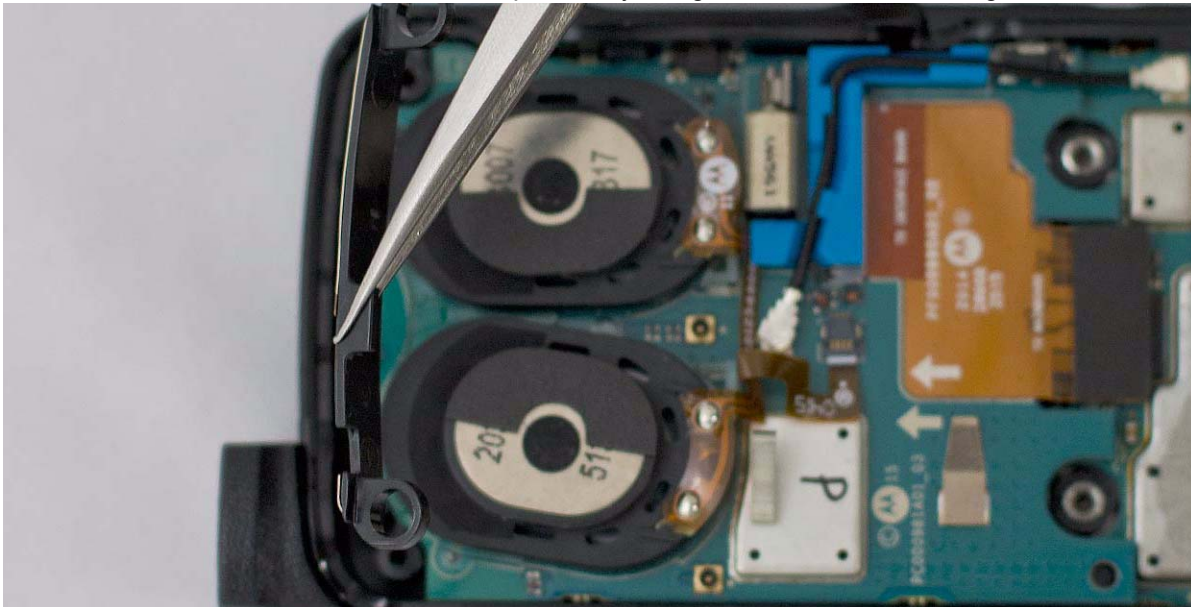


Figure 5-11. Internal antenna removal

5.6.5 PCB Disassembly

1. Unplug the coax cable connector from the main board using a plastic tweezer as shown in Figure 5-12. To remove the board-to-board flex, unlatch the flex connector tab as shown in Figure 5-13.



Figure 5-12. Coax cable connector disassembly

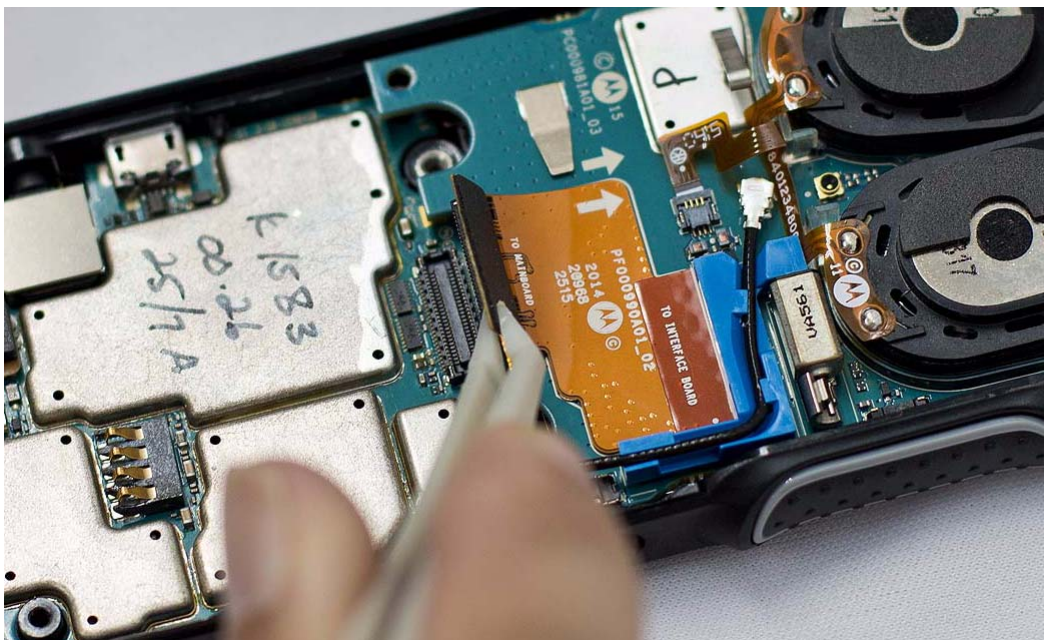


Figure 5-13. Flex cable connector disassembly

2. Remove the interface board from the front housing by sliding it out from the PCB retainer catch as shown in Figure 5-14.

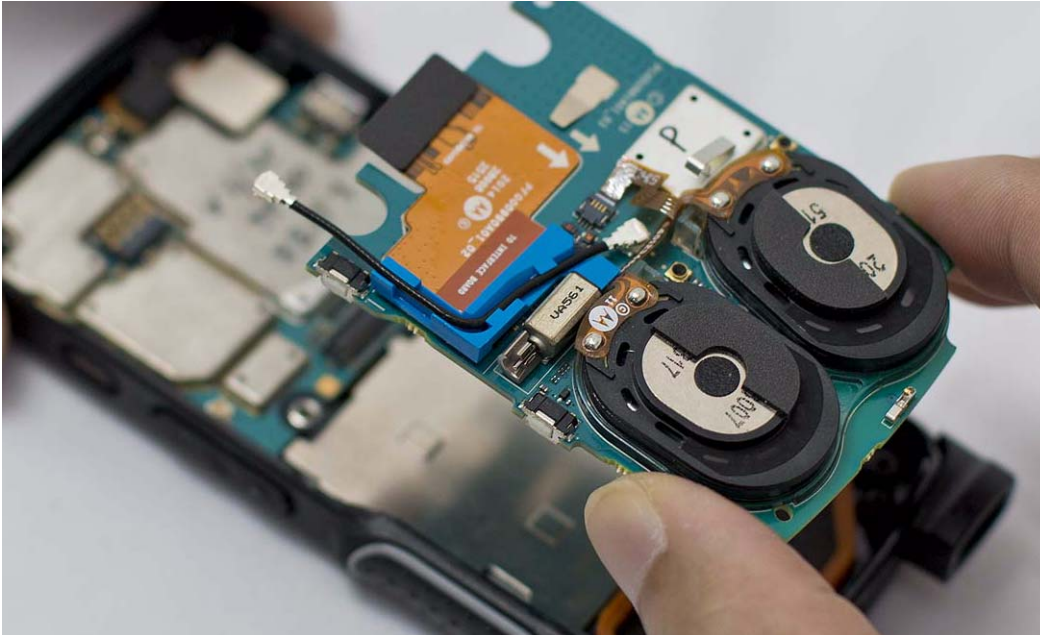


Figure 5-14. Interface board removal

5.6.6 Audio Jack Flex and Keypad Flex Disassembly

1. Unplug the keypad flex connector and audio jack flex connector from the main board using a plastic tweezer as shown in Figure 5-15 and Figure 5-16 respectively.

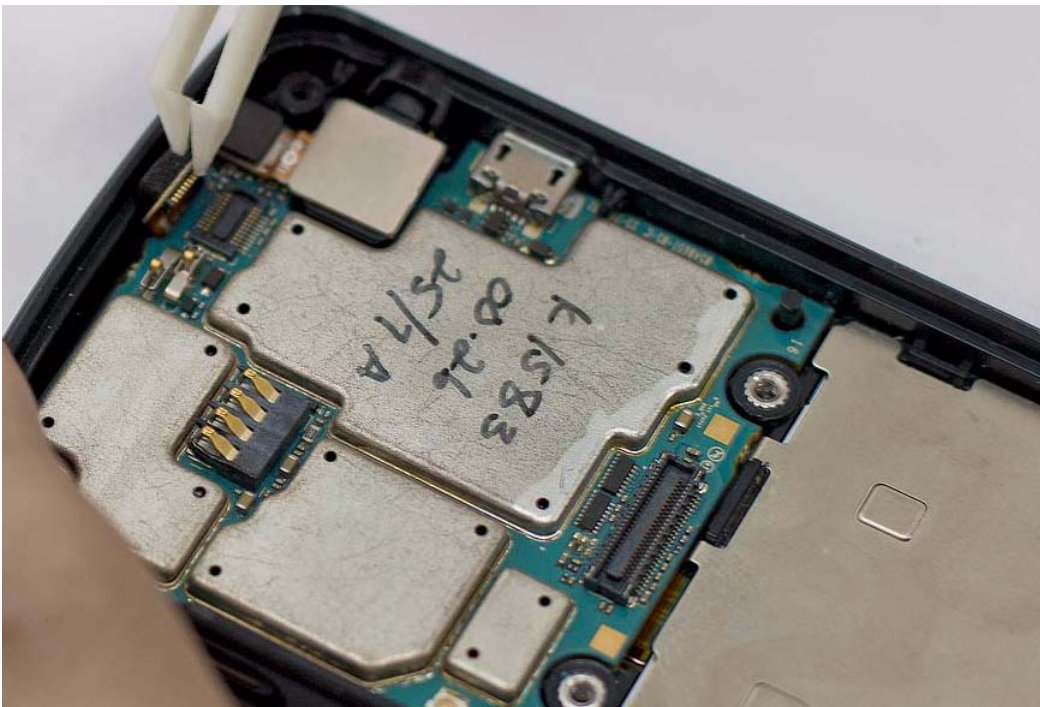


Figure 5-15. Keypad flex disassembly

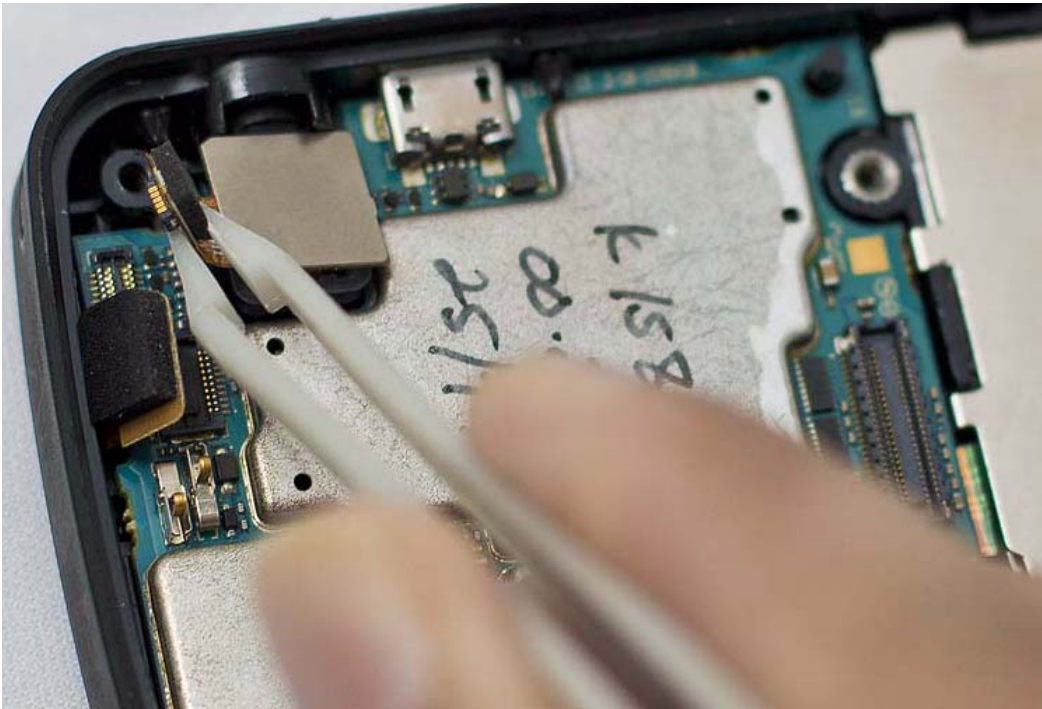


Figure 5-16. Audio jack flex disassembly

2. Lift and pull out the audio jack flex from its recess as shown in Figure 5-17.

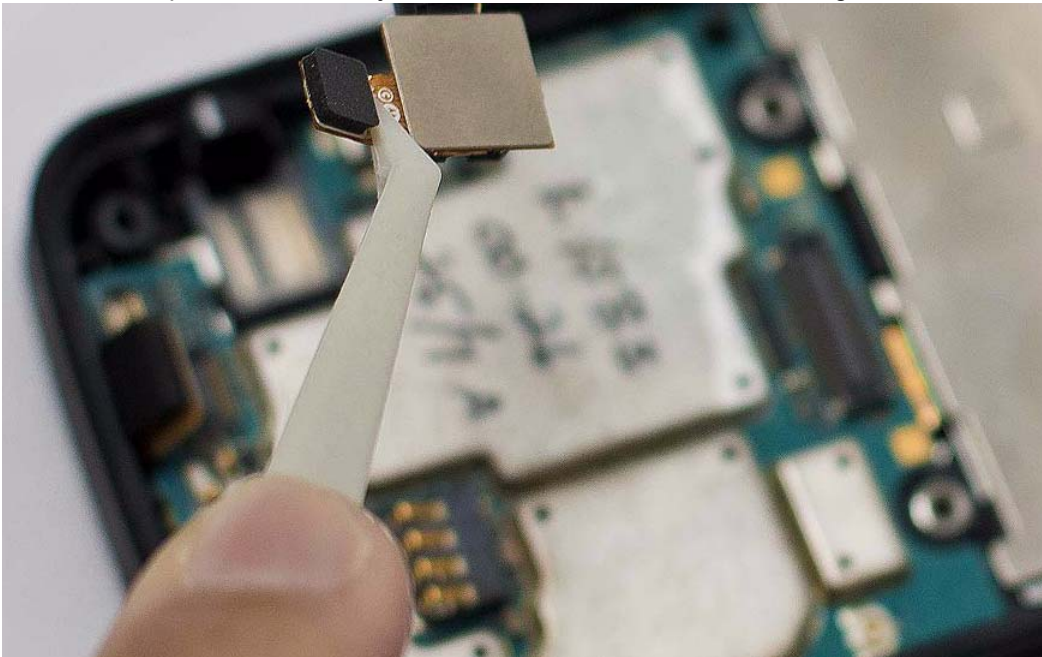


Figure 5-17. Audio jack flex removal

5.6.7 LCD Display Disassembly

1. Lift the PCB slightly from the right corner using tweezers as shown in Figure 5-18.

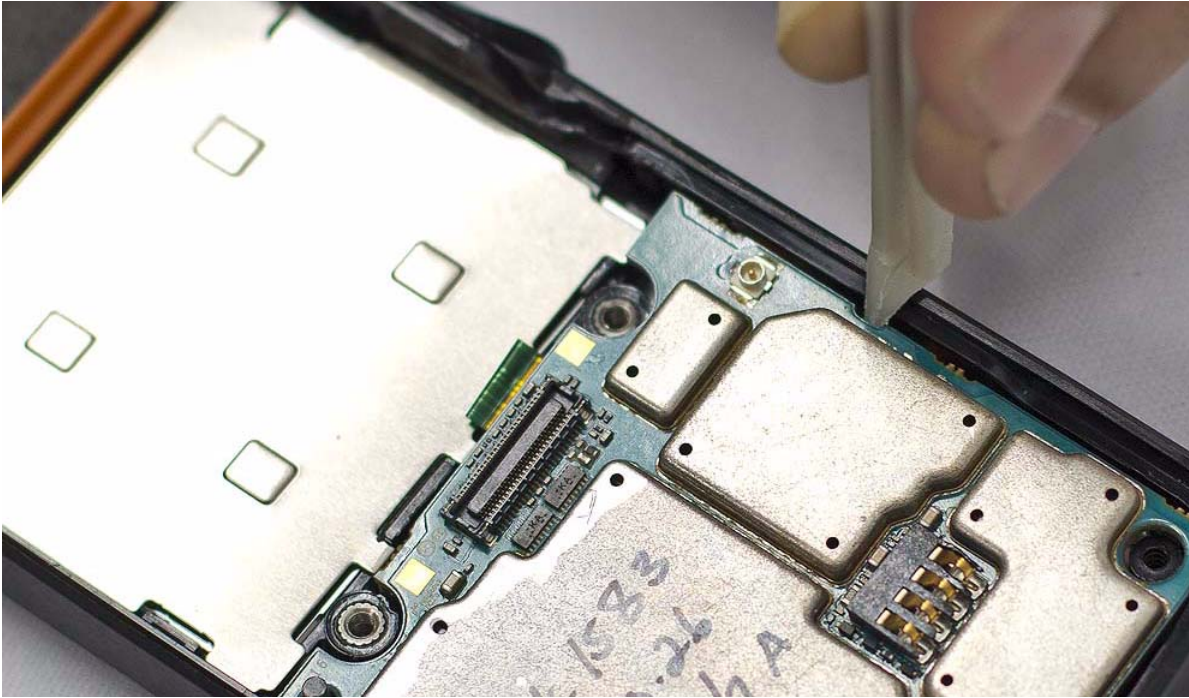


Figure 5-18. LCD display disassembly

2. Remove the main PCB from the front housing by turning it slightly counter-clockwise to release the PCB retainer catch.
3. Lift the PCB upwards and away from the PCB guide pin as shown in Figure 5-19.

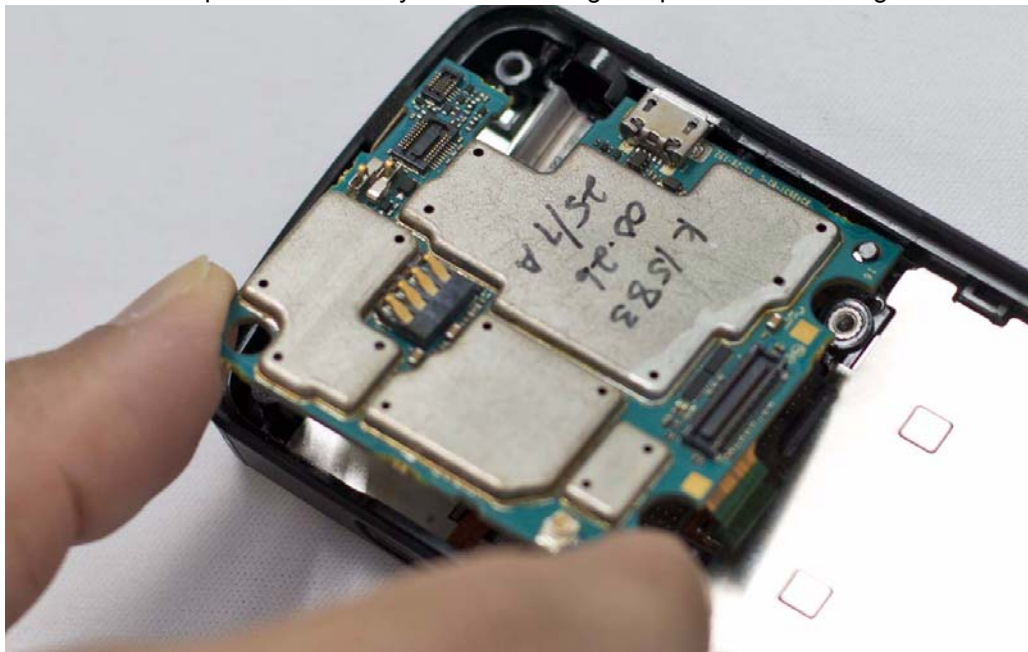


Figure 5-19. Lifting of PCB board

4. Remove the main PCB from the front housing by unlatching its flex connector tab as shown in Figure 5-20.

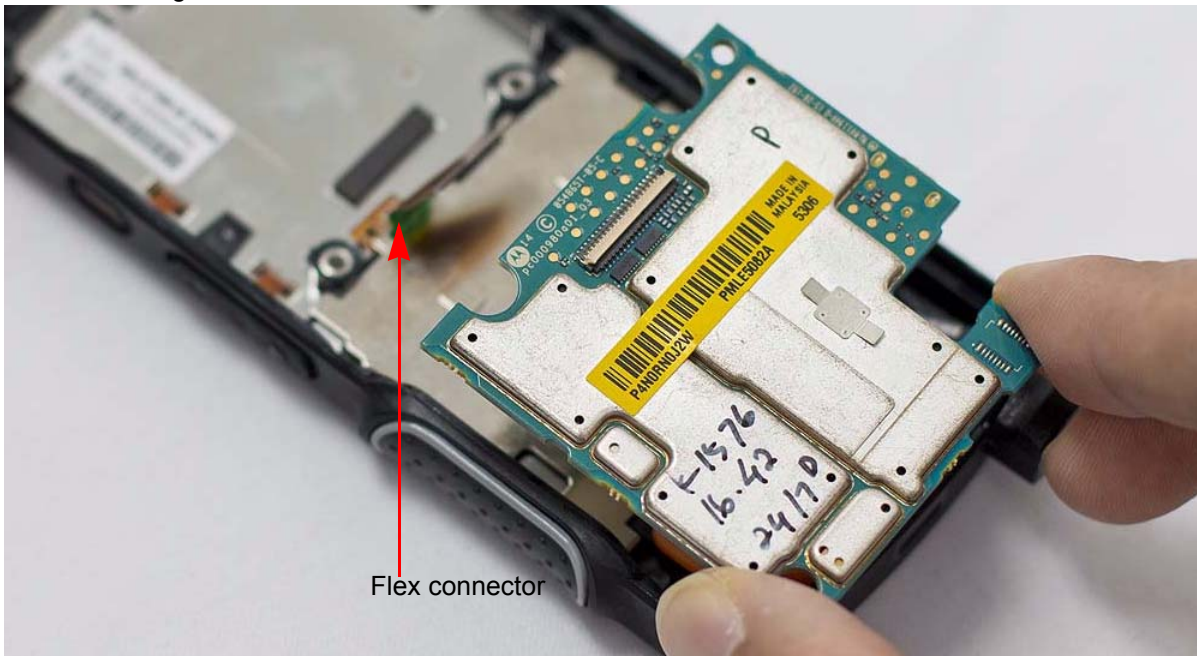


Figure 5-20. PCB board removal

5. Remove the speaker seal as shown in Figure 5-21.

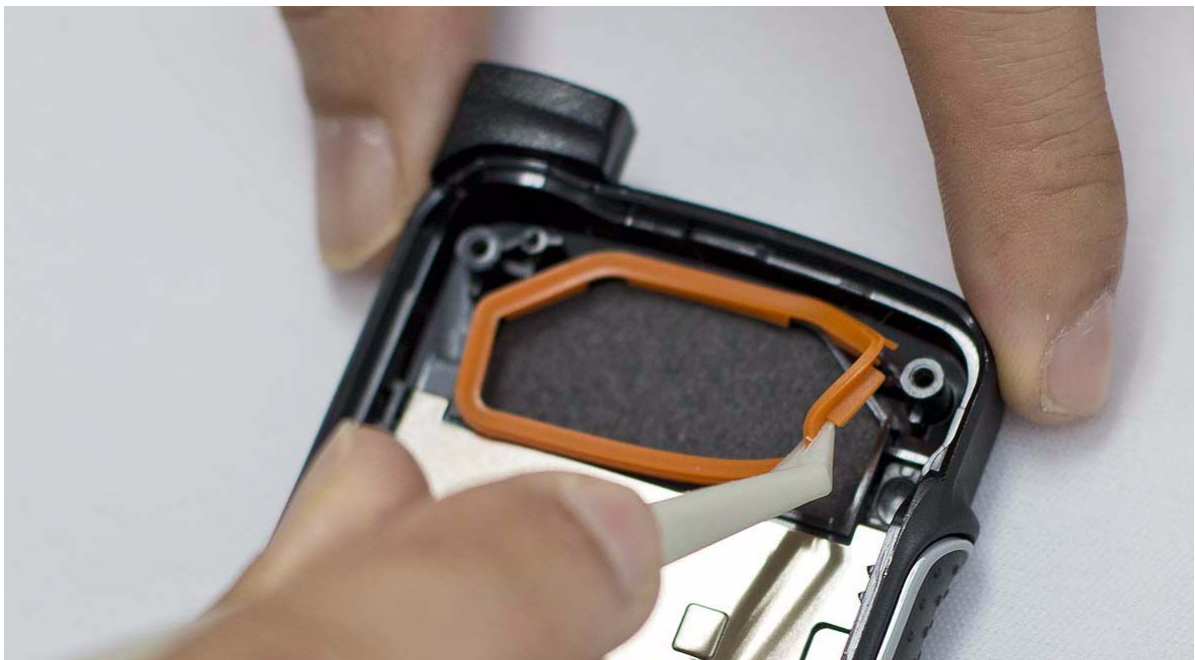


Figure 5-21. Speaker seal removal

6. Unlatch the display retainer lock as shown in Figure 5-22. Remove the display retainer by sliding it upwards to clear the PCB retainer catch as shown in Figure 5-23.

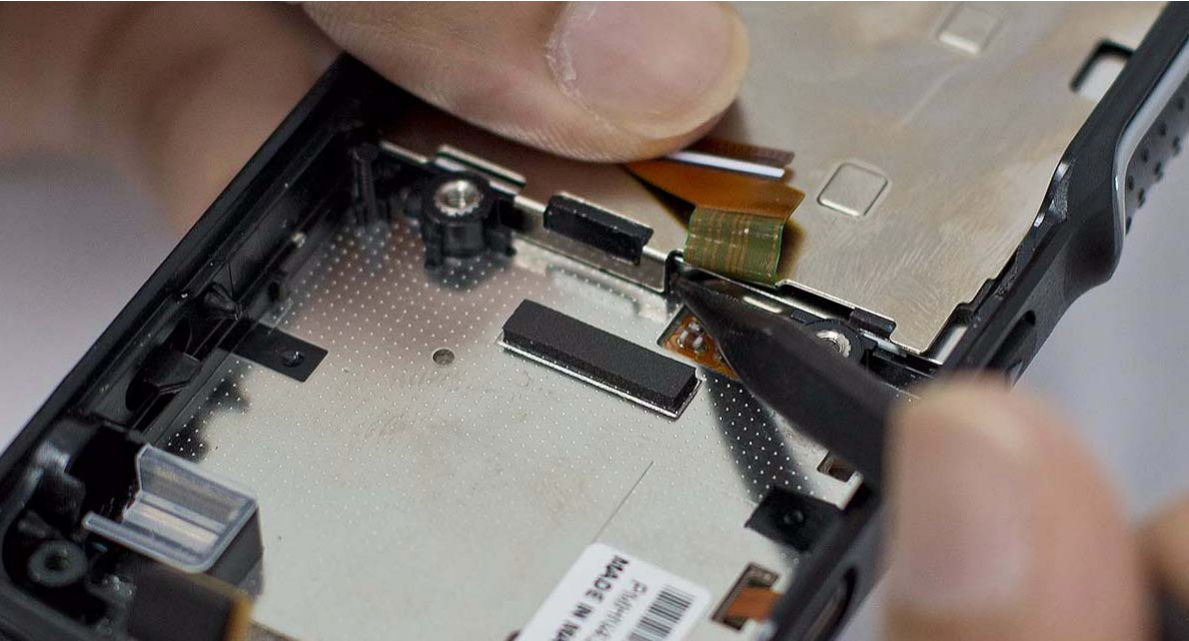


Figure 5-22. Display retainer lock removal

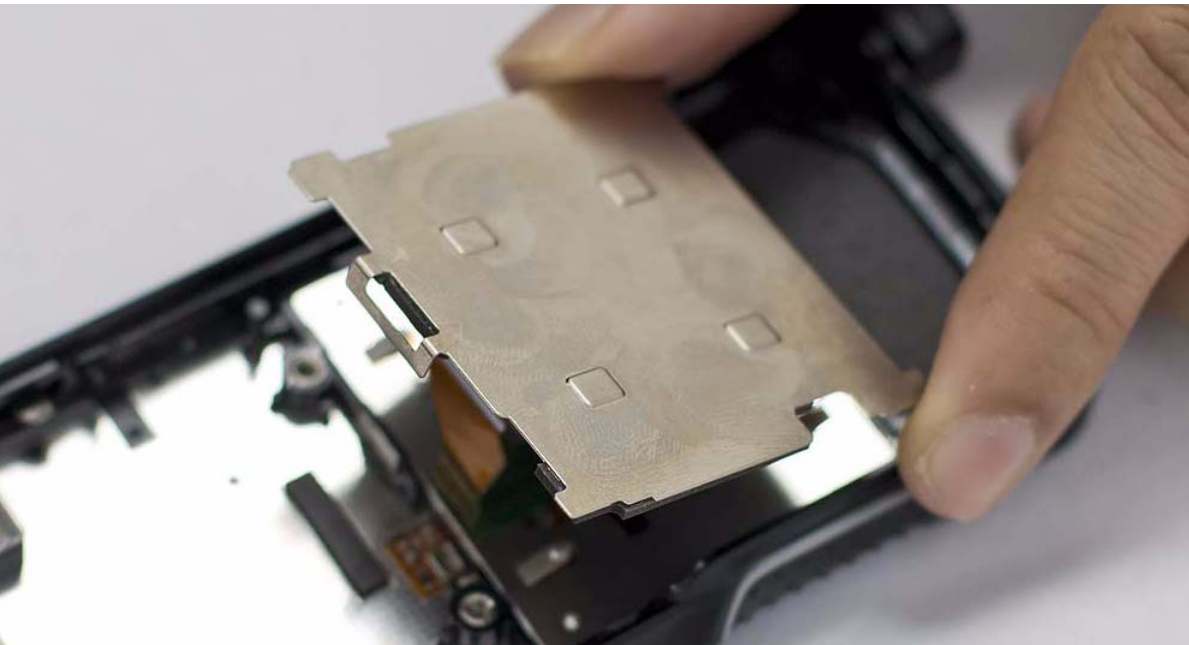


Figure 5-23. Display retainer disassembly

7. Remove the LCD display as shown in Figure 5-24. Be careful not to damage the flex.

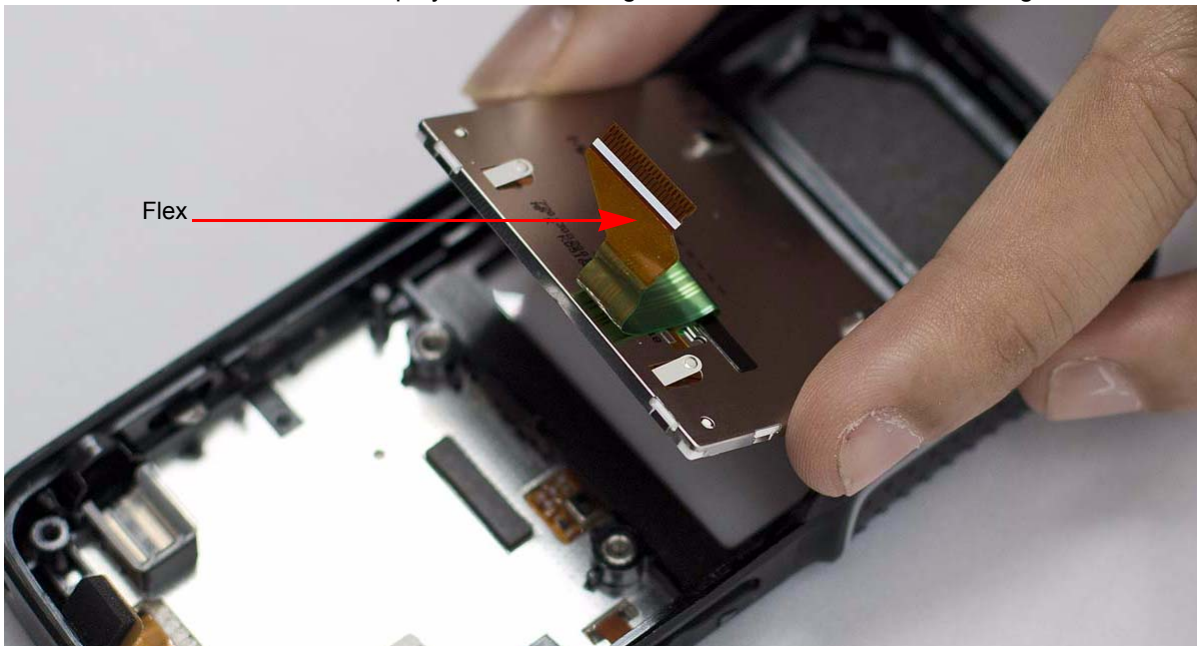


Figure 5-24. LCD display removal

5.7 Radio Re-assembly – Detailed

5.7.1 LCD Display Re-assembly

1. Insert the LCD display as shown in Figure 5-25.

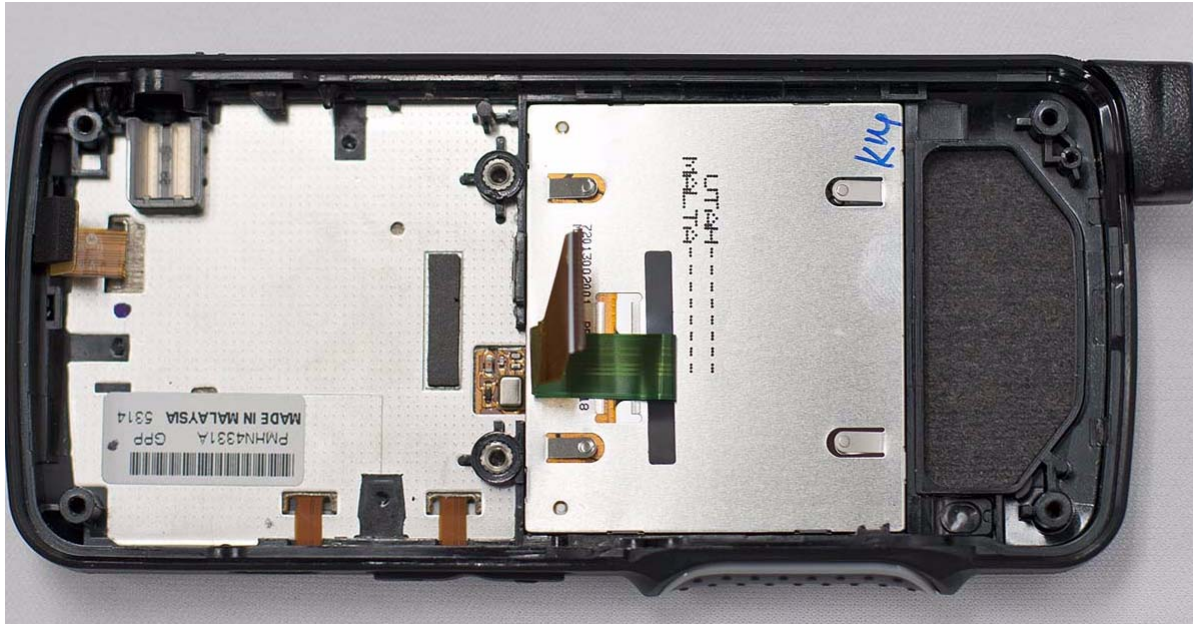


Figure 5-25. LCD display re-assembly

2. Attach the main LCD flex to the main PCB and secure it in place by latching the flex connector tab as shown in Figure 5-26.

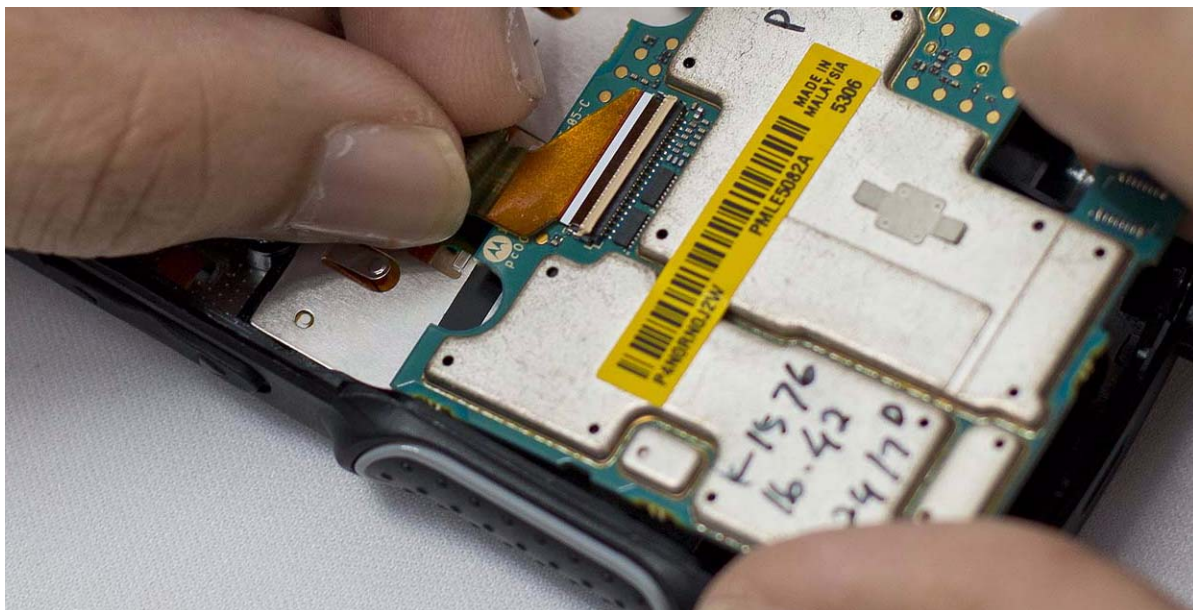


Figure 5-26. Flex connector tab re-assembly

3. Place the main PCB onto the PCB guide pin and pivot the PCB into the front housing by turning it clockwise slightly so that it slots under the PCB retainer catch as shown in Figure 5-27.

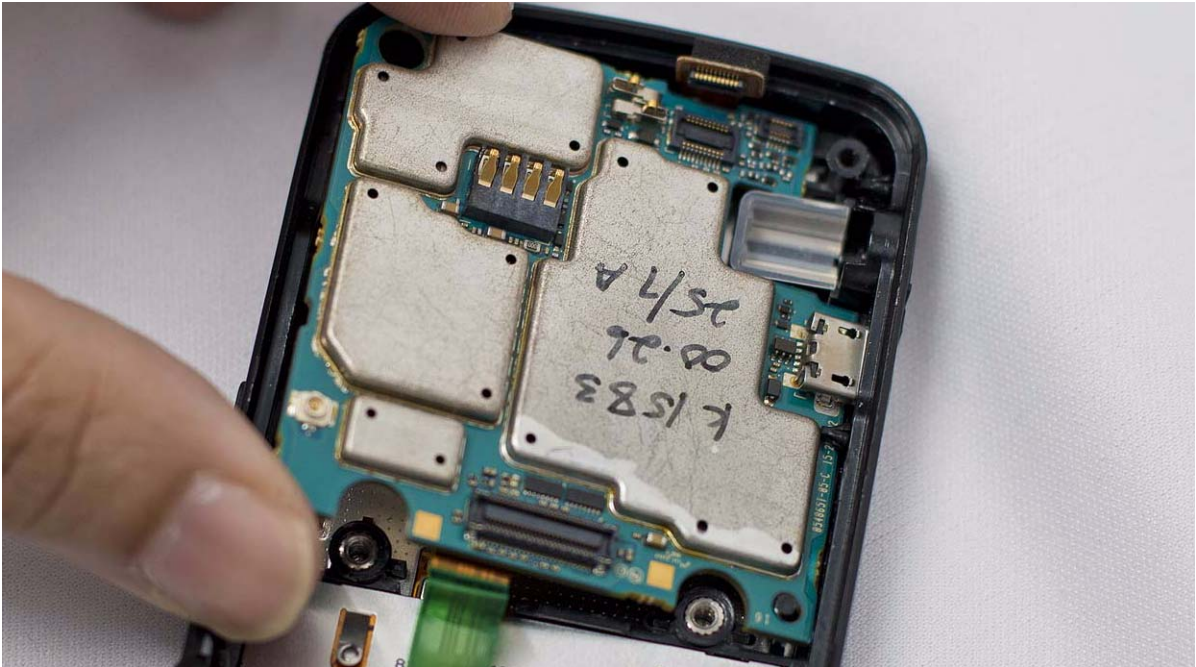


Figure 5-27. PCB board re-assembly

4. Press down on the display flex to flatten it as shown in Figure 5-28.

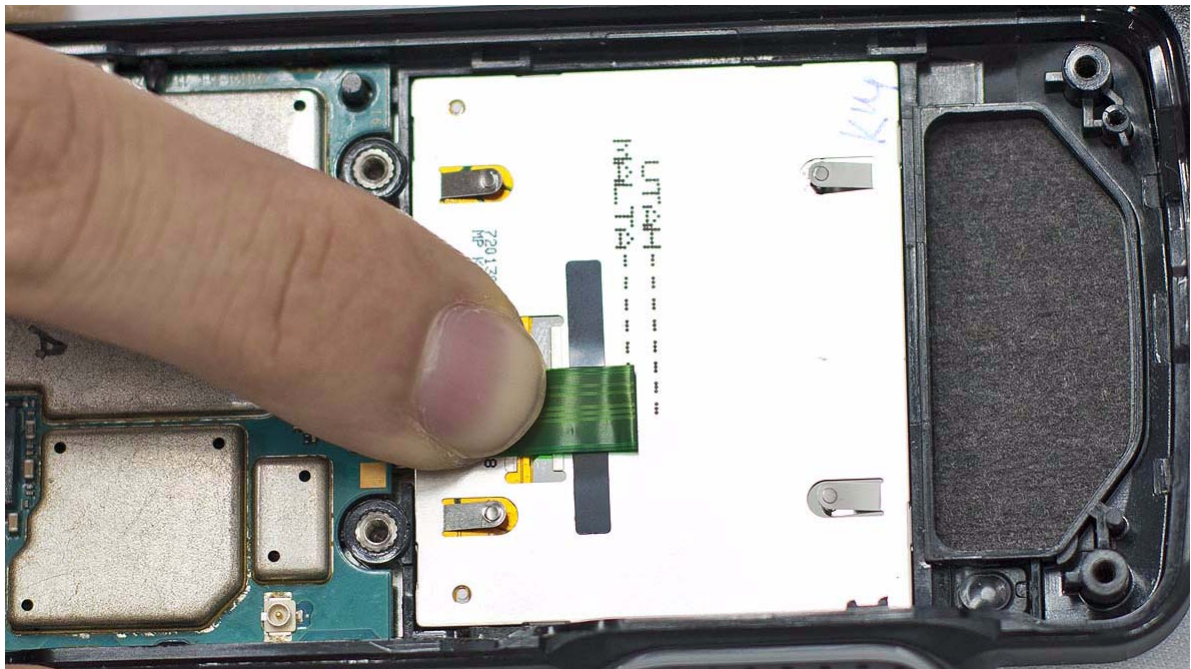


Figure 5-28. Display flex flattening

5. Insert the display retainer slightly higher than the display module and slide it to fit below the PCB retainer catch as shown in Figure 5-29.

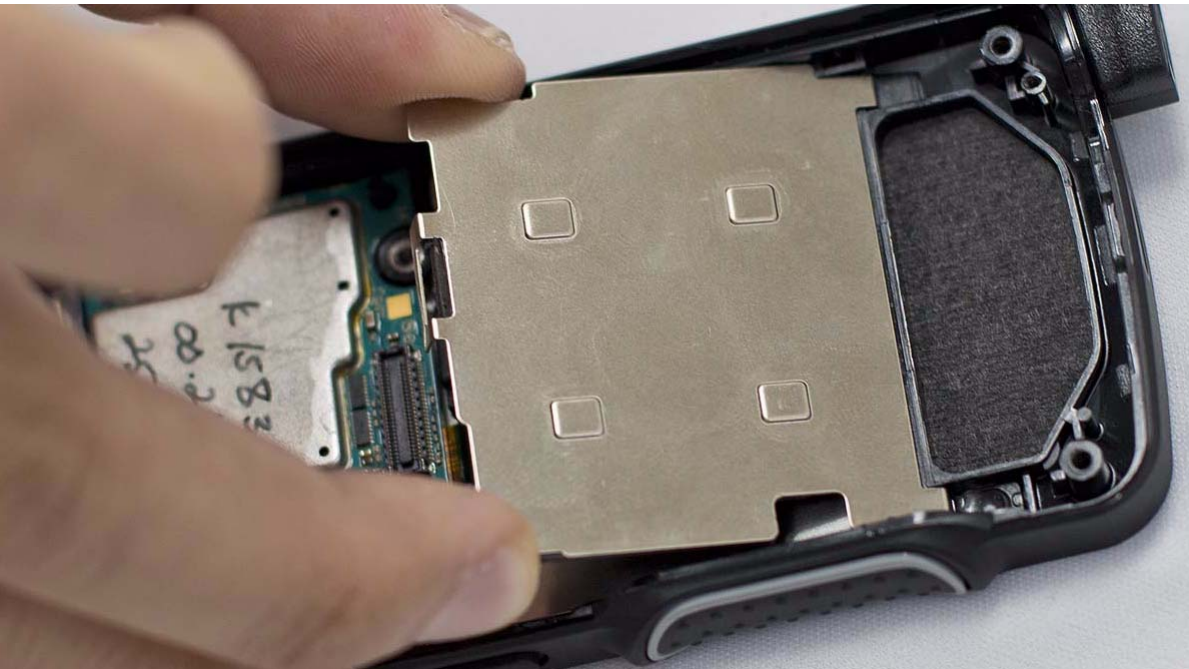


Figure 5-29. Display retainer re-assembly

6. Press down the display retainer lock to secure the display retainer as shown in Figure 5-30.

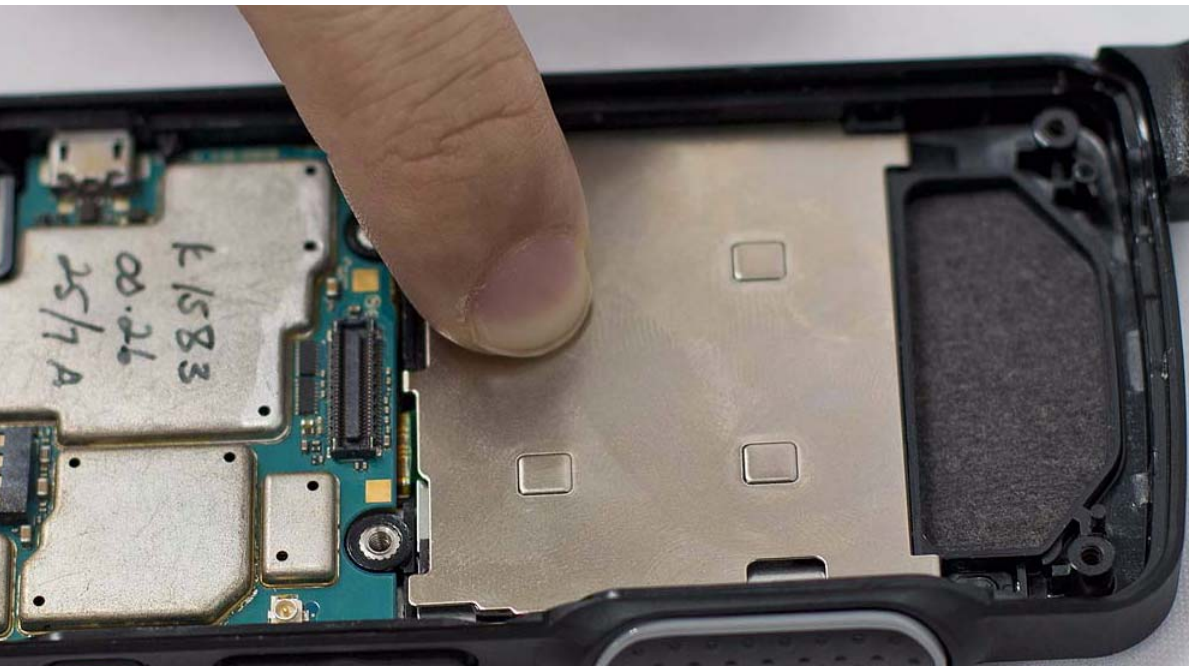


Figure 5-30. Securing the display retainer

7. Insert the speaker seal using a plastic tweezer as shown in Figure 5-31.

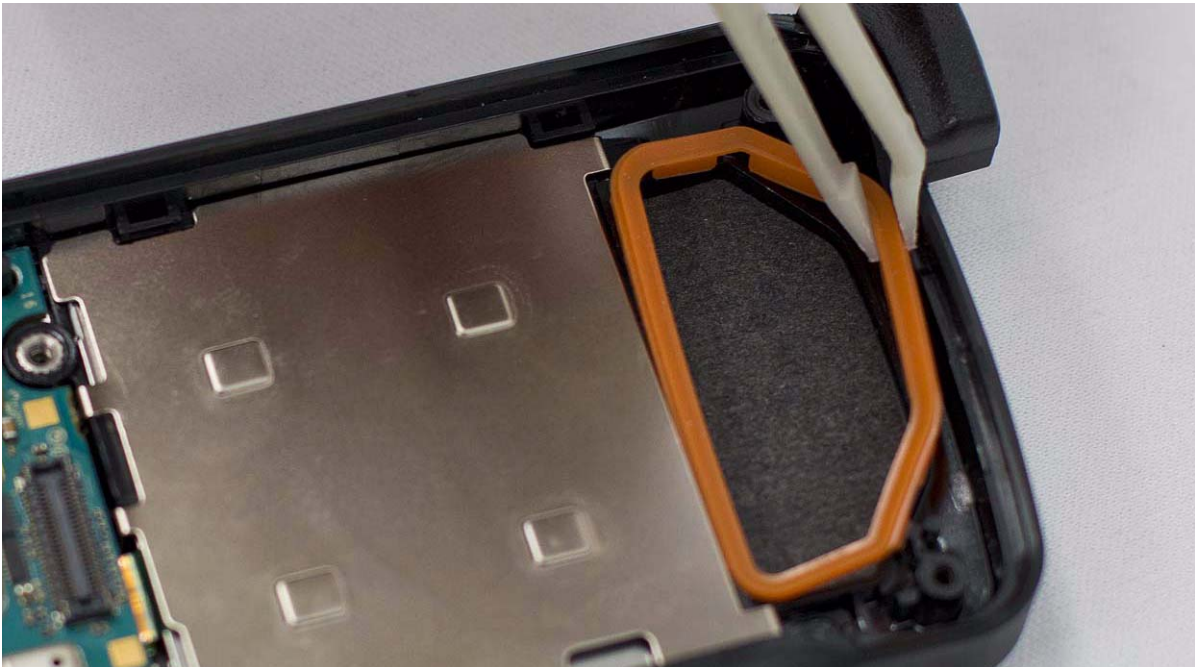


Figure 5-31. Speaker seal re-assembly

5.7.2 Audio Jack Flex Re-assembly

1. Place the audio jack flex into its recess on the front housing as shown in Figure 5-32.



Figure 5-32. Audio jack flex connector re-assembly

2. Attach the audio jack flex connector and keypad flex connector to the main board as shown in Figure 5-33.

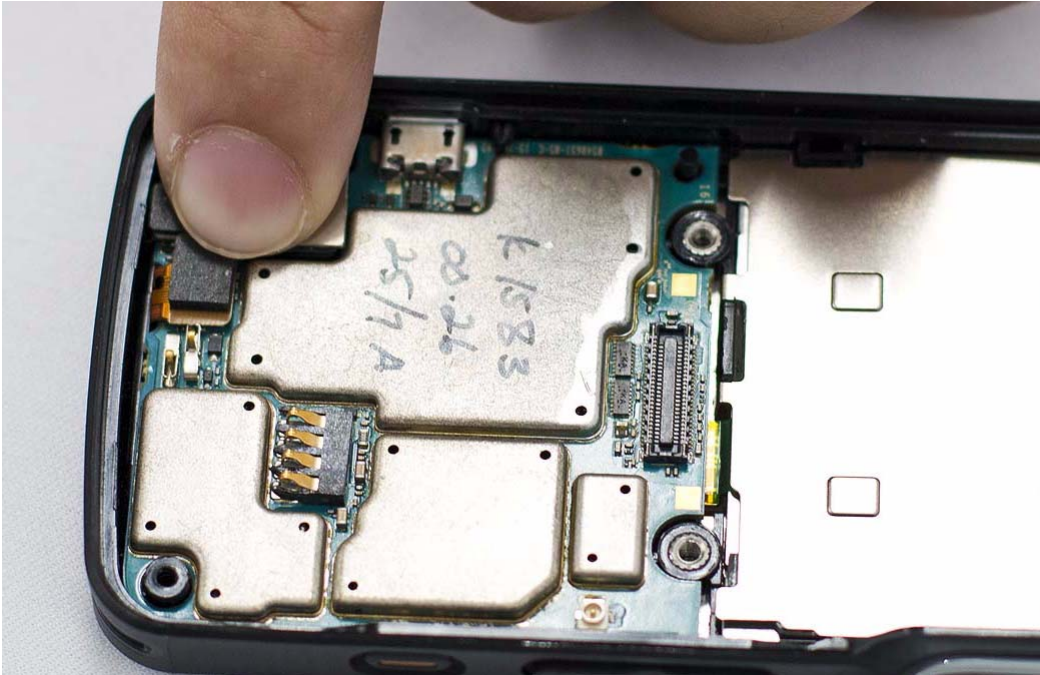


Figure 5-33. Audio jack flex connector and keypad connector re-assembly

5.7.3 Interface Board Re-assembly

1. Insert the interface board into the front housing by sliding it under the PCB retainer catch as shown in Figure 5-34.

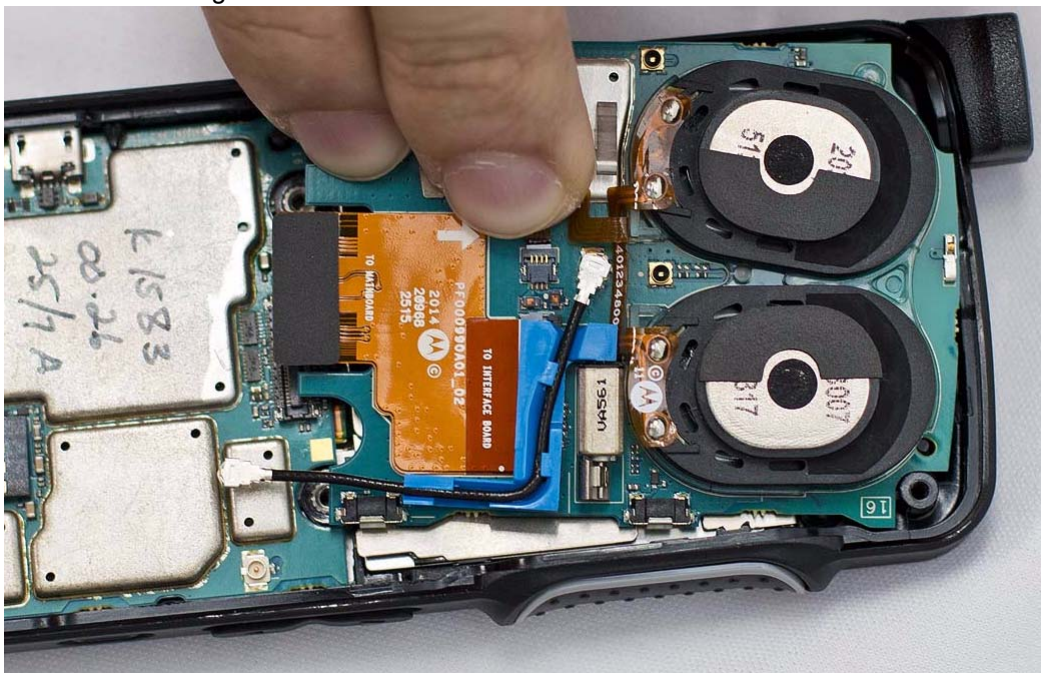


Figure 5-34. Interface board re-assembly

2. Attach the board-to-board flex cable to the main board connector and secure it by latching the flex connector tab as shown in Figure 5-35.

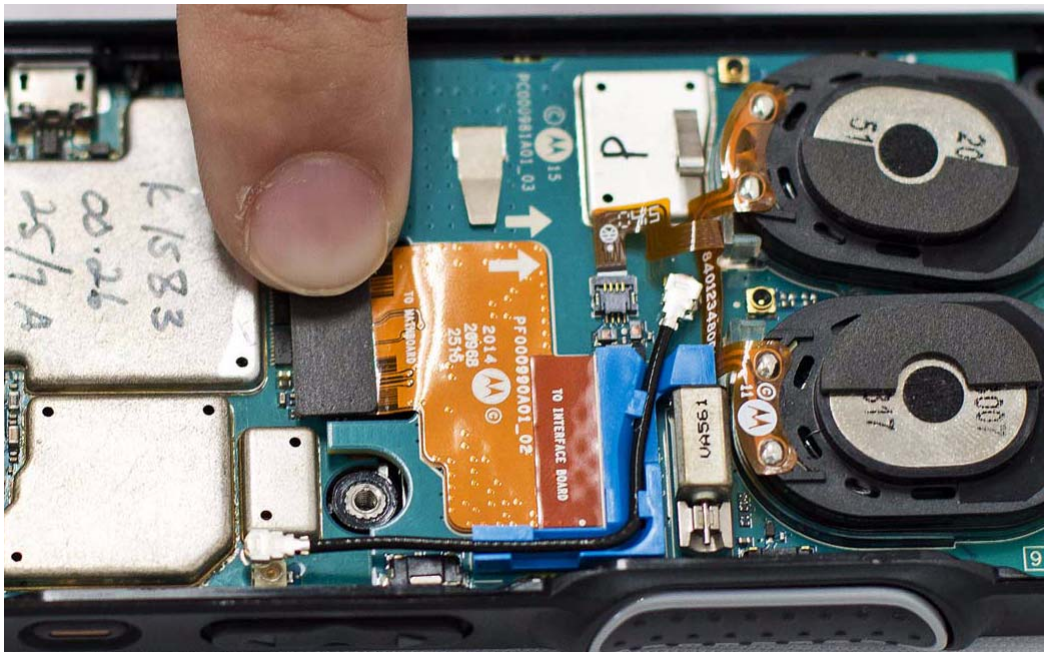


Figure 5-35. Board-to-board flex cable re-assembly

3. Plug in the coax cable connector to the main board as shown in Figure 5-36.

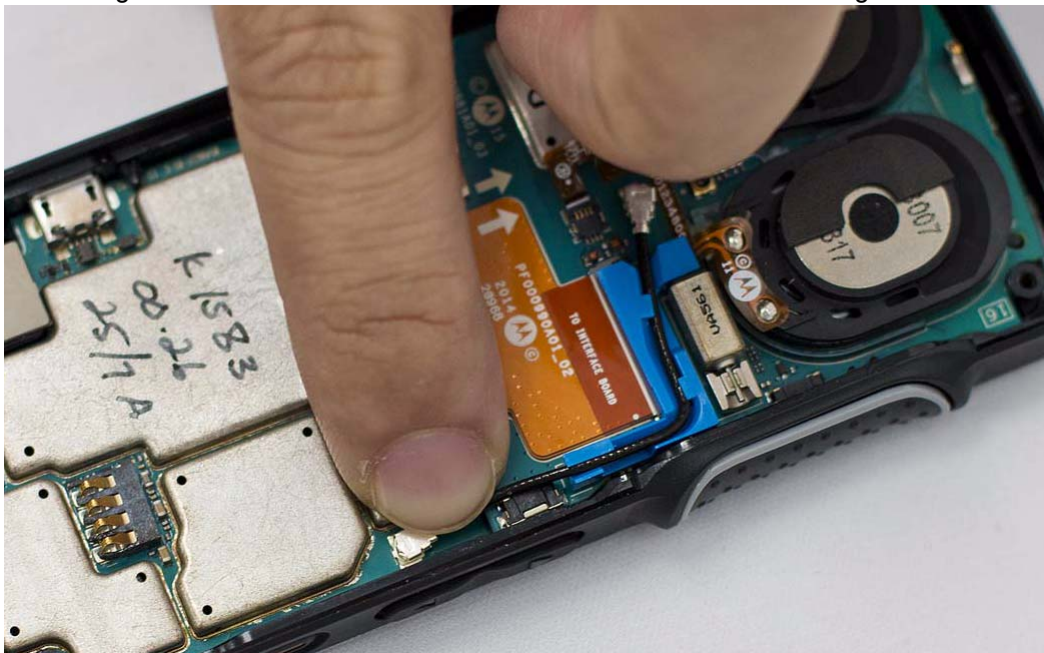


Figure 5-36. Coax cable connector re-assembly

5.7.4 Internal Antenna Re-assembly

1. Insert the internal antenna using tweezers as shown in Figure 5-37.

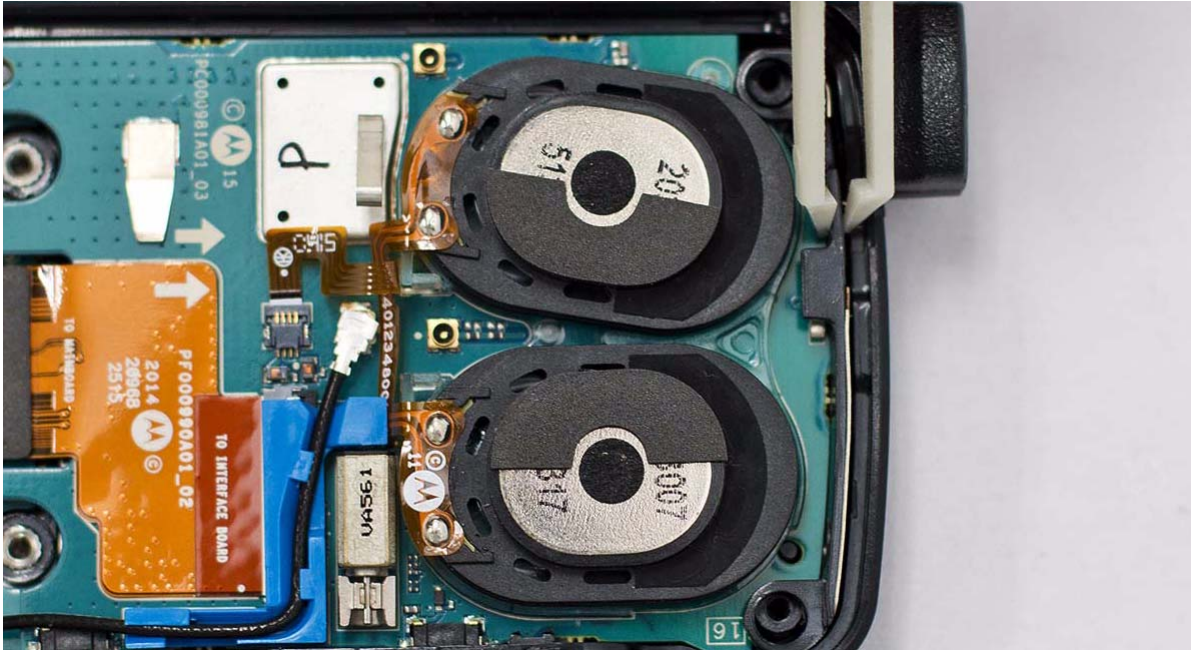


Figure 5-37. Internal antenna re-assembly

5.7.5 Back Housing Re-assembly


1. Place the back housing onto the front housing as shown in Figure 5-38.



Figure 5-38. Back housing re-assembly

2. Using a torque wrench, screw in the corner screws at all four corners from back housing marked (a,b,c,d) by using the 6IP Torx Plus as shown in Figure 5-39 and Figure 5-40.

- Using a torque wrench, screw in the two middle screws in the battery compartment of the back housing marked (e and f) by using the 6IP Torx Plus as shown in Figure 5-39.



Caution Do not over torque these screws. Please refer to the torque chart on Table 5-4.



Figure 5-39. Screws re-assembly



Figure 5-40. Screws re-assembly completed

4. Insert the battery into the battery compartment on the back housing as shown in Figure 5-41.



Figure 5-41. Battery re-assembly

5. Insert the battery door as shown in Figure 5-42.



Figure 5-42. Battery door re-assembly

6. Fasten the battery door latch as shown in Figure 5-43.



Figure 5-43. Latching battery door

7. Attach the antenna to the radio as shown in Figure 5-44.



Figure 5-44. Antenna re-assembly

8. Using a torque wrench, screw in the antenna screw with the 4IP Torx Plus screwdriver as shown in Figure 5-45.

NOTE a) The antenna must be fully inserted before screwing in the antenna screw.
b) Ensure that there is no gap between the antenna and the housing.


 Caution	Tighten the antenna screw with tightening torque as below
	→ 0.8lbf. in. or
	→ 0.09 N-m or
	→ 0.92 kgf-cm
<u>DO NOT</u> over tighten the antenna screw.	



Figure 5-45. Antenna screw re-assembly

9. Insert the antenna plug to the back housing as shown in Figure 5-46.



Figure 5-46. Antenna plug re-assembly

10. Insert a new escutcheon cover to the back housing as shown in Figure 5-47.



Figure 5-47. New escutcheon cover re-assembly

11. Turn on the radio.

5.7.6 Holster Re-attachment

1. Attach the holster to the front housing as shown in Figure 5-48.



Figure 5-48. Holster re-attachment

5.8 Radio Exploded Mechanical Views and Parts Lists

5.8.1 GOB Model Exploded View and Parts List

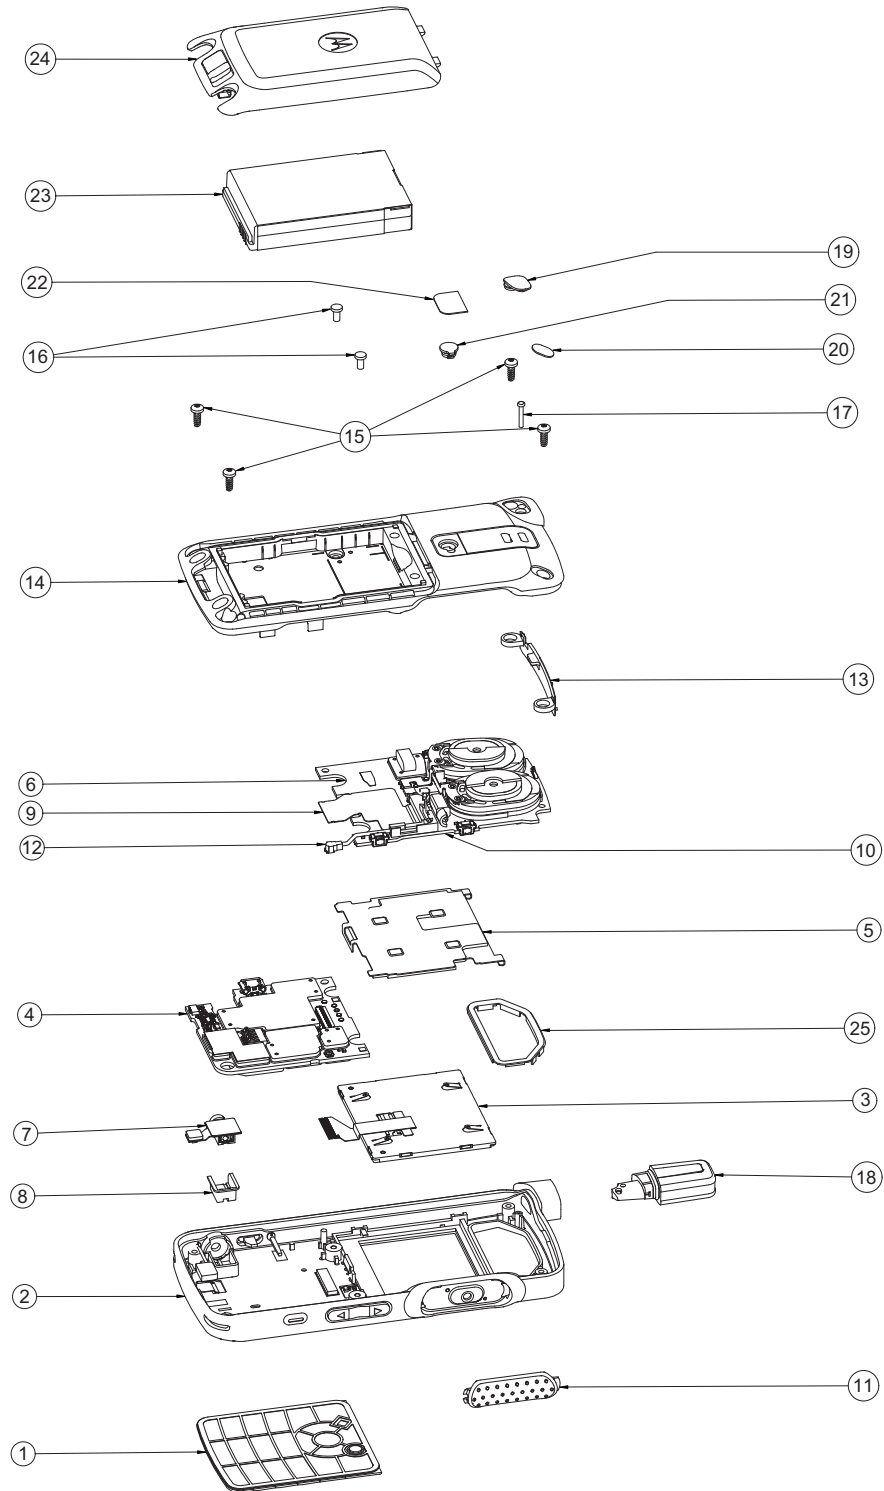


Figure 5-49. GOB Model Exploded View

Item	Description	Part Number
1	Keypad Assembly (English)	Please refer to Item no.2 (Part of Front Housing Assembly)
2	Front Housing Assembly with English Keypad	PMHN4332_
3	LCD Module	72013002001
4	Main Board Assembly Service Kit for UHF1 Main Board Assembly Service Kit for UHF2 Main Board Service Kit for 800MHz Main Board Service Kit for 900MHz	PMLE5082_S PMLE5101_S PMLF4169_S PMLF4171_S
5	Display Bracket Assembly	0104044J48
6	Interface Board Service Kit (Consist of items 9,10 and 12) for UHF1 Interface Board Service Kit (Consist of items 9,10 and 12) for UHF2 Interface Board Service Kit (Consist of items 9,10 and 12) for 800MHz & 900MHz	PMLE5083_S PMLE5102_S PMLF4170_S
7	Audio Jack Flex Assembly	0104043J45
8	Audio Jack Boot	32012157001
9	Board-to-Board Flex	0104067J95
10	Coax Cable Holder	HN000741A01
11	PTT Paddle	ST000183A01
12	Coax Cable Connector	CB000331A01
13	Internal Antenna UHF Internal Antenna 800/900 MHz MHz	85012037001 85012071001
14	Back Housing Assembly	PMHN4330_
15	Corner Screws	03012043001
16	Middle Screws	0386104Z09
17	Antenna Screw	03012044001
18	Stubby Antenna	Please refer to Section 1.4 "Model Charts" for antenna options
19	Antenna Plug	38012025001
20	Escutcheon Cover	33012045001
21	RF Plug	28012032001
22	Product Nameplate - NAG Product Nameplate - NAG 800MHz Product Nameplate - NAG 900MHz	33012041012 33012041013 33012041014
23	Battery Standard (BT70) Battery HI-CAP (BT90) Battery Ultra Hi-Cap (BT100)	PMNN4425_ HKNN4013_ PMNN4468_

Item	Description	Part Number
24	Battery Door Standard (BT70) Battery Door HI-CAP (BT90) Battery Cover Ultra Hi-Cap (BT100)	PMLN6000_ PMLN6001_ PMLN6745_
25	Audio Seal	32012146001

Table 5-3. GOB Model Exploded View Parts List

5.9 Torque Chart

Table 5-4 lists the various screws by part number and description, followed by the torque values in different units of measure. Torque all screws to the recommended value when assembling the radio.


 Caution	A proper torque screwdriver must be used during installation to ensure that these torque values are not exceeded.
---	---

Table 5-4. Torque Specifications for Screws

Part Number	Description	Qty	Driver/ Socket	Torque		
				N-m	lbs-in	kgf-cm
03012044001	Screw Antenna	1	4IP Torx Plus	0.09	0.80	0.92
0386104Z09	Screw Torx Plus 6IP Middle	2	6IP Torx Plus	0.20	1.80	2.07
03012043001	Screw Torx T-6, M2 Corner	4	6IP Torx Plus	0.20	1.80	2.07

Notes

Chapter 6 Basic Troubleshooting

6.1 Introduction

This chapter contains error codes and board replacement procedures. If the board does not pass all the performance checks in Chapter 3 or exhibits an error code listed below, then the circuit board should be replaced. If repair requires knowledge of details of component level troubleshooting, please send radio to a Motorola Service Center or listed in Motorola Authorised Dealers listed in Appendix B.

NOTE To access the various connector pins, use the housing eliminator/test fixture along with the diagrams found in this section of the manual. (See the section, "Service Aids" on page 2-2, for the appropriate Motorola service aids and tools parts numbers.)

6.2 Power-Up Error Codes

Upon powering up, the radio performs certain tests to determine if its basic electronics and software are in working order. Any error detected has an associated error code that is presented on the radio display. These error codes are intended to be used by a service technician when the radio generates the Self Test Fail Tone. If these tests are successfully completed, the radio will generate the Self Test Tone.

There are two classes of detectable errors, fatal and non-fatal. If it is considered as a fatal error, then the normal radio operation will be inhibited. Fatal errors include hardware errors detected by the microprocessor and certain memory errors. These memory errors include incorrect ROM checksum, incorrect RAM checksum, and incorrect checksums of codeplug (Persistent Storage) blocks that contain operating parameters. If the codeplug block operating parameters are corrupted, operation of the unit on the proper frequency, system, and group are in question. Attempts to use this information could provide the user with a false sense of security that others are receiving his messages. Corrupted codeplug blocks of call IDs, or their associated aliases are considered non-fatal errors. While the user may be inconvenienced, normal communication is still possible.

Table 6-1. Power-Up Error Codes

Error Code	Description	Error Type	Corrective Action
ERROR 01/02	Call ID or associated aliases codeplug block checksum is wrong.	Non-Fatal	Normal communication is still possible, but the user may be inconvenienced. Reprogram codeplug.
ERROR 01/22	Tuning Codeplug block checksum is wrong.	Non-Fatal	Normal communication is still possible.
FAIL 01/82	External Codeplug block checksum is wrong.	Fatal	Reprogram codeplug.
FAIL 01/92	Secure Codeplug checksum error	Fatal	Reprogram codeplug.
FAIL 01/A2	Tuning Codeplug block checksum is wrong.	Fatal	Reprogram codeplug.
FAIL 01/81	ROM Checksum is wrong.	Fatal	Send radio to Motorola Depot to reprogram Flash Memory

Table 6-1. Power-Up Error Codes (Continued)

Error Code	Description	Error Type	Corrective Action
FAIL 01/88	Radio RAM Test Failure.	Fatal	Retest radio by turning it off and turning it on again. If message reoccurs, replace main board or send radio to nearest Motorola Depot.
FAIL 01/90 or FAIL 02/90	General hardware test failure.	Fatal	Retest radio by turning it off and turning it on again. If message reoccurs, replace main board or send radio to nearest Motorola Depot.
FAIL 02/81	DSP ROM Checksum is wrong.	Fatal	Send radio to Motorola Depot to reprogram Flash Memory
FAIL 02/82	DSP RAM1 test failure.	Fatal	Retest radio by turning it off and turning it on again. If message reoccurs, replace main board or send radio to nearest Motorola Depot.
FAIL 02/84	DSP RAM2 test failure.	Fatal	Retest radio by turning it off and turning it on again. If message reoccurs, replace main board or send radio to nearest Motorola Depot.
FAIL 02/88	DSP RAM test failure.	Fatal	Retest radio by turning it off and turning it on again. If message reoccurs, replace main board or send radio to nearest Motorola Depot.
FAIL 02/C0	DSP ROM Checksum is wrong.	Fatal	Retest radio by turning it off and turning it on again. If message reoccurs, replace main board or send radio to nearest Motorola Depot.
No Display	Display module is not connected properly. Display module is damaged.	Fatal	Check connection between main board and display module. Replace with new display module.

6.3 Operational Error Codes

During radio operation, the radio performs dynamic tests to determine if the radio is working properly. Problems detected during these tests are presented as error codes on the radio's display. The presence of an error code should prompt a user that a problem exists and that a Motorola Authorized MOTOTRBO dealer should be contacted. Use Table 6-2 to aid in understanding any particular operational error codes.

Table 6-2. Operational Error Codes

Error Code	Description	Error Type	Corrective Action
FAIL 001	Synthesizer Out-of-Lock.	Non-Fatal	Reprogram the codeplug.
FAIL 002	Personality checksum or system block error.	Non-Fatal	Reprogram the codeplug.

Notes

Chapter 7 Accessories

7.1 Introduction

Motorola provides the following approved accessories to improve the productivity of a digital portable two-way radio.

For a list of Motorola-approved antennas, batteries and other accessories, visit the following web site: <http://www.motorolasolutions.com>

Contact your dealer on the availability of these accessories.

7.1.1 Antennas

Part No.	Description
PMAE4076_	Antenna Kit, 420 – 445 MHz
PMAE4077_	Antenna Kit, 438 – 470 MHz
PMAE4078_	Antenna Kit, 403 – 425 MHz
PMAE4091_	Stubby Antenna Kit, 450 – 490 MHz
PMAE4092_	Stubby Antenna Kit, 480 – 512 MHz
PMLN6040_	Mounting kit, antenna (Pack of 10 screws and plugs)
PMAF4017_	Antenna Kit - 800MHz
PMAF4018_	Antenna Kit - 900MHz
PMLN6040_	Antenna Mounting Kit, pack of ten screws and plugs

7.1.2 Audio

Part No.	Description
PMLN5957_	Surveillance Earpiece with in-line Microphone and PTT
PMLN5958_	Swivel Earpiece with in-line Microphone and PTT
PMLN7052_	1-Wire Surveillance Kit for OCW/MCW
PMLN7156_	Earbud with in-line microphone and PTT, Mag One
PMLN7157_	Two Wire with Trans Tube, Black
PMLN7158_	Surveillance Earpiece with in-line Microphone and PTT
PMLN7159_	Adjustable D-style earpiece with in-line Microphone and PTT, black
PMLN7181_	Flexible-Fit Swivel Earpiece with Boom Microphone
PMLN7189_	Swivel Earpiece with in-line Microphone and PTT
PMLN7203_	Flexible-Fit Swivel Earpiece with Boom Microphone, Multipack
RLN6283_	Replacement Foam Earpad and Windscreen
RLN6490_	XBT Behind-the-Neck, Non-Secure Wireless Heavy Duty Headset
RLN6491_	XBT Overhead, Non-Secure Wireless Heavy Duty Headset
RLN6492_	Headband for XBT Headset, Replacement Part
RLN6493_	Behind the neck band for XBT Headset, Replacement Part
RLN6495_	Boom Mic for XBT Headset, replacement part
RLN6496_	Cooling Pads for XBT Headset, replacement part
RLN6497_	Hygiene Kit for XBT Headset, replacement part
RLN6498_	Universal 5V PSU for XBT Headset, replacement part

7.1.3 Batteries

Part No.	Description
PMNN4425_	Battery BT70 (1370 mAh Lithium Ion)
PMNN4468_	Battery BT100x (2300 mAh Lithium Ion)
HKNN4013_	Battery BT90 (1800 mAh Lithium Ion)

7.1.4 Bluetooth

Part No.	Description
89409_	HK200 Bluetooth Headset
NNTN8125_	Wireless Accessory Kit, standard pair, 12-inch cable
NNTN8126_	Wireless Accessory Kit, standard pair, 9-inch cable
NNTN8127_	Operations Critical Wireless Push-To-Talk POD (US)
NTN2575_	Earpiece with 9-inch Cable (for use with Bluetooth Pod)
NNTN8189_	Bluetooth Accessory Kit, standard pair, 12-inch Cable, No Charger

NNTN8191_	Bluetooth Pod, No Charger
NNTN8296_	Wireless Covert Kit, includes two sets of 2-Wire Earbuds (1 Black and 1 White), 1-Wire Earbud (Black), and a 3.5 mm Adapter to plug into any offthe-shelf headphones
NNTN8385_	Wireless Neckloop Y-adapter and retention hook for Completely Discreet Kit
RLN4922_	Completely Discreet Earpiece Kit
RLN6492_	Headband for XBT Headset, replacement part
RLN6491_	XBT Overhead, Non-Secure Wireless Heavy Duty Headset
RLN6500_	MOTOTRBO Bluetooth Accessory Kit w/NA Power Supply
RLN6500_	Swivel Earpiece with In-Line Microphone for Bluetooth Accessory Kit Pod, Pack of 3
PMLN7052_	Operations Critical Wireless 1-Wire Surveillance kit with translucent tube

7.1.5 Cable

Part No.	Description
PMKN4128_	Micro USB Programming Cable

7.1.6 Carry Devices

Part No.	Description
PMLN7040_	Soft Leather Accessory Carry Case with 1.5-Inch Quick Disconnect Swivel Clip
PMLN6074_	Wrist Strap
PMLN5956_	Carry Holster

7.1.7 Chargers

Part No.	Description
PMPN4009_	Micro USB Charger (US) with PWR SUPPLY, SMPS, MICRO USB, US
PMLN5916_	Charger, Multi Unit SL Series (US Plug)
SPN5547_	Micro USB Single-Unit Plug-In Charger
PMLN6358_	SL Series Tri-Unit Charger
PMPN4066_	Micro USB Travel Charger/Vehicular Charger Cigarette Lighter Adapter with Coil Cord

7.1.8 Power Supplies

Part No.	Description
PS000042A11	Standard Micro-USB Single-Unit Rapid Rate 5V/1A, Switch Mode Plug-In Power Supply, 5W, 100V-240V (US/JP plug)
PS000042A18	Standard Micro-USB Single-Unit Rapid Rate 5V/1A, Plug-In Power Supply, 5W, 100V-240V (Brazil plug)
25009298001	Standard Micro-USB Single-Unit Rapid Rate 5V/1A, Plug-In Power Supply, 5W, 100V-240V (US plug)

7.1.9 Miscellaneous Accessories

Part No.	Description
PMLN6000_	Cover, Battery, 1400 mAh Lithium Ion
PMLN6001_	Cover, Battery, High Capacity Lithium Ion
PMLN6745_	Ultra High Capacity Battery Door Kit
AY000269A01	Screen Protector, clear

Appendix A Replacement Parts Ordering

A.1 Basic Ordering Information

When ordering replacement parts or equipment information, the complete identification number should be included. This applies to all components, kits, and chassis. If the component part number is not known, the order should include the number of the chassis or kit of which it is a part, and sufficient description of the desired component to identify it.

A.2 Motorola Online

Motorola Online users can access our online catalog at <http://motorolasolutions.com/businessonline>

To register for online access:

- Have your Motorola Customer number available.
- Please go to <http://motorolasolutions.com/businessonline> and click on "Sign Up Now."
- Complete form and submit it.
- Contact your BDM to complete set-up and it will be done within 24 to 48 hours.

Notes

Appendix B Motorola Service Centers

B.1 Servicing Information

If a unit requires further complete testing, knowledge and/or details of component level troubleshooting or service than is customarily performed at the basic level, please send the radio to a Motorola Service Center as listed below.

B.2 Motorola Service Center

1220 Don Haskins Drive
Suite A
El Paso, TX 79936
Tel: 915-872-8200

B.3 Motorola Federal Technical Center

10105 Senate Drive
Lanham, MD 20706
Tel: 1-800-969-6680
Fax: 1-800-784-4133

B.4 Motorola Canadian Technical Logistics Center

Motorola Canada Ltd.
8133 Warden Avenue
Markham, Ontario, L6G 1B3
Tel: 1-800-543-3222
Fax: 1-888-331-9872 or 1-905-948-5970

Notes

Glossary

This glossary contains an alphabetical listing of terms and their definitions that are applicable to portable and mobile subscriber radio products. All terms do not necessarily apply to all radios, and some terms are merely generic in nature.

Term	Definition
Band	Frequencies allowed for a specific purpose.
CPS	Customer Programming Software: Software with a graphical user interface containing the feature set of a radio.
Default	A pre-defined set of parameters.
Digital	Refers to data that is stored or transmitted as a sequence of discrete symbols from a finite set; most commonly this means binary data represented using electronic or electromagnetic signals.
FCC	Federal Communications Commission.
Frequency	Number of times a complete electromagnetic-wave cycle occurs in a fixed unit of time (usually one second).
kHz	kilohertz: One thousand cycles per second. Used especially as a radio-frequency unit.
LCD	Liquid-Crystal Display: An LCD uses two sheets of polarizing material with a liquid-crystal solution between them. An electric current passed through the liquid causes the crystals to align so that light cannot pass through them.
LED	Light Emitting Diode: An electronic device that lights up when electricity is passed through it.
MHz	Megahertz: One million cycles per second. Used especially as a radio-frequency unit.
Micro USB Programming Cable	A cable that allows the CPS to communicate directly with the radio using USB.
PC Board	Printed Circuit Board. Also referred to as a PCB.
Receiver	Electronic device that amplifies RF signals. A receiver separates the audio signal from the RF carrier, amplifies it, and converts it back to the original sound waves.
RF	Radio Frequency: The portion of the electromagnetic spectrum between audio sound and infrared light (approximately 10 kHz to 10 GHz).
RX	Receive.
Signal	An electrically transmitted electromagnetic wave.

Term	Definition
Spectrum	Frequency range within which radiation has specific characteristics.
Squelch	Muting of audio circuits when received signal levels fall below a pre-determined value. With carrier squelch, all channel activity that exceeds the radio's preset squelch level can be heard.
Transceiver	Transmitter-receiver. A device that both transmits and receives digital signals. Also abbreviated as XCVR.
Transmitter	Electronic equipment that generates and amplifies an RF carrier signal, modulates the signal, and then radiates it into space.
TX	Transmit.
UHF	Ultra-High Frequency.
USB	Universal Serial Bus: An external bus standard that supports data transfer rates of 12 Mbps.



MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2016 Motorola Solutions, Inc. All rights reserved. January 2016.

www.motorolasolutions.com/mototrbo



MN002193A01-AA