



Bell  
Communications  
Research

Bellcore Practice  
BR 007-560-251  
Issue 2, August 1986  
Appendix 1

---

**REMOTE CONSOLE UNIT (RCU)  
FOR THE "PDP\*" 11/70 MINICOMPUTER  
CHANGING PASSWORD AND/OR PROMPT-ID**

---

---

**PROPRIETARY—BELLCORE AND AUTHORIZED CLIENTS ONLY**

This document contains proprietary information that shall be distributed or routed only within  
Bell Communications Research (Bellcore) and its authorized clients, except with written permission of Bellcore.

Prepared by the Information Management Services Division,  
Bell Communications Research, Inc., August 1986.

Copyright © 1986 Bell Communications Research, Inc.  
All rights reserved.

CONTENTS

1. INTRODUCTION . . . . .	1
1.01 PURPOSE . . . . .	1
1.02 REASON FOR REISSUE . . . . .	1
2. GENERAL . . . . .	1
3. INSTRUCTION NOTES . . . . .	1

LIST OF TABLES

TABLE A. PROCEDURE LOOKUP FOR CHANGING PASSWORD AND PROMPT-ID . . . . .	1
---	---

1. INTRODUCTION

1.01 PURPOSE

This practice provides the information for changing the password and/or prompt-ID.

1.02 REASON FOR REISSUE

This practice is being reissued due to divestiture.

2. GENERAL

The following step-by-step instructions to change the password and/or prompt-ID must be followed in order.

Follow programmer manufacturer's instructions when programming or copying Ultraviolet Erasable Programmable Read-Only Memory (UVEPROM).† The UVEPROM is a 2716 (2K × 8 bit) integrated circuit.

†Typical programmers: Data I/O Model 19  
 or  
 Pro-Log M900B  
 etc.,

with associated 2716-type personality module.

3. INSTRUCTION NOTES

Use Table A to locate action required and associated category number. Then follow steps as indicated within specified category.

TABLE A. PROCEDURE LOOKUP FOR CHANGING PASSWORD AND PROMPT-ID

	<Password>	<New Password>
<Standard Prompt>	I. (No Change)	II. (Password Only)
<New Prompt-ID>	III. (Prompt-ID Only)	IV. (Password and Prompt-ID)

- I. No action is required after initial installation.
- II. Follow the steps below to change **only** the password.
  - (a) Remove IC39.
  - (b) Copy device (IC39) to temporary memory.
  - (c) Change location(s) 000H‡ to XXXH (maximum XXXH = 3feH, minimum XXXH = 005H) to password desired. (Refer to BR 007-560-251).

‡An "H" following a number signifies that the number is hexadecimal.

- (d) Change next location (XXXH + 1) to 00H code.
- (e) Check location 400H. If not ffH, then change it to ffH.

- (f) Program new chip (2716).
- (g) Reinstall IC39 (new chip).\*

III. Follow the steps below to change **only** the prompt-ID.

- (a) Remove IC39.
- (b) Copy device (IC39) to temporary memory.
- (c) Change location(s) 400H to YYYYH (maximum YYYYH = 409H) to prompt-ID desired. (Refer to BR 007-560-251.)
- (d) Change next location (YYYYH + 1) to 00H code.
- (e) Check location 000H for previous password. Make sure character codes still exist and last character code equals 00H.
- (f) Program new chip.
- (g) Reinstall IC39 (new chip).\*

IV. Follow steps below to change **both** the password and prompt-ID.

- (a) Remove IC39.
- (b) Copy device (IC39) to temporary memory.
- (c) Change location(s) 000H to XXXXH (maximum XXXXH = 3feH, minimum XXXXH = 005H) to password desired. (Refer to BR 007-560-251.)
- (d) Change next location (XXXXH + 1) to 00H code.
- (e) Change location(s) 400H to YYYYH (maximum YYYYH = 409H) to prompt-ID desired.
- (f) Change next location (YYYYH + 1) to 00H code.
- (g) Program new chip.
- (h) Reinstall IC39 (new chip).\*

\*When reinstalling IC39, be sure to align pin 1 with its proper designation on the RCU CP-1.