

EQUIPMENT TEST LIST

CLEANING AND RECONDITIONING APPARATUS

	CONTENTS	PAGE
1.	GENERAL	1
22.1	GENERAL CLEANING OF EQUIPMENT	2
22.2	SWITCHBOARD CLEANING	2
22.3	197 & 198 SELECTORS	2
22.4	SOLDERLESS CONNECTORS	2
22.5	MISC	2
22.6	946-/947- & 970-/971-TYPE CONNECTORS CLNG	4

1. GENERAL

1.01 This section provides an index and information access system to locate the standard tests applicable to equipment listed in the preceding table of contents. Test classification and frequency of periodic routine are also provided.

1.02 This Equipment Test List (ETL) is reissued to incorporate changes which are indicated by an arrow to the left of each line which has been changed.

1.03 Comments on this section should be made by following the instructions in Bell System Practices (BSP), Section 000-010-015.

1.04 Routine test information is arranged in the following order from left to right: Section number, issue/addendum, test letter or paragraph number, test title, test class, frequency, and the last space is for a locally assigned job number.

1.05 Section 010-300-011 provides Equipment Test List instructions.

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

22.0 CLNG RECOND APP

◆	22.1 CLNG RECOND APP; GENERAL CLEANING OF EQUIPMENT				
◆	TROUBLE TESTS				
◆	069-305-301 (3/1) 3.01 (3.01 - 3.22) GENERAL CLEANING OFFICE EQPT			TT	-----
◆	22.2 CLNG RECOND APP; SWITCHBOARD CLEANING				
◆	FOR ALL UNITS				
◆	069-379-801 (4/0) 3.01 (3.01 - 3.28) SWITCHBOARD EQUIPMENT CLNG			MW 12M	-----
◆	22.3 CLNG RECOND APP; 197 & 198 SELECTORS				
◆	TROUBLE TESTS				
◆	SXS AMA & SXS CAMA TK FOR APPLICATION				
◆	069-501-801 (14/0) 2.01 (2.01 - 2.06) CLEANING			TT	-----
◆	SXS "TOUCH-TONE" TK FOR APPLICATION				
◆	069-501-801 (14/0) 2.01 (2.01 - 2.06) CLEANING			TT	-----
◆	ALL OTHER				
◆	069-501-801 (14/0) 2.01 (2.01 - 2.06) CLEANING BANKS & WIPERS			TT	-----
◆	ANI & XBT SW SYS (TRUNK FINDER APPLICATION)				
◆	069-501-801 (14/0) 2.01 (2.01 - 2.06) CLEANING			TT	-----
◆	22.4 CLNG RECOND APP; SOLDERLESS CONNECTORS				
◆	FOR ALL UNITS				
◆	069-135-501 (2/0) INSPECT & TIGHTENING SOLDERLESS CONNECTORS (OR UNTIL TIGHT CONNECTIONS ARE FOUND ON TWO CONSECUTIVE INSPECTIONS)			MW 12M	-----
◆	22.5 CLNG RECOND APP; MISC				
◆	TROUBLE TESTS				
◆	NORTH ELECTRIC MULTICONTACT RELAYS				
◆	069-307-801 (2/0) 4.01 (4.01 - 4.07) CLEANING & TREATING RELAY CONTACTS			TT	-----
◆	AF, AG, AJ, AK, AL, AM, 286, 287 & 288-TYPE WIRE SPRING RELAYS				
◆	069-310-803 (8/1) 4.01 (4.01 - 4.50) CONTACT REPLMT			TT	-----
◆	10, 11, 26, 27, & 32-TYPE BANKS ASSOCD WH ROTARY SELRS				
◆	069-311-801 (3/1) 4.01 (4.01 - 4.19) REPAIRING WORN FEEDER BRUSH TIPS			TT	-----
◆	HEAT COIL & PROTECTOR SPG CONTACTS				
◆	069-315-801 (2/0) 4.01 (4.01 - 4.08) CLEANING HEAT COIL WASHERS OR CAPS & PROTECTOR SPG CONTACTS			TT	-----
◆	STUD-TYPE ROTARY SWS, ATTS, POTS, & RHEO STATS				
◆	069-321-801 (2/0) 4.01 (4.01 - 4.12) CLEANING & TREATING COPPER & COPPER ALLOY CONTACTS			TT	-----
◆	5, 12, & 14-TYPES PLANT, TRAFFIC & LINE REGISTERS				
◆	069-360-801 (5/0) 3.01 (3.01 - 3.15 & 4.01 - 4.10) CLEANING PRCDR			TT	-----
◆	SLIDE WIRE APPARATUS				
◆	069-365-801 (2/0) 2.03 (2.03 - 2.07) CLEANING			TT	-----
◆	2.08 (2.08 - 2.10) LUBRICATING			TT	-----

PLUGS							
◆	069-380-811	(3/0)	4.01	(4.01 - 4.06) CLEANING & POLISHING (USING PORTABLE PLUG CLEANER)	TT	-----	
◆	069-380-812	(2/0)	4.01	(4.01 - 4.07) CLEANING & POLISHING (USING COTTON SLEEVING)	TT	-----	
◆	47, 109, 110, 309, 310 & 347-TYPE SWITCHBOARD PLUGS						
◆	069-380-813	(2/0)	4.01	(4.01 - 4.07) CLEANING (USING 497A OR 497B TOOL)	TT	-----	
◆	KEY & JACK CONTACTS						
◆	069-386-801	(3/1)	4.01	(4.01 - 4.12) CLEANING	TT	-----	
◆	CENTRAL OFFICE JACK						
◆	069-387-801	(2/0)	3.01	(3.01 - 3.03) CLEANING JACK FLARES	TT	-----	
◆	OPERATOR TELEPHONE SET JACKS						
◆	069-388-801	(2/0)	4.01	CLEANING JACK SLEEVES	TT	-----	
◆	EQUIPMENT FRAMES (STEP-BY-STEP OFFICES)						
◆	069-503-801	(5/1)	4.01	(4.01 - 5.43) CLEANING WH COMPRESSED AIR	TT	-----	
◆	SEQUENCE SWITCHES						
◆	069-601-801	(5/0)	5.01	(5.01 - 8.09) SCRUBBING & SCOURING CAMS	TT	-----	
◆	157-TYPE INTERRUPTERS						
◆	069-601-801	(5/0)	5.01	(5.01 - 8.09) SCRUBBING & SCOURING CAMS	TT	-----	
◆	LOCAL & TANDEM PANEL OFFICES EQUIPMENT FRAMES						
◆	069-603-801	(7/0)	4.01	(4.01 - 5.44) CLEANING WH COMPRESSED AIR	TT	-----	
◆	PANEL MULTIPLE BANK TERMINALS ASSOC MULT BRUSHES & GUIDE COMBS						
◆	069-605-801	(4/0)	6.01	(6.01 - 6.27) CLEANING & TREATING	TT	-----	
◆	PANEL MULTIPLE BANK TERMINALS						
◆	069-605-803	(4/0)		CLEANING & TREATING BANKS, MULTIPLE BRUSHES & GUIDE COMBS	TT	-----	
◆	PANEL COMMUTATORS & COMMUTATOR BRUSHES						
◆	069-610-801	(10/0)	3.01	(3.01 - 3.09) ABRASIVE CLEANING OF COMMUTATOR	TT	-----	
◆			4.01	(4.01 - 4.04) OIL TREATMENT OF COMMUTATORS NOT EQPD WH WIPER PADS	TT	-----	
◆			5.01	(5.01 - 5.06) CLEANING OF COMMUTATORS BEFORE & AFTER INSTALLING WIPER PADS	TT	-----	
◆			6.01	(6.01 - 6.05) CLEANING OF COMMUTATORS EQPD WH WIPER PADS WHERE COMMUTATOR SURFACES APPEAR EXCESSIVELY OILY	TT	-----	
◆			7.01	CLEANING & TREATING COMMUTATOR BRUSHES	TT	-----	
◆			8.01	(8.01 - 8.02) COMMUTATOR BRUSH REQ	TT	-----	
◆	EQUIPMENT FRAMES (X-BAR OFF.)						
◆	069-703-801	(5/0)	4.01	(4.01 - 4.21) CLEANING WH COMPRESSED AIR	TT	-----	
◆	EQUIPMENT FRAMES (NO. 1 X-BAR & X-BAR TANDEM OFFICES)						
◆	069-703-802	(5/0)	2.01	(2.01 - 2.40) CLEANING WH COMPRESSED AIR	TT	-----	
◆	EQUIPMENT FRAMES (NO. 5 X-BAR OFFICES)						
◆	069-703-803	(4/0)	2.01	(2.01 - 2.37) CLEANING WH COMPRESSED AIR	TT	-----	

SECTION 069-001-011

◆	EQUIPMENT FRAMES (NO. 4A & 4M TOLL SW SYS)				
◆	069-703-804 (4/0)	2.01	(2.01 - 2.34)	CLEANING WH COMPRESSED AIR	TT -----
◆	EQUIPMENT FRAMES (NO. 3 X-BAR SYS)				
◆	069-703-805 (1/0)	2.01	(2.01 - 2.37)	CLEANING WH COMPRESSED AIR	TT -----
◆	SOLDERING COPPERS				
◆	069-140-811 (8/0)	15.0	(15.01)	TEST & INSPECTION OF ELECTRIC SOLDERING COPPERS	TT -----
◆	22.6 CLNG RECOND APP; 946-/947- & 970-/971-TYPE CONNECTORS CLNG				
	FOR ALL UNITS				
◆	069-350-801 (2/0)	4.01	(4.01 - 4.11)	CLEANING PROCEDURE	MR 12M -----
◆		5.01	(5.01 - 5.04)	LUBRICATION	MR 12M -----