

TOOLS

CLAMPS - DESCRIPTION


1. GENERAL

1.01 This section covers coded and noncoded Bell System clamps.

1.02 When this section is reissued, the reason for reissue will be listed in this paragraph.


1.03 The information contained in this section supersedes the corresponding information in Sections 074-132-101, 074-134-101, 074-575-101, and 074-625-101.

585A

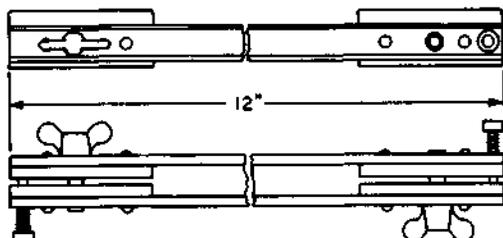


For use 113- and similar-type jack mountings.

613A

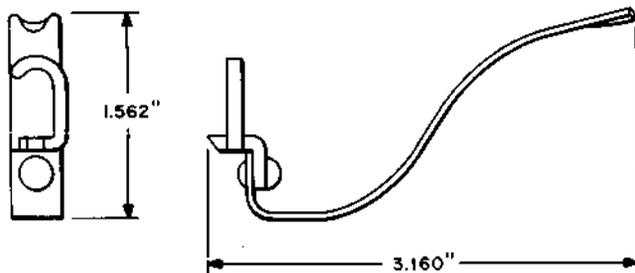


Brush clamp. For use in clamping a panel commutator brush to the elevator rod when the commutator brush clamping screw is loosened.

622A

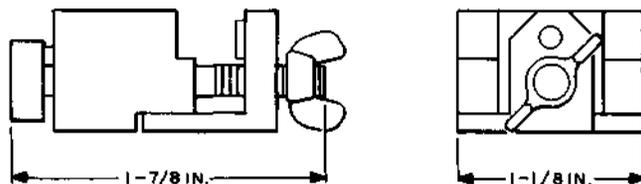

For use during adjustments to support 200-, 206-, 209-, and 211-type selectors nonrigidly mounted on mounting plates similar to the 189-type.

CLAMP, "C", R-1619
CLAMP, "C", R-1748
CLAMP, "C", R-1455

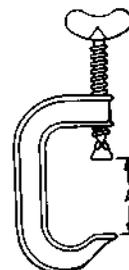


CLAMP	DIMENSION A (INCHES)
R-1619	2
R-1748	3
R-1455	6

For general use.

NOTICE

Not for use or disclosure outside the Bell System except under written agreement

CLAMP, SOLDERING, ADJUSTABLE, R-2392

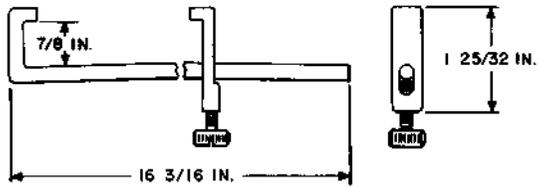

For use in connecting conductors at terminal strips (PBX installation only).