


TOOLS

SEPARATORS – DESCRIPTION

1. GENERAL


- 1.01 This section covers coded Bell System separators.
- 1.02 When this section is reissued, the reason for reissue will be listed in this paragraph.
- 1.03 The information contained in this section supersedes the corresponding information in Sections 074-111-101, 074-122-101, and 074-140-101.
- 1.04 For tools with similar functions, see Holders I, Section 074-223-125; Holders II, Section 074-223-126; Insulators, Section 074-226-122; Lifter, Spring, Section 074-235-115; Spacers, Section 074-257-107; and Spreader, Section 074-257-114.

352

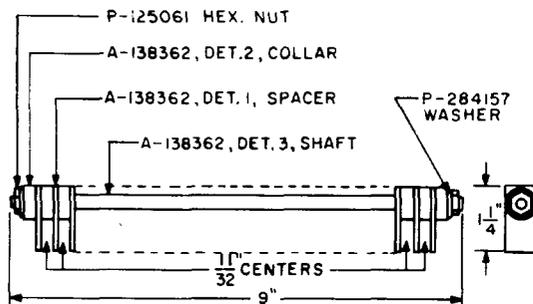

Spring separator. For use on A- and B-type sequence switches.


452A

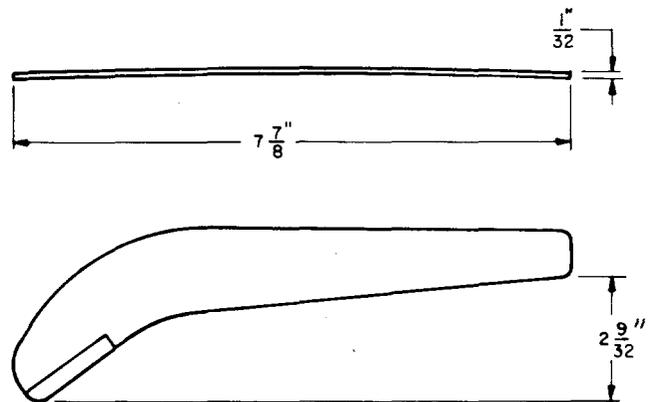

Bank contact separator. For use in cleaning plunger-type line switch banks.

669A

 A&M ONLY



Contact separator. Order this tool for replacement purposes only if the office is equipped with the 1012A tool kit. The 1012A tool kit is no longer available as a complete kit. For use in replacing parts of 286-, 287-, and 288-type relays.

NOTICE

Not for use or disclosure outside the Bell System except under written agreement