


TOOLS  
SUPPORTS – DESCRIPTION

1. GENERAL

- 1.01 This section covers coded and noncoded Bell System support tools.
- 1.02 When this section is reissued, the reason for reissue will be listed in this paragraph.
- 1.03 The information contained in this section supersedes the corresponding information in Sections 074-118-101, 074-131-101, 074-132-101, 074-625-101, 074-795-101, and 074-820-101.


429A  
429B

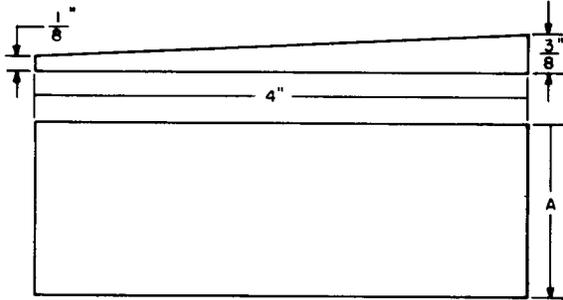

TOOL	DIM. A (INCHES)
429A	1-1/2
429B	2-1/4


Key supports. These tools replace key support R-9190. For use in supporting universal-type keys while adjusting.

569A

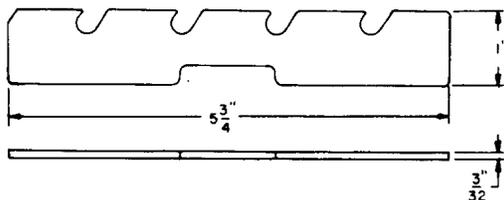

Spring support. Replaces the 543A tool. For use on 245-, 254-, 263-, and 264-type relays.


588A

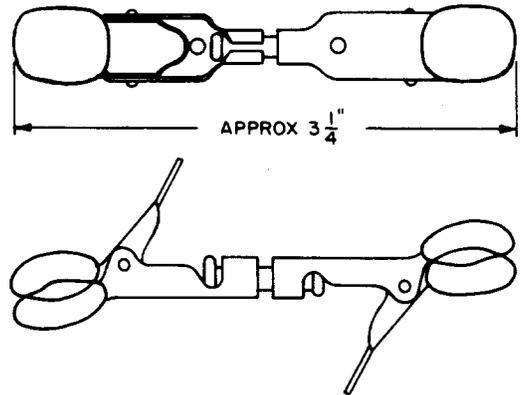

Cord support. This tool forms part of the J94724 contact closure test set. For use with the 587A tool.

KS-14540

In ordering, specify list number desired.

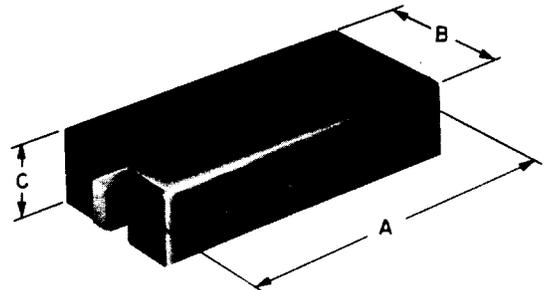

Protector spring supporter. Used on main distributing frames to permit the removal of protector blocks for inspection and cleaning.

NOTICE

Not for use or disclosure outside the Bell System except under written agreement

SECTION 074-257-140

KS-14540 (CONT)

LIST NUMBER	DIMENSIONS (INCHES)		
	A	B	C
1	2.375	1-1/8	1/2
2	2.320	1-1/8	1/2

List 1 — For supporting springs of the 1177C and E-type protectors when protector blocks are removed.

List 2 — For supporting springs of the 1268- and 1269-type protectors when protector blocks are removed.


SUPPORT, LAMP

See Lamps, Section 074-235-109.

SUPPORT, SHAFT

See Panel Office, Section 074-247-105.

FIXTURE, SWITCH-SUPPORTING, AECO 26221

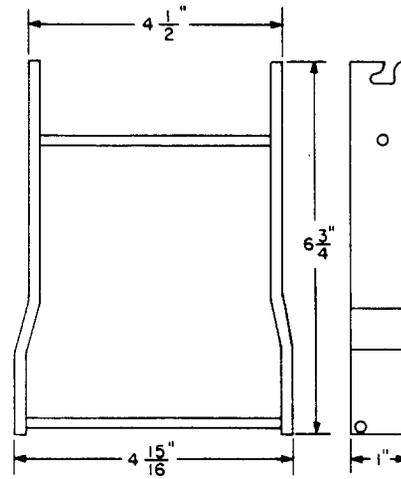


For use on step-by-step type relays and 197- and 198-type switches.

R-9190

Key support. Replaced by the 429A and 429B tools.

SUPPORT, CARD, TEMPLATE, KS-14590

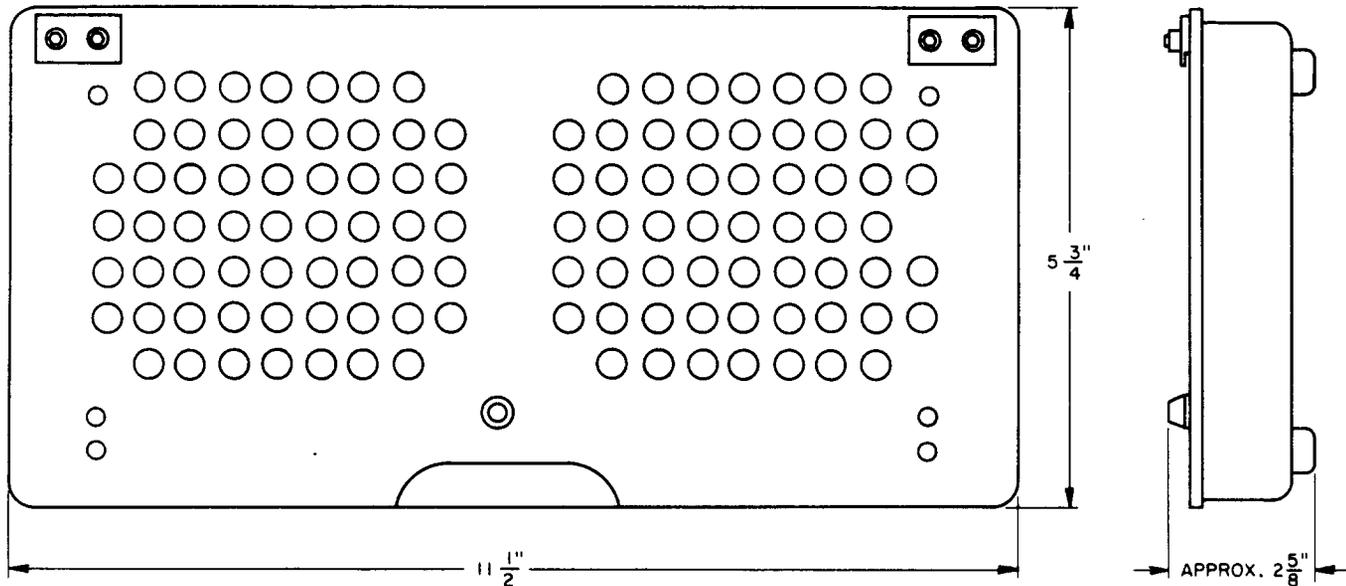

For use in coding card templates (Form E3869) for the 1-type translator.