

DIMENSION<sup>®</sup> PBX  
FEATURE TEST  
TRUNK TO TRUNK CONNECTIONS

CONTENTS

1. GENERAL INFORMATION  
2. RECORDS

3. TEST EQUIPMENT  
4. PROCEDURE

---

1. GENERAL INFORMATION

1.1 Description

1.11 This section describes the tests to be performed whenever the Trunk to Trunk feature is provided.

1.12 This feature allows the attendant to extend an incoming or outgoing trunk to another outgoing trunk.

2. RECORDS

2.1 Form SD-97-1313 is required for recording the results of this test.

3. TEST EQUIPMENT

3.1 None

4. PROCEDURE

4.1 Test Procedure

4.101 Arrange for an incoming trunk call to the attendant console. Answer call at attendant console.

4.102 At the attendant console, extend the incoming trunk to an outgoing trunk. (Outgoing trunk code can be found in the Trunk Assignment Section of the Customer Order Document.)

4.103 At the attendant console, momentarily depress the RELEASE key. Verify that the loop is released and that the two trunks are connected.

4.104 Release the trunks. Verify that the trunks are idle.

4.105 At the attendant console, originate an outgoing trunk call.

4.106 After completing the call in Step 4.105, extend the call to another outgoing trunk. Verify that the SPLIT lamp is lit and the trunk in Step 4.105 is split.

4.107 If Privacy is not provided, momentarily depress the SPLIT key. Verify three-way conversation.

4.108 At the attendant console, momentarily depress the RELEASE key. Verify that the attendant console does not release.

4.109 At the attendant console, momentarily depress the HOLD key. Verify that the attendant is released from the connection, the HOLD lamp associated with the loop is lit, and the two trunks are connected.

4.110 At the attendant console, momentarily depress the LOOP key associated with the lit HOLD lamp in Step 4.109. Verify three-way conversation between the attendant and the two trunks.

4.111 At the attendant console, momentarily depress the RLS PARTY key. Verify the trunk in Step 4.106 releases.

4.112 Momentarily depress the RELEASE key and release trunk in Step 4.105. Verify that the trunk and attendant console are released.

4.113 This completes the testing of the Trunk to Trunk feature.

Manager, Denver PBX PECC

PRIVATE

THE INFORMATION CONTAINED HEREIN SHOULD NOT BE DISCLOSED  
TO UNAUTHORIZED PERSONS. IT IS MEANT SOLELY FOR USE BY  
AUTHORIZED BELL SYSTEM EMPLOYEES.

Printed in U.S.A.