

Lucent Technologies
Bell Labs Innovations



DACS II
Release 8.2.3 PDS
Command and Message Manual

Volume I

365-353-222
Issue 2
February 1999

Copyright © 1999 Lucent Technologies
All Rights Reserved
Printed in U.S.A

Notice

Every effort was made to ensure that the information in this document was complete and accurate at the time of printing. However, information is subject to change.

Mandatory Information

Security Statement

In rare instances, unauthorized individuals make connections to the telecommunications network through the use of remote access features. In such event, applicable tariffs require that the customer pay all network charges for traffic. Lucent Technologies cannot be responsible for such charges, and will not make any allowance or give any credit for charges that result from unauthorized access.

Trademarks

5ESS is a registered trademark of Lucent Technologies.

COMMON LANGUAGE is a registered trademark and CLEI, CLLI, CLCI, and CLFI are trademarks of Bell Communications Research, Inc.

SLC is a registered trademark of Lucent Technologies.

Acknowledgements

This document was developed by the Lucent Technologies Customer Training and Information Products Organization.

Documentation Ordering Information

The ordering number for this document is Lucent Technologies 365-353-222. To order this document, call the Lucent Technologies Customer Information Center in Indianapolis, Indiana, on 1-888-582-3688. For more ordering information, refer to "How to Order Documentation" in the section "About this Document."

Technical Support Telephone Number

The Lucent Technologies Regional Technical Assistance Center (RTAC) provides a technical assistance telephone number which is staffed 24 hours a day. For technical assistance, simply call 1-800-225-RTAC.

Documentation Support Telephone Number

Lucent Technologies provides a telephone number for you to report errors or to ask questions about the information in this document. The support telephone numbers are:

Outside North Carolina - 1-800-334-0404
Inside North Carolina - 1-910-727-6681.

Developed by The Lucent Technologies Customer Training & Information Products Organization

How Are We Doing?

Document Title: DACS II Release 8.2.3 PDS Command and Message Manual Volume I

Document No.: 365-353-222

Issue 2

Date: February 1999

Lucent Technologies welcomes your feedback on this document. Your comments can be of great value in helping us improve our documentation.

1. Please rate the effectiveness of this document in the following areas:

	Excellent	Good	Fair	Poor	Not Applicable
Ease of Use					////////////////
Clarity					////////////////
Completeness					////////////////
Accuracy					////////////////
Organization					////////////////
Appearance					////////////////
Examples					
Illustrations					
Overall Satisfaction					////////////////

2. Please check the ways you feel we could improve this document:

☐ Improve the overview/introduction	☐ Make it more concise/brief
☐ Improve the table of contents	☐ Add more step-by-step procedures/tutorials
☐ Improve the organization	☐ Add more troubleshooting information
☐ Include more figures	☐ Make it less technical
☐ Add more examples	☐ Add more/better quick reference aids
☐ Add more detail	☐ Improve the index

Please provide details for the suggested improvement. _____

3. What did you like most about this document?

4. Feel free to write any comments below or on an attached sheet.

If we may contact you concerning your comments, please complete the following:

Name: _____ Telephone Number: _____

Company/Organization: _____ Date: _____

 
Address: _____

When you have completed this form, please fold, tape, and return to address on back or Fax to: 910-727-3043.


Lucent Technologies
Bell Labs Innovations



-----Do Not Cut—Fold Here And Tape-----



 NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES



BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 1999 GREENSBORO, N.C.

POSTAGE WILL BE PAID BY ADDRESSEE

DOCUMENTATION SERVICES
2400 Reynolda Road
Winston-Salem, NC 27199-2029



Contents

Introduction	1-1
■ DACS II Messages	1-2
■ Communicating With DACS II	1-6
■ DACS II Administrative Links	1-14
■ NPC Addressing	1-16
■ On-Line Help Feature	1-16
■ System Configuration	1-22
■ Documentation Support	1-37
■ Glossary	1-49

Alphabetic List of Messages	2-1
■ Alphabetic List of Keywords	2-1

Numerical List of Messages	3-1
■ Numeric List of Keywords	3-1

Summary of Input Commands	4-1
■ Alphabetic Command Summary	4-2
■ Numeric Command Summary	4-42

Autonomous Messages	5-1
■ Alarms Messages	5-2
■ Audits Messages	5-4
■ Error Recovery Messages	5-10
■ Event Reporting Messages	5-16
■ Input Denials Messages	5-17

Contents

■ Scheduled Pm Reporting Messages	5-18
■ Startup Messages	5-20

ABT — AUD	6-1
■ ABT	6-2
■ ACO,ACTIVE	6-5
■ ACON,OLD,NEW,INCL	6-7
■ ACT,MAP,CLR,INCL	6-13
■ ADD,LINK,APPL,ASCS,ASCD,PM,L2AD,POLL	6-22
■ ADD,LINK,K,T1,T3,N2,A,B	6-24
■ ADD,LINK,PTCOL,S,X,T,M,BAUD,ALM,BS,ENQ	6-26
■ ADD,LINK,W,P,T20,T22,T23,T25,T26,R20	6-31
■ ADD,NPC	6-38
■ ADD,RT,DL,MD,DGA,DGB,DGC,DGD,DGP,NDL	6-44
■ ADD,USER,LINK,INCL,ALL,LANG,M,P,F	6-51
■ ADD,USER,NEW,PASSWD	6-59
■ ALM,IDLD,AI,NPC	6-62
■ ALM,IDLD,NPC	6-66
■ ALM,IDLD,UNIT,DS3	6-70
■ ALM,MJ,MN,INFO,NPC	6-72
■ ALM,MN,IDLD,DS3UNPROTALM,DS3U	6-77
■ ALM,PMC,PMA,DMA,MI,CCN,OOS	6-79
■ ALM,PMC,PMA,DMA,MI,ECCN,OOS	6-81
■ ALM,PMC,PMA,DMA,MI,SMEM	6-83
■ ALM,RESET,DATE,TOD,FORMAT,MDY,DMY,PMC	6-85
■ ALM,UNIT,DS3	6-87
■ ALW,PMREPT,NPC,ALL	6-89
■ ALWSW,UNIT,MMFG,TOPRTN,TOSRVC	6-94
■ APPEND,END	6-96
■ APPL,RESET,IN,PROGRESS	6-98
■ AR01,MISC,ALM,CGA,LOS	6-100
■ AR01,MISC,ALM,IDLD,CGA,LOS	6-107
■ AUD,PARAMS	6-114
■ AUD,QRY,BER,ALL,FTU,NPCS,TOT,EOM,DS3U	6-116
■ AUD,QRY,BER,ALL,NPCS,TOT	6-130
■ AUD,QRY,CFA,CGA,LOS	6-132

Contents

■ AUD,QRY,CFA,CGA,LOS	6-146
■ AUD,QRY,CFA,CGA,LOS	6-158

BADVERB — BX2	7-1
■ BADVERB,BAD,SYNTAX,STOPPED	7-2
■ BADVERB,CMD,INERR,STOPPED	7-4
■ BCON,FROM,TO,NTR,LPD,CONV,CUS,INCL,RDC	7-7
■ BCON,FROM,TO,RDC,CUS,INCL,NTR,LPD,CONV	7-20
■ BCON,FROM,TOX,NTR,LPD,CONV,CUS,INCL	7-30
■ BCON,FROM,TOX,RDC,CUS,INCL,NTR,LPD	7-44
■ BDIS,FROM,TO,CONV,OOS,DCC,INCL	7-54
■ BDIS,FROM,TO,OOS,INCL,CONV	7-64
■ BDIS,FROM,TOX,CONV,OOS,DCC,INCL	7-74
■ BDIS,FROM,TOX,OOS,INCL,CONV	7-84
■ BOOT,FAILED,BAD,DEVICE	7-93
■ BOOT,FROM,PMEM,FAILED,ATTEMPTING,TO	7-95
■ BOOT,FROM,PMEM,SMEM	7-97
■ BX2,STF,ATP	7-99

CFR — CTST	8-1
■ CFR,FRAME	8-2
■ CFR,SYNC,FPLL	8-4
■ CFR,SYNC,MASTER,SLAVED	8-6
■ CFR,SYNC,STRATUM,STR2,STR3	8-8
■ CFR,XC,INCL	8-10
■ CHG,DS1ALMDS3,ON,OFF	8-12
■ CHG,DS3ALMDLY	8-15
■ CHG,DS3UNPROTALM,ON,OFF	8-17
■ CHG,ECLOC,TYPE,MJU,SRM	8-19
■ CHG,FROM,TO,NOT,TLA,TLR,F,T,B,A,INCL	8-21
■ CHG,FROM,TO,NOT,TLA,TLR,F,T,B,L,G,A	8-31
■ CHG,FROM,TO,TLP,NG,ES,INCL	8-44
■ CHG,HUBID,O	8-57

Contents

■ CHG,MACRO,MAP,SPACE	8-59
■ CHG,MSGLOG,ON,OFF	8-61
■ CHG,NPC,ALMOPT,PLOPT,AIS,INFO,MJ,MN,PL	8-63
■ CHG,NPC,NFS	8-76
■ CHG,NPC,OPTS	8-83
■ CHG,NPC,RT,DL,TYPE,OPTS	8-118
■ CHG,NPC,TS0	8-141
■ CHG,NPC,TS0M	8-147
■ CHG,NPC,TYPE,IW,X	8-153
■ CHG,NPC,TYPE,IW,X,INCL	8-166
■ CHG,NPC,TYPE,IW,X,INCL	8-176
■ CHG,PASSWD,OLD,NEW	8-185
■ CHG,RT,DL,TO	8-188
■ CHG,RT,DL,ZCS,B8ZS	8-190
■ CHG,RT,RTF,SWMN	8-193
■ CHG,SCON,OLD,NEW	8-197
■ CHG,SCON,OLD,NEW,MPTM	8-206
■ CHG,SECH,OLD,NEW,PCH,DCC	8-216
■ CHG,SETOP,TYPE,ALL,NPCOP	8-225
■ CHG,SWCH,TOX,INCL	8-239
■ CHG,SWCH,TOX,INCL	8-248
■ CHG,SYNC,TLI,SSP,TYPE,SRC	8-257
■ CHG,TLA,TLR,TO	8-262
■ CHG,TLA,TLR,TO,MJU	8-271
■ CHG,TYPE,OPTS	8-281
■ CHG,UNIT,CONN	8-306
■ CHG,UNIT,DS3,BERM,BERT,LBO,TYPE	8-309
■ CHG,UNIT,FTMI,EQL	8-313
■ CHG,USER,LINK,INCL,SCR,GR,MCON,MCOFF	8-316
■ CI,ECI,RESET	8-320
■ CI,ECI,STARTUP,STF,ATP	8-322
■ CMD,MC,OOS,MCOND,INSERVICE,MPDBASE	8-324
■ COPY,NPC,TO	8-326
■ CTST,FAD,AIS,INCL	8-353
■ CTST,FAD,EMODE,FMODE,INCL	8-361
■ CTST,FAD,FROM,TO,AIS,INCL	8-368
■ CTST,HUB,FAD,TO,INCL	8-377
■ CTST,LPBKT,FAD,INCL	8-383

Contents

■ CTST,TNR,ALL,OOS	8-388
■ CTST,TNR,FAD,OOS	8-390

DELETE — DGN	9-1
■ DDIS,FROM,TO	9-2
■ DELETE,END	9-7
■ DGN,CCB,CFT,X	9-9
■ DGN,CCI,CFT,X	9-16
■ DGN,CCNI,CFT,X	9-20
■ DGN,CI,CFT,X	9-26
■ DGN,ETSI,CFT,X	9-30
■ DGN,ETSI,ECCN,ALL	9-34
■ DGN,IN,PROGRESS	9-37
■ DGN,LINK,CFT,X	9-39
■ DGN,MC,CFT,X	9-42
■ DGN,MP,CFT,X	9-46
■ DGN,NPC	9-49
■ DGN,NPC,SIDE,CFT,X	9-55
■ DGN,PMEM,SMEM,CFT,X,EXCT,DBASE,VERIFY	9-77
■ DGN,SYNC	9-82
■ DGN,SYNC,TLI,CRO	9-85
■ DGN,SYNC,TLI,SSP	9-88
■ DGN,TSI,CFT,X	9-91
■ DGN,TSIS,CCN,ALL	9-99
■ DGN,TSIS,CCN,UNIT,CONN	9-102
■ DGN,UNIT,DSPI,CFT,X	9-105
■ DGN,UNIT,FC,CFT,X	9-108
■ DGN,UNIT,FLI,CFT,X	9-113
■ DGN,UNIT,FMT,CFT,X	9-117
■ DGN,UNIT,FTMI,CFT,X	9-123
■ DGN,UNIT,MIU,CFT,X	9-126
■ DGN,UNIT,MXR,DEV,CFT,X	9-129
■ DGN,UNIT,UC,CFT,X	9-135

DGRTH — DSPC	10-1

Contents

■ DGRTH,NPC	10-2
■ DGRTH,NPC,NPCTG,TGR	10-18
■ DGRTH,NPC,NPCTP,TPR	10-26
■ DGRTH,SYNC,TB	10-31
■ DGRTH,SYNC,TLI,SSP	10-33
■ DGRTH,TG	10-37
■ DGRTH,TP	10-39
■ DGRTH,UNIT	10-41
■ DGRTH,UNIT,FTMI	10-47
■ DGRTH,UNIT,MIU	10-49
■ DGRTH,UNIT,MXR	10-51
■ DLT,FPKG	10-54
■ DLT,MACRO,MAP,USER	10-58
■ DLT,NPC	10-60
■ DLT,RT,DL,DGA,DGB,DGC,DGD,DGP	10-67
■ DLT,USER	10-72
■ DSPC	10-74

EBX — EXC	11-1
■ EBX,STARTUP,STF,ATP	11-2
■ ED,CRET,MAP,PIC	11-4
■ ED,MACRO,MAP	11-11
■ EMTC,STARTUP,STF,ATP	11-17
■ END,LOG	11-19
■ END,LOG,ABORTED	11-21
■ ERR,CMD,ABT,TN,STOPPED	11-23
■ ERR,ESR,ANALYSIS,REPORT,EVENT	11-25
■ ERR,ESR,CCB,TN,EVENT,COND	11-28
■ ERR,ESR,CCI,TN,EVENT,COND	11-30
■ ERR,ESR,CCNI,TN,EVENT,COND	11-33
■ ERR,ESR,ETSI,TN,EVENT,COND	11-40
■ ERR,ESR,MC,MP,CI,TN	11-43
■ ERR,ESR,MC,MP,TN,EVENT,COND,CI,BX,EBX	11-45
■ ERR,ESR,NPC,SIDE,TN,EVENT,COND	11-49
■ ERR,ESR,NPC,TN,EVENT,COND	11-57
■ ERR,ESR,SYNC,TLI,SSP,TN,EVENT,COND	11-62

Contents

■ ERR,ESR,SYNC,TLI,TN,EVENT,COND	11-67
■ ERR,ESR,SYNC,TN,EVENT,COND	11-71
■ ERR,ESR,TSI,TN,EVENT,COND	11-76
■ ERR,ESR,UNIT,DSPI,TN,EVENT,COND	11-80
■ ERR,ESR,UNIT,FC,TN,EVENT,COND	11-83
■ ERR,ESR,UNIT,FLI,TN,EVENT,COND	11-86
■ ERR,ESR,UNIT,FMT,TN,EVENT,COND	11-89
■ ERR,ESR,UNIT,FTMI,TN,EVENT,COND	11-93
■ ERR,ESR,UNIT,HFMT,TN,EVENT,COND	11-96
■ ERR,ESR,UNIT,HMXR,DEV,TN,EVENT,COND	11-100
■ ERR,ESR,UNIT,MIU,TN,EVENT,COND	11-105
■ ERR,ESR,UNIT,MXR,DEV,TN,EVENT,COND	11-108
■ ERR,ESR,UNIT,UC,UBX,TN,EVENT,COND	11-113
■ ERR,HARDWARE,TN,COND,EVENT,ACTION	11-116
■ ERR,LINK,TN,STATUS	11-120
■ ERR,MSG,TO,LOG,DISCARDED	11-123
■ ERR,PMEM,SMEM,TN,EVENT,COND	11-125
■ ERR,PWR,PMC,PMA,DMA,MI,TN	11-127
■ ERR,SOFTWARE,MC,ERROR,MID,TN,RC,ACTION	11-130
■ ERR,SYNC,MODE,FAST,HOLDOVER,NORMAL	11-134
■ ERR,SYNC,TLI,SSP,NPC,TN,ALM,LOS,LEN	11-139
■ ERR,SYNC,TLI,SSP,TN,ALM,LOS,LEN,EXJ	11-144
■ EXC,MACRO	11-149

FRADTS	12-1
■ FRADTS,BMCMP	12-2
■ FRADTS,DGN,DEV	12-4
■ FRADTS,FRCMP	12-8
■ FRADTS,MC,DGN	12-108

GRTH	13-1
■ GRTH,FRAME,CHAR,UID	13-2
■ GRTH,NPC,NPCTG	13-5

Contents

■ GRTH,NPC,NPCTP	13-12
■ GRTH,NPC,TYPE	13-17
■ GRTH,NPC,TYPE,CBTIMER	13-24
■ GRTH,NPC,TYPE,OPTS,IW,X	13-31
■ GRTH,NPC,TYPE,OPTS,IW,X,INCL,AIS,INFO	13-40
■ GRTH,NPC,TYPE,OPTS,IW,X,INCL,AIS,INFO	13-62
■ GRTH,SYNC,TB,TYPE	13-75
■ GRTH,SYNC,TLI,TYPE	13-77
■ GRTH,SYNC,TLI,TYPE,SSP,SRC	13-79
■ GRTH,TG,NPCTG	13-83
■ GRTH,TP	13-86
■ GRTH,UNIT,FTMI,EQL	13-90
■ GRTH,UNIT,MIU,TYPE	13-93
■ GRTH,UNIT,MXR,TYPE,BERM,BERT,LBO	13-95
■ GRTH,UNIT,TYPE,CONN	13-99

IN — INVALID	14-1
■ IN,PROGRESS	14-2
■ INH,PMREPT,NPC,ALL	14-4
■ INHSW,UNIT,MMFG,TOPRTN,TOSRVC	14-9
■ INSTALL	14-11
■ INVALID,SFW,ID,BLOCK,COND	14-19

LINE — LOGOFF	15-1
■ LINE	15-2
■ LIST,END	15-4
■ LOGIN,USER,PASSWD	15-7
■ LOGOFF,USER,LINK,INCL	15-10

MC — MTC	16-1
■ MC,MCOND	16-2

Contents

■ MC,RESET,RELEASE,ISSUE,FPKG,COND	16-4
■ MOVE,FROM,END,TO	16-8
■ MP,STARTUP,STF,ATP	16-10
■ MTC,STF,ATP	16-12

OCNT — OVERLOAD	17-1
■ OCNT,FROM,TO,MPM,CUS,INCL,RDC	17-2
■ OCNT,FROM,TO,RDC,CUS,INCL,PRIOUT	17-15
■ OCNT,FROM,TO,RDC,CUS,INCL,PRIOUT	17-28
■ OCON,FROM,TO,MPM,CUS,INCL,RDC	17-37
■ OCON,FROM,TO,RDC,CUS,INCL,PRIOUT	17-51
■ OCON,FROM,TO,RDC,CUS,INCL,PRIOUT	17-63
■ ODIS,FROM,TO,INCL,OOS,DCC,PRIOUT	17-72
■ ODIS,FROM,TO,OOS,INCL,PRIOUT	17-81
■ OPR,LPBK,NPC,LOCN	17-90
■ OPR,LPBK,UNIT,MMFG	17-100
■ OPR,TSIG,NPC	17-103
■ OVERLOAD,MP,CI,UNIT,UC,TN,PROCESSOR	17-108

REPT — RPT	18-1
■ REPT,PM,NPC,PARAM,COUNT,VLDTY,LOCN,AI	18-2
■ RESET,DATE,TOD,FORMAT,MDY,DMY	18-9
■ RESET,STOPPED	18-11
■ RLS,LPBK,NPC,LOCN	18-13
■ RLS,TSIG,NPC	18-22
■ RMV,CCB	18-27
■ RMV,CCI	18-29
■ RMV,CCNI	18-32
■ RMV,ETSI	18-34
■ RMV,ETSI,ECCN,ALL	18-36
■ RMV,LINK	18-38
■ RMV,MC	18-40
■ RMV,NPC,SIDE,INCL	18-42

Contents

■ RMV,RT,DL	18-72
■ RMV,SMEM,PMEM	18-75
■ RMV,SYNC	18-78
■ RMV,SYNC,TLI,CRO	18-80
■ RMV,SYNC,TLI,PMC,PMA,DMA,MI,COND	18-82
■ RMV,SYNC,TLI,SSP	18-84
■ RMV,TSI	18-87
■ RMV,TSIS,CCN,ALL	18-89
■ RMV,TSIS,CCN,UNIT,CONN	18-92
■ RMV,UNIT,FC	18-95
■ RMV,UNIT,FLI	18-98
■ RMV,UNIT,FMT	18-100
■ RMV,UNIT,FTMI,DSPI	18-102
■ RMV,UNIT,MIU,INCL	18-105
■ RMV,UNIT,MMFG,FRC,INCL	18-107
■ RMV,UNIT,UC	18-111
■ RPT,T,NPC,LOCN,AI,COUNT,THLEV,ALM	18-113

RST	19-1
■ RST,CCB	19-2
■ RST,CCI	19-4
■ RST,CCNI	19-6
■ RST,ETSI	19-8
■ RST,ETSI,ECCN,ALL	19-10
■ RST,LINK	19-13
■ RST,MC,MCOND,NOJRNLFRC,CLR,ALL	19-15
■ RST,NPC,SIDE	19-21
■ RST,NPC,TS0M	19-48
■ RST,PMEM,SMEM,CLR,FRC,BKGRND	19-53
■ RST,RT,DL	19-59
■ RST,SYNC	19-62
■ RST,SYNC,TLI,CRO	19-64
■ RST,SYNC,TLI,SSP	19-66
■ RST,TSI	19-68
■ RST,TSIS,CCN,ALL	19-70
■ RST,TSIS,CCN,UNIT,CONN	19-73

Contents

■ RST,UNIT,FC	19-76
■ RST,UNIT,FLI	19-78
■ RST,UNIT,FMT	19-80
■ RST,UNIT,FTMI,DSPI	19-82
■ RST,UNIT,MIU,INCL	19-84
■ RST,UNIT,MMFG,INCL	19-87
■ RST,UNIT,UC	19-91

SAVE — SC	20-1
■ SAVE	20-2
■ SC,ALM,CGA,DLF,INH,MRV,MSW,PSW,RT,DL	20-4
■ SC,ALM,COMP,RT,INDX,LBRV,AB,CD,P,ALP	20-8
■ SC,ALM,DPLX,SYNC,CCB,CCNI,CCI,TSI,ETSI	20-10
■ SC,ALM,MC,UC,FTMI,DSPI,NE	20-15
■ SC,ALM,RT,DL,FE	20-17

SCNT — SECH	21-1
■ SCNT,RATE,MPTM,MJU,MA	21-2
■ SCNT,RATE,TPT,FROM,TO	21-11
■ SCNT,RATE,TPT,FROM,TO	21-19
■ SCON,RATE,MPTM,MJU,MA	21-28
■ SCON,RATE,TPT,FROM,TO	21-40
■ SCON,RATE,TPT,FROM,TO	21-49
■ SDCH,TO,PCH,DCC	21-58
■ SDIS,RATE,MPTM,MJU	21-65
■ SDIS,RATE,MPTM,MJU,ALL	21-77
■ SDIS,RATE,TPT,FROM,TO	21-89
■ SDIS,RATE,TPT,FROM,TO	21-97
■ SECH,TO,DS0A,DS0B,SEC,PCH	21-105
■ SECH,TO,RATE,DP,PCH	21-115

START — SW	22-1

Contents

■ START,LOG	22-2
■ STOP,MACRO,LINK	22-4
■ STST,MON,TO,MJU,TP	22-6
■ STST,MON,TO,TP	22-16
■ STST,SPL,TO,MJU,TP	22-26
■ STST,SPL,TO,TP	22-36
■ STST,TLA,TLR,TP	22-46
■ STST,TPR,ALL,LINKS	22-56
■ STST,TPR,TP	22-58
■ SW,BCAST,OLD,NEW,INCL	22-66
■ SW,BCAST,OLD,NEW,INCL	22-73
■ SW,DISC,OOS	22-80
■ SW,DISC,OOS	22-86
■ SW,NPC,RT,PSW,USW,ALW,INH,FRC,INCL	22-92
■ SW,ROLL,OLD,NEW,INCL,FRC,OOS	22-97
■ SW,ROLL,OLD,NEW,INCL,FRC,OOS,TWAY	22-104
■ SW,UNIT,FLI,TOPTN	22-110
■ SW,UNIT,FLI,TOSRVC	22-112
■ SW,UNIT,MMFG,TOPTN,FRC	22-114
■ SW,UNIT,MMFG,TOSRVC	22-118

TABS — TTST	23-1
■ TABS	23-2
■ TABS,IN,PROGRESS	23-4
■ TCNT,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT	23-6
■ TCNT,FROM,TO,MPM,NTR,RDC,CUS,INCL	23-19
■ TCNT,FROM,TO,PFW,NFW	23-36
■ TCNT,FROM,TO,RDC,CUS,INCL,PRIOUT	23-43
■ TCON,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT	23-52
■ TCON,FROM,TO,MPM,NTR,RDC,CUS,INCL	23-65
■ TCON,FROM,TO,PFW,NFW	23-82
■ TCON,FROM,TO,RDC,CUS,INCL,PRIOUT	23-89
■ TDIS,FROM,TO,INCL,OOS,DCC	23-98
■ TDIS,FROM,TO,INCL,OOS,DCC,PRIOUT	23-113
■ TDIS,FROM,TO,OOS,INCL,PRIOUT	23-123
■ TS0MBOFL	23-132

Contents

■ TTST,HUB,TO,TG	23-136
■ TTST,HUB,TO,TP	23-145
■ TTST,LPD,TG	23-152
■ TTST,LPD,TP	23-154
■ TTST,MON,TG	23-158
■ TTST,MON,TO,TG	23-167
■ TTST,MON,TO,TP	23-177
■ TTST,RT,DGA,DGB,DGC,DGD,DGP,LLB,TO	23-190
■ TTST,SPL,TG,NOYLW	23-193
■ TTST,SPL,TP	23-202
■ TTST,TGR,TG,OOS	23-210
■ TTST,TLA,NOT,TP	23-221
■ TTST,TLA,TG	23-232
■ TTST,TLR,NOT,TP	23-240
■ TTST,TLR,TG	23-250
■ TTST,TPR,ALL,OOS	23-258
■ TTST,TPR,TP,OOS,FRC	23-260

UTL	24-1
■ UTL,ACO	24-2
■ UTL,BMTR,FROM,TO,EXCT,INCL,UPGRD	24-4
■ UTL,BOOT,FRAME,CLR	24-10
■ UTL,CLR,ALL	24-12
■ UTL,CLR,ERR,HWER,SWER	24-14
■ UTL,CLR,MSGLOG,RSTNUM	24-16
■ UTL,CLR,NPC,ALL,AI,LOCN,MONDAT,MONTIM	24-18
■ UTL,CLR,NPC,PARAMS	24-30
■ UTL,CLR,NPC,RT,DL	24-35
■ UTL,CLR,PWR	24-43
■ UTL,CLR,UNIT,DS3,ALLDS3,AI,MONDAT	24-45
■ UTL,DATE,FORMAT,INT	24-51
■ UTL,INIT,ALM	24-54
■ UTL,LOC	24-56
■ UTL,QRY,ALL	24-69
■ UTL,QRY,ALL,COMMON	24-80
■ UTL,QRY,ALL,UNIT	24-86

Contents

■ UTL, QRY, ALM, DS3	24-113
■ UTL, QRY, ALMOPT, NPC, AIS	24-118
■ UTL, QRY, ALMS	24-132
■ UTL, QRY, ALMS, DBASE	24-169
■ UTL, QRY, ALMS, RT, DL	24-178
■ UTL, QRY, APPL, NPC, ALL	24-181
■ UTL, QRY, BCAST, ALL	24-187
■ UTL, QRY, BCAST, FROM	24-195
■ UTL, QRY, BCAST, FROM	24-205
■ UTL, QRY, CMAP	24-214
■ UTL, QRY, CNFGR	24-252
■ UTL, QRY, CS, NPC	24-255
■ UTL, QRY, DATE	24-260
■ UTL, QRY, DMAP	24-262
■ UTL, QRY, DS3, BERMT, UNIT	24-298
■ UTL, QRY, DS3, LBO	24-300
■ UTL, QRY, ECLOC	24-302
■ UTL, QRY, EQD, COMMON	24-304
■ UTL, QRY, EQD, CONN	24-308
■ UTL, QRY, EQD, ETSIS	24-310
■ UTL, QRY, EQD, MIUS	24-312
■ UTL, QRY, EQD, MXRS	24-314
■ UTL, QRY, EQD, NPCS, TOTAL, UNIT	24-317
■ UTL, QRY, EQD, TSIS	24-335
■ UTL, QRY, EQD, UNIT	24-337
■ UTL, QRY, EQD, UNITS	24-361
■ UTL, QRY, ERR, SWER, HWER, INT, DATE, TOD, TN	24-363
■ UTL, QRY, ESR, CCN	24-373
■ UTL, QRY, ESR, ECCN	24-376
■ UTL, QRY, ESR, MP	24-380
■ UTL, QRY, ESR, NPC, SIDE	24-385
■ UTL, QRY, ESR, UNIT	24-395
■ UTL, QRY, ESR, UNIT, DSPI	24-399
■ UTL, QRY, ESR, UNIT, FC	24-401
■ UTL, QRY, ESR, UNIT, FLI	24-404
■ UTL, QRY, ESR, UNIT, FMT	24-407
■ UTL, QRY, ESR, UNIT, FTMI	24-410
■ UTL, QRY, ESR, UNIT, MIU	24-414

Contents

■ UTL, QRY, ESR, UNIT, MXR	24-416
■ UTL, QRY, FPKG	24-421
■ UTL, QRY, FROM	24-425
■ UTL, QRY, FROM	24-452
■ UTL, QRY, HUBID	24-460
■ UTL, QRY, LIST, MACRO, USER	24-462
■ UTL, QRY, LIST, MAP, USER	24-465
■ UTL, QRY, LOAD, NPC, TOTAL	24-468
■ UTL, QRY, LOG, ALL	24-475
■ UTL, QRY, LPBK, NPC	24-479
■ UTL, QRY, LPBK, UNIT	24-493
■ UTL, QRY, MACRO, ATTR, USER, ALL	24-495
■ UTL, QRY, MACRO, MAP, SPACE, USER, ALL	24-499
■ UTL, QRY, MACRO, USER	24-502
■ UTL, QRY, MAP, ATTR, ALL, USER, MAPNM	24-505
■ UTL, QRY, MARK	24-508
■ UTL, QRY, MARK	24-524
■ UTL, QRY, MEMSTAT	24-542
■ UTL, QRY, MSGLOG, RANGE	24-550
■ UTL, QRY, NFS, NPC	24-552
■ UTL, QRY, NPC, ALL, AI, LV, LOCN, MONDAT	24-558
■ UTL, QRY, NPC, MAP, USER	24-578
■ UTL, QRY, NPC, RT, DL	24-587
■ UTL, QRY, NPCTG	24-603
■ UTL, QRY, OPT, TYPE, ALL, NPCS	24-611
■ UTL, QRY, PEST, FAIL, OOS, COMMON	24-618
■ UTL, QRY, PEST, FAIL, OOS, UNIT	24-623
■ UTL, QRY, PMSCHED, NPC, ALL	24-649
■ UTL, QRY, PSTATE, UNIT	24-659
■ UTL, QRY, ROLL, DS0, NPC, ALL, UNIT	24-663
■ UTL, QRY, ROLL, DS1, NPC, ALL, UNIT	24-670
■ UTL, QRY, RTMAP, DLMAP	24-678
■ UTL, QRY, SCON, CH, TO	24-697
■ UTL, QRY, SCON, TO	24-704
■ UTL, QRY, SCR, LINK, USER, LINKS, USERS	24-712
■ UTL, QRY, SECH, TO	24-721
■ UTL, QRY, SIGST	24-728
■ UTL, QRY, SQN	24-733

Contents

■ UTL, QRY, SRHDW, TO	24-735
■ UTL, QRY, SROOF, TO, ALL	24-746
■ UTL, QRY, STATE, ACO	24-754
■ UTL, QRY, STATE, NPC	24-756
■ UTL, QRY, STATE, NPC	24-785
■ UTL, QRY, STATE, SCDG, NPC, RT, DL, ALL	24-819
■ UTL, QRY, STATE, SYNC	24-827
■ UTL, QRY, STATE, UNIT, DS3	24-830
■ UTL, QRY, STR, LINK	24-835
■ UTL, QRY, STR, SYNC	24-845
■ UTL, QRY, STR, SYNC, TLI	24-851
■ UTL, QRY, STR, SYNC, TLI, SSP	24-854
■ UTL, QRY, STR, XC	24-858
■ UTL, QRY, SYNC, TYPE	24-860
■ UTL, QRY, TGS	24-863
■ UTL, QRY, TO	24-870
■ UTL, QRY, TO	24-900
■ UTL, QRY, TOD, CFA	24-920
■ UTL, QRY, TPS	24-923
■ UTL, QRY, TS0, NPC	24-930
■ UTL, QRY, TS0M, NPC	24-936
■ UTL, QRY, TSIG, NPC	24-941
■ UTL, QRY, UNIT, DS3, ALLDS3, AI, LV, MONDAT	24-948
■ UTL, QRY, UNIT, FTMI, EQL	24-957
■ UTL, QRY, WHO	24-960
■ UTL, QRY, XCSB, UNIT	24-963
■ UTL, RCY, COND, IN, PROGRESS	24-972
■ UTL, RCY, PASSWD	24-975
■ UTL, SCHED, PMREPT, NPC, RI, ST, NI, LV, LOCN	24-977
■ UTL, TOD, CFA, FAC, X, PRIM, MONDAT	24-987

Glossary

G-1

IN

Index

IN-1

Tables

8-1.	Parameter Register Threshold Range and Default Values	8-97
8-2.	Provisioning values for x	8-103
8-3.	Provisioning values for y	8-104
8-4.	Provisioning values for z	8-105
8-5.	Combinations of x and y Values	8-108
8-6.	Combinations of y and z Values	8-108
8-7.	Provisioning values for x	8-158
8-8.	Provisioning values for y	8-159
8-9.	Provisioning values for z	8-160
8-10.	Combinations of x and y Values	8-163
8-11.	Combinations of y and z Values	8-163
8-12.	Parameter Register Threshold Range and Default Values	8-230
8-13.	Provisioning values for x	8-289
8-14.	Provisioning values for y	8-290
8-15.	Provisioning values for z	8-291
8-16.	Combinations of x and y Values	8-294
8-17.	Combinations of y and z Values	8-294
8-18.	Parameter Register Threshold Range and Default Values	8-299
8-19.	Parameter Register Threshold Range and Default Values	8-347
18-1.	Provisioning values for x	18-64
18-2.	Provisioning values for y	18-64
18-3.	Provisioning values for z	18-65
18-4.	Combinations of x and y Values	18-68
18-5.	Combinations of y and z Values	18-69
19-1.	Provisioning values for x	19-40
19-2.	Provisioning values for y	19-41
19-3.	Provisioning values for z	19-42
19-4.	Combinations of x and y Values	19-45
19-5.	Combinations of y and z Values	19-45
24-1.	Provisioning values for x	24-240
24-2.	Provisioning values for y	24-241
24-3.	Provisioning values for z	24-242
24-4.	Combinations of x and y Values	24-245
24-5.	Combinations of y and z Values	24-245
24-6.	Provisioning values for x	24-284

Tables

24-7.	Provisioning values for y	24-284
24-8.	Provisioning values for z	24-285
24-9.	Combinations of x and y Values	24-288
24-10.	Combinations of y and z Values	24-288
24-11.	Provisioning values for x	24-441
24-12.	Provisioning values for y	24-442
24-13.	Provisioning values for z	24-443
24-14.	Combinations of x and y Values	24-446
24-15.	Combinations of y and z Values	24-447
24-16.	Provisioning values for x	24-773
24-17.	Provisioning values for y	24-774
24-18.	Provisioning values for z	24-775
24-19.	Combinations of x and y Values	24-777
24-20.	Combinations of y and z Values	24-778
24-21.	Provisioning values for x	24-803
24-22.	Provisioning values for y	24-803
24-23.	Provisioning values for z	24-805
24-24.	Combinations of x and y Values	24-808
24-25.	Combinations of y and z Values	24-808
24-26.	Provisioning values for x	24-910
24-27.	Provisioning values for y	24-911
24-28.	Provisioning values for z	24-912
24-29.	Combinations of x and y Values	24-914
24-30.	Combinations of y and z Values	24-915

About This Document

About This Document

Purpose

The *DACS II Release 8.2.3 Command and Message Manual* describes the input commands and output messages of Release 8.2.3 of the Digital Access and Cross-Connect System II (DACS II). In addition, it provides full support for previous product releases.

⇒ NOTE:

Those customers using this manual with Releases 3 through 7.0.3 software should be aware that all features of a particular message shown for Release 8.2.3 may or may not apply to previous releases.

This manual consists of three volumes as follows:

- **Volume I** - This volume contains general information about the document, a detailed introduction that defines DACS II messages, relates how to communicate with DACS II, introduces the administrative links, and discusses in detail NPC addressing, on-line help feature, system configuration and features a listing of related documentation. Message listings in this volume include alphabetical and numerical, summary list of input commands and a list of autonomous messages. A comprehensive presentation of input commands and output messages (ABT through DGN) concludes this volume.
- **Volume II and III** - These two volumes contain input commands and output messages in the following order:
 - **Volume II** - DGRTH through SW
 - **Volume III** - TABS through UTL and the Glossary

Reason for Issue

The *DACS II Release 8.2.3 Command and Message Manual* has been issued to include updated and new commands applicable to Release 8.2.3.

Intended Audiences

This manual is a catalog of messages intended for reference by a technician or craftperson who needs additional details about a message. It provides the user with supplemental information for the Digital Access and Cross-Connect System II (DACS II) that is programmed in the Program Documentation Standards (PDS) language. An example of a user is someone performing a task from an operation and maintenance manual who needs the definition of a specific keyword to complete the task.

How to Order Documentation

To order additional copies of this document, send or call in an order as follows:

- To order by Mail:

Lucent Technologies
Customer Information Center
Attention: Order Entry Section
2855 N. Franklin Road
P. O. Box 19901
Indianapolis, IN 46219

-
- To order by Telephone (Monday through Friday);

Within the United States of America:

1-888-LUCENT8 (582-3688) (7:30 a.m. to 6:30 p.m. EST)

From Canada:

1-800-255-1242

Worldwide:

Toll: **1-317-352-8557**

FAX: **1-317-352-8484**

For RBOC/BOC customers, process orders through your Company Documentation Coordinator.

For commercial customers, a check, money order, purchase order number, or charge card number is required with all orders. Make checks payable to Lucent Technologies.

Lucent Technologies entities should use Form IND 1-80.80 FA, available through the Customer Information Center.

One-time orders include a binder (if applicable) and the document contents for the current issue in effect at the time of order. After placing a one-time order, you can request a standing order for any document revisions *of that software release*. Documents for new software releases do *not* go to standing-order customers. You will only get those documents if you order the new software release.

How to Comment on This Document

A feedback form is located at the beginning of this publication, immediately after the title page. Please fill out the feedback form and return it (postage free) to the address on the back.

If the feedback form is missing, send comment on this publication to:

Lucent Technologies
DACS II Documentation Coordinator
Attn: Tabatha Wright
101 Crawfords Corner Road
Room 1B-320
Holmdel, NJ 07733-3030 USA

Introduction

Introduction

Foreword

This manual contains commands and messages for Digital Access and Cross-Connect System II (DACS II) software Release 8.2.3.

Who Should Use This Manual

This manual is a catalog of messages intended for reference by a technician or craftsperson who needs additional details about a message. It provides the user with supplemental information for the DACS II that is programmed in the Program Document Standards (PDS) language. An example of a user is someone performing a task from an operation and maintenance manual who needs the definition of a specific keyword to complete the task.

How To Use This Manual

The user refers to a particular message via the message number or the action verb. The messages are arranged in alphabetical order by action verb; for example, add, audit, broadcast, change, etc. A numerical list, an alphabetical list, and a summary of input commands list provide cross referencing of messages and should help in locating a particular message.

A *message* is a communication between a user* and DACS II. Input messages, or *commands*, are sent by a user to a DACS II. Output messages are originated by a DACS II and sent to the user.

* A *user* can be a person operating a terminal connected to a DACS II or an Operations System (OS), such as TIRKS† system, SARTS, etc.

† TIRKS is a registered trademark of Bell Communications Research, Inc.

How the Manual Is Organized

This manual consists of three volumes as follows:

Volume I Contents

- Introduction
 - About This Manual
 - DACS II Messages
 - Communicating With DACS II
 - DACS II Administrative Links
 - NPC Addressing
 - On-Line Help Feature
 - System Configuration
 - Documentation Support
 - Message Lists
 - Alphabetical List of Messages
 - Numerical List of Messages
 - Summary of Input Commands
 - List of Autonomous Messages
 - Messages (ABT through DGN).

Volume II Contents

- Messages (DGRTN through SW).

Volume III Contents

- Messages (TABS through UTL).
- Glossary

DACS II Messages

In this manual, DACS II messages are arranged in alphabetical order with the input command preceding the output message(s) associated with that command. Table 1, following the "Output Message Format" section, groups the messages according to functional category, message number, verb, and keyword. The inexperienced technician or craftsman should find this table helpful in locating a particular message, group of messages, verb, or keyword.

How the Messages In This Manual Are Formatted

Each message is presented in actual input command format with accompanying explanations of parameters. Additionally, all responses to the input command, such as the completion, the denial, and any autonomous messages generated from the input or that are activated by the machine, are shown.

Understanding Message Numbering

Messages are grouped according to verbs and keywords and are indexed for reference by a *message number*.

IMPORTANT: In the PDS language, the message number is used for organization and reference and does not appear in an actual message.

Message numbers have the following format:

I . mmmmn	Input command
O . mmmmn	Output message reporting a successful or conditional completion (COMPL) of the input command
O . mmmmn . pp	Output message reporting a denial (DNY) of the input command.

Input commands are prefixed by an I; output messages are prefixed by an O. All messages related to each other have the same mmmm digits. An input command may have more than one completion output message. In this case, the last digit, n, indicates the particular completion message. Denial output messages are referenced by the additional digits pp.

For example, consider the monitor test access group of messages (mmm = 2100). Below is a replica of the input command followed by the possible output messages for this group:

```
I.21001    TTST:FRM xy,SEQ ww:MON[, TO ghijjj], TP kk!  
O.21001    ::TTST MON TP COMPL  
O.21001.01 ::TTST TP DNY  
O.21001.02 ::TTST MON TP DNY  
O.21001.03 ::TTST MON TP ASSGN DNY  
O.21001.04 ::TTST MON TP DNY
```

Usage of Uppercase and Lowercase Characters

In the command and message formats, uppercase and lowercase letters distinguish between information that is constant (uppercase) and information that is variable (lowercase). Any character written in uppercase appears on the output device exactly as written. A variable represented by lowercase letters will be replaced on the printout or screen by a value listed under the EXPLANATION OF PARAMETERS for that particular variable.

Representation of Lines Longer Than the Page Width

Many message lines in this document exceed the width of the margins of the page on which they are printed. Consequently, a way to present the message on more than one line while maintaining an accurate representation of the message's parameter fields and the character spacing between them has been devised. The backslash character is used in both input and output message representations to mark the point in the message text where a single line has been truncated and continued onto another line. This is consistent with the present use of the backslash character on input to enter a command whose length exceeds 80 characters. The user can easily construct the single-line representation because the backslash marks the extent of any blank characters in the message.

Rather than using the backslash convention discussed above, some utility (UTL) output messages are printed in a reduced type font because of their volume.

Delimiters

Delimiters are used to enclose a field in a message:

- [] Brackets indicate an optional field, one which may or may not be used in the input command or appear in the output message.
- { } Braces indicate a field containing alternate choices. For input commands, the user must select one of the choices. In output messages, braces indicate that only one of the fields within the braces will appear.
- < > The less than and greater than symbols enclose an abbreviation representing variable length information. These delimiters are never used in actual DACS II input commands or output messages but are used only in describing the message format in this manual.
- () Parentheses **are** part of the message text and must be entered where shown.

Message Layout and Heading Definitions

The layout or skeleton for a message in this manual contains the following major headings:

- INPUT COMMAND FORMAT
 - Nonhierarchical Format
 - Hierarchical Format
- EXPLANATION OF COMMAND
- EXPLANATION OF PARAMETERS
- COMPLETION MESSAGE
 - Nonhierarchical Format
 - Hierarchical Format
- DENIAL MESSAGE (Not applicable to every message)
 - Nonhierarchical Format
 - Hierarchical Format
- AUTONOMOUS MESSAGES (Not applicable to every message)
 - Nonhierarchical Format
 - Hierarchical Format.

INPUT COMMAND FORMAT shows the command exactly as it appears when entered at the terminal. An exception is that some input commands are too long to be displayed on a single line; therefore, these messages are presented on multiple lines. Both the nonhierarchical and hierarchical NPC numbering formats are shown (refer to the "NPC Addressing" section).

EXPLANATION OF COMMAND explains the input command in general terms.

EXPLANATION OF PARAMETERS explains keywords and variables in detail, such as the specific entity, condition code, etc., for that command. The uppercase letters denote keywords and the lowercase letters denote variables.

COMPLETION MESSAGE is the normal response to the input command and indicates the successful completion of the command or the task requested by the command.

DENIAL MESSAGE indicates the input command has been denied and will not be executed. The denial message includes an error code describing the reason for the denial.

AUTONOMOUS MESSAGES report a change in the equipment/operations state of the DACS II. For example, a frame audit message (FRADTS) will be generated when a diagnostic and audit background test finds a problem with the equipment.

Communicating With DACS II

Input Command Modes

An input command requests an action to be performed; this command contains necessary information for DACS II to accomplish the requested action. The user has two basic modes for inputting commands: The command mode and the menu/prompt mode.

Command Mode

The command mode is for the experienced user or machine-machine operation. A command must be selected along with variables and entered within a single line. The user types a single-line command with the only carriage return occurring at the end. "Single-line" refers to the input *command*, not to the display of the command. *A long single-line command may extend for several lines on a display terminal.*

DACS II accepts up to 120 characters of input per command. If an input command exceeds 80 characters (the standard width of most terminal screens), the input will continue on the next line of the display beginning with the 81st character. However, the command line can be broken at a convenient place by typing a backslash (\) followed by a carriage return. The display of the input command will continue on the next line, but the command will be interpreted as a single-line command. If 120 characters is not sufficient or if the user finds entering long commands error-prone, the single-line command can be broken up into several smaller commands.

Entering a carriage return without the backslash terminates the input and causes the line to be interrupted. An exclamation point (!) also terminates the input command (that is, DACS interprets the carriage return and ! as the end of the command). If the carriage return is used, ! is echoed back to the terminal.

Menu/Prompt Mode

The **menu/prompt mode** consists of **on-line help** to assist a user in completing an input command. This mode aids the user by providing a list of context sensitive alternative variables or keywords.

The user starts the menu/prompt mode by entering a question mark (?) in the command line at the point in question. In response, DACS II presents a list of possible keywords. This list is presented to the user in menu or prompt form. At this point, the user may continue or return to the command line. If the user continues, he/she should refer to the detailed examples (menu form and prompt form) in the "On-Line Help Feature" section.

Aborting an Input Command or Output Message

The ABT command is entered to *interrupt an input command or an output message*. If ABT is entered for a particular link, the output from this link will be interrupted just after the ABT command is entered or after one or two output lines. The output message on the other links may or may not be interrupted, option dependent. When ABT is used, the command generating the output will be completed unless the autonomous message, ERR CMD ABT

TM STOPPED (Message O.01121), appears. See the ABT command (I.55711) in this document for a list of commands and messages that may be aborted.

For a nonabortable message, the output message will not be affected.

If a nonabortable message is being printed out but DACS II is executing an abortable command, the ABT command will stop that command and ERR CMD ABT TM STOPPED will be outputted on all links.

Input Command Format

General

The general format for an input command is:

VERB:FRM xy,SEQ ww:DATA [] !

VERB is the action verb telling the system to do something: add, change, cross-connect, restore, etc. The verbs are listed in Table 1 and in the Glossary.

The FRM xy field identifies the DACS II frame to which the command is being sent. A DACS II frame is identified by a 2-digit number whose range is from 00 through ZZ. This number is assigned to the frame when it is placed into operation.

The sequence field SEQ ww assigns an identifying 2-digit number to the command. The number is arbitrarily chosen by the operator. This field is commonly used when two or more remote operators using an OS are sharing the same administrative link. Sequence numbers enable the operators to keep track of their commands.

The frame and sequence fields are optional. If the sequence field is omitted, sequence number "00" is assigned to the command by default.

The DATA field consists of keywords and numbers as required by the command. A delimiter, brackets [] in this case, encloses variable optional information which gives specific information that is required by the verb to execute that command. All variables are positional by significance within the command line.

Colons are used to separate the variables (also called group, block, field); but if they are logically connected, these variables are separated by commas. The colon (:) is used as a variable field delimiter.

Additional variable information is contained in the EXPLANATION OF PARAMETERS as required for the message. Verbs, keywords, and variables are positionally significant within the command line.

Command Example

RST:FRM 05,SEQ 12:NPC 097! PF

The above command asks DACS II to restore to service (RST) network processing circuit number 97 (NPC 097) in DACS II frame number 5 (FRM 05). The operator has arbitrarily assigned the sequence number 12 (SEQ 12) to the command.

Keywords

An input command consists of *keywords* that combine the equipment and circuit identification variables. A *keyword* is an alphanumeric string of characters representing:

- Verb (also called action verb or command verb)
- Entity identification
- Address specification
- Results of a command.

Verbs are keywords or action verbs that tell the system to do something. Table 1 lists all Release 8.2.3 verbs and their associated keywords.

Entity identification is a keyword that identifies a specific system or circuit pack within the system. For example, the keyword NPC refers to a network processing circuit.

Address specification is a keyword that refers to a specific address. TP 03, for example, refers to a specific test port (Test Port 03).

Keywords sometimes report the results of a command. In response to a diagnostic command, DACS II might return the keyword ATP to indicate "All Tests Passed."

The "Glossary" section contains a listing of all keywords and their definitions.

Input Command Control Characters

The following characters may be used while entering the input command:

& (or **CONTROL-x**, or **CTRL-x**). *Abandon message.* Entering any one of these characters will cause the message to be abandoned and will return the DACS II system prompt.

^ h (or **CONTROL-h** or **CTRL-h**), **_** (underline), **S** (or **BACKSPACE**). *Erase last character.* Depressing the CONTROL and the H keys simultaneously or depressing the underline key or the BACKSPACE key causes DACS II to ignore the last character of a message and echo an underline (_). Entering *n* number of erase character symbols causes DACS II to ignore the last *n* characters of a message.

BREAK. *Interrupt output message.* The BREAK key interrupts an output message. The message continues after an allotted amount of time has passed or after the operator completes entering the input command.

Input Command Acknowledgements

After DACS II has received the execute character of the input command, an immediate reply will appear with one of the following acknowledgements:

PF (Printout Follows)

DACS II received the input command and processed it. An output message will soon be returned. The output message will report the results of the work initiated by the command. If the system cannot complete the command, the reason will be printed.

RL (Retry Later)

DACS II cannot execute the requested command now because it does not currently have system resources available.

- The system could be temporarily overloaded.
- The command queue could be excessively long.
- The requested program may be busy, etc.

Wait, and enter the command later.

NG (No Good)

The basic format of the command is correct, but the system is in trouble. For example, MP = MCOND means the main processor is in the maintenance condition state.

NA (No Acknowledgement)

The command has been accepted by the parser, but processing control has been lost, thus making correct acknowledgement impossible. An example is when the communications interface (CI) has detected a local area network (LAN) failure.

If either NA or RL is sent as an input acknowledgement, a normal or error output message may not be sent. Also, if the input command itself is in error, the input acknowledgement will indicate this fact and either the normal or error message will not be sent.

Acknowledgement**Meaning**

?V<cr><lf>	Command code error
?D<cr><lf>	Parameter block error
?E<cr><lf>	Error in command, cannot be identified as either ?V or ?D
?P<cr><lf>	Parity error occurred in the input
?T<cr><lf>	The time between characters exceeded timeout threshold
?X<cr><lf>	Command aborted, in response to a <cancel> or <break> from user.

Output Message Format

There are three types of DACS II output messages. The normal or **completion message** indicates that the input command from the user has been executed and completed. An error response or **denial message** means the input command has been denied and gives the reason or condition code for the denial. An autonomous output message reports a change in the operational state of the DACS II.

General Format of a Single-Line Output Message

The format for an output message is:

PA TIME FRM,SEQ LINK IDENT DATA TERM

The priority of action (PA) field is a 2-character field indicating the priority level as follows:

*C	Immediate action, critical alarm
**	Immediate action, major alarm
*	Action, minor alarm
M^	Results of manual action
A^	Autonomously generated action message
I^	Autonomously generated information message.

Note: The ^ indicates a space.

TIME is the time of day using a 24-hour clock with an hours:minutes:seconds (hh:mm:ss) format.

The 2-digit FRM field identifies the DACS II frame that sent the message.

The LINK field contains a digit from 1 through 6, optionally followed by two more digits, that identifies the DACS II administrative link that originated the command. A blank LINK field indicates an autonomous message generated within DACS II. The optional two digits identify the virtual circuit number and range from 1 through 16.

The IDENT and DATA fields identify the action verb and associated keywords, variables, and data to which the output message is responding.

The termination field, TERM, indicates the results of a requested command. Some possible terminations are:

COMPL	Requested action is completed.

STOPPED	Requested action stopped before normal completion.
IN PROGRESS	Requested action is in progress.
[] DNY	Requested action is denied. The reason for denial is indicated in the output message. The brackets signify various keywords and data used to explain the reason.

Completion Message

A possible response to the input command `RST:FRM 05,SEQ 12:NPC 097!` (restore to service network processing circuit number 097 in DACS II Frame 05) could be:

```
M 07:39:20 05,12 2 RST NPC 097 TYPE DE100 COND 00 COMPL
```

M, the priority of action, indicates the result of a manually entered command. The time (07:39:20), the DACS II frame number executing the command (05), the message sequence number (12), and the link number (2) follow. The remaining fields reflect the input command that originated the output message and the results of the command. In this case, network processing circuit number 097 (NPC 097), a standard DE100 digroup card (TYPE DE100), was restored to service (RST). Restoration of the NPC occurred without error (COND 00), and the command was successfully completed (COMPL).

Denial Message

A possible response to the input command `RST:FRM 05,SEQ 12:NPC 097!` could be:

```
M 07:39:20 05,12 2 RST NPC 097 TYPE DE100 COND 02 DNY
```

The denial reason in this example (COND 02) means that the NPC is not equipped. The other fields in the message are the same as the completion message.

Autonomous Messages

This example of an autonomous output message (65041) reports that a major or minor alarm for a parameter has been idled or cleared:

Nonhierarchical Format

```
I 07:39:20 05,12 ALM IDLD <parameter> NPC 097 COMPL
```

Hierarchical Format

```
I 07:39:20 05,12 ALM IDLD <parameter> NPC 01423 COMPL
```

Table 1. Functional Categories of Messages

MESSAGE CATEGORY	NUMBER	VERB	KEYWORD
Input Denials	01100	*	BAD, CMD, STOPPED, INACT
Startup Messages	01200	*	STARTUP, BOOT, RESET
Error Messages	01300	*	ERR, OVERLOAD, RESET
One-Way Cross-Connect Two-Way Cross-Connect	11000	OCON TCON	FROM, TO, MPM
One-Way Terminated and Two-Way Terminated Cross-Connections	12000	OCNT TCNT	FROM, TO, MPM
Broadcast Cross-Connect	13000	BCON	FROM, TO, TOX, BCAST, COND
Alternate Cross-Connect	14000	ACON	OLD, NEW, INCL, CUS, RDC
One-Way Disconnect Two-Way Disconnect	15000	ODIS TDIS	FROM, TO, BCAST
Broadcast Disconnect	15200	BDIS	FROM, TOX, BCAST
Change Circuit Parameters	17000	CHG	TCON, OCON, FROM, TO
Change Circuit Parameters	18.20	CHG	BCON, SWCH
Edit Macro or Alternate Map	19000	ED	MACRO, MAP, APPEND, OPEN DELETE, LIST, SAVE, MOVE
Two-Way Monitor Test Access	20000 21000	CTST TTST	FAD, FROM MON, TP, ASSGN
Two-Way Split Test Access	23000	TTST	SPL, TP
Two-Way Hub Test Access	24000	TTST	HUB, TP

* Autonomous Output Message

Table 1. Functional Categories of Messages (Contd)

MESSAGE CATEGORY	NUMBER	VERB	KEYWORD
Two-Way Terminate and Leave Activate/Release Test Access	25000	TTST	TLA, TLR, TP, NUTST UASGN, PTLA, NTLA
Two-Way Test Port Release Test Access	27000	TTST	TPR, TP, ALL, COND
Two-Way Looped Test Access	29000	TTST	LPD, TP
Growth	30000	GRTH	FRAME, SYNC, UNIT, TB NPC, TP, TLI, RTMI, FC
Degrowth	32000	DGRTH	SYNC, UNIT, TB, TLI NPC, TP, FTMI, TYPE
Remove	33000	RMV	MC, LINK, SYNC, CCNI CCB, TSI, TSIS, UNIT CRO, CCN, UC, FC, NPC CCI, ETSI, ETSIS, ECCN
Restore	34000	RST	MC, LINK, SYNC, CCNI CCB, TSI, TSIS, CCN UNIT, NPC, TLI, CRO ALL, UC, FC CCI, ETSI, ETSIS, ECCN
Configure	35000	CFR	XC, SYNC, FRAME
Add	36000	ADD	LINK, LEV, LANG
Edit/Delete	37000	DLT	NPC, USER, FPKG
Change Unit, CCN, NPC Parameters, User/Link profile, and Memory Allotment	38.20	CHG	FRM, SYNC, UNIT, SETOP NPC, PASSWD, SCR GR, MAP SPACE

Table 1. Functional Categories of Messages (Contd)

MESSAGE CATEGORY	NUMBER	VERB	KEYWORD
Activate Map, Execute Macro, Login, Logoff	39000	ACT, EXC, STOP, LOGIN, LOGOFF	MAP, MACRO, USER, TCON
Diagnose	41000	DGN	FRM, MC, LINK, CI, SSC, DISK, TAPE, XC, SYNC, CCNI, CCB, TSI, TSIS, UNIT, NPC CCI, ETSI, ETSIS, ECCN
Utilities	51000	UTL	TOD, ACO, INIT, WHO QRY, DATE, BMTR, CLR FRM, VEDRSN, RCY, PASSWD CNFGR, ALM, FPKG
Utilities	52000	UTL	QRY, CMAP, DMAP, FROM TO, BCAST, TYPE, ALL, SYNC, EQD, UNITS, TSIS MARK
Utilities	53000	UTL	QRY, EQD, TPS, OPTS PEST, FAIL, OSS, ALMS ETSIS
Utilities	55000	UTL	QRY, ESR, STR, ECCN
Utilities	56000	UTL	CLR, STATE, LOC
Utilities	58.20	UTL	BOOT, CLR
Alarm	65000	ALM	CGA, DC, AR01, MJ, MN IDLD, ECCN, OOS, BMTR
Audits	8.200	AUD	QRY, ALL, FTU, NPCS
Frame Audits	8.200	FRADTS*	DGN, FRCMP, BMCMP, MC

* Autonomous Output Message

DACS II Administrative Links

The DACS II can be administered (managed, operated) from a local terminal or remotely from an operations system (OS) connected via an administrative link. Six physical links can be connected to the DACS II frame. Links 1–4 are asynchronous and links 5 and 6 can be

asynchronous or synchronous depending on the communications interface. Sixteen virtual circuits may be established on a synchronous link.

Variables *n* and *vv* are used within the message formats to represent the physical and virtual link numbers, respectively.

A level of message screening can be assigned to each link. A user may choose to always receive output messages in response to his/her commands, to receive selected messages, or to receive all messages from the other links. Autonomous messages may be blocked for a particular link to prevent other output messages from being interspersed among the user's messages. Some uses of an administrative link are:

- DS0 channel and clear DS1 signal cross-connections and test access
- Subrate data feature cross-connections
- Common equipment and feature equipment provisioning and maintenance
- Equipment and channel status information
- DS1 and DS3 facility provisioning and maintenance
- DS1 and DS3 facility performance readings
- DS3 facility alarm surveillance and control (AS&C) and DS3 performance monitoring using telemetry asynchronous block serial (TABS) protocol.

Administrative links carry output messages in response to one of the following occurrences:

- An input command

The output message reports that the input command was either completed successfully or denied; additionally, it may contain information requested by the input command. A *normal response* is an output message reporting a successful completion; and *error response* is an output message reporting a denial.

- An autonomous change in DACS II operation state

The output message reports a change in the DACS II system operation state which includes alarms and other trouble indications. This type of output message is referred to as an *autonomous response*.

NPC Addressing

Two addressing or numbering schemes for network processing circuits are available: the **nonhierarchical or extended format** and the **hierarchical**. These numbering methods are used to provide a means of locating network processing circuits.

Nonhierarchical Numbering

The **nonhierarchical or extended method** uses consecutive numbering to count through the units in the frame. Each unit has a fixed starting number (for example, 161 for unit 2; 21 for unit 3; 481 for unit 4). The starting number is the same for FTU or DSPU type units.

Hierarchical Numbering

The **hierarchical method** uses a three-part number: the unit number (uv), the module or group number within the unit (m), and the NPC number within the module (np) for a total of five digits (uvmnp).

On-Line Help Feature

Description

DACS II provides on-line assistance to the user when constructing commands at the terminal. This assistance is in the form of a menu-driven help routine. Different menus are displayed during the routine to provide the user with information on all of the command fields. The menu items include: command verbs, applicable keywords for a command, definitions of keywords, and the possible choices or number range for a variable field. Inappropriate selections bring error messages.

The help routine can be used to the degree needed to complete the command: either through the entire command in every field or only for a particular part of the command. Help will probably not be needed after some experience is gained at entering commands, since all the commands are documented and the direct entry of commands is so much faster.

The question mark and RETURN are entered to invoke the different levels of the help routine. A question mark is entered by simultaneously depressing **SHIFT** and **?**. The question mark is used to initiate the routine or to get more information, and RETURN is used to see the alternative choices at a given point. The dialogue can be terminated either by typing CTRL-x or by completing the current command line when it is displayed. These functions are demonstrated in the following portion.

Summary: The Help Feature

By entering **SHIFT** **?**, the user may ask DACS II for help at any time before or during the construction of an input command.

In the help mode, DACS II will offer the user menus for the selection of the message keywords and/or prompt for values of variable fields. Entering **SHIFT** **?** provides a greater detail of information on the keywords or variables.

A user may select a keyword from a menu by selecting its index number or by entering the keyword itself.

The **RETURN** key displays the command line that has been constructed so far. The user may then enter the remaining keywords and values to complete the command or may enter **SHIFT** **?** to return to the menu/prompt mode.

Constructing An Entire Command Using Help

The following sequence demonstrates the use of the menus in the help routine to construct a simple UTL (utility) command. Only portions of long menu lists are shown here, but these examples still serve to demonstrate how selections are made.

- (1) To invoke the help routine at the start level, enter **SHIFT** **?**. DACS II will respond with OK and the following menu:

Select from:

1. ABT
2. ADD
3. AUD
- .
- .
- .
20. UTL

Selection?

- (2) To obtain more explanation, enter **SHIFT** **?**. DACS II will respond with OK and the following list:

Select from:

1. ABT (abort the current command)
2. ADD (adjust link parameters)
3. AUD (query facility alarm data)
- .
- .
- .
20. UTL (perform a general utility)

Selection (1-20 or the actual literal)?

- (3) Here you can enter either 20 or UTL followed by **SHIFT** **?**. The DACS responds with this menu:

Select from:

1. ,
2. :
3. FRM
4. SEQ

Selection?

- (4) To bypass the frame and sequence number, which is normally done unless that information is needed for records or to direct the command to a different location, the user enters either 1 or : followed by **SHIFT** **?**. The question mark prompts DACS II to respond with a list of possible keywords that could appear next in the command. The list is long; DACS II prompts the user to enter **RETURN** to page through it.

Select from:

1. ACO
2. ALL
3. ALMS
- .
- .
- .
81. UNITS
82. WHO
83. XC

- (5) If the user enters a keyword and ?, DACS II responds with OK and supplies the only appropriate keyword(s) to complete the command. For example, if the user enters WHO and **SHIFT** **?**, DACS II responds:

```
UTL: :WHO, QRY!  
Command-line complete. Submit (YES/NO)?
```

- (6) To enter the command, the user simply enters Y followed by **RETURN** .

Obtaining Help at a Particular Point on a Command Line

In addition to being used to construct a command from scratch, DACS II's on-line help can be used to obtain information on particular fields of a command. If the command format is not known or if the keywords or variables are not clear, the help dialogue can be initiated at any point by entering **SHIFT** **?** .

- (1) Assume the user desires to cross-connect a multipoint circuit and enters the following command:

```
TCON: FROM 001001, TO 002003, MPM(SYM, LEG), TRSP!
```

DACS II responds:

```
M 08:19:06 01,00 2 TCON INERR BAD SYNTAX 2 LN MSG:  
TCON: : FROM 001001, TO 002003, =MPM=(SYM, LEG), TRSP! DNY
```

=MPM= indicates a problem.

- (2) The user can use the help feature to obtain information to reenter the correct command. He or she enters TCON: : FROM and **SHIFT** **?** . DACS II responds:

```
ds3u unit number =
```

- (3) The user desires a circuit using a DSPU NPC (Digital Signal Processing Unit Network Processing Circuit), not an FTU (Facility Terminating Unit). He or she enters **RETURN** to see the next option which is:

ftu npc number =

Another **RETURN** brings the desired option which is:

dspu npc number =

- (4) To get more information at this point, the user enters **SHIFT** **?**, and DACS II responds:

dspu npc number (3-digit decimal integer, range 641-941) =

This is where the trouble occurred in the original command; one of the NPCs must be an MB-type in the range 641-941 (for specific values, see Message 11021). The user enters 641 and **SHIFT** **?**.

- (5) DACS II responds:

dmb conference number =

The user enters **SHIFT** **?** to get more information:

dmb conference number (decimal integer, range 1-85) =

- (6) The user enters the conference number, 2. To view the current command line, the user enters **RETURN** DACS II echos the command line completed so far:

TCON::FROM 6412

The user may complete the command by directly entering remaining keywords and parameter values. By entering **SHIFT** **?**, DACS II proceeds with the menu and prompts for the remainder of the command:

Select from:

- 1. CUS
- .
- .
- .
- 8. TO
- 9. TRB
- 10. TRSP

Selection?

- (7) The user enters 8 selecting the TO keyword (TCON::FROM 641002,TO . . .). The user then enters **SHIFT** **?** to ask for information in the next command field. DACS II responds:

ftu npc number =

- (8) The user enters **SHIFT** **?** to get information on FTU NPC values. DACS II responds:

ftu npc number (3-digit decimal integer, range 001-640) =

- (9) The user enters FTU NPC number 002 and **RETURN** DACS II responds with the command line developed to this point:

TCON::FROM 6412,TO 002

- (10) By entering **SHIFT** **?**, the user may continue to be prompted through the construction of the remainder of the command or may directly input the remainder of the command for execution:

TCON::FROM 641002,TO 002003, MPM(SYM,LEG), TRSP!

System Configuration

Frame Configuration and Bay Growth

This section discusses the frame configuration for a standard DACS II Capacity Expansion Frame (CEF) and for a retrofitted CEF. In addition, it details the bay growth schemes and requirements for the CEF. The same command is used to configure a non-CEF system. However, the responses will vary since a non-CEF can have a maximum of two interface bays.

Frame Configuration

A DACS II CEF supports one switch bay and up to six interface bays. The switch bay, always bay 2, controls the overall DACS II system operations and provides the switch matrix, power, timing and alarm, and administrative link connections. The interface bay terminates digital facilities and/or provides the digital signal processing function. Interface bays 1, 3, 4, and 5 support three unit positions, while interface bays 6 and 7 support two units. Therefore, a CEF can be equipped with a total of 16 units. Two interface bay types are supported:

- Original Interface Bay

The original interface bay supports two facility terminating units (FTUs) in its two upper unit positions and one digital signal processing unit (DSPU) or DS3 unit (DS3U) in its lower unit position. The original interface bay only appears in a retrofitted Release 5.0 CEF. An interface bay used for a CEF can be an original interface bay only if the frame is a retrofit CEF. In such a case, the original interface bay can only be in bays 1 and 3. Bay 3 can be an original interface bay only if the CEF is retrofitted from a 3-bay frame. If bay 3 of a CEF is an original interface bay, bay 1 must also be an original interface bay.

- Flexible Interface Bay

The flexible interface bay allows fully flexible unit provisioning. Each of the unit positions can be independently equipped as an IFTU, DSPU, or DS3U. The flexible interface bay can occupy any interface bay location; that is, it can occupy bay 1, 3, 4, 5, 6, or 7. The flexible interface bay is the standard interface bay type for the Release 5.0 CEF.

Bay Growth

The minimum bay equipage for a CEF is two bays: Bay 1 (an interface bay) and bay 2 (the switch bay). DACS II allows additional peripheral units and/or bays to be added to an in-service CEF without causing a hit to the existing service.

The bay choices and growth are provisioned by entries to the configuration file using the configuration file command:

```
[I.35021]
CFR:FRM xy,SEQ ww:FRAME!
```

After all data is entered into the configuration file and it is accepted, DACS II outputs the following response:

```
[O.35021]
M hh:mm:ss xy,ww n[vv] CFR FRAME[ COND cc] COMPL
```

Procedure For Configuring the Frame

When the configuration file command is entered, DACS II leads the user to complete the entry of the file by displaying the Main Menu below:

- 1: Initialize/Reset Configuration File
- 2: Add new bay(s) and unit(s)
- 3: Add unit(s) to existing bay(s)
- 4: Change unit(s) type
- 5: Remove unit(s) OR bay(s) and unit(s)
- 6: Recall configuration data
- 7: Exit

Option 1, Initialize/Reset Configuration File

If Option 1 (initializing or resetting the configuration file) is selected, DACS II leads the user through the steps detailed below.

Note: A default option has been assigned to each step and each time a step is entered, DACS II presents its default option unless a user has previously selected an option. In such case, the user-selected option is displayed.

Step 1. Choose the Software Serial Number.

Default = 12345678.2.

Step 2. Choose the height of the bay.

The options are:

- 1: 7'0''
- 2: 11'6''

Default = 7'0''.

Step 3. Choose the Cross-Connect Network designation.

Choose ECCN for a CEF
Choose CCN1 for a non-CEF multibay frame
Choose CCN2 for a single-bay frame (SBF)

Step 4. Choose the allowable nonhierarchical NPC addressing scheme.

The options are:

- 1: Both 3-digit and 4-digit are allowed
- 2: Only 3-digit is allowed
- 3: Only 4-digit is allowed

Default = Option 1 (both 3-digit and 4-digit).

Selection of option 1 or 3 will be denied if the frame is non-CEF. Selection of option 3 on a CEF will be denied if there is one or more administrative link or if the user has chosen the 3-digit scheme. Similarly, the selection of option 2 on a CEF will be denied if there is one or more administrative links or users using the 4-digit scheme. The denial causes an error message to be displayed; after that, DACS II returns to the Main Menu. In this case, all the choices entered in the previous steps are discarded. Once the Main Menu is shown, the user can either exit to change the provisioning of the link (or user) or select another option from the menu.

Note that for domestic DACS II frames, the 3-digit NPC addressing scheme is the default for DACS II administrative links/users. Also, since the hierarchical NPC addressing scheme does not restrict the frame configuration, there is no selection needed here.

Step 5. Choose total number of bays.

The options are:

- 1: 1 bay
- 2: 2 bays
- 3: 3 bays
- 4: 4 bays
- 5: 5 bays
- 6: 6 bays
- 7: 7 bays

Default = 2 bays (Option 2).

Option 1 above (1 bay) is not allowed for a CEF. Options 4 through 7 must not be selected for a non-CEF. Options 4 through 7 are allowed only if the 4-digit scheme (i.e., Option 3 of Step 4) is selected. Otherwise, an error message will be generated and Step 4 will be displayed again.

Step 6. Choose bays.

Step 6.1 If the total number of bays selected is 2, choose bays 1 and 2.

Choose bay 1 type. In the figure below, the boxes shown represent the physical relationship between the switch bay (bay 2) and the bay selected; that is, the one surrounded by asterisks (*).

```
*****-----  
*          |      |  
* Bay 1   | ECCN |  
*          |      |  
*****-----
```

SELECT BAY 1 TYPE

- 1: Flexible Interface Bay (Units 1, 2, 5)
- 2: Original Interface Bay (Units 1, 2, 5)

Default = Option 1 (Flexible Interface Bay).

Step 6.2 If the total number of bays selected is 3, choose the third bay as below.

```

*****_-----*****
*
* Bay 4 | Bay 1 | ECCN | Bay 3 *
*      |      |      |      *
*****_-----*****

```

SELECT THE NEXT BAY POSITION

- 1: (Bay 3, Flexible Interface Bay (Units 3, 4, 6)
- 2: (Bay 3, Original Interface Bay (Units 3, 4, 6)
- 3: (Bay 4 (Units 7, 8, 11)

Default = Option 1 Bay 3, Flexible Interface Bay)

Step 6.3 If the total number of bays selected is 4, select the fourth bay.

Depending on which bay is selected as the third bay, the options chosen for the fourth bay will be one of the following:

Step 6.3.1 If bay 3 is the third bay configured, the fourth bay can only be one of the following:

```

*****_-----*****
*
* Bay 4 | Bay 1 | ECCN | Bay 3 | Bay 5 *
*      |      |      |      |      *
*****_-----*****

```

SELECT THE NEXT BAY POSITION

- 1: Bay 4 (Units 7, 8, 11)
- 2: Bay 5 (Units 9, 10, 12)

Default = Option 1.

Step 6.3.2 If Bay 4 is the third bay configured, the fourth bay can only be one of the followings:

```
***** _-----*****
*      |      |      |      |      *
* Bay 6 | Bay 4 | Bay 1 | ECCN | Bay 3 *
*      |      |      |      |      *
***** _-----*****
```

SELECT THE NEXT BAY POSITION

- 1: Bay 3, Flexible Interface Bay (Units 3, 4, 5)
- 2: Bay 3, Original Interface Bay (Units 3, 4, 5)
- 3: Bay 6 (Units 13, 14)

Default = Option 1.

Bay 1 must also be an original interface bay. If this rule is violated, the type for both bays (bays 1 and 3) must be reentered.

Step 6.4 If the total number of bays is 5, choose the fifth bay.

Depending on the third and fourth bays selected, the selection for the fifth bay will be one of the following:

Step 6.4.1 If bays 3 and 4 are the third and fourth bays (in any order), the options are:

```
***** _-----*****
*      |      |      |      |      *
* Bay 6 | Bay 4 | Bay 1 | ECCN | Bay 3 | Bay 5 *
*      |      |      |      |      *
***** _-----*****
```

SELECT THE NEXT BAY POSITION

- 1: Bay 5 (Units 9, 10, 12)
- 2: Bay 6 (Units 13, 14)

Default = Option 1.

Step 6.4.2 If bays 3 and 5 are the third and fourth bays (in any order), the options are:

```

*****_-----*****
*      |      |      |      |      |      *
* Bay 4 | Bay 1 | ECCN | Bay 3 | Bay 5 | Bay 7 *
*      |      |      |      |      |      *
*****_-----*****

```

SELECT THE NEXT BAY POSITION

- 1: Bay 4 (Units 7, 8, 11)
- 2: Bay 7 (Units 15, 16)

Default = Option 1.

Step 6.4.3 If bays 4 and 6 are the third and fourth bays, the options are:

```

-----*****
|      |      |      |      |      *
| Bay 6 | Bay 4 | Bay 1 | ECCN | Bay 3 *
|      |      |      |      |      *
-----*****

```

SELECT THE NEXT BAY POSITION

- 1: Bay 3, Flexible Interface Bay (Units 3, 4, 6)
- 2: Bay 3, Original Interface Bay (Units 3, 4, 6)

Default = Option 1.

Note: Option 2 is allowed only if bay 1 is an original interface bay. If this rule is violated, the bay type for both bays (bays 1 and 3) must be reentered.

Step 6.5 If the total number of bays is 6, choose the sixth bay.

Depending on which bays are already configured, the option displayed will be one of the following:

Step 6.5.1 If bays 3, 4, and 5 were chosen

```

*****
*                               *
* Bay 6 | Bay 4 | Bay 1 | ECCN | Bay 3 | Bay 5 | Bay 7 *
*                               *
*****

```

SELECT THE NEXT BAY POSITION

- 1: Bay 6 (Units 13, 14)
- 2: Bay 7 (Units 15, 16)

Default = Option 1.

Step 6.5.2 If bay 4 has not been chosen, choose bay 4 as the sixth bay configured.

```

*****
*                               *
* Bay 4 | Bay 1 | ECCN | Bay 3 | Bay 5 | Bay 7 |
*                               *
*****

```

THE NEXT BAY IS BAY 4

Step 6.5.3 If bay 5 was not selected, choose bay 5 as the sixth bay configured.

```

*****
| Bay 6 | Bay 4 | Bay 1 | ECCN | Bay 3 | Bay 5 *
|                               |
|                               |
*****

```

THE NEXT BAY IS BAY 5

Step 6.6 If the 7-bay option is selected, determine if the bay type for bays 1 and 3 has already been stored in the data base. If so, go to Step 7. Otherwise, choose these two bays.

Step 6.6.1 Choose the type for bay 1:

```

-----*****-----
| Bay 6 | Bay 4 | Bay 1 | ECCN | Bay 3 | Bay 5 | Bay 7 |
|       |       |       |     |       |       |       |
|       |       |       |     |       |       |       |
|       |       |       |     |       |       |       |
-----*****-----

```

SELECT BAY 1 TYPE

- 1: Flexible Interface Bay (Units 1, 2, 5)
- 2: Original Interface Bay (Units 1, 2, 5)

Default = Option 1.

Step 6.6.2 Choose the type for bay 3:

```

-----*****-----
| Bay 6 | Bay 4 | Bay 1 | ECCN | Bay 3 | Bay 5 | Bay 7 |
|       |       |       |     |       |       |       |
|       |       |       |     |       |       |       |
|       |       |       |     |       |       |       |
-----*****-----

```

SELECT BAY 3 TYPE

- 1: Flexible Interface Bay (Units 3, 4, 6)
- 2: Original Interface Bay (Units 3, 4, 6)

Default = Option 1.

Step 7. Choose unit types.

Step 7.1 For original interface bay 1, the unit types are:

Units 1, 2: FTU or NONE

Unit 5: DS3U, DSPU, or NONE

Default for units 1 and 2 = FTU.

Default for unit 5 = DSPU.

Step 7.2 For the flexible interface bay 1, unit types are:

Units 1, 2, 5: IFTU, DSPU, DS3U or NONE

Default = IFTU. This is applicable to IFTU and IFTU2.

Step 7.3 For original interface bay 3, the unit types are:

Units 3, 4: FTU or NONE

Unit 6: DSPU, DS3U or NONE

Default for units 3 and 4 = FTU.

Default for unit 6 = DSPU.

Step 7.4 For flexible interface bay 3, the unit type can be:

Units 3, 4, 6: IFTU, DSPU, DS3U or NONE

Default = IFTU.

Step 7.5 Bay 4 is restricted to the flexible interface bay type, and the unit type can be:

Units 7, 8, 11: IFTU, DSPU, DS3U or NONE

Default = IFTU.

Step 7.6 Bay 5 is restricted to a flexible interface bay type, and the unit type can be:

Units 9, 10, 12: IFTU, DSPU, DS3U or NONE

Default = IFTU.

Step 7.7 Bay 6 is restricted to the flexible interface bay type, and the unit type can be:

Units 13, 14: IFTU, DSPU, DS3U or NONE

Default = IFTU.

Step 7.8 Bay 7 is restricted to a flexible interface bay type, and the unit type can be:

Units 15, 16: IFTU, DSPU, DS3U or NONE

Default = IFTU.

Note: It is acceptable for all units to be configured with the option NONE. Also, if the software used on the frame does not support the DS3 termination feature, the DS3U option will not be displayed.

Step 8. After all unit types are chosen and accepted by DACS II, the following will be displayed:

Are the Frame # and UID to be unprotected?

- 1: YES
- 2: NO

Default = unprotected.

When all required data for initializing/resetting the configuration file is entered, the user must press the RETURN key to view the Main Menu. Recalling data, changing data or exiting must be implemented through the Main Menu. Note that DACS II does not back up the configuration data to DISK until the user exits.

To interrupt the data entry and exit, press the DELETE key followed by the RETURN key. Once this interrupt signal is received, DACS II denies the input command, and all newly entered data is discarded. In this case, the input command I.35021 must be reentered to allow initialization or editing of the configuration file.

Option 2, Add New Bay(s) and Unit(s)

To add new bay(s) and/or unit(s) from the Main Menu, DACS II first verifies that the action is allowed. The action of adding new bay(s) and/or unit(s) (option 2 from Main Menu) will be denied if any of the following conditions exist:

- a. The configuration file is not initialized.
- b. All bays are configured.
- c. DACS II is a single bay frame (SBF) or a 3-bay non-CEF.
- d. DACS II is a 3-bay CEF equipped with bays 1, 2 and 3, and at least one of its links/users is using the 3-digit scheme.

Once the selection is accepted, DACS II displays the allowable nonhierarchical NPC addressing scheme. If DACS II is currently a 2-bay frame, DACS II displays the same choices as displayed in Step 4 above, except that, instead of the default option, the currently recorded option is displayed. In this case, all requirements for Step 4 above apply.

If the frame is already equipped with three or more bays, DACS II displays the following:

THE NONHIERARCHICAL NPC ADDRESS SCHEME IS THE 4-DIGIT SCHEME

Option 3, Add Unit(s) to Existing Bay(s)

To add unit(s) to an existing bay from the Main Menu, enter option 3. Units listed are those configured as type NONE. DACS II lists the units in ascending order, with the first unit listed being the default.

Once the unit is selected, DACS II displays the unit type as shown in Step 7 above. However, DACS II only shows up to three options (IFTU/FTU, DSPU, and DS3U) for each unit, depending on the feature package used. The NONE option will not be shown.

After the unit type is selected, if there are other units configured as NONE, DACS II asks the user if another unit is to be added. If the answer is yes, the unit list will be shown again and the same procedure must be repeated. Otherwise, DACS II will allow the user to return to the Main Menu.

The selection of option 3 from the Main Menu will be denied if either of the following two conditions exists:

- a. The configuration file is not initialized.
- b. No units are configured as NONE.

Option 4, Change Unit(s) Type

To change the unit(s) type, enter option 4 from the Main Menu. Units listed are types IFTU, DSPU and DS3U. Note that an FTU cannot be changed to another unit type and vice versa. DACS II lists the units in ascending order. The first unit listed is the default.

Once the unit is selected, DACS II shows the two allowable choices of the new unit type.

If the original unit type is IFTU, the choice is:

- 1: DSPU
- 2: DS3U

If the original unit type is DSPU, the choice is:

- 1: IFTU
- 2: DS3U

If the original unit type is DS3U, the choice is:

- 1: IFTU
- 2: DSPU

Note: The DS3U option will not be displayed if the DS3 termination feature is not supported by the frame.

After the new type unit is selected, DACS II asks the user if another unit is to be changed to a new type. If the answer is yes, the same procedure must be repeated.

The choice of option 4 from the Main Menu will be denied if one of the following conditions exists:

- a. The configuration file is not initialized.
- b. The selected unit is grown by the GRTH command.
- c. All units are configured with type NONE or FTU.

Option 5, Delete Unit(s) or Bay(s) and Unit(s)

To delete unit(s) or bay(s) and units(s) from the Main Menu, choose the unit number. The units listed are those of a type other than NONE. DACS II lists the units in ascending order, and the first unit listed is the default.

Once the unit is selected, DACS II shows that the unit type is NONE and asks if another unit is to be deleted. If the answer is yes, the same procedure must be repeated. If the answer is no, DACS II then checks to verify if there is a bay with all units as type NONE. If such a bay exists and the bay is not bay 1, DACS II queries the user if the bay is to be deleted. If the response is yes, DACS II deletes the bay and its units from the configuration file. DACS II repeats the routine for each qualified bay. Note that although all three units of bay 1 can be designated as NONE, bay 1 cannot be deleted from the frame.

Note: If all units are configured as type NONE when the option is selected, DACS II immediately starts the bay deletion check.

The deletion of the unit is denied if either of the following conditions exists:

- a. The configuration file is not initialized.
- b. The selected unit is grown by the GRTH command.

Option 6, Recall Configuration Data

If option 6 is entered from the Main Menu, DACS II presents the configuration file from the most recently completed session. If no session was previously completed, the file stored before the current command is entered will be displayed.

A 7-bay configuration is shown below as an example:

Bay6	Bay4	Bay1	Bay2	Bay3	Bay5	Bay7
Unit14	Unit8	Unit2		Unit4	Unit10	Unit16
TYPE	TYPE	TYPE		TYPE	TYPE	TYPE
Unit13	Unit7	Unit1	ECCN	Unit3	Unit9	Unit15
TYPE	TYPE	TYPE		TYPE	TYPE	TYPE
-----	Unit11	Unit5		Unit6	Unit12	-----
TYPE	TYPE			TYPE	TYPE	

Bay 1 Type: Original Interface Bay
 Bay 3 Type: Flexible Interface Bay
 Height of Bay: 7'0''
 Software Serial Number: 12345678.2
 Frame Number: UNINITIALIZED (UNPROTECTED)
 Unique Id: UNINITIALIZED
 Nonhierarchical NPC Address Scheme: 4 digits

Note that the TYPE can be IFTU, DSPU, DS3U, or NONE, depending on the type provisioned. The bay type for bays 1 and 3 can be either the original interface bay or flexible interface bay. The word "UNINITIALIZED" is shown for the frame number and for the unique ID number if these numbers are not entered. Otherwise, the number and/or ID stored will be output instead of the word "UNINITIALIZED." DACS II shows whether or not the frame number is protected (in parentheses).

If a specific bay has not been selected, its space will be filled with blanks. An example of a 3-bay frame configuration follows:

Bay1	Bay2	Bay3
Unit2		Unit4
TYPE		TYPE
Unit1	ECCN	Unit3
TYPE		TYPE
Unit5		Unit6
TYPE		TYPE

After the configuration file is recalled, DACS II instructs the user to return to the Main Menu.

If the configuration file is not initialized, the recall option will be denied.

Option 7, Exit

If Option 7 is selected from the Main Menu, DACS II shows all data in the configuration file as if the "recall" option were chosen. In addition, DACS II displays the following:

```
Is the above data correct ? (if not, reenter the data)
  1: YES
  2: NO
IS DATA CORRECT ?
```

If the answer is yes, DACS II displays the following menu:

```
Preparing to write Configuration File to DISK
Please wait while writing to disk
Are you sure? (YES/NO)
```

If the answer is yes, DACS II begins writing the configuration file to DISK. When the configuration file backup is completed, output message O.35021 appears. DACS II backs up the configuration file to DISK before generating message O.35021.

Note: DACS II generates the completion message even if the content of the configuration file is unchanged.

Configuration File Completion

The configuration file command can only be executed if the conditions listed are met:

1. The MC is in maintenance condition.
2. The command is entered from link 1.
3. The command is entered by the superuser.

The configuration file command allows the configuration information to be entered all at once or at the time that a new bay or unit is added to the frame. The entry of unit types into the unit positions in the configuration file does not equip these units; rather it limits unit equipage to be consistent with the configuration file and makes the equipment locate function available to assist the craft installation operations before the equipment has been placed in service.

Documentation Support

The following sections provide descriptions of the following types of DACS II documents:

- Customer Reference Manual
- Operation and Maintenance Manual
- Command and Message Manual
- Quick Reference Guide
- Customer Information Releases

Customer Reference Manual

This manual provides the overall description of the DACS II equipment and features including physical, functional, application, and capability considerations and administrative link connections.

The following table lists the Customer Reference Manual by select code, issue, and applicable software release.

Document #	Subject	Iss.	Release					
			1	2	3	4	5	6
365-301-002	DACS II Customer Reference Manual	1	X					
		2			X			
		3			X	X		
		4				X	X	
365-352-000	DACS II Customer Reference Manual	1	X	X	X	X	X	
365-353-000 *	DACS II Customer Reference Manual	1	X	X	X	X	X	X

* Last version.

Operation and Maintenance Manuals

The operation and maintenance manuals contain instructions on how to operate the DACS II and how to clear trouble messages. These manuals are intended to be the guide for daily use and for troubleshooting before requesting technical help. The operation and maintenance manuals for the basic core software and all features are available in both MML and PDS versions.

The following table lists the Operation and Maintenance Manual by select code, issue, and applicable software release.

Operation and Maintenance Manual										
Document #	Subject	Iss.	Release							
			1	2	3	4	5	6	7	8
365-301-601	DACS II Operation and Maintenance Manual	1	X							
365-301-605	DACS II (PDS)	1		X						
365-301-606	DACS II (MML)	1		X						
365-301-615	DACS II (PDS)	1			X	X				
365-301-616	DACS II (MML)	1			X	X				
365-301-617	DACS II (PDS) Subrate Feature	1			X	X				
		2			X	X	X			
365-301-618	DACS II (MML) Subrate Feature	1			X	X				
		2			X	X	X			
365-301-619	DACS II (PDS) SLC® 96 Carrier Feature	B			X	X				
		2			X	X	X			
365-301-620	DACS II (MML) SLC® 96 Carrier Feature	A			X	X				
		2			X	X	X			
365-301-615AI	DACS II (PDS) 2.048 Mb/s and Enhanced 2.048 Mb/s Features	Prel.			X					
		1			X	X				
365-301-616AI	DACS II (MML) 2.048 Mb/s and Enhanced 2.048 Mb/s Features	1			X					
		2			X	X				
365-301-621	DACS II (PDS) Gateway Feature	1			X	X				
365-301-622	DACS II (MML) Gateway Feature	1			X	X				
365-301-623	DACS II PDS Domestic	2				X				

Operation and Maintenance Manual										
Document #	Subject	Iss.	Release							
			1	2	3	4	5	6	7	8
365-352-001	DACS II PDS Domestic	1				X	X			
365-352-011	DACS II MML Domestic	1				X	X			
365-352-021	DACS II PDS 2.048 Mb/s	1				X	X			
365-352-031	DACS II MML 2.048 Mb/s	1				X	X			
365-301-627	DACS II Capacity Expansion Frame, (PDS) Core with DS1, DS3, and Gateway Features	1					X			
365-301-627AI	DACS II Capacity Expansion Frame, (PDS) Core with 2.048 Mb/s and Enhanced 2.048 Mb/s Features	1					X			
365-301-628	DACS II Capacity Expansion Frame, (MML) Core with DS1, DS3, and Gateway Features	1					X			
365-301-628AI	DACS II Capacity Expansion Frame, (MML) Core with 2.048 Mb/s and Enhanced 2.048 Mb/s Features	1					X			
365-353-001	DACS II PDS Domestic	1						X		
365-353-011	DACS II MML Domestic	1						X		
365-353-021	DACS II PDS 2.048 Mb/s	1						X		
365-353-031	DACS II MML 2.048 Mb/s	1						X		

Operation and Maintenance Manual (<i>Contd</i>)										
Document #	Subject	Iss.	Release							
			1	2	3	4	5	6	7	8
365-353-054	DACS II PDS Domestic	1								X
365-353-064	DACS II MML Domestic	1								X
365-353-074	DACS II PDS 2.048 Mb/s	1								X
365-353-084	DACS II MML 2.048 Mb/s	1								X
365-353-121	DACS II PDS Domestic	1								X
365-353-131	DACS II MML Domestic	1								X
365-353-141	DACS II PDS 2.048 Mb/s	1								X
365-353-151	DACS II MML 2.048 Mb/s	1								X

Command and Message Manuals

The command and message manuals are the reference documents for all the input and output messages and explanations of all message fields. These manuals are available in both MML and PDS versions.

The following table lists the Command and Message Manuals by select code, title, issue, and applicable software release.

Command and Message Manuals										
Document #	Subject	Iss.	Release							
			1	2	3	4	5	6	7	8
365-301-603	Volumes I and II	1	X							
365-301-606	DACS II PDS	1		X						
365-301-610	DACS II MML	1		X						
365-301-651	DACS II (PDS) Core	1			X	X				
365-301-651AI	DACS II (PDS) 2.048 Mb/s and Enhanced 2.048 Mb/s	1			X	X				
365-301-652	DACS II (MML) Core	1			X	X				
365-301-652AI	DACS II (MML) 2.048 Mb/s and Enhanced 2.048 Mb/s	1			X	X				
365-301-653	DACS II (PDS) Subrate Feature	1			X	X				
365-301-654	DACS II (MML) Subrate Feature	1			X	X				
365-301-655	DACS II (PDS) <i>SLC</i> ® Carrier Feature	1			X	X				
365-301-656	DACS II (MML) <i>SLC</i> ® Carrier Feature	1			X	X				

Command and Message Manuals (Contd)										
Document #	Subject	Iss.	Release							
			1	2	3	4	5	6	7	8
365-301-657	DACS II (PDS) Gateway Feature	1			X	X				
365-301-658	DACS II (MML) Gateway Feature	1			X	X				
365-301-661	DACS II (PDS)	1			X	X				
365-301-662	DACS II (MML)	1			X	X				
365-301-661AI	DACS II (PDS) 2.048 Mb/s	1			X	X				
365-301-662AI	DACS II (MML) 2.048 Mb/s	1			X	X				
365-301-663	DACS II (PDS)	1					X			
365-301-663AI	DACS II (PDS) 2.048 Mb/s	1					X			
365-301-664	DACS II (MML)	1					X			
365-301-664AI	DACS II (MML) 2.048 Mb/s	1					X			

Command and Message Manuals (Contd)										
Document #	Subject	Iss.	Release							
			1	2	3	4	5	6	7	8
365-352-002	DACS II PDS 24 Channel	1				X	X			
365-352-012	DACS II MML 24 Channel	1				X	X			
365-352-022	DACS II PDS 2.048 Mb/s	1				X	X			
365-352-032	DACS II MML 2.048 Mb/s	1				X	X			
365-353-002	DACS II PDS 24 Channel	1						X		
365-353-012	DACS II MML 24 Channel	1						X		
365-353-022	DACS II PDS 2.048 Mb/s	1						X		
365-353-032	DACS II MML 2.048 Mb/s	1						X		
365-353-052	DACS II PDS 24 Channel	1							X	
365-353-062	DACS II MML 24 Channel	1							X	
365-353-072	DACS II PDS 2.048 Mb/s	1							X	
365-353-082	DACS II MML 2.048 Mb/s	1							X	
365-353-122	DACS II PDS 24 Channel	1								X
365-353-132	DACS II MML 24 Channel	1								X
365-353-142	DACS II PDS 2.048 Mb/s	1								X
365-353-152	DACS II MML 2.048 Mb/s	1								X

Quick Reference Guides

These guides contain frequently used commands organized into categories of functions, tables and illustrations of cross-connections, a summary of corrective action for frame audit messages, and for PDS, the meanings of the command denial condition codes. The guides are intended to support the experienced user and to serve as a handy reference for commands. Different guides cover two feature set: 2.048 Mb/s alone or subrate SLC[®] carrier, DS1, DS3, and clear-DS1. Both MML and PDS versions are available for each feature set.

The following table lists each Quick Reference Guide by select code, title, issue, and applicable software release.

Quick Reference Guide										
Document #	Subject	Iss.	Release							
			1	2	3	4	5	6	7	8
365-301-602	DACS II Quick Reference Guide	1	X							
365-301-607	DACS II PDS	1		X						
365-301-608	DACS II MML	1		X						
365-301-625	DACS II (PDS) 24 Channel	1			X					
		2			X	X				
		3					X			
365-301-626	DACS II (MML) 24 Channel	1			X					
		2			X	X				
		3					X			
365-301-625AI	DACS II (PDS) 30 Channel	1			X	X				
		2					X			
365-301-626AI	DACS II (MML) 30 Channel	1			X					
		2			X	X				
		3					X			
365-352-003	DACS II PDS 24 Channel	1				X	X			
365-352-013	DACS II MML 24 Channel	1				X	X			
365-352-023	DACS II PDS 2.048 Mb/s	1				X	X			
365-352-033	DACS II MML 2.048 Mb/s	1				X	X			
365-353-003	DACS II PDS 24 Channel	1						X		
365-353-013	DACS II MML 24 Channel	1						X		
365-353-023	DACS II PDS 2.048 Mb/s	1						X		
365-353-033	DACS II MML 2.048 Mb/s	1						X		

Quick Reference Guide (Contd)										
Document #	Subject	Iss.	Release							
			1	2	3	4	5	6	7	8
365-353-053	DACS II PDS 24 Channel	1							X	
365-353-063	DACS II MML 24 Channel	1							X	
365-353-073	DACS II PDS 2.048 Mb/s	1							X	
365-353-083	DACS II MML 2.048 Mb/s	1							X	
365-353-123	DACS II PDS 24 Channel	1								X
365-353-133	DACS II MML 24 Channel	1								X
365-353-143	DACS II PDS 2.048 Mb/s	1								X
365-353-153	DACS II MML 2.048 Mb/s	1								X

Customer Information Releases

Customer Information Releases (CIRs) are designed both to assist sales personnel and as a vehicle to get new feature information to customers.

The following table lists CIRs by number, issue and title.

Customer Information Releases		
CIR No.	Iss.	Title
365-099-031NP	2	Digital Access and Cross-Connect System II
365-099-032NP	1	Multiple DACS Complex
365-099-053TS	1	DACS II, Technical Specification
365-099-055TD	1	DACS II, Release 2 Features
365-099-059TD	1	DACS II, Stratum 2 Clock
365-099-091NP	1	DACS II, Release 2 Features
365-099-093TD	1	DACS II, Release 3 Features
365-099-095IR	1	DACS II Communication Interfaces Circuit Pack Ordering Information
365-099-098IR	1	New Dacs II Dual Digroup Card Announcement and Ordering Information
365-099-100MA	1	Normal Tape Operations for the DACS II, DACS III-2000, and DACS IV-2000 Systems
365-099-105TD	1	DACS II Release 4 Technical Description
365-099-111TD	1	DACS II Release 5.0 Technical Description
365-099-123IR	1	UL Listed DACS II Digital Access and Cross-Connect System
365-099-126TS	1	Digital Access and Cross-Connect System II (DACS II) Release 5.0 Technical Specification

Customer Information Releases (<i>Contd</i>)		
CIR No.	Iss.	Title
365-099-129TD	1	DACS II Release 6.0 Technical Description
365-099-130TS	1	DACS II Release 6.0 Technical Specification

Glossary

Some keywords are used in a generic manner by DACS II. For example, CCN also represents ECCN. Some other keywords used in this manner are: MIU and EMIU, MXR and EMXR, and FTU and IFTU. The Glossary is located in Vol III.

Alphabetic List of Messages

2

Contents

Alphabetic List of Keywords

2-1

Alphabetic List of Messages

Alphabetic List of Messages

Alphabetic List of Keywords

ABT	55711
ACO, ACTIVE	65071
ACON, OLD, NEW, INCL	14001
ACT, MAP, CLR, INCL	39201
ADD, LINK, APPL, ASCS, ASCD, PM, L2AD, POLL	36007
ADD, LINK, K, T1, T3, N2, A, B	36003
ADD, LINK, PTCOL, S, X, T, M, BAUD, ALM, BS, ENQ	36001
ADD, LINK, W, P, T20, T22, T23, T25, T26, R20	36005
ADD, NPC	36021
ADD, RT, DL, MD, DGA, DGB, DGC, DGD, DGP, NDL	36201
ADD, USER, LINK, INCL, ALL, LANG, M, P, F	36103
ADD, USER, NEW, PASSWD	36101
ALM, IDLD, AI, NPC	65046
ALM, IDLD, NPC	65041
ALM, IDLD, UNIT, DS3	66011
ALM, MJ, MN, INFO, NPC	65031
ALM, MN, IDLD, DS3UNPROTALM, DS3U	66021
ALM, PMC, PMA, DMA, MI, CCN, OOS	65054
ALM, PMC, PMA, DMA, MI, ECCN, OOS	65055
ALM, PMC, PMA, DMA, MI, SMEM	65056
ALM, RESET, DATE, TOD, FORMAT, MDY, DMY, PMC	65051
ALM, UNIT, DS3	66001
ALW, PMREPT, NPC, ALL	51171
ALWSW, UNIT, MMFG, TOPRTN, TOSRVC	35301
APPEND, END	19041
APPL, RESET, IN, PROGRESS	62011
AR01, MISC, ALM, CGA, LOS	65011
AR01, MISC, ALM, IDLD, CGA, LOS	65021
AUD, PARAMS	81006

AUD, QRY, BER, ALL, FTU, NPCS, TOT, EOM, DS3U	81003
AUD, QRY, BER, ALL, NPCS, TOT	81005
AUD, QRY, CFA, CGA, LOS	81001
AUD, QRY, CFA, CGA, LOS	81002
AUD, QRY, CFA, CGA, LOS	81004
BADVERB, BAD, SYNTAX, STOPPED	01101
BADVERB, CMD, INERR, STOPPED	01131
BCON, FROM, TO, NTR, LPD, CONV, CUS, INCL, RDC	13002
BCON, FROM, TO, RDC, CUS, INCL, NTR, LPD, CONV	13021
BCON, FROM, TOX, NTR, LPD, CONV, CUS, INCL	13001
BCON, FROM, TOX, RDC, CUS, INCL, NTR, LPD	13011
BDIS, FROM, TO, CONV, OOS, DCC, INCL	15201
BDIS, FROM, TO, OOS, INCL, CONV	15231
BDIS, FROM, TOX, CONV, OOS, DCC, INCL	15211
BDIS, FROM, TOX, OOS, INCL, CONV	15221
BOOT, FAILED, BAD, DEVICE	65053
BOOT, FROM, PMEM, FAILED, ATTEMPTING, TO	01242
BOOT, FROM, PMEM, SMEM	01241
BX2, STF, ATP	01271
CFR, FRAME	35021
CFR, SYNC, FPLL	35011
CFR, SYNC, MASTER, SLAVED	35013
CFR, SYNC, STRATUM, STR2, STR3	35012
CFR, XC, INCL	35001
CHG, DS1ALMDS3, ON, OFF	38621
CHG, DS3ALMDLY	38641
CHG, DS3UNPROTALM, ON, OFF	38611
CHG, ECLOC, TYPE, MJU, SRM	38261
CHG, FROM, TO, NOT, TLA, TLR, F, T, B, A, INCL	17011
CHG, FROM, TO, NOT, TLA, TLR, F, T, B, L, G, A	17001
CHG, FROM, TO, TLP, NG, ES, INCL	17002
CHG, HUBID, 0	38251
CHG, MACRO, MAP, SPACE	38501
CHG, MSGLOG, ON, OFF	38471
CHG, NPC, ALMOPT, PLOPT, AIS, INFO, MJ, MN, PL	38281
CHG, NPC, NFS	38324
CHG, NPC, OPTS	38221
CHG, NPC, RT, DL, TYPE, OPTS	38241
CHG, NPC, TS0	38321
CHG, NPC, TS0M	38323
CHG, NPC, TYPE, IW, X	38311
CHG, NPC, TYPE, IW, X, INCL	38211
CHG, NPC, TYPE, IW, X, INCL	38271
CHG, PASSWD, OLD, NEW	38301
CHG, RT, DL, TO	38351
CHG, RT, DL, ZCS, B8ZS	38481
CHG, RT, RTF, SWMN	38361

CHG, SCON, OLD, NEW	19581
CHG, SCON, OLD, NEW, MPTM	19591
CHG, SECH, OLD, NEW, PCH, DCC	19501
CHG, SETOP, TYPE, ALL, NPCOP	38201
CHG, SWCH, TOX, INCL	18001
CHG, SWCH, TOX, INCL	18011
CHG, SYNC, TLI, SSP, TYPE, SRC	38011
CHG, TLA, TLR, TO	19551
CHG, TLA, TLR, TO, MJU	19561
CHG, TYPE, OPTS	38231
CHG, UNIT, CONN	38101
CHG, UNIT, DS3, BERM, BERT, LBO, TYPE	38601
CHG, UNIT, FTMI, EQL	38111
CHG, USER, LINK, INCL, SCR, GR, MCON, MCOFF	38401
CI, ECI, RESET	01201
CI, ECI, STARTUP, STF, ATP	01211
CMD, MC, OOS, MCOND, INSERVICE, MPDBASE	01111
COPY, NPC, TO	31521
CTST, FAD, AIS, INCL	20101
CTST, FAD, EMODE, FMODE, INCL	20111
CTST, FAD, FROM, TO, AIS, INCL	20001
CTST, HUB, FAD, TO, INCL	20031
CTST, LPBKT, FAD, INCL	20301
CTST, TNR, ALL, OOS	20202
CTST, TNR, FAD, OOS	20201
DDIS, FROM, TO	15061
DELETE, END	19051
DGN, CCB, CFT, X	41211
DGN, CCI, CFT, X	41251
DGN, CCNI, CFT, X	41201
DGN, CI, CFT, X	41031
DGN, ETSI, CFT, X	41261
DGN, ETSIS, ECCN, ALL	41271
DGN, IN, PROGRESS	41004
DGN, LINK, CFT, X	41011
DGN, MC, CFT, X	41001
DGN, MP, CFT, X	41021
DGN, NPC	41361
DGN, NPC, SIDE, CFT, X	41351
DGN, PMEM, SMEM, CFT, X, EXCT, DBASE, VERIFY	41051
DGN, SYNC	41101
DGN, SYNC, TLI, CRO	41111
DGN, SYNC, TLI, SSP	41121
DGN, TSI, CFT, X	41221
DGN, TSIS, CCN, ALL	41241
DGN, TSIS, CCN, UNIT, CONN	41232
DGN, UNIT, DSPI, CFT, X	41341

DGN, UNIT, FC, CFT, X	41331
DGN, UNIT, FLI, CFT, X	41401
DGN, UNIT, FMT, CFT, X	41411
DGN, UNIT, FTMI, CFT, X	41321
DGN, UNIT, MIU, CFT, X	41431
DGN, UNIT, MXR, DEV, CFT, X	41421
DGN, UNIT, UC, CFT, X	41311
DGRTH, NPC	32341
DGRTH, NPC, NPCTG, TGR	32401
DGRTH, NPC, NPCTP, TPR	32381
DGRTH, SYNC, TB	32101
DGRTH, SYNC, TLI, SSP	32121
DGRTH, TG	32421
DGRTH, TP	32411
DGRTH, UNIT	32211
DGRTH, UNIT, FTMI	32321
DGRTH, UNIT, MIU	32511
DGRTH, UNIT, MXR	32501
DLT, FPKG	37301
DLT, MACRO, MAP, USER	37201
DLT, NPC	37001
DLT, RT, DL, DGA, DGB, DGC, DGD, DGP	37211
DLT, USER	37101
DSPC	14901
EBX, STARTUP, STF, ATP	01272
ED, CRET, MAP, PIC	19031
ED, MACRO, MAP	19001
EMTC, STARTUP, STF, ATP	01282
END, LOG	83011
END, LOG, ABORTED	83012
ERR, CMD, ABT, TN, STOPPED	01121
ERR, ESR, ANALYSIS, REPORT, EVENT	01391
ERR, ESR, CCB, TN, EVENT, COND	01351
ERR, ESR, CCI, TN, EVENT, COND	01354
ERR, ESR, CCNI, TN, EVENT, COND	01352
ERR, ESR, ETSI, TN, EVENT, COND	01355
ERR, ESR, MC, MP, CI, TN	01312
ERR, ESR, MC, MP, TN, EVENT, COND, CI, BX, EBX	01311
ERR, ESR, NPC, SIDE, TN, EVENT, COND	01371
ERR, ESR, NPC, TN, EVENT, COND	01372
ERR, ESR, SYNC, TLI, SSP, TN, EVENT, COND	01341
ERR, ESR, SYNC, TLI, TN, EVENT, COND	01342
ERR, ESR, SYNC, TN, EVENT, COND	01331
ERR, ESR, TSI, TN, EVENT, COND	01353
ERR, ESR, UNIT, DSPI, TN, EVENT, COND	01365
ERR, ESR, UNIT, FC, TN, EVENT, COND	01364
ERR, ESR, UNIT, FLI, TN, EVENT, COND	01401

ERR, ESR, UNIT, FMT, TN, EVENT, COND	01402
ERR, ESR, UNIT, FTMI, TN, EVENT, COND	01363
ERR, ESR, UNIT, HFMT, TN, EVENT, COND	01405
ERR, ESR, UNIT, HMXR, DEV, TN, EVENT, COND	01406
ERR, ESR, UNIT, MIU, TN, EVENT, COND	01404
ERR, ESR, UNIT, MXR, DEV, TN, EVENT, COND	01403
ERR, ESR, UNIT, UC, UBX, TN, EVENT, COND	01361
ERR, HARDWARE, TN, COND, EVENT, ACTION	01392
ERR, LINK, TN, STATUS	01321
ERR, MSGS, TO, LOG, DISCARDED	01337
ERR, PMEM, SMEM, TN, EVENT, COND	01315
ERR, PWR, PMC, PMA, DMA, MI, TN	01301
ERR, SOFTWARE, MC, ERROR, MID, TN, RC, ACTION	01362
ERR, SYNC, MODE, FAST, HOLDOVER, NORMAL	01366
ERR, SYNC, TLI, SSP, NPC, TN, ALM, LOS, LEN	01335
ERR, SYNC, TLI, SSP, TN, ALM, LOS, LEN, EXJ	01333
EXC, MACRO	39301
FRADTS, BMCMP	82003
FRADTS, DGN, DEV	82001
FRADTS, FRCMP	82002
FRADTS, MC, DGN	82004
GRTH, FRAME, CHAR, UID	30101
GRTH, NPC, NPCTG	31401
GRTH, NPC, NPCTP	31381
GRTH, NPC, TYPE, CBTIMER	31351
GRTH, NPC, TYPE, OPTS, IW, X	31371
GRTH, NPC, TYPE, OPTS, IW, X, INCL, AIS, INFO	31341
GRTH, NPC, TYPE, OPTS, IW, X, INCL, AIS, INFO	31352
GRTH, SYNC, TB, TYPE	31101
GRTH, SYNC, TLI, TYPE	31111
GRTH, SYNC, TLI, TYPE, SSP, SRC	31121
GRTH, TG, NPCTG	31421
GRTH, TP	31411
GRTH, UNIT, FTMI, EQL	31321
GRTH, UNIT, MIU, TYPE	31501
GRTH, UNIT, MXR, TYPE, BERM, BERT, LBO	31511
GRTH, UNIT, TYPE, CONN	31211
IN, PROGRESS	55703
INH, PMREPT, NPC, ALL	51161
INHSW, UNIT, MMFG, TOPRTN, TOSRVC	35311
INSTALL	55721
INVALID, SFW, ID, BLOCK, COND	01291
LINE	19071
LIST, END	19061
LOGIN, USER, PASSWD	39001
LOGOFF, USER, LINK, INCL	39101
MC, MCOND	58011

MC, RESET, RELEASE, ISSUE, FPKG, COND	01261
MOVE, FROM, END, TO	19091
MP, STARTUP, STF, ATP	01221
MTC, STF, ATP	01281
OCNT, FROM, TO, MPM, CUS, INCL, RDC	12121
OCNT, FROM, TO, RDC, CUS, INCL, PRIOUT	12101
OCNT, FROM, TO, RDC, CUS, INCL, PRIOUT	12131
OCON, FROM, TO, MPM, CUS, INCL, RDC	11121
OCON, FROM, TO, RDC, CUS, INCL, PRIOUT	11101
OCON, FROM, TO, RDC, CUS, INCL, PRIOUT	11131
ODIS, FROM, TO, INCL, OOS, DCC	15102
ODIS, FROM, TO, INCL, OOS, DCC, PRIOUT	15101
ODIS, FROM, TO, OOS, INCL, PRIOUT	15111
OPR, LPBK, NPC, LOCN	26141
OPR, LPBK, UNIT, MMFG	26161
OPR, TSIG, NPC	28101
OVERLOAD, MP, CI, UNIT, UC, TN, PROCESSOR	01381
REPT, PM, NPC, PARAM, COUNT, VLDTY, LOCN, AI	61011
RESET, DATE, TOD, FORMAT, MDY, DMY	01393
RESET, STOPPED	01251
RLS, LPBK, NPC, LOCN	26151
RLS, TSIG, NPC	28201
RMV, CCB	33202
RMV, CCI	33251
RMV, CCNI	33201
RMV, ETSI	33261
RMV, ETSIS, ECCN, ALL	33271
RMV, LINK	33011
RMV, MC	33001
RMV, NPC, SIDE, INCL	33351
RMV, RT, DL	33481
RMV, SMEM, PMEM	33211
RMV, SYNC	33101
RMV, SYNC, TLI, CRO	33111
RMV, SYNC, TLI, SSP	33121
RMV, TSI	33221
RMV, TSIS, CCN, ALL	33241
RMV, TSIS, CCN, UNIT, CONN	33231
RMV, UNIT, FC	33331
RMV, UNIT, FLI	33401
RMV, UNIT, FMT	33411
RMV, UNIT, FTMI, DSPI	33321
RMV, UNIT, MIU, INCL	33431
RMV, UNIT, MMFG, FRC, INCL	33421
RMV, UNIT, UC	33311
RPT, T, NPC, LOCN, AI, COUNT, THLEV, ALM	65061
RST, CCB	34202

RST, CCI	34251
RST, CCNI	34201
RST, ETSI	34261
RST, ETSIS, ECCN, ALL	34271
RST, LINK	34011
RST, MC, MCOND, NOJRN, FRC, CLR, ALL	34001
RST, NPC, SIDE	34351
RST, NPC, TSOM	34371
RST, PMEM, SMEM, CLR, FRC, BKGRND	34211
RST, RT, DL	34481
RST, SYNC	34101
RST, SYNC, TLI, CRO	34111
RST, SYNC, TLI, SSP	34121
RST, TSI	34221
RST, TSIS, CCN, ALL	34241
RST, TSIS, CCN, UNIT, CONN	34231
RST, UNIT, FC	34331
RST, UNIT, FLI	34401
RST, UNIT, FMT	34411
RST, UNIT, FTMI, DSPI	34321
RST, UNIT, MIU, INCL	34431
RST, UNIT, MMFG, INCL	34421
RST, UNIT, UC	34311
SAVE	19081
SC, ALM, CGA, DLF, INH, MRV, MSW, PSW, RT, DL	65131
SC, ALM, COMP, RT, INDX, LBRV, AB, CD, P, ALP	65171
SC, ALM, DPLX, SYNC, CCB, CCNI, CCI, TSI, ETSI	65151
SC, ALM, MC, UC, FTMI, DSPI, NE	65161
SC, ALM, RT, DL, FE	65141
SCNT, RATE, MPTM, MJU, MA	19321
SCNT, RATE, TPT, FROM, TO	19301
SCNT, RATE, TPT, FROM, TO	19311
SCON, RATE, MPTM, MJU, MA	19221
SCON, RATE, TPT, FROM, TO	19201
SCON, RATE, TPT, FROM, TO	19211
SDCH, TO, PCH, DCC	19151
SDIS, RATE, MPTM, MJU	19421
SDIS, RATE, MPTM, MJU, ALL	19431
SDIS, RATE, TPT, FROM, TO	19401
SDIS, RATE, TPT, FROM, TO	19411
SECH, TO, DS0A, DS0B, SEC, PCH	19101
SECH, TO, RATE, DP, PCH	19111
START, LOG	83001
STOP, MACRO, LINK	39311
STST, MON, TO, MJU, TP	19621
STST, MON, TO, TP	19601
STST, SPL, TO, MJU, TP	19651

STST, SPL, TO, TP	19631
STST, TLA, TLR, TP	19661
STST, TPR, ALL, LINKS	19681
STST, TPR, TP	19671
SW, BCAST, OLD, NEW, INCL	14021
SW, BCAST, OLD, NEW, INCL	14061
SW, DISC, OOS	14041
SW, DISC, OOS	14081
SW, NPC, RT, PSW, USW, ALW, INH, FRC, INCL	39401
SW, ROLL, OLD, NEW, INCL, FRC, OOS	14031
SW, ROLL, OLD, NEW, INCL, FRC, OOS, TWAY	14071
SW, UNIT, FLI, TOPRTN	35101
SW, UNIT, FLI, TOSRVC	35105
SW, UNIT, MMFG, TOPRTN, FRC	35111
SW, UNIT, MMFG, TOSRVC	35121
TABS	55705
TABS, IN, PROGRESS	55704
TCNT, FROM, TO, AIS, CUS, INCL, RDC, PRIOUT	12001
TCNT, FROM, TO, MPM, NTR, RDC, CUS, INCL	12021
TCNT, FROM, TO, PFW, NFW	12051
TCNT, FROM, TO, RDC, CUS, INCL, PRIOUT	12031
TCON, FROM, TO, AIS, CUS, INCL, RDC, PRIOUT	11001
TCON, FROM, TO, MPM, NTR, RDC, CUS, INCL	11021
TCON, FROM, TO, PFW, NFW	11051
TCON, FROM, TO, RDC, CUS, INCL, PRIOUT	11011
TDIS, FROM, TO, INCL, OOS, DCC	15002
TDIS, FROM, TO, INCL, OOS, DCC, PRIOUT	15001
TDIS, FROM, TO, OOS, INCL, PRIOUT	15011
TS0MBOFL	65231
TTST, HUB, TO, TG	24021
TTST, HUB, TO, TP	24001
TTST, LPD, TG	29021
TTST, LPD, TP	29001
TTST, MON, TG	21031
TTST, MON, TO, TG	21021
TTST, MON, TO, TP	21001
TTST, RT, DGA, DGB, DGC, DGD, DGP, LLB, TO	26101
TTST, SPL, TG, NOYLW	23021
TTST, SPL, TP	23001
TTST, TGR, TG, OOS	27021
TTST, TLA, NOT, TP	25101
TTST, TLA, TG	25121
TTST, TLR, NOT, TP	25501
TTST, TLR, TG	25521
TTST, TPR, ALL, OOS	27002
TTST, TPR, TP, OOS, FRC	27001
UTL, ACO	51111

UTL, BMTR, FROM, TO, EXCT, INCL, UPGRD	55701
UTL, BOOT, FRAME, CLR	58001
UTL, CLR, ALL	56011
UTL, CLR, ERR, HWER, SWER	56061
UTL, CLR, MSGLOG, RSTNUM	57031
UTL, CLR, NPC, ALL, AI, LOCN, MONDAT, MONTIM	56071
UTL, CLR, NPC, PARAMS	56051
UTL, CLR, NPC, RT, DL	56001
UTL, CLR, PWR	56052
UTL, CLR, UNIT, DS3, ALLDS3, AI, MONDAT	56101
UTL, DATE, FORMAT, INT	51021
UTL, INIT, ALM	51101
UTL, LOC	56401
UTL, QRY, ALL	56031
UTL, QRY, ALL, COMMON	53104
UTL, QRY, ALL, UNIT	53101
UTL, QRY, ALM, DS3	56331
UTL, QRY, ALMOPT, NPC, AIS	56021
UTL, QRY, ALMS	53111
UTL, QRY, ALMS, DBASE	53151
UTL, QRY, ALMS, RT, DL	53141
UTL, QRY, APPL, NPC, ALL	51201
UTL, QRY, BCAST, ALL	52101
UTL, QRY, BCAST, FROM	52111
UTL, QRY, BCAST, FROM	52121
UTL, QRY, CMAP	52011
UTL, QRY, CNFGR	51091
UTL, QRY, CS, NPC	53121
UTL, QRY, DATE	51031
UTL, QRY, DMAP	52031
UTL, QRY, DS3ALM	56381
UTL, QRY, DS3, BERMT, UNIT	53221
UTL, QRY, DS3, LBO	53231
UTL, QRY, ECLOC	51511
UTL, QRY, EQD, COMMON	53109
UTL, QRY, EQD, CONN	53031
UTL, QRY, EQD, ETSIS	53022
UTL, QRY, EQD, MIUS	53201
UTL, QRY, EQD, MXRS	53211
UTL, QRY, EQD, NPC, TOTAL, UNIT	53041
UTL, QRY, EQD, TSIS	53021
UTL, QRY, EQD, UNIT	53108
UTL, QRY, EQD, UNITS	53011
UTL, QRY, ERR, SWER, HWER, INT, DATE, TOD, TN	55011
UTL, QRY, ESR, CCN	55401
UTL, QRY, ESR, ECCN	55411
UTL, QRY, ESR, MP	55111

UTL, QRY, ESR, NPC, SIDE	55601
UTL, QRY, ESR, UNIT	55501
UTL, QRY, ESR, UNIT, DSPI	55531
UTL, QRY, ESR, UNIT, FC	55521
UTL, QRY, ESR, UNIT, FLI	55801
UTL, QRY, ESR, UNIT, FMT	55811
UTL, QRY, ESR, UNIT, FTMI	55511
UTL, QRY, ESR, UNIT, MIU	55831
UTL, QRY, ESR, UNIT, MXR	55821
UTL, QRY, FPKG	51121
UTL, QRY, FROM	52051
UTL, QRY, FROM	52071
UTL, QRY, HUBID	51501
UTL, QRY, LIST, MACRO, USER	54131
UTL, QRY, LIST, MAP, USER	54101
UTL, QRY, LOAD, NPC, TOTAL	52581
UTL, QRY, LOG, ALL	54011
UTL, QRY, LPBK, NPC	53131
UTL, QRY, LPBK, UNIT	53181
UTL, QRY, MACRO, ATTR, USER, ALL	54211
UTL, QRY, MACRO, MAP, SPACE, USER, ALL	54221
UTL, QRY, MACRO, USER	54121
UTL, QRY, MAP, ATTR, ALL, USER, MAPNM	54201
UTL, QRY, MARK	52201
UTL, QRY, MARK	52211
UTL, QRY, MEMSTAT	51001
UTL, QRY, MSGLOG, RANGE	57001
UTL, QRY, NFS, NPC	56324
UTL, QRY, NPC, ALL, AI, LV, LOCN, MONDAT	56091
UTL, QRY, NPC, MAP, USER	54111
UTL, QRY, NPC, RT, DL	56041
UTL, QRY, NPCTG	53091
UTL, QRY, OPT, TYPE, ALL, NPCS	53051
UTL, QRY, PEST, FAIL, OOS, COMMON	53105
UTL, QRY, PEST, FAIL, OOS, UNIT	53103
UTL, QRY, PMSCHED, NPC, ALL	51151
UTL, QRY, PSTATE, UNIT	56511
UTL, QRY, ROLL, DS0, NPC, ALL, UNIT	52081
UTL, QRY, ROLL, DS1, NPC, ALL, UNIT	52091
UTL, QRY, RTMAP, DLMAP	52311
UTL, QRY, SCON, CH, TO	52511
UTL, QRY, SCON, TO	52521
UTL, QRY, SCR, LINK, USER, LINKS, USERS	54001
UTL, QRY, SECH, TO	52501
UTL, QRY, SIGST	52601
UTL, QRY, SQN	51131
UTL, QRY, SRHDW, TO	52531

UTL, QRY, SROOF, TO, ALL	56501
UTL, QRY, STATE, ACO	54340
UTL, QRY, STATE, NPC	56311
UTL, QRY, STATE, NPC	56314
UTL, QRY, STATE, SCDG, NPC, RT, DL, ALL	52321
UTL, QRY, STATE, SYNC	56301
UTL, QRY, STATE, UNIT, DS3	56361
UTL, QRY, STR, LINK	55113
UTL, QRY, STR, SYNC	55201
UTL, QRY, STR, SYNC, TLI	55311
UTL, QRY, STR, SYNC, TLI, SSP	55321
UTL, QRY, STR, XC	55191
UTL, QRY, SYNC, TYPE	53001
UTL, QRY, TGS	53081
UTL, QRY, TO	52041
UTL, QRY, TO	52061
UTL, QRY, TOD, CFA	51071
UTL, QRY, TPS	53061
UTL, QRY, TS0, NPC	56321
UTL, QRY, TS0M, NPC	56323
UTL, QRY, TSIG, NPC	53161
UTL, QRY, UNIT, DS3, ALLDS3, AI, LV, MONDAT	56111
UTL, QRY, UNIT, FTMI, EQL	53071
UTL, QRY, WHO	51041
UTL, QRY, XCSB, UNIT	55181
UTL, RCY, COND, IN, PROGRESS	55021
UTL, RCY, PASSWD	51081
UTL, SCHED, PMREPT, NPC, RI, ST, NI, LV, LOCN	51141
UTL, TOD, CFA, FAC, X, PRIM, MONDAT	51011

Numerical List of Messages

3

Contents

Numeric List of Keywords

3-1

Numerical List of Messages

Numerical List of Messages

Numeric List of Keywords

01101 BADVERB, BAD, SYNTAX, STOPPED
01111 CMD, MC, OOS, MCOND, INSERVICE, MPDBASE
01121 ERR, CMD, ABT, TN, STOPPED
01131 BADVERB, CMD, INERR, STOPPED
01201 CI, ECI, RESET
01211 CI, ECI, STARTUP, STF, ATP
01221 MP, STARTUP, STF, ATP
01241 BOOT, FROM, PMEM, SMEM
01242 BOOT, FROM, PMEM, FAILED, ATTEMPTING, TO
01251 RESET, STOPPED
01261 MC, RESET, RELEASE, ISSUE, FPKG, COND
01271 BX2, STF, ATP
01272 EBX, STARTUP, STF, ATP
01281 MTC, STF, ATP
01282 EMTC, STARTUP, STF, ATP
01291 INVALID, SFW, ID, BLOCK, COND
01301 ERR, PWR, PMC, PMA, DMA, MI, TN
01311 ERR, ESR, MC, MP, TN, EVENT, COND, CI, BX, EBX
01312 ERR, ESR, MC, MP, CI, TN
01315 ERR, PMEM, SMEM, TN, EVENT, COND
01321 ERR, LINK, TN, STATUS
01331 ERR, ESR, SYNC, TN, EVENT, COND
01333 ERR, SYNC, TLI, SSP, TN, ALM, LOS, LEN, EXJ
01335 ERR, SYNC, TLI, SSP, NPC, TN, ALM, LOS, LEN
01337 ERR, MSGS, TO, LOG, DISCARDED
01341 ERR, ESR, SYNC, TLI, SSP, TN, EVENT, COND
01342 ERR, ESR, SYNC, TLI, TN, EVENT, COND
01351 ERR, ESR, CCB, TN, EVENT, COND
01352 ERR, ESR, CCNI, TN, EVENT, COND

01353 ERR, ESR, TSI, TN, EVENT, COND
01354 ERR, ESR, CCI, TN, EVENT, COND
01355 ERR, ESR, ETSI, TN, EVENT, COND
01361 ERR, ESR, UNIT, UC, UBX, TN, EVENT, COND
01362 ERR, SOFTWARE, MC, ERROR, MID, TN, RC, ACTION
01363 ERR, ESR, UNIT, FTMI, TN, EVENT, COND
01364 ERR, ESR, UNIT, FC, TN, EVENT, COND
01365 ERR, ESR, UNIT, DSPI, TN, EVENT, COND
01366 ERR, SYNC, MODE, FAST, HOLDOVER, NORMAL
01371 ERR, ESR, NPC, SIDE, TN, EVENT, COND
01372 ERR, ESR, NPC, TN, EVENT, COND
01381 OVERLOAD, MP, CI, UNIT, UC, TN, PROCESSOR
01391 ERR, ESR, ANALYSIS, REPORT, EVENT
01392 ERR, HARDWARE, TN, COND, EVENT, ACTION
01393 RESET, DATE, TOD, FORMAT, MDY, DMY
01401 ERR, ESR, UNIT, FLI, TN, EVENT, COND
01402 ERR, ESR, UNIT, FMT, TN, EVENT, COND
01403 ERR, ESR, UNIT, MXR, DEV, TN, EVENT, COND
01404 ERR, ESR, UNIT, MIU, TN, EVENT, COND
01405 ERR, ESR, UNIT, HFMT, TN, EVENT, COND
01406 ERR, ESR, UNIT, HMXR, DEV, TN, EVENT, COND
11001 TCON, FROM, TO, AIS, CUS, INCL, RDC, PRIOUT
11011 TCON, FROM, TO, RDC, CUS, INCL, PRIOUT
11021 TCON, FROM, TO, MPM, NTR, RDC, CUS, INCL
11051 TCON, FROM, TO, PFW, NFW
11101 OCON, FROM, TO, RDC, CUS, INCL, PRIOUT
11121 OCON, FROM, TO, MPM, CUS, INCL, RDC
11131 OCON, FROM, TO, RDC, CUS, INCL, PRIOUT
12001 TCNT, FROM, TO, AIS, CUS, INCL, RDC, PRIOUT
12021 TCNT, FROM, TO, MPM, NTR, RDC, CUS, INCL
12031 TCNT, FROM, TO, RDC, CUS, INCL, PRIOUT
12051 TCNT, FROM, TO, PFW, NFW
12101 OCNT, FROM, TO, RDC, CUS, INCL, PRIOUT
12121 OCNT, FROM, TO, MPM, CUS, INCL, RDC
12131 OCNT, FROM, TO, RDC, CUS, INCL, PRIOUT
13001 BCON, FROM, TOX, NTR, LPD, CONV, CUS, INCL
13002 BCON, FROM, TO, NTR, LPD, CONV, CUS, INCL, RDC
13011 BCON, FROM, TOX, RDC, CUS, INCL, NTR, LPD
13021 BCON, FROM, TO, RDC, CUS, INCL, NTR, LPD, CONV
14001 ACON, OLD, NEW, INCL
14021 SW, BCAST, OLD, NEW, INCL
14031 SW, ROLL, OLD, NEW, INCL, FRC, OOS
14041 SW, DISC, OOS
14061 SW, BCAST, OLD, NEW, INCL
14071 SW, ROLL, OLD, NEW, INCL, FRC, OOS, TWAY
14081 SW, DISC, OOS
14901 DSPC

15001 TDIS, FROM, TO, INCL, OOS, DCC, PRIOUT
15002 TDIS, FROM, TO, INCL, OOS, DCC
15011 TDIS, FROM, TO, OOS, INCL, PRIOUT
15061 DDIS, FROM, TO
15101 ODIS, FROM, TO, INCL, OOS, DCC, PRIOUT
15102 ODIS, FROM, TO, INCL, OOS, DCC
15111 ODIS, FROM, TO, OOS, INCL, PRIOUT
15201 BDIS, FROM, TO, CONV, OOS, DCC, INCL
15211 BDIS, FROM, TOX, CONV, OOS, DCC, INCL
15221 BDIS, FROM, TOX, OOS, INCL, CONV
15231 BDIS, FROM, TO, OOS, INCL, CONV
17001 CHG, FROM, TO, NOT, TLA, TLR, F, T, B, L, G, A
17002 CHG, FROM, TO, TLP, NG, ES, INCL
17011 CHG, FROM, TO, NOT, TLA, TLR, F, T, B, A, INCL
18001 CHG, SWCH, TOX, INCL
18011 CHG, SWCH, TOX, INCL
19001 ED, MACRO, MAP
19031 ED, CRET, MAP, PIC
19041 APPEND, END
19051 DELETE, END
19061 LIST, END
19071 LINE
19081 SAVE
19091 MOVE, FROM, END, TO
19101 SECH, TO, DS0A, DS0B, SEC, PCH
19111 SECH, TO, RATE, DP, PCH
19151 SDCH, TO, PCH, DCC
19201 SCON, RATE, TPT, FROM, TO
19211 SCON, RATE, TPT, FROM, TO
19221 SCON, RATE, MPTM, MJU, MA
19301 SCNT, RATE, TPT, FROM, TO
19311 SCNT, RATE, TPT, FROM, TO
19321 SCNT, RATE, MPTM, MJU, MA
19401 SDIS, RATE, TPT, FROM, TO
19411 SDIS, RATE, TPT, FROM, TO
19421 SDIS, RATE, MPTM, MJU
19431 SDIS, RATE, MPTM, MJU, ALL
19501 CHG, SECH, OLD, NEW, PCH, DCC
19551 CHG, TLA, TLR, TO
19561 CHG, TLA, TLR, TO, MJU
19581 CHG, SCON, OLD, NEW
19591 CHG, SCON, OLD, NEW, MPTM
19601 STST, MON, TO, TP
19621 STST, MON, TO, MJU, TP
19631 STST, SPL, TO, TP
19651 STST, SPL, TO, MJU, TP
19661 STST, TLA, TLR, TP

19671 STST, TPR, TP
19681 STST, TPR, ALL, LINKS
20001 CTST, FAD, FROM, TO, AIS, INCL
20031 CTST, HUB, FAD, TO, INCL
20101 CTST, FAD, AIS, INCL
20111 CTST, FAD, EMODE, FMODE, INCL
20201 CTST, TNR, FAD, OOS
20202 CTST, TNR, ALL, OOS
20301 CTST, LPBKT, FAD, INCL
21001 TTST, MON, TO, TP
21021 TTST, MON, TO, TG
21031 TTST, MON, TG
23001 TTST, SPL, TP
23021 TTST, SPL, TG, NOYLW
24001 TTST, HUB, TO, TP
24021 TTST, HUB, TO, TG
25101 TTST, TLA, NOT, TP
25121 TTST, TLA, TG
25501 TTST, TLR, NOT, TP
25521 TTST, TLR, TG
26101 TTST, RT, DGA, DGB, DGC, DGD, DGP, LLB, TO
26141 OPR, LPBK, NPC, LOCN
26151 RLS, LPBK, NPC, LOCN
26161 OPR, LPBK, UNIT, MMFG
27001 TTST, TPR, TP, OOS, FRC
27002 TTST, TPR, ALL, OOS
27021 TTST, TGR, TG, OOS
28101 OPR, TSIG, NPC
28201 RLS, TSIG, NPC
29001 TTST, LPD, TP
29021 TTST, LPD, TG
30101 GRTH, FRAME, CHAR, UID
31101 GRTH, SYNC, TB, TYPE
31111 GRTH, SYNC, TLI, TYPE
31121 GRTH, SYNC, TLI, TYPE, SSP, SRC
31211 GRTH, UNIT, TYPE, CONN
31321 GRTH, UNIT, FTMI, EQL
31341 GRTH, NPC, TYPE, OPTS, IW, X, INCL, AIS, INFO
31351 GRTH, NPC, TYPE, CBTIMER
31352 GRTH, NPC, TYPE, OPTS, IW, X, INCL, AIS, INFO
31371 GRTH, NPC, TYPE, OPTS, IW, X
31381 GRTH, NPC, NPCTP
31401 GRTH, NPC, NPCTG
31411 GRTH, TP
31421 GRTH, TG, NPCTG
31501 GRTH, UNIT, MIU, TYPE
31511 GRTH, UNIT, MXR, TYPE, BERM, BERT, LBO

31521 COPY, NPC, TO
32101 DGRTH, SYNC, TB
32121 DGRTH, SYNC, TLI, SSP
32211 DGRTH, UNIT
32321 DGRTH, UNIT, FTMI
32341 DGRTH, NPC
32381 DGRTH, NPC, NPCTP, TPR
32401 DGRTH, NPC, NPCTG, TGR
32411 DGRTH, TP
32421 DGRTH, TG
32501 DGRTH, UNIT, MXR
32511 DGRTH, UNIT, MIU
33001 RMV, MC
33011 RMV, LINK
33101 RMV, SYNC
33111 RMV, SYNC, TLI, CRO
33121 RMV, SYNC, TLI, SSP
33201 RMV, CCNI
33202 RMV, CCB
33211 RMV, SMEM, PMEM
33221 RMV, TSI
33231 RMV, TSIS, CCN, UNIT, CONN
33241 RMV, TSIS, CCN, ALL
33251 RMV, CCI
33261 RMV, ETSI
33271 RMV, ETSIS, ECCN, ALL
33311 RMV, UNIT, UC
33321 RMV, UNIT, FTMI, DSPI
33331 RMV, UNIT, FC
33351 RMV, NPC, SIDE, INCL
33401 RMV, UNIT, FLI
33411 RMV, UNIT, FMT
33421 RMV, UNIT, MMFG, FRC, INCL
33431 RMV, UNIT, MIU, INCL
33481 RMV, RT, DL
34001 RST, MC, MCOND, NOJRN, FRC, CLR, ALL
34011 RST, LINK
34101 RST, SYNC
34111 RST, SYNC, TLI, CRO
34121 RST, SYNC, TLI, SSP
34201 RST, CCNI
34202 RST, CCB
34211 RST, PMEM, SMEM, CLR, FRC, BKGRND
34221 RST, TSI
34231 RST, TSIS, CCN, UNIT, CONN
34241 RST, TSIS, CCN, ALL
34251 RST, CCI

34261 RST, ETSI
34271 RST, ETSIS, ECCN, ALL
34311 RST, UNIT, UC
34321 RST, UNIT, FTMI, DSPI
34331 RST, UNIT, FC
34351 RST, NPC, SIDE
34371 RST, NPC, TS0M
34401 RST, UNIT, FLI
34411 RST, UNIT, FMT
34421 RST, UNIT, MMFG, INCL
34431 RST, UNIT, MIU, INCL
34481 RST, RT, DL
35001 CFR, XC, INCL
35011 CFR, SYNC, FPLL
35012 CFR, SYNC, STRATUM, STR2, STR3
35013 CFR, SYNC, MASTER, SLAVED
35021 CFR, FRAME
35101 SW, UNIT, FLI, TOPRTN
35105 SW, UNIT, FLI, TOSRVC
35111 SW, UNIT, MMFG, TOPRTN, FRC
35121 SW, UNIT, MMFG, TOSRVC
35301 ALWSW, UNIT, MMFG, TOPRTN, TOSRVC
35311 INHSW, UNIT, MMFG, TOPRTN, TOSRVC
36001 ADD, LINK, PTCOL, S, X, T, M, BAUD, ALM, BS, ENQ
36003 ADD, LINK, K, T1, T3, N2, A, B
36005 ADD, LINK, W, P, T20, T22, T23, T25, T26, R20
36007 ADD, LINK, APPL, ASCS, ASCD, PM, L2AD, POLL
36021 ADD, NPC
36101 ADD, USER, NEW, PASSWD
36103 ADD, USER, LINK, INCL, ALL, LANG, M, P, F
36201 ADD, RT, DL, MD, DGA, DGB, DGC, DGD, DGP, NDL
37001 DLT, NPC
37101 DLT, USER
37201 DLT, MACRO, MAP, USER
37211 DLT, RT, DL, DGA, DGB, DGC, DGD, DGP
37301 DLT, FPKG
38011 CHG, SYNC, TLI, SSP, TYPE, SRC
38101 CHG, UNIT, CONN
38111 CHG, UNIT, FTMI, EQL
38201 CHG, SETOP, TYPE, ALL, NPCOP
38211 CHG, NPC, TYPE, IW, X, INCL
38221 CHG, NPC, OPTS
38231 CHG, TYPE, OPTS
38241 CHG, NPC, RT, DL, TYPE, OPTS
38251 CHG, HUBID, 0
38261 CHG, ECLOC, TYPE, MJU, SRM
38271 CHG, NPC, TYPE, IW, X, INCL

38281 CHG, NPC, ALMOPT, PLOPT, AIS, INFO, MJ, MN, PL
38301 CHG, PASSWD, OLD, NEW
38311 CHG, NPC, TYPE, IW, X
38321 CHG, NPC, TS0
38323 CHG, NPC, TS0M
38324 CHG, NPC, NFS
38351 CHG, RT, DL, TO
38361 CHG, RT, RTF, SWMN
38401 CHG, USER, LINK, INCL, SCR, GR, MCON, MCOFF
38471 CHG, MSGLOG, ON, OFF
38481 CHG, RT, DL, ZCS, B8ZS
38501 CHG, MACRO, MAP, SPACE
38601 CHG, UNIT, DS3, BERM, BERT, LBO, TYPE
38611 CHG, DS3UNPROTALM, ON, OFF
38621 CHG, DS1ALMDS3, ON, OFF
38641 CHG, DS3ALMDLY
39001 LOGIN, USER, PASSWD
39101 LOGOFF, USER, LINK, INCL
39201 ACT, MAP, CLR, INCL
39301 EXC, MACRO
39311 STOP, MACRO, LINK
39401 SW, NPC, RT, PSW, USW, ALW, INH, FRC, INCL
41001 DGN, MC, CFT, X
41004 DGN, IN, PROGRESS
41011 DGN, LINK, CFT, X
41021 DGN, MP, CFT, X
41031 DGN, CI, CFT, X
41051 DGN, PMEM, SMEM, CFT, X, EXCT, DBASE, VERIFY
41101 DGN, SYNC
41111 DGN, SYNC, TLI, CRO
41121 DGN, SYNC, TLI, SSP
41201 DGN, CCNI, CFT, X
41211 DGN, CCB, CFT, X
41221 DGN, TSI, CFT, X
41232 DGN, TSIS, CCN, UNIT, CONN
41241 DGN, TSIS, CCN, ALL
41251 DGN, CCI, CFT, X
41261 DGN, ETSI, CFT, X
41271 DGN, ETSIS, ECCN, ALL
41311 DGN, UNIT, UC, CFT, X
41321 DGN, UNIT, FTMI, CFT, X
41331 DGN, UNIT, FC, CFT, X
41341 DGN, UNIT, DSPI, CFT, X
41351 DGN, NPC, SIDE, CFT, X
41361 DGN, NPC
41401 DGN, UNIT, FLI, CFT, X
41411 DGN, UNIT, FMT, CFT, X

41421 DGN, UNIT, MXR, DEV, CFT, X
41431 DGN, UNIT, MIU, CFT, X
51001 UTL, QRY, MEMSTAT
51011 UTL, TOD, CFA, FAC, X, PRIM, MONDAT
51021 UTL, DATE, FORMAT, INT
51031 UTL, QRY, DATE
51041 UTL, QRY, WHO
51071 UTL, QRY, TOD, CFA
51081 UTL, RCY, PASSWD
51091 UTL, QRY, CNFGR
51101 UTL, INIT, ALM
51111 UTL, ACO
51121 UTL, QRY, FPKG
51131 UTL, QRY, SQN
51141 UTL, SCHED, PMREPT, NPC, RI, ST, NI, LV, LOCN
51151 UTL, QRY, PMSCHED, NPC, ALL
51161 INH, PMREPT, NPC, ALL
51171 ALW, PMREPT, NPC, ALL
51201 UTL, QRY, APPL, NPC, ALL
51501 UTL, QRY, HUBID
51511 UTL, QRY, ECLOC
52011 UTL, QRY, CMAP
52031 UTL, QRY, DMAP
52041 UTL, QRY, TO
52051 UTL, QRY, FROM
52061 UTL, QRY, TO
52071 UTL, QRY, FROM
52081 UTL, QRY, ROLL, DS0, NPC, ALL, UNIT
52091 UTL, QRY, ROLL, DS1, NPC, ALL, UNIT
52101 UTL, QRY, BCAST, ALL
52111 UTL, QRY, BCAST, FROM
52121 UTL, QRY, BCAST, FROM
52201 UTL, QRY, MARK
52211 UTL, QRY, MARK
52311 UTL, QRY, RTMAP, DLMAP
52321 UTL, QRY, STATE, SCDG, NPC, RT, DL, ALL
52501 UTL, QRY, SECH, TO
52511 UTL, QRY, SCON, CH, TO
52521 UTL, QRY, SCON, TO
52531 UTL, QRY, SRHDW, TO
52581 UTL, QRY, LOAD, NPC, TOTAL
52601 UTL, QRY, SIGST
53001 UTL, QRY, SYNC, TYPE
53011 UTL, QRY, EQD, UNITS
53021 UTL, QRY, EQD, TSIS
53022 UTL, QRY, EQD, ETSIS
53031 UTL, QRY, EQD, CONN

53041 UTL, QRY, EQD, NPCS, TOTAL, UNIT
53051 UTL, QRY, OPT, TYPE, ALL, NPCS
53061 UTL, QRY, TPS
53071 UTL, QRY, UNIT, FTMI, EQL
53081 UTL, QRY, TGS
53091 UTL, QRY, NPCTG
53101 UTL, QRY, ALL, UNIT
53103 UTL, QRY, PEST, FAIL, OOS, UNIT
53104 UTL, QRY, ALL, COMMON
53105 UTL, QRY, PEST, FAIL, OOS, COMMON
53108 UTL, QRY, EQD, UNIT
53109 UTL, QRY, EQD, COMMON
53111 UTL, QRY, ALMS
53121 UTL, QRY, CS, NPC
53131 UTL, QRY, LPBK, NPC
53141 UTL, QRY, ALMS, RT, DL
53151 UTL, QRY, ALMS, DBASE
53161 UTL, QRY, TSIG, NPC
53181 UTL, QRY, LPBK, UNIT
53201 UTL, QRY, EQD, MIUS
53211 UTL, QRY, EQD, MXRS
53221 UTL, QRY, DS3, BERMT, UNIT
53231 UTL, QRY, DS3, LBO
54001 UTL, QRY, SCR, LINK, USER, LINKS, USERS
54011 UTL, QRY, LOG, ALL
54101 UTL, QRY, LIST, MAP, USER
54111 UTL, QRY, NPC, MAP, USER
54121 UTL, QRY, MACRO, USER
54131 UTL, QRY, LIST, MACRO, USER
54201 UTL, QRY, MAP, ATTR, ALL, USER, MAPNM
54211 UTL, QRY, MACRO, ATTR, USER, ALL
54221 UTL, QRY, MACRO, MAP, SPACE, USER, ALL
54340 UTL, QRY, STATE, ACO
55011 UTL, QRY, ERR, SWER, HWER, INT, DATE, TOD, TN
55021 UTL, RCY, COND, IN, PROGRESS
55111 UTL, QRY, ESR, MP
55113 UTL, QRY, STR, LINK
55181 UTL, QRY, XCSB, UNIT
55191 UTL, QRY, STR, XC
55201 UTL, QRY, STR, SYNC
55311 UTL, QRY, STR, SYNC, TLI
55321 UTL, QRY, STR, SYNC, TLI, SSP
55401 UTL, QRY, ESR, CCN
55411 UTL, QRY, ESR, ECCN
55501 UTL, QRY, ESR, UNIT
55511 UTL, QRY, ESR, UNIT, FTMI
55521 UTL, QRY, ESR, UNIT, FC

55531 UTL, QRY, ESR, UNIT, DSPI
55601 UTL, QRY, ESR, NPC, SIDE
55701 UTL, BMTR, FROM, TO, EXCT, INCL, UPGRD
55703 IN, PROGRESS
55704 TABS, IN, PROGRESS
55705 TABS
55711 ABT
55721 INSTALL
55801 UTL, QRY, ESR, UNIT, FLI
55811 UTL, QRY, ESR, UNIT, FMT
55821 UTL, QRY, ESR, UNIT, MXR
55831 UTL, QRY, ESR, UNIT, MIU
56001 UTL, CLR, NPC, RT, DL
56011 UTL, CLR, ALL
56021 UTL, QRY, ALMOPT, NPC, AIS
56031 UTL, QRY, ALL
56041 UTL, QRY, NPC, RT, DL
56051 UTL, CLR, NPC, PARAMS
56052 UTL, CLR, PWR
56061 UTL, CLR, ERR, HWER, SWER
56071 UTL, CLR, NPC, ALL, AI, LOCN, MONDAT, MONTIM
56091 UTL, QRY, NPC, ALL, AI, LV, LOCN, MONDAT
56101 UTL, CLR, UNIT, DS3, ALLDS3, AI, MONDAT
56111 UTL, QRY, UNIT, DS3, ALLDS3, AI, LV, MONDAT
56301 UTL, QRY, STATE, SYNC
56311 UTL, QRY, STATE, NPC
56314 UTL, QRY, STATE, NPC
56321 UTL, QRY, TS0, NPC
56323 UTL, QRY, TS0M, NPC
56324 UTL, QRY, NFS, NPC
56331 UTL, QRY, ALM, DS3
56361 UTL, QRY, STATE, UNIT, DS3
56381 UTL, QRY, DS3ALM
56401 UTL, LOC
56501 UTL, QRY, SROOF, TO, ALL
56511 UTL, QRY, PSTATE, UNIT
57001 UTL, QRY, MSGLOG, RANGE
57031 UTL, CLR, MSGLOG, RSTNUM
58001 UTL, BOOT, FRAME, CLR
58011 MC, MCOND
61011 REPT, PM, NPC, PARAM, COUNT, VLDTY, LOCN, AI
62011 APPL, RESET, IN, PROGRESS
65011 AR01, MISC, ALM, CGA, LOS
65021 AR01, MISC, ALM, IDLD, CGA, LOS
65031 ALM, MJ, MN, INFO, NPC
65041 ALM, IDLD, NPC
65046 ALM, IDLD, AI, NPC

65051 ALM, RESET, DATE, TOD, FORMAT, MDY, DMY, PMC
65053 BOOT, FAILED, BAD, DEVICE
65054 ALM, PMC, PMA, DMA, MI, CCN, OOS
65055 ALM, PMC, PMA, DMA, MI, ECCN, OOS
65056 ALM, PMC, PMA, DMA, MI, SMEM
65061 RPT, T, NPC, LOCN, AI, COUNT, THLEV, ALM
65071 ACO, ACTIVE
65131 SC, ALM, CGA, DLF, INH, MRV, MSW, PSW, RT, DL
65141 SC, ALM, RT, DL, FE
65151 SC, ALM, DPLX, SYNC, CCB, CCNI, CCI, TSI, ETSI
65161 SC, ALM, MC, UC, FTMI, DSPI, NE
65171 SC, ALM, COMP, RT, INDX, LBRV, AB, CD, P, ALP
65231 TS0MBOFL
66001 ALM, UNIT, DS3
66011 ALM, IDLD, UNIT, DS3
66021 ALM, MN, IDLD, DS3UNPROTALM, DS3U
81001 AUD, QRY, CFA, CGA, LOS
81002 AUD, QRY, CFA, CGA, LOS
81003 AUD, QRY, BER, ALL, FTU, NPCS, TOT, EOM, DS3U
81004 AUD, QRY, CFA, CGA, LOS
81005 AUD, QRY, BER, ALL, NPCS, TOT
81006 AUD, PARAMS
82001 FRADTS, DGN, DEV
82002 FRADTS, FRCMP
82003 FRADTS, BMCMP
82004 FRADTS, MC, DGN
83001 START, LOG
83011 END, LOG
83012 END, LOG, ABORTED

Summary of Input Commands

4

Contents

Alphabetic Command Summary	4-2
Numeric Command Summary	4-42

Summary of Input Commands

Summary of Input Commands

This section provides a summary of the DACS II Release 8.2.3 input commands. The commands are presented in an alphabetical and numerical order.

Alphabetic Command Summary

[l.55711]

ABT!

[l.14001]

ACON:FRM xy,SEQ ww:OLD [s]abcddd,NEW [t]ghijjj[,INCL]!

[l.14001]

ACON:FRM xy,SEQ ww:OLD uvmnpddd,NEW wxkqrjjj[,INCL]!

[l.39201]

ACT:FRM xy,SEQ ww:MAP <map name>[,CLR][,INCL]!

[l.36007]

**ADD:FRM xy,SEQ ww:LINK j,APPL {ASCS|ASCD|PM}[,L2AD aa]\
[,POLL ttt]!**

[l.36003]

**ADD:FRM xy,SEQ ww:LINK j[,K b][,T1 ee][,T3 ggg][,N2 aa]\
[,FRMAD {A|B}]!**

[l.36001]

**ADD:FRM xy,SEQ ww:LINK j,PTCOL {S|X|T|M}[,BAUD bb][,ALM k]\
[,BS e][,ENQ q][,XON x][,INIT]!**

[l.36001]

**ADD:FRM xy,SEQ ww:LINK j,PTCOL S[,BAUD bb][,ALM k]\
[,BS e][,ENQ q][,XON x][,INIT]!**

[l.36001]

ADD:FRM xy,SEQ ww:LINK j,PTCOL X[,ALM k][,INIT]!

[l.36001]

ADD:FRM xy,SEQ ww:LINK j,PTCOL T[,BAUD bb][,ALM k][,INIT]!

[l.36001]

ADD:FRM xy,SEQ ww:LINK j,PTCOL M[,ALM k][,INIT]!

[l.36005]

**ADD:FRM xy,SEQ ww:LINK j[mm][,W c][,P ddd][,T20 iii]\
[,T22 jjj][,T23 kkk][,T25 lll][,T26 mmm][,R20 nn]\
[,R22 p][,R23 qq][,R25 r][,DBIT v][,VC(ppss,gghh)]!**

[l.36021]

**ADD:FRM xy,SEQ ww:NPC {[s]abc-[t]def|[s]abc[, [s]ghi]...\
[, [t]def]]}!**

[I.36021]
ADD:FRM xy,SEQ ww:NPC {uvmnp-wxkqr|uvmnp[,edfgh]...\
[,wxkqr]}!

[I.36201]
ADD:FRM xy,SEQ ww:{RT|DL} ffff,MD g[g]\
[,DGA [s]aaa][,DGB [s]bbb][,DGC [s]ccc][,DGD [s]ddd]\
[,DGP[s]ppp][,{sss|NDL|RTF}]!

[I.36201]
ADD:FRM xy,SEQ ww:{RT|DL} ffff,MD g[g][,DGA uvjab]\
[,DGB uvkcd][,DGC uvlef][,DGD uvmgh][,DGP uvjpr]\
[,{sss|NDL|RTF}]!

[I.36103]
ADD:FRM xy,SEQ ww:{USER <user id>|LINK j[mm][,INCL]|ALL}\
[,LANG {M|P|F}][,NPCAD {E|X|H}][,LEV(a,b,c,d,e,f)]\
[, {RMON|RMOFF}][,RLK {A|I}][,{CONVON|CONVOFF}][,INIT]!

[I.36101]
ADD:FRM xy,SEQ ww:USER <user id>[,NEW][,PASSWD <user password>]!

[I.36101]
ADD:FRM xy,SEQ ww:USER <user id>[,NEW]!

[I.51171]
ALW:FRM xy,SEQ ww:PMREPT,{NPC [s]abc[-[t]def]|ALL}!

[I.51171]
ALW:FRM xy,SEQ ww:PMREPT,{NPC uvmnp[-wxkqr]|ALL}!

[I.35301]
ALWSW:FRM xy,SEQ ww:UNIT [q]q,MMFG c[-d],[TOPRTN|TOSRVC]!

[I.19041]
APPEND[:FRM xy,SEQ ww:{<line number>|END}]!

[I.81001]
AUD:FRM xy,SEQ ww:QRY,{CFA|CGA|LOS}!

[I.81001]
AUD:[FRM xy,SEQ ww]:QRY,{CFA|CGA|LOS}!

[I.81001]
AUD:[FRM xy,SEQ ww]:QRY,{CFA|CGA|LOS}!

[I.13002]

BCON:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk]
,<tc>[, {NTR|LPD|CONV}][, {CUS|INCL}][,RDC]!

[I.13002]

BCON:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]
,<tc>[, {NTR|LPD|CONV}][, {CUS|INCL}][,RDC]!

[I.13021]

BCON:FRM xy,SEQ ww:FROM [s]abc,TO [t]def[,RDC][, {CUS|INCL}]
[, {NTR|LPD|CONV}]!

[I.13021]

BCON:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,RDC][, {CUS|INCL}]
[, {NTR|LPD|CONV}]!

[I.13001]

BCON:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],
TOX ([t]ghijjj[, [t]klmnn, ...]),<tc>[, {NTR|LPD|CONV}]
[, {CUS|INCL}][,RDC]!

[I.13001]

BCON:FRM xy,SEQ ww:FROM uvmnpddd[-eee],
TOX (wxkqrjjj[,edhfgnnn, ...]),<tc>[, {NTR|LPD|CONV}]
[, {CUS|INCL}][,RDC]!

[I.13011]

BCON:FRM xy,SEQ ww:FROM [s]abc,TOX ([t]def[, [u]ghi]
[, [v]jkl][...])[,RDC][, {CUS|INCL}][, {NTR|LPD|CONV}]!

[I.13011]

BCON:FRM xy,SEQ ww:FROM uvmnp,TOX (wxkqr[,edfhg]
[,stmno][, ...])[,RDC][, {CUS|INCL}][, {NTR|LPD|CONV}]!

[I.15201]

BDIS:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk]
[,CONV][,OOS][,DCC][,INCL]!

[I.15201]

BDIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]
[,CONV][,OOS][,DCC][,INCL]!

[I.15231]

BDIS:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,OOS][,INCL][,CONV]!

[I.15231]

BDIS:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,OOS][,INCL][,CONV]!

[I.15211]
**BDIS:FRM xy,SEQ ww:FROM [s]abcddd[-eee],\
TOX ([t]ghijjj[, [u]klmnn . . .)] [, CONV] [, OOS] [, DCC] [, INCL] !**

[I.15211]
**BDIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],\
TOX (wxqrrjjj[, edhfgnnn, . . .)] [, CONV] [, OOS] [, DCC] [, INCL] !**

[I.15221]
**BDIS:FRM xy,SEQ ww:FROM [s]abc,\
TOX ([t]ghi[, [u]jkl] [, [v]mno][...]) [, OOS] [, INCL] [, CONV] !**

[I.15221]
**BDIS:FRM xy,SEQ ww:FROM uvmnp,\
TOX (wxqrr[, edhfg] [, opqrs][...]) [, OOS] [, INCL] [, CONV] !**

[I.35021]
CFR:FRM xy,SEQ ww:FRAME!

[I.35011]
CFR:FRM xy,SEQ ww:SYNC a, FPLL!

[I.35013]
CFR:FRM xy,SEQ ww:SYNC, {MASTER|SLAVED}!

[I.35012]
CFR:FRM xy,SEQ ww:SYNC, STRATUM {STR2|STR3}!

[I.35001]
CFR:FRM xy,SEQ ww:XC s[, INCL]!

[I.38621]
CHG:[FRM xy,SEQ ww]:DS1ALMDS3 {ON|OFF}!

[I.38641]
CHG:[FRM xy,SEQ ww]:DS3ALMDLY [x]x!

[I.38611]
CHG:[FRM xy,SEQ ww]:DS3UNPROTALM {ON|OFF}!

[I.38261]
CHG:FRM xy,SEQ ww:ECLOC, TYPE {MJU|SRM}!

[I.17011]
**CHG:FRM xy,SEQ ww:FROM [s]abc, TO [t]ghi[, NOT [u]rst],\
{TLA|TLR} {F|T|B|A} [, INCL] !**

[I.17011]

**CHG:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,NOT edhfg],\
{TLA|TLR} {F|T|B|A}[,INCL]!**

[I.17001]

**CHG:[FRM xy,SEQ ww]:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk]\
[,NOT [u]rstvvv},{TLA|TLR} {F|T|B|L|G|A}[,INCL]!**

[I.17001]

**CHG:[FRM xy,SEQ ww]:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\
[,NOT edhfgvvv},{TLA|TLR} {F|T|B|L|G|A}[,INCL]!**

[I.17002]

**CHG:FRM xy,SEQ ww:FROM [s]abcddd,TO [t]ghijjj[,TLP(snn,smm)]\
[,NG nn][,ES ee][,INCL]!**

[I.17002]

**CHG:FRM xy,SEQ ww:FROM uvmnpddd,TO wxkqrjjj\
[,TLP(snn,smm)][,NG nn][,ES ee][,INCL]!**

[I.38251]

CHG:FRM xy,SEQ ww:HUBID 0'ab!

[I.38501]

CHG:FRM xy,SEQ ww:{MACRO|MAP},SPACE sss!

[I.38471]

CHG:FRM xy,SEQ ww:MSGLOG {ON|OFF}!

[I.38281]

**CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]ghi],\
{ALMOPT|PLOPT},{AIS {INFO|MJ|MN}|PL {ENA|DSA}}!**

[I.38281]

**CHG:FRM xy,SEQ ww:NPC uvmnp[-wxkqr],\
{ALMOPT|PLOPT},{AIS {INFO|MJ|MN}|PL {ENA|DSA}}!**

[I.38324]

CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]def],NFS abcdefghi!

[I.38324]

CHG:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],NFS abcdefghi!

[I.38221]

CHG:FRM xy,SEQ ww:NPC [s]abc,OPTS(rr/m[,rr/m][...])!

[I.38221]

CHG:FRM xy,SEQ ww:NPC uvmnp,OPTS(rr/m[,rr/m][...])!

[I.38241]

CHG:FRM xy,SEQ ww:{NPC [s]abc|RT ffff|DL ffff|TYPE mnxyz},\nOPTS(rr/m[,rr/m,...])!

[I.38241]

CHG:FRM xy,SEQ ww:{NPC uvmnp|RT ffff|DL ffff|TYPE mnxyz},\nOPTS(rr/m[,rr/m,...])!

[I.38321]

CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TS0 abcdefgh!

[I.38321]

CHG:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],TS0 abcdefgh!

[I.38323]

CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TS0M abcdefgh!

[I.38323]

CHG:FRM xy,SEQ ww:NPC uvmnp[-wxkqr],TS0M abcdefgh!

[I.38311]

CHG:FRM xy,SEQ ww:NPC [s]abc,TYPE mnxyz[,IW X'pq[r]]!

[I.38311]

CHG:FRM xy,SEQ ww:NPC uvmnp,TYPE mnxyz[,IW X'pq[r]]!

[I.38211]

CHG:FRM xy,SEQ ww:NPC [s]abc,TYPE mnxyz[,IW X'pq[,INCL]]!

[I.38211]

CHG:FRM xy,SEQ ww:NPC uvmnp,TYPE mnxyz[,IW X'pq[,INCL]]!

[I.38271]

CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TYPE mnxyz[,IW X'pq[,INCL]]!

[I.38271]

CHG:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],TYPE mnxyz[,IW X'pq[,INCL]]!

[I.38301]

**CHG:FRM xy,SEQ ww:PASSWD[,OLD <old password>, **
NEW <new password>]!

[I.38301]

CHG:FRM xy,SEQ ww:PASSWD!
 OLD PASSWD: (user enters the old password)
 NEW PASSWD: (user enters the new password)
 PASSWD: (user re-enters the new password for verification)

[I.38351]

CHG:FRM xy,SEQ ww:{RT|DL} ffff,TO gggg!

[I.38481]

CHG:FRM xy,SEQ ww:{RT|DL} ffff,{ZCS|B8ZS}!

[I.38361]

CHG:FRM xy,SEQ ww:RT ffff,[{sss|RTF}][,SWMN x]!

[I.19581]

CHG:FRM xy,SEQ ww:SCON,OLD [s]abcddd[/ff],NEW [t]ghijjj[/ll]!

[I.19581]

CHG:FRM xy,SEQ ww:SCON,OLD uvmnpddd[/ff],NEW wxkqrjjj[/ll]!

[I.19591]

CHG:FRM xy,SEQ ww:SCON,OLD [s]abcddd[/ff],NEW [t]ghijjj[/ll],
MPTM!

[I.19591]

CHG:FRM xy,SEQ ww:SCON,OLD uvmnpddd[/ff],NEW wxkqrjjj[/ll],
MPTM!

[I.19501]

CHG:FRM xy,SEQ ww:SECH,OLD [s]abcddd[-eee],NEW [t]ghijjj
[-kkk][,PCH ppp][,DCC]!

[I.19501]

CHG:FRM xy,SEQ ww:SECH,OLD uvmnpddd[-eee],NEW wxkqrjjj[-kkk]
[,PCH ppp][,DCC]!

[I.38201]

CHG:FRM xy,SEQ ww:SETOP rr,{TYPE mn|ALL},NPCOP(set1,set2,set3)!

[I.18001]

CHG:FRM xy,SEQ ww:SWCH,TOX([s]abcddd[, [t]ghijjj,
[u]klmnn, ...)] [,INCL]!

[I.18001]
CHG:FRM xy,SEQ ww:SWCH,TOX(uvmnpddd[,wxkqrjjj,edhfgnnn,...])
[,INCL]!

[I.18011]
CHG:FRM xy,SEQ ww:SWCH,TOX([s]ghi[, [t]jkl][, [v]mno][...])
[,INCL]!

[I.18011]
CHG:FRM xy,SEQ ww:SWCH,TOX(uvmnp[,wxkqr][,edhfg][...])
[,INCL]!

[I.38011]
CHG:FRM xy,SEQ ww:SYNC,TLI m,SSP b,TYPE texyz!

[I.38011]
CHG:FRM xy,SEQ ww:SYNC,
TLI,SRC(i/(a,b)[,j/(c,d)[,k/(e,f)[,l/(g,h)]])!)

[I.19551]
CHG:FRM xy,SEQ ww:{TLA|TLR} m,TO [s]abcdddd[/ff]!

[I.19551]
CHG:FRM xy,SEQ ww:{TLA|TLR} m,TO uvmnpddd[/ff]!

[I.19561]
CHG:FRM xy,SEQ ww:{TLA|TLR} m,TO [s]abcdddd[/ff],MJU ssss
[,BRi]!

[I.19561]
CHG:FRM xy,SEQ ww:{TLA|TLR} m,TO uvmnpddd[/ff],MJU ssss
[,BRi]!

[I.38231]
CHG:FRM xy,SEQ ww:TYPE mnxyz,OPTS(rr/<m>[,rr/<m>][...])!

[I.38101]
CHG:FRM xy,SEQ ww:UNIT q,CONN(a[,b[,c[,d[,e[,f]]]]))!

[I.38601]
CHG:FRM xy,SEQ ww:UNIT [q]q,DS3 c[-d][,BERM s][,BERT t]
[,LBO][,TYPE mnxyz]!

[I.38111]
CHG:FRM xy,SEQ ww:UNIT [q]q,FTMI d,EQL(l,r)!

[I.38401]

CHG:FRM xy,SEQ ww:{USER <user id>|LINK j[mm][,INCL]}
[,SCR n[,GR(a,b,c,d,e,f)]][, {MCON|MCOFF}][,INIT]!

[I.31521]

COPY:FRM xy,SEQ ww:NPC [s]abc,TO [t]def[-[u]ghi]!

[I.31521]

COPY:FRM xy,SEQ ww:NPC uvmnp,TO wxkqr[-ghikl]!

[I.20101]

CTST:FRM xy,SEQ ww:<tmode>,FAD ([s]abc[, [t]def)][,AIS][,INCL]!

[I.20101]

CTST:FRM xy,SEQ ww:<tmode>,FAD (uvmnp[,wxkqr)][,AIS][,INCL]!

[I.20111]

CTST:FRM xy,SEQ ww:FAD ([s]abc[, [t]def])
{[,EMODE <emode>][,FMODE <fmode>]}[,INCL];

[I.20111]

CTST:FRM xy,SEQ ww:FAD (uvmnp[,wxkqr])
{[,EMODE <emode>][,FMODE <fmode>]}[,INCL];

[I.20001]

CTST:FRM xy,SEQ ww:<tmode>,FAD ([s]abc[, [t]def]),FROM [u]ghi
[,TO [v]jkl][,AIS][,INCL]!

[I.20001]

CTST:FRM xy,SEQ ww:<tmode>,FAD (uvmnp[,wxkqr]),FROM eghij
[,TO jklmn][,AIS][,INCL]!

[I.20031]

CTST:FRM xy,SEQ ww:HUB,FAD [s]abc,TO [t]jkl[,INCL]!

[I.20031]

CTST:FRM xy,SEQ ww:HUB,FAD uvmnp,TO wxkqr[,INCL]!

[I.20301]

CTST:FRM xy,SEQ ww:LPBKT,FAD [s]abc[,INCL]!

[I.20301]

CTST:FRM xy,SEQ ww:LPBKT,FAD uvmnp[,INCL]!

[I.20202]

CTST:FRM xy,SEQ ww:TNR,ALL[,OOS]!

[I.20201]

CTST:FRM xy,SEQ ww:TNR,FAD [s]abc[,00S]!

CTST:FRM xy,SEQ ww:TNR,FAD ([s]abc[, [t]def))[,00S]!

[I.20201]

CTST:FRM xy,SEQ ww:TNR,FAD uvmnp[,00S]!

CTST:FRM xy,SEQ ww:TNR,FAD (uvmnp[,wxkqr))[,00S]!

[I.15061]

DDIS:[FRM xy,SEQ ww]:FROM [s]abcddd[-eee],TO [v]ghijjj[-kkk]!

[I.15061]

DDIS:[FRM xy,SEQ ww]:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]!

[I.19051]

DELETE[:FRM xy,SEQ ww:{<starting line>|END}[-{<ending line>\|END}]]!

[I.41211]

DGN:FRM xy,SEQ ww:CCB sf[,CFT X'vwxy]!

[I.41251]

DGN:FRM xy,SEQ ww:CCI s[,CFT X'vwxy]!

[I.41201]

DGN:FRM xy,SEQ ww:CCNI s[,CFT X'vwxy]!

[I.41031]

DGN:FRM xy,SEQ ww:CI[,CFT X'vwxy]!

[I.41261]

DGN:FRM xy,SEQ ww:ETSI sqq[,CFT X'vwxy]!

[I.41271]

DGN:FRM xy,SEQ ww:ETSI S,ECCN s,ALL!

[I.41011]

DGN:FRM xy,SEQ ww:LINK a[,CFT X'vwxy]!

[I.41001]

DGN:FRM xy,SEQ ww:MC[,CFT X'vwxy]!

[I.41021]

DGN:FRM xy,SEQ ww:MP[,CFT X'vwxy]!

[I.41361]

DGN:[FRM xy,SEQ ww]:NPC [s]abc-[t]def!

[I.41361]

DGN:[FRM xy,SEQ ww]:NPC uvmnp-uvkqr!

[I.41351]

DGN:[FRM xy,SEQ ww]:NPC [s]abc[,SIDE s][,CFT X'vwxy]!

[I.41351]

DGN:[FRM xy,SEQ ww]:NPC uvmnp[,SIDE s][,CFT X'vwxy]!

[I.41051]

DGN:[FRM xy,SEQ ww]:{PMEM|SMEM}[,{CFT X'vwxy|EXCT|DBASE}][,VERIFY]!

[I.41101]

DGN:FRM xy,SEQ ww:SYNC a!

[I.41111]

DGN:FRM xy,SEQ ww:SYNC,TLI 3,CRO!

[I.41121]

DGN:FRM xy,SEQ ww:SYNC a,TLI m[,SSP b]!

[I.41221]

DGN:FRM xy,SEQ ww:TSI sft[,CFT X'vwxy]!

[I.41241]

DGN:FRM xy,SEQ ww:TSIS,CCN s,ALL!

[I.41232]

DGN:FRM xy,SEQ ww:TSIS,CCN s,UNIT q,\
[,CONN(a[,b[,c[,d[,e[,f]]]]))]]!

[I.41341]

DGN:FRM xy,SEQ ww:UNIT [q]q,DSPI[,CFT X'vwxy]!

[I.41331]

DGN:FRM xy,SEQ ww:UNIT [q]q,FC sb[,CFT X'vwxy]!

[I.41401]

DGN:FRM xy,SEQ ww:UNIT [q]q,FLI k[,CFT X'vwxy]!

[I.41411]

DGN:FRM xy,SEQ ww:UNIT [q]q,FMT s[,CFT X'vwxy]!

[I.41321]

DGN:FRM xy,SEQ ww:UNIT [q]q,FTMI d[,CFT X'vwxy]!

[I.41431]

DGN:FRM xy,SEQ ww:UNIT [q]q,MIU c[,CFT X'vwxy]!

[I.41421]

DGN:FRM xy,SEQ ww:UNIT [q]q,MXR c[,DEV devc[,CFT X'vwxy]]!

[I.41311]

DGN:FRM xy,SEQ ww:UNIT [q]q,UC[,CFT X'vwxy]!

[I.32341]

DGRTH:FRM xy,SEQ ww:NPC [s]abc[-[t]def]!

[I.32341]

DGRTH:FRM xy,SEQ ww:NPC uvmnp[-uvkqr]!

[I.32401]

DGRTH:FRM xy,SEQ ww:NPC [s]abc,NPCTG rrr[,TGR]!

[I.32401]

DGRTH:FRM xy,SEQ ww:NPC uvmnp,NPCTG rrr[,TGR]!

[I.32381]

DGRTH:FRM xy,SEQ ww:NPC [s]abc,NPCTP n[,TPR]!

[I.32381]

DGRTH:FRM xy,SEQ ww:NPC uvmnp,NPCTP n[,TPR]!

[I.32101]

DGRTH:FRM xy,SEQ ww:SYNC,TB!

[I.32121]

DGRTH:FRM xy,SEQ ww:SYNC,TLI m[,SSP a]!

[I.32421]

DGRTH:FRM xy,SEQ ww:TG mmm[-nnn]!

[I.32411]

DGRTH:FRM xy,SEQ ww:TP kk!

[I.32211]

DGRTH:FRM xy,SEQ ww:UNIT [q]q!

[I.32321]

DGRTH:FRM xy,SEQ ww:UNIT [q]q,FTMI d!

[I.32511]

DGRTH:FRM xy,SEQ ww:UNIT [q]q,MIU c[-d]!

[I.32501]

DGRTH:FRM xy,SEQ ww:UNIT [q]q,MXR c[-d]!

[I.37301]

DLT:FRM xy,SEQ ww:FPKG nnnnnnnn!

[I.37201]

**DLT:FRM xy,SEQ ww:{MACRO <macro name>|MAP <map name>}\
[,USER <user id>]!**

[I.37001]

**DLT:FRM xy,SEQ ww:NPC {[s]abc-[t]def|[s]abc[, [s]ghi]...\
[, [t]def]}!**

[I.37001]

DLT:FRM xy,SEQ ww:NPC {uvmnp-wxkqr|uvmnp[, abcde]...[, wxkqr]}!

[I.37211]

**DLT:FRM xy,SEQ ww:{RT|DL} ffff[, DGA [s]aaa][, DGB [s]bbb]\
[, DGC [s]ccc][, DGD [s]ddd][, DGP [s]ppp]!**

[I.37211]

**DLT:FRM xy,SEQ ww:{RT|DL} ffff\
[, DGA uvjab][, DGB uvkcd][, DGC uvlef][, DGD uvmgh]\
[, DGP uvjpr]!**

[I.37101]

DLT:FRM xy,SEQ ww:USER <user id>!

[I.14901]

DSPC:[FRM xy,SEQ ww]:{[s]aaa|[s]aaa-[v]bbb|SDxyz}:<pds_application command>

[I.14901]

DSPC:[FRM xy,SEQ ww]:{uvmnp|uvmnp-wxkqr|SDxyz}:<pds_application command>

[I.19031]

**ED:FRM xy,SEQ ww:CRET,MAP <new map name>\
,PIC <reference map name>!**

[I.19001]

ED:FRM xy,SEQ ww:{MACRO <macro name>|MAP <map name>}!

[I.39301]

EXC:FRM xy,SEQ ww:MACRO <macro name>[(<p1>[,<p2>[,<p3>\
[,...[,<p10>]]]])]!

[I.30101]

GRTH:FRM xy,SEQ ww:FRAME fg[,CHAR m][,UID <uid>]!

[I.31401]

GRTH:FRM xy,SEQ ww:NPC [s]abc,NPCTG rrr!

[I.31401]

GRTH:FRM xy,SEQ ww:NPC uvmnp,NPCTG rrr!

[I.31381]

GRTH:FRM xy,SEQ ww:NPC [s]abc,NPCTP n!

[I.31381]

GRTH:FRM xy,SEQ ww:NPC uvmnp,NPCTP n!

[I.31351]

GRTH:FRM xy,SEQ ww:NPC [s]abc,TYPE mnxyz[,CBTIMER [t]v]!

[I.31351]

GRTH:FRM xy,SEQ ww:NPC uvmnp,TYPE mnxyz[,CBTIMER [t]v]!

[I.31371]

GRTH:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TYPE DSxyz \
[,OPTS(rr/m [,rr/m][...]))][,IW X'pq]!

[I.31371]

GRTH:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],TYPE DSxyz \
[,OPTS(rr/m [,rr/m][...]))][,IW X'pq]!

[I.31341]

GRTH:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TYPE mnxyz[,OPTS(rr/m\
[,rr/m][...]))][,IW X'pq[,INCL]][,AIS {INFO|MJ|MN}][,PL {ENA|DSA}]!

[I.31341]

GRTH:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],TYPE mnxyz[,OPTS(rr/m\
[,rr/m][...]))][,IW X'pq[,INCL]][,AIS {INFO|MJ|MN}][,PL {ENA|DSA}]!

[I.31352]

GRTH:FRM xy,SEQ ww:NPC [s]abc[-[t]def][,TYPE mnxyz]\
[,OPTS(rr/m[,rr/m][,...]))][,IW X'pq[,INCL]][,AIS {INFO|MJ|MN}]!

[I.31352]

GRTH:FRM xy,SEQ ww:NPC uvmnp[-uvkqr][,TYPE mnxyz]\
[,OPTS(rr/m[,rr/m][,...]))][,IW X'pq[,INCL]][,AIS {INFO|MJ|MN}]!

[I.31101]

GRTH:FRM xy,SEQ ww:SYNC,TB,TYPE TBpqr!

[I.31111]

GRTH:FRM xy,SEQ ww:SYNC,TLI 3,TYPE TBpqr!

[I.31121]

GRTH:FRM xy,SEQ ww:SYNC,TLI m,\
{TYPE texyz,SSP a,SRC p|TYPE TDxyz}!

[I.31421]

GRTH:FRM xy,SEQ ww:TG mmm,NPCTG (rrr,eee[-fff];sss,www[-xxx])\
[,<tc>]!

[I.31411]

GRTH:FRM xy,SEQ ww:TP kk[,<tc>]!

[I.31321]

GRTH:FRM xy,SEQ ww:UNIT [q]q,FTMI d,EQL(l,r)!

[I.31501]

GRTH:FRM xy,SEQ ww:UNIT [q]q,MIU c[-d][,TYPE mnxyz]!

[I.31511]

GRTH:FRM xy,SEQ ww:UNIT [q]q,MXR c[-d]\
[,TYPE mnxyz][,BERM s][,BERT t][,LBO]!

[I.31211]

GRTH:FRM xy,SEQ ww:UNIT q[,TYPE utxyz]\
[,CONN(a[,b[,c[,d[,e [,f]]]]))]]]!

[I.31211]

GRTH:FRM xy,SEQ ww:UNIT [q]q[,TYPE utxyz]!

[I.51161]

INH:FRM xy,SEQ ww:PMREPT,{NPC [s]abc[-[t]def]|ALL}!

[I.51161]

INH:FRM xy,SEQ ww:PMREPT,{NPC uvmnp[-wxkqr]|ALL}!

[I.35311]

INHSW:FRM xy,SEQ ww:UNIT [q]q,MMFG c[-d],{TOPRTN|TOSRVC}!

[I.55721]

INSTALL;

[I.19071]

LINE[:FRM xy,SEQ ww:]!

[I.19061]

LIST[:FRM xy,SEQ ww:{<starting line>|END}[-{<ending line>|\nEND}]]!

[I.39001]

LOGIN:FRM xy,SEQ ww:USER <user id>[,PASSWD <user password>]!

[I.39001]

**LOGIN:FRM xy,SEQ ww:USER <user id>!
PASSWD: <user enters the user password>**

[I.39101]

LOGOFF:FRM xy,SEQ ww:{USER <user id>|LINK j[mm][,INCL]}!

[I.19091]

MOVE:FRM xy,SEQ ww:FROM {<starting line>|END}\n[-{<ending line>|END}],TO {<destination line>|END}!

[I.12121]

OCNT:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk],\nMPM(fmd,tmd),<tc>[, {CUS|INCL}][,RDC]!

[I.12121]

OCNT:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\nMPM(fmd,tmd),<tc>[, {INCL|CUS}][,RDC]!

[I.12101]

OCNT:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk]\n,<tc>[,RDC][, {CUS|INCL}][,PRIOUT]!

[I.12101]

OCNT:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\n,<tc>[,RDC][, {CUS|INCL}][,PRIOUT]!

[I.12131]

OCNT:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,RDC]\n[, {CUS|INCL}][,PRIOUT]!

[I.12131]

OCNT:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,RDC]\n[, {CUS|INCL}][,PRIOUT]!

[I.11121]

**OCON:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk],\
MPM(fmd,tmd),<tc>[, {CUS|INCL}][,RDC]!**

[I.11121]

**OCON:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\
MPM(fmd,tmd),<tc>[, {INCL|CUS}][,RDC]!**

[I.11101]

**OCON:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk],\
<tc>[,RDC][{,CUS|,INCL}][,PRIOUT]!**

[I.11101]

**OCON:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\
<tc>[,RDC][{,CUS|,INCL}][,PRIOUT]!**

[I.11131]

OCON:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,RDC][,{CUS|INCL}][,PRIOUT]!

[I.11131]

OCON:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,RDC][,{CUS|INCL}][,PRIOUT]!

[I.15102]

**ODIS:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk]\
[,INCL][,OOS][,DCC]!**

[I.15102]

**ODIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\
[,INCL][,OOS][,DCC]!**

[I.15101]

**ODIS:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk]\
[,INCL][,OOS][,DCC][,PRIOUT]!**

[I.15101]

**ODIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\
[,INCL][,OOS][,DCC][,PRIOUT]!**

[I.15111]

ODIS:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,OOS][,INCL][,PRIOUT]!

[I.15111]

ODIS:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,OOS][,INCL][,PRIOUT]!

[I.26141]

OPR:FRM xy,SEQ ww:LPBK loop[t],NPC [s]abc,LOCN locn!

[I.26141]

OPR:FRM xy,SEQ ww:LPBK loop[t],NPC uvmnp,LOCN locn!

[I.26161]

OPR:FRM xy,SEQ ww:LPBK d[t],UNIT [q]q,MMFG a!

[I.28101]

OPR:FRM xy,SEQ ww:TSIG test,NPC [s]abc!

[I.28101]

OPR:FRM xy,SEQ ww:TSIG test,NPC uvmnp!

[I.26151]

RLS:FRM xy,SEQ ww:LPBK loop,NPC [s]abc,LOCN locn!

[I.26151]

RLS:FRM xy,SEQ ww:LPBK loop,NPC uvmnp,LOCN locn!

[I.28201]

RLS:FRM xy,SEQ ww:TSIG test,NPC [s]abc!

[I.28201]

RLS:FRM xy,SEQ ww:TSIG test,NPC uvmnp!

[I.33202]

RMV:FRM xy,SEQ ww:CCB sf!

[I.33251]

RMV:FRM xy,SEQ ww:CCI s!

[I.33201]

RMV:FRM xy,SEQ ww:CCNI s!

[I.33261]

RMV:FRM xy,SEQ ww:ETSI sqq!

[I.33271]

RMV:FRM xy,SEQ ww:ETSI, ECCN s, ALL!

[I.33011]

RMV:FRM xy,SEQ ww:LINK j!

[I.33001]

RMV:FRM xy,SEQ ww:MC!

[I.33351]

RMV:[FRM xy,SEQ ww]:NPC [s]abc[-[t]def][,SIDE s][,INCL]!

[I.33351]
RMV: [FRM xy, SEQ ww]:NPC uvmnp[-uvkqr][, SIDE s][, INCL]!

[I.33481]
RMV:FRM xy, SEQ ww:{RT|DL} ffff!

[I.33211]
RMV:FRM xy, SEQ ww:{SMEM|PMEM}!

[I.33101]
RMV:FRM xy, SEQ ww:SYNC a!

[I.33111]
RMV:FRM xy, SEQ ww:SYNC, TLI 3, CRO!

[I.33121]
RMV:FRM xy, SEQ ww:SYNC a, TLI m[, SSP b]!

[I.33221]
RMV:FRM xy, SEQ ww:TSI sft!

[I.33241]
RMV:FRM xy, SEQ ww:TSIS, CCN s, ALL!

[I.33231]
RMV:FRM xy, SEQ ww:TSIS, CCN s, UNIT q\
[, CONN(a[, b[, c[, d[, e[, f]]]]))]]!

[I.33331]
RMV:FRM xy, SEQ ww:UNIT [q]q, FC sb!

[I.33401]
RMV:FRM xy, SEQ ww:UNIT [q]q, FLI k!

[I.33411]
RMV:FRM xy, SEQ ww:UNIT [q]q, FMT s!

[I.33321]
RMV:FRM xy, SEQ ww:UNIT [q]q, {FTMI d|DSPI}!

[I.33431]
RMV:FRM xy, SEQ ww:UNIT [q]q, MIU c[-d][, INCL]!

[I.33421]
RMV:FRM xy, SEQ ww:UNIT [q]q, MMFG c[-d][, FRC[, INCL]]!

[I.33311]
RMV:FRM xy,SEQ ww:UNIT [q]q,UC!

[I.34202]
RST:FRM xy,SEQ ww:CCB sf!

[I.34251]
RST:FRM xy,SEQ ww:CCI s!

[I.34201]
RST:FRM xy,SEQ ww:CCNI s!

[I.34261]
RST:FRM xy,SEQ ww:ETSI sqq!

[I.34271]
RST:FRM xy,SEQ ww:ETSI, ECCN s, ALL!

[I.34011]
RST:FRM xy,SEQ ww:LINK j!

[I.34001]
RST:FRM xy,SEQ ww:MC[, {MCOND|NOJRN|FRC}]!

[I.34001]
RST:FRM xy,SEQ ww:MC,CLR[, ALL]!

[I.34351]
RST:[FRM xy,SEQ ww]:NPC [s]abc[-[t]def][,SIDE s]!

[I.34351]
RST:[FRM xy,SEQ ww]:NPC uvmnp[-uvkqr][,SIDE s]!

[I.34371]
RST:FRM xy,SEQ ww:NPC [s]abc,TSØM!

[I.34371]
RST:FRM xy,SEQ ww:NPC uvmnp,TSØM!

[I.34211]
RST:FRM xy,SEQ ww:{PMEM|SMEM[{,CLR[,FRC][,BKGRND]}]}!

[I.34481]
RST:FRM xy,SEQ ww:{RT|DL} ffff!

[I.34101]

RST:FRM xy,SEQ ww:SYNC a!

[I.34111]

RST:FRM xy,SEQ ww:SYNC,TLI 3,CRO!

[I.34121]

RST:FRM xy,SEQ ww:SYNC a,TLI m[,SSP b]!

[I.34221]

RST:FRM xy,SEQ ww:TSI sft!

[I.34241]

RST:FRM xy,SEQ ww:TSIS,CCN s,ALL!

[I.34231]

**RST:FRM xy,SEQ ww:TSIS,CCN s,UNIT q **
[,CONN(a[,b[,c[,d[,e[,f]]]])))]!

[I.34331]

RST:FRM xy,SEQ ww:UNIT [q]q,FC sb!

[I.34401]

RST:FRM xy,SEQ ww:UNIT [q]q,FLI k!

[I.34411]

RST:FRM xy,SEQ ww:UNIT [q]q,FMT s!

[I.34321]

RST:FRM xy,SEQ ww:UNIT [q]q,{FTMI d|DSPI}!

[I.34431]

RST:FRM xy,SEQ ww:UNIT [q]q,MIU c[-d][,INCL]!

[I.34421]

RST:FRM xy,SEQ ww:UNIT [q]q,MMFG c[-d][,INCL]!

[I.34311]

RST:FRM xy,SEQ ww:UNIT [q]q,UC!

[I.56381]

RTRV-ALM-T3:[<xy>]::[ww]:DS3ALM;

[I.19081]

SAVE[:FRM xy,SEQ ww:]!

[I.19321]
SCNT:FRM xy,SEQ ww:[RATE rr,]MPTM [s]abcddd[/ff],MJU ssss\
[,MA(tttt,u)],<branch>[,<branch>][,<branch>][,<branch>]!

[I.19321]
SCNT:FRM xy,SEQ ww:[RATE rr,]MPTM uvmnpddd[/ff],MJU ssss\
[,MA(tttt,u)],<branch>[,<branch>][,<branch>][,<branch>]!

[I.19301]
SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM [s]abcddd[/ff],\
TO [t]ghijjj[/ll]!

[I.19301]
SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM uvmnpddd[/ff],\
TO wxkqrjjj[/ll]!

[I.19311]
SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM [s]abcddd-eee[/01],\
TO [t]ghijjj-kkk[/01]!

[I.19311]
SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM [s]abcddd/ff-mm,\
TO [t]ghijjj/ll-nn!

[I.19311]
SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM uvmnpddd-eee[/01],\
TO wxkqrjjj-kkk[/01]!

[I.19311]
SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM uvmnpddd/ff-mm,\
TO wxkqrjjj/ll-nn!

[I.19221]
SCON:FRM xy,SEQ ww:[RATE rr,]MPTM [s]abcddd[/ff],MJU ssss\
[,MA(tttt,u)]
[,<branch>][,<branch>][,<branch>][,<branch>]!

[I.19221]
SCON:FRM xy,SEQ ww:[RATE rr,]MPTM uvmnpddd[/ff],MJU ssss\
[,MA(tttt,u)][,<branch>][,<branch>][,<branch>][,<branch>]!

[I.19201]
SCON:FRM xy,SEQ ww:RATE rr[,TPT],FROM [s]abcddd[/ff],\
TO [t]ghijjj[/ll]!

[I.19201]

SCON:FRM xy,SEQ ww:RATE rr[,TPT],FROM uvmnpddd[/ff],\
TO wxkqrjjj[/ll]!

[I.19211]

SCON:FRM xy,SEQ ww:RATE rr,[TPT,]FROM [s]abcd-dd-eee[/01],\
TO [t]ghijjj-kkk[/01]!
SCON:FRM xy,SEQ ww:RATE rr,[TPT,]FROM [s]abcd-dd/ff-mm,\
TO [t]ghijjj/ll-nn!

[I.19211]

SCON:FRM xy,SEQ ww:RATE rr,[TPT,]FROM uvmnpddd-eee[/01],\
TO wxkqrjjj-kkk[/01]!
SCON:FRM xy,SEQ ww:RATE rr,[TPT,]FROM uvmnpddd/ff-mm,\
TO wxkqrjjj/ll-nn!

[I.19151]

SDCH:FRM xy,SEQ ww:TO [s]abcd-dd[-eee][,PCH[ppp]][,DCC]!

[I.19151]

SDCH:FRM xy,SEQ ww:TO uvmnpddd[-eee][,PCH[ppp]][,DCC]!

[I.19421]

SDIS:FRM xy,SEQ ww:[RATE rr,]MPTM [s]abcd-dd[/ff],MJU ssss,\
<branch>[,<branch>][,<branch>][,<branch>]!

[I.19421]

SDIS:FRM xy,SEQ ww:[RATE rr,]MPTM uvmnpddd[/ff],MJU ssss,\
<branch>[,<branch>][,<branch>][,<branch>]!

[I.19431]

SDIS:FRM xy,SEQ ww:[RATE rr,]MPTM [s]abcd-dd[/ff],MJU ssss \
[,ALL]!

[I.19431]

SDIS:FRM xy,SEQ ww:[RATE rr,]MPTM uvmnpddd[/ff],MJU ssss \
[,ALL]!

[I.19401]

SDIS:FRM xy,SEQ ww:[RATE rr[,TPT],] FROM [s]abcd-dd[/ff],\
TO [t]ghijjj[/ll]!

[I.19401]

SDIS:FRM xy,SEQ ww:[RATE rr[,TPT],] FROM uvmnpddd[/ff],\
TO wxkqrjjj[/ll]!

[I.19411]
SDIS:FRM xy,SEQ ww:[RATE rr,][TPT,] FROM [s]abcddd{-eee[/01]|\
/ff-mm},TO [t]ghijjj{-kkk[/01]|/ll-nn}!

[I.19411]
SDIS:FRM xy,SEQ ww:[RATE rr,][TPT,] FROM uvmnpdd{-eee[/01]|\
/ff-mm},TO wxkqrjjj{-kkk[/01]|/ll-nn}!

[I.19101]
SECH:FRM xy,SEQ ww:TO [s]abcddd[-eee],{DS0A rr|DS0B nn}\
[, {SEC|PCH[ppp]}}!

[I.19101]
SECH:FRM xy,SEQ ww:TO uvmnpddd[-eee],{DS0A rr|DS0B nn}\
[, {SEC|PCH[ppp]}}!

[I.19111]
SECH:FRM xy,SEQ ww:TO [s]abcddd[-eee],RATE rr[,DP]\
[,PCH[ppp]]!

[I.19111]
SECH:FRM xy,SEQ ww:TO uvmnpddd[-eee],RATE rr[,DP]\
[,PCH[ppp]]!

[I.39311]
STOP:FRM xy,SEQ ww:MACRO[,LINK l[mm]]!

[I.19621]
STST:FRM xy,SEQ ww:MON,TO [s]abcddd[/ff],MJU ssss,[BRi,]\
TP kk!

[I.19621]
STST:FRM xy,SEQ ww:MON,TO uvmnpddd[/ff],MJU ssss,[BRi,]\
TP kk!

[I.19601]
STST:FRM xy,SEQ ww:MON[,TO [s]abcddd[/ff]],TP kk!

[I.19601]
STST:FRM xy,SEQ ww:MON[,TO uvmnpddd[/ff]],TP kk!

[I.19651]
STST:FRM xy,SEQ ww:SPL,TO [s]abcddd[/ff],MJU ssss,[BRi,],TP kk!

[I.19651]
STST:FRM xy,SEQ ww:SPL,TO uvmnpddd[/ff],MJU ssss,[BRi,],TP kk!

[I.19631]

STST:FRM xy,SEQ ww:SPL[,TO [s]abcddd[/ff]],TP kk!

[I.19631]

STST:FRM xy,SEQ ww:SPL[,TO uvmnpddd[/ff]],TP kk!

[I.19661]

STST:FRM xy,SEQ ww:{TLA|TLR} m,TP kk!

[I.19681]

STST:FRM xy,SEQ ww:TPR,{ALL|LINKS}!

[I.19671]

STST:FRM xy,SEQ ww:TPR,TP kk!

[I.14021]

SW:FRM xy,SEQ ww:BCAST,OLD [s]abcddd[-eee],NEW [t]ghijjj\
[-kkk][,INCL]

[I.14021]

SW:FRM xy,SEQ ww:BCAST,OLD uvmnpddd[-eee],NEW wxkqrjjj\
[-kkk][,INCL]

[I.14061]

SW:FRM xy,SEQ ww:BCAST,OLD [s]abc,NEW [t]ghi[,INCL]

[I.14061]

SW:FRM xy,SEQ ww:BCAST,OLD uvmnp,NEW wxkqr[,INCL]

[I.14041]

SW:FRM xy,SEQ ww:DISC [s]abcddd[-eee][,00S]

[I.14041]

SW:FRM xy,SEQ ww:DISC uvmnpddd[-eee][,00S]

[I.14081]

SW:FRM xy,SEQ ww:DISC [s]abc[,00S]

[I.14081]

SW:FRM xy,SEQ ww:DISC uvmnp[,00S]

[I.39401]

SW:FRM xy,SEQ ww:{NPC [s]abc|RT ffff,xxx},\
{PSW|USW|ALW|INH}[,FRC][,INCL]!

[I.39401]

SW:FRM xy,SEQ ww:{NPC uvmnp|RT ffff,xxx},\
{PSW|USW|ALW|INH}[,FRC][,INCL]!

[I.14031]

SW:FRM xy,SEQ ww:ROLL,OLD [s]abcdddd[-eee],NEW [t]ghijjj[-kkk]\
[,INCL][,FRC][,OOS]

[I.14031]

SW:FRM xy,SEQ ww:ROLL,OLD uvmnpddd[-eee],NEW wxkqrjjj[-kkk]\
[,INCL][,FRC][,OOS]

[I.14071]

SW:FRM xy,SEQ ww:ROLL,OLD [s]abc,NEW [t]ghi[,INCL][,FRC]\
[,OOS][,TWAY]

[I.14071]

SW:FRM xy,SEQ ww:ROLL,OLD uvmnp,NEW wxkqr[,INCL][,FRC]\
[,OOS][,TWAY]

[I.35101]

SW:FRM xy,SEQ ww:UNIT [q]q,FLI,TOPTN!

[I.35105]

SW:FRM xy,SEQ ww:UNIT [q]q,FLI,TOSRVC!

[I.35111]

SW:FRM xy,SEQ ww:UNIT [q]q,MMFG c,TOPTN[,FRC]!

[I.35121]

SW:FRM xy,SEQ ww:UNIT [q]q,MMFG c,TOSRVC!

[I.12001]

TCNT:[FRM xy,SEQ ww]:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk],\
<tc>[,AIS][,{CUS|INCL}][,RDC][,PRIOUT]!

[I.12001]

TCNT:[FRM xy,SEQ ww]:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\
<tc>[,AIS][,{CUS|INCL}][,RDC][,PRIOUT]!

[I.12021]

TCNT:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk],\
MPM(fmd,tmd),<tc>[,NTR m][,RDC][,{CUS|INCL}]!

[I.12021]

TCNT:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\
MPM(fmd,tmd),<tc>[,NTR m][,RDC][,{CUS|INCL}]!

[I.12051]

TCNT:FRM xy,SEQ ww:FROM [s]abcddd,TO [t]ghijjj\
[, {PFW(abcdefg,ijklmno)|NFW}]!

[I.12051]

TCNT:FRM xy,SEQ ww:FROM uvmnpddd,TO wxkqrjjj\
[, {PFW(abcdefg,ijklmno)|NFW}]!

[I.12031]

TCNT:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,RDC][,{CUS|INCL}][,PRIOUT]!

[I.12031]

TCNT:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,RDC][,{CUS|INCL}][,PRIOUT]!

[I.11001]

TCON:[FRM xy,SEQ ww]:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk],\
<tc>[,AIS][,{CUS|INCL}][,RDC][,PRIOUT]!

[I.11001]

TCON:[FRM xy,SEQ ww]:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\
<tc>[,AIS][,{CUS|INCL}][,RDC][,PRIOUT]!

[I.11021]

TCON:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk],\
MPM(fmd,tmd),<tc>[,NTR m][,RDC][,{CUS|INCL}]!

[I.11021]

TCON:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\
MPM(fmd,tmd),<tc>[,NTR m][,RDC][,{CUS|INCL}]!

[I.11051]

TCON:FRM xy,SEQ ww:FROM [s]abcddd,TO [t]ghijjj\
[, {PFW(abcdefg,ijklmno)|NFW}]!

[I.11051]

TCON:FRM xy,SEQ ww:FROM uvmnpddd,TO wxkqrjjj\
[, {PFW(abcdefg,ijklmno)|NFW}]!

[I.11011]

TCON:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,RDC][,{CUS|INCL}][,PRIOUT]!

[I.11011]

TCON:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,RDC][,{CUS|INCL}][,PRIOUT]!

[I.15002]

TDIS:FRM xy,SEQ ww:FROM [s]abcddd,TO [t]ghijjj[,INCL][,OOS]\
[,DCC]!

[I.15002]

TDIS:FRM xy,SEQ ww:FROM uvmnpddd,TO wxkqrjjj[,INCL][,OOS]
[,DCC]!

[I.15001]

TDIS:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk]
[,INCL][,OOS][,DCC][,PRIOUT]!

[I.15001]

TDIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]
[,INCL][,OOS][,DCC][,PRIOUT]!

[I.15011]

TDIS:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,OOS][,INCL][,PRIOUT]!

[I.15011]

TDIS:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,OOS][,INCL][,PRIOUT]!

[I.24021]

TTST:FRM xy,SEQ ww:HUB,TO ([s]abcddd,[t]ghijjj),TG mmm[,<tc>]!

[I.24021]

TTST:FRM xy,SEQ ww:HUB,TO (uvmnpddd,wxkqrjjj),TG mmm[,<tc>]!

[I.24001]

TTST:FRM xy,SEQ ww:HUB,<tc>,TO [t]ghijjj,TP kk!

[I.24001]

TTST:FRM xy,SEQ ww:HUB,<tc>,TO uvmnpjjj,TP kk!

[I.29021]

TTST:FRM xy,SEQ ww:LPD,TG mmm[,<tc>]!

[I.29001]

TTST:FRM xy,SEQ ww:LPD,TP kk,<tc>!

[I.21031]

TTST:FRM xy,SEQ ww:MON,TG mmm!

[I.21021]

TTST:FRM xy,SEQ ww:MON,TO [t]ghi(jjj[-kkk][,lll,...])[,<tc>],
TG mmm!

[I.21021]

TTST:FRM xy,SEQ ww:MON,TO wxkqr(jjj[-kkk][,lll,...])[,<tc>],
TG mmm!

[I.21001]

TTST:FRM xy,SEQ ww:MON[,TO [t]ghijjj][,<tc>],TP kk!

[I.21001]

TTST:FRM xy,SEQ ww:MON[,TO uvmnpjjj][,<tc>],TP kk!

[I.26101]

TTST:FRM xy,SEQ ww:RT ffff,{DGA|DGB|DGC|DGD|DGP},\
LLB[, {TO|FROM}],{INI|TRM|ALW|INH}!

[I.23021]

TTST:FRM xy,SEQ ww:SPL,TG mmm[,NOYLW]!

[I.23001]

TTST:FRM xy,SEQ ww:SPL,TP kk!

[I.27021]

TTST:FRM xy,SEQ ww:TGR,TG mmm[-nnn][,00S]!

[I.25101]

TTST:FRM xy,SEQ ww:TLA m[,NOT [t]rstvvv],TP kk!

[I.25101]

TTST:FRM xy,SEQ ww:TLA m[,NOT uvmnpvvv],TP kk!

[I.25121]

TTST:FRM xy,SEQ ww:TLA m,TG mmm!

[I.25501]

TTST:FRM xy,SEQ ww:TLR m[,NOT [t]rstvvv],TP kk!

[I.25501]

TTST:FRM xy,SEQ ww:TLR m[,NOT uvmnpvvv],TP kk!

[I.25521]

TTST:FRM xy,SEQ ww:TLR m,TG mmm!

[I.27002]

TTST:FRM xy,SEQ ww:TPR,ALL[,00S]!

[I.27001]

TTST:FRM xy,SEQ ww:TPR,TP kk[,00S][,FRC]!

[I.51111]

UTL:FRM xy,SEQ ww:ACO!

[I.55701]
UTL:FRM xy,SEQ ww:BMTR, FROM <from>, TO <to>[, {EXCT|INCL|UPGRD}]!

[I.58001]
UTL:FRM xy,SEQ ww:BOOT, FRAME[, CLR]!

[I.56011]
UTL:FRM xy,SEQ ww:CLR, <parameter>, ALL!

[I.56061]
UTL:FRM xy,SEQ ww:CLR, ERR, {HWER|SWER}!

[I.57031]
UTL:FRM xy,SEQ ww:CLR, MSGLOG[, RSTNUM]!

[I.56071]
UTL:FRM xy,SEQ ww:CLR, {NPC [s]abc[-[t]def]|ALL}, <parameter>[, AI aaaaa \[, LOCN locn][, MONDAT dddd][, MONTIM tttt]!

[I.56071]
UTL:FRM xy,SEQ ww:CLR, {NPC uvmnp[-wxkqr]|ALL}, <parameter>[, AI aaaaa \[, LOCN locn][, MONDAT dddd][, MONTIM tttt]!

[I.56051]
UTL:FRM xy,SEQ ww:CLR, NPC [s]abc, PARAMS!

[I.56051]
UTL:FRM xy,SEQ ww:CLR, NPC uvmnp, PARAMS!

[I.56001]
UTL:FRM xy,SEQ ww:CLR, <parameter>, {NPC [s]abc[-[t]def]|\ RT ffff|DL ffff}!

[I.56001]
UTL:FRM xy,SEQ ww:CLR, <parameter>, {NPC uvmnp[-wxkqr]|\ RT ffff|DL ffff}!

[I.56052]
UTL:FRM xy,SEQ ww:CLR, PWR pp!

[I.56101]
UTL:FRM xy,SEQ ww:CLR, {UNIT [q]q, DS3 c[-d]|ALLDS3}, <parameter>\, AI aaaaa[, MONDAT dddd][, MONTIM tttt]!

[I.51021]
UTL:FRM xy,SEQ ww:DATE <new-date>[, FORMAT ggg][, INT ii]!

[I.51101]

UTL:FRM xy,SEQ ww:INIT,ALM a!

[I.56401]

UTL:FRM xy,SEQ ww:LOC,<entity>!

[I.56031]

UTL:FRM xy,SEQ ww:QRY,<parameter>,ALL!

[I.53104]

UTL:FRM xy,SEQ ww:QRY,ALL,COMMON!

[I.53101]

UTL:FRM xy,SEQ ww:QRY,ALL[,UNIT [q]q]!

[I.56331]

UTL:FRM xy,SEQ ww:QRY,ALM,DS3!

[I.56021]

UTL:FRM xy,SEQ ww:QRY,ALMOPT,NPC [s]abc[-[v]ghi],AIS!

[I.56021]

UTL:FRM xy,SEQ ww:QRY,ALMOPT,NPC uvmnp[-wxkqr],AIS!

[I.53111]

UTL:FRM xy,SEQ ww:QRY,ALMS!

[I.53151]

UTL:FRM xy,SEQ ww:QRY,ALMS,DBASE!

[I.53141]

UTL:FRM xy,SEQ ww:QRY,ALMS,{RT|DL} ffff!

[I.51201]

UTL:[FRM xy,SEQ ww]:QRY,APPL,{NPC [s]abc|ALL}!

[I.51201]

UTL:[FRM xy,SEQ ww]:QRY,APPL,{NPC uvmnp|ALL}!

[I.52101]

UTL::QRY,BCAST,ALL!

[I.52111]

UTL:FRM xy,SEQ ww:QRY,BCAST,FROM [s]abcddd!

[I.52111]

UTL:FRM xy,SEQ ww:QRY,BCAST,FROM uvmnpddd!

[I.52121]
UTL:FRM xy,SEQ ww:QRY,BCAST,FROM [s]abc!

[I.52121]
UTL:FRM xy,SEQ ww:QRY,BCAST,FROM uvmnp!

[I.52011]
UTL:[FRM xy,SEQ ww]:QRY,CMAP [s]abc[-[t]def]!

[I.52011]
UTL:[FRM xy,SEQ ww]:QRY,CMAP uvmnp[-wxkqr]!

[I.51091]
UTL:FRM xy,SEQ ww:QRY,CNFR!

[I.53121]
UTL:FRM xy,SEQ ww:QRY,CS,NPC [s]abc!

[I.53121]
UTL:FRM xy,SEQ ww:QRY,CS,NPC uvmnp!

[I.51031]
UTL:FRM xy,SEQ ww:QRY,DATE!

[I.56381]
UTL:FRM xy,SEQ ww:QRY,DS3ALM!

[I.52031]
UTL:[FRM xy,SEQ ww]:QRY,DMAP!

[I.53221]
UTL:FRM xy,SEQ ww:QRY,DS3,BERMT[,UNIT [q]q]!

[I.53231]
UTL:FRM xy,SEQ ww:QRY,DS3,LB0!

[I.51511]
UTL:FRM xy,SEQ ww:QRY,ECLOC!

[I.53109]
UTL:FRM xy,SEQ ww:QRY,EQD,COMMON!

[I.53031]
UTL:FRM xy,SEQ ww:QRY,EQD,CONN!

[I.53022]
UTL:FRM xy,SEQ ww:QRY,EQD,ETISIS!

[I.53201]

UTL:FRM xy,SEQ ww:QRY,EQD,MIUS!

[I.53211]

UTL:FRM xy,SEQ ww:QRY,EQD,MXRS!

[I.53041]

UTL:FRM xy,SEQ ww:QRY,EQD,NPCS[, {TOTAL|UNIT [q]q}]!

[I.53021]

UTL:FRM xy,SEQ ww:QRY,EQD,TSIS!

[I.53108]

UTL:FRM xy,SEQ ww:QRY,EQD[,UNIT [q]q]!

[I.53011]

UTL:FRM xy,SEQ ww:QRY,EQD,UNITS!

[I.55011]

UTL:FRM xy,SEQ ww:QRY,ERR,{{SWER|HWER}{, {INT mn| [DATE moda[ce]yr,] TOD hrmsnc}}\[,TN X'dddd][,EVENT X'eeee][,ERCL{HARD|TRANS|APPINT}}[,ENTY <entity>]|ALL}!

[I.55401]

UTL:FRM xy,SEQ ww:QRY,ESR,CCN s!

[I.55411]

UTL:FRM xy,SEQ ww:QRY,ESR,ECCN s!

[I.55111]

UTL:FRM xy,SEQ ww:QRY,ESR,MP!

[I.55601]

UTL:FRM xy,SEQ ww:QRY,ESR,NPC [s]abc[,SIDE s]!

[I.55601]

UTL:FRM xy,SEQ ww:QRY,ESR,NPC uvmpnp[,SIDE s]!

[I.55501]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q!

[I.55531]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,DSPI!

[I.55521]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,FC sb!

[I.55801]
UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,FLI k!

[I.55811]
UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,FMT s!

[I.55511]
UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,FTMI d!

[I.55831]
UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,MIU c!

[I.55821]
UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,MXR c!

[I.51121]
UTL:FRM xy,SEQ ww:QRY,FPKG!

[I.52051]
UTL:FRM xy,SEQ ww:QRY,FROM [s]abcddd[-eee]!

[I.52051]
UTL:FRM xy,SEQ ww:QRY,FROM uvmnpddd[-eee]!

[I.52071]
UTL:FRM xy,SEQ ww:QRY,FROM [s]abc!

[I.52071]
UTL:FRM xy,SEQ ww:QRY,FROM uvmnp!

[I.51501]
UTL:FRM xy,SEQ ww:QRY,HUBID!

[I.54131]
UTL:FRM xy,SEQ ww:QRY,LIST,MACRO <macro name>\
[,USER <user id>]!

[I.54101]
UTL:FRM xy,SEQ ww:QRY,LIST,MAP <name>[,USER <user id>]!

[I.52581]
UTL:FRM xy,SEQ ww:QRY,LOAD,{NPC [s]abc|TOTAL}!

[I.52581]
UTL:FRM xy,SEQ ww:QRY,LOAD,{NPC uvmnp|TOTAL}!

[I.54011]

UTL:FRM xy,SEQ ww:QRY,LOG[,ALL]!

[I.53131]

UTL:FRM xy,SEQ ww:QRY,LPBK,NPC [s]abc[-[t]def]!

[I.53131]

UTL:FRM xy,SEQ ww:QRY,LPBK,NPC uvmnp[-wxkqr]!

[I.53181]

UTL:FRM xy,SEQ ww:QRY,LPBK,UNIT [q]q!

[I.54211]

UTL:FRM xy,SEQ ww:QRY,MACRO,ATTR[, {USER <user id>|ALL}]!

[I.54221]

UTL:FRM xy,SEQ ww:QRY,{MACRO|MAP},SPACE[, {USER <user id>|ALL|\SYSTEM}]!

[I.54121]

UTL:FRM xy,SEQ ww:QRY,MACRO <name>[,USER <user id>]!

[I.54201]

UTL:FRM xy,SEQ ww:QRY,MAP,ATTR[, {ALL|USER <user id>|MAPNM <name>}]!

[I.52201]

UTL:FRM xy,SEQ ww:QRY,MARK [s]abc[-[t]def]!

[I.52201]

UTL:FRM xy,SEQ ww:QRY,MARK uvmnp[-wxkqr]!

[I.52211]

UTL:FRM xy,SEQ ww:QRY,MARK [s]abcjjj[-kkk]!

[I.52211]

UTL:FRM xy,SEQ ww:QRY,MARK uvmnpjjj[-kkk]!

[I.51001]

UTL:[FRM xy,SEQ ww]:QRY,MEMSTAT!

[I.57001]

UTL:FRM xy,SEQ ww:QRY,MSGLOG,RANGE!

[I.56324]

UTL:FRM xy,SEQ ww:QRY,NFS,NPC [s]abc[-[t]def]!

[I.56324]

UTL:FRM xy,SEQ ww:QRY,NFS,NPC uvmnp[-wxkqr]!

[I.56091]

UTL:FRM xy,SEQ ww:QRY,{NPC [s]abc[-[t]def]|ALL},<parameter>,AI aaaaa \[,LV llllllllll][,LOCN locn][,MONDAT dddd][,MONTIM tttt]!

[I.56091]

UTL:FRM xy,SEQ ww:QRY,{NPC uvmnp[-wxkqr]|ALL},<parameter>,AI aaaaa \[,LV llllllllll][,LOCN locn][,MONDAT dddd][,MONTIM tttt]!

[I.54111]

UTL:FRM xy,SEQ ww:QRY,NPC,MAP <name>[,USER <user id>]!

[I.56041]

UTL:FRM xy,SEQ ww:QRY,<parameter>,{NPC [s]abc[-[t]def]|\RT ffff|DL ffff}!

[I.56041]

UTL:FRM xy,SEQ ww:QRY,<parameter>,{NPC uvmnp[-wxkqr]|\RT ffff|DL ffff}!

[I.53091]

UTL:FRM xy,SEQ ww:QRY,NPCTG rrr[-sss]!

[I.53051]

UTL:FRM xy,SEQ ww:QRY,OPT[, {TYPE mn|ALL}],NPCS!

[I.53105]

UTL:FRM xy,SEQ ww:QRY,{PEST|FAIL|OOS},COMMON!

[I.53103]

UTL:FRM xy,SEQ ww:QRY,{PEST|FAIL|OOS}[,UNIT [q]q]!

[I.51151]

UTL:FRM xy,SEQ ww:QRY,PMSCHED,{NPC [s]abc[-[t]def]|ALL}!

[I.51151]

UTL:FRM xy,SEQ ww:QRY,PMSCHED,{NPC uvmnp[-wxkqr]|ALL}!

[I.56511]

UTL:FRM xy,SEQ ww:QRY,PSTATE,UNIT [q]q!

[I.52081]

UTL:FRM xy,SEQ ww:QRY,ROLL,DS0,{NPC [s]abc[-[t]def]|ALL[,UNIT [q]q]}!

[I.52081]

UTL:FRM xy,SEQ ww:QRY,ROLL,DS0,{NPC uvmnp[-wxkqr]|ALL[,UNIT [q]q]]!

[I.52091]

UTL:FRM xy,SEQ ww:QRY,ROLL,DS1,{NPC [s]abc[-[t]def]|ALL[,UNIT [q]q]]!

[I.52091]

UTL:FRM xy,SEQ ww:QRY,ROLL,DS1,{NPC uvmnp[-wxkqr]|ALL[,UNIT [q]q]]!

[I.52311]

UTL:FRM xy,SEQ ww:QRY,{RTMAP|DLMAP}[ffff]!

[I.52511]

UTL:FRM xy,SEQ ww:QRY,SCON,CH,TO [s]abcddd[-eee]!

[I.52511]

UTL:FRM xy,SEQ ww:QRY,SCON,CH,TO uvmnpddd[-eee]!

[I.52521]

UTL:FRM xy,SEQ ww:QRY,SCON,TO [s]abcddd[/ff]!

[I.52521]

UTL:FRM xy,SEQ ww:QRY,SCON,TO uvmnpddd[/ff]!

[I.54001]

UTL:FRM xy,SEQ ww:QRY,SCR,{LINK j[mm[-jnn]]|USER <user id>|\LINKS|USERS}!

[I.52501]

UTL:FRM xy,SEQ ww:QRY,SECH,TO [s]abcddd[-eee]!

[I.52501]

UTL:FRM xy,SEQ ww:QRY,SECH,TO uvmnpddd[-eee]!

[I.52601]

UTL:[FRM xy,SEQ ww]:QRY,SIGST abcddd

[I.52601]

UTL:[FRM xy,SEQ ww]:QRY,SIGST uvmnpddd

[I.51131]

UTL:FRM xy,SEQ ww:QRY,SQN!

[I.52531]

UTL:FRM xy,SEQ ww:QRY,SRHDW,TO [s]abcddd[/ff]!

[I.52531]

UTL:FRM xy,SEQ ww:QRY,SRHDW,TO uvmnpddd[/ff]!

[I.56501]

UTL:FRM xy,SEQ ww:QRY,SR00F,{TO [s]abcddd[-eee]|ALL}!

[I.56501]

UTL:FRM xy,SEQ ww:QRY,SR00F,{TO uvmnpddd[-eee]|ALL}!

[I.54340]

UTL:FRM xy,SEQ ww:QRY,STATE,ACO!

[I.56311]

UTL:[FRM xy,SEQ ww]:QRY,STATE,NPC [s]abc[-[t]def]!

[I.56311]

UTL:[FRM xy,SEQ ww]:QRY,STATE,NPC uvmnp[-wxkqr]!

[I.56314]

UTL:FRM xy,SEQ ww:QRY,STATE,NPC [s]abc[-[t]def]!

[I.56314]

UTL:FRM xy,SEQ ww:QRY,STATE,NPC uvmnp[-wxkqr]!

[I.52321]

UTL:FRM xy,SEQ ww:QRY[,STATE],SCDG,{NPC [s]abc|RT ffff|\
DL ffff|ALL}!

[I.52321]

UTL:FRM xy,SEQ ww:QRY[,STATE],SCDG,{NPC uvmnp|RT ffff|\
DL ffff|ALL}!

[I.56301]

UTL:FRM xy,SEQ ww:QRY,STATE,SYNC!

[I.56361]

UTL:FRM xy,SEQ ww:QRY,STATE,UNIT [q]q,DS3 c[-d]!

[I.55113]

UTL:FRM xy,SEQ ww:QRY,STR,LINK j[mm][-jnn]!

[I.55201]

UTL:FRM xy,SEQ ww:QRY,STR,SYNC a!

[I.55311]

UTL:FRM xy,SEQ ww:QRY,STR,SYNC a,TLI m!

[I.55321]

UTL:FRM xy,SEQ ww:QRY,STR,SYNC a,TLI m,SSP b!

[I.55191]

UTL:FRM xy,SEQ ww:QRY,STR,XC a!

[I.53001]

UTL:FRM xy,SEQ ww:QRY,SYNC,TYPE!

[I.53081]

UTL:FRM xy,SEQ ww:QRY,TGS mmm[-nnn]!

[I.52041]

UTL:[FRM xy,SEQ ww]:QRY,TO [s]abcddd[-eee]!

[I.52041]

UTL:[FRM xy,SEQ ww]:QRY,TO uvmnpddd[-eee]!

[I.52061]

UTL:FRM xy,SEQ ww:QRY,TO [s]abc!

[I.52061]

UTL:FRM xy,SEQ ww:QRY,TO uvmnp!

[I.51071]

UTL:FRM xy,SEQ ww:QRY,TOD,CFA!

[I.53061]

UTL:FRM xy,SEQ ww:QRY,TPS!

[I.56321]

UTL:FRM xy,SEQ ww:QRY,TS0 s,NPC [s]abc[-[t]def]!

[I.56321]

UTL:FRM xy,SEQ ww:QRY,TS0 s,NPC uvmnp[-wxkqr]!

[I.56323]

UTL:FRM xy,SEQ ww:QRY,TS0M,NPC [s]abc[-[t]def]!

[I.56323]

UTL:FRM xy,SEQ ww:QRY,TS0M,NPC uvmnp[-wxkqr]!

[I.53161]

UTL:FRM xy,SEQ ww:QRY,TSIG,NPC [s]abc[-[t]def]!

[I.53161]

UTL:FRM xy,SEQ ww:QRY,TSIG,NPC uvmnp[-wxkqr]!

[I.56111]
UTL:FRM xy,SEQ ww:QRY,{UNIT [q]q,DS3 c[-d]|ALLDS3},<parameter>,\
AI aaaaa[,LV llllllllll][,MONDAT dddd][,MONTIM tttt]!

[I.53071]
UTL:FRM xy,SEQ ww:QRY,UNIT [q]q,FTMI b[,EQL]!

[I.51041]
UTL:FRM xy,SEQ ww:QRY,WHO!

[I.55181]
UTL:FRM xy,SEQ ww:QRY,XCSB[,UNIT [q]q]!

[I.51081]
UTL:FRM xy,SEQ ww:RCY,PASSWD!

[I.51141]
UTL:FRM xy,SEQ ww:SCHED,PMREPT,NPC [s]abc[-[t]def],RI rrrrr,ST ssss,NI nn,\
<parameter>,LV llllllllll,LOCN locn,AI aaaaa,TOF ttttt[-ooooo]\
[,LK p[vv][q[vv]]]!

[I.51141]
UTL:FRM xy,SEQ ww:SCHED,PMREPT,NPC uvmp[-wxqr],RI rrrrr,ST ssss,NI nn,\
<parameter>,LV llllllllll,LOCN locn,AI aaaaa,TOF ttttt[-ooooo]\
[,LK p[vv][q[vv]]]!

[I.51011]
UTL:FRM xy,SEQ ww:[TOD hrnsc][,{CFA|FAC X'abcdef|PRIM X'ghij|MONDAT}]!

[I.55731]
UTL:[FRM xy,SEQ ww]:UPGRD!

Numeric Command Summary

[l.11001]

TCON: [FRM xy, SEQ ww]:FROM [s]abcddd[-eee], TO [t]ghijjj[-kkk], \
<tc>[, AIS][, {CUS|INCL}][, RDC][, PRIOUT]!

[l.11001]

TCON: [FRM xy, SEQ ww]:FROM uvmnpddd[-eee], TO wxkqrjjj[-kkk], \
<tc>[, AIS][, {CUS|INCL}][, RDC][, PRIOUT]!

[l.11011]

TCON: FRM xy, SEQ ww:FROM [s]abc, TO [t]ghi[, RDC][, {CUS|INCL}][, PRIOUT]!

[l.11011]

TCON: FRM xy, SEQ ww:FROM uvmnp, TO wxkqr[, RDC][, {CUS|INCL}][, PRIOUT]!

[l.11021]

TCON: FRM xy, SEQ ww:FROM [s]abcddd[-eee], TO [t]ghijjj[-kkk], \
MPM(fmd, tmd), <tc>[, NTR m][, RDC][, {CUS|INCL}]!

[l.11021]

TCON: FRM xy, SEQ ww:FROM uvmnpddd[-eee], TO wxkqrjjj[-kkk], \
MPM(fmd, tmd), <tc>[, NTR m][, RDC][, {CUS|INCL}]!

[l.11051]

TCON: FRM xy, SEQ ww:FROM [s]abcddd, TO [t]ghijjj\
[, {PFW(abcdefg, ijklmno)|NFW}]!

[l.11051]

TCON: FRM xy, SEQ ww:FROM uvmnpddd, TO wxkqrjjj\
[, {PFW(abcdefg, ijklmno)|NFW}]!

[l.11101]

OCON: FRM xy, SEQ ww:FROM [s]abcddd[-eee], TO [t]ghijjj[-kkk], \
<tc>[, RDC][{, CUS|, INCL}][, PRIOUT]!

[l.11101]

OCON: FRM xy, SEQ ww:FROM uvmnpddd[-eee], TO wxkqrjjj[-kkk], \
<tc>[, RDC][{, CUS|, INCL}][, PRIOUT]!

[l.11121]

OCON: FRM xy, SEQ ww:FROM [s]abcddd[-eee], TO [t]ghijjj[-kkk], \
MPM(fmd, tmd), <tc>[, {CUS|INCL}][, RDC]!

[l.11121]

OCON: FRM xy, SEQ ww:FROM uvmnpddd[-eee], TO wxkqrjjj[-kkk], \
MPM(fmd, tmd), <tc>[, {INCL|CUS}][, RDC]!

[I.11131]
OCON:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,RDC][,{CUS|INCL}][,PRIOUT]!

[I.11131]
OCON:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,RDC][,{CUS|INCL}][,PRIOUT]!

[I.12001]
TCNT:[FRM xy,SEQ ww]:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk],\
<tc>[,AIS][,{CUS|INCL}][,RDC][,PRIOUT]!

[I.12001]
TCNT:[FRM xy,SEQ ww]:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\
<tc>[,AIS][,{CUS|INCL}][,RDC][,PRIOUT]!

[I.12021]
TCNT:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk],\
MPM(fmd,tmd),<tc>[,NTR m][,RDC][,{CUS|INCL}]!

[I.12021]
TCNT:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\
MPM(fmd,tmd),<tc>[,NTR m][,RDC][,{CUS|INCL}]!

[I.12031]
TCNT:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,RDC][,{CUS|INCL}][,PRIOUT]!

[I.12031]
TCNT:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,RDC][,{CUS|INCL}][,PRIOUT]!

[I.12051]
TCNT:FRM xy,SEQ ww:FROM [s]abcdddd,TO [t]ghijjj\
[, {PFW(abcdefg,ijklmno)|NFW}]!

[I.12051]
TCNT:FRM xy,SEQ ww:FROM uvmnpddd,TO wxkqrjjj\
[, {PFW(abcdefg,ijklmno)|NFW}]!

[I.12101]
OCNT:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk]\
,<tc>[,RDC][,{CUS|INCL}][,PRIOUT]!

[I.12101]
OCNT:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\
,<tc>[,RDC][,{CUS|INCL}][,PRIOUT]!

[I.12121]
OCNT:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk],\
MPM(fmd,tmd),<tc>[, {CUS|INCL}][,RDC]!

[I.12121]

OCNT:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\
MPM(fmd,tmd),<tc>[, {INCL|CUS}][,RDC]!

[I.12131]

OCNT:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,RDC]\
[, {CUS|INCL}][,PRIOUT]!

[I.12131]

OCNT:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,RDC]\
[, {CUS|INCL}][,PRIOUT]!

[I.13001]

BCON:FRM xy,SEQ ww:FROM [s]abcddd[-eee],\
TOX ([t]ghijjj[, [t]klmnnn,...]),<tc>[, {NTR|LPD|CONV}]
[, {CUS|INCL}][,RDC]!

[I.13001]

BCON:FRM xy,SEQ ww:FROM uvmnpddd[-eee],\
TOX (wxkqrjjj[,edhfgnnn,...]),<tc>[, {NTR|LPD|CONV}]\
[, {CUS|INCL}][,RDC]!

[I.13002]

BCON:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk]\
,<tc>[, {NTR|LPD|CONV}][, {CUS|INCL}][,RDC]!

[I.13002]

BCON:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\
,<tc>[, {NTR|LPD|CONV}][, {CUS|INCL}][,RDC]!

[I.13011]

BCON:FRM xy,SEQ ww:FROM [s]abc,TOX ([t]def[, [u]ghi]\
[, [v]jkl][...])[,RDC][, {CUS|INCL}][, {NTR|LPD|CONV}]!

[I.13011]

BCON:FRM xy,SEQ ww:FROM uvmnp,TOX (wxkqr[,edfhg]\
[,stmno][,...])[,RDC][, {CUS|INCL}][, {NTR|LPD|CONV}]!

[I.13021]

BCON:FRM xy,SEQ ww:FROM [s]abc,TO [t]def[,RDC][, {CUS|INCL}]\
[, {NTR|LPD|CONV}]!

[I.13021]

BCON:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,RDC][, {CUS|INCL}]\
[, {NTR|LPD|CONV}]!

[I.14001]

ACON:FRM xy,SEQ ww:OLD [s]abcddd,NEW [t]ghijjj[,INCL]!

[I.14001]

ACON:FRM xy,SEQ ww:OLD uvmnpddd,NEW wxkqrjjj[,INCL]!

[I.14021]

SW:FRM xy,SEQ ww:BCAST,OLD [s]abcddd[-eee],NEW [t]ghijjj\
[-kkk][,INCL]

[I.14021]

SW:FRM xy,SEQ ww:BCAST,OLD uvmnpddd[-eee],NEW wxkqrjjj\
[-kkk][,INCL]

[I.14031]

SW:FRM xy,SEQ ww:ROLL,OLD [s]abcddd[-eee],NEW [t]ghijjj[-kkk]\
[,INCL][,FRC][,OOS]

[I.14031]

SW:FRM xy,SEQ ww:ROLL,OLD uvmnpddd[-eee],NEW wxkqrjjj[-kkk]\
[,INCL][,FRC][,OOS]

[I.14041]

SW:FRM xy,SEQ ww:DISC [s]abcddd[-eee][,OOS]

[I.14041]

SW:FRM xy,SEQ ww:DISC uvmnpddd[-eee][,OOS]

[I.14061]

SW:FRM xy,SEQ ww:BCAST,OLD [s]abc,NEW [t]ghi[,INCL]

[I.14061]

SW:FRM xy,SEQ ww:BCAST,OLD uvmnp,NEW wxkqr[,INCL]

[I.14071]

SW:FRM xy,SEQ ww:ROLL,OLD [s]abc,NEW [t]ghi[,INCL][,FRC]\
[,OOS][,TWAY]

[I.14071]

SW:FRM xy,SEQ ww:ROLL,OLD uvmnp,NEW wxkqr[,INCL][,FRC]\
[,OOS][,TWAY]

[I.14081]

SW:FRM xy,SEQ ww:DISC [s]abc[,OOS]

[I.14081]

SW:FRM xy,SEQ ww:DISC uvmnp[,OOS]

[I.14901]

DSPC:[FRM xy,SEQ ww]:{[s]aaa|[s]aaa-[v]bbb|SDxyz}:<pds_application command>

[I.14901]

DSPC:[FRM xy,SEQ ww]:{uvnmp|uvnmp-wxkqr|SDxyz}:<pds_application command>

[I.15001]

TDIS:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk]\
[,INCL][,OOS][,DCC][,PRIOUT]!

[I.15001]

TDIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\
[,INCL][,OOS][,DCC][,PRIOUT]!

[I.15002]

TDIS:FRM xy,SEQ ww:FROM [s]abcdddd,TO [t]ghijjj[,INCL][,OOS]\
[,DCC]!

[I.15002]

TDIS:FRM xy,SEQ ww:FROM uvmnpddd,TO wxkqrjjj[,INCL][,OOS]\
[,DCC]!

[I.15011]

TDIS:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,OOS][,INCL][,PRIOUT]!

[I.15011]

TDIS:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,OOS][,INCL][,PRIOUT]!

[I.15061]

DDIS:[FRM xy,SEQ ww]:FROM [s]abcdddd[-eee],TO [v]ghijjj[-kkk]!

[I.15061]

DDIS:[FRM xy,SEQ ww]:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]!

[I.15101]

ODIS:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk]\
[,INCL][,OOS][,DCC][,PRIOUT]!

[I.15101]

ODIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\
[,INCL][,OOS][,DCC][,PRIOUT]!

[I.15102]

ODIS:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk]\
[,INCL][,OOS][,DCC]!

[I.15102]

ODIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]
[,INCL][,OOS][,DCC]!

[I.15111]

ODIS:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,OOS][,INCL][,PRIOUT]!

[I.15111]

ODIS:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,OOS][,INCL][,PRIOUT]!

[I.15201]

BDIS:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk]
[,CONV][,OOS][,DCC][,INCL]!

[I.15201]

BDIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]
[,CONV][,OOS][,DCC][,INCL]!

[I.15211]

BDIS:FRM xy,SEQ ww:FROM [s]abcddd[-eee],
TOX ([t]ghijjj[, [u]klmnn . . .)][,CONV][,OOS][,DCC][,INCL]!

[I.15211]

BDIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],
TOX (wxkqrjjj[,edhfgnnn, . . .)][,CONV][,OOS][,DCC][,INCL]!

[I.15221]

BDIS:FRM xy,SEQ ww:FROM [s]abc,
TOX ([t]ghi[, [u]jkl][, [v]mno][...])[,OOS][,INCL][,CONV]!

[I.15221]

BDIS:FRM xy,SEQ ww:FROM uvmnp,
TOX (wxkqr[,edhfg][,opqrs][...])[,OOS][,INCL][,CONV]!

[I.15231]

BDIS:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,OOS][,INCL][,CONV]!

[I.15231]

BDIS:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,OOS][,INCL][,CONV]!

[I.17001]

CHG:[FRM xy,SEQ ww]:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk]
[,NOT [u]rstvvv],{TLA|TLR} {F|T|B|L|G|A}[,INCL]!

[I.17001]

CHG:[FRM xy,SEQ ww]:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]
[,NOT edhfgvvv],{TLA|TLR} {F|T|B|L|G|A}[,INCL]!

[I.17002]

CHG:FRM xy,SEQ ww:FROM [s]abcddd,TO [t]ghijjj[,TLP(snn,smm)]\
[,NG nn][,ES ee][,INCL]!

[I.17002]

CHG:FRM xy,SEQ ww:FROM uvmnpddd,TO wxkqrjjj\
[,TLP(snn,smm)][,NG nn][,ES ee][,INCL]!

[I.17011]

CHG:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,NOT [u]rst],\
{TLA|TLR} {F|T|B|A}[,INCL]!

[I.17011]

CHG:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,NOT edhfg],\
{TLA|TLR} {F|T|B|A}[,INCL]!

[I.18001]

CHG:FRM xy,SEQ ww:SWCH,TOX([s]abcddd[, [t]ghijjj,\
[u]klmnnn,...])[,INCL]!

[I.18001]

CHG:FRM xy,SEQ ww:SWCH,TOX(uvmnpddd[,wxkqrjjj,edhfgnnn,...])\
[,INCL]!

[I.18011]

CHG:FRM xy,SEQ ww:SWCH,TOX([s]ghi[, [t]jkl][, [v]mno][...])\
[,INCL]!

[I.18011]

CHG:FRM xy,SEQ ww:SWCH,TOX(uvmnp[,wxkqr][,edhfg][...])\
[,INCL]!

[I.19001]

ED:FRM xy,SEQ ww:{MACRO <macro name>|MAP <map name>}!

[I.19031]

ED:FRM xy,SEQ ww:CRET,MAP <new map name>\
,PIC <reference map name>!

[I.19041]

APPEND[:FRM xy,SEQ ww:{<line number>|END}]!

[I.19051]

DELETE[:FRM xy,SEQ ww:{<starting line>|END}[-{<ending line>\
|END}]]!

[I.19061]

LIST[:FRM xy,SEQ ww:{<starting line>|END}[-{<ending line>|\nEND}]]!

[I.19071]

LINE[:FRM xy,SEQ ww:]!

[I.19081]

SAVE[:FRM xy,SEQ ww:]!

[I.19091]

MOVE:FRM xy,SEQ ww:FROM {<starting line>|END}\n[-{<ending line>|END}],TO {<destination line>|END}!

[I.19101]

SECH:FRM xy,SEQ ww:TO [s]abcddd[-eee],{DS0A rr|DS0B nn}\n[, {SEC|PCH[ppp]}}!

[I.19101]

SECH:FRM xy,SEQ ww:TO uvmnpddd[-eee],{DS0A rr|DS0B nn}\n[, {SEC|PCH[ppp]}}!

[I.19111]

SECH:FRM xy,SEQ ww:TO [s]abcddd[-eee],RATE rr[,DP]\n[,PCH[ppp]]!

[I.19111]

SECH:FRM xy,SEQ ww:TO uvmnpddd[-eee],RATE rr[,DP]\n[,PCH[ppp]]!

[I.19151]

SDCH:FRM xy,SEQ ww:TO [s]abcddd[-eee][,PCH[ppp]][,DCC]!

[I.19151]

SDCH:FRM xy,SEQ ww:TO uvmnpddd[-eee][,PCH[ppp]][,DCC]!

[I.19201]

SCON:FRM xy,SEQ ww:RATE rr[,TPT],FROM [s]abcddd[/ff],\nTO [t]ghijjj[/ll]!

[I.19201]

SCON:FRM xy,SEQ ww:RATE rr[,TPT],FROM uvmnpddd[/ff],\nTO wxkqrjjj[/ll]!

[I.19211]

SCON:FRM xy,SEQ ww:RATE rr,[TPT,]FROM [s]abcd-dd-eee[/01],\
TO [t]ghijjj-kkk[/01]!

SCON:FRM xy,SEQ ww:RATE rr,[TPT,]FROM [s]abcd-dd/ff-mm,\
TO [t]ghijjj/ll-nn!

[I.19211]

SCON:FRM xy,SEQ ww:RATE rr,[TPT,]FROM uvmnpddd-eee[/01],\
TO wxkqrjjj-kkk[/01]!

SCON:FRM xy,SEQ ww:RATE rr,[TPT,]FROM uvmnpddd/ff-mm,\
TO wxkqrjjj/ll-nn!

[I.19221]

SCON:FRM xy,SEQ ww:[RATE rr,]MPTM [s]abcd-dd[/ff],MJU ssss\
[,MA(tttt,u)]
[,<branch>][,<branch>][,<branch>][,<branch>]!

[I.19221]

SCON:FRM xy,SEQ ww:[RATE rr,]MPTM uvmnpddd[/ff],MJU ssss\
[,MA(tttt,u)][,<branch>][,<branch>][,<branch>][,<branch>]!

[I.19301]

SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM [s]abcd-dd[/ff],\
TO [t]ghijjj[/ll]!

[I.19301]

SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM uvmnpddd[/ff],\
TO wxkqrjjj[/ll]!

[I.19311]

SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM [s]abcd-dd-eee[/01],\
TO [t]ghijjj-kkk[/01]!

[I.19311]

SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM [s]abcd-dd/ff-mm,\
TO [t]ghijjj/ll-nn!

[I.19311]

SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM uvmnpddd-eee[/01],\
TO wxkqrjjj-kkk[/01]!

[I.19311]

SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM uvmnpddd/ff-mm,\
TO wxkqrjjj/ll-nn!

[I.19321]

SCNT:FRM xy,SEQ ww:[RATE rr,]MPTM [s]abcddd[/ff],MJU ssss\
[,MA(tttt,u)],<branch>[,<branch>][,<branch>][,<branch>]!

[I.19321]

SCNT:FRM xy,SEQ ww:[RATE rr,]MPTM uvmnpddd[/ff],MJU ssss\
[,MA(tttt,u)],<branch>[,<branch>][,<branch>][,<branch>]!

[I.19401]

SDIS:FRM xy,SEQ ww:[RATE rr[,TPT],] FROM [s]abcddd[/ff],\
TO [t]ghijjj[/ll]!

[I.19401]

SDIS:FRM xy,SEQ ww:[RATE rr[,TPT],] FROM uvmnpddd[/ff],\
TO wxkqrjjj[/ll]!

[I.19411]

SDIS:FRM xy,SEQ ww:[RATE rr,][TPT,] FROM [s]abcddd{-eee[/01]|\
/ff-mm},TO [t]ghijjj{-kkk[/01]|/ll-nn}!

[I.19411]

SDIS:FRM xy,SEQ ww:[RATE rr,][TPT,] FROM uvmnpdd{-eee[/01]|\
/ff-mm},TO wxkqrjjj{-kkk[/01]|/ll-nn}!

[I.19421]

SDIS:FRM xy,SEQ ww:[RATE rr,]MPTM [s]abcddd[/ff],MJU ssss,\
<branch>[,<branch>][,<branch>][,<branch>]!

[I.19421]

SDIS:FRM xy,SEQ ww:[RATE rr,]MPTM uvmnpddd[/ff],MJU ssss,\
<branch>[,<branch>][,<branch>][,<branch>]!

[I.19431]

SDIS:FRM xy,SEQ ww:[RATE rr,]MPTM [s]abcddd[/ff],MJU ssss \
[,ALL]!

[I.19431]

SDIS:FRM xy,SEQ ww:[RATE rr,]MPTM uvmnpddd[/ff],MJU ssss \
[,ALL]!

[I.19501]

CHG:FRM xy,SEQ ww:SECH,OLD [s]abcddd[-eee],NEW [t]ghijjj\
[-kkk][,PCH ppp][,DCC]!

[I.19501]

CHG:FRM xy,SEQ ww:SECH,OLD uvmnpddd[-eee],NEW wxkqrjjj[-kkk]
[,PCH ppp][,DCC]!

[I.19551]

CHG:FRM xy,SEQ ww:{TLA|TLR} m,TO [s]abcddd[/ff]!

[I.19551]

CHG:FRM xy,SEQ ww:{TLA|TLR} m,TO uvmnpddd[/ff]!

[I.19561]

**CHG:FRM xy,SEQ ww:{TLA|TLR} m,TO [s]abcddd[/ff],MJU ssss\
[,BRi]!**

[I.19561]

**CHG:FRM xy,SEQ ww:{TLA|TLR} m,TO uvmnpddd[/ff],MJU ssss\
[,BRi]!**

[I.19581]

CHG:FRM xy,SEQ ww:SCON,OLD [s]abcddd[/ff],NEW [t]ghijjj[/ll]!

[I.19581]

CHG:FRM xy,SEQ ww:SCON,OLD uvmnpddd[/ff],NEW wxkqrjjj[/ll]!

[I.19591]

**CHG:FRM xy,SEQ ww:SCON,OLD [s]abcddd[/ff],NEW [t]ghijjj[/ll],\
MPTM!**

[I.19591]

**CHG:FRM xy,SEQ ww:SCON,OLD uvmnpddd[/ff],NEW wxkqrjjj[/ll],\
MPTM!**

[I.19601]

STST:FRM xy,SEQ ww:MON[,TO [s]abcddd[/ff]],TP kk!

[I.19601]

STST:FRM xy,SEQ ww:MON[,TO uvmnpddd[/ff]],TP kk!

[I.19621]

**STST:FRM xy,SEQ ww:MON,TO [s]abcddd[/ff],MJU ssss,[BRi,]\
TP kk!**

[I.19621]

**STST:FRM xy,SEQ ww:MON,TO uvmnpddd[/ff],MJU ssss,[BRi,]\
TP kk!**

[I.19631]

STST:FRM xy,SEQ ww:SPL[,TO [s]abcddd[/ff]],TP kk!

[I.19631]

STST:FRM xy,SEQ ww:SPL[,TO uvmnpddd[/ff]],TP kk!

[I.19651]
STST:FRM xy,SEQ ww:SPL,TO [s]abcddd[/ff],MJU ssss,[BRi,],TP kk!

[I.19651]
STST:FRM xy,SEQ ww:SPL,TO uvmnpddd[/ff],MJU ssss,[BRi,],TP kk!

[I.19661]
STST:FRM xy,SEQ ww:{TLA|TLR} m,TP kk!

[I.19671]
STST:FRM xy,SEQ ww:TPR,TP kk!

[I.19681]
STST:FRM xy,SEQ ww:TPR,{ALL|LINKS}!

[I.20001]
CTST:FRM xy,SEQ ww:<tmode>,FAD ([s]abc[, [t]def]),FROM [u]ghi\
[,TO [v]jkl][,AIS][,INCL]!

[I.20001]
CTST:FRM xy,SEQ ww:<tmode>,FAD (uvmnp[,wxkqr]),FROM eghij\
[,TO jklmn][,AIS][,INCL]!

[I.20031]
CTST:FRM xy,SEQ ww:HUB,FAD [s]abc,TO [t]jkl[,INCL]!

[I.20031]
CTST:FRM xy,SEQ ww:HUB,FAD uvmnp,TO wxkqr[,INCL]!

[I.20101]
CTST:FRM xy,SEQ ww:<tmode>,FAD ([s]abc[, [t]def])[,AIS][,INCL]!

[I.20101]
CTST:FRM xy,SEQ ww:<tmode>,FAD (uvmnp[,wxkqr])[,AIS][,INCL]!

[I.20111]
CTST:FRM xy,SEQ ww:FAD ([s]abc[, [t]def])\
{[,EMODE <emode>][,FMODE <fmode>}][,INCL];

[I.20111]
CTST:FRM xy,SEQ ww:FAD (uvmnp[,wxkqr])\
{[,EMODE <emode>][,FMODE <fmode>}][,INCL];

[I.20201]

CTST:FRM xy,SEQ ww:TNR,FAD [s]abc[,00S]!

CTST:FRM xy,SEQ ww:TNR,FAD ([s]abc[, [t]def))[,00S]!

[I.20201]

CTST:FRM xy,SEQ ww:TNR,FAD uvmnp[,00S]!

CTST:FRM xy,SEQ ww:TNR,FAD (uvmnp[,wxkqr))[,00S]!

[I.20202]

CTST:FRM xy,SEQ ww:TNR,ALL[,00S]!

[I.20301]

CTST:FRM xy,SEQ ww:LPBKT,FAD [s]abc[,INCL]!

[I.20301]

CTST:FRM xy,SEQ ww:LPBKT,FAD uvmnp[,INCL]!

[I.21001]

TTST:FRM xy,SEQ ww:MON[,TO [t]ghijjj][,<tc>],TP kk!

[I.21001]

TTST:FRM xy,SEQ ww:MON[,TO uvmnpjjj][,<tc>],TP kk!

[I.21021]

TTST:FRM xy,SEQ ww:MON,TO [t]ghi(jjj[-kkk][,lll,...))[,<tc>],\TG mmm!

[I.21021]

TTST:FRM xy,SEQ ww:MON,TO wxkqr(jjj[-kkk][,lll,...))[,<tc>],\TG mmm!

[I.21031]

TTST:FRM xy,SEQ ww:MON,TG mmm!

[I.23001]

TTST:FRM xy,SEQ ww:SPL,TP kk!

[I.23021]

TTST:FRM xy,SEQ ww:SPL,TG mmm[,NOYLW]!

[I.24001]

TTST:FRM xy,SEQ ww:HUB,<tc>,TO [t]ghijjj,TP kk!

[I.24001]

TTST:FRM xy,SEQ ww:HUB,<tc>,TO uvmnpjjj,TP kk!

[I.24021]

TTST:FRM xy,SEQ ww:HUB,TO ([s]abcd, [t]ghij),TG mmm[,<tc>]!

[I.24021]

TTST:FRM xy,SEQ ww:HUB,TO (uvmnpddd,wxqrrjjj),TG mmm[,<tc>]!

[I.25101]

TTST:FRM xy,SEQ ww:TLA m[,NOT [t]rstvvv],TP kk!

[I.25101]

TTST:FRM xy,SEQ ww:TLA m[,NOT uvmnpvvv],TP kk!

[I.25121]

TTST:FRM xy,SEQ ww:TLA m,TG mmm!

[I.25501]

TTST:FRM xy,SEQ ww:TLR m[,NOT [t]rstvvv],TP kk!

[I.25501]

TTST:FRM xy,SEQ ww:TLR m[,NOT uvmnpvvv],TP kk!

[I.25521]

TTST:FRM xy,SEQ ww:TLR m,TG mmm!

[I.26101]

TTST:FRM xy,SEQ ww:RT ffff,{DGA|DGB|DGC|DGD|DGP},\
LLB[, {TO|FROM}], {INI|TRM|ALW|INH}!

[I.26141]

OPR:FRM xy,SEQ ww:LPBK loop[t],NPC [s]abc,LOCN locn!

[I.26141]

OPR:FRM xy,SEQ ww:LPBK loop[t],NPC uvmnp,LOCN locn!

[I.26151]

RLS:FRM xy,SEQ ww:LPBK loop,NPC [s]abc,LOCN locn!

[I.26151]

RLS:FRM xy,SEQ ww:LPBK loop,NPC uvmnp,LOCN locn!

[I.26161]

OPR:FRM xy,SEQ ww:LPBK d[t],UNIT [q]q,MMFG a!

[I.27001]

TTST:FRM xy,SEQ ww:TPR,TP kk[,00S][,FRC]!

[I.27002]

TTST:FRM xy,SEQ ww:TPR,ALL[,00S]!

[I.27021]

TTST:FRM xy,SEQ ww:TGR,TG mmm[-nnn][,00S]!

[I.28101]

OPR:FRM xy,SEQ ww:TSIG test,NPC [s]abc!

[I.28101]

OPR:FRM xy,SEQ ww:TSIG test,NPC uvmnp!

[I.28201]

RLS:FRM xy,SEQ ww:TSIG test,NPC [s]abc!

[I.28201]

RLS:FRM xy,SEQ ww:TSIG test,NPC uvmnp!

[I.29001]

TTST:FRM xy,SEQ ww:LPD,TP kk,<tc>!

[I.29021]

TTST:FRM xy,SEQ ww:LPD,TG mmm[,<tc>]!

[I.30101]

GRTH:FRM xy,SEQ ww:FRAME fg[,CHAR m][,UID <uid>]!

[I.31101]

GRTH:FRM xy,SEQ ww:SYNC,TB,TYPE TBpqr!

[I.31111]

GRTH:FRM xy,SEQ ww:SYNC,TLI 3,TYPE TBpqr!

[I.31121]

GRTH:FRM xy,SEQ ww:SYNC,TLI m,
{TYPE texyz,SSP a,SRC p|TYPE TDxyz}!

[I.31211]

GRTH:FRM xy,SEQ ww:UNIT q[,TYPE utxyz]
[,CONN(a[,b[,c[,d[,e [,f]]]]))]]]!

[I.31211]

GRTH:FRM xy,SEQ ww:UNIT [q]q[,TYPE utxyz]!

[I.31321]

GRTH:FRM xy,SEQ ww:UNIT [q]q,FTMI d,EQL(l,r)!

[I.31341]

GRTH:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TYPE mnxyz[,OPTS(rr/m\
[,rr/m][...])][,IW X'pq[,INCL]][,AIS {INFO|MJ|MN}}[,PL {ENA|DSA}}]!

[I.31341]

GRTH:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],TYPE mnxyz[,OPTS(rr/m\
[,rr/m][...])][,IW X'pq[,INCL]][,AIS {INFO|MJ|MN}}[,PL {ENA|DSA}}]!

[I.31351]

GRTH:FRM xy,SEQ ww:NPC [s]abc,TYPE mnxyz[,CBTIMER [t]v]!

[I.31351]

GRTH:FRM xy,SEQ ww:NPC uvmnp,TYPE mnxyz[,CBTIMER [t]v]!

[I.31352]

GRTH:FRM xy,SEQ ww:NPC [s]abc[-[t]def][,TYPE mnxyz\
[,OPTS(rr/m[,rr/m][...])][,IW X'pq[,INCL]][,AIS {INFO|MJ|MN}}]!

[I.31352]

GRTH:FRM xy,SEQ ww:NPC uvmnp[-uvkqr][,TYPE mnxyz\
[,OPTS(rr/m[,rr/m][...])][,IW X'pq[,INCL]][,AIS {INFO|MJ|MN}}]!

[I.31371]

GRTH:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TYPE DSxyz \
[,OPTS(rr/m[,rr/m][...])][,IW X'pq]!

[I.31371]

GRTH:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],TYPE DSxyz \
[,OPTS(rr/m[,rr/m][...])][,IW X'pq]!

[I.31381]

GRTH:FRM xy,SEQ ww:NPC [s]abc,NPCTP n!

[I.31381]

GRTH:FRM xy,SEQ ww:NPC uvmnp,NPCTP n!

[I.31401]

GRTH:FRM xy,SEQ ww:NPC [s]abc,NPCTG rrr!

[I.31401]

GRTH:FRM xy,SEQ ww:NPC uvmnp,NPCTG rrr!

[I.31411]

GRTH:FRM xy,SEQ ww:TP kk[,<tc>]!

[I.31421]

GRTH:FRM xy,SEQ ww:TG mmm,NPCTG (rrr,eee[-fff];sss,www[-xxx])\
[,<tc>]!

[I.31501]

GRTH:FRM xy,SEQ ww:UNIT [q]q,MIU c[-d][,TYPE mnxyz]!

[I.31511]

GRTH:FRM xy,SEQ ww:UNIT [q]q,MXR c[-d]\
[,TYPE mnxyz][,BERM s][,BERT t][,LBO]!

[I.31521]

COPY:FRM xy,SEQ ww:NPC [s]abc,TO [t]def[-[u]ghi]!

[I.31521]

COPY:FRM xy,SEQ ww:NPC uvmnp,TO wxkqr[-ghikl]!

[I.32101]

DGRTH:FRM xy,SEQ ww:SYNC,TB!

[I.32121]

DGRTH:FRM xy,SEQ ww:SYNC,TLI m[,SSP a]!

[I.32211]

DGRTH:FRM xy,SEQ ww:UNIT [q]q!

[I.32321]

DGRTH:FRM xy,SEQ ww:UNIT [q]q,FTMI d!

[I.32341]

DGRTH:FRM xy,SEQ ww:NPC [s]abc[-[t]def]!

[I.32341]

DGRTH:FRM xy,SEQ ww:NPC uvmnp[-uvkqr]!

[I.32381]

DGRTH:FRM xy,SEQ ww:NPC [s]abc,NPCTP n[,TPR]!

[I.32381]

DGRTH:FRM xy,SEQ ww:NPC uvmnp,NPCTP n[,TPR]!

[I.32401]

DGRTH:FRM xy,SEQ ww:NPC [s]abc,NPCTG rrr[,TGR]!

[I.32401]

DGRTH:FRM xy,SEQ ww:NPC uvmnp,NPCTG rrr[,TGR]!

[I.32411]

DGRTH:FRM xy,SEQ ww:TP kk!

[I.32421]

DGRTH:FRM xy,SEQ ww:TG mmm[-nnn]!

[I.32501]

DGRTH:FRM xy,SEQ ww:UNIT [q]q,MXR c[-d]!

[I.32511]

DGRTH:FRM xy,SEQ ww:UNIT [q]q,MIU c[-d]!

[I.33001]

RMV:FRM xy,SEQ ww:MC!

[I.33011]

RMV:FRM xy,SEQ ww:LINK j!

[I.33101]

RMV:FRM xy,SEQ ww:SYNC a!

[I.33111]

RMV:FRM xy,SEQ ww:SYNC,TLI 3,CRO!

[I.33121]

RMV:FRM xy,SEQ ww:SYNC a,TLI m[,SSP b]!

[I.33201]

RMV:FRM xy,SEQ ww:CCNI s!

[I.33202]

RMV:FRM xy,SEQ ww:CCB sf!

[I.33211]

RMV:FRM xy,SEQ ww:{SMEM|PMEM}!

[I.33221]

RMV:FRM xy,SEQ ww:TSI sft!

[I.33231]

**RMV:FRM xy,SEQ ww:TSIS,CCN s,UNIT q\
[,CONN(a[,b[,c[,d[,e[,f]]]]))]]!**

[I.33241]

RMV:FRM xy,SEQ ww:TSIS,CCN s,ALL!

[I.33251]

RMV:FRM xy,SEQ ww:CCI s!

[I.33261]

RMV:FRM xy,SEQ ww:ETSI sqq!

[I.33271]

RMV:FRM xy,SEQ ww:ETSI, ECCN s, ALL!

[I.33311]

RMV:FRM xy,SEQ ww:UNIT [q]q, UC!

[I.33321]

RMV:FRM xy,SEQ ww:UNIT [q]q, {FTMI d|DSPI}!

[I.33331]

RMV:FRM xy,SEQ ww:UNIT [q]q, FC sb!

[I.33351]

RMV:[FRM xy,SEQ ww]:NPC [s]abc[-[t]def][,SIDE s][,INCL]!

[I.33351]

RMV:[FRM xy,SEQ ww]:NPC uvmnp[-uvkqr][,SIDE s][,INCL]!

[I.33401]

RMV:FRM xy,SEQ ww:UNIT [q]q, FLI k!

[I.33411]

RMV:FRM xy,SEQ ww:UNIT [q]q, FMT s!

[I.33421]

RMV:FRM xy,SEQ ww:UNIT [q]q, MMFG c[-d][,FRC[,INCL]]!

[I.33431]

RMV:FRM xy,SEQ ww:UNIT [q]q, MIU c[-d][,INCL]!

[I.33481]

RMV:FRM xy,SEQ ww:{RT|DL} ffff!

[I.34001]

RST:FRM xy,SEQ ww:MC[, {MCOND|NOJRN|FRC}]!

[I.34001]

RST:FRM xy,SEQ ww:MC, CLR[, ALL]!

[I.34011]

RST:FRM xy,SEQ ww:LINK j!

[I.34101]

RST:FRM xy,SEQ ww:SYNC a!

[I.34111]

RST:FRM xy,SEQ ww:SYNC,TLI 3,CRO!

[I.34121]

RST:FRM xy,SEQ ww:SYNC a,TLI m[,SSP b]!

[I.34201]

RST:FRM xy,SEQ ww:CCNI s!

[I.34202]

RST:FRM xy,SEQ ww:CCB sf!

[I.34211]

RST:FRM xy,SEQ ww:{PMEM|SMEM[{,CLR|[,FRC][,BKGRND]}}]!

[I.34221]

RST:FRM xy,SEQ ww:TSI sft!

[I.34231]

RST:FRM xy,SEQ ww:TSIS,CCN s,UNIT q \
[,CONN(a[,b[,c[,d[,e[,f]]]]))]]!

[I.34241]

RST:FRM xy,SEQ ww:TSIS,CCN s,ALL!

[I.34251]

RST:FRM xy,SEQ ww:CCI s!

[I.34261]

RST:FRM xy,SEQ ww:ETSI sqq!

[I.34271]

RST:FRM xy,SEQ ww:ETSI,ECN s,ALL!

[I.34311]

RST:FRM xy,SEQ ww:UNIT [q]q,UC!

[I.34321]

RST:FRM xy,SEQ ww:UNIT [q]q,{FTMI d|DSPI}!

[I.34331]

RST:FRM xy,SEQ ww:UNIT [q]q,FC sb!

[I.34351]

RST:[FRM xy,SEQ ww]:NPC [s]abc[-[t]def][,SIDE s]!

[I.34351]

RST:[FRM xy,SEQ ww]:NPC uvmnp[-uvkqr][,SIDE s]!

[I.34371]

RST:FRM xy,SEQ ww:NPC [s]abc,TS0M!

[I.34371]

RST:FRM xy,SEQ ww:NPC uvmnp,TS0M!

[I.34401]

RST:FRM xy,SEQ ww:UNIT [q]q,FLI k!

[I.34411]

RST:FRM xy,SEQ ww:UNIT [q]q,FMT s!

[I.34421]

RST:FRM xy,SEQ ww:UNIT [q]q,MMFG c[-d][,INCL]!

[I.34431]

RST:FRM xy,SEQ ww:UNIT [q]q,MIU c[-d][,INCL]!

[I.34481]

RST:FRM xy,SEQ ww:{RT|DL} ffff!

[I.35001]

CFR:FRM xy,SEQ ww:XC s[,INCL]!

[I.35011]

CFR:FRM xy,SEQ ww:SYNC a,FPLL!

[I.35012]

CFR:FRM xy,SEQ ww:SYNC,STRATUM {STR2|STR3}!

[I.35013]

CFR:FRM xy,SEQ ww:SYNC,{MASTER|SLAVED}!

[I.35021]

CFR:FRM xy,SEQ ww:FRAME!

[I.35101]

SW:FRM xy,SEQ ww:UNIT [q]q,FLI,TOPTN!

[I.35105]

SW:FRM xy,SEQ ww:UNIT [q]q,FLI,TOSRVC!

[I.35111]

SW:FRM xy,SEQ ww:UNIT [q]q,MMFG c, TOPRTN[,FRC]!

[I.35121]

SW:FRM xy,SEQ ww:UNIT [q]q,MMFG c,TOSRVC!

[I.35301]

ALWSW:FRM xy,SEQ ww:UNIT [q]q,MMFG c[-d],{TOPRTN|TOSRVC}!

[I.35311]

INHSW:FRM xy,SEQ ww:UNIT [q]q,MMFG c[-d],{TOPRTN|TOSRVC}!

[I.36001]

ADD:FRM xy,SEQ ww:LINK j,PTCOL {S|X|T|M}[,BAUD bb][,ALM k]\
[,BS e][,ENQ q][,XON x][,INIT]!

[I.36001]

ADD:FRM xy,SEQ ww:LINK j,PTCOL S[,BAUD bb][,ALM k]\
[,BS e][,ENQ q][,XON x][,INIT]!

[I.36001]

ADD:FRM xy,SEQ ww:LINK j,PTCOL X[,ALM k][,INIT]!

[I.36001]

ADD:FRM xy,SEQ ww:LINK j,PTCOL T[,BAUD bb][,ALM k][,INIT]!

[I.36001]

ADD:FRM xy,SEQ ww:LINK j,PTCOL M[,ALM k][,INIT]!

[I.36003]

ADD:FRM xy,SEQ ww:LINK j[,K b][,T1 ee][,T3 ggg][,N2 aa]\
[,FRMAD {A|B}]!

[I.36005]

ADD:FRM xy,SEQ ww:LINK j[mm][,W c][,P ddd][,T20 iii]\
[,T22 jjj][,T23 kkk][,T25 lll][,T26 mmm][,R20 nn]\
[,R22 p][,R23 qq][,R25 r][,DBIT v][,VC(ppss,gghh)]!

[I.36007]

ADD:FRM xy,SEQ ww:LINK j,APPL {ASCS|ASCD|PM}[,L2AD aa]\
[,POLL ttt]!

[I.36021]

ADD:FRM xy,SEQ ww:NPC {[s]abc-[t]def|[s]abc[, [s]ghi]...\
[, [t]def]]!

[I.36021]

ADD:FRM xy,SEQ ww:NPC {uvmnp-wxkqr|uvmnp[, edfgh]...\
[, wxkqr]]!

[I.36101]

ADD:FRM xy,SEQ ww:USER <user id>[, NEW][, PASSWD <user password>]!

[I.36101]

ADD:FRM xy,SEQ ww:USER <user id>[, NEW]!

[I.36103]

ADD:FRM xy,SEQ ww:{USER <user id>|LINK j[mm][, INCL]|ALL}\
[, LANG {M|P|F}][, NPCAD {E|X|H}][, LEV(a,b,c,d,e,f)]\
[, {RMON|RMOFF}][, RLK {A|I}][, {CONVON|CONVOFF}][, INIT]!

[I.36201]

ADD:FRM xy,SEQ ww:{RT|DL} ffff,MD g[g]\
[, DGA [s]aaa][, DGB [s]bbb][, DGC [s]ccc][, DGD [s]ddd]\
[, DGP[s]ppp][, {sss|NDL|RTF}]!

[I.36201]

ADD:FRM xy,SEQ ww:{RT|DL} ffff,MD g[g][, DGA uvjab]\
[, DGB uvkcd][, DGC uvlef][, DGD uvmgh][, DGP uvjpr]\
[, {sss|NDL|RTF}]!

[I.37001]

DLT:FRM xy,SEQ ww:NPC {[s]abc-[t]def|[s]abc[, [s]ghi]...\
[, [t]def]]!

[I.37001]

DLT:FRM xy,SEQ ww:NPC {uvmnp-wxkqr|uvmnp[, abcde]...[, wxkqr]]!

[I.37101]

DLT:FRM xy,SEQ ww:USER <user id>!

[I.37201]

DLT:FRM xy,SEQ ww:{MACRO <macro name>|MAP <map name>}\
[, USER <user id>]!

[I.37211]

DLT:FRM xy,SEQ ww:{RT|DL} ffff[, DGA [s]aaa][, DGB [s]bbb]\
[, DGC [s]ccc][, DGD [s]ddd][, DGP [s]ppp]!

[I.37211]

**DLT:FRM xy,SEQ ww:{RT|DL} ffff\
[,DGA uvjab][,DGB uvkcd][,DGC uvlef][,DGD uvmgh)\
[,DGP uvjpr]!**

[I.37301]

DLT:FRM xy,SEQ ww:FPKG nnnnnnnn!

[I.38011]

CHG:FRM xy,SEQ ww:SYNC,TLI m,SSP b,TYPE texyz!

[I.38011]

**CHG:FRM xy,SEQ ww:SYNC,\
TLI,SRC(i/(a,b)[,j/(c,d)[,k/(e,f)[,l/(g,h)]])!]**

[I.38101]

CHG:FRM xy,SEQ ww:UNIT q,CONN(a[,b[,c[,d[,e[,f]]]]])!]

[I.38111]

CHG:FRM xy,SEQ ww:UNIT [q]q,FTMI d,EQL(l,r)!

[I.38201]

CHG:FRM xy,SEQ ww:SETOP rr,{TYPE mn|ALL},NPCOP(set1,set2,set3)!

[I.38211]

CHG:FRM xy,SEQ ww:NPC [s]abc,TYPE mnxyz[,IW X'pq[,INCL]]!

[I.38211]

CHG:FRM xy,SEQ ww:NPC uvmnp,TYPE mnxyz[,IW X'pq[,INCL]]!

[I.38221]

CHG:FRM xy,SEQ ww:NPC [s]abc,OPTS(rr/m[,rr/m][...])!

[I.38221]

CHG:FRM xy,SEQ ww:NPC uvmnp,OPTS(rr/m[,rr/m][...])!

[I.38231]

CHG:FRM xy,SEQ ww:TYPE mnxyz,OPTS(rr/<m>[,rr/<m>][...])!

[I.38241]

**CHG:FRM xy,SEQ ww:{NPC [s]abc|RT ffff|DL ffff|TYPE mnxyz},\
OPTS(rr/m[,rr/m,...])!**

[I.38241]

**CHG:FRM xy,SEQ ww:{NPC uvmnp|RT ffff|DL ffff|TYPE mnxyz},\
OPTS(rr/m[,rr/m,...])!**

[I.38251]

CHG:FRM xy,SEQ ww:HUBID 0'ab!

[I.38261]

CHG:FRM xy,SEQ ww:ECLOC,TYPE {MJU|SRM}!

[I.38271]

CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TYPE mnxyz[,IW X'pq[,INCL]]!

[I.38271]

CHG:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],TYPE mnxyz[,IW X'pq[,INCL]]!

[I.38281]

**CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]ghi],\
{ALMOPT|PLOPT},{AIS {INFO|MJ|MN}|PL {ENA|DSA}}!**

[I.38281]

**CHG:FRM xy,SEQ ww:NPC uvmnp[-wxkqr],\
{ALMOPT|PLOPT},{AIS {INFO|MJ|MN}|PL {ENA|DSA}}!**

[I.38301]

**CHG:FRM xy,SEQ ww:PASSWD[,OLD <old password>, \
NEW <new password>]!**

[I.38301]

**CHG:FRM xy,SEQ ww:PASSWD!
 OLD PASSWD: (user enters the old password)
 NEW PASSWD: (user enters the new password)
 PASSWD: (user re-enters the new password for verification)**

[I.38311]

CHG:FRM xy,SEQ ww:NPC [s]abc,TYPE mnxyz[,IW X'pq[r]]!

[I.38311]

CHG:FRM xy,SEQ ww:NPC uvmnp,TYPE mnxyz[,IW X'pq[r]]!

[I.38321]

CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TS0 abcdefgh!

[I.38321]

CHG:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],TS0 abcdefgh!

[I.38323]

CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TS0M abcdefgh!

[I.38323]

CHG:FRM xy,SEQ ww:NPC uvmnp[-wxkqr],TS0M abcdefgh!

[I.38324]
CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]def],NFS abcdefghi!

[I.38324]
CHG:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],NFS abcdefghi!

[I.38351]
CHG:FRM xy,SEQ ww:{RT|DL} ffff,TO gggg!

[I.38361]
CHG:FRM xy,SEQ ww:RT ffff,[{sss|RTF}][,SWMN x]!

[I.38401]
**CHG:FRM xy,SEQ ww:{USER <user id>|LINK j[mm][,INCL]}\
[,SCR n[,GR(a,b,c,d,e,f)]][, {MCON|MCOFF}][,INIT]!**

[I.38471]
CHG:FRM xy,SEQ ww:MSGLOG {ON|OFF}!

[I.38481]
CHG:FRM xy,SEQ ww:{RT|DL} ffff,{ZCS|B8ZS}!

[I.38501]
CHG:FRM xy,SEQ ww:{MACRO|MAP},SPACE sss!

[I.38601]
**CHG:FRM xy,SEQ ww:UNIT [q]q,DS3 c[-d][,BERM s][,BERT t]\
[,LBO][,TYPE mnxyz]!**

[I.38611]
CHG:[FRM xy,SEQ ww]:DS3UNPROTALM {ON|OFF}!

[I.38621]
CHG:[FRM xy,SEQ ww]:DS1ALMDS3 {ON|OFF}!

[I.38641]
CHG:[FRM xy,SEQ ww]:DS3ALMDLY [x]x!

[I.39001]
LOGIN:FRM xy,SEQ ww:USER <user id>[,PASSWD <user password>]!

[I.39001]
**LOGIN:FRM xy,SEQ ww:USER <user id>!
PASSWD: <user enters the user password>**

[I.39101]
LOGOFF:FRM xy,SEQ ww:{USER <user id>|LINK j[mm][,INCL]}}!

[I.39201]

ACT:FRM xy,SEQ ww:MAP <map name>[,CLR][,INCL]!

[I.39301]

**EXC:FRM xy,SEQ ww:MACRO <macro name>[(,(<p1>[,<p2>[,<p3>\
[,...[,<p10>]]]]))]**

[I.39311]

STOP:FRM xy,SEQ ww:MACRO[,LINK l[mm]]!

[I.39401]

**SW:FRM xy,SEQ ww:{NPC [s]abc|RT ffff,xxx},\
{PSW|USW|ALW|INH}[,FRC][,INCL]!**

[I.39401]

**SW:FRM xy,SEQ ww:{NPC uvmp|RT ffff,xxx},\
{PSW|USW|ALW|INH}[,FRC][,INCL]!**

[I.41001]

DGN:FRM xy,SEQ ww:MC[,CFT X'vwxy]!

[I.41011]

DGN:FRM xy,SEQ ww:LINK a[,CFT X'vwxy]!

[I.41021]

DGN:FRM xy,SEQ ww:MP[,CFT X'vwxy]!

[I.41031]

DGN:FRM xy,SEQ ww:CI[,CFT X'vwxy]!

[I.41051]

DGN:[FRM xy,SEQ ww]:{PMEM|SMEM}[,{CFT X'vwxy|EXCT|DBASE}][,VERIFY]!

[I.41101]

DGN:FRM xy,SEQ ww:SYNC a!

[I.41111]

DGN:FRM xy,SEQ ww:SYNC,TLI 3,CRO!

[I.41121]

DGN:FRM xy,SEQ ww:SYNC a,TLI m[,SSP b]!

[I.41201]

DGN:FRM xy,SEQ ww:CCNI s[,CFT X'vwxy]!

[I.41211]

DGN:FRM xy,SEQ ww:CCB sf[,CFT X'vwxy]!

[I.41221]

DGN:FRM xy,SEQ ww:TSI sft[,CFT X'vwxy]!

[I.41232]

DGN:FRM xy,SEQ ww:TSIS,CCN s,UNIT q,\
[,CONN(a[,b[,c[,d[,e[,f]]]]))]]!

[I.41241]

DGN:FRM xy,SEQ ww:TSIS,CCN s,ALL!

[I.41251]

DGN:FRM xy,SEQ ww:CCI s[,CFT X'vwxy]!

[I.41261]

DGN:FRM xy,SEQ ww:ETSI sqq[,CFT X'vwxy]!

[I.41271]

DGN:FRM xy,SEQ ww:ETSI s,ECCN s,ALL!

[I.41311]

DGN:FRM xy,SEQ ww:UNIT [q]q,UC[,CFT X'vwxy]!

[I.41321]

DGN:FRM xy,SEQ ww:UNIT [q]q,FTMI d[,CFT X'vwxy]!

[I.41331]

DGN:FRM xy,SEQ ww:UNIT [q]q,FC sb[,CFT X'vwxy]!

[I.41341]

DGN:FRM xy,SEQ ww:UNIT [q]q,DSPI[,CFT X'vwxy]!

[I.41351]

DGN:[FRM xy,SEQ ww]:NPC [s]abc[,SIDE s][,CFT X'vwxy]!

[I.41351]

DGN:[FRM xy,SEQ ww]:NPC uvmnp[,SIDE s][,CFT X'vwxy]!

[I.41361]

DGN:[FRM xy,SEQ ww]:NPC [s]abc-[t]def!

[I.41361]

DGN:[FRM xy,SEQ ww]:NPC uvmnp-uvkqr!

[I.41401]

DGN:FRM xy,SEQ ww:UNIT [q]q,FLI k[,CFT X'vwxy]!

[I.41411]

DGN:FRM xy,SEQ ww:UNIT [q]q,FMT s[,CFT X'vwxy]!

[I.41421]

DGN:FRM xy,SEQ ww:UNIT [q]q,MXR c[,DEV devc[,CFT X'vwxy]]!

[I.41431]

DGN:FRM xy,SEQ ww:UNIT [q]q,MIU c[,CFT X'vwxy]!

[I.51001]

UTL:[FRM xy,SEQ ww]:QRY,MEMSTAT!

[I.51011]

UTL:FRM xy,SEQ ww:[TOD hrmsc][,{CFA|FAC X'abcdef|PRIM X'ghij|MONDAT}}]!

[I.51021]

UTL:FRM xy,SEQ ww:DATE <new-date>[,FORMAT ggg][,INT ii]!

[I.51031]

UTL:FRM xy,SEQ ww:QRY,DATE!

[I.51041]

UTL:FRM xy,SEQ ww:QRY,WHO!

[I.51071]

UTL:FRM xy,SEQ ww:QRY,TOD,CFA!

[I.51081]

UTL:FRM xy,SEQ ww:RCY,PASSWD!

[I.51091]

UTL:FRM xy,SEQ ww:QRY,CNFR!

[I.51101]

UTL:FRM xy,SEQ ww:INIT,ALM a!

[I.51111]

UTL:FRM xy,SEQ ww:ACO!

[I.51121]

UTL:FRM xy,SEQ ww:QRY,FPKG!

[I.51131]

UTL:FRM xy,SEQ ww:QRY,SQL!

[I.51141]
UTL:FRM xy,SEQ ww:SCHED,PMREPT,NPC [s]abc[-[t]def],RI rrrrr,ST ssss,NI nn,\
<parameter>,LV llllllllll,LOCN locn,AI aaaaa,TOF ttttt[-ooooo]\
[,LK p[vv][q[vv]]]!

[I.51141]
UTL:FRM xy,SEQ ww:SCHED,PMREPT,NPC uvmnp[-wxkqr],RI rrrrr,ST ssss,NI nn,\
<parameter>,LV llllllllll,LOCN locn,AI aaaaa,TOF ttttt[-ooooo]\
[,LK p[vv][q[vv]]]!

[I.51151]
UTL:FRM xy,SEQ ww:QRY,PMSCHED,{NPC [s]abc[-[t]def]|ALL}!

[I.51151]
UTL:FRM xy,SEQ ww:QRY,PMSCHED,{NPC uvmnp[-wxkqr]|ALL}!

[I.51161]
INH:FRM xy,SEQ ww:PMREPT,{NPC [s]abc[-[t]def]|ALL}!

[I.51161]
INH:FRM xy,SEQ ww:PMREPT,{NPC uvmnp[-wxkqr]|ALL}!

[I.51171]
ALW:FRM xy,SEQ ww:PMREPT,{NPC [s]abc[-[t]def]|ALL}!

[I.51171]
ALW:FRM xy,SEQ ww:PMREPT,{NPC uvmnp[-wxkqr]|ALL}!

[I.51201]
UTL:[FRM xy,SEQ ww]:QRY,APPL,{NPC [s]abc|ALL}!

[I.51201]
UTL:[FRM xy,SEQ ww]:QRY,APPL,{NPC uvmnp|ALL}!

[I.51501]
UTL:FRM xy,SEQ ww:QRY,HUBID!

[I.51511]
UTL:FRM xy,SEQ ww:QRY,ECLOC!

[I.52011]
UTL:[FRM xy,SEQ ww]:QRY,CMAP [s]abc[-[t]def]!

[I.52011]
UTL:[FRM xy,SEQ ww]:QRY,CMAP uvmnp[-wxkqr]!

[I.52031]
UTL:[FRM xy,SEQ ww]:QRY,DMAP!

[I.52041]
UTL: [FRM xy, SEQ ww]: QRY, TO [s]abcddd[-eee]!

[I.52041]
UTL: [FRM xy, SEQ ww]: QRY, TO uvmnpddd[-eee]!

[I.52051]
UTL: FRM xy, SEQ ww: QRY, FROM [s]abcddd[-eee]!

[I.52051]
UTL: FRM xy, SEQ ww: QRY, FROM uvmnpddd[-eee]!

[I.52061]
UTL: FRM xy, SEQ ww: QRY, TO [s]abc!

[I.52061]
UTL: FRM xy, SEQ ww: QRY, TO uvmnp!

[I.52071]
UTL: FRM xy, SEQ ww: QRY, FROM [s]abc!

[I.52071]
UTL: FRM xy, SEQ ww: QRY, FROM uvmnp!

[I.52081]
UTL: FRM xy, SEQ ww: QRY, ROLL, DS0, {NPC [s]abc[-[t]def]|ALL[, UNIT [q]q]]!

[I.52081]
UTL: FRM xy, SEQ ww: QRY, ROLL, DS0, {NPC uvmnp[-wxkqr]|ALL[, UNIT [q]q]]!

[I.52091]
UTL: FRM xy, SEQ ww: QRY, ROLL, DS1, {NPC [s]abc[-[t]def]|ALL[, UNIT [q]q]]!

[I.52091]
UTL: FRM xy, SEQ ww: QRY, ROLL, DS1, {NPC uvmnp[-wxkqr]|ALL[, UNIT [q]q]]!

[I.52101]
UTL: : QRY, BCAST, ALL!

[I.52111]
UTL: FRM xy, SEQ ww: QRY, BCAST, FROM [s]abcddd!

[I.52111]
UTL: FRM xy, SEQ ww: QRY, BCAST, FROM uvmnpddd!

[I.52121]
UTL: FRM xy, SEQ ww: QRY, BCAST, FROM [s]abc!

[I.52121]

UTL:FRM xy,SEQ ww:QRY,BCAST,FROM uvmnp!

[I.52201]

UTL:FRM xy,SEQ ww:QRY,MARK [s]abc[-[t]def]!

[I.52201]

UTL:FRM xy,SEQ ww:QRY,MARK uvmnp[-wxkqr]!

[I.52211]

UTL:FRM xy,SEQ ww:QRY,MARK [s]abcjjj[-kkk]!

[I.52211]

UTL:FRM xy,SEQ ww:QRY,MARK uvmnpjjj[-kkk]!

[I.52311]

UTL:FRM xy,SEQ ww:QRY,{RTMAP|DLMAP}[ffff]!

[I.52321]

**UTL:FRM xy,SEQ ww:QRY[,STATE],SCDG,{NPC [s]abc|RT ffff|\
DL ffff|ALL}!**

[I.52321]

**UTL:FRM xy,SEQ ww:QRY[,STATE],SCDG,{NPC uvmnp|RT ffff|\
DL ffff|ALL}!**

[I.52501]

UTL:FRM xy,SEQ ww:QRY,SECH,TO [s]abcddd[-eee]!

[I.52501]

UTL:FRM xy,SEQ ww:QRY,SECH,TO uvmnpddd[-eee]!

[I.52511]

UTL:FRM xy,SEQ ww:QRY,SCON,CH,TO [s]abcddd[-eee]!

[I.52511]

UTL:FRM xy,SEQ ww:QRY,SCON,CH,TO uvmnpddd[-eee]!

[I.52521]

UTL:FRM xy,SEQ ww:QRY,SCON,TO [s]abcddd[/ff]!

[I.52521]

UTL:FRM xy,SEQ ww:QRY,SCON,TO uvmnpddd[/ff]!

[I.52531]

UTL:FRM xy,SEQ ww:QRY,SRHDW,TO [s]abcddd[/ff]!

[I.52531]

UTL:FRM xy,SEQ ww:QRY,SRHDW,TO uvmnpddd[/ff]!

[I.52581]

UTL:FRM xy,SEQ ww:QRY,LOAD,{NPC [s]abc|TOTAL}!

[I.52581]

UTL:FRM xy,SEQ ww:QRY,LOAD,{NPC uvmnp|TOTAL}!

[I.52601]

UTL:[FRM xy,SEQ ww]:QRY,SIGST abcd

[I.52601]

UTL:[FRM xy,SEQ ww]:QRY,SIGST uvmnpddd

[I.53001]

UTL:FRM xy,SEQ ww:QRY,SYNC,TYPE!

[I.53011]

UTL:FRM xy,SEQ ww:QRY,EQD,UNITS!

[I.53021]

UTL:FRM xy,SEQ ww:QRY,EQD,TSIS!

[I.53022]

UTL:FRM xy,SEQ ww:QRY,EQD,ETIS!

[I.53031]

UTL:FRM xy,SEQ ww:QRY,EQD,CONN!

[I.53041]

UTL:FRM xy,SEQ ww:QRY,EQD,NPCS[, {TOTAL|UNIT [q]q}]!

[I.53051]

UTL:FRM xy,SEQ ww:QRY,OPT[, {TYPE mn|ALL}],NPCS!

[I.53061]

UTL:FRM xy,SEQ ww:QRY,TPS!

[I.53071]

UTL:FRM xy,SEQ ww:QRY,UNIT [q]q,FTMI b[,EQL]!

[I.53081]

UTL:FRM xy,SEQ ww:QRY,TGS mmm[-nnn]!

[I.53091]

UTL:FRM xy,SEQ ww:QRY,NPCTG rrr[-sss]!

[I.53101]
UTL:FRM xy,SEQ ww:QRY,ALL[,UNIT [q]q]!

[I.53103]
UTL:FRM xy,SEQ ww:QRY,{PEST|FAIL|OOS}[,UNIT [q]q]!

[I.53104]
UTL:FRM xy,SEQ ww:QRY,ALL,COMMON!

[I.53105]
UTL:FRM xy,SEQ ww:QRY,{PEST|FAIL|OOS},COMMON!

[I.53108]
UTL:FRM xy,SEQ ww:QRY,EQD[,UNIT [q]q]!

[I.53109]
UTL:FRM xy,SEQ ww:QRY,EQD,COMMON!

[I.53111]
UTL:FRM xy,SEQ ww:QRY,ALMS!

[I.53121]
UTL:FRM xy,SEQ ww:QRY,CS,NPC [s]abc!

[I.53121]
UTL:FRM xy,SEQ ww:QRY,CS,NPC uvmnp!

[I.53131]
UTL:FRM xy,SEQ ww:QRY,LPBK,NPC [s]abc[-[t]def]!

[I.53131]
UTL:FRM xy,SEQ ww:QRY,LPBK,NPC uvmnp[-wxkqr]!

[I.53141]
UTL:FRM xy,SEQ ww:QRY,ALMS,{RT|DL} ffff!

[I.53151]
UTL:FRM xy,SEQ ww:QRY,ALMS,DBASE!

[I.53161]
UTL:FRM xy,SEQ ww:QRY,TSIG,NPC [s]abc[-[t]def]!

[I.53161]
UTL:FRM xy,SEQ ww:QRY,TSIG,NPC uvmnp[-wxkqr]!

[I.53181]
UTL:FRM xy,SEQ ww:QRY,LPBK,UNIT [q]q!

[I.53201]

UTL:FRM xy,SEQ ww:QRY,EQD,MIUS!

[I.53211]

UTL:FRM xy,SEQ ww:QRY,EQD,MXRS!

[I.53221]

UTL:FRM xy,SEQ ww:QRY,DS3,BERMT[,UNIT [q]q]!

[I.53231]

UTL:FRM xy,SEQ ww:QRY,DS3,LB0!

[I.54001]

UTL:FRM xy,SEQ ww:QRY,SCR,{LINK j[mm[-jnn]]|USER <user id>|\LINKS|USERS}!

[I.54011]

UTL:FRM xy,SEQ ww:QRY,LOG[,ALL]!

[I.54101]

UTL:FRM xy,SEQ ww:QRY,LIST,MAP <name>[,USER <user id>]!

[I.54111]

UTL:FRM xy,SEQ ww:QRY,NPC,MAP <name>[,USER <user id>]!

[I.54121]

UTL:FRM xy,SEQ ww:QRY,MACRO <name>[,USER <user id>]!

[I.54131]

UTL:FRM xy,SEQ ww:QRY,LIST,MACRO <macro name>\[,USER <user id>]!

[I.54201]

UTL:FRM xy,SEQ ww:QRY,MAP,ATTR[, {ALL|USER <user id>|MAPNM <name>}]!

[I.54211]

UTL:FRM xy,SEQ ww:QRY,MACRO,ATTR[, {USER <user id>|ALL}]!

[I.54221]

UTL:FRM xy,SEQ ww:QRY,{MACRO|MAP},SPACE[, {USER <user id>|ALL|\SYSTEM}]!

[I.54340]

UTL:FRM xy,SEQ ww:QRY,STATE,ACO!

[I.55011]
UTL:FRM xy,SEQ ww:QRY,ERR,{SWER|HWER},{INT mn|[DATE moda[ce]yr,] TOD hrmsc}}\
[,TN X'dddd][,EVENT X'eeee][,ERCL{HARD|TRANS|APPINT}][,ENTY <entity>]|ALL}!

[I.55111]
UTL:FRM xy,SEQ ww:QRY,ESR,MP!

[I.55113]
UTL:FRM xy,SEQ ww:QRY,STR,LINK j[mm][-jnn]!

[I.55181]
UTL:FRM xy,SEQ ww:QRY,XCSB[,UNIT [q]q]!

[I.55191]
UTL:FRM xy,SEQ ww:QRY,STR,XC a!

[I.55201]
UTL:FRM xy,SEQ ww:QRY,STR,SYNC a!

[I.55311]
UTL:FRM xy,SEQ ww:QRY,STR,SYNC a,TLI m!

[I.55321]
UTL:FRM xy,SEQ ww:QRY,STR,SYNC a,TLI m,SSP b!

[I.55401]
UTL:FRM xy,SEQ ww:QRY,ESR,CCN s!

[I.55411]
UTL:FRM xy,SEQ ww:QRY,ESR,ECCN s!

[I.55501]
UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q!

[I.55511]
UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,FTMI d!

[I.55521]
UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,FC sb!

[I.55531]
UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,DSPI!

[I.55601]
UTL:FRM xy,SEQ ww:QRY,ESR,NPC [s]abc[,SIDE s]!

[I.55601]

UTL:FRM xy,SEQ ww:QRY,ESR,NPC uvmnp[,SIDE s]!

[I.55701]

UTL:FRM xy,SEQ ww:BMTR,FROM <from>,TO <to>[, {EXCT|INCL|UPGRD}]]!

[I.55711]

ABT!

[I.55721]

INSTALL;

[I.55731]

UTL:[FRM xy,SEQ ww]:UPGRD!

[I.55801]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,FLI k!

[I.55811]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,FMT s!

[I.55821]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,MXR c!

[I.55831]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,MIU c!

[I.56001]

**UTL:FRM xy,SEQ ww:CLR,<parameter>,{NPC [s]abc[-[t]def]}|\
RT ffff|DL ffff}!**

[I.56001]

**UTL:FRM xy,SEQ ww:CLR,<parameter>,{NPC uvmnp[-wxkqr]}|\
RT ffff|DL ffff}!**

[I.56011]

UTL:FRM xy,SEQ ww:CLR,<parameter>,ALL!

[I.56021]

UTL:FRM xy,SEQ ww:QRY,ALMOPT,NPC [s]abc[-[v]ghi],AIS!

[I.56021]

UTL:FRM xy,SEQ ww:QRY,ALMOPT,NPC uvmnp[-wxkqr],AIS!

[I.56031]

UTL:FRM xy,SEQ ww:QRY,<parameter>,ALL!

[I.56041]
UTL:FRM xy,SEQ ww:QRY,<parameter>,{NPC [s]abc[-[t]def]|\
RT ffff|DL ffff}!

[I.56041]
UTL:FRM xy,SEQ ww:QRY,<parameter>,{NPC uvmnp[-wxkqr]|\
RT ffff|DL ffff}!

[I.56051]
UTL:FRM xy,SEQ ww:CLR,NPC [s]abc,PARAMS!

[I.56051]
UTL:FRM xy,SEQ ww:CLR,NPC uvmnp,PARAMS!

[I.56052]
UTL:FRM xy,SEQ ww:CLR,PWR pp!

[I.56061]
UTL:FRM xy,SEQ ww:CLR,ERR,{HWER|SWER}!

[I.56071]
UTL:FRM xy,SEQ ww:CLR,{NPC [s]abc[-[t]def]|ALL},<parameter>[,AI aaaaa] \
[,LOCN locn][,MONDAT dddd][,MONTIM tttt]!

[I.56071]
UTL:FRM xy,SEQ ww:CLR,{NPC uvmnp[-wxkqr]|ALL},<parameter>[,AI aaaaa] \
[,LOCN locn][,MONDAT dddd][,MONTIM tttt]!

[I.56091]
UTL:FRM xy,SEQ ww:QRY,{NPC [s]abc[-[t]def]|ALL},<parameter>,AI aaaaa \
[,LV llllllllll][,LOCN locn][,MONDAT dddd][,MONTIM tttt]!

[I.56091]
UTL:FRM xy,SEQ ww:QRY,{NPC uvmnp[-wxkqr]|ALL},<parameter>,AI aaaaa \
[,LV llllllllll][,LOCN locn][,MONDAT dddd][,MONTIM tttt]!

[I.56101]
UTL:FRM xy,SEQ ww:CLR,{UNIT [q]q,DS3 c[-d]|ALLDS3},<parameter>\
,AI aaaaa[,MONDAT dddd][,MONTIM tttt]!

[I.56111]
UTL:FRM xy,SEQ ww:QRY,{UNIT [q]q,DS3 c[-d]|ALLDS3},<parameter>,\
AI aaaaa[,LV llllllllll][,MONDAT dddd][,MONTIM tttt]!

[I.56301]
UTL:FRM xy,SEQ ww:QRY,STATE,SYNC!

[I.56311]

UTL: [FRM xy, SEQ ww]: QRY, STATE, NPC [s]abc[-[t]def]!

[I.56311]

UTL: [FRM xy, SEQ ww]: QRY, STATE, NPC uvmnp[-wxkqr]!

[I.56314]

UTL: FRM xy, SEQ ww: QRY, STATE, NPC [s]abc[-[t]def]!

[I.56314]

UTL: FRM xy, SEQ ww: QRY, STATE, NPC uvmnp[-wxkqr]!

[I.56321]

UTL: FRM xy, SEQ ww: QRY, TS0 s, NPC [s]abc[-[t]def]!

[I.56321]

UTL: FRM xy, SEQ ww: QRY, TS0 s, NPC uvmnp[-wxkqr]!

[I.56323]

UTL: FRM xy, SEQ ww: QRY, TS0M, NPC [s]abc[-[t]def]!

[I.56323]

UTL: FRM xy, SEQ ww: QRY, TS0M, NPC uvmnp[-wxkqr]!

[I.56324]

UTL: FRM xy, SEQ ww: QRY, NFS, NPC [s]abc[-[t]def]!

[I.56324]

UTL: FRM xy, SEQ ww: QRY, NFS, NPC uvmnp[-wxkqr]!

[I.56331]

UTL: FRM xy, SEQ ww: QRY, ALM, DS3!

[I.56361]

UTL: FRM xy, SEQ ww: QRY, STATE, UNIT [q]q, DS3 c[-d]!

[O.56381]

M hh:mm:ss xy, ww n[vv] UTL QRY DS3ALM 2 LN MSG:
[x]x {ON|OFF} COMPL

[I.56401]

UTL: FRM xy, SEQ ww: LOC, <entity>!

[I.56501]

UTL: FRM xy, SEQ ww: QRY, SR00F, {TO [s]abcddd[-eee]|ALL}!

[I.56501]

UTL:FRM xy,SEQ ww:QRY,SR00F,{TO uvmnpddd[-eee]|ALL}!

[I.56511]

UTL:FRM xy,SEQ ww:QRY,PSTATE,UNIT [q]q!

[I.57001]

UTL:FRM xy,SEQ ww:QRY,MSGLOG,RANGE!

[I.57031]

UTL:FRM xy,SEQ ww:CLR,MSGLOG[,RSTNUM]!

[I.58001]

UTL:FRM xy,SEQ ww:BOOT,FRAME[,CLR]!

[I.81001]

AUD:FRM xy,SEQ ww:QRY,{CFA|CGA|LOS}!

[I.81001]

AUD:[FRM xy,SEQ ww]:QRY,{CFA|CGA|LOS}!

[I.81001]

AUD:[FRM xy,SEQ ww]:QRY,{CFA|CGA|LOS}!

List of Autonomous Messages

5

Contents

Alarms Messages	5-2
Audits Messages	5-4
Error Recovery Messages	5-10
Event Reporting Messages	5-16
Input Denials Messages	5-17
Scheduled Pm Reporting Messages	5-18
Startup Messages	5-20

List of Autonomous Messages

Autonomous Messages

This section provides a summary of the autonomous messages that can appear on the DACS II Release 8.2.3 output printer. The following are the categories of autonomous messages:

- Alarms Messages
- Audits Messages
- Error Recovery Messages
- Event Reporting Messages
- Input Denial Messages
- Scheduled PM Reporting Messages
- Startup Messages

Alarms Messages

[O.65011]

pahh:mm:ss xy,ww AR01 MISC ALM <state> {CGA|LOS} [s]abc \
[k] COMPL

[O.65011]

pahh:mm:ss xy,ww AR01 MISC ALM <state> {CGA|LOS} uvmnp \
[k] COMPL

[O.65021]

I hh:mm:ss xy,ww AR01 MISC ALM IDLD {CGA|LOS} [s]abc [k] COMPL

[O.65021]

I hh:mm:ss xy,ww AR01 MISC ALM IDLD {CGA|LOS} uvmnp [k] COMPL

[O.65031]

pahh:mm:ss xy,ww ALM {MJ|MN|INFO} <parameter> NPC [s]abc COMPL

[O.65031]

pahh:mm:ss xy,ww ALM {MJ|MN|INFO} <parameter> NPC uvmnp COMPL

[O.65041]

I hh:mm:ss xy,ww ALM IDLD <parameter> NPC [s]abc COMPL

[O.65041]

I hh:mm:ss xy,ww ALM IDLD <parameter> NPC uvmnp COMPL

[O.65051]

* hh:mm:ss xy,ww ALM RESET {DATE|TOD|TOD DATE} hr:mn:sc \
{mo/da/yr FORMAT MDY|da/mo/yr FORMAT DMY} COMPL

[O.65053]

**hh:mm:ss xy,ww BOOT FAILED - BAD BOOT DEVICE

[O.65054]

**hh:mm:ss xy,ww ALM {MJ,IDLD} CCN s OOS COMPL

[O.65055]

pahh:mm:ss xy,ww ALM {MJ,IDLD} ECCN s OOS COMPL

[O.65056]

pahh:mm:ss xy,ww ALM {MN,IDLD} SMEM COMPL

[O.65071]

I hh:mm:ss xy,ww ACO ACTIVE COMPL

[O.65131]
pahh:mm:ss xy,ww SC ALM <state>[{CGA|DLF|INH|MRV|MSW|PSW}] {RT|DL} \
ffff {DGA|DGB|DGC|DGD|DGP} [s]abc[k] <location> COMPL

[O.65131]
pahh:mm:ss xy,ww SC ALM <state>[{CGA|DLF|INH|MRV|MSW|PSW}] {RT|DL} \
ffff {DGA|DGB|DGC|DGD|DGP} uvmnp[k] <location> COMPL

[O.65141]
pahh:mm:ss xy,ww SC ALM[<alarm type>] <state> {RT|DL} \
ffff[FE] COMPL

[O.65151]
I hh:mm:ss xy,ww SC ALM <state> DPLX {SYNC a|CCB sf|CCNI s|\
CCI s|TSI sft|ETSI sqq|FC sb UNIT [q]q|FMT s UNIT [q]q|\
NPC [s]abc SIDE s} NE COMPL

[O.65151]
I hh:mm:ss xy,ww SC ALM <state> DPLX {SYNC a|CCB sf|CCNI s|\
CCI s|TSI sft|ETSI sqq|FC sb UNIT [q]q|FMT s UNIT [q]q|\
NPC uvmnp SIDE s} NE COMPL

[O.65161]
I hh:mm:ss xy,ww SC ALM <state> {MC|UC [q]q|FTMI [q]qb|\
DSPI [q]q} NE COMPL

[O.65171]
I hh:mm:ss xy,ww SC ALM COMP <state> RT ffff[INDX][LBRV]\
[AB][CD][P][ALP] COMPL

[O.66001]
pahh:mm:ss xy,ww ALM UNIT [q]q DS3 c <state> COMPL

[O.66011]
I hh:mm:ss xy,ww ALM IDLD UNIT [q]q DS3 c <state> COMPL

Audits Messages

[O.81001]

I hh:mm:ss xy,ww AUD AR02 ALARM SUM nnnn REPORTS FOLLOW:

I hh:mm:ss xy,ww SC ALM <state> CGA [s]abc k COMPL

.
.
.

I hh:mm:ss xy,ww SC ALM <state> CGA [s]abc k COMPL

I hh:mm:ss xy,ww AR01 MISC ALM <state> {CGA|CFA|LOS} [s]abc \
[k] COMPL

.
.
.

I hh:mm:ss xy,ww AR01 MISC ALM <state> {CGA|CFA|LOS} [s]abc \
[k] COMPL

I hh:mm:ss xy,ww AUD {CGA|CFA|LOS} END COMPL

I hh:mm:ss xy,ww AUD PARAMS COMPL

[O.81001]

I hh:mm:ss xy,ww AUD AR02 ALARM SUM nnnn REPORTS FOLLOW:

I hh:mm:ss xy,ww SC ALM <state> CGA uvmnp k COMPL

.
.
.

I hh:mm:ss xy,ww SC ALM <state> CGA uvmnp k COMPL

I hh:mm:ss xy,ww AR01 MISC ALM <state> {CGA|CFA|LOS} uvmnp \
[k] COMPL

.
.
.

I hh:mm:ss xy,ww AR01 MISC ALM <state> {CGA|CFA|LOS} uvmnp \
[k] COMPL

I hh:mm:ss xy,ww AUD {CGA|CFA|LOS} END COMPL

I hh:mm:ss xy,ww AUD PARAMS COMPL

[O.81002]

I hh:mm:ss xy,ww AUD QRY <parameter> ALL FTU NPCS \

[s]abc-[t]def TOT nnn 5 LN MSG:

XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX EOM

.
.
.

I hh:mm:ss xy,ww AUD QRY <parameter> ALL DS3U NPCS \

[s]abc-[t]def TOT nnn 5 LN MSG:

XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX EOM

.
.
.

I hh:mm:ss xy,ww AUD QRY <parameter> ALL HDS3U NPCS \

[s]abc-[t]def TOT nnn 8 LN MSG:

XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX
XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX
XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX
XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX
XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX
XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX
XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX XXXXXXXXXXXX COMPL

[O.81002]

I hh:mm:ss xy,ww AUD QRY <parameter> ALL FTU NPCS \

uvmnp-uvmqr TOT nnn 5 LN MSG:

XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX EOM

.
.
.

I hh:mm:ss xy,ww AUD QRY <parameter> ALL DS3U NPCS \
uvmnp-uvmqr TOT nnn 5 LN MSG:

xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx EOM

.
.
.

I hh:mm:ss xy,ww AUD QRY <parameter> ALL HDS3U NPCS \
uvmnp-uvmqr TOT nnn 8 LN MSG:

xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx COMPL

[O.81003]

I hh:mm:ss xy,ww AUD QRY BER ALL FTU NPCS [s]abc-[t]def \
TOT nnn 5 LN MSG:

xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx EOM

.
.
.

I hh:mm:ss xy,ww AUD QRY BER ALL FTU NPCS [s]abc-[t]def \
TOT nnn 5 LN MSG:

xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx COMPL

[O.81003]

I hh:mm:ss xy,ww AUD QRY BER ALL DS3U NPCS [s]abc-[t]def \

TOT nnn 5 LN MSG:

XX XX XX XX XX XX XX

XX XX XX XX XX XX XX

XX XX XX XX XX XX XX

XX XX XX XX XX XX XX EOM

.

.

.

I hh:mm:ss xy,ww AUD QRY BER ALL DS3U NPCS [s]abc-[t]def \

TOT nnn 5 LN MSG:

XX XX XX XX XX XX XX

XX XX XX XX XX XX XX

XX XX XX XX XX XX XX

XX XX XX XX XX XX XX COMPL

[O.81003]

I hh:mm:ss xy,ww AUD QRY BER ALL HDS3U NPCS [s]abc-[t]def \

TOT nnn 8 LN MSG:

XX XX XX XX

XX XX XX XX

XX XX XX XX

XX XX XX XX

XX XX XX XX

XX XX XX XX

XX XX XX XX EOM

.

.

.

I hh:mm:ss xy,ww AUD QRY BER ALL HDS3U NPCS [s]abc-[t]def \

TOT nnn 8 LN MSG:

XX XX XX XX

XX XX XX XX

XX XX XX XX

XX XX XX XX

XX XX XX XX

XX XX XX XX

XX XX XX XX COMPL

[O.81003]

I hh:mm:ss xy,ww AUD QRY BER ALL FTU NPCS uvmnp-uvmqr \

TOT nnn 5 LN MSG:

XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX EOM

.
.
.

I hh:mm:ss xy,ww AUD QRY BER ALL FTU NPCS uvmnp-uvmqr \

TOT nnn 5 LN MSG:

XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX COMPL

[O.81003]

I hh:mm:ss xy,ww AUD QRY BER ALL DS3U NPCS uvmnp-uvmqr \

TOT nnn 5 LN MSG:

XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX EOM

.
.
.

I hh:mm:ss xy,ww AUD QRY BER ALL DS3U NPCS uvmnp-uvmqr \

TOT nnn 5 LN MSG:

XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX COMPL

[O.81003]

I hh:mm:ss xy,ww AUD QRY BER ALL DS3U NPCS uvmnp-uvmqr \
TOT nnn 8 LN MSG:
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX EOM

.
.
.

I hh:mm:ss xy,ww AUD QRY BER ALL DS3U NPCS uvmnp-uvmqr \
TOT nnn 8 LN MSG:
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX COMPL

[O.81004]

I hh:mm:ss xy,ww AUD QRY <parameter> ALL NPCS TOT 000 \
COMPL

[O.81005]

I hh:mm:ss xy,ww AUD QRY BER ALL NPCS TOT 0000 COMPL

[O.81006]

I hh:mm:ss xy,ww AUD PARAMS COMPL

[O.82001]

I hh:mm:ss xy,ww FRADTS DGN <ttt> <eee>[DEV <devc>] d0 COMPL

[O.82002]

I hh:mm:ss xy,ww FRADTS FRCMP ttt[d9 d8 d7 d6] \
d5 d4 d3 d2 d1 d0 COMPL

[O.82003]

I hh:mm:ss xy,ww FRADTS BMCMP <ttt> d8 d7 d6 d5 d4 d3 d2 d1 COMPL

[O.82004]

I hh:mm:ss xy,ww FRADTS MC DGN <tt> COMPL

Error Recovery Messages

[O.01301]

pa <il> hh:mm:ss xy,ww ERR PWR {PMC|PMA|DMA|MI} \
aaaa bbbb cccc dddd TN dddd COMPL

[O.01311]

I hh:mm:ss xy,ww ERR[ESR] MC[MP] TN dddd EVENT eeee \
2 LN MSG:
abab bbbb cccc dddd eeee ffff COND cc COMPL

[O.01311]

I hh:mm:ss xy,ww ERR[ESR] MC[CI] TN dddd EVENT eeee \
2 LN MSG:
COND cc COMPL

[O.01311]

I hh:mm:ss xy,ww ERR[ESR] MC[{BX|EBX}] TN dddd EVENT eeee \
2 LN MSG:
abab bbbb cccc dddd eeee ffff COND cc COMPL

[O.01311]

I hh:mm:ss xy,ww ERR[ESR] MC[{MTC|EMTC}] TN dddd \
EVENT eeee 2 LN MSG:
abab bbbb cccc dddd eeee ffff gggg hhhh iiii jjjj COND cc \
COMPL

[O.01312]

I hh:mm:ss xy,ww ERR [ESR] MC [, {MP|CI}] TN dddd COMPL

[O.01321]

I hh:mm:ss xy,ww ERR LINK a TN dddd STATUS a0 a1 a2 COMPL

[O.01331]

I hh:mm:ss xy,ww ERR [ESR] SYNC a \
TN dddd EVENT eeee 2 LN MSG:
<byte1> <byte2> <byte3> <byte4> <byte5> COND cccc COMPL

[O.01333]

pa <il> hh:mm:ss xy,ww ERR SYNC a TLI m SSP b TN dddd 3 LN MSG:
ALM[LOS][LEN][EXJ][PHS][OOF][MAJ][MIN] {PMC|PMA|DMA|MI} SET
<byte 1> <byte 2> <byte 3> <byte 4> <byte 5> COND cccc COMPL

[O.01333]

pa <il> hh:mm:ss xy,ww ERR SYNC a TLI m SSP b TN dddd 3 LN MSG:
ALM[LOS][LEN][EXJ][PHS][OOF][MAJ][MIN] {PMC|PMA|DMA|MI} SET
<byte 1> <byte 2> <byte 3> <byte 4> <byte 5> COND cccc COMPL

[O.01335]
I hh:mm:ss xy,ww ERR SYNC a TLI m SSP b [NPC abc] \
TN dddd 3 LN MSG:
ALM[LOS][LEN][EXJ][PHS][OOF][MAJ][MIN] CLR
<byte 1> <byte 2> <byte 3> <byte 4> <byte 5> COND cccc COMPL

[O.01335]
I hh:mm:ss xy,ww ERR SYNC a TLI m SSP b [NPC uvmp] \
TN dddd 3 LN MSG:
ALM[LOS][LEN][EXJ][PHS][OOF][MAJ][MIN] CLR
<byte 1> <byte 2> <byte 3> <byte 4> <byte 5> COND cccc COMPL

[O.01337]
I hh:mm:ss xy,ww ERR MSGS TO LOG DISCARDED COMPL

[O.01341]
I hh:mm:ss xy,ww ERR[ESR] SYNC a TLI m SSP b TN dddd \
EVENT eeee 2 LN MSG:
<synchronizer status data bytes>[COND cccc] COMPL

[O.01341]
I hh:mm:ss xy,ww ERR[ESR] SYNC a TLI m SSP b TN dddd \
EVENT eeee 2 LN MSG:
<synchronizer status data bytes>[COND cccc] COMPL

[O.01342]
I hh:mm:ss xy,ww ERR [ESR] SYNC a TLI m \
TN dddd EVENT eeee 2 LN MSG:
<synchronizer status data bytes> COND cccc COMPL

[O.01351]
I hh:mm:ss xy,ww ERR [ESR] CCB sf TN dddd EVENT eeee \
2 LN MSG:
<error analysis data bytes> COND cc COMPL

[O.01352]
I hh:mm:ss xy,ww ERR [ESR] CCNI s \
TN dddd EVENT eeee 2 LN MSG:
<reg0> <reg1> <reg2> <reg3> <reg4> \
<emr0> <emr1> <emr2> <emr3> <emr4> COND cc COMPL

[O.01353]
I hh:mm:ss xy,ww ERR [ESR] TSI sft \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

[O.01354]

I hh:mm:ss xy,ww ERR[ESR] CCI s
TN dddd EVENT eeee 2 LN MSG:
wd01 wd02 wd03 wd04 wd05 wd06 wd07 wd08 wd09 wd10 wd11 \
wd12 COND cc COMPL

[O.01355]

I hh:mm:ss xy,ww ERR[ESR] ETSI sqq \
TN dddd EVENT eeee 2 LN MSG:
wd01 wd02 wd03 wd04 wd05 wd06 wd07 wd08 wd09 wd10 wd11 \
wd12 COND cc COMPL

[O.01361]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q {UC|UBX} \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

[O.01362]

I hh:mm:ss xy,ww ERR {SOFTWARE|MC} <error type> ERROR 4 LN MSG:
MID=<mid> TN=dddd RC=<rc> ACTION=<action> ENTITY=<entity>
SOURCE=<source> DP=<dp> PROC=<proc>
TSARGS=<tsargs> COMPL

[O.01363]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q FTMI b TN dddd \
EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

[O.01364]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q FC sb \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

[O.01366]

I hh:mm:ss xy,ww ERR SYNC a MODE {FAST|HOLDOVER|NORMAL}\
{MATE|CRO|TLI m SSP c} TN dddd 2 LN MSG:
<synchronizer status data bytes> COND cccc COMPL

[O.01371]

I hh:mm:ss xy,ww ERR[ESR] NPC [s]abc-[[t]def] SIDE s \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data bytes>[COND cc] COMPL

[O.01371]

I hh:mm:ss xy,ww ERR[ESR] NPC uvmnp[-uvmqr] SIDE s \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data bytes>[COND cc] COMPL

[O.01372]

I hh:mm:ss xy,ww ERR[ESR] NPC [s]abc-[t]def TN dddd \
EVENT eeee 2 LN MSG:
<error analysis data bytes>[COND cc] COMPL

[O.01372]

I hh:mm:ss xy,ww ERR[ESR] NPC uvmnp-wxkqr TN dddd \
2 LN MSG:
EVENT eeee <error analysis data bytes>[COND cc] COMPL

[O.01381]

pahh:mm:ss xy,ww OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd \
PROCESSOR DATA 5 LN MSG:
<d01> <d02> <d03> <d04> <d05> < d06 > < d07 > < d08 >
<d09> <d10> <d11> <d12> <d13> < d14 > < d15 > < d16 >
<d17> <d18> <d19> <d20> <d21> < d22 > < d23 > < d24 >
<d25> <d26> <d27> <d28> <d29> <d3031> < d3233> < d34353637> \
EOM

pahh:mm:ss xy,ww OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd \
PROGRAM TEXT 5 LN MSG:
<d01> <d02> <d03> <d04> <d05> <d06> <d07> <d08>
<d09> <d10> <d11> <d12> <d13> <d14> <d15> <d16>
<d17> <d18> <d19> <d20> <d21> <d22> <d23> <d24>
<d25> <d26> <d27> <d28> <d29> <d30> <d31> <d32> EOM

pahh:mm:ss xy,ww OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd \
MEMORY DATA 5 LN MSG:
<d01> <d02> <d03> <d04> <d05> <d06> <d07> <d08>
<d09> <d10> <d11> <d12> <d13> <d14> <d15> <d16>
<d17> <d18> <d19> <d20> <d21> <d22> <d23> <d24>
<d25> <d26> <d27> <d28> <d29> <d30> <d31> <d32> EOM

pahh:mm:ss xy,ww OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd READY \
QUEUE DATA 3 LN MSG:
<d01> <d02> <d03> <d04> <d05> <d06> <d07> <d08>
<d09> <d10> <d11> <d12> <d13> <d14> <d15> <d16> EOM

pahh:mm:ss xy,ww OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd PAUSE \
QUEUE DATA 3 LN MSG:
<d01> <d02> <d03> <d04> <d05> <d06> <d07> <d08>
<d09> <d10> <d11> <d12> <d13> <d14> <d15> <d16> EOM

pahh:mm:ss xy,ww OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd \
LOCAL STACK DATA 5 LN MSG:
<d01> <d02> <d03> <d04> <d05> <d06> <d07> <d08>
<d09> <d10> <d11> <d12> <d13> <d14> <d15> <d16>
<d17> <d18> <d19> <d20> <d21> <d22> <d23> <d24>
<d25> <d26> <d27> <d28> <d29> <d30> <d31> <d32> EOM

pahh:mm:ss xy,ww OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd STACK \
TRACE 5 LN MSG:
<d01> <d02> <d03> <d04> <d05> <d06> <d07> <d08>
<d09> <d10> <d11> <d12> <d13> <d14> <d15> <d16>
<d17> <d18> <d19> <d20> <d21> <d22> <d23> <d24>
<d25> <d26> <d27> <d28> <d29> <d30> <d31> <d32> COMPL

[O.01391]

I hh:mm:ss xy,ww ERR ESR ANALYSIS REPORT EVENT eeee 4 LN MSG:
<action> <circuit identifier>
<action> <circuit identifier>
<action> <circuit identifier> COMPL

[O.01392]

I hh:mm:ss xy,ww ERR HARDWARE <entity> 4 LN MSG:
TN=dddd COND=cc EVENT=xxxx ACTION=<action>
SOURCE=<source> DP=<dp> PROC=<proc> <load>
TSARGS=cn [<tsargs>] COMPL

[O.01393]

I hh:mm:ss xy,ww RESET {DATE|TOD|TOD DATE} hr:mn:sc \
{mo/da/yr FORMAT MDY|da/mo/yr FORMAT DMY} COMPL

[O.01401]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q FLI k TN dddd \
EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

[O.01402]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q FMT s TN dddd \
EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

[O.01403]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q MXR c[DEV <devc>] \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

[O.01404]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q MIU c TN dddd \
EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

[O.01405]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q HFMT s TN dddd \
EVENT eeee 3 LN MSG:
<error analysis data - line 1>
<error analysis data - line 2> COND cc COMPL

[O.01406]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q HMXR c[DEV <devc>] \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

Event Reporting Messages

[O.65061]

I hh:mm:ss xy,ww RPT T-<parameter> NPC [s]abc 2 LN MSG:
LOCN locn AI aaaaa COUNT cccccccc THLEV lllllllll COMPL

[O.65061]

pa <il> hh:mm:ss xy,ww ALM <state> <parameter> NPC [s]abc 2 LN MSG:
AI aaaaa COUNT cccccccc THLEV lllllllll COMPL

[O.65061]

I hh:mm:ss xy,ww RPT T-<parameter> NPC uvmnp 2 LN MSG:
LOCN locn AI aaaaa COUNT cccccccc THLEV lllllllll COMPL

[O.65061]

pa <il> hh:mm:ss xy,ww ALM <state> <parameter> NPC uvmnp 2 LN MSG:
AI aaaaa COUNT cccccccc THLEV lllllllll COMPL

Input Denials Messages

[O.01101]

M hh:mm:ss xy,ww n[vv] {BADVERB|FRMERR|SEQERR} BAD SYNTAX \\
e LN MSG:
First 70 characters of input message.
Remaining text of input message STOPPED

[O.01111]

M hh:mm:ss xy,ww n[vv] CMD MC {OOS|MCOND|INSERVICE|MPDBASE} \\
e LN MSG:
<First 70 characters of input message.>
<Remaining text of input message> STOPPED

[O.01121]

A hh:mm:ss xy,ww ERR CMD ABT [TN abcd] e LN MSG:
First 70 characters of input message.
Remaining text of input message STOPPED

[O.01131.01]

M hh:mm:ss xy,ww n[vv] [<BADVERB|FRMERR|SEQERR|CMD>|<actverb>] \\
[<INERR>] <reason> e LN MSG:
<First 70 characters of input message.>
[<Text continued from input message>]
<Remaining text of input message> {STOPPED|DNY}

Scheduled Pm Reporting Messages

[O.61011]

```
I hh:mm:ss xy,ww REPT PM e LN MSG:
  NPC   PARAM   COUNT   VLDTY  LOCN  AI   MONDAT  MONTIM
[s]abc  pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
[v]ghi  pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm  EOM
```

```
I hh:mm:ss xy,ww REPT PM e LN MSG:
  NPC   PARAM   COUNT   VLDTY  LOCN  AI   MONDAT  MONTIM
[u]jkl  pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
.       pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm
[t]def  pppp  ccccccccc  v   locn  aaaaa  mmdd    hhmm  COMPL
```

[O.61011]

I hh:mm:ss xy,ww REPT PM e LN MSG:

NPC	PARAM	COUNT	VLDTY	LOCN	AI	MONDAT	MONTIM
uvmnp	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
edhfg	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm EOM

I hh:mm:ss xy,ww REPT PM e LN MSG:

NPC	PARAM	COUNT	VLDTY	LOCN	AI	MONDAT	MONTIM
opjst	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
wxkqr	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm COMPL

Startup Messages

[O.01201]

****{CI|ECI} RESET**

[O.01211]

{CI|ECI} STARTUP {STF|ATP}

[O.01221]

MP STARTUP {STF|ATP}

[O.01241]

BOOT FROM {PMEM|SMEM}

[O.01242]

**BOOT FROM PMEM FAILED
ATTEMPTING TO BOOT FROM SMEM**

[O.01251]

RESET STOPPED

[O.01261]

**I hh:mm:ss xy,ww n[vv] MC RESET RELEASE DACSIgg.pp ISSUE r **
2 LN MSG:
FPKG kkttuuvv [COND cc] COMPL

[O.01271]

BX2 {STF|ATP}

[O.01272]

EBX STARTUP {STF|ATP}

[O.01281]

MTC {STF|ATP}

[O.01282]

EMTC STARTUP {STF|ATP}

Contents

ABT	6-2
■ Explanation Of Command	6-2
■ Command	6-3
■ Completion Message	6-4
■ Denial Message	6-4
■ Autonomous Message	6-4
■ Explanation Of Parameters	6-4
ACO,ACTIVE	6-5
■ Explanation Of Command	6-5
■ Command	6-5
■ Completion Message	6-5
■ Denial Message	6-5
■ Autonomous Message	6-5
■ Explanation Of Parameters	6-6
ACON,OLD,NEW,INCL	6-7
■ Explanation Of Command	6-7
■ Command	6-7
■ Nonhierarchical	6-7
■ Hierarchical	6-7
■ Completion Message	6-8
■ Nonhierarchical	6-8
■ Hierarchical	6-8
■ Denial Message	6-8
■ Nonhierarchical	6-8
■ Hierarchical	6-8
■ Autonomous Message	6-8

Contents

■ Explanation Of Parameters	6-9
ACT,MAP,CLR,INCL	6-13
■ Explanation Of Command	6-13
■ Command	6-13
■ Completion Message	6-13
■ Nonhierarchical	6-13
■ Hierarchical	6-14
■ Denial Message	6-14
■ Nonhierarchical	6-14
■ Hierarchical	6-14
■ Common	6-14
■ Autonomous Message	6-14
■ Explanation Of Parameters	6-15
ADD,LINK,APPL,ASCS,ASCD,PM,L2AD,POLL	6-22
■ Explanation Of Command	6-22
■ Command	6-22
■ Completion Message	6-22
■ Denial Message	6-22
■ Autonomous Message	6-22
■ Explanation Of Parameters	6-23
ADD,LINK,K,T1,T3,N2,A,B	6-24
■ Explanation Of Command	6-24
■ Command	6-24
■ Completion Message	6-24
■ Denial Message	6-24
■ Autonomous Message	6-24
■ Explanation Of Parameters	6-25
ADD,LINK,PTCOL,S,X,T,M,BAUD,ALM,BS,ENQ	6-26
■ Explanation Of Command	6-26
■ Command	6-26
■ Completion Message	6-27
■ Denial Message	6-27
■ Autonomous Message	6-28
■ Explanation Of Parameters	6-28
ADD,LINK,W,P,T20,T22,T23,T25,T26,R20	6-31
■ Explanation Of Command	6-31
■ Command	6-31

Contents

■ Completion Message	6-32
■ Denial Message	6-32
■ Autonomous Message	6-32
■ Explanation Of Parameters	6-33
ADD,NPC	6-38
■ Explanation Of Command	6-38
■ Command	6-38
■ Nonhierarchical	6-38
■ Hierarchical	6-38
■ Completion Message	6-38
■ Denial Message	6-38
■ Autonomous Message	6-39
■ Explanation Of Parameters	6-39
ADD,RT,DL,MD,DGA,DGB,DGC,DGD,DGP,NDL	6-44
■ Explanation Of Command	6-44
■ Command	6-45
■ Nonhierarchical	6-45
■ Hierarchical	6-45
■ Completion Message	6-45
■ Nonhierarchical	6-45
■ Hierarchical	6-46
■ Denial Message	6-46
■ Nonhierarchical	6-46
■ Hierarchical	6-46
■ Autonomous Message	6-46
■ Explanation Of Parameters	6-46
ADD,USER,LINK,INCL,ALL,LANG,M,P,F	6-51
■ Explanation Of Command	6-51
■ Command	6-51
■ Completion Message	6-52
■ Denial Message	6-52
■ Autonomous Message	6-52
■ Explanation Of Parameters	6-52
ADD,USER,NEW,PASSWD	6-59
■ Explanation Of Command	6-59
■ Command	6-59
■ Completion Message	6-60

Contents

■ Denial Message	6-60
■ Autonomous Message	6-60
■ Explanation Of Parameters	6-60
ALM,IDLD,AI,NPC	6-62
■ Explanation Of Command	6-62
■ Command	6-62
■ Completion Message	6-62
■ Denial Message	6-62
■ Autonomous Message	6-62
■ Nonhierarchical	6-62
■ Hierarchical	6-62
■ Explanation Of Parameters	6-63
ALM,IDLD,NPC	6-66
■ Explanation Of Command	6-66
■ Command	6-66
■ Completion Message	6-66
■ Denial Message	6-66
■ Autonomous Message	6-66
■ Nonhierarchical	6-66
■ Hierarchical	6-67
■ Explanation Of Parameters	6-67
ALM,IDLD,UNIT,DS3	6-70
■ Explanation Of Command	6-70
■ Command	6-70
■ Completion Message	6-70
■ Denial Message	6-70
■ Autonomous Message	6-70
■ Explanation Of Parameters	6-71
ALM,MJ,MN,INFO,NPC	6-72
■ Explanation Of Command	6-72
■ Command	6-72
■ Completion Message	6-72
■ Denial Message	6-72
■ Autonomous Message	6-72
■ Nonhierarchical	6-72
■ Hierarchical	6-73
■ Explanation Of Parameters	6-73

Contents

ALM,MN,IDLD,DS3UNPROTALM,DS3U	6-77
■ Explanation Of Command	6-77
■ Command	6-77
■ Completion Message	6-77
■ Denial Message	6-77
■ Autonomous Message	6-77
■ Explanation Of Parameters	6-78
ALM,PMC,PMA,DMA,MI,CCN,OOS	6-79
■ Explanation Of Command	6-79
■ Command	6-79
■ Completion Message	6-79
■ Denial Message	6-79
■ Autonomous Message	6-79
■ Explanation Of Parameters	6-80
ALM,PMC,PMA,DMA,MI,ECCN,OOS	6-81
■ Explanation Of Command	6-81
■ Command	6-81
■ Completion Message	6-81
■ Denial Message	6-81
■ Autonomous Message	6-81
■ Explanation Of Parameters	6-82
ALM,PMC,PMA,DMA,MI,SMEM	6-83
■ Explanation Of Command	6-83
■ Command	6-83
■ Completion Message	6-83
■ Denial Message	6-83
■ Autonomous Message	6-83
■ Explanation Of Parameters	6-84
ALM,RESET,DATE,TOD,FORMAT,MDY,DMY,PMC	6-85
■ Explanation Of Command	6-85
■ Command	6-85
■ Completion Message	6-85
■ Denial Message	6-85
■ Autonomous Message	6-85
■ Explanation Of Parameters	6-86
ALM,UNIT,DS3	6-87

Contents

■ Explanation Of Command	6-87
■ Command	6-87
■ Completion Message	6-87
■ Denial Message	6-87
■ Autonomous Message	6-88
■ Explanation Of Parameters	6-88
ALW,PMREPT,NPC,ALL	6-89
■ Explanation Of Command	6-89
■ Command	6-89
■ Nonhierarchical	6-89
■ Hierarchical	6-90
■ Completion Message	6-90
■ Nonhierarchical	6-90
■ Hierarchical	6-90
■ Denial Message	6-90
■ Nonhierarchical	6-90
■ Hierarchical	6-90
■ Autonomous Message	6-90
■ Explanation Of Parameters	6-91
ALWSW,UNIT,MMFG,TOPRTN,TOSRVC	6-94
■ Explanation Of Command	6-94
■ Command	6-94
■ Completion Message	6-94
■ Denial Message	6-95
■ Autonomous Message	6-95
■ Explanation Of Parameters	6-95
APPEND,END	6-96
■ Explanation Of Command	6-96
■ Command	6-96
■ Completion Message	6-96
■ Denial Message	6-96
■ Autonomous Message	6-96
■ Explanation Of Parameters	6-97
APPL,RESET,IN,PROGRESS	6-98
■ Explanation Of Command	6-98
■ Command	6-98
■ Completion Message	6-98

Contents

■ Denial Message	6-98
■ Autonomous Message	6-98
■ Explanation Of Parameters	6-99
AR01,MISC,ALM,CGA,LOS	6-100
■ Explanation Of Command	6-100
■ Command	6-100
■ Completion Message	6-100
■ Denial Message	6-100
■ Autonomous Message	6-100
■ Nonhierarchical	6-100
■ Hierarchical	6-101
■ Explanation Of Parameters	6-101
AR01,MISC,ALM,IDLD,CGA,LOS	6-107
■ Explanation Of Command	6-107
■ Command	6-107
■ Completion Message	6-107
■ Denial Message	6-107
■ Autonomous Message	6-107
■ Nonhierarchical	6-107
■ Hierarchical	6-108
■ Explanation Of Parameters	6-108
AUD,PARAMS	6-114
■ Explanation Of Command	6-114
■ Command	6-114
■ Completion Message	6-114
■ Denial Message	6-114
■ Autonomous Message	6-114
■ Explanation Of Parameters	6-115
AUD,QRV,BER,ALL,FTU,NPCS,TOT,EOM,DS3U	6-116
■ Explanation Of Command	6-116
■ Command	6-116
■ Completion Message	6-117
■ Nonhierarchical	6-117
■ Hierarchical	6-119
■ Denial Message	6-120
■ Autonomous Message	6-121
■ Nonhierarchical	6-121

Contents

■ Hierarchical	6-123
■ Explanation Of Parameters	6-124
AUD, QRY, BER, ALL, NPCS, TOT	6-130
■ Explanation Of Command	6-130
■ Command	6-130
■ Completion Message	6-130
■ Denial Message	6-130
■ Autonomous Message	6-130
■ Explanation Of Parameters	6-131
AUD, QRY, CFA, CGA, LOS	6-132
■ Explanation Of Command	6-132
■ Command	6-132
■ Completion Message	6-133
■ Nonhierarchical	6-133
■ Hierarchical	6-135
■ Denial Message	6-136
■ Autonomous Message	6-137
■ Nonhierarchical	6-137
■ Hierarchical	6-138
■ Explanation Of Parameters	6-138
AUD, QRY, CFA, CGA, LOS	6-146
■ Explanation Of Command	6-146
■ Command	6-147
■ Completion Message	6-147
■ Nonhierarchical	6-147
■ Hierarchical	6-148
■ Denial Message	6-148
■ Autonomous Message	6-149
■ Nonhierarchical	6-149
■ Hierarchical	6-150
■ Explanation Of Parameters	6-151
AUD, QRY, CFA, CGA, LOS	6-158
■ Explanation Of Command	6-158
■ Command	6-158
■ Completion Message	6-158
■ Denial Message	6-158
■ Autonomous Message	6-159



Contents

■ Explanation Of Parameters	6-159

ABT — AUD

ABT — AUD

This section documents the commands **ABT** through **AUD**.

ABT

ABORT

Explanation Of Command

The abort command enables a user to stop a currently executing abortable task previously initiated by the same user from continuing execution. This command is helpful to use when a task is producing large amounts of output that the user does not wish to view, or to stop a task that is operating over a range of entities.

If no users are logged in, a command entered on one link CANNOT be aborted from another link. If the same user is logged in on two different links, commands entered from one link CAN be aborted from another link. Only USER DAX can abort commands entered on any link issued by any user.

When an abortable task is operating over a range of entities, DACS II will complete the task on the current entity, and then stop the task for the remaining entities in the specified range. Since the abort command will also delete all messages queued for output for the link or virtual circuit on which the ABT command was entered, the user should use appropriate query commands to determine which entities in the range have been operated upon before the task was stopped.

In the case where a task has already executed, or no task is executing when the abort command is entered, the abort command will not take effect. Any remaining output will not be generated, and DACS II will not generate a completion message or an ABT completion message.

The following commands may be aborted:

31341 GRTH::NPC
31352 GRTH::NPC
31362 GRTH::NPC
31363 GRTH::NPC
31371 GRTH::NPC
32341 DGR::NPC
33351 RMV::NPC
34351 RST::NPC
38271 CHG::NPC,TYPE (abortable only for DS3 NPCs.)
38281 CHG::NPC,TYPE,ALMOPT,AIS

38321 CHG::NPC, TS0
38323 CHG::NPC, TS0M
38324 CHG::NPC, NFS
38341 CHG::NPC, LPBK
51151 UTL::QRY, PMSCHED
51161 INH::PMREPT
51171 ALW::PMREPT
52011 UTL::QRY, CMAP
52031 UTL::QRY, DMAP
52041 UTL::QRY, TO
52051 UTL::QRY, FROM
52101 UTL::QRY, BCAST, ALL
52201 UTL::QRY, MARK
52211 UTL::QRY, MARK
52311 UTL::QRY, RTMAP | DLMAP
52321 UTL::QRY, SCDG, ALL, STATE
52501 UTL::QRY, SECH, TO
52511 UTL::QRY, SCON, CH
52581 UTL::QRY, LOAD
53041 UTL::QRY, EQD, NPC
53101 UTL::QRY, ALL
53103 UTL::QRY, UNIT
53104 UTL::QRY, ALL, COMMON
53105 UTL::QRY, COMMON
53151 UTL::QRY, ALMS, DBASE
55011 UTL::QRY, SWER, ERR
55012 UTL::QRY, HWER, ERR
55181 UTL::QRY, XCSB
56021 UTL::QRY, ALMOPT, NPC
56311 UTL::QRY, STATE, NPC
56314 UTL::QRY, STATE, NPC
56321 UTL::QRY, TS0, NPC
56323 UTL::QRY, TS0M, NPC
56324 UTL::QRY, NFS, NPC
56341 UTL::QRY, DD
56343 UTL::QRY, DD
56351 UTL::QRY, NPC
56353 UTL::QRY, BC, NPC
56501 UTL::QRY, SR00F

Command

[I.55711]

ABT!

Completion Message

[O.55711]

M hh:mm:ss xy,ww n[vv] CMD ABT e LN MSG:
<First 70 characters of aborted command>
<Remaining text of aborted command> ABT COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

ABT - Abort

e - Number of lines in the message

ACO,ACTIVE

ALARM CUTOFF ACTIVE

Explanation Of Command

This output message automatically reports the activation (depressing) of the alarm cutoff (ACO) switch. Activation of this switch silences the audible alarms. The ACO switch will be inactivated when all alarms are retired or when a new alarm appears on the frame. For example, if there is a minor alarm on the frame before the CGA major alarm is induced, when the CGA major alarm is retired by an ACO action, the minor alarm will remain. In this case, there will be a second ACO ACTIVE message.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.65071]

I hh:mm:ss xy,ww ACO ACTIVE COMPL

Explanation Of Parameters

ACO - Alarm cutoff

ACTIVE - Active

ACON,OLD,NEW,INCL

ALTERNATE CROSS-CONNECTIONS

Explanation Of Command

The alternate cross-connection command can only be used with a capacity expansion frame (CEF). This command moves single 64 kbit/s circuits from one (OLD) service-carrying digroup to another (NEW) service-carrying digroup. All circuit parameters associated with the circuit on the OLD digroup before the ACON command is executed will be retained with the circuit on the NEW digroup after the ACON command is executed.

The ACON command will create a new connection consistent with existing DACS II cross-connect topologies. The user should make sure that this connection is suitable for the type of traffic intended for the circuit. Test signals may exist on the new digroup. If allowed to remain they will overwrite the signal transferred from the old digroup.



WARNING:

Prior to executing this command the user should check to see if any test signals exist on the NEW digroup.

Command

Nonhierarchical

[I.14001]

ACON:FRM xy,SEQ ww:OLD [s]abcddd,NEW [t]ghijjj[,INCL]!

Hierarchical

[I.14001]

ACON:FRM xy,SEQ ww:OLD uvmnpddd,NEW wxqrrjjj[,INCL]!

Completion Message

Nonhierarchical

[O.14001]

M hh:mm:ss xy,ww n[vv] ACON [s]abcddd,[t]ghijjj\
[INCL] COMPL

Hierarchical

[O.14001]

M hh:mm:ss xy,ww n[vv] ACON uvmnpddd,wxkqrjjj[INCL] COMPL

Denial Message

Nonhierarchical

[O.14001.01]

M hh:mm:ss xy,ww n[vv] ACON [s]abcddd,[t]ghijjj[INCL] COND cc DNY

Hierarchical

[O.14001.01]

M hh:mm:ss xy,ww n[vv] ACON uvmnpddd,wxkqrjjj[INCL] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical OLD NPC number

[t]ghi - The 3- or 4-digit nonhierarchical NEW NPC number

Note: Valid types for old and new NPC's are DExyz (except DE9yz) and TExyz (except TE9yz).

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical OLD NPC number

wxkqr - Hierarchical NEW NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

The values are listed below:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd,jjj

- Channel numbers for old and new channels respectively

INCL - Inclusive

A circuit designated as a customer controlled circuit, a red circuit or a substrate T1 circuit cannot be modified without using the inclusive keyword in the message. Also, an NPC which supports these circuits cannot be manually removed unless the INCL keyword is given in the remove message.

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
1E		Customer control or red circuit exists
01		Invalid range for specified NPC type
10	MCOND	NPC out of service or failed
11	MCOND	NPC not equipped
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
18		DSPI not equipped, not in service, or failed
21		Trunk conditioning is invalid
32		Termination is under test
33		Termination is a test port
80		Database conference width does not match the range in input command
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed

cc	st	<i>Explanation</i>
1C	MCOND	Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
62	INERR	Invalid channel number
BA		Inactive side NPC out of service and inactive side in service
DF		Unmatched channel range
EC	INERR	Invalid channel 000 cross-connection specified
70	INERR	NPC invalid type
FF		Termination is in process of being rolled
E0	MCOND	ETSI not equipped, not in service, or failed
ED		OLD termination is not mapped
EF		Invalid circuit type
F0		Range not allowed for circuit type
F4		OLD and NEW channels cannot be the same
F5		Conference first channel doesn't match input
F6		Leg type mismatch
F7		OLD data channel cannot be parity channel type
F8		OLD and NEW Data and Parity channels partially overlap

ACT,MAP,CLR,INCL

ACTIVATE ALTERNATE MAPS

Explanation Of Command

This command requests the activation of an alternate map.

DACS II will not generate individual completion messages for each successful cross-connection; however, it will generate individual denial messages. Moreover, the individual denial messages will only be output to the link/user where the alternate map command was entered, independent of the output screening level.

When only one end of a TCON is remapped via this command, the trunk conditioning specified for a particular cross-connection when that cross-connection was first established will be applied to a disconnected channel.

Command

[I.39201]

ACT:FRM xy,SEQ ww:MAP <map name>[,CLR][,INCL]!

Completion Message

Nonhierarchical

[O.39201]

**M hh:mm:ss xy,ww n[vv] ACT MAP <map name>[CLR][INCL]\
[NPC [s]abc] COND cc COMPL**

Hierarchical

[O.39201]

M hh:mm:ss xy,ww n[vv] ACT MAP <map name>[CLR][INCL]\
[NPC uvmp] COND cc COMPL

Denial Message

Nonhierarchical

[O.39201.02]

M hh:mm:ss xy,ww n[vv] ACT MAP <map name>[CLR][INCL] \
2 LN MSG:
TCON [s]jklddd[-eee],[t]ghijjj[-kkk][<tc>][AIS]\
[CUS][INCL][RDC] COND cc DNY

Hierarchical

[O.39201.02]

M hh:mm:ss xy,ww n[vv] ACT MAP <map name>[CLR][INCL] \
2 LN MSG:
TCON edhfgddd[-eee],wxkqrjjj[-kkk][<tc>] [AIS]\
[CUS|INCL][RDC] COND cc DNY

Common

[O.39201.01]

M hh:mm:ss xy,ww n[vv] ACT MAP <map name>[CLR][INCL] \
COND cc DNY

[O.55703]

M hh:mm:ss xy,ww n[vv] ACT MAP IN PROGRESS

Note: As the alternate map is being executed, DACS II will generate the above IN PROGRESS message every 20 seconds.

Autonomous Message

Not applicable.

Explanation Of Parameters

MAP - Map

map name

- Map name (1 to 7 uppercase alphanumeric characters)
Name of an already existing alternate map.

CLR - Clear

Clear all cross-connections on all NPCs included in the map before activating the alternate map.

INCL - Inclusive

When an alternate map is activated, existing circuits that are marked CUS or RDC will be overwritten only if the INCL keyword has been specified. Otherwise, a denial will be issued as is currently done for channels under test, etc.

NPC - Network processing circuit

[s]abc - The first 3- or 4-digit nonhierarchical NPC number of NPC containing a non-two-way, two-point cross-connect.

[s]jkl, [t]ghi

- The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - First hierarchical NPC number of NPC containing a non-two-way, two-point cross-connection.

edhfg - Hierarchical NPC number

wxkqr - Hierarchical NPC number

uv,wx,ed

- Unit number

m,k,h - Module number

np,qr,fg

- NPC number within the module

The valid values are listed below:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ddd, jjj

- Channel number, the first channel of a range

eee, kkk

- Channel number, the last channel of a range

001 through 024

tc

- Trunk conditioning

AIS

- Alarm Indication Signal (All 1's)

cc

- Hexadecimal condition code

cc *Explanation*

00	No conditions
62	File is being accessed
64	File doesn't exist/can't be accessed
70	Some circuits not activated,cleared or pictured
71	The reference map does not exist
72	The map is not valid
73	Both sides of CCN are OOS
74	At least one UC is OOS or At least one UC is failed
75	At least one UC is not the correct type
D5	No user is logged in on the link/vc
01	Invalid range for specified NPC type
02	Invalid NPC type for AIS insertion
06	Invalid range for specified FROM NPC type
07	Invalid range for specified TO NPC type
10	NPC out of service or failed
11	NPC not equipped
12	Active CCN side not IS or failed or pested or hardware OOS
13	UNIT not equipped, not in service, or failed
14	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	FTMI not equipped, not in service, or failed
16	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
21	Trunk conditioning is invalid
30	Termination is already assigned
32	Termination is under test
35	Termination is protected (RDC)
36	Termination is not connected as indicated
40	CCN denied request
54	Conversion leg is terminated
1A	Required FLI not equipped, not in service, or failed
1B	Required MXR not equipped, not in service, or failed

cc *Explanation*

- 1C** Req'd FMT not eq'd, not IS, or failed, or inact side FMT not eq'd, or not IS
- 1D** Required MIU not equipped, not in service, or failed
- 38** Deny SP Type NPCs for Alternate Maps
- A6** Deny SLC for Alternate maps
- A7** Deny non-channelized NPCs for Alternate Maps
- E8** SC invalid for cross-connection specified
- E9** MUX or TRB invalid for cross-connection specified
- EA** AIS invalid for cross-connection specified
- EB** NAM invalid for cross-connection specified
- EC** Invalid channel 000 cross-connection specified
- ED** Invalid channel 031 cross-connection specified
- 85** Using the 24th channel of a T1DM NPC
- FF** Termination is in process of being rolled
- B0** Unit 1 denied request
- B1** Unit 2 denied request
- B2** Unit 3 denied request
- B3** Unit 4 denied request
- B4** Unit 5 denied request
- B5** Unit 6 denied request
- 4A** channel part of a TP or TG

ADD, LINK, APPL, ASCS, ASCD, PM, L2AD, POLL

ADD TABS LINK PARAMETERS

Explanation Of Command

This message is used to provision a TABS administrative link.

Command

[I.36007]

ADD:FRM xy,SEQ ww:LINK j,APPL {ASCS|ASCD|PM}[,L2AD aa]\
[,POLL ttt]!

Completion Message

[O.36007]

M hh:mm:ss xy,ww n[vv] ADD LINK j APPL {ASCS|ASCD|PM}\
[L2AD aa][POLL ttt] COMPL

Denial Message

[O.36007.01]

M hh:mm:ss xy,ww n[vv] ADD LINK j APPL {ASCS|ASCD|PM}\
[L2AD aa][POLL ttt] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

LINK - Link

j - Administrative link number (either 3 or 4)

POLL - Polling

ttt - Time in seconds

001 through 255 for ASCS or ASCD applications
000 through 044 for PM applications

APPL - Application of the TABS link

ASCS - Alarm surveillance and control, summary

ASCD - Alarm surveillance and control, detailed

PM - Performance monitoring

L2AD aa
- Layer 2 address (00 through 31)

cc - Hexadecimal condition code

cc *Explanation*

DF Command and protocol are inconsistent

3A Invalid poll time

3B Unspecified L2 address

3C Duplicate L2 address

ADD, LINK, K, T1, T3, N2, A, B

ADD LINK, X.25, PROTOCOL, DATA LINK, LAYER
PARAMETERS

Explanation Of Command

This command allows the user to provision the protocol-specific parameters in the data link layer of an X.25 administrative link.

Command

[I.36003]

ADD:FRM xy,SEQ ww:LINK j[,K b][,T1 ee][,T3 ggg][,N2 aa]\
[,FRMAD {A|B}]!

Completion Message

[O.36003]

M hh:mm:ss xy,ww n[vv] ADD LINK j[K b][T1 ee][T3 ggg]\
[N2 aa][FRMAD {A|B}] COMPL

Denial Message

[O.36003.01]

M hh:mm:ss xy,ww n[vv] ADD LINK j[K b][T1 ee][T3 ggg]\
[N2 aa][FRMAD {A|B}] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

LINK - Link

j - Administrative link number (5 or 6)

FRMAD - Frame address used by each frame in the Data Link Layer of X.25 protocol.

A - Data link layer frame address A. Default is A

B - Data link layer frame address B

K - Maximum number of outstanding I frames

b - Number of frames (1 through 7). Default is 7.

T1 - Acknowledgment timer

ee - Timer setting in seconds (2 through 20). Default is 3 seconds

T3 - Disconnect (or Idle channel) timer

ggg - Timer setting in seconds (4 through 120). Default is 26 seconds

N2 - Maximum number of frame transmissions

aa - Number of frame transmissions (2 through 16) (including original transmission). Default is 7.

cc - Hexadecimal condition code

cc *Explanation*

03 Subject entity is in service

D0 Command is Frame administrator (DAX) only.

ADD, LINK, PTCOL, S, X, T, M, BAUD, ALM, BS, ENQ

ADD LINK, PROTOCOL, BAUD

Explanation Of Command

This command is used to provision (add) a Snider, Modified Snider, X.25, or TABS administrative link. Only one modified Snider link may be provisioned.

This command can also be used to initialize or change the performance parameters of the link, including the protocol (PTCOL), link speed (BAUD), alarm class (ALM), backspace (BS), Xon/Xoff flow control (XON), and Enq/Ack flow control (ENQ) provisioning.

At least one parameter must be given.

On input, if a virtual circuit range is specified as zero (0), the corresponding group number specified is ignored by DACS II.

Command

[I.36001]

**ADD:FRM xy,SEQ ww:LINK j,PTCOL {S|X|T|M}[,BAUD bb][,ALM k]\
[,BS e][,ENQ q][,XON x][,INIT]!**

If the protocol is Snider:

[I.36001]

**ADD:FRM xy,SEQ ww:LINK j,PTCOL S[,BAUD bb][,ALM k]\
[,BS e][,ENQ q][,XON x][,INIT]!**

If the protocol is X.25:

[I.36001]

ADD:FRM xy,SEQ ww:LINK j,PTCOL X[,ALM k][,INIT]!

If the protocol is TABS:
[I.36001]

ADD:FRM xy,SEQ ww:LINK j,PTCOL T[,BAUD bb][,ALM k][,INIT]!

If the protocol is Modified Snider:
[I.36001]

ADD:FRM xy,SEQ ww:LINK j,PTCOL M[,ALM k][,INIT]!

Completion Message

The output message received depends upon whether "ENQ" and "XON" are specified in the input command. If "ENQ" and "XON" are not specified in the input command, the output message is the following:
[O.36001]

M hh:mm:ss xy,ww n[vv] ADD LINK j[PTCOL {S|X|T|M}]
[BAUD bb][ALM k][BS e][INIT] COMPL

If "ENQ" and "XON" are specified in the input command, the output message is the following:

M hh:mm:ss xy,ww n[vv] ADD LINK j[PTCOL {S|X|T|M}]
[BAUD bb][ALM k][BS e][INIT] 2 LN MSG:
[ENQ q][XON x] COMPL

Denial Message

The output message received depends upon whether "ENQ" and "XON" are specified in the input command. If "ENQ" and "XON" are not specified in the input command, the output message is the following:
[O.36001.01]

M hh:mm:ss xy,ww n[vv] ADD LINK j[PTCOL {S|X|T|M}]
[BAUD bb][ALM k][BS e][INIT] COND cc DNY

If "ENQ" and "XON" are specified in the input command, the output message is the following:

M hh:mm:ss xy,ww n[vv] ADD LINK j[PTCOL {S|X|T|M}]
[BAUD bb][ALM k][BS e][INIT] 2 LN MSG:
[ENQ q][XON x] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

LINK - Link

j - Administrative link number (1 through 6)

PTCOL - Protocol

S - SCCSAI (Snider protocol)

X - X.25 Synchronous protocol

T - TABS (Telemetry Asynchronous Block Serial protocol)

M - Modified Snider Protocol (requires baud rate of 1200)

BAUD - Baud

bb - Baud rate

The baud rate is not provisioned for synchronous X.25 links. Timing for X.25 links is received from the connected X.25 network or device. Provisioning the baud rate applies only to asynchronous Snider links.

<i>bb</i>	<i>Rate</i>

03	300

06	600

12	1200

24	2400

48	4800

96	9600

ALM - Alarm

k - Alarm class for link hardware failures

<i>k</i>	<i>Alarm Class</i>

1	Minor (default)

2	Major

BS - Backspace

e - Character echoed for backspace or control-h

<i>e</i>	<i>Character</i>

0	Backspace is echoed (default)

1	Underscore is echoed

ENQ - Enquire

q - ENQ/ACK Protocol Enable/Disable Control

q ENQ/ACK Protocol Provisioning

0 Disabled

1 Enabled (default)

If the DACS II frame has been set to expect the ENQ/ACK Protocol Enable/Disable Control and the sending terminal is not set up properly to send the ACK in response to ENQ, then after several attempts to receive ACK the DACS II frame will autonomously declare a protocol OOS for ENQ/ACK, remove the link, perform diagnostics and then restore the link. At this point the ENQ/ACK protocol is set to disabled.

XON - XON

x - XON/XOFF Protocol Enable/Disable Control

x XON/XOFF Protocol Provisioning

0 Disabled (default)

1 Enabled

The XON/XOFF Protocol Enable/Disable Control will only take effect when the DACS II frame is in output mode. The effect of XOFF lasts for 60 seconds or until an XON is received. If the frame has data to be output on the given link (that is, from a command executed on that link, or output data from another monitored link), and XOFF's are received in a manner such that at the end of an 60 second OFF interval a new 60 second OFF interval begins, thus preventing the frame from delivering output data, then the frame will declare a software error based on the assumption that a software communications error exists. The link will be autonomously removed, diagnosed, and restored. Following restoral, queued output data will be flushed. The XON protocol will still be in effect after the link is restored.

INIT - Initialize

Initialize the administrative link; all parameters are set to default except those specified in the command.

cc - Hexadecimal condition code

cc *Explanation*

01 Subject entity is equipped

03 Subject entity is in service

D0 Command is Frame administrator (DAX) only.

DF Command and protocol are inconsistent

2A Incorrect pack type in slot

EA XON/XOFF flow control is supported only on Snider link

cc *Explanation*

EB ENQ/ACK flow control is supported only on Snider link

ADD, LINK, W, P, T20, T22, T23, T25, T26, R20

ADD X.25 LINK PARAMETERS

Explanation Of Command

This command allows a user to provision an X.25 administrative link with packet layer parameters.

If a virtual circuit (VC) range is specified as zero (0), the corresponding group number specified in **gghh** is ignored by DACS II.

Parameters T20, R20, DBIT, and VC() are per-link parameters and the remaining parameters are per-VC parameters.

If a 3-digit link+VC number (501, 502, ..) is used and only per-VC parameters are specified, then the command is accepted and the values apply only to the specified VC.

If a 3-digit link+VC number is used and at least one per-link parameter is specified, then the command is denied.

If a 1-digit link number (5 or 6) is used and any per-link and/or per-VC parameter is specified, then the command is accepted and the values apply to all VCs in the link. To ensure proper interface between DACS II and the packet network, packet layer parameters at DACS II and network ends of the X.25 link must be identical.

Command

[I.36005]

```
ADD:FRM xy,SEQ ww:LINK j[mm][,W c][,P ddd][,T20 iii]\  
[,T22 jjj][,T23 kkk][,T25 lll][,T26 mmm][,R20 nn]\  
[,R22 p][,R23 qq][,R25 r][,DBIT v][,VC(ppss,gghh)]!
```

Completion Message

[O.36005]

```
M hh:mm:ss xy,ww n[vv] ADD LINK j[mm][ W c][ P ddd]\
[ T20 iii][ T22 jjj][ T23 kkk][ T25 lll][ T26 mmm]\
[ R20 nn][ R22 p][ R23 qq][ R25 r][ DBIT v][ VC(ppss,gghh)] COMPL
```

Note: If output message is longer than 80 characters, the following will be output.

[O.36005]

```
M hh:mm:ss xy,ww n[vv] ADD LINK j[mm][ W c][ P ddd]\
[ T20 iii][ T22 jjj] 2 LN MSG:
[ T23 kkk][ T25 lll][ T26 mmm][ R20 nn][ R22 p][ R23 qq]\
[ R25 r][ DBIT v][ VC(ppss,gghh)] COMPL
```

Denial Message

[O.36005.01]

```
M hh:mm:ss xy,ww n[vv] ADD LINK j[mm][ W c][ P ddd]\
[ T20 iii][ T22 jjj][ T23 kkk] [ T25 lll][ T26 mmm]\
[ R20 nn][ R22 p][ R23 qq][ R25 r][ DBIT v][ VC(ppss,gghh)]\
COND cc DNY
```

Note: If output message is longer than 80 characters, the following will be output:

[O.36005.01]

```
M hh:mm:ss xy,ww n[vv] ADD LINK j[mm][ W c][ P ddd]\
[ T20 iii][ T22 jjj] 2 LN MSG:
[ T23 kkk][ T25 lll][ T26 mmm][ R20 nn][ R22 p][ R23 qq]\
[ R25 r][ DBIT v][ VC(ppss,gghh)] COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

LINK - Link

j [mm] - Administrative link number

j - Physical link number (l is either 5 or 6)

mm - Virtual circuit number (01 through 16)

W - Window

c - Window size (1 through 7). Default window size is 2.

P - Packet

ddd - Packet size. Can be 128, 256, 512 octets. Default is 128 octets.

T20 - Restart request response timer

iii - Timer setting (10 through 180 seconds). Default is 180 seconds.

T20 is valid only on a per link basis and will be denied on an individual virtual circuit.

T22 - Reset request response timer

jjj - Timer setting (10 through 180 seconds). Default is 180 seconds.

T23 - Disconnect (or idle channel) timer

kkk - Timer setting (10 through 180 seconds). Default is 180 seconds.

T25 - Data packet acknowledgement timer

lll - Timer setting (10 through 200 seconds). Default is 200 seconds.

T26 - Interrupt response timer.

mmm - Timer setting (10 through 180 seconds). Default is 180 seconds.

R20 - Restart request retransmission counter

nn - Counter setting (1 through 10). Default is 1.

R20 is valid only on a per link basis and will be denied on an individual virtual circuit.

R22 - Reset request retransmission counter.

p - Counter setting (1 through 3). Default is 1.

R23 - Clear request retransmission counter.

qq - Counter setting (1 through 10). Default is 1.

R25 - Data packet retransmission counter.

r - Counter setting (0 through 3). Default is 0.

VC - Virtual circuit

ppss - Virtual circuit number

pp - Range of PVCs

ss - Range of SVCs

The sum of the number of PVCs and SVCs must be equal to 16.

Table 1 shows the default values for these fields.

Table 1 and Table 2 show the acceptable values for these fields, allowing for an LCN numbering scheme of 00-255.

TABLE 1

"pp"	"ss"	Number of PVCs	Number of SVCs	Starting LCN for first PVC Channel	Starting LCN for first SVC Channel
00	16	00	16	--	01
01	15	01	15	01	02
02	14	02	14	01	03
03	13	03	13	01	04
04	12	04	12	01	05
05	11	05	11	01	06
06	10	06	10	01	07
07	09	07	09	01	08
08	08	08	08	01	09
09	07	09	07	01	10
10	06	10	06	01	11
11	05	11	05	01	12
12	04	12	04	01	13
13	03	13	03	01	14
14	02	14	02	01	15
15	01	15	01	01	16
16	00	16	00	01	--

TABLE 2

"pp"	"ss"	Number of PVCs	Number of SVCs	Starting LCN for first PVC Channel	Starting LCN for first SVC Channel
$0 \leq nn \leq 48$					
20	nn	00	16	--	nn
21	nn	01	15	nn	nn+1
22	nn	02	14	nn	nn+2
23	nn	03	13	nn	nn+3
24	nn	04	12	nn	nn+4
25	nn	05	11	nn	nn+5
26	nn	06	10	nn	nn+6
27	nn	07	09	nn	nn+7
28	nn	08	08	nn	nn+8
29	nn	09	07	nn	nn+9
30	nn	10	06	nn	nn+10
31	nn	11	05	nn	nn+11
32	nn	12	04	nn	nn+12
33	nn	13	03	nn	nn+13
34	nn	14	02	nn	nn+14
35	nn	15	01	nn	nn+15
36	nn	16	00	nn	--
40	nn	00	16	--	nn+64
41	nn	01	15	nn+64	nn+65
42	nn	02	14	nn+64	nn+66
43	nn	03	13	nn+64	nn+67
44	nn	04	12	nn+64	nn+68
45	nn	05	11	nn+64	nn+69
46	nn	06	10	nn+64	nn+70
47	nn	07	09	nn+64	nn+71
48	nn	08	08	nn+64	nn+72
49	nn	09	07	nn+64	nn+73
50	nn	10	06	nn+64	nn+74
51	nn	11	05	nn+64	nn+75
52	nn	12	04	nn+64	nn+76
53	nn	13	03	nn+64	nn+77
54	nn	14	02	nn+64	nn+78
55	nn	15	01	nn+64	nn+79
56	nn	16	00	nn+64	--

TABLE 2 (continued)

"pp"	"ss"	Number of PVCs	Number of SVCs	Starting LCN for first PVC Channel	Starting LCN for first SVC Channel
$0 \leq nn \leq 48$					
60	nn	00	16	--	nn+128
61	nn	01	15	nn+128	nn+129
62	nn	02	14	nn+128	nn+130
63	nn	03	13	nn+128	nn+131
64	nn	04	12	nn+128	nn+132
65	nn	05	11	nn+128	nn+133
66	nn	06	10	nn+128	nn+134
67	nn	07	09	nn+128	nn+135
68	nn	08	08	nn+128	nn+136
69	nn	09	07	nn+128	nn+137
70	nn	10	06	nn+128	nn+138
71	nn	11	05	nn+128	nn+139
72	nn	12	04	nn+128	nn+140
73	nn	13	03	nn+128	nn+141
74	nn	14	02	nn+128	nn+142
75	nn	15	01	nn+128	nn+143
76	nn	16	00	nn+128	--
80	nn	00	16	--	nn+192
81	nn	01	15	nn+192	nn+193
82	nn	02	14	nn+192	nn+194
83	nn	03	13	nn+192	nn+195
84	nn	04	12	nn+192	nn+196
85	nn	05	11	nn+192	nn+197
86	nn	06	10	nn+192	nn+198
87	nn	07	09	nn+192	nn+199
88	nn	08	08	nn+192	nn+200
89	nn	09	07	nn+192	nn+201
90	nn	10	06	nn+192	nn+202
91	nn	11	05	nn+192	nn+203
92	nn	12	04	nn+192	nn+204
93	nn	13	03	nn+192	nn+205
94	nn	14	02	nn+192	nn+206
95	nn	15	01	nn+192	nn+207
96	nn	16	00	nn+192	--

gghh - Group number

gg - Group number for all PVCs (00 through 15).

hh - Group number for all SVCs (00 through 15).

VC() is valid only on a per link basis and will be denied on an individual virtual circuit.

DBIT - D-bit

v - X.25 d-bit setting

v *Explanation*

0 Off (unset) (acknowledgement done from local DTE). Default

1 On (set) (acknowledgement done from remote DTE)

DBIT is valid only on a per link basis and will be denied on an individual virtual circuit.

cc - Hexadecimal condition code

cc **st** *Explanation*

03 Subject entity is in service

DF Command and protocol are inconsistent

E2 Invalid link number specified

E3 **IS** Can't Use LCN 0/LGN 0 - designated as a supervisory channel only

ADD,NPC

ADD NETWORK PROCESSING CIRCUIT

Explanation Of Command

This message adds one or more network processing circuits (NPCs) of the facility terminating unit (FTU) into an alternate map while in a map session.

Command

Nonhierarchical

[I.36021]

**ADD:FRM xy,SEQ ww:NPC {[s]abc-[t]def|[s]abc[, [s]ghi]...\
[, [t]def]]}!**

Hierarchical

[I.36021]

**ADD:FRM xy,SEQ ww:NPC {uvmnp-wxkqr|uvmnp[,edfgh]...\
[,wxkqr]]}!**

Completion Message

If the command is accepted by DACS II, the following acknowledgement will be output.

OK

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc, [t]def, [s]ghi
- The 3- or 4-digit nonhierarchical NPC numbers

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number at beginning of range
wxkqr - Hierarchical NPC number at end of range
edfgh - Hierarchical NPC number

uv,wx,ed
- Unit number
m,k,f
- Module number
np,qr,gh
- NPC number

The valid values are:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ADD,RT,DL,MD,DGA,DGB,DGC,DGD,DGP,NDL

ADD RT | DL

Explanation Of Command

This command is used to request assignment of from one to five network processing circuits of type DSxyz to a specific SLC® carrier bank or a digital carrier line unit system. This command also allows for designation of remote terminal digital line parameters to a grown DS-type network processing circuit.

Use this command to enter the bank's identification number, its mode of operation and to designate the digroups associated with the network processing circuit.

For SLC 96 carrier, the existence of a data link on digroup A and the meaning of the PWR/ MISC alarm carried on the data link are identified. For a SLC Series 5 Carrier Feature Package C (FPC) interface, this message allows the user to specify if the remote terminal is to be retrofitted from a Central Office Terminal (COT) to DACS II.

The retrofit (**RTF**) keyword is applicable only to SLC Series 5 Carrier FPC remote terminals. If the remote terminal exists and is to be cutover from an RT-COT interface to DACS II, the **RTF** keyword must be entered in this command, and the remote terminal retrofit procedure must be followed. Note that, at least one digroup with its associated NPC number must be present on input. Also note that options **sss** and no data line (**NDL**) can only be specified if DGA **aaa** is present on input. This command is used to request assignment of from one to five network processing circuits of type DSxyz to a specific SLC® carrier bank or a DCLU system.

In this message, the bank's identification number, its mode of operation and its designated digroups. For SLC 96 the existence of a data link on the digroup A and the meaning of the PWR/ MISC alarm carried on the data link, if it exists, are identified. For SLC Series 5 Feature Package C (FPC) interface, this message allows the user to specify if the remote terminal is to be retrofitted from a COT to DACS II.

This message also allows for designation of RT (DL) parameters to a grown DS-type NPC.

Note that, at least one digroup with its associated network processing number must be present on the input message. Also note that the options of **sss** and **NDL** can only be specified.

The RTF keyword is applicable only to SLC Series 5 FPC remote terminals. If the remote terminal exists and is to be cutover from a RT-COT interface to DACS II, the RTF must be entered in this command, and the remote terminal retrofit procedure must be followed. Note that at least one digroup with its associated NPC number must be present on the input message. Also, note that, the options of sss and NDL can only be specified if the DGA [s]aaa is present on the input message. The RTF key word is applicable only to SLC Series 5 FPC RTs. If the FPC RT is in service and is to be cutover from an RT-COT interface to DACS II, the RTF keyword must be entered in this command, and the RT retrofit procedure must be followed.

Command

Nonhierarchical

[I.36201]

```
ADD:FRM xy,SEQ ww:{RT|DL} ffff,MD g[g]\
[,DGA [s]aaa][,DGB [s]bbb][,DGC [s]ccc][,DGD [s]ddd]\
[,DGP[s]ppp][,{sss|NDL|RTF}]!
```

Hierarchical

[I.36201]

```
ADD:FRM xy,SEQ ww:{RT|DL} ffff,MD g[g][,DGA uvjab]\
[,DGB uvkcd][,DGC uvlef][,DGD uvmgh][,DGP uvjpr]\
[, {sss|NDL|RTF}]!
```

Completion Message

Nonhierarchical

[O.36201]

```
M hh:mm:ss xy,ww n[vv] ADD {RT|DL} ffff MD g[g] 2 LN MSG:
[DGA [s]aaa][ DGB [s]bbb][ DGC [s]ccc][ DGD [s]ddd]\
[ DGP [s]ppp][ {sss|NDL|RTF}] COMPL
```

Hierarchical

[O.36201]

M hh:mm:ss xy,ww n[vv] ADD {RT|DL} ffff MD g[g] 2 LN MSG:
[DGA uvjab][DGB uvkcd][DGC uvlef][DGD uvmgh][DGP uvjpr]\
[{sss|NDL|RTF}] COMPL

Denial Message

Nonhierarchical

[O.36201.01]

M hh:mm:ss xy,ww n[vv] ADD {RT|DL} ffff MD g[g] 2 LN MSG:
[DGA [s]aaa][DGB [s]bbb][DGC [s]ccc][DGD [s]ddd]\
[DGP [s]ppp][{sss|NDL|RTF}][{A|B|C|D|P}] COND cc DNY

Hierarchical

[O.36201.01]

M hh:mm:ss xy,ww n[vv] ADD {RT|DL} ffff MD g[g] 2 LN MSG:
[DGA uvjab][DGB uvkcd][DGC uvlef][DGD uvmgh][DGP uvjpr]\
[{sss|NDL|RTF}][{A|B|C|D|P}] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

DGA - Digroup A of SLC carrier bank
DGB - Digroup B of SLC carrier bank
DGC - Digroup C of SLC carrier bank
DGD - Digroup D of SLC carrier bank
DGP - Digroup P of SLC carrier bank

[s]aaa - The 3- or 4-digit nonhierarchical DGA NPC number
[s]bbb - The 3- or 4-digit nonhierarchical DGB NPC number
[s]ccc - The 3- or 4-digit nonhierarchical DGC NPC number
[s]ddd - The 3- or 4-digit nonhierarchical DGD NPC number
[s]ppp - The 3- or 4-digit nonhierarchical DGP NPC number

If NPC numbers are expressed in three digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

uvjab - Hierarchical DGA NPC number
uvkcd - Hierarchical DGA NPC number
uvlef - Hierarchical DGA NPC number
uvmgh - Hierarchical DGA NPC number
uvjpr - Hierarchical DGA NPC number

uv - Unit number
j, k, l, m
 - Module number within the unit
 (For FPC RT j=k=l=m)
ab - DGA NPC number within the module
cd - DGB NPC number within the module
ef - DGC NPC number within the module
gh - DGD NPC number within the module
pr - DGP NPC number within the module

The allowable values are presented below:

DS type NPC numbers listed by unit, module, and NPC Number
 Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

RT - SLC remote terminal
DL - Digital carrier line unit
ffff - Bank identification number (0000 through 9999)
NDL - No data link
RTF - Retrofit (only applies to SLC Series 5 FPC RT)

MD g[g]
 - Mode of operation of SLC carrier bank

<i>g[g]</i>	<i>Explanation</i>
1	SLC 96 Carrier Mode I
3	SLC 96 Carrier Mode III
C	SLC Series 5 Carrier

sss - Power or miscellaneous alarm option

<i>sss</i>	<i>Explanation</i>
PMJ	The PWR/MISC alarm from the data link is a power major alarm
PMN	The PWR/MISC alarm from the data link is a power minor alarm
MMJ	The PWR/MISC alarm from the data link is a miscellaneous major alarm
MMN	The PWR/MISC alarm from the data link is a miscellaneous minor alarm

A, B, C, D, P

- Digroup name indicating the digroup that caused the denial.

cc - Hexadecimal condition code

cc *Explanation*

- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 13** FTMI is not equipped
- 15** NPC is unequipped
- 2D** RTF keyword is used without DGA
- 2E** RTF keyword and the operation mode does not match
- 64** NPC is already grown and added as SLC digroup
- 65** Another NPC is grown and added as this digroup
- 66** DGP designated to bank without data link
- 67** DGA is not added
- 68** NDL option is used without DGA
- 6A** NPC type is not DS type
- 6B** Operation mode and digroup name don't match
- 6C** Framing format, digroup name & operational mode don't match
- 6D** Counting sequence and operational mode don't match
- 6E** DGA with NDL option is not provisioned with D4 or ESF framing format
- 6F** Adding two digroups from one bank on same DDC
- 70** Digroups from same bank have different modes
- 71** Digroups from same bank have different counting sequence
- 72** Digroups from same bank are added to two different FTUs
- 73** Invalid PWR/MISC alarm level
- 74** PWR/MISC alarm is specified to a digroup other than DGA
- 76** Alarm option and bank mode don't match
- 77** Unassigned operational mode
- 78** Protection switch process failed
- 79** DGA/DGP of RT/DL Mode I must be assigned to one DDC
- 7A** Mode I RT/DL IDs don't match for DGA/DGP on same DDC
- 7B** Other NPC on this DDC not the same digroup for Mode I DGA/DGP
- 7C** Different DSxyz types are used for DGA/DGP on same DDC for Mode I
- 7D** The NDL options are different for DGA's on the same DDC for Mode I
- 82** DL ffff is used w/ operational mode other than Mode I
- 94** Mate RT/DL mode is different
- AF** Number of SLC RT's on each unit is limited to 80
- BC** DGA and DGB must be specified together in the command
- BD** DGC and DGD must be specified together in the command
- BE** NPC type option Y is invalid for SLC-96 NPC
- 1B** Two digroups from same bank added to different FTMI's
- D4** Active CCN side is out of service
- E5** Adding DL DGP forbidden for SLC 96 MD 1

cc *Explanation*

- E6** No DL digroups can be added until the associated RT bank is created
- 58** SLC 96 MD 1 RT DGP requires mate NPC to be unequipped
- 59** Number of DGPs on each unit is limited to 32
- 69** Use of this NPC is RESERVED for SLC 96 MD 1

ADD,USER,LINK,INCL,ALL,LANG,M,P,F

ADD USER/LINK LANGUAGE, NPC ADDRESSING AND PRIORITY

Explanation Of Command

This command *is used by the DACS II frame administrator* to assign to a user or link or all users and links any of the following attributes:

- The language with which users converse with the DACS II machine
- The type of addressing used to specify a network processing circuit
- The execution priority level assigned to a given message category
- The ability to remove a link

The command can also be used to initialize these attributes, except for the language and NPC addressing type attributes, to their default values.

To change the type of addressing the frame administrator must issue this command and then logout and login again.

Command

[I.36103]

```
ADD:FRM xy,SEQ ww:{USER <user id>|LINK j[mm][,INCL]|ALL}\  
[,LANG {M|P|F}][,NPCAD {E|X|H}][,LEV(a,b,c,d,e,f)]\  
[, {RMON|RMOFF}][,RLK {A|I}][,{CONVON|CONVOFF}][,INIT]!
```

Completion Message

[O.36103]

```
M hh:mm:ss xy,ww n[vv] ADD {USER <user id>|LINK j[mm][,INCL]|ALL} \
2 LN MSG:
[LANG {M|P|F}][ NPCAD {E|X|H}][ LEV(a,b,c,d,e,f)]\
[ {RMON|RMOFF}][ RLK {A|I}][ {CONVON|CONVOFF}][ INIT] COMPL
```

Denial Message

[O.36103.01]

```
M hh:mm:ss xy,ww n[vv] ADD {USER <user id>|LINK j[mm][,INCL]|ALL} \
2 LN MSG:
[LANG {M|P|F}][ NPCAD {E|X|H}][ LEV(a,b,c,d,e,f)]\
[ {RMON|RMOFF}][ RLK {A|I}][ INIT][ {CONVON|CONVOFF}] COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

USER - User

user id

- User identifier

The users login identifier (two to eight alphabetic characters). The command is denied if the user identifier does not exist.

LINK - Link

j[mm] - Administrative link number

j Physical link number (1 through 6)

mm Virtual circuit number (01 through 16) for l = 5 or 6

INCL - Inclusive

Include virtual circuits of links 5 and 6. The INCL keyword can only be entered with X.25 links 5 and 6, and no virtual circuit number is allowed when this keyword is used. That is, "mm" and "INCL" are mutually exclusive. In addition, the INCL keyword is also mutually exclusive with the "user id" and the keyword "ALL". When INCL is entered, it means that all provisioning data specified in this command, for example, LANG, NPCAD, LEV(a,b,c,d,e,f), RMON/RMOFF and RLK, will be applied to all virtual circuits of the link (5 or 6).

ALL - All

All users and links (including virtual circuits). The ALL keyword can only be used together with the NPCAD option. When used, it will change the NPC addressing scheme for ALL users and links including virtual circuits. There is a single exception: the ALL keyword does not affect the NPC addressing scheme for a virtual circuit that is provisioned with the facility data link communication protocol, "F".

LANG - Language

The LANG keyword specifies the language used by a link communicating with the DACS II system. All languages cannot be used on all links. The protocol determines what languages are permissible. Three languages are available and they are listed below. See the table below for permissible combinations of protocol and language.

<i>protocol</i>	<i>language</i>
Snider	PDS or MML
X.25	PDS, MML, or FDL
TABS	Not applicable
Modified Snider	Not applicable

The language defaults to *PDS* if LANG is not specified.

P - Program Documentation Standards (PDS)

M - HuMan-Machine Language (MML)

F - Facility Data Link (FDL) Communication Protocol

This language may only be provisioned for a single virtual circuit on an X.25 link. A virtual circuit provisioned with this language provides a communication path between an Operations Support System and the ESF data link of a DA or TA type (ANSI) Network Processing Circuit. Such a virtual circuit is completely dedicated to this function and does not interact with other DACS II input/output (I/O) messages. Once the X.25 link is set up, provisioning this function only requires the user to specify the language "F" for the virtual circuit; no other I/O parameters affect this channel, except the NPC addressing option.

NPCAD - Network processing circuit addressing

E - Extended 3-digit nonhierarchical NPC addressing

If the 3-digit nonhierarchical NPC addressing scheme is allowed in the configuration file, it will be used as the default NPC addressing scheme.

X - Extended 4-digit nonhierarchical NPC addressing

If the 3-digit nonhierarchical NPC addressing scheme is not allowed in the configuration file, the 4-digit scheme is used as the default NPC addressing scheme.

H - Hierarchical NPC addressing

NOTE: ➡

To place a new addressing scheme into effect the frame administrator must first request the new addressing scheme with this command and then logout and login again.

LEV - Level

- a** - Execution priority level for circuit provisioning commands
- b** - Execution priority level for equipment provisioning commands
- c** - Execution priority level for maintenance commands
- d** - Execution priority level for test access commands
- e** - Execution priority level for monitoring commands
- f** - Execution priority level for common commands

A table giving the command verbs associated with each of the above command sets is given below.

LEV is used in combination with the command set identifiers a through f to set the execution priority level for each command set. A priority level applies to a user or link as appropriate. Priority levels range from 0 through 3. A list of these levels and their meaning is given below for a. The list for b through f is similar to the a list.

<i>a</i>	<i>Explanation</i>
0	Commands in the command set assigned this execution priority level cannot be executed.
1	Highest execution priority level. Commands in the command set assigned this execution priority level will be executed before commands with priority level 2 or 3.
2	Middle execution priority level. Commands in the command set assigned this execution priority level will be executed before commands with priority level 3
3	Lowest execution priority level. Commands in the command set assigned this execution priority level will be executed after all priority level 1 and 2 commands have been executed. Level 3 is the default priority level.
-	The execution priority level of the command set assigned this execution priority level is not to be changed.

Note: The commands used to login, logoff, cross-connect, stop, and abort always have the highest priority.

A single queue is used for DACS II commands. When multiple commands arrive at the same time, they will be queued for execution according to the priority assigned to their command set. Commands with the same priority will be executed in the order of arrival, that is, first come first served. A timeout feature insures that no command will wait in the queue forever. When the timeout period has expired for a given command that command will be executed regardless of its priority level.

a Circuit Prov.	b Equipment Prov.	c Maint.	d Test Access	e Monitoring	f Common
BCON	COPY	CFR	CTST	AUD	ACT
BDIS	DGRTH	DGN		UTL	ADD
CONF					
	DLT	RMV	TTST		ALW
OCNT	GRTH	RST			CHG
OCON					ED
ODIS					EXC
OPR					INH
RLS					
SCNT					
SCON					
SDCH					
SDIS					
SECH					
SW					
TCNT					
TCON					
TDIS					

RMON - Restricted maintenance privilege ON

The RMON keyword is used to assign to a user the privilege of issuing the commands normally restricted to the Frame Administrator.

The following commands are restricted to the Frame Administrator (or superuser).

RST::MC,FRC!	(I.34001)
RST::SMEM,CLR,FRC!	(I.34211)
DLT::FPKG!	(I.37301)
CHG::ALMS,{ON OFF}!	(I.38555)
CHG::INTV,{ON OFF}!	(I.38451)
CHG::MSGLOG:{ON OFF}!	(I.38471)
UTL::BMTR,FROM SMEM,TO PMEM,EXCT!	(I.55701)
UTL::CLR,MSGLOG!	(I.57031)
UTL::UPGRD!	(I.57731)
UTL::BOOT,FRAME!	(I.58001)

RMOFF - Restricted maintenance privilege OFF

The RMOFF keyword is used to eliminate a user's privilege to issue the commands restricted to the Frame Administrator. RMOFF is the default value.

RLK - Remove Link

A - Allowed

A is the default value.

I - Inhibited

RLK is used to assign to a user or link the privilege of removing a link. There is a relationship between the link privilege and the execution priority level. If c (see previous Command Sets table) in the LEV field is set to zero then the command to remove a link cannot be executed hence the remove link privilege is inhibited even if the RLK option is set to A or I.

INIT - Initialize

INIT is used to assign the default values to the link/user parameters LEV, RMON/RMOFF and RLK. Parameters specified in the command will take on the specified values.

CONVON

- Mixed Addressing Conversion ON

CONVOFF

- Mixed Addressing Conversion OFF

This mixed addressing conversion feature is only applicable to PDS commands in an environment that uses 4-digit sequential NPC numbers. This conversion feature is useful when a DACS II frame is converted from 3-digit sequential NPC addressing to 4-digit sequential NPC addressing for growth reasons. In that case this conversion feature allows certain Operational Support Systems to use 3-digit NPC numbers, even though the frame has been changed to normally accept only 4-digit NPC numbers.

Assuming sequential NPC number usage, DACS II normally accepts only fixed length NPC numbers in its input commands. This conversion feature transfers the fixed length requirement from NPC number to channel number on a link basis. This allows the DACS II parser to accept 3- or 4-digit NPC numbers assuming that the channel number is interpreted to be of 2-digit fixed length. If a 3-digit NPC number is entered with CONVON in effect, then DACS II will internally expand 3-digit NPC numbers to 4-digit NPC numbers.

For some feature configurations this conversion feature is not available, and the CONVOFF keyword will not appear in the output of this command.

cc - Hexadecimal condition code

cc *Explanation*

- D0** Command is Frame administrator (DAX) only.
- D1** Cannot create any more users
- D2** User has been created
- D3** User does not exist
- D6** Incorrect or missing password
- D8** Cannot remove Frame administrator
- DC** No zeros allowed for DAX privilege
- DF** Command and protocol are inconsistent
- 25** Invalid FPI value
- C0** NPC addressing scheme selected is not allowed in the configuration file
- E1** Virtual circuit is not specified for X.25 link
- E2** Invalid link number specified
- E3** Invalid keyword(s) combination specified
- E4** Invalid NPC addressing scheme specified
- E5** No user/link needs to be changed
- 3B** Not valid for frame administrator
- 40** Only one channel allowed to have this language
- 41** Language "F" provisioned for this channel
- 83** Language is not allowed

ADD,USER,NEW,PASSWD

ADD USER

Explanation Of Command

This message is used by the frame administrator to create a new user login identification and password or to reassign a login identification and password to a previous user of DACS II.

The **NEW** keyword indicates that a new user is being created. The frame administrator uses this command without the **NEW** keyword to reassign a password to a user who is currently on DACS II.

A user is identified to DACS II by his or her **user id** associated with the login. The administrator divulges a password to a new user for the initial log on to DACS II. Afterwards, the user can change this initial password through the **CHG PASSWD** command to a password known only to him or her.

Output from this command is sent only to the link on which the command was input.

Command

[I.36101]

ADD:FRM xy,SEQ ww:USER <user id>[,NEW][,PASSWD <user password>]!

If the message is entered on a Snider link:

[I.36101]

ADD:FRM xy,SEQ ww:USER <user id>[,NEW]!

DACS II then generates the message below and a dialog is started.

PASSWD: (The frame administrator enters user password.)

REENTER PASSWD: (The frame administrator again enters the user password.).

Note that the user password is not echoed by DACS II.

Completion Message

[O.36101]

M hh:mm:ss xy,ww n[vv] ADD USER <user id>[NEW] COMPL

Denial Message

[O.36101.01]

M hh:mm:ss xy,ww n[vv] ADD USER <user id>[NEW] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

USER - User

user id

- User identifier

User login identification (two to eight alphabetic characters).

NEW - New

Create a user identifier for a new user.

Note: The "NEW" keyword cannot be used to create a user identifier on a link that is using the X.25 protocol.

PASSWD - Password

user password

- User password

The password assigned to the user, where password is at least six alphanumeric characters.

Note: The "PASSWD" keyword cannot be used to create a user identifier on a link that is using the X.25 protocol.

cc - Hexadecimal condition code

cc *Explanation*

- D0** Command is Frame administrator (DAX) only.
- D1** Cannot create any more users
- D2** User has been created
- D3** User does not exist
- D6** Incorrect or missing password

ALM,IDLD,AI,NPC

ALARM CEPT NPC

Explanation Of Command

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.65046]

I hh:mm:ss xy,ww ALM IDLD[<parameter>][AI aaaaa] NPC [s]abc COMPL

Hierarchical

[O.65046]

I hh:mm:ss xy,ww ALM IDLD[<parameter>][AI aaaaa] NPC uvmnp COMPL

Explanation Of Parameters

For TH type NPCs:

<i>parameter</i>	<i>Explanation</i>
CRC	CRC Block Errors
FRER	Framing Errors
OFS	Out of Frame Seconds
ES	Errored Seconds
SES	Severely Errored Seconds
CSS	Controlled Slip Seconds
UAS	Unavailable Seconds
UATC	Unavailable Time Count
MER	Multiframe Errors

AI - Accumulation Interval

aaaaa - The accumulation time period for the specified parameter.
(Only for PA/TH type NPCs)

aaaaa Explanation

15MIN Parameter count from a 15-minute accumulator
DAILY Parameter count from a daily accumulator

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The values are listed below:

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ALM,IDLD,NPC

ALARM IDLED, DE, DS, OR TE NPCs

Explanation Of Command

This autonomous output message reports that a major or minor alarm has been cleared for a given parameter on a facility that terminates on a particular network processing circuit (NPC).

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.65041]

I hh:mm:ss xy,ww ALM IDLD <parameter> NPC [s]abc COMPL

Hierarchical

[O.65041]

I hh:mm:ss xy,ww ALM IDLD <parameter> NPC uvmnp COMPL

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module
Values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

IDLD - Idled

parameter

- Facility performance parameter

Parameter	Programmable Threshold Range	Default Threshold
Bit Error Rate (BER) Major	1E-6* to 1E-3†	1E-3†
Bit Error Rate (BER) Minor	1E-6* to 1E-3†	1E-6

* For T1DM and Fe framing, the lower limit of the programmable threshold range is 1E-7.

† For DE-type Clear DS1 NPC and DS-type NPC, the range and default value is 1E-4.

ALM,IDLD,UNIT,DS3

ALARM IDLED DS3U or HDS3U

Explanation Of Command

This autonomous output message reports that a failure detected on an incoming DS3 or Hybrid DS3 facility has been cleared.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.66011]

I hh:mm:ss xy,ww ALM IDLD UNIT [q]q DS3 c <state> COMPL

Explanation Of Parameters

ALM - Alarm

UNIT - Unit

[q]q - Unit number (1 through 16)

DS3 - Digital signal 3

c - DS3 number (1 through 6)

state - Alarm state

state	<i>Explanation</i>

LOS	Loss of signal

BER	Bit error rate

OOF	Out of frame

RAI	Remote Alarm Indication signal (Hybrid DS3s only)

AIS	Alarm indication signal

IDLE	Idle signal

IDLD - Idled

ALM,MJ,MN,INFO,NPC

ALARM, DE, DS OR TE NPCs

Explanation Of Command

This autonomous message reports a major or minor alarm state for a facility performance parameter that is terminated on a DE, DS, or TE type network processing circuit.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.65031]

pahh:mm:ss xy,ww ALM {MJ|MN|INFO} <parameter> NPC [s]abc COMPL

Hierarchical

[O.65031]

pahh:mm:ss xy,ww ALM {MJ|MN|INFO} <parameter> NPC uvmnp COMPL

Explanation Of Parameters

pa - Priority of Action

pa Explanation

I Information

***** Minor alarm, nonservice affecting

****** Major alarm, service affecting

***C** Critical alarm, service affecting

ALM - Alarm

MJ - Major

MN - Minor

INFO - Informational

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

parameter

- Facility performance parameter:

For DE, TE, or DS type NPCs:

For DE type NPCs, parameters with values rr = 1 through 8 are valid.
For DS type NPCs, parameters with values rr = 1 through 10 are valid.
For TE type NPCs, parameters with values rr = 1 through 8 are valid.
For Clear-DS1 DE type NPCs, parameters with values rr = 1 through 4 are valid.
For Clear-DS1 TE type NPCs, parameters with values rr = 1 through 2 are valid.

rr	Parameter	Threshold Value Range	Default Threshold Value
01	Slip major	000 to 255	255
02	Slip minor	000 to 255	4
03	Bit Error Rate major	1E-3* to 1E-6 [†]	1E-3*
04	Bit Error Rate minor	1E-3* to 1E-6 [†]	1E-6
05	Errored Seconds [‡]	00001 to 65535	864

06	Severely Errored Seconds [‡]	001 to 255	225
07	Change of Frame Alignment major	001 to 511	511
08	Change of Frame Alignment minor	001 to 255	17
09	Shelf Alarm Near End(SANE)§	00001 to 65535	00000
10	Shelf Alarm Far End(SAFE)§	00001 to 65535	00000

* 4 for clear-DS1 NPCs or DS type NPCs (default)

† 7 on DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing

‡ Only applicable to DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing

§ Applicable only to DS type NPCs

Note 1: Major thresholds must be greater than minor thresholds.

Note 2: For Bit Error Rates, enter only the power of 10 (DACS assumes its sign is negative). For example, for a BER of 10^{-3} (.001), enter 3.

Note 3: Slip major and Slip minor threshold crossing alarms may be disabled by programming threshold values of zero for the respective parameters.

ALM,MN,IDLD,DS3UNPROTALM,DS3U

ALARM DS3 PROTECTION STATUS

Explanation Of Command

This message reports an alarm on a DS3U or a HDS3U. A minor alarm message will be generated if DS3 service on a DS3U or a HDS3U is unprotected as a result of manual commands.

This alarm will only be generated if the user uses another input command (CHG::DS3UNPROTALM) to activate the alarm generation. If the user deactivates it (using the same command), the alarm will not be generated, even if DS3 service is unprotected.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.66021]

* hh:mm:ss xy,ww ALM {MN|IDLD} DS3UNPROTALM DS3U [q]q COMPL

Explanation Of Parameters

ALM - Alarm

MN - Minor

This indicates a minor alarm

IDLD - Idled

This indicates that the alarm has been idled.

DS3U - DS3 or Hybrid DS3 Unit

[q]q - DS3 or Hybrid DS3 Unit number

DS3UNPROTALM

- DS3 Unprotected Alarm

Alarm indicating unprotected DS3 service due to manual commands

ALM,PMC,PMA,DMA,MI,CCN,OOS

ALARM CROSS-CONNECT NETWORK

Explanation Of Command

This message reports an alarm on a cross-connect network (CCN) side if the CCN duplexed entities are in an unprotected state. A alarm will be generated when a CCN side is out-of-service (OOS) and pested for two or more consecutive minutes.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.65054]

pa <il> hh:mm:ss xy,ww ALM {PMC|PMA|DMA|MI} CCN s OOS COMPL

Explanation Of Parameters

pa - Priority of action field.

pa *Explanation*

I Information

***** Minor alarm

****** Major alarm

***C** Critical alarm

il Intervention level.

il *Explanation*

AMI Immediate maintenance action

AMD Deferred maintenance action

SI No intervention

ALM - Alarm

IDLD - Idled

This indicates an alarm has be Idled.

PMC Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

COND - Condition

CCN - Cross-connect network

s - Cross-connect Network side number (0 or 1)

OOS - Out-of-service

ALM,PMC,PMA,DMA,MI,ECCN,OOS

ALARM ECCN

Explanation Of Command

This message reports an alarm on side 0 or 1 of the expanded cross-connect network side. The reported alarm notifies the craft when the ECCN duplexed entities are in an unprotected state. An alarm is generated when an ECCN side is out-of-service and pested for two or more consecutive minutes.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.65055]

pa <il> hh:mm:ss xy,ww ALM {PMC|PMA|DMA|MI} ECCN s OOS COMPL

Explanation Of Parameters

pa - Priority of action field.

pa *Explanation*

I Information

***** Minor alarm

****** Major alarm

***C** Critical alarm

il Intervention level.

il *Explanation*

AMI Immediate maintenance action

AMD Deferred maintenance action

SI No intervention

ALM - Alarm

IDLD - Idled

This indicates the alarm has been idled.

PMC Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

ECCN - Expanded cross-connect network

s - Side number (0 or 1)

OOS - Out-of-service

ALM,PMC,PMA,DMA,MI,SMEM

ALARM BACKUP MEMORY TRANSFER

Explanation Of Command

This message reports when Secondary Memory card (SMEM) is out-of-service (OOS). It is cleared when SMEM is restored to service.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.65056]

pa <il> hh:mm:ss xy,ww ALM {PMC|PMA|DMA|MI} SMEM COMPL

Explanation Of Parameters

pa - Priority of action field.

pa *Explanation*

I Information

***** Minor alarm

****** Major alarm

***C** Critical alarm

PMC Prompt Maintenance Action Critical Alarm

PMA Prompt Maintenance Action Major Alarm

DMA Deferred Maintenance Action Minor Alarm

MI Maintenance Information Alarm

ALM - Alarm

MN - Minor alarm

IDLD - Alarm idled

SMEM - Secondary memory card.

ALM,RESET,DATE,TOD,FORMAT,MDY,DMY,PMC

ALARM RESET

Explanation Of Command

This autonomous output message reports that the date and/or time have been reset because of a DACS II frame reset or because Message I.34001 (RST MC) has been entered.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.65051]

pa <il> hh:mm:ss xy,ww ALM RESET {DATE|TOD|TOD DATE} hr:mn:sc \
{mo/da/yr FORMAT MDY|da/mo/yr FORMAT DMY} {PMC|PMA|DMA|MI} COMPL

Explanation Of Parameters

pa - Priority of action field.

pa *Explanation*

I Information

***** Minor alarm

****** Major alarm

***C** Critical alarm

il Intervention level.

il *Explanation*

AMI Immediate maintenance action

AMD Deferred maintenance action

SI No intervention

PMC Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

DATE - Date

TOD - Time of day

FORMAT - Allows user to set date format to either USA or International format

MDY - USA format (Month, Day, Year)

DMY - International format (Day, Month, Year)

yr - Year number (four digits)

mo - Month number

da - Day of month number

hr - Hour of day

mn - Minute of hour

sc - Second of minute

ALM,UNIT,DS3

ALARM DS3U or HDS3U

Explanation Of Command

This autonomous message reports a failure detected on an incoming DS3 or Hybrid DS3 facility. It also reports an increase in the severity of the situation that caused the alarm (see the alarm states shown in the Explanation of Parameters below).

Please note that starting with Release 8.0, the alarm messages for DS1s that are embedded within a DS3 will be suppressed if the alarm is really due to a DS3 failure condition, provided that DS1 alarm suppression has been turned on by command I.38621. Also please note that DS1 and E1 alarm suppression is always on for Hybrid DS3s.

Warning: When DS1 alarm suppression is on, then under certain conditions when Bit Errors occur on the DS3, it will be possible for DS1s (E1s for Hybrid DS3s as well) to incur a bit error alarm before the DS3 goes into BER alarm. This condition is particularly noticable if the BER is set to 10^{-3} and bit errors occur close to that rate.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.66001]

pahh:mm:ss xy,ww ALM UNIT [q]q DS3 c <state> COMPL

Explanation Of Parameters

pa - Priority of action

pa	<i>Explanation</i>

*C	Critical

**	Major (for RAI, Hybrid DS3 only)

I	Information (AIS or IDLE)

UNIT - Unit

[q]q - Unit number (1 through 16)

DS3 - Digital signal 3

c - DS3 number (1 through 6)

state - Alarm state (listed according to severity)

state	<i>Explanation</i>

LOS	Loss of signal

BER	(High) Bit error rate

OOF	Out of frame

RAI	Remote Alarm Indication signal (Hybrid DS3s only)

AIS	Alarm indication signal

IDLE	Idle signal

ALW,PMREPT,NPC,ALL

ALLOW DS1 PERFORMANCE MONITORING REPORT

Explanation Of Command

This message reenables DACS II scheduled performance monitoring report output for DA and TA type NPCs that had been inhibited by the use of the "Inhibit Performance Monitoring Report" message (I.51161). The user may reenables performance monitoring report output for a single, range or all NPCs on the frame.

This command will handle NPC addressing in the input command as follows: If only a single NPC is addressed in the input command, then either a completion or denial response will be generated for the addressed NPC. DACS II will always deny invalid commands to specifically addressed NPCs.

If a range of NPCs is addressed and the feature applies to one or more NPCs within the range, DACS II will reenables outputting the scheduled reports for the NPCs in the range that support this feature, but skip the NPCs which do not support this feature. DACS II provides a variety of line termination types which support different features and can be randomly mixed within the frame. If at least one of the NPCs in the addressed range supports this feature, DACS II will generate a completion response for the entire range of NPCs; individual denial responses will not be generated for NPCs within the range which do not support the feature. If *none* of the NPCs in the addressed range support the requested feature, DACS II will generate a range denial response.

Command

Nonhierarchical

[I.51171]

ALW:FRM xy,SEQ ww:PMREPT,{NPC [s]abc[-[t]def]|ALL}!

Hierarchical

[I.51171]

ALW:FRM xy,SEQ ww:PMREPT,{NPC uvmnp[-wxkqr]|ALL}!

Completion Message

Nonhierarchical

[O.51171]

M hh:mm:ss xy,ww n[vv] ALW PMREPT {NPC [s]abc-[t]def|ALL} COMPL

Hierarchical

[O.51171]

M hh:mm:ss xy,ww n[vv] ALW PMREPT {NPC uvmnp-wxkqr|ALL} COMPL

Denial Message

Nonhierarchical

[O.51171.01]

M hh:mm:ss xy,ww n[vv] ALW PMREPT {NPC [s]abc[-[t]def]|ALL} COND cc DNY

Hierarchical

[O.51171.01]

M hh:mm:ss xy,ww n[vv] ALW PMREPT {NPC uvmnp[-wxkqr]|ALL} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical starting NPC number

[t]def - The 3- or 4-digit nonhierarchical ending NPC number

The valid values are:

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical starting NPC number

wxkqr - Hierarchical ending NPC number

PMREPT - Performance Monitoring Report

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

cc - Hexadecimal condition code

cc *Explanation*

15	NPC is unequipped
26	NPC type error
0D	PM scheduling report is already allowed for this entity
17	Command did not execute for any entity specified in the command
89	Interval is not valid/not available

ALWSW,UNIT,MMFG,TOPRTN,TOSRVC

ALLOW SWITCH OF MMFG

Explanation Of Command

This command requests removal of the inhibition of automatic protection switching from a range of service multiplexer-multiple interface unit functional group (MMFG) in a DS3 unit (DS3U) or a Hybrid DS3 unit (HDS3U) to the protection MMFG in that unit or the automatic switch back from the protection MMFG of a DS3U or a HDS3U to the service MMFG c[-d] of that unit. Only automatic protection switches due to failure will be affected by this message.

The command will always specify the number of the service MMFGs involved, even in the case of the command to allow switch back from the protection MMFG.

When the **TOSRVC** keyword is specified, a range of MMFGs is not acceptable. The command will be denied by the parser.

This command may cause an immediate protection switching/switch back if the original MMFG is out-of-service or is pested. In this case, an autonomous message that indicates the occurrence of the switch will be printed out.

Command

[I.35301]

ALWSW:FRM xy,SEQ ww:UNIT [q]q,MMFG c[-d],{TOPRTN|TOSRVC}!

Completion Message

[O.35301]

**M hh:mm:ss xy,ww n[vv] ALWSW UNIT [q]q MMFG a {TOPRTN|TOSRVC} **
COMPL

Denial Message

[O.35301.01]

M hh:mm:ss xy,ww n[vv] **ALWSW UNIT** [q]q **MMFG** a {TOPRTN|TOSRVC} \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MMFG - Multiplexer-multiple interface unit functional group

c, d - The number of the MMFG within the unit (1 through 6)

When the TOSRVC keyword is specified, a range of MMFGs is not acceptable. The command will be denied by the parser.

TOPRTN - To protection pack

TOSRVC - To service pack

a - The number of the service MMFG within the range c and d

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

44 Service MXR is not equipped

4B The Service MMFG is already under protection

4C The Service MMFG is not under protection

4D The switch is allowed (not inhibited)

APPEND,END

APPEND COMPONENT COMMAND

Explanation Of Command

This message is used, during a macro session, to add one or more commands to an existing macro. Commands are added following the location specified by **line number** or **END**. If neither **line number** or **END** is specified then the command(s) being added will be added on the line following the current position of the line pointer. This position may be determined by use of the LINE command.

Command

[I.19041]

APPEND[:FRM xy,SEQ ww:{<line number>|END}]!

Completion Message

[O.19041]

M hh:mm:ss xy,ww n[vv] APPEND[{<line number>|END}] COMPL

Denial Message

[O.19041.01]

**M hh:mm:ss xy,ww n[vv] APPEND[{<line number>|END}] COND cc **
DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

line number

- Line number at which to begin appending (0, 1, 2, 3, ...)

If a line number is specified, a command being added will be appended to this line. That is, the new command will be placed on the line following the line pointed to by the line number. The line pointer will then move down to point to the position of the new command. If more than one command has been entered the line pointer will move to the position of the last line entered.

END - End

End is a special line number that marks the position of the last line in the macro. If END is specified, the new command will be placed on the line following the line pointed to by END. The line pointer will then move down to point to the position of the new command. END will then be the line number of the new command. If more than one command has been entered, END will be the line number of the last line entered.

COND - Condition

cc - Hexadecimal condition code

cc	<i>Explanation</i>

60	User macro/map space is full
6B	Invalid line number
6E	No edit session active

APPL,RESET,IN,PROGRESS

UTILITY QUERY, APPLICATION RESET

Explanation Of Command

This message reports that a reset of all the DSP Application cards is complete. During the reset operation an APPL RESET IN-PROGRESS message will also be generated every 20 seconds until the reset operation is completed.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.62011]

I hh:mm:ss xy,ww APPL RESET COMPL

[O.62010]

I hh:mm:ss xy,ww APPL RESET IN PROGRESS

Explanation Of Parameters

APPL - Digital Signaling Processing Application

The following applications are currently supported:

SD111 - X.50/X.57 International Subrate application

SD311 - Digital Multipoint Bridge (DMB) application

SD411 - DDS Subrate and Multipoint Junction Unit application

AR01,MISC,ALM,CGA,LOS

AR01 MISCELLANEOUS ALARM, CGA, PBA OR LOS

Explanation Of Command

This autonomous message reports a DACS II Carrier Group Alarm (CGA) or Loss of Signal (LOS) on a facility terminated on a particular Network Processing Circuit. Once a CGA Red/LOS has been detected, DACS II inserts downstream trunk conditioning and transmits a yellow signal in the upstream direction.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.65011]

pa hh:mm:ss xy,ww AR01 MISC ALM <state> {CGA|LOS} [s]abc \
[k] COMPL

Hierarchical

[O.65011]

pa hh:mm:ss xy,ww AR01 MISC ALM <state> {CGA|LOS} uvmnp \
[k] COMPL

Explanation Of Parameters

pa - Priority of action

pa Explanation

I Information

* Minor alarm

** Major alarm

*C Critical alarm

il - Intervention level.

il Explanation

AMI Immediate maintenance action

AMD Deferred maintenance action

SI No intervention

MISC - Miscellaneous

ALM - Alarm

CGA - Carrier group alarm

LOS - Loss of signal

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The values are listed below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

state - Alarm status

<i>state</i>	<i>Explanation</i>
MJ	Major
MN	Minor
INFO	Information

k - Type of CGA alarm

k *Explanation*

A AIS - Alarm Indication Signal; also known as All Ones Signal or
 Blue Signal
B Both - Yellow and Red (Note: B is valid only for SLC® Series
 5 NPCs)
L LMA - Local Multiframe Alarm
M RMA - Remote Multiframe Alarm
R Red
Y Yellow

AR01,MISC,ALM,IDLD,CGA,LOS

ALARM IDLD

Explanation Of Command

This autonomous message indicates that the carrier group alarm (CGA) on a facility terminated on a particular network processing circuit has been cleared.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.65021]

I hh:mm:ss xy,ww AR01 MISC ALM IDLD {CGA|LOS} [s]abc[k] COMPL

Hierarchical

[O.65021]

I hh:mm:ss xy,ww **AR01 MISC ALM IDLD {CGA|LOS} uvmnp[k] COMPL**

Explanation Of Parameters

MISC - Miscellaneous

ALM - Alarm

IDLD - Idled

CGA - Carrier group alarm

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

LOS - Loss of signal

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are listed below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

k - Type of CGA alarm

k *Explanation*

A AIS - Alarm Indication Signal; also known as All Ones Signal or Blue Signal
B Both - Yellow and Red (Note: B is valid only for SLC® Series 5 NPCs)
L LMA - Local Multiframe Alarm
M RMA - Remote Multiframe Alarm
R Red
Y Yellow

AUD,PARAMS

ERROR RECOVERY

Explanation Of Command

This autonomous output message indicates the end-of-midnight report.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.81006]

I hh:mm:ss xy,ww AUD PARAMS COMPL

Explanation Of Parameters

NPC - Network processing circuit.

AUD, QRY, BER, ALL, FTU, NPCS, TOT, EOM, DS3U

RETRIEVE EVENT EQUIPMENT

Explanation Of Command

This message lists all facility terminating, DS3, and Hybrid DS3 unit network processing circuits associated with facilities exceeding bit error rate thresholds. See message I.51011 for setting those performance parameters you would like to have measured and collected. See message I.81001 for invoking output on performance parameters. Also see messages O.81001, O.81002, O.81004, and O.81005 for other output on performance parameters.

The output message for a hybrid DS3 Unit is structured differently than the output message for a non-hybrid DS3 Unit. This message is formatted, such that the values for the NPCs in each DS2 (there are seven DS2s within the DS3) are presented as a separate line. An individual DS2 may be provisioned with up to four DS1 NPCs or three E1 NPCs. If any DS2 within that DS3 is provisioned with E1 NPCs (TH type), then the output for the fourth NPC will not be present, since there is no fourth NPC.

Command

See the input command in I.81001.

Completion Message

Nonhierarchical

For a Facility Terminating Module (FTM):

[O.81003]

M hh:mm:ss xy,ww n[vv] AUD QRY BER ALL FTU NPCS [s]abc-[t]def \
TOT nnn 5 LN MSG:

XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX EOM

.
.
.

M hh:mm:ss xy,ww n[vv] AUD QRY BER ALL FTU NPCS [s]abc-[t]def \
TOT nnn 5 LN MSG:

XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX COMPL

For a DS3 module (Multiplexer):

[O.81003]

M hh:mm:ss xy,ww n[vv] AUD QRY BER ALL DS3U NPCS [s]abc-[t]def \
TOT nnn 5 LN MSG:

XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX EOM

.
.
.

M hh:mm:ss xy,ww n[vv] AUD QRY BER ALL DS3U NPCS [s]abc-[t]def \
TOT nnn 5 LN MSG:

XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX COMPL

For a Hybrid DS3 module (Hybrid Multiplexer):

[O.81003]

```
M hh:mm:ss xy,ww n[vv] AUD QRY BER ALL HDS3U NPCS [s]abc-[t]def \  
TOT nnn 8 LN MSG:  
XX XX XX XX  
XX XX XX XX  
XX XX XX XX  
XX XX XX XX  
XX XX XX XX  
XX XX XX XX  
XX XX XX XX EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] AUD QRY BER ALL HDS3U NPCS [s]abc-[t]def \  
TOT nnn 8 LN MSG:  
XX XX XX XX  
XX XX XX XX  
XX XX XX XX  
XX XX XX XX  
XX XX XX XX  
XX XX XX XX  
XX XX XX XX COMPL
```

Hierarchical

For a Facility Terminating Module (FTM):

[O.81003]

M hh:mm:ss xy,ww n[vv] AUD QRY BER ALL FTU NPCS uvmnp-uvmqr \
TOT nnn 5 LN MSG:
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX EOM

.
.
.

M hh:mm:ss xy,ww n[vv] AUD QRY BER ALL FTU NPCS uvmnp-uvmqr \
TOT nnn 5 LN MSG:
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX COMPL

For a DS3 module (Multiplexer):

[O.81003]

M hh:mm:ss xy,ww n[vv] AUD QRY BER ALL DS3U NPCS uvmnp-uvmqr \
TOT nnn 5 LN MSG:
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX EOM

.
.
.

M hh:mm:ss xy,ww n[vv] AUD QRY BER ALL DS3U NPCS uvmnp-uvmqr \
TOT nnn 5 LN MSG:
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX COMPL

For a Hybrid DS3 module (Hybrid Multiplexer):

[O.81003]

M hh:mm:ss xy,ww n[vv] AUD QRY BER ALL DS3U NPCS uvmnp-uvmqr \
TOT nnn 8 LN MSG:
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX EOM

.
.
.

M hh:mm:ss xy,ww n[vv] AUD QRY BER ALL DS3U NPCS uvmnp-uvmqr \
TOT nnn 8 LN MSG:
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX COMPL

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

For a Facility Terminating Module (FTM):

[O.81003]

**I hh:mm:ss xy,ww AUD QRY BER ALL FTU NPCS [s]abc-[t]def **
TOT nnn 5 LN MSG:
xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx EOM

.
.
.

**I hh:mm:ss xy,ww AUD QRY BER ALL FTU NPCS [s]abc-[t]def **
TOT nnn 5 LN MSG:
xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx COMPL

For a DS3 module (Multiplexer):

[O.81003]

**I hh:mm:ss xy,ww AUD QRY BER ALL DS3U NPCS [s]abc-[t]def **
TOT nnn 5 LN MSG:
xx xx xx xx xx xx xx
xx xx xx xx xx xx xx
xx xx xx xx xx xx xx
xx xx xx xx xx xx xx EOM

.
.
.

**I hh:mm:ss xy,ww AUD QRY BER ALL DS3U NPCS [s]abc-[t]def **
TOT nnn 5 LN MSG:
xx xx xx xx xx xx xx
xx xx xx xx xx xx xx
xx xx xx xx xx xx xx
xx xx xx xx xx xx xx COMPL

For a Hybrid DS3 module (Hybrid Multiplexer):

[O.81003]

I hh:mm:ss xy,ww AUD QRY BER ALL HDS3U NPCS [s]abc-[t]def \
TOT nnn 8 LN MSG:
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX EOM

.
.
.

I hh:mm:ss xy,ww AUD QRY BER ALL HDS3U NPCS [s]abc-[t]def \
TOT nnn 8 LN MSG:
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX COMPL

Hierarchical

For a Facility Terminating Module (FTM):

[O.81003]

```
I hh:mm:ss xy,ww  AUD QRY BER ALL FTU NPCS uvmnp-uvmqr \  
TOT nnn  5 LN MSG:  
XX XX XX XX XX  XX XX XX XX XX  
XX XX XX XX XX  XX XX XX XX XX  
XX XX XX XX XX  XX XX XX XX XX  
XX XX XX XX XX  XX XX XX XX XX  EOM
```

.
.
.

```
I hh:mm:ss xy,ww  AUD QRY BER ALL FTU NPCS uvmnp-uvmqr \  
TOT nnn  5 LN MSG:  
XX XX XX XX XX  XX XX XX XX XX  
XX XX XX XX XX  XX XX XX XX XX  
XX XX XX XX XX  XX XX XX XX XX  
XX XX XX XX XX  XX XX XX XX XX  COMPL
```

For a DS3 module (Multiplexer):

[O.81003]

```
I hh:mm:ss xy,ww  AUD QRY BER ALL DS3U NPCS uvmnp-uvmqr \  
TOT nnn  5 LN MSG:  
XX XX XX XX XX XX XX  
XX XX XX XX XX XX XX  
XX XX XX XX XX XX XX  
XX XX XX XX XX XX XX  EOM
```

.
.
.

```
I hh:mm:ss xy,ww  AUD QRY BER ALL DS3U NPCS uvmnp-uvmqr \  
TOT nnn  5 LN MSG:  
XX XX XX XX XX XX XX  
XX XX XX XX XX XX XX  
XX XX XX XX XX XX XX  
XX XX XX XX XX XX XX  COMPL
```

For a Hybrid DS3 module (Hybrid Multiplexer):

[O.81003]

```
I hh:mm:ss xy,ww  AUD QRY BER ALL DS3U NPCS uvmnp-uvmqr \
TOT nnn  8 LN MSG:
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX  EOM
```

.
.
.

```
I hh:mm:ss xy,ww  AUD QRY BER ALL DS3U NPCS uvmnp-uvmqr \
TOT nnn  8 LN MSG:
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX
XX XX XX XX  COMPL
```

Explanation Of Parameters

BER - Bit error rate

[s]abc - The 3- or 4-digit nonhierarchical NPC number
The first NPC in a module.

[t]def - The 3- or 4-digit nonhierarchical NPC number
The last NPC in a module.

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number
The first NPC in a range.

uvmqr - Hierarchical NPC number
The last NPC in a range.

uv - Unit number

m - Module number

np, qr - NPC number within the module

The values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

nnn - Number of NPCs with BER values greater than BER minor threshold or
number of NPCs with the parameter threshold exceeded.

xx - Alarm State

xx Explanation

CL Clear

ER Error

MJ Major

MN Minor

-- NPC is unequipped or out of service

Note: For the NPCs in Multiplexers (MXRs) or Hybrid Multiplexers (HMXRs), one output module corresponds to all the NPCs in an MXR or HMXR respectively.

AUD, QRY, BER, ALL, NPCS, TOT

AUDIT QUERY

Explanation Of Command

This message indicates all equipped facility terminating and DS3 unit or Hybrid DS3 unit network processing circuits have zero values for the BER parameter since local midnight.

The scope of this message includes FTU, DS3U and HDS3U type NPCs.

See message I.51011 for setting those performance parameters you would like to have measured and collected. Also see messages O.81001, O.81002, O.81003, and O.81004 for other output on performance parameters.

Command

Not applicable.

Completion Message

[O.81005]

M hh:mm:ss xy,ww n[vv] AUD QRY BER ALL NPCS TOT 0000 COMPL

Denial Message

Not applicable.

Autonomous Message

[O.81005]

I hh:mm:ss xy,ww AUD QRY BER ALL NPCS TOT 0000 COMPL

Explanation Of Parameters

BER - Bit error rate

ALL NPCS TOT
- Total of all NPCs

AUD,QRY,CFA,CGA,LOS

QUERY FACILITY ALARMS

Explanation Of Command

This message requests a listing of all Network Processing Circuits (NPCs) reporting a Carrier Failure Alarm (CFA), a Carrier Group Alarm (CGA), or a Loss of Signal (LOS) alarm,

For carrier group alarms the CGA and CFA keywords are alternatives and may be used interchangeably on input. However, the CFA keyword has the capability to cause a report of the alarms enabled via command I.51011.

The alarm report is followed by reports of the form [O.81002], [O.81003] and [O.81004] — if their respective parameters have been enabled as specified in Message I.51011.

The end of the report is indicated by AUD PARAMS COMPL.

For an autonomous message, the link field "n" is blank.

Command

[I.81001]

AUD:FRM xy,SEQ ww:QRY,{CFA|CGA|LOS}!

Completion Message

Nonhierarchical

USAGE: CGA report

[O.81001]

M hh:mm:ss xy,ww n[vv] AUD AR02 ALARM SUM nnnn REPORTS FOLLOW:

M hh:mm:ss xy,ww n[vv] SC ALM <state> CGA [s]abc k COMPL

.
.
.

M hh:mm:ss xy,ww n[vv] SC ALM <state> CGA [s]abc k COMPL

M hh:mm:ss xy,ww n[vv] AR01 MISC ALM <state> {CGA|CFA|LOS} [s]abc \
[k] COMPL

.
.
.

M hh:mm:ss xy,ww n[vv] AR01 MISC ALM <state> {CGA|CFA|LOS} [s]abc \
[k] COMPL

M hh:mm:ss xy,ww n[vv] AUD {CGA|CFA|LOS} END COMPL

M hh:mm:ss xy,ww n[vv] AUD PARAMS COMPL

USAGE: CFA report

[O.81001]

M hh:mm:ss xy,ww n[vv] AUD AR02 ALARM SUM nnnn REPORTS FOLLOW:

M hh:mm:ss xy,ww n[vv] SC ALM <state> CGA [s]abc k COMPL

.
.
.

M hh:mm:ss xy,ww n[vv] SC ALM <state> CGA [s]abc k COMPL

M hh:mm:ss xy,ww n[vv] AR01 MISC ALM <state> {CGA|CFA|LOS} [s]abc \
[k] COMPL

.
.
.

M hh:mm:ss xy,ww n[vv] AR01 MISC ALM <state> {CGA|CFA|LOS} [s]abc \
[k] COMPL

M hh:mm:ss xy,ww n[vv] AUD {CGA|CFA|LOS} END COMPL

Note: The above message can be followed by messages 0.81002, 0.81003 and 0.81004 if their respective parameters have been enabled by Message I.51011. Please refer to Message I.51011 for the list of presently implemented parameter audit reports.

M hh:mm:ss xy,ww n[vv] AUD PARAMS COMPL

Hierarchical

USAGE: CGA report

[O.81001]

M hh:mm:ss xy,ww n[vv] AUD AR02 ALARM SUM nnnn REPORTS FOLLOW:

M hh:mm:ss xy,ww n[vv] SC ALM <state> CGA uvmnp k COMPL

.
.
.

M hh:mm:ss xy,ww n[vv] SC ALM <state> CGA uvmnp k COMPL

M hh:mm:ss xy,ww n[vv] AR01 MISC ALM <state> {CGA|CFA|LOS} uvmnp \
[k] COMPL

.
.
.

M hh:mm:ss xy,ww n[vv] AR01 MISC ALM <state> {CGA|CFA|LOS} uvmnp \
[k] COMPL

M hh:mm:ss xy,ww n[vv] AUD {CGA|CFA|LOS} END COMPL

M hh:mm:ss xy,ww n[vv] AUD PARAMS COMPL

USAGE: CFA report

[O.81001]

M hh:mm:ss xy,ww n[vv] AUD AR02 ALARM SUM nnnn REPORTS FOLLOW:

M hh:mm:ss xy,ww n[vv] SC ALM <state> CGA uvmnp k COMPL

.
.
.

M hh:mm:ss xy,ww n[vv] SC ALM <state> CGA uvmnp k COMPL

M hh:mm:ss xy,ww n[vv] AR01 MISC ALM <state> {CGA|CFA|LOS} uvmnp \
[k] COMPL

.
.
.

M hh:mm:ss xy,ww n[vv] AR01 MISC ALM <state> {CGA|CFA|LOS} uvmnp \
[k] COMPL

M hh:mm:ss xy,ww n[vv] AUD {CGA|CFA|LOS} END COMPL

Note: The above message can be followed by messages 0.81002, 0.81003 and 0.81004 if their respective parameters have been enabled by Message I.51011. Please refer to Message I.51011 for the list of presently implemented parameter audit reports.

M hh:mm:ss xy,ww n[vv] AUD PARAMS COMPL

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.81001]

I hh:mm:ss xy,ww AUD AR02 ALARM SUM nnnn REPORTS FOLLOW:

I hh:mm:ss xy,ww SC ALM <state> CGA [s]abc k COMPL

.
.
.

I hh:mm:ss xy,ww SC ALM <state> CGA [s]abc k COMPL

I hh:mm:ss xy,ww AR01 MISC ALM <state> {CGA|CFA|LOS} [s]abc \
[k] COMPL

.
.
.

I hh:mm:ss xy,ww AR01 MISC ALM <state> {CGA|CFA|LOS} [s]abc \
[k] COMPL

I hh:mm:ss xy,ww AUD {CGA|CFA|LOS} END COMPL

I hh:mm:ss xy,ww AUD PARAMS COMPL

Hierarchical

[O.81001]

I hh:mm:ss xy,ww AUD AR02 ALARM SUM nnnn REPORTS FOLLOW:

I hh:mm:ss xy,ww SC ALM <state> CGA uvmnp k COMPL

.
.
.

I hh:mm:ss xy,ww SC ALM <state> CGA uvmnp k COMPL

**I hh:mm:ss xy,ww AR01 MISC ALM <state> {CGA|CFA|LOS} uvmnp **
[k] COMPL

.
.
.

**I hh:mm:ss xy,ww AR01 MISC ALM <state> {CGA|CFA|LOS} uvmnp **
[k] COMPL

I hh:mm:ss xy,ww AUD {CGA|CFA|LOS} END COMPL

I hh:mm:ss xy,ww AUD PARAMS COMPL

Explanation Of Parameters

CFA - Carrier failure alarm

Use this keyword to list carrier group alarms and alarms enabled by command UTL::TOD (I.51011).

CGA - Carrier group alarm

Use this keyword to list only carrier group alarms.

LOS - Loss of signal

PARAMS - Parameters

AR01 - Alarm report 1

AR02 - Alarm report 2

ALARM - Alarm

SUM - Summary

REPORTS

- Reports

FOLLOW

- Follow

NPC

- Network processing circuits

MISC

- Miscellaneous

END

- End

[s]abc

- The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The values are listed below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

nnnn - Total number of CGA/CFA reports

SC - Subscriber (loop) carrier

ALM - Alarm

state - Alarm status

state Explanation

MJ	Major
MN	Minor
INFO	Information

k - Type of alarm

<i>k</i>	<i>Explanation</i>
A	AIS - Alarm Indication Signal; also known as All Ones Signal or Blue Signal
B	Both - Yellow and Red (Note: B is valid only for SLC® Series 5 NPCs)
L	LMA - Local Multiframe Alarm
M	RMA - Remote Multiframe Alarm
R	Red
Y	Yellow

AUD,QRY,CFA,CGA,LOS

AUDIT QUERY NPC PARAMETER

Explanation Of Command

This command is used to request the value of selected facility performance parameters of all FTU or DS3U NPCs that are associated with active Carrier Group Alarms (CGAs) or Carrier Failure Alarms (CFAs). Only those parameters that were enabled by the UTL::TOD,FAC (51011) command are reported. Also see messages O.81001, O.81003, O.81004, and O.81005 for other output on performance parameters.

The output messages may be the result of executing the AUD::QRY, {CFA|CGA|LFVR|FFER} command or they may be autonomously produced.

The output messages are part of the "midnight report" parameter count section. The parameter count section appears:

- Manually: Immediately when requested by the AUD::QRY,CFA command.
- Autonomously: Daily at the time scheduled with the UTL::TOD command (default is midnight).

Sections of the output message are generated in different formats, depending on whether the NPCs are within an FTU/IFTU, a DS3U, or a hybrid DS3U.

For a hybrid DS3U the message is formatted, such that the values for the NPCs in each DS2 (there are seven DS2s within the DS3) are presented as a separate line. An individual DS2 may be provisioned with up to four DS1 NPCs or three E1 NPCs. If any DS2 within that DS3 is provisioned with E1 NPCs (TH type), then the output for the fourth NPC will not be present, since there is no fourth NPC.

Command

[I.81001]

AUD: [FRM xy, SEQ ww]: QRY, {CFA|CGA|LOS}!

Completion Message

Nonhierarchical

[O.81002]

M hh:mm:ss xy,ww n[vv] AUD QRY <parameter> ALL FTU NPCS \
[s]abc-[t]def TOT nnn 5 LN MSG:
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX EOM

.
.
.

M hh:mm:ss xy,ww n[vv] AUD QRY <parameter> ALL DS3U NPCS \
[s]abc-[t]def TOT nnn 5 LN MSG:
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX
XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX EOM

.
.
.

M hh:mm:ss xy,ww n[vv] AUD QRY <parameter> ALL HDS3U NPCS \
[s]abc-[t]def TOT nnn 8 LN MSG:
hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx
hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx
hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx
hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx
hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx
hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx
hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx hxxxxxxxxx COMPL

Hierarchical

[O.81002]

M hh:mm:ss xy,ww n[vv] AUD QRY <parameter> ALL FTU NPCS \
uvmnp-uvmqr TOT nnn 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM
.
.
.

M hh:mm:ss xy,ww n[vv] AUD QRY <parameter> ALL DS3U NPCS \
uvmnp-uvmqr TOT nnn 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM
.
.
.

M hh:mm:ss xy,ww n[vv] AUD QRY <parameter> ALL HDS3U NPCS \
uvmnp-uvmqr TOT nnn 8 LN MSG:
xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx xxxxxxxxxxxx COMPL

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.81002]

```
I hh:mm:ss xy,ww  AUD QRY <parameter> ALL FTU NPCS \
[s]abc-[t]def TOT nnn 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM
.
.
.
```

```
I hh:mm:ss xy,ww  AUD QRY <parameter> ALL DS3U NPCS \
[s]abc-[t]def TOT nnn 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM
.
.
.
```

```
I hh:mm:ss xy,ww  AUD QRY <parameter> ALL HDS3U NPCS \
[s]abc-[t]def TOT nnn 8 LN MSG:
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx COMPL
```

Hierarchical

[O.81002]

```
I hh:mm:ss xy,ww  AUD QRY <parameter> ALL FTU NPCS \
uvmnp-uvmqr TOT nnn  5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx  xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx  xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx  xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx  xxxxx xxxxx xxxxx xxxxx xxxxx  EOM
.
.
.
```

```
I hh:mm:ss xy,ww  AUD QRY <parameter> ALL DS3U NPCS \
uvmnp-uvmqr TOT nnn  5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx  xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx  xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx  xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx  xxxxx xxxxx  EOM
.
.
.
```

```
I hh:mm:ss xy,ww  AUD QRY <parameter> ALL HDS3U NPCS \
uvmnp-uvmqr TOT nnn  8 LN MSG:
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx
xxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx xxxxxxxxxxx  COMPL
```

Explanation Of Parameters

parameter

- Facility performance parameter

For DS1 signal (Not applicable to DA or TA type NPCs):

<i>parameter</i>	<i>Explanation</i>
OOF	Out Of Frame
SLIP	Slip counts
ERS	Errored Seconds
SERS	Severely Errored Seconds
COFA	Change Of Frame Alignment
BPV	Bipolar Violation
SANE	Shelf Alarm Near End
SAFE	Shelf Alarm Far End

For TH type NPCs:

<i>parameter</i>	<i>Explanation</i>
CRC	CRC Block Errors
FRER	Framing Errors
OFS	Out of Frame Seconds
ES	Errored Seconds
SES	Severely Errored Seconds
CSS	Controlled Slip Seconds
CV	Coding Violations
UAS	Unavailable Seconds
UATC	Unavailable Time Count
MER	Multiframe Errors

Note: For TH type NPCs, only the daily parameters will be output by this message.

[s]abc - The 3- or 4-digit nonhierarchical NPC number, the first NPC in a module.

[t]def - The 3- or 4-digit nonhierarchical NPC number, the last NPC in a module.

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number, the first NPC in a module.

uvmqr - Hierarchical NPC number, the last NPC in a module.

uv - Unit number
m - Module number
np, qr - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

TOT - Total

nnn - Cumulative total number of NPCs in the module

A module is either an FTM or a Multiplexer on a DS3U with the specified facility performance parameter value greater than 0.

One DS3U output module contains the information about NPCs on one Multiplexer.

xxxxx - Facility performance parameter value (00000 through 65536)

This value is used when there is no TH type NPC provisioned.

h - Thresholding Mode for TH type NPCs.

<i>h</i>	<i>Explanation</i>

I	Inhibited

A	Allowed

If the count of a common parameter, that is, CRC, FRER or MER, is to be output, a dash ("-") will be output in this field for a non-TH type NPC within a hybrid DS3U with mixed NPC types.

xxxxxxxxxx

- Facility performance parameter value for TH type NPCs
(000000000 through 345600000)

AUD, QRY, CFA, CGA, LOS

AUDIT QUERY FACILITY PERFORMANCE PARAMETERS

Explanation Of Command

This message indicates all equipped facility terminating, DS3 unit and Hybrid DS3 unit (HDS3U) network processing circuits have zero values for a specified facility performance parameter since local midnight. See message I.51011 for setting those performance parameters you would like to have measured and collected. Also see messages O.81001, O.81002, O.81003, and O.81005 for other output on performance parameters.

Command

[I.81001]

AUD: [FRM xy, SEQ ww]: QRY, {CFA|CGA|LOS}!

Completion Message

[O.81004]

**M hh:mm:ss xy, ww n[vv] AUD QRY <parameter> ALL NPCS TOT 000 **
COMPL

Denial Message

Not applicable.

Autonomous Message

[O.81004]

I hh:mm:ss xy,ww **AUD QRY** <parameter> **ALL NPCS TOT 000 **
COMPL

Explanation Of Parameters

CFA - Carrier failure alarm
CGA - Carrier group alarm

ALL - All

NPCS - Network processing circuits

TOT - Total

Total of all NPCs

parameter

- Facility performance parameter

For DS1 signal:

<i>parameter</i>	<i>Explanation</i>
OOF	Out Of Frame
SLIP	Slip counts
ERS	Errored Seconds
SERS	Severely Errored Second
COFA	Change Of Frame Alignment
BPV	Bipolar Violation
SANE	Shelf Alarm Near End
SAFE	Shelf Alarm Far End

For TH type NPCs:

<i>parameter</i>	<i>Explanation</i>
CRC	CRC Block Errors
FRER	Framing Errors
OFS	Out of Frame Seconds
ES	Errored Seconds
SES	Severely Errored Seconds
CSS	Controlled Slip Seconds
UAS	Unavailable Seconds
UATC	Unavailable Time Count
MER	Multiframe Errors

Contents

BADVERB,BAD,SYNTAX,STOPPED	7-2
■ Explanation Of Command	7-2
■ Command	7-2
■ Completion Message	7-2
■ Denial Message	7-2
■ Autonomous Message	7-2
■ Explanation Of Parameters	7-3
BADVERB,CMD,INERR,STOPPED	7-4
■ Explanation Of Command	7-4
■ Command	7-4
■ Completion Message	7-4
■ Denial Message	7-4
■ Autonomous Message	7-5
■ Explanation Of Parameters	7-5
BCON,FROM,TO,NTR,LPD,CONV,CUS,INCL,RDC	7-7
■ Explanation Of Command	7-7
■ Command	7-8
■ Nonhierarchical	7-8
■ Hierarchical	7-8
■ Completion Message	7-8
■ Nonhierarchical	7-8
■ Hierarchical	7-8
■ Denial Message	7-9
■ Nonhierarchical	7-9
■ Hierarchical	7-9
■ Autonomous Message	7-9

Contents

■ Explanation Of Parameters	7-10
BCON, FROM, TO, RDC, CUS, INCL, NTR, LPD, CONV	7-20
■ Explanation Of Command	7-20
■ Command	7-20
■ Nonhierarchical	7-20
■ Hierarchical	7-20
■ Completion Message	7-21
■ Nonhierarchical	7-21
■ Hierarchical	7-21
■ Denial Message	7-21
■ Nonhierarchical	7-21
■ Hierarchical	7-21
■ Autonomous Message	7-21
■ Explanation Of Parameters	7-22
BCON, FROM, TOX, NTR, LPD, CONV, CUS, INCL	7-30
■ Explanation Of Command	7-30
■ Command	7-31
■ Nonhierarchical	7-31
■ Hierarchical	7-31
■ Completion Message	7-31
■ Nonhierarchical	7-31
■ Hierarchical	7-31
■ Denial Message	7-32
■ Nonhierarchical	7-32
■ Hierarchical	7-32
■ Autonomous Message	7-32
■ Explanation Of Parameters	7-33
BCON, FROM, TOX, RDC, CUS, INCL, NTR, LPD	7-44
■ Explanation Of Command	7-44
■ Command	7-44
■ Nonhierarchical	7-44
■ Hierarchical	7-44
■ Completion Message	7-45
■ Nonhierarchical	7-45
■ Hierarchical	7-45
■ Denial Message	7-45
■ Nonhierarchical	7-45
■ Hierarchical	7-45

Contents

■ Autonomous Message	7-45
■ Explanation Of Parameters	7-46
BDIS,FROM,TO,CONV,OOS,DCC,INCL	7-54
■ Explanation Of Command	7-54
■ Command	7-54
■ Nonhierarchical	7-54
■ Hierarchical	7-54
■ Completion Message	7-54
■ Nonhierarchical	7-54
■ Hierarchical	7-55
■ Denial Message	7-55
■ Nonhierarchical	7-55
■ Hierarchical	7-55
■ Autonomous Message	7-55
■ Explanation Of Parameters	7-56
BDIS,FROM,TO,OOS,INCL,CONV	7-64
■ Explanation Of Command	7-64
■ Command	7-64
■ Nonhierarchical	7-64
■ Hierarchical	7-64
■ Completion Message	7-64
■ Nonhierarchical	7-64
■ Hierarchical	7-65
■ Denial Message	7-65
■ Nonhierarchical	7-65
■ Hierarchical	7-65
■ Autonomous Message	7-65
■ Explanation Of Parameters	7-65
BDIS,FROM,TOX,CONV,OOS,DCC,INCL	7-74
■ Explanation Of Command	7-74
■ Command	7-74
■ Nonhierarchical	7-74
■ Hierarchical	7-75
■ Completion Message	7-75
■ Nonhierarchical	7-75
■ Hierarchical	7-75
■ Denial Message	7-75
■ Nonhierarchical	7-75

Contents

■ Hierarchical	7-76
■ Autonomous Message	7-76
■ Explanation Of Parameters	7-76
BDIS,FROM,TOX,OOS,INCL,CONV	7-84
■ Explanation Of Command	7-84
■ Command	7-84
■ Nonhierarchical	7-84
■ Hierarchical	7-84
■ Completion Message	7-85
■ Nonhierarchical	7-85
■ Hierarchical	7-85
■ Denial Message	7-85
■ Nonhierarchical	7-85
■ Hierarchical	7-85
■ Autonomous Message	7-85
■ Explanation Of Parameters	7-86
BOOT,FAILED,BAD,DEVICE	7-93
■ Explanation Of Command	7-93
■ Command	7-93
■ Completion Message	7-93
■ Denial Message	7-93
■ Autonomous Message	7-93
■ Explanation Of Parameters	7-94
BOOT,FROM,PMEM,FAILED,ATTEMPTING,TO	7-95
■ Explanation Of Command	7-95
■ Command	7-95
■ Completion Message	7-95
■ Denial Message	7-95
■ Autonomous Message	7-95
■ Explanation Of Parameters	7-96
BOOT,FROM,PMEM,SMEM	7-97
■ Explanation Of Command	7-97
■ Command	7-97
■ Completion Message	7-97
■ Denial Message	7-97
■ Autonomous Message	7-97
■ Explanation Of Parameters	7-98

Contents

BX2,STF,ATP	7-99
■ Explanation Of Command	7-99
■ Command	7-99
■ Completion Message	7-99
■ Denial Message	7-99
■ Autonomous Message	7-99
■ Explanation Of Parameters	7-100

BADVERB — BX2

BADVERB — BX2

This section documents the commands **BADVERB** through **BX2**.

BADVERB,BAD,SYNTAX,STOPPED

INPUT DENIAL

Explanation Of Command

Processing of the input message is **STOPPED** because the action verb is unrecognized (**BADVERB**) or the frame or sequence number is incorrect (**FRMERR** or **SEQERR**).

Output from this command is sent only to the link on which the command was input.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01101]

M hh:mm:ss xy,ww n[vv] {BADVERB|FRMERR|SEQERR} BAD SYNTAX \
e LN MSG:
First 70 characters of input message.
Remaining text of input message STOPPED

Explanation Of Parameters

BADVERB

- Bad verb

The action verb was not recognized.

FRMERR

- Frame error

Incorrect frame number

SEQERR

- Sequence error

Incorrect sequence number

BAD

- Bad

STOPPED

- Stopped

SYNTAX

- Syntax

e

- Number of lines in the message

BADVERB,CMD,INERR,STOPPED

INPUT DENIAL

Explanation Of Command

If the message reports STOPPED it means that the input command has been stopped or has been denied processing.

If the message reports DNY it means that an attempt has been made to execute an unlicensed or inactive command.

Note that the error field, action verb, and category are optional; a reason will always be given.

Attempts to address entities (units and NPCs) dependent upon nonconfigured units will result in the following message:

BAD ARG CONFIG ERR.

Output from this command is sent only to the link on which the command was input.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01131.01]

M hh:mm:ss xy,ww n[vv] [<BADVERB|FRMERR|SEQERR|CMD>|<actverb>] \\
[<INERR>] <reason> e LN MSG:
<First 70 characters of input message.>
[<Text continued from input message>]
<Remaining text of input message> {STOPPED|DNY}

Explanation Of Parameters

BADVERB

- Bad verb

The action verb was not recognized

FRMERR

- Frame error

Incorrect frame number

SEQERR

- Sequence error

Incorrect sequence number

actverb

- Action verb

A valid action verb of the stopped or denied command

CMD

- Command

Other command error

INERR - Input error

STOPPED

- Stopped

e

- Number of lines in the message

reason - Reason for stop or denial

reason

Explanation

BAD ARG

Bad argument

BAD ARG CONFIG ERR

Bad argument and configuration error; attempted to address entities such as units and Network Processing Circuits (NPCs) dependent on non-configured units

BAD SYNTAX

Bad syntax

CMD NOT ALLOWED

Command is not allowed in a macro or alternative map

RESTRICTED

Command is restricted to frame administrator only

ERR CMD ABT

Command error and aborted

INACT

Command is for a feature package which currently is inactive

MC OOS,MCOND,INSERVICE

Main Controller is out-of-service, maintenance condition, or in-service

RANGE ERROR

Range error

BCON, FROM, TO, NTR, LPD, CONV, CUS, INCL, RDC

BROADCAST CROSS-CONNECTION

Explanation Of Command

This command adds a single tributary leg to a broadcast cross-connection. It cross-connects the tributary to the indicated source.

It can be used to create a new one-way cross-connection from an existing broadcast source to the specified tributary channel. It can also be used to convert an existing two-way, two-point cross-connection to a broadcast cross-connection while adding a new tributary leg.

Data received on the broadcast tributary leg is discarded because a one-way cross-connection is created. Only data from the full tributary leg is returned to the broadcast source.

The FROM end field designates the conference backbone (source). The optional range fields indicate the conference width.

The allowable range is from 01 to 24 channels.

The FROM end will receive return data from the TO end, if and only if

- the TO end is the initial connection (first tributary), and
- the FROM end is not provisioned with the LPD or NTR keywords.

The field in the TO end designates the tributary. The width of the tributary is indicated by a range designation and must match the backbone width. If necessary, more tributaries can be added by subsequent broadcast cross-connect commands. Received data from broadcast-only TO terminations will be dead-ended as it enters DACS II.

Note: Broadcast cross-connections are not allowed from or to the 24th channel of a DS1 using the T1DM framing format.

Command

Nonhierarchical

[I.13002]

BCON:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk]\
<tc>[, {NTR|LPD|CONV}][, {CUS|INCL}][, RDC]!

Hierarchical

[I.13002]

BCON:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\
<tc>[, {NTR|LPD|CONV}][, {CUS|INCL}][, RDC]!

Completion Message

Nonhierarchical

[O.13002]

M hh:mm:ss xy,ww n[vv] BCON [s]abcddd[-eee],[t]ghijjj[-kkk] \
2 LN MSG:
<tc>[{NTR|LPD|CONV}][CUS][RDC] COMPL

Hierarchical

[O.13002]

M hh:mm:ss xy,ww n[vv] BCON uvmnpddd[-eee],wxkqrjjj[-kkk] \
2 LN MSG:
<tc>[{NTR|LPD|CONV}][CUS][RDC] COMPL

Denial Message

Nonhierarchical

[O.13002.01]

M hh:mm:ss xy,ww n[vv] BCON [s]abcddd[-eee],[t]ghijjj[-kkk] \\
2 LN MSG:
[[t]wxyzzz] cc BCAST DNY

[O.13002.02]

M hh:mm:ss xy,ww n[vv] BCON [s]abcddd[-eee],[t]ghijjj[-kkk] \\
2 LN MSG:
[[t]wxyzzz] COND cc DNY

Hierarchical

[O.13002.01]

M hh:mm:ss xy,ww n[vv] BCON uvmnpddd[-eee],wxkqrjjj[-kkk] \\
2 LN MSG:
[opjstzzz] cc BCAST DNY

[O.13002.02]

M hh:mm:ss xy,ww n[vv] BCON uvmnpddd[-eee],wxkqrjjj[-kkk] \\
2 LN MSG:
[opjstzzz] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From

TO - To

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number
wxkqr - Hierarchical TO NPC number

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

The values are listed below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ddd,
jjj - Channel numbers for beginning of channel range
eee,
kkk - Channel numbers for end of channel range

001 through 024

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

tc - Trunk conditioning

The desired cross-connected signaling and insertion word applied when a failure occurs. The signaling and the insertion word specification are entered separately, with a comma as the delimiter.

The following signaling options are allowed:

<i>signaling</i>	<i>Explanation</i>
TC(ijkl,mnop)	2-way, 4-state signaling in binary. For ESF type framing format, software will expand 4-state to 16-state by duplicating the format on the remaining frames on a superframe.
TC(efghijkl,mnopqrst)	2-way, 16-state in binary. Only valid for ESF framing formats.
TC(X'ab,X'cd)	2-way, 16-state in hexadecimal. Only valid for ESF framing formats.
TRSP	Transparent, no signaling.

The following insertion word options are allowed:

<i>insertion word</i>	<i>Explanation</i>
IW X'pq	The 8-bit pattern corresponding to the hexadecimal value of pq will be inserted in the downstream direction of a failure on either line.
TRB	Standard trouble code, equal to IW X'E4.
MUX	MUX out of sync code, equal to IW X'1A.

Note: In a gateway application, when E1 channels are connected to T1 channels, the following rules apply to the transmittal of the Insertion Word (IW) towards the facility. If the Insertion Word needs to be transmitted towards the facility as a result of consequent action, then the Insertion Word transmitted by the T1 NPC towards its transmission facility is the Insertion Word specified in this command; however, the Insertion Word transmitted by the E1 NPC towards its facility is always X'FF.

NTR - No Transmit

All tributaries are broadcast only. There is no return path to the source.

LPD - Looped.

The source loops its broadcast back to itself. All the tributaries are broadcast only.

CONV - Convert

CONV is given to convert a two-way, two-point circuit to a broadcast circuit.

The first termination (NPC and channel) listed in the input message is the FROM (or source) termination in the current two-point connection. The termination next following in the command is the full tributary leg to be added in the conversion to a broadcast connection.

If the range fields eee and kkk are used, the entire width of the conference tributaries must be indicated.

CUS - Customer

Indicates a customer controlled circuit

RDC - Red circuit

This keyword will cause the associated circuit to be flagged as a red circuit.

INCL - Inclusive

To connect a circuit or range of circuits including one or more circuits previously marked as Customer Controlled, use the INCL (inclusive) option. If this option is not used, the message will be denied if any circuits in the range are customer controlled. INCL is not needed to connect a circuit or circuits previously marked as Red Circuits.

[t]wxy

- The 3- or 4-digit nonhierarchical NPC number involved in the denial, otherwise the same as [s]abc

opjst - Hierarchical NPC number involved in the denial, otherwise the same as uvmnp.

zzz - Channel number involved in the denial; otherwise, the same as ddd.

BCAST - Denial specific to broadcast conferences.

COND - Condition

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
01		Invalid range for specified NPC type
03		No RDC or CUS circuits and INCL keyword used
04		No NPC's out of service and OOS keyword used
05		Invalid use of CONV keyword
06		Invalid range for specified FROM NPC type
10		NPC out of service or failed
11		NPC not equipped
12		Active CCN side not IS or failed or pested or hardware OOS
13		UNIT not equipped, not in service, or failed
14		CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15		FTMI not equipped, not in service, or failed
16		FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17		TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
20		Line format types are incompatible
21		Trunk conditioning is invalid
22		FMC cannot be cross-connected in this format
30		Termination is already assigned
32		Termination is under test
34		Termination is under customer control (CUS)
35		Termination is protected (RDC)
36		Termination is not connected as indicated
50		Trunk conditioning doesn't match that of conference
51		CUS flag doesn't match that of conference
52		RDC flag doesn't match that of conference
53		TO side of two-way to be converted is not an FTU NPC
54		Conversion leg is terminated
55		Width of existing two way does not match conference width
56		FROM is a two-way and no CONV specified
57		FROM is not a backbone leg
58		Specified width does not match existing conference width
59		NTR invalid since existing conference is not already NTR
5A		LPD invalid since existing conference is not already LPD
1A		Required FLI not equipped, not in service, or failed
1B		Required MXR not equipped, not in service, or failed
1C		Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D		Required MIU not equipped, not in service, or failed

cc	st	<i>Explanation</i>
95		Range overlapping between FROM and TO or between two TOs
D0		FROM NPC is not provisioned as DGA
D1		TO NPC is not provisioned as DGA
D3		Corresponding NPC for FROM virtual channel is not provisioned
D4		Corresponding NPC for TO virtual channel is not provisioned
D6		Invalid FROM channel number
D7		Invalid TO channel number
D9		Invalid FROM channel number range
DA		Invalid TO channel number range
DC		A loopback is active on the FROM termination
E3		Attempt to broadcast a locally switched channel
E8		SC invalid for cross-connection specified
E9		MUX or TRB invalid for cross-connection specified
EA		AIS invalid for cross-connection specified
EB		NAM invalid for cross-connection specified
EC		Invalid channel 000 cross-connection specified
ED		Invalid channel 031 cross-connection specified
70	MCOND	NPC invalid type
85		Using the 24th channel of a T1DM NPC
FF		Termination is in process of being rolled
E0		ETSI not equipped, not in service, or failed
4A		Channel part of a TP or TG
st	d	<i>Explanation</i>
ROLL	{F T B}	Circuit is involved in a roll

BCON, FROM, TO, RDC, CUS, INCL, NTR, LPD, CONV

BROADCAST CONNECT

Explanation Of Command

This message connects a new broadcast circuit from a non-channelized source network processing circuit (NPC) to a single non-channelized tributary. It also adds a single non-channelized tributary to an existing conference.

This message also adds the indicated tributary and converts (CONV) a two-way, two-point circuit to a broadcast conference.

When a failure occurs or during an alarm state, the alarm-indication signal (AIS or all ones signal) is transmitted to the failed tributaries or to all tributaries if the source NPCs fail. If the failure occurs during the execution of this command, it is canceled and no broadcast circuit is set up.

Command

Nonhierarchical

[I.13021]

**BCON:FRM xy,SEQ ww:FROM [s]abc,TO [t]def[,RDC][,{CUS|INCL}]\
[, {NTR|LPD|CONV}]!**

Hierarchical

[I.13021]

**BCON:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,RDC][,{CUS|INCL}]\
[, {NTR|LPD|CONV}]!**

Completion Message

Nonhierarchical

[O.13021]

M hh:mm:ss xy,ww n[vv] BCON [s]abc,[t]def[RDC][{CUS|INCL}\
[{NTR|LPD|CONV}] COMPL

Hierarchical

[O.13021]

M hh:mm:ss xy,ww n[vv] BCON uvmnp,wxkqr[RDC][{CUS|INCL}]\
[{NTR|LPD|CONV}] COMPL

Denial Message

Nonhierarchical

[O.13021.01]

M hh:mm:ss xy,ww n[vv] BCON [s]abc,[t]def[[t]ghi] cc <st> DNY

Hierarchical

[O.13021.01]

M hh:mm:ss xy,ww n[vv] BCON uvmnp,wxkqr[edfhg] cc <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From termination

TO - To termination

[s]abc - The 3- or 4-digit non-hierarchical non-channelized source (backbone)
NPC number

[t]def - The 3- or 4-digit non-hierarchical non-channelized tributary NPC
number

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical number of non-channelized source NPC
wxkqr - Hierarchical number of non-channelized tributary NPC

uv, wx - Unit number
m, k - Module number
np, qr - NPC number

The values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

Note: An NPC cannot be broadcast-connected to itself. The desired effect can be achieved by specifying the LPD option.

RDC - Red circuit

CUS - Customer
Customer-controlled circuit

INCL - Inclusive

The INCL keyword will remove CUS marking

NTR - No transmit

No transmit or return path, the tributary is broadcast only

LPD - Looped

One signal is looped back to source

If neither the NTR nor LPD keyword is specified and the broadcast conference is being established for the first time, the tributary is a full tributary, capable of transmitting back to the source; if the source has been previously established then the tributary is broadcast only.

CONV - Convert

CONV is given to convert a two-way, two-point circuit to a broadcast circuit.

The first termination (NPC and channel) listed in the input message is the FROM (or source) termination in the current two-point connection. The termination next following in the command is the full tributary leg to be added in the conversion to a broadcast connection.

[t]ghi - The 3- or 4-digit backbone leg (bbl) or tributary NPC number causing denial

edfhg - Hierarchical number of the backbone leg or tributary NPC causing denial

st - Status

Status of denial

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
01	RNGIE	Invalid range for specified NPC type
03	INERR	No RDC or CUS circuits and INCL keyword used
05	BCAST	Invalid use of CONV keyword
06		Invalid range for specified FROM NPC type
10	MCOND	NPC out of service or failed
11	MCOND	NPC not equipped
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS

cc	st	<i>Explanation</i>
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
30	MCOND	Termination is already assigned
32	MCOND	Termination is under test
33	MCOND	Termination is a test port
34	MCOND	Termination is under customer control (CUS)
35	MCOND	Termination is protected (RDC)
36		Termination is not connected as indicated
50	INERR	Trunk conditioning doesn't match that of conference
51	INERR	CUS flag doesn't match that of conference
52	INERR	RDC flag doesn't match that of conference
53	INERR	TO side of two-way to be converted is not an FTU NPC
54	INERR	Conversion leg is terminated
55	INERR	Width of existing two way does not match conference width
56	INERR	FROM is a two-way and no CONV specified
57	BCAST	FROM is not a backbone leg
58	INERR	Specified width does not match existing conference width
59	INERR	NTR invalid since existing conference is not already NTR
5A	INERR	LPD invalid since existing conference is not already LPD
62	INERR	NPC type mismatch
63	INERR	NPC is a channelized NPC
64	INERR	NPC is a non-channelized NPC
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
95	MCOND	Range overlapping between FROM and TO or between two TOs
DF	INERR	Unmatched channel range
70	MCOND	NPC invalid type
FF	ROLL	Termination is in process of being rolled
E0	MCOND	ETSI not equipped, not in service, or failed

BCON, FROM, TOX, NTR, LPD, CONV, CUS, INCL

BROADCAST CROSS-CONNECTIONS

Explanation Of Command

This command sets up a broadcast from a source (FROM) NPC to up to eight tributary (TO) receiving NPCs in the same broadcast. This message is also used to add multiple TOs to an existing broadcast connection based on the specified FROM. Each of the TOs will be connected to the specified FROM. There will be at most eight TOs allowed in the argument list to the TO keyword. Note that no channel range can be specified on the TO arguments.

The channel range from 001 to 024 channels is determined by the range given for the FROM.

The **FROM** field designates the source termination. The optional range field **[-eee]** indicates the width of the conference backbone

The allowable width ranges from 001 to 024 channels and must be the same as the width of the existing conference backbone (if any).

The fields following the SOURCE designation assign the tributaries to be connected to the backbone. Although a conference may have any number of tributaries (limited only by frame configuration), at most eight at a time may be added using this command.

More tributaries can be added by subsequent **BCON** commands. Each specified tributary will have the same range width as the backbone.

If a command attempts to cross-connect a channel to the 24th channel of a DS1 provisioned with the T1DM format, the command will be denied.

Command

Nonhierarchical

[I.13001]

```
BCON:FRM xy,SEQ ww:FROM [s]abcddd[-eee],\  
TOX ([t]ghijjj[, [t]klmnnn, ...]),<tc>[, {NTR|LPD|CONV}]  
[, {CUS|INCL}][, RDC]!
```

Hierarchical

[I.13001]

```
BCON:FRM xy,SEQ ww:FROM uvmnpddd[-eee],\  
TOX (wxkqrjjj[, edhfgnnn, ...]),<tc>[, {NTR|LPD|CONV}]\  
[, {CUS|INCL}][, RDC]!
```

Completion Message

Nonhierarchical

[O.13001]

```
M hh:mm:ss xy,ww n[vv] BCON [s]abcddd[-eee] 3 LN MSG:  
TOX [t]ghijjj[, [u]klmnnn, ...]  
<tc>[ {NTR|LPD|CONV}][ {CUS|INCL}][ RDC] COMPL
```

Hierarchical

[O.13001]

```
M hh:mm:ss xy,ww n[vv] BCON uvmnpddd[-eee] 3 LN MSG:  
TOX wxkqrjjj[, edhfgnnn, ...]  
<tc>[ {NTR|LPD|CONV}][ {CUS|INCL}][ RDC] COMPL
```

Denial Message

Nonhierarchical

[O.13001.01]

M hh:mm:ss xy,ww n[vv] BCON [s]abcddd[-eee] 3 LN MSG:
TOX [t]ghijjj[, [t]klmnnn, ...]
[[t]wxyz] cc BCAST DNY

[O.13001.02]

M hh:mm:ss xy,ww n[vv] BCON [s]abcddd[-eee] 3 LN MSG:
TOX [t]ghijjj[, [t]klmnnn, ...]
[[t]wxyz] COND cc DNY

Hierarchical

[O.13001.01]

M hh:mm:ss xy,ww n[vv] BCON uvmnpddd[-eee] 3 LN MSG:
TOX wxkqrjjj[, edhfgnnn, ...]
[opjstzzz] cc BCAST DNY

[O.13001.02]

M hh:mm:ss xy,ww n[vv] BCON uvmnpddd[-eee] 3 LN MSG:
TOX wxkqrjjj[, edhfgnnn, ...]
[opjstzzz] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From

The FROM field is the source termination.

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number
[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number
[u]klm - The 3- or 4-digit nonhierarchical TO NPC number

The values are as follows:

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

edhfg - Hierarchical TO NPC number within a range of NPC numbers

uv, wx, ed

- Unit number

m, k, h - Module number

np, qr, fg

- NPC number within the module

The values are listed below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number

Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ddd - FROM channel number

eee - FROM channel number denoting the end of the range

jjj - TO channel number

nnn - TO channel number denoting the end of the range

001 through 024

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)
 049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
 001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
 025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
 049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
 073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
 001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
 025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
 049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
 073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

The optional range field *eee* indicates the width of the conference backbone. The range field must not be repeated on the tributary legs' specification. A termination cannot be broadcast connected to itself. The desired effect can be reached by specifying the LPD option. If this message is used to add tributary legs, the width must be the same as the width of the existing conference backbone. However, a conference can have an unlimited number of tributaries, limited only by the frame configuration. More tributaries can be added by subsequent commands.

tc - Trunk conditioning

tc represents the desired cross-connected signaling and insertion word applied when a failure occurs. The signaling and the insertion word specification are entered separately, with a comma as the delimiter, which have the following form:

<tc_sig>,<tc_iw>

The following signaling options are allowed:

<i>tc_sig</i>	<i>Explanation</i>
TC(ijkl,mnop)	2-way, 4-state signaling in binary. For ESF type framing format, software will expand 4-state to 16-state by duplicating the format on the remaining frames on a superframe.
TC(efghijkl,mnopqrst)	2-way, 16-state in binary. Only valid for ESF and CEPT framing formats.
TC(X'ab,X'cd)	2-way, 16-state in hexadecimal. Only valid for ESF and CEPT framing formats.
TRSP	Transparent, no signaling.

The following insertion word options are allowed:

<i>tc_iw</i>	<i>Explanation</i>
IW X'pq	The 8-bit pattern corresponding to the hexadecimal value of pq will be inserted in the downstream direction of a failure on either line.
TRB	Standard trouble code, equal to IW X'E4, not valid for CEPT.
MUX	MUX out of sync code, equal to IW X'1A, not valid for CEPT.
Omitted	Only valid for CEPT, will default to IW-X-FF.

Note: In a gateway application, when E1 channels are connected to T1 channels, the following rules apply to the transmittal of the Insertion Word (IW) towards the facility. If the Insertion Word needs to be transmitted towards the facility as a result of consequent action, then the Insertion Word transmitted by the T1 NPC towards its transmission facility is the Insertion Word specified in this command; however, the Insertion Word transmitted by the E1 NPC towards its facility is always X'FF.

NTR - No transmit

All tributaries are broadcast only. There is no return path to the source.

LPD - Looped

The source loops its broadcast back to itself. All the tributaries are broadcast only.

If neither NTR nor LPD is used, and the source (FROM abcd[ddd[-eee]]) is being established for the first time, ghijj is a full tributary, capable of transmitting back to the source. If the source has been previously established, all tributaries are broadcast only.

CONV - Convert

CONV is given to convert a two-way, two-point circuit to a broadcast circuit.

The first termination (NPC and channel) listed in the input message is the FROM (or source) termination in the current two-point connection. The termination next following in the command is the full tributary leg to be added in the conversion to a broadcast connection. Additional legs may be added simultaneously by specifying additional terminations.

CUS - Customer

Indicates a Customer-controlled Circuit

RDC - Red circuit

This keyword will cause the associated circuits to be flagged as red circuits.

INCL - Inclusive

To connect a circuit or range of circuits including one or more circuits previously marked as customer controlled, use the INCL (inclusive) option. If this option is not used, the message will be denied if any circuits in the range are customer controlled. INCL is not needed to connect a circuit or circuits previously marked as red circuits.

[t]wxy - NPC number involved in the denial; otherwise, the same as [s]abc.

zzz - Channel number involved in the denial; otherwise, the same as ddd.

opjst - Hierarchical NPC number involved in the denial, otherwise the same as uvmnp

BCAST - Denial specific to broadcast conferences

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
01		Invalid range for specified NPC type
03		No RDC or CUS circuits and INCL keyword used
04		No NPC's out of service and OOS keyword used
05		Invalid use of CONV keyword
06		Invalid range for specified FROM NPC type
10		NPC out of service or failed
11		NPC not equipped
12		Active CCN side not IS or failed or pested or hardware OOS
13		UNIT not equipped, not in service, or failed
14		CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15		FTMI not equipped, not in service, or failed
16		FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17		TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
20		Line format types are incompatible
21		Trunk conditioning is invalid
22		FMC cannot be cross-connected in this format
30		Termination is already assigned

cc	st	<i>Explanation</i>
32		Termination is under test
34		Termination is under customer control (CUS)
35		Termination is protected (RDC)
36		Termination is not connected as indicated
50		Trunk conditioning doesn't match that of conference
51		CUS flag doesn't match that of conference
52		RDC flag doesn't match that of conference
53		TO side of two-way to be converted is not an FTU NPC
54		Conversion leg is terminated
55		Width of existing two way does not match conference width
56		FROM is a two-way and no CONV specified
57		FROM is not a backbone leg
58		Specified width does not match existing conference width
59		NTR invalid since existing conference is not already NTR
5A		LPD invalid since existing conference is not already LPD
1A		Required FLI not equipped, not in service, or failed
1B		Required MXR not equipped, not in service, or failed
1C		Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D		Required MIU not equipped, not in service, or failed
95		Range overlapping between FROM and TO or between two TOs
D0		FROM NPC is not provisioned as DGA
D1		TO NPC is not provisioned as DGA
D3		Corresponding NPC for FROM virtual channel is not provisioned
D4		Corresponding NPC for TO virtual channel is not provisioned
D6		Invalid FROM channel number
D7		Invalid TO channel number
D9		Invalid FROM channel number range
DA		Invalid TO channel number range
DC		A loopback is active on the FROM termination
E3		Attempt to broadcast a locally switched channel
E8		SC invalid for cross-connection specified
E9		MUX or TRB invalid for cross-connection specified
EA		AIS invalid for cross-connection specified
EB		NAM invalid for cross-connection specified
EC		Invalid channel 000 cross-connection specified
ED		Invalid channel 031 cross-connection specified
70	MCOND	NPC invalid type
85		Using the 24th channel of a T1DM NPC
FF		Termination is in process of being rolled
E0		ETSI not equipped, not in service, or failed
4A		Channel part of a TP or TG

st	d	Explanation
ROLL	{F T B}	Circuit is involved in a roll

BCON, FROM, TOX, RDC, CUS, INCL, NTR, LPD

BROADCAST CONNECT

Explanation Of Command

This message cross connects a new broadcast circuit from a non-channelized source network processing circuit (NPC) to up to eight non-channelized tributaries. The NPCs can belong to different units. This message can be used to add up to eight non-channelized tributaries to an existing conference.

This message is also used to add the indicated tributaries and convert (CONV) a two-way, two-point circuit to a broadcast circuit. When a failure occurs, or during an alarm state, the alarm-indication signal (AIS-all ones) is transmitted to the failed tributaries or all tributaries if the source NPCs fail. If the failure occurs during the execution of this command, the message is canceled and no broadcast circuit is set up.

Command

Nonhierarchical

[I.13011]

```
BCON:FRM xy,SEQ ww:FROM [s]abc,TOX ([t]def[, [u]ghi]\  
[, [v]jkl][...])[,RDC][,{CUS|INCL}][,{NTR|LPD|CONV}]!
```

Hierarchical

[I.13011]

```
BCON:FRM xy,SEQ ww:FROM uvmnp,TOX (wxkqr[,edfhg]\  
[,stmno][...])[,RDC][,{CUS|INCL}][,{NTR|LPD|CONV}]!
```

Completion Message

Nonhierarchical

[O.13011]

M hh:mm:ss xy,ww n[vv] BCON [s]abc 3 LN MSG:
TOX [t]def[, [u]ghi][, [v]jkl][...]
[RDC][CUS][{NTR|LPD|CONV}] COMPL

Hierarchical

[O.13011]

M hh:mm:ss xy,ww n[vv] BCON uvmnp 3 LN MSG:
TOX wxkqr[,edfhg][,stmno][...]
[RDC][CUS][{NTR|LPD|CONV}] COMPL

Denial Message

Nonhierarchical

[O.13011.01]

M hh:mm:ss xy,ww n[vv] BCON [s]abc 3 LN MSG:
TOX [t]def[, [u]ghi][, [v]jkl][...]
[[t]qrs] cc <st> DNY

Hierarchical

[O.13011.01]

M hh:mm:ss xy,ww n[vv] BCON uvmnp 3 LN MSG:
TOX wxkqr[,edfhg][,stmno][...]
[opqrs] cc <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

Note: An NPC cannot be broadcast-connected to itself. The desired effect can be achieved by specifying the LPD option.

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number
[t]def - The 3- or 4-digit nonhierarchical TO NPC number
[u]ghi - Same definition as [t]def
[v]jkl - Same definition as [t]def
[t]mno - Same definition as [t]def

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical number of non-channelized source NPC
wxkqr - Hierarchical tributary NPC number.
edfhg - Same definition as wxkqr
stmno - Same definition as wxkqr

uv, wx, ed, st

- Unit number

m, k, f

- Module number

np, qr, hg, no

- NPC number within the module

The values are:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

RDC - Red circuit

CUS - Customer

Customer-controlled circuit

INCL - Inclusive

Option will remove CUS marking

NTR - No transmit

No transmit or return path, all tributaries are broadcast only

LPD - Looped

One signal is looped back to source

If neither the NTR nor the LPD keyword is specified and the broadcast conference is being established for the first time, the first tributary is a full tributary, capable of transmitting back to the source; if the source has been previously established then all tributaries are broadcast only.

CONV - Convert

Convert a two-way, two-point circuit to a broadcast circuit by adding the indicated tributaries

The first termination (NPC and channel) listed in the input message is the FROM (or source) termination in the current two-point connection. The termination next following in the command is the full tributary leg to be added in the conversion to a broadcast connection. Additional legs may be added simultaneously by specifying additional terminations.

[t]qrs - The 3- or 4-digit backbone leg (bbl) or tributary NPC involved in denial

opqrs - Hierarchical number of the backbone leg or tributary NPC involved in denial.

st - Status

Status of denial

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
01	INERR	Invalid range for specified NPC type
03	INERR	No RDC or CUS circuits and INCL keyword used
05	BCAST	Invalid use of CONV keyword
06		Invalid range for specified FROM NPC type
10	MCOND	NPC out of service or failed
11	MCOND	NPC not equipped
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
30	MCOND	Termination is already assigned

cc	st	<i>Explanation</i>
32	MCOND	Termination is under test
33	INERR	Termination is a test port
34	MCOND	Termination is under customer control (CUS)
35	MCOND	Termination is protected (RDC)
36		Termination is not connected as indicated
50	INERR	Trunk conditioning doesn't match that of conference
51	INERR	CUS flag doesn't match that of conference
52	INERR	RDC flag doesn't match that of conference
53	INERR	TO side of two-way to be converted is not an FTU NPC
54	INERR	Conversion leg is terminated
55	INERR	Width of existing two way does not match conference width
56	INERR	FROM is a two-way and no CONV specified
57	BCAST	FROM is not a backbone leg
58	INERR	Specified width does not match existing conference width
59	INERR	NTR invalid since existing conference is not already NTR
5A	INERR	LPD invalid since existing conference is not already LPD
62	INERR	NPC type mismatch
63	INERR	NPC is a channelized NPC
64	INERR	NPC is a non-channelized NPC
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inactive side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
95	MCOND	Range overlapping between FROM and TO or between two TOs
DF	INERR	Unmatched channel range
70	MCOND	NPC invalid type
FF	ROLL	Termination is in process of being rolled
E0	MCOND	ETSI not equipped, not in service, or failed

BDIS, FROM, TO, CONV, OOS, DCC, INCL

BROADCAST DISCONNECTIONS

Explanation Of Command

This command requests the disconnection of a broadcast circuit cross-connection. It can be used to disconnect any one-way tributary from a broadcast circuit, or the full tributary once all of the one-way tributaries have been disconnected.

Command

Nonhierarchical

[I.15201]

```
BDIS:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk]\  
[,CONV][,OOS][,DCC][,INCL]!
```

Hierarchical

[I.15201]

```
BDIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\  
[,CONV][,OOS][,DCC][,INCL]!
```

Completion Message

Nonhierarchical

[O.15201]

```
M hh:mm:ss xy,ww n[vv] BDIS [s]abcddd[-eee],[t]ghijjj[-kkk]\  
[ BRDIS][ CONV][ OOS][ CUS][ RDC][ DCC] COMPL
```

Hierarchical

[O.15201]

M hh:mm:ss xy,ww n[vv] BDIS uvmnpddd[-eee],wxkqrjjj[-kkk]\
[BRDIS][CONV][OOS][CUS][RDC][DCC] COMPL

Denial Message

Nonhierarchical

[O.15201.01]

M hh:mm:ss xy,ww n[vv] BDIS [s]abcddd[-eee],[t]ghijjj[-kkk]\
[[t]wxyzzz] cc BCAST DNY

[O.15201.02]

M hh:mm:ss xy,ww n[vv] BDIS [s]abcddd[-eee],[t]ghijjj[-kkk]\
[[t]wxyzzz] COND cc DNY

Hierarchical

[O.15201.01]

M hh:mm:ss xy,ww n[vv] BDIS uvmnpddd[-eee],wxkqrjjj[-kkk]\
[edhfgzzz] cc BCAST DNY

[O.15201.02]

M hh:mm:ss xy,ww n[vv] BDIS uvmnpddd[-eee],wxkqrjjj[-kkk]\
[edhfgzzz] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number
[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number
wxkqr - Hierarchical TO NPC number

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ddd, jjj

- Channel number for beginning of channel range

eee, kkk

- Channel number for end of channel range.

Without the optional CONV keyword, ddd and jjj must be the lowest numbered channels in the range of channels that make up the broadcast circuit. If the range fields [-eee] and [-kkk] are used, the entire width of the conference tributaries must be indicated.

001 through 024

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

CONV - Convert

The CONV keyword is given to disconnect the specified one-way tributary from the broadcast circuit and convert the circuit to a two-way, two-point circuit. For a command with this option to succeed, only the broadcast source and the full tributary leg must remain on the circuit following the disconnection of the specified one-way tributary. That is, this option will be denied if the user attempts to disconnect the full tributary rather than a one-way tributary, or if any other one-way tributaries remain on the broadcast circuit following the disconnection of the one-way tributary specified in the command.

OOS - Out-of-service

An OOS disconnection may be done by giving the optional OOS keyword. At least one end of the circuit must be out-of-service or the OOS disconnection will be denied.

INCL - Inclusive

Use the optional INCL keyword to disconnect a circuit or range of circuits including one or more circuits marked as a red circuit or under customer control. If this option is not used, the message will be denied if any circuits in the range are red circuits or customer controlled.

DCC - Disconnect code

If the DCC keyword is specified, DACS II will insert the user-defined disconnect code and signaling into the disconnected channels. This disconnect code and signaling are specified by the trunk conditioning field used to connect the circuit. If the DCC option is not used, the disconnect code specified in the GRTH::NPC command is used.

[t]wxy - The 3- or 4-digit nonhierarchical NPC number that caused the denial, with the same valid values as [s]abc.

edhfg - Hierarchical NPC number that caused the denial

zzz - Channel number that caused the denial, with the same valid value as ddd.

BRDIS - Broadcast disconnect

The BRDIS keyword indicates that the conference is entirely disconnected (no tributaries remain).

CUS - Customer

Customer-controlled circuit

CUS indicates a customer controlled circuit.

RDC - Red circuit

Indicates that the disconnection was performed on a red circuit.

This implies that the INCL keyword was given in the input message.

If the disconnection was given on more than one circuit, at least one of them was a red circuit or under customer control.

BCAST - Broadcast

cc - Hexadecimal condition code

cc *Explanation*

- 01** Invalid range for specified NPC type
- 03** No RDC or CUS circuits and INCL keyword used
- 04** No NPC's out of service and OOS keyword used
- 05** Invalid use of CONV keyword
- 10** NPC out of service or failed
- 11** NPC not equipped
- 12** Active CCN side not IS or failed or pested or hardware OOS
- 13** UNIT not equipped, not in service, or failed
- 14** CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
- 15** FTMI not equipped, not in service, or failed
- 16** FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
- 17** TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
- 32** Termination is under test
- 34** Termination is under customer control (CUS)
- 35** Termination is protected (RDC)
- 53** TO side of two-way to be converted is not an FTU NPC
- 55** Width of existing two way does not match conference width
- 57** FROM is not a backbone leg
- 58** Specified width does not match existing conference width
- 59** NTR invalid since existing conference is not already NTR
- 5A** LPD invalid since existing conference is not already LPD
- 5B** TO is not a leg of this/any conference
- 5C** Can't disconnect return leg unless entire conference disconnected
- 1A** Required FLI not equipped, not in service, or failed
- 1B** Required MXR not equipped, not in service, or failed
- 1C** Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
- 1D** Required MIU not equipped, not in service, or failed
- 95** Range overlapping between FROM and TO or between two TOs
- D0** FROM NPC is not provisioned as DGA
- D1** TO NPC is not provisioned as DGA

cc *Explanation*

D3 Corresponding NPC for FROM virtual channel is not provisioned
D4 Corresponding NPC for TO virtual channel is not provisioned
D9 Invalid FROM channel number range
DA Invalid TO channel number range
DC A loopback is active on the FROM termination
FF Termination is in process of being rolled
E0 ETSI not equipped, not in service, or failed

st **d** *Explanation*

ROLL **{F|T|B}** Circuit is involved in a roll

BDIS, FROM, TO, OOS, INCL, CONV

BROADCAST DISCONNECTION

Explanation Of Command

This message disconnects a single non-channelized tributary network processing circuit from a non-channelized digital signal broadcast circuit. It also disconnects a single tributary and converts a broadcast conference to a two-way, two-point circuit.

When the circuit is disconnected, the idle code (AIS) is transmitted.

Command

Nonhierarchical

[I.15231]

BDIS:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,OOS][,INCL][,CONV]!

Hierarchical

[I.15231]

BDIS:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,OOS][,INCL][,CONV]!

Completion Message

Nonhierarchical

[O.15231]

**M hh:mm:ss xy,ww n[vv] BDIS [s]abc,[t]ghi[OOS][CUS]\
[RDC][BRDIS][CONV] COMPL**

Hierarchical

[O.15231]

M hh:mm:ss xy,ww n[vv] BDIS uvmnp,wxkqr[OOS][CUS][RDC]\
[BRDIS][CONV] COMPL

Denial Message

Nonhierarchical

[O.15231.01]

M hh:mm:ss xy,ww n[vv] BDIS [s]abc,[t]ghi[[t]qrs] cc <st> \
DNY

Hierarchical

[O.15231.01]

M hh:mm:ss xy,ww n[vv] BDIS uvmnp,wxkqr[uvqrs] cc <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit non-hierarchical non-channelized source(backbone)
NPC number
[t]ghi - The 3- or 4-digit non-hierarchical non-channelized tributary NPC
number

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical non-channelized source (backbone) NPC number
wxkqr - Hierarchical non-channelized tributary NPC number

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

The values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

OOS - Out-of-service keyword may be specified if one or more of the backbone or tributary NPCs is out of service

INCL - Inclusive keyword required for Customer-controlled (CUS) or Red circuits

CONV - Convert circuit to a two-way, two-point circuit by disconnecting the indicated tributary; as long as more than two tributaries remain, or no return path exists, the option is denied.

If the indicated tributary is a full tributary, it can be disconnected only when there are no other tributaries.

[t]qrs - The 3- or 4-digit nonhierarchical NPC number causing denial

uvqrs - Hierarchical NPC number causing denial

RDC - Red circuit**CUS** - Customer

Customer-controlled circuit

BRDIS - Broadcast conference completely disconnected**st** - Status of denial**cc** - Hexadecimal condition code

cc	st	<i>Explanation</i>
01	INERR	Invalid range for specified NPC type
03	INERR	No RDC or CUS circuits and INCL keyword used
04	INERR	No NPC's out of service and OOS keyword used
05	BCAST	Invalid use of CONV keyword
10	MCOND	NPC out of service or failed
11	MCOND	NPC not equipped
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
30	MCOND	Termination is already assigned
32	MCOND	Termination is under test
33	INERR	Termination is a test port
34	MCOND	Termination is under customer control (CUS)
35	MCOND	Termination is protected (RDC)
51	BCAST	CUS flag doesn't match that of conference
52	BCAST	RDC flag doesn't match that of conference
57	BCAST	FROM is not a backbone leg
58	INERR	Specified width does not match existing conference width
5B	BCAST	TO is not a leg of this/any conference
5C	BCAST	Can't disconnect return leg unless entire conference disconnected
62	INERR	NPC type mismatch
63	INERR	NPC is a channelized NPC
64	INERR	NPC is a non-channelized NPC
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
95	MCOND	Range overlapping between FROM and TO or between two TOs
DF	INERR	Unmatched channel range
70	MCOND	NPC invalid type

cc	st	<i>Explanation</i>
FF	ROLL	Termination is in process of being rolled
E0	MCOND	ETSI not equipped, not in service, or failed

BDIS, FROM, TOX, CONV, OOS, DCC, INCL

BROADCAST DISCONNECTION

Explanation Of Command

This command requests the disconnection of up to eight tributary legs from the source of a broadcast cross-connection circuit.

The **FROM** field designates the source termination. The optional range field **[-eee]** indicates the width of the conference backbone. The allowable width ranges from 001 to 024 channels and must be the same as the width of the existing conference backbone (if any).

The fields in the TO end designate the tributaries to be connected to the backbone. Although a conference may have any number of tributaries (limited only by the frame configuration), at most eight at a time may be disconnected using this command. More tributaries can be disconnected by subsequent broadcast disconnect commands.

Command

Nonhierarchical

[|.15211]

```
BDIS:FRM xy,SEQ ww:FROM [s]abcddd[-eee],\  
TOX ([t]ghijjj[, [u]klmnn . . .)][, CONV][, OOS][, DCC][, INCL]!
```


Hierarchical

[I.15211]

BDIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],\
TOX (wxkqrjjj[,edhfgnnn,. . .])[,CONV][,OOS][,DCC][,INCL]!

Completion Message

Nonhierarchical

[O.15211]

M hh:mm:ss xy,ww n[vv] BDIS [s]abcddd[-eee] 3 LN MSG:
TOX [t]ghijjj[, [u]klmnnn,. . .]
[BRDIS][CONV][OOS][CUS][RDC][DCC] COMPL

Hierarchical

[O.15211]

M hh:mm:ss xy,ww n[vv] BDIS uvmnpddd[-eee] 3 LN MSG:
TOX wxkqrjjj[,edhfgnnn,. . .]
[BRDIS][CONV][OOS][CUS][RDC][DCC] COMPL

Denial Message

Nonhierarchical

[O.15211.01]

M hh:mm:ss xy,ww n[vv] BDIS [s]abcddd[-eee] 3 LN MSG:
TOX [t]ghijjj[, [u]klmnnn,. . .]
[[t]wxyz] COND cc BCAST DNY

[O.15211.02]

M hh:mm:ss xy,ww n[vv] BDIS [s]abcddd[-eee] 3 LN MSG:
TOX [t]ghijjj[, [u]klmnnn,. . .]
[[t]wxyz] COND cc DNY

Hierarchical

[O.15211.01]

M hh:mm:ss xy,ww n[vv] BDIS uvmnpddd[-eee] 3 LN MSG:
TOX wxkqrjjj[,edhfgnnn,. . .]
[opjstzzz] COND cc BCAST DNY

[O.15211.02]

M hh:mm:ss xy,ww n[vv] BDIS uvmnpddd[-eee] 3 LN MSG:
TOX wxkqrjjj[,edhfgnnn,. . .]
[opjstzzz] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number designating the source termination

[t]ghi, [u]klm
- The 3- or 4-digit nonhierarchical tributary NPC numbers

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number designating the source termination

wxkqr - Hierarchical FROM NPC number designating the source termination

edhfg - Hierarchical tributary NPC numbers

uv, wx, ed

- Unit number

m, k, h - Module number

np, qr, fg

- NPC number within the module

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ddd - FROM channel number
eee - FROM channel number denoting end of width

The optional range field [-eee] or [&&-eee] indicates the width of the conference backbone. Note that a range may be specified for the source only.

jjj - Channel number of tributary legs
nnn - Channel number of the last tributary leg of the range

Without the optional CONV keyword, ddd and jjj must be the lowest numbered channels in the range of channels that make up the broadcast circuit. If the range field [-eee] is used, the entire width of the conference tributaries must be indicated.

001 through 024

NOTE: Channel 000 of a CEPT NPC(TS0) can be BCOned to a non-TS0 of a CEPT NPC.

001-047 Odd only (SLC 96[®] Carrier, Mode 3, DGA)
049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

FROM - From

The FROM field designates the source termination.

The fields following the TOX keyword (or the subsequent channel numbers in MML) designate the tributaries that are connected to the backbone.

Although a conference may have any number of tributaries (limited only by frame configuration), at most eight at a time may be disconnected using this command. More tributaries can be disconnected by subsequent commands.

CONV - Convert

The CONV keyword is given to disconnect the specified one-way tributaries from the broadcast circuit and convert the circuit to a two-way, two-point circuit. For a command with this option to succeed, only the broadcast source and the full tributary leg must remain on the circuit following the disconnection of the specified one-way tributaries. That is, this option will be denied if the user attempts to disconnect the full tributary rather than a one-way tributary, or if any other one-way tributaries remain on the broadcast circuit following the disconnection of the one-way tributaries specified in the command.

OOS - Out-of-service

An OOS disconnection may be done by giving the optional OOS keyword. At least one end of the circuit must be out-of-service or the OOS disconnection will be denied.

DCC - Disconnect code

If the DCC keyword is specified, DACS II will insert the user-defined disconnect code and signaling into the disconnected channels. This disconnect code and signaling are specified by the trunk conditioning field used to connect the circuit. If the DCC option is not used, the disconnect code specified in the GRTH::NPC command is used.

INCL - Inclusive

To disconnect a circuit or range of circuits including one or more circuits marked as a red circuit or under customer control, use the INCL option. If this option is not used, the message will be denied if any circuits in the range are red circuits or customer controlled.

[t]wxy - The 3- or 4-digit nonhierarchical NPC number involved in the denial.
(with the same valid value as [s]abc.)

opjst - Hierarchical NPC number involved in the denial

zzz - Channel number involved in the denial. Otherwise the same as ddd.

BCAST - Broadcast

cc - Hexadecimal condition code

cc *Explanation*

01	Invalid range for specified NPC type
03	No RDC or CUS circuits and INCL keyword used
04	No NPC's out of service and OOS keyword used
05	Invalid use of CONV keyword
10	NPC out of service or failed
11	NPC not equipped
12	Active CCN side not IS or failed or pested or hardware OOS
13	UNIT not equipped, not in service, or failed
14	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	FTMI not equipped, not in service, or failed
16	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
32	Termination is under test
34	Termination is under customer control (CUS)
35	Termination is protected (RDC)
53	TO side of two-way to be converted is not an FTU NPC
55	Width of existing two way does not match conference width
57	FROM is not a backbone leg
58	Specified width does not match existing conference width
59	NTR invalid since existing conference is not already NTR
5A	LPD invalid since existing conference is not already LPD
5B	TO is not a leg of this/any conference
5C	Can't disconnect return leg unless entire conference disconnected
1A	Required FLI not equipped, not in service, or failed
1B	Required MXR not equipped, not in service, or failed
1C	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	Required MIU not equipped, not in service, or failed
95	Range overlapping between FROM and TO or between two TOs
D0	FROM NPC is not provisioned as DGA
D1	TO NPC is not provisioned as DGA
D3	Corresponding NPC for FROM virtual channel is not provisioned
D4	Corresponding NPC for TO virtual channel is not provisioned
D6	Invalid FROM channel number
D7	Invalid TO channel number
D9	Invalid FROM channel number range
DA	Invalid TO channel number range
DC	A loopback is active on the FROM termination
EC	Invalid channel 000 cross-connection specified
ED	Invalid channel 031 cross-connection specified
FF	Termination is in process of being rolled
E0	ETSI not equipped, not in service, or failed

BDIS, FROM, TOX, OOS, INCL, CONV

BROADCAST DISCONNECT

Explanation Of Command

This message disconnects upto eight non-channelized tributaries from a non-channelized source network processing circuit (NPC). The NPCs can be in different units. This message also disconnects tributaries and can convert a broadcast conference to a two-way, two-point circuit. When the circuit is disconnected, the idle code (AIS) is transmitted.

Command

Nonhierarchical

[I.15221]

```
BDIS:FRM xy,SEQ ww:FROM [s]abc,\
TOX ([t]ghi[, [u]jkl][, [v]mno][...])[, OOS][, INCL][, CONV]!
```

Hierarchical

[I.15221]

```
BDIS:FRM xy,SEQ ww:FROM uvmnp,\
TOX (wxkqr[, edhfg][, opqrs][...])[, OOS][, INCL][, CONV]!
```

Completion Message

Nonhierarchical

[O.15221]

M hh:mm:ss xy,ww n[vv] BDIS [s]abc 3 LN MSG:
TOX [t]ghi[, [u]jkl][, [v]mno][...]
[OOS][CUS][RDC][BRDIS][CONV]COMPL

Hierarchical

[O.15221]

M hh:mm:ss xy,ww n[vv] BDIS uvmpn 3 LN MSG:
TOX wxkqr[, edhfg][, opqrs][...]
[OOS][CUS][RDC][BRDIS][CONV]COMPL

Denial Message

Nonhierarchical

[O.15221.01]

M hh:mm:ss xy,ww n[vv] BDIS [s]abc 3 LN MSG:
TOX [t]ghi[, [u]jkl][, [v]mno][...]
[[t]qrs] cc <st> DNY

Hierarchical

[O.15221.01]

M hh:mm:ss xy,ww n[vv] BDIS uvmpn 3 LN MSG:
TOX wxkqr[, edhfg][, opqrs][...]
[uvjkl] cc <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

- [s]abc** - The 3- or 4-digit non-hierarchical non-channelized
Source(backbone) NPC number
- [t]ghi** - The 3- or 4-digit non-hierarchical non-channelized
tributary NPC number
- [u]jkl** - Explained for [t]ghi
- [v]mno** - Explained for [t]ghi

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical number of non-channelized source NPC
wxkqr - Hierarchical NPC number of non-channelized tributary

edhfg - Hierarchical number of NPC
opqrs - Hierarchical number of tributary

uv, wx, ed, op

- Unit number

m, x, h, q

- Module number

np, qr, fg, rs

- NPC number within the module

The values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number

Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

OOS - Out-of-service keyword may be specified if one or more of the backbone or tributary NPCs is out of service

INCL - Inclusive keyword required for customer-controlled or Red circuits

CONV - Convert circuit to a two-way, two-point circuit by disconnecting the indicated tributaries; as long as more than two tributaries remain, or if no return path exists, the option is denied.

If the broadcast circuit has one full tributary, it can be disconnected only when there are no other tributaries.

[t]qrs - The 3- or 4-digit nonhierarchical NPC number causing denial

uvjkl - Hierarchical NPC number causing denial

BRDIS - Broadcast conference completely disconnected

st - Status of denial

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
01	RNGIE	Invalid range for specified NPC type
03	INERR	No RDC or CUS circuits and INCL keyword used
04	INERR	No NPC's out of service and OOS keyword used
05	BCAST	Invalid use of CONV keyword
10	MCOND	NPC out of service or failed
11	MCOND	NPC not equipped
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
32	MCOND	Termination is under test
33	MCOND	Termination is a test port
34	MCOND	Termination is under customer control (CUS)
35	MCOND	Termination is protected (RDC)
51	BCAST	CUS flag doesn't match that of conference
52	BCAST	RDC flag doesn't match that of conference
57	BCAST	FROM is not a backbone leg
58	INERR	Specified width does not match existing conference width
5B	BCAST	TO is not a leg of this/any conference
5C	BCAST	Can't disconnect return leg unless entire conference disconnected
62	INERR	NPC type mismatch
63	INERR	NPC is a channelized NPC
64	INERR	NPC is a non-channelized NPC
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
95	MCOND	Range overlapping between FROM and TO or between two TOs
DF	INERR	Unmatched channel range
70	MCOND	NPC invalid type
FF	ROLL	Termination is in process of being rolled
E0	MCOND	ETSI not equipped, not in service, or failed

BOOT,FAILED,BAD,DEVICE

BOOT FAILED

Explanation Of Command

This autonomous output message reports that a system boot has failed while entering the RST::MC command (Message 34001).

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.65053]

****hh:mm:ss xy,ww BOOT FAILED - BAD BOOT DEVICE**

Explanation Of Parameters

BOOT, FROM, PMEM, FAILED, ATTEMPTING, TO

STARTUP

Explanation Of Command

If the Primary memory Card (PMEM) had a corrupted generic load or the generic is absent from the PMEM, the bootstrap loader will display this message.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01242]

**BOOT FROM PMEM FAILED
ATTEMPTING TO BOOT FROM SMEM**

Explanation Of Parameters

BOOT - Boot.

PMEM - Primary memory card.

SMEM - Secondary memory card.

BOOT, FROM, PMEM, SMEM

STARTUP

Explanation Of Command

The main processor has successfully loaded the boot program from either the Primary Memory (PMEM) or the Secondary Memory (SMEM).

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01241]

BOOT FROM {PMEM|SMEM}

Explanation Of Parameters

BOOT - Boot

PMEM - Primary memory.

FROM - From

SMEM - Secondary memory.

BX2,STF,ATP

BUS EXTENDER STARTUP

Explanation Of Command

This message indicates that the communications interface bus extender has initialized itself and has performed self-diagnostics. The results of these diagnostics are reported as some tests failed or all tests passed.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01271]

BX2 {STF|ATP}

Explanation Of Parameters

BX2 - Bus extender

STF - Some tests failed

ATP - All tests passed

For ATP no action is required.

Contents

CFR,FRAME	8-2
■ Explanation Of Command	8-2
■ Command	8-2
■ Completion Message	8-2
■ Denial Message	8-3
■ Autonomous Message	8-3
■ Explanation Of Parameters	8-3
CFR,SYNC,FPLL	8-4
■ Explanation Of Command	8-4
■ Command	8-4
■ Completion Message	8-4
■ Denial Message	8-4
■ Autonomous Message	8-4
■ Explanation Of Parameters	8-5
CFR,SYNC,MASTER,SLAVED	8-6
■ Explanation Of Command	8-6
■ Command	8-6
■ Completion Message	8-6
■ Denial Message	8-6
■ Autonomous Message	8-7
■ Explanation Of Parameters	8-7
CFR,SYNC,STRATUM,STR2,STR3	8-8
■ Explanation Of Command	8-8
■ Command	8-8
■ Completion Message	8-8
■ Denial Message	8-8

Contents

■ Autonomous Message	8-8
■ Explanation Of Parameters	8-9
CFR,XC,INCL	8-10
■ Explanation Of Command	8-10
■ Command	8-10
■ Completion Message	8-10
■ Denial Message	8-11
■ Autonomous Message	8-11
■ Explanation Of Parameters	8-11
CHG,DS1ALMDS3,ON,OFF	8-12
■ Explanation Of Command	8-12
■ Command	8-13
■ Completion Message	8-13
■ Denial Message	8-13
■ Autonomous Message	8-13
■ Explanation Of Parameters	8-14
CHG,DS3ALMDLY	8-15
■ Explanation Of Command	8-15
■ Command	8-15
■ Completion Message	8-16
■ Denial Message	8-16
■ Autonomous Message	8-16
■ Explanation Of Parameters	8-16
CHG,DS3UNPROTALM,ON,OFF	8-17
■ Explanation Of Command	8-17
■ Command	8-17
■ Completion Message	8-17
■ Denial Message	8-18
■ Autonomous Message	8-18
■ Explanation Of Parameters	8-18
CHG,ECLOC,TYPE,MJU,SRM	8-19
■ Explanation Of Command	8-19
■ Command	8-19
■ Completion Message	8-19
■ Denial Message	8-19
■ Autonomous Message	8-19
■ Explanation Of Parameters	8-20

Contents

CHG,FROM,TO,NOT,TLA,TLR,F,T,B,A,INCL	8-21
■ Explanation Of Command	8-21
■ Command	8-21
■ Nonhierarchical	8-21
■ Hierarchical	8-21
■ Completion Message	8-22
■ Nonhierarchical	8-22
■ Hierarchical	8-22
■ Denial Message	8-22
■ Nonhierarchical	8-22
■ Hierarchical	8-22
■ Autonomous Message	8-22
■ Explanation Of Parameters	8-23
CHG,FROM,TO,NOT,TLA,TLR,F,T,B,L,G,A	8-31
■ Explanation Of Command	8-31
■ Command	8-31
■ Nonhierarchical	8-31
■ Hierarchical	8-31
■ Completion Message	8-32
■ Nonhierarchical	8-32
■ Hierarchical	8-32
■ Denial Message	8-32
■ Nonhierarchical	8-32
■ Hierarchical	8-32
■ Autonomous Message	8-33
■ Explanation Of Parameters	8-33
CHG,FROM,TO,TLP,NG,ES,INCL	8-44
■ Explanation Of Command	8-44
■ Command	8-44
■ Nonhierarchical	8-44
■ Hierarchical	8-44
■ Completion Message	8-45
■ Nonhierarchical	8-45
■ Hierarchical	8-45
■ Denial Message	8-45
■ Nonhierarchical	8-45
■ Hierarchical	8-45
■ Autonomous Message	8-45

Contents

■ Explanation Of Parameters	8-46
CHG,HUBID,O	8-57
■ Explanation Of Command	8-57
■ Command	8-57
■ Completion Message	8-57
■ Denial Message	8-57
■ Autonomous Message	8-57
■ Explanation Of Parameters	8-58
CHG,MACRO,MAP,SPACE	8-59
■ Explanation Of Command	8-59
■ Command	8-59
■ Completion Message	8-59
■ Denial Message	8-59
■ Autonomous Message	8-59
■ Explanation Of Parameters	8-60
CHG,MSGLOG,ON,OFF	8-61
■ Explanation Of Command	8-61
■ Command	8-61
■ Completion Message	8-61
■ Denial Message	8-61
■ Autonomous Message	8-61
■ Explanation Of Parameters	8-62
CHG,NPC,ALMOPT,PLOPT,AIS,INFO,MJ,MN,PL	8-63
■ Explanation Of Command	8-63
■ Command	8-64
■ Nonhierarchical	8-64
■ Hierarchical	8-64
■ Completion Message	8-64
■ Nonhierarchical	8-64
■ Hierarchical	8-65
■ Denial Message	8-67
■ Nonhierarchical	8-67
■ Hierarchical	8-67
■ Autonomous Message	8-67
■ Explanation Of Parameters	8-67
CHG,NPC,NFS	8-76
■ Explanation Of Command	8-76

Contents

■ Command	8-76
■ Nonhierarchical	8-76
■ Hierarchical	8-76
■ Completion Message	8-77
■ Nonhierarchical	8-77
■ Hierarchical	8-77
■ Denial Message	8-77
■ Nonhierarchical	8-77
■ Hierarchical	8-77
■ Autonomous Message	8-77
■ Explanation Of Parameters	8-78
CHG,NPC,OPTS	8-83
■ Explanation Of Command	8-83
■ Command	8-83
■ Nonhierarchical	8-83
■ Hierarchical	8-83
■ Completion Message	8-84
■ Nonhierarchical	8-84
■ Hierarchical	8-85
■ Denial Message	8-87
■ Nonhierarchical	8-87
■ Hierarchical	8-87
■ Autonomous Message	8-88
■ Explanation Of Parameters	8-88
CHG,NPC,RT,DL,TYPE,OPTS	8-118
■ Explanation Of Command	8-118
■ Command	8-118
■ Nonhierarchical	8-118
■ Hierarchical	8-118
■ Completion Message	8-119
■ Nonhierarchical	8-119
■ Hierarchical	8-120
■ Denial Message	8-120
■ Nonhierarchical	8-120
■ Hierarchical	8-121
■ Autonomous Message	8-121
■ Explanation Of Parameters	8-121
CHG,NPC,TS0	8-141

Contents

■ Explanation Of Command	8-141
■ Command	8-141
■ Nonhierarchical	8-141
■ Hierarchical	8-141
■ Completion Message	8-142
■ Nonhierarchical	8-142
■ Hierarchical	8-142
■ Denial Message	8-142
■ Nonhierarchical	8-142
■ Hierarchical	8-142
■ Autonomous Message	8-142
■ Explanation Of Parameters	8-143
CHG,NPC,TS0M	8-147
■ Explanation Of Command	8-147
■ Command	8-147
■ Nonhierarchical	8-147
■ Hierarchical	8-147
■ Completion Message	8-148
■ Nonhierarchical	8-148
■ Hierarchical	8-148
■ Denial Message	8-148
■ Nonhierarchical	8-148
■ Hierarchical	8-148
■ Autonomous Message	8-148
■ Explanation Of Parameters	8-149
CHG,NPC,TYPE,IW,X	8-153
■ Explanation Of Command	8-153
■ Command	8-154
■ Nonhierarchical	8-154
■ Hierarchical	8-154
■ Completion Message	8-154
■ Nonhierarchical	8-154
■ Hierarchical	8-154
■ Denial Message	8-154
■ Nonhierarchical	8-154
■ Hierarchical	8-155
■ Autonomous Message	8-155
■ Explanation Of Parameters	8-155

Contents

CHG,NPC,TYPE,IW,X,INCL	8-166
■ Explanation Of Command	8-166
■ Command	8-167
■ Nonhierarchical	8-167
■ Hierarchical	8-167
■ Completion Message	8-167
■ Nonhierarchical	8-167
■ Hierarchical	8-167
■ Denial Message	8-167
■ Nonhierarchical	8-167
■ Hierarchical	8-168
■ Autonomous Message	8-168
■ Explanation Of Parameters	8-168
CHG,NPC,TYPE,IW,X,INCL	8-176
■ Explanation Of Command	8-176
■ Command	8-176
■ Nonhierarchical	8-176
■ Hierarchical	8-177
■ Completion Message	8-177
■ Nonhierarchical	8-177
■ Hierarchical	8-177
■ Denial Message	8-177
■ Nonhierarchical	8-177
■ Hierarchical	8-177
■ Autonomous Message	8-177
■ Explanation Of Parameters	8-178
CHG,PASSWD,OLD,NEW	8-185
■ Explanation Of Command	8-185
■ Command	8-186
■ Completion Message	8-186
■ Denial Message	8-186
■ Autonomous Message	8-186
■ Explanation Of Parameters	8-187
CHG,RT,DL,TO	8-188
■ Explanation Of Command	8-188
■ Command	8-188
■ Completion Message	8-188

Contents

■ Denial Message	8-188
■ Autonomous Message	8-188
■ Explanation Of Parameters	8-189
CHG,RT,DL,ZCS,B8ZS	8-190
■ Explanation Of Command	8-190
■ Command	8-190
■ Completion Message	8-190
■ Nonhierarchical	8-190
■ Hierarchical	8-190
■ Denial Message	8-191
■ Nonhierarchical	8-191
■ Hierarchical	8-191
■ Common	8-191
■ Autonomous Message	8-191
■ Explanation Of Parameters	8-192
CHG,RT,RTF,SWMN	8-193
■ Explanation Of Command	8-193
■ Command	8-193
■ Completion Message	8-193
■ Nonhierarchical	8-193
■ Hierarchical	8-193
■ Denial Message	8-194
■ Nonhierarchical	8-194
■ Hierarchical	8-194
■ Autonomous Message	8-194
■ Explanation Of Parameters	8-194
CHG,SCON,OLD,NEW	8-197
■ Explanation Of Command	8-197
■ Command	8-198
■ Nonhierarchical	8-198
■ Hierarchical	8-198
■ Completion Message	8-198
■ Nonhierarchical	8-198
■ Hierarchical	8-198
■ Denial Message	8-199
■ Nonhierarchical	8-199
■ Hierarchical	8-199
■ Autonomous Message	8-199

Contents

■ Explanation Of Parameters	8-199
CHG,SCON,OLD,NEW,MPTM	8-206
■ Explanation Of Command	8-206
■ Command	8-207
■ Nonhierarchical	8-207
■ Hierarchical	8-207
■ Completion Message	8-208
■ Nonhierarchical	8-208
■ Hierarchical	8-208
■ Denial Message	8-208
■ Nonhierarchical	8-208
■ Hierarchical	8-208
■ Autonomous Message	8-208
■ Explanation Of Parameters	8-209
CHG,SECH,OLD,NEW,PCH,DCC	8-216
■ Explanation Of Command	8-216
■ Command	8-217
■ Nonhierarchical	8-217
■ Hierarchical	8-217
■ Completion Message	8-218
■ Nonhierarchical	8-218
■ Hierarchical	8-218
■ Denial Message	8-218
■ Nonhierarchical	8-218
■ Hierarchical	8-218
■ Autonomous Message	8-218
■ Explanation Of Parameters	8-219
CHG,SETOP,TYPE,ALL,NPCOP	8-225
■ Explanation Of Command	8-225
■ Command	8-226
■ Completion Message	8-226
■ Denial Message	8-226
■ Nonhierarchical	8-226
■ Hierarchical	8-226
■ Autonomous Message	8-226
■ Explanation Of Parameters	8-227
CHG,SWCH,TOX,INCL	8-239

Contents

■ Explanation Of Command	8-239
■ Command	8-239
■ Nonhierarchical	8-239
■ Hierarchical	8-239
■ Completion Message	8-240
■ Nonhierarchical	8-240
■ Hierarchical	8-240
■ Denial Message	8-240
■ Nonhierarchical	8-240
■ Hierarchical	8-240
■ Autonomous Message	8-241
■ Explanation Of Parameters	8-241
CHG,SWCH,TOX,INCL	8-248
■ Explanation Of Command	8-248
■ Command	8-248
■ Nonhierarchical	8-248
■ Hierarchical	8-248
■ Completion Message	8-249
■ Nonhierarchical	8-249
■ Hierarchical	8-249
■ Denial Message	8-249
■ Nonhierarchical	8-249
■ Hierarchical	8-249
■ Autonomous Message	8-249
■ Explanation Of Parameters	8-250
CHG,SYNC,TLI,SSP,TYPE,SRC	8-257
■ Explanation Of Command	8-257
■ Command	8-257
■ Completion Message	8-257
■ Denial Message	8-258
■ Autonomous Message	8-258
■ Explanation Of Parameters	8-258
CHG,TLA,TLR,TO	8-262
■ Explanation Of Command	8-262
■ Command	8-263
■ Nonhierarchical	8-263
■ Hierarchical	8-263
■ Completion Message	8-263

Contents

■ Nonhierarchical	8-263
■ Hierarchical	8-264
■ Denial Message	8-264
■ Nonhierarchical	8-264
■ Hierarchical	8-264
■ Autonomous Message	8-264
■ Explanation Of Parameters	8-264
CHG,TLA,TLR,TO,MJU	8-271
■ Explanation Of Command	8-271
■ Command	8-272
■ Nonhierarchical	8-272
■ Hierarchical	8-272
■ Completion Message	8-272
■ Nonhierarchical	8-272
■ Hierarchical	8-273
■ Denial Message	8-273
■ Nonhierarchical	8-273
■ Hierarchical	8-273
■ Autonomous Message	8-273
■ Explanation Of Parameters	8-273
CHG,TYPE,OPTS	8-281
■ Explanation Of Command	8-281
■ Command	8-281
■ Completion Message	8-281
■ Denial Message	8-283
■ Autonomous Message	8-283
■ Explanation Of Parameters	8-284
CHG,UNIT,CONN	8-306
■ Explanation Of Command	8-306
■ Command	8-306
■ Completion Message	8-307
■ Denial Message	8-307
■ Autonomous Message	8-307
■ Explanation Of Parameters	8-308
CHG,UNIT,DS3,BERM,BERT,LBO,TYPE	8-309
■ Explanation Of Command	8-309
■ Command	8-310

Contents

■ Completion Message	8-310
■ Denial Message	8-310
■ Autonomous Message	8-310
■ Explanation Of Parameters	8-310
CHG,UNIT,FTMI,EQL	8-313
■ Explanation Of Command	8-313
■ Command	8-313
■ Completion Message	8-313
■ Denial Message	8-313
■ Autonomous Message	8-313
■ Explanation Of Parameters	8-314
CHG,USER,LINK,INCL,SCR,GR,MCON,MCOFF	8-316
■ Explanation Of Command	8-316
■ Command	8-316
■ Completion Message	8-316
■ Denial Message	8-317
■ Autonomous Message	8-317
■ Explanation Of Parameters	8-317
CI,ECL,RESET	8-320
■ Explanation Of Command	8-320
■ Command	8-320
■ Completion Message	8-320
■ Denial Message	8-320
■ Autonomous Message	8-320
■ Explanation Of Parameters	8-321
CI,ECL,STARTUP,STF,ATP	8-322
■ Explanation Of Command	8-322
■ Command	8-322
■ Completion Message	8-322
■ Denial Message	8-322
■ Autonomous Message	8-322
■ Explanation Of Parameters	8-323
CMD,MC,OOS,MCOND,INSERVICE,MPDBASE	8-324
■ Explanation Of Command	8-324
■ Command	8-324
■ Completion Message	8-324
■ Denial Message	8-324

Contents

■ Autonomous Message	8-324
■ Explanation Of Parameters	8-325
COPY,NPC,TO	8-326
■ Explanation Of Command	8-326
■ Command	8-327
■ Nonhierarchical	8-327
■ Hierarchical	8-327
■ Completion Message	8-327
■ Nonhierarchical	8-327
■ Hierarchical	8-329
■ Denial Message	8-330
■ Nonhierarchical	8-330
■ Hierarchical	8-331
■ Autonomous Message	8-331
■ Explanation Of Parameters	8-331
CTST,FAD,AIS,INCL	8-353
■ Explanation Of Command	8-353
■ Command	8-353
■ Nonhierarchical	8-353
■ Hierarchical	8-354
■ Completion Message	8-354
■ Nonhierarchical	8-354
■ Hierarchical	8-354
■ Denial Message	8-354
■ Nonhierarchical	8-354
■ Hierarchical	8-354
■ Autonomous Message	8-355
■ Explanation Of Parameters	8-355
CTST,FAD,EMODE,FMODE,INCL	8-361
■ Explanation Of Command	8-361
■ Command	8-361
■ Nonhierarchical	8-361
■ Hierarchical	8-362
■ Completion Message	8-362
■ Nonhierarchical	8-362
■ Hierarchical	8-362
■ Denial Message	8-362
■ Nonhierarchical	8-362

Contents

■ Hierarchical	8-362
■ Autonomous Message	8-363
■ Explanation Of Parameters	8-363
CTST,FAD,FROM,TO,AIS,INCL	8-368
■ Explanation Of Command	8-368
■ Command	8-369
■ Nonhierarchical	8-369
■ Hierarchical	8-369
■ Completion Message	8-369
■ Nonhierarchical	8-369
■ Hierarchical	8-370
■ Denial Message	8-370
■ Nonhierarchical	8-370
■ Hierarchical	8-370
■ Autonomous Message	8-370
■ Explanation Of Parameters	8-370
CTST,HUB,FAD,TO,INCL	8-377
■ Explanation Of Command	8-377
■ Command	8-377
■ Nonhierarchical	8-377
■ Hierarchical	8-377
■ Completion Message	8-378
■ Nonhierarchical	8-378
■ Hierarchical	8-378
■ Denial Message	8-378
■ Nonhierarchical	8-378
■ Hierarchical	8-378
■ Autonomous Message	8-378
■ Explanation Of Parameters	8-379
CTST,LPBKT,FAD,INCL	8-383
■ Explanation Of Command	8-383
■ Command	8-383
■ Nonhierarchical	8-383
■ Hierarchical	8-383
■ Completion Message	8-383
■ Nonhierarchical	8-383
■ Hierarchical	8-384
■ Denial Message	8-384

Contents

■ Nonhierarchical	8-384
■ Hierarchical	8-384
■ Autonomous Message	8-384
■ Explanation Of Parameters	8-384
CTST,TNR,ALL,OOS	8-388
■ Explanation Of Command	8-388
■ Command	8-388
■ Completion Message	8-388
■ Denial Message	8-388
■ Autonomous Message	8-388
■ Explanation Of Parameters	8-389
CTST,TNR,FAD,OOS	8-390
■ Explanation Of Command	8-390
■ Command	8-390
■ Nonhierarchical	8-390
■ Hierarchical	8-391
■ Completion Message	8-391
■ Nonhierarchical	8-391
■ Hierarchical	8-391
■ Denial Message	8-391
■ Nonhierarchical	8-391
■ Hierarchical	8-392
■ Autonomous Message	8-392
■ Nonhierarchical	8-392
■ Hierarchical	8-392
■ Explanation Of Parameters	8-393

CFR — CTST

CFR — CTST

This section documents the commands **CFR** through **CTST**.

CFR,FRAME

CONFIGURE FRAME

Explanation Of Command

This command is used to initialize or change the frame configuration. After this command is successfully completed, DACS II will autonomously update the location information for the packs in the frame.

WARNING: A manual backup from RAM to MEM must be invoked prior to entering Maintenance Condition, else the command may not complete.

Entering this message will cause DACS II to present the user with self-explanatory menus. These menus allow the user to select the total number of bays and units to be equipped and to specify the bay and unit type for each of them. With the user specified information, DACS II will then determine the physical location of each circuit pack in the frame. The completion message will be output when the user exits from the menu mode.

This command can only be entered under the following conditions:

- It is entered from link 1
- The frame is in the maintenance condition
- The user is a superuser

Command

[I.35021]

CFR:FRM xy,SEQ ww:FRAME!

Completion Message

[O.35021]

M hh:mm:ss xy,ww n[vv] CFR FRAME[COND cc] COMPL

Denial Message

[O.35021.01]

M hh:mm:ss xy,ww n[vv] CFR FRAME COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FRAME - Frame

COND - Condition

cc - Completion condition code (hexadecimal)

cc - Hexadecimal condition code

cc *Explanation*

8D DB PMEM error OP-CL-RD-WR-SK

8F Can't lock or unlock ram database

96 Unit(s) OOS, and additional backup required

98 Unable to verify Configuration file since MP DB not loaded

92 Can't mount or unmount PMEM

97 User quit the menu

01 Backup required before executing this command

CFR,SYNC,FPLL

CONFIGURE SYNCHRONIZER

Explanation Of Command

This command requests the fast start of the phase-locked loop in a synchronizer.

Command

[I.35011]

CFR:FRM xy,SEQ ww:SYNC a,FPLL!

Completion Message

[O.35011]

M hh:mm:ss xy,ww n[vv] CFR SYNC a FPLL COMPL

Denial Message

[O.35011.01]

M hh:mm:ss xy,ww n[vv] CFR SYNC a FPLL COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer

a - Synchronizer number (0 or 1)

FPLL - Fast start phase-locked loop

cc - Hexadecimal condition code

cc *Explanation*

16 SYNC TB is not equipped

17 SYNC is out of service

BF Sync mode is same

C8 Sync pack denied command

CFR,SYNC,MASTER,SLAVED

CONFIGURE SYNCHRONIZER

Explanation Of Command

This command requests configuration of the synchronizer to extract timing from itself (stand-alone or **MASTER** mode) or from external sources (**SLAVED** mode).

The **CFR::SYNC** command modifies the Main Controller (MC) data base for the synchronizers, thus allowing appropriate combinations of time bases, timing extractors, and timing distributors to be equipped. This command is also used by the MC to instruct the Digital Phase Locked Loops (DPLLs) to implement the specified architecture. Condition codes for completion indicate architecture states, dependent on the current equipage. Condition codes for denial indicate that the requested architecture is not consistent with the current equipage.

Command

[I.35013]

CFR:FRM xy,SEQ ww:SYNC,{MASTER|SLAVED}!

Completion Message

[O.35013]

**M hh:mm:ss xy,ww n[vv] CFR SYNC {MASTER|SLAVED} COND 00 **
COMPL

Denial Message

[O.35013.01]

M hh:mm:ss xy,ww n[vv] CFR SYNC {MASTER|SLAVED} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer

MASTER - Master

The frame will use its own sources for timing.

SLAVED - Slaved

Timing will be extracted from external sources.

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

16	SYNC TB is not equipped
B6	Sync architecture is same
B7	Some TLIs are still equipped
B8	CRO is still equipped
B9	Timing Extractor type TLIs are present
BA	TLI 3 or 4 still equipped
BC	SSP with 0 priority present
BD	SSP with non 0 priority present
C8	Sync pack denied command

CFR,SYNC,STRATUM,STR2,STR3

CONFIGURE SYNCHRONIZER STRATUM

Explanation Of Command

This command requests the configuration of the synchronizer at a particular stratum level.

The command can be entered to configure the synchronizer at a lower stratum than the capability of the equipped time bases. The message can also be used to change the operating stratum level of the synchronizer to a higher level if the synchronizer is so equipped.

Command

[I.35012]

CFR:FRM xy,SEQ ww:SYNC,STRATUM {STR2|STR3}!

Completion Message

[O.35012]

M hh:mm:ss xy,ww n[vv] CFR SYNC STRATUM {STR2|STR3} COMPL

Denial Message

[O.35012.01]

M hh:mm:ss xy,ww n[vv] CFR SYNC STRATUM {STR2|STR3} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer

STRATUM

- Stratum

STR2 - Stratum 2 Time Base

STR3 - Stratum 3 Time Base

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

16 SYNC TB is not equipped

C0 Sync stratum is same

C1 Stratum not allowed

C8 Sync pack denied command

CFR,XC,INCL

CONFIGURE DIGROUP CIRCUITS

Explanation Of Command

This command requests that all Network Processing Circuits (NPCs) select data and clocks from the specified cross-connect network side.

Starting with Release 8.2 this command not only applies to the cross-connect network, it also applies to the Digital Phase Locked Loop (DPLL) that provides timing to the cross-connect network. The situation where the active synch is not on the same side as the active cross-connect network will now be considered a transient state.

This change was made in Release 8.2 to avoid a single hardware problem in the active DPLL affecting both sides of the cross-connect network, which can lead to service problems.

If the frame is in the maintenance condition state then the user must be logged in as the system administrator (DAX) on link 1. In addition the INCL keyword must be specified in order for the command to be accepted. If these conditions are not met the command will be denied.

Command

[I.35001]

CFR:FRM xy,SEQ ww:XC s[, INCL]!

Completion Message

[O.35001]

M hh:mm:ss xy,ww n[vv] CFR XC s[INCL] COMPL

Denial Message

[O.35001.01]

M hh:mm:ss xy,ww n[vv] CFR XC s[INCL] COND cc DNY

Autonomous Message

[O.35001]

I hh:mm:ss xy,ww n[vv] CFR XC s[TN abcd] COMPL

Explanation Of Parameters

XC - Cross-connect

s - Cross-connect side (0 or 1)

INCL - Inclusive

a, b - The CCN side representations used for the autonomous report, with the same definition as s.

a and b each represents a CCN side. If a is 1, b must be 0, and vice versa.

TN - Transaction

abcd - transaction number (hexadecimal)

The transaction number is shown only in the autonomous output message.

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

1C CCN side s is out of service

98 Unable to verify Configuration file since MP DB not loaded

F5 INCL keyword needed to perform this command

64 Frame is not in MCOND

65 Link being used is not Link 1

66 User login-id is not DAX

CHG,DS1ALMDS3,ON,OFF

CHANGE DS1 ALARM SUPPRESSION FOR DS1s WITHIN A DS3

Explanation Of Command

Before Release 8.0 of DACS II became available, it was not possible for the user to suppress alarm messages for DS1s that were a consequence of a failure of a DS3, in which the DS1s were embedded. Starting with Release 8.0, the user is able to turn those DS1 alarm messages off. Only the DS3 alarm message will still appear. By doing this, the user can avoid message congestion within DACS II. However, even though the messages for DS1 alarms are suppressed, the individual DS1s are still marked as being in CGA as always, and utility query commands retrieving the alarm state of these DS1s will show them to be in alarm. Trunk conditioning will also be handled in the same way as previous releases handled it.

This command activates or deactivates the suppression of DS1 alarm messages for DS1s embedded within a DS3. The keyword ON suppresses the alarm messages, the keyword OFF allows the individual DS1 alarm messages to appear.

If DS1 alarm messages are suppressed, then messages reporting that performance monitoring thresholds have been exceeded will also be suppressed. However, if the thresholds for TA type NPCs that are handled on a Multiplexer Interface Unit (MIU) are set very short, then it is possible for some of the threshold messages to initially appear, because the Unit Controller does not become aware of a DS3 failure until 10 seconds* have elapsed.

The default for message suppression is "no message suppression".

Also, Hybrid DS3 Units always suppress DS1 and E1 messages that are due to DS3 failures.

Warning: Under certain conditions when Bit Errors occur on the DS3, it will be possible for DS1s (E1s for Hybrid DS3s as well) to incur a bit error alarm before the DS3 goes into BER alarm. This condition is particularly noticable if the BER is set to 10^{-3} and bit errors occur

* The time value of 10 seconds may be changed by command I.38641 to a value between 2 seconds and 10 seconds if the customer so desires.

close to that rate.

Warning: If the user turns the message suppression off, while a DS3 on the frame is still in failure, then ALARM IDLE messages will appear once the DS3 returns to normal (for all DS1s embedded in that DS3), even though the initial alarm messages for those DS1s had been suppressed.

DS1s embedded in a DS3 that incur an independent failure while its associated DS3 is in failure, will generate their own alarm message, if and when the DS3 returns to normal before the DS1 returns to normal while message suppression is active. If message suppression is turned off during such a combined DS3 and DS1 failure, then this DS1 alarm message will not be generated, which creates an ALARM IDLE message once the DS1 returns to normal that is not preceded by an ALARM message for that DS1.

Note: This command can only be executed by the frame administrator or users that have frame administrator privileges.

Command

[I.38621]

CHG:[FRM xy,SEQ ww]:DS1ALMDS3 {ON|OFF}!

Completion Message

[O.38621]

M hh:mm:ss xy,ww n[vv] CHG DS1ALMDS3 {ON|OFF} COMPL

Denial Message

[O.38621]

M hh:mm:ss xy,ww n[vv] CHG DS1ALMDS3 {ON|OFF} COND CC DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

DS1ALMDS3

- DS1 alarm message suppression

ON - DS1 alarm messages that are due to a DS3 failure will be suppressed.

OFF - DS1 alarm messages, even those due to a DS3 failure will not be suppressed.

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

F3 No DS3 is equipped in the frame

F4 DS1 Alarm Suppression Already ON

F5 DS1 Alarm Suppression Already OFF

CHG,DS3ALMDLY

CHANGE DELAY TIME OF DS3 ALARM MESSAGE OUPUT

Explanation Of Command

This command changes the alarm activate integration time for DS3 alarms. Until Release 8.2 of the DACS II generic, the alarm message for a DS3 alarm (in a DS3U or Hybrid DS3U), such as Loss Of Signal (LOS), Loss Of Frame (LOF), or Excessive Bit Error Rate (BER), was delayed 10 seconds from the beginning of the event until it is printed. The reason for this delay is to ensure that an oscillating alarm condition, such as an LOS that comes and goes, does not generate an excessive number of alarm messages. Thus a transmission problem that generates a momentary LOS of 5 seconds will not generate an alarm message and a subsequent alarm idle message.

Starting with Release 8.2, the user is able to change the alarm activate integration time from 10 seconds (default) to a shorter interval via this command. The change in alarm activate integration (delay) time applies to all DS3 facilities terminated on the frame regardless of whether they are terminated on a DS3 unit or a Hybrid DS3 unit. Also, the new time value will be used when the DACS II system is rebooted. The default DS3 alarm activate integration time will remain 10 seconds if this command is not used.

Note: This command will be completed even when there is no Hybrid/DS3U equipped or when a Hybrid/DS3U is not in service.

Note: This command can only be executed by the frame administrator or users that have frame administrator privileges.

Command

[I.38641]

CHG:[FRM xy,SEQ ww]:DS3ALMDLY [x]x!

Completion Message

[O.38641]

M hh:mm:ss xy,ww n[vv] CHG DS3ALMDLY [x]x COMPL

Denial Message

[O.38641.01]

M hh:mm:ss xy,ww n[vv] CHG DS3ALMDLY [x]x COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

DS3ALMDLY

- Delay time for DS3 alarm message output

[x]x - Delay time. The number will be either 2,3,4,5,6,7,8,9, or 10 seconds.

CHG,DS3UNPROTALM,ON,OFF

CHANGE UNPROTECTED ALARM SETTING

Explanation Of Command

This message activates or deactivates the generation of minor alarms when DS3 or HDS3 service is unprotected as a result of manual commands. DS3 or HDS3 service can be unprotected due to manual commands when the user manually switches service from a MMFG-S to the protection MMFG, when the user manually removes one of the FLIs, when s/he manually removes the protection MMFG, or when s/he manually removes the Unit Controller of a DS3 or HDS3 unit.

Even though a minor alarm is generated per unprotected DS3U or HDS3U, this message activates/deactivates the alarm generation for **all** DS3Us or HDS3Us in the frame. If the frame is not equipped with any DS3U or HDS3U, the command will indicate that fact.

Deactivating the alarm generation will idle all active DS3 or HDS3 unprotected alarms previously generated.

Command

[I.38611]

CHG:[FRM xy,SEQ ww]:DS3UNPROTALM {ON|OFF}!

Completion Message

Note: When the frame is not equipped with DS3 or HDS3, the following output appears:

[O.38611]

M hh:mm:ss xy,ww n[vv] CHG DS3UNPROTALM UNEQPD COMPL

Note: When the frame is equipped with DS3 or HDS3, the following output appears:

[O.38612]

M hh:mm:ss xy,ww n[vv] CHG DS3UNPROTALM STATUS <a> COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

DS3UNPROTALM

- DS3 or HDS3 Unprotected Alarm

UNEQPD - Unequipped with DS3 or HDS3

STATUS - Status

<a> - status of activation/deactivation

ON - Activated. Alarm will be generated when DS3 or HDS3 is unprotected.

OFF - Deactivated. Alarm will not be generated.

COND - Condition

CHG,ECLOC,TYPE,MJU,SRM

CHANGE SUBRATE ERROR CORRECTION LOCATION

Explanation Of Command

For Subrate, this command changes the error correction location to either the multipoint junction unit (MJU) or Subrate multiplexer unit (SRM) type of a Subrate pack. As a result of this command, all new error correction functions that require Subrate circuit pack resources will be allocated to the pack type specified for subsequent Subrate circuit provisioning commands (**SECH**, **SCON**, **SCNT**).

Command

[I.38261]

CHG:FRM xy,SEQ ww:ECLOC,TYPE {MJU|SRM}!

Completion Message

[O.38261]

M hh:mm:ss xy,ww n[vv] CHG ECLOC TYPE {MJU|SRM} COMPL

Denial Message

[O.38261.01]

M hh:mm:ss xy,ww n[vv] CHG ECLOC TYPE {MJU|SRM} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ECLOC - Subrate error correction location

MJU - Multipoint junction unit

SRM - Subrate multiplexer unit

As a result of this command, all new error correction functions that require Subrate circuit pack resources will be allocated to the pack type specified for subsequent Subrate circuit provisioning commands (SECH, SCON, SCNT). Such error correction resources are allocated for channels requiring parity channel error correction and for circuits with subrate error correction that do not connect to a subrate multiplexer or an MJU. This command does not result in reallocation of any existing error correction resources to the new circuit pack type.

cc - Hexadecimal condition code

cc *Explanation*

9F current error corrector pack type specified in command

CHG,FROM,TO,NOT,TLA,TLR,F,T,B,A,INCL

CHANGE CIRCUIT PARAMETERS

Explanation Of Command

This message changes the termination state of a cross-connected non-channelized network processing circuit. This command can affect either a two-way, a one-way or a broadcast non-channelized digital signal cross-connection. This command has the ability to change the termination states of all of the legs of a broadcast circuit. However, an option is provided to exclude one of the legs from being changed. The idle code for non-channelized digital signal cross-connections is the alarm indication signal which is transmitted over a terminated connection.

Command

Nonhierarchical

[I.17011]

CHG:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,NOT [u]rst],\
{TLA|TLR} {F|T|B|A}{[,INCL]}!

Hierarchical

[I.17011]

CHG:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,NOT edhfg],\
{TLA|TLR} {F|T|B|A}{[,INCL]}!

Completion Message

Nonhierarchical

[O.17011]

M hh:mm:ss xy,ww n[vv] CHG [s]abc,[t]ghi[RDC]\
[CUS][NOT [u]rst] {TLA|TLR} {F|T|B|A} COMPL

Hierarchical

[O.17011]

M hh:mm:ss xy,ww n[vv] CHG uvmnp,wxkqr[RDC]\
[CUS][NOT edhfg] {TLA|TLR} {F|T|B|A} COMPL

Denial Message

Nonhierarchical

[O.17011.01]

M hh:mm:ss xy,ww n[vv] CHG [s]abc,[t]ghi cc <st> DNY

[O.17011.02]

M hh:mm:ss xy,ww n[vv] CHG [s]abc,[t]ghi <d> <st> DNY

Hierarchical

[O.17011.01]

M hh:mm:ss xy,ww n[vv] CHG uvmnp,wxkqr cc <st> DNY

[O.17011.02]

M hh:mm:ss xy,ww n[vv] CHG uvmnp,wxkqr <d> <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From termination
TO - To termination

[s]abc - The 3- or 4-digit nonhierarchical non-channelized
FROM NPC number
[t]ghi - The 3- or 4-digit nonhierarchical non-channelized
TO NPC number
[u]rst - The 3- or 4-digit nonhierarchical non-channelized
NPC number that is not affected by this command.

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number

Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number

Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical number of non-channelized FROM NPC
wxkqr - Hierarchical number of non-channelized TO NPC
edhfg - Hierarchical number of a leg of a non-channelized digital
signal broadcast circuit that is not affected by this command.

uv, wk, ed

- Unit number

m, x, h

- Module number

np, qr, fg

- NPC number within the module

The values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number

Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

INCL - Inclusive

Inclusive keyword, required if one or more circuits are marked
Customer-controlled (CUS) or Red (RDC)

TLA - Terminate and leave activate

TLR - Terminate and leave release

The direction in which TLA or TLR is to be applied is specified by
the use of F, T, B, A, and NOT as defined below:

F - Towards the FROM NPC
T - Towards the TO NPC
B - In both directions
A - All directions of a broadcast circuit
NOT - In conjunction with the A options, all directions of a broadcast circuit except the one specified

RDC - Red circuit
 NPC is a red circuit

CUS - Customer
 NPC is a Customer-controlled Circuit

d - direction

d	Explanation
F	From
T	To
B	Both
A	All

st - Status of denial

cc - Hexadecimal condition code

cc	st	Explanation
15	MCOND	NPC is unequipped
01	INERR	Invalid range for specified NPC type
03	MCOND	No RDC or CUS circuits and INCL keyword used
10	MCOND	NPC out of service or failed
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
32	MCOND	Termination is under test
34	MCOND	Termination is under customer control (CUS)
35	MCOND	Termination is protected (RDC)
57	BCAST	FROM is not a backbone leg
5B	BCAST	TO is not a leg of this/any conference
5D	BCAST	TO is the backbone leg of a conference
5F	BCAST	Conference is NTR: has no switchable return leg
90	CHGIE	Invalid change parameter combinations
C5	BCAST	Option NOT leg can not appear with F, T, or B

cc	st	Explanation
C7	BCAST	Option NOT leg is not in conference
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
FF	ROLL	Termination is in process of being rolled

st	d	Explanation
CUS	{F T B A}	Customer-controlled Circuit
FAIL	{F T B A}	Failed
NOMTH	{F T B A}	No match of NPCs
OOS	{F T B A}	Out-of-service
RDC	{F T B A}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
UNPASGN	{F T B A}	Unassigned or Not Properly Assigned
UEQD	{F T B A}	Unequipped
UTST	{F T B A}	Under Test

CHG, FROM, TO, NOT, TLA, TLR, F, T, B, L, G, A

CHANGE CROSS-CONNECT TERMINATION STATUS

Explanation Of Command

This command is used to request a change in the termination status of the specified cross-connected circuit or range of circuits which were established by a two-point or multipoint cross-connect command.

If successful, the requested change is echoed ([NOT [u]rst-vvv]{TLA|TLR}{F|T|B|L|G|A}), followed by the new termination state (**NEW STATE**) of the circuit. If the range option was given, the new states of the circuits in the range may differ, noted by the **RNG** keyword.

Command

Nonhierarchical

[I.17001]

```
CHG:[FRM xy,SEQ ww]:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk]\  
[,NOT [u]rstvvv},{TLA|TLR}{F|T|B|L|G|A}[,INCL]!
```

Hierarchical

[I.17001]

```
CHG:[FRM xy,SEQ ww]:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\  
[,NOT edhfgvvv},{TLA|TLR}{F|T|B|L|G|A}[,INCL]!
```

Completion Message

Nonhierarchical

[O.17001]

M hh:mm:ss xy,ww n[vv] CHG [s]abcddd[-eee],[t]ghijjj[-kkk] 2 LN MSG:
[NOT [u]rstvvv]{TLA|TLR} {F|T|B|L|G|A}\
[NEW STATE {TLA s|RNG}][RDC][CUS] COMPL

Hierarchical

[O.17001]

M hh:mm:ss xy,ww n[vv] CHG uvmnpddd[-eee],wxkqrjjj[-kkk] 2 LN MSG:
[NOT edhfgvvv]{TLA|TLR} {F|T|B|L|G|A}\
[NEW STATE {TLA s|RNG}][RDC][CUS] COMPL

Denial Message

Nonhierarchical

[O.17001.01]

M hh:mm:ss xy,ww n[vv] CHG [s]abcddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.17001.02]

M hh:mm:ss xy,ww n[vv] CHG [s]abcddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] <d> <st> DNY

[O.17001.03]

M hh:mm:ss xy,ww n[vv] CHG [s]abcddd[-eee],[t]ghijjj[-kkk] 2 LN MSG:
{TLA|TLR} {F|T|B} COND cc DNY

Hierarchical

[O.17001.01]

M hh:mm:ss xy,ww n[vv] CHG uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.17001.02]

M hh:mm:ss xy,ww n[vv] CHG uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] <d> <st> DNY

[O.17001.03]

M hh:mm:ss xy,ww n[vv] CHG uvmnpddd[-eee],wxkqrjjj[-kkk] 2 LN MSG:
{TLA|TLR} {F|T|B} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From

TO - To

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

[u]rst - The 3- or 4-digit nonhierarchical NPC number not affected by this message

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

9961-9966

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

edfhg - Hierarchical NPC number not affected by this message

uv, wx, ed

- Unit number

m, k, f

- Module number

np, qr, hg

- NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

VI NPC numbers listed by unit, module, and NPC Number
Unit Type VI (Virtual)

Unit	Module	NPC
99	1	01-02 (DACS II Non-CEF frames)
99	1	01-06 (DACS II CEF frames)

ddd - FROM channel number
jjj - TO channel number
eee - FROM channel number denoting the end of the range
kkk - TO channel number denoting the end of range
vvv - Channel number not affected by this command.

The valid channel numbers are:

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers

001-085 (MB NPC)

001-500 (Virtual NPC)

TLA - Terminate and leave activate

s - Direction of transmission to be terminated

If the cross-connection is between a facility terminating unit (FTU) and a virtual NPC (VI type NPC), once terminated, the FTU NPC will send out its provisioning insertion word (PIW) as the idle code.

TLR - Terminate and leave release

s *Explanation*

A Towards the facilities and the bridge (multipoint only)

B Towards both terminations

F Towards the FROM termination

G Towards the bridge (multipoint connection only)

L Towards the facilities (multipoint connection only)

T Towards the TO termination

INCL - Inclusive

Use this keyword, to change the termination status on a channel or range of channels including one or more channels marked as a red. The command will otherwise be denied if one or more of the cross-connected circuits in the range are marked as red.

NOT - Not

The LEG is not affected by this command

mmm, nnn

- Channel number involved in the denial.

Otherwise, the same as **ddd**.

RNG - Range

RDC - Red circuit

The change in termination status was performed on a red circuit. If the command specified a range of circuits, then at least one of the circuits involved was a red circuit. This keyword will appear only if the **INCL** keyword was specified in the command.

CUS - Customer

The change in termination status was performed on a customer controlled circuit. If the command specified a range of circuits, then at least one of the circuits involved was a customer controlled circuit.

d - Direction

d *Direction*

F From

T To

B Both

st - Status

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
06	INERR	Invalid range for specified FROM NPC type
07	INERR	Invalid range for specified TO NPC type
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
18	MCOND	DSPI not equipped, not in service, or failed
72	CONFERR	The NPC of VC BBL leg doesn't match that in the input command
73	CONFERR	The first channel of VC BBL leg doesn't match that in the input command
75	CONFERR	The input BRD leg is not in VC
76	CONFERR	The first channel of VC BRD leg doesn't match that in the input command
90	CHGIE	Invalid change parameter combinations
A1	INERR	Illegal BBL BBL combination
A2	INERR	Illegal BRD BRD combination
A3	INERR	Illegal SYM BRD combination
A4	INERR	Illegal BRD SYM combination
A5	INERR	Illegal BBL SYM combination
A6	INERR	Illegal SYM BBL combination
B7	INERR	Cannot perform DMB CHG on input direction F
B8	INERR	Cannot perform DMB CHG on input direction T
B9	INERR	Cannot perform DMB CHG on input direction B
C0	INERR	Cannot perform DMB CHG on input direction L
C1	INERR	Cannot perform DMB CHG on input direction G
C2	INERR	Cannot perform DMB CHG on input direction A
C3	CHGIE	Can't perform DMB CHG because NTR flag set on FROM side
C4	CHGIE	Can't perform DMB CHG because NTR flag set on TO side
C5	INERR	Option NOT leg can not appear with F, T, or B

cc	st	Explanation
C6	INERR	Option NOT leg is not a FTU leg
C7	INERR	Option NOT leg is not in conference
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inactive side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
D0	SCERR	FROM NPC is not provisioned as DGA
D1	SCERR	TO NPC is not provisioned as DGA
D3	SCERR	Corresponding NPC for FROM virtual channel is not provisioned
D4	SCERR	Corresponding NPC for TO virtual channel is not provisioned
D6	INERR	Invalid FROM channel number
D7	INERR	Invalid TO channel number
D9	INERR	Invalid FROM channel number range
DA	INERR	Invalid TO channel number range
DC	INERR	A loopback is active on the FROM termination
DD	INERR	A loopback is active on the TO termination
DF	INERR	Unmatched channel range
E0	SCERR	Unmatched channel range involving SLC Mode III termination
E4	SCERR	RT-DCLU cross-connect with different ids
E5	SCERR	RT-DCLU cross-connect with different channel number
E6	SCERR	Cross-connect a non Mode I channel to DCLU
E7	SCERR	Cross-connect a non SLC channel to DCLU
EC	INERR	Invalid channel 000 cross-connection specified
ED	INERR	Invalid channel 031 cross-connection specified
70	MCOND	NPC invalid type
FF	ROLL	Termination is in process of being rolled
E0	MCOND	ETSI not equipped, not in service, or failed

st	d	Explanation
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
NOMTH	{F T B}	No Match
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
TP	{F T B}	NPC is used for test access
UNPASGN	{F T B}	Unassigned or Not Properly Assigned
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

CHG, FROM, TO, TLP, NG, ES, INCL

CHANGE CIRCUIT PARAMETERS

Explanation Of Command

This message requests DACS II to change the parameters of a multipoint circuit leg. Termination [s]abcddd must be either a termination on an FTU (facility terminating unit), IFTU (integrated Facility Terminating Unit), DS3U (DS3 Unit), HDS3U (Hybrid DS3 Unit) or DSPU (Digital Signal Processing Unit) NPC. Termination [t]ghijjj must be a termination on a DSPU NPC.

Command

Nonhierarchical

[I.17002]

```
CHG:FRM xy,SEQ ww:FROM [s]abcddd,TO [t]ghijjj[,TLP(snn,smm)]\  
[,NG nn][,ES ee][,INCL]!
```

Hierarchical

[I.17002]

```
CHG:FRM xy,SEQ ww:FROM uvmnpddd,TO wxkqrjjj\  
[,TLP(snn,smm)][,NG nn][,ES ee][,INCL]!
```

Completion Message

Nonhierarchical

[O.17002]

M hh:mm:ss xy,ww n[vv] CHG [s]abcddd,[t]ghijjj 2 LN MSG:
[TLP(snn,smm)][NG nn][ES ee]\
NEW STATE spp,sqq NG ff ES hh[RDC][CUS] COMPL

Hierarchical

[O.17002]

M hh:mm:ss xy,ww n[vv] CHG uvmnpddd,wxkqrjjj 2 LN MSG:
[TLP(snn,smm)][NG nn][ES ee]\
NEW STATE spp,sqq NG ff ES hh[RDC][CUS] COMPL

Denial Message

Nonhierarchical

[O.17002.01]

M hh:mm:ss xy,ww n[vv] CHG [s]abcddd,[t]ghijjj 2 LN MSG:
[TLP(snn,smm)][NG nn][ES ee] COND cc DNY

Hierarchical

[O.17002.01]

M hh:mm:ss xy,ww n[vv] CHG uvmnpddd,wxkqrjjj 2 LN MSG:
[TLP(snn,smm)][NG nn][ES ee] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From
TO - To

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number
[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number
wxkqr - Hierarchical TO NPC number

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

The valid values are listed below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ddd - FROM channel number

001 through 024

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)
 049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
 001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
 025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
 049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
 073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
 001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
 025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
 049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
 073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

jjj - TO channel number

001-085 (MB NPC)

TLP - Transmission level point

Specify the incoming and outgoing gain adjustments relative to the TO multipoint circuit by using the TLP (snn,smm) field. Gain adjustment snn is applied as the signal enters the bridge, while smm is applied as the signal leaves.

- snn** - Incoming gain adjust parameter
smm - Outgoing gain adjust parameter
s - Sign (+ or -)
nn - Incoming gain adjust value (-90 through +88)
mm - Outgoing gain adjust value (-90 through +88)

These are the parameters requested for the TO termination. Values are given in steps of two and the units are tenths of a db.

Certain situations require replacement of the gain adjust parameter values with "---". In general "---" is used for either **snn** or **smm** (but not both) when no change is to be made to that parameter. This feature allows changing only one of the two parameters if desired. Also, if the cross-connection was provisioned with the NTR (no transmit) option, the gain adjustment in the direction for which transmission is shut off **MUST** be ---. See the table below to see what situations require "---".

<i>FROM</i>	<i>TO</i>	<i>snn</i>	<i>smm</i>
BRD	BBL	---	smm
BBL	BRD	snn	---
LEG	BBL	---	smm
LEG	BRD	snn	---
LEG	SYM	snn	smm
BBL	LEG	Invalid combination	
BBL	SYM	Invalid combination	
BRD	LEG	Invalid combination	
BRD	SYM	Invalid combination	

- NG** - Noise guard
nn - Requested NG level setting (00, 06, 12, or 18) db

To specify the noise guard level setting, use NG nn. The following default values apply:

For Symmetrical bridges Default: NG = -18 db
For Polling circuits Default: NG = 0 db

- ES** - Echo suppression
ee - Requested ES level setting (00, 06, 12, or 18) db

To specify the echo suppression level setting, use ES ee. The following default values apply:

For Symmetrical bridges Default: ES = -18 db
For Polling circuits Default: ES = 0 db

At least one of the three parameters (TLP, NG, ES) must be specified.

Since a BBL (backbone leg) has no input to the bridge and the bridge has no output to a BRD (broadcast) leg, transmission values in these directions cannot be changed.

INCL - Inclusive

INCL is used to change the parameters on a circuit marked either as a red or a customer controlled circuit. If this option is not used, the command will be denied such a circuit.

spp, sqq

- New gain setting. Otherwise, the same as snn and smm.

ff

- New noise guard setting. Otherwise, the same as nn.

hh

- New echo suppression setting. Otherwise, the same as ee.

RDC

- Red circuit

These keywords indicate the connection is marked as a red circuit.

CUS

- Customer

The connection is a Customer-controlled Circuit.

cc - Hexadecimal condition code

cc *Explanation*

- 03** No RDC or CUS circuits and INCL keyword used
- 13** UNIT not equipped, not in service, or failed
- 18** DSPI not equipped, not in service, or failed
- A0** Illegal LEG LEG combination
- A1** Illegal BBL BBL combination
- A2** Illegal BRD BRD combination
- A3** Illegal SYM BRD combination
- A4** Illegal BRD SYM combination
- A5** Illegal BBL SYM combination
- A6** Illegal SYM BBL combination
- AF** Delete or change a leg from a conference that has no leg
- B2** Transmission parameters in command will not change existing settings
- B3** Trying to change level out on BRD leg
- B4** Trying to change level in on BBL leg
- B6** TO side is not a DMB type NPC
- AE** A substrate circuit pack is specified in the command line
- B5** CPR circuit pack specified in the command
- D0** FROM NPC is not provisioned as DGA
- D3** Corresponding NPC for FROM virtual channel is not provisioned
- D6** Invalid FROM channel number
- 43** Trying to change in NTR direction

CHG,HUBID,O

CHANGE HUB IDENTIFICATION

Explanation Of Command

For Subrate, this command requests a change of the frame Hub Identification (**HUBID**) number. The **HUBID** must be set, using this change command before any TYPE MJ100 NPCs can be grown in the frame.

Command

[I.38251]

CHG:FRM xy,SEQ ww:HUBID O'ab!

Completion Message

[O.38251]

M hh:mm:ss xy,ww n[vv] CHG HUBID O'ab COND cc COMPL

Denial Message

[O.38251.01]

M hh:mm:ss xy,ww n[vv] CHG HUBID O'ab COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

HUBID - Hub identification

ab - Multipoint junction unit (MJU) hub identification code, octal (00 through 77) subrate MJU use this code in response to in-band test messages.

cc - Hexadecimal condition code

cc	Explanation

11	UC is out of service

12	UC is in service but failed

37	DSPI out-of-service

3E	DSPI failed

9D	current hub id specified in command

CHG,MACRO,MAP,SPACE

CHANGE MACRO SPACE

Explanation Of Command

This command is used by the frame administrator to request a change in the amount of memory space allocated to macros or maps for all users of the system.

Command

[I.38501]

CHG:FRM xy,SEQ ww:{MACRO|MAP},SPACE sss!

Completion Message

[O.38501]

**M hh:mm:ss xy,ww n[vv] CHG {MACRO|MAP} SPACE NEW sss \
OLD ttt COMPL**

Denial Message

[O.38501.01]

**M hh:mm:ss xy,ww n[vv] CHG {MACRO|MAP} SPACE sss COND cc \
DNY**

Autonomous Message

Not applicable.

Explanation Of Parameters

SPACE - Space

sss - User macro or map space allocation (000 through 100 percent)

Variable sss represents the space allocated to user macros or maps for entire DACS II system as a percentage of the system macro space.

ttt - Old user macro space allocation (000 through 100 percent)

Variable ttt represents the space previously allocated to user macros for the entire DACS II system as a percentage of the system macro space.

cc - Hexadecimal condition code

cc *Explanation*

D0 Command is Frame administrator (DAX) only.

CHG,MSGLOG,ON,OFF

Turn ON or OFF the Message Logging feature

Explanation Of Command

This command is used to turn ON or OFF the Message Logging feature, which is used to log the MML messages, so they can be retrieved at a later time. Turning ON the Message Logging feature resets the Message Log Number to 1. This command is restricted to those with superuser permissions.

This command can only be used if the message logging feature has been purchased as part of the DACS II software generic.

Command

[I.38471]

CHG:FRM xy,SEQ ww:MSGLOG {ON|OFF}!

Completion Message

[O.38471]

M hh:mm:ss xy,ww n[vv] CHG MSGLOG {ON|OFF} COMPL

Denial Message

M hh:mm:ss xy,ww n[vv] CHG MSGLOG {ON|OFF} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

MSGLOG - Message Log

ON - Turn feature ON

OFF - Turn feature OFF

cc - Hexadecimal condition code

cc *Explanation*

01 Subject entity is equipped

02 Subject entity is not equipped

06 Feature is (already) off

CHG,NPC,ALMOPT,PLOPT,AIS,INFO,MJ,MN,PL

CHANGE NPC AIS ALARM OPTION

Explanation Of Command

This command may be used to program either the Network Processing Circuit (NPC) Alarm Indication Signal (AIS) alarm option or the ANSI NPC payload loopback capability, but not both simultaneously.

To program the payload loopback capability the NPC(s) must be out of service.

To program the AIS alarm option, the input command must contain the ALMOPT and AIS {INFO|MJ|MN} keywords in the command line; it must not contain the PLOPT and PL {ENA|DSA} keywords.

In this case, the command

changes the NPC AIS alarm option to Information (INFO), Major (MJ), or Minor (MN) alarm for all domestic non-SLC® NPC types.

This command is not valid for DS-type NPCs.

To program the payload loopback capability, the input command must contain the PLOPT and PL {ENA|DSA} keywords in the command line; it must not contain the ALMOPT and AIS {INFO|MJ|MN} keywords.

In this case, the command

changes the far-end initiated (via the ESF data link) payload loopback capability for ANSI NPCs to Enabled (ENA) or Disabled (DSA) for domestic ANSI NPCs (DA and TA types).

If both keyword sets appear simultaneously in the input command, or if the AIS and payload loopback keywords are mixed, the command will be denied.

If the feature applies to one or more NPCs within the addressed range, DACS II will perform the command on the NPCs in the range that support the requested feature, but skip the NPCs which do not support the requested feature. DACS II provides a variety of line termination types which support different features and can be randomly mixed within the frame. If at least one of the NPCs in the addressed range supports the requested feature, DACS II will generate a completion message for the entire unit of NPCs; individual denial messages will not be generated for NPCs within the range which do not support the feature. If *none* of the NPCs in the addressed range support the requested feature, DACS II will generate a range denial message.

Command

Nonhierarchical

[I.38281]

CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]ghi],\
{ALMOPT|PLOPT},{AIS {INFO|MJ|MN}|PL {ENA|DSA}}!

Hierarchical

[I.38281]

CHG:FRM xy,SEQ ww:NPC uvmnp[-wxkqr],\
{ALMOPT|PLOPT},{AIS {INFO|MJ|MN}|PL {ENA|DSA}}!

Completion Message

Nonhierarchical

Usage: FOR FT UNIT

[O.38281]

M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc[-[s]def] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}} e LN MSG:
TOT nnn
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt \
EOM

:
:
:

M hh:mm:ss xy,ww n[vv] CHG NPC [t]jkl[-[t]ghi] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}} e LN MSG:
TOT nnn
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt \
EOM

M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc[-[t]ghi] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}} COMPL

Usage: FOR DS3 or HDS3 UNIT

[O.38281]

```
M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc[-[s]def] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}} e LN MSG:
TOT nnn
stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt EOM
      :           :           :
      :           :           :
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC [t]jkl[-[t]ghi] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}} e LN MSG:
TOT nnn
stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc[-[t]ghi] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}} COMPL
```

Hierarchical

Usage: FOR FT UNIT

[O.38281]

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp[-defgh] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}}
e LN MSG:
TOT nnn
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt \
EOM
      :           :           :
      :           :           :
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC ijklm[-wxkqr] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}}
e LN MSG:
TOT nnn
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt stttt stttt stttt \
EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp[-wxkqr] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}} COMPL
```

Usage: FOR DS3 or HDS3 UNIT

[O.38281]

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp[-defgh] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}}
e LN MSG:
TOT nnn
stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt EOM
      :           :           :
      :           :           :
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC ijklm[-wxkqr] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}}
e LN MSG:
TOT nnn
stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt
stttt stttt stttt stttt stttt stttt stttt EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp[-wxkqr] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}} COMPL
```

Denial Message

Nonhierarchical

[O.38281.01]

M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc[-[t]ghi] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}} COND cc DNY

[O.38281.02]

M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc[-[t]ghi] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}} UEQD DNY

Hierarchical

[O.38281.01]

M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp[-wxkqr] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}} COND cc DNY

[O.38281.02]

M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp[-wxkqr] \
{ALMOPT|PLOPT} {AIS {INFO|MJ|MN}|PL {ENA|DSA}} UEQD DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

- [s]abc - The 3- or 4-digit nonhierarchical NPC number at beginning of a range
- [t]ghi - The 3- or 4 digit nonhierarchical NPC number at end of a range
- [s]def - The 3- or 4-digit nonhierarchical NPC number between [s]abc and [t]jkl
- [t]jkl - The 3- or 4-digit nonhierarchical NPC number between [s]def and [t]ghi

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number at beginning of range
wxkqr - Hierarchical NPC number at beginning of range
defgh - Hierarchical NPC number between uvmnp and ijklm
ijklm - Hierarchical NPC number between defgh and wxkqr

uv,wx - Unit number
m,k - Module number in unit uv
np,qr - NPC number in module m

The allowable values are presented below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ALMOPT - Alarm option

AIS - Alarm indication signal

Type of alarm. AIS is not detected by unframed clear (unchannelized) 2Mbit/s PAXDz or THxDz type NPCs. Therefore, specifying AIS with one of the alarm level types MI, DMA, PMA, or PMC is unnecessary. However, the command will not be denied if AIS is specified with an alarm level for unframed clear PAXDz or THxDz NPCs. AIS with its alarm level will simply never be reported for unframed clear PAXDz or THxDz NPCs.

INFO - Information

Information message (not an alarm). This is the default option for domestic NPCs.

MJ - Major

Major alarm.

MN - Minor
Minor alarm.

TOT nnn
- Total number of NPCs in the output segment.

PLOPT - Payload loopback option
The NPC(s) must be out of service to use this option.

PL - Payload loopback

ENA - Enabled
The ANSI NPC will respond to payload loopback requests received from the far-end terminal over the ESF data link. This is the default option.

DSA - Disabled
The ANSI NPC will not respond to payload loopback requests received from the far-end terminal over the ESF data link.

s - Status of the AIS alarm or payload loopback capability.

s Explanation

* The AIS alarm option/payload loopback capability of the NPC has been changed.

blank The AIS alarm option/payload loopback capability of the NPC has not been changed.

tttt - The old AIS alarm option/payload loopback setting for the NPC.

tttt Explanation

INFO AIS programmed for Information message

MJ AIS programmed for Major alarm

MN AIS programmed for Minor alarm

ENA ANSI payload loopback capability enabled

DSA ANSI payload loopback capability disabled

---- Not applicable (for unequipped NPCs or not valid NPC type within the specified NPC range)

cc - Hexadecimal condition code

cc *Explanation*

- 02** Subject entity is not equipped
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 13** FTMI is not equipped
- 14** FTMI is out of service
- 15** NPC is unequipped
- C9** In-service NPC change not allowed
- FD** NPC range crosses unit boundary
- 70** NPC invalid type
- 60** Selectable AIS not valid for specified NPC(s) type
- 61** All NPC(s) are either not valid or not grown
- 62** IU type NPC(s) cannot be provisioned for Minor Alarm
- 67** NPC(s) actual type incompatible with TYPE keyword and/or alarm type
- A5** AIS keyword incompatible with NPC type

CHG,NPC,NFS

CHANGE NPC NON FRAME-WORD SETTING

Explanation Of Command

This command allows control of the spare national and international bits in time slot zero (TS0).

Control is exercised through variable "abcdefghi". Each letter in this variable represents one of the spare national or international bits in TS0. The bit represented by a given letter is controlled by assigning an appropriate value to the letter. Each letter may be set to one of the following: **0**, **1**, **p** or **-**. **p** indicates that the incoming bit will be passed through unchanged if cross-connected. A **0** and **1** set for any of the bits (except **c**) will override the cross-connected bits. This applies also to NPCs assigned as test NPCs. A hyphen (-) means that the bit is not affected by this command.

When a command covering a range of NPCs is denied for successive NPCs in the range for the same reason, a summary denial message shall be output, giving the range of NPCs denied and the reason. The execution of the normal completions, or of denials for a reason other than diagnostic failures, then resumes at the next NPC and continues to the end of the range.

Command

Nonhierarchical

[I.38324]

CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]def],NFS abcdefghi!

Hierarchical

[I.38324]

CHG:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],NFS abcdefghi!

Completion Message

Nonhierarchical

[O.38324]

M hh:mm:ss xy,ww n[vv] CHG NPC [s]jkl OLD abcdefghi \
NEW abcdefghi NFS COMPL

Hierarchical

[O.38324]

M hh:mm:ss xy,ww n[vv] CHG NPC uvjkl OLD abcdefghi \
NEW abcdefghi NFS COMPL

Denial Message

Nonhierarchical

[O.38324.01]

M hh:mm:ss [<xy>],ww n[vv] CHG NPC [s]jkl[-[t]mno] ab\
cdefghi NFS COND cc DNY

Hierarchical

[O.38324.01]

M hh:mm:ss xy,ww n[vv] CHG NPC uvjkl[-uvmno] ab\
cdefghi NFS COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

- [s]abc** - The 3- or 4-digit nonhierarchical NPC number, start of range
- [t]def** - The 3- or 4-digit nonhierarchical NPC number, end of range, must be in the same unit as [s]abc
- [s]jkl** - The 3- or 4-digit nonhierarchical NPC number within the range of [s]abc and [t]def.
- [t]mno** - The 3- or 4-digit nonhierarchical NPC number within the range of [s]abc and [t]def.

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number, start of range

uvkqr - Hierarchical NPC number, end of range

uvjkl - Hierarchical NPC number (uvmnp through uvkqr)

uvmno - Hierarchical NPC number (uvmnp through uvkqr)

uv

- Unit number

m, k, j

- Module number

np, qr, kl, no

- NPC number within the module

The allowable values are presented below:

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

NFS - Nonframe-word Setting

abcdefghi

- Input variables corresponding to spare bits in TS0

abcdefghi

- Variables of old spare bits in TS0.

- a: Bit 1 of Frame Word (FW) - International spare bit for TS0 to non-TS0 cross-connect in Mode 2, this variable can only be "-" or "b"
- b: Bit 1 of Non Frame Word (NFW) - International spare bit
- c: Bit 2 of NFW
- d: Bit 3 of NFW - Remote Alarm Indicator
- e-f: Bits 4-5 of Not Frame Word, National spare bits
- g: Bit 6 of Not Frame Word, RPSFI bit if provisioned for RPSFI otherwise a national spare bit.
- h-i: Bits 7-8 of Not Frame Word, National spare bits

Variable Action on corresponding TS0 bit:
Input Value

"0" or "1"	Set TS0 bit to this value
"V"	Received bit is inverted and passed through
"P"	Received bit is passed through unchanged
"_"	Neither the variable nor the TS0 bit is changed by this command.

The output parameters take on values dependent on the message language (PDS or MML) and position (OLD or NEW) as shown in the following table:

Input	Output Primary Line (MML)	OLD	NEW
"0"	"0"	previous	"0"
"1"	"1"	previous	"1"
"V"	"V"	previous "V"	
"P"	"P"	previous	"P"
"_"	"_"	previous	previous

previous value may be one of "0", "1", "V" or "P"

For example:

11V---00P 11V---00P 0011PPPPV 11V1PP00P

If this command is not entered for a NPC, the default value for all the bits is "P".

cc - Hexadecimal condition code

cc *Explanation*

02	Subject entity is not equipped
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
24	Unit type error
46	NPC Failed or Out of Service
F2	Invalid NPC number specified
FF	Termination is in process of being rolled

CHG,NPC,OPTS

CHANGE NPC OPTIONS

Explanation Of Command

This message changes the facility performance parameter threshold values on a specified Network Processing Circuit (NPC) without disconnecting and reconnecting provisioned circuits.

One or more alarm or information threshold values for the designated NPC may be changed to a value previously stored in the DACS II threshold data base. These previously stored values are selected through use of the indices **rr/m**.

Each facility parameter of an NPC has a default threshold and up to three user-programmable threshold values stored in the DACS II threshold data base. The **CHG SETOP NPCOP** command sets these values.

Note: This command will not reboot the NPC hardware. Therefore, if any NPCs are in service, use the **UTL : :BOOT,FRAME** command (Message I.58001) to avoid any possible inconsistency.

Command

Nonhierarchical

[I.38221]

CHG:FRM xy,SEQ ww:NPC [s]abc,OPTS(rr/m[,rr/m][...])!

Hierarchical

[I.38221]

CHG:FRM xy,SEQ ww:NPC uvmnp,OPTS(rr/m[,rr/m][...])!

Completion Message

Nonhierarchical

For DE, TE, or DS type NPCs:

[O.38221]

```
M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[ IW pq] 5 LN MSG:
      SLIP      BER      ERS      SERS      COFA      [SANE]      [SAFE]
THRESHOLDS mmm nnn p q      rrrrr sss      ttt uuu [xxxxx] [zzzzz]
OPTIONS     e  f    g h    i    j    k  l    [m]      [n]
OLD OPTIONS s  t    u v    w    x    y  z    [b]      [c]  COMPL
```

For ANSI (DA and TA type) NPCs:

[O.38222]

```
M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[ IW pq] 5 LN MSG:
DAILY NE      CVP      ESP      SESP      SEFS      CSSP      UASP      CVL      ESL      SESL
THRESHOLDS aaaaaaaaa bbbbbb cccccc ddddd eeeee fffff gggggggg hhhhh iiiii
OPTIONS     a          b    c    d    e    f    g    h    i
OLD OPTIONS á          ß    ç    ð    é    f    g    h    i      EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[ IW pq] 5 LN MSG:
DAILY FE      CVP      ESP      SESP      SEFS      CSSP      UASP      ESL
THRESHOLDS jjjjjjjj kkkkk lllll mmmmm nnnnn ooooo ppppp
OPTIONS     j          k    l    m    n    o    p
OLD OPTIONS j          k    l    m    n    o    p      EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[ IW pq] 5 LN MSG:
15MIN NE      CVP      ESP      SESP      SEFS      CSSP      UASP      CVL      ESL      SESL
THRESHOLDS aaaaaaa bbb ccc ddd eee fff ggggggg hhh iii
OPTIONS     a          b    c    d    e    f    g    h    i
OLD OPTIONS á          ß    ç    ð    é    f    g    h    i      EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[ IW pq] 5 LN MSG:
15MIN FE      CVP      ESP      SESP      SEFS      CSSP      UASP      ESL
THRESHOLDS jjjjjjj kkk lll mmm nnn ooo ppp
OPTIONS     j          k    l    m    n    o    p
OLD OPTIONS j          k    l    m    n    o    p      COMPL
```

For TH type NPCs:

[O.38224]

```
M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[ IW pqr] 5 LN MSG:
DAILY      CRC      FRER      OFS  ES  SES  CSS  CV
THRESHOLDS aaaaaaaa bbbbbbbbb ccccc ddddd eeeee fffff gggggggg
OPTIONS     a        b        c    d    e    f    g
OLD OPTIONS á        ß        ć    đ    é    f    ğ          EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[ IW pqr] 5 LN MSG:
DAILY      UAS      UATC MER  FEBE  FES  FSES  FUAS
THRESHOLDS hhhhh iiii jjjjj kkkkkkkk lllll mmmmm nnnnn
OPTIONS     h        i        j    k        l    m    n
OLD OPTIONS ħ        ı        j    k        l    ĩ    ñ          EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[ IW pqr] 5 LN MSG:
15MIN      CRC      FRER      OFS  ES  SES  CSS  CV
THRESHOLDS aaaaaa  bbbbbbb  ccc  ddd  eee  fff  gggggg
OPTIONS     a        b        c    d    e    f    g
OLD OPTIONS á        ß        ć    đ    é    f    ğ          EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[ IW pqr] 5 LN MSG:
15MIN      UAS      UATC MER  FEBE  FES  FSES  FUAS
THRESHOLDS hhh  ii  jjj  kkkkkk  lll  mmm  nnn
OPTIONS     h        i        j    k        l    m    n
OLD OPTIONS ħ        ı        j    k        l    ĩ    ñ          COMPL
```

Note that CV, FEBE, FES, FSES and FUAS are not applicable for TH type NPCs.
Dashes will appear in the output for those parameters.

Hierarchical

For DE, TE, or DS type NPCs:

[O.38221]

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[ IW pq] 5 LN MSG:
SLIP      BER      ERS      SERS      COFA      [SANE]      [SAFE]
THRESHOLDS mmm nnn  p q    rrrrr  sss      ttt uuu  [xxxxx]  [zzzzz]
OPTIONS     e  f    g h    i    j    k    l    [m]    [n]
OLD OPTIONS s  t    u v    w    x    y    z    [b]    [c]  COMPL
```

For ANSI (DA and TA type) NPCs:

[O.38222]

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[ IW pq] 5 LN MSG:
DAILY NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
THRESHOLDS aaaaaaaaaa bbbbbb ccccc dddd eeee fffff ggggggggg hhhh iiii
OPTIONS a b c d e f g h i
OLD OPTIONS á ħ ĉ đ é f ğ ħ ï EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[ IW pq] 5 LN MSG:
DAILY FE CVP ESP SESP SEFS CSSP UASP ESL
THRESHOLDS jjjjjjjj kkkkk llll mmmm nnnn ooooo ppppp
OPTIONS j k l m n o p
OLD OPTIONS ĵ K l ĩ ĥ ó ṗ EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[ IW pq] 5 LN MSG:
15MIN NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
THRESHOLDS aaaaaaa bbb ccc ddd eee fff ggggggg hhh iiii
OPTIONS a b c d e f g h i
OLD OPTIONS á ħ ĉ đ é f ğ ħ ï EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[ IW pq] 5 LN MSG:
15MIN FE CVP ESP SESP SEFS CSSP UASP ESL
THRESHOLDS jjjjjj kkk lll mmm nnn ooo ppp
OPTIONS j k l m n o p
OLD OPTIONS ĵ K l ĩ ĥ ó ṗ COMPL
```


For TH type NPCs:

[O.38224]

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[ IW pqr] 5 LN MSG:
DAILY      CRC      FRER      OFS  ES  SES  CSS  CV
THRESHOLDS aaaaaaaa bbbbbbbbb ccccc ddddd eeeee fffff gggggggg
OPTIONS     a        b        c    d    e    f    g
OLD OPTIONS á        ß        ć    đ    é    f    ğ          EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[ IW pqr] 5 LN MSG:
DAILY      UAS      UATC MER  FEBE  FES  FSES  FUAS
THRESHOLDS hhhhh iiii jjjjj kkkkkkkk lllll mmmmm nnnnn
OPTIONS     h        i        j    k    l    m    n
OLD OPTIONS ħ        ı        j    k    l    m    n          EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[ IW pqr] 5 LN MSG:
15MIN      CRC      FRER      OFS  ES  SES  CSS  CV
THRESHOLDS aaaaaa  bbbbbbb  ccc  ddd  eee  fff  gggggg
OPTIONS     a        b        c    d    e    f    g
OLD OPTIONS á        ß        ć    đ    é    f    ğ          EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[ IW pqr] 5 LN MSG:
15MIN      UAS      UATC MER  FEBE  FES  FSES  FUAS
THRESHOLDS hhh  ii  jjj  kkkkkk  lll  mmm  nnn
OPTIONS     h        i        j    k    l    m    n
OLD OPTIONS ħ        ı        j    k    l    m    n          COMPL
```

Note that CV, FEBE, FES, FSES and FUAS are not applicable for TH type NPCs.
Dashes will appear in the output for those parameters.

Denial Message

Nonhierarchical

[O.38221.01]

```
M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[ ss/n] \
COND cc DNY
```

Hierarchical

[O.38221.01]

```
M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[ ss/n] \
COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

The valid numbers are:

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number

- uv** - Unit number
- m** - Module number
- np** - NPC number within the module

The allowable values are presented below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

- rr** - Facility performance parameter number

Variable rr specifies the parameter whose alarm threshold is being selected.

- m** - Facility performance parameter threshold index (0 through 3)

Variable m is used to select threshold values previously programmed for rr. The default threshold value, the value selected by m=0, for each parameter is shown in the table below under the column heading "Default Threshold Value". Threshold values selected by m=1 through m=3 must exist; that is, must have been programmed prior to being selected. The non-default thresholds can be set by using the CHG::SETOP (I.38201) command.

Clear-DS1 ANSI NPCs (DAxy9/TAXy9) provide the same set of path and line performance monitoring parameters that are provided by terminated ANSI NPC types. ANSI NPCs in DS3 Units (TAXyz) do not provide near-end DS1 line performance monitoring parameters.

For DE, TE, or DS type NPCs:

For DE type NPCs, parameters with values rr = 1 through 8 are valid.

For DS type NPCs, parameters with values rr = 1 through 10 are valid.

For TE type NPCs, parameters with values rr = 1 through 8 are valid.

For Clear-DS1 DE type NPCs, parameters with values rr = 1 through 4 are valid.

For Clear-DS1 TE type NPCs, parameters with values rr = 1 through 2 are valid.

rr	Parameter	Threshold Value Range	Default Threshold Value
01	Slip major	000 to 255	255
02	Slip minor	000 to 255	4
03	Bit Error Rate major	1E-3* to 1E-6 [†]	1E-3*
04	Bit Error Rate minor	1E-3* to 1E-6 [†]	1E-6
05	Errored Seconds [‡]	00001 to 65535	864
06	Severely Errored Seconds [‡]	001 to 255	225
07	Change of Frame Alignment major	001 to 511	511
08	Change of Frame Alignment minor	001 to 255	17
09	Shelf Alarm Near End(SANE)§	00001 to 65535	00000
10	Shelf Alarm Far End(SAFE)§	00001 to 65535	00000

* 4 for clear-DS1 NPCs or DS type NPCs (default)

[†] 7 on DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing

[‡] Only applicable to DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing

§ Applicable only to DS type NPCs

Note 1: Major thresholds must be greater than minor thresholds.

Note 2: For Bit Error Rates, enter only the power of 10 (DACS assumes its sign is negative). For example, for a BER of 10^{-3} (.001), enter 3.

Note 3: Slip major and Slip minor threshold crossing alarms may be disabled by programming threshold values of zero for the respective parameters.

Note 4: Only parameters 01 through 04 are allowed for DE type clear DS1.

Note 5: Only 01 through 02 are allowed for TE type clear DS1

For DA and TA type NPCs:

For Channelized and Clear-DS1 DA type NPCs with ESF framing, all of the following Near-end and Far-end parameters are valid.

For Channelized and Clear-DS1 DA type NPCs with D4 or T1DM framing, all of the following Near-end parameters are valid, but the only valid Far-end parameter is Unavailable Seconds (rr = 55,71).

For Channelized and Clear-DS1 TA type NPCs with ESF framing, all of the following Near-end Path parameters are valid, but the Near-End Line parameters (rr = 47-49, 63-65) are invalid. All of the following Far-end parameters are valid.

For Channelized and Clear-DS1 TA type NPCs with D4 or T1DM framing, the following Near-end Path parameters are valid, but the Near-End Line parameters (rr = 47-49, 63-65) are invalid. The only valid Far-end parameter is Unavailable Seconds (rr = 55,71).

rr	Parameter	Threshold Value Range	Default Threshold Value
41	Daily Near-end Path Coding Violations	000000000 to 134217727	132960 [†]
42	Daily Near-end Path Errored Seconds	00000 to 86400	648
43	Daily Near-end Path Severely Errored Seconds	00000 to 86400	100
44	Daily Near-end Severely Errored Framing Seconds	00000 to 86400	17
45	Daily Near-end Controlled Slip Seconds	00000 to 86400	4
46	Daily Near-end Unavailable Seconds	00000 to 86400	10
47	Daily Near-end Line Coding Violations	000000000 to 134217727	133400
48	Daily Near-end Line Errored Seconds	00000 to 86400	648
49	Daily Near-end Line Severely Errored Seconds	00000 to 86400	100
50	Daily Far-end Path Coding Violations	000000000 to 134217727	132960 [†]
51	Daily Far-end Path Errored Seconds	00000 to 86400	648
52	Daily Far-end Path Severely Errored Seconds	00000 to 86400	100
53	Daily Far-end Severely Errored Framing Seconds	00000 to 86400	17
54	Daily Far-end Controlled Slip Seconds	00000 to 86400	4
55	Daily Far-end Unavailable Seconds	00000 to 86400	10
56	Daily Far-end Line Errored Seconds	00000 to 86400	648
57	15-Minute Near-end Path Coding Violations	0000000 to 2097151	13296 [‡]
58	15-Minute Near-end Path Errored Seconds	000 to 900	65
59	15-Minute Near-end Path Severely Errored Seconds	000 to 900	10
60	15-Minute Near-end Severely Errored Framing Seconds	000 to 900	2
61	15-Minute Near-end Controlled Slip Seconds	000 to 900	1
62	15-Minute Near-end Unavailable Seconds	000 to 900	10
63	15-Minute Near-end Line Coding Violations	0000000 to 2097151	13340
64	15-Minute Near-end Line Errored Seconds	000 to 900	65
65	15-Minute Near-end Line Severely Errored Seconds	000 to 900	10
66	15-Minute Far-end Path Coding Violations	0000000 to 2097151	13296 [‡]
67	15-Minute Far-end Path Errored Seconds	000 to 900	65
68	15-Minute Far-end Path Severely Errored Seconds	000 to 900	10
69	15-Minute Far-end Severely Errored Framing Seconds	000 to 900	2
70	15-Minute Far-end Controlled Slip Seconds	000 to 900	1
71	15-Minute Far-end Unavailable Seconds	000 to 900	10
72	15-Minute Far-end Line Errored Seconds	000 to 900	65

[†] The value shown applies to ESF framing and is a count of CRC errors. When the DS1 has D4 or T1DM framing, framing errors are counted and the default Daily value is 691.

[‡] The value shown applies to ESF framing and is a count of CRC errors. When the DS1 has D4 or T1DM framing, framing errors are counted and the default 15-Minute value is 72.

For TH type NPCs:

Table 8-1. Parameter Register Threshold Range and Default Values

rr	Parameter	Interval	Threshold Value Range	Default Threshold Value
11	CRC Block Errors	DAILY	1 - 79056000	176947
12	Framing Errors	DAILY	1 - 345600000	176947
13	Out of Frame Seconds	DAILY	1 - 86400	4
14	Errored Seconds	DAILY	1 - 86400	4320
15	Severely Errored Seconds	DAILY	1 - 86400	90
16	Controlled Slip Seconds	DAILY	1 - 86400	4
18	Unavailable Seconds	DAILY	1 - 86400	90
19	Unavailable Time Count	DAILY	1 - 4320	9
20	Multiframe Errors	DAILY	1 - 86400	4095
81	CRC Block Errors	15MIN	1 - 823500	18432
82	Framing Errors	15MIN	1 - 3600000	18432
83	Out of Frame Seconds	15MIN	1 - 900	4
84	Errored Seconds	15MIN	1 - 900	300
85	Severely Errored Seconds	15MIN	1 - 900	30
86	Controlled Slip Seconds	15MIN	1 - 900	1
88	Unavailable Seconds	15MIN	1 - 900	30
89	Unavailable Time Count	15MIN	1 - 45	3
90	Multiframe Errors	15MIN	1 - 900	255

TYPE - Type

mnxyz - NPC type

DExyz - FTU DS1 NPC type

TExyz - DS3U or HDS3U DS1 NPC type

DSxyz - SLC Carrier digroup terminating NPC type

DAxyz - FTU DS1 ANSI NPC type

TAxyz - DS3U or HDS3U DS1 ANSI NPC type

THxyz - HDS3U CEPT NPC type

DE-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4, y=5, and y=6, DMI signalling.

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3†	ZBTISI - Zero-bit time-slot interchanger
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DE-type clear-DS1 NPC.

† Only valid with ESF (x = 2 or 3)

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	No channel numbering format, clear-DS1

DS-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	Not assigned
4	Not assigned
5	Not assigned
6	SLC® 96 carrier Fs
7	SLC 5 carrier ESF with data link
8-9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	Zero code suppression (ZCS)
1	No zero code suppression (NZCS)
2	Bipolar with 8 zero substitution (B8ZS)
3-9	Not assigned

z - Counting sequence format

z	<i>Explanation</i>
0	SLC 96 carrier Mode III D4 counting sequence
1	SLC 96 carrier Mode III D1D counting sequence
2	SLC 96 carrier Mode I D1D counting sequence
3	SLC Series 5 carrier D4 counting sequence
4-9	Not assigned

DA-type xyz fields**x** - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DA-type clear-DS1 NPC.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).**z** - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

DA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a DA NPC with both a valid framing format (D4, ESF, T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the DA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II FTU, the NPC must be provisioned as NPC type **DE9y9**.

Zero Byte Time Slot Interchange (ZBTSI) encoding is not supported by the DA NPC type. If ZBTSI is desired on an NPC in a DACS II FTU, the NPC must be provisioned as a DE NPC type with its **y** option selecting ZBTSI (**DEx3z**).

TA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the TA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II DS3U, the NPC must be provisioned as NPC type TE919.

TE-type xyz fields

x - Multiframe format

x *Explanation*

- 0** Not assigned
- 1** D4
- 2** ESF - Voice
- 3** ESF - Data
- 4** DDST (T1DM - R bit connection via channel 24)
- 5-7** Not assigned
- 8*** Ericsson Cellular format
- 9** No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4 and y=5, DMI signalling.

y - Line and signaling format

y *Explanation*

- 0** ZCS - Zero code suppression
- 1*** NZCS - No zero code suppression
- 2** Not assigned
- 3** Not assigned
- 4** ZCS/DMI - Zero code suppression/DMI signaling
- 5** NZCS/DMI - No zero code suppression/DMI signaling
- 6-9** Not assigned

* Only option 1 is applicable to TE-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** No channel numbering format, clear-DS1

TH-Type xyz field

The provisioning values of x, y, and z for the TH type are shown in the following tables (a 'Y' in a column of the Table indicates that the feature at the top of the column is enabled by the corresponding (x, y or z) provisioning value):

Table 8-2. Provisioning values for x

x value	CRC-4 Mode	Automatic CRC-4
0	Y	
8		Y
B		

Table Notes:

1. The "Automatic CRC-4" is also known as CRC-4 Interworking.
2. If the CRC-4 mode is enabled (x value 0) the NPC will compute checksums over the transmitted data and transmit the checksum as part of the CRC-4 multiframe pattern in TS0. The NPC will also monitor the incoming CRC-4 multiframe and verify the CRC-4 checksum. If the CRC-4 multiframe cannot be found using the CRC-4 reframe algorithm, then the NPC will declare an alarm.

If the automatic CRC-4 option is selected (x value 8), the NPC will perform all the functions of the CRC-4 mode. However, if the CRC-4 multiframe is lost, the NPC will not declare an alarm or apply consequent actions.

3. x value B does not enable any of the features shown in the Table; this is a valid option.
4. Only x values 0, 8, and B are valid x values, all other x values will be denied.

Table 8-3. Provisioning values for y

y value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

Table Notes:

1. y values 1, 3, 5, 7, A-B and E-F are unassigned (that is, invalid).
2. For y values 0, 2, 4 and 6 Channel Associated Signaling (CAS) is enabled. In this mode the Telephone Channel Numbering system is always used.

If the "Convert TS16" option is selected (y values 0 and 2), the *abcd* bits of TS16 will be converted to '1111' if they are received as '0000'. This is to prevent false framing in the TS16 multiframe. If this option is not selected (y values 4 and 6), a value of '0000' in the *abcd* bits will be transmitted transparently.

If the "AIS in TS16" option is selected (y value 0 and 4), AIS will always be applied to received TS16 signaling channels on detection of RAI (Remote Alarm Indication, Bit 3 of TS0 NFW), RAIS (Remote AIS Indication, Bit 4 of TS0 NFW, if provisioned) or

- R16 (Remote Alarm Indication received in TS16). If this option is not selected (y values 2 and 6), AIS will not be applied on detection of RAI, RAIS, or R16.
3. For y values 8 and 9 the NPC will be Non Signaling Associated (NSA). In this mode, Telephone Channel Numbering ($y=8$) or Timeslot Channel Numbering ($y=9$) may be selected.
 4. The NPC can be set up as a framed clear 2 Mbit/s interface ($y=C$) or as an unframed clear 2 Mbit/s interface ($y=D$). When provisioned as a clear 2 Mbit/s interface, an NPC does not modify the cross-connected data in any way. This means that the following functions are not performed in the clear 2 Mbit/s mode:
 - Outgoing CRC-4 checksum generation (applies to framed clear 2 Mbit/s interfaces with CRC-4 option enabled).
 - Remote alarm indications (line format errors are reported locally, but no alarm indicators are sent in TS0 to the remote end).

Table 8-4. Provisioning values for z

z value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	166ms	500ms	RAIS	RBER	166ms	500ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
A	Y		Y							Y
B		Y	Y							Y

Table Notes:

1. z values 8, 9, C, D, E and F are unassigned (that is, invalid).
2. For z values 1, 3, 5, 7 and B the consequent action timing is under firmware (FW) control. For z values 0, 2, 4, 6 and A the consequent action timing is under hardware (HW) control.

The G.732 consequent action of inserting the AIS in data channels is applied within 2 ms whether the timing is under HW control or FW control, but when under FW control, the AIS in data channels is overridden by the Insertion Word sourced from the Alternate Message Store (AMS) after detection of the local alarm:

in 500 ms

if $z = 1, 3$ or 5
in **2496 ms**
if $z = 7$ or B

The Insertion Word pattern can be specified in the cross-connect command; on 2Mbit/s NPCs in a *gateway* **cross-connection** the Insertion Word always defaults to AIS.

The selection of HW or FW control is also used to provision the consequent actions on signaling bits. On detection of loss of frame (LOF) or multiframe alignment (LMA, Loss of Multiframe Alarm) error, the hardware immediately applies a signaling freeze by using the last good frame's signaling information. The signaling freeze remains in effect until two multiframes without errors are received. When HW control is used, the AIS in signaling bits is applied within 2 ms, overriding the signaling freeze. When FW control is used, the trunk conditioning pattern from the AMS overrides the signaling freeze once the 2Mbit/s NPC goes into the alarm state.

3. The Consequent Action timing also selects the time after which the **local** alarms are declared and cleared:*
 - HW Control: **Both** remote and local alarms are declared and cleared in 166 ms.
 - FW Control: Only remote alarms are declared and cleared in 166 ms. The **local** alarms are declared and cleared in 500 ms, **except when $z = 7$ or B .**
4. On the transmitting NPC, bit 3 in the NFW, the remote alarm indication (RAI), will be processed as specified in ITU-T Recommendation G.704 Section 2.3.2 (**that is, within 2 ms after detecting the failure**) when $z = 0, 1, 4, 5, 6, 7, A$ or B . **However,** for z value 2 the set time is 166 ms and for z value 3 the set time is 500 ms. NFW bit 3 is always set to 0 for non-alarm condition and is set to 1 for alarm conditions.
5. On the transmitting NPC, if bit 4 of the NFW is used as RAIS (Remote AIS) indicator, NFW bit 4 will be set in 166 ms (for $z = 4$) or 500 ms (for $z = 5$) after AIS is detected in the received signal. The default idle state for Bit 4 is a '1'. The idle state can be changed to a '0' with the CHG::NPC,TS0 command. The bit is put into the active state by inverting the value of the idle state. Similarly, if NFW bit 4 is in the active state in the received signal, consequent actions are taken 166 ms after detecting this condition.
6. z values 6-7 and A-B enable the Minor Bit Error Rate and Signaling Freeze Delay Time Features.

Common Options ($z = 6-7$ or A-B)

- [i] Enable BER calculations, and when in the BER state:

DACS takes the alarm state consequent actions: sending a message, and activating appropriate alarm relays and summary LEDs.

* Local alarms are those generated for the events: PWR, PBF, BER, AIS, LMA, and A16. Remote alarms are those generated for the events: RAI, RAIS, RBER, and R16.

When out of the BER state, DACS II retires the alarm state
consequent actions: sends a retirement message, and
deactivates appropriate alarm relays and summary LEDs.

- [ii] RAI set in 2 ms
- [iii] Signaling Freeze Delay Timing, Consequent Action Clear Timing:
 - z=6 or A** hardware timing
 - z=7 or B** firmware timing (SFDT=2496 ms, CACT=624 ms)

- [iv] BER alarm level = DMA

Specific Options for z= 6 or 7

- [v] RBER alarm level = MI
- [vi] NFW bit 4=RBER:
 - DACS II sends a remote indicator in bit 4 (RBER) of the time slot 0 Non Frame Word (NFW) upstream to the far end 166 ms after detecting the Minor Bit Error Rate (BER) condition.

DACS II sets the RBER bit to its idle state, on clearing of the BER condition.
 - DACS II detects the remote setting of the received bit 4 as an RBER condition and generates an appropriate message. Consequent actions are taken 166 ms after detecting this condition.

DACS II generates an appropriate retirement message when the received bit 4 returns to the idle state.

Specific Options for z= A or B

- [vii] RBER unalarmed
- [viii] NFW bit 4=disabled

NFW bit 4 is NOT used as RBER, although the local Minor Bit Error Rate (BER) condition is detected and cleared with the alarm state consequent actions.

Additionally:

- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.

The following tables provide a summary of invalid combinations of *xyz* for the TH type NPC.

Table 8-5. Combinations of x and y Values

Invalid xyz Combinations	Explanation
8Cz	Framed clear 2 Mbit/s (y value C) is valid for all valid x options except the one invoking automatic CRC-4 interworking. The interworking algorithm requires setting of outgoing E-bits, which is not permitted for a clear signal.
0Dz 8Dz	Unframed clear 2 Mbit/s (y value D) is only valid for x value B. This is the only x option which does not require decoding of TS0 content.

Table 8-6. Combinations of y and z Values

Invalid xyz Combinations	Explanation
xC1 xC3 xC5 xC7 xCB xD1 xD3 xD5 xD7 xDB	Clear 2 Mbit/s (y value C or D) cannot be used with Firmware controlled Consequent Action (z values 1, 3, 5, 7 or B).
xD4 xD6	Unframed clear 2 Mbit/s (y value D) cannot be used with z value 4 (NFW Bit 4 used for RAIS) or with z value 6 (NFW Bit 4 used for RBER) because unframed clear signals cannot obtain TS0 framing.

Table Notes:

1. If framed clear 2 Mbit/s (y value C) is selected with z value 4 (NFW Bit 4 used for RAIS) only the receive side of this function will be enabled. Outgoing RAIS indicators cannot be transmitted during clear signal operation.

2. If framed clear 2Mbit/s (y value C) is selected with z= value 6 (NFW Bit 4 used for RBER) only the receive side of this function will be enabled. Outgoing RBER indicators cannot be transmitted during clear signal operation.

There are no combinations between valid x and z values that are invalid.

IW - Insertion word

pq - Insertion word value (hexadecimal)

The value entered for pq is used as the disconnect code (DCC) or idle code. This value is inserted in the transmit direction on unassigned channels. An insertion word is not allowed for clear-DS1 NPCs; the all ones signal is transmitted for an idle clear-DS1 NPC. Thus, information about the disconnect code will not appear for any message involving a clear-DS1 type NPC. Although any hexadecimal value may be assigned, the following are some commonly used values:

<i>pq</i>	<i>Explanation</i>
7F	UAC (unassigned channel code), the default value
18	UMC (unassigned multiplex code), should only be used with type DE4yz, TE4yz, DA4yz, and TA4yz, for a T1DM formatted facility. The growth command does not enforce this restriction.
FF	Per channel all ones code, needed for not connected channels in SLC carrier and CPI applications.

For DE, TE, or DS type NPCs:

SLIP - Timing Slip

BER - Bit Error Rate

ERS - Errored Seconds

SERS - Severely Errored Seconds

COFA - Change of Frame Alignment

SANE - Shelf Alarm Near End

SAFE - Shelf Alarm Far End

SLIP

mmm - Slip major alarm threshold (0 through 255)

nnn - Slip minor alarm threshold (0 through 255)

e - Slip major alarm option selection (0 through 3)

s - Slip major alarm option old selection (0 through 3)

f - Slip minor alarm option selection (0 through 3)

t - Slip minor alarm option old selection (0 through 3)

BER (Bit Error Rate)

- p** - BER major alarm threshold, $(1E-p, 3^{\dagger} \leq p \leq 6^*)$
- q** - BER minor alarm threshold, $(1E-q, 3^{\dagger} \leq q \leq 6^*)$
 - * 7 on T1DM and Fe framing
 - [†] 4 for DE type clear-DS1 or DS type NPCs
- g** - BER major alarm option selection (0 through 3)
- u** - BER major alarm option old selection (0 through 3)
- h** - BER minor alarm option selection (0 through 3)
- v** - BER minor alarm option old selection (0 through 3)

ERS (Errored Seconds)

- rrrrr** - ERS threshold (1 through 65535)
- i** - ERS option selection (0 through 3)
- w** - ERS option old selection (0 through 3)

SERS (Severely Errored Seconds)

- sss** - SERS threshold (1 through 255)
- j** - SERS option selection (0 through 3)
- x** - SERS option old selection (0 through 3)

COFA (Change of Frame Alignment)

- ttt** - COFA major alarm threshold (1 through 511)
- uuu** - COFA minor alarm threshold (1 through 255)
- k** - COFA major alarm option selection (0 through 3)
- y** - COFA major alarm option old selection (0 through 3)
- l** - COFA minor alarm option selection (0 through 3)
- z** - COFA minor alarm option old selection (0 through 3)

SANE (Shelf Alarm Near End)

- xxxxx** - SANE threshold (0 through 65535)
- m** - SANE option selection (0 through 3)
- b** - SANE option old selection (0 through 3)

SAFE (Shelf Alarm Far End)

- zzzzz** - SAFE threshold (0 through 65535)
- n** - SAFE option selection (0 through 3)
- c** - SAFE option old selection (0 through 3)

Note: Major thresholds must be greater than minor thresholds, except for the BER threshold of SLC® 96 carrier NPCs. For DE type clear-DS1 NPCs only SLIP and BER parameters are listed. For TE type clear-DS1 DS3U NPCs only SLIP parameters are listed. Both SANE and SAFE are only applicable to SLC 96 carrier NPCs.

For ANSI (DA and TA) NPC types:

CVP - Path Coding Violations
ESP - Path Errored Seconds
SESP - Path Severely Errored Seconds
SEFS - Severely Errored Framing Seconds
CSSP - Path Controlled Slip Seconds
UASP - Path Unavailable Seconds
CVL - Line Coding Violations
ESL - Line Errored Seconds
SESL - Line Severely Errored Seconds

CVP (Path Coding Violations)

aaaaaaaa - Path Coding Violation Daily NE threshold (0 to 134217727)
jjjjjjjj - Path Coding Violation Daily FE threshold (0 to 134217727)
aaaaaaa - Path Coding Violation 15Min NE threshold (0 to 2097151)
jjjjjjj - Path Coding Violation 15Min FE threshold (0 to 2097151)
a - Path Coding Violation Daily NE option selection (0 to 3)
j - Path Coding Violation Daily FE option selection (0 to 3)
a - Path Coding Violation 15Min NE option selection (0 to 3)
j - Path Coding Violation 15Min FE option selection (0 to 3)
a - Path Coding Violation Daily NE option old selection (0 to 3)
j - Path Coding Violation Daily FE option old selection (0 to 3)
a - Path Coding Violation 15Min NE option old selection (0 to 3)
j - Path Coding Violation 15Min FE option old selection (0 to 3)

ESP (Path Errored Seconds)

bbbbbb - Path Errored Seconds Daily NE threshold (0 to 86400)
kkkkkk - Path Errored Seconds Daily FE threshold (0 to 86400)
bbb - Path Errored Seconds 15Min NE threshold (0 to 900)
kkk - Path Errored Seconds 15Min FE threshold (0 to 900)
b - Path Errored Seconds Daily NE option selection (0 to 3)
k - Path Errored Seconds Daily FE option selection (0 to 3)
b - Path Errored Seconds 15Min NE option selection (0 to 3)
k - Path Errored Seconds 15Min FE option selection (0 to 3)
b - Path Errored Seconds Daily NE option old selection (0 to 3)
k - Path Errored Seconds Daily FE option old selection (0 to 3)
b - Path Errored Seconds 15Min NE option old selection (0 to 3)
k - Path Errored Seconds 15Min FE option old selection (0 to 3)

SESP (Path Severely Errored Seconds)

cccc - Path Severely Errored Seconds Daily NE threshold (0 to 86400)
llll - Path Severely Errored Seconds Daily FE threshold (0 to 86400)
ccc - Path Severely Errored Seconds 15Min NE threshold (0 to 900)
lll - Path Severely Errored Seconds 15Min FE threshold (0 to 900)
c - Path Severely Errored Seconds Daily NE option selection (0 to 3)
l - Path Severely Errored Seconds Daily FE option selection (0 to 3)
c - Path Severely Errored Seconds 15Min NE option selection (0 to 3)
l - Path Severely Errored Seconds 15Min FE option selection (0 to 3)
c - Path Severely Errored Seconds Daily NE option old selection (0 to 3)
l - Path Severely Errored Seconds Daily FE option old selection (0 to 3)
c - Path Severely Errored Seconds 15Min NE option old selection (0 to 3)
l - Path Severely Errored Seconds 15Min FE option old selection (0 to 3)

SEFS (Severely Errored Framing Seconds)

dddd - Severely Errored Framing Seconds Daily NE threshold (0 to 86400)
mmmm - Severely Errored Framing Seconds Daily FE threshold (0 to 86400)
ddd - Severely Errored Framing Seconds 15Min NE threshold (0 to 900)
mmm - Severely Errored Framing Seconds 15Min FE threshold (0 to 900)
d - Severely Errored Framing Seconds Daily NE option selection (0 to 3)
m - Severely Errored Framing Seconds Daily FE option selection (0 to 3)
d - Severely Errored Framing Seconds 15Min NE option selection (0 to 3)
m - Severely Errored Framing Seconds 15Min FE option selection (0 to 3)
d - Severely Errored Framing Seconds Daily NE option old selection (0 to 3)
m - Severely Errored Framing Seconds Daily FE option old selection (0 to 3)
d - Severely Errored Framing Seconds 15Min NE option old selection (0 to 3)
m - Severely Errored Framing Seconds 15Min FE option old selection (0 to 3)

CSSP (Path Controlled Slip Seconds)

eeee - Path Controlled Slip Seconds Daily NE threshold (0 to 86400)
nnnn - Path Controlled Slip Seconds Daily FE threshold (0 to 86400)
eee - Path Controlled Slip Seconds 15Min NE threshold (0 to 900)
nnn - Path Controlled Slip Seconds 15Min FE threshold (0 to 900)
e - Path Controlled Slip Seconds Daily NE option selection (0 to 3)
n - Path Controlled Slip Seconds Daily FE option selection (0 to 3)
e - Path Controlled Slip Seconds 15Min NE option selection (0 to 3)
n - Path Controlled Slip Seconds 15Min FE option selection (0 to 3)
e - Path Controlled Slip Seconds Daily NE option old selection (0 to 3)
n - Path Controlled Slip Seconds Daily FE option old selection (0 to 3)
e - Path Controlled Slip Seconds 15Min NE option old selection (0 to 3)
n - Path Controlled Slip Seconds 15Min FE option old selection (0 to 3)

UASP (Path Unavailable Seconds)

fffff - Path Unavailable Seconds Daily NE threshold (0 to 86400)
ooooo - Path Unavailable Seconds Daily FE threshold (0 to 86400)
fff - Path Unavailable Seconds 15Min NE threshold (0 to 900)
ooo - Path Unavailable Seconds 15Min FE threshold (0 to 900)
f - Path Unavailable Seconds Daily NE option selection (0 to 3)
o - Path Unavailable Seconds Daily FE option selection (0 to 3)
f - Path Unavailable Seconds 15Min NE option selection (0 to 3)
o - Path Unavailable Seconds 15Min FE option selection (0 to 3)
f - Path Unavailable Seconds Daily NE option old selection (0 to 3)
o - Path Unavailable Seconds Daily FE option old selection (0 to 3)
f - Path Unavailable Seconds 15Min NE option old selection (0 to 3)
o - Path Unavailable Seconds 15Min FE option old selection (0 to 3)

CVL (Line Coding Violations)

ggggggggg
- Line Coding Violation Daily NE threshold (0 to 134217727)
ggggggg
- Line Coding Violation 15Min NE threshold (0 to 2097151)
g - Line Coding Violation Daily NE option selection (0 to 3)
g - Line Coding Violation 15Min NE option selection (0 to 3)
g - Line Coding Violation Daily NE option old selection (0 to 3)
g - Line Coding Violation 15Min NE option old selection (0 to 3)

ESL (Line Errored Seconds)

hhhhh - Line Errored Seconds Daily NE threshold (0 to 86400)
ppppp - Line Errored Seconds Daily FE threshold (0 to 86400)
hhh - Line Errored Seconds 15Min NE threshold (0 to 900)
ppp - Line Errored Seconds 15Min FE threshold (0 to 900)
h - Line Errored Seconds Daily NE option selection (0 to 3)
p - Line Errored Seconds Daily FE option selection (0 to 3)
h - Line Errored Seconds 15Min NE option selection (0 to 3)
p - Line Errored Seconds 15Min FE option selection (0 to 3)
h - Line Errored Seconds Daily NE option old selection (0 to 3)
p - Line Errored Seconds Daily FE option old selection (0 to 3)
h - Line Errored Seconds 15Min NE option old selection (0 to 3)
p - Line Errored Seconds 15Min FE option old selection (0 to 3)

SESL (Line Severely Errored Seconds)

- iiiiii** - Line Severely Errored Seconds Daily NE threshold (0 to 86400)
- iii** - Line Severely Errored Seconds 15Min NE threshold (0 to 900)
- i** - Line Severely Errored Seconds Daily NE option selection (0 to 3)
- i** - Line Severely Errored Seconds 15Min NE option selection (0 to 3)
- i** - Line Severely Errored Seconds Daily NE option old selection (0 to 3)
- i** - Line Severely Errored Seconds 15Min NE option old selection (0 to 3)

For TH type NPCs:

- CRC** - CRC Block Errors
- FRER** - Framing Errors
- OFS** - Out of Frame Seconds
- ES** - Errored Seconds
- SES** - Severely Errored Seconds
- CSS** - Controlled Slip Seconds
- UAS** - Unavailable Seconds
- UATC** - Unavailable Time Count
- MER** - Multiframe Errors

aaaaaaaa

- Daily CRC block error threshold value.

bbbbbbbb

- Daily framing error threshold value.

- cccc** - Daily out of frame seconds threshold value.
- dddd** - Daily errored second threshold value.
- eeee** - Daily severely errored second threshold value.
- ffff** - Daily controlled slip second threshold value.
- hhhh** - Daily unavailable second threshold value.
- iiii** - Daily unavailable time count threshold value.
- jjjj** - Daily multiframe alignment error threshold value.

- a** - Daily CRC block error threshold selection,
- b** - Daily framing error threshold selection,
- c** - Daily out of frame seconds threshold selection,
- d** - Daily errored second threshold selection,
- e** - Daily severely errored second threshold selection,
- f** - Daily controlled slip second threshold selection,
- h** - Daily unavailable second threshold selection,
- i** - Daily unavailable time count threshold selection,
- j** - Daily multiframe alignment error threshold selection,

- a** - Old Daily CRC block error threshold selection,
- b** - Old Daily framing error threshold selection,
- c** - Old Daily out of frame seconds threshold selection,
- d** - Old Daily errored second threshold selection,
- e** - Old Daily severely errored second threshold selection,
- f** - Old Daily controlled slip second threshold selection,
- h** - Old Daily unavailable second threshold selection,
- i** - Old Daily unavailable time count threshold selection,
- j** - Old Daily multiframe alignment error threshold selection,

The options can be a value from "0" to "c" as specified for the "m" of the "rr/m" field.

aaaaaa - 15-minute CRC block error threshold value.

bbbbbb

- 15-minute framing error threshold value.

c c c - 15-minute out of frame seconds threshold value.

d d d - 15-minute errored second threshold value.

e e e - 15-minute severely errored second threshold value.

f f f - 15-minute controlled slip second threshold value.

h h h - 15-minute unavailable second threshold value.

i i - 15-minute unavailable time count threshold value.

j j j - 15-minute multiframe alignment error threshold value.

- a** - 15-minute CRC block error threshold selection,
- b** - 15-minute framing error threshold selection,
- c** - 15-minute out of frame seconds threshold selection,
- d** - 15-minute errored second threshold selection,
- e** - 15-minute severely errored second threshold selection,
- f** - 15-minute controlled slip second threshold selection,
- h** - 15-minute unavailable second threshold selection,
- i** - 15-minute unavailable time count threshold selection,
- j** - 15-minute multiframe alignment error threshold selection,

- a** - Old 15-minute CRC block error threshold selection,
- b** - Old 15-minute framing error threshold selection,
- c** - Old 15-minute out of frame seconds threshold selection,
- d** - Old 15-minute errored second threshold selection,
- e** - Old 15-minute severely errored second threshold selection,
- f** - Old 15-minute controlled slip second threshold selection,
- h** - Old 15-minute unavailable second threshold selection,
- i** - Old 15-minute unavailable time count threshold selection,
- j** - Old 15-minute multiframe alignment error threshold selection,

The options can be a value from "0" to "c" as specified for the "m" of the "rr/m" field.

For TH type NPCs:

Depending on which interface functions are enabled by the provisioning values of xyz, some parameters may not be applicable. In this case the threshold value, the parameter count (if present in the message) and the selection value will appear as dashes ("-"). In the table below "N/A" indicates that a parameter is not applicable for the given value of x or y.

Also, if the selection value m=c has been chosen for a parameter, the threshold value and the parameter count (if present in the message) will appear as dashes.

Parameter	CRC-4 Mode Disabled (x=B)	CAS Disabled (y=8,9,C,D)	Unframed Clear 2Mbit/s (y=D)
CRC	N/A		N/A
FRER			N/A
OFS			N/A
ES			N/A
SES			N/A
CSS			
UAS			N/A
UATC			N/A
MER		N/A	N/A

ss/n - First improper values of "rr/m" for which message is denied.

cc - Hexadecimal condition code

cc *Explanation*

- 02** Subject entity is not equipped
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 13** FTMI is not equipped
- 20** Option rr/m has not been set up on 2nd database
- 21** Minor >= major for SLIP opt
- 22** Minor <= major for BER opt
- 23** Minor >= major for COFA opt
- 26** NPC type error
- 29** IW is UMUX (18) but NPC not type DE4yz
- 2A** DMI combined with T1DM
- 2B** Maj|Min BER threshold is 7, but not in T1DM or Fe mode
- 4F** BER must not be less than 4 for Clear DS1
- 83** Option not programmable for this NPC type

cc *Explanation*

- B5** NPC is a test port
- 44** Service MXR is not equipped
- 0A** Minor Slip threshold disabled before Major Slip threshold
- 32** Threshold value is out of range

CHG,NPC,RT,DL,TYPE,OPTS

CHANGE OPTIONS

Explanation Of Command

This command changes facility threshold values for one or more Network Processing Circuits (NPCs) of a particular type or SLC® bank without disconnecting and reconnecting provisioned circuits.

Command

Nonhierarchical

[I.38241]

```
CHG:FRM xy,SEQ ww:{NPC [s]abc|RT ffff|DL ffff|TYPE mnxyz},\  
OPTS(rr/m[,rr/m,...])!
```

Hierarchical

[I.38241]

```
CHG:FRM xy,SEQ ww:{NPC uvmnp|RT ffff|DL ffff|TYPE mnxyz},\  
OPTS(rr/m[,rr/m,...])!
```


Completion Message

Nonhierarchical

[O.38241]

```
M hh:mm:ss xy,ww n[vv] CHG \
{NPC [s]abc|RT ffff|DL ffff|TYPE mnxyz}[ IW pq] 5 LN MSG:
      SLIP      BER  ERS   SERS COFA      [SANE]      [SAFE]
THRESHOLDS    mmm nnn  p q  rrrrr  sss  ttt uuu  [xxxxx]  [zzzzz]
OPTIONS        e  f  g h      i  j  k  l      [m]      [n]
[OLD OPTIONS   s  t  u v      w  x  y  z      [b]      [c]]  COMPL
```

For ANSI (DA and TA type) NPCs:

[O.38242]

```
M hh:mm:ss xy,ww n[vv] CHG {NPC [s]abc|TYPE mnxyz}[ IW pq] 5 LN MSG:
DAILY NE      CVP      ESP  SESP  SEFS  CSS  UAS  CVL      ESL  SESL
THRESHOLDS    aaaaaaaaa bbbbbb ccccc ddddd eeeee fffff gggggggg hhhhh iiiii
OPTIONS        a          b  c  d  e  f  g          h  i
OLD OPTIONS    á          ß  ç  ð  é  f  ú          ñ  î  EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG {NPC [s]abc|TYPE mnxyz}[ IW pq] 5 LN MSG:
DAILY FE      CVP      ESP  SESP  SEFS  CSS  UAS  ESL
THRESHOLDS    jjjjjjjj kkkkk lllll mmmmm nnnnn ooooo ppppp
OPTIONS        j          k  l  m  n  o  p
OLD OPTIONS    j          k  l  ñ  ñ  ó  þ          EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG {NPC [s]abc|TYPE mnxyz}[ IW pq] 5 LN MSG:
15MIN NE      CVP      ESP  SESP  SEFS  CSS  UAS  CVL      ESL  SESL
THRESHOLDS    aaaaaaa bbb ccc ddd eee fff gggggggg hhh iii
OPTIONS        a          b  c  d  e  f  g          h  i
OLD OPTIONS    á          ß  ç  ð  é  f  ú          ñ  î  EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG {NPC [s]abc|TYPE mnxyz}[ IW pq] 5 LN MSG:
15MIN FE      CVP      ESP  SESP  SEFS  CSS  UAS  ESL
THRESHOLDS    jjjjjj kkk lll mmm nnn ooo ppp
OPTIONS        j          k  l  m  n  o  p
OLD OPTIONS    j          k  l  ñ  ñ  ó  þ          COMPL
```

Hierarchical

[O.38241]

```
M hh:mm:ss xy,ww n[vv] CHG {NPC uvmnp|RT ffff|DL ffff|TYPE mnxyz}\
[ IW pq] 5 LN MSG:
      SLIP      BER  ERS   SERS COFA      [SANE]  [SAFE]
THRESHOLDS    mmm nnn  p q  rrrrr  sss  ttt uu  [xxxxx] [zzzzz]
OPTIONS        e  f  g h      i  j  k  l      [m]    [n]
[OLD OPTIONS   s  t  u v      w  x  y  z      [b]    [c]] COMPL
```

For ANSI (DA and TA type) NPCs:

[O.38242]

```
M hh:mm:ss xy,ww n[vv] CHG {NPC uvmnp|TYPE mnxyz}[ IW pq] 5 LN MSG:
DAILY NE      CVP      ESP  SESP  SEFS  CSS  UAS  CVL      ESL  SESL
THRESHOLDS    aaaaaaaaa bbbbb cccc dddd eeee ffff gggggggg hhhh iiii
OPTIONS        a        b    c    d    e    f    g        h    i
OLD OPTIONS    á        ß    é    ð    é    f    g        h    i    EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG {NPC uvmnp|TYPE mnxyz}[ IW pq] 5 LN MSG:
DAILY FE      CVP      ESP  SESP  SEFS  CSS  UAS  ESL
THRESHOLDS    jjjjjjjj kkkkk llll mmmm nnnn oooo ppppp
OPTIONS        j        k    l    m    n    o    p
OLD OPTIONS    j        k    l    ñ    ñ    ó    þ    EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG {NPC uvmnp|TYPE mnxyz}[ IW pq] 5 LN MSG:
15MIN NE      CVP      ESP  SESP  SEFS  CSS  UAS  CVL      ESL  SESL
THRESHOLDS    aaaaaaa bbb  ccc  ddd  eee  fff  gggggg hhh  iii
OPTIONS        a        b    c    d    e    f    g        h    i
OLD OPTIONS    á        ß    é    ð    é    f    g        h    i    EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG {NPC uvmnp|TYPE mnxyz}[ IW pq] 5 LN MSG:
15MIN FE      CVP      ESP  SESP  SEFS  CSS  UAS  ESL
THRESHOLDS    jjjjjjj kkk  lll  mmm  nnn  ooo  ppp
OPTIONS        j        k    l    m    n    o    p
OLD OPTIONS    j        k    l    ñ    ñ    ó    þ    COMPL
```

Denial Message

Nonhierarchical

[O.38241.01]

```
M hh:mm:ss xy,ww n[vv] CHG \
{NPC [s]abc|RT ffff|DL ffff|TYPE mnxyz}[ ss/n] COND cc DNY
```

Hierarchical

[O.38241.01]

M hh:mm:ss xy,ww n[vv] **CHG** \
{NPC uvmnp|RT ffff|DL ffff|TYPE mnxyz}[ss/n] **COND cc DNY**

Autonomous Message

Not applicable.

Explanation Of Parameters

Each facility performance parameter of an NPC may have up to three user-selectable threshold values stored in the DACS II data base. The CHG::SETOP (ED-OPT-T1 for MML format) command programs these values in the DACS II data base. Threshold values are provisioned on particular NPCs through the use of the indices rr and m following the options keyword of this command. Variable rr identifies the parameter, and m selects one of the four stored threshold values for that parameter from the DACS II data base. More than one parameter can be changed with a single command by following the first rr/m pair with a list of similarly formed parameter/index pairs for each additional parameter. Unspecified options in this command retain their previous values.

Note that if the option of RT(DL) ffff is specified in the input command, all of the digroups belonging to that RT(DL) will be affected by the command.

For the MML format, the NPC-[s]abc keyword and argument may be omitted in the output response if any of the following are specified on input: TYPE-mnxyz, RT-ffff, or DL-ffff. The CHG function is then performed on all NPCs with the given TYPE, or from the same bank which had the same set of OLD options. The first (lowest numbered) NPC with the given TYPE will determine the class of NPCs affected by the CHG command.

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

The valid numbers are:

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number

Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The allowable values are as below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

RT - Remote terminal

DL - Digital carrier line unit (DCLU)

ffff - Bank identification number (0000 through 9999)

TYPE - Type

mxyz - NPC type

mxyz Explanation

DExyz	Enhanced Digroup NPC
DSxyz	SLC® Carrier Digroup NPC
TExyz	DS3U or HDS3U DS1 NPC
DAxyz	FTU DS1 ANSI NPC type
TAxyz	DS3U DS1 ANSI NPC type

DE-type xyz fields

x - Multiframe format for the digroup

x *Explanation*

0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4, y=5, and y=6, DMI signalling.

y - Line and signaling format

y *Explanation*

- 0** ZCS - Zero code suppression
- 1*** NZCS - No zero code suppression
- 2*** B8ZS - Bipolar with 8 zero substitution
- 3†** ZBTISI - Zero-bit time-slot interchanger
- 4** ZCS/DMI - Zero code suppression/DMI signaling
- 5** NZCS/DMI - No zero code suppression/DMI signaling
- 6** B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
- 7-9** Not assigned

* Only options 1 and 2 are applicable to DE-type clear-DS1 NPC.

† Only valid with ESF (x = 2 or 3)

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** No channel numbering format, clear-DS1

DS-type xyz fields

x - Multiframe format

x *Explanation*

- 0** Not assigned
- 1** D4
- 2** ESF - Voice
- 3** Not assigned
- 4** Not assigned
- 5** Not assigned
- 6** SLC® 96 carrier Fs
- 7** SLC 5 carrier ESF with data link
- 8-9** Not assigned

y - Line and signaling format

y *Explanation*

- 0** Zero code suppression (ZCS)
- 1** No zero code suppression (NZCS)
- 2** Bipolar with 8 zero substitution (B8ZS)
- 3-9** Not assigned

z - Counting sequence format

z *Explanation*

- 0** SLC 96 carrier Mode III D4 counting sequence
- 1** SLC 96 carrier Mode III D1D counting sequence
- 2** SLC 96 carrier Mode I D1D counting sequence
- 3** SLC Series 5 carrier D4 counting sequence
- 4-9** Not assigned

DA-type xyz fields

x - Multiframe format for the digroup

x *Explanation*

- 0** Not assigned
- 1** D4
- 2** ESF - Voice
- 3** ESF - Data
- 4** DDST (T1DM - R bit connection via channel 24)
- 5-7** Not assigned
- 8** Ericsson Cellular format
- 9** Not assigned

y - Line and signaling format

y *Explanation*

- 0** ZCS - Zero code suppression
- 1*** NZCS - No zero code suppression
- 2*** B8ZS - Bipolar with 8 zero substitution
- 3** Not assigned
- 4** ZCS/DMI - Zero code suppression/DMI signaling
- 5** NZCS/DMI - No zero code suppression/DMI signaling
- 6** B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
- 7-9** Not assigned

* Only options 1 and 2 are applicable to DA-type clear-DS1 NPC.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** Unchannelized Framed Clear DS1 Cross-connection

DA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a DA NPC with both a valid framing format (D4, ESF, T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the DA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II FTU, the NPC must be provisioned as NPC type **DE9y9**.

Zero Byte Time Slot Interchange (ZBTSI) encoding is not supported by the DA NPC type. If ZBTSI is desired on an NPC in a DACS II FTU, the NPC must be provisioned as a DE NPC type with its **y** option selecting ZBTSI (**DEx3z**).

TA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the TA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II DS3U, the NPC must be provisioned

as NPC type TE919.

TE-type xyz fields

x - Multiframe format

x *Explanation*

- 0** Not assigned
- 1** D4
- 2** ESF - Voice
- 3** ESF - Data
- 4** DDST (T1DM - R bit connection via channel 24)
- 5-7** Not assigned
- 8*** Ericsson Cellular format
- 9** No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4 and y=5, DMI signalling.

y - Line and signaling format

y *Explanation*

- 0** ZCS - Zero code suppression
- 1*** NZCS - No zero code suppression
- 2** Not assigned
- 3** Not assigned
- 4** ZCS/DMI - Zero code suppression/DMI signaling
- 5** NZCS/DMI - No zero code suppression/DMI signaling
- 6-9** Not assigned

* Only option 1 is applicable to TE-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** No channel numbering format, clear-DS1

OPTS - Options

rr - Facility performance parameter number

Variable rr specifies the parameter whose alarm threshold is being selected.

m - Facility performance parameter threshold index (0 through 3)

Variable m is used to select threshold values previously programmed for rr. The default threshold value, the value selected by m=0, for each parameter is shown in the table below under the column heading "Default Threshold Value". Threshold values selected by m=1 through m=3 must exist; that is, must have been programmed prior to being selected. The non-default thresholds can be set by using the CHG::SETOP (I.38201) command. Thresholds of all unspecified parameters will be set to the default value associated with m=0. The options field must not be given without the NPC type field.

Clear-DS1 ANSI NPCs (DAxy9/TAXy9) provide the same set of path and line performance monitoring parameters that are provided by terminated ANSI NPC types. ANSI NPCs in DS3 Units (TAXyz) do not provide near-end DS1 line performance monitoring parameters.

For DE, TE, or DS type NPCs:

For DE type NPCs, parameters with values rr = 1 through 8 are valid.

For DS type NPCs, parameters with values rr = 1 through 10 are valid.

For TE type NPCs, parameters with values rr = 1 through 8 are valid.

For Clear-DS1 DE type NPCs, parameters with values rr = 1 through 4 are valid.

For Clear-DS1 TE type NPCs, parameters with values rr = 1 through 2 are valid.

rr	Parameter	Threshold Value Range	Default Threshold Value
01	Slip major	000 to 255	255
02	Slip minor	000 to 255	4
03	Bit Error Rate major	1E-3* to 1E-6 [†]	1E-3*
04	Bit Error Rate minor	1E-3* to 1E-6 [†]	1E-6
05	Errored Seconds [‡]	00001 to 65535	864
06	Severely Errored Seconds [‡]	001 to 255	225
07	Change of Frame Alignment major	001 to 511	511
08	Change of Frame Alignment minor	001 to 255	17
09	Shelf Alarm Near End(SANE)§	00001 to 65535	00000
10	Shelf Alarm Far End(SAFE)§	00001 to 65535	00000

* 4 for clear-DS1 NPCs or DS type NPCs (default)

[†] 7 on DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing

[‡] Only applicable to DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing

§ Applicable only to DS type NPCs

Note 1: Major thresholds must be greater than minor thresholds.

Note 2: For Bit Error Rates, enter only the power of 10 (DACS assumes its sign is negative). For example, for a BER of 10^{-3} (.001), enter 3.

Note 3: Slip major and Slip minor threshold crossing alarms may be disabled by programming threshold values of zero for the respective parameters.

For DA and TA type NPCs:

For Channelized and Clear-DS1 DA type NPCs with ESF framing, all of the following Near-end and Far-end parameters are valid.

For Channelized and Clear-DS1 DA type NPCs with D4 or T1DM framing, all of the following Near-end parameters are valid, but the only valid Far-end parameter is Unavailable Seconds (rr = 55,71).

For Channelized and Clear-DS1 TA type NPCs with ESF framing, all of the following Near-end Path parameters are valid, but the Near-End Line parameters (rr = 47-49, 63-65) are invalid. All of the following Far-end parameters are valid.

For Channelized and Clear-DS1 TA type NPCs with D4 or T1DM framing, the following Near-end Path parameters are valid, but the Near-End Line parameters (rr = 47-49, 63-65) are invalid. The only valid Far-end parameter is Unavailable Seconds (rr = 55,71).

rr	Parameter	Threshold Value Range	Default Threshold Value
41	Daily Near-end Path Coding Violations	000000000 to 134217727	132960 [†]
42	Daily Near-end Path Errored Seconds	00000 to 86400	648
43	Daily Near-end Path Severely Errored Seconds	00000 to 86400	100
44	Daily Near-end Severely Errored Framing Seconds	00000 to 86400	17
45	Daily Near-end Controlled Slip Seconds	00000 to 86400	4
46	Daily Near-end Unavailable Seconds	00000 to 86400	10
47	Daily Near-end Line Coding Violations	000000000 to 134217727	133400
48	Daily Near-end Line Errored Seconds	00000 to 86400	648
49	Daily Near-end Line Severely Errored Seconds	00000 to 86400	100
50	Daily Far-end Path Coding Violations	000000000 to 134217727	132960 [†]
51	Daily Far-end Path Errored Seconds	00000 to 86400	648
52	Daily Far-end Path Severely Errored Seconds	00000 to 86400	100
53	Daily Far-end Severely Errored Framing Seconds	00000 to 86400	17
54	Daily Far-end Controlled Slip Seconds	00000 to 86400	4
55	Daily Far-end Unavailable Seconds	00000 to 86400	10
56	Daily Far-end Line Errored Seconds	00000 to 86400	648
57	15-Minute Near-end Path Coding Violations	0000000 to 2097151	13296 [‡]
58	15-Minute Near-end Path Errored Seconds	000 to 900	65
59	15-Minute Near-end Path Severely Errored Seconds	000 to 900	10
60	15-Minute Near-end Severely Errored Framing Seconds	000 to 900	2
61	15-Minute Near-end Controlled Slip Seconds	000 to 900	1
62	15-Minute Near-end Unavailable Seconds	000 to 900	10
63	15-Minute Near-end Line Coding Violations	0000000 to 2097151	13340
64	15-Minute Near-end Line Errored Seconds	000 to 900	65
65	15-Minute Near-end Line Severely Errored Seconds	000 to 900	10
66	15-Minute Far-end Path Coding Violations	0000000 to 2097151	13296 [‡]
67	15-Minute Far-end Path Errored Seconds	000 to 900	65
68	15-Minute Far-end Path Severely Errored Seconds	000 to 900	10
69	15-Minute Far-end Severely Errored Framing Seconds	000 to 900	2
70	15-Minute Far-end Controlled Slip Seconds	000 to 900	1
71	15-Minute Far-end Unavailable Seconds	000 to 900	10
72	15-Minute Far-end Line Errored Seconds	000 to 900	65

[†] The value shown applies to ESF framing and is a count of CRC errors. When the DS1 has D4 or T1DM framing, framing errors are counted and the default Daily value is 691.

[‡] The value shown applies to ESF framing and is a count of CRC errors. When the DS1 has D4 or T1DM framing, framing errors are counted and the default 15-Minute value is 72.

Note that IW pq as well as the last line of the output message only appears if NPC ... is used in the input message. Also note that the actual data will be printed only for those rrs that are entered on the input message. The rest of the columns will be filled with dashes (---).

pq - Hexadecimal value of the disconnect code (DCC) or idle code.

This value is inserted in the transmit direction on unassigned channels. Insertion word is not allowed for Clear-DS1 NPCs; the all ones signal is transmitted for an idle Clear-DS1 NPC. Thus, information about the disconnect code will not appear for any message involving a Clear-DS1 type NPC. Although any hexadecimal value may be assigned, the following are some commonly used values:

<i>pq</i>	<i>Explanation</i>
7F	UAC (unassigned channel code), the default value
18	UMC (unassigned multiplex code), should only be used with type DE4yz, TE4yz, DA4yz, and TA4yz, for a T1DM formatted facility. The growth command does not enforce this restriction.
FF	Per channel all ones code, needed for not connected channels in SLC carrier and CPI applications.

SLIP - Timing slip
BER - Bit error rate
ERS - Errored seconds
SERS - Severely errored seconds
COFA - Change of frame alignment
SANE - Shelf alarm near end
SAFE - Shelf alarm far end

SLIP

mmm - Slip major alarm threshold (0 through 255)
nnn - Slip minor alarm threshold (0 through 255)
e - Slip major alarm option selection (0 through 3)
s - Slip major alarm option old selection (0 through 3)
f - Slip minor alarm option selection (0 through 3)
t - Slip minor alarm option old selection (0 through 3)

BER (Bit Error Rate)

p - BER major alarm threshold, $(1E-p, 3^{\dagger} \leq p \leq 6^*)$
q - BER minor alarm threshold, $(1E-q, 3^{\dagger} \leq q \leq 6^*)$
 * 7 on T1DM and Fe framing
 † 4 for DE type clear-DS1 or DS type NPCs
g - BER major alarm option selection (0 through 3)
u - BER major alarm option old selection (0 through 3)
h - BER minor alarm option selection (0 through 3)
v - BER minor alarm option old selection (0 through 3)

ERS (Errored Seconds)

rrrrr - ERS threshold (1 through 65535)
i - ERS option selection (0 through 3)
w - ERS option old selection (0 through 3)

SERS (Severely Errored Seconds)

sss - SERS threshold (1 through 255)
j - SERS option selection (0 through 3)
x - SERS option old selection (0 through 3)

COFA (Change of Frame Alignment)

ttt - COFA major alarm threshold (1 through 511)
uuu - COFA minor alarm threshold (1 through 255)
k - COFA major alarm option selection (0 through 3)
y - COFA major alarm option old selection (0 through 3)
l - COFA minor alarm option selection (0 through 3)
z - COFA minor alarm option old selection (0 through 3)

SANE (Shelf Alarm Near End)

xxxxx - SANE threshold (0 through 65535)
m - SANE option selection (0 through 3)
b - SANE option old selection (0 through 3)

SAFE (Shelf Alarm Far End)

zzzzz - SAFE threshold (0 through 65535)
n - SAFE option selection (0 through 3)
c - SAFE option old selection (0 through 3)

Note: Major thresholds may not be equal to minor thresholds, except for the BER threshold of SLC® 96 carrier NPCs. For DE type clear-DS1 NPCs only SLIP and BER parameters are listed. For TE type clear-DS1 DS3U NPCs only SLIP parameters are listed. Both SANE and SAFE are only applicable to SLC 96 carrier NPCs.

For ANSI NPC types:

CVP - Path coding violations
ESP - Path errored seconds
SESP - Path severely errored seconds
SEFS - Severely errored framing seconds
CSS - Controlled slip seconds
UAS - Unavailable seconds
CVL - Line coding violations
ESL - Line errored seconds
SESL - Line severely errored seconds

CVP (Path Coding Violations)

aaaaaaaa - Path Coding Violation Daily NE threshold (0 to 134217727)
jjjjjjjj - Path Coding Violation Daily FE threshold (0 to 134217727)
aaaaaaa - Path Coding Violation 15Min NE threshold (0 to 2097151)
jjjjjjj - Path Coding Violation 15Min FE threshold (0 to 2097151)
a - Path Coding Violation Daily NE option selection (0 to 3)
j - Path Coding Violation Daily FE option selection (0 to 3)
a - Path Coding Violation 15Min NE option selection (0 to 3)
j - Path Coding Violation 15Min FE option selection (0 to 3)
a - Path Coding Violation Daily NE option old selection (0 to 3)
j - Path Coding Violation Daily FE option old selection (0 to 3)
a - Path Coding Violation 15Min NE option old selection (0 to 3)
j - Path Coding Violation 15Min FE option old selection (0 to 3)

ESP (Path Errored Seconds)

bbbbbb - Path Errored Seconds Daily NE threshold (0 to 86400)
kkkkkk - Path Errored Seconds Daily FE threshold (0 to 86400)
bbb - Path Errored Seconds 15Min NE threshold (0 to 900)
kkk - Path Errored Seconds 15Min FE threshold (0 to 900)
b - Path Errored Seconds Daily NE option selection (0 to 3)
k - Path Errored Seconds Daily FE option selection (0 to 3)
b - Path Errored Seconds 15Min NE option selection (0 to 3)
k - Path Errored Seconds 15Min FE option selection (0 to 3)
b - Path Errored Seconds Daily NE option old selection (0 to 3)
k - Path Errored Seconds Daily FE option old selection (0 to 3)
b - Path Errored Seconds 15Min NE option old selection (0 to 3)
k - Path Errored Seconds 15Min FE option old selection (0 to 3)

SESP (Path Severely Errored Seconds)

cccc - Path Severely Errored Seconds Daily NE threshold (0 to 86400)
llll - Path Severely Errored Seconds Daily FE threshold (0 to 86400)
ccc - Path Severely Errored Seconds 15Min NE threshold (0 to 900)
lll - Path Severely Errored Seconds 15Min FE threshold (0 to 900)
c - Path Severely Errored Seconds Daily NE option selection (0 to 3)
l - Path Severely Errored Seconds Daily FE option selection (0 to 3)
c - Path Severely Errored Seconds 15Min NE option selection (0 to 3)
l - Path Severely Errored Seconds 15Min FE option selection (0 to 3)
c - Path Severely Errored Seconds Daily NE option old selection (0 to 3)
l - Path Severely Errored Seconds Daily FE option old selection (0 to 3)
c - Path Severely Errored Seconds 15Min NE option old selection (0 to 3)
l - Path Severely Errored Seconds 15Min FE option old selection (0 to 3)

SEFS (Severely Errored Framing Seconds)

dddd - Severely Errored Framing Seconds Daily NE threshold (0 to 86400)
mmmm - Severely Errored Framing Seconds Daily FE threshold (0 to 86400)
ddd - Severely Errored Framing Seconds 15Min NE threshold (0 to 900)
mmm - Severely Errored Framing Seconds 15Min FE threshold (0 to 900)
d - Severely Errored Framing Seconds Daily NE option selection (0 to 3)
m - Severely Errored Framing Seconds Daily FE option selection (0 to 3)
d - Severely Errored Framing Seconds 15Min NE option selection (0 to 3)
m - Severely Errored Framing Seconds 15Min FE option selection (0 to 3)
d - Severely Errored Framing Seconds Daily NE option old selection (0 to 3)
m - Severely Errored Framing Seconds Daily FE option old selection (0 to 3)
d - Severely Errored Framing Seconds 15Min NE option old selection (0 to 3)
m - Severely Errored Framing Seconds 15Min FE option old selection (0 to 3)

CSS (Controlled Slip Seconds)

eeee - Controlled Slip Seconds Daily NE threshold (0 to 86400)
nnnn - Controlled Slip Seconds Daily FE threshold (0 to 86400)
eee - Controlled Slip Seconds 15Min NE threshold (0 to 900)
nnn - Controlled Slip Seconds 15Min FE threshold (0 to 900)
e - Controlled Slip Seconds Daily NE option selection (0 to 3)
n - Controlled Slip Seconds Daily FE option selection (0 to 3)
e - Controlled Slip Seconds 15Min NE option selection (0 to 3)
n - Controlled Slip Seconds 15Min FE option selection (0 to 3)
e - Controlled Slip Seconds Daily NE option old selection (0 to 3)
n - Controlled Slip Seconds Daily FE option old selection (0 to 3)
e - Controlled Slip Seconds 15Min NE option old selection (0 to 3)
n - Controlled Slip Seconds 15Min FE option old selection (0 to 3)

UAS (Unavailable Seconds)

fffff - Unavailable Seconds Daily NE threshold (0 to 86400)
ooooo - Unavailable Seconds Daily FE threshold (0 to 86400)
fff - Unavailable Seconds 15Min NE threshold (0 to 900)
ooo - Unavailable Seconds 15Min FE threshold (0 to 900)
f - Unavailable Seconds Daily NE option selection (0 to 3)
o - Unavailable Seconds Daily FE option selection (0 to 3)
f - Unavailable Seconds 15Min NE option selection (0 to 3)
o - Unavailable Seconds 15Min FE option selection (0 to 3)
f - Unavailable Seconds Daily NE option old selection (0 to 3)
o - Unavailable Seconds Daily FE option old selection (0 to 3)
f - Unavailable Seconds 15Min NE option old selection (0 to 3)
o - Unavailable Seconds 15Min FE option old selection (0 to 3)

CVL (Line Coding Violations)

ggggggggg
- Line Coding Violation Daily NE threshold (0 to 134217727)
ggggggg
- Line Coding Violation 15Min NE threshold (0 to 2097151)
g - Line Coding Violation Daily NE option selection (0 to 3)
g - Line Coding Violation 15Min NE option selection (0 to 3)
g - Line Coding Violation Daily NE option old selection (0 to 3)
g - Line Coding Violation 15Min NE option old selection (0 to 3)

ESL (Line Errored Seconds)

hhhhh - Line Errored Seconds Daily NE threshold (0 to 86400)
ppppp - Line Errored Seconds Daily FE threshold (0 to 86400)
hhh - Line Errored Seconds 15Min NE threshold (0 to 900)
ppp - Line Errored Seconds 15Min FE threshold (0 to 900)
h - Line Errored Seconds Daily NE option selection (0 to 3)
p - Line Errored Seconds Daily FE option selection (0 to 3)
h - Line Errored Seconds 15Min NE option selection (0 to 3)
p - Line Errored Seconds 15Min FE option selection (0 to 3)
h - Line Errored Seconds Daily NE option old selection (0 to 3)
p - Line Errored Seconds Daily FE option old selection (0 to 3)
h - Line Errored Seconds 15Min NE option old selection (0 to 3)
p - Line Errored Seconds 15Min FE option old selection (0 to 3)

SESL (Line Severely Errored Seconds)

- iiiiii** - Line Severely Errored Seconds Daily NE threshold (0 to 86400)
- iii** - Line Severely Errored Seconds 15Min NE threshold (0 to 900)
- i** - Line Severely Errored Seconds Daily NE option selection (0 to 3)
- i** - Line Severely Errored Seconds 15Min NE option selection (0 to 3)
- i** - Line Severely Errored Seconds Daily NE option old selection (0 to 3)
- i** - Line Severely Errored Seconds 15Min NE option old selection (0 to 3)

ss/n - First improper values of "rr/m" for which message is denied.

cc - Hexadecimal condition code

cc *Explanation*

- 02** Subject entity is not equipped
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 13** FTMI is not equipped
- 20** Option rr/m has not been set up on 2nd database
- 21** Minor >= major for SLIP opt
- 22** Minor <= major for BER opt
- 23** Minor >= major for COFA opt
- 26** NPC type error
- 29** IW is UMUX (18) but NPC not type DE4yz
- 2A** DMI combined with T1DM
- 2B** Maj|Min BER threshold is 7, but not in T1DM or Fe mode
- 7E** Bank id number not found
- 83** Option not programmable for this NPC type
- 1A** The facility parameter not programmable for specified x or z parameter
- 0A** Minor Slip threshold disabled before Major Slip threshold
- 32** Threshold value is out of range

CHG,NPC,TS0

CHANGE NPC TIME SLOT ZERO

Explanation Of Command

This message allows the changing of the spare national and international bits in TS0.

TS0-abcdefgh is the international and national bit in timeslot 0. Each variable may be set to one of the following: 0, 1, p or -. p indicates that the incoming bit will be passed through unchanged if cross-connected. A 0 and 1 set for any of the bits (except c) will override the cross-connected bits. This also applies to NPCs assigned as test NPCs. A hyphen (-) means that the bit is not affected by this command.

When a range NPC is denied for successive NPCs in the range for the same reason, a summary denial message shall be output, giving the range of NPCs denied and the reason. The execution of the normal completions, or of denials for a reason other than diagnostic failures, then resumes at the next NPC, up to the end of the range.

Command

Nonhierarchical

[I.38321]

CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TS0 abcdefgh!

Hierarchical

[I.38321]

CHG:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],TS0 abcdefgh!

Completion Message

Nonhierarchical

[O.38321]

M hh:mm:ss xy,ww n[vv] CHG NPC [s]jkl OLD abcdefgh \
NEW abcdefgh TS0 COMPL

Hierarchical

[O.38321]

M hh:mm:ss xy,ww n[vv] CHG NPC uvjkl OLD abcdefgh \
NEW abcdefgh TS0 COMPL

Denial Message

Nonhierarchical

[O.38321.01]

M hh:mm:ss [<xy>],ww n[vv]G NPC [s]jkl[-[t]mno] ab\
cdefgh TS0 COND cc DNY

Hierarchical

[O.38321.01]

M hh:mm:ss xy,ww n[vv]G NPC uvjkl[-uvmno] abc\
defgh TS0 COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc, [t]def

- The 3- or 4-digit nonhierarchical NPC number, must be in the same unit

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number
uvkqr - Hierarchical NPC number

uv - Unit number
m, k - Module number
np, qr - NPC number within the module

The allowable values are presented below:

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

TS0 - Time slot zero (0)
abcdefgh
- Spare bits in TS0

Variable Action on corresponding TS0 bit:
Input Value

"0" or "1"	Set TS0 bit to this value
"P"	Received bit is passed through (cross-connected) unchanged.
"-"	Neither the variable nor the TS0 bit is changed by this command.

[s]jkl - The 3- or 4-digit nonhierarchical NPC number within the range of [s]abc and [t]def.

[t]mno - The 3- or 4-digit nonhierarchical NPC number within the range of [s]abc and [t]def.

uvjkl - Hierarchical NPC number (uvmnp through wxkqr)

uvmno - Hierarchical NPC number (uvmnp through wxkqr)

abcdefgh

- Variables to corresponding TS0 bits.

The output parameters take on values dependent on the message language (PDS or MML) and position (OLD or NEW) as shown in the following table:

Input	Output Primary Line (MML)	OLD	NEW
"0"	"0"	previous	"0"
"1"	"1"	previous	"1"
"P"	"P"	previous	"P"
"V" (PA only)	"V"	previous	"V"
"_"	"_"	previous	previous

previous value may be one of "0", "1", "P", or "V" (for PA NPCs)

For example:

11----00	11----00	0011PPPP	1111PP00

cc - Hexadecimal condition code

cc *Explanation*

- 02** Subject entity is not equipped
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 13** FTMI is not equipped
- 14** FTMI is out of service
- 24** Unit type error
- 2B** Bit c not settable
- 3C** Bits 3 through 8 are provisioned for Transmic 1G
- 3D** Alarm bits cannot be passed through or inverted
- 46** NPC Failed or Out of Service
- B0** Combination of bit g (b7) and h (b8) is invalid
- F1** Parameter only valid with PA, PB, or PC type NPCs
- F2** Invalid NPC number specified
- FF** Termination is in process of being rolled

CHG,NPC,TS0M

CHANGE TIME SLOT ZERO MONITOR

Explanation Of Command

This command is used to change the Network Processing Circuit provisioning either to monitor or to stop monitoring the National and International bits in CTS 0 without removing the NPC from service. The provisioning may be specified for one NPC or for a range of NPCs. Note that the NPC numbers which are divisible by four with remainder zero, are not a valid Hybrid DS3 Unit THxyz type NPCs. However, the range of THxyz type NPC numbers is still supported with the understanding that there may be gaps in the NPC number range.

Command

Nonhierarchical

[I.38323]

CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TS0M abcdefgh!

Hierarchical

[I.38323]

CHG:FRM xy,SEQ ww:NPC uvmnp[-wxkqr],TS0M abcdefgh!

Completion Message

Nonhierarchical

[O.38323]

M hh:mm:ss xy, ww n[vv] CHG NPC [s]abc OLDM abcdefgh\
NEWM abcdefgh TS0MBOFL v COMPL

Hierarchical

[O.38323]

M hh:mm:ss xy, ww n[vv] CHG NPC uvmnp OLDM abcdefgh\
NEWM abcdefgh TS0MBOFL v COMPL

Denial Message

Nonhierarchical

[O.38323.01]

M hh:mm:ss xy, ww n[vv] CHG NPC [v]ghi[-[u]jkl]\
TS0M abcdefgh COND cc DNY

Hierarchical

[O.38323.01]

M hh:mm:ss xy, ww n[vv] CHG NPC edhfg[-opjst]\
TS0M abcdefgh COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit beginning NPC number
The values are listed below:

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

[t]def - The 3- or 4-digit ending NPC number
The valid values are identical to those for [s]abc

uvmnp - Beginning NPC number
wxkqr - Ending NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number
The values are listed below:

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

abcdefgh

- Time slot 0 monitor bits

- Leave the setting of the monitor mask for that bit unchanged

[v]ghi - The 3- or 4-digit nonhierarchical NPC number ([s]abc through [u]jkl)

[u]jkl - The 3- or 4-digit nonhierarchical NPC number
([s]ghi through [t]def)

edhfg - Hierarchical NPC number (uvmnp through opjst)

opjst - Hierarchical NPC number (edhfg through wxkqr)

OLDM - Old value of TS0M bits

NEWM - New value of TS0M bits

TS0MBOFL

- TS0M buffer overflow keyword

v - TS0M buffer overflow condition indicator

cc - Hexadecimal condition code

cc *Explanation*

10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
15	NPC is unequipped
24	Unit type error
32	Bit 3 provisioned for use as RAI3
33	Bit 4 provisioned for use as RAIS

cc *Explanation*

- 3A** Bit 4 provisioned for use as RBER
- 3B** Bit 5 provisioned for use as SFI
- 3C** Bits 3 through 8 are provisioned for Transmic 1G
- EF** Software does not contain Enhanced CEPT feature
- F1** Parameter only valid with PA, PB, or PC type NPCs
- F2** Invalid NPC number specified
- FF** Termination is in process of being rolled

CHG,NPC,TYPE,IW,X

CHANGE NPC TYPE FOR TH TYPE NPCS

Explanation Of Command

This command is used to change the type and, optionally, the insertion word of a specified TH type Network Processing Circuit (NPC) equipped in a Hybrid DS3 Unit. The insertion word field is used to change the NPC's Insertion Word for the NPC, which is transmitted in the direction of a channel that is unassigned. These changes may be made without disconnecting and reconnecting the provisioned circuits (channels), but the NPC must be out of service when this command is executed.

The y value in the type field may not be changed, because a change in the y value may change the channel numbering for cross-connections that are already provisioned.

TH type NPCs may not be changed to a TE type NPC with this command.

TH type NPCs embedded within a hybrid DS3 may only be changed to TE type NPCs, if all TH type NPCs within a particular DS2 within that DS3 are degrown and then new TE type NPCs are grown within that DS2.

The NPC must be out of service to change the facility provisioning. It can be taken out of service using the **RMV** command. Changes to the parameters will take effect when the NPC is restored (**RST**) to service. When the NPC facility provisioning is changed, all programmable alarm thresholds revert to their default values. These default thresholds are defined in the **GRTH : NPC, TYPE** message. If values other than the defaults are desired, a separate **CHG : NPC, OPTS** command must be given for each value.

For TE and TA type NPCs, use I.38271 and for DA, DE, DS, PA, PB, or PC type NPCs, use I.38211 to request a change of the NPC Type and insertion word.

Command

Nonhierarchical

[I.38311]

CHG:FRM xy,SEQ ww:NPC [s]abc,TYPE mnxyz[,IW X'pq[r]]!

Hierarchical

[I.38311]

CHG:FRM xy,SEQ ww:NPC uvmnp,TYPE mnxyz[,IW X'pq[r]]!

Completion Message

Nonhierarchical

[O.38311]

M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[IW pq[r]] 2 LN MSG:
OLD TYPE ttuvw[OLD IW rs[t]] COMPL

Hierarchical

[O.38311]

M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[IW pq[r]] 2 LN MSG:
OLD TYPE ttuvw[OLD IW rs[t]] COMPL

Denial Message

Nonhierarchical

[O.38311.01]

M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[IW pq[r]] \
COND cc DNY

Hierarchical

[O.38311.01]

M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[IW pq[r]] \

COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical NPC number

The allowable values are presented below:

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number in unit uv
np - NPC number in module m

The allowable values are presented below:

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

OLD - Old

TYPE - Type

mnxyz - NPC type

mnxyz Type

THxyz CEPT NPC embedded within a hybrid DS3

ttuvw - Previous value of mnxyz

TH-Type xyz field

The provisioning values of *x*, *y*, and *z* for the **TH** type are shown in the following tables (a 'Y' in a column of the Table indicates that the feature at the top of the column is enabled by the corresponding (*x*, *y* or *z*) provisioning value):

Table 8-7. Provisioning values for *x*

x value	CRC-4 Mode	Automatic CRC-4
0	Y	
8		Y
B		

Table Notes:

1. The "Automatic CRC-4" is also known as CRC-4 Interworking.
2. If the CRC-4 mode is enabled (*x* value 0) the NPC will compute checksums over the transmitted data and transmit the checksum as part of the CRC-4 multiframe pattern in TS0. The NPC will also monitor the incoming CRC-4 multiframe and verify the CRC-4 checksum. If the CRC-4 multiframe cannot be found using the CRC-4 reframe algorithm, then the NPC will declare an alarm.

If the automatic CRC-4 option is selected (*x* value 8), the NPC will perform all the functions of the CRC-4 mode. However, if the CRC-4 multiframe is lost, the NPC will not declare an alarm or apply consequent actions.
3. *x* value B does not enable any of the features shown in the Table; this is a valid option.
4. Only *x* values 0, 8, and B are valid *x* values, all other *x* values will be denied.

Table 8-8. Provisioning values for *y*

<i>y</i> value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

Table Notes:

1. *y* values 1, 3, 5, 7, A-B and E-F are unassigned (that is, invalid).
2. For *y* values 0, 2, 4 and 6 Channel Associated Signaling (CAS) is enabled. In this mode the Telephone Channel Numbering system is always used.

If the "Convert TS16" option is selected (*y* values 0 and 2), the *abcd* bits of TS16 will be converted to '1111' if they are received as '0000'. This is to prevent false framing in the TS16 multiframe. If this option is not selected (*y* values 4 and 6), a value of '0000' in the *abcd* bits will be transmitted transparently.

If the "AIS in TS16" option is selected (*y* value 0 and 4), AIS will always be applied to received TS16 signaling channels on detection of RAI (Remote Alarm Indication, Bit 3 of TS0 NFW), RAIS (Remote AIS Indication, Bit 4 of TS0 NFW, if provisioned) or R16 (Remote Alarm Indication received in TS16). If this option is not selected (*y* values 2 and 6), AIS will not be applied on detection of RAI, RAIS, or R16.

3. For *y* values 8 and 9 the NPC will be Non Signaling Associated (NSA). In this mode, Telephone Channel Numbering (*y*=8) or Timeslot Channel Numbering (*y*=9) may be selected.
4. The NPC can be set up as a framed clear 2 Mbit/s interface (*y*=C) or as an unframed clear 2 Mbit/s interface (*y*=D). When provisioned as a clear 2 Mbit/s interface, an NPC does not modify the cross-connected data in any way. This means that the following functions are not performed in the clear 2 Mbit/s mode:
 - Outgoing CRC-4 checksum generation (applies to framed clear 2 Mbit/s interfaces with CRC-4 option enabled).
 - Remote alarm indications (line format errors are reported locally, but no alarm indicators are sent in TS0 to the remote end).

Table 8-9. Provisioning values for *z*

<i>z</i> value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	166ms	500ms	RAIS	RBER	166ms	500ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
A	Y		Y							Y
B		Y	Y							Y

Table Notes:

1. *z* values 8, 9, C, D, E and F are unassigned (that is, invalid).
2. For *z* values 1, 3, 5, 7 and B the consequent action timing is under firmware (FW) control. For *z* values 0, 2, 4, 6 and A the consequent action timing is under hardware (HW) control.

The G.732 consequent action of inserting the AIS in data channels is applied within 2 ms whether the timing is under HW control or FW control, but when under FW control, the AIS in data channels is overridden by the Insertion Word sourced from the Alternate Message Store (AMS) after detection of the local alarm:

in **500 ms**
if *z* = 1, 3 or 5
in **2496 ms**
if *z* = 7 or B

The Insertion Word pattern can be specified in the cross-connect command; on 2Mbit/s NPCs in a *gateway* **cross-connection** the Insertion Word always defaults to AIS.

The selection of HW or FW control is also used to provision the consequent actions on signaling bits. On detection of loss of frame (LOF) or multiframe alignment (LMA, Loss of Multiframe Alarm) error, the hardware immediately applies a signaling freeze by using the last good frame's signaling information. The signaling freeze remains in effect until two multiframes without errors are received. When HW control is used, the AIS in signaling bits is applied within 2 ms, overriding the signaling freeze. When FW control is used, the trunk conditioning pattern from the AMS overrides the signaling freeze once the 2Mbit/s NPC goes into the alarm state.

3. The Consequent Action timing also selects the time after which the **local** alarms are declared and cleared:*
- HW Control: **Both** remote and local alarms are declared and cleared in 166 ms.
- FW Control: Only remote alarms are declared and cleared in 166 ms. The **local** alarms are declared and cleared in 500 ms, **except when z = 7 or B**.
4. On the transmitting NPC, bit 3 in the NFW, the remote alarm indication (RAI), will be processed as specified in ITU-T Recommendation G.704 Section 2.3.2 (**that is, within 2 ms after detecting the failure**) when z = 0, 1, 4, 5, 6, 7, A or B. **However**, for z value 2 the set time is 166 ms and for z value 3 the set time is 500 ms. NFW bit 3 is always set to 0 for non-alarm condition and is set to 1 for alarm conditions.
5. On the transmitting NPC, if bit 4 of the NFW is used as RAIS (Remote AIS) indicator, NFW bit 4 will be set in 166 ms (for z = 4) or 500 ms (for z = 5) after AIS is detected in the received signal. The default idle state for Bit 4 is a '1'. The idle state can be changed to a '0' with the CHG::NPC,TS0 command. The bit is put into the active state by inverting the value of the idle state. Similarly, if NFW bit 4 is in the active state in the received signal, consequent actions are taken 166 ms after detecting this condition.
6. z values 6-7 and A-B enable the Minor Bit Error Rate and Signaling Freeze Delay Time Features.

Common Options (z = 6-7 or A-B)

- [i] Enable BER calculations, and when in the BER state:

DACS takes the alarm state consequent actions: sending a message, and activating appropriate alarm relays and summary LEDs.

When out of the BER state, DACS II retires the alarm state consequent actions: sends a retirement message, and deactivates appropriate alarm relays and summary LEDs.

- [ii] RAI set in 2 ms

- [iii] Signaling Freeze Delay Timing, Consequent Action Clear Timing:

z=6 or A hardware timing

z=7 or B firmware timing (SFDT=2496 ms, CACT=624 ms)

- [iv] BER alarm level = DMA

Specific Options for z= 6 or 7

- [v] RBER alarm level = MI

* Local alarms are those generated for the events: PWR, PBF, BER, AIS, LMA, and A16. Remote alarms are those generated for the events: RAI, RAIS, RBER, and R16.

[vi] NFW bit 4=RBBER:

- DACS II sends a remote indicator in bit 4 (RBBER) of the time slot 0 Non Frame Word (NFW) upstream to the far end 166 ms after detecting the Minor Bit Error Rate (BER) condition.

DACS II sets the RBBER bit to its idle state, on clearing of the BER condition.

- DACS II detects the remote setting of the received bit 4 as an RBBER condition and generates an appropriate message. Consequent actions are taken 166 ms after detecting this condition.

DACS II generates an appropriate retirement message when the received bit 4 returns to the idle state.

Specific Options for z= A or B

[vii] RBBER unalarmed

[viii] NFW bit 4=disabled

NFW bit 4 is NOT used as RBBER, although the local Minor Bit Error Rate (BER) condition is detected and cleared with the alarm state consequent actions.

Additionally:

- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.

The following tables provide a summary of invalid combinations of xyz for the TH type NPC.

Table 8-10. Combinations of x and y Values

Invalid xyz Combinations	Explanation
8Cz	Framed clear 2 Mbit/s (y value C) is valid for all valid x options except the one invoking automatic CRC-4 interworking. The interworking algorithm requires setting of outgoing E-bits, which is not permitted for a clear signal.
0Dz 8Dz	Unframed clear 2 Mbit/s (y value D) is only valid for x value B. This is the only x option which does not require decoding of TS0 content.

Table 8-11. Combinations of y and z Values

Invalid xyz Combinations	Explanation
xC1 xC3 xC5 xC7 xCB xD1 xD3 xD5 xD7 xDB	Clear 2 Mbit/s (y value C or D) cannot be used with Firmware controlled Consequent Action (z values 1, 3, 5, 7 or B).
xD4 xD6	Unframed clear 2 Mbit/s (y value D) cannot be used with z value 4 (NFW Bit 4 used for RAIS) or with z value 6 (NFW Bit 4 used for RBER) because unframed clear signals cannot obtain TS0 framing.

Table Notes:

1. If framed clear 2 Mbit/s (y value C) is selected with z value 4 (NFW Bit 4 used for RAIS) only the receive side of this function will be enabled. Outgoing RAIS indicators cannot be transmitted during clear signal operation.

2. If framed clear 2Mbit/s (y value C) is selected with z= value 6 (NFW Bit 4 used for RBER) only the receive side of this function will be enabled. Outgoing RBER indicators cannot be transmitted during clear signal operation.

There are no combinations between valid x and z values that are invalid.

IW - Insertion word

pq - Insertion word value (hexadecimal)

Hexadecimal value of the growth insertion word (GIW). Specifies the insertion word sent in the transmit direction on unassigned channels. If this value is not specified, it remains unchanged from its previous value.

An eight-bit code, called the growth insertion word, is transmitted by this NPC on unassigned 64kb/s channels. This code is specified by the optional keyword IW and its argument pq. This code should not be confused with the insertion word provisioned optionally on the cross-connect command, which is used if and only if the DCC keyword is specified at disconnection time.

pq Explanation

D5 Unassigned Channel Code (UAC). Default value.

rs - Previous value of pq

r - Transmitted signaling information

r is the portion of TS16 used for signaling when provisioned for CAS (four signaling bits in the associated CAS time slot 16 signaling). If **r** is not specified, it will remain unchanged.

r Explanation

D Unassigned channel code (UAC). Default value.

t - Previous value of r

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

02	Subject entity is not equipped
03	Subject entity is in service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
26	NPC type error
2A	DMI combined with T1DM
34	NPC type option xyz is unassigned
35	NPC has active circuit
42	Change not valid
83	Option not programmable for this NPC type
8F	NPC not deleted
BB	Timeslot channel numbering not allowed with CAS
C9	In-service NPC change not allowed
F2	Invalid NPC number specified
36	INCL keyword needed when restricted Insertion Word specified
7E	Framed/Unframed clear 2Mbit/s NPC invalid for Automatic CRC-4
7F	Unframed clear 2Mbit/s NPC invalid for TS0 processing
81	Framed/Unframed clear 2Mbit/s NPC invalid for Firmware Timing
82	Unframed clear 2Mbit/s NPC invalid for Bit 4 used as RA IS/RBER
85	IW not allowed to be specified in Clear 2Mbit/s
A1	NPC has been designated as NPCTG
A7	NPC has been designated as NPCTP
E5	Invalid combination of "x" and "z" values
E7	Invalid combination of "x" and "y" values

CHG,NPC,TYPE,IW,X,INCL

CHANGE NPC TYPE

Explanation Of Command

This command is used to change the type and, optionally, the insertion word of a specified network processing Circuit (NPC) equipped in a facility terminating unit (IFTU2/IFTU/FTU). The insertion word field is used to change the NPC's disconnect code (DCC). These changes may be made without disconnecting and reconnecting the provisioned circuits, but the NPC must be out of service when this command is executed.

Permissible type changes depend upon the digroup card in use. For NPCs provisioned on the DACS II Enhanced Dual Digroup Card (TG191-EDDC), the **mn**, **x**, and **y** values of the NPC TYPE may be changed if the NPC is out of service. This feature makes use of the flexibility of the TG191 circuit pack. The **z** value must not be changed from the value entered when the NPC was provisioned, because the channel numbering format cannot be changed if cross-connections exist on the NPC.

For NPCs provisioned on other DACS II Dual Digroup Cards, only the **x** and **y** values of the NPC TYPE may be changed with this command. The **mn** and **z** values must not be changed from the values entered in the NPC provisioning command.

The NPC must be out of service to change the facility provisioning. It can be taken out of service using the **RMV** command. Changes to the parameters will take effect when the NPC is restored (**RST**) to service. When the NPC facility provisioning is changed, all programmable alarm thresholds revert to their default values. These default thresholds are defined in the **GRTH: :NPC, TYPE** message. If values other than the defaults are desired, a separate **CHG: :NPC, OPTS** command must be given for each value.

For NPCs on **DS3Us** and for TE type NPCs on Hybrid DS3Us, use I.38271 to request a change of the NPC Type and/or insertion word.

For TH type NPCs on Hybrid DS3Us, use I.38311 to request a change of the NPC type and/or insertion word.

Command

Nonhierarchical

[I.38211]

CHG:FRM xy,SEQ ww:NPC [s]abc,TYPE mnxyz[,IW X'pq[,INCL]]!

Hierarchical

[I.38211]

CHG:FRM xy,SEQ ww:NPC uvmnp,TYPE mnxyz[,IW X'pq[,INCL]]!

Completion Message

Nonhierarchical

[O.38211]

M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz\
[IW pq[INCL]] 2 LN MSG:
OLD TYPE ttuvw[OLD IW rs] COMPL

Hierarchical

[O.38211]

M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz\
[IW pq[INCL]] 2 LN MSG:
OLD TYPE ttuvw[OLD IW rs] COMPL

Denial Message

Nonhierarchical

[O.38211.01]

M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[IW pq[INCL]] \
COND cc DNY

Hierarchical

[O.38211.01]

M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[IW pq[INCL]] \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical NPC number
The allowable values are presented below:

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number in unit uv
np - NPC number in module m

The allowable values are presented below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

OLD - Old

TYPE - Type

mnxyz - NPC type

mnxyz Type

DAxyz IFTU2/IFTU/FTU ANSI DS1 NPC type
DExyz IFTU2/IFTU/FTU DS1 NPC type
DSxyz SLC® Carrier Terminating NPC type

DA-type xyz fields**x** - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DA-type clear-DS1 NPC.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).**z** - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

DA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a DA NPC with both a valid framing format (D4, ESF, T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the DA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II FTU, the NPC must be provisioned as NPC type **DE9y9**.

Zero Byte Time Slot Interchange (ZBTSI) encoding is not supported by the DA NPC type. If ZBTSI is desired on an NPC in a DACS II FTU, the NPC must be provisioned as a DE NPC type with its **y** option selecting ZBTSI (**DEx3z**).

DE-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4, y=5, and y=6, DMI signalling.

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3†	ZBTSI - Zero-bit time-slot interchanger
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DE-type clear-DS1 NPC.

† Only valid with ESF (x = 2 or 3)

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	No channel numbering format, clear-DS1

DS-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	Not assigned
4	Not assigned
5	Not assigned
6	SLC® 96 carrier Fs
7	SLC 5 carrier ESF with data link
8-9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	Zero code suppression (ZCS)
1	No zero code suppression (NZCS)
2	Bipolar with 8 zero substitution (B8ZS)
3-9	Not assigned

z - Counting sequence format

z	<i>Explanation</i>
0	SLC 96 carrier Mode III D4 counting sequence
1	SLC 96 carrier Mode III D1D counting sequence
2	SLC 96 carrier Mode I D1D counting sequence
3	SLC Series 5 carrier D4 counting sequence
4-9	Not assigned

Note: For DS-type NPCs only, all cross-connects must be disconnected before the NPC's type can be changed because the NPC must be deleted from the RT in order to change the NPC's type.

ttuvw - Previous value of mnxyz

IW - Insertion word

pq - Insertion word value (hexadecimal)

Hexadecimal value of the growth insertion word (GIW). Specifies the insertion word sent in the transmit direction on unassigned channels. If this value is not specified, it remains unchanged from its previous value.

An eight-bit code, called the growth insertion word, is transmitted by this NPC on unassigned 64kb/s channels. This code is specified by the optional keyword IW and its argument pq. This code was previously called the Disconnect Code (DCC), but that name is properly reserved for the cross-connect insertion word, which is transmitted when the disconnect message with DDC specified is used.

For Clear-DS1 NPCs, the insertion word option is **NOT** available and the message will be denied if this option is entered. The alarm indication signal (AIS) is transmitted in the disconnect or idle state.

Although any 2-digit hexadecimal code may be used (see INCL below), some common GIWs are:

<i>pq</i>	<i>Explanation</i>
7F	Unassigned Channel Code (UAC). Default value for all NPC types with non-T1DM framing.
18	Unassigned Multiplex Code (UMC). Default value for DE/DA type NPCs provisioned with T1DM framing. This value should only be provisioned with T1DM framing (DE4yz or DA4yz), so the change command enforces this restriction.
FF	Per channel all ones code, needed for unconnected channels in SLC [®] carrier (DS type NPCs) and computer-to-PBX interface (CPI) applications.

rs - Previous value of pq

INCL - Inclusive

As a protection to users, this keyword must be added to provision an NPC with D4 framing and an Insertion Word with bit 2 equal to zero. NPCs grown in the D4 format (DE1yz/DA1yz) transmit a DS1 yellow alarm by setting bit 2 to zero in all 24 DS0 channels. If the Insertion Word "pq" is unknowingly provisioned in this manner, the NPC will transmit a D4 yellow alarm signal when it is restored. The D4 yellow alarm is generated by any Insertion Word with the binary value a0cdefgh, where the letters a-h define the eight bits of the binary word. The D4 yellow alarm is not generated by an Insertion Word with a binary value a1cdefgh.

COND - Condition**cc** - Hexadecimal condition code**cc** *Explanation*

02	Subject entity is not equipped
03	Subject entity is in service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
1F	FTMI is in service but failed
20	Option rr/m has not been set up on 2nd database
21	Minor >= major for SLIP opt
26	NPC type error
29	IW is UMUX (18) but NPC not type DE4yz
2A	DMI combined with T1DM
2B	Maj Min BER threshold is 7, but not in T1DM or Fe mode
34	NPC type option xyz is unassigned
35	NPC has active circuit
4E	RTBC conference exists
86	NPC is NPCTG and chan 24 is used in a TG;Can't change to T1DM or DMI
3D	Alarm bits cannot be passed through or inverted
42	Change not valid
4E	IW option is not allowed for new type of Clear-DS1 NPC
4F	BER must not be less than 4 for Clear DS1
7C	Different DSxyz types are used for DGA/DGP on same DDC for Mode I
83	Option not programmable for this NPC type
8A	x & z parameters on DSxyz are inconsistent
8F	NPC not deleted
BB	Timeslot channel numbering not allowed with CAS
C9	In-service NPC change not allowed
CD	NPC not designated as sync timing source
F2	Invalid NPC number specified
F6	T1DM or DMI mode and channel 24 is connected

cc *Explanation*

- FC** ZBTSl option is only valid with the ESF mode
- FE** Change to non-ESF digroup with 16-state cross-connect
- FF** Change to T1DM digroup with cross-connect that is not TRSP
- 05** This NPC type does not allow unframed Clear-DS1
- 87** NPC as 12th test port can not change to DMI nor T1DM
- 36** INCL keyword needed when restricted Insertion Word specified
- 7E** Framed/Unframed clear 2Mbit/s NPC invalid for Automatic CRC-4
- 7F** Unframed clear 2Mbit/s NPC invalid for TS0 processing
- 80** Framed/Unframed clear 2Mbit/s NPC invalid for Transmic 1G, 2G
- 81** Framed/Unframed clear 2Mbit/s NPC invalid for Firmware Timing
- 82** Unframed clear 2Mbit/s NPC invalid for Bit 4 used as RA IS/RBER
- 85** IW not allowed to be specified in Clear 2Mbit/s
- A1** NPC has been designated as NPCTG
- A7** NPC has been designated as NPCTP
- E5** Invalid combination of "x" and "z" values
- E7** Invalid combination of "x" and "y" values

CHG,NPC,TYPE,IW,X,INCL

CHANGE DS3U NPC TYPE

Explanation Of Command

For DACS II DS3 Units (DS3U) or Hybrid DS3 Units (HDS3U), this command changes a single or range of TE or TA type (DS3U Only) Network Processing Circuits (NPCs) to the newly specified type without disconnecting and reconnecting provisioned circuits. The NPCs must be out of service.

The "mn" field, as well as the "xyz" field, of the NPC type parameter ("mnxyz") can be changed by this command. This feature is used to change between the different types (TE and TA) of NPCs supported by the DS3 or Hybrid DS3 Unit line termination circuit packs.

A range is allowed for the NPCs within one DS3 or Hybrid DS3 Unit. The optional insertion word field is used to change the disconnect code (DCC).

The new parameters will take effect when the NPC is restored to service. When the NPC **TYPE** parameters are changed, all programmable alarm thresholds revert to the default values. If values other than defaults are desired, a separate **CHG** command must be given for each value. There will be one output completion message for each NPC in the range.

Command

Nonhierarchical

[I.38271]

CHG:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TYPE mnxyz[,IW X'pq[,INCL]]!

Hierarchical

[I.38271]

CHG:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],TYPE mnxyz[,IW X'pq[,INCL]]!

Completion Message

Nonhierarchical

[O.38271]

M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc TYPE mnxyz[IW pq[INCL]] \\
2 LN MSG:
OLD TYPE ttuvw[OLD IW rs] COMPL

Hierarchical

[O.38271]

M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp TYPE mnxyz[IW pq[INCL]] \\
2 LN MSG:
OLD TYPE ttuvw[OLD IW rs] COMPL

Denial Message

Nonhierarchical

[O.38271.01]

M hh:mm:ss xy,ww n[vv] CHG NPC [s]abc[-[t]def] TYPE mnxyz\
[IW pq[INCL]] COND cc DNY

Hierarchical

[O.38271.01]

M hh:mm:ss xy,ww n[vv] CHG NPC uvmnp[-uvkqr] TYPE mnxyz\
[IW pq[INCL]] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

Use the optional insertion word (IW X'pq) field to change the unassigned channel code.

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC Number

[t]def - The 3- or 4-digit nonhierarchical NPC number denoting the end of a range specification.

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number
uvkqr - Hierarchical NPC number denoting the end of a range specification
uvghi - Hierarchical NPC number within the range of uvmnp and uvkqr
uvjyl - Hierarchical NPC number of the first NPC of the denied range
uvmno - Hierarchical NPC number of the last NPC of the denied range

uv - Unit number
m, k, j, m, g
 - Module number
np, qr, yl, no, hi
 - NPC number within the module

TE NPC numbers listed by unit, module, and NPC Number
 Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
 Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

mnxyz - NPC-type identifier
TYPE - Type

mnxyz Explanation

TExyz DS3U or HDS3U Enhanced NPC
 TAxzy DS3U ANSI NPC

TA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the TA NPC type. If an unframed Clear DS1

cross-connection is desired on an NPC in a DACS II DS3U, the NPC must be provisioned as NPC type TE919.

TE-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4 and y=5, DMI signalling.

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TE-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	No channel numbering format, clear-DS1

IW - Insertion Word

pq - Hexadecimal value of the growth insertion word (GIW). Specifies the insertion word in the transmit direction on unassigned channels.

An eight-bit code, called the growth insertion word, is transmitted by this NPC on unassigned DS0 channels. This code is specified by the optional keyword IW and its argument pq. This code was previously called the Disconnect Code (DCC), but that name is properly reserved for the cross-connect insertion word, which is transmitted when the disconnect message with the DDC specified is used.

Although any 2-digit hexadecimal code may be used (see INCL below), the default GIWs are:

<i>pq</i>	<i>Explanation</i>
7F	Unassigned Channel Code (UAC), the default value for TE/TA type NPCs provisioned with D4 or ESF framing.
18	Unassigned Multiplex Code (UMC), the default value for TE/TA type NPCs provisioned with T1DM framing. This value should only be provisioned with T1DM framing (DA4yz or TA4yz). The change command does not enforce this restriction.

INCL - Inclusive

As a protection to users, this keyword must be added to provision an NPC with D4 framing and an Insertion Word with bit 2 equal to zero. NPCs grown in the D4 format (TE1yz/TA1yz) transmit a DS1 yellow alarm by setting bit 2 to zero in all 24 DS0 channels. If the Insertion Word "pq" is unknowingly provisioned in this manner, the NPC will transmit a D4 yellow alarm signal when it is restored. The D4 yellow alarm is generated by any Insertion Word with the binary value a0cdefgh, where the letters a-h define the eight bits of the binary word. The D4 yellow alarm is not generated by an Insertion Word with a binary value a1cdefgh.

For Clear-DS1 NPCs, the insertion word option is **NOT** available and the message will be denied if this option is entered. The alarm indication signal (AIS) is transmitted in the disconnect or idle state.

[s]ghi,

- The 3- or 4-digit nonhierarchical NPC number within the range of [s]abc and [t]def

[s]jkl

- The 3- or 4-digit nonhierarchical NPC number of the first NPC of a range that is being denied ($abc \leq jkl \leq mno$)

[t]mno - The 3- or 4-digit nonhierarchical NPC number of the last NPC of a range that is being denied ($jkl \leq mno \leq def$)

ttuvw - Previous value of mnxyz

rs - Previous value of pq

cc - Hexadecimal condition code

cc *Explanation*

- 02** Subject entity is not equipped
- 03** Subject entity is in service
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 24** Unit type error
- 26** NPC type error
- 29** IW is UMUX (18) but NPC not type DE4yz
- 2A** DMI combined with T1DM
- 34** NPC type option xyz is unassigned
- 35** NPC has active circuit
- 01** Invalid range for specified NPC type
- 11** NPC not equipped
- 4E** IW option is not allowed for new type of Clear-DS1 NPC
- BF** MIU is not equipped
- F6** T1DM or DMI mode and channel 24 is connected
- FD** NPC range crosses unit boundary
- 05** This NPC type does not allow unframed Clear-DS1
- 87** NPC as 12th test port can not change to DMI nor T1DM
- 9B** The MXR is not grown
- 44** Service MXR is not equipped
- 07** Mismatch between MXR and NPC types
- 36** INCL keyword needed when restricted Insertion Word specified
- A1** NPC has been designated as NPCTG
- A7** NPC has been designated as NPCTP
- E5** Invalid combination of "x" and "z" values
- E7** Invalid combination of "x" and "y" values

CHG,PASSWD,OLD,NEW

CHANGE USER PASSWORD

Explanation Of Command

This message requests a change of a previously created password by any user of DACS II.

For an X.25 link, <old pswd>:<new pswd> option must be used. DACS II will not prompt the user for old and new password.

For a SCCSAI (Snider) link, <old pswd>:<new pswd> option cannot be used.

For a Snider link, DACS II will prompt the user for the old and new password. Neither new nor old password characters will be echoed by DACS II.

Output from this command is sent only to the link on which the command was input.

Command

[I.38301]

**CHG:FRM xy,SEQ ww:PASSWD[,OLD <old password>, **
NEW <new password>]!

If the user is on a Snider protocol administrative link, the message is entered as follows:

[I.38301]

CHG:FRM xy,SEQ ww:PASSWD!

Then DACS II will prompt the user for the old and new password:

OLD PASSWD: (user enters the old password)
NEW PASSWD: (user enters the new password)
PASSWD: (user re-enters the new password for verification)

Completion Message

[O.38301]

M hh:mm:ss xy,ww n[vv] CHG PASSWD COMPL

Denial Message

[O.38301.01]

M hh:mm:ss xy,ww n[vv] CHG PASSWD COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

PASSWD - Password

OLD - Old

old password

- Old password, where password is at least six alphanumeric characters.

NEW - New

new password

- New password where password is at least six alphanumeric characters.

cc - Hexadecimal condition code

cc *Explanation*

D6 Incorrect or missing password

DA User is not logged in

CHG,RT,DL,TO

CHANGE BANK NUMBER

Explanation Of Command

This command can be used to change the bank identification number of a remote terminal (RT) or a digital carrier line unit (DCLU).

Command

[I.38351]

CHG:FRM xy,SEQ ww:{RT|DL} ffff,TO gggg!

Completion Message

[O.38351]

M hh:mm:ss xy,ww n[vv] CHG {RT|DL} ffff TO gggg COMPL

Denial Message

[O.38351.01]

M hh:mm:ss xy,ww n[vv] CHG {RT|DL} ffff TO gggg COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

RT - Remote Terminal
DL - Digital Carrier Line Unit (DCLU)
ffff - Old bank identification (0000 through 9999)
gggg - New bank identification (0000 through 9999)

cc - Hexadecimal condition code

cc *Explanation*

00 No conditions
7E Bank id number not found
85 New bank id is an assigned one

CHG,RT,DL,ZCS,B8ZS

CHG RT | DL

Explanation Of Command

This command is used to change the Line and Signaling format for all the NPCs associated with the specified RT or DL. With this command it will be possible to have the type of the NPCs associated with the RT and DL of a DGA or DGP to be different. This is not a normal condition and the types will have to match before the NPCs are restored.

Command

[I.38481]

CHG:FRM xy,SEQ ww:{RT|DL} ffff,{ZCS|B8ZS}!

Completion Message

Nonhierarchical

[O.38481]

**M hh:mm:ss xy,ww n[vv] CHG {RT|DL} ffff {ZCS|B8ZS} 3 LN MSG:
DGA [s]aaa {ZCS|B8ZS} [DGB [s]bbb {ZCS|B8ZS}][DGC [s]ccc {ZCS|B8ZS}] \
[DGD [s]ddd {ZCS|B8ZS}][DGP [s]ppp {ZCS|B8ZS}]
COMPL**

Hierarchical

[O.38481]

**M hh:mm:ss xy,ww n[vv] CHG {RT|DL} ffff {ZCS|B8ZS} 3 LN MSG:
DGA uvjab {ZCS|B8ZS} [DGB uvkcd {ZCS|B8ZS}] [DGC uvlef {ZCS|B8ZS}] \
[DGD uvmgh {ZCS|B8ZS}][DGP uvjpr {ZCS|B8ZS}]
COMPL**

Denial Message

Nonhierarchical

[O.38481.01]

M hh:mm:ss xy,ww n[vv] CHG {RT|DL} ffff {ZCS|B8ZS} 3 LN MSG:
DGA [s]aaa {ZCS|B8ZS} DGB [s]bbb {ZCS|B8ZS} DGC [s]ccc {ZCS|B8ZS} \
DGD [s]ddd {ZCS|B8ZS} DGP [s]ppp {ZCS|B8ZS}
COND cc DNY

Hierarchical

[O.38481.01]

M hh:mm:ss xy,ww n[vv] CHG {RT|DL} ffff {ZCS|B8ZS} 3 LN MSG:
DGA uvjab {ZCS|B8ZS} DGB uvkcd {ZCS|B8ZS} DGC uvlef {ZCS|B8ZS} \
DGD uvmgh {ZCS|B8ZS} DGP uvjpr {ZCS|B8ZS}
COND cc DNY

Common

If there is no RT or DL:

[O.33481.01]

M hh:mm:ss xy,ww n[vv] CHG {RT|DL} ffff {ZCS|B8ZS} 2 LN MSG:
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

- RT** - SLC remote terminal
- DL** - Digital carrier line unit
- ffff** - Bank identification number (0000 through 9999)

Line and Signaling Format Options

- ZCS** - Zero Code Suppression
If this option is chosen the y value of the DSxyz
will be set equal to 0.
- B8ZS** - Bipolar 8 Zeros Substitution
If this option is chosen the y value of the DSxyz
will be set equal to 2.

CHG,RT,RTF,SWMN

CHANGE PWR/MISC OPTION OR FPC RT RETROFIT STATUS

Explanation Of Command

This command is used to change the PWR/MISC alarm options associated with a bank identification number without affecting service.

Command

[I.38361]

CHG:FRM xy,SEQ ww:RT ffff, [{sss|RTF}][,SWMN x]!

Completion Message

Nonhierarchical

[O.38361]

**M hh:mm:ss xy,ww n[vv] CHG RT ffff DGA [s]aaa 2 LN MSG:
[{OLD ttt NEW sss|RTF}][SWMN x] COMPL**

Hierarchical

[O.38361]

**M hh:mm:ss xy,ww n[vv] CHG RT ffff DGA uvmnp 2 LN MSG:
[{OLD ttt NEW sss|RTF}][SWMN x] COMPL**

Denial Message

Nonhierarchical

[O.38361.01]

M hh:mm:ss xy,ww n[vv] CHG RT ffff DGA [s]aaa[{sss|RTF}] \
[SWMN x] COND cc DNY

Hierarchical

[O.38361.01]

M hh:mm:ss xy,ww n[vv] CHG RT ffff DGA uvmnp[{sss|RTF}] \
[SWMN x] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

RT - Remote Terminal

ffff - Bank identification number (0000 through 9999)

sss - PWR/MISC alarm option

Valid values are listed below

<i>sss</i>	<i>Explanation</i>

PMJ	The PWR/MISC alarm from the data link is a power major alarm.

PMN	The PWR/MISC alarm from the data link is a power minor alarm.

MMJ	The PWR/MISC alarm from the data link is a miscellaneous major alarm.

MMN	The PWR/MISC alarm from the data link is a miscellaneous minor alarm.

RTF - SLC® Series 5 Carrier FPC RT Retrofit

SWMN - Protection switch related minor alarm

x - Protection switch related minor alarm handling setting

x Explanation

R Declare the MN alarm locally and report it to the digital switch

L Declare the MN alarm locally only

DGA - Digroup A of a SLC® 96 Carrier RT

[s]aaa - The 3- or 4-digit nonhierarchical Digroup A NPC number

If NPC numbers are expressed in three digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

uvmnp - Hierarchical Digroup A NPC number

uv - Unit number

m - Module number

np - NPC number

DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

ttt - The old PWR/MISC alarm option

cc - Hexadecimal condition code

cc *Explanation*

11 UC is out of service

2E RTF keyword and the operation mode does not match

2F The RT id entered is not a retrofit one

67 DGA is not added

76 Alarm option and bank mode don't match

7E Bank id number not found

90 NDL option is specified for DGA

10 RT's alarm exists

97 option LOCAL already exists

98 option REMOTE already exists

99 can't change option, protection switch is active

9A can't change option, inhibition is active

CHG,SCON,OLD,NEW

CHANGE SUBRATE CROSS-CONNECTION

Explanation Of Command

This command changes the external facility termination associated with a multipoint circuit branch from an existing digroup, channel, and (optional) customer number to a **NEW** digroup, channel, and (optional) customer number.

Execution of this command causes the disconnection of the existing facility and reconnection to a **NEW** external facility termination. The external facility termination associated with the original connection is left established to the Subrate feature with an unassigned multiplexer channel (UMC) code inserted towards the **OLD** facility.

Once moved to the **NEW** facility termination, the circuit or the multipoint circuit master leg and all of its associated branches is(are) left in the same terminate and leave state that existed with the **OLD** channel. For example, if the **OLD** channel was terminated in the **TO** direction before the change command, it remains terminated in the same direction after the command.

If desired, changes to the terminate and leave state can be done either before or after moving the channel by using the Subrate Test Access command or the Subrate Change Termination command.

In effect, this command combines the operations of **SDIS** and **SCON** commands that would be necessary to do the same change but with a minimum of service interruption.

Before using this command, the **NEW** channel must be established to the Subrate feature (**SECH**), and the **NEW** facility termination must not already be cross-connected (for example, with a previous **SCON**). The specified **OLD** facility termination must be cross-connected in an existing Subrate multipoint circuit and the specified **NEW** facility termination cannot be the same as the **OLD**. Also, neither the **NEW** termination nor any portion of the existing circuit can be under test access at the time this command is issued.

Circuits connected to an out-of-service facility NPC may also be moved with this command. Such changes require no special keyword in the input command, but the output message will indicate that the facility is out-of-service. The user should note that the UMC code may not be inserted in the disconnected facility channel until the facility is restored to service under these conditions.

If the facility NPC associated with the **NEW** channel is out-of-service, the command will be denied.

Command

Nonhierarchical

[I.19581]

CHG:FRM xy,SEQ ww:SCON,OLD [s]abcddd[/ff],NEW [t]ghijjj[/ll]!

Hierarchical

[I.19581]

CHG:FRM xy,SEQ ww:SCON,OLD uvmnpddd[/ff],NEW wxkqrjjj[/ll]!

Completion Message

Nonhierarchical

[O.19581]

M hh:mm:ss xy,ww n[vv] CHG SCON OLD [s]abcddd/ff \
NEW [t]ghijjj/ll[OOS] COMPL

Hierarchical

[O.19581]

M hh:mm:ss xy,ww n[vv] CHG SCON OLD uvmnpddd/ff \
NEW wxkqrjjj/ll[OOS] COMPL

Denial Message

Nonhierarchical

[O.19581.01]

M hh:mm:ss xy,ww n[vv] CHG SCON OLD [s]abcddd/ff \
NEW [t]ghijjj/ll 2 LN MSG:
<reason> DNY

Hierarchical

[O.19581.01]

M hh:mm:ss xy,ww n[vv] CHG SCON OLD uvmnpddd/ff \
NEW wxkqrjjj/ll 2 LN MSG:
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NEW - New

OLD - Old

[s]abc - The 3- or 4- digit OLD nonhierarchical NPC number
[t]ghi - The 3- or 4- digit NEW nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uv**mp** - OLD hierarchical NPC number
wxkqr - NEW hierarchical NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number
jjj - Channel number

The valid values are listed below:

001 through 024

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - Customer number

ll - Customer number

The valid values are listed below:

01 (DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20 (DS0B at 2.4 kb/s)
01-10 (DS0B at 4.8 kb/s)
01-05 (DS0B at 9.6 kb/s)

The customer numbers, **ff** and/or **ll**, are optional when the facility termination is a DS0A channel because there is only one customer in a DS0A channel. If specified for this type of channel, the customer number must appear as 01. A customer number is required when specifying a facility termination in a DS0B (subrate multiplexed) channel.

The allowed customer numbers for the NEW termination field depend on the rate of the existing circuit and the type of DS0B channel associated with the NEW termination. If the circuit rate is equal to or lower than the maximum DS0B rate, the command will be allowed, as shown below:

Rate	NEW DS0B Type Circuit		
	20-channel (max. customer rate 2.4 kb/s)	10-channel (max. customer rate 4.8 kb/s)	5-channel (max. customer rate 9.6 kb/s)
24	Customer No. 1-20 Allowed	Customer No. 1-10 Allowed	Customer No. 1-5 Allowed
48	Denied	Customer No. 1-10 Allowed	Customer No. 1-5 Allowed
96	Denied	Denied	Customer No. 1-5 Allowed
56	Denied	Denied	Denied

The user must ensure that a circuit using the secondary channel capability is only assigned to a NEW facility termination that is compatible with this capability. If the NEW termination is a DS0A or if zero suppression was NOT specified when its associated facility NPC was equipped then any assignment of the NEW termination is compatible with the secondary channel capability. If the NEW termination is in a DS0B **and** if zero suppression was specified when its associated facility NPC was equipped the user can only assign secondary channel services to a NEW termination with the following customer numbers within the given DS0B type:

DS0B Type	Allowed Customer Numbers
20-channel	2, 3, 6, 8, 11, 12, 13, and 18
10-channel	2, 3, 6, and 8
5-channel	2 and 3

If the OLD facility is connected to a branch of a multipoint circuit, it is disconnected from the MJU and the NEW facility is connected to the same MJU and branch.

00S - Out-of-service

The **00S** keyword appears in the output whenever the disconnection of the f(CBOLDf1 facility has taken place with its facility terminating NPC out-of-service or failed. In this case, the user should note that the Unassigned Multiplexer Channel (UMC) code may not be inserted towards the disconnected f(CBOLDf1 facility until its NPC is restored to service. external facility termination data (e.g., [s]abcddd/ff) is always set to 01 for DS0A channels.

[s]abcddd/ff

- OLD external facility termination

[t]ghijjj/ll

- NEW external facility termination

reason - Reason for denial

The reasons listed below contain variables represented in lower case letters. As shown the variables representing NPC numbers are in nonhierarchical format. These variables can also appear in hierarchical format. They take the form used in the input command where applicable.

Input Errors

reason

CHANNEL [s]abcddd IS NOT ESTABLISHED TO SR FEATURE
CHANNEL [s]abcddd IS A PARITY CHANNEL
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS-OA CHANNEL [s]abcddd
CUSTOMER NUMBER MUST BE SPECIFIED FOR DS-OB CHANNEL [s]abcddd
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS-OB CHANNEL [s]abcddd

CHANNEL [s]abcdddd WITH SR ERROR CORRECTION AND RATE 56 NOT ALLOWED
CHANNEL [s]abcdddd SR MULTIPLEXER RATE CANNOT SUPPORT CIRCUIT RATE
CHANNEL [s]abcdddd/ff IS ASSIGNED
CHANNEL [s]abcdddd/ff IS SPECIFIED MORE THAN ONCE
CHANNEL [s]abcdddd/ff IS UNDER TEST
CHANNEL [s]abcdddd/ff IS UNASSIGNED
CHANNEL [s]abcdddd IS OUT OF RANGE
CHANNEL [s]abcdddd/ff IS NOT CONNECTED IN A MULTIPOINT CIRCUIT
CHANNEL [s]abcdddd/ff IS A MULTIPOINT MASTER, MPTM KEYWORD FORBIDDEN
NPC [s]abc IS NOT PROVISIONED AS DIGROUP-A OF AN RT
DIGROUP-B ASSOCIATED WITH VIRTUAL CHANNEL [s]abcdddd IS NOT PROVISIONED
DIGROUP-C ASSOCIATED WITH VIRTUAL CHANNEL [s]abcdddd IS NOT PROVISIONED
DIGROUP-D ASSOCIATED WITH VIRTUAL CHANNEL [s]abcdddd IS NOT PROVISIONED
INVALID CHANNEL NUMBER FOR CHANNEL [s]abcdddd
NPC [s]abc IS IN LINE LOOPBACK STATE
SPECIFIED RATE DOES NOT MATCH EXISTING CIRCUIT RATE
CIRCUIT IS UNDER TEST

Maintenance Conditions

reason

BOTH CCN SIDES ARE OUT-OF-SERVICE
ACTIVE CCN SIDE IS {OUT-OF-SERVICE|FAILED|PESTED}
CCNI s IS {OUT-OR -SERVICE|FAILED}
TSI sft IS {NOT EQUIPPED|OUT-OF-SERVICE|FAILED}
CCB sf IS {NOT EQUIPPED|OUT-OF-SERVICE|FAILED}
CCI s IS {OUT-OR -SERVICE|FAILED}
ETSI sqq IS {NOT EQUIPPED|OUT-OF-SERVICE|FAILED}
UNIT [q]q IS {NOT EQUIPPED|OUT-OF-SERVICE|FAILED}
UNIT [q]q FTMI d IS {NOT EQUIPPED|OUT-OF-SERVICE|FAILED}
UNIT [q]q FC sb IS {NOT EQUIPPED|OUT-OF-SERVICE|FAILED}
DSPI IN UNIT [q]q IS {OUT-OF-SERVICE|FAILED}
NPC [s]abc IS {NOT EQUIPPED|OUT-OF-SERVICE|FAILED}
NPC [s]abc SIDE s IS {OUT-OF-SERVICE|FAILED}
UNIT [q]q IS NOT FACILITY TERMINATING TYPE
MAINTENANCE CONDITION PREVENTS COMPLETION OF THIS COMMAND

UNIT [q]q MXR c NOT EQUIPPED

UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE

UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
UNIT [q]q MIU c IS FAILED

CHG,SCON,OLD,NEW,MPTM

CHANGE SUBRATE CROSS-CONNECTION

Explanation Of Command

This command changes the external facility termination associated with the MPTM (multipoint master) leg of a Subrate multipoint circuit from an existing digroup, channel, and (optional) customer number to a **NEW** digroup, channel, and (optional) customer number. Execution of this command causes the disconnection of the existing multipoint circuit's master leg (that is, the control leg of MJU 1) and its reconnection to a **NEW** external facility termination. All branches associated with the circuit are left with their existing external and internal connections. Also, the external facility termination associated with the original connection is left established to the Subrate feature with an Unassigned Multiplexer Channel (UMC) code inserted towards the **OLD** facility. In effect, this command combines the operations of multipoint **SDIS** and **SCON** commands that would be necessary to do the same change but with a minimum of service interruption.

Before using this command, the **NEW** channel must be established to the Subrate feature (**SECH**) and the **NEW** facility termination must not already be cross-connected (for example, with a previous **SCON**). The specified **OLD** facility termination must be the multipoint master termination of an existing Subrate multipoint circuit, and the specified **NEW** facility termination cannot be the same as the **OLD**. Also, neither the **NEW** termination nor any portion of the existing multipoint circuit can be under test access at the time this command is issued.

The user must ensure that a multipoint circuit using the secondary channel capability is assigned only to a **NEW** facility termination that is compatible with this capability. If the **NEW** termination is a DS0A or if its associated facility NPC was provisioned without zero suppression, any assignment of the **NEW** termination is compatible with the secondary channel capability. If the **NEW** termination is in a DS0B and its associated facility NPC was grown with zero suppression, the user can only assign secondary channel services to a **NEW** termination with the following customer numbers within the given DS0B type:

DS0B Type	Allowed Customer Numbers
20-channel	2, 3, 6, 8, 11, 12, 13, and 18
10-channel	2, 3, 6, and 8
5-channel	2 and 3

Once moved to the **NEW** facility termination, the multipoint circuit master leg and all of its associated branches are left in the same terminate and leave state that existed with the **OLD** channel. For example, if the master leg was terminated in the **TO** direction before the change command, it remains terminated in the same direction after the command. If desired, changes to the terminate and leave state can be done either before or after moving the channel by using the Subrate Test Access command (STST) or the Subrate Change Termination command (CHG).

Multipoint masters connected to an out-of-service facility NPC may also be moved with this command. Such changes require no special keyword in the input command, but the output message will indicate that the facility is out-of-service. The user should note that the UMC code may not be inserted in the disconnected facility channel until the facility is restored to service under these conditions. If the facility NPC associated with the **NEW** channel is out-of-service, the command will be denied.

Command

Nonhierarchical

[I.19591]

**CHG:FRM xy,SEQ ww:SCON,OLD [s]abcddd[/ff],NEW [t]ghijjj[/ll],\
MPTM!**

Hierarchical

[I.19591]

**CHG:FRM xy,SEQ ww:SCON,OLD uvmnpddd[/ff],NEW wxkqrjjj[/ll],\
MPTM!**

Completion Message

Nonhierarchical

[O.19591]

M hh:mm:ss xy,ww n[vv] CHG SCON OLD [s]abcddd/ff \
NEW [t]ghijjj/ll MPTM[OOS] COMPL

Hierarchical

[O.19591]

M hh:mm:ss xy,ww n[vv] CHG SCON OLD uvmnpddd/ff \
NEW wxkqrjjj/ll MPTM[OOS] COMPL

Denial Message

Nonhierarchical

[O.19591.01]

M hh:mm:ss xy,ww n[vv] CHG SCON OLD [s]abcddd/ff \
NEW [t]ghijjj/ll MPTM 2 LN MSG:
<reason> DNY

Hierarchical

[O.19591.01]

M hh:mm:ss xy,ww n[vv] CHG SCON OLD uvmnpddd/ff \
NEW wxkqrjjj/ll MPTM 2 LN MSG:
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

OLD	- Old
NEW	- New
MPTM	- Multipoint master
[s]abc	- The 3- or 4-digit nonhierarchical OLD NPC number of the multipoint circuit master leg
[t]ghi	- The 3- or 4-digit nonhierarchical NEW NPC number of the multipoint circuit master leg

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical **OLD** NPC number of the multipoint circuit master leg

wxkqr - Hierarchical **NEW** NPC number of the multipoint circuit master leg

uv,wx - Unit number

m,k - Module number

np,qr - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - **OLD** channel number of the multipoint circuit master leg

jjj - **NEW** channel number of the multipoint circuit master leg

ff - **OLD** customer number of the multipoint circuit master leg
(1 through 20)

ll - **NEW** customer number of the multipoint circuit master leg
(1 through 20)

The customer numbers, **ff** and/or **ll**, are optional when the multipoint master termination is a DS0A channel. This is because there is only one customer in a DS0A channel. If specified for this type of channel, it must appear as 01. A customer number is required when specifying a multipoint master termination in a DS0B (subrate multiplexed) channel. The allowed customer numbers for the **NEW** termination field depend on the rate of the existing multipoint circuit and the type of DS0B channel associated with the **NEW** termination. If the circuit rate is equal to or lower than the maximum DS0B rate, the command will be allowed, as shown in the following table.

MULTIPOINT CIRCUIT RATE	NEW DS0B TYPE		
	20-CHANNEL (MAX. CUSTOMER RATE 2.4 kb/s)	10-CHANNEL (MAX. CUSTOMER RATE 4.8 kb/s)	5-CHANNEL (MAX. CUSTOMER RATE 9.6 kb/s)
24	Customer No. 1-20 Allowed	Customer No. 1-10 Allowed	Customer No. 1-5 Allowed
48	Denied	Customer No. 1-10 Allowed	Customer No. 1-5 Allowed
96	Denied	Denied	Customer No. 1-5 Allowed
56	Denied	Denied	Denied

00S - Out-of-service

The **00S** keyword appears in the output whenever the disconnection of the **OLD** facility has taken place with its facility terminating NPC out-of-service or failed. In this case, the user should note that the unassigned multiplexer channel (UMC) code may not be inserted towards the disconnected **OLD** facility until its NPC is restored to service.

[s]abcddd/ff

- **OLD** master leg external facility termination

[t]ghijjj/ll

- **NEW** master leg external facility termination

Nonhierarchical addresses are used for termination numbers in the reason for denial tables given below. Hierarchical addresses may be substituted where ever the Nonhierarchical form is shown. The address form received by the user is determined by the users' machine.

reason - Reason for denial

reason

Input Errors

CHANNEL [s]abcddd IS A PARITY CHANNEL
CHANNEL [s]abcddd SR MULTIPLEXER RATE CANNOT SUPPORT
CIRCUIT RATE
CHANNEL [s]abcddd WITH SR ERROR CORRECTION AND RATE 56 NOT
ALLOWED
CHANNEL [s]abcddd/ff IS NOT CONNECTED IN A MULTIPOINT
CIRCUIT
CHANNEL [s]abcddd/ff IS SPECIFIED MORE THAN ONCE
CHANNEL [s]abcddd/ff NOT MULTIPOINT MASTER, MPTM KEYWORD
FORBIDDEN
CUSTOMER NUMBER MUST BE SPECIFIED FOR DS-0B CHANNEL
[s]abcddd
INVALID CHANNEL NUMBER FOR CHANNEL [s]abcddd
UNIT [q]q IS NOT FACILITY TERMINATING TYPE

CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS-0A CHANNEL
[s]abcddd
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS-0B CHANNEL
[s]abcddd
CHANNEL [s]abcddd IS OUT OF RANGE
[s]abcddd-ddd IS AN INVALID RANGE OF CHANNELS

CHANNEL [s]abcddd/ff IS UNASSIGNED

CONNECTION EXCEEDS REMAINING EC CAPACITY
CONNECTION EXCEEDS REMAINING SRM CAPACITY
CONNECTION EXCEEDS REMAINING MJU CAPACITY

CHANNEL [s]abcddd/ff IS UNDER TEST
CHANNEL [s]abcddd IS NOT ESTABLISHED TO SR FEATURE
CIRCUIT IS UNDER TEST
NPC [s]abc IS IN LINE LOOPBACK STATE
NPC [s]abc IS NOT PROVISIONED AS DIGROUP-A OF AN RT
DIGROUP-B ASSOCIATED WITH VIRTUAL CHANNEL [s]abcddd NOT
PROVISIONED
DIGROUP-C ASSOCIATED WITH VIRTUAL CHANNEL [s]abcddd NOT
PROVISIONED
DIGROUP-D ASSOCIATED WITH VIRTUAL CHANNEL [s]abcddd NOT
PROVISIONED
NO DSPU IS EQUIPPED
NO SRM OR MJU TYPE NPC IS EQUIPPED
NO SRM TYPE NPC IS EQUIPPED
NO MJU TYPE NPC IS EQUIPPED

Maintenance Conditions

reason - Reason for denial

reason

ACTIVE CCN SIDE-s IS NOT EQUIPPED
CCB sf IS NOT EQUIPPED
DSPI IN UNIT [q]q IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED
TSI sft IS NOT EQUIPPED
UNIT [q]q IS NOT EQUIPPED
UNIT [q]q FTMI d IS NOT EQUIPPED
UNIT [q]q FLI k IS NOT EQUIPPED
UNIT [q]q MXR c IS NOT EQUIPPED
UNIT [q]q FMT s IS NOT EQUIPPED

CHANNEL [s]abcddd/ff IS INVOLVED IN A ROLL

ACTIVE CCN SIDE s IS OUT-OF-SERVICE
BOTH CCN SIDES ARE OUT-OF-SERVICE
CCB sf IS OUT-OF-SERVICE
DSPI IN UNIT [q]q IS OUT-OF-SERVICE
ETSI s[q]q IS OUT-OF-SERVICE
INACTIVE CCN SIDE IN-SERVICE AND NPC [s]abc ON INACTIVE
SIDE IS OOS
TSI sft IS OUT-OF-SERVICE
UNIT [q]q FC sb IS OUT-OF-SERVICE
UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q FTMI d IS OUT-OF-SERVICE
UNIT [q]q IS OUT-OF-SERVICE

ACTIVE CCN SIDE s IS FAILED
ACTIVE CCN SIDE s IS PESTED
CCB sf IS FAILED
DSPI IN UNIT [q]q IS FAILED
ETSI s[q]q IS FAILED
NPC [s]abc IS FAILED
NPC [s]abc SIDE s IS FAILED
TSI sft IS FAILED
UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q FTMI d IS FAILED
UNIT [q]q IS FAILED
UNIT [q]q MIU c IS FAILED
UNIT [q]q MXR c IS FAILED

CHG,SECH,OLD,NEW,PCH,DCC

CHANGE SUBRATE ESTABLISHED CHANNEL

Explanation Of Command

This command moves a subrate established channel (**DS0A** or **DS0B**) and all associated subrate cross-connections from an existing digroup and channel to a **NEW** digroup and channel. Once the command executes, the **OLD** channel is left disestablished and the **NEW** channel is established with exactly the same format (that is, rate, **DS0A/DS0B** format, number of subrate multiplexer channels, error correction, etc.) as the **OLD**. When present, any subrate circuits (that is, **SCONS**) that use the **OLD** channel for one or more ends are also moved to the **NEW** channel. In effect, this command combines the operations of the **SDIS**, **SDCH**, **SECH**, and **SCON** commands that would be necessary to do the same change.

Prior to this command, the **NEW** channel must not be established or used in any DACS cross-connection unless it is already established with exactly the same format as the **OLD** channel. However, in the latter case, no prior subrate cross-connections (e.g., **SCONS**) can be present on the **NEW** channel. Also, none of the **OLD** or **NEW** established channels nor any portion of the subrate circuits associated with them can be under test access at the time this command is issued. If no subrate cross-connections are present on the **OLD** channel and the **NEW** channel is already established in the same manner, the command will be denied. In this case, the **OLD** channel can simply be disestablished (**SDCH**) to achieve the same effect as the **CHG** command would otherwise do.

Once moved to the **NEW** channel, the established channel and all associated subrate cross-connections are left in the same terminate and leave state that existed with the **OLD** channel. For example, if one of the subrate circuits in a moved **DS0B** was terminated in the **TO** direction before the change command, it remains terminated in the same direction after the command. If desired, changes to the terminate and leave state can be done either before or after moving the channel by using the **SRDC** Test Access command (**STST**,**TLA**,**TLR**,**TP**) or the subrate change termination command (**CHG**,**TLA**,**TLR**,**TO**)

A range of channels may be specified, provided that parity channel error correction is not used with any channels within the **OLD** or **NEW** channel ranges. If the **OLD** channel has an error correction parity channel associated with it, the **NEW** channel must be specified with the location of the new parity channel by use of the **PCH ppp** field. [Note that the location of the **OLD** channel's parity channel need not be specified since the system will locate and move it along with the data channel automatically.] When specified, the **NEW** parity channel must not be already established or cross-connected unless it is already established as the **NEW** channel's parity channel. If the **OLD** channel is not established with parity channel error correction, the **NEW** channel cannot be specified with the **PCH** field.

Use of the optional **DCC** keyword causes the DDS unassigned multiplexer channel (UMC) code to be inserted in the **OLD** channel(s) towards the digroup facility listed after **OLD** in the message text. If this keyword is not specified, the disconnection code specified in the **GRTH NPC** when the **OLD** digroup was provisioned is used.

OLD channels connected to an out-of-service facility NPC may also be moved with this command. Such changes require no special keyword in the input command, but the output message will contain the **OOS** keyword to indicate that the facility is out-of-service. The user should note that the appropriate disconnection channel code may not be inserted in the **OLD** facility channels until the facility is restored to service under these conditions. If the facility NPC associated with the **NEW** channels is out-of-service, the command will be denied.

Command

Nonhierarchical

[I.19501]

**CHG:FRM xy,SEQ ww:SECH,OLD [s]abcddd[-eee],NEW [t]ghijjj\
[-kkk][,PCH ppp][,DCC]!**

Hierarchical

[I.19501]

**CHG:FRM xy,SEQ ww:SECH,OLD uvmnpddd[-eee],NEW wxqrrjjj[-kkk]\
[,PCH ppp][,DCC]!**

Completion Message

Nonhierarchical

[O.19501]

M hh:mm:ss xy,ww n[vv] CHG SECH OLD [s]abcddd[-eee] \
NEW [t]ghijjj[-kkk][DCC][OOS] COMPL

Hierarchical

[O.19501]

M hh:mm:ss xy,ww n[vv] CHG SECH OLD uvmnpddd[-eee] \
NEW wxkqrjjj[-kkk][DCC][OOS] COMPL

Denial Message

Nonhierarchical

[O.19501.01]

M hh:mm:ss xy,ww n[vv] CHG SECH OLD [s]abcddd[-eee] \
NEW [t]ghijjj[-kkk][DCC] e LN MSG:
<reason> DNY

Hierarchical

[O.19501.01]

M hh:mm:ss xy,ww n[vv] CHG SECH OLD uvmnpddd[-eee] \
NEW wxkqrjjj[-kkk][DCC] e LN MSG:
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

OLD - Old

[s]abc - The 3- or 4-digit nonhierarchical NPC number of OLD established channel.

NEW - New

[t]ghi - The 3- or 4-digit nonhierarchical NPC number of NEW established channel.

The allowable values are presented below:

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical OLD NPC number
wxkqr - Hierarchical NEW NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

The allowable values are presented below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - OLD channel number
jjj - NEW channel number
eee - Channel number for end of OLD range specified
kkk - Channel number for end of NEW range specified

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

PCH - Parity channel
ppp - Channel number of NEW parity error correction channel

DCC - Disconnect code

Appearance of the **DCC** keyword indicates that the DDS unassigned multiplexer channel (UMC) code is inserted towards the OLD channel's facilities when the command completes. If this keyword is not present, the disconnect code specified in the command used to provision digroup abc is used.

The **DCC** keyword appears only if present in the input command.

e - Number of lines in the message.

OOS - Out-of-service

The OOS keyword appears in the output whenever the established channel change has taken place with the OLD channel's facility terminating NPC out-of-service or failed. In this case, the user should note that the appropriate disconnect channel code may not be inserted in the disestablished channel until the facility is restored to service.

nnn - Channel number of OLD error correction parity channel

reason - Reason for denial

reason

Input Errors

NEW DIGROUP DOES NOT SUPPORT SUBRATE CHANNELS
NEW CHANNEL IS A TEST PORT
NEW CHANNEL [s]abcddd IS A TEST GROUP CHANNEL
NEW PARITY CHANNEL [s]abcddd IS A TEST GROUP
CHANNEL
NEW PARITY CHANNEL [s]abcddd IS A TEST PORT
CHANNEL
NEW CHANNEL IS ALREADY ESTABLISHED DIFFERENTLY
THAN OLD
NEW CHANNEL [s]abcddd HAS ACTIVE SR CROSS-CONNECTS
NEW CHANNEL IS ALREADY ASSIGNED
OLD AND NEW CHANNELS ARE THE SAME
OLD AND NEW CHANNELS PARTIALLY OVERLAP
NO CUSTOMERS ARE MOVED TO THE ALREADY ESTABLISHED
NEW CHANNEL

PARITY CHANNEL AND PCH KEYWORD IS REQUIRED

OLD CHANNEL NUMBER IS OUT OF RANGE FOR NPC TYPE
SPECIFIED

NEW CHANNEL NUMBER IS OUT OF RANGE FOR NPC TYPE
SPECIFIED

RANGE CHANGE OF OLD DATA CHANNEL [s]abcddd HAVING
PCH NOT ALLOWED

OLD CHANNEL IS A PARITY CHANNEL

OLD CHANNEL [s]abcddd OR A CUSTOMER IS UNDER TEST
OLD CHANNEL [s]abcddd IS NOT ESTABLISHED TO THE
SR FEATURE

NEW CHANNEL [s]abcddd OR A CUSTOMER IS UNDER TEST

Maintenance Conditions

reason

ACTIVE CROSS-CONNECT NETWORK SIDE IS FAILED

NEW NPC IS OUT-OF-SERVICE

NEW NPC IS FAILED

REQUIRED UNIT NOT EQUIPPED, NOT IN SERVICE, OR FAILED

REQUIRED CCB NOT EQUIPPED, NOT IN SERVICE, OR FAILED

REQUIRED FTMI NOT EQUIPPED, NOT IN SERVICE, OR FAILED

REQUIRED FC NOT EQUIPPED, NOT IN SERVICE, OR FAILED

REQUIRED TSI NOT EQUIPPED, NOT IN SERVICE, OR FAILED

REQUIRED DSPI NOT EQUIPPED, NOT IN SERVICE, OR FAILED

REQUIRED SRM NOT EQUIPPED, NOT IN SERVICE, OR FAILED

REQUIRED SUBRATE PACK NOT EQUIPPED, NOT IN SERVICE, OR
FAILED

UNIT [q]q MXR c NOT EQUIPPED

UNIT [q]q FLI k IS OUT-OF-SERVICE

UNIT [q]q FMT s IS OUT-OF-SERVICE

UNIT [q]q MXR c IS OUT-OF-SERVICE

UNIT [q]q MIU c IS OUT-OF-SERVICE

UNIT [q]q FLI k IS FAILED

UNIT [q]q FMT s IS FAILED

UNIT [q]q MXR c IS FAILED

UNIT [q]q MIU c IS FAILED

st	d	Explanation
ROLL	{F T B}	Circuit is involved in a roll

CHG,SETOP,TYPE,ALL,NPCOP

CHANGE/SET OPTIONS

Explanation Of Command

This message initializes or changes the DACS II threshold data base, which contains the programmable set of selectable alarm thresholds for facility performance parameters accumulated by DACS II NPCs.

This command will be denied if an attempt is made to set the minor threshold greater than or equal to the major threshold of any parameter specified on *any* NPC currently in the frame.

This command will be also denied if an attempt is made to *disable* the minor slip threshold (by setting its value to zero) before disabling the major slip threshold on *any* in-service NPC on the frame.

Threshold values are entered in free format (1 to 9 digits) separated by commas. Enter a hyphen (-) for values that are *not* to be changed.

Following DACS II installation, the user-programmable (non-default) values are empty until this **CHG::SETOP** command initializes them. A user-programmable threshold value must first be initialized by this message before it can be used as an argument to the **OPTS** keyword of the **GRTH::NPC** (Message I.31352), **CHG::NPC,OPTS** (Message I.38221), and **CHG::NPC** message.

SETOP rr designates the parameter to be changed.

NPCOP(set1,set2,set3) are the user-programmable threshold values for the designated parameter.

If **ALL** is specified, the given thresholds will be written to the threshold data base for all types of NPCs for which the associated parameter is valid.

Note: This command will not reboot the NPC hardware. Therefore, if any NPCs are in service, use the **UTL::BOOT,FRAME** command (Message I.58001) to avoid any possible inconsistency. **Note:** This command will not reboot the NPC hardware. Therefore, if any NPCs are in service, use the **STA-LOCL-RST** command (Message I.58001) to avoid any

possible inconsistency.

Command

[I.38201]

CHG:FRM xy,SEQ ww:SETOP rr,{TYPE mn|ALL},NPCOP(set1,set2,set3)!

Completion Message

[O.38201]

M hh:mm:ss xy,ww n[vv] CHG SETOP rr e LN MSG:
{TYPE mn|ALL} NPCOP(set1,set2,set3)
OPT rr OLD ttttt[tttt] aaaaa[aaaa] bbbbb[bbbb] ccccc[cccc]\
[<tal>] <pname>[TYPE mn]
[OPT rr OLD ttttt[tttt] aaaaa[aaaa] bbbbb[bbbb] ccccc[cccc]\
[<tal>] <pname> TYPE mn]
OPT rr NEW ttttt[tttt] xxxxx[xxxx] yyyyy[yyyy] zzzzz[zzzz]\
[<tal>] <pname> COMPL

Denial Message

Nonhierarchical

[O.38201.01]

M hh:mm:ss xy,ww n[vv] CHG SETOP rr 2 LN MSG:
{TYPE mn|ALL} NPCOP(set1,set2,set3)[NPC [s]abc] COND cc DNY

Hierarchical

[O.38201.01]

M hh:mm:ss xy,ww n[vv] CHG SETOP rr 2 LN MSG:
{TYPE mn|ALL} NPCOP(set1,set2,set3)[NPC uvmnp] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SETOP - Set option

OPT - Option

rr - Facility performance parameter number

Variable rr specifies the parameter whose alarm threshold is being set or changed. The parameters and their corresponding rr values are given in the table below.

The Major and Minor *Slip* threshold crossing alarms can be disabled by programming a value of zero for the Slip Major and Slip Minor thresholds, respectively.

To use this feature, the Slip Major threshold must be disabled before the Slip Minor threshold. This command will be denied if an attempt is made to disable the Minor Slip threshold (by setting its value to zero) before disabling the Major Slip threshold on *any* in-service NPC on the frame.

For DE, TE, or DS type NPCs:

For DE type NPCs, parameters with values rr = 1 through 8 are valid.
For DS type NPCs, parameters with values rr = 1 through 10 are valid.
For TE type NPCs, parameters with values rr = 1 through 8 are valid.
For Clear-DS1 DE type NPCs, parameters with values rr = 1 through 4 are valid.
For Clear-DS1 TE type NPCs, parameters with values rr = 1 through 2 are valid.

rr	Parameter	Threshold Value Range	Default Threshold Value
01	Slip major	000 to 255	255
02	Slip minor	000 to 255	4
03	Bit Error Rate major	1E-3* to 1E-6 [†]	1E-3*
04	Bit Error Rate minor	1E-3* to 1E-6 [†]	1E-6
05	Errored Seconds [‡]	00001 to 65535	864
06	Severely Errored Seconds [‡]	001 to 255	225
07	Change of Frame Alignment major	001 to 511	511
08	Change of Frame Alignment minor	001 to 255	17
09	Shelf Alarm Near End(SANE)§	00001 to 65535	00000
10	Shelf Alarm Far End(SAFE)§	00001 to 65535	00000

* 4 for clear-DS1 NPCs or DS type NPCs (default)

[†] 7 on DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing

[‡] Only applicable to DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing

§ Applicable only to DS type NPCs

Note 1: Major thresholds must be greater than minor thresholds.

Note 2: For Bit Error Rates, enter only the power of 10 (DACS assumes its sign is negative). For example, for a BER of 10^{-3} (.001), enter 3.

Note 3: Slip major and Slip minor threshold crossing alarms may be disabled by programming threshold values of zero for the respective parameters.

For DA and TA type NPCs:

For Channelized and Clear-DS1 DA type NPCs with ESF framing, all of the following Near-end and Far-end parameters are valid.

For Channelized and Clear-DS1 DA type NPCs with D4 or T1DM framing, all of the following Near-end parameters are valid, but the only valid Far-end parameter is Unavailable Seconds (rr = 55,71).

For Channelized and Clear-DS1 TA type NPCs with ESF framing, all of the following Near-end Path parameters are valid, but the Near-End Line parameters (rr = 47-49, 63-65) are invalid. All of the following Far-end parameters are valid.

For Channelized and Clear-DS1 TA type NPCs with D4 or T1DM framing, the following Near-end Path parameters are valid, but the Near-End Line parameters (rr = 47-49, 63-65) are invalid. The only valid Far-end parameter is Unavailable Seconds (rr = 55,71).

rr	Parameter	Threshold Value Range	Default Threshold Value
41	Daily Near-end Path Coding Violations	000000000 to 134217727	132960 [†]
42	Daily Near-end Path Errored Seconds	00000 to 86400	648
43	Daily Near-end Path Severely Errored Seconds	00000 to 86400	100
44	Daily Near-end Severely Errored Framing Seconds	00000 to 86400	17
45	Daily Near-end Controlled Slip Seconds	00000 to 86400	4
46	Daily Near-end Unavailable Seconds	00000 to 86400	10
47	Daily Near-end Line Coding Violations	000000000 to 134217727	133400
48	Daily Near-end Line Errored Seconds	00000 to 86400	648
49	Daily Near-end Line Severely Errored Seconds	00000 to 86400	100
50	Daily Far-end Path Coding Violations	000000000 to 134217727	132960 [†]
51	Daily Far-end Path Errored Seconds	00000 to 86400	648
52	Daily Far-end Path Severely Errored Seconds	00000 to 86400	100
53	Daily Far-end Severely Errored Framing Seconds	00000 to 86400	17
54	Daily Far-end Controlled Slip Seconds	00000 to 86400	4
55	Daily Far-end Unavailable Seconds	00000 to 86400	10
56	Daily Far-end Line Errored Seconds	00000 to 86400	648
57	15-Minute Near-end Path Coding Violations	0000000 to 2097151	13296 [‡]
58	15-Minute Near-end Path Errored Seconds	000 to 900	65
59	15-Minute Near-end Path Severely Errored Seconds	000 to 900	10
60	15-Minute Near-end Severely Errored Framing Seconds	000 to 900	2
61	15-Minute Near-end Controlled Slip Seconds	000 to 900	1
62	15-Minute Near-end Unavailable Seconds	000 to 900	10
63	15-Minute Near-end Line Coding Violations	0000000 to 2097151	13340
64	15-Minute Near-end Line Errored Seconds	000 to 900	65
65	15-Minute Near-end Line Severely Errored Seconds	000 to 900	10
66	15-Minute Far-end Path Coding Violations	0000000 to 2097151	13296 [‡]
67	15-Minute Far-end Path Errored Seconds	000 to 900	65
68	15-Minute Far-end Path Severely Errored Seconds	000 to 900	10
69	15-Minute Far-end Severely Errored Framing Seconds	000 to 900	2
70	15-Minute Far-end Controlled Slip Seconds	000 to 900	1
71	15-Minute Far-end Unavailable Seconds	000 to 900	10
72	15-Minute Far-end Line Errored Seconds	000 to 900	65

[†] The value shown applies to ESF framing and is a count of CRC errors. When the DS1 has D4 or T1DM framing, framing errors are counted and the default Daily value is 691.

[‡] The value shown applies to ESF framing and is a count of CRC errors. When the DS1 has D4 or T1DM framing, framing errors are counted and the default 15-Minute value is 72.

For TH type NPCs:

Table 8-12. Parameter Register Threshold Range and Default Values

rr	Parameter	Interval	Threshold Value Range	Default Threshold Value
11	CRC Block Errors	DAILY	1 - 79056000	176947
12	Framing Errors	DAILY	1 - 345600000	176947
13	Out of Frame Seconds	DAILY	1 - 86400	4
14	Errored Seconds	DAILY	1 - 86400	4320
15	Severely Errored Seconds	DAILY	1 - 86400	90
16	Controlled Slip Seconds	DAILY	1 - 86400	4
18	Unavailable Seconds	DAILY	1 - 86400	90
19	Unavailable Time Count	DAILY	1 - 4320	9
20	Multiframe Errors	DAILY	1 - 86400	4095
81	CRC Block Errors	15MIN	1 - 823500	18432
82	Framing Errors	15MIN	1 - 3600000	18432
83	Out of Frame Seconds	15MIN	1 - 900	4
84	Errored Seconds	15MIN	1 - 900	300
85	Severely Errored Seconds	15MIN	1 - 900	30
86	Controlled Slip Seconds	15MIN	1 - 900	1
88	Unavailable Seconds	15MIN	1 - 900	30
89	Unavailable Time Count	15MIN	1 - 45	3
90	Multiframe Errors	15MIN	1 - 900	255

TYPE - Type

Type of NPC for which the options are being set. Note that not all parameter threshold options apply to all NPC types.

mn - NPC Type prefix

mn *Explanation*

DA FTU ANSI NPC type

DE FTU NPC type

DS SLC carrier digroup circuit

TA DS3U ANSI NPC type

TE DS3U NPC type

ALL - All

All NPC types. If specified, the given thresholds will be written into the secondary data base for all types of NPCs for which the associated parameter is valid.

NPCOP - Network processing circuit option

set1 - Threshold setting 1 (m=1) for given parameter rr

set2 - Threshold setting 2 (m=2) for given parameter rr

set3 - Threshold setting 3 (m=3) for given parameter rr

Thresholds are entered in free format (1 to 9 digits) separated by commas. Enter a "-" (hyphen) for values that are not to be changed.

For ANSI NPC types (DA and TA type NPCs), a threshold value of zero can be programmed for any parameter to disable threshold crossing alert messages for that parameter.

DACS II provides a set of default threshold values (m=0) for each NPC type. Only the default threshold value for each parameter exists in the DACS II database prior to user programming using the CHG::SETOP command. Before any non-default threshold value (m=1,2,3) can be provisioned to be used by an NPC for performance monitoring, it must be entered in the DACS II database using this command. Otherwise, an error message will occur. When this command is executed, all threshold values in the DACS II frame are changed, including the ones previously set or in use. Performance monitoring thresholds are provisioned for NPCs using the "rr/m" argument of the GRTH::NPC or CHG::NPC command.

The default values are accessed using threshold setting 0. Threshold settings 1, 2, and 3 are user-programmable. That is, set1, set2, and set3 do not have default values; they must be programmed by the user before they can be used.

ttttt[tttt]

- Default threshold value for option rr

aaaaa[aaaa]

- Old set1 threshold value

bbbbbb[bbbb]

- Old set2 threshold value

cccccc[cccc]

- Old set3 threshold value

talm - Type of alarm

talm *Explanation*

MJ Major

MN Minor

pname - Parameter name

<i>pname</i>	<i>Explanation</i>
BER	Bit error rate
COFA	Change of frame alignment
ERS	Errored seconds
SAFE	Shelf alarm far end
SANE	Shelf alarm near end
SERS	Severely errored seconds
SLIP	Slip
CSSP,{D Q}{N F}	Path Controlled Slip Seconds
CVL,{D Q}{N F}	Line Coding Violations
CVP,{D Q}{N F}	Path Coding Violations
ESL,{D Q}{N F}	Line Errored Seconds
ESP,{D Q}{N F}	Path Errored Seconds
SEFS,{D Q}{N F}	Severely Errored Framing Seconds
SESL,{D Q}{N F}	Line Severely Errored Seconds
SESP,{D Q}{N F}	Path Severely Errored Seconds
UASP,{D Q}{N F}	Path Unavailable Seconds

D, F, N, and Q are defined below

D- Daily
F- Far-end
N- Near-end
Q- 15 minute

xxxxx[xxxx]

- New set1 threshold value

yyyyy[yyyy]

- New set2 threshold value

zzzzz[zzzz]

- New set3 threshold value

Note: If the "TYPE mn" option is used in the input command to change the thresholds for a single NPC type and a hyphen is entered for at least one of the thresholds to preserve its value, the output response will show that the respective new threshold values are unchanged by outputting the same value for the new threshold that is output for the old threshold.

If the "ALL" types option is used in the input command to change the thresholds for all NPC types and a hyphen is entered for at least one set of thresholds to preserve their values, the output response will show that the respective threshold values are unchanged by outputting "-----[----]" (a dash) for the new threshold value and the respective unchanged values in the old threshold fields for each NPC type.

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number of problematic NPC

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical number of problematic NPC

The valid NPC numbers are:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

21	Minor >= major for SLIP opt
22	Minor <= major for BER opt
23	Minor >= major for COFA opt
2B	Maj Min BER threshold is 7, but not in T1DM or Fe mode
14	1 hr >= 24 hr for DM opt
15	15 min >= 24 hr for SERS opt
16	15 min >= 24 hr for ERS opt
17	15 min >= 24 hr for US opt
18	15 min >= 24 hr for SLIP opt
37	Major/Minor BER threshold value is invalid for SLC NPCs
4F	BER must not be less than 4 for Clear DS1
83	Option not programmable for this NPC type
FE	Change to non-ESF digroup with 16-state cross-connect
FF	Change to T1DM digroup with cross-connect that is not TRSP
0A	Minor Slip threshold disabled before Major Slip threshold
32	Threshold value is out of range

CHG,SWCH,TOX,INCL

CHANGE CIRCUIT PARAMETERS

Explanation Of Command

This message switches return paths to the digroups and ranges beginning with the initial channels given in the TO end argument list.

This message requests a change in a broadcast multipoint circuit, switching the full tributary circuit leg (one that can both receive and transmit to the multipoint source) to another leg. Up to eight multipoint circuits can be changed with this command. Arguments [s]abcddd, [t]ghi-fff, and [u]klm-nnn etc., represent TO terminations Arguments [s]abcddd, [t]ghijff, and [u]klmnnn etc., represent TO terminations from different broadcast circuits (allowing multiple switches to be performed with a single message). That is, these arguments specify the new full tributaries in up to eight different broadcast circuits.

Command

Nonhierarchical

[I.18001]

```
CHG:FRM xy,SEQ ww:SWCH,TOX([s]abcddd[, [t]ghijff,\n[u]klmnnn, . . .])[ , INCL]!
```

Hierarchical

[I.18001]

```
CHG:FRM xy,SEQ ww:SWCH,TOX(uvmnpddd[,wxkqrfff,edhfgnnn, . . .])\n[ , INCL]!
```

Completion Message

Nonhierarchical

[O.18001]

M hh:mm:ss xy,ww n[vv] CHG SWCH 3 LN MSG:
TOX [s]abcddd[, [t]ghijjj, [u]klmnnn, . . .]
[CUS][RDC] COMPL

Hierarchical

[O.18001]

M hh:mm:ss xy,ww n[vv] CHG SWCH 3 LN MSG:
TOX uvmnpddd[,wxkqrjjj,edhfgnnn, . . .])
[CUS][RDC] COMPL

Denial Message

Nonhierarchical

[O.18001.01]

M hh:mm:ss xy,ww n[vv] CHG SWCH 3 LN MSG:
TOX [s]abcddd[, [t]ghijjj, [u]klmnnn, . . .]
[[t]wxyzzz] cc BCAST DNY

[O.18001.02]

M hh:mm:ss xy,ww n[vv] CHG SWCH 3 LN MSG:
TOX [s]abcddd[, [t]ghijjj, [u]klmnnn, . . .]
[[t]wxyzzz] COND cc DNY

Hierarchical

[O.18001.01]

M hh:mm:ss xy,ww n[vv] CHG SWCH 3 LN MSG:
TOX uvmnpddd[,wxkqrjjj,edhfgnnn, . . .])
[opjstzzz] cc BCAST DNY

[O.18001.02]

M hh:mm:ss xy,ww n[vv] CHG SWCH 3 LN MSG:
TOX uvmnpddd[,wxkqrjjj,edhfgnnn, . . .])
[opjstzzz] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number
[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number
[u]klm - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number
wxkqr - Hierarchical TO NPC number
edhfg - Hierarchical TO NPC number

uv,wx,ed

- Unit number

m,k,h

- Module number

np,qr,fg

- NPC number within the module

The values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - FROM channel number
jjj - TO channel number
nnn - TO channel number

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

INCL - Inclusive

To change a circuit or range of circuits including one or more circuits previously marked as a Red Circuit or under Customer Control, use the INCL (inclusive) option. If this option is not used, the message will be denied if any circuits in the range are red circuits or customer controlled.

SWCH - Switch

TOX - TO Tributaries

[t]wxyz

- Nonhierarchical number of circuit leg on which problem occurred.

opjstzzz

- Hierarchical number of circuit leg on which problem occurred.

BCAST - Broadcast

Denial specific to a broadcast conference.

CUS - Customer

NPC is a customer-controlled circuit

RDC - Red circuit

NPC is a Red circuit

cc - Hexadecimal condition code

cc *Explanation*

- 01** Invalid range for specified NPC type
- 03** No RDC or CUS circuits and INCL keyword used
- 04** No NPC's out of service and OOS keyword used
- 10** NPC out of service or failed
- 11** NPC not equipped
- 12** Active CCN side not IS or failed or pested or hardware OOS
- 13** UNIT not equipped, not in service, or failed
- 14** CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
- 15** FTMI not equipped, not in service, or failed
- 16** FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
- 17** TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
- 32** Termination is under test
- 33** Termination is a test port
- 34** Termination is under customer control (CUS)
- 35** Termination is protected (RDC)

cc *Explanation*

- 53** TO side of two-way to be converted is not an FTU NPC
- 5B** TO is not a leg of this/any conference
- 5D** TO is the backbone leg of a conference
- 5F** Conference is NTR: has no switchable return leg
- 60** Conference is LPD: has no switchable return leg
- 61** TO is already the return leg
- 1A** Required FLI not equipped, not in service, or failed
- 1B** Required MXR not equipped, not in service, or failed
- 1C** Req'd FMT not eq'd, not IS, or failed, or inact side FMT not eq'd, or not IS
- 1D** Required MIU not equipped, not in service, or failed
- D0** FROM NPC is not provisioned as DGA
- D1** TO NPC is not provisioned as DGA
- D3** Corresponding NPC for FROM virtual channel is not provisioned
- D4** Corresponding NPC for TO virtual channel is not provisioned
- D6** Invalid FROM channel number
- D7** Invalid TO channel number
- D9** Invalid FROM channel number range
- DA** Invalid TO channel number range
- EC** Invalid channel 000 cross-connection specified
- ED** Invalid channel 031 cross-connection specified

CHG,SWCH,TOX,INCL

CHANGE SWITCH, TOX

Explanation Of Command

This message changes a non-channelized digital signal broadcast circuit by switching a specified tributary network processing circuit (NPC) to be the full tributary NPC. Up to eight broadcast circuits can be changed by specifying the respective full tributary NPCs, all of which are non-channelized NPCs currently part of different broadcast circuits and may belong to different Units.

Command

Nonhierarchical

[I.18011]

**CHG:FRM xy,SEQ ww:SWCH,TOX([s]ghi[, [t]jkl][, [v]mno][...])\
[, INCL]!**

Hierarchical

[I.18011]

**CHG:FRM xy,SEQ ww:SWCH,TOX(uvmnp[, wxkqr][, edhfg][...])\
[, INCL]!**

Completion Message

Nonhierarchical

[O.18011]

M hh:mm:ss xy,ww n[vv] CHG SWCH 3 LN MSG:
TOX [s]ghi[, [t]jkl][, [v]mno][...]
[CUS][RDC]COMPL

Hierarchical

[O.18011]

M hh:mm:ss xy,ww n[vv] CHG SWCH 3 LN MSG:
TOX uvmnp[,wxkqr][,edhfg][...]
[CUS][RDC]COMPL

Denial Message

Nonhierarchical

[O.18011.01]

M hh:mm:ss xy,ww n[vv] CHG SWCH 3 LN MSG:
TOX [s]ghi[, [t]jkl][, [v]mno][...]
[[t]qrs] cc <st> DNY

Hierarchical

[O.18011.01]

M hh:mm:ss xy,ww n[vv] CHG SWCH 3 LN MSG:
TOX uvmnp[,wxkqr][,edhfg][...]
[opqrs] cc <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]ghi - The 3- or 4-digit nonhierarchical NPC number of new full tributary
[t]jkl - The 3- or 4-digit nonhierarchical NPC number of new full tributary
[v]mno - The 3- or 4-digit nonhierarchical NPC number of new full tributary

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number of new full tributary
wxkqr - Hierarchical NPC number of new full tributary
edhfg - Hierarchical NPC number of new full tributary

uv,wx,ed

- Unit number

m,k,h

- Module number

np,qr,fg

- NPC number within the module

DE and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number

Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

INCL - Inclusive keyword, required for Red (RDC) or Customer-controlled circuit (CUS)

[t]qrs - The 3- or 4-digit nonhierarchical number of the NPC that caused the denial

opqrs - Hierarchical number of problematic NPC, same range as uvmnp

st - Status of denial

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
01	INERR	Invalid range for specified NPC type
03	INERR	No RDC or CUS circuits and INCL keyword used
10	MCOND	NPC out of service or failed
11	MCOND	NPC not equipped
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
32	MCOND	Termination is under test
34	MCOND	Termination is under customer control (CUS)
35	MCOND	Termination is protected (RDC)
5B	BCAST	TO is not a leg of this/any conference
5D	BCAST	TO is the backbone leg of a conference
5E	BCAST	TO is a part of the same conference as a previous TO
5F	BCAST	Conference is NTR: has no switchable return leg
60	BCAST	Conference is LPD: has no switchable return leg
61	BCAST	TO is already the return leg
63	INERR	NPC is a channelized NPC
64	INERR	NPC is a non-channelized NPC
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
4A	INERR	Red circuit, INCL not entered
4B	INERR	Customer controlled circuit, INCL not entered
70	MCOND	NPC invalid type
E0	MCOND	ETSI not equipped, not in service, or failed

CHG,SYNC,TLI,SSP,TYPE,SRC

**CHANGE PRIORITIES AND/OR TYPE,
SYNCHRONIZER OR NPC**

Explanation Of Command

This command changes priorities and type parameters of timing extractor type TLIs/SSPs that have been equipped. One of the following two fields must be given: type/synchronizer sync port or the source for priority (SRC). Only one type may be changed at a time; the output message will show both types after the change command is completed, if both are equipped, or it will show a "-" for unequipped SSPs.

Only the type and priority data bases are affected by this command. The SSP must be out of service for the command to complete. The RST::SYNC,TLI,[SSP]! command must be given to implement the changes for both side 0 and 1.

Command

[I.38011]

CHG:FRM xy,SEQ ww:SYNC,TLI m,SSP b,TYPE texyz!

[I.38011]

**CHG:FRM xy,SEQ ww:SYNC,\
TLI,SRC(i/(a,b)[,j/(c,d)[,k/(e,f)[,l/(g,h)]])!]**

Completion Message

[O.38011]

M hh:mm:ss xy,ww n[vv] CHG SYNC TLI m SSP b TYPE texyz,testu COMPL

[O.38011]

M hh:mm:ss xy,ww n[vv] CHG SYNC TLI SRC i,a,b j,c,d k,e,f l,g,h COMPL

Denial Message

[O.38011.01]

M hh:mm:ss xy,ww n[vv] CHG SYNC \
TLI m SSP b TYPE tepqr,testu COND cc DNY

[O.38011.01]

M hh:mm:ss xy,ww n[vv] CHG SYNC \
TLI SRC i,a,b j,c,d k,e,f l,g,h} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer

TLI - Timing link interface

m - Timing link interface number (1 through 4)

SSP - Synchronizer sync port

b - SSP side (0 or 1)

TYPE - Type

texyz - Timing Extractor or Timing Distributor type

The output message shows the type of SSP for both SSPs on the TLI card
If one SSP is not equipped, a "-" will appear for the unequipped SSP.

testu - The TLI type of the other SSP on the same TLI. If not equipped, this
parameter will be output as "-----".

<i>te</i>	<i>Explanation</i>
TC	Composite Clock Timing Extractor
TE	DS1 Timing Extractor
TP	Primary Block Timing Extractor
TR	Basic System Reference Frequency (BSRF)
TU	Unipolar Clock Timing Extractor
TD	Timing Distributor

TD-type TLI xyz fields

- x** - Timing distributor identification
- | x | <i>Explanation</i> |
|----------|--|
| 1 | Composite Clock Timing Distribution |
| 2 | Sinusoidal 2.048 MHz Timing Distribution |
- y** - Unassigned
- z** - Unassigned

TE-type TLI xyz fields

- x** - Frame format
- | x | <i>Explanation</i> |
|-------------|--------------------|
| 0 | Invalid |
| 1 | D4 Format |
| 2, 3 | ESF Format |
| 4 | DDS (T1DM) Format |
| 5-9 | Invalid |
- y** - Line format
- | y | <i>Explanation</i> |
|-------------|---------------------|
| 0, 1 | Bipolar Line Coding |
| 2 | B8ZS Line Coding |
| 3 | Invalid |
| 4, 5 | Bipolar Line Coding |
| 6 | B8ZS Line Coding |
| 7-9 | Invalid |
- z** - Channel format
- | z | <i>Explanation</i> |
|------------|--------------------|
| 0-9 | Unassigned |

TC, TR, and TU-type TLI xyz fields

x - Frame format

y - Line format

z - Channel format

Values for x, y, and z are unassigned.

SRC - Source

i - TLI slot number (1 through 4)

a - TLI i SSP 0 priority (1 through 8)

b - TLI i SSP 1 priority (1 through 8)

j - TLI slot number (1 through 4)

c - TLI j SSP 0 priority (1 through 8)

d - TLI j SSP 1 priority (1 through 8)

k - TLI slot number (1 through 4)

e - TLI k SSP 0 priority (1 through 8)

f - TLI k SSP 1 priority (1 through 8)

l - TLI slot number (1 through 4)

g - TLI l SSP 0 priority (1 through 8)

h - TLI l SSP 1 priority (1 through 8)

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

02 Subject entity is not equipped

16 SYNC TB is not equipped

B3 X option is illegal

B4 Y option is illegal

C2 SSP type(options) same

C3 Wrong SSP type(Timing Extractor type)

C4 Sync architecture different

C5 Some priority values required

C6 Some priority values not required

C7 Priority values are same

C8 Sync pack denied command

CA New NPC same as existing one

CB NPC parameter only valid with TU type TLI

CC NPC is still provisioned to provide sync timing

CD NPC not designated as sync timing source

CE NPC already allocated as sync timing source

F1 Parameter only valid with PA, PB, or PC type NPCs

cc *Explanation*

- 01** Assignment of single priority to multiple SSPs
- E4** NPC already has Equipment Loopback

CHG,TLA,TLR,TO

CHANGE SUBRATE TERMINATE AND LEAVE

Explanation Of Command

This command changes the terminate and leave state of the cross-connection associated with a subrate two-point or multipoint circuit. The termination point is defined in terms of an external facility termination (that is, a digroup, channel, and customer number). If the termination point specified is under test or is not cross-connected, the command will be denied.

The external facility termination given by the NPC, channel, and customer number can be one end of a two-point circuit, or the master leg or branch of a multipoint circuit.

Note: If the termination is a DS0B customer and on an Out-Of-Service NPC, this command will complete; however, the new state for that termination will NOT take effect until that NPC is restored to service.

The CHG command cannot be used to change the terminate and leave status of the entire DS0B channel (that is, all customers within the DS0B at once). Also, the CHG command cannot be used to change the terminate and leave status of an external facility termination that is looped on itself.

The termination state resulting from the command depends on the state prior to the command as indicated by the following table:

PRIOR STATE	REQUESTED CHANGE	NEW STATE	PRIOR STATE	REQUESTED CHANGE	NEW STATE
R	TLA F	F	R	TLR F	DNY
R	TLA T	T	R	TLR T	DNY
R	TLA B	B	R	TLR B	DNY
F	TLA F	DNY	F	TLR F	R
F	TLA T	B	F	TLR T	DNY
F	TLA B	B	F	TLR B	R
B	TLA F	DNY	B	TLR F	T
B	TLA T	DNY	B	TLR T	F
B	TLA B	DNY	B	TLR B	R
T	TLA T	DNY	T	T	R
T	F	B	T	F	DNY
T	B	B	T	B	R

Command

Nonhierarchical

[I.19551]

CHG:FRM xy,SEQ ww:{TLA|TLR} m,TO [s]abcddd[/ff]!

Hierarchical

[I.19551]

CHG:FRM xy,SEQ ww:{TLA|TLR} m,TO uvmnpddd[/ff]!

Completion Message

Nonhierarchical

[O.19551]

M hh:mm:ss xy,ww n[vv] CHG {TLA|TLR} m [s]abcddd/ff \
NEW STATE TLA s COMPL

Hierarchical

[O.19551]

M hh:mm:ss xy,ww n[vv] CHG {TLA|TLR} m uvmnpddd/ff \
NEW STATE TLA s COMPL

Denial Message

Nonhierarchical

[O.19551.01]

M hh:mm:ss xy,ww n[vv] CHG {TLA|TLR} m [s]abcddd/ff \
<reason 1> 2 LN MSG:
<reason 2> DNY

Hierarchical

[O.19551.01]

M hh:mm:ss xy,ww n[vv] CHG {TLA|TLR} m uvmnpddd/ff \
<reason 1> 2 LN MSG:
<reason 2> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NEW - New

STATE - State

NEW STATE indicates the new termination state of the circuit as a result of the command. The circuit can be left terminated in either the FROM, TO or both directions, or left in the released state.

TLA - Terminate and leave activate

TLR - Terminate and leave release

The requested termination state change is indicated by the TLA or TLR where TLA activates and TLR releases the terminate and leave state. The unassigned multiplex channel (UMC) code is inserted towards the direction that is terminated.

m - Requested termination state

m Explanation

F FROM. Terminate or release the FROM side
T TO. Terminate or release the TO side
B BOTH. Terminate or release BOTH sides

The TO direction is defined as facing towards the external facility termination indicated by the NPC, channel, and customer number. (The TO and FROM directions are the same sides that are connected to the even and odd test port channels, respectively, in the corresponding STST test access command.)

s - Resulting termination state of the circuit

s Explanation

R Neither side is terminated
F FROM side is terminated
T TO side is terminated
B BOTH sides are terminated

TO - To termination

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - Customer number

ff *Explanation*

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

The customer number (ff) is optional when the customer is in a DS0A channel. This is because there is only one customer in a DS0A channel. If ff is specified for this type of channel, it must appear as 01. If the specified facility is a DS0B, a customer number must appear.

reason 1

- Coded reason for denial

reason 2

- Explanation of reason 1

Reason 1 summarizes the denial reason with a single keyword while reason 2 gives a more detailed explanation.

<i>reason1</i>	<i>reason2</i>

F UEQD	THE FROM SIDE NPC [s]abc IS NOT EQUIPPED
T UEQD	THE TO SIDE NPC [s]abc IS NOT EQUIPPED
MCOND	TSI sft IS NOT EQUIPPED
MCOND	CCB sf IS NOT EQUIPPED
MCOND	ETSI sqq IS NOT EQUIPPED
MCOND	UNIT [q]q IS NOT EQUIPPED
MCOND	UNIT [q]q FTMI d IS NOT EQUIPPED
MCOND	UNIT [q]q FC sb IS NOT EQUIPPED
MCOND	NPC [s]abc IS NOT EQUIPPED
MCOND	UNIT [q]q MXR c NOT EQUIPPED
MCOND	NO DSPU IS EQUIPPED
MCOND	NO SRM OR MJU TYPE NPC IS EQUIPPED
RNGIE	CHANNEL NUMBER ddd IS OUT OF RANGE FOR NPC [s]abc
CN RATE	CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B CHANNEL [s]abcddd
CN RATE	CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A CHANNEL [s]abcddd
PCH	THE SPECIFIED ACCESS POINT IS A PARITY CHANNEL
INERR	THE TO SIDE NPC [s]abc IS NOT FACILITY TERMINATING TYPE
MCOND	UNIT [q]q IS NOT FACILITY TERMINATING TYPE
INERR	TLA CANNOT BE SPECIFIED FOR A LOOPED CHANNEL
INERR	CUSTOMER NUMBER MUST BE SPECIFIED FOR DS-0B
UASGN	TLA CANNOT BE SPECIFIED FOR AN UNMAPPED CIRCUIT
UASGN	TLR CANNOT BE SPECIFIED FOR AN UNMAPPED CIRCUIT
NA	REQUIRED DACS UNIT COULD NOT BE ACCESSED

MCOND	BOTH CCN SIDES ARE OUT-OF-SERVICE
MCOND	ACTIVE CCN SIDE s IS OUT-OF -SERVICE
F OOS	THE FROM SIDE NPC [s]abc IS OUT-OF-SERVICE
T OOS	THE TO SIDE NPC [s]abc IS OUT-OF-SERVICE
MCOND	CCNI s IS OUT-OF-SERVICE
MCOND	TSI sft IS OUT-OF-SERVICE
MCOND	CCB sf IS OUT-OF-SERVICE
MCOND	CCI s IS OUT-OF-SERVICE
MCOND	ETSI sqq IS OUT-OF-SERVICE
NTLA	THE SPECIFIED ACCESS POINT IS ALREADY IN RLS MODE
PTLA	THE SPECIFIED ACCESS POINT IS ALREADY IN TERM MODE
MCOND	UNIT [q]q IS OUT-OF-SERVICE
MCOND	UNIT [q]q FTMI d IS OUT-OF-SERVICE
MCOND	UNIT [q]q FC sb IS OUT-OF-SERVICE
MCOND	DSPI IN UNIT [q]q IS OUT-OF-SERVICE
MCOND	NPC [s]abc SIDE s IS OUT-OF-SERVICE
MCOND	UNIT [q]q FLI k IS OUT-OF-SERVICE
MCOND	UNIT [q]q FMT s IS OUT-OF-SERVICE
MCOND	UNIT [q]q MXR c IS OUT-OF-SERVICE
MCOND	UNIT [q]q MIU c IS OUT-OF-SERVICE
MCOND	ACTIVE CCN SIDE s IS FAILED
MCOND	ACTIVE CCN SIDE s IS PESTED
F FAIL	THE FROM SIDE NPC [s]abc IS FAILED
T FAIL	THE TO SIDE NPC [s]abc IS FAILED
MCOND	CCNI s IS FAILED
MCOND	TSI sft IS FAILED
MCOND	CCB sf IS FAILED
MCOND	CCI s IS FAILED
MCOND	ETSI sqq IS FAILED
MCOND	UNIT [q]q IS FAILED
MCOND	UNIT [q]q FTMI d IS FAILED
MCOND	UNIT [q]q FC sb IS FAILED
MCOND	DSPI IN UNIT [q]q IS FAILED
MCOND	NPC [s]abc SIDE s IS FAILED
MCOND	UNIT [q]q FLI k IS FAILED
MCOND	UNIT [q]q FMT s IS FAILED
MCOND	UNIT [q]q MXR c IS FAILED
MCOND	UNIT [q]q MIU c IS FAILED
UTST	THE SPECIFIED ACCESS POINT IS UNDER TEST
CH NOT EST	THE SPECIFIED ACCESS POINT IS NOT ESTABLISHED TO SR FEATURE
NTLA	THE SPECIFIED ACCESS POINT IS ALREADY IN TLR MODE
PTLA	THE SPECIFIED ACCESS POINT IS ALREADY IN TLA MODE

CHG,TLA,TLR,TO,MJU

CHANGE TERMINATE AND LEAVE

Explanation Of Command

This command changes the terminate and leave state of the master leg or branch associated with a subrate multipoint circuit. This command defines the termination point in terms of a master leg external facility termination, MJU number, and optional branch number. If the termination point specified is under test or is not cross-connected, the command will be denied.

The specified facility termination must be the external facility termination for the master leg of a multipoint circuit. Note that this is *not* the facility defined as the TO side of the circuit. The TO side is always facing towards an MJU defined by ssss.

If MJU 0001 is specified, the TO side faces towards the control leg of MJU 1 and the FROM side faces towards the master leg external facility termination. If an MJU number other than 0001 is specified and the optional BR field is absent, the TO side faces towards the control leg of the specified MJU, and the FROM side faces upstream towards the branch of a cascaded MJU. If the BR field is specified, the TO side faces upstream towards the branch of MJU ssss and the FROM side faces downstream either towards another MJU or towards an external facility termination. The unassigned multiplexer channel (UMC) code is inserted towards the direction that is terminated.

If the termination point specified is under test or is not cross-connected, the command will be denied. The termination state resulting from the command depends on the state prior to the command as indicated by the following table:

PRIOR STATE	REQUESTED CHANGE	NEW STATE	PRIOR STATE	REQUESTED CHANGE	NEW STATE
R	TLA F	F	R	TLR F	DNY
R	TLA T	T	R	TLR T	DNY
R	TLA B	B	R	TLR B	DNY
F	TLA F	DNY	F	TLR F	R
F	TLA T	B	F	TLR T	DNY

F	TLA B	B	F	TLR B	R
B	TLA F	DNY	B	TLR F	T
B	TLA T	DNY	B	TLR T	F
B	TLA B	DNY	B	TLR B	R
T	TLA T	DNY	T	T	R
T	F	B	T	F	DNY
T	B	B	T	B	R

The customer number (ff) is optional when the master leg customer is in a DS0A channel. This is because there is only one customer in a DS0A channel. If specified for this type of channel, it must appear as 01. If the specified facility is a DS0B, a customer number must appear.

Command

Nonhierarchical

[I.19561]

CHG:FRM xy,SEQ ww:{TLA|TLR} m,TO [s]abcddd[/ff],MJU ssss\
[,Bri]!

Hierarchical

[I.19561]

CHG:FRM xy,SEQ ww:{TLA|TLR} m,TO uvmnpddd[/ff],MJU ssss\
[,Bri]!

Completion Message

Nonhierarchical

[O.19561]

M hh:mm:ss xy,ww n[vv] CHG {TLA|TLR} m MPTM [s]abcddd/ff \
MJU ssss[Bri] 2 LN MSG:
NEW STATE TLA s COMPL

Hierarchical

[O.19561]

M hh:mm:ss xy,ww n[vv] CHG {TLA|TLR} m MPTM uvmnpddd/ff \
MJU ssss[BRi] 2 LN MSG:
NEW STATE TLA s COMPL

Denial Message

Nonhierarchical

[O.19561.01]

M hh:mm:ss xy,ww n[vv] CHG {TLA|TLR} m MPTM [s]abcdddd/ff \
MJU ssss[BRi] <reason 1> 2 LN MSG:
<reason 2> DNY

Hierarchical

[O.19561.01]

M hh:mm:ss xy,ww n[vv] CHG {TLA|TLR} m MPTM uvmnpddd/ff \
MJU ssss[BRi] <reason 1> 2 LN MSG:
<reason 2> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NEW - New

STATE - State

NEW STATE indicates the new termination state of the circuit as a result of the command. The circuit can be left terminated in either or both directions, or left in the released state.

TLA - Terminate and leave activate

TLR - Terminate and leave release

The requested termination state change is indicated by TLA or TLR, where TLA activates and TLR releases the terminate and leave state.

s - Resulting termination state of the circuit:

s Explanation

R Neither side is terminated

F FROM side is terminated

T TO side is terminated

B BOTH sides are terminated

m - Circuit direction

m specifies the circuit direction affected by the change.

m Explanation

F Terminate or release the FROM side

T Terminate or release the TO side

B Terminate or release BOTH sides

TO - To

MPTM - Multipoint mode

[s]abc - The 3- or 4-digit nonhierarchical NPC number of the master leg.

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number of the master leg.

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number

The valid values are listed below:

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - Customer number

The valid values are listed below:

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

MJU - Multipoint junction unit

ssss - MJU addressed by this command (0001-9999)

BR - Branch

i - Branch number of MJU ssss addressed by this command (1-4)

reason 1

- Coded reason for denial

reason 2

- Explanation of reason 1

Input Errors

reason 1

reason 2

CH NOT EST	THE SPECIFIED ACCESS POINT IS NOT ESTABLISHED TO SR FEATURE
CN RATE	CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A CHANNEL [s]abcddd
CN RATE	CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B CHANNEL [s]abcddd
INERR	CHANNEL [s]abcddd IS NOT A MULTIPOINT MASTER LEG
INERR	THE SPECIFIED NPC [s]abc IS NOT FACILITY TERMINATING
INERR	NPC xxx IS NOT PROVISIONED AS DIGROUP-A OF AN RT
INERR	TLA CANNOT BE SPECIFIED FOR A LOOPED ACCESS POINT
INERR	MJU ssss DOES NOT EXIST IN THE CIRCUIT
MPTM	CUSTOMER IS NOT SPECIFIED FOR THE DS-0B CHANNEL
NTLR	THE SPECIFIED TEST ACCESS POINT IS ALREADY IN TLA MODE
PCH	THE SPECIFIED ACCESS POINT IS A PARITY CHANNEL
PTLA	THE SPECIFIED ACCESS POINT IS ALREADY IN TLA MODE
NTLA	THE SPECIFIED ACCESS POINT IS ALREADY IN TLR MODE
UASGN	TLA CANNOT BE SPECIFIED FOR AN UNMAPPED CIRCUIT
UASGN	TLR CANNOT BE SPECIFIED FOR AN UNMAPPED CIRCUIT
UTST	THE SPECIFIED ACCESS POINT IS UNDER TEST
RNGIE	CHANNEL NUMBER ddd OUT OF RANGE FOR NPC [s]abc

Maintenance Conditions

reason 1reason 2

F UEQD	THE FROM SIDE NPC [s]abc IS NOT EQUIPPED
F OOS	THE FROM SIDE NPC [s]abc IS OUT-OF-SERVICE
F FAIL	THE FROM SIDE NPC [s]abc IS FAILED
MCOND	BOTH CCN SIDES ARE OUT-OF-SERVICE
MCOND	ACTIVE CCN SIDE s IS OUT-OF-SERVICE
MCOND	ACTIVE CCN SIDE s IS FAILED
MCOND	ACTIVE CCN SIDE s IS PESTED
MCOND	NO DSPU IS EQUIPPED
MCOND	NO SRM OR MJU TYPE NPC IS EQUIPPED
MCOND	INACTIVE CCN SIDE IN-SERVICE AND NPC [s]abc ON
	INACTIVE SIDE IS OOS
MCOND	CCNI s IS OUT-OF-SERVICE
MCOND	CCNI s IS FAILED
MCOND	TSI sft IS NOT EQUIPPED
MCOND	TSI sft IS OUT-OF-SERVICE
MCOND	TSI sft IS FAILED
MCOND	CCB sf IS NOT EQUIPPED
MCOND	CCB sf IS OUT-OF-SERVICE
MCOND	CCB sf IS FAILED
MCOND	CCI s IS OUT-OF-SERVICE
MCOND	CCI s IS FAILED
MCOND	ETSI sqq IS NOT EQUIPPED
MCOND	ETSI sqq IS OUT-OF-SERVICE
MCOND	ETSI sqq IS FAILED
MCOND	UNIT [q]q IS NOT FACILITY TERMINATING TYPE
MCOND	UNIT [q]q IS NOT EQUIPPED
MCOND	UNIT [q]q IS OUT-OF-SERVICE
MCOND	UNIT [q]q IS FAILED
MCOND	UNIT [q]q FTMI d IS NOT EQUIPPED
MCOND	UNIT [q]q FTMI d IS OUT-OF-SERVICE
MCOND	UNIT [q]q FTMI d IS FAILED
MCOND	UNIT [q]q FC sb IS NOT EQUIPPED
MCOND	UNIT [q]q FC sb IS OUT-OF-SERVICE
MCOND	UNIT [q]q FC sb IS FAILED
MCOND	DSPI IN UNIT [q]q IS OUT-OF-SERVICE
MCOND	DSPI IN UNIT [q]q IS FAILED
MCOND	NPC [s]abc SIDE s IS OUT-OF-SERVICE
MCOND	NPC [s]abc SIDE s IS FAILED
M OOS	THE MULTIPOINT MASTER (MPTM) NPC [s]abc
	IS OUT-OF -SERVICE
M UEQD	THE MULTIPOINT MASTER (MPTM) NPC [s]abc
	IS NOT EQUIPPED
M FAIL	THE MULTIPOINT MASTER (MPTM) NPC [s]abc
	IS FAILED

T UEQD	THE TO SIDE NPC [s]abc IS NOT EQUIPPED
T OOS	THE TO SIDE NPC [s]abc IS OUT-OF-SERVICE
T FAIL	THE TO SIDE NPC [s]abc IS FAILED
NA	REQUIRED DACS UNIT COULD NOT BE ACCESSED

CHG,TYPE,OPTS

CHANGE TYPE, OPTIONS

Explanation Of Command

This command changes the threshold values for facility performance parameters on all NPCs of a particular type. The threshold values may be changed without disconnecting and reconnecting provisioned circuits.

One or more alarm or information threshold values may be set for all NPCs to a value previously stored in the DACS II threshold data base.

The values stored in the DACS II threshold data base are selected with the indices (**rr/n**).

Command

[I.38231]

CHG:FRM xy,SEQ ww:TYPE mnxyz,OPTS(rr/<m>[,rr/<m>][...])!

Completion Message

[O.38231]

M hh:mm:ss xy,ww n[vv] CHG TYPE mnxyz 4 LN MSG:
 SLIP BER ERS SERS COFA[SANE] [SAFE]
THRESHOLDS mmm nnn p q rrrrr sss ttt uuu[xxxxx] [zzzzz]
OPTIONS e f g h i j k l [m] [n] COMPL

For ANSI (DA and TA type) NPCs:

[O.38232]

```
M hh:mm:ss xy,ww n[vv] CHG TYPE mnxyz 4 LN MSG:
DAILY NE    CVP      ESP   SESP  SEFS  CSSP  UASP  CVL      ESL   SESL
THRESHOLDS  aaaaaaaa bbbbbb ccccc ddddd eeeee fffff gggggggg hhhh  iiii
OPTIONS     a         b     c     d     e     f     g         h     i     EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG TYPE mnxyz 4 LN MSG:
DAILY FE    CVP      ESP   SESP  SEFS  CSSP  UASP  ESL
THRESHOLDS  jjjjjjjj kkkkk lllll mmmmm nnnnn ooooo ppppp
OPTIONS     j         k     l     m     n     o     p         EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG TYPE mnxyz 4 LN MSG:
15MIN NE    CVP      ESP   SESP  SEFS  CSSP  UASP  CVL      ESL   SESL
THRESHOLDS  aaaaaaa bbb  ccc  ddd  eee  fff  ggggggg hhh  iii
OPTIONS     a         b     c     d     e     f     g         h     i     EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG TYPE mnxyz 4 LN MSG:
15MIN FE    CVP      ESP   SESP  SEFS  CSSP  UASP  ESL
THRESHOLDS  jjjjjjj kkk  lll  mmm  nnn  ooo  ppp
OPTIONS     j         k     l     m     n     o     p         COMPL
```

For TH type NPCs:

[O.38232]

```
M hh:mm:ss xy,ww n[vv] CHG TYPE mnxyz 4 LN MSG:
DAILY      CRC      FRER      OFS  ES   SES   CSS   CV
THRESHOLDS aaaaaaaa bbbbbbbbb ccccc ddddd eeeee fffff ggggggggg
OPTIONS     a        b        c    d    e    f    g          EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG TYPE mnxyz 4 LN MSG:
DAILY      UAS      UATC MER   FEBE      FES   FSES  FUAS
THRESHOLDS hhhhh iiii jjjjj kkkkkkkk lllll mmmm nnnnn
OPTIONS     h      i      j      k          l      m      n          EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG TYPE mnxyz 4 LN MSG:
15MIN      CRC      FRER      OFS  ES   SES   CSS   CV
THRESHOLDS aaaaaa bbbbbbb ccc  ddd  eee  fff  ggggggg
OPTIONS     a        b        c    d    e    f    g          EOM
```

```
M hh:mm:ss xy,ww n[vv] CHG TYPE mnxyz 4 LN MSG:
15MIN      UAS      UATC MER   FEBE      FES   FSES  FUAS
THRESHOLDS hhh  ii  jjj  kkkkkk  lll  mmm  nnn
OPTIONS     h    i    j    k          l    m    n          COMPL
```

Note that FEBE, FES, FSES and FUAS are not applicable for TH type NPCs. However, the positions for these parameters were retained in order to be compatible with the output generated for PA type NPCs.

[O.38233]

```
M hh:mm:ss xy,ww n[vv] CHG TYPE mnxyz THMODE hhh COMPL
```

Denial Message

[O.38231.01]

```
M hh:mm:ss xy,ww n[vv] CHG TYPE mnxyz[ vv/k] COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

TYPE - Type

mnxyz - NPC type

mnxyz *Explanation*

DExyz FTU DS1 NPC

TExyz DS3U or HDS3U DS1 NPC

DSxyz SLC carrier digroup terminating NPC

DAxyz FTU DS1 ANSI NPC type

TAxyz DS3U DS1 ANSI NPC type

THxyz HDS3U CEPT NPC

DE-type xyz fields

x - Multiframe format for the digroup

x *Explanation*

0 Not assigned

1 D4

2 ESF - Voice

3 ESF - Data

4 DDST (T1DM - R bit connection via channel 24)

5-7 Not assigned

8* Ericsson Cellular format

9 No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4, y=5, and y=6, DMI signalling.

y - Line and signaling format

y *Explanation*

0 ZCS - Zero code suppression

1* NZCS - No zero code suppression

2* B8ZS - Bipolar with 8 zero substitution

3† ZBTSI - Zero-bit time-slot interchanger

4 ZCS/DMI - Zero code suppression/DMI signaling

5 NZCS/DMI - No zero code suppression/DMI signaling

6 B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling

7-9 Not assigned

* Only options 1 and 2 are applicable to DE-type clear-DS1 NPC.

† Only valid with ESF (x = 2 or 3)

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	No channel numbering format, clear-DS1

DS-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	Not assigned
4	Not assigned
5	Not assigned
6	SLC® 96 carrier Fs
7	SLC 5 carrier ESF with data link
8-9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	Zero code suppression (ZCS)
1	No zero code suppression (NZCS)
2	Bipolar with 8 zero substitution (B8ZS)
3-9	Not assigned

z - Counting sequence format

z	<i>Explanation</i>
0	SLC 96 carrier Mode III D4 counting sequence
1	SLC 96 carrier Mode III D1D counting sequence
2	SLC 96 carrier Mode I D1D counting sequence
3	SLC Series 5 carrier D4 counting sequence
4-9	Not assigned

DA-type xyz fields**x** - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DA-type clear-DS1 NPC.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).**z** - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

DA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a DA NPC with both a valid framing format (D4, ESF, T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the DA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II FTU, the NPC must be provisioned as NPC type **DE9y9**.

Zero Byte Time Slot Interchange (ZBTSI) encoding is not supported by the DA NPC type. If ZBTSI is desired on an NPC in a DACS II FTU, the NPC must be provisioned as a DE NPC type with its **y** option selecting ZBTSI (**DEx3z**).

TA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the TA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II DS3U, the NPC must be provisioned as NPC type TE919.

TE-type xyz fields

x - Multiframe format

x *Explanation*

- 0** Not assigned
- 1** D4
- 2** ESF - Voice
- 3** ESF - Data
- 4** DDST (T1DM - R bit connection via channel 24)
- 5-7** Not assigned
- 8*** Ericsson Cellular format
- 9** No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4 and y=5, DMI signalling.

y - Line and signaling format

y *Explanation*

0 ZCS - Zero code suppression

1* NZCS - No zero code suppression

2 Not assigned

3 Not assigned

4 ZCS/DMI - Zero code suppression/DMI signaling

5 NZCS/DMI - No zero code suppression/DMI signaling

6-9 Not assigned

* Only option 1 is applicable to TE-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

0 D4 channel bank channel numbering

1 D2 channel bank channel numbering

2 D1D channel bank channel numbering

3-8 Not assigned

9 No channel numbering format, clear-DS1

TH-Type xyz field

The provisioning values of x, y, and z for the TH type are shown in the following tables (a 'Y' in a column of the Table indicates that the feature at the top of the column is enabled by the corresponding (x, y or z) provisioning value):

Table 8-13. Provisioning values for x

x value	CRC-4 Mode	Automatic CRC-4
0	Y	
8		Y
B		

Table Notes:

1. The "Automatic CRC-4" is also known as CRC-4 Interworking.
2. If the CRC-4 mode is enabled (x value 0) the NPC will compute checksums over the transmitted data and transmit the checksum as part of the CRC-4 multiframe pattern in TS0. The NPC will also monitor the incoming CRC-4 multiframe and verify the CRC-4 checksum. If the CRC-4 multiframe cannot be found using the CRC-4 reframe algorithm, then the NPC will declare an alarm.

If the automatic CRC-4 option is selected (x value 8), the NPC will perform all the functions of the CRC-4 mode. However, if the CRC-4 multiframe is lost, the NPC will not declare an alarm or apply consequent actions.

3. x value B does not enable any of the features shown in the Table; this is a valid option.
4. Only x values 0, 8, and B are valid x values, all other x values will be denied.

Table 8-14. Provisioning values for y

y value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

Table Notes:

1. y values 1, 3, 5, 7, A-B and E-F are unassigned (that is, invalid).
2. For y values 0, 2, 4 and 6 Channel Associated Signaling (CAS) is enabled. In this mode the Telephone Channel Numbering system is always used.

If the "Convert TS16" option is selected (y values 0 and 2), the *abcd* bits of TS16 will be converted to '1111' if they are received as '0000'. This is to prevent false framing in the TS16 multiframe. If this option is not selected (y values 4 and 6), a value of '0000' in the *abcd* bits will be transmitted transparently.

If the "AIS in TS16" option is selected (y value 0 and 4), AIS will always be applied to received TS16 signaling channels on detection of RAI (Remote Alarm Indication, Bit 3 of TS0 NFW), RAIS (Remote AIS Indication, Bit 4 of TS0 NFW, if provisioned) or

- R16 (Remote Alarm Indication received in TS16). If this option is not selected (y values 2 and 6), AIS will not be applied on detection of RAI, RAIS, or R16.
3. For y values 8 and 9 the NPC will be Non Signaling Associated (NSA). In this mode, Telephone Channel Numbering ($y=8$) or Timeslot Channel Numbering ($y=9$) may be selected.
 4. The NPC can be set up as a framed clear 2 Mbit/s interface ($y=C$) or as an unframed clear 2 Mbit/s interface ($y=D$). When provisioned as a clear 2 Mbit/s interface, an NPC does not modify the cross-connected data in any way. This means that the following functions are not performed in the clear 2 Mbit/s mode:
 - Outgoing CRC-4 checksum generation (applies to framed clear 2 Mbit/s interfaces with CRC-4 option enabled).
 - Remote alarm indications (line format errors are reported locally, but no alarm indicators are sent in TS0 to the remote end).

Table 8-15. Provisioning values for z

z value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	166ms	500ms	RAIS	RBEB	166ms	500ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
A	Y		Y							Y
B		Y	Y							Y

Table Notes:

1. z values 8, 9, C, D, E and F are unassigned (that is, invalid).
2. For z values 1, 3, 5, 7 and B the consequent action timing is under firmware (FW) control. For z values 0, 2, 4, 6 and A the consequent action timing is under hardware (HW) control.

The G.732 consequent action of inserting the AIS in data channels is applied within 2 ms whether the timing is under HW control or FW control, but when under FW control, the AIS in data channels is overridden by the Insertion Word sourced from the Alternate Message Store (AMS) after detection of the local alarm:

in 500 ms

if $z = 1, 3$ or 5
in **2496 ms**
if $z = 7$ or B

The Insertion Word pattern can be specified in the cross-connect command; on 2Mbit/s NPCs in a *gateway* **cross-connection** the Insertion Word always defaults to AIS.

The selection of HW or FW control is also used to provision the consequent actions on signaling bits. On detection of loss of frame (LOF) or multiframe alignment (LMA, Loss of Multiframe Alarm) error, the hardware immediately applies a signaling freeze by using the last good frame's signaling information. The signaling freeze remains in effect until two multiframes without errors are received. When HW control is used, the AIS in signaling bits is applied within 2 ms, overriding the signaling freeze. When FW control is used, the trunk conditioning pattern from the AMS overrides the signaling freeze once the 2Mbit/s NPC goes into the alarm state.

3. The Consequent Action timing also selects the time after which the **local** alarms are declared and cleared:*
 - HW Control: **Both** remote and local alarms are declared and cleared in 166 ms.
 - FW Control: Only remote alarms are declared and cleared in 166 ms. The **local** alarms are declared and cleared in 500 ms, **except when $z = 7$ or B .**
4. On the transmitting NPC, bit 3 in the NFW, the remote alarm indication (RAI), will be processed as specified in ITU-T Recommendation G.704 Section 2.3.2 (**that is, within 2 ms after detecting the failure**) when $z = 0, 1, 4, 5, 6, 7, A$ or B . **However,** for z value 2 the set time is 166 ms and for z value 3 the set time is 500 ms. NFW bit 3 is always set to 0 for non-alarm condition and is set to 1 for alarm conditions.
5. On the transmitting NPC, if bit 4 of the NFW is used as RAIS (Remote AIS) indicator, NFW bit 4 will be set in 166 ms (for $z = 4$) or 500 ms (for $z = 5$) after AIS is detected in the received signal. The default idle state for Bit 4 is a '1'. The idle state can be changed to a '0' with the CHG::NPC,TS0 command. The bit is put into the active state by inverting the value of the idle state. Similarly, if NFW bit 4 is in the active state in the received signal, consequent actions are taken 166 ms after detecting this condition.
6. z values 6-7 and A-B enable the Minor Bit Error Rate and Signaling Freeze Delay Time Features.

Common Options ($z = 6-7$ or A-B)

- [i] Enable BER calculations, and when in the BER state:

DACS takes the alarm state consequent actions: sending a message, and activating appropriate alarm relays and summary LEDs.

* Local alarms are those generated for the events: PWR, PBF, BER, AIS, LMA, and A16. Remote alarms are those generated for the events: RAI, RAIS, RBER, and R16.

When out of the BER state, DACS II retires the alarm state consequent actions: sends a retirement message, and deactivates appropriate alarm relays and summary LEDs.

- [ii] RAI set in 2 ms
- [iii] Signaling Freeze Delay Timing, Consequent Action Clear Timing:
 - z=6 or A** hardware timing
 - z=7 or B** firmware timing (SFDT=2496 ms, CACT=624 ms)

- [iv] BER alarm level = DMA

Specific Options for z= 6 or 7

- [v] RBER alarm level = MI
- [vi] NFW bit 4=RBER:
 - DACS II sends a remote indicator in bit 4 (RBER) of the time slot 0 Non Frame Word (NFW) upstream to the far end 166 ms after detecting the Minor Bit Error Rate (BER) condition.

DACS II sets the RBER bit to its idle state, on clearing of the BER condition.
 - DACS II detects the remote setting of the received bit 4 as an RBER condition and generates an appropriate message. Consequent actions are taken 166 ms after detecting this condition.

DACS II generates an appropriate retirement message when the received bit 4 returns to the idle state.

Specific Options for z= A or B

- [vii] RBER unalarmed
- [viii] NFW bit 4=disabled

NFW bit 4 is NOT used as RBER, although the local Minor Bit Error Rate (BER) condition is detected and cleared with the alarm state consequent actions.

Additionally:

- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.

The following tables provide a summary of invalid combinations of xyz for the TH type NPC.

Table 8-16. Combinations of x and y Values

Invalid xyz Combinations	Explanation
8Cz	Framed clear 2 Mbit/s (y value C) is valid for all valid x options except the one invoking automatic CRC-4 interworking. The interworking algorithm requires setting of outgoing E-bits, which is not permitted for a clear signal.
0Dz 8Dz	Unframed clear 2 Mbit/s (y value D) is only valid for x value B. This is the only x option which does not require decoding of TS0 content.

Table 8-17. Combinations of y and z Values

Invalid xyz Combinations	Explanation
xC1 xC3 xC5 xC7 xCB xD1 xD3 xD5 xD7 xDB	Clear 2 Mbit/s (y value C or D) cannot be used with Firmware controlled Consequent Action (z values 1, 3, 5, 7 or B).
xD4 xD6	Unframed clear 2 Mbit/s (y value D) cannot be used with z value 4 (NFW Bit 4 used for RAIS) or with z value 6 (NFW Bit 4 used for RBER) because unframed clear signals cannot obtain TS0 framing.

Table Notes:

1. If framed clear 2 Mbit/s (y value C) is selected with z value 4 (NFW Bit 4 used for RAIS) only the receive side of this function will be enabled. Outgoing RAIS indicators cannot be transmitted during clear signal operation.

2. If framed clear 2Mbit/s (y value C) is selected with z= value 6 (NFW Bit 4 used for RBER) only the receive side of this function will be enabled. Outgoing RBER indicators cannot be transmitted during clear signal operation.

There are no combinations between valid x and z values that are invalid.

OPTS - Options

Clear DS1 DE type FTU NPCs have a limited number of parameters for performance monitoring, 01 through 04 only. Clear DS1 TE type DS3U or HDS3U NPCs have only parameters 01 and 02.

rr - Facility performance parameter number

Variable rr specifies the parameter whose alarm threshold is being selected

m - Facility performance parameter threshold index (0 to 3)

Variable m is used to select threshold values previously programmed for rr. The default threshold value, the value selected by m=0, for each parameter is shown in the table below under the column heading "Default Threshold Value". Threshold values selected by m=1 through m=3 must exist; that is, must have been programmed prior to being selected. The non-default thresholds can be set by using the CHG::SETOP (I.38201) command.

Clear-DS1 ANSI NPCs (DAXy9/TAXy9) provide the same set of path and line performance monitoring parameters that are provided by terminated ANSI NPC types. ANSI NPCs in DS3 Units (TAXyz) do not provide near-end DS1 line performance monitoring parameters.

For DE, TE, or DS type NPCs:

For DE type NPCs, parameters with values rr = 1 through 8 are valid.

For DS type NPCs, parameters with values rr = 1 through 10 are valid.

For TE type NPCs, parameters with values rr = 1 through 8 are valid.

For Clear-DS1 DE type NPCs, parameters with values rr = 1 through 4 are valid.

For Clear-DS1 TE type NPCs, parameters with values rr = 1 through 2 are valid.

rr	Parameter	Threshold Value Range	Default Threshold Value
01	Slip major	000 to 255	255
02	Slip minor	000 to 255	4
03	Bit Error Rate major	1E-3* to 1E-6 [†]	1E-3*
04	Bit Error Rate minor	1E-3* to 1E-6 [†]	1E-6
05	Errored Seconds [‡]	00001 to 65535	864
06	Severely Errored Seconds [‡]	001 to 255	225
07	Change of Frame Alignment major	001 to 511	511
08	Change of Frame Alignment minor	001 to 255	17
09	Shelf Alarm Near End(SANE)§	00001 to 65535	00000
10	Shelf Alarm Far End(SAFE)§	00001 to 65535	00000

* 4 for clear-DS1 NPCs or DS type NPCs (default)

[†] 7 on DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing

[‡] Only applicable to DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing

§ Applicable only to DS type NPCs

Note 1: Major thresholds must be greater than minor thresholds.

Note 2: For Bit Error Rates, enter only the power of 10 (DACS assumes its sign is negative). For example, for a BER of 10^{-3} (.001), enter 3.

Note 3: Slip major and Slip minor threshold crossing alarms may be disabled by programming threshold values of zero for the respective parameters.

For DA and TA type NPCs:

For Channelized and Clear-DS1 DA type NPCs with ESF framing, all of the following Near-end and Far-end parameters are valid.

For Channelized and Clear-DS1 DA type NPCs with D4 or T1DM framing, all of the following Near-end parameters are valid, but the only valid Far-end parameter is Unavailable Seconds (rr = 55,71).

For Channelized and Clear-DS1 TA type NPCs with ESF framing, all of the following Near-end Path parameters are valid, but the Near-End Line parameters (rr = 47-49, 63-65) are invalid. All of the following Far-end parameters are valid.

For Channelized and Clear-DS1 TA type NPCs with D4 or T1DM framing, the following Near-end Path parameters are valid, but the Near-End Line parameters (rr = 47-49, 63-65) are invalid. The only valid Far-end parameter is Unavailable Seconds (rr = 55,71).

rr	Parameter	Threshold Value Range	Default Threshold Value
41	Daily Near-end Path Coding Violations	000000000 to 134217727	132960 [†]
42	Daily Near-end Path Errored Seconds	00000 to 86400	648
43	Daily Near-end Path Severely Errored Seconds	00000 to 86400	100
44	Daily Near-end Severely Errored Framing Seconds	00000 to 86400	17
45	Daily Near-end Controlled Slip Seconds	00000 to 86400	4
46	Daily Near-end Unavailable Seconds	00000 to 86400	10
47	Daily Near-end Line Coding Violations	000000000 to 134217727	133400
48	Daily Near-end Line Errored Seconds	00000 to 86400	648
49	Daily Near-end Line Severely Errored Seconds	00000 to 86400	100
50	Daily Far-end Path Coding Violations	000000000 to 134217727	132960 [†]
51	Daily Far-end Path Errored Seconds	00000 to 86400	648
52	Daily Far-end Path Severely Errored Seconds	00000 to 86400	100
53	Daily Far-end Severely Errored Framing Seconds	00000 to 86400	17
54	Daily Far-end Controlled Slip Seconds	00000 to 86400	4
55	Daily Far-end Unavailable Seconds	00000 to 86400	10
56	Daily Far-end Line Errored Seconds	00000 to 86400	648
57	15-Minute Near-end Path Coding Violations	0000000 to 2097151	13296 [†]
58	15-Minute Near-end Path Errored Seconds	000 to 900	65
59	15-Minute Near-end Path Severely Errored Seconds	000 to 900	10
60	15-Minute Near-end Severely Errored Framing Seconds	000 to 900	2
61	15-Minute Near-end Controlled Slip Seconds	000 to 900	1
62	15-Minute Near-end Unavailable Seconds	000 to 900	10
63	15-Minute Near-end Line Coding Violations	0000000 to 2097151	13340
64	15-Minute Near-end Line Errored Seconds	000 to 900	65
65	15-Minute Near-end Line Severely Errored Seconds	000 to 900	10
66	15-Minute Far-end Path Coding Violations	0000000 to 2097151	13296 [‡]
67	15-Minute Far-end Path Errored Seconds	000 to 900	65
68	15-Minute Far-end Path Severely Errored Seconds	000 to 900	10
69	15-Minute Far-end Severely Errored Framing Seconds	000 to 900	2
70	15-Minute Far-end Controlled Slip Seconds	000 to 900	1
71	15-Minute Far-end Unavailable Seconds	000 to 900	10
72	15-Minute Far-end Line Errored Seconds	000 to 900	65

[†] The value shown applies to ESF framing and is a count of CRC errors. When the DS1 has D4 or T1DM framing, framing errors are counted and the default Daily value is 691.

[‡] The value shown applies to ESF framing and is a count of CRC errors. When the DS1 has D4 or T1DM framing, framing errors are counted and the default 15-Minute value is 72.

For TH type NPCs:

Table 8-18. Parameter Register Threshold Range and Default Values

rr	Parameter	Interval	Threshold Value Range	Default Threshold Value
11	CRC Block Errors	DAILY	1 - 79056000	176947
12	Framing Errors	DAILY	1 - 345600000	176947
13	Out of Frame Seconds	DAILY	1 - 86400	4
14	Errored Seconds	DAILY	1 - 86400	4320
15	Severely Errored Seconds	DAILY	1 - 86400	90
16	Controlled Slip Seconds	DAILY	1 - 86400	4
18	Unavailable Seconds	DAILY	1 - 86400	90
19	Unavailable Time Count	DAILY	1 - 4320	9
20	Multiframe Errors	DAILY	1 - 86400	4095
81	CRC Block Errors	15MIN	1 - 823500	18432
82	Framing Errors	15MIN	1 - 3600000	18432
83	Out of Frame Seconds	15MIN	1 - 900	4
84	Errored Seconds	15MIN	1 - 900	300
85	Severely Errored Seconds	15MIN	1 - 900	30
86	Controlled Slip Seconds	15MIN	1 - 900	1
88	Unavailable Seconds	15MIN	1 - 900	30
89	Unavailable Time Count	15MIN	1 - 45	3
90	Multiframe Errors	15MIN	1 - 900	255

SLIP - Timing slip
BER - Bit error rate
ERS - Errored seconds
SERS - Severely errored seconds
COFA - Change of frame alignment
SANE - Shelf Alarm Near End
SAFE - Shelf Alarm Far End

SLIP

mmm - Slip major alarm threshold (0 through 255)
nnn - Slip minor alarm threshold (0 through 255)
e - Slip major alarm option selection (0 through 3)
f - Slip minor alarm option selection (0 through 3)

BER (Bit Error Rate)

- p** - BER major alarm threshold, (1E-p, 3* through 6†)
- q** - BER minor alarm threshold, (1E-q, 3* through 6†)
 - * 4 for clear-DS1 FTU NPC or DS type NPC
 - † 7 on T1DM and Fe framing
- g** - BER major alarm option selection (0 through 3)
- h** - BER minor alarm option selection (0 through 3)

ERS (Errored Seconds)

- rrrrr** - ERS threshold (1 through 65535)
- i** - ERS option selection (0 through 3)

SERS (Severely Errored Seconds)

- sss** - SERS threshold (1 through 255)
- j** - SERS option selection (0 through 3)

COFA (Change of Frame Alignment)

- ttt** - COFA major alarm threshold (1 through 511)
- uuu** - COFA minor alarm threshold (1 through 255)
- k** - COFA major alarm option selection (0 through 3)
- l** - COFA minor alarm option selection (0 through 3)

SANE (Shelf Alarm Near End)

- xxxxx** - SANE alarm threshold (00000 through 65535)
- m** - SANE alarm option selection (0 through 3)

SAFE (Shelf Alarm Far End)

- zzzzz** - SAFE alarm threshold (00000 through 65535)
- n** - SAFE alarm option selection (0 through 3)

Note: Major thresholds may not be equal to minor thresholds, except for the BER threshold of SLC® 96 carrier NPCs. For DE type clear-DS1 NPCs only SLIP and BER parameters are listed. For TE type clear-DS1 DS3U or HDS3U NPCs only SLIP parameters are listed. Both SANE and SAFE are applicable only to SLC 96 carrier NPCs.

For ANSI NPC types:

CVP - Path Coding Violations
ESP - Path Errored Seconds
SESP - Path Severely Errored Seconds
SEFS - Severely Errored Framing Seconds
CSSP - Path Controlled Slip Seconds
UASP - Path Unavailable Seconds
CVL - Line Coding Violations
ESL - Line Errored Seconds
SESL - Line Severely Errored Seconds

CVP (Path Coding Violations)

aaaaaaaa - Path Coding Violation Daily NE threshold (0 to 134217727)
jjjjjjjj - Path Coding Violation Daily FE threshold (0 to 134217727)
aaaaaaaa - Path Coding Violation 15Min NE threshold (0 to 2097151)
jjjjjjjj - Path Coding Violation 15Min FE threshold (0 to 2097151)
a - Path Coding Violation Daily NE option selection (0 to 3)
j - Path Coding Violation Daily FE option selection (0 to 3)
a - Path Coding Violation 15Min NE option selection (0 to 3)
j - Path Coding Violation 15Min FE option selection (0 to 3)

ESP (Path Errored Seconds)

bbbbbb - Path Errored Seconds Daily NE threshold (0 to 86400)
kkkkkk - Path Errored Seconds Daily FE threshold (0 to 86400)
bbb - Path Errored Seconds 15Min NE threshold (0 to 900)
kkk - Path Errored Seconds 15Min FE threshold (0 to 900)
b - Path Errored Seconds Daily NE option selection (0 to 3)
k - Path Errored Seconds Daily FE option selection (0 to 3)
b - Path Errored Seconds 15Min NE option selection (0 to 3)
k - Path Errored Seconds 15Min FE option selection (0 to 3)

SESP (Path Severely Errored Seconds)

cccc - Path Severely Errored Seconds Daily NE threshold (0 to 86400)
llll - Path Severely Errored Seconds Daily FE threshold (0 to 86400)
ccc - Path Severely Errored Seconds 15Min NE threshold (0 to 900)
lll - Path Severely Errored Seconds 15Min FE threshold (0 to 900)
c - Path Severely Errored Seconds Daily NE option selection (0 to 3)
l - Path Severely Errored Seconds Daily FE option selection (0 to 3)
c - Path Severely Errored Seconds 15Min NE option selection (0 to 3)
l - Path Severely Errored Seconds 15Min FE option selection (0 to 3)

SEFS (Severely Errored Framing Seconds)

dddd - Severely Errored Framing Seconds Daily NE threshold (0 to 86400)
mmmm - Severely Errored Framing Seconds Daily FE threshold (0 to 86400)
ddd - Severely Errored Framing Seconds 15Min NE threshold (0 to 900)
mmm - Severely Errored Framing Seconds 15Min FE threshold (0 to 900)
d - Severely Errored Framing Seconds Daily NE option selection (0 to 3)
m - Severely Errored Framing Seconds Daily FE option selection (0 to 3)
d - Severely Errored Framing Seconds 15Min NE option selection (0 to 3)
m - Severely Errored Framing Seconds 15Min FE option selection (0 to 3)

CSSP (Path Controlled Slip Seconds)

eeee - Path Controlled Slip Seconds Daily NE threshold (0 to 86400)
nnnn - Path Controlled Slip Seconds Daily FE threshold (0 to 86400)
eee - Path Controlled Slip Seconds 15Min NE threshold (0 to 900)
nnn - Path Controlled Slip Seconds 15Min FE threshold (0 to 900)
e - Path Controlled Slip Seconds Daily NE option selection (0 to 3)
n - Path Controlled Slip Seconds Daily FE option selection (0 to 3)
e - Path Controlled Slip Seconds 15Min NE option selection (0 to 3)
n - Path Controlled Slip Seconds 15Min FE option selection (0 to 3)

UASP (Path Unavailable Seconds)

ffff - Path Unavailable Seconds Daily NE threshold (0 to 86400)
oooo - Path Unavailable Seconds Daily FE threshold (0 to 86400)
fff - Path Unavailable Seconds 15Min NE threshold (0 to 900)
ooo - Path Unavailable Seconds 15Min FE threshold (0 to 900)
f - Path Unavailable Seconds Daily NE option selection (0 to 3)
o - Path Unavailable Seconds Daily FE option selection (0 to 3)
f - Path Unavailable Seconds 15Min NE option selection (0 to 3)
o - Path Unavailable Seconds 15Min FE option selection (0 to 3)

CVL (Line Coding Violations)

gggggggggg

- Line Coding Violation Daily NE threshold (0 to 134217727)

gggggggg

- Line Coding Violation 15Min NE threshold (0 to 2097151)

g

- Line Coding Violation Daily NE option selection (0 to 3)

g

- Line Coding Violation 15Min NE option selection (0 to 3)

ESL (Line Errored Seconds)

hhhhh

- Line Errored Seconds Daily NE threshold (0 to 86400)

ppppp

- Line Errored Seconds Daily FE threshold (0 to 86400)

hhh

- Line Errored Seconds 15Min NE threshold (0 to 900)

ppp

- Line Errored Seconds 15Min FE threshold (0 to 900)

h

- Line Errored Seconds Daily NE option selection (0 to 3)

p

- Line Errored Seconds Daily FE option selection (0 to 3)

h

- Line Errored Seconds 15Min NE option selection (0 to 3)

p

- Line Errored Seconds 15Min FE option selection (0 to 3)

SESL (Line Severely Errored Seconds)

iiiiii

- Line Severely Errored Seconds Daily NE threshold (0 to 86400)

iii

- Line Severely Errored Seconds 15Min NE threshold (0 to 900)

i

- Line Severely Errored Seconds Daily NE option selection (0 to 3)

i

- Line Severely Errored Seconds 15Min NE option selection (0 to 3)

For SHORT INTERVAL, DM is calculated hourly and SERS, ERS, US and SLIP are calculated at 15-minute intervals.

For TH type NPCs:

Depending on which interface functions are enabled by the provisioning values of xyz, some parameters may not be applicable. In this case the threshold value, the parameter count (if present in the message) and the selection value will appear as dashes ("-"). In the table below "N/A" indicates that a parameter is not applicable for the given value of x or y.

Also, if the selection value m=c has been chosen for a parameter, the threshold value and the parameter count (if present in the message) will appear as dashes.

Parameter	CRC-4 Mode Disabled (x=B)	CAS Disabled (y=8,9,C,D)	Unframed Clear 2Mbit/s (y=D)
CRC	N/A		N/A
FRER			N/A
OFS			N/A
ES			N/A
SES			N/A
CSS			
UAS			N/A
UATC			N/A
MER		N/A	N/A

THMODE - Thresholding mode (for PA NPCs only)

hhh - Thresholding mode option

<i>hhh</i>	<i>Explanation</i>
INH	Inhibit thresholding
ALW	Allow thresholding

The INH option is used to temporarily inhibit thresholding for all parameters of all NPCs provisioned with TYPE mnxyz whether the thresholding for a specific NPC is already inhibited or not. When it is entered, all thresholds for those NPCs are suspended; therefore, no new threshold crossing messages will be output after the inhibition.

The ALW option is the default option and can be used to turn-off the thresholding inhibition. Note that, this command with the "ALW" option can be used for TYPE mnxyz NPCs whose thresholding capability is inhibited due to the entry of command I.38221

When the "ALW" is entered, the thresholds applied before the inhibition will be re-applied unless the thresholds were changed during the inhibition. Option change requests are permitted while the NPC thresholding is inhibited.

vv/k - Parameter/option involved in denial

cc - Hexadecimal condition code

cc *Explanation*

- 02** Subject entity is not equipped
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 13** FTMI is not equipped
- 20** Option rr/m has not been set up on 2nd database
- 21** Minor $\geq$ major for SLIP opt
- 22** Minor $\leq$ major for BER opt
- 23** Minor $\geq$ major for COFA opt
- 2A** DMI combined with T1DM
- 2B** Maj|Min BER threshold is 7, but not in T1DM or Fe mode
- 4F** BER must not be less than 4 for Clear DS1
- 83** Option not programmable for this NPC type
- 44** Service MXR is not equipped
- 0A** Minor Slip threshold disabled before Major Slip threshold
- 32** Threshold value is out of range

CHG,UNIT,CONN

CHANGE CONNECTIVITY

Explanation Of Command

This command requests a change of a unit's connectivity. Timeslot interchange (TSI) circuit packs will be automatically grown and/ or degrown (deprovisioned) as needed.

New or degrown TSIs are listed at the end of the output message. They are listed pairwise with up to six pairs listed per message line. At most there will be 10 of these pairs when the connectivity of a unit is changed.

Command

[I.38101]

CHG:FRM xy,SEQ ww:UNIT q,CONN(a[,b[,c[,d[,e[,f]]]]])!

Completion Message

[O.38101]

M hh:mm:ss xy,ww n[vv] CHG UNIT q CONN a b c d e f \\
5 LN MSG:

TOTAL TSIS tt NEW TSIS nn DEGROWN TSIS dd
sft sft sft sft sft sft sft sft sft sft
sft sft sft sft sft sft sft sft sft sft
sft sft sft sft sft sft sft sft sft sft EOP

M hh:mm:ss xy,ww n[vv] CHG UNIT q CONN a b c d e f \\
5 LN MSG:

TOTAL TSIS tt NEW TSIS nn DEGROWN TSIS dd
sft sft sft sft sft sft sft sft sft sft
sft sft sft sft sft sft sft sft sft sft
sft sft sft sft sft sft sft sft sft sft EOP

M hh:mm:ss xy,ww n[vv] CHG UNIT q CONN a b c d e f \\
5 LN MSG:

TOTAL TSIS tt NEW TSIS nn DEGROWN TSIS dd
CHANGED TSIS sft sft ... sft sft
.
.
.
CHANGED TSIS sft sft ... sft sft COMPL

Denial Message

[O.38101.01]

M hh:mm:ss xy,ww n[vv] CHG UNIT q CONN a b c d e f COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT	- Unit
[q]q	- Unit number (1 through 16)
TSI	- Time slot interchange
CONN	- Connectivity
a b c d e f	- The new complement of the subject unit's TSIs is changed to (1 through 6)
tt	- Total number of grown TSIs in frame (02 through 72)
nn	- Number of TSIs grown by command (00 through 10)
dd	- Number of TSIs degrown by command (00 through 10)
sft	- TSI equipped status
s	- Service side (0 or 1)
f	- FROM unit number 1 through 6 if equipped - if not equipped
t	- TO unit number 1 through 6 if equipped - if not equipped
cc	- Hexadecimal condition code
cc	<i>Explanation</i>
02	Subject entity is not equipped
27	Illegal connectivity specified
28	Connectivity contains unequipped units
80	Some TSIs to degrow are in service
3E	Mapped slots exist on a tsi

CHG,UNIT,DS3,BERM,BERT,LBO,TYPE

CHANGE DS3 PARAMETERS

Explanation Of Command

For one or more DS3 facilities, including Hybrid DS3 (HDS3) facilities, this command requests and reports a change in any of the following parameters:

BERM	Bit error rate calculation method
BERT	Bit error rate threshold for declaring high BER condition
LBO	The line build-out setting
TYPE	The DS3 or HDS3 facility type and framing format

At least one of the optional parameters must be supplied.

The following type changes are supported:

- If the DS3 is connected to a KCR-1 circuit pack, type changes between MX100 and MX200 are supported. MX100 supports the M13 framing format; MX200 supports the C-bit parity framing format.
- If the DS3 is connected to a KCR-5 circuit pack, type changes between EX100 and EX200 are supported. EX100 supports the M13 framing format; EX200 supports the C-bit parity framing format.
- If the DS3 is connected to a KCR-8 circuit pack, type changes between HX100 and HX110 are supported. For type HX100 the X-bits in the DS3 stream are interpreted according to ANSI standard T1.107. For type HX110 the X-bits are interpreted opposite to the ANSI standard T1.107; in this case an X-bit of "0" is interpreted as normal, while an X-bit of "1" is interpreted as a Remote Alarm Indication.

One output message will be generated for each DS3 or HDS3 termination.

Command

[I.38601]

CHG:FRM xy,SEQ ww:UNIT [q]q,DS3 c[-d][,BERM s][,BERT t]\
[,LBO][,TYPE mnxyz]!

Completion Message

[O.38601]

M hh:mm:ss xy,ww n[vv] CHG UNIT [q]q DS3 a 4 LN MSG:
 TYPE BERM BERT LBO
PARAMETER mnxyz s t
OLD PARAMETER mńxýž ś ť <đ> COMPL

Denial Message

[O.38601.01]

M hh:mm:ss xy,ww n[vv] CHG UNIT [q]q DS3 a 2 LN MSG:
[BERM s][BERT t][LBO][TYPE mnxyz]COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit
[q]q - Unit number (1 through 16)
DS3 - Digital signal 3 (44.736 Mb/s rate)
c - DS3 facility number within the unit (1 through 6)
d - DS3 facility number within the unit (1 through 6)
Variable d is used to specify a range of facilities
a - DS3 number within the range of c and d

BERM - Bit error rate calculation method

s - BERM specification

s *Explanation*

B Bipolar violations

P DS3 parity errors

C Both Bipolar violations (BPV) and DS3 Parity Errors, supported by HMXR only

BERT - Bit error rate threshold

For declaring high BER condition

t - BERT specification

t *Explanation*

3 Corresponds to threshold of 10^{-3}

6 Corresponds to threshold of 10^{-6}

LBO - Line buildout

b - LBO specification

b *Explanation*

ON Line build-out is turned on

OFF Line build-out is turned off

LBO is required as shown in the following table.

734A Cabling to DSX-3	KS-19224,L2 Cabling to DSX-3	LBO
0 to 225 feet	0 to 75 feet	ON
225 to 450 feet	75 to 150 feet	OFF

Note: LBO may be used to change the LBO setting of an in-service, traffic-carrying Multiplexer-Multiplexer Interface Unit (MMFG).

TYPE - Type

mnxyz - The DS3 format processed by the MXR:

mn - DS3 type

mn *Explanation*

MX The original R4.0 DS3 facility type supported by the Multiplexer (MXR) circuit pack (KCR-1).

EX The enhanced R6.0 DS3 facility type supported by the Enhanced Multiplexer (EMXR) circuit pack (KCR-5).

HX The hybrid facility type supported by the Hybrid Multiplexer (HMXR) circuit pack (KCR-8).

If the unit is a regular DS3U of unit type DT100, then the default is the MX type for backward compatibility.

If the unit is a Hybrid DS3U of unit type HT100, then the default is HX.

Allowed xyz values

Type Explanation

MX100 KCR-1 circuit pack with M13 framing

MX200 KCR-1 circuit pack with C-bit parity framing

EX100 KCR-5 circuit pack with M13 framing

EX200 KCR-5 circuit pack with C-bit parity framing

HX100 KCR-8 Hybrid circuit pack with M13 framing

HX110 KCR-8 Hybrid circuit pack with M13 framing and reverse interpretation of X-bit values.

Type HX100 and HX110 set the X-bits (carried by the DS3 signal) in the transmit direction and interpret the value of the X-bits in the receive direction for the purpose of obtaining a Remote Alarm Indication (RAI) for the DS3 signal. Type HX100 interprets X-bit values (there are two X-bits) of "1" as normal, while values of "0" indicate an RAI. Type HX110 interprets X-bit values of "0" as normal and X-bit values of "1" as RAI.

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

24 Unit type error

90 Invalid change parameter combinations

9B The MXR is not grown

AE MXR is failed

50 Invalid MIU/MXR type specified

51 The pair MXR is not equipped

56 The MXR is in service

CHG,UNIT,FTMI,EQL

CHANGE FTMI EQUALIZATION

Explanation Of Command

This message requests changing the equalization of a half or a whole facility terminating module (FTM) and its associated interface, the FTMI.

Command

[I.38111]

CHG:FRM xy,SEQ ww:UNIT [q]q,FTMI d,EQL(l,r)!

Completion Message

[O.38111]

M hh:mm:ss xy,ww n[vv] CHG UNIT [q]q FTMI d 2 LN MSG:
EQL k p NEW STATE EQL m s COMPL

Denial Message

[O.38111.01]

M hh:mm:ss xy,ww n[vv] CHG UNIT [q]q FTMI d EQL l r \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FTMI - Facility terminating module interface

d - FTMI number in the DACS II unit (1 through 4)

EQL - Equalization

l - Left half shelf equalization value (first 10 Dual Digroup Circuits)

r - Right half shelf equalization value (second 10 Dual Digroup Circuits)

Enter a dash for an equalization value if that value is not to be changed.

Equalization option values for 255AS/24 gauge cable

<i>l</i>	<i>Explanation</i>
1	000 to 100 feet
2	100 to 200 feet
3	200 to 300 feet
4	300 to 400 feet
5	400 to 500 feet
-	Do not change equalization

Equalization option values for 600 series/22 gauge cable

<i>l</i>	<i>Explanation</i>
1	000 to 050 feet
2	051 to 267 feet
3	268 to 400 feet
4	401 to 533 feet
5	534 to 655 feet
-	Do not change equalization

Equalization option values for 1249/26 gauge cable

<i>l</i>	<i>Explanation</i>
<i>r</i>	
1	000 to 090 feet
2	090 to 180 feet
3	180 to 270 feet
4	270 to 360 feet
5	360 to 450 feet
-	Do not change equalization

If a number is entered for l and/or r, the equalization option of each half will be changed to the value associated with that number whether the option was previously specified or not. If a dash (-) is entered for l or r the existing equalization option used for the corresponding half will continue to be applied; that is, the option will be unchanged. However, the command will be denied if dashes (-) are entered for both l and r.

k, p - Equalization options before change

m, s - Equalization options after change

k and m apply to the left half of shelf, that is, the first 10 DDCs in the shelf

p and s apply to the right half of shelf, that is, the second 10 DDCs in the shelf

cc - Hexadecimal condition code

cc	<i>Explanation</i>
02	Subject entity is not equipped
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
0E	No equalization for CEPT FTMI

CHG,USER,LINK,INCL,SCR,GR,MCON,MCOFF

CHANGE USER/LINK SCREENING

Explanation Of Command

This command assigns the output message screening for a user or administrative link, including all virtual circuits in a X.25 link, on the DACS II system.

The command can also assign default values to the link options.

The function is denied if the user identification does not exist.

Output from this command is sent only to the link on which the command was input.

With the Message Logging feature, a request to retrieve logged messages will be sent to the link on which the retrieval command was input and the links with screening option 5 that are running MML.

Command

[I.38401]

```
CHG:FRM xy,SEQ ww:{USER <user id>|LINK j[mm][,INCL]}\  
[,SCR n[,GR(a,b,c,d,e,f)]][, {MCON|MCOFF}][,INIT]!
```

Completion Message

[O.38401]

```
M hh:mm:ss xy,ww n[vv] CHG {USER <user id>|LINK j[mm][,INCL]}\  
[ SCR n[ GR(a,b,c,d,e,f)]] [ {MCON|MCOFF}][ INIT] COMPL
```

Denial Message

[O.38401.01]

M hh:mm:ss xy,ww n[vv] CHG {USER <user id>|LINK j[mm][,INCL]} \
[SCR n[GR(a,b,c,d,e,f)]] [{MCON|MCOFF}][INIT] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

USER - User

user id

- User identifier (two to eight alphabetic characters)

User login identification

LINK - Link

j [mm] - Administrative link number

j - Physical link number (1 through 6)

mm - Virtual circuit number (01 through 16, for l = 5 or 6)

If mm is specified, pp must be specified as 01.

INCL - Include

Include virtual circuits of links 5 and 6. The INCL keyword can only be entered with X.25 links 5 and 6, and no virtual circuit number is allowed when this keyword is used. That is, "mm" and "INCL" are mutually exclusive. In addition, the INCL keyword is also mutually exclusive with the "<user id>". When the INCL keyword is entered, it means that all provisioning data specified in this command, for example, SCR n, GR(a,b,c,d,e,f), and MCON/MCOFF, will be applied to all virtual circuits of the link (5 or 6).

SCR - Screening

n - Screening option number (1 through 5)

The screening option is used to limit responses on a given administrative link to one of the sets given in the table below. The set to be received is selected by the use of variable "n".

<i>n</i>	<i>Explanation</i>
1	Responses to input at the same link.
2	Responses to input at the same link and autonomous messages. This is the default value.
3	Responses to messages input at the same link and some specified sets of action verbs.
4	Responses to messages input at the same link and some specified sets of action verbs including autonomous messages.
5	Responses to input messages on all links and autonomous messages

GR - Group

a, b, c, d, e, f

- Screening groups a through f (0 or 1)

The entry of the screening group option is allowed only if n = 3 or 4 was entered for the screening option number. The screening group option will not apply for n = 2; the default screening option. The restricted commands are not categorized by group and are always assigned the screening group value "1".

<i>a*</i>	<i>Explanation</i>

0	Messages in the message group represented by variable a will not be sent to the link or user specified in this command.
1	Messages in the message group represented by variable a will also be sent to the link or user specified in this command.
-	Do not change the screening group option for variable a.

* This table applies also to variables b through f.

DACS II has six groups of action verbs represented in this message by variables a, b, c, d, e, and f. The following table defines the variables assigned to each action verb.

a Circuit Prov.	b Equipment Prov.	c Maintenance	d Test Access	e Monitoring	f Common
TCON	GRTH	RMV	TTST	AUD	CHG
TDIS	DGRTH	RST	STST	UTL	ED
TCNT	ADD	DGN			EXC
BCON	DLT	CFR			ACT
BDIS					ADD
OCON					DELETE
ODIS					LIST
OCNT					TOTAL
SW					
CONF					
SECH					
SDCH					
SCON					
SCNT					
SDIS					

MCON - Macro on

Macro completion message screening ON. MCON is the default value.

MCOFF - Macro off

Macro completion message screening OFF

The MCON/MCOFF options are used to turn on or off the completion messages of the component commands inside a macro during its execution.

INIT - Initialize

Initialize the link or user options; all parameters are set to their default values except those specified in the command.

cc - Hexadecimal condition code

cc *Explanation*

- D3** User does not exist
- D7** Cannot execute privileged command
- DF** Command and protocol are inconsistent
- E1** Virtual circuit is not specified for X.25 link
- E2** Invalid link number specified
- E3** Invalid keyword(s) combination specified
- 41** Language "F" provisioned for this channel
- 83** Language is not allowed

CI,ECI,RESET

STARTUP

Explanation Of Command

DACS II outputs this message immediately after a hardware reset. The message notifies remote systems by the major alarm state (indicated by **) that the frame has reset.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01201]

****{CI|ECI} RESET**

Explanation Of Parameters

CI - Communications interface

ECI - Enhanced communications interface

RESET - Reset

Indicates a hardware reset of the frame

CI,ECI,STARTUP,STF,ATP

STARTUP

Explanation Of Command

The communications interface or enhanced communications interface has initialized itself and has performed self-diagnostics. The results of these diagnostics are reported as some tests failed or all tests passed.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01211]

{CI|ECI} STARTUP {STF|ATP}

Explanation Of Parameters

CI - Communications interface

ECI - Enhanced communications interface

STARTUP

- Startup

Indicates initialization

STF - Some tests failed

ATP - All tests passed

CMD,MC,OOS,MCOND,INSERVICE,MPDBASE

INPUT DENIAL

Explanation Of Command

This autonomous message indicates that processing of the input message is **STOPPED** because the main controller is either out of service, in maintenance condition, in service, or the main processor data base is not loaded.

Output from this command is sent only to the link on which the command was input.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01111]

M hh:mm:ss xy,ww n[vv] CMD MC {OOS|MCOND|INSERVICE|MPDBASE} \

e LN MSG:

<First 70 characters of input message.>

<Remaining text of input message> STOPPED

Explanation Of Parameters

e - Number of lines in message

OOS - Out-of-service

MCOND - Maintenance condition

INSERVICE

- In-service

MPDBASE

- MP data base

The main processor data base is not loaded

STOPPED

- Stopped

COPY,NPC,TO

COPY NPC

Explanation Of Command

This command is used to copy provisioning information from a previously provisioned network processing circuit (NPC) to an NPC to be provisioned (the destination NPC). It is used for domestic NPC types DE, TE, DA, TA, and DS. Copying is limited to the combinations given below:

- DE to DE or TE
- TE to TE or DE
- DA to DA or TA
- TA to TA or DA
- DS to DS

When the parameters of the source (previously provisioned) NPC type do not apply to the destination NPC type, such parameters and their values will be not be copied to the destination NPC type; the destination NPC will ignore them. When there are no parameters of the source NPC type that apply to the destination NPC type, the destination NPC type will assume its default values for those parameters.

One output message is printed for each NPC successfully copied and provisioned.

When a range address crosses a Unit boundary, the command will be denied. The NPC numbers which are divisible by four with a remainder of zero are not a valid Hybrid DS3 Unit THxyz type NPC. However, the range of THxyz type NPC numbers is still supported with the understanding that there may be gaps in the NPC number range.

When an NPC range specified within a Unit crosses a Facility Terminating Module (FTM) boundary and the FTM type differs from that specified in this command then that FTM will be skipped and a summary denial message will be output. This message will give the range of NPCs for which the denial is effective and the reason for the denial. The NPC range covers successive NPCs in the range that are denied for the same reason.

Execution of the command then resumes at the NPC following the last one in the summary denial message and continues to the end of the specified range.

No insertion word will appear in the output message if the NPC is a clear DS1 type (types DE9y9, DA9y9, TE9y9 and TA9y9).

Command

Nonhierarchical

[I.31521]

COPY:FRM xy,SEQ ww:NPC [s]abc,TO [t]def[-[u]ghi]!

Hierarchical

[I.31521]

COPY:FRM xy,SEQ ww:NPC uvmnp,TO wxkqr[-ghikl]!

Completion Message

Nonhierarchical

If the destination NPC is DE or TE type, the output format is:

[O.31521]

```
M hh:mm:ss xy,ww n[vv] COPY [s]jkl TYPE mnxyz [IW pq] AIS {INFO|MJ|MN|CR}\
  4 LN MSG:
      SLIP      BER      ERS      SERS      COFA
THRESHOLDS mmm nnn    p  q      rrrrr    sss      ttt  uuu
OPTIONS     e  f      g  h      i        j      k   l  COMPL
```

If the destination NPC is DA or TA type, the output format is:

[O.31521]

```
M hh:mm:ss xy,ww n[vv] COPY [s]jkl TYPE mnxyz [IW pq]\
AIS {INFO|MJ|MN|CR} PL {ENA|DSA} 4 LN MSG:
DAILY NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
THRESHOLDS aaaaaaaaa bbbbb ccccc ddddd eeeee fffff gggggggg hhhh iiii
OPTIONS a b c d e f g h i EOM
```

```
M hh:mm:ss xy,ww n[vv] COPY [s]jkl TYPE mnxyz [IW pq]\
AIS {INFO|MJ|MN|CR} PL {ENA|DSA} 4 LN MSG:
DAILY FE CVP ESP SESP SEFS CSSP UASP ESL
THRESHOLDS jjjjjjjj kkkkk lllll mmmmm nnnnn ooooo ppppp
OPTIONS j k l m n o p EOM
```

```
M hh:mm:ss xy,ww n[vv] COPY [s]jkl TYPE mnxyz [IW pq]\
AIS {INFO|MJ|MN|CR} PL {ENA|DSA} 4 LN MSG:
15MIN NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
THRESHOLDS aaaaaaa bbb ccc ddd eee fff ggggggg hhh iii
OPTIONS a b c d e f g h i EOM
```

```
M hh:mm:ss xy,ww n[vv] COPY [s]jkl TYPE mnxyz [IW pq]\
AIS {INFO|MJ|MN|CR} PL {ENA|DSA} 4 LN MSG:
15MIN FE CVP ESP SESP SEFS CSSP UASP ESL
THRESHOLDS jjjjjjj kkk lll mmm nnn ooo ppp
OPTIONS j k l m n o p COMPL
```

If the segment header exceeds 80 characters, the output format is:

[O.31521]

```
M hh:mm:ss xy,ww n[vv] COPY [s]jkl TYPE mnxyz 5 LN MSG:
[IW pq] AIS {INFO|MJ|MN|CR} PL {ENA|DSA}
DAILY NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
THRESHOLDS aaaaaaaaa bbbbb ccccc ddddd eeeee fffff gggggggg hhhh iiii
OPTIONS a b c d e f g h i EOM
```

```
M hh:mm:ss xy,ww n[vv] COPY [s]jkl TYPE mnxyz 5 LN MSG:
[IW pq] AIS {INFO|MJ|MN|CR} PL {ENA|DSA}
DAILY FE CVP ESP SESP SEFS CSSP UASP ESL
THRESHOLDS jjjjjjjj kkkkk lllll mmmmm nnnnn ooooo ppppp
OPTIONS j k l m n o p EOM
```

```
M hh:mm:ss xy,ww n[vv] COPY [s]jkl TYPE mnxyz 5 LN MSG:
[IW pq] AIS {INFO|MJ|MN|CR} PL {ENA|DSA}
15MIN NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
THRESHOLDS aaaaaaa bbb ccc ddd eee fff ggggggg hhh iii
OPTIONS a b c d e f g h i EOM
```

```
M hh:mm:ss xy,ww n[vv] COPY [s]jkl TYPE mnxyz 5 LN MSG:
[IW pq] AIS {INFO|MJ|MN|CR} PL {ENA|DSA}
15MIN FE CVP ESP SESP SEFS CSSP UASP ESL
THRESHOLDS jjjjjjj kkk lll mmm nnn ooo ppp
OPTIONS j k l m n o p COMPL
```

If the destination NPC is DS type, the output format is:

[O.31521]

M hh:mm:ss xy,ww n[vv] COPY [s]jkl TYPE DSxyz [IW pq] \

4 N MSG:

	SLIP	BER	ERS	SERS	COFA	SANE	SAFE
THRESHOLDS	mmm	nnn	p q	rrrrr	sss	ttt	uuu
OPTIONS	e	f	g h	i	j	k	l

xxxxx zzzzz
v w COMPL

Hierarchical

If the destination NPC is DE or TE type, the output format is:

[O.31521]

M hh:mm:ss xy,ww n[vv] COPY uvjkl TYPE mnxyz [IW pq] AIS {INFO|MJ|MN|CR}\

4 LN MSG:

	SLIP	BER	ERS	SERS	COFA
THRESHOLDS	mmm	nnn	p q	rrrrr	sss
OPTIONS	e	f	g h	i	j

ttt uuu
k l COMPL

If the destination NPC is DA or TA type, the output format is:

[O.31521]

M hh:mm:ss xy,ww n[vv] COPY uvjkl TYPE mnxyz [IW pq]\

AIS {INFO|MJ|MN|CR} PL {ENA|DSA} 4 LN MSG:

	DAILY NE	CVP	ESP	SESP	SEFS	CSSP	UASP	CVL	ESL	SESL
THRESHOLDS	aaaaaaaa	bbbb	cccc	ddddd	eeee	ffff	ggggggggg	hhhhh	iiii	
OPTIONS	a	b	c	d	e	f	g	h	i	EOM

M hh:mm:ss xy,ww n[vv] COPY uvjkl TYPE mnxyz [IW pq]\

AIS {INFO|MJ|MN|CR} PL {ENA|DSA} 4 LN MSG:

	DAILY FE	CVP	ESP	SESP	SEFS	CSSP	UASP	ESL
THRESHOLDS	jjjjjjjjj	kkkk	llll	mmmm	nnnn	oooo	pppp	
OPTIONS	j	k	l	m	n	o	p	EOM

M hh:mm:ss xy,ww n[vv] COPY uvjkl TYPE mnxyz [IW pq]\

AIS {INFO|MJ|MN|CR} PL {ENA|DSA} 4 LN MSG:

	15MIN NE	CVP	ESP	SESP	SEFS	CSSP	UASP	CVL	ESL	SESL
THRESHOLDS	aaaaaaa	bbb	ccc	ddd	eee	fff	ggggggg	hhh	iii	
OPTIONS	a	b	c	d	e	f	g	h	i	EOM

M hh:mm:ss xy,ww n[vv] COPY uvjkl TYPE mnxyz [IW pq]\

AIS {INFO|MJ|MN|CR} PL {ENA|DSA} 4 LN MSG:

	15MIN FE	CVP	ESP	SESP	SEFS	CSSP	UASP	ESL
THRESHOLDS	jjjjjjj	kkk	lll	mmm	nnn	ooo	ppp	
OPTIONS	j	k	l	m	n	o	p	COMPL

If the segment header exceeds 80 characters, the output format is:

[O.31342]

```
M hh:mm:ss xy,ww n[vv] COPY uvjkl TYPE mnxyz 5 LN MSG:
[IW pq] AIS {INFO|MJ|MN|CR} PL {ENA|DSA}
DAILY NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
THRESHOLDS aaaaaaaaa bbbbbb cccccc ddddd eeeee fffff gggggggggg hhhhh iiiii
OPTIONS a b c d e f g h i EOM
```

```
M hh:mm:ss xy,ww n[vv] COPY uvjkl TYPE mnxyz 5 LN MSG:
[IW pq] AIS {INFO|MJ|MN|CR} PL {ENA|DSA}
DAILY FE CVP ESP SESP SEFS CSSP UASP ESL
THRESHOLDS jjjjjjjjj kkkkk lllll mmmmm nnnnn ooooo ppppp
OPTIONS j k l m n o p EOM
```

```
M hh:mm:ss xy,ww n[vv] COPY uvjkl TYPE mnxyz 5 LN MSG:
[IW pq] AIS {INFO|MJ|MN|CR} PL {ENA|DSA}
15MIN NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
THRESHOLDS aaaaaaa bbb ccc ddd eee fff gggggggg hhh iii
OPTIONS a b c d e f g h i EOM
```

```
M hh:mm:ss xy,ww n[vv] COPY uvjkl TYPE mnxyz 5 LN MSG:
[IW pq] AIS {INFO|MJ|MN|CR} PL {ENA|DSA}
15MIN FE CVP ESP SESP SEFS CSSP UASP ESL
THRESHOLDS jjjjjjj kkk lll mmm nnn ooo ppp
OPTIONS j k l m n o p COMPL
```

If the destination NPC is DS type, the output format is:

[O.31521]

```
M hh:mm:ss xy,ww n[vv] COPY uvjkl TYPE DSxyz [IW pq] \
4 LN MSG:
SLIP BER ERS SERS COFA SANE SAFE
THRESHOLDS mmm nnn p q rrrrr sss ttt uuu xxxxx zzzzz
OPTIONS e f g h i j k l v w COMPL
```

Denial Message

Nonhierarchical

[O.31521.01]

```
M hh:mm:ss xy,ww n[vv] COPY NPC [s]abc TO [t]mno[-[u]vwx] COND cc DNY
```

Hierarchical

[O.31521.01]

M hh:mm:ss xy,ww n[vv] COPY NPC uvmnp TO bcdfe[-efhed] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

TO - to

TYPE - type

mnxyz - NPC type identifier

<i>mn</i>	<i>Explanation</i>
DA	Dual digroup ANSI NPC
DE	Dual digroup NPC
DS	SLC® carrier NPC
TA	DS3U ANSI NPC
TE	DS3U or HDS3U Noninterface unit NPC
TH	Hybrid DS3U CEPT NPC

[s]abc - The 3- or 4-digit nonhierarchical NPC number, denoting the source of the provisioning information.

[t]def - The 3- or 4-digit nonhierarchical NPC number, denoting the start of a range.

[u]ghi - The 3- or 4-digit nonhierarchical NPC number, denoting the end of a range.

[s]jkl - The 3- or 4-digit nonhierarchical NPC number of the NPC that was successfully equipped.

[t]mno - The 3- or 4-digit nonhierarchical NPC number of the first NPC in a range to be denied.

[u]vw - The 3- or 4-digit nonhierarchical NPC number of the last NPC in a range to be denied.

bcdfe - Hierarchical NPC number of the first NPC in a range to be denied.

efhed - Hierarchical NPC number of the last NPC in a range to be denied.

ghikl - Hierarchical NPC number of the last NPC in a range to be equipped.

uvjkl - Hierarchical NPC number of the NPC that was successfully equipped.

uvmnp - Hierarchical NPC number denoting the source of the provisioning information to be copied.

wxkqr - Hierarchical NPC number of the NPC to be equipped or the first NPC in a range to be equipped.

bc, ef, gh, uv, wx

- Unit number

d, h, i, j, k, m

- Module number

fe, ed, kl, np, qr

- NPC number within the module

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in hierarchical form, the valid values are:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

IW - Insertion word

pq - Hexadecimal value of the insertion word.

An eight-bit code, called the growth insertion word, is transmitted by this NPC on unassigned DS0 channels. This code is specified by the optional keyword IW and its argument pq. This code was previously called the Disconnect Code (DCC), but that name is properly reserved for the cross-connect insertion word, which is transmitted when the disconnect message with the DDC specified is used.

Although any 2-digit hexadecimal code may be used, the default values are:

pq *Explanation*

7F Unassigned Channel Code (UAC), the default value for DE/TE type, DA/TA type, and DS type NPCs provisioned with D4 or ESF framing.

18 Unassigned Multiplex Code (UMC), the default value for DA/TA type NPCs provisioned with T1DM framing. This value should only be provisioned with T1DM framing (DE4yz/TE4yz, DA4yz/TA4yz), so the growth command enforces this restriction.

FF This is recommended for unconnected channels in the SLC® interface and CPI applications.

For Clear-DS1 NPCs, the insertion word option is **NOT** available and the message will be denied if this option is entered. The alarm indication signal (AIS) is transmitted in the disconnect or idle state.

AIS - Alarm indication signal

INFO - Information

Information message (not an alarm).

MJ - Major (alarm)

MN - Minor (alarm)

BER - Bit Error Rate

ERS - Errored seconds

SERS - Severe errored seconds

COFA - Change of frame alignment

mmm - SLIP major alarm threshold (0 through 255)
nnn - SLIP minor alarm threshold (0 through 255)
e - SLIP major option selection (0 through 3)
f - SLIP minor option selection (0 through 3)

p - BER major alarm threshold (4 through 6)
q - BER minor alarm threshold (4 through 6)
g - BER major option selection (0 through 3)
h - BER minor option selection (0 through 3)

rrrrr - ERS threshold (1 through 65535)
i - ERS option selection (0 through 3)

sss - SERS threshold (1 through 255)
j - SERS option selection (0 through 3)

ttt - COFA major alarm threshold (1 through 511)
uuu - COFA minor alarm threshold (1 through 255)
k - COFA major option selection (0 through 3)
l - COFA minor option selection (0 through 3)

xxxxx - SANE threshold (0 through 65535)
v - SANE option selection (0 through 3)

zzzzz - SAFE threshold (0 through 65535)
w - SAFE option selection (0 through 3)

Note: For clear-DS1 FTU NPC only SLIP and BER parameters are listed.
For clear-DS1 DS3U NPC only SLIP parameters are listed.

The SANE and SAFE parameters are not applicable to DS1yz and DS7yz type NPCs.

Except for BER, major thresholds may not be equal to or less than the minor thresholds.
The BER major threshold can be equal to the BER minor threshold.

PL - Payload loopback

ENA - Enabled

Payload loopback commands received from far-end equipment on the ESF data link are recognized and performed by the ANSI NPC. This is the default option.

DSA - Disabled

Payload loopback commands received from far-end equipment on the ESF data link are ignored by the ANSI NPC. This prevents customer equipment from controlling network configurations.

CVP - Path Coding Violations
ESP - Path Errored Seconds
SESP - Path Severely Errored Seconds
SEFS - Severely Errored Framing Seconds
CSSP - Path Controlled Slip Seconds
UASP - Path Unavailable Seconds
CVL - Line Coding Violations
ESL - Line Errored Seconds
SESL - Line Severely Errored Seconds

aaaaaaaa

- Daily near-end path coding violation threshold, (000000000 through 134217727)

a - Daily near-end path coding violation threshold selection, (0 through 3)

bbbbbb - Daily near-end path errored second threshold, (00000 through 86400)

b - Daily near-end path errored second threshold selection, (0 through 3)

cccccc - Daily near-end path severely errored second threshold, (00000 through 86400)

c - Daily near-end path severely errored second threshold selection, (0 through 3)

dddddd - Daily near-end severely errored framing second threshold, (00000 through 86400)

d - Daily near-end severely errored framing second threshold selection, (0 through 3)

eeeeee - Daily near-end controlled slip second threshold, (00000 through 86400)

e - Daily near-end controlled slip second threshold selection, (0 through 3)

ffffff - Daily near-end unavailable second threshold, (00000 through 86400)

f - Daily near-end unavailable second threshold selection, (0 through 3)

ggggggggg

- Daily near-end line coding violation threshold, (000000000 through 134217727, or ----- if not applicable)

g - Daily near-end line coding violation threshold selection, (0 through 3)

- hhhhh** - Daily near-end line errored second threshold,
(00000 through 86400, or ----- if not applicable)
- h** - Daily near-end line errored second threshold selection,
(0 through 3)
- iiiii** - Daily near-end line severely errored second threshold,
(00000 through 86400, or ----- if not applicable)
- i** - Daily near-end line severely errored second threshold selection,
(0 through 3)
- jjjjjjj** - Daily far-end path coding violation threshold,
(000000000 through 134217727, or ----- if not applicable)
- j** - Daily far-end path coding violation threshold selection,
(0 through 3)
- kkkkk** - Daily far-end path errored second threshold,
(00000 through 86400, or ----- if not applicable)
- k** - Daily far-end path errored second threshold selection, (0 through 3)
- lllll** - Daily far-end path severely errored second threshold,
(00000 through 86400, or ----- if not applicable)
- l** - Daily far-end path severely errored second threshold selection,
(0 through 3)
- mmmmm** - Daily far-end severely errored framing second threshold,
(00000 through 86400, or ----- if not applicable)
- m** - Daily far-end severely errored framing second threshold selection,
(0 through 3)
- nnnnn** - Daily far-end controlled slip second threshold,
(00000 through 86400, or ----- if not applicable)
- n** - Daily far-end controlled slip second threshold selection,
(0 through 3)
- ooooo** - Daily far-end unavailable second threshold,
(00000 through 86400)
- o** - Daily far-end unavailable second threshold selection, (0 through 3)

ppppp - Daily far-end line errored second threshold,
(00000 through 86400, or ----- if not applicable)

p - Daily far-end line errored second threshold selection,
(0 through 3)

a a a a a a

- 15-Minute near-end path coding violation threshold,
(0000000 through 2097151)

a - 15-Minute near-end path coding violation threshold selection,
(0 through 3)

bbb - 15-Minute near-end path errored second threshold,
(000 through 900)

b - 15-Minute near-end path errored second threshold selection,
(0 through 3)

ccc - 15-Minute near-end path severely errored second threshold,
(000 through 900)

c - 15-Minute near-end path severely errored second threshold selection,
(0 through 3)

ddd - 15-Minute near-end severely errored framing second threshold,
(000 through 900)

d - 15-Minute near-end severely errored framing second threshold
selection, (0 through 3)

eee - 15-Minute near-end controlled slip second threshold,
(000 through 900)

e - 15-Minute near-end controlled slip second threshold selection,
(0 through 3)

fff - 15-Minute near-end unavailable second threshold,
(000 through 900)

f - 15-Minute near-end unavailable second threshold selection,
(0 through 3)

g g g g g g

- 15-Minute near-end line coding violation threshold,
(0000000 through 2097151, or ----- if not applicable)

g - 15-Minute near-end line coding violation threshold selection,
(0 through 3)

- hhh** - 15-Minute near-end line errored second threshold,
(000 through 900, or --- if not applicable)
- h** - 15-Minute near-end line errored second threshold selection,
(0 through 3)
- iii** - 15-Minute near-end line severely errored second threshold,
(000 through 900, or --- if not applicable)
- i** - 15-Minute near-end line severely errored second threshold selection,
(0 through 3)
- jjjjjjj** - 15-Minute far-end path coding violation threshold,
(0000000 through 2097151, or ----- if not applicable)
- j** - 15-Minute far-end path coding violation threshold selection,
(0 through 3)
- kkk** - 15-Minute far-end path errored second threshold,
(000 through 900, or --- if not applicable)
- k** - 15-Minute far-end path errored second threshold selection,
(0 through 3)
- lll** - 15-Minute far-end path severely errored second threshold,
(000 through 900, or --- if not applicable)
- l** - 15-Minute far-end path severely errored second threshold selection,
(0 through 3)
- mmm** - 15-Minute far-end severely errored framing second threshold,
(000 through 900, or --- if not applicable)
- m** - 15-Minute far-end severely errored framing second threshold selection,
(0 through 3)
- nnn** - 15-Minute far-end controlled slip second threshold,
(000 through 900, or --- if not applicable)
- n** - 15-Minute far-end controlled slip second threshold selection,
(0 through 3)
- ooo** - 15-Minute far-end unavailable second threshold,
(000 through 900)
- o** - 15-Minute far-end unavailable second threshold selection,
(0 through 3)

- ppp** - 15-Minute far-end line errored second threshold,
(000 through 900, or --- if not applicable)
- p** - 15-Minute far-end line errored second threshold selection,
(0 through 3)

Note: A threshold of zero for any parameter inhibits threshold crossing monitoring for that parameter.

For PB/PC type:

Note that:

- If the NPC is not located in a sync NPC location, bit "b" set to "1" will be denied.
- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.
- For NSA NPCs (bit d = 0), bits "f" and "g" are don't cares: any values are accepted.
- If bit "d" is set to "1" (that is, a CAS NPC) and "jkl" is "110" (that is, Transmic 1G), the command will be denied.
- If bit "d" is set to "1" (that is, a CAS NPC) and bit "e" is "1" for time slot channel numbering, the command will be denied.

- m** - Facility performance parameter threshold index (0 through 10 hexadecimal)

Note: If the queried NPC can not be accessed for some reason, for example because the Facility Terminating Module is not equipped or the FTMI or Unit Controller is out of service, then the NPC's parameter count fields are printed as a string of dashes to indicate that the counts are not available. The parameter thresholds and options will still be correctly output.

In addition, certain parameters do not apply. In the cases where specific parameters do not apply to the queried NPC, the respective parameter count fields, threshold values and threshold options are all displayed as a string of dashes.

A special code, called the Growth Insertion Word (GIW), is transmitted by this NPC on unassigned channels. This code is specified by the optional keyword **IW** and its argument **pq**.

This code was previously called the Disconnect Code (DCC), but that name is properly reserved for the TCON Insertion Word, which is transmitted when the "TDIS: :FROM, TO, . . . , DCC" command is used.

IW - Insertion word

pqr - Hexadecimal value of the insertion word.

For PB and PC type NPCs, the IW argument is X'pq[r], and the default GIW code is X'D5D (Binary: 11010101 1101). Hexadecimal digits "pq" represent the CEPT insertion word for cross-connected time slots and hexadecimal digit "r" represents the CEPT signaling option. The "r" digit is needed to accommodate the cross-connected CEPT time slot and its associated portion of TS16 used for signaling when provisioned for channel associated signaling (CAS).

Although the "r" digit is accepted on input, for NSA NPCs, it has no significance.

AIS - Alarm indication signal

AIS is not detected by unframed clear (unchannelized) 2Mbit/s PAXDz type NPCs. Therefore, specifying AIS with one of the alarm level types MI, DMA, or PMA, is unnecessary. However, the command will not be denied if AIS is specified with an alarm level for unframed clear PAXDz NPCs. AIS with its alarm level will simply never be reported for unframed clear PAXDz NPCs.

MI - Maintenance information

This is the default option.

PMA - Prompt Maintenance Action Major Alarm

PMC - Prompt Maintenance Action Critical Alarm

DMA - Deferred Maintenance Action Minor Alarm

The **TS0 abcdefgh** variables represent international and national bits in time slot'0, as defined by:

These variables are set to their default values "11011111" by this command, except for the Transmic'1G option, where the default is "11000000."

The variables may later be changed by setting the abcdefgh parameters in the TS0 field of the CHG::NPC command.

Each of the variables may then be set to "0", "1", or "P." "P" indicates that the incoming bit will be cross-connected unchanged.

When TS0 is cross-connected, the TS0 bits will be either passed, or set to "0" or "1" as indicated by the "abcdefgh" variable values. Note that bits which are used for alarms (bit 3 always; bits 4 and 5 if provisioned by the **mnxyz** values) may not be set to "P."

This is also true for NPCs assigned as test port NPCs.

The **TS0M abcdefgh** field allows monitoring of state changes in the received spare international bits, where the "abcdefgh" variables refer to the same TS0 bits as defined above for the TS0 "abcdefgh" variables.

The TS0M variables are specified for monitoring in the command as:

The default values for TS0M variables are **abcdefgh=00000000**, unless the **xyz** parameters set them differently, that is, for Transmic'1G the **abcdefgh=00111111**. The TS0M variables may later be provisioned by the **CHG::TS0M'abcdefgh** or the **ED-PRMTR-EQPT TS0M-abcdefgh (38323)** command.

For PA type:

Note that:

- If the NPC is not located in a sync NPC location, the value of "x" must be in the range 0 - 3 or 8 - B. Otherwise the command will be denied.
- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.
- If the value of "y" is 0, 2, 4 or 6 (i.e., a CAS NPC) and the value of "z" is C (i.e. Transmic 1G), the command will be denied.

For TH type:

Note that:

- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.

<m> - Facility performance parameter threshold index (0 through 10 hexadecimal)

Variable <m> is used to select the threshold value and alarm type previously programmed for parameter rr. There are four possible alarm thresholds and 4 different alarm levels. A given value of <m> selects one combination of threshold value and alarm level. The combinations of these two result in 16 possible values of m. There is a 17th <m> value which is used to disable the alarm threshold and the alarm. The values of <m> that produce the default values of the thresholds and alarms are shown in the table below under the column heading "Threshold Value". Threshold and alarm combinations selected by m = 3 through b and d-10 must exist, that is, must have been programmed, prior to being selected. The thresholds are programmed by using the ED-OPT-T1 command. Thresholds of all unspecified parameters will be set to the default value associated with m=0. Setting <m> = c disables thresholding for a given parameter.

For TH type NPCs:

Table 8-19. Parameter Register Threshold Range and Default Values

rr	Parameter	Interval	Threshold Value Range	Default Threshold Value
11	CRC Block Errors	DAILY	1 - 79056000	176947
12	Framing Errors	DAILY	1 - 345600000	176947
13	Out of Frame Seconds	DAILY	1 - 86400	4
14	Errored Seconds	DAILY	1 - 86400	4320
15	Severely Errored Seconds	DAILY	1 - 86400	90
16	Controlled Slip Seconds	DAILY	1 - 86400	4
18	Unavailable Seconds	DAILY	1 - 86400	90
19	Unavailable Time Count	DAILY	1 - 4320	9
20	Multiframe Errors	DAILY	1 - 86400	4095
81	CRC Block Errors	15MIN	1 - 823500	18432
82	Framing Errors	15MIN	1 - 3600000	18432
83	Out of Frame Seconds	15MIN	1 - 900	4
84	Errored Seconds	15MIN	1 - 900	300
85	Severely Errored Seconds	15MIN	1 - 900	30
86	Controlled Slip Seconds	15MIN	1 - 900	1
88	Unavailable Seconds	15MIN	1 - 900	30
89	Unavailable Time Count	15MIN	1 - 45	3
90	Multiframe Errors	15MIN	1 - 900	255

A special code, called the Growth Insertion Word (GIW), is transmitted by this NPC on unassigned channels. This code is specified by the optional keyword **IW** and its argument **pq**.

This code was previously called the Disconnect Code (DCC), but that name is properly reserved for the TCON Insertion Word, which is transmitted when the "TDIS: :FROM, TO, . . . , DCC" command is used.

IW - Insertion word

pqr - Hexadecimal value of the insertion word.

For PA type NPCs, the IW argument is X'pq[r]', and the default GIW code is X'D5D (Binary: 11010101 1101). The "pq" hex digits represent the CEPT insertion word for cross-connected time slots and the "r" hex digit represents the CEPT signaling options. The "r" digit is needed to accommodate the cross-connected CEPT time slot and its associated portion of TS16 used for signaling when provisioned for CAS.

Although the "r" digit is accepted on input, for NSA NPCs, it has no significance.

For each NPC listed, this message prints out values of the states, counts, thresholds and options of the following facility performance parameters and the spare international and national bits in time slot 0 for CEPT DPCs.

parameter	explanation
CRC	CRC Block Errors
FRER	Framing Errors
OFS	Out of Frame Seconds
ES	Errored Seconds
SES	Severely Errored Seconds
CSS	Controlled Slip Seconds
CV	Coding Violations
UAS	Unavailable Seconds
UATC	Unavailable Time Count
MER	Multiframe Errors
FEBE	Far End Block Errors
FES	Far End Errored Seconds
FSES	Far End Severely Errored Seconds
FUAS	Far End Unavailable Seconds

Two sets of thresholds are kept for each parameter: One for DAILY intervals and one for 15 MINUTE intervals.

aaaaaaaa

- Daily CRC block error threshold value.

a - Daily CRC block error threshold selection, (0 through 3)

bbbbbbbb

- Daily framing error threshold value.

b - Daily framing error threshold selection, (0 through 3)

cccccc - Daily out of frame seconds threshold value.

c - Daily out of frame seconds threshold selection, (0 through 3)

dddddd - Daily errored second threshold value.

d - Daily errored second threshold selection, (0 through 3)

eeeeee - Daily severely errored second threshold value.

e - Daily severely errored second threshold selection, (0 through 3)

ffffff - Daily controlled slip second threshold value.

f - Daily controlled slip second threshold selection, (0 through 3)

gggggggg

- Daily coding violation threshold value.

g - Daily coding violation threshold selection, (0 through 3)

hhhhh - Daily unavailable second threshold value.

h - Daily unavailable second threshold selection, (0 through 3)

iiii - Daily unavailable time count threshold value.

i - Daily unavailable time count threshold selection, (0 through 3)

jjjj

- Daily multiframe alignment error threshold value.

j - Daily multiframe alignment error threshold selection, (0 through 3)

kkkkkkkk

- Daily far-end block error threshold value.

k - Daily far-end path block error selection, (0 through 3)

lllll - Daily far-end errored second threshold value.

l - Daily far-end path second threshold selection, (0 through 3)

mmmm - Daily far-end severely errored second threshold value.

m - Daily far-end severely errored second threshold selection, (0 through 3)

nnnn - Daily far-end unavailable second threshold value.

n - Daily far-end unavailable second threshold selection, (0 through 3)

a a a a a - 15-Minute CRC block error threshold value.

a - 15-Minute CRC block error threshold selection, (0 through 3)

bbbbbb - 15-Minute framing error threshold value.

b - 15-Minute framing error threshold selection, (0 through 3)

ccc - 15-Minute out of frame seconds threshold value.

c - 15-Minute out of frame seconds threshold selection, (0 through 3)

ddd - 15-Minute errored second threshold value.

d - 15-Minute errored second threshold selection, (0 through 3)

eee - 15-Minute severely errored second threshold value.

e - 15-Minute severely errored second threshold selection, (0 through 3)

fff - 15-Minute controlled slip second threshold value.

f - 15-Minute controlled slip second threshold selection, (0 through 3)

g g g g g g - 15-Minute coding violation threshold value.

g - 15-Minute coding violation threshold selection, (0 through 3)

hhh - 15-Minute unavailable second threshold value.

h - 15-Minute unavailable second threshold selection, (0 through 3)

ii - 15-Minute unavailable time count threshold value.

i - 15-Minute unavailable time count threshold selection, (0 through 3)

jjj - 15-Minute multiframe alignment error threshold value.

j - 15-Minute multiframe alignment error threshold selection, (0 through 3)

<u>k k k k k</u>	- 15-Minute far-end block error threshold value.
k	- 15-Minute far-end path block error selection, (0 through 3)
l l l	- 15-Minute far-end errored second threshold value.
l	- 15-Minute far-end path second threshold selection, (0 through 3)
mmm	- 15-Minute far-end severely errored second threshold value.
m	- 15-Minute far-end severely errored second threshold selection, (0 through 3)
nnn	- 15-Minute far-end unavailable second threshold value.
n	- 15-Minute far-end unavailable second threshold selection, (0 through 3)

The options {a,b,c,d,e,f,g,h,i,j,k,l,m,n} and {a,b,c,d,e,f,g,h,i,j,k,l,m,n} are **m values** as previously shown and specify the threshold sets of the performance parameters listed.

The **TS0 abcdefgh** variables represent international and national bits in time slot'0, as defined by:

These variables are set to their default values "11011111" by this command, except for the Transmic'1G option, where the default is "11000000."

The variables may later be changed by setting the abcdefgh parameters in the TS0 field of the ED-PRMTR-EQPT::NPC or CHG::NPC (38321) command. Each of the variables may then be set to "0", "1", "P" or "V." "P" indicates that the incoming bit will be cross-connected unchanged; "V" indicates that the bit received will be inverted.

When TS0 is cross-connected, the TS0 bits will be either passed, inverted or set to "0" or "1" as indicated by the "abcdefgh" variable values. Note that bits which are used for alarms (bit 3 always; bits 4 and 5 if provisioned by the **mnxyz** values) may not be set to "P."

This is also true for NPCs assigned as test port NPCs.

The **TS0M abcdefgh** field allows monitoring of state changes in the received spare international bits, where the "abcdefgh" variables refer to the same TS0 bits as defined above for the TS0 "abcdefgh" variables.

The TS0M variables are specified for monitoring in the command as:

The default values for TS0M variables are **abcdefgh=00000000**, unless the **xyz** parameters set them differently, i.e., for Transmic'1G the abcdefgh=00111111. The TS0M variables may later be provisioned by the CHG::TS0M'abcdefgh or the ED-PRMTR-EQPT TS0M-abcdefgh (38323) command.

cc - Hexadecimal condition code

cc *Explanation*

- 01** Subject entity is equipped
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 13** FTMI is not equipped
- 24** Unit type error
- 26** NPC type error
- 83** NPC type is inconsistent with FTMI type
- BF** MIU is not equipped
- FD** NPC range crosses unit boundary
- 9B** The MXR is not grown
- 07** Mismatch between MXR and NPC types
- 87** Copy source NPC is not equipped

CTST,FAD,AIS,INCL

NON-CANNELIZED TEST, MONITOR,SPLIT,LOOP

Explanation Of Command

For a one-way circuit under test, the test mode can only be MONE or SPLTA. The FROM and TO NPCs must be entered as the E- and F-end NPCs, respectively.

The AIS keyword is required for test modes SPLTE, SPLTF, SPLTEF, LOOPE and LOOPF, to indicate the idle signal for any idle output port that resulted from the interruption.

The INCL keyword is required if one or more of the NPC(s) under test is marked Red or Customer-controlled, except when changing to a monitor mode.

Once a test connection is set up, this command can be entered with either one or both FADs, in any order. The original order of FAD assignment will be used until test access is released.

The E- and F-end NPCs for non-channelized test access correspond to the FROM and TO NPCs of a cross-connection, respectively. The test session is the circuit connection under test.

During a test session, if a hard-reset or link failure occurs, the test session is released automatically. However, if the failure is such that it prevents release at the time of logoff or if the FAD fails, the test session is NOT automatically released and can be released by manual disconnection.

Command

Nonhierarchical

[I.20101]

CTST:FRM xy,SEQ ww:<tmode>,FAD ([s]abc[, [t]def)][,AIS][,INCL]!

Hierarchical

[I.20101]

CTST:FRM xy,SEQ ww:<tmode>,FAD (uvmnp[,wxkqr])[,AIS][,INCL]!

Completion Message

Nonhierarchical

[O.20101]

M hh:mm:ss xy,ww n[vv] CTST <tmode> FAD ([s]abc[, [t]def]) \
[u]ghi[, [v]jkl] 2 LN MSG:
[AIS][RDC][CUS][ONEWAY][{UMPD|[EMODE <emode>] FMODE <fmode>} \
COMPL

Hierarchical

[O.20101]

M hh:mm:ss xy,ww n[vv] CTST <tmode> FAD (uvmnp[,wxkqr]) \
eghij[,jklmn] 2 LN MSG:
[AIS][RDC][CUS][ONEWAY][{UMPD|[EMODE <emode>] FMODE <fmode>} \
COMPL

Denial Message

Nonhierarchical

[O.20101.01]

M hh:mm:ss xy,ww n[vv] CTST <tmode> FAD ([s]abc[, [t]def]) \
2 LN MSG:
[[t]klm][COND]cc[<st>] DNY

Hierarchical

[O.20101.01]

M hh:mm:ss xy,ww n[vv] CTST <tmode> FAD (uvmnp[,wxkqr]) \
2 LN MSG:
[ghklm][COND]cc[<st>] DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FAD	- Facility access digroup The test NPC	
tmode	- Test mode <i>tmode</i>	<i>Explanation</i>
MONE	Monitor signal from equipment end (E-end) NPC to facility end (F-end) NPC of unmapped or one-/two-way mapped test session	
MONF	Monitor signal from F-end NPC to E-end NPC of a two-way mapped test session	
MONEF	Monitor a two-way mapped connection in both directions; two FADs are connected for the test session, and test mode can only be changed to another mode using two FADs	
SPLTA	Split the A signal from the equipment E-end NPC to the facility F-end NPC of one-/two-way mapped test session	
SPLTB	Split the B signal from the F-end NPC to the E-end NPC of a mapped two-way test session	
SPLTAB	Split both A and B signals of a two-way test session; two FADs are connected for the test session, and test mode can only be changed to another mode using two FADs	
SPLTE	Split the input and output ports of E-end NPC of an unmapped or two-way mapped test session	
SPLTF	Split the input and output ports of F-end NPC of a two-way mapped test session	
SPLTEF	Split a two-way mapped test session in both directions; two FADs are connected for the test session, and test mode can only be changed to another mode using two FADs	

- LOOPE** Loop the E-end input port to the output port, and connect the looped signal to the FAD; the test session may include an unmapped or two-way mapped connection
- LOOPF** Loop the F-end input port to the output port, and connect the looped signal to the FAD; only for a two-way mapped test session; not allowed for one-way broadcast tributaries
- [s]abc** - The 3- or 4-digit nonhierarchical number of test NPC or FAD
For MONEF, SPLTAB and SPLTEF modes this is one of two test NPCs; the message is denied if this NPC is currently not a FAD
- [t]def** - Nonhierarchical number of second test NPC or FAD
For MONEF, SPLTAB and SPLTEF modes this number can be entered or omitted; either and/or both of [s]abc and [t]def can be entered, in any order, the original order of FAD assignment will be used; the message is denied if this NPC is currently not a FAD
- [u]ghi** - Nonhierarchical number of E-end NPC, this is the reference NPC for the test session; it is a mapped or unmapped NPC, or the backbone of a broadcast circuit, depending on the test session specified
- [v]jkl** - Nonhierarchical number of current F-end NPC of the test session. It is defined only if it is mapped to the E-end NPC; if it is omitted, the NPC mapped to the E-end NPC becomes the F-end NPC, or if the test session involves a broadcast circuit, the full tributary becomes the F-end NPC, if one does not exist, the parameter must be given to specify the tributary being tested; it must be omitted if the E-end NPC is unmapped.
- [t]klm** - Nonhierarchical number of problematic NPC.

The valid values are listed below:

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number for FAD
wxkqr - Hierarchical NPC number of second FAD
eghij - Hierarchical E-end NPC number of test session
jklmn - Hierarchical F-end NPC number of a mapped test session
ghklm - Hierarchical number of problematic NPC

uv,wx,eg,jk,gh
- Unit number
m,k,h,l - Module number
np,qr,ij,mn,lm
- NPC number

The valid values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

AIS - Alarm indication signal.

May be specified to be idle signal. Quasi-random signal source (QRSS) is the default idle signal. If QRSS is not provisioned or in service, AIS must be entered for all test modes resulting in idle output port(s): SPLTE, SPLTF, SPLTEF, LOOPE, and LOOPF. AIS input shall be denied for test access of an unmapped NPC, and all other test modes.

INCL - Inclusive

Required for test session with red or customer-controlled NPC(s), except for MONE, MONF and MONEF modes.

RDC - Red circuit

Test session has red NPC(s)

CUS - Customer

Customer-controlled circuit
Test session has Customer-controlled NPC(s)

ONEWAY - One way cross-connection

Test session has one-way cross-connection

UMPD - Unmapped

Test session has unmapped NPC

EMODE - E-end termination status

FMODE - F-end termination status

emode

fmode *Explanation*

NORM - The circuit under test is not terminated in this direction

TERM - The circuit under test terminated in this direction

The emode output is omitted for one-way circuits

Both emode and fmode are omitted for unmapped circuits

COND - Condition

cc - Condition code

st - Status of denial

cc - Hexadecimal condition code

cc *Explanation*

02 Subject entity is not equipped
04 Subject entity is out of service
1E Customer control or red circuit exists
10 NPC out of service or failed
12 Active CCN side not IS or failed or pested or hardware OOS
13 UNIT not equipped, not in service, or failed
14 CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15 FTMI not equipped, not in service, or failed
16 FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17 TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
34 Termination is under customer control (CUS)
35 Termination is protected (RDC)
1A Required FLI not equipped, not in service, or failed
1B Required MXR not equipped, not in service, or failed
1C Req'd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
46 NPC Failed or Out of Service
70 NPC invalid type
72 Invalid test mode for an unmapped test session
73 Invalid test mode for a one-way test session
75 Test session already exists
76 AIS not entered for SPLTE/SPLTF/SPLTEF/LOOPE/LOOPF
79 NPC is not a Facility Access Digroup
7A NPC is not an E-end
7B Invalid change from previous mode
7C NPC is not a F-end
FF Termination is in process of being rolled
FE AIS entered for MONE/MONF/MONEF/SPLTA/SPLTB/SPLTAB
8C The two FADS entered are not associated with one another.

CTST,FAD,EMODE,FMODE,INCL

NON-CANNELIZED TEST FAD, EMODE, FMODE

Explanation Of Command

This message changes the output mode (also known as termination status) of a non-channelized circuit under test. The status can be normal data transmission (NORM), or terminate (TERM) and send idle signal(s) to output port(s). The change can be selectively specified for the circuit's E-end and/or F-end NPCs. At least one of the two <e/fmode> fields must be entered, or the message is denied.

If the cross-connected circuit is terminated before a test session is set up, this command can be used to change the state from TERM to NORM. When the test session is released, the most recent state remains until a change (CHG) termination command is entered.

During a test session, if a hard-reset or link failure occurs, the test session is released automatically. However, if the failure is such that it prevents release at the time of logout or if the FAD fails, the test session is NOT automatically released and can be released by manual disconnection.

The E- and F-end NPCs for non-channelized test access correspond to the FROM and TO NPCs of a cross connection, respectively. A test session is the circuit connection under test.

Command

Nonhierarchical

[I.20111]

```
CTST:FRM xy,SEQ ww:FAD ([s]abc[, [t]def])\  
{[, EMODE <emode>][, FMODE <fmode>]}[, INCL];
```

Hierarchical

[I.20111]

CTST:FRM xy,SEQ ww:FAD (uvmnp[,wxkqr])\
{[,EMODE <emode>][,FMODE <fmode>]}[,INCL];

Completion Message

Nonhierarchical

[O.20111]

M hh:mm:ss xy,ww n[vv] CTST FAD ([s]abc[, [t]def) \
[u]ghi,[v]jkl 2 LN MSG:
[RDC][CUS][ONEWAY][EMODE <emode>]FMODE <fmode> COMPL

Hierarchical

[O.20111]

M hh:mm:ss xy,ww n[vv] CTST FAD (uvmnp[,wxkqr]) \
eghij,jklmn 2 LN MSG:
[RDC][CUS][ONEWAY][EMODE <emode>]FMODE <fmode> COMPL

Denial Message

Nonhierarchical

[O.20111.01]

M hh:mm:ss xy,ww n[vv] CTST FAD ([s]abc[, [t]def) 2 LN MSG:
[[t]klm][COND]cc[<st>] DNY

Hierarchical

[O.20111.01]

M hh:mm:ss xy,ww n[vv] CTST FAD (uvmnp[,wxkqr]) 2 LN MSG:
[ghklm][COND]cc[<st>] DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FAD - Facility access digroup

[s]abc - The 3- or 4-digit nonhierarchical number of test NPC or FAD
For MONEF, SPLTAB and SPLTEF modes this is one of two test NPCs;
the message is denied if this NPC is currently not a FAD

[t]def - Nonhierarchical number of second test NPC or FAD
For MONEF, SPLTAB and SPLTEF modes this number can be entered or
omitted; either and/or both of [s]abc and [t]def can be entered,
in any order, the original order of FAD assignment will be used;
the message is denied if this NPC is currently not a FAD

[u]ghi - Nonhierarchical number of E-end NPC of circuit under test

[v]jkl - Nonhierarchical number of current F-end NPC

[t]klm - Nonhierarchical number of problematic NPC

The valid values are listed below:

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number for FAD
wxkqr - Hierarchical NPC number of second FAD
eghij - Hierarchical E-end NPC number of test session
jkln - Hierarchical F-end NPC number of a mapped test session
ghklm - Hierarchical number of problematic NPC

uv,wx,eg,jk,gh
 - Unit number
m,k,h,l - Module number
np,qr,ij,mn,lm
 - NPC number

The valid values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
 Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
 Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

EMODE - Equipment-end mode
emode - Equipment-end termination status
FMODE - Facility-end mode
fmode - Facility-end termination status

*emode**fmode Explanation*

NORM The circuit under test is not terminated in this direction

TERM The circuit under test terminated in this direction

The emode cannot be changed and is omitted for one-way circuits

The fmode cannot be changed for modes SPLTE, SPLTEF and LOOPE

For an unmapped circuit neither the EMODE or FMODE can be changed.

If emode or fmode is omitted, the parameter retains its current value.

If either the E- or F-end NPC is out of service or failed, then is subsequently restored to service, the output modes remain as they were before the failure.

RDC - Red circuit

Test session has NPC(s) designated as red circuits

CUS - Customer

Test session has Customer-controlled NPC(s)

INCL - Inclusive

Required for circuits with customer-controlled or red NPC(s)

ONEWAY - One-way

Test session has a one-way cross-connection

COND - Condition**st** - Status of denial**cc** - Hexadecimal condition code**cc st Explanation****02** Subject entity is not equipped**04** Subject entity is out of service**1E** Customer control or red circuit exists**10** NPC out of service or failed**12 MCOND** Active CCN side not IS or failed or pested or hardware OOS**13 MCOND** UNIT not equipped, not in service, or failed**14 MCOND** CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS**15 MCOND** FTMI not equipped, not in service, or failed**16 MCOND** FC not eqd, not IS, or failed or inactive side FC not eqd or not IS

cc	st	<i>Explanation</i>
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
30	MCOND	Termination is already assigned
34		Termination is under customer control (CUS)
35		Termination is protected (RDC)
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
46		NPC Failed or Out of Service
70	MCOND	NPC invalid type
71		NPC is a Facility Access Digroup
72		Invalid test mode for an unmapped test session
73		Invalid test mode for a one-way test session
75		Test session already exists
79		NPC is not a Facility Access Digroup
7A		NPC is not an E-end
7B		Invalid change from previous mode
7C		NPC is not a F-end
FF		Termination is in process of being rolled
8C		The two FADS entered are not associated with one another.
8E		No mapped circuit under test; emode/fmode can't be changed.
8F		One-way circuit under test; emode can't be changed.
90		emode/fmode can't be changed under current test mode.

CTST,FAD,FROM,TO,AIS,INCL

NON-CANNELIZED TEST ACCESS (MONITOR, SPLIT, OR LOOP)

Explanation Of Command

This message sets up non-channelized test access in the monitor modes MONE, MONF, MONEF; the split modes SPLTA, SPLTB, SPLTAB, SPLTE, SPLTF, SPLTEF; and the loop modes LOOPE or LOOPF. The circuit under test can be one unmapped Network Processing Circuit (NPC), or a pair of mapped NPCs. The mapped circuit may be a one-way, two-way or broadcast circuit. A one-way circuit can only be tested in modes MONE and SPLTA. Only one test connection can exist at a time for any circuit.

For test modes MONEF, SPLTAB and SPLTEF two Facility Access Digroups (FADs), or test NPCs, are connected. The first FAD number is required; the second FAD can be user specified, or assigned by default to be NPC numbered n+1, where n is the NPC number of the first FAD. If n is the highest NPC number on the DACS II frame, the first NPC on the frame will be used as default for the second FAD. Whether a FAD is user specified or assigned by DACS II, the command will be denied if the FAD is assigned or has invalid type. One FAD is connected for all other modes.

During a test session, if a hard-reset or link failure occurs, the test session is released automatically. However, if the failure is such that it prevents release at the time of logoff, or if the FAD fails, the test session is NOT automatically released and can be released by manual disconnection.

The E- and F-end NPCs for non-channelized test access correspond to the FROM and TO NPCs of a cross-connection, respectively. For a broadcast circuit the full tributary is considered to be a two-way connection, and all other tributaries are one-way connections. Only one test session can exist for a circuit at a time. The FAD or test NPC corresponds to test ports for DS0 test access.

For modes SPLTE and LOOPE, the idle output port of the F-end NPC, and any other output ports the E-end is transmitting to, must be set to AIS.

For modes SPLTF and LOOPF, the idle output port of the E-end NPC, and any other output ports the F-end is transmitting to, must be set to AIS.

The output signal on all idle output ports related to a test session are restored to their previous values when the test modes are changed or test access is released. The OUTPUT modes can be overwritten when the NPC is test accessed.

Command

Nonhierarchical

[I.20001]

CTST:FRM xy,SEQ ww:<tmode>,FAD ([s]abc[, [t]def]),FROM [u]ghi\
[,TO [v]jkl][,AIS][,INCL]!

Hierarchical

[I.20001]

CTST:FRM xy,SEQ ww:<tmode>,FAD (uvmnp[,wxkqr]),FROM eghij\
[,TO jklmn][,AIS][,INCL]!

Completion Message

Nonhierarchical

[O.20001]

M hh:mm:ss xy,ww n[vv] CTST <tmode> FAD ([s]abc[, [t]def]) \
[u]ghi[, [v]jkl] 2 LN MSG:
[AIS][RDC][CUS][ONEWAY][UMPD][EMODE <emode>] FMODE <fmode>} \
COMPL

Hierarchical

[O.20001]

M hh:mm:ss xy,ww n[vv] CTST <tmode> FAD (uvmnp[,wxkqr])\
eghij[,jklmn] 2 LN MSG:
[AIS][RDC][CUS][ONEWAY][UMPD][EMODE <emode>] FMODE <fmode>} \
COMPL

Denial Message

Nonhierarchical

[O.20001.01]

M hh:mm:ss xy,ww n[vv] CTST <tmode> FAD ([s]abc[, [t]def]) \
[u]ghi[, [v]jkl] 2 LN MSG:
[[t]klm][COND]cc[<st>] DNY

Hierarchical

[O.20001.01]

M hh:mm:ss xy,ww n[vv] CTST <tmode> FAD (uvmnp[,wxkqr])
eghij[,jklmn] 2 LN MSG:
[ghklm][COND]cc[<st>] DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FAD - Facility access digroup

FROM - FROM termination

TO - TO termination

tmode - Test mode

<i>tmode</i>	<i>Explanation</i>
MONE	Monitor signal from equipment E-end NPC to facility F-end NPC of unmapped or one-/two-way mapped test session
MONF	Monitor signal from F-end NPC to E-end NPC of a two-way mapped test session
MONEF	Monitor a two-way mapped connection in both directions; two FADs are connected for the test session, and test mode can only be changed to another mode using two FADs
SPLTA	Split the A signal from the equipment E-end NPC to the facility F-end NPC of one-/two-way mapped test session
SPLTB	Split the B signal from the F-end NPC to the E-end NPC of a mapped two-way test session
SPLTAB	Split both A and B signals of a two-way test session; two FADs are connected for the test session, and test mode can only be changed to another mode using two FADs
SPLTE	Split the input and output ports of E-end NPC of an unmapped or two-way mapped test session
SPLTF	Split the input and output ports of F-end NPC of a two-way mapped test session
SPLTEF	Split a two-way mapped test session in both directions; two FADs are connected for the test session, and test mode can only be changed to another mode using two FADs
LOOPE	Loop the E-end input port to the output port, and connect the looped signal to the FAD; the test session may include an unmapped or two-way mapped connection
LOOPF	Loop the F-end input port to the output port, and connect the looped signal to the FAD; only for a two-way mapped test session; not allowed for one-way broadcast tributaries

[s]abc - The 3- or 4-digit nonhierarchical number of test NPC or FAD

For MONEF, SPLTAB and SPLTEF modes this is the first of two test NPCs;
the message is denied if this NPC is assigned

[t]def - The 3- or 4-digit nonhierarchical number of second test NPC or FAD

For MONEF, SPLTAB and SPLTEF modes this number can be user specified,
if none is entered the next higher NPC number to [s]abc is used; the
message is denied if it is assigned

[u]ghi - Nonhierarchical number of E-end NPC.

This is the reference NPC for the test session; it is a mapped or
unmapped NPC, or the backbone of a clear-DS1 broadcast circuit,
depending on the test session specified

[v]jkl - Nonhierarchical number of current F-end NPC of the test session.

This NPC is defined only if it is mapped to the E-end NPC. If this
NPC is omitted from the input command, the NPC mapped to the E-end NPC
becomes the F-end NPC or if the test session involves a broadcast
circuit, the full tributary becomes the F-end NPC. If a full tributary
does not exist, the NPC must be given to specify the tributary being
tested. Omit this NPC if the E-end NPC is unmapped.

[t]klm - The 3- or 4-digit nonhierarchical number of problematic NPC

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical number of test NPC or FAD
wxkqr - Hierarchical number of second FAD
eghij - Hierarchical number of E-end NPC
jklmn - Hierarchical number of F-end NPC of the test session
ghklm - Hierarchical number of problematic NPC

uv,wx,eg,jk,gh

- Unit number

m,k,h,l - Module number

np,qr,ij,mn,lm

- NPC number

The valid values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

AIS - Alarm indication signal.

May be specified to be idle signal. AIS must be entered for all test modes resulting in idle output port(s): SPLTE, SPLTF, SPLTEF, LOOPE, and LOOPF. AIS input will be denied for test access of an unmapped NPC, and all other test modes.

INCL - Inclusive

Required for test session with red or customer-controlled NPC(s), except for MONE, MONF and MONEF modes. INCL will be ignored if the circuit is NOT RDC or CUS.

RDC - Red circuit

Test session has red NPC(s)

CUS - Customer

Customer-controlled circuit. Test session has Customer-controlled NPC(s)

ONEWAY - One way cross-connection

Test session has one-way cross-connection

UMPD - Unmapped

Test session has unmapped NPC

EMODE - E-end termination status

FMODE - F-end termination status

emode

fmode Explanation

NORM - The circuit under test is not terminated in this direction

TERM - The circuit under test is terminated in this direction

The emode output is omitted for one-way circuits

Both emode and fmode are omitted for unmapped circuits

COND - Condition

cc - Condition code

st - Status of denial

cc - Hexadecimal condition code

cc st Explanation

02 MCOND Subject entity is not equipped

04 Subject entity is out of service

1E Customer control or red circuit exists

10 NPC out of service or failed

12 MCOND Active CCN side not IS or failed or pested or hardware OOS

13 MCOND UNIT not equipped, not in service, or failed

cc	st	<i>Explanation</i>
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
30		Termination is already assigned
34		Termination is under customer control (CUS)
35		Termination is protected (RDC)
36		Termination is not connected as indicated
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
46		NPC Failed or Out of Service
70		NPC invalid type
71		NPC is a Facility Access Digroup
72		Invalid test mode for an unmapped test session
73		Invalid test mode for a one-way test session
75		Test session already exists
76		AIS not entered for SPLTE/SPLTF/SPLTEF/LOOPE/LOOPF
7A		NPC is not an E-end
7C		NPC is not a F-end
BD		Looped Circuit Access not allowed
FF		Termination is in process of being rolled
FE		AIS entered for MONE/MONF/MONEF/SPLTA/SPLTB/SPLTAB
8D		Clear gateway test access disallowed.

CTST,HUB,FAD,TO,INCL

NON-CANNELIZED TEST HUB

Explanation Of Command

This message sets up a non-channelized hub connection between a facility access digroup (FAD), or test network processing circuit (NPC) and a remote FAD. The FAD is connected to an NPC which is connected to a remote test NPC. The NPCs cannot be part of an existing mapped circuit or test connection.

During a hub test session if a hard-reset or link failure occurs the hub test session is released automatically. However, if the failure is such that it prevents release at the time of logout, or if the FAD fails, the hub test session is NOT automatically released and can be released by manual disconnection.

Command

Nonhierarchical

[I.20031]

CTST:FRM xy,SEQ ww:HUB,FAD [s]abc,TO [t]jkl[,INCL]!

Hierarchical

[I.20031]

CTST:FRM xy,SEQ ww:HUB,FAD uvmnp,TO wxkqr[,INCL]!

Completion Message

Nonhierarchical

[O.20031]

M hh:mm:ss xy,ww n[vv] CTST HUB FAD [s]abc,TO [t]jkl[CUS] COMPL

Hierarchical

[O.20031]

M hh:mm:ss xy,ww n[vv] CTST HUB FAD uvmnp,TO wxkqr[CUS] COMPL

Denial Message

Nonhierarchical

[O.20031.01]

M hh:mm:ss xy,ww n[vv] CTST HUB FAD [s]abc,TO [t]jkl [[t]klm] \
COND cc DNY

Hierarchical

[O.20031.01]

M hh:mm:ss xy,ww n[vv] CTST HUB FAD uvmnp,TO wxkqr [ghklm] \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

HUB - HUB connection

FAD - Facility access digroup

[s]abc - The 3- or 4-digit nonhierarchical number of test NPC or Facility Access Digroup (FAD).

[t]jkl - The 3- or 4-digit nonhierarchical number of TO NPC connected to the remote FAD

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical NPC number of test NPC or FAD

wxkqr - Hierarchical NPC number of TO NPC connected to the remote FAD

ghk lm - Hierarchical number of problematic NPC

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

[t]klm - The hierarchical number of the NPC that caused the denial

INCL - Inclusive

Inclusive keyword may be entered for customer-controlled TO NPC

CUS - Customer

Customer-controlled Circuit

cc - Hexadecimal condition code

cc *Explanation*

02	Subject entity is not equipped
04	Subject entity is out of service
1E	Customer control or red circuit exists
10	NPC out of service or failed
12	Active CCN side not IS or failed or pested or hardware OOS
13	UNIT not equipped, not in service, or failed
14	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	FTMI not equipped, not in service, or failed
16	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
30	Termination is already assigned
32	Termination is under test
34	Termination is under customer control (CUS)
35	Termination is protected (RDC)
1A	Required FLI not equipped, not in service, or failed
1B	Required MXR not equipped, not in service, or failed
1C	Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
46	NPC Failed or Out of Service
70	NPC invalid type
71	NPC is a Facility Access Digroup

cc *Explanation*

- 73** Invalid test mode for a one-way test session
- 75** Test session already exists
- FF** Termination is in process of being rolled
- 8D** Clear gateway test access disallowed.

CTST,LPBKT,FAD,INCL

NON-CANNELIZED LOOP TEST ACCESS FACILITY

Explanation Of Command

This message terminally loops back a non-channelized Facility Access Digroup (FAD) or test network processing circuit (NPC).

Terminal looping is defined as looping of a terminated signal; it is done in the cross-connect network.

Command

Nonhierarchical

[I.20301]

CTST:FRM xy,SEQ ww:LPBKT,FAD [s]abc[,INCL]!

Hierarchical

[I.20301]

CTST:FRM xy,SEQ ww:LPBKT,FAD uvmnp[,INCL]!

Completion Message

Nonhierarchical

[O.20301]

M hh:ss:mm xy,ww n[vv] CTST LPBKT FAD [s]abc[CUS] COMPL

Hierarchical

[O.20301]

M hh:ss:mm xy,ww n[vv] CTST LPBKT FAD uvmnp[CUS] COMPL

Denial Message

Nonhierarchical

[O.20301.01]

M hh:ss:mm xy,ww n[vv] CTST LPBKT FAD [s]abc COND cc DNY

Hierarchical

[O.20301.01]

M hh:ss:mm xy,ww n[vv] CTST LPBKT FAD uvmnp COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FAD - Facility access digroup

[s]abc - The 3- or 4-digit nonhierarchical FAD NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number of FAD

uv - Unit number
m - Module number
np - NPC number within the module

The values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

LPBKT - Looped back

Test NPC terminal loopback

INCL - Inclusive

May be entered for customer-controlled NPC, is not required

CUS - Customer

NPC is marked as Customer-controlled

cc - Hexadecimal condition code

cc *Explanation*

02	Subject entity is not equipped
04	Subject entity is out of service
1E	Customer control or red circuit exists
10	NPC out of service or failed
12	Active CCN side not IS or failed or pested or hardware OOS
13	UNIT not equipped, not in service, or failed
14	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	FTMI not equipped, not in service, or failed
16	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
30	Termination is already assigned
32	Termination is under test
34	Termination is under customer control (CUS)
35	Termination is protected (RDC)
1A	Required FLI not equipped, not in service, or failed
1B	Required MXR not equipped, not in service, or failed
1C	Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
46	NPC Failed or Out of Service
70	NPC invalid type
71	NPC is a Facility Access Digroup
73	Invalid test mode for a one-way test session
75	Test session already exists
FF	Termination is in process of being rolled

CTST,TNR,ALL,OOS

NON-CANNELIZED TEST NPC RELEASE

Explanation Of Command

This message releases ALL non-channelized facility access digroups (FADs), or test network processing circuits (NPCs) activated by the user, and restores the test session to its original mapped or unmapped state.

It is preceded by individual CTST,TNR,FAD,OOS messages printed for each test session which is in progress.

If the circuit under test was a mapped circuit before the test session started, upon release of the FAD, the original cross-connection is restored. If the circuit was unmapped, it is restored to the unmapped or idle state that existed prior to testing.

Command

[I.20202]

CTST:FRM xy,SEQ ww:TNR,ALL[,OOS]!

Completion Message

[O.20202]

M hh:mm:ss xy,ww n[vv] CTST TNR ALL COND cc COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

TNR - Test NPC release

ALL - All
Release all test NPCs

OOS - Out-of-service
The OOS keyword must be entered to release one or more NPC(s) that are OOS. Mapped NPC(s) that are OOS will not be restored to original cross-connection until NPC(s) are returned to service.

COND - Condition code

cc - Hexadecimal condition code

cc *Explanation*

00 No conditions

01 No FADs were activated by link n

02 One or more FADs could not be released

CTST,TNR,FAD,OOS

NON-CANNELIZED TEST NPC RELEASE

Explanation Of Command

This message releases a non-channelized facility access digroup (FAD) or test Network Processing Circuit (NPC) and restores the test session to its original mapped or unmapped state and releases ALL test NPCs activated by the user from the current link.

For test modes using two FADs, if one of the two FADs is entered, both FADs will be released from testing. If both FADs are entered, they must be associated with one another in the same test connection. Both FADs can be entered in any order and will still be released.

If the circuit under test was a mapped circuit before the test session start, upon release of FAD(s), the circuit is restored to cross-connection. If the circuit was unmapped, it is restored to the unmapped or idle state that existed prior to testing.

If the OOS keyword is input, NPC(s) that are out-of-service (OOS) should not be a reason for denial; 'NPC unequipped, failed, or not a test NPC' is a denial condition only for the case of one NPC.

Command

Nonhierarchical

[I.20201]

There are two alternate formats depending upon the number of FADs specified.

CTST:FRM xy,SEQ ww:TNR,FAD [s]abc[,OOS]!

CTST:FRM xy,SEQ ww:TNR,FAD ([s]abc[, [t]def)][,OOS]!

Hierarchical

[I.20201]

There are two alternate formats depending upon the number of FADs specified.

CTST:FRM xy,SEQ ww:TNR,FAD uvmnp[,OOS]!

CTST:FRM xy,SEQ ww:TNR,FAD (uvmnp[,wxkqr])[,OOS]!

Completion Message

Nonhierarchical

[O.20201]

M hh:mm:ss xy,ww n[vv] CTST TNR FAD [s]abc[OOS]
[[u]ghi[, [v]jkl]] 2 LN MSG:
[RDC][CUS][{UMPD|[EMODE <emode>]FMODE <fmode>}][OOS]COMPL

M hh:mm:ss xy,ww n[vv] CTST TNR FAD [s]abc[, [t]def][OOS]
[[u]ghi[, [v]jkl]] 2 LN MSG:
[RDC][CUS][{UMPD|[EMODE <emode>]FMODE <fmode>}][OOS]COMPL

Hierarchical

[O.20201]

M hh:mm:ss xy,ww n[vv] CTST TNR FAD uvmnp[,wxkqr][OOS]
[eghij[, jklmn]] 2 LN MSG:
[RDC][CUS][{UMPD|[EMODE <emode>]FMODE <fmode>}][OOS]COMPL

Denial Message

Nonhierarchical

[O.20201.01]

M hh:mm:ss xy,ww n[vv] CTST TNR FAD [s]abc[, [t]def][OOS]
[COND] cc[<st>] DNY

Hierarchical

[O.20201.01]

M hh:mm:ss xy,ww n[vv] CTST TNR FAD uvmnp[,wxkqr][OOS]\
[COND] cc[<st>] DNY

Autonomous Message

Nonhierarchical

[O.20201]

I hh:mm:ss xy,ww n[vv] CTST TNR FAD [s]abc[, [t]def]\
[[u]ghi[, [v]jkl]][OOS] 2 LN MSG:
[RDC][CUS][{UMPD|[EMODE <emode>]FMODE <fmode>}][OOS]COMPL

[O.20201.01]

I hh:mm:ss xy,ww n[vv] CTST TNR FAD [s]abc[, [t]def][OOS]
[COND] cc[<st>] DNY

Hierarchical

[O.20201]

I hh:mm:ss xy,ww n[vv] CTST TNR FAD uvmnp[,wxkqr][eghij[,jklmn]]\
[OOS] 2 LN MSG:
[RDC][CUS][{UNMAP|[EMODE <emode>]FMODE <fmode>}][OOS]COMPL

[O.20201.01]

I hh:mm:ss xy,ww n[vv] CTST TNR FAD uvmnp[,wxkqr][OOS]\
[COND] cc[<st>] DNY

Explanation Of Parameters

TNR - Test NPC release

FAD - Facility access digroup

[s]abc - The 3- or 4-digit nonhierarchical test NPC or Facility Access Digroup (FAD) number

[t]def - The second 3- or 4-digit nonhierarchical FAD number, if applicable

[u]ghi - The 3- or 4-digit nonhierarchical E-end NPC number of test session. Not applicable to loopback FAD

[v]jkl - The 3- or 4-digit nonhierarchical F-end NPC number of a mapped test session. Not applicable to loopback FAD

The values are listed below:

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number for FAD
wxkqr - Hierarchical NPC number of second FAD, if applicable
eghij - Hierarchical E-end NPC number of test session. Not applicable to loopback FAD
jklnm - Hierarchical F-end NPC number of a mapped test session. Not applicable to loopback FAD

uv,wx, eg, jk
 - Unit number
m,k,h,l - Module number
np, qr, ij, mn
 - NPC number

The valid values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
 Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
 Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

UMPD - Unmapped
 Test session has unmapped NPC

EMODE - E-end termination status
FMODE - F-end termination status

emode
fmode *Explanation*

NORM - The circuit under test is not terminated in this direction
TERM - The circuit under test terminated in this direction

The emode output is omitted for one-way circuits
 Both emode and fmode are omitted for unmapped circuits

OOS - Out-of-service

The OOS keyword must be entered to release one or more NPC(s) that are OOS. Mapped NPC(s) that are OOS will not be restored to original cross-connection until NPC(s) are returned to service.

If the OOS keyword is entered in the input command it will appear in the first line of the output message. A second OOS keyword will appear in the last line of the output message if at least one NPC is out-of-service at the time the command is issued.

RDC - Red circuit

Test session has red circuit

CUS - Customer

Test session has customer-controlled Circuit

COND - Condition**cc** - Condition code**st** - Status of denial**cc** - Hexadecimal condition code

cc	st	<i>Explanation</i>
00		No conditions
02		Subject entity is not equipped
04		Subject entity is out of service
10		NPC out of service or failed
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
46		NPC Failed or Out of Service
70	MCOND	NPC invalid type
79		NPC is not a Facility Access Digroup
8C		The two FADS entered are not associated with one another.

Contents

DDIS,FROM,TO	9-2
■ Explanation Of Command	9-2
■ Command	9-3
■ Nonhierarchical	9-3
■ Hierarchical	9-3
■ Completion Message	9-3
■ Nonhierarchical	9-3
■ Hierarchical	9-3
■ Denial Message	9-3
■ Nonhierarchical	9-3
■ Hierarchical	9-4
■ Autonomous Message	9-4
■ Explanation Of Parameters	9-4
DELETE,END	9-7
■ Explanation Of Command	9-7
■ Command	9-7
■ Completion Message	9-7
■ Denial Message	9-7
■ Autonomous Message	9-7
■ Explanation Of Parameters	9-8
DGN,CCB,CFT,X	9-9
■ Explanation Of Command	9-9
■ Command	9-9
■ Completion Message	9-9
■ Denial Message	9-9
■ Autonomous Message	9-10

Contents

■ Explanation Of Parameters	9-10
DGN,CCI,CFT,X	9-16
■ Explanation Of Command	9-16
■ Command	9-16
■ Completion Message	9-16
■ Denial Message	9-16
■ Autonomous Message	9-17
■ Explanation Of Parameters	9-17
DGN,CCNI,CFT,X	9-20
■ Explanation Of Command	9-20
■ Command	9-20
■ Completion Message	9-20
■ Denial Message	9-20
■ Autonomous Message	9-21
■ Explanation Of Parameters	9-21
DGN,CI,CFT,X	9-26
■ Explanation Of Command	9-26
■ Command	9-26
■ Completion Message	9-26
■ Denial Message	9-27
■ Autonomous Message	9-27
■ Explanation Of Parameters	9-27
DGN,ETSI,CFT,X	9-30
■ Explanation Of Command	9-30
■ Command	9-30
■ Completion Message	9-30
■ Denial Message	9-30
■ Autonomous Message	9-31
■ Explanation Of Parameters	9-31
DGN,ETSI,ECCN,ALL	9-34
■ Explanation Of Command	9-34
■ Command	9-34
■ Completion Message	9-34
■ Denial Message	9-34
■ Autonomous Message	9-35
■ Explanation Of Parameters	9-35

Contents

DGN,IN,PROGRESS	9-37
■ Explanation Of Command	9-37
■ Command	9-37
■ Completion Message	9-37
■ Denial Message	9-37
■ Autonomous Message	9-37
■ Explanation Of Parameters	9-38
DGN,LINK,CFT,X	9-39
■ Explanation Of Command	9-39
■ Command	9-39
■ Completion Message	9-39
■ Denial Message	9-39
■ Autonomous Message	9-39
■ Explanation Of Parameters	9-40
DGN,MC,CFT,X	9-42
■ Explanation Of Command	9-42
■ Command	9-42
■ Completion Message	9-42
■ Denial Message	9-43
■ Autonomous Message	9-43
■ Explanation Of Parameters	9-43
DGN,MP,CFT,X	9-46
■ Explanation Of Command	9-46
■ Command	9-46
■ Completion Message	9-46
■ Denial Message	9-47
■ Autonomous Message	9-47
■ Explanation Of Parameters	9-47
DGN,NPC	9-49
■ Explanation Of Command	9-49
■ Command	9-49
■ Nonhierarchical	9-49
■ Hierarchical	9-49
■ Completion Message	9-50
■ Nonhierarchical	9-50
■ Hierarchical	9-50
■ Denial Message	9-50

Contents

■ Nonhierarchical	9-50
■ Hierarchical	9-50
■ Autonomous Message	9-51
■ Nonhierarchical	9-51
■ Hierarchical	9-51
■ Explanation Of Parameters	9-51
DGN,NPC,SIDE,CFT,X	9-55
■ Explanation Of Command	9-55
■ Command	9-55
■ Nonhierarchical	9-55
■ Hierarchical	9-55
■ Completion Message	9-56
■ Nonhierarchical	9-56
■ Hierarchical	9-56
■ Denial Message	9-57
■ Nonhierarchical	9-57
■ Hierarchical	9-57
■ Autonomous Message	9-57
■ Nonhierarchical	9-57
■ Hierarchical	9-57
■ Explanation Of Parameters	9-58
DGN,PMEM,SMEM,CFT,X,EXCT,DBASE,VERIFY	9-77
■ Explanation Of Command	9-77
■ Command	9-77
■ Completion Message	9-77
■ Denial Message	9-78
■ Autonomous Message	9-78
■ Explanation Of Parameters	9-78
DGN,SYNC	9-82
■ Explanation Of Command	9-82
■ Command	9-82
■ Completion Message	9-82
■ Denial Message	9-82
■ Autonomous Message	9-83
■ Explanation Of Parameters	9-83
DGN,SYNC,TLI,CRO	9-85
■ Explanation Of Command	9-85

Contents

■ Command	9-85
■ Completion Message	9-85
■ Denial Message	9-85
■ Autonomous Message	9-86
■ Explanation Of Parameters	9-86
DGN,SYNC,TLI,SSP	9-88
■ Explanation Of Command	9-88
■ Command	9-88
■ Completion Message	9-88
■ Denial Message	9-89
■ Autonomous Message	9-89
■ Explanation Of Parameters	9-89
DGN,TSI,CFT,X	9-91
■ Explanation Of Command	9-91
■ Command	9-91
■ Completion Message	9-91
■ Denial Message	9-92
■ Autonomous Message	9-92
■ Explanation Of Parameters	9-92
DGN,TSIS,CCN,ALL	9-99
■ Explanation Of Command	9-99
■ Command	9-99
■ Completion Message	9-99
■ Denial Message	9-100
■ Autonomous Message	9-100
■ Explanation Of Parameters	9-100
DGN,TSIS,CCN,UNIT,CONN	9-102
■ Explanation Of Command	9-102
■ Command	9-102
■ Completion Message	9-102
■ Denial Message	9-103
■ Autonomous Message	9-103
■ Explanation Of Parameters	9-103
DGN,UNIT,DSPI,CFT,X	9-105
■ Explanation Of Command	9-105
■ Command	9-105
■ Completion Message	9-105

Contents

■ Denial Message	9-105
■ Autonomous Message	9-106
■ Explanation Of Parameters	9-106
DGN,UNIT,FC,CFT,X	9-108
■ Explanation Of Command	9-108
■ Command	9-108
■ Completion Message	9-108
■ Denial Message	9-108
■ Autonomous Message	9-109
■ Explanation Of Parameters	9-109
DGN,UNIT,FLI,CFT,X	9-113
■ Explanation Of Command	9-113
■ Command	9-113
■ Completion Message	9-113
■ Denial Message	9-113
■ Autonomous Message	9-114
■ Explanation Of Parameters	9-114
DGN,UNIT,FMT,CFT,X	9-117
■ Explanation Of Command	9-117
■ Command	9-117
■ Completion Message	9-117
■ Denial Message	9-118
■ Autonomous Message	9-118
■ Explanation Of Parameters	9-118
DGN,UNIT,FTMI,CFT,X	9-123
■ Explanation Of Command	9-123
■ Command	9-123
■ Completion Message	9-123
■ Denial Message	9-123
■ Autonomous Message	9-124
■ Explanation Of Parameters	9-124
DGN,UNIT,MIU,CFT,X	9-126
■ Explanation Of Command	9-126
■ Command	9-126
■ Completion Message	9-126
■ Denial Message	9-126
■ Autonomous Message	9-127

Contents

■ Explanation Of Parameters	9-127
DGN,UNIT,MXR,DEV,CFT,X	9-129
■ Explanation Of Command	9-129
■ Command	9-129
■ Completion Message	9-129
■ Denial Message	9-130
■ Autonomous Message	9-130
■ Explanation Of Parameters	9-130
DGN,UNIT,UC,CFT,X	9-135
■ Explanation Of Command	9-135
■ Command	9-135
■ Completion Message	9-135
■ Denial Message	9-135
■ Autonomous Message	9-136
■ Explanation Of Parameters	9-136

DELETE — DGN

DELETE — DGN

This section documents the commands **DELETE** through **DGN**.

DDIS,FROM,TO

DISCONNECTION OF CIRCUITS FROM/TO DSP APPLICATION CARD

Explanation Of Command

This command is used to disconnect a circuit (or a range of circuits) between an NPC that is not a DSP application and an NPC that **is** a DSP application NPC. The circuit may be a two-way or a one-way circuit. This command is also used to disconnect a circuit between two application cards.

This command should only be used for clean-up purposes if the cross-connect cannot be disconnected by commands to the application itself. Before issuing the command the user should perhaps try to remove and restore the application and try to issue the disconnect command through the application; keeping in mind, however, that a remove and subsequent restore will result in a momentary service loss.

This command is restricted to only the users who have the RMON (Restricted Maintenance privilege ON) privilege. Also, this command is not available via the on-line help feature.

This command will work if the facility terminating NPC and/or the application NPC are/is out-of-service. This command will also work for Red circuits.

This command should also be used if a test port connection to an application has been released using the FRC keyword in the TTST::TPR,TP,FRC command (I.27001), but the cross-connection that was used for the test port connection, which is a cross-connection between two of the application channels, still needs to be disconnected. The user should use the command UTL::QRY,CMAP (I.52011) to find the channel pair used by the application for the test port before executing this command.

Command

Nonhierarchical

[I.15061]

DDIS:[FRM xy,SEQ ww]:FROM [s]abcddd[-eee],TO [v]ghijjj[-kkk]!

Hierarchical

[I.15061]

DDIS:[FRM xy,SEQ ww]:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]!

Completion Message

Nonhierarchical

[O.15061]

M hh:mm:ss xy,ww n[vv] DDIS [s]abcddd[-eee],[v]ghijjj[-kkk][OOS][RDC] COMPL

Hierarchical

[O.15061]

M hh:mm:ss xy,ww n[vv] DDIS uvmnpddd[-eee],wxkqrjjj[-kkk][OOS][RDC] COMPL

Denial Message

Nonhierarchical

[O.15061.01]

M hh:mm:ss xy,ww n[vv] DDIS [s]abcddd[-eee],[v]ghijjj[-kkk][mmm,nnn] cc <st> DNY

[O.15061.02]

M hh:mm:ss xy,ww n[vv] DDIS [s]abcddd[-eee],[v]ghijjj[-kkk][mmm,nnn] <d> <st> DNY

Hierarchical

[O.15061.01]

M hh:mm:ss xy,ww n[vv] DDIS uvmnpddd[-eee],wxkqrjjj[-kkk][mmm,nnn] cc <st> DNY

[O.15061.02]

M hh:mm:ss xy,ww n[vv] DDIS uvmnpddd[-eee],wxkqrjjj[-kkk][mmm,nnn] <d> <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The From termination NPC number (3- or 4-digit)

uvmnp - The From termination NPC number (hierarchical)

[v]ghi - The To termination NPC number (3- or 4-digit)

wxkqr - The To termination NPC number (hierarchical)

ddd, jjj

- Channel numbers

eee, kkk

- Channel numbers, denoting the end of a range.

Range

Type

001-024 DE, DA, TE and TA type NPCs

000-031 PA, PB, PC and TH type NPCs

001-064 SDxyz type application, see your application manual for details

OOS - At least one of the NPCs was out-of-service.

RDC - The disconnected circuit was a Red circuit

mmm, nnn

- Channel number involved in the denial. Otherwise the same as ddd.

d - Direction

d *Explanation*

F From

T To

B Both

st - Status of denial
cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
04	INERR	No NPC's out of service and OOS keyword used
06	INERR	Invalid range for specified FROM NPC type
07	INERR	Invalid range for specified TO NPC type
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
D0	SCERR	FROM NPC is not provisioned as DGA
D1	SCERR	TO NPC is not provisioned as DGA
D6	INERR	Invalid FROM channel number
D7	INERR	Invalid TO channel number
D9	INERR	Invalid FROM channel number range
DA	INERR	Invalid TO channel number range
DC	INERR	A loopback is active on the FROM termination
DD	INERR	A loopback is active on the TO termination
DF	INERR	Unmatched channel range
E0	SCERR	Unmatched channel range involving SLC Mode III termination
E4	SCERR	RT-DCLU cross-connect with different ids
E5	SCERR	RT-DCLU cross-connect with different channel number
E6	SCERR	Cross-connect a non Mode I channel to DCLU
E7	SCERR	Cross-connect a non SLC channel to DCLU
EC	INERR	Invalid channel 000 cross-connection specified
ED	INERR	Invalid channel 031 cross-connection specified
42	MCOND	DSPP not in service, or failed
FF	ROLL	Termination is in process of being rolled
E0	MCOND	ETSI not equipped, not in service, or failed

st	d	Explanation
FAIL	{F T B}	Failed
NOMTH	{F T B}	No Match
TP	{F T B}	NPC is used for test access
UNPASGN	{F T B}	Unassigned or Not Properly Assigned
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

DELETE,END

DELETE LINES FROM MACRO

Explanation Of Command

This command is used to delete one or more commands from an existing macro while in a macro session. If neither a range of line numbers nor END is specified then the line pointed to by the line pointer (the current line) is deleted.

Command

[I.19051]

```
DELETE[:FRM xy,SEQ ww:{<starting line>|END}[-{<ending line>\
|END}]]!
```

Completion Message

[O.19051]

```
M hh:mm:ss xy,ww n[vv] DELETE[ {<starting line>\
|END}[-{<ending line>|END}]] COMPL
```

Denial Message

[O.19051.01]

```
M hh:mm:ss xy,ww n[vv] DELETE[ {<starting line>|\
END}[-{<ending line>|END}]] COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

{<starting line>|END}{-<ending line>\ {<starting line>|END}{-<ending line>|END}:\

starting line

- Beginning line number of a line range (1, 2, ..., n)

Starting line indicates the line number of the first line of a range of lines to be deleted from a macro.

ending line

- Ending line number of a line range (2, 3, ..., n+1)

Ending line indicates the line number of the last line of a range of lines to be deleted from a macro.

END - End

Line number of the line at the end of the macro.

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

6B Invalid line number

6E No edit session active

DGN,CCB,CFT,X

DIAGNOSE CROSS-CONNECT BUFFER

Explanation Of Command

This message requests diagnostics to be run on the cross-connect buffer.

Command

[I.41211]

DGN:FRM xy,SEQ ww:CCB sf[,CFT X'vwxy]!

Completion Message

[O.41211]

M hh:mm:ss xy,ww n[vv] DGN CCB sf ATP COMPL

[O.41212]

M hh:mm:ss xy,ww n[vv] DGN CCB sf CATP cc COMPL

[O.41213]

**M hh:mm:ss xy,ww n[vv] DGN CCB sf STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL**

Denial Message

[O.41211.01]

M hh:mm:ss xy,ww n[vv] DGN CCB sf COND cc DNY

Autonomous Message

[O.41211]

I hh:mm:ss xy,ww DGN CCB sf ATP COMPL

[O.41212]

I hh:mm:ss xy,ww DGN CCB sf CATP cc COMPL

[O.41213]

**I hh:mm:ss xy,ww DGN CCB sf STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL**

[O.41211.01]

I hh:mm:ss xy,ww DGN CCB sf COND cc DNY

Explanation Of Parameters

CCB - Cross-connect buffer**s** - Cross-Connect Buffer side number (0 or 1)**f** - Cross-Connect Buffer number (1 through 6)**CFT** - Craft

The optional craft diagnostic test code field indicates which test(s) of the diagnostic is to be run under craft control. If this field is omitted, all tests of this diagnostic will be run.

All tests can be run while out of service. Test 0004 will not run if any TSI on this Cross-connect Buffer (that is, TSI1 through TSI6) is in service.

vwxy - Diagnostic test number

<i>Test</i>	<i>vwxy</i>
Sync energy detector test	0001
Port alarm test	0002
Port alarm test	0004
Clock energy detector test.	0008

ATP - All tests passed

CATP - Conditional all tests passed

cc - Condition code for CATP

<i>cc</i>	<i>Explanation</i>
03	CCB in service
39	Not all buses have mapped time slot, or some TSI is in service
3A	No unmapped time slots on one of the buses
44	DMB type NPCs on unit f on side s is in service.

STF - Some tests failed

ppqq - Trouble number for the craft

pp - Failing diagnostic number in hexadecimal form
qq - Test number in hexadecimal form.

<i>ppqq</i>	<i>Explanation</i>
0480	Clock energy detector test. Circuit pack identification wrong.
0410	Clock energy detector test. Error bit not set.
0440	Clock energy detector test. Overall error summary not set.

Note: Involves CCNI register; could be a CCNI problem.

04a0	Clock energy detector test. Error bit not cleared.
0420	Clock energy detector test. Error returns after clear.
04b0	Clock energy detector test. Summary returns after clear.

Note: Involves CCNI register; could be a CCNI problem.

04f0	Clock energy detector test. Software error.
0180	Port alarm register test. Circuit pack identification wrong.
0110	Port alarm register test. Error bit not set.
0140	Port alarm register test. Overall error summary not set.

Note: Involves CCNI register; could be a CCNI problem.

01a0	Port alarm register test. Error bit not cleared.
0120	Port alarm register test. Error returns after clear.
01b0	Port alarm register test. Summary returns after clear.

Note: Involves CCNI register; could be a CCNI problem.

01f0 Port alarm register test. Software error.
0280 SYNC energy detector test. Circuit pack identification wrong.
0210 SYNC energy detector test. Error bit not set.
0240 SYNC energy detector test. Overall error summary not set.

Note: Involves CCNI register; could be a CCNI problem.

02a0 SYNC energy detector test. Error bit not cleared.
0220 SYNC energy detector test. Error returns after clear.
02b0 SYNC energy detector test. Summary returns after clear.
02f0 SYNC energy detector test. Software error.
031N Port alarm in-service test. Port alarm set in ESR N. N=0-2.
038N Port Alarm in-service test. Circuit pack identification wrong in ESR N.
034N Port alarm in-service test. Overall error bit not set when test bus B. B=0-3.

Note: Involves CCNI register; could be a CCNI problem.

03aN Port alarm in-service test. Error bit not cleared in ESR N.
032N Port alarm in-service test. Error returns after clear in ESR N.
03b0 Port alarm in-service test. Summary returns after clear.

Note: Involves CCNI register; could be a CCNI problem.

03f0 Port alarm in-service test. Software error.
0b00 Could not initialize pack.

d5 - d0 - Hexadecimal raw data bytes relating to the failed diagnostic detected.

d5 - CCNI Error Source Register 5

Each data field contains sixteen bits. The significance of each data field and its individual bits is as follows:

<i>Bit</i>	<i>Explanation</i>
15-8	Don't care
7	Error on autonomous switch enable circuit
6	Error on BSR parity
5	Parity error on high byte of data
4	Parity error on low byte of data
3	Address bus parity error
2	Synchronizer error
1	Error on CCB 6
0	Error on CCB 5

d4 - CCNI Error Source Register 4.

Each bit indicates an error on a pack connected to this CCNI.

<i>Bit</i>	<i>Explanation</i>
15	Error on CCB 4
14	Error on CCB 3
13	Error on CCB 2
12	Error on CCB 1
11	Error on FTM 4, Unit 6
10	Error on FTM 3, Unit 6
09	Error on FTM 2, Unit 6
08	Error on FTM 1, Unit 6
07	Error on FTM 4, Unit 5
06	Error on FTM 3, Unit 5
05	Error on FTM 2, Unit 5
04	Error on FTM 1, Unit 5
03	Error on FTM 4, Unit 4
02	Error on FTM 3, Unit 4
01	Error on FTM 2, Unit 4
00	Error on FTM 1, Unit 4

d3 - CCNI Error Source Register 3.

Each bit indicates an error on a pack connected to this CCNI.

<i>Bit</i>	<i>Explanation</i>
15	Error on FTM 4, Unit 3
14	Error on FTM 3, Unit 3
13	Error on FTM 2, Unit 3
12	Error on FTM 1, Unit 3
11	Error on FTM 4, Unit 2
10	Error on FTM 3, Unit 2
09	Error on FTM 2, Unit 2
08	Error on FTM 1, Unit 2
07	Error on FTM 4, Unit 1
06	Error on FTM 3, Unit 1
05	Error on FTM 2, Unit 1
04	Error on FTM 1, Unit 1
03	Error on TSI 66
02	Error on TSI 56
01	Error on TSI 46
00	Error on TSI 36

d2 - CCNI Error Source Register 2.

Each bit indicates an error on a pack connected to this CCNI.

<i>Bit</i>	<i>Explanation</i>
15	Error on TSI 26
14	Error on TSI 16
13	Error on TSI 65
12	Error on TSI 55
11	Error on TSI 45
10	Error on TSI 35
09	Error on TSI 25
08	Error on TSI 15
07	Error on TSI 64
06	Error on TSI 54
05	Error on TSI 44
04	Error on TSI 34
03	Error on TSI 24
02	Error on TSI 14
01	Error on TSI 63
00	Error on TSI 53

d1 - CCNI Error Source Register 1.

Each bit indicates an error on a pack connected to this CCNI.

<i>Bit</i>	<i>Explanation</i>
15	Error on TSI 43
14	Error on TSI 33
13	Error on TSI 23
12	Error on TSI 13
11	Error on TSI 62
10	Error on TSI 52
09	Error on TSI 42
08	Error on TSI 32
07	Error on TSI 22
06	Error on TSI 12
05	Error on TSI 61
04	Error on TSI 51
03	Error on TSI 41
02	Error on TSI 31
01	Error on TSI 21
00	Error on TSI 11

d0 - Contents of Bus Status Register on CCNI

<i>Bit</i>	<i>Explanation</i>
15-04	Not used.
03	Indicates what side of the network is active. This bit is read by the unit controllers.
02	Indicates what side of the network is active. This bit is written by the MP.
01	ASE (Autonomous Switch Enable) bit 1 = ASE circuit controls the value of Bit 02 0 = MP controls the value of Bit 02 This bit is read by the units.
00	Odd parity over bits 02-00 of this register.

cc - Hexadecimal condition code

cc	Explanation
02	Subject entity is not equipped
03	Subject entity is in service
39	Not enough TSIs for CCB test
3A	No unmapped slots on a bus

DGN,CCI,CFT,X

DIAGNOSTICS, CCI AND BT PACKS

Explanation Of Command

This command requests diagnostics to be run on the clock and control interface (CCI) and the bus terminator (BT) packs.

Command

[I.41251]

DGN:FRM xy,SEQ ww:CCI s[,CFT X'vwxy]!

Completion Message

[O.41251]

M hh:mm:ss xy,ww n[vv] DGN CCI s ATP COMPL

[O.41252]

M hh:mm:ss xy,ww n[vv] DGN CCI s CATP CC COMPL

[O.41253]

**M hh:mm:ss xy,ww n[vv] DGN CCI s[BT sf] STF ppqq 3 LN MSG:
wd21 wd20 wd19 wd18 wd17 wd16 wd15 wd14 wd13 wd12 wd11
wd10 wd09 wd08 wd07 wd06 wd05 wd04 wd03 wd02 wd01 wd00 COMPL**

Denial Message

[O.41251.01]

M hh:mm:ss xy,ww n[vv] DGN CCI s[BT sf] COND cc DNY

Autonomous Message

[O.41251]

I hh:mm:ss xy,ww n[vv] DGN CCI s ATP COMPL

[O.41251.01]

I hh:mm:ss xy,ww n[vv] DGN CCI s[BT sf] COND cc DNY

Explanation Of Parameters

CCI - Clock and control interface

s - Cross-connect side number (0 or 1)

CFT - Craft code

vwxy - Diagnostic test number (hexadecimal)

<i>Test</i>	<i>vwxy</i>
Address and Data Parity Exercise	0001
CCI Sync and Clock Exercise	0002
ETSI alarm exercise	0004
Sync summary alarm exercise	0008
Unit Summary Alarm Exercise	0010
CCI Power Alarm Exercise	0020*
Bus Status Register Parity Test	0040
Logic Cell Array (LCA) readback Test	0080
Bus Termination (BT) Pack Alarm Exercise	0100
Out-of-service Bus Status Register	
Diagnostics	0200*
CCI reset register check	0400*
ETSI reset register check	0800*

* Can be run only when the Expanded Cross-Connect Network (ECCN) side is out-of-service

The optional craft diagnostic code field indicates which test(s) of the diagnostic is to be run under craft control. If this field is omitted, all tests of this diagnostic will be run.

BT - Bus termination

sf - BT identifier

s - Cross-connect side number (0 or 1)

f - Failed BT indicator

f *Explanation*

1 BT 1

2 BT 2

B Both BTs

ATP - All tests passed

CATP - Conditional all tests passed

cc - Completion condition code (hexadecimal) (see cc for explanation)

STF - Some tests failed

ppqq - Trouble number for the craft (hexadecimal)

pp - Failing diagnostic number

qq - Test number

ppqq *Explanation*

0001 Address and Data Parity Exercise failed

0002 CCI Sync and Clock Exercise failed

0004 ETSI alarm exercise failed

0008 Sync summary alarm exercise failed

0010 Unit Summary Alarm Exercise failed

0020* CCI Power Alarm Exercise failed

0040 Bus Status Register Parity Test failed

0080 Logic Cell Arrays (LCA) readback Test failed

0100 Bus Terminator (BT) Pack Alarm Exercise failed

0200* Out-of-service Bus Status Register Diagnostics
failed

0400* CCI reset register check failed

0800* ETSI reset register check failed

8000 CCI failed hardware initialization

* ECCN out-of-service test

wd21, ..., wd00

- Raw data words

These words are related to the diagnostic failure. Each word contains two bytes, and each byte is shown as a 2-digit hexadecimal number.

cc - Hexadecimal condition code

cc Explanation

02	Subject entity is not equipped
03	Subject entity is in service
55	Invalid CFT code
56	Unrunnable CFT code

DGN,CCNI,CFT,X

DIAGNOSE CCNI

Explanation Of Command

This message requests diagnostics to be run on the cross-connect network interface (CCNI).

Command

[I.41201]

DGN:FRM xy,SEQ ww:CCNI s[,CFT X'vwxy]!

Completion Message

[O.41201]

M hh:mm:ss xy,ww n[vv] DGN CCNI s ATP COMPL

[O.41202]

M hh:mm:ss xy,ww n[vv] DGN CCNI s CATP cc COMPL

[O.41203]

**M hh:mm:ss xy,ww n[vv] DGN CCNI s STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL**

Denial Message

[O.41201.01]

M hh:mm:ss xy,ww n[vv] DGN CCNI COND cc DNY

Autonomous Message

[O.41201]

I hh:mm:ss xy,ww DGN CCNI s ATP COMPL

[O.41202]

I hh:mm:ss xy,ww DGN CCNI s CATP cc COMPL

[O.41203]

I hh:mm:ss xy,ww DGN CCNI s STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

[O.41201.01]

I hh:mm:ss xy,ww DGN CCNI COND cc DNY

Explanation Of Parameters

CCNI - Cross-connect network interface

s - Cross-connect side number (0 or 1)

CFT - Craft

The optional craft diagnostic code field indicates which test(s) of the diagnostic is to be run under craft control. If this field is omitted, all tests of this diagnostic will be run. All diagnostic tests can be run in or out of service.

vwxy - Diagnostic test number

Test	vwxy
Unmask test	0001
Lowbyte/highbyte parity test	0002
ESR/EMR test	0004
Bus status register test	0008
Autonomous switch test	0010
Address bus parity test	0020

ATP - All tests passed

STF - Some tests failed

ppqq - Trouble number for the craft

pp - Failing diagnostic number in hexadecimal form

qq - Test number in hexadecimal form

<i>ppqq</i>	<i>Explanation</i>
0110	Autonomous switch enable test: error bit not set
0120	Error bit returns after clear
01f0	Software error
0210	Bus status register test: error bit not set
0220	Error bit returns after clear
02f0	Software error
0311	Low/high byte parity test: low byte parity error not set
0312	High byte parity error not set
0313	Low and high byte errors not set
0320	Errors return after clear
03f0	Software error
0520	Unmask test: unmask failed
05f0	Software error
0620	Mask test: error bits set on entry
06c0	Mask bits failed to set
06f0	Software error
071R	Error bit not set
074R	Overall error summary bit does not set (this may involve a problem with the BX board, so if replacing this pack doesn't solve the problem, replace the BX)
07bR	Overall summary bit returns after clear (this may involve a problem with the BX board, so if replacing this pack doesn't solve the problem, replace the BX)
07cR	ESR/EMR tests: mask bit does not set: R is EMR or ESR number--[1,5] B is bit number--[0,f]
07dR	Mask bit does not clear
07f0	Software error
0810	Address bus parity test: error bit not set
0820	Error bit returns after clear
08a0	Error bit not cleared
08f0	Software error
0b00	Could not initialize pack

CATP - Conditional all tests passed

cc - Hexadecimal condition code

d5-d0 - Hexadecimal raw data bytes relating to the failed diagnostic detected.

d5 - CCNI Error Source Register 5

Each data field contains sixteen bits. The significance of each data field and its individual bits is as follows:

<i>Bit</i>	<i>Explanation</i>
15-8	Don't care
7	Error on autonomous switch enable circuit
6	Error on BSR parity
5	Parity error on high byte of data
4	Parity error on low byte of data
3	Address bus parity error
2	Synchronizer error
1	Error on CCB 6
0	Error on CCB 5

d4 - CCNI Error Source Register 4. Each bit indicates an error on a pack connected to this CCNI.

<i>Bit</i>	<i>Explanation</i>
15	Error on CCB 4
14	Error on CCB 3
13	Error on CCB 2
12	Error on CCB 1
11	Error on FTM 4, Unit 6
10	Error on FTM 3, Unit 6
09	Error on FTM 2, Unit 6
08	Error on FTM 1, Unit 6
07	Error on FTM 4, Unit 5
06	Error on FTM 3, Unit 5
05	Error on FTM 2, Unit 5
04	Error on FTM 1, Unit 5
03	Error on FTM 4, Unit 4
02	Error on FTM 3, Unit 4
01	Error on FTM 2, Unit 4
00	Error on FTM 1, Unit 4

- d3** - CCNI Error Source Register 3. Each bit indicates an error on a pack connected to this CCNI.

<i>Bit</i>	<i>Explanation</i>
15	Error on FTM 4, Unit 3
14	Error on FTM 3, Unit 3
13	Error on FTM 2, Unit 3
12	Error on FTM 1, Unit 3
11	Error on FTM 4, Unit 2
10	Error on FTM 3, Unit 2
09	Error on FTM 2, Unit 2
08	Error on FTM 1, Unit 2
07	Error on FTM 4, Unit 1
06	Error on FTM 3, Unit 1
05	Error on FTM 2, Unit 1
04	Error on FTM 1, Unit 1
03	Error on TSI 66
02	Error on TSI 56
01	Error on TSI 46
00	Error on TSI 36

- d2** - CCNI Error Source Register 2. Each bit indicates an error on a pack connected to this CCNI.

<i>Bit</i>	<i>Explanation</i>
15	Error on TSI 26
14	Error on TSI 16
13	Error on TSI 65
12	Error on TSI 55
11	Error on TSI 45
10	Error on TSI 35
09	Error on TSI 25
08	Error on TSI 15
07	Error on TSI 64
06	Error on TSI 54
05	Error on TSI 44
04	Error on TSI 34
03	Error on TSI 24
02	Error on TSI 14
01	Error on TSI 63
00	Error on TSI 53

d1 - CCNI Error Source Register 1. Each bit indicates an error on a pack connected to this CCNI.

<i>Bit</i>	<i>Explanation</i>
15	Error on TSI 43
14	Error on TSI 33
13	Error on TSI 23
12	Error on TSI 13
11	Error on TSI 62
10	Error on TSI 52
09	Error on TSI 42
08	Error on TSI 32
07	Error on TSI 22
06	Error on TSI 12
05	Error on TSI 61
04	Error on TSI 51
03	Error on TSI 41
02	Error on TSI 31
01	Error on TSI 21
00	Error on TSI 11

d0 - Contents of Bus Status Register on CCNI

<i>Bit</i>	<i>Explanation</i>
15-04	Not used.
03	Indicates what side of the network is active. This bit is read by the unit controllers.
02	Indicates what side of the network is active. This bit is written by the MP.
01	ASE (Autonomous Switch Enable) bit 1 = ASE circuit controls the value of Bit 02 0 = MP controls the value of Bit 02 This bit is read by the units.
00	Odd parity over bits 02-00 of this register.

cc - Hexadecimal condition code

cc Explanation

55 Invalid CFT code
56 Unrunnable CFT code

DGN,CI,CFT,X

DIAGNOSE COMMUNICATIONS INTERFACE

Explanation Of Command

This message requests diagnostics to be run on the communications interface (CI). The optional craft (CFT) field specifies which test(s) vwxy is to be run on the CI. The remainder of the CI diagnostics will then not be run.

An in progress message (O.41004) is output every 20 seconds while CI is being diagnosed until the command response or the autonomous report is output.

Command

[I.41031]

DGN:FRM xy,SEQ ww:CI[,CFT X'vwxy]!

Completion Message

[O.41031]

M hh:mm:ss xy,ww n[vv] DGN CI ATP COMPL

[O.41032]

M hh:mm:ss xy,ww n[vv] DGN CI CATP    COMPL

[O.41033]

**M hh:mm:ss xy,ww n[vv] DGN CI STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL**

Denial Message

[O.41031.01]

M hh:mm:ss xy,ww n[vv] DGN CI COND cc DNY

Autonomous Message

[O.41031]

I hh:mm:ss xy,ww DGN CI ATP COMPL

[O.41032]

I hh:mm:ss xy,ww DGN CI CATP cc COMPL

[O.41033]

I hh:mm:ss xy,ww DGN CI STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

[O.41031.01]

I hh:mm:ss xy,ww DGN CI COND cc DNY

Explanation Of Parameters

CI - Communications Interface

CFT - Craft

vwxy - Diagnostic test number (hexadecimal)

Test	vwxy
CI RAM Test	0001*
CI ROM Test	0002
CI DMA Controller Test	0004*
CI LAN Controller Test	0008*
CI Acknowledge Test	0010
CI Timer Test.	0020
CI Debug Port Test	0040*
CI Additional Memory Enable Test	0080*

*Out-of-service test.

ATP - All Tests Passed

CATP - Conditional All Tests Passed

cc - Hexadecimal completion condition code

To interpret values of cc see the cc table below.

STF - Some Tests Failed

ppqq - Trouble number for the craft (hexadecimal)

pp - Failing diagnostic number

qq - Test number

<i>ppqq</i>	<i>Explanation</i>
0101	RAM Data Fail
0102	RAM Address Fail
0103	RAM Access Fault
0104	RAM Refresh Fail
0105	RAM Parity Fail
0200	ROM Fail
0400	Timer Fail
0500	Input Port Fail
0600	DMA Controller Fail
0700	LAN Controller Fail
0900	Acknowledge Fail
0831	The input port is unstable
0832	The timer failed to generate an interrupt in time
0840	Timeout occurred during loopback
0841	Character overrun occurred during loopback
0842	Framing error occurred during loopback
0843	Looped character had a parity error
0844	Received break during loopback test
0845	Transmit and Receive buffers don't match
0846	Too many characters looped back
0847	An unknown condition occurred
0301	Additional memory IS enabled when it should not be
0302	Additional memory IS NOT enabled when it should be

d5 - d0 - Hexadecimal raw data bytes relating to the failed diagnostic detected.

<i>Data Byte</i>	<i>Value</i>
d5	Unused
d4	Unused
d3	Unused
d2	Unused
d1	Unused
d0	Unused

cc - Hexadecimal condition code

cc	Explanation

55	Invalid CFT code

56	Unrunnable CFT code

DGN,ETSI,CFT,X

DIAGNOSE ETSI

Explanation Of Command

This message requests diagnostics to be run on an expanded time slot interchanger (ETSI).

Command

[I.41261]

DGN:FRM xy,SEQ ww:ETSI sqq[,CFT X'vwxy]!

Completion Message

[O.41261]

M hh:mm:ss xy,ww n[vv] DGN ETSI sqq ATP COMPL

[O.41262]

M hh:mm:ss xy,ww n[vv] DGN ETSI sqq CATP kk COMPL

[O.41263]

M hh:mm:ss xy,ww n[vv] DGN ETSI sqq[ETSI snn] STF ppqq \

3 LN MSG:

wd15 wd14 wd13 wd12 wd11 wd10wd09 wd08

wd07 wd06 wd05 wd04 wd03 wd02 wd01 wd00 COMPL

Denial Message

[O.41261.01]

M hh:mm:ss xy,ww n[vv] DGN ETSI sqq COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ETSI	- Expanded Time slot Interchanger
s	- Side number (0 or 1)
qq	- Unit number (01 through 16)
CFT	- Craft code
vwxxy	- Diagnostic test number (hexadecimal)
	<i>Test</i> <i>vwxxy</i>
	Clock and Sync exercise 0001
	Control RAM and data RAM memory test 0002*
	Address and data parity exercise 0004
	Power monitor exercise 0008
	Data source time slot exercise 0010
	In-service port alarm exercise 0020
	Out-of-service port alarm exercise 0040*
	Data source and access test 0080
	Receive multiplexer port alarm 0100
	Control RAM parity exercise 0400
	Unmapped code test 0800*
	Data RAM unmapped test 1000*
	* Can only be tested if the ETSI is out of service

The optional craft diagnostic test code field indicates which test(s) of the diagnostic is to be run under craft control. If this field is not entered, all tests of this diagnostic will be run.

nn - Unit number of the questionable in-service ETSI pack, (01 through 16)

ATP - All tests passed

This applies to the diagnostic of the ETSI pack, its connection with other in-service ETSIs and its cable.

STF - Some tests failed

This applies to the diagnostic of the ETSI pack, its connection with other in-service ETSIs and its cable.

ppqq - Trouble number for the craft (hexadecimal)

pp - Failing diagnostic number

qq - Test number

<i>ppqq</i>	<i>Explanation</i>
0001	Clock and sync exercise failed
0002	Control RAM and data RAM memory test failed
0004	Address and data parity exercise failed
0008	Power monitor exercise failed
0010	Data source time slot exercise failed
0020	In-service port alarm exercise failed
0040	Out-of-service port alarm test failed
0080	Data source and access test failed
0100	Receive multiplexer port alarm test failed
0200	Transmit demultiplexer port alarm test failed
0400	Control RAM parity exercise failed
0800	Unmapped code test failed
1000	Data RAM unmapped test failed
8000	ETSI Hardware initialization failed

wd15, ..., wd00

- Raw data

Sixteen raw data words relating to the failed diagnostic detected. Each data word contains two bytes, and each byte is presented as a two-digit hexadecimal number. The interpretation of raw data values cannot be done by a craftsman.

wd15	- Low-level Diagnostic Actual Data
wd14	- Low-level Diagnostic Expected Data
wd13	- Low-level Diagnostic Return Code
wd12	- CCI ETSI Mask Register
wd11	- CCI ETSI ESR4
wd10	- CCI ETSI ESR3
wd09	- CCI ETSI ESR2
wd08	- CCI ETSI ESR1
wd07	- ETSI Receive Demultiplexer Mask Register
wd06	- ETSI Receive Multiplexer Mask Register
wd05	- ETSI Data Ram Alarm Register
wd04	- ETSI Control Ram Port Alarm Register
wd03	- ETSI Control Ram Exercise-Status Register
wd02	- ETSI Transmit Demultiplexer Status
wd01	- ETSI Receive Multiplexer Status
wd00	- ETSI Circuit Pack Summary Register

CATP - Conditional all tests passed

kk - Hexadecimal completion condition code
To interpret the values of kk see cc below.

cc - Hexadecimal condition code

cc	Explanation
00	No conditions
02	Subject entity is not equipped
03	Subject entity is in service
10	Unit is not equipped
55	Invalid CFT code
56	Unrunnable CFT code
A9	No unmapped time slot
CE	CCI is out of service

DGN,ETIS,ECCN,ALL

DIAGNOSTICS

Explanation Of Command

This message requests diagnostic tests to be run on ALL expanded time slot interchangers (ETISs) on an expanded cross-connect network (ECCN) side.

Command

[I.41271]

DGN:FRM xy,SEQ ww:ETIS,ECCN s,ALL!

Completion Message

[O.41271]

M hh:mm:ss xy,ww n[vv] DGN ETIS ECCN s ALL 5 LN MSG:
TOTAL ETIS tt
**s01 r nn s02 r nn s03 r nn s04 r nn s05 r nn **
s06 r nn
**s07 r nn s08 r nn s09 r nn s10 r nn s11 r nn **
s12 r nn
**s13 r nn s14 r nn s15 r nn s16 r nn **
COND kk COMPL

Denial Message

[O.41271.01]

M hh:mm:ss xy,ww n[vv] DGN ETIS ECCN s ALL COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ET SIS - Expanded time slot interchangers

ECCN - Expanded cross-connect network

s - Side number (0 or 1)

pa - Priority of action

pa Explanation

M^ Manual response

I^ Information from an autonomous activity

r - Diagnostic status for an individual ET SI

r Explanation

A All tests passed (ATP)

C Conditional all tests passed (CATP)

S Some tests failed (STF)

- unequipped ET SI

nn - Condition code (hexadecimal) for an individual ET SI

nn Explanation

-- Unequipped ET SI

To interpret other values of nn see cc below.

tt - Total number of ET SIs equipped in the ECCN side (01 through 16)

kk - Completion condition code (hexadecimal) for the whole message

To interpret values of kk see cc below.

cc - Condition code (hexadecimal)

cc - Hexadecimal condition code

cc Explanation

02	Subject entity is not equipped
03	Subject entity is in service
16	SYNC TB is not equipped
17	SYNC is out of service
55	Invalid CFT code
56	Unrunnable CFT code
A9	No unmapped time slot
CE	CCI is out of service
CF	SYNC is inservice but failed
D1	CCI is not present
D4	CCI is inservice but failed

DGN,IN,PROGRESS

DIAGNOSTIC IN PROGRESS

Explanation Of Command

This message indicates that the diagnosis of the specified entity is in progress. This message will be output every 20 seconds while waiting for the response to the diagnostic command or the autonomous diagnostic report to be output.

Command

Not applicable.

Completion Message

[O.41004]

M hh:mm:ss xy,ww n[vv] DGN <entity> IN PROGRESS

Denial Message

Not applicable.

Autonomous Message

[O.41005]

A hh:mm:ss xy,ww DGN <entity> IN PROGRESS

Explanation Of Parameters

entity - The name of the entity being diagnosed

entity	<i>Explanation</i>
CCB	Cross-connect buffer
CCI	Clock and control interface
CCNI	Cross-connect network interface (NonCEF)
CI	Communications interface
DISK	Disk
DSPI	Digital signal processing interface
FC	Format converter
FLI	Facility line interface
FMT	Formatter
FTMI	Facility terminating module interface
LINK	Link
MC	Main controller
MIU	Multiplexer interface unit
MP	Main processor
MXR	Multiplexer
NPC	Network processing circuit
SSC	Secondary storage controller
SYNC	Synchronizer
TAPE	Tape
TLI	Timing link interface
TSI	Time slot interchange
ETSI	Expanded time slot interchanger
XC	Cross-connect
UC	Unit controller

DGN,LINK,CFT,X

DIAGNOSE LINK

Explanation Of Command

This message requests that diagnostic tests be run on an administrative link.

Command

[I.41011]

DGN:FRM xy,SEQ ww:LINK a[,CFT X'vwxy]!

Completion Message

[O.41011]

M hh:mm:ss xy,ww n[vv] DGN LINK a ATP COMPL

[O.41011]

M hh:mm:ss xy,ww n[vv] DGN LINK a STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

Denial Message

[O.41011.01]

M hh:mm:ss xy,ww n[vv] DGN LINK a COND cc DNY

Autonomous Message

[O.41011]

I hh:mm:ss xy,ww DGN LINK a ATP COMPL

[O.41011]

I hh:mm:ss xy,ww **DGN LINK a STF ppqq 2 LN MSG:**
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

[O.41011.01]

I hh:mm:ss xy,ww **DGN LINK a COND cc DNY**

Explanation Of Parameters

CFT - Craft

vwxxy - Diagnostic test number

<i>test</i>	<i>vwxxy</i>
Link Loopback Test	0001
Input Port & Timer Test	0002

LINK - Link

a - Administrative link number (1 through 6)

ATP - All tests passed

STF - Some tests failed

ppqq - Diagnostic trouble number

<i>ppqq</i>	<i>Explanation</i>
0100	Link fail
0300	DUART test fail
0400	Timer test fail
0500	Input/output port test fail

pp - Failing diagnostic number (hexadecimal)

qq - Test number (hexadecimal)

d5,

d4,

...,

d0

- Hexadecimal raw data bytes relating to the failed diagnostic detected

These data bytes can only be interpreted by a Lucent Technologies design engineer.

cc - Hexadecimal condition code

cc *Explanation*

03	Subject entity is in service
BE	Hardware mismatch or not present
F0	Clock absent for XPC to loop back
55	Invalid CFT code
56	Unrunnable CFT code

DGN,MC,CFT,X

DIAGNOSE MAIN CONTROLLER

Explanation Of Command

This message requests diagnostics to be run on the main controller (MC). The optional CFT field specifies which test(s) is to be run on the MC.

The DGN <entity> IN PROGRESS message (O.41004) is output every 20 seconds while the MC is being diagnosed until the command response or the autonomous report is output.

Command

[I.41001]

DGN:FRM xy,SEQ ww:MC[,CFT X'vwxy]!

Completion Message

[O.41001]

M hh:mm:ss xy,ww n[vv] DGN MC ATP COMPL

[O.41002]

M hh:mm:ss xy,ww n[vv] DGN MC CATP    COMPL

[O.41003]

**M hh:mm:ss xy,ww n[vv] DGN MC STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL**

Denial Message

[O.41001.01]

M hh:mm:ss xy,ww n[vv] DGN MC COND cc DNY

Autonomous Message

[O.41001]

I hh:mm:ss xy,ww DGN MC ATP COMPL

[O.41002]

I hh:mm:ss xy,ww DGN MC CATP cc COMPL

[O.41003]

I hh:mm:ss xy,ww DGN MC STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

[O.41001.01]

I hh:mm:ss xy,ww DGN MC COND cc DNY

Explanation Of Parameters

MC - Main controller

CFT - Craft

vwxy - Diagnostic test number (hexadecimal)

TEST	vwxy
MP Test	0001
PMEM Test	0004†
SMEM Test	0008†
CI Test	0010
EMTC/MTC Acknowledge Test	0020
EMTC/MTC Interrupt Test	0040*
EMTC/MTC Sanity Reg. Test	0080*
EMTC/MTC LAN Disable Test	0100*
EMTC/MTC Autonomous Alarm Test	0200*

EBX/BX Interrupt Test	0400*
EBX/BX Acknowledge Test	0800
EBX/BX Data/Address Parity Test	1000*

*Out-of-service test (not performed if MC is in-service)

†In-service test (not performed if MC is out-of-service or in maintenance condition (MCOND))

ATP - All tests passed

CATP - Conditional all tests passed

cc - Hexadecimal completion condition code

To interpret values of cc see the table of cc values below.

STF - Some tests failed

ppqq - Trouble number for the craft (hexadecimal)

pp - Failing diagnostic number

qq - Test number

ppqq *Explanation*

0100 MP Fail

0200 CI Fail

0400 PMEM Fail

0500 SMEM Fail

0600 EMTC/MTC Interrupt Fail

0700 EMTC/MTC Acknowledge Fail

0800 EMTC/MTC Sanity Reg. Fail

0900 EMTC/MTC LAN Disable Fail

0E00 EMTC/MTC Autonomous Alarm Failed

0A01	EBX/BX RAM Data Fail
0A02	EBX/BX RAM Address Fail
0A03	EBX/BX RAM Access Fail
0A04	EBX/BX RAM Refresh Fail
0A05	EBX/BX RAM Parity Fail
0Bxx	EBX/BX Interrupt Fail
0C00	EBX/BX Acknowledge Fail
0D00	EBX/BX Data/Address Parity Fail
0D01	EBX/BX Data Parity Write Failed
0D02	EBX/BX Data Parity Read Failed
0D03	EBX/BX Address Parity Failed

xx indicates a low level test failure point which can only be interpreted by a Lucent Technologies design engineer.

d5 - d0 - Hexadecimal raw data bytes relating to the failed diagnostic detected.
These data bytes can only be interpreted by a Lucent Technologies design engineer.
An in-progress message (O.41004) is output every 20 seconds while the MP is being diagnosed until the command response or the autonomous report is output.

cc - Hexadecimal condition code

cc *Explanation*

03	Subject entity is in service
04	Subject entity is out of service
BE	Hardware mismatch or not present
55	Invalid CFT code
56	Unrunnable CFT code
84	Problem occurred while accessing SMEM or unformatted SMEM
85	Problem occurred while accessing PMEM
93	SMEM is not present
94	SMEM unit is not restored

DGN,MP,CFT,X

DIAGNOSE MAIN PROCESSOR

Explanation Of Command

This message requests diagnostics to be run on the main processor (MP). If the craft (CFT) option is used, the value supplied for *vwxy* will determine the diagnostic run. The remainder of the diagnostics will then not be run. If the CFT option is not used, all the diagnostics listed under *vwxy* will be run.

An in-progress message (O.41004) is output every 20 seconds while the MP is being diagnosed until the command response or the autonomous report is output.

Command

[I.41021]

DGN:FRM xy,SEQ ww:MP[,CFT X'vwxy]!

Completion Message

[O.41021]

M hh:mm:ss xy,ww n[vv] DGN MP ATP COMPL

[O.41022]

M hh:mm:ss xy,ww n[vv] DGN MP CATP    COMPL

[O.41023]

**M hh:mm:ss xy,ww n[vv] DGN MP STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL**

Denial Message

[O.41021.01]

M hh:mm:ss xy,ww n[vv] DGN MP COND cc DNY

Autonomous Message

[O.41021]

I hh:mm:ss xy,ww DGN MP ATP COMPL

[O.41022]

I hh:mm:ss xy,ww DGN MP CATP cc COMPL

[O.41023]

I hh:mm:ss xy,ww DGN MP STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

[O.41021.01]

I hh:mm:ss xy,ww DGN MP COND cc DNY

Explanation Of Parameters

MP - Main Processor

CFT - Craft

vwxy - Diagnostic test number

Test	vwxy
MP RAM Test	0001*
MP ROM Test	0002
MP DMA Controller Test	0010*
MP LAN Controller Test	0020*
MP Acknowledge Test	0080

*Out-of-service test.

ATP - All tests passed

CATP - Conditional all tests passed

cc - Completion condition code (hexadecimal)

To interpret these codes see cc.

STF - Some tests failed

ppqq - Trouble number

pp - Failing diagnostic number (hexadecimal)

qq - Test number (hexadecimal)

ppqq Explanation

01xx	RAM Tests Fail
0101	RAM Data Fail
0102	RAM Address Fail
0103	RAM Access Fail
0104	RAM Refresh Fail
02xx	ROM Fail
0500	Input Port Fail
06xx	DMA Controller Fail
07xx	LAN Controller Fail
0900	Acknowledge Fail

xx indicates a low level test failure point which can only be interpreted by a Lucent Technologies design engineer.

d5-d0 - Hexadecimal raw data bytes relating to the failed diagnostic detected.

These data bytes can only be interpreted by a Lucent Technologies design engineer.

An in-progress message (O.41004) is output every 20 seconds while the MP is being diagnosed until the command response or the autonomous report is output.

cc - Hexadecimal condition code

cc Explanation

03	Subject entity is in service
55	Invalid CFT code
56	Unrunnable CFT code

DGN,NPC

DIAGNOSE NETWORK PROCESSING CIRCUITS

Explanation Of Command

This command requests the diagnosis of a range of network processing circuits (NPCs) in a Facility Terminating Unit (FTU). It cannot be used to request the diagnosis of NPCs in a digital signal processing unit.

This command will be denied if the requested NPC range crosses a unit boundary. This command cannot be used to request the diagnosis of NPCs in a DS3 unit (DS3U) or a Hybrid DS3 unit (HDS3U). If this command is specified for a range of NPCs and the first or last NPC in the range request is a CEPT GAP the entire command will be denied. If the CEPT GAP is contained within the range requested the gap NPCs are ignored and all equipped NPCs are diagnosed.

Command

Nonhierarchical

[I.41361]

DGN:[FRM xy,SEQ ww]:NPC [s]abc-[t]def!

Hierarchical

[I.41361]

DGN:[FRM xy,SEQ ww]:NPC uvmnp-uvkqr!

Completion Message

Nonhierarchical

[O.41361]

M hh:mm:ss xy,ww n[vv] DGN NPC [s]ghi-[t]jkl TOT ttt \
5 LN MSG:
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk {EOM|COMPL}

Hierarchical

[O.41361]

M hh:mm:ss xy,ww n[vv] DGN NPC abcde-abcfg TOT ttt 5 LN MSG:
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk {EOM|COMPL}

Denial Message

Nonhierarchical

[O.41361.01]

M hh:mm:ss xy,ww n[vv] DGN NPC [s]abc-[t]def COND cc DNY

Hierarchical

[O.41361.01]

M hh:mm:ss xy,ww n[vv] DGN NPC uvmnp-uvkqr COND cc DNY

Autonomous Message

Nonhierarchical

[O.41361]

```
I hh:mm:ss xy,ww n[vv] DGN NPC [s]ghi-[t]jkl TOT ttt \
5 LN MSG:
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk {EOM|COMPL}
```

Hierarchical

[O.41361]

```
I hh:mm:ss xy,ww n[vv] DGN NPC abcde-abcfg TOT ttt 5 LN MSG:
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk
r kk r kk r kk r kk r kk r kk r kk r kk r kk r kk {EOM|COMPL}
```

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number, denoting the beginning of a range.

[t]def - The 3- or 4-digit nonhierarchical NPC number, denoting the end of a range.

[s]abc and [t]def must be in the same unit.

[s]ghi - Lowest NPC number in the FTM being reported ([s]abc through [s]def)

[t]jkl - Highest NPC number in the FTM being reported ([s]abc through [s]def)

The command may specify an NPC range that spans more than one facility terminating module (FTM) in the facility terminating unit or it may specify all or a subset of the NPCs in a given FTM. Hence the NPC numbers reported in a message segment for a given FTM will, in general, be numbers within the range given in the input command and may include the end points of the specified range.

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

uvmnp - Hierarchical NPC number, denoting the beginning of a range.

uvkqr - Hierarchical NPC number, denoting the end of a range.

abcde - Lowest NPC number in the FTM being reported (**uvmnp** through **uvkqr**)

abcfg - Highest NPC number in the FTM being reported (**uvmnp** through **uvkqr**)

uv, ab

- Unit number

m, k, c

- Module number

np, qr, de, fg

- NPC number within the module

The command may specify an NPC range that spans more than one facility terminating module (FTM) in the facility terminating unit or it may specify all or a subset of the NPCs in a given FTM. Hence the NPC numbers reported in a message segment for a given FTM will, in general, be numbers within the range given in the input command and may include the end points of the specified range.

Valid values are listed below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TOT - Total

ttt - Total number of equipped NPCs in a domestic FTM (**001** through **040**).

pa - Priority of action

pa *Explanation*

****** Major

M Manual

r - Result of diagnostics

r *Explanation*

A All tests passed

C Conditional all tests passed

S Some tests failed

D Diagnostics denied

N NPC is not in the range

- NPC is not equipped

If the diagnostic result is Some Test Failed, one output message will be generated for each NPC.

kk - Completion condition code for each NPC diagnostic (hexadecimal)

To interpret values of **kk** see **cc** in the condition code table. One special value is given below.

kk *Explanation*

-- Not applicable

cc - Hexadecimal condition code

cc **Explanation**

00	No conditions
02	Subject entity is not equipped
03	Subject entity is in service
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
13	FTMI is not equipped
14	FTMI is out of service
15	NPC is unequipped
36	DSPI not equipped
37	DSPI out-of-service
40	FC out of service
43	(NPC) Hardware mismatch
0B	Invalid CEPT NPC
FD	NPC range crosses unit boundary

DGN,NPC,SIDE,CFT,X

DIAGNOSE NPC

Explanation Of Command

This command requests diagnostics to be run on a single network processing circuit (NPC) in a facility terminating unit (FTU) or a digital signal processing unit (DSPU). For a Capacity Expansion Frame (CEF), if the NPC is in a DSPU (that is, NPC types MB, SR, or MJ), this message also initiates the continuity test for the cable between the NPC and its corresponding expanded time slot interchanger (ETSI). However, the continuity test will not be run if the optional craft code is entered.

This command is not valid for NPCs in a DS3 unit (DS3U) or Hybrid DS3 unit (HDS3U).

Command

Nonhierarchical

[I.41351]

DGN:[FRM xy,SEQ ww]:NPC [s]abc[,SIDE s][,CFT X'vwxy]!

Hierarchical

[I.41351]

DGN:[FRM xy,SEQ ww]:NPC uvmnp[,SIDE s][,CFT X'vwxy]!

Completion Message

Nonhierarchical

[O.41351]

M hh:mm:ss xy,ww n[vv] DGN NPC [s]abc[-[t]def][SIDE s] TYPE mnxyz \ ATP COMPL

[O.41352]

M hh:mm:ss xy,ww n[vv] DGN NPC [s]abc[-[t]def][SIDE s] TYPE mnxyz \ CATP cc COMPL

[O.41353]

M hh:mm:ss xy,ww n[vv] DGN NPC [s]abc[-[t]def][SIDE s] TYPE mnxyz \
e LN MSG:
[UNIT qq UPN=<upn> XPN=<xpn>[BIT={TD|RD}bb]]\
STF ppqq <d5> <d4> <d3> <d2> <d1> <d0> COMPL

Hierarchical

[O.41351]

M hh:mm:ss xy,ww n[vv] DGN NPC uvmnp[-uvmqr][SIDE s] TYPE mnxyz \ ATP COMPL

[O.41352]

M hh:mm:ss xy,ww n[vv] DGN NPC uvmnp[-uvmqr][SIDE s] TYPE mnxyz \ CATP cc COMPL

[O.41353]

M hh:mm:ss xy,ww n[vv] DGN NPC uvmnp[-uvmqr][SIDE s] TYPE mnxyz \
e LN MSG:
[UNIT qq UPN=<upn> XPN=<xpn>[BIT={TD|RD}bb]]
STF ppqq <d5> <d4> <d3> <d2> <d1> <d0> COMPL

Denial Message

Nonhierarchical

[O.41351.01]

M hh:mm:ss xy,ww n[vv] DGN NPC [s]abc[-[t]def][SIDE s] TYPE mnxyz \
COND cc DNY

Hierarchical

[O.41351.01]

M hh:mm:ss xy,ww n[vv] DGN NPC uvmnp[-uvmqr][SIDE s] TYPE mnxyz \
COND cc DNY

Autonomous Message

Nonhierarchical

[O.41351]

I hh:mm:ss xy,ww DGN NPC [s]abc[-[t]def][SIDE s] TYPE mnxyz \
ATP COMPL

[O.41352]

I hh:mm:ss xy,ww DGN NPC [s]abc[-[t]def][SIDE s] TYPE mnxyz \
CATP cc COMPL

[O.41353]

I hh:mm:ss xy,ww DGN NPC [s]abc[-[t]def][SIDE s] TYPE mnxyz \
e LN MSG:
[UNIT qq UPN=<upn> XPN=<xpn>[BIT={TD|RD}bb]]\
STF ppqq <d5> <d4> <d3> <d2> <d1> <d0> COMPL

Hierarchical

[O.41351]

I hh:mm:ss xy,ww DGN NPC uvmnp[-uvmqr][SIDE s] TYPE mnxyz \
ATP COMPL

[O.41352]

I hh:mm:ss xy,ww DGN NPC uvmnp[-uvmqr][SIDE s] \
TYPE mnxyz CATP cc COMPL

[O.41353]

I hh:mm:ss xy,ww DGN NPC uvmnp[-uvmqr][SIDE s] TYPE mnxyz \
e LN MSG:
[UNIT qq UPN=<upn> XPN=<xpn>[BIT={TD|RD}bb]]
STF ppqq <d5> <d4> <d3> <d2> <d1> <d0> COMPL

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560

If NPC numbers are expressed in three digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The values are:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

MB, SR, and MJ type numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

SIDE - Side

s - Side number (s = 0 or 1)

Side of the duplicated NPC circuit pack in a DSPU that is to be diagnosed.

CFT - Craft

vwxy - Diagnostic test number

The optional craft code field indicates the diagnostic test(s) to be run. If this field is omitted, all tests of this diagnostic will be run. If the NPC is in-service, only in-service diagnostics are run.

Craft codes for the DA type NPC are listed below:

<i>Test</i>	<i>vwxy</i>
CI stuck bit test	0001*
CI sanity timer test	0002
CI serial link test	0004*
CC configuration register test	0008
CC IRAM stuck bit test	0010
Miscellaneous CC tests	0020*
CC data parity test	0040
Transceiver alarm text	0080
EDCC memory test	0100*
BPV and ZCS tests	0200
CC receive stuff and CC->TX timeslot test	0400
Slip detector test	0800
Mode dependent system tests	1000
Continuity tests	2000
Miscellaneous register tests	4000
Transceiver BIST	8000

* In-service tests

Craft codes for the DE or DS type NPC are listed below:

<i>Test</i>	<i>vwxY</i>
Communication Interface (CI)	
stuck bit test	0001
CI sanity timer test	0002
CI serial link test	0004
Channel Controller (CC) config	
stuck bit test	0008
CC data RAM stuck bit test	0010*
CC data parity test	0020*
Memory test	0040
Bipolar violation test	0080*
Stuff channel test	0100*
Slip detector test	0200*
Zero code suppression test	0400*
Mode dependent system test	0800*
CC tests	1000*
Transceiver tests	2000*
HSCC tests Data Link Controller (DLC) circuit	
pack level tests (DS NPC only)	4000*
DLC digroup level tests (DS NPC only)	8000*

Notes:

1. Only tests 1000 and 4000 can be run when the NPC is in service.
2. If both the requested NPC and its mate are out-of-service, any test may be run.

If the requested NPC is out-of-service and its mate is in service, only the tests marked with "" can be run.

Craft codes for the MB type NPC are listed below:

<i>Test</i>	<i>vwx</i> y
RAM test	0001*
Interrupt and mask register test	0002
Data processing error test	0004
Clock error test	0008
Serial interface error test	0010
Control memory 0 test	0020
Control memory 1 test	0040
Conference 0 test	0080
Conference 1 test	0100

* Out-of-service only test

Craft codes for the MJ type NPC are listed below:

<i>Test</i>	<i>vwx</i> y
Exercise the clock circuitry	0001
Exercise the Processor Interface Device	0002
Exercise the input data parity checker and ECD data input	0040
Exercise the ECD, the MJU control memory parity checker and data path to output	0080
Exercise the MJU control prom	0100
Exercise the MJU output block	0200
Exercise the control code and overwrite state machine	0400
Exercise the FTU PROM and secondary channel state machine	0800
Verify propagation of alarms to the DSPI circuit pack	2000
Run all out-of-service tests	8000

Note: Test 8000 may only be run on out-of-service circuit packs.

Craft codes for the SR type NPC are listed below:

<i>Test</i>	<i>vwx</i>
Exercise the clock circuitry	0001
Exercise the Processor Interface	
Device	0002
Exercise the input data interface	0040
Exercise the data path internal to	
the SRM pack	0080
Exercise the output block of	
the SRM pack	0200
Exercise the bus feeding the	
output block	0800
Run all out-of-service tests	8000

Note: Test 8000 may only be run on out-of-service circuit packs.

Craft codes for the SD type NPCs are listed below:

<i>Test</i>	<i>vwx</i>
CI stuck bit test	0001
CI sanity test	0002
CI serial link test	0004
TG193 CC Config. Reg. test	0008
TG193 CC IRAM etc. tests	0010
TG193 clock & synch error tests	0020*
TG193 RAM tests	0040
Miscellaneous register test	0080

Note: * denotes that the test can be run while the NPC is In Service

[t]def - The 3- or 4-digit nonhierarchical MB type NPC number
([t]def= [s]abc + 1)

uvmnp - Hierarchical MB type NPC number

uvmqr - Hierarchical MB type NPC number

qr - MB type NPC number within module "m" (qr = np +1).

TYPE - Type

mnxyz - NPC type identifier

mnxyz NPC type

DAxyz FTU ANSI DS1 NPC type

DExyz Facility Terminating Unit NPC

DSxyz SLC Carrier Type NPC

MB100 Digital Multipoint Bridge

MJ100 Multipoint Junction Unit

SR100 Subrate Multiplexer Unit

SDxyz DSP Platform Applications

e - Number of lines in the message (2 or 3)

qq - Unit number (01 through 16)

UPN - Unit plug number

upn - The value of the UPN.

XPN - ECCN plug number

xpn - The value of the XPN

BIT - Bit number of the data bus

TD - Transmit data

RD - Receive data

bb - Bit number (00 through 15)

The optional line which contains the unit, port, and pin information will only be output if the NPC is in a DSPU and if the continuity check between the NPC and the ECCN is failed. In addition, the completion condition must always be STF. The valid values and the associated information of the UPN and XPN are shown below. Note that the numbers shown in the output are exactly the same as the numbers on the backplane.

Unit Plug No.	ECCN Plug No.	Side	Direction	Associated DSP Packs
P1	PqqA*	0	Receive	1st and 2nd DSP Packs
P2	PqqE	0	Transmit	1st and 2nd DSP Packs
P3	PqqB	0	Receive	3rd and 4th DSP Packs
P4	PqqF	0	Transmit	3rd and 4th DSP Packs
P5	PqqC	0	Receive	5th and 6th DSP Packs
P6	PqqG	0	Transmit	5th and 6th DSP Packs
P7	PqqD	0	Receive	7th and 8th DSP Packs
P8	PqqH	0	Transmit	7th and 8th DSP Packs
P10	PqqA	1	Receive	1st and 2nd DSP Packs
P11	PqqE	1	Transmit	1st and 2nd DSP Packs
P12	PqqB	1	Receive	3rd and 4th DSP Packs
P13	PqqF	1	Transmit	3rd and 4th DSP Packs
P14	PqqC	1	Receive	5th and 6th DSP Packs
P15	PqqG	1	Transmit	5th and 6th DSP Packs
P16	PqqD	1	Receive	7th and 2nd DSP Packs
P17	PqqH	1	Transmit	7th and 8th DSP Packs

* qq is the unit number

The bit number (that is, BIT = TDRD bb) will be shown if the software identifies the bit of the data bus as the failed one.

ATP - All tests passed
All tests passed on the diagnostic of NPC

CATP - Conditional all tests passed
The reason for the conditional completion is indicated by cc.

STF - Some tests failed
Some tests failed on the diagnostic of NPC.

ppqq - Trouble number for the craft
pp Failing diagnostic number (hexadecimal)
qq Test number (hexadecimal)

Trouble numbers for the DA type NPC are listed below:

The TG191 circuit pack can be grown as either a DA or DE type. As a consequence the trouble numbers for the DE type apply in addition to those shown below.

ppqq Cause of failure

0001 TG191 Initialization - Phase 1
0002 TG191 Initialization - Phase 2
0003 Digroup physical type verification
0004 Devices/registers on the FC could not be accessed
0005 Devices/registers on the FTMI could not be accessed
01-- TG191 initialization test
02-- CI stuck bit test
03-- CI sanity test
04-- CI serial link test
05-- CC configuration register stuck bit test
06-- CC IRAM stuck bit test
07-- CC loss of clock test
08-- CC sync error detector test
09-- CC sync and loss of clock error detector test
0A-- CC configuration register parity checker test
0B-- CC IRAM parity checker test
0C-- CC transmit data parity error detector test
0D-- CC receive data parity error detector test
0E-- CC receiver data checker test
0F-- TG191 memory test

10-- Bipolar violations test
11-- Zero code suppression test
12-- CC receive stuff register test
13-- CC to transceiver stuff test
14-- Receive slip detection test
15-- Mode dependent system tests
16-- Transceiver provisioning test
17-- AIS test
18-- RFA test
19-- CFA test
1A-- LMA test
1B-- RMA test
1C-- CRC test
1D-- PRISM stuck bit test
1E-- PRISM internal loopback test
1F-- PRISM external loopback test

- 20-- Signaling insertion and extraction test
- 21-- Transparent mode test
- 22-- D4 framing mode initialization test
- 23-- CC to format converter continuity test
- 24-- ESF framing mode initialization test
- 25-- PRISM loopback initialization test
- 26-- CC to transceiver continuity test
- 27-- Miscellaneous register test
- 28-- Receive framer alarm test
- 29-- Transceiver receive synchronizer alarm test
- 2A-- Transceiver transmit alarm test
- 2B-- PRISM initialization test
- 2C-- Transceiver BST
- 2D-- Downloadable diagnostic interface test

Note: "--" indicates a two-digit hexadecimal value indicating a decision point within the source program. This value can only be interpreted by a programmer with access to the source program.

Trouble numbers for DE and DS type NPCs are listed below:

The TG191 circuit pack can be grown as a DA or DE type. As a consequence the trouble numbers for the DA type apply in addition to those shown below.

ppqq Cause of failure

- 0001 DDC initialization failure
- 0002 DDC initialization failure - second attempt
- 0003 Unable to read DDC circuit pack type or unknown DDC type
- 0004 Unable to read/pest DDC via the FC
- 0005 Unable to read/pest DDC via the FTMI
- 0009 Facility Processor on In-service NPC is insane
- 0100 Communication Interface Stuck Bit failure
- 0200 Communication Interface Sanity Timer failure
- 0300 Communication Interface Serial Link failure
- 0400 Channel Controller Configuration Register Stuck Bit failure
- 0500 Channel Controller Instruction Ram Stuck Bit failure
- 0600 DDC Memory failure
- 0700 Bipolar Violations failure
- 0800 Stuff Channel Programmability failure
- 0900 Slip Detector failure

0A00	Zero Code Suppression failure
0B00	Mode Dependent System failure
0C00	Channel Controller Loss of Clock Exercise failure
0D00	Channel Controller Sync Error Detector failure
0E00	Channel Controller Clock & Sync Error Detector failure
0F00	Channel Controller Configuration Register Parity Checker failure
1000	Channel Controller Configuration Register Parity Checker failure
2000	Channel Controller Instruction RAM Parity Checker failure
3000	Channel Controller Receive Data Parity failure
4000	Channel Controller Transmit Data Parity failure
5000	Transceiver Memory failure
6000	Transceiver Alarm failure
A000	SLC96 DLC Stuck Bit failure
B000	SLC96 DLC Update Mask failure
C000	SLC96 DLC Framing failure
D000	SLC96 DLC Alarm failure
E000	SLC96 Loss of Data Link failure
F000	SLC96 XMT/RCV failure

Trouble numbers for MB, SR, and MJ type NPCs are listed below:

ppqq Cause of failure

0F00	Error Summary Failure
0F01	Hardware Fail on ECCI pack
0F02	Hardware Fail on ETSI pack
0F03	RCV Network Data Bus Failure badbit, baddirection & badport
0F04	RCV Network Data Bus Failure baddirection & badport
0F05	XMIT Network Data Bus Failure badbit, baddirection & badport
0F06	XMIT Network Data Bus Failure baddirection & badport
0F07	Pack hardware failure
0F0A	Parent pack failed, for DSP packs
0F0C	Network Parity or Frame Sync. or Network Data Bus error

Trouble numbers for only the MB type NPCs are listed below:

ppqq Cause of failure

0F08	Pack Failed to Initialize for CT
0F0B	DMB clock problem during initialization

Trouble numbers for the MJ type NPCs are listed below
(xx indicates ignore the value):

ppqq Cause of failure

- 01xx** Failure occurred while exercising the clock circuitry
- 02xx** Failure occurred while exercising the Processor Interface Device
- 03xx** Failure occurred while exercising the RAM test
- 05xx** Multipoint Junction Unit (MJU) circuit pack initialization failed
- 06xx** Failure occurred while exercising the control RAM parity checker test
- 07xx** Failure occurred while exercising the input data parity checker and ECD data input
- 08xx** Failure occurred while exercising the ECD, the MJU control memory parity checker and data path to output
- 09xx** Failure occurred while exercising the MJU control PROM
- 0Axx** Failure occurred while exercising the MJU output block
- 0Bxx** Failure occurred while exercising the control code and over-write state machine
- 0Cxx** Failure occurred while exercising the Facility Terminating Unit(FTU) PROM and secondary channel state machine
- 0Dxx** Failure occurred while exercising the CCM control memory parity checker and data path to output
- 0Exx** Unable to verify propagation of alarms to Digital Signal Processing Interface (DSPI) interrupt register

Trouble numbers for the SD type NPCs are listed below:

ppqq Cause of failure

0001	TG193 Initialization - Phase 1
0002	TG193 Initializaiton - Phase 2
0003	circuit pack physical type verification
0004	devices/registers on the SXC could not be accessed
0005	devices/registers on the MC could not be accessed
01--	happened during initialization of TG193 circuit pack
02--	CI stuck bit test
03--	CI sanity timer test
04--	CI serial link test
05--	CC configuration register test
06--	CC instruction RAM test
07--	loss of clock detector test
08--	synch error detector test
09--	synch & loss of clock error detector test
0A--	configuration register parity checker test
0B--	instruction RAM parity checker test
0C--	transmit data parity error detector test
0D--	receive data parity error detector test
0E--	shared RAM test
10--	miscellaneous and page register tests
11--	happened during download
12--	no file to download
13--	happened during identification of circuit pack

Note: "--" indicates a two-digit hexadecimal value indicating a decision point within the source program. This value can only be interpreted by a Lucent Technologies design engineer.

d5-d0 - Hexadecimal raw data bytes relating to the failed diagnostic detected.
These fields can only be interpreted by an Lucent Technologies design engineer.

Trouble numbers for SR type NPCs are listed below
(xx indicates ignore the value):

ppqq Cause of failure

- 01xx** Failure occurred while exercising the clock circuitry
- 02xx** Failure occurred while exercising the Processor Interface Device (PID)
- 03xx** Failure occurred while exercising the RAM test
- 05xx** Failure occurred while running circuit pack initialization
- 06xx** Failure occurred while exercising the control RAM parity checker test
- 07xx** Failure occurred while exercising the input data interface
- 08xx** Failure occurred while exercising the data path internal to the substrate multiplexer
- 09xx** Failure occurred while exercising the multiplexer state machine
- 0Axx** Failure occurred while exercising the output block of the SRM pack
- 0Bxx** Failure occurred while exercising the internal data RAMS
- 0Cxx** Failure occurred while exercising the bus feeding the output block
- 0Dxx** Unable to verify propagation of alarms to DSPI interrupt register

d5 - d0 - Hexadecimal raw data bytes relating to the failed diagnostic detected.

For DMB, MJU, and SRM circuit packs, the values of d5-d0 are the same.

Data

Byte Value

- d5** Unused
- d4** Unused
- d3** Unused
- d2** Unused
- d1** Unused
- d0** Unused

cc - Hexadecimal condition code

cc Explanation

03 Subject entity is in service
10 Unit is not equipped
11 UC is out of service
13 FTMI is not equipped
14 FTMI is out of service
15 NPC is unequipped
17 SYNC is out of service
36 DSPI not equipped
37 DSPI out-of-service
38 FC not equipped
40 FC out of service
43 (NPC) Hardware mismatch
0B Invalid CEPT NPC
55 Invalid CFT code
56 Unrunnable CFT code
FD NPC range crosses unit boundary
C2 ETSI cannot be initialized when ECCN side is
OOS or inservice but pested
C3 XMIT continuity test won't be run: CFT code
specified
C4 XMIT continuity test won't be run: no XMIT
timeslots available
C7 RCV continuity test won't be run: no DMB
timeslots available
C8 RCV continuity test won't be run: at least
one timeslot in use
CB Skip error summary since adjacent pack not
in service or pested
CE CCI is out of service
E0 ETSI not equipped, not in service, or failed

DGN,PMEM,SMEM,CFT,X,EXCT,DBASE,VERIFY

RUN DIAGNOSTICS ON NON-VOLATILE MEMORY CARD

Explanation Of Command

This command requests diagnostics to be run on the specified non-volatile memory card; either the primary memory card (PMEM) or the secondary memory card (SMEM). The diagnostics test the operation of the underlying hardware of the specified memory card. By default, the entire set of in-service or out-of-service diagnostics are run except for the database and executable tests. If the craft option is used, the value supplied for *vwxy* will determine the diagnostics run and can include database and executable tests.

Using the optional keywords EXCT or DBASE, allows the user to test the system's ability to correctly read either the executable program or the database stored on a memory card. When a single or multiple diagnostic test is specified via the CFT parameter, only those tests specified by the CFT parameter are run, all other possible tests are not run. The **DGN IN PROGRESS** message is output every 20 seconds while the diagnostics are being executed until the command response or the autonomous report is output.

Command

[I.41051]

DGN:[FRM xy,SEQ ww]:{PMEM|SMEM}[,{CFT X'vwxy|EXCT|DBASE}][,VERIFY]!

Completion Message

[O.41051]

**M hh:mm:ss xy,ww n[vv] DGN {PMEM|SMEM}[{EXCT|DBASE}] [VERIFY]
ATP COMPL**

[O.41052]

M hh:mm:ss xy,ww n[vv] DGN {PMEM|SMEM}[{EXCT|DBASE}][VERIFY] \
STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

[O.41053]

M hh:mm:ss xy,ww n[vv] DGN {PMEM|SMEM}[{EXCT|DBASE}] [VERIFY] CATP COMPL

Denial Message

[O.41051.01]

M hh:mm:ss xy,ww n[vv] DGN {PMEM|SMEM}[{EXCT|DBASE}][VERIFY] COND cc DNY

Autonomous Message

[O.41051]

I hh:mm:ss xy,ww DGN {PMEM|SMEM}[{EXCT|DBASE}] ATP COMPL

[O.41052]

I hh:mm:ss xy,ww DGN {PMEM|SMEM}[{EXCT|DBASE}] STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

[O.41053]

I hh:mm:ss xy,ww DGN {PMEM|SMEM}[{EXCT|DBASE}] CATP COMPL

[O.41051.01]

I hh:mm:ss xy,ww DGN {PMEM|SMEM}[EXCT|DBASE}] COND cc DNY

Explanation Of Parameters

PMEM - Primary memory card.

SMEM - Secondary memory card.

CFT - Craft

X - Hexidecimal

vwxy - Diagnostic test number

The optional craft code field specifies which test is to be run on the PMEM/SMEM. The card status test is always performed. The remainder of the PMEM/SMEM diagnostics will not be run.

vwyx *Test*

0001 Card Status Test

0002 Wear Level Test

0004* Card Diagnostic Test

0010*+ Validate Data Base Test

0020*% Validate Boot Block Test

0040*% Validate Executable Header Test

0080*% Validate Executable Test

0100* Read/Write DGN Volume Test

0200* Mount/Unmount All Volumes Test

* out-of-service tests (not performed if PMEM/SMEM card is in the in-service state and the main controller is also in the in-service state).

+ Database tests (performed when DBASE keyword is specified).

% Executable tests (performed when EXCT keyword is specified).

DBASE - Database

This keyword is used to test the ability to correctly read the data base files stored on the PMEM/SMEM. This diagnostic will be run only if the DBASE keyword is entered or if the specific test CFT field is specified.

PMEM/SMEM must be out-of-service (OOS) or the main controller must be in maintenance condition (MCOND) when using this keyword.

EXCT - Executables

This keyword is used to test the ability to correctly read the executables stored on the PMEM/SMEM. This diagnostic will be run only if the EXCT keyword is entered or if the specific test CFT field is specified.

PMEM/SMEM must be out-of-service (OOS) or the main controller must be in maintenance condition (MCOND) when using this keyword.

ATP - All tests passed

CATP - Conditional all tests passed

STF - Some tests failed

ppqq - Trouble number for the craft

pp - Failing Diagnostic Number (hexadecimal)

qq - Test number (hexadecimal)

ppqq	<i>Explanation</i>
01xx	PMEM/SMEM Tests Failed
0103	Wear Level Failed
0104	Card Diagnostic Failed
0108	Validate Database Failed (both database volumes marked bad)
0109	Validata Database Failed (cannot mount database volume)
0110	Validate Database Failed (MP & CI database not present)
0111	Validate Database Failed (database present but failed)
0114	Validate Boot Block Failed
0116	Validate Executable Header Failed
0118	Validate Executable Failed (cannot mount executable volume)
0119	Validate Executable Failed (validate executables failed)
0121	Read/Write DGN Volume Failed (read/write dgn volume failed)
0121	Read/Write DGN Volume Failed (cannot mount dgn volume)
0121	Read/Write DGN Volume Failed (failed to close or remove file or failed to unmount dgn volume)
0123	Mount/Unmount All Volumes Failed
0124, 0126	Keyword=VERIFY Test Failed

d5-d0 - Hexadecimal raw data bytes relating to the failed diagnostic detected.

These data bytes can only be interpreted by a Lucent engineer.

An in-progress message (O.41004) is output every 20 seconds while the device is being diagnosed until the command response or autonomous report is output.

VERIFY - Verify

This option causes block checking to be performed.

cc - Hexadecimal condition code

cc *Explanation*

- 03** Subject entity is in service
- 04** Subject entity is out of service
- 55** Invalid CFT code
- 56** Unrunnable CFT code
- 84** Problem occurred while accessing SMEM or unformatted SMEM
- 85** Problem occurred while accessing PMEM

DGN,SYNC

DIAGNOSE SYNCHRONIZER

Explanation Of Command

This message runs diagnostics on the digital phase-locked loop (DPLL) and the time base (TB) of the specified synchronizer side.

Command

[I.41101]

DGN:FRM xy,SEQ ww:SYNC a!

Completion Message

[O.41101]

M hh:mm:ss xy,ww n[vv] DGN SYNC a ATP COMPL

[O.41101]

M hh:mm:ss xy,ww n[vv] DGN SYNC a CATP cc COMPL

[O.41102]

M hh:mm:ss xy,ww n[vv] DGN SYNC a STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

Denial Message

[O.41101.01]

M hh:mm:ss xy,ww n[vv] DGN SYNC a COND cc DNY

Autonomous Message

[O.41101]

I hh:mm:ss xy,ww DGN SYNC a ATP COMPL

[O.41101]

I hh:mm:ss xy,ww DGN SYNC a CATP cc COMPL

[O.41102]

**I hh:mm:ss xy,ww DGN SYNC a STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL**

[O.41101.01]

I hh:mm:ss xy,ww DGN SYNC a COND cc DNY

Explanation Of Parameters

SYNC - Synchronizer

a - Synchronizer side (0 or 1)

ATP - All tests passed

CATP - Conditional all tests passed

cc - Hexadecimal completion code

STF - Some tests failed

ppqq - Trouble number for the craft

ppqq Explanation

0100 Sync diagnostic command returned error

0200 Hardware status query showed error

d5-d0 - Hexadecimal raw data bytes relating to the failed diagnostic detected.

These data bytes can only be interpreted by a Lucent Technologies design engineer.

cc - Hexadecimal condition code

cc Explanation

02 Subject entity is not equipped
8F Can't lock or unlock ram database
AB Bad sync mode

DGN,SYNC,TLI,CRO

DIAGNOSE SYNCHRONIZER

Explanation Of Command

This message requests diagnostics to be run on the synchronizer's timing link interface 3 when provisioned as a clock reference oscillator. The command will be denied if a clock reference oscillator is not provisioned.

Command

[I.41111]

DGN:FRM xy,SEQ ww:SYNC,TLI 3,CRO!

Completion Message

[O.41111]

M hh:mm:ss xy,ww n[vv] DGN SYNC TLI 3 CRO ATP COMPL

[O.41111]

M hh:mm:ss xy,ww n[vv] DGN SYNC TLI 3 CRO CATP cc COMPL

[O.41112]

M hh:mm:ss xy,ww n[vv] DGN SYNC TLI 3 CRO STF \
ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

Denial Message

[O.41111.01]

M hh:mm:ss xy,ww n[vv] DGN SYNC TLI 3 CRO COND cc DNY

Autonomous Message

[O.41111]

I hh:mm:ss xy,ww DGN SYNC TLI 3 CRO ATP \
COMPL

[O.41111]

I hh:mm:ss xy,ww DGN SYNC TLI 3 CRO CATP cc \
COMPL

[O.41112]

I hh:mm:ss xy,ww DGN SYNC TLI 3 CRO STF ppqq \
2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> **COMPL**
[O.41111.01]

I hh:mm:ss xy,ww DGN SYNC TLI 3 CRO \
COND cc DNY

Explanation Of Parameters

SYNC - Synchronizer

TLI - Timing link interface

3 - TLI number 3

CRO - Clock reference oscillator

ATP - All tests pass

CATP - Conditional All Tests Pass

STF - Some tests failed

ppqq - Trouble number for the craft

ppqq Explanation

0300 TLI status query showed error

0400 TLI status query showed error

0500 CRO status query showed error

0600 CRO frequency offset flag

d5,
d4,
...
d0 - Hexadecimal data bytes.

Data Byte	Value
d5	Unused
d4	Unused
d3	Unused
d2	Unused
d1	Unused
d0	Unused

cc - Hexadecimal condition code

cc	Explanation
02	Subject entity is not equipped
8F	Can't lock or unlock ram database
AB	Bad sync mode

DGN,SYNC,TLI,SSP

DIAGNOSE SYNCHRONIZER TIMING LINK INTERFACE

Explanation Of Command

This command requests the diagnosis of a timing link interface on the synchronizer side. If the optional synchronizer sync port parameter is specified, only that single SSP is diagnosed. For autonomous diagnostics of a TD-type TLI circuit pack, the SSP field does not appear in the output message. Both arguments appear for autonomous removal of a timing extractor type TLI.

Command

[I.41121]

DGN:FRM xy,SEQ ww:SYNC a,TLI m[,SSP b]!

Completion Message

[O.41121]

**M hh:mm:ss xy,ww n[vv] DGN SYNC a TLI m[SSP b[1]] ATP **
COMPL

[O.41122]

**M hh:mm:ss xy,ww n[vv] DGN SYNC a TLI m[SSP b[1]] STF ppqq **
2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

Denial Message

[O.41121.01]

M hh:mm:ss xy,ww n[vv] DGN SYNC a TLI m[SSP b[1]] \
COND cc DNY

Autonomous Message

[O.41121]

I hh:mm:ss xy,ww DGN SYNC a TLI m[SSP b[1]] ATP COMPL

[O.41122]

I hh:mm:ss xy,ww DGN SYNC a TLI m[SSP b[1]] STF ppqq \
2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

[O.41121.01]

I hh:mm:ss xy,ww DGN SYNC a TLI m[SSP b[1]] COND cc DNY

Explanation Of Parameters

SYNC - Synchronizer

a - Synchronizer side number (0 or 1)

TLI - Timing link interface

m - Timing link interface number (1 through 4)

SSP - Synchronizer synchronization port

b - Synchronizer Synchronization Port number (0 or 1)

Note 1: SSP must be specified if the TLI is a timing extractor type NPC.

Note 2: If the SSP parameter is supplied, only that SSP is diagnosed. Otherwise both SSPs are diagnosed.

ATP - All tests passed

STF - Some tests failed

ppqq - Trouble number for the craft

Valid values are listed below:

<i>ppqq</i>	<i>Explanation</i>

0300	TLI status query showed error

0400	TLI status query showed error

d5-d0 - Hexadecimal raw data bytes relating to the failed diagnostic detected.

These data bytes can only be interpreted by a Lucent Technologies design engineer.

cc - Hexadecimal condition code

cc	<i>Explanation</i>

02	Subject entity is not equipped

33	Wrong TLI type

8F	Can't lock or unlock ram database

AB	Bad sync mode

DGN,TSI,CFT,X

DIAGNOSE TIME SLOT INTERCHANGE

Explanation Of Command

This command requests diagnostics to be run on a specific time slot interchange.

The optional **CFT** field indicates which test(s) of the diagnostic is to be run under craft control. If this field is omitted, all tests of this diagnostic will be run.

If there are no mapped TSI slots, DACS II will respond with some tests failed (STF).

Command

[I.41221]

DGN:FRM xy,SEQ ww:TSI sft[,CFT X'vwxy]!

Completion Message

[O.41221]

M hh:mm:ss xy,ww n[vv] DGN TSI sft ATP COMPL

[O.41222]

M hh:mm:ss xy,ww n[vv] DGN TSI sft CATP cc COMPL

[O.41223]

**M hh:mm:ss xy,ww n[vv] DGN TSI sft STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL**

Denial Message

[O.41221.01]

M hh:mm:ss xy,ww n[vv] DGN TSI sft COND cc DNY

Autonomous Message

[O.41221]

I hh:mm:ss xy,ww DGN TSI sft ATP COMPL

[O.41222]

I hh:mm:ss xy,ww DGN TSI sft CATP cc COMPL

[O.41223]

M hh:mm:ss xy,ww DGN TSI sft STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

[O.41221.01]

I hh:mm:ss xy,ww DGN TSI sft COND cc DNY

Explanation Of Parameters

TSI - Time slot interchange
s - Cross-connect network side number (0 or 1)
f - FROM unit number (1 through 6)
t - TO unit number (1 through 6)

CFT - Craft

vwxy - Diagnostic test number

<i>Test</i>	vwxy
Output data checker exercise	0001
Memory test	0002
Memory diagnostic	0004
Address bus parity test	0008
Loss of clock exercise 2	0010
Loss of clock exercise 1	0020
Memory diagnostic exercise	0040
Control RAM checker exercise	0080
Communication test	0100
Memory and Alarms diagnostic(s)	0200

Note:

1. If the CFT field is omitted, all tests of this diagnostic will be run.
2. Tests 0200, 0040, 0020, 0010, 0004, and 0002 can only be run when the TSI is out-of-service. All other tests can be run when the TSI is in service.

ATP - All tests passed

CATP - Conditional all tests passed

STF - Some tests failed

ppqq - Trouble number for the craft

pp - Failing diagnostic number in hexadecimal form

qq - Test number in hexadecimal form.

ppqq	<i>Explanation</i>
011N	Address Bus Parity test: error bit not set. N is the circuit number where failure occurred: [0,f]
012N	Address Bus Parity test: error returns after clear. N is the circuit number where the failure occurred: [0,f]
013N	Status bit BUSERR not set
014N	Ccni error summary bit not set (involves ccni register, could be a ccni problem)
01B0	Ccni error summary not clear (involves ccni register, could be a ccni problem)
01F0	Software error
021N	LOTDEX2 test: error bit not set
0220	Error returns after clear
023N	Status bit not set
02F0	Software error
031N	LOTDEX1 test: error bit not set
0320	Error returns after clear
032N	LOTDEX1 test: error returns after clear. N is the circuit number where the failure occurred: [0,f]
033N	Status bit not set
03F0	Software error
041N	Error bit not set
0420	Software error
043N	Status bit not set
047N	ODEX test: exercise bit not set
051N	CREX test: error bit not set
0520	Error returns after clear
053N	Status bit not set
0540	Summary register on CCNI not set (NOTE this could be a CCNI problem)
05B0	Summary register on CCNI not cleared (NOTE this could be a CCNI problem)
05F0	Software error
064N	Memory test: overall error summary not set
066N	Value stored incorrectly in memory
06F0	Software error
072N	MEMDGN test: memory diagnostic failed
07F0	Software error
081N	Error bit not set
0820	Error returns after clear
084N	Overall summary bit not set
0850	MEMDGN/DGNEX test: Busy bit not set
08F0	Software error
0980	Communication test: Circuit pack id is wrong

099N	Circuit id is wrong
09F0	Software error
0A2N	RAM test: status register bit was set on ram test
0A6N	Value stored incorrectly in memory
0ABN	Error summary bit set during test
0AFN	Software error
0B00	Could not initialize pack

d5 - d0 - Raw data relating to the failed diagnostic detected.

Four hex digits each. Each data field contains sixteen bits. The significance of each data field and its individual bits is as follows:

d5 - CCNI Error Source Register 5

Bit	Explanation
15-8	Don't care
7	Error on autonomous switch enable circuit
6	Error on BSR parity
5	Parity error on high byte of data
4	Parity error on low byte of data
3	Address bus parity error
2	Synchronizer error
1	Error on CCB 6
0	Error on CCB 5

d4 - CCNI Error Source Register 4.

Each bit indicates an error on a pack connected to this CCNI

Bit	Explanation
15	Error on CCB 4
14	Error on CCB 3
13	Error on CCB 2
12	Error on CCB 1
11	Error on FTM 4, Unit 6
10	Error on FTM 3, Unit 6
09	Error on FTM 2, Unit 6
08	Error on FTM 1, Unit 6
07	Error on FTM 4, Unit 5
06	Error on FTM 3, Unit 5
05	Error on FTM 2, Unit 5
04	Error on FTM 1, Unit 5
03	Error on FTM 4, Unit 4
02	Error on FTM 3, Unit 4
01	Error on FTM 2, Unit 4
00	Error on FTM 1, Unit 4

d3 - CCNI Error Source Register 3.

Each bit indicates an error on a pack connected to this CCNI.

Bit	Explanation
15	Error on FTM 4, Unit 3
14	Error on FTM 3, Unit 3
13	Error on FTM 2, Unit 3
12	Error on FTM 1, Unit 3
11	Error on FTM 4, Unit 2
10	Error on FTM 3, Unit 2
09	Error on FTM 2, Unit 2
08	Error on FTM 1, Unit 2
07	Error on FTM 4, Unit 1
06	Error on FTM 3, Unit 1
05	Error on FTM 2, Unit 1
04	Error on FTM 1, Unit 1
03	Error on TSI 66
02	Error on TSI 56
01	Error on TSI 46
00	Error on TSI 36

d2 - CCNI Error Source Register 2.

Each bit indicates an error on a pack connected to this CCNI:

Bit	Explanation
15	Error on TSI 26
14	Error on TSI 16
13	Error on TSI 65
12	Error on TSI 55
11	Error on TSI 45
10	Error on TSI 35
09	Error on TSI 25
08	Error on TSI 15
07	Error on TSI 64
06	Error on TSI 54
05	Error on TSI 44
04	Error on TSI 34
03	Error on TSI 24
02	Error on TSI 14
01	Error on TSI 63
00	Error on TSI 53

d1 - CCNI Error Source Register 1.

Each bit indicates an error on a pack connected to this CCNI:

Bit	Explanation
15	Error on TSI 43
14	Error on TSI 33
13	Error on TSI 23
12	Error on TSI 13
11	Error on TSI 62
10	Error on TSI 52
09	Error on TSI 42
08	Error on TSI 32
07	Error on TSI 22
06	Error on TSI 12
05	Error on TSI 61
04	Error on TSI 51
03	Error on TSI 41
02	Error on TSI 31
01	Error on TSI 21
00	Error on TSI 11

d0 - Contents of Bus Status Register on CCNI

Bit	Explanation
15-04	Not used.
03	Indicates what side of the network is active. This bit is read by the unit controllers.
02	Indicates what side of the network is active. This bit is written by the MP.
01	ASE (Autonomous Switch Enable) bit 1 = ASE circuit controls the value of Bit 02 0 = MP controls the value of Bit 02 This bit is read by the units.
00	Odd parity over bits 02-00 of this register.

cc - Hexadecimal condition code

cc Explanation

02 Subject entity is not equipped
03 Subject entity is in service
1B CCN side s is in service
3D No mapped slots on a tsi
45 A DMB on the UNIT is OOS
50 Can't run test on active side
55 Invalid CFT code
56 Unrunnable CFT code

DGN,TSIS,CCN,ALL

DIAGNOSE TIME SLOT INTERCHANGES

Explanation Of Command

This command requests diagnostics to be run on all time slot interchangers (TSIs) on cross-connect side **s**.

Command

[I.41241]

DGN:FRM xy,SEQ ww:TSIS,CCN s,ALL!

Completion Message

[O.41241]

pahh:mm:ss xy,ww n[vv] DGN TSI ALL 5 LN MSG:

TOTAL TSIS tt

sft r nn	sft r nn	sft r nn	sft r nn	sft r nn	\
sft r nn					
sft r nn	sft r nn	sft r nn	sft r nn	sft r nn	\
sft r nn					
sft r nn	sft r nn	sft r nn	sft r nn	sft r nn	\
sft r nn	EOP				

pahh:mm:ss xy,ww n[vv] DGN TSI ALL 5 LN MSG:

TOTAL TSIS tt

sft r nn	sft r nn	sft r nn	sft r nn	sft r nn	\
sft r nn					
sft r nn	sft r nn	sft r nn	sft r nn	sft r nn	\
sft r nn					
sft r nn	sft r nn	sft r nn	sft r nn	sft r nn	\
sft r nn	COND cc COMPL				

Denial Message

[O.41241.01]

pahh:mm:ss xy,ww n[vv] DGN TSI ALL COND cc DNY

For any TSI that fails, the following message is also output:

[O.41223]

**pahh:mm:ss xy,ww n[vv] DGN TSI sft STF ppqq d5 d4 d3 d2 \
d1 d0 COMPL**

Autonomous Message

Not applicable.

Explanation Of Parameters

TSIS - Time slot interchangers

CCN - Cross-connect network

s - CCN side number

ALL - All

pa - Priority of action.

pa Explanation

M^ Manual response

I^ Information from an autonomous activity

(A "^" represents a blank space)

s - See s under CCN above

f - FROM Unit (1 through 6)

t - TO Unit (1 through 6)

r - Diagnostic status for individual TSI:

<i>r</i>	<i>Explanation</i>
A	ATP COMPL (All Tests Passed)
C	CATP COMPL (Conditional All Tests Passed)
S	STF COMPL (Some Tests Failed)
D	DNY (Deny)
-	unequipped TSIs

nn - Condition code for each TSI addressed (-- for unequipped TSIs)

To interpret values of nn use the cc table below.

TOT - Total

tt - Total number of TSIs diagnosed

cc - Hexadecimal condition code

cc	Explanation
02	Subject entity is not equipped
03	Subject entity is in service
1B	CCN side s is in service
3D	No mapped slots on a tsi
45	A DMB on the UNIT is OOS
50	Can't run test on active side
55	Invalid CFT code
56	Unrunnable CFT code

DGN,TSIS,CCN,UNIT,CONN

DIAGNOSE TIME SLOT INTERCHANGES

Explanation Of Command

This command requests diagnostics to be run on all time slot interchangers (TSIs) between **UNIT-q** and the specified units. If the optional connectivity field is omitted, then all TSIs connected to **UNIT-q** will be diagnosed.

Command

[I.41232]

DGN:FRM xy,SEQ ww:TSIS,CCN s,UNIT q,\
[,CONN(a[,b[,c[,d[,e[,f]]]]))]]!

Completion Message

[O.41232]

```
M hh:mm:ss xy,ww n[vv] DGN TSIS CCN s UNIT q[ CONN \  
[ a[ b[ c[ d[ e[ f]]]]]] e LN MSG:  
sft r nn    sft r nn    sft r nn    sft r nn    sft r nn    \  
sft r nn  
.  
.  
.  
sft r nn    sft r nn    sft r nn    sft r nn    sft r nn    \  
sft r nn    COND cc COMPL
```

Note: There are up to six sets of data on each line and up to six data lines.

Denial Message

[O.41232.01]

M hh:mm:ss xy,ww n[vv] DGN TSIS CCN s UNIT q\
[CONN [a[b[c[d[e[f]]]]]]] COND cc DNY

Autonomous Message

[O.41232]

I hh:mm:ss xy,ww n[vv] DGN TSIS CCN s UNIT q[CONN \
[a[b[c[d[e[f]]]]]]] e LN MSG:
sft r nn sft r nn sft r nn sft r nn sft r nn \
sft r nn
.
.
.
sft r nn sft r nn sft r nn sft r nn sft r nn \
sft r nn COND cc COMPL

Note: There are up to six sets of data on each line and up to six data lines.

[O.41232.01]

M hh:mm:ss xy,ww n[vv] DGN TSIS CCN s UNIT q[CONN \
[a[b[c[d[e[f]]]]]]] COND cc DNY

Explanation Of Parameters

TSIS - Time slot interchangers

CCN - Cross-connect network

s - Cross-Connect Network side number (0 or 1)

UNIT - Unit

[q]q - Unit number (1 through 16)

CONN - Unit connection

a, b, c, d, e, f

- Connected unit number

If the connected unit field is omitted, then all TSIs connected to the specified unit will be diagnosed.

sft - TSI identifier

s - See s under CCN above

f - FROM Unit

t - TO Unit

e - Number of lines in the message

r - Diagnostic status for an individual TSI

r *Explanation*

A ATP COMPL (All Tests Passed)

C CATP COMPL (Conditional All Tests Passed)

S STF COMPL (Some Tests Failed)

D DNY (Deny)

- unequipped TSIs

nn - Condition code for each TSI addressed (-- for unequipped TSIs)

See cc below to interpret values of nn.

cc - Hexadecimal condition code

cc **Explanation**

02 **Subject entity is not equipped**

45 **A DMB on the UNIT is 00S**

DGN,UNIT,DSPI,CFT,X

DIAGNOSE DSPU

Explanation Of Command

This message requests diagnostics to be run on the specified unit's digital signal processing interface.

Command

[I.41341]

DGN:FRM xy,SEQ ww:UNIT [q]q,DSPI[,CFT X'vwxy]!

Completion Message

[O.41341]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q DSPI ATP COMPL

[O.41342]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q DSPI CATP cc COMPL

[O.41343]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q DSPI STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2><d1> <d0> COMPL

Denial Message

[O.41341.01]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q DSPI COND cc DNY

Autonomous Message

[O.41341]

I hh:mm:ss xy,ww DGN UNIT [q]q DSPI ATP COMPL

[O.41342]

I hh:mm:ss xy,ww DGN UNIT [q]q DSPI CATP cc COMPL

[O.41343]

I hh:mm:ss xy,ww DGN UNIT [q]q DSPI STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

[O.41341.01]

I hh:mm:ss xy,ww DGN UNIT [q]q DSPI COND cc DNY

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

DSPI - Digital signal processing interface

CFT - Craft

vwxy - Diagnostic test number

Test	vwxy
Processor bus parity checker test (in-service test)	0001
Interrupt and mask register test (in-service test)	0002
Serial interface (in-service test)	0004
Serial interface (out-of-service test)	0008

The optional CFT field is used to indicate which diagnostic test(s) is to be run. If this field is omitted, all DSPI diagnostic tests will be run.

ATP - All tests passed

CATP - Conditional all tests passed

cc - Hexadecimal completion condition code for CATP

<i>cc</i>	<i>Explanation</i>
03	Subject entity is in-service
37	DSPI out-of-service
44	DSPI is out-of-service; Digital Signaling Processing Circuit (DSPC) is in-service.

STF - Some tests failed

ppqq - Trouble number for the craft

pp Failing diagnostic number in hexadecimal form
qq Test number in hexadecimal form.

<i>ppqq</i>	<i>Explanation</i>
0100	MP Fail
0600	EMTC/MTC Interrupt Fail
0A01	EBX/BX RAM Data Fail
0B00	EBX/BX Interrupt Fail
0C00	EBX/BX Acknowledge Fail

d5 - d0 - Hexadecimal raw data bytes relating to the failed diagnostic detected.

<i>Data Byte</i>	<i>Description</i>
d5	Upper byte of interrupt register 0
d4	Lower byte of interrupt register 0
d3	Interrupt register 1
d2	Upper byte of side 0 service register 0
d1	Lower byte of side 0- service register 0
d0	Unused

cc - Hexadecimal condition code

cc	Explanation
10	Unit is not equipped
11	UC is out of service
36	DSPI not equipped
4D	DSPI is in service
55	Invalid CFT code
56	Unrunnable CFT code

DGN,UNIT,FC,CFT,X

DIAGNOSE FORMAT CONVERTER

Explanation Of Command

This command requests diagnostics to be run on the specified format converter **UNIT-q**.

Command

[I.41331]

DGN:FRM xy,SEQ ww:UNIT [q]q,FC sb[,CFT X'vwxy]!

Completion Message

[O.41331]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q FC sb ATP COMPL

[O.41332]

M hh:mm:ss xy,ww n[vv] DGN UNIT qq FC sb e LN MSG:
[UPN=<upn> XPN=<xpn>[BIT={TD|RD}bb]]
STF ppqq d5 d4 d3 d2 d1 d0 COMPL

[O.41333]

M hh:mm:ss xy,ww n[vv] DGN UNIT qq FC sb CATP COND kk COMPL

Denial Message

[O.41331.01]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q FC sb COND cc DNY

Autonomous Message

[O.41331]

I hh:mm:ss xy,ww DGN UNIT [q]q FC sb ATP COMPL

[O.41332]

I hh:mm:ss xy,ww DGN UNIT qq FC sb e LN MSG:
[UPN=<upn> XPN=<xpn>[BIT={TD|RD}bb]]
STF ppqq d5 d4 d3 d2 d1 d0 COMPL

[O.41333]

I hh:mm:ss xy,ww DGN UNIT qq FC sb CATP COND kk COMPL

[O.41331.01]

I hh:mm:ss xy,ww DGN UNIT [q]q FC sb COND cc DNY

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FC - Format converter

s - Side number (0 or 1)

b - FC number (1 through 4)

CFT - Craft

vwxy - Diagnostic test number

<i>Test</i>	<i>vwxy</i>
CI device test	0001
Receiver test	0002
Transmitter test	0004

The optional craft diagnostic test number indicates which test(s) of the diagnostic is to be run under craft control. If this number is omitted, all tests including the continuity check will be run.

ATP - All tests passed

STF - Some tests failed

e - Number of lines in the segment (2 or 3)

- UPN** - Unit plug number
- upn** - The value of UPN.
- XPN** - ECCN plug number
- xpn** - The value of XPN
- BIT** - Bit number of the data bus
- TD** - Transmit data
- RD** - Receive data
- bb** - Bit number (00 through 15)

The optional line which contains the unit, plug, and bit information will only be output if continuity checks between the NPC and the ECCN failed. The bit number (i.e., BIT={TD|RD}bb) will be shown if software identifies the bit of the data bus as the failed one. The optional line will always be output with the STF keyword. Valid values of the UPN and XPN are shown below. Note that the numbers shown in the output are exactly the same as the numbers on the backplane.

Unit Plug Number(FIB†)	Unit Plug Number(OIB‡)	ECCN Plug Number	Direction	Corresponding FC
P01	P02	PqqA*	Receive	FC 01
P02	P01	PqqE	Transmit	FC 01
P03	P07	PqqB	Receive	FC 02
P04	P06	PqqF	Transmit	FC 02
P05	P12	PqqC	Receive	FC 03
P06	P11	PqqG	Transmit	FC 03
P07	P17	PqqD	Receive	FC 04
P08	P16	PqqH	Transmit	FC 04
P10	P05	PqqA	Receive	FC 11
P11	P04	PqqE	Transmit	FC 11
P12	P10	PqqB	Receive	FC 12
P13	P09	PqqF	Transmit	FC 12
P14	P15	PqqC	Receive	FC 13
P15	P14	PqqG	Transmit	FC 13
P16	P20	PqqD	Receive	FC 14
P17	P19	PqqH	Transmit	FC 14

* qq is the unit number

† FIB - Flexible Interface Bay

‡ OIB - Original Interface Bay

ppqq	- Trouble number for the craft (STF code)	
pp	Failing diagnostic number in hexadecimal form	
qq	Test number in hexadecimal form.	
<i>ppqq</i>	<i>Explanation</i>	
0100	CI device test fail	
0200	Receiver test fail	
0300	Transmitter test fail	
0F00	Error Summary Failure	
0F01	Hardware Fail on ECCI pack	
0F02	Hardware Fail on ETSI pack	
0F03	RCV Network Data Bus Failure badbit, baddirection & badport	
0F04	RCV Network Data Bus Failure baddirection & badport	
0F05	XMIT Network Data Bus Failure badbit, baddirection & badport	
0F06	XMIT Network Data Bus Failure baddirection & badport	
0F07	Pack hardware failure	
0F08	Pack Failed to Initialize for CT	
0F09	NPC failed when sourcing	
0F0A	Parent pack failed. For DSP packs DSPI. For FC, FTMI. For FMT, UA.	
0F0D	FC RCV Port alarms before RCV continuity Test	
0F0E	FC RCV Port alarms after sourcing from MXR/DDC pack	
d5-d0	- Hexadecimal raw data bytes relating to the failed diagnostic detected.	
<i>Byte</i>	<i>Explanation</i>	
d5	Communication interface error source register 0 (ESR0)	
d4	Receive formatter (RF) ESR0	
d3	RF ESR1	
d2	RF ESR2	
d1	RF STATUS	
d0	Transmit formatter (TF) STATUS	
CATP	- Conditional all test passed on the diagnostic of FC	
kk	- Hexadecimal completion condition code	
	To interpret values of kk see cc below.	

cc - Hexadecimal condition code

cc Explanation

- 10** Unit is not equipped
- 11** UC is out of service
- 13** FTMI is not equipped
- 14** FTMI is out of service
- 55** Invalid CFT code
- 56** Unrunnable CFT code
- C3** XMIT continuity test
won't be run: CFT code
specified
- C4** XMIT continuity test
won't be run: no XMIT
timeslots available
- C5** RCV continuity test
won't be run: no
available inservice
NPCS for FC/FMT
- C6** No available timeslots
on any of the
inservice NPCS
associated with FC/FMT
- C7** RCV continuity test
won't be run: no DMB
timeslots available
- CC** RCV continuity test
won't be run: SYNC OOS
or pested

DGN,UNIT,FLI,CFT,X

DIAGNOSE FLI

Explanation Of Command

This message requests the diagnostic of one facility line interface (FLI) in a DS3 Unit (DS3U) or a Hybrid DS3 Unit (HDS3U). This message can also be autonomously invoked by error recovery and restoration routines.

Command

[I.41401]

DGN:FRM xy,SEQ ww:UNIT [q]q,FLI k[,CFT X'vwxy]!

Completion Message

[O.41401]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q FLI k ATP COMPL

[O.41402]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q FLI k CATP cc COMPL

[O.41403]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q FLI k STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

Denial Message

[O.41401.01]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q FLI k COND cc DNY

Autonomous Message

[O.41401]

I hh:mm:ss xy,ww DGN UNIT [q]q FLI k ATP COMPL

[O.41402]

I hh:mm:ss xy,ww DGN UNIT [q]q FLI k CATP cc COMPL

[O.41403]

I hh:mm:ss xy,ww DGN UNIT [q]q FLI k STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

[O.41401.01]

I hh:mm:ss xy,ww DGN UNIT [q]q FLI k COND cc DNY

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FLI - Facility line interface

k - FLI identifier

<i>k</i>	<i>Explanation</i>
S	Service FLI
P	Protection FLI

CFT - Craft

vwxy - Diagnostic test number

<i>Test</i>	<i>vwxy</i>
CI device tests	0001
FLI ESR test	0002
Lock and Key Error Detector Test	0004
Loss of Signal and Loss of Clock tests	0008
LBO control test	0010
FSM test	0020*
FLI/MXR Bent Pin/Continuity Test	0040†

Unless otherwise designated, the above tests can only be executed when the entity is out of service. If no craft code is specified, all tests will be executed.

Note: *This test can be executed at any time.

†This test is an inservice-only test that requires the other FLI and at least one MXR to be inservice.

ATP - All tests passed

CATP - Conditional all tests passed

STF - Some tests failed

ppqq - Failed test number in hexadecimal form

<i>ppqq</i>	<i>Description</i>
0001	FLI not physically present
0002	FLI initialization Failed
0003	FLI CI device is not in-service
1000	FLI CI device Tests Failed
2000	FLI ESR Test Failed
3000	FLI Lock and Key Error Detector Test Failed
4000	FLI LOS/LOC Test Failed
5000	FLI LBO Test Failed
6000	FLI FSM Test Failed
7000	FLI/MXR Bent Pin/Continuity Test Failed

d5-d0 - Hexadecimal raw data fields relating to the failed diagnostic detected.

cc - Hexadecimal condition code

cc *Explanation*

- 03** Subject entity is in service
- 04** Subject entity is out of service
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 55** Invalid CFT code
- 56** Unrunnable CFT code
- 40** The service FLI is out of service or pested (TOSRVC option)
- 41** The protection FLI is out of service or pested (TOPRTN option)
- E8** Other FLI is OOS
- E9** There are no INS MXRs to run test on
- 37** Selected FLI has LOC with at least one inservice MXR
- 38** Unselected FLI has LOS with at least one inservice MXR
- 39** MXR LOS with unselected FLI

DGN,UNIT,FMT,CFT,X

DIAGNOSE FMT

Explanation Of Command

This message requests the diagnostic of one formatter (FMT) in a DS3 unit or one hybrid formatter (HFMT) in a Hybrid DS3 unit (HDS3U). This message can also be autonomously invoked by error recovery and restoration routines.

Command

[I.41411]

DGN:FRM xy,SEQ ww:UNIT [q]q,FMT s[,CFT X'vwxy]!

Completion Message

[O.41411]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q FMT s ATP COMPL

[O.41412]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q FMT s CATP cc \
{COMPL|3 LN MSG:}
[upn xpn nn upn xpn nn upn xpn nn upn xpn nn]
[upn xpn nn upn xpn nn upn xpn nn upn xpn nn COMPL]

[O.41413]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q FMT s STF ppqq e LN MSG:
[UPN=<upn> XPN=<xpn>[BIT={TD|RD}bb]]
d5 d4 d3 d2 d1 d0 COMPL

Denial Message

[O.41411.01]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q FMT s COND cc DNY

Autonomous Message

[O.41411]

I hh:mm:ss xy,ww DGN UNIT [q]q FMT s ATP COMPL

[O.41412]

I hh:mm:ss xy,ww DGN UNIT [q]q FMT s CATP cc \
{COMPL|3 LN MSG:}
[upn xpn nn upn xpn nn upn xpn nn upn xpn nn]
[upn xpn nn upn xpn nn upn xpn nn upn xpn nn COMPL]

[O.41413]

I hh:mm:ss xy,ww DGN UNIT [q]q FMT s STF ppqq e LN MSG:
[UPN=<upn> XPN=<xpn>[BIT={TD|RD}bb]]
d5 d4 d3 d2 d1 d0 COMPL

[O.41411.01]

I hh:mm:ss xy,ww DGN UNIT [q]q FMT s COND cc DNY

Explanation Of Parameters

UNIT - Unit
[q]q - Unit number (1 through 16)
FMT - Format converter or Hybrid Format converter
s - FMT or HFMT side identifier

s	Explanation
0	CCN side 0
1	CCN side 1

CFT - Craft

vwxy - Diagnostic test number

<i>Test</i>	<i>vwxy</i>
FMT Communication Interface device Test	0001*
FMT MXR Protection Switch Test	0002
FMT Receive Formatter device Test	0004
FMT Transmit Formatter device Test	0008
HFMT T1/E1 Provisioning register Test	0010***
HFMT Control FPGA device Test	0020***
HFMT T1 Cable and State Machine Test	0040**
HFMT E1 Cable and State Machine Test	0080**
HFMT Hybrid Formatter Exercise register Test	0100**

Notes: * This test can only be executed when the entity is out of service.
 ** These craft codes can only be used for Hybrid Formatters
 *** This craft code can only be used for Hybrid Formatters and only if that Formatter is out-of-service.

If no craft code is specified, all tests including the continuity check will be executed. The E1 tests apply only to hybrid formatters.

ATP - All tests passed

CATP - Conditional all tests passed

nn - Hexadecimal condition code shown in the CATP output to indicate continuity test condition on each individual port

STF - Some tests failed

ppqq - Failed test number in hexadecimal form.
The E1 tests are only valid for hybrid formatters

<i>ppqq</i>	<i>Description</i>
0001	FMT is not physically present
0002	FMT initialization failed
0003	Unable to read FMT RAM Mask
0004	Unable to restore FMT RAM Mask
0005	Invalid Circuit Pack Id
0100	FMT CI Test Failed
0200	FMT MPS Test Failed
0300	FMT Receive Formatter Test Failed
0400	FMT Transmit Formatter Test Failed
0800*	HFMT Control FPGA Test Failed
0801*	HFMT Exercise Register Test Failed
0802*	HFMT T1/E1 Provisioning Test Failed
0F00	Cable Test Error Summary Failure
0F01	Hardware Fail on ECCI pack
0F02	Hardware Fail on ETSI pack
0F03	RCV Network Data Bus Failure badbit, baddirection & badport
0F04	RCV Network Data Bus Failure baddirection & badport
0F05	XMIT Network Data Bus Failure badbit, baddirection & badport
0F06	XMIT Network Data Bus Failure baddirection & badport
0F07	Pack hardware failure
0F08	Pack Failed to Initialize for CT
0F09	NPC failed when sourcing
0F0A	Parent pack failed. UA or UH pack.
0F0D	FMT RCV Port alarms before RCV Continuity Test
0F0E	FMT RCV Port alarms after sourcing from MXR pack

Note: * These values apply to the Hybrid Formatter only

d5-d0 - Raw data

Hexadecimal raw data fields relating to the failed diagnostic detected.
The assignment of these data bytes is not fixed but varies with the failure detected. Interpretation of the information requires access to the software and to the programmer that wrote it.

e - Number of lines in the segment (2 or 3)

UPN - Unit plug number

upn - Value of the UPN

XPN - ECCN Plug Number
xpn - Value of the XPN
BIT - Bit
TD - Transmit data
RD - Receive data
bb - Bit number (00 through 15)

For the STF output, the optional line which contains the unit, port, and pin information will only be output if the continuity check between the format converter and its corresponding ETSI is failed. Valid values of the UPN and XPN are shown below. Note that the numbers shown in the output are exactly the same as the numbers on the backplane.

Unit Plug Number	ECCN Plug Number	FMT Number	Direction
P01	PqqA*	FMT 0	Receive
P02	PqqE	FMT 0	Transmit
P03	PqqB	FMT 0	Receive
P04	PqqF	FMT 0	Transmit
P05	PqqC	FMT 0	Receive
P06	PqqG	FMT 0	Transmit
P07	PqqD	FMT 0	Receive
P08	PqqH	FMT 0	Transmit
P10	PqqA	FMT 1	Receive
P11	PqqE	FMT 1	Transmit
P12	PqqB	FMT 1	Receive
P13	PqqF	FMT 1	Transmit
P14	PqqC	FMT 1	Receive
P15	PqqG	FMT 1	Transmit
P16	PqqD	FMT 1	Receive
P17	PqqH	FMT 1	Transmit

* qq is the unit number

The bit number (i.e., BIT={TD|RD}bb) will be shown if software identifies the bit of the data bus as the failed one.

For the CATP output, the optional output line related to continuity test will be shown only if there is at least one port that cannot be diagnosed. The UPN and XPN numbers of the port(s) that is(are) not diagnosed will be output, while those that passed the diagnostic will be represented by dashes (--). The port number will be output in ascending order by UPN number. That is, for side 0, the output will be from P1 to P8, and for side 1 it will be from P10 to P17.

Note that the STF output will supersede the CATP output. That is, as long as there is one port that failed the diagnostic, DACS II must output the STF message without concern about a port that cannot be diagnosed.

cc - Hexadecimal condition code

cc *Explanation*

- 03** Subject entity is in service
- 04** Subject entity is out of service
- 05** Subject entity is pested
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 55** Invalid CFT code
- 56** Unrunnable CFT code
- C3** XMIT continuity test won't be run: CFT code specified
- C4** XMIT continuity test won't be run: no XMIT timeslots available
- C5** RCV continuity test won't be run: no available inservice NPCPS for FC/FMT
- C9** CATP due to skipping continuity test for FMT
- CC** RCV continuity test won't be run: SYNC OOS or pested
- 57** Specified CFT code only valid on CEF Frame

DGN,UNIT,FTMI,CFT,X

DIAGNOSE FACILITY TERMINATING MODULE INTERFACE

Explanation Of Command

This message requests diagnostics to be run on the unit's facility terminating module interface.

Command

[I.41321]

DGN:FRM xy,SEQ ww:UNIT [q]q,FTMI d[,CFT X'vwxy]!

Completion Message

[O.41321]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q FTMI d ATP COMPL

[O.41322]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q FTMI d STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

Denial Message

[O.41321.01]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q FTMI d COND cc DNY

Autonomous Message

[O.41321]

I hh:mm:ss xy,ww **DGN UNIT** [q]q **FTMI** d **ATP** **COMPL**

[O.41322]

I hh:mm:ss xy,ww **DGN UNIT** [q]q **FTMI** d **STF** ppqq **2 LN MSG:**
<d5> <d4> <d3> <d2> <d1> <d0> **COMPL**

[O.41321.01]

I hh:mm:ss xy,ww **DGN UNIT** [q]q **FTMI** d **COND** cc **DNY****Explanation Of Parameters**

UNIT	- Unit
[q]q	- Unit number (1 through 16)
FTMI	- Facility Terminating Module Interface
d	- FTMI number (1 through 4)
CFT	- Craft
vwxy	- Diagnostic test number

<i>Test</i>	<i>vwxy</i>
Register test	0001
Address parity test	0002
High data parity test	0004
Low data parity test	0008
CI A data strobe test	0010
CI A pack id test	0020
CI B data strobe test	0040
CI B pack id test	0080
CI C data strobe test	0100
CI C pack id test.	0200

All tests listed above can be run in-service.

Note: The optional **CFT** field indicates which test(s) of the diagnostic is to be run under craft control. If this field is omitted, all tests of this diagnostic will be run.

ATP - All tests passed

STF - Some tests failed

ppqq - Trouble number for the craft

pp Failing diagnostic number in hexadecimal form

qq Test number in hexadecimal form.

ppqq Explanation

0100 Register Test Fail

0200 Address Parity Test Fail

0300 High Data Parity Test Fail

0400 Low Data Parity Test Fail

0500 Data Strobe A Test Fail

0600 Pack ID A Test Fail

0700 Data Strobe B Test Fail

0800 Pack ID B Test Fail

0900 Data Strobe C Test Fail

0A00 Pack ID C Test Fail

d5-d0 - Raw data

Hexadecimal raw data bytes relating to the failed diagnostic detected.

These data bytes are only used for system development.

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

11 UC is out of service

13 FTMI is not equipped

55 Invalid CFT code

56 Unrunnable CFT code

DGN,UNIT,MIU,CFT,X

DIAGNOSE MIU

Explanation Of Command

This message requests the diagnostic of one Multiplexer Interface Unit (MIU) in a DS3 Unit. This message can also be autonomously invoked by error recovery and restoration routines.

Command

[I.41431]

DGN:FRM xy,SEQ ww:UNIT [q]q,MIU c[,CFT X'vwxy]!

Completion Message

[O.41431]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q MIU c ATP COMPL

[O.41432]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q MIU c CATP cc COMPL

[O.41433]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q MIU c STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

Denial Message

[O.41431.01]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q MIU c COND cc DNY

Autonomous Message

[O.41431]

I hh:mm:ss xy,ww DGN UNIT [q]q MIU c ATP COMPL

[O.41432]

I hh:mm:ss xy,ww DGN UNIT [q]q MIU c CATP cc COMPL

[O.41433]

I hh:mm:ss xy,ww DGN UNIT [q]q MIU c STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

[O.41431.01]

I hh:mm:ss xy,ww DGN UNIT [q]q MIU c COND cc DNY

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MIU - Multiplexer interface unit

c - the number of the MIU within the unit ($P, 1 \leq c \leq 6$)

CFT - Craft

vwxy - Diagnostic test number (hexadecimal)

Test	vwxy
MIU Sanity test	0001*
Facility (NPC level) test	0002*
MXR Interface test	0004
MIU timer test	0008

*This test can only be executed if the entity is out of service.
If no craft code is specified, all tests will be executed.

ATP - All tests passed

pa - Priority of action

pa Explanation

M^ Manual

I^ Information

^ represents a blank character

CATP - Conditional all tests passed

STF - Some tests failed

ppqq - Failed test number in hexadecimal form

<i>ppqq</i>	<i>Description</i>
0001	MIU not physically present
0002	MIU pack type not readable
0003	MIU software download failed
0004	MIU initialization of MXR TX devices failed
0005	MIU provisioning of MXR TX devices failed
0006	MIU initialization #1 of MXR failed
0007	MIU initialization #2 of MXR failed
0008	MIU initialization of MXR CC devices failed
0100	MIU Sanity test failed
0200	MIU Facility data link test failed (OOS)
0300	MIU/MXR HSCC test failed (OOS)
0301	MIU/MXR HSCC test failed (IS)
0400	MIU Timer test failed (OOS)
0401	MIU Timer test failed (IS)

d5-d0 - Hexadecimal raw data fields relating to the failed diagnostic detected.

cc - Hexadecimal condition code

cc *Explanation*

03	Subject entity is in service
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
1B	Required MXR not equipped, not in service, or failed
55	Invalid CFT code
56	Unrunnable CFT code
B3	MIU is already in service
BF	MIU is not equipped
9B	The MXR is not grown
B0	FLI is out of service
B1	FMT is out of service
B2	MXR is out of service
06	Mismatch between MXR and MIU HDW types

DGN,UNIT,MXR,DEV,CFT,X

DIAGNOSE MXR

Explanation Of Command

This message requests the diagnostic of an individual multiplexer (MXR/EMXR) in a DS3 or hybrid DS3 unit, or an individual hybrid multiplexer (HMXR) in a hybrid DS3 unit. This message can also be autonomously invoked by error recovery and restoration routines.

Command

[I.41421]

DGN:FRM xy,SEQ ww:UNIT [q]q,MXR c[,DEV devc[,CFT X'vwxy]]!

Completion Message

[O.41421]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q MXR c[DEV devc \
[CFT X'vwxy]] ATP COMPL

[O.41422]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q MXR c[DEV devc \
[CFT X'vwxy]] CATP cc COMPL

[O.41423]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q MXR c[DEV devc \
[CFT X'vwxy]] 2 LN MSG:
STF ppqq d5 d4 d3 d2 d1 d0 COMPL

[O.41421.01]

Autonomous Message

Explanation Of Parameters

<i>devc</i>	<i>Device Description</i>	
DS3	General devices	
	<i>Test</i>	<i>vwxy</i>
	UA interface Address Parity Test	0001
	Error Source/Mask Register	0002
	PLL Out of Lock (MXR/EMXR only)	
	- DS3 LOC test	0004
	UA Sanity - Shared RAM	0008
M13	M12 and M13 devices	
	<i>Test</i>	<i>vwxy</i>
	M13 Muldem Tests	0001
	MXR/HMXR/FLI Bent Pin/Continuity Test	0002+

PIF	Processor Interface	
	<i>Test</i>	<i>vwxxy</i>
	PIF Bus Parity Detector (MXR only)	0001
HSC	High-level Serial Communication Controller	
	<i>Test</i>	<i>vwxxy</i>
	HSC Stuck Bit/Internal Loopback Test	0001
CCxx	DS1 Channel Controllers (xx = 00 (all); xx = 01 through 14)	
	<i>Test</i>	<i>vwxxy</i>
	DS1 CC Address Parity Test	0001
	DS1 CC Stuck Bit of Config. Register Test	0002
	DS1 CC IR Stuck Bit and Parity Check	0004
	DS1 CC Loss of Clock/Sync Error Test	0008*
	DS1 CC Configuration Register Parity	0010*
	DS1 CC Transmit/Receive Data Parity	0020
	DS1 CC Data Parity Exercise	0040
ECxx	E1 Channel Controllers (xx = 00 (all); xx = 01 through 14)	
	<i>Test</i>	<i>vwxxy</i>
	E1 CC Address Parity Test	0001
	E1 CC IR Stuck Bit and Parity Check	0002
	E1 CC Loss of Clock/Sync Error Test	0004
	E1 CC Transmit/Receive Data Parity	0008
	E1 CC Data Parity Exercise	0010
TXyy	DS1 Transceiver devices (yy = 00 (all); yy = 01 through 28)	
	<i>Test</i>	<i>vwxxy</i>
	DS1 Mode Independent System Tests	0001
	DS1 Mode Dependent System Tests.	0002

EXyy	E1 Transceiver devices (yy = 00 (all); yy = 01 through 27) (E1 Transceivers 4, 8, 12, 16, 20, 24, and 28 do not exist)

Test

wxy

E1 Transceiver System Tests

0001

Unless otherwise designated, the above tests can only be executed when the entity is out of service.

*These tests can be executed at any time when diagnosing an MXR or EMXR.
However, for a Hybrid MXR these tests can only be executed when the Hybrid MXR is out-of-service.

†This test is an in-service-only test that requires this entity and both FLIs to be in-service.

If no device (devc) is specified, all tests on the MXR will be executed.

If a test number (vwxy) is not specified, all tests related to devc will be executed.

ATP - All tests passed

CATP - Conditional all tests passed

cc - Hexadecimal condition code

STF - Some tests failed

ppqq - Failed test number

<i>ppqq</i>	<i>Description</i>
0001	MXR is not plugged in
0002	MXR Initialization failure
0003	Hardware not ready after reset
0004	Hardware reset failed
0009	MXR/Unit Database failure
000A	Failure to read MXR HDW type
000B	MXR Database failure
0010	HDW/SW mismatch of FLI selection
0011	Failure to clear alarms
0012	Failure to mask MXR on FLI
0013	Unable to loopback MXR on FLI
0020	NPC database failure
0100	UC Interface/Address parity failure
0200	Error Source/Mask failure
0300	PLL Out-of-Lock(MXR/EMXR only)/DS3 LOC failure
0400	UA Sanity/Shared RAM failure
0500	MXR/EMXR M13 Muldem failure
0600	DS1 CC Address Parity failure
0700	DS1 CC Stuck Bit in CNFR Register failure
0800	DS1 CC IR Stuck Bit/Parity Check failure
0900	DS1 CC LOC/Sync Error failure
1000	DS1 CC Receive Data Parity failure
1100	DS1 CC Transmit Data Parity failure
1200	DS1 CC Data Parity Exercise failure
1300	HSCC Stuck Bit/Internal Loopback failure
1400	DS1 Mode Independent Tests failure
1500	DS1 Mode Dependent Tests failure
1600	PIF Bus Parity Detector failure (MXR only)
1700	FLI/MXR BENT PIN Test failure
1800	Downloadable Diagnostic failure
1900	HMXR M13 failure
2000	E1 CC Address Parity failure
2200	E1 CC IR Stuck Bit/Parity Check failure
2300	E1 CC LOC/Sync Error failure
2400	E1 CC Receive Data Parity failure
2500	E1 CC Transmit Data Parity failure
2600	E1 CC Data Parity Exercise failure
2700	E1 Transceiver System Tests failure

d5-d0 - Raw data

Hexadecimal raw data fields relating to the failed diagnostic detected

cc - Hexadecimal condition code

cc *Explanation*

- 02** Subject entity is not equipped
- 03** Subject entity is in service
- 04** Subject entity is out of service
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 43** (NPC) Hardware mismatch
- 1A** Required FLI not equipped, not in service, or failed
- 1C** Req'd FMT not eq'd, not IS, or failed, or inactive side FMT not eq'd, or not IS
- 55** Invalid CFT code
- 56** Unrunnable CFT code
- 99** No Facility Line Interface (FLI) is In Service
- 9B** The MXR is not grown
- B0** FLI is out of service
- B1** FMT is out of service
- 37** Selected FLI has LOC with at least one in-service MXR
- 38** Unselected FLI has LOS with at least one in-service MXR
- 39** MXR LOS with unselected FLI

DGN,UNIT,UC,CFT,X

DIAGNOSE UNIT CONTROLLER

Explanation Of Command

This command requests diagnostics to be run on the specified unit controller.

Command

[I.41311]

DGN:FRM xy,SEQ ww:UNIT [q]q,UC[,CFT X'vwxy]!

Completion Message

[O.41311]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q UC ATP COMPL

[O.41312]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q UC CATP cc COMPL

[O.41313]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q UC STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2><d1> <d0> COMPL

Denial Message

[O.41311.01]

M hh:mm:ss xy,ww n[vv] DGN UNIT [q]q UC COND cc DNY

Autonomous Message

[O.41311]

I hh:mm:ss xy,ww DGN UNIT [q]q UC ATP COMPL

[O.41312]

I hh:mm:ss xy,ww DGN UNIT [q]q UC CATP cc COMPL

[O.41313]

I hh:mm:ss xy,ww DGN UNIT [q]q UC STF ppqq 2 LN MSG:
<d5> <d4> <d3> <d2> <d1> <d0> COMPL

[O.41311.01]

I hh:mm:ss xy,ww DGN UNIT [q]q UC COND cc DNY

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

UC - Unit controller

CFT - Craft diagnostic test code

vwxy - Diagnostic test number (hexadecimal)

<i>Test</i>	<i>vwxy</i>
UC RAM test (out-of-service test)	0001
UC ROM test (in-service test)	0002
UC timer test (in-service test)	0004
UC DMA test (out-of-service test)	0008
UC LAN test (out-of-service test)	0010
UC bus error test (in-service test)	0020
UBX register test (out-of-service test)	0040
UBX sanity test (out-of-service test)	0080

Notes:

1. The optional **CFT** field indicates which test(s) of the diagnostic is to be run under craft control. If this field is omitted, all tests of this diagnostic will be run.
2. Out-of-service diagnostics on the UC will run successfully only if the UC circuit pack is present in the frame and the diagnostic program can communicate with the unit. Otherwise, this message will be denied.
3. The UC DMA test cannot be run on the KER6 Unit Controller which is used on Hybrid DS3Us and DS3Us that are shipped with Release 8.0 and later

Releases.

4. The UBX tests are only valid on FTUs and IFTUs.

ATP - All tests passed

CATP - Conditional all tests passed
The reason for the conditional completion is indicated by cc.

STF - Some tests failed

ppqq - Trouble number for the craft (hexadecimal)

pp Failing diagnostic number
qq Test number

ppqq Explanation

0101	RAM Test Failed - Data Error
0102	RAM Test Failed - Address Error
0103	RAM Test Failed - Access Error
0104	RAM Test Failed - Refresh Error
0105	RAM Test Failed - Parity Error
0200	ROM Test Failed
0400	Timer Test Failed - Timer Error
0500	Timer Test Failed - Input Port Error
0600	DMA Test Failed
0700	LAN Test Failed
0900	Bus Error Test Failed
0A00	UBX Register Test Failed
0B00	UBX Sanity Test Failed

d5 - d0 - Hexadecimal raw data bytes relating to the failed diagnostic detected.

Data Byte Value

d5	Unused
d4	Unused
d3	Unused
d2	Unused
d1	Unused
d0	Unused

For in-service UC:

- In-service tests will return ATP (All Tests Passed)
- Out-of-service tests will return CATP (Conditional All Tests Passed)

For out-of-service UC:

- In-service tests will return ATP
- Out-of-service tests will return ATP

cc - Hexadecimal condition code

cc	Explanation
03	Subject entity is in service
03	Subject entity is in service
04	Subject entity is out of service
10	Unit is not equipped
42	RST failed to boot program
55	Invalid CFT code
56	Unrunnable CFT code

Index

A

ABT, 6-2
ACO, ACTIVE, 6-5
ACON, OLD, NEW, INCL, 6-7
ACT, MAP, CLR, INCL, 6-13
ADD, LINK, APPL, ASCS, ASCD, PM, L2AD, POLL, 6-22
ADD, LINK, K, T1, T3, N2, A, B, 6-24
ADD, LINK, PTCOL, S, X, T, M, BAUD, ALM, BS, ENQ, 6-26
ADD, LINK, W, P, T20, T22, T23, T25, T26, R20, 6-31
ADD, NPC, 6-38
ADD, RT, DL, MD, DGA, DGB, DGC, DGD, DGP, NDL, 6-44
ADD, USER, LINK, INCL, ALL, LANG, M, P, F, 6-51
ADD, USER, NEW, PASSWD, 6-59
ALM, IDLD, AI, NPC, 6-62
ALM, IDLD, NPC, 6-66
ALM, IDLD, UNIT, DS3, 6-70, 1
ALM, MJ, MN, INFO, NPC, 6-72
ALM, MN, IDLD, DS3UNPROTALM, DS3U, 6-77
ALM, PMC, PMA, DMA, MI, CCN, OOS, 6-79
ALM, PMC, PMA, DMA, MI, ECCN, OOS, 6-81
ALM, PMC, PMA, DMA, MI, SMEM, 6-83
ALM, RESET, DATE, TOD, FORMAT, MDY, DMY, PMC, 6-85
ALM, UNIT, DS3, 6-87, 1
ALW, PMREPT, NPC, ALL, 6-89
ALWSW, UNIT, MMFG, TOPRTN, TOSRVC, 6-94
APPEND, END, 6-96
APPL, RESET, IN, PROGRESS, 6-98, 1
AR01, MISC, ALM, CGA, LOS, 6-100
AR01, MISC, ALM, IDLD, CGA, LOS, 6-107
AUD, PARAMS, 6-114
AUD, QRY, BER, ALL, FTU, NPCS, TOT, EOM, DS3U, 6-116
AUD, QRY, BER, ALL, NPCS, TOT, 6-130
AUD, QRY, CFA, CGA, LOS, 6-132, 6-146, 6-158

B

BADVERB, BAD, SYNTAX, STOPPED, 7-2
BADVERB, CMD, INERR, STOPPED, 7-4
BCON, FROM, TO, NTR, LPD, CONV, CUS, INCL, RDC, 7-7
BCON, FROM, TO, RDC, CUS, INCL, NTR, LPD, CONV, 7-20
BCON, FROM, TOX, NTR, LPD, CONV, CUS, INCL, 7-30, 1
BCON, FROM, TOX, RDC, CUS, INCL, NTR, LPD, 7-44

BDIS, FROM, TO, CONV, OOS, DCC, INCL, 7-54, 1
BDIS, FROM, TO, OOS, INCL, CONV, 7-64
BDIS, FROM, TOX, CONV, OOS, DCC, INCL, 7-74, 1
BDIS, FROM, TOX, OOS, INCL, CONV, 7-84
BOOT, FAILED, BAD, DEVICE, 7-93
BOOT, FROM, PMEM, FAILED, ATTEMPTING, TO, 7-95
BOOT, FROM, PMEM, SMEM, 7-97
BX2, STF, ATP, 7-99

C

CFR, FRAME, 8-2
CFR, SYNC, FPLL, 8-4
CFR, SYNC, MASTER, SLAVED, 8-6
CFR, SYNC, STRATUM, STR2, STR3, 8-8
CFR, XC, INCL, 8-10
CHG, DS1ALMDS3, ON, OFF, 8-12
CHG, DS3ALMDLY, 8-15, 1
CHG, DS3UNPROTALM, ON, OFF, 8-17
CHG, ECLOC, TYPE, MJU, SRM, 8-19
CHG, FROM, TO, NOT, TLA, TLR, F, T, B, A, INCL, 8-21
CHG, FROM, TO, NOT, TLA, TLR, F, T, B, L, G, A, 8-31
CHG, FROM, TO, TLP, NG, ES, INCL, 8-44
CHG, HUBID, O, 8-57
CHG, MACRO, MAP, SPACE, 8-59
CHG, MSGLOG, ON, OFF, 8-61
CHG, NPC, ALMOPT, PLOPT, AIS, INFO, MJ, MN, PL, 8-63
CHG, NPC, NFS, 8-76, 1
CHG, NPC, OPTS, 8-83
CHG, NPC, RT, DL, TYPE, OPTS, 8-118
CHG, NPC, TS0, 8-141, 1
CHG, NPC, TS0M, 8-147, 1
CHG, NPC, TYPE, IW, X, 8-153
CHG, NPC, TYPE, IW, X, INCL, 8-166, 8-176
CHG, PASSWD, OLD, NEW, 8-185
CHG, RT, DL, TO, 8-188
CHG, RT, DL, ZCS, B8ZS, 8-190
CHG, RT, RTF, SWMN, 8-193
CHG, SCON, OLD, NEW, 8-197
CHG, SCON, OLD, NEW, MPTM, 8-206
CHG, SECH, OLD, NEW, PCH, DCC, 8-216
CHG, SETOP, TYPE, ALL, NPCOP, 8-225
CHG, SWCH, TOX, INCL, 8-239, 8-248
CHG, SYNC, TLI, SSP, TYPE, SRC, 8-257
CHG, TLA, TLR, TO, 8-262
CHG, TLA, TLR, TO, MJU, 8-271
CHG, TYPE, OPTS, 8-281
CHG, UNIT, CONN, 8-306
CHG, UNIT, DS3, BERM, BERT, LBO, TYPE, 8-309, 1
CHG, UNIT, FTMI, EQL, 8-313

CHG,USER,LINK,INCL,SCR,GR,MCON,MCOFF, 8-316
CI,ECI,RESET, 8-320
CI,ECI,STARTUP,STF,ATP, 8-322
CMD,MC,OOS,MCOND,INSERVICE,MPDBASE, 8-324
COPY,NPC,TO, 8-326
CTST,FAD,AIS,INCL, 8-353
CTST,FAD,EMODE,FMODE,INCL, 8-361
CTST,FAD,FROM,TO,AIS,INCL, 8-368
CTST,HUB,FAD,TO,INCL, 8-377
CTST,LPBKT,FAD,INCL, 8-383
CTST,TNR,ALL,OOS, 8-388
CTST,TNR,FAD,OOS, 8-390

DGRTH,TG, 10-37
DGRTH,TP, 10-39
DGRTH,UNIT, 10-41
DGRTH,UNIT,FTMI, 10-47
DGRTH,UNIT,MIU, 10-49
DGRTH,UNIT,MXR, 10-51, 1
DLT,FPKG, 10-54
DLT,MACRO,MAP,USER, 10-58
DLT,NPC, 10-60
DLT,RT,DL,DGA,DGB,DGC,DGD,DGP, 10-67
DLT,USER, 10-72
DSPC, 10-74, 1

D

DDIS,FROM,TO, 9-2, 1
DELETE,END, 9-7
DGN,CCB,CFT,X, 9-9
DGN,CCI,CFT,X, 9-16
DGN,CCNI,CFT,X, 9-20
DGN,CI,CFT,X, 9-26
DGN,ETSI,CFT,X, 9-30
DGN,ETSI,ECCN,ALL, 9-34
DGN,IN,PROGRESS, 9-37
DGN,LINK,CFT,X, 9-39
DGN,MC,CFT,X, 9-42
DGN,MP,CFT,X, 9-46
DGN,NPC, 9-49
DGN,NPC,SIDE,CFT,X, 9-55
DGN,PMEM,SMEM,CFT,X,EXCT,DBASE,VERIFY, 9-77
DGN,SYNC, 9-82
DGN,SYNC,TLI,CRO, 9-85
DGN,SYNC,TLI,SSP, 9-88
DGN,TSI,CFT,X, 9-91
DGN,TSIS,CCN,ALL, 9-99
DGN,TSIS,CCN,UNIT,CONN, 9-102
DGN,UNIT,DSPI,CFT,X, 9-105
DGN,UNIT,FC,CFT,X, 9-108
DGN,UNIT,FLI,CFT,X, 9-113
DGN,UNIT,FMT,CFT,X, 9-117
DGN,UNIT,FTMI,CFT,X, 9-123
DGN,UNIT,MIU,CFT,X, 9-126
DGN,UNIT,MXR,DEV,CFT,X, 9-129
DGN,UNIT,UC,CFT,X, 9-135
DGRTH,NPC, 10-2
DGRTH,NPC,NPCTG,TGR, 10-18
DGRTH,NPC,NPCTP,TPR, 10-26
DGRTH,SYNC,TB, 10-31
DGRTH,SYNC,TLI,SSP, 10-33

E

EBX,STARTUP,STF,ATP, 11-2
ED,CRET,MAP,PIC, 11-4
ED,MACRO,MAP, 11-11
EMTC,STARTUP,STF,ATP, 11-17
END,LOG, 11-19
END,LOG,ABORTED, 11-21
ERR,CMD,ABT,TN,STOPPED, 11-23
ERR,ESR,ANALYSIS,REPORT,EVENT, 11-25
ERR,ESR,CCB,TN,EVENT,COND, 11-28
ERR,ESR,CCI,TN,EVENT,COND, 11-30
ERR,ESR,CCNI,TN,EVENT,COND, 11-33
ERR,ESR,ETSI,TN,EVENT,COND, 11-40
ERR,ESR,MC,MP,CI,TN, 11-43
ERR,ESR,MC,MP,TN,EVENT,COND,CI,BX,EBX, 11-45
ERR,ESR,NPC,SIDE,TN,EVENT,COND, 11-49
ERR,ESR,NPC,TN,EVENT,COND, 11-57
ERR,ESR,SYNC,TLI,SSP,TN,EVENT,COND, 11-62
ERR,ESR,SYNC,TLI,TN,EVENT,COND, 11-67
ERR,ESR,SYNC,TN,EVENT,COND, 11-71
ERR,ESR,TSI,TN,EVENT,COND, 11-76
ERR,ESR,UNIT,DSPI,TN,EVENT,COND, 11-80
ERR,ESR,UNIT,FC,TN,EVENT,COND, 11-83
ERR,ESR,UNIT,FLI,TN,EVENT,COND, 11-86
ERR,ESR,UNIT,FMT,TN,EVENT,COND, 11-89
ERR,ESR,UNIT,FTMI,TN,EVENT,COND, 11-93
ERR,ESR,UNIT,HFMT,TN,EVENT,COND, 11-96
ERR,ESR,UNIT,HMXR,DEV,TN,EVENT,COND, 11-100
ERR,ESR,UNIT,MIU,TN,EVENT,COND, 11-105
ERR,ESR,UNIT,MXR,DEV,TN,EVENT,COND, 11-108
ERR,ESR,UNIT,UC,UBX,TN,EVENT,COND, 11-113
ERR,HARDWARE,TN,COND,EVENT,ACTION, 11-116
ERR,LINK,TN,STATUS, 11-120
ERR,MSG,TO,LOG,DISCARDED, 11-123
ERR,PMEM,SMEM,TN,EVENT,COND, 11-125

ERR,PWR,PMC,PMA,DMA,MI,TN, 11-127
ERR,SOFTWARE,MC,ERROR,MID,TN,RC,ACTION, 11-130
ERR,SYNC,MODE,FAST,HOLDOVER,NORMAL, 11-134
ERR,SYNC,TLI,SSP,NPC,TN,ALM,LOS,LEN, 11-139
ERR,SYNC,TLI,SSP,TN,ALM,LOS,LEN,EXJ, 11-144
EXC,MACRO, 11-149

F

FRADTS,BMCMP, 12-2
FRADTS,DGN,DEV, 12-4
FRADTS,FRCMP, 12-8
FRADTS,MC,DGN, 12-108

G

GRTH,FRAME,CHAR,UID, 13-2
GRTH,NPC,NPCTG, 13-5
GRTH,NPC,NPCTP, 13-12
GRTH,NPC,TYPE, 13-17
GRTH,NPC,TYPE,CBTIMER, 13-24
GRTH,NPC,TYPE,OPTS,IW,X, 13-31
GRTH,NPC,TYPE,OPTS,IW,X,INCL,AIS,INFO, 13-40,
13-62
GRTH,SYNC,TB,TYPE, 13-75
GRTH,SYNC,TLI,TYPE, 13-77
GRTH,SYNC,TLI,TYPE,SSP,SRC, 13-79
GRTH,TG,NPCTG, 13-83
GRTH,TP, 13-86
GRTH,UNIT,FTMI,EQL, 13-90
GRTH,UNIT,MIU,TYPE, 13-93
GRTH,UNIT,MXR,TYPE,BERM,BERT,LBO, 13-95, 1
GRTH,UNIT,TYPE,CONN, 13-99

I

IN,PROGRESS, 14-2
INH,PMREPT,NPC,ALL, 14-4
INH,SW,UNIT,MMFG,TOPRTN,TOSRVC, 14-9
INSTALL, 14-11, 1
INVALID,SFW,ID,BLOCK,COND, 14-19

L

LINE, 15-2
LIST,END, 15-4
LOGIN,USER,PASSWD, 15-7
LOGOFF,USER,LINK,INCL, 15-10

M

MC,MCOND, 16-2
MC,RESET,RELEASE,ISSUE,FPKG,COND, 16-4
MOVE,FROM,END,TO, 16-8
MP,STARTUP,STF,ATP, 16-10
MTC,STF,ATP, 16-12

O

OCNT,FROM,TO,MPM,CUS,INCL,RDC, 17-2
OCNT,FROM,TO,RDC,CUS,INCL,PRIOUT, 17-15, 17-28
OCON,FROM,TO,MPM,CUS,INCL,RDC, 17-37
OCON,FROM,TO,RDC,CUS,INCL,PRIOUT, 17-51, 17-63
ODIS,FROM,TO,INCL,OOS,DCC,PRIOUT, 17-72
ODIS,FROM,TO,OOS,INCL,PRIOUT, 17-81
OPR,LPBK,NPC,LOCN, 17-90
OPR,LPBK,UNIT,MMFG, 17-100
OPR,TSIG,NPC, 17-103
OVERLOAD,MP,CI,UNIT,UC,TN,PROCESSOR, 17-108

R

REPT,PM,NPC,PARAM,COUNT,VLDTY,LOCN,AI, 18-2
RESET,DATE,TOD,FORMAT,MDY,DMY, 18-9
RESET,STOPPED, 18-11
RLS,LPBK,NPC,LOCN, 18-13
RLS,TSIG,NPC, 18-22
RMV,CCB, 18-27
RMV,CCI, 18-29
RMV,CCNI, 18-32
RMV,ETSI, 18-34
RMV,ETSI,ECCN,ALL, 18-36
RMV,LINK, 18-38
RMV,MC, 18-40

RMV,NPC,SIDE,INCL, 18-42
RMV,RT,DL, 18-72
RMV,SMEM,PMEM, 18-75
RMV,SYNC, 18-78
RMV,SYNC,TLI,CRO, 18-80
RMV,SYNC,TLI,PMC,PMA,DMA,MI,COND, 18-82
RMV,SYNC,TLI,SSP, 18-84
RMV,TSI, 18-87
RMV,TSIS,CCN,ALL, 18-89
RMV,TSIS,CCN,UNIT,CONN, 18-92
RMV,UNIT,FC, 18-95
RMV,UNIT,FLI, 18-98
RMV,UNIT,FMT, 18-100
RMV,UNIT,FTMI,DSPI, 18-102
RMV,UNIT,MIU,INCL, 18-105
RMV,UNIT,MMFG,FRC,INCL, 18-107
RMV,UNIT,UC, 18-111
RPT,T,NPC,LOCN,AI,COUNT,THLEV,ALM, 18-113
RST,CCB, 19-2
RST,CCI, 19-4
RST,CCNI, 19-6
RST,ETSI, 19-8
RST,ETSI,ECCN,ALL, 19-10
RST,LINK, 19-13
RST,MC,MCOND,NOJRNL,FRC,CLR,ALL, 19-15
RST,NPC,SIDE, 19-21
RST,NPC,TS0M, 19-48
RST,PMEM,SMEM,CLR,FRC,BKGRND, 19-53
RST,RT,DL, 19-59
RST,SYNC, 19-62
RST,SYNC,TLI,CRO, 19-64
RST,SYNC,TLI,SSP, 19-66
RST,TSI, 19-68
RST,TSIS,CCN,ALL, 19-70
RST,TSIS,CCN,UNIT,CONN, 19-73
RST,UNIT,FC, 19-76
RST,UNIT,FLI, 19-78
RST,UNIT,FMT, 19-80
RST,UNIT,FTMI,DSPI, 19-82
RST,UNIT,MIU,INCL, 19-84
RST,UNIT,MMFG,INCL, 19-87
RST,UNIT,UC, 19-91
RTRV,ALM,T3,DS3ALM, 1

S

SAVE, 20-2
SC,ALM,CGA,DLF,INH,MRV,MSW,PSW,RT,DL, 20-4
SC,ALM,COMP,RT,INDX,LBRV,AB,CD,P,ALP, 20-8
SC,ALM,DPLX,SYNC,CCB,CCNI,CCI,TSI,ETSI, 20-10
SC,ALM,MC,UC,FTMI,DSPI,NE, 20-15
SC,ALM,RT,DL,FE, 20-17
SCNT,RATE,MPTM,MJU,MA, 21-2
SCNT,RATE,TPT,FROM,TO, 21-11, 21-19
SCON,RATE,MPTM,MJU,MA, 21-28
SCON,RATE,TPT,FROM,TO, 21-40, 21-49
SDCH,TO,PCH,DCC, 21-58
SDIS,RATE,MPTM,MJU, 21-65
SDIS,RATE,MPTM,MJU,ALL, 21-77
SDIS,RATE,TPT,FROM,TO, 21-89, 21-97
SECH,TO,DS0A,DS0B,SEC,PCH, 21-105
SECH,TO,RATE,DP,PCH, 21-115
START,LOG, 22-2
STOP,MACRO,LINK, 22-4
STST,MON,TO,MJU,TP, 22-6
STST,MON,TO,TP, 22-16
STST,SPL,TO,MJU,TP, 22-26
STST,SPL,TO,TP, 22-36
STST,TLA,TLR,TP, 22-46
STST,TPR,ALL,LINKS, 22-56
STST,TPR,TP, 22-58
SW,BCAST,OLD,NEW,INCL, 22-66, 22-73
SW,DISC,OOS, 22-80, 22-86
SW,NPC,RT,PSW,USW,ALW,INH,FRC,INCL, 22-92
SW,ROLL,OLD,NEW,INCL,FRC,OOS, 22-97
SW,ROLL,OLD,NEW,INCL,FRC,OOS,TWAY, 22-104
SW,UNIT,FLI,TOPRTN, 22-110
SW,UNIT,FLI,TOSRVC, 22-112
SW,UNIT,MMFG,TOPRTN,FRC, 22-114
SW,UNIT,MMFG,TOSRVC, 22-118

T

TABS, 23-2
TABS,IN,PROGRESS, 23-4
TCNT,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT, 23-6
TCNT,FROM,TO,MPM,NTR,RDC,CUS,INCL, 23-19
TCNT,FROM,TO,PFW,NFW, 23-36
TCNT,FROM,TO,RDC,CUS,INCL,PRIOUT, 23-43
TCON,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT, 23-52

TCON, FROM, TO, MPM, NTR, RDC, CUS, INCL, 23-65
TCON, FROM, TO, PFW, NFW, 23-82, 1
TCON, FROM, TO, RDC, CUS, INCL, PRIOUT, 23-89, 1
TDIS, FROM, TO, INCL, OOS, DCC, 23-98
TDIS, FROM, TO, INCL, OOS, DCC, PRIOUT, 23-113
TDIS, FROM, TO, OOS, INCL, PRIOUT, 23-123
TS0MBOFL, 23-132
TTST, HUB, TO, TG, 23-136
TTST, HUB, TO, TP, 23-145
TTST, LPD, TG, 23-152
TTST, LPD, TP, 23-154
TTST, MON, TG, 23-158
TTST, MON, TO, TG, 23-167
TTST, MON, TO, TP, 23-177, 1
TTST, RT, DGA, DGB, DGC, DGD, DGP, LLB, TO, 23-190
TTST, SPL, TG, NOYLW, 23-193
TTST, SPL, TP, 23-202
TTST, TGR, TG, OOS, 23-210
TTST, TLA, NOT, TP, 23-221
TTST, TLA, TG, 23-232
TTST, TLR, NOT, TP, 23-240
TTST, TLR, TG, 23-250
TTST, TPR, ALL, OOS, 23-258
TTST, TPR, TP, OOS, FRC, 23-260, 1

U

UTL, ACO, 24-2
UTL, BMTR, FROM, TO, EXCT, INCL, UPGRD, 24-4, 1
UTL, BOOT, FRAME, CLR, 24-10
UTL, CLR, ALL, 24-12
UTL, CLR, ERR, HWER, SWER, 24-14
UTL, CLR, MSGLOG, RSTNUM, 24-16
UTL, CLR, NPC, ALL, AI, LOCN, MONDAT, MONTIM, 24-18
UTL, CLR, NPC, PARAMS, 24-30
UTL, CLR, NPC, RT, DL, 24-35
UTL, CLR, PWR, 24-43
UTL, CLR, UNIT, DS3, ALLDS3, AI, MONDAT, 24-45, 1
UTL, DATE, FORMAT, INT, 24-51
UTL, INIT, ALM, 24-54
UTL, LOC, 24-56
UTL, QRY, ALL, 24-69
UTL, QRY, ALL, COMMON, 24-80
UTL, QRY, ALL, UNIT, 24-86
UTL, QRY, ALM, DS3, 24-113, 1
UTL, QRY, ALMOPT, NPC, AIS, 24-118
UTL, QRY, ALMS, 24-132, 1
UTL, QRY, ALMS, DBASE, 24-169
UTL, QRY, ALMS, RT, DL, 24-178
UTL, QRY, APPL, NPC, ALL, 24-181, 1
UTL, QRY, BCAST, ALL, 24-187, 1
UTL, QRY, BCAST, FROM, 24-195, 24-205, 1
UTL, QRY, CMAP, 24-214, 1
UTL, QRY, CNFGR, 24-252
UTL, QRY, CS, NPC, 24-255
UTL, QRY, DATE, 24-260
UTL, QRY, DMAP, 24-262, 1
UTL, QRY, DS3, BERMT, UNIT, 24-298
UTL, QRY, DS3, LBO, 24-300
UTL, QRY, ECLOC, 24-302
UTL, QRY, EQD, COMMON, 24-304
UTL, QRY, EQD, CONN, 24-308
UTL, QRY, EQD, ETSIS, 24-310
UTL, QRY, EQD, MIUS, 24-312
UTL, QRY, EQD, MXRS, 24-314
UTL, QRY, EQD, NPC, TOTAL, UNIT, 24-317
UTL, QRY, EQD, TSIS, 24-335
UTL, QRY, EQD, UNIT, 24-337
UTL, QRY, EQD, UNITS, 24-361
UTL, QRY, ERR, SWER, HWER, INT, DATE, TOD, TN, 24-363
UTL, QRY, ESR, CCN, 24-373
UTL, QRY, ESR, ECCN, 24-376
UTL, QRY, ESR, MP, 24-380
UTL, QRY, ESR, NPC, SIDE, 24-385
UTL, QRY, ESR, UNIT, 24-395
UTL, QRY, ESR, UNIT, DSPI, 24-399
UTL, QRY, ESR, UNIT, FC, 24-401
UTL, QRY, ESR, UNIT, FLI, 24-404
UTL, QRY, ESR, UNIT, FMT, 24-407
UTL, QRY, ESR, UNIT, FTMI, 24-410
UTL, QRY, ESR, UNIT, MIU, 24-414
UTL, QRY, ESR, UNIT, MXR, 24-416
UTL, QRY, FPKG, 24-421
UTL, QRY, FROM, 24-425, 24-452
UTL, QRY, HUBID, 24-460
UTL, QRY, LIST, MACRO, USER, 24-462
UTL, QRY, LIST, MAP, USER, 24-465
UTL, QRY, LOAD, NPC, TOTAL, 24-468
UTL, QRY, LOG, ALL, 24-475
UTL, QRY, LPBK, NPC, 24-479
UTL, QRY, LPBK, UNIT, 24-493
UTL, QRY, MACRO, ATTR, USER, ALL, 24-495
UTL, QRY, MACRO, MAP, SPACE, USER, ALL, 24-499
UTL, QRY, MACRO, USER, 24-502
UTL, QRY, MAP, ATTR, ALL, USER, MAPNM, 24-505
UTL, QRY, MARK, 24-508, 24-524
UTL, QRY, MEMSTAT, 24-542, 1
UTL, QRY, MSGLOG, RANGE, 24-550
UTL, QRY, NFS, NPC, 24-552, 1
UTL, QRY, NPC, ALL, AI, LV, LOCN, MONDAT, 24-558

UTL, QRY, NPC, MAP, USER, 24-578
UTL, QRY, NPC, RT, DL, 24-587
UTL, QRY, NPCTG, 24-603
UTL, QRY, OPT, TYPE, ALL, NPC, 24-611
UTL, QRY, PEST, FAIL, OOS, COMMON, 24-618
UTL, QRY, PEST, FAIL, OOS, UNIT, 24-623
UTL, QRY, PMSCHED, NPC, ALL, 24-649
UTL, QRY, PSTATE, UNIT, 24-659
UTL, QRY, ROLL, DS0, NPC, ALL, UNIT, 24-663
UTL, QRY, ROLL, DS1, NPC, ALL, UNIT, 24-670
UTL, QRY, RTMAP, DLMAP, 24-678
UTL, QRY, SCON, CH, TO, 24-697
UTL, QRY, SCON, TO, 24-704
UTL, QRY, SCR, LINK, USER, LINKS, USERS, 24-712
UTL, QRY, SECH, TO, 24-721
UTL, QRY, SIGST, 24-728
UTL, QRY, SQN, 24-733
UTL, QRY, SRHDW, TO, 24-735
UTL, QRY, SROOF, TO, ALL, 24-746
UTL, QRY, STATE, ACO, 24-754
UTL, QRY, STATE, NPC, 24-756, 24-785
UTL, QRY, STATE, SCDG, NPC, RT, DL, ALL, 24-819
UTL, QRY, STATE, SYNC, 24-827
UTL, QRY, STATE, UNIT, DS3, 24-830, 1
UTL, QRY, STR, LINK, 24-835
UTL, QRY, STR, SYNC, 24-845
UTL, QRY, STR, SYNC, TLI, 24-851
UTL, QRY, STR, SYNC, TLI, SSP, 24-854
UTL, QRY, STR, XC, 24-858
UTL, QRY, SYNC, TYPE, 24-860
UTL, QRY, TGS, 24-863
UTL, QRY, TO, 24-870, 24-900, 1
UTL, QRY, TOD, CFA, 24-920
UTL, QRY, TPS, 24-923
UTL, QRY, TS0, NPC, 24-930, 1
UTL, QRY, TS0M, NPC, 24-936
UTL, QRY, TSIG, NPC, 24-941
UTL, QRY, UNIT, DS3, ALLDS3, AI, LV, MONDAT, 24-948, 1
UTL, QRY, UNIT, FTMI, EQL, 24-957
UTL, QRY, WHO, 24-960
UTL, QRY, XCSB, UNIT, 24-963
UTL, RCY, COND, IN, PROGRESS, 24-972
UTL, RCY, PASSWD, 24-975
UTL, SCHED, PMREPT, NPC, RI, ST, NI, LV, LOCN, 24-977
UTL, TOD, CFA, FAC, X, PRIM, MONDAT, 24-987, 1

Lucent Technologies
Bell Labs Innovations



DACS II
Release 8.2.3 PDS
Command and Message Manual

Volume II

365-353-222
Issue 2
February 1999

Copyright © 1999 Lucent Technologies
All Rights Reserved
Printed in U.S.A

Notice

Every effort was made to ensure that the information in this document was complete and accurate at the time of printing. However, information is subject to change.

Mandatory Information

Security Statement

In rare instances, unauthorized individuals make connections to the telecommunications network through the use of remote access features. In such event, applicable tariffs require that the customer pay all network charges for traffic. Lucent Technologies cannot be responsible for such charges, and will not make any allowance or give any credit for charges that result from unauthorized access.

Trademarks

5ESS is a registered trademark of Lucent Technologies.

COMMON LANGUAGE is a registered trademark and CLEI, CLLI, CLCI, and CLFI are trademarks of Bell Communications Research, Inc.

SLC is a registered trademark of Lucent Technologies.

Acknowledgements

This document was developed by the Lucent Technologies Customer Training and Information Products Organization.

Documentation Ordering Information

The ordering number for this document is Lucent Technologies 365-353-222. To order this document, call the Lucent Technologies Customer Information Center in Indianapolis, Indiana, on 1-888-582-3688. For more ordering information, refer to "How to Order Documentation" in the section "About this Document."

Technical Support Telephone Number

The Lucent Technologies Regional Technical Assistance Center (RTAC) provides a technical assistance telephone number which is staffed 24 hours a day. For technical assistance, simply call 1-800-225-RTAC.

Documentation Support Telephone Number

Lucent Technologies provides a telephone number for you to report errors or to ask questions about the information in this document. The support telephone numbers are:

Outside North Carolina - 1-800-334-0404
Inside North Carolina - 1-910-727-6681.

Developed by The Lucent Technologies Customer Training & Information Products Organization

How Are We Doing?

Document Title: DACS II Release 8.2.3 PDS Command and Message Manual Volume II

Document No.: 365-353-222

Issue 2

Date: February 1999

Lucent Technologies welcomes your feedback on this document. Your comments can be of great value in helping us improve our documentation.

1. Please rate the effectiveness of this document in the following areas:

	Excellent	Good	Fair	Poor	Not Applicable
Ease of Use					////////////////////
Clarity					////////////////////
Completeness					////////////////////
Accuracy					////////////////////
Organization					////////////////////
Appearance					////////////////////
Examples					
Illustrations					
Overall Satisfaction					////////////////////

2. Please check the ways you feel we could improve this document:

☐ Improve the overview/introduction	☐ Make it more concise/brief
☐ Improve the table of contents	☐ Add more step-by-step procedures/tutorials
☐ Improve the organization	☐ Add more troubleshooting information
☐ Include more figures	☐ Make it less technical
☐ Add more examples	☐ Add more/better quick reference aids
☐ Add more detail	☐ Improve the index

Please provide details for the suggested improvement. _____

3. What did you like most about this document?

4. Feel free to write any comments below or on an attached sheet.

If we may contact you concerning your comments, please complete the following:

Name: _____ Telephone Number: _____

Company/Organization: _____ Date: _____

 
Address: _____

When you have completed this form, please fold, tape, and return to address on back
or Fax to: 910-727-3043.


Lucent Technologies
Bell Labs Innovations



-----Do Not Cut—Fold Here And Tape-----



 NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES



BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 1999 GREENSBORO, N.C.

POSTAGE WILL BE PAID BY ADDRESSEE

DOCUMENTATION SERVICES
2400 Reynolda Road
Winston-Salem, NC 27199-2029



Contents

Introduction	1-1
■ DACS II Messages	1-2
■ Communicating With DACS II	1-6
■ DACS II Administrative Links	1-14
■ NPC Addressing	1-16
■ On-Line Help Feature	1-16
■ System Configuration	1-22
■ Documentation Support	1-37
■ Glossary	1-49

Alphabetic List of Messages	2-1
■ Alphabetic List of Keywords	2-1

Numerical List of Messages	3-1
■ Numeric List of Keywords	3-1

Summary of Input Commands	4-1
■ Alphabetic Command Summary	4-2
■ Numeric Command Summary	4-42

Autonomous Messages	5-1
■ Alarms Messages	5-2
■ Audits Messages	5-4
■ Error Recovery Messages	5-10
■ Event Reporting Messages	5-16
■ Input Denials Messages	5-17

Contents

■ Scheduled Pm Reporting Messages	5-18
■ Startup Messages	5-20

ABT — AUD	6-1
■ ABT	6-2
■ ACO,ACTIVE	6-5
■ ACON,OLD,NEW,INCL	6-7
■ ACT,MAP,CLR,INCL	6-13
■ ADD,LINK,APPL,ASCS,ASCD,PM,L2AD,POLL	6-22
■ ADD,LINK,K,T1,T3,N2,A,B	6-24
■ ADD,LINK,PTCOL,S,X,T,M,BAUD,ALM,BS,ENQ	6-26
■ ADD,LINK,W,P,T20,T22,T23,T25,T26,R20	6-31
■ ADD,NPC	6-38
■ ADD,RT,DL,MD,DGA,DGB,DGC,DGD,DGP,NDL	6-44
■ ADD,USER,LINK,INCL,ALL,LANG,M,P,F	6-51
■ ADD,USER,NEW,PASSWD	6-59
■ ALM,IDLD,AI,NPC	6-62
■ ALM,IDLD,NPC	6-66
■ ALM,IDLD,UNIT,DS3	6-70
■ ALM,MJ,MN,INFO,NPC	6-72
■ ALM,MN,IDLD,DS3UNPROTALM,DS3U	6-77
■ ALM,PMC,PMA,DMA,MI,CCN,OOS	6-79
■ ALM,PMC,PMA,DMA,MI,ECCN,OOS	6-81
■ ALM,PMC,PMA,DMA,MI,SMEM	6-83
■ ALM,RESET,DATE,TOD,FORMAT,MDY,DMY,PMC	6-85
■ ALM,UNIT,DS3	6-87
■ ALW,PMREPT,NPC,ALL	6-89
■ ALWSW,UNIT,MMFG,TOPRTN,TOSRVC	6-94
■ APPEND,END	6-96
■ APPL,RESET,IN,PROGRESS	6-98
■ AR01,MISC,ALM,CGA,LOS	6-100
■ AR01,MISC,ALM,IDLD,CGA,LOS	6-107
■ AUD,PARAMS	6-114
■ AUD,QRY,BER,ALL,FTU,NPCS,TOT,EOM,DS3U	6-116
■ AUD,QRY,BER,ALL,NPCS,TOT	6-130
■ AUD,QRY,CFA,CGA,LOS	6-132

Contents

■ AUD,QRY,CFA,CGA,LOS	6-146
■ AUD,QRY,CFA,CGA,LOS	6-158

BADVERB — BX2	7-1
■ BADVERB,BAD,SYNTAX,STOPPED	7-2
■ BADVERB,CMD,INERR,STOPPED	7-4
■ BCON,FROM,TO,NTR,LPD,CONV,CUS,INCL,RDC	7-7
■ BCON,FROM,TO,RDC,CUS,INCL,NTR,LPD,CONV	7-20
■ BCON,FROM,TOX,NTR,LPD,CONV,CUS,INCL	7-30
■ BCON,FROM,TOX,RDC,CUS,INCL,NTR,LPD	7-44
■ BDIS,FROM,TO,CONV,OOS,DCC,INCL	7-54
■ BDIS,FROM,TO,OOS,INCL,CONV	7-64
■ BDIS,FROM,TOX,CONV,OOS,DCC,INCL	7-74
■ BDIS,FROM,TOX,OOS,INCL,CONV	7-84
■ BOOT,FAILED,BAD,DEVICE	7-93
■ BOOT,FROM,PMEM,FAILED,ATTEMPTING,TO	7-95
■ BOOT,FROM,PMEM,SMEM	7-97
■ BX2,STF,ATP	7-99

CFR — CTST	8-1
■ CFR,FRAME	8-2
■ CFR,SYNC,FPLL	8-4
■ CFR,SYNC,MASTER,SLAVED	8-6
■ CFR,SYNC,STRATUM,STR2,STR3	8-8
■ CFR,XC,INCL	8-10
■ CHG,DS1ALMDS3,ON,OFF	8-12
■ CHG,DS3ALMDLY	8-15
■ CHG,DS3UNPROTALM,ON,OFF	8-17
■ CHG,ECLOC,TYPE,MJU,SRM	8-19
■ CHG,FROM,TO,NOT,TLA,TLR,F,T,B,A,INCL	8-21
■ CHG,FROM,TO,NOT,TLA,TLR,F,T,B,L,G,A	8-31
■ CHG,FROM,TO,TLP,NG,ES,INCL	8-44
■ CHG,HUBID,O	8-57

Contents

■ CHG,MACRO,MAP,SPACE	8-59
■ CHG,MSGLOG,ON,OFF	8-61
■ CHG,NPC,ALMOPT,PLOPT,AIS,INFO,MJ,MN,PL	8-63
■ CHG,NPC,NFS	8-76
■ CHG,NPC,OPTS	8-83
■ CHG,NPC,RT,DL,TYPE,OPTS	8-118
■ CHG,NPC,TS0	8-141
■ CHG,NPC,TS0M	8-147
■ CHG,NPC,TYPE,IW,X	8-153
■ CHG,NPC,TYPE,IW,X,INCL	8-166
■ CHG,NPC,TYPE,IW,X,INCL	8-176
■ CHG,PASSWD,OLD,NEW	8-185
■ CHG,RT,DL,TO	8-188
■ CHG,RT,DL,ZCS,B8ZS	8-190
■ CHG,RT,RTF,SWMN	8-193
■ CHG,SCON,OLD,NEW	8-197
■ CHG,SCON,OLD,NEW,MPTM	8-206
■ CHG,SECH,OLD,NEW,PCH,DCC	8-216
■ CHG,SETOP,TYPE,ALL,NPCOP	8-225
■ CHG,SWCH,TOX,INCL	8-239
■ CHG,SWCH,TOX,INCL	8-248
■ CHG,SYNC,TLI,SSP,TYPE,SRC	8-257
■ CHG,TLA,TLR,TO	8-262
■ CHG,TLA,TLR,TO,MJU	8-271
■ CHG,TYPE,OPTS	8-281
■ CHG,UNIT,CONN	8-306
■ CHG,UNIT,DS3,BERM,BERT,LBO,TYPE	8-309
■ CHG,UNIT,FTMI,EQL	8-313
■ CHG,USER,LINK,INCL,SCR,GR,MCON,MCOFF	8-316
■ CI,ECI,RESET	8-320
■ CI,ECI,STARTUP,STF,ATP	8-322
■ CMD,MC,OOS,MCOND,INSERVICE,MPDBASE	8-324
■ COPY,NPC,TO	8-326
■ CTST,FAD,AIS,INCL	8-353
■ CTST,FAD,EMODE,FMODE,INCL	8-361
■ CTST,FAD,FROM,TO,AIS,INCL	8-368
■ CTST,HUB,FAD,TO,INCL	8-377
■ CTST,LPBKT,FAD,INCL	8-383

Contents

■ CTST,TNR,ALL,OOS	8-388
■ CTST,TNR,FAD,OOS	8-390

DELETE — DGN	9-1
■ DDIS,FROM,TO	9-2
■ DELETE,END	9-7
■ DGN,CCB,CFT,X	9-9
■ DGN,CCI,CFT,X	9-16
■ DGN,CCNI,CFT,X	9-20
■ DGN,CI,CFT,X	9-26
■ DGN,ETSI,CFT,X	9-30
■ DGN,ETSI,ECCN,ALL	9-34
■ DGN,IN,PROGRESS	9-37
■ DGN,LINK,CFT,X	9-39
■ DGN,MC,CFT,X	9-42
■ DGN,MP,CFT,X	9-46
■ DGN,NPC	9-49
■ DGN,NPC,SIDE,CFT,X	9-55
■ DGN,PMEM,SMEM,CFT,X,EXCT,DBASE,VERIFY	9-77
■ DGN,SYNC	9-82
■ DGN,SYNC,TLI,CRO	9-85
■ DGN,SYNC,TLI,SSP	9-88
■ DGN,TSI,CFT,X	9-91
■ DGN,TSIS,CCN,ALL	9-99
■ DGN,TSIS,CCN,UNIT,CONN	9-102
■ DGN,UNIT,DSPI,CFT,X	9-105
■ DGN,UNIT,FC,CFT,X	9-108
■ DGN,UNIT,FLI,CFT,X	9-113
■ DGN,UNIT,FMT,CFT,X	9-117
■ DGN,UNIT,FTMI,CFT,X	9-123
■ DGN,UNIT,MIU,CFT,X	9-126
■ DGN,UNIT,MXR,DEV,CFT,X	9-129
■ DGN,UNIT,UC,CFT,X	9-135

DGRTH — DSPC	10-1

Contents

■ DGRTH,NPC	10-2
■ DGRTH,NPC,NPCTG,TGR	10-18
■ DGRTH,NPC,NPCTP,TPR	10-26
■ DGRTH,SYNC,TB	10-31
■ DGRTH,SYNC,TLI,SSP	10-33
■ DGRTH,TG	10-37
■ DGRTH,TP	10-39
■ DGRTH,UNIT	10-41
■ DGRTH,UNIT,FTMI	10-47
■ DGRTH,UNIT,MIU	10-49
■ DGRTH,UNIT,MXR	10-51
■ DLT,FPKG	10-54
■ DLT,MACRO,MAP,USER	10-58
■ DLT,NPC	10-60
■ DLT,RT,DL,DGA,DGB,DGC,DGD,DGP	10-67
■ DLT,USER	10-72
■ DSPC	10-74

EBX — EXC	11-1
■ EBX,STARTUP,STF,ATP	11-2
■ ED,CRET,MAP,PIC	11-4
■ ED,MACRO,MAP	11-11
■ EMTC,STARTUP,STF,ATP	11-17
■ END,LOG	11-19
■ END,LOG,ABORTED	11-21
■ ERR,CMD,ABT,TN,STOPPED	11-23
■ ERR,ESR,ANALYSIS,REPORT,EVENT	11-25
■ ERR,ESR,CCB,TN,EVENT,COND	11-28
■ ERR,ESR,CCI,TN,EVENT,COND	11-30
■ ERR,ESR,CCNI,TN,EVENT,COND	11-33
■ ERR,ESR,ETSI,TN,EVENT,COND	11-40
■ ERR,ESR,MC,MP,CI,TN	11-43
■ ERR,ESR,MC,MP,TN,EVENT,COND,CI,BX,EBX	11-45
■ ERR,ESR,NPC,SIDE,TN,EVENT,COND	11-49
■ ERR,ESR,NPC,TN,EVENT,COND	11-57
■ ERR,ESR,SYNC,TLI,SSP,TN,EVENT,COND	11-62

Contents

■ ERR,ESR,SYNC,TLI,TN,EVENT,COND	11-67
■ ERR,ESR,SYNC,TN,EVENT,COND	11-71
■ ERR,ESR,TSI,TN,EVENT,COND	11-76
■ ERR,ESR,UNIT,DSPI,TN,EVENT,COND	11-80
■ ERR,ESR,UNIT,FC,TN,EVENT,COND	11-83
■ ERR,ESR,UNIT,FLI,TN,EVENT,COND	11-86
■ ERR,ESR,UNIT,FMT,TN,EVENT,COND	11-89
■ ERR,ESR,UNIT,FTMI,TN,EVENT,COND	11-93
■ ERR,ESR,UNIT,HFMT,TN,EVENT,COND	11-96
■ ERR,ESR,UNIT,HMXR,DEV,TN,EVENT,COND	11-100
■ ERR,ESR,UNIT,MIU,TN,EVENT,COND	11-105
■ ERR,ESR,UNIT,MXR,DEV,TN,EVENT,COND	11-108
■ ERR,ESR,UNIT,UC,UBX,TN,EVENT,COND	11-113
■ ERR,HARDWARE,TN,COND,EVENT,ACTION	11-116
■ ERR,LINK,TN,STATUS	11-120
■ ERR,MSGs,TO,LOG,DISCARDED	11-123
■ ERR,PMEM,SMEM,TN,EVENT,COND	11-125
■ ERR,PWR,PMC,PMA,DMA,MI,TN	11-127
■ ERR,SOFTWARE,MC,ERROR,MID,TN,RC,ACTION	11-130
■ ERR,SYNC,MODE,FAST,HOLDOVER,NORMAL	11-134
■ ERR,SYNC,TLI,SSP,NPC,TN,ALM,LOS,LEN	11-139
■ ERR,SYNC,TLI,SSP,TN,ALM,LOS,LEN,EXJ	11-144
■ EXC,MACRO	11-149

FRADTS	12-1
■ FRADTS,BMCMP	12-2
■ FRADTS,DGN,DEV	12-4
■ FRADTS,FRCMP	12-8
■ FRADTS,MC,DGN	12-108

GRTH	13-1
■ GRTH,FRAME,CHAR,UID	13-2
■ GRTH,NPC,NPCTG	13-5

Contents

■ GRTH,NPC,NPCTP	13-12
■ GRTH,NPC,TYPE	13-17
■ GRTH,NPC,TYPE,CBTIMER	13-24
■ GRTH,NPC,TYPE,OPTS,IW,X	13-31
■ GRTH,NPC,TYPE,OPTS,IW,X,INCL,AIS,INFO	13-40
■ GRTH,NPC,TYPE,OPTS,IW,X,INCL,AIS,INFO	13-62
■ GRTH,SYNC,TB,TYPE	13-75
■ GRTH,SYNC,TLI,TYPE	13-77
■ GRTH,SYNC,TLI,TYPE,SSP,SRC	13-79
■ GRTH,TG,NPCTG	13-83
■ GRTH,TP	13-86
■ GRTH,UNIT,FTMI,EQL	13-90
■ GRTH,UNIT,MIU,TYPE	13-93
■ GRTH,UNIT,MXR,TYPE,BERM,BERT,LBO	13-95
■ GRTH,UNIT,TYPE,CONN	13-99

IN — INVALID	14-1
■ IN,PROGRESS	14-2
■ INH,PMREPT,NPC,ALL	14-4
■ INHSW,UNIT,MMFG,TOPTN,TOSRVC	14-9
■ INSTALL	14-11
■ INVALID,SFW,ID,BLOCK,COND	14-19

LINE — LOGOFF	15-1
■ LINE	15-2
■ LIST,END	15-4
■ LOGIN,USER,PASSWD	15-7
■ LOGOFF,USER,LINK,INCL	15-10

MC — MTC	16-1
■ MC,MCOND	16-2

Contents

■ MC,RESET,RELEASE,ISSUE,FPKG,COND	16-4
■ MOVE,FROM,END,TO	16-8
■ MP,STARTUP,STF,ATP	16-10
■ MTC,STF,ATP	16-12

OCNT — OVERLOAD	17-1
■ OCNT,FROM,TO,MPM,CUS,INCL,RDC	17-2
■ OCNT,FROM,TO,RDC,CUS,INCL,PRIOUT	17-15
■ OCNT,FROM,TO,RDC,CUS,INCL,PRIOUT	17-28
■ OCON,FROM,TO,MPM,CUS,INCL,RDC	17-37
■ OCON,FROM,TO,RDC,CUS,INCL,PRIOUT	17-51
■ OCON,FROM,TO,RDC,CUS,INCL,PRIOUT	17-63
■ ODIS,FROM,TO,INCL,OOS,DCC,PRIOUT	17-72
■ ODIS,FROM,TO,OOS,INCL,PRIOUT	17-81
■ OPR,LPBK,NPC,LOCN	17-90
■ OPR,LPBK,UNIT,MMFG	17-100
■ OPR,TSIG,NPC	17-103
■ OVERLOAD,MP,CI,UNIT,UC,TN,PROCESSOR	17-108

REPT — RPT	18-1
■ REPT,PM,NPC,PARAM,COUNT,VLDTY,LOCN,AI	18-2
■ RESET,DATE,TOD,FORMAT,MDY,DMY	18-9
■ RESET,STOPPED	18-11
■ RLS,LPBK,NPC,LOCN	18-13
■ RLS,TSIG,NPC	18-22
■ RMV,CCB	18-27
■ RMV,CCI	18-29
■ RMV,CCNI	18-32
■ RMV,ETSI	18-34
■ RMV,ETSI,ECCN,ALL	18-36
■ RMV,LINK	18-38
■ RMV,MC	18-40
■ RMV,NPC,SIDE,INCL	18-42

Contents

■ RMV,RT,DL	18-72
■ RMV,SMEM,PMEM	18-75
■ RMV,SYNC	18-78
■ RMV,SYNC,TLI,CRO	18-80
■ RMV,SYNC,TLI,PMC,PMA,DMA,MI,COND	18-82
■ RMV,SYNC,TLI,SSP	18-84
■ RMV,TSI	18-87
■ RMV,TSIS,CCN,ALL	18-89
■ RMV,TSIS,CCN,UNIT,CONN	18-92
■ RMV,UNIT,FC	18-95
■ RMV,UNIT,FLI	18-98
■ RMV,UNIT,FMT	18-100
■ RMV,UNIT,FTMI,DSPI	18-102
■ RMV,UNIT,MIU,INCL	18-105
■ RMV,UNIT,MMFG,FRC,INCL	18-107
■ RMV,UNIT,UC	18-111
■ RPT,T,NPC,LOCN,AI,COUNT,THLEV,ALM	18-113

RST	19-1
■ RST,CCB	19-2
■ RST,CCI	19-4
■ RST,CCNI	19-6
■ RST,ETSI	19-8
■ RST,ETSI,ECCN,ALL	19-10
■ RST,LINK	19-13
■ RST,MC,MCOND,NOJRNLFRC,CLR,ALL	19-15
■ RST,NPC,SIDE	19-21
■ RST,NPC,TS0M	19-48
■ RST,PMEM,SMEM,CLR,FRC,BKGRND	19-53
■ RST,RT,DL	19-59
■ RST,SYNC	19-62
■ RST,SYNC,TLI,CRO	19-64
■ RST,SYNC,TLI,SSP	19-66
■ RST,TSI	19-68
■ RST,TSIS,CCN,ALL	19-70
■ RST,TSIS,CCN,UNIT,CONN	19-73

Contents

■ RST,UNIT,FC	19-76
■ RST,UNIT,FLI	19-78
■ RST,UNIT,FMT	19-80
■ RST,UNIT,FTMI,DSPI	19-82
■ RST,UNIT,MIU,INCL	19-84
■ RST,UNIT,MMFG,INCL	19-87
■ RST,UNIT,UC	19-91

SAVE — SC	20-1
■ SAVE	20-2
■ SC,ALM,CGA,DLF,INH,MRV,MSW,PSW,RT,DL	20-4
■ SC,ALM,COMP,RT,INDX,LBRV,AB,CD,P,ALP	20-8
■ SC,ALM,DPLX,SYNC,CCB,CCNI,CCI,TSI,ETSI	20-10
■ SC,ALM,MC,UC,FTMI,DSPI,NE	20-15
■ SC,ALM,RT,DL,FE	20-17

SCNT — SECH	21-1
■ SCNT,RATE,MPTM,MJU,MA	21-2
■ SCNT,RATE,TPT,FROM,TO	21-11
■ SCNT,RATE,TPT,FROM,TO	21-19
■ SCON,RATE,MPTM,MJU,MA	21-28
■ SCON,RATE,TPT,FROM,TO	21-40
■ SCON,RATE,TPT,FROM,TO	21-49
■ SDCH,TO,PCH,DCC	21-58
■ SDIS,RATE,MPTM,MJU	21-65
■ SDIS,RATE,MPTM,MJU,ALL	21-77
■ SDIS,RATE,TPT,FROM,TO	21-89
■ SDIS,RATE,TPT,FROM,TO	21-97
■ SECH,TO,DS0A,DS0B,SEC,PCH	21-105
■ SECH,TO,RATE,DP,PCH	21-115

START — SW	22-1

Contents

■ START,LOG	22-2
■ STOP,MACRO,LINK	22-4
■ STST,MON,TO,MJU,TP	22-6
■ STST,MON,TO,TP	22-16
■ STST,SPL,TO,MJU,TP	22-26
■ STST,SPL,TO,TP	22-36
■ STST,TLA,TLR,TP	22-46
■ STST,TPR,ALL,LINKS	22-56
■ STST,TPR,TP	22-58
■ SW,BCAST,OLD,NEW,INCL	22-66
■ SW,BCAST,OLD,NEW,INCL	22-73
■ SW,DISC,OOS	22-80
■ SW,DISC,OOS	22-86
■ SW,NPC,RT,PSW,USW,ALW,INH,FRC,INCL	22-92
■ SW,ROLL,OLD,NEW,INCL,FRC,OOS	22-97
■ SW,ROLL,OLD,NEW,INCL,FRC,OOS,TWAY	22-104
■ SW,UNIT,FLI,TOPTN	22-110
■ SW,UNIT,FLI,TOSRVC	22-112
■ SW,UNIT,MMFG,TOPTN,FRC	22-114
■ SW,UNIT,MMFG,TOSRVC	22-118

TABS — TTST	23-1
■ TABS	23-2
■ TABS,IN,PROGRESS	23-4
■ TCNT,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT	23-6
■ TCNT,FROM,TO,MPM,NTR,RDC,CUS,INCL	23-19
■ TCNT,FROM,TO,PFW,NFW	23-36
■ TCNT,FROM,TO,RDC,CUS,INCL,PRIOUT	23-43
■ TCON,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT	23-52
■ TCON,FROM,TO,MPM,NTR,RDC,CUS,INCL	23-65
■ TCON,FROM,TO,PFW,NFW	23-82
■ TCON,FROM,TO,RDC,CUS,INCL,PRIOUT	23-89
■ TDIS,FROM,TO,INCL,OOS,DCC	23-98
■ TDIS,FROM,TO,INCL,OOS,DCC,PRIOUT	23-113
■ TDIS,FROM,TO,OOS,INCL,PRIOUT	23-123
■ TS0MBOFL	23-132

Contents

■ TTST,HUB,TO,TG	23-136
■ TTST,HUB,TO,TP	23-145
■ TTST,LPD,TG	23-152
■ TTST,LPD,TP	23-154
■ TTST,MON,TG	23-158
■ TTST,MON,TO,TG	23-167
■ TTST,MON,TO,TP	23-177
■ TTST,RT,DGA,DGB,DGC,DGD,DGP,LLB,TO	23-190
■ TTST,SPL,TG,NOYLW	23-193
■ TTST,SPL,TP	23-202
■ TTST,TGR,TG,OOS	23-210
■ TTST,TLA,NOT,TP	23-221
■ TTST,TLA,TG	23-232
■ TTST,TLR,NOT,TP	23-240
■ TTST,TLR,TG	23-250
■ TTST,TPR,ALL,OOS	23-258
■ TTST,TPR,TP,OOS,FRC	23-260

UTL	24-1
■ UTL,ACO	24-2
■ UTL,BMTR,FROM,TO,EXCT,INCL,UPGRD	24-4
■ UTL,BOOT,FRAME,CLR	24-10
■ UTL,CLR,ALL	24-12
■ UTL,CLR,ERR,HWER,SWER	24-14
■ UTL,CLR,MSGLOG,RSTNUM	24-16
■ UTL,CLR,NPC,ALL,AI,LOCN,MONDAT,MONTIM	24-18
■ UTL,CLR,NPC,PARAMS	24-30
■ UTL,CLR,NPC,RT,DL	24-35
■ UTL,CLR,PWR	24-43
■ UTL,CLR,UNIT,DS3,ALLDS3,AI,MONDAT	24-45
■ UTL,DATE,FORMAT,INT	24-51
■ UTL,INIT,ALM	24-54
■ UTL,LOC	24-56
■ UTL,QRY,ALL	24-69
■ UTL,QRY,ALL,COMMON	24-80
■ UTL,QRY,ALL,UNIT	24-86

Contents

■ UTL, QRY, ALM, DS3	24-113
■ UTL, QRY, ALMOPT, NPC, AIS	24-118
■ UTL, QRY, ALMS	24-132
■ UTL, QRY, ALMS, DBASE	24-169
■ UTL, QRY, ALMS, RT, DL	24-178
■ UTL, QRY, APPL, NPC, ALL	24-181
■ UTL, QRY, BCAST, ALL	24-187
■ UTL, QRY, BCAST, FROM	24-195
■ UTL, QRY, BCAST, FROM	24-205
■ UTL, QRY, CMAP	24-214
■ UTL, QRY, CNFGR	24-252
■ UTL, QRY, CS, NPC	24-255
■ UTL, QRY, DATE	24-260
■ UTL, QRY, DMAP	24-262
■ UTL, QRY, DS3, BERMT, UNIT	24-298
■ UTL, QRY, DS3, LBO	24-300
■ UTL, QRY, ECLOC	24-302
■ UTL, QRY, EQD, COMMON	24-304
■ UTL, QRY, EQD, CONN	24-308
■ UTL, QRY, EQD, ETSIS	24-310
■ UTL, QRY, EQD, MIUS	24-312
■ UTL, QRY, EQD, MXRS	24-314
■ UTL, QRY, EQD, NPCS, TOTAL, UNIT	24-317
■ UTL, QRY, EQD, TSIS	24-335
■ UTL, QRY, EQD, UNIT	24-337
■ UTL, QRY, EQD, UNITS	24-361
■ UTL, QRY, ERR, SWER, HWER, INT, DATE, TOD, TN	24-363
■ UTL, QRY, ESR, CCN	24-373
■ UTL, QRY, ESR, ECCN	24-376
■ UTL, QRY, ESR, MP	24-380
■ UTL, QRY, ESR, NPC, SIDE	24-385
■ UTL, QRY, ESR, UNIT	24-395
■ UTL, QRY, ESR, UNIT, DSPI	24-399
■ UTL, QRY, ESR, UNIT, FC	24-401
■ UTL, QRY, ESR, UNIT, FLI	24-404
■ UTL, QRY, ESR, UNIT, FMT	24-407
■ UTL, QRY, ESR, UNIT, FTMI	24-410
■ UTL, QRY, ESR, UNIT, MIU	24-414

Contents

■ UTL, QRY, ESR, UNIT, MXR	24-416
■ UTL, QRY, FPKG	24-421
■ UTL, QRY, FROM	24-425
■ UTL, QRY, FROM	24-452
■ UTL, QRY, HUBID	24-460
■ UTL, QRY, LIST, MACRO, USER	24-462
■ UTL, QRY, LIST, MAP, USER	24-465
■ UTL, QRY, LOAD, NPC, TOTAL	24-468
■ UTL, QRY, LOG, ALL	24-475
■ UTL, QRY, LPBK, NPC	24-479
■ UTL, QRY, LPBK, UNIT	24-493
■ UTL, QRY, MACRO, ATTR, USER, ALL	24-495
■ UTL, QRY, MACRO, MAP, SPACE, USER, ALL	24-499
■ UTL, QRY, MACRO, USER	24-502
■ UTL, QRY, MAP, ATTR, ALL, USER, MAPNM	24-505
■ UTL, QRY, MARK	24-508
■ UTL, QRY, MARK	24-524
■ UTL, QRY, MEMSTAT	24-542
■ UTL, QRY, MSGLOG, RANGE	24-550
■ UTL, QRY, NFS, NPC	24-552
■ UTL, QRY, NPC, ALL, AI, LV, LOCN, MONDAT	24-558
■ UTL, QRY, NPC, MAP, USER	24-578
■ UTL, QRY, NPC, RT, DL	24-587
■ UTL, QRY, NPCTG	24-603
■ UTL, QRY, OPT, TYPE, ALL, NPCS	24-611
■ UTL, QRY, PEST, FAIL, OOS, COMMON	24-618
■ UTL, QRY, PEST, FAIL, OOS, UNIT	24-623
■ UTL, QRY, PMSCHED, NPC, ALL	24-649
■ UTL, QRY, PSTATE, UNIT	24-659
■ UTL, QRY, ROLL, DS0, NPC, ALL, UNIT	24-663
■ UTL, QRY, ROLL, DS1, NPC, ALL, UNIT	24-670
■ UTL, QRY, RTMAP, DLMAP	24-678
■ UTL, QRY, SCON, CH, TO	24-697
■ UTL, QRY, SCON, TO	24-704
■ UTL, QRY, SCR, LINK, USER, LINKS, USERS	24-712
■ UTL, QRY, SECH, TO	24-721
■ UTL, QRY, SIGST	24-728
■ UTL, QRY, SQN	24-733

Contents

■ UTL, QRY, SRHDW, TO	24-735
■ UTL, QRY, SROOF, TO, ALL	24-746
■ UTL, QRY, STATE, ACO	24-754
■ UTL, QRY, STATE, NPC	24-756
■ UTL, QRY, STATE, NPC	24-785
■ UTL, QRY, STATE, SCDG, NPC, RT, DL, ALL	24-819
■ UTL, QRY, STATE, SYNC	24-827
■ UTL, QRY, STATE, UNIT, DS3	24-830
■ UTL, QRY, STR, LINK	24-835
■ UTL, QRY, STR, SYNC	24-845
■ UTL, QRY, STR, SYNC, TLI	24-851
■ UTL, QRY, STR, SYNC, TLI, SSP	24-854
■ UTL, QRY, STR, XC	24-858
■ UTL, QRY, SYNC, TYPE	24-860
■ UTL, QRY, TGS	24-863
■ UTL, QRY, TO	24-870
■ UTL, QRY, TO	24-900
■ UTL, QRY, TOD, CFA	24-920
■ UTL, QRY, TPS	24-923
■ UTL, QRY, TS0, NPC	24-930
■ UTL, QRY, TS0M, NPC	24-936
■ UTL, QRY, TSIG, NPC	24-941
■ UTL, QRY, UNIT, DS3, ALLDS3, AI, LV, MONDAT	24-948
■ UTL, QRY, UNIT, FTMI, EQL	24-957
■ UTL, QRY, WHO	24-960
■ UTL, QRY, XCSB, UNIT	24-963
■ UTL, RCY, COND, IN, PROGRESS	24-972
■ UTL, RCY, PASSWD	24-975
■ UTL, SCHED, PMREPT, NPC, RI, ST, NI, LV, LOCN	24-977
■ UTL, TOD, CFA, FAC, X, PRIM, MONDAT	24-987

Glossary

G-1

IN

Index

IN-1

Tables

8-1.	Parameter Register Threshold Range and Default Values	8-97
8-2.	Provisioning values for x	8-103
8-3.	Provisioning values for y	8-104
8-4.	Provisioning values for z	8-105
8-5.	Combinations of x and y Values	8-108
8-6.	Combinations of y and z Values	8-108
8-7.	Provisioning values for x	8-158
8-8.	Provisioning values for y	8-159
8-9.	Provisioning values for z	8-160
8-10.	Combinations of x and y Values	8-163
8-11.	Combinations of y and z Values	8-163
8-12.	Parameter Register Threshold Range and Default Values	8-230
8-13.	Provisioning values for x	8-289
8-14.	Provisioning values for y	8-290
8-15.	Provisioning values for z	8-291
8-16.	Combinations of x and y Values	8-294
8-17.	Combinations of y and z Values	8-294
8-18.	Parameter Register Threshold Range and Default Values	8-299
8-19.	Parameter Register Threshold Range and Default Values	8-347
18-1.	Provisioning values for x	18-64
18-2.	Provisioning values for y	18-64
18-3.	Provisioning values for z	18-65
18-4.	Combinations of x and y Values	18-68
18-5.	Combinations of y and z Values	18-69
19-1.	Provisioning values for x	19-40
19-2.	Provisioning values for y	19-41
19-3.	Provisioning values for z	19-42
19-4.	Combinations of x and y Values	19-45
19-5.	Combinations of y and z Values	19-45
24-1.	Provisioning values for x	24-240
24-2.	Provisioning values for y	24-241
24-3.	Provisioning values for z	24-242
24-4.	Combinations of x and y Values	24-245
24-5.	Combinations of y and z Values	24-245
24-6.	Provisioning values for x	24-284

Tables

24-7.	Provisioning values for y	24-284
24-8.	Provisioning values for z	24-285
24-9.	Combinations of x and y Values	24-288
24-10.	Combinations of y and z Values	24-288
24-11.	Provisioning values for x	24-441
24-12.	Provisioning values for y	24-442
24-13.	Provisioning values for z	24-443
24-14.	Combinations of x and y Values	24-446
24-15.	Combinations of y and z Values	24-447
24-16.	Provisioning values for x	24-773
24-17.	Provisioning values for y	24-774
24-18.	Provisioning values for z	24-775
24-19.	Combinations of x and y Values	24-777
24-20.	Combinations of y and z Values	24-778
24-21.	Provisioning values for x	24-803
24-22.	Provisioning values for y	24-803
24-23.	Provisioning values for z	24-805
24-24.	Combinations of x and y Values	24-808
24-25.	Combinations of y and z Values	24-808
24-26.	Provisioning values for x	24-910
24-27.	Provisioning values for y	24-911
24-28.	Provisioning values for z	24-912
24-29.	Combinations of x and y Values	24-914
24-30.	Combinations of y and z Values	24-915

About This Document

About This Document

Purpose

The *DACS II Release 8.2.3 Command and Message Manual* describes the input commands and output messages of Release 8.2.3 of the Digital Access and Cross-Connect System II (DACS II). In addition, it provides full support for previous product releases.

⇒ NOTE:

Those customers using this manual with Releases 3 through 7.0.3 software should be aware that all features of a particular message shown for Release 8.2.3 may or may not apply to previous releases.

This manual consists of three volumes as follows:

- **Volume I** - This volume contains general information about the document, a detailed introduction that defines DACS II messages, relates how to communicate with DACS II, introduces the administrative links, and discusses in detail NPC addressing, on-line help feature, system configuration and features a listing of related documentation. Message listings in this volume include alphabetical and numerical, summary list of input commands and a list of autonomous messages. A comprehensive presentation of input commands and output messages (ABT through DGN) concludes this volume.
- **Volume II and III** - These two volumes contain input commands and output messages in the following order:
 - **Volume II** - DGRTH through SW
 - **Volume III** - TABS through UTL and the Glossary

Reason for Issue

The *DACS II Release 8.2.3 Command and Message Manual* has been issued to include updated and new commands applicable to Release 8.2.3.

Intended Audiences

This manual is a catalog of messages intended for reference by a technician or craftperson who needs additional details about a message. It provides the user with supplemental information for the Digital Access and Cross-Connect System II (DACS II) that is programmed in the Program Documentation Standards (PDS) language. An example of a user is someone performing a task from an operation and maintenance manual who needs the definition of a specific keyword to complete the task.

How to Order Documentation

To order additional copies of this document, send or call in an order as follows:

- To order by Mail:

Lucent Technologies
Customer Information Center
Attention: Order Entry Section
2855 N. Franklin Road
P. O. Box 19901
Indianapolis, IN 46219

-
- To order by Telephone (Monday through Friday);

Within the United States of America:

1-888-LUCENT8 (582-3688) (7:30 a.m. to 6:30 p.m. EST)

From Canada:

1-800-255-1242

Worldwide:

Toll: **1-317-352-8557**

FAX: **1-317-352-8484**

For RBOC/BOC customers, process orders through your Company Documentation Coordinator.

For commercial customers, a check, money order, purchase order number, or charge card number is required with all orders. Make checks payable to Lucent Technologies.

Lucent Technologies entities should use Form IND 1-80.80 FA, available through the Customer Information Center.

One-time orders include a binder (if applicable) and the document contents for the current issue in effect at the time of order. After placing a one-time order, you can request a standing order for any document revisions *of that software release*. Documents for new software releases do *not* go to standing-order customers. You will only get those documents if you order the new software release.

How to Comment on This Document

A feedback form is located at the beginning of this publication, immediately after the title page. Please fill out the feedback form and return it (postage free) to the address on the back.

If the feedback form is missing, send comment on this publication to:

Lucent Technologies
DACS II Documentation Coordinator
Attn: Tabatha Wright
101 Crawfords Corner Road
Room 1B-320
Holmdel, NJ 07733-3030 USA

Contents

DGRTH,NPC	10-2
■ Explanation Of Command	10-2
■ Command	10-3
■ Nonhierarchical	10-3
■ Hierarchical	10-3
■ Completion Message	10-3
■ Nonhierarchical	10-3
■ Hierarchical	10-3
■ Denial Message	10-4
■ Nonhierarchical	10-4
■ Hierarchical	10-4
■ Autonomous Message	10-4
■ Explanation Of Parameters	10-5
DGRTH,NPC,NPCTG,TGR	10-18
■ Explanation Of Command	10-18
■ Command	10-18
■ Nonhierarchical	10-18
■ Hierarchical	10-18
■ Completion Message	10-19
■ Nonhierarchical	10-19
■ Hierarchical	10-19
■ Denial Message	10-19
■ Nonhierarchical	10-19
■ Hierarchical	10-20
■ Autonomous Message	10-20
■ Explanation Of Parameters	10-20

Contents

DGRTH,NPC,NPCTP,TPR	10-26
■ Explanation Of Command	10-26
■ Command	10-26
■ Nonhierarchical	10-26
■ Hierarchical	10-26
■ Completion Message	10-26
■ Nonhierarchical	10-26
■ Hierarchical	10-27
■ Denial Message	10-27
■ Nonhierarchical	10-27
■ Hierarchical	10-27
■ Autonomous Message	10-27
■ Explanation Of Parameters	10-27
DGRTH,SYNC,TB	10-31
■ Explanation Of Command	10-31
■ Command	10-31
■ Completion Message	10-31
■ Denial Message	10-31
■ Autonomous Message	10-31
■ Explanation Of Parameters	10-32
DGRTH,SYNC,TLI,SSP	10-33
■ Explanation Of Command	10-33
■ Command	10-33
■ Completion Message	10-33
■ Denial Message	10-33
■ Autonomous Message	10-34
■ Explanation Of Parameters	10-34
DGRTH,TG	10-37
■ Explanation Of Command	10-37
■ Command	10-37
■ Completion Message	10-37
■ Denial Message	10-37
■ Autonomous Message	10-38
■ Explanation Of Parameters	10-38
DGRTH,TP	10-39
■ Explanation Of Command	10-39
■ Command	10-39

Contents

■ Completion Message	10-39
■ Denial Message	10-39
■ Autonomous Message	10-40
■ Explanation Of Parameters	10-40
DGRTH,UNIT	10-41
■ Explanation Of Command	10-41
■ Command	10-41
■ Completion Message	10-42
■ Denial Message	10-43
■ Autonomous Message	10-43
■ Explanation Of Parameters	10-43
DGRTH,UNIT,FTMI	10-47
■ Explanation Of Command	10-47
■ Command	10-47
■ Completion Message	10-47
■ Denial Message	10-47
■ Autonomous Message	10-47
■ Explanation Of Parameters	10-48
DGRTH,UNIT,MIU	10-49
■ Explanation Of Command	10-49
■ Command	10-49
■ Completion Message	10-49
■ Denial Message	10-49
■ Autonomous Message	10-49
■ Explanation Of Parameters	10-50
DGRTH,UNIT,MXR	10-51
■ Explanation Of Command	10-51
■ Command	10-51
■ Completion Message	10-51
■ Denial Message	10-51
■ Autonomous Message	10-51
■ Explanation Of Parameters	10-52
DLT,FPKG	10-54
■ Explanation Of Command	10-54
■ Command	10-54
■ Completion Message	10-54
■ Denial Message	10-55

Contents

■ Autonomous Message	10-55
■ Explanation Of Parameters	10-55
DLT,MACRO,MAP,USER	10-58
■ Explanation Of Command	10-58
■ Command	10-58
■ Completion Message	10-58
■ Denial Message	10-58
■ Autonomous Message	10-58
■ Explanation Of Parameters	10-59
DLT,NPC	10-60
■ Explanation Of Command	10-60
■ Command	10-60
■ Nonhierarchical	10-60
■ Hierarchical	10-61
■ Completion Message	10-61
■ Denial Message	10-61
■ Autonomous Message	10-61
■ Explanation Of Parameters	10-61
DLT,RT,DL,DGA,DGB,DGC,DGD,DGP	10-67
■ Explanation Of Command	10-67
■ Command	10-67
■ Nonhierarchical	10-67
■ Hierarchical	10-67
■ Completion Message	10-68
■ Nonhierarchical	10-68
■ Hierarchical	10-68
■ Denial Message	10-68
■ Nonhierarchical	10-68
■ Hierarchical	10-68
■ Autonomous Message	10-68
■ Explanation Of Parameters	10-69
DLT,USER	10-72
■ Explanation Of Command	10-72
■ Command	10-72
■ Completion Message	10-72
■ Denial Message	10-72
■ Autonomous Message	10-73

Contents

■ Explanation Of Parameters	10-73
DSPC	10-74
■ Explanation Of Command	10-74
■ Command	10-74
■ Nonhierarchical	10-74
■ Hierarchical	10-75
■ Completion Message	10-75
■ Nonhierarchical	10-75
■ Hierarchical	10-75
■ Denial Message	10-76
■ Nonhierarchical	10-76
■ Hierarchical	10-77
■ Autonomous Message	10-78
■ Nonhierarchical	10-78
■ Hierarchical	10-78
■ Explanation Of Parameters	10-78

DGRTH — DSPC

DGRTH — DSPC

This section documents the commands **DGRTH** through **DSPC**.

DGRTH,NPC

DEGROWTH NPC

Explanation Of Command

This command unequips network processing circuits (NPCs) in DACS II Facility Terminating Units (FTU/IFTU/IFTU2), DS3 Units (DS3U), Hybrid DS3 Units (HDS3U) and Digital Signal Processing Units (DSPU).

It may be used to unequip a single NPC or a range of NPCs in an FTU (IFTU or IFTU2), a DS3U or an HDS3U. The HDS3U supports type TExyz and THxyz NPCs. The NPC numbers which are divisible by four with remainder zero, are not valid THxyz NPCs. However, the range of THxyz type NPC numbers is still supported with the understanding that there may be gaps in the NPC number range.

C-bit processing DSPU circuit packs (**CB**-type NPCs) as well as other DSPU circuit packs must be individually unequipped.

When ranges of NPCs are addressed, the **DGRTH** command will show a completion indication after the last NPC in the range that has been unequipped or the highest numbered NPC that has been successfully unequipped. **Before** the completion indication is output, individual denial messages will be output for each **NPC that is denied unequipage**.

One output message is printed for each NPC that is successfully unequipped.

Degrowth commands where the range address crosses a unit boundary will be completely denied.

Within an NPC range the degrowth command will be denied for specific NPCs or sets of NPCs for any one of the following reasons:

1. A Facility Terminating Module (FTM) within the range is unequipped.
2. The NPC is unequipped.
3. The NPC is in-service.
4. The NPC is a testport or testgroup NPC.

5. The NPC has active terminations or circuits under test.

The denial for two or more successive NPCs that need to be denied for the same reason will be formatted in a summary message using the **Floating Window Denial Message** format. In that format a summary denial message will be output, giving the range of NPCs denied, and the reason. The execution of normal completions or of denials for other reasons then resumes at the next NPC, up to the end of the range.

Command

Nonhierarchical

[I.32341]

DGRTH:FRM xy,SEQ ww:NPC [s]abc[-[t]def]!

Hierarchical

[I.32341]

DGRTH:FRM xy,SEQ ww:NPC uvmnp[-uvkqr]!

Completion Message

Nonhierarchical

[O.32341]

M hh:mm:ss xy,ww n[vv] DGRTH NPC [s]ghi TYPE mnxyz COMPL

Hierarchical

[O.32341]

M hh:mm:ss xy,ww n[vv] DGRTH NPC uvghi TYPE mnxyz COMPL

Denial Message

Nonhierarchical

[O.32341.01]

M hh:mm:ss xy,ww n[vv] DGRTH NPC [s]abc{[-[t]def]| TYPE -----} UEQD DNY

[O.32341.02]

M hh:mm:ss xy,ww n[vv] DGRTH NPC [s]abc{[-[t]def]| TYPE mnxyz} IS DNY

[O.32341.03]

M hh:mm:ss xy,ww n[vv] DGRTH NPC [s]abc{[-[t]def]| TYPE mnxyz} {NPCTP|NPCTG} DNY

[O.32341.04]

M hh:mm:ss xy,ww n[vv] DGRTH NPC [s]abc{[-[t]def]| TYPE mnxyz} TERM ASGN \ DNY

[O.32341.05]

M hh:mm:ss xy,ww n[vv] DGRTH NPC [s]abc{[-[t]def]| TYPE mnxyz} COND cc DNY

Hierarchical

[O.32341.01]

M hh:mm:ss xy,ww n[vv] DGRTH NPC uvmnp{[-uvkqr]| TYPE -----} UEQD DNY

[O.32341.02]

M hh:mm:ss xy,ww n[vv] DGRTH NPC uvmnp{[-uvkqr]| TYPE mnxyz} IS DNY

[O.32341.03]

M hh:mm:ss xy,ww n[vv] DGRTH NPC uvmnp{[-uvkqr]| TYPE mnxyz} {NPCTP|NPCTG} DNY

[O.32341.04]

M hh:mm:ss xy,ww n[vv] DGRTH NPC uvmnp{[-uvkqr]| TYPE mnxyz} TERM ASGN DNY

[O.32341.05]

M hh:mm:ss xy,ww n[vv] DGRTH NPC uvmnp{[-uvkqr]| TYPE mnxyz} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number, denoting the beginning of the range.

[t]def - The 3- or 4-digit nonhierarchical NPC number, denoting the end of the range.

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp, uvkqr

- Hierarchical NPC numbers

uv - Unit number

m, k - Module number

np, qr - NPC number within the module

The values are:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number

Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

MB, SR, and MJ type numbers listed by unit, module, and NPC Number

Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

Note: Range is not allowed for DSPU NPC degrowth.

With exceptions, an NPC must first be removed from service with the RMV,NPC,SIDE,INCL command before it can be degrown.

The exceptions are DSPU NPCs. However, if a cross-connected channel or a channel under test is present on the NPC, the command will be denied.

Degrowth of DMB NPCs results in degrowth of both duplicated NPCs in the DMB circuit packs in the DSPU. For other DSPU NPCs, there is only one NPC per circuit pack. One of the duplicated NPCs may first be removed from service with the RMV,NPC,SIDE,INCL message.

If both NPCs are in service, both will be automatically removed during the degrowth of NPC operation. If a cross-connected channel is present on the NPC, the message will be denied.

SLC carrier terminated digroups must be deleted from the SLC carrier bank by executing the DLT,RT,DL,DGA,DGB,DGC,DGD,DGP command.

[s]ghi - The 3- or 4-digit nonhierarchical NPC number ([s]abc through [t]def)
[s]jkl - The 3- or 4-digit nonhierarchical NPC number ([s]abc through [t]mno)
[t]mno - The 3- or 4-digit nonhierarchical NPC number ([s]ghi through [t]def)

uvghi - Hierarchical NPC number within the range of uvmnp and uvkqr

uvjkl - Hierarchical NPC number within the range of uvmnp and uvmno

uvmno - Hierarchical NPC number within the range of uvjkl and uvkqr

TYPE - Type

mnxyz - NPC-type identifier

mn	Explanation
DA	Dual digroup ANSI NPC
DE	Dual digroup NPC
DS	SLC® carrier NPC
TA	DS3U ANSI NPC
TE	DS3U or HDS3U Noninterface unit NPC
TH	Hybrid DS3U CEPT NPC
MB	Digital multipoint bridge NPC
MJ	Multipoint junction unit NPC
SR	Subrate multiplexer unit NPC
SD	Digital Signal Processing Application Circuit Pack

UEQD - Unequipped

The specified NPC is already unequipped

IS - In-service

The specified NPC is in service

NPCTP - NPC (for) test port

The specified NPC is designated for DS0 test ports

NPCTG - NPC (for) test group

The specified NPC is designated for Nx64Kbit/s test groups

TERM - Termination

ASGN - Assigned

The specified NPC has active or under-test assigned termination

COND - Condition

The specified NPC is denied due to condition given by cc

cc - Hexadecimal condition code

cc *Explanation*

00	No conditions
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
15	NPC is unequipped
24	Unit type error
35	NPC has active circuit
3F	Conference exists in a DMB
8F	NPC not deleted
9C	SRDC timeslots are allocated on this NPC
F2	Invalid NPC number specified
FD	NPC range crosses unit boundary
03	DS3U NPC already In-Service
69	Use of this NPC is RESERVED for SLC 96 MD 1
6A	Pseudochannels exist which reference this NPC

DGRTH,NPC,NPCTG,TGR

DEGROWTH TEST-ACCESS GROUP NPC

Explanation Of Command

This command is used to request the removal of the test-access group (TG) designation from a network processing circuit for test-access groups. All TGs associated with this NPCTG must be released before the NPCTG can be deprovisioned. If "TGR" is specified in the command all active TGs will be released and deprovisioned before the NPCTG is deprovisioned. Any out-of-serve (OOS) condition will be bypassed.

A TG may be supported by one or two NPCTGs. Deprovisioning of an NPCTG that supports half (one bundle) of an active TG, will result in the release and deprovisioning of the entire TG; provided "TGR" was specified.

Command

Nonhierarchical

[I.32401]

DGRTH:FRM xy,SEQ ww:NPC [s]abc,NPCTG rrr[,TGR]!

Hierarchical

[I.32401]

DGRTH:FRM xy,SEQ ww:NPC uvmnp,NPCTG rrr[,TGR]!

Completion Message

Nonhierarchical

[O.32401]

M hh:mm:ss xy,ww n[vv] DGRTH NPC [s]abc NPCTG rrr COMPL

or

[O.32402]

M hh:mm:ss xy,ww n[vv] DGRTH NPC [s]abc NPCTG rrr[TGR] p LN MSG:
TGS mmm[,mmm][,mmm][,mmm][,mmm][,mmm][,mmm][,mmm]
[TGS mmm[,mmm][,mmm][,mmm][,mmm][,mmm][,mmm][,mmm]
[TGS mmm[,mmm][,mmm][,mmm][,mmm][,mmm][,mmm][,mmm] COMPL

Hierarchical

[O.32401]

M hh:mm:ss xy,ww n[vv] DGRTH NPC uvmnp NPCTG rrr COMPL

or

[O.32402]

M hh:mm:ss xy,ww n[vv] DGRTH NPC uvmnp NPCTG rrr[TGR] p LN MSG:
TGS mmm[,mmm][,mmm][,mmm][,mmm][,mmm][,mmm][,mmm]
[TGS mmm[,mmm][,mmm][,mmm][,mmm][,mmm][,mmm][,mmm]
[TGS mmm[,mmm][,mmm][,mmm][,mmm][,mmm][,mmm][,mmm] COMPL

Denial Message

Nonhierarchical

[O.32401.01]

M hh:mm:ss xy,ww n[vv] DGRTH NPC [s]abc NPCTG rrr[TGR][TG mmm] COND cc DNY

Hierarchical

[O.32401.01]

M hh:mm:ss xy,ww n[vv] DGRTH NPC uvmnp NPCTG rrr[TGR][TG mmm] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The values are:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

NPCTG - NPC (for) test group

rrr - NPCTG number (1 through 400)

TGR - TG release

This keyword causes any active TGs supported by this NPCTG to be released from testing and degrown before the NPCTG is degrown. It is required if the NPCTG has active TGs.

TGS - TGs supported by the NPCTG

mmm - TG number (1 through 400)

Lowest TG number supported by the NPCTG. This number will be '000' if all TGs have been degrown.

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

- 15** NPC is unequipped
- 89** NPC is not designated for this NPCTP/NPCTG
- A4** NPC is not a NPCTG
- A5** Test group is not idle or frame is not In Service
- A6** Test group release failed
- A8** NPCTG not grown

DGRTH,NPC,NPCTP,TPR

DEGROWTH TEST PORT NPC

Explanation Of Command

This message requests removal of the specified test port designation from the network processing circuit. It deprovisions all test ports in all four test access digroups.

Command

Nonhierarchical

[I.32381]

DGRTH:FRM xy,SEQ ww:NPC [s]abc,NPCTP n[,TPR]!

Hierarchical

[I.32381]

DGRTH:FRM xy,SEQ ww:NPC uvmnp,NPCTP n[,TPR]!

Completion Message

Nonhierarchical

[O.32381]

M hh:mm:ss xy,ww n[vv] DGRTH NPC [s]abc NPCTP n TPS kk-nn\
[TPR] COMPL

Hierarchical

[O.32381]

M hh:mm:ss xy,ww n[vv] DGRTH NPC uvmnp NPCTP n TPS kk-nn\
[TPR] COMPL

Denial Message

Nonhierarchical

[O.32381.01]

M hh:mm:ss xy,ww n[vv] DGRTH NPC [s]abc NPCTP n[TPR] \
COND cc DNY

Hierarchical

[O.32381.01]

M hh:mm:ss xy,ww n[vv] DGRTH NPC uvmnp NPCTP n[TPR] \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The values are:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

NPCTP - NPC test port
n - NPCTP number (1 through 8)

TPR - Test port release

This keyword causes any active test ports to be released from service before the test port NPC is degrown. Without the TPR keyword, the test ports must all be idle or the command is denied.

TPS - Test ports

kk - Beginning test port number

nn - Ending test port number

kk and nn indicate the range of test port numbers which the named NPC included

<i>n</i>	<i>kk</i>	<i>nn</i>
1	01	12
2	13	24
3	25	36
4	37	48
5	49	60
6	61	72
7	73	84
8	85	96

cc - Hexadecimal condition code

cc *Explanation*

15	NPC is unequipped
88	NPC is not a NPCTP
89	NPC is not designated for this NPCTP/NPCTG
8A	NPCTP is not grown
8B	Test port is not idle or frame is not inservice
98	Test Port release failed

DGRTH,SYNC,TB

DEGROWTH SYNCHRONIZER TIME BASE

Explanation Of Command

This command requests the deprovisioning of the synchronizer time base.

Command

[I.32101]

DGRTH:FRM xy,SEQ ww:SYNC,TB!

Completion Message

[O.32101]

M hh:mm:ss xy,ww n[vv] DGRTH SYNC TB TYPE TBpqr COMPL

Denial Message

[O.32101.01]

M hh:mm:ss xy,ww n[vv] DGRTH SYNC TB TYPE TBpqr COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer

TYPE - Type

TB - Time base

p - Time base identifier

qr - Unassigned

q and r can take any value from 0 through 9

p *Time base*

0 Stratum 3

1 CEPT Local

2 CEPT Toll

3 Stratum 2

Note: pqr will be shown as "---" if the synchronizer is not equipped.

cc - Hexadecimal condition code

cc *Explanation*

16 SYNC TB is not equipped

A4 Both syncs are in-service

DGRTH,SYNC,TLI,SSP

DEPROVISION SYNCHRONIZER TIMING LINK INTERFACE

Explanation Of Command

This message requests the deprovisioning of the synchronizer's timing link interface.

If the timing link interface was configured as a timing extractor (**TYPE - txyz**), the synchronizer sync port must be specified as well.

On output, note that the NPC option can be a source of synchronization for a timing link interface. When a TU type TLI receiving its input from an NPC is degrown, the NPC must be marked as no longer being a synchronizer source.

Command

[I.32121]

DGRTH:FRM xy,SEQ ww:SYNC,TLI m[,SSP a]!

Completion Message

[O.32121]

**M hh:mm:ss xy,ww n[vv] DGRTH SYNC TLI m 2 LN MSG:
{SSP a SRC p TYPE txyz|TYPE TDpqr|TYPE TBpqr} COMPL**

Denial Message

[O.32121.01]

**M hh:mm:ss xy,ww n[vv] DGRTH SYNC TLI m 2 LN MSG:
{SSP a SRC p TYPE txyz|TYPE TDpqr|TYPE TBpqr} COND cc DNY**

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer

TLI - Timing link interface

m - TLI number (1 through 4)

SSP - Synchronizer synchronization port

a - SSP number (0 or 1)

SRC - Source

p - Synchronization port priority (1 through 8)

p *Explanation*

1 HIGHEST priority

8 LOWEST priority

TYPE - Type

texyz - Timing extractor type

texyz *Explanation*

TCxyz Composite Clock Timing Extractor

TExyz DS1 Timing extractor

TPxyz Primary Block Timing Extractor (xyz values are listed below)

TRxyz Basic System Reference Frequency

TUxyz Unipolar Clock Timing Extractor

----- Not Equipped

TE-type TLI xyz fields

x	- Frame format
x	<i>Explanation</i>
0	Invalid
1	D4 Format
2, 3	ESF Format
4	DDS (T1DM) Format
5-9	Invalid
y	- Line format
y	<i>Explanation</i>
0, 1	Bipolar Line Coding
2	B8ZS Line Coding
3	Invalid
4, 5	Bipolar Line Coding
6	B8ZS Line Coding
7-9	Invalid
z	- Channel format
z	<i>Explanation</i>
0-9	Unassigned

TC, TR, and TU-type TLI xyz fields

x	- Frame format
y	- Line format
z	- Channel format
Values for x, y, and z are unassigned.	

TD - Timing distributor

p - Timing distributor identification

Variable TDpqr equals "-----" if the timing distributor is not equipped.

p *Explanation*

1 Composite clock timing distribution

2 Sinusoidal 2.048 MHz timing distribution

qr Unassigned

TB - Time base

p - Time base identifier

qr - Unassigned

q and r can take any value from 0 through 9

p *Time base*

0 Stratum 3

1 CEPT Local

2 CEPT Toll

3 Stratum 2

Note: pqr will be shown as "---" if the synchronizer is not equipped.

cc - Hexadecimal condition code

cc **Explanation**

02 Subject entity is not equipped

03 Subject entity is in service

A1 CRO type TLI (SSP portion not required)

A2 SSP number is illegal

A3 SSP number required

B8 CRO is still equipped

BE Hardware mismatch or not present

CC NPC is still provisioned to provide
sync timing

DGRTH,TG

DEGROWTH TEST-ACCESS GROUP

Explanation Of Command

This command is used to request the deprovisioning of one or more idle test-access groups.

Command

[I.32421]

DGRTH:FRM xy,SEQ ww:TG mmm[-nnn]!

Completion Message

[O.32421]

**M hh:mm:ss xy,ww n[vv] DGRTH TG mmm[-nnn] p LN MSG:
TG mmm,rrr,sss[TG mmm,rrr,sss][TG mmm,rrr,sss][TG mmm,rrr,sss]
[TG mmm,rrr,sss][TG mmm,rrr,sss][TG mmm,rrr,sss][TG mmm,rrr,sss]
[TG mmm,rrr,sss][TG mmm,rrr,sss][TG mmm,rrr,sss][TG mmm,rrr,sss]
[TG mmm,rrr,sss][TG mmm,rrr,sss][TG mmm,rrr,sss][TG mmm,rrr,sss] {EOM|COMPL}**

or

M hh:mm:ss xy,ww n[vv] DGRTH TG ppp[-qqq] UEQD {EOM|COMPL}

Denial Message

[O.32421.01]

M hh:mm:ss xy,ww n[vv] DGRTH TG mmm[-nnn] [TGS ttt[-uuu]] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TG - Test-access Group

mmm - TG number (1 through 400)

nnn - End of TG range number (1 through 400)

rrr - East-bundle NPCTG number (1 through 400)

sss - West-bundle NPCTG number (1 through 400)

UEQD - Unequipped

ppp,qqq
- Unequipped TGs in specified range

ttt,uuu
- Active TGs in specified range

cc - Hexadecimal condition code

cc *Explanation*

63 None of the designated TG(s) are equipped

A5 Test group is not idle or frame is not In Service

DGRTH,TP

DEGROWTH

Explanation Of Command

This message requests the unequipage of a specified test port. Any subsequent test access requests for this test port will be denied. Also, if the specified test port is in use, the command will be denied.

When degrowth of the specified test port is completed, the channel units associated with this test port are no longer assumed in place, and no test ports with numbers greater than the one specified remain equipped.

Command

[I.32411]

DGRTH:FRM xy,SEQ ww:TP kk!

Completion Message

[O.32411]

M hh:mm:ss xy,ww n[vv] DGRTH TP kk COMPL

Denial Message

[O.32411.01]

M hh:mm:ss xy,ww n[vv] DGRTH TP kk NPCTP UEQD DNY

[O.32411.02]

M hh:mm:ss xy,ww n[vv] DGRTH TP kk NOT IDLE DNY

[O.32411.03]

M hh:mm:ss xy,ww n[vv] DGRTH TP kk TPMAX nn TP NSO DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TP - Test port

kk - Test port number (01 through 96)

NPCTP - NPC for test ports

UEQD - Unequipped

TPMAX - Test port maximum

nn - Test port number (01 through 96)

NSO - Not in sequence order

Degrowth of test port kk can be denied under the following conditions:

- The NPCTP (network processing circuit for test ports) has not been designated or UEQD.
- The requested test port is not idle. The test port is currently assigned to a cross-connected channel for test access (NOT-IDLE).
- The requested test port is NSO (not in sequence order) (TPMAX=nn, TP, NSO). That is, kk is not equal to the highest existing test port number nn in the NPCTP.

DGRTH,UNIT

DEGROW UNIT

Explanation Of Command

When this request is completed, the two ETSI circuit packs required by the subject unit to cross-connect to other grown units are unequipped.

This message requests the degrowth of a DACS II unit.

When this request is completed, all cross-connect buffer and time slot interchange circuit packs required by the subject unit to cross-connect to other grown units are degrown.

When this request is completed, the two ETSI circuit packs required by the subject unit to cross-connect to other grown units are degrown.

Command

[I.32211]

DGRTH:FRM xy,SEQ ww:UNIT [q]q!

Completion Message

For DACS II Non-CEF frames:

[O.32211]

M hh:mm:ss xy,ww n[vv] DGRTH UNIT q 5 LN MSG:
TOTAL TSIS tt DEGROWN TSIS dd
sft sft sft sft sft sft sft sft sft sft
sft sft sft sft sft sft sft sft sft sft
sft sft sft sft sft sft sft sft sft sft EOM

M hh:mm:ss xy,ww n[vv] DGRTH UNIT q 5 LN MSG:
TOTAL TSIS tt DEGROWN TSIS dd
sft sft sft sft sft sft sft sft sft sft
sft sft sft sft sft sft sft sft sft sft
sft sft sft sft sft sft sft sft sft sft EOM

M hh:mm:ss xy,ww n[vv] DGRTH UNIT q e LN MSG:
TOTAL TSIS tt DEGROWN TSIS dd
DEGROWN TSIS sft sft ... sft sft

.
.
.

DEGROWN TSIS sft sft ... sft sft {EOM|COMPL}

If the unit is a DS3 or Hybrid DS3 Unit, the above message will be followed by this segment:

[O.32211]

M hh:mm:ss xy,ww n[vv] DGRTH UNIT q e LN MSG:
[REMOVED FMT[0][1]]
DEGROWN FMT 0 1 FLI S P MXR P COMPL

Note: The line corresponding to FMT removal will only be output if one or both FMTs have been removed.

For DACS II CEF frames:

[O.32212]

M hh:mm:ss xy,ww n[vv] DGRTH UNIT qq 4 LN MSG:
TOTAL ETSIS kk DEGROWN ETSI 0qq 1qq
0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr \
0rr 1rr
0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr \
0rr 1rr {EOM|COMPL}

If the unit is a DS3 or a Hybrid DS3 Unit, the above message will be followed by this segment:

[O.32211]

M hh:mm:ss xy,ww n[vv] DGRTH UNIT qq e LN MSG:
[REMOVED FMT[0][1]]
DEGROWN FMT 0 1 FLI S P MXR P COMPL

Note: The line corresponding to FMT removal will only be output if one or both FMTs have been removed.

Denial Message

[O.32211.01]

M hh:mm:ss xy,ww n[vv] DGRTH UNIT [q]q UEQD DNY

[O.32211.02]

M hh:mm:ss xy,ww n[vv] DGRTH UNIT [q]q \
[{FTMI m EQD|NPC l EQD|[MXR k][MIU P][EQD] }][FLI c IS] \
DNY

[O.32211.03]

M hh:mm:ss xy,ww n[vv] DGRTH UNIT [q]q COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

TOTAL - Total

TSIS - Time slot interchangers

tt - Total number of provisioned TSIs in frame after unit is degrown
(00 through 70)

dd - Number of TSIs deprovisioned by command (00 through 22)

sft - TSI equipped status

s - Service side number (0 or 1)

f

- FROM unit number

f *Explanation*

n Unit number n (equals 1 through 6) is equipped

- Not equipped

t

- TO unit number

t *Explanation*

n Unit number n (equals 1 through 6) is equipped

- Not equipped

e - Number of lines in the output message segment (2 through 4)

DEGROWN

- Degrown

Degrowth of UNIT q (1 through 6) can be denied because:

kk - Total number of equipped ETSIs in the frame after the unit is degrown
(00 through 30)

ETSIS - Expanded time slot interchangers

ETSI - Expanded time slot interchanger

0qq - ETSI number side 0

1qq - ETSI number side 1

0qq and 1qq identify the ETSI packs dep provisioned by this command.
qq is the unit number (see UNIT above).

Three dashes "---" are shown if an ETSI pack is not provisioned.

0rr - ETSI number side 0

1rr - ETSI number side 1

0rr and 1rr give the ETSIs equipage status. rr is the unit number
(see UNIT above)

Three dashes "---" are shown if an ETSI pack is not provisioned.

- The unit is already degrown (UEQD), or

- The FTU is still equipped with m FTMI's (facility terminating module interfaces), or
- The DSPU is supporting l NPC's, or
- The unit controller (UC) is in service (IS)
- The DS3U is still equipped with k multiplexers (MXR's) or Hybrid multiplexers (HMXR) and/or the protection multiple interface unit (MIU P), or
- The DS3U or Hybrid DS3U is supporting at least one in-service facility line interface (FLI),

Note that Hybrid DS3U does not support MIU.

FLI - Facility line interface

S - Service

P - Protection

FMT - Formatter or Hybrid Formatter

0 - Side number 0

1 - Side number 1

MIU - Multiple interface unit

MXR - Multiplexer or Hybrid Multiplexer

P - Protection

FTMI - Facility terminating module interface

m - Number of FTMI's (1 through 4). Will appear if the unit is equipped as an FTU.

NPC - Network processing circuit

l - Number of NPC's in DSP unit (1 through 8). Will appear if the unit is equipped as a DSPU.

k - Number of MXR's or HMXR's (1 through 6). Will appear if the unit is equipped as a DS3U or a HDS3U.

c - Number of FLI's that are in service (1 or 2). Will appear if the unit is equipped as a DS3U or a HDS3U.

EQD - Equipped

cc - Hexadecimal condition code

cc *Explanation*

00 No conditions

03 Subject entity is in service

4D DSPI is in service

DGRTH,UNIT,FTMI

DEPROVISION FACILITY TERMINATING MODULE INTERFACE

Explanation Of Command

This command requests unequipage of a DACS II facility terminating module and its associated facility terminating module interface.

Command

[I.32321]

DGRTH:FRM xy,SEQ ww:UNIT [q]q,FTMI d!

Completion Message

[O.32321]

M hh:mm:ss xy,ww n[vv] DGRTH UNIT [q]q FTMI d FC 0d 1d COMPL

Denial Message

[O.32321.01]

**M hh:mm:ss xy,ww n[vv] DGRTH UNIT [q]q FTMI d\
[FC sd][NPC n] {UEQD|EQD|IS} DNY**

[O.32321.02]

**M hh:mm:ss xy,ww n[vv] DGRTH UNIT [q]q FTMI d FC 0d 1d \
COND cc DNY**

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FTMI - Facility terminating module interface

d - FTMI number in the DACS II unit (1 through 4)

FC - Format converter

s - Side of in-service FC

s Explanation

0 Side 0 FC in-service

1 Side 1 FC in-service

2 Both sides in-service

NPC - Network processing circuit

n - Number of the NPC in the FTM that are still equipped (1 through 40)

UEQD - The FTMI is unequipped

EQD - Equipped

IS - In service

Format converter side (FC sd) is still in-service

cc - Hexadecimal condition code

cc Explanation

00 No conditions

03 Subject entity is in service

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

30 Unit is not FTU type

DGRTH,UNIT,MIU

DEPROVISION MULTIPLEXER INTERFACE UNIT

Explanation Of Command

This message requests and reports the degrowth of one or more Multiplexer Interface Units (MIUs) in a DS3 unit.

Command

[I.32511]

DGRTH:FRM xy,SEQ ww:UNIT [q]q,MIU c[-d]!

Completion Message

[O.32511]

M hh:mm:ss xy,ww n[vv] DGRTH UNIT [q]q MIU a TYPE mnxyz COMPL

Denial Message

[O.32511.01]

**M hh:mm:ss xy,ww n[vv] DGRTH UNIT [q]q MIU a[TYPE mnxyz] \
COND cc DNY**

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MIU - Multiplexer interface unit

c, d - The number of the MIU within the unit (P, 1 through 6)

TYPE - Type

mnxyz - Type identifier

mnxyz Explanation

MI100 MIU type. This is the only MIU type available.

a - MIU number within the range of c and d.

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

B3 MIU is already in service

BF MIU is not equipped

52 The MMFG is protected

53 The associated MMFG is under protection (for Service MIUs)

55 Some associated NPCs are equipped

DGRTH,UNIT,MXR

DEGROWTH MULTIPLEXER

Explanation Of Command

This message requests and reports the degrowth of one or more Multiplexers (MXRs) and associated DS3 facilities in the service slots of a DS3 unit. It is also used to request and report the degrowth of one or more Hybrid Multiplexers (HMXRs) and associated DS3 facilities in the service slots of a Hybrid DS3 unit.

Command

[I.32501]

DGRTH:FRM xy,SEQ ww:UNIT [q]q,MXR c[-d]!

Completion Message

[O.32501]

M hh:mm:ss xy,ww n[vv] DGRTH UNIT [q]q MXR a TYPE mnxyz COMPL

Denial Message

[O.32501.01]

**M hh:mm:ss xy,ww n[vv] DGRTH UNIT [q]q MXR a[TYPE mnxyz] \
COND cc DNY**

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MXR - Multiplexer

c, d - The number of the MXR within the unit ($1 \leq c, d \leq 6$)

Note: The Protection MXR is degrown along with the UNIT.

a - MXR number within the range of c and d

TYPE - The requested DS3 format that will be processed by the MXR.

mnxyz - The DS3 format processed by the MXR:

mn - the type of DS3 facility

MX : the original R4.0 DS3 facility type supported by the Multiplexer (MXR) circuit pack (KCR-1).

EX : the enhanced R6.0 DS3 facility type supported by the Enhanced Multiplexer (EMXR) circuit pack (KCR-5).

HX : The hybrid facility type supported by the Hybrid Multiplexer (HMXR) circuit pack (KCR-8).

If the unit is a regular DS3U of unit type DT100, then the Default is the MX type for backward compatibility.

If the unit is a Hybrid DS3U of unit type HT100, then the default is HX.

Allowed xyz values

Type Explanation

MX100 KCR-1 circuit pack with M13 framing

MX200 KCR-1 circuit pack with C-bit parity framing

EX100 KCR-5 circuit pack with M13 framing

EX200 KCR-5 circuit pack with C-bit parity framing

HX100 KCR-8 Hybrid circuit pack with M13 framing

HX110 KCR-8 Hybrid circuit pack with M13 framing and reverse interpretation of X-bit values.

cc - Hexadecimal condition code

cc *Explanation*

- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 9B** The MXR is not grown
- 52** The MMFG is protected
- 53** The associated MMFG is under protection (for Service MIUs)
- 54** The MIU is already equipped
- 55** Some associated NPCs are equipped
- 56** The MXR is in service

DLT,FPKG

DELETE FEATURE PACKAGE IDENTIFICATION

Explanation Of Command

The frame administrator enters this command to change the feature package identification code. This command is used to reduce the feature package set by a single feature at a time.

Note: The execution of this command requires DACS II superuser privileges. The frame must be in the **MCOND** (maintenance condition) state at execution.

WARNING: A manual backup from RAM to MEM (PMEM & SMEM together) must be invoked prior to entering Maintenance Condition, else the command may not complete.

Because of the impact of this command on the available features, the following dialogue will be displayed by DACS II.

ARE YOU SURE?

The user must respond with an affirmative Y for the command to be executed.

Command

[I.37301]

DLT:FRM xy,SEQ ww:FPKG nnnnnnnn!

Completion Message

[O.37301]

**M hh:mm:ss xy,ww n[vv] DLT FPKG nnnnnnnn NEW aabbccdd \
OLD kkttuuvv COMPL**

Denial Message

[O.37301.01]

M hh:mm:ss xy,ww n[vv] DLT FPKG nnnnnnnn COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FPKG - Feature package

nnnnnnnn

- Feature Package number (hexadecimal)

nnnnnnnn Explanation

00000001	DS1
00000002	CEPT
00000004	Subrate
00000008	Direct SLC® 96 and Series 5 Carrier Interface
00000010	DS3 Terminations
00000020	Enhanced CEPT
	C-bit
	C-bit filtering
	RPSFI
00000040	Switched Teleconferencing
00000080	CEF
00000100	Enhanced DS1 Performance Monitoring
00000200	DS0/DS1 Roll
00000400	Security Warning Message
00000800	Nx64kbit Test Access
00001000	Clear 2MB/s Interface
00002000	TS0 to Non-TS0 Cross-connection
00004000	2MB/S Roll
00008000	SPARE
00010000	TRT/FT Features
	Intervention Level
00020000	DS3 Hybrid

NEW - New

aabbccdd

- New feature package identification code (hexadecimal)

OLD - Old

kkttuuvv

- Old feature package identification code (hexadecimal)

aabbccdd

kkttuuvv *Explanation*

00000001	DS1
00000002	CEPT
00000004	Subrate
00000008	Direct SLC® 96 and Series 5 Carrier Interface
00000010	DS3 Terminations
00000020	Enhanced CEPT
	C-bit
	C-bit filtering
	RPSFI
00000040	Switched Teleconferencing
00000080	CEF
00000100	Enhanced DS1 Performance Monitoring
00000200	DS0/DS1 Roll
00000400	Security Warning Message
00000800	Nx64kbit Test Access
00001000	Clear 2MB/s Interface
00002000	TS0 to Non-TS0 Cross-connection
00004000	2MB/S Roll
00008000	SPARE
00010000	TRT/FT Features
	Intervention Level
00020000	DS3 Hybrid

In general a feature package identification code is a combination of several individual feature package numbers. To determine the individual features that make up a feature package it is necessary to decode the feature package identification code. This code is an eight digit hexadecimal number. Each hexadecimal number represents a four-bit binary number. Within this binary number each feature is associated with one particular bit. Consequently to determine the feature list from a feature package identification code it is necessary to convert each hexadecimal digit to its binary equivalent and look up the features in the list above. For example the feature package identification code 0000000F can be converted to the following binary number working from left to right one hex digit at a time.

0000 0000 0000 0000 0000 0000 0000 1111

This number contains eight binary numbers each representing one of the hexadecimal numbers in the feature package identification code 0000000F. The rightmost number of the code contains four features since there are four bits set to one. This would be decoded as follows using the table of features above.

	binary	hex	Feature
	0001	1	DS1
	0010	2	CEPT
	0100	4	Subrate
	1000	8	Direct SLC
Total	1111	F	(DS1 + CEPT + Subrate + SLC)

cc - Hexadecimal condition code

cc *Explanation*

- 96** Unit(s) OOS, and additional backup required
- 25** Invalid FPI value
- 26** Feature deactivation would leave system with core software
- 27** Disable not allowed - supports another feature
- 28** Feature is active
- 29** Feature not enabled
- 2A** Database not loaded
- 2B** Reading Feature Package Id from PMEM failed
- 2C** Writing Feature Package Id to PMEM failed
- 01** Backup required before executing this command

DLT,MACRO,MAP,USER

DELETE MACRO

Explanation Of Command

This command requests the deletion of a macro or alternate map from the DACS II system.

Note: Only the DACS II frame administrator can remove a public macro or another user's macros and maps. The names of public macros begin with the letter P.

Command

[I.37201]

DLT:FRM xy,SEQ ww:{MACRO <macro name>|MAP <map name>}\
[,USER <user id>]!

Completion Message

[O.37201]

M hh:mm:ss xy,ww n[vv] DLT {MACRO <macro name>|MAP <map name>}\
[USER <user id>] COMPL

Denial Message

[O.37201.01]

M hh:mm:ss xy,ww n[vv] DLT {MACRO <macro name>|MAP <map name>}\
[USER <user id>] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

macro name

- Macro name (seven characters maximum length)

The name of a collection of DACS II commands executed as a group.

A macro name is a string of capitalized alphanumeric characters. There are two type of macros; public and private. A private macros is created by a user in space allocated to the user by the system administrator. Only the user that created it can execute or read (LIST) a private macro. A public macro is created by the system administrator and is executable and readable by all users. A public macro name must start with the letter "P". A private macro name must not start with the letter "P".

map name

- Map name (seven characters maximum length)

The name of a collection of DACS II cross-connect commands that can be activated as a group to produce a new set of cross-connections (a new cross-connect map).

A map name is a string of capitalized alphanumeric characters.

user id

- User identifier (two to eight alphabetic characters)

The user field is the user's login identifier. It is used only by the frame administrator to delete a private macro or map owned by the user specified. A user does not need to specify this information in order to delete a personally owned (private) macro or map.

cc - Hexadecimal condition code

cc *Explanation*

- 62** File is being accessed
- 64** File doesn't exist/can't be accessed
- D0** Command is Frame administrator (DAX) only.
- D3** User does not exist
- D5** No user is logged in on the link/vc

DLT,NPC

EDIT DELETE MAP

Explanation Of Command

This command is only used in the open and create session of the alternate map feature. It is not intended to be used as a regular command under any circumstances.

This message is used to *delete* a single NPC, a range of NPCs, or a list of NPCs, from an alternate map.

To delete circuits from an alternate map, enter the **TCON : :FRM,TO** command (I.11001) with the DLT keyword at the end.

The only system response to this command is:

OK

Denials in response to this command are sent only to the link on which the command was input.

Command

Nonhierarchical

[I.37001]

**DLT:FRM xy,SEQ ww:NPC {[s]abc-[t]def|[s]abc[, [s]ghi]...\
[, [t]def]]}!**

Hierarchical

[I.37001]

DLT:FRM xy,SEQ ww:NPC {uvmnp-wxkqr|uvmnp[,abcde]...[,wxkqr]}!

Completion Message

If the command is accepted by DACS II, the following input acknowledgement is output.

OK

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc, [t]def, [s]ghi

- The 3- or 4-digit non-hierarchical NPC numbers

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp, wkxqr, abcde

- Hierarchical NPC number

uv, wk, ab

- Unit number

m, x, c

- Module number

np, qr, de

- NPC number

The values are:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

cc - Hexadecimal condition code

cc *Explanation*

7A The NPC to delete has not been previously added to map

DLT,RT,DL,DGA,DGB,DGC,DGD,DGP

DELETE {RT|DL}

Explanation Of Command

This command is used to delete the association of a network processing circuit (NPC) number with a SLC[®] carrier remote terminal (RT) or digital carrier line unit (DCLU) bank's digroup name. Once all of digroups of a specific bank are deleted, the bank's identification number and its mode of operation will also be deleted.

Note that at least one digroup name and NPC number must be specified on input.

For the denial message, the optional A, B, C, D, or P character will be shown to indicate the digroup that causes the denial.

Command

Nonhierarchical

[I.37211]

```
DLT:FRM xy,SEQ ww:{RT|DL} ffff[,DGA [s]aaa][,DGB [s]bbb]\  
[,DGC [s]ccc][,DGD [s]ddd][,DGP [s]ppp]!
```

Hierarchical

[I.37211]

```
DLT:FRM xy,SEQ ww:{RT|DL} ffff\  
[,DGA uvjab][,DGB uvkcd][,DGC uvlef][,DGD uvmgh]\  
[,DGP uvjpr]!
```

Completion Message

Nonhierarchical

[O.37211]

M hh:mm:ss xy,ww DLT {RT|DL} ffff 2 LN MSG:
[DGA [s]aaa][DGB [s]bbb][DGC [s]ccc][DGD [s]ddd]\
[DGP [s]ppp] COMPL

Hierarchical

[O.37211]

M hh:mm:ss xy,ww DLT {RT|DL} ffff 2 LN MSG:
[DGA uvjab][DGB uvkcd][DGC uvlef][DGD uvmgh]\
[DGP uvjpr] COMPL

Denial Message

Nonhierarchical

[O.37211.01]

M hh:mm:ss xy,ww DLT {RT|DL} ffff 2 LN MSG:
[DGA [s]aaa][DGB [s]bbb][DGC [s]ccc][DGD [s]ddd]\
[DGP [s]ppp][{A|B|C|D|P}] COND cc DNY

Hierarchical

[O.37211.01]

M hh:mm:ss xy,ww DLT {RT|DL} ffff 2 LN MSG:
[DGA uvjab][DGB uvkcd][DGC uvlef][DGD uvmgh][DGP uvjpr]
[{A|B|C|D|P}] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

RT - SLC® Carrier Remote Terminal

DL - Digital Carrier Line Unit

ffff - Bank identification number (0000 to 9999 inclusive)

DGA - SLC Carrier digroup A

DGB - SLC Carrier digroup B

DGC - SLC Carrier digroup C

DGD - SLC Carrier digroup D

DGP - SLC Carrier digroup P

[s]aaa - The 3- or 4-digit nonhierarchical DGA NPC number

[s]bbb - The 3- or 4-digit nonhierarchical DGB NPC number

[s]ccc - The 3- or 4-digit nonhierarchical DGC NPC number

[s]ddd - The 3- or 4-digit nonhierarchical DGD NPC number

[s]ppp - The 3- or 4-digit nonhierarchical DGP NPC number

If NPC numbers are expressed in three digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

uv - Unit number

j, k, l, m

- Module number within the unit

ab - Digroup A (DGA) NPC number within the module

cd - Digroup B (DGB) NPC number within the module

ef - Digroup C (DGC) NPC number within the module

gh - Digroup D (DGD) NPC number within the module

pr - Digroup P (DGP) NPC number within the module

The allowable values are presented below:

DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

A, B, C, D, P

- Digroup A, B, C, D, or P.

This is used to indicate the digroup that caused the denial.

cc - Hexadecimal condition code

cc *Explanation*

03 Subject entity is in service

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

15 NPC is unequipped

35 NPC has active circuit

6A NPC type is not DS type

78 Protection switch process failed

7E Bank id number not found

7F NPC is not added

80 NPC number and bank id don't match

81 NPC number and digroup name don't match

87 DGP is protecting a primary digroup

cc *Explanation*

- 89** Can't delete because not all associated NPCs of the RT are entered
- 8B** Digroup name and bank id don't match
- 8C** Digroup is protected
- 93** All digroups not out of service
- BC** DGA and DGB must be specified together in the command
- BD** DGC and DGD must be specified together in the command
- F9** Mate NPC (DGA/DGP) is in service
- 59** Number of DGPs on each unit is limited to 32
- 69** Use of this NPC is RESERVED for SLC 96 MD 1
- 02** Manual Pending is Active

DLT,USER

DELETE USER

Explanation Of Command

This command requests the deletion of **<user id>** from the DACS II system.

Output from this command is sent only to the link on which the command was input.

⇒ NOTE:

Note: This command may be used only by the DACS II frame administrator. It may be executed on any administrative link.

Command

[I.37101]

DLT:FRM xy,SEQ ww:USER <user id>!

Completion Message

[O.37101]

M hh:mm:ss xy,ww n[vv] DLT USER <user id> COMPL

Denial Message

[O.37101.01]

M hh:mm:ss xy,ww n[vv] DLT USER <user id> COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

USER - User

user id

- User identifier

User login identification (two to eight alphabetic characters)

cc - Hexadecimal condition code

cc *Explanation*

D0 Command is Frame administrator (DAX) only.

D3 User does not exist

D8 Cannot remove Frame administrator

D9 User has logged in somewhere

DB User still owns files

DSPC

DIGITAL SIGNAL PROCESSING PLATFORM APPLICATION COMMANDS

Explanation Of Command

This command explains the command syntax from the DACS II point of view for all applications that run on the Digital Signal Processing Platform (DSPP) circuit pack (TG193). All applications use a prefix system for both input commands and output messages of all types for communication between the user and the application. This prefix system is defined in the subsequent commands and messages. The prefix system permits DACS II to send a command to an application without parsing and/or examining that command. Any return message from the application uses a prefix also, which is simply prepended to the return message from the application by DACS II. Similarly, an autonomous message from an application is prepended with a prefix that identifies the NPC number of the particular DSPP circuit pack on which the message was issued.

The commands for a particular application are given in detailed form in the documentation package for that application. In that documentation the prefix notation that is explained here is also given, so that the user sees a complete command structure. Depending on the individual command that command may be sent to an individual DSPP circuit pack running that application, a range of circuit packs running that application, or all circuit packs running that application restored in the frame.

Command

Nonhierarchical

[I.14901]

DSPC: [FRM xy, SEQ ww]:{[s]aaa|[s]aaa-[v]bbb|SDxyz}:<pds_application command>

Hierarchical

[I.14901]

DSPC:[FRM xy,SEQ ww]:{uvnmp|uvnmp-wxkqr|SDxyz}:<pds_application command>

Completion Message

Nonhierarchical

Command using single NPC

[O.14901]

M hh:mm:ss xy,ww n[vv] DSPC [s]aaa <pds_application_response for NPC [s]aaa>

Command using range of NPCs

[O.14901]

M hh:mm:ss xy,ww n[vv] DSPC [s]aaa <pds_application_response for NPC [s]aaa>

.
.
.

M hh:mm:ss xy,ww n[vv] DSPC [v]bbb <pds_application_response for NPC [v]bbb>

M hh:mm:ss xy,ww n[vv] DSPC [s]aaa-[v]bbb <pds_input_command - truncated>....COMPL

Command using NPC type

[O.14901]

M hh:mm:ss xy,ww n[vv] DSPC [s]aaa <pds_application_response for NPC [s]aaa>

.
.
.

M hh:mm:ss xy,ww n[vv] DSPC [v]bbb <pds_application_response for NPC [v]bbb>

M hh:mm:ss xy,ww n[vv] DSPC SDxyz <pds_input_command - truncated>....COMPL

Hierarchical

Command using single NPC

[O.14901]

M hh:mm:ss xy,ww n[vv] DSPC uvnmp <pds_application_response for NPC uvnmp>

Command using range of NPCs
[O.14901]

```
M hh:mm:ss xy,ww n[vv] DSPC uvnmp <pds_application_response for NPC uvnmp>
.
.
.
M hh:mm:ss xy,ww n[vv] DSPC wxkqr <pds_application_response for NPC wxkqr>
M hh:mm:ss xy,ww n[vv] DSPC uvnmp-wxkqr <pds_input_command - truncated>...COMPL
```

Command using NPC type
[O.14901]

```
M hh:mm:ss xy,ww n[vv] DSPC uvnmp <pds_application_response for NPC uvnmp>
.
.
.
M hh:mm:ss xy,ww n[vv] DSPC wxkqr <pds_application_response for NPC wxkqr>
M hh:mm:ss xy,ww n[vv] DSPC SDxyz <pds_input_command - truncated>...COMPL
```

Denial Message

Nonhierarchical

Command using single NPC
[O.14901.01]

```
M hh:mm:ss xy,ww n[vv] DSPC [s]aaa <pds_application_error_response for NPC [s]aaa>
```

Command using range of NPCs
[O.14901.01]

```
M hh:mm:ss xy,ww n[vv] DSPC [s]aaa <pds_application_error_response for NPC [s]aaa>
.
.
.
M hh:mm:ss xy,ww n[vv] DSPC [v]bbb <pds_application_error_response for NPC [v]bbb>
M hh:mm:ss xy,ww n[vv] DSPC [s]aaa-[v]bbb \
<pds_input_command - truncated>...COND cc DNY
```

Command using NPC type
[O.14901.01]

```
M hh:mm:ss xy,ww n[vv] DSPC [s]aaa <pds_application_error_response for NPC [s]aaa>
.
.
.
M hh:mm:ss xy,ww n[vv] DSPC [v]bbb <pds_application_error_response for NPC [v]bbb>
M hh:mm:ss xy,ww n[vv] DSPC SDxyz <pds_input command - truncated>...COND cc DNY
```

Command of any type when no DSPP circuit pack with application is responding
[O.14901.01]

```
M hh:mm:ss xy,ww n[vv] DSPC {[s]aaa|[s]aaa-[v]bbb|SDxyz} \  
<pds_input_command - truncated>.... COND cc DNY
```

Hierarchical

Command using single NPC
[O.14901.01]

```
M hh:mm:ss xy,ww n[vv] DSPC uvnmp <pds_application_error_response for NPC uvnmp>
```

Command using range of NPCs
[O.14901.01]

```
M hh:mm:ss xy,ww n[vv] DSPC uvnmp <pds_application_error_response for NPC uvnmp>  
.  
.  
.  
M hh:mm:ss xy,ww n[vv] DSPC wxkqr <pds_application_error_response for NPC wxkqr>  
M hh:mm:ss xy,ww n[vv] DSPC uvnmp-wxkqr \  
<pds_input_command - truncated>....COND cc DNY
```

Command using NPC type
[O.14901.01]

```
M hh:mm:ss xy,ww n[vv] DSPC uvnmp <pds_application_error_response for NPC uvnmp>  
.  
.  
.  
M hh:mm:ss xy,ww n[vv] DSPC wxkqr <pds_application_error_response for NPC wxkqr>  
M hh:mm:ss xy,ww n[vv] DSPC SDxyz \  
<pds_input command - truncated>....COND cc DNY
```

Command of any type when no DSPP circuit pack with application is responding
[O.14901.01]

```
M hh:mm:ss xy,ww n[vv] DSPC {uvnmp|uvnmp-wxkqr|SDxyz} \  
<pds_input_command - truncated>.... COND cc DNY
```

Autonomous Message

Nonhierarchical

[O.14901]

I hh:mm:ss xy,ww ALM DSPC [s]aaa <pds_application_autonomous_message>

Hierarchical

[O.14901]

I hh:mm:ss xy,ww ALM DSPC uvnmp <pds_application_autonomous_message>

Explanation Of Parameters

DSPC - Execute <pds_application_command> on
Digital Signal Processing Platform (DSPP)

[s]aaa - NPC number of DSPP Platform running application that will
receive command or NPC number at beginning of range
(3- or 4-digit)

uvnmp - NPC number of DSPP Platform running application that will
receive command or NPC number at beginning of range
(hierarchical)

[v]bbb - NPC number for end of range specified or last NPC number
in frame of type SDxyz (3- or 4-digit)

wxkqr - NPC number for end of range specified or last NPC number
in frame of type SDxyz (hierarchical)

SDxyz - Type designation for DSPP Platform running application "x".

This addresses all DSPP circuit packs that run application "x", where "x" is a hexadecimal number that identifies the application. Values "y" and "z" are ignored, because they are possibly used internally by the application at the time the application is restored. Please note that "SDxyz" is also used at the time a DSPP circuit pack is grown to run a particular application.

- <pds_application_command> - This is a PDS command string that is sent to the application.
- <pds_application_response for NPC hhh> - This is an application command response in PDS for the particular NPC designated by the number hhh
- <pds_application_error_response for NPC hhh> - This is a PDS error message generated when the application running on NPC hhh found an error in a command
- <pds_application_autonomous_message> - This is an application autonomous message in PDS

Beyond the prefix notation that is explained here no specific conventions for an application are documented here. Instead, the exact command structure for commands that are handled by an application is given by the documentation for that application. This includes such items as terminating "!" for PDS strings and terminating ";" for MML strings. All error messages and condition codes generated by the application are given in the application documentation.

cc - Hexadecimal condition code

cc *Explanation*

02	Subject entity is not equipped
04	Subject entity is out of service
26	NPC type error
07	Application circuit pack is out of service
F2	Invalid NPC number specified
E9	Platform Communication Error
EA	The (last) destination NPC denies the DSPC command
EB	The (last) destination NPC failed, and was rebooted
B3	Initialization of application in progress, retry command later

Contents

EBX,STARTUP,STF,ATP	11-2
■ Explanation Of Command	11-2
■ Command	11-2
■ Completion Message	11-2
■ Denial Message	11-2
■ Autonomous Message	11-2
■ Explanation Of Parameters	11-3
ED,CRET,MAP,PIC	11-4
■ Explanation Of Command	11-4
■ Command	11-4
■ Completion Message	11-4
■ Nonhierarchical	11-4
■ Hierarchical	11-5
■ Denial Message	11-5
■ Autonomous Message	11-5
■ Explanation Of Parameters	11-5
ED,MACRO,MAP	11-11
■ Explanation Of Command	11-11
■ Command	11-14
■ Completion Message	11-14
■ Denial Message	11-14
■ Autonomous Message	11-15
■ Explanation Of Parameters	11-15
EMTC,STARTUP,STF,ATP	11-17
■ Explanation Of Command	11-17
■ Command	11-17

Contents

■ Completion Message	11-17
■ Denial Message	11-17
■ Autonomous Message	11-17
■ Explanation Of Parameters	11-18
END,LOG	11-19
■ Explanation Of Command	11-19
■ Command	11-19
■ Completion Message	11-19
■ Denial Message	11-19
■ Autonomous Message	11-19
■ Explanation Of Parameters	11-20
END,LOG,ABORTED	11-21
■ Explanation Of Command	11-21
■ Command	11-21
■ Completion Message	11-21
■ Denial Message	11-21
■ Autonomous Message	11-21
■ Explanation Of Parameters	11-22
ERR,CMD,ABT,TN,STOPPED	11-23
■ Explanation Of Command	11-23
■ Command	11-23
■ Completion Message	11-23
■ Denial Message	11-23
■ Autonomous Message	11-23
■ Explanation Of Parameters	11-24
ERR,ESR,ANALYSIS,REPORT,EVENT	11-25
■ Explanation Of Command	11-25
■ Command	11-25
■ Completion Message	11-25
■ Denial Message	11-25
■ Autonomous Message	11-25
■ Explanation Of Parameters	11-26
ERR,ESR,CCB,TN,EVENT,COND	11-28
■ Explanation Of Command	11-28
■ Command	11-28
■ Completion Message	11-28
■ Denial Message	11-28

Contents

■ Autonomous Message	11-28
■ Explanation Of Parameters	11-29
ERR,ESR,CCI,TN,EVENT,COND	11-30
■ Explanation Of Command	11-30
■ Command	11-30
■ Completion Message	11-30
■ Denial Message	11-30
■ Autonomous Message	11-30
■ Explanation Of Parameters	11-31
ERR,ESR,CCNI,TN,EVENT,COND	11-33
■ Explanation Of Command	11-33
■ Command	11-33
■ Completion Message	11-33
■ Denial Message	11-33
■ Autonomous Message	11-33
■ Explanation Of Parameters	11-34
ERR,ESR,ETSI,TN,EVENT,COND	11-40
■ Explanation Of Command	11-40
■ Command	11-40
■ Completion Message	11-40
■ Denial Message	11-40
■ Autonomous Message	11-40
■ Explanation Of Parameters	11-41
ERR,ESR,MC,MP,CI,TN	11-43
■ Explanation Of Command	11-43
■ Command	11-43
■ Completion Message	11-43
■ Denial Message	11-43
■ Autonomous Message	11-43
■ Explanation Of Parameters	11-44
ERR,ESR,MC,MP,TN,EVENT,COND,CI,BX,EBX	11-45
■ Explanation Of Command	11-45
■ Command	11-45
■ Completion Message	11-45
■ Denial Message	11-45
■ Autonomous Message	11-45
■ Explanation Of Parameters	11-46

Contents

ERR,ESR,NPC,SIDE,TN,EVENT,COND	11-49
■ Explanation Of Command	11-49
■ Command	11-49
■ Completion Message	11-49
■ Denial Message	11-49
■ Autonomous Message	11-49
■ Nonhierarchical	11-49
■ Hierarchical	11-50
■ Explanation Of Parameters	11-50
ERR,ESR,NPC,TN,EVENT,COND	11-57
■ Explanation Of Command	11-57
■ Command	11-57
■ Completion Message	11-57
■ Denial Message	11-57
■ Autonomous Message	11-57
■ Nonhierarchical	11-57
■ Hierarchical	11-58
■ Explanation Of Parameters	11-58
ERR,ESR,SYNC,TLI,SSP,TN,EVENT,COND	11-62
■ Explanation Of Command	11-62
■ Command	11-62
■ Completion Message	11-62
■ Denial Message	11-62
■ Autonomous Message	11-62
■ Nonhierarchical	11-62
■ Hierarchical	11-63
■ Explanation Of Parameters	11-63
ERR,ESR,SYNC,TLI,TN,EVENT,COND	11-67
■ Explanation Of Command	11-67
■ Command	11-67
■ Completion Message	11-67
■ Denial Message	11-67
■ Autonomous Message	11-67
■ Explanation Of Parameters	11-68
ERR,ESR,SYNC,TN,EVENT,COND	11-71
■ Explanation Of Command	11-71
■ Command	11-71

Contents

■ Completion Message	11-71
■ Denial Message	11-71
■ Autonomous Message	11-71
■ Explanation Of Parameters	11-72
ERR,ESR,TSI,TN,EVENT,COND	11-76
■ Explanation Of Command	11-76
■ Command	11-76
■ Completion Message	11-76
■ Denial Message	11-76
■ Autonomous Message	11-76
■ Explanation Of Parameters	11-77
ERR,ESR,UNIT,DSPI,TN,EVENT,COND	11-80
■ Explanation Of Command	11-80
■ Command	11-80
■ Completion Message	11-80
■ Denial Message	11-80
■ Autonomous Message	11-80
■ Explanation Of Parameters	11-81
ERR,ESR,UNIT,FC,TN,EVENT,COND	11-83
■ Explanation Of Command	11-83
■ Command	11-83
■ Completion Message	11-83
■ Denial Message	11-83
■ Autonomous Message	11-83
■ Explanation Of Parameters	11-84
ERR,ESR,UNIT,FLI,TN,EVENT,COND	11-86
■ Explanation Of Command	11-86
■ Command	11-86
■ Completion Message	11-86
■ Denial Message	11-86
■ Autonomous Message	11-86
■ Explanation Of Parameters	11-87
ERR,ESR,UNIT,FMT,TN,EVENT,COND	11-89
■ Explanation Of Command	11-89
■ Command	11-89
■ Completion Message	11-89
■ Denial Message	11-89

Contents

■ Autonomous Message	11-89
■ Explanation Of Parameters	11-90
ERR,ESR,UNIT,FTMI,TN,EVENT,COND	11-93
■ Explanation Of Command	11-93
■ Command	11-93
■ Completion Message	11-93
■ Denial Message	11-93
■ Autonomous Message	11-93
■ Explanation Of Parameters	11-94
ERR,ESR,UNIT,HFMT,TN,EVENT,COND	11-96
■ Explanation Of Command	11-96
■ Command	11-96
■ Completion Message	11-96
■ Denial Message	11-96
■ Autonomous Message	11-96
■ Explanation Of Parameters	11-97
ERR,ESR,UNIT,HMXR,DEV,TN,EVENT,COND	11-100
■ Explanation Of Command	11-100
■ Command	11-100
■ Completion Message	11-100
■ Denial Message	11-100
■ Autonomous Message	11-100
■ Explanation Of Parameters	11-101
ERR,ESR,UNIT,MIU,TN,EVENT,COND	11-105
■ Explanation Of Command	11-105
■ Command	11-105
■ Completion Message	11-105
■ Denial Message	11-105
■ Autonomous Message	11-105
■ Explanation Of Parameters	11-106
ERR,ESR,UNIT,MXR,DEV,TN,EVENT,COND	11-108
■ Explanation Of Command	11-108
■ Command	11-108
■ Completion Message	11-108
■ Denial Message	11-108
■ Autonomous Message	11-108
■ Explanation Of Parameters	11-109

Contents

ERR,ESR,UNIT,UC,UBX,TN,EVENT,COND	11-113
■ Explanation Of Command	11-113
■ Command	11-113
■ Completion Message	11-113
■ Denial Message	11-113
■ Autonomous Message	11-113
■ Explanation Of Parameters	11-114
ERR,HARDWARE,TN,COND,EVENT,ACTION	11-116
■ Explanation Of Command	11-116
■ Command	11-116
■ Completion Message	11-116
■ Denial Message	11-116
■ Autonomous Message	11-116
■ Explanation Of Parameters	11-117
ERR,LINK,TN,STATUS	11-120
■ Explanation Of Command	11-120
■ Command	11-120
■ Completion Message	11-120
■ Denial Message	11-120
■ Autonomous Message	11-120
■ Explanation Of Parameters	11-121
ERR,MSG,TO,LOG,DISCARDED	11-123
■ Explanation Of Command	11-123
■ Command	11-123
■ Completion Message	11-123
■ Denial Message	11-123
■ Autonomous Message	11-123
■ Explanation Of Parameters	11-124
ERR,PMEM,SMEM,TN,EVENT,COND	11-125
■ Explanation Of Command	11-125
■ Command	11-125
■ Completion Message	11-125
■ Denial Message	11-125
■ Autonomous Message	11-125
■ Explanation Of Parameters	11-126
ERR,PWR,PMC,PMA,DMA,MI,TN	11-127

Contents

■ Explanation Of Command	11-127
■ Command	11-127
■ Completion Message	11-127
■ Denial Message	11-127
■ Autonomous Message	11-127
■ Explanation Of Parameters	11-128
ERR,SOFTWARE,MC,ERROR,MID,TN,RC,ACTION	11-130
■ Explanation Of Command	11-130
■ Command	11-130
■ Completion Message	11-130
■ Denial Message	11-130
■ Autonomous Message	11-131
■ Explanation Of Parameters	11-131
ERR,SYNC,MODE,FAST,HOLDOVER,NORMAL	11-134
■ Explanation Of Command	11-134
■ Command	11-134
■ Completion Message	11-134
■ Denial Message	11-134
■ Autonomous Message	11-134
■ Explanation Of Parameters	11-135
ERR,SYNC,TLI,SSP,NPC,TN,ALM,LOS,LEN	11-139
■ Explanation Of Command	11-139
■ Command	11-139
■ Completion Message	11-139
■ Denial Message	11-139
■ Autonomous Message	11-139
■ Nonhierarchical	11-139
■ Hierarchical	11-140
■ Explanation Of Parameters	11-140
ERR,SYNC,TLI,SSP,TN,ALM,LOS,LEN,EXJ	11-144
■ Explanation Of Command	11-144
■ Command	11-144
■ Completion Message	11-144
■ Denial Message	11-144
■ Autonomous Message	11-145
■ Nonhierarchical	11-145
■ Hierarchical	11-145

Contents

■ Explanation Of Parameters	11-145
EXC,MACRO	11-149
■ Explanation Of Command	11-149
■ Command	11-149
■ Completion Message	11-149
■ Denial Message	11-150
■ Autonomous Message	11-150
■ Explanation Of Parameters	11-150

EBX — EXC

EBX — EXC

This section documents the commands **EBX** through **EXC**.

EBX,STARTUP,STF,ATP

EXPANDED BUS EXTENDER STARTUP

Explanation Of Command

This message reports that the expanded bus extender has initialized itself and has performed self-diagnostics. The results of these diagnostics are reported. For all tests passed, no action is required.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01272]

EBX STARTUP {STF|ATP}

Explanation Of Parameters

EBX - Expanded bus extender

STARTUP

- Startup

Indicates initialization

STF - Some tests failed

ATP - All tests passed

ED,CRET,MAP,PIC

CREATE PICTURE ALTERNATE MAP

Explanation Of Command

This command takes a **PIC** (picture) of currently-implemented cross-connections and stores them in the **new map name**. **reference map name** is the name of the map that contains the desired list of cross-connections.

one to seven characters long.

Output from this command is sent only to the link on which the command was input.

Command

[I.19031]

**ED:FRM xy,SEQ ww:CRET,MAP <new map name>\
,PIC <reference map name>!**

Completion Message

Nonhierarchical

[O.19031]

**M hh:mm:ss xy,ww n[vv] ED CRET MAP <new map name> \
PIC <reference map name>
[NPC [s]abc] COND kk COMPL**

Hierarchical

[O.19031]

M hh:mm:ss xy,ww n[vv] **ED** **CRET** **MAP** <new map name> \
PIC <reference map name> [**NPC** uvmnp] **COND** kk **COMPL**

Denial Message

[O.19031.01]

M hh:mm:ss xy,ww n[vv] **ED** **CRET** **MAP** <new map name> \
PIC <reference map name> **COND** cc **DNY**

Autonomous Message

Not applicable.

Explanation Of Parameters

CRET - Create

MAP - Map

new map name

- The new alternate map to be created by this message

"new map name" is a string of capitalized alphanumeric characters.
The first character must be an alphabetic character. The maximum
length of a map name is seven characters.

PIC - Picture

reference map name

- The existing alternate map

"reference map name" is a string of capitalized alphanumeric characters.
The first character must be an alphabetic character. The maximum
length of a map name is seven characters.

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

This number identifies the first NPC that contains either a
non-two-way, two-point cross-connection, or a cross-connection with a
termination on an NPC not found in the reference alternate map.

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number

This number identifies the first NPC that contains either a non-two-way, two-point cross-connection, or a cross-connection with a termination on an NPC not found in reference alternate map.

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

cc - Hexadecimal condition code

cc *Explanation*

00	No conditions
60	User macro/map space is full
61	System macro/map space is full
62	File is being accessed
63	File already exists
70	Some circuits not activated,cleared or pictured
71	The reference map does not exist
D5	No user is logged in on the link/vc

ED,MACRO,MAP

CREATE OR EDIT A MACRO OR MAP

Explanation Of Command

This command is dual purpose. It can be used to create a new macro or alternate map or to edit an existing macro or map. A macro is a collection of DACS II commands that can be executed as a group by a single command. A map is a collection of DACS II cross-connect commands that can be activated as a group by a single command to create a new cross-connect map.

Once a macro has been created, and is free of errors, it can be executed repeatedly. For commonly used command sequences this saves a lot of typing, speeds execution, and assures the user of repeatability. Similarly a map, once created, can be repeatedly activated. However, prior to each activation of a map the information specified in the map must be edited to create a new map. On the other hand the information in a macro can be changed, without editing, when the command is executed. The new information is inserted into the command line and replaces information within the macro at execution time.

The commands used in the macro, the macro commands, will always be executed in the order they are listed in the macro. However, because the commands can use variables as well as constants, the information within the macro can vary with each execution. A command within the macro that addresses a given NPC can be made to address a different NPC the next time the macro is executed. This is done by replacing the constant, representing the NPC number, listed in the macro command with a variable. Many other command parameters can be changed from execution to execution by the use of variables in the macro commands.

Consider the private macro named "DEMO" below. Some elements of these macro commands have been omitted in order to focus on the use of variables.

```
TDIS::FROM 00101,TO 00301,STOP!OK
TCON::FROM 00101,TO 00501!OK
TCON::FROM 00102,TO 00502!OK
TCON::FROM 00103,TO 00503!OK
UTL::QRY,CMAP 001!OK
```

This macro will always disconnect, connect, and query the same NPCs. If DEMO were written as follows, using variables, the NPCs affected could be specified each time the macro was executed without having to reenter the macro. A macro written in this manner is referred to as a universal macro. This particular macro would be even more universal if the channel numbers were represented by variables.

```
TDIS::FROM #0101,TO 00301,STOP!OK
TCON::FROM #0101,TO #0201!OK
TCON::FROM #0102,TO #0202!OK
TCON::FROM #0103,TO #0203!OK
UTL::QRY,CMAP #01!OK
```

Variables have replaced some of the constants in macro DEMO. NPC number 001 has been replaced with variable #01 and NPC number 005 has been replaced with variable #02. The numbers in these variable names refer to the position of the replacement in the command used to execute the macro. To execute this macro replacing #01 with 020 and #02 with 040 we would enter the following command.

```
EXC::MACRO DEMO,(020,040)!
```

The variables used in the macro commands of macro DEMO are replaced, upon execution of this command, by parameters included in the command. The first parameter replaces variable #01 and the second parameter replaces #02. After variable replacement macro DEMO would look as follows.

```
TDIS::FROM 02001,TO 00301,STOP!OK
TCON::FROM 02001,TO 04001!OK
TCON::FROM 02002,TO 04002!OK
TCON::FROM 02003,TO 04003!OK
UTL::QRY,CMAP 020!OK
```

Variables may be used for any macro command parameter except action verbs and punctuation. The number of variables used in a macro is limited to 10. A variable may be used wherever its value is needed, that is, it is not restricted to an NPC number just because it was used for that purpose at some other point in the macro. If the user wished to address NPC number 003 and channel 003 the variable #01 with value 003 could be used for both the NPC number and the channel number. The macro command would look as follows.

TCON::FROM #01#01,...!

At execution time this would translate to the following.

TCON::FROM 003003,...!

⇒ NOTE:

To represent hierarchical NPC numbers a variable must be used for each part (unit, module, NPC) of the NPC number. A macro expecting a hierarchical format parameter should not be executed with a nonhierarchical format parameter.

NPC 01101 would be represented in a macro command with variables #01, #02, and #03 as follows.

UTL::QRY,CMAP #01#02#03!

⚠ WARNING:

Any command prompting "Are You Sure?" which is accepted as a macro command will always have the "No" answer to the question.

The system responds with "OK" when the ED::MAP command is entered.

The system responds with LINE and SAVE messages, as shown below, when the ED-MACRO command is entered.

[O.19071]
... **LINE** <line pointer> **TOTAL** <line total> **COMPL**

[O.19081]

... **SAVE** <macro name> **SPACE** sss **USED** uuu **COMPL**

A macro session is the period between entering the command to create a macro and entering the command to exit the macro. A line pointer is maintained by the system during the session to mark the position of the current line within the macro. As a line is added to the macro the line pointer moves down a line; tracking the position of the current line. The **LINE** command is used to determine the current line pointer value and the total number of lines currently in the macro.

The **SAVE** command is used during a macro session to save the current set of macro commands in the macro represented in the message by "macro name." The macro name is chosen by the user.

The completion messages correspond to the frame response when **END** or **QTEND** is entered after completion of editing or creating a macro. The **END** command saves all the changes before ending (exiting) a macro session. The **QTEND** command ends the macro session without saving the changes.

Output from this command is sent only to the link on which the command was input.

Command

[I.19001]

ED:FRM xy,SEQ ww:{MACRO <macro name>|MAP <map name>}!

Completion Message

[O.19001]

M hh:mm:ss xy,ww n[vv] ED {MACRO <macro name>|MAP <map name>}
[COND cc] COMPL

[O.19002]

**M hh:mm:ss xy,ww n[vv] ED {MACRO <macro name>|MAP <map name>} **
QTEND[COND cc] COMPL

Denial Message

[O.19001.01]

**M hh:mm:ss xy,ww n[vv] ED {MACRO <macro name>|MAP <map name>} **
COND cc DNY

Autonomous Message

[O.19002]

I hh:mm:ss xy,ww n[vv] **ED** {**MACRO** <macro name>|**MAP** <map name>} \
QTEND[**COND** cc] **COMPL**

Explanation Of Parameters

MACRO - Macro

macro name

- Macro name (seven characters maximum length)

The name of a collection of DACS II commands executed as a group.

A macro name is a string of capitalized alphanumeric characters. There are two type of macros; public and private. A private macros is created by a user in space allocated to the user by the system administrator. Only the user that created it can execute or read (LIST) a private macro. A public macro is created by the system administrator and is executable and readable by all users. A public macro name must start with the letter "P". A private macro name must not start with the letter "P".

MAP - Map

map name

- Map name (seven characters maximum length)

The name of a collection of DACS II cross-connect commands that can be activated as a group to produce a new set of cross-connections (a new cross-connect map).

A map name is a string of capitalized alphanumeric characters.

QTEND - Quit end

Quit to end a macro or map session without saving any changes to the macro or map.

COND - Condition

cc - Hexadecimal condition code

cc	Explanation
00	No conditions
00	No conditions
60	User macro/map space is full
60	User macro/map space is full
61	System macro/map space is full
62	File is being accessed
65	Command invalid while backup in progress
65	Command invalid while backup in progress
66	Map/macro file write deferred until backup is completed
67	User logged off during session
68	Incorrect language/addressing mode
6F	The session is terminated due to maintenance operation
6F	The session is terminated due to maintenance operation
7C	Logical conflicts found in the map
7D	Can't start new session - previous session still verifying
D0	Command is Frame administrator (DAX) only.
D5	No user is logged in on the link/vc
6E	No edit session active
6C	File is empty
6C	File is empty

EMTC,STARTUP,STF,ATP

EXPANDED MAINTENANCE STARTUP

Explanation Of Command

This message reports that the expanded maintenance circuit has initialized itself and has performed self-diagnostics. The results of these diagnostics are reported. For all tests passed, no action is required.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01282]

EMTC STARTUP {STF|ATP}

Explanation Of Parameters

EMTC - Expanded maintenance circuit

STF - Some tests failed

ATP - All tests passed

END,LOG

END OF RETRIEVED LOGGED MESSAGES

Explanation Of Command

This is an autonomous message marking the end of a block of retrieved logged messages. The messages will be output as a result of the command I.57011.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.83001]

A hh:mm:ss xy,ww END LOG MSG COMPL

Explanation Of Parameters

END LOG MSG

- End of a block of logged messages

END,LOG,ABORTED

ABORTED END OF RETRIEVED LOGGED MESSAGES

Explanation Of Command

This is an autonomous message marking the end of a block of retrieved logged messages that was aborted prior to completion due to system problems. The messages will be output as a result of the command I.57011 not outputting the entire log that was requested.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.83012]

A hh:mm:ss xy,ww END LOG MSG ABORTED COMPL

END,LOG,ABORTED
83012

DACS II/Rel 8.2.3
365-353-222

Explanation Of Parameters

END LOG MSG ABORTED

- Aborted End of a block of logged messages

ERR,CMD,ABT,TN,STOPPED

INPUT DENIAL

Explanation Of Command

This message is output by DACS II when a task indicated by the transaction number has been autonomously aborted.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01121]

A hh:mm:ss xy,ww ERR CMD ABT [TN abcd] e LN MSG:
First 70 characters of input message.
Remaining text of input message STOPPED

Explanation Of Parameters

ERR - Error recovery

CMD - Command

ABT - Abort

TN - Transaction

abcd - Transaction number

e - Number of lines in the message

ERR,ESR,ANALYSIS,REPORT,EVENT

ERROR RECOVERY ESR ANALYSIS REPORT

Explanation Of Command

This message outputs a list of circuit packs associated with a series of alarm messages identified by the EVENT number. One of the circuit packs listed may be at fault. The most likely faulty pack is at the top of the list. Only the first circuit pack on the list will be removed. This message will not be output if a single circuit pack is implicated.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01391]

```
I hh:mm:ss xy,ww  ERR ESR ANALYSIS REPORT EVENT eeee  4 LN MSG:
<action> <circuit identifier>
<action> <circuit identifier>
<action> <circuit identifier> COMPL
```

Explanation Of Parameters

ERR - Error recovery

ESR - Error source register

ANALYSIS
- Analysis

REPORT - Report

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data for this error recovery event.

action - Identifies autonomous action attempted on the circuit pack. Available actions are

action Explanation

RMV Request was made to remove circuit pack from service and run a diagnostic

--- Pack is listed for information only

circuit identifier

- Circuit pack type and identification.

The available circuit identifiers are listed below:

circuit identifier

SYNC s
SYNC s TLI m
CCNI s
CCB sf
TSI sft
CCI s
ETSI sqq
BTS s
UC [q]q
UNIT [q]q UBX
UNIT [q]q FC sb
UNIT [q]q FTMI b
UNIT [q]q DSPi
UNIT [q]q MXR n DEV devc
UNIT [q]q MIU i
UNIT [q]q FLI d
UNIT [q]q FMT k
UNIT [q]q MMFG y
NPC [s]abc[-[t]def][SIDE s]
NPC uvmnp[-wxkqr][SIDE s]

ERR,ESR,CCB,TN,EVENT,COND

ERROR RECOVERY

Explanation Of Command

This message indicates that error recovery was called to handle an error occurring in the cross-connect buffer.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01351]

I hh:mm:ss xy,ww ERR [ESR] CCB sf TN dddd EVENT eeee \
2 LN MSG:
<error analysis data bytes> COND cc COMPL

Explanation Of Parameters

ERR - Error recovery

ESR - Error Source Register

The ESR keyword is not output if the register contents cannot be read.

CCB - Cross-connect Buffer

s - Cross-connect side (0 or 1)

f - Unit (1 through 6)

TN - Transaction

dddd - Transaction number

EVENT - Event

eeee - Event number

error analysis data bytes

- Data used to analyze the cause of an error.

Eight bytes are output. These bytes are labeled "byte 0", "byte 1", etc, below.

byte 0 - ESR0 (Error Source Register 0) in the CCB

byte 1 - ESR1 (Error Source Register 1) in the CCB

byte 2 - ESR2 (Error Source Register 2) in the CCB

byte 3 - CCNI ESR0

byte 4 - CCNI ESR1

byte 5 - CCNI ESR2

byte 6 - CCNI ESR3

byte 7 - CCNI ESR4

cc - Hexadecimal condition code

cc *Explanation*

A0 CCB packid error, wrong pack, can't read pack

A1 CCB sync pulse error

A2 CCB clock error

A3 CCB input port alarm error

A4 CCB zero bit is stuck at 1

A5 Corresponding CCNI bit is stuck

ERR,ESR,CCI,TN,EVENT,COND

ERROR RECOVERY CCI

Explanation Of Command

This message indicates that DACS II detected an alarm occurring in the clock and control interface.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01354]

I hh:mm:ss xy,ww ERR[ESR] CCI s
TN dddd EVENT eeee 2 LN MSG:
wd01 wd02 wd03 wd04 wd05 wd06 wd07 wd08 wd09 wd10 wd11 \
wd12 COND cc COMPL

Explanation Of Parameters

I Information

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

CCI - Clock control interface

s - Cross-connect side number (0 or 1)

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the content of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the content of the DACS II error recovery log file which contains the data of this error recovery event.

wd01,
wd02,

...,

wd12 - Word 1 through 12

0 to 12 words of hexadecimal raw error data for internal use. Each word is four hexadecimal digits.

wdx *Explanation*

wd01	System Status Register
wd02	Clock Control Interface (CCI) Status Register
wd03	CCI Extended Time Slot Interchange (ETSI) ESR0 Register
wd04	CCI ETSI ESR1 Register
wd05	CCI ETSI ESR2 Register
wd06	CCI ETSI ESR3 Register
wd07	CCI Status Bus Register
wd08	CCI Exercise Register
wd09	CCI System Mask Register
wd10	CCI Mask Register
wd11	CCI ETSI Mask Register
wd12	Not used (= 0000)

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

01	CCI pack is not present
02	Can't communicate to CCI pack(incorrect version number)
03	CCI pack's summary is set but has no errors
04	CCIERR bit is stuck in system status reg
05	TSIERR bit is stuck in system status reg
06	PUERR bit is stuck in system status reg
07	Bus Terminator pack is not present
08	The 32 MHz clock is out of lock
09	CCI 240 sync is misaligned with frame sync
0A	CCI loss of 240 Frame Sync
0B	CCI loss of 8 KHz Frame Sync
0C	CCI detected Address Parity error
0D	CCI detected low byte data parity error
0E	CCI detected high byte data parity error
0F	CCI -5.2 power supply has failed
10	CCI detected Bus Status Parity error
11	CCI Peripheral Unit Alarm
12	SYNC summary is set on CCI circuit pack

ERR,ESR,CCNI,TN,EVENT,COND

ERROR RECOVERY

Explanation Of Command

This message indicates that DACS II detected an alarm occurring in the cross-connect network interface).

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01352]

```
I hh:mm:ss xy,ww  ERR [ESR] CCNI s \  
TN dddd EVENT eeee 2 LN MSG:  
<reg0> <reg1> <reg2> <reg3> <reg4> \  
<emr0> <emr1> <emr2> <emr3> <emr4> COND cc COMPL
```

Explanation Of Parameters

I Information

ERR - Error recovery

ESR - Error Status Register.

The ESR keyword is not output if the register contents cannot be read.

CCNI - Cross-connect network interface

s - Cross-connect side (0 or 1)

TN - Transaction

dddd - Transaction number

EVENT - Event

eeee - Event number

regn - Device register n (n = 0 through 4)

A bit set to "1" in these registers indicates the alarming circuit pack or a parity error.

CCNI s Error Source Register Bit Definitions

reg0 - Error Source Register 0

Bit	Condition
15	Time Slot Interchange (TSI) 43 is alarming
14	TSI 33 is alarming
13	TSI 23 is alarming
12	TSI 13 is alarming
11	TSI 62 is alarming
10	TSI 52 is alarming
09	TSI 42 is alarming
08	TSI 32 is alarming
07	TSI 22 is alarming
06	TSI 12 is alarming
05	TSI 61 is alarming
04	TSI 51 is alarming
03	TSI 41 is alarming
02	TSI 31 is alarming
01	TSI 21 is alarming
00	TSI 11 is alarming

reg1 - Error Source Register 1

Bit	Condition
15	TSI 26 is alarming
14	TSI 16 is alarming
13	TSI 65 is alarming
12	TSI 55 is alarming
11	TSI 45 is alarming
10	TSI 35 is alarming
09	TSI 25 is alarming
08	TSI 15 is alarming
07	TSI 64 is alarming
06	TSI 54 is alarming
05	TSI 44 is alarming
04	TSI 34 is alarming
03	TSI 24 is alarming
02	TSI 14 is alarming
01	TSI 63 is alarming
00	TSI 53 is alarming

reg2 - Error Source Register 2

Bit	Condition
15	Facility Terminating Module (FTM) 4 of Unit 3 is alarming
14	FTM 3 of Unit 3 is alarming
13	FTM 2 of Unit 3 is alarming
12	FTM 1 of Unit 3 is alarming
11	FTM 4 of Unit 2 is alarming
10	FTM 3 of Unit 2 is alarming
09	FTM 2 of Unit 2 is alarming
08	FTM 1 of Unit 2 is alarming
07	FTM 4 of Unit 1 is alarming
06	FTM 3 of Unit 1 is alarming
05	FTM 2 of Unit 1 is alarming
04	FTM 1 of Unit 1 is alarming
03	TSI 66 is alarming
02	TSI 56 is alarming
01	TSI 46 is alarming
00	TSI 36 is alarming

reg3 - Error Source Register 3

Bit	Condition
15	Cross-Connect Buffer (CCB) 4 is alarming
14	CCB 3 is alarming
13	CCB 2 is alarming
12	CCB 1 is alarming
11	FTM 4 of Unit 6 is alarming
10	FTM 3 of Unit 6 is alarming
09	FTM 2 of Unit 6 is alarming
08	FTM 1 of Unit 6 is alarming
07	FTM 4 of Unit 5 is alarming
06	FTM 3 of Unit 5 is alarming
05	FTM 2 of Unit 5 is alarming
04	FTM 1 of Unit 5 is alarming
03	FTM 4 of Unit 4 is alarming
02	FTM 3 of Unit 4 is alarming
01	FTM 2 of Unit 4 is alarming
00	FTM 1 of Unit 4 is alarming

reg4 - Error Source Register 4

Bit	Condition
15-08	Not used
07	Cross-Connect Network Interface (CCNI) autonomous switch enable error
06	CCNI high byte data parity error
05	CCNI low byte data parity error
04	CCNI address bus parity error
03	Synchronizer (SYNC) is alarming
02	Cross-Connect Buffer (CCB) 6 is alarming
01	CCB 5 is alarming

emrn - Error Mask Register n

A bit set to "1" in these registers indicates the alarming circuit pack or a parity error.

CCNI s Error Mask Register Bit Definitions

emr0 - Error Mask Register 0

Bit	Condition
15	Errors from Time Slot Interchange (TSI) 43 are masked
14	Errors from TSI 33 are masked
13	Errors from TSI 23 are masked
12	Errors from TSI 13 are masked
11	Errors from TSI 62 are masked
10	Errors from TSI 52 are masked
09	Errors from TSI 42 are masked
08	Errors from TSI 32 are masked
07	Errors from TSI 22 are masked
06	Errors from TSI 12 are masked
05	Errors from TSI 61 are masked
04	Errors from TSI 51 are masked
03	Errors from TSI 41 are masked
02	Errors from TSI 31 are masked
01	Errors from TSI 21 are masked
00	Errors from TSI 11 are masked

emr1 - Error Mask Register 1

Bit	Condition
15	Errors from TSI 26 are masked
14	Errors from TSI 16 are masked
13	Errors from TSI 65 are masked
12	Errors from TSI 55 are masked
11	Errors from TSI 45 are masked
10	Errors from TSI 35 are masked
09	Errors from TSI 25 are masked
08	Errors from TSI 15 are masked
07	Errors from TSI 64 are masked
06	Errors from TSI 54 are masked
05	Errors from TSI 44 are masked
04	Errors from TSI 34 are masked
03	Errors from TSI 24 are masked
02	Errors from TSI 14 are masked
01	Errors from TSI 63 are masked
00	Errors from TSI 53 are masked

emr2 - Error Mask Register 2

Bit	Condition
15	Errors from Facility Terminating Module (FTM) 4 of Unit 3 are masked
14	Errors from FTM 3 of Unit 3 are masked
13	Errors from FTM 2 of Unit 3 are masked
12	Errors from FTM 1 of Unit 3 are masked
11	Errors from FTM 4 of Unit 2 are masked
10	Errors from FTM 3 of Unit 2 are masked
09	Errors from FTM 2 of Unit 2 are masked
08	Errors from FTM 1 of Unit 2 are masked
07	Errors from FTM 4 of Unit 1 are masked
06	Errors from FTM 3 of Unit 1 are masked
05	Errors from FTM 2 of Unit 1 are masked
04	Errors from FTM 1 of Unit 1 are masked
03	Errors from TSI 66 are masked
02	Errors from TSI 56 are masked
01	Errors from TSI 46 are masked
00	Errors from TSI 36 are masked

emr3 - Error Mask Register 3

Bit	Condition
15	Errors from Cross-Connect Buffer (CCB) 04 are masked
14	Errors from CCB 03 are masked
13	Errors from CCB 02 are masked
12	Errors from CCB 01 are masked
11	Errors from FTM 4 of Unit 6 are masked
10	Errors from FTM 3 of Unit 6 are masked
09	Errors from FTM 2 of Unit 6 are masked
08	Errors from FTM 1 of Unit 6 are masked
07	Errors from FTM 4 of Unit 5 are masked
06	Errors from FTM 3 of Unit 5 are masked
05	Errors from FTM 2 of Unit 5 are masked
04	Errors from FTM 1 of Unit 5 are masked
03	Errors from FTM 4 of Unit 4 are masked
02	Errors from FTM 3 of Unit 4 are masked
01	Errors from FTM 2 of Unit 4 are masked
00	Errors from FTM 1 of Unit 4 are masked

emr4 - Error Mask Register 4

Bit	Condition
15-08	Not used
07	Address parity errors are masked (ASEM)
06	Parity error in the BSR register is masked
05	High data byte parity error is masked
04	Low data byte parity error is masked
03	Address parity error (ADEM) is masked
02	Synchronizer error summary bit is masked
01	Errors from Cross-Connect Buffer (CCB) 6 are masked
00	Errors from CCB 5 are masked

COND - Condition

cc - Hexadecimal condition code

cc	<i>Explanation</i>
90	CCNI access error (cannot access pack)
91	High data byte bus parity error
92	Low data byte bus parity error
93	Address bus parity error
94	Autonomous switch enable error
95	Bus status register parity error
96	CCNI stuck register bit, summary set, no other alarms

ERR,ESR,ETSI,TN,EVENT,COND

ERROR RECOVERY ETSI

Explanation Of Command

This message reports an alarm on a extended time slot interchanger.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01355]

```
I hh:mm:ss xy,ww  ERR[ ESR] ETSI sqq \  
TN dddd EVENT eeee 2 LN MSG:  
wd01 wd02 wd03 wd04 wd05 wd06 wd07 wd08 wd09 wd10 wd11 \  
wd12 COND cc COMPL
```


Explanation Of Parameters

I Information

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

ETSI - Expanded time slot interchanger (ETSI)

sqq - ETSI identification

s - Cross-connect side (0 or 1)

qq - Unit number (01 through 16)

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data for this error recovery event.

wd01,

wd02,

...,

wd12 - Word 1 through 12

0 to 12 words of four-digit hexadecimal raw error data for internal use.

wd01 - Circuit Pack Summary Register

wd02 - Receive MDX Status Register

wd03 - Transmit MDX Status Register

wd04 - Control RAM Status Register

wd05 - Control RAM Port Alarm Register

wd06 - Control RAM Data RAM Alarm Register

wd07 - Receive MDX Mask Register

wd08 - Transmit MDX Mask Register

wd09 - CCI ETSI Error Source Register 0

wd10 - CCI ETSI Error Source Register 1

wd11 - CCI ETSI Error Source Register 2

wd12 - CCI ETSI Error Source Register 3

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

- 20** ETSI pack is not present
- 21** Can't communicate to ETSI pack (incorrect version number)
- 22** ETSI pack's summary is set on CCI but has no errors
- 23** ETSI loss of 32.768 MHz clock
- 24** ETSI loss of 240 frame sync
- 25** ETSI Rcv MDX summary stuck bit
- 26** ETSI control RAM summary stuck bit
- 27** ETSI TX MDX summary stuck bit
- 28** ETSI loss of Vdd (3.3v) power
- 29** Peripheral unit port alarm (RCV MDX)
- 2A** Receive MDX data source time slot parity error
- 2B** Receive MDX sync error
- 2C** Receive MDX address parity error
- 2D** Receive MDX write data parity error
- 2F** Receive MDX can't be accessed (incorrect chip Id)
- 30** Transmit MDX data parity error
- 31** Transmit MDX data source time slot parity error
- 32** Transmit MDX sync error
- 33** Transmit MDX address parity error
- 34** Transmit MDX write data parity error
- 35** Transmit MDX can't be accessed (incorrect chip Id)
- 37** Control RAM parity error
- 38** Control RAM sync alarm
- 39** Control RAM port alarm
- 3A** Control RAM BIST flag is set
- 3B** Data RAM BIST flag is set
- 3C** Control RAM address parity error
- 3D** Control RAM write data parity error
- 3E** Control RAM device can't be accessed (incorrect chip Id)
- 3F** Control RAM circuit pack parity
- 40** Control RAM device is in reset state
- 41** Control RAM port alarm summary is stuck
- 42** ETSI TRD3ST exercise bit is set
- 43** ETSI ready high error on CCI
- 44** ETSI ready time-out error on CCI(ETSI can't be accessed)
- 45** Control RAM stuck bit error

ERR,ESR,MC,MP,CI,TN

ERROR RECOVERY ERROR SOURCE REGISTER MAIN CONTROLLER

Explanation Of Command

This message is a main controller error recovery output message. In addition to providing information for main controller error recovery, this message may also provide information for the following:

Main Processor
Communications Interface

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01312]

I hh:mm:ss xy,ww ERR [ESR] MC [, {MP|CI}] TN dddd COMPL

Explanation Of Parameters

MC - Main controller

MP - Main processor

CI - Communications interface

ESR - Error source register

The ESR is not output if the register content cannot be read.

ERR - Error recovery

TN - Transaction

dddd - Transaction number

ERR,ESR,MC,MP,TN,EVENT,COND,CI,BX,EBX

ERROR RECOVERY MC

Explanation Of Command

This message is a main controller error recovery output message reporting circuit pack alarms. It also provides information for the:

- Main Processor
- Communications Interface
- Extended Communications Interface
- Secondary Storage Controller
- Bus Extender or Expanded Bus Extender Pack for MP
- Maintenance Pack or Expanded Maintenance Pack

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01311]

```
I hh:mm:ss xy,ww  ERR[ ESR] MC[ MP] TN dddd EVENT eeee  \  
2 LN MSG:  
abab bbbb cccc dddd eeee ffff COND cc COMPL
```

[O.01311]

I hh:mm:ss xy,ww **ERR**[**ESR**] **MC**[**CI**] **TN** dddd **EVENT** eeee \
2 LN MSG:
COND cc **COMPL**

[O.01311]

I hh:mm:ss xy,ww **ERR**[**ESR**] **MC**[{**BX**|**EBX**}] **TN** dddd **EVENT** eeee \
2 LN MSG:
abab bbbb cccc dddd eeee ffff **COND** cc **COMPL**

[O.01311]

I hh:mm:ss xy,ww **ERR**[**ESR**] **MC**[{**MTC**|**EMTC**}] **TN** dddd \
EVENT eeee **2 LN MSG:**
abab bbbb cccc dddd eeee ffff gggg hhhh iiii jjjj **COND** cc \
COMPL

Explanation Of Parameters

MC - Main controller

MP - Main processor

CI - Communications interface

BX - Bus extender pack for MP

MTC - Maintenance pack

EBX - Expanded bus extender pack for MP

EMTC - Expanded maintenance pack

ESR - Error source register

This keyword is not output if the register content cannot be read.

ERR - Error recovery

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data for this error recovery event.

abab, bbbb, ..., jjjj

- Raw data

0 to 10 words of hexadecimal raw error data for internal use. The number of words output is dependent upon the error event. Each word consists of four hexadecimal digits.

ERR ESR MC MP data words:

abab bbbb cccc dddd eeee ffff

abab - CPU Interrupt Holding Register contents
bbbb - CPU Interrupt Mask Register contents
cccc - Version
dddd - Type
eeee - CPU RAM checksum word 1
ffff - CPU RAM checksum word 2

ERR ESR MC {BX|EBX} data words:

abab bbbb cccc dddd eeee ffff

abab - CPU Interrupt Holding Register contents
bbbb - CPU Interrupt Mask Register contents
cccc - BX/EBX Interrupt Holding Register contents
dddd - BX/EBX Interrupt Mask Register contents
eeee - BX/EBX type
ffff - BX/EBX version

ERR ESR MC {MTC|EMTC} data words:

abab bbbb cccc dddd eeee ffff gggg hhhh iiii jjjj

abab - CPU Interrupt Holding Register contents
bbbb - MTC/EMTC Error Source Register 0 contents
cccc - MTC/EMTC Error Source Register 1 contents
dddd - MTC/EMTC Error Source Register 2 contents
eeee - MTC/EMTC Error Source Register 3 contents
ffff - MTC/EMTC Error Mask Register 0 contents
gggg - MTC/EMTC Error Mask Register 1 contents
hhhh - MTC/EMTC Error Mask Register 2 contents
iiii - MTC/EMTC Error Mask Register 3 contents
jjjj - MTC/EMTC Interrupt Control/Sanity Register contents

cc - Hexadecimal condition code

cc *Explanation*

20	BX Access Error
21	BX Ram Parity Over Low Byte
22	BX Ram Parity Over High Byte
23	Fan Bank Zero Error Flag
24	D5 Spare Bit Error
25	Fan Bank One Error Flag
26	D7 Spare Bit Error
27	BX stuck summary bit
28	Unknown interrupt from BX
29	Error from side 0 bus extension
2A	Error from side 1 bus extension
2B	Unknown interrupt from MTC
2C	MTC stuck summary bit
2D	Unused bits on MTC pack
2E	Error due to unused bit
2F	Error due unknown reasons
30	Power Failure
31	Sanity Time-out
32	BX stuck CCNI summary bit
D0	CPU RAM Parity error

ERR,ESR,NPC,SIDE,TN,EVENT,COND

ERROR RECOVERY DSPU NPC

Explanation Of Command

This message indicates an alarm was detected in a digital signal processing circuit; for example, the digital multipoint bridge.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.01371]

I hh:mm:ss xy,ww ERR[ESR] NPC [s]abc-[[t]def] SIDE s \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data bytes>[COND cc] COMPL

Hierarchical

[O.01371]

I hh:mm:ss xy,ww ERR[ESR] NPC uvmnp[-uvmqr] SIDE s \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data bytes>[COND cc] COMPL

Explanation Of Parameters

I Information

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register content can not be read.

NPC - Network Processing Circuit

[s]abc - The 3- or 4-digit nonhierarchical odd DSPU NPC number

[t]def - The 3- or 4-digit nonhierarchical even DMB NPC number ([t]def =
[s]abc + 1)

If NPC numbers are expressed in three digits, the valid values are:

SR and MJ type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

SR and MJ type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

uvmnp - Hierarchical odd DSPU NPC numbers

uvmqr - Hierarchical even DMB NPC numbers

uv - Unit number

m - Module number

np, qr - NPC number within the module
(qr = np + 1)

The values are listed below:

SR and MJ NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

SIDE - Side

s - Side number (0 or 1)

TN - Transaction

dddd - Transaction number

The transaction number can be specified in the UTL::QRY,ERR message (I.55011) to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

error analysis data bytes

- Troubleshooting data (four-digit hexadecimal)

There can be from 0 through 10 data bytes output depending upon the circuit pack and error condition. The fields are labeled aaaa, bbbb, cccc, dddd, eeee, ffff, gggg, hhhh, iiii, and jjjj below for explanation purposes.

For the Digital Multipoint Bridge (DMB),
C-Bit Processor (CPR),
Multipoint Junction Unit (MJU), and
Subrate Multiplexer (SRM)

aaaa DMB Interrupt Register content
bbbb DMB Interrupt Mask Register content

For the DMB only

cccc cme 0 reply - word 2
dddd cme 0 reply - word 1
eeee cme 1 reply - word 2
ffff cme 1 reply - word 1
gggg conf 0 reply - word 2
hhhh conf 0 reply - word 1
iiii conf 1 reply - word 2
jjjj conf 1 reply - word 1

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

70 DMB access error (e.g. pack not there)
71 DMB serial access error (pack not there)
72 DMB parallel access error
73 DMB bits stuck in exercise register
74 DMB data processing error
75 Multiple data parity error, CCB problem
76 DMB clock error
77 Multiple clock errors, CCB/SYNC problem
78 DMB FIFO error
79 Possible power failure on side
7A DMB control memory error 0 (used for trans)
7B DMB control memory error 1 (used for trans)
7C Control Memory 0 control ram parity error
7D Control Memory 1 control ram parity error
7E Control Memory 0 control interface error
7F Control Memory 1 control interface error
80 Control Memory 0 loss of sync error

cc *Explanation*

81	Control Memory 1 loss of sync error
82	Control Memory 0 DMB input data parity error
83	Control Memory 1 DMB input data parity error
84	DMB conference error 0 (used for trans)
85	DMB conference error 1 (used for trans)
86	Conference 0 control interface error
87	Conference 1 control interface error
88	Conference 0 control ram parity error
89	Conference 1 control ram parity error
8A	Conference 0 DMB input data parity error
8B	Conference 1 DMB input data parity error
8C	Conference 0 DMB device (chip) error
8D	Conference 1 DMB device (chip) error
8E	Bad Ram Data in DMB device (bits alarms)
8F	Bad Ram Data in DMB device (bits alarms)
98	CPR serial access error
99	CPR clock error
9A	CPR processor interface failure
9B	CPR input data interface error
9C	CPR D-Bit interface parity error
9E	CPR control memory or state machine failure
9F	CPR FIFO FRDY/FFULL stuck bit
BF	MJU serial access error
C0	MJU clock error
C1	MJU processor interface failure
C2	MJU input data interface failure
C3	MJU error correction circuitry failure
C4	MJU control memory failure
C5	MJU output block failure
C6	MJU sampling circuitry failure
C7	MJU control memory or state machine failure
C8	SRM serial access error
C9	SRM clock error
CA	SRM processor interface failure
CB	SRM input data interface failure
CC	SRM error correction block failure
CD	SRM control memory failure
CE	SRM multiplexor block failure
CF	SRM output block failure
D5	Illegal/unknown condition code
6D	Invalid FPA state

ERR,ESR,NPC,TN,EVENT,COND

ERROR RECOVERY FTU NPC

Explanation Of Command

This message indicates that an alarm was detected in a facility terminating unit Network Processing Circuit. The specific alarm type is identified by the error condition code.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.01372]

I hh:mm:ss xy,ww ERR[ESR] NPC [s]abc-[t]def TN dddd \
EVENT eeee 2 LN MSG:
<error analysis data bytes>[COND cc] COMPL

Hierarchical

[O.01372]

I hh:mm:ss xy,ww **ERR**[**ESR**] **NPC** uvmnp-wxkqr **TN** dddd \\
2 LN MSG:
EVENT eeee <error analysis data bytes>[**COND** cc] **COMPL**

Explanation Of Parameters

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register content cannot be read.

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number denoting beginning of range specification

[t]def - The 3- or 4-digit nonhierarchical NPC number denoting end of range specification

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

uvmnp - Hierarchical NPC number for beginning of range

wxkqr - Hierarchical NPC number for end of range

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TN - Transaction

dddd - Transaction number

The TN number can be specified in message I.55011 (in PDS, UTL::QRY,ERR or in MML, RTRV-LOG::ERR) to retrieve the content of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The EVENT number can be specified in message I.55011 (in PDS, UTL::QRY, ERR or in MML, RTRV-LOG::ERR) to retrieve the content of the DACS II error recovery log file which contains the data of this error recovery event.

error analysis data bytes

- Troubleshooting data

Six bytes of 4-digit hexadecimal troubleshooting data, labeled for explanatory purposes below, as aaaa, bbbb, cccc, dddd, eeee, and ffff.

aaaa - Dual digroup card (DDC) ESR0 and ESR1

The first two digits (left to right) report ESR0 and the second two digits report ESR1

bbbb - Unused

cccc - DDC hardware and channel controller

dddd - DDC transceiver A Tferr & Rserr register

eeee - DDC transceiver B Tferr & Rserr register

ffff - DDC Transceiver transmit slip

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

3D	DPC ROM error
3E	DPC loss of timing
3F	OOS RAM test ran while IS
53	NPC bus error
54	NPC can not be accessed
55	NPC is alarming on FC
56	Facility Processor Sanity Error
57	SYNC Error
58	Channel controller loss of clock
59	Channel controller frame sync error
5A	CC configuration register error
5B	CC instruction ram error
5C	CC parity error
5D	CC transmit data error
5E	CC receiver data error
5F	CC exercise error
60	CC summary bit error
61	Hard RAM error
62	Hard ROM check error
63	Hard Error stuck bit
64	Transceiver A stuck bit
65	Transceiver A transmit slip
66	Transceiver A Error
67	Transceiver B stuck bit
68	Transceiver B transmit slip
69	Transceiver B Error
6A	Circuit ID Error
6B	Facility errors

cc	<i>Explanation</i>
6C	NPC address parity error
D5	Illegal/unknown condition code
6E	Invalid DDC pack id

ERR,ESR,SYNC,TLI,SSP,TN,EVENT,COND

ERROR RECOVERY SYNC TLI SSP

Explanation Of Command

This message indicates that error recovery was called to handle an error that occurred in the synchronizer timing link interface sync port. The message also indicates the nature of the error.

If the port on which the error has occurred receives clock information from a dual primary card, then a network processing circuit has been added.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.01341]

I hh:mm:ss xy,ww ERR[ESR] SYNC a TLI m SSP b TN dddd \
EVENT eeee 2 LN MSG:
<synchronizer status data bytes>[COND cccc] COMPL

Hierarchical

[O.01341]

I hh:mm:ss xy,ww **ERR**[**ESR**] **SYNC** a **TLI** m **SSP** b **TN** dddd \ **EVENT** eeee 2 **LN MSG:**
<synchronizer status data bytes>[**COND** cccc] **COMPL**

Explanation Of Parameters

I Information

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

SYNC - Synchronizer

a - SYNC number (0 or 1)

TLI - Timing link interface

m - TLI number (1 through 4)

SSP - Synchronizer sync port

b - SSP number (0 or 1)

uvmnp - Hierarchical NPC number

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The EVENT number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data of this error recovery event.

synchronizer status data bytes

- Synchronizer status data in binary form

From 0 to 5 bytes may be output, depending upon the synchronizer error condition. In the explanations below the bytes are named "byte 1", "byte 2, and so on. The eight bits of each byte are labeled abcdefgh and are explained below. These bytes appear in the message in numeric order from left to right with "byte 1" first.

Note that if communications between the MP and the SYNC have failed, Error Recovery may not get the correct status data from the SYNC. All bits in "synchronizer status data bytes" will then be set to 1 by default.

byte 1 - Timing link status

<i>bit</i>	<i>Explanation</i>
a	Timing link equipped by MC
b	Timing link declared out-of-service
c	Timing link out-of-service due to error
d	Associated Timing Extractor TLI error
efgh	Not used

byte 2 - Priority weighting of link, a number from 1 to 8

byte 3 - Framing format, line format, and frequency

<i>bits</i>	<i>Explanation</i>
abc	Framing format (valid only for TXB1 or TXB2 TLIs)
TXB1	
000	D4
001	ESF
010	DDS
TXB2	
000	CCS
001	ERSM
010	CAS0
011	CAS1

de Line format (valid only for TXB1 or TXB2 TLIs)

TXB1

00 Bipolar
01 B8ZS

TXB2

10 AMI
11 HDB3

fgh Frequency (TXUC TLI)

000 512 kHz
001 1.000 MHz
010 1.544 MHz
011 2.048 MHz
100 5.000 MHz

byte 4 - Mixed status

bit Explanation

a Carrier failure alarm/loss of signal (TXB1, TXB2, and TXCC)
b Timing signal loss of energy
c Autobaud failure
d Frequency offset flag
e Excessive jitter
f Phase step
gh Not used

byte 5 - Framing status

bit Explanation

a Out of frame
b Major framing error rate
c Minor framing error rate
defgh Not used

COND - Condition

cccc - Error recovery condition code

cccc - Hexadecimal condition code

cccc *Explanation*

E600 TL error reported, unknown
E602 Timing Extractor type TLI has hardware problem
E603 Timing Extractor type TLI has autobaud failure
E806 TLI error cleared

ERR,ESR,SYNC,TLI,TN,EVENT,COND

ERROR RECOVERY

Explanation Of Command

This message indicates that error recovery was called to handle an error that occurred in a synchronizer timing link interface, and also the nature of the error.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01342]

I hh:mm:ss xy,ww ERR [ESR] SYNC a TLI m \
TN dddd EVENT eeee 2 LN MSG:
<synchronizer status data bytes> COND cccc COMPL

Explanation Of Parameters

I Information

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

SYNC - Synchronizer

a - Synchronizer number (0 or 1)

TLI - Timing link interface

m - TLI number (1 through 4)

TN - Transaction

dddd - Transaction number

EVENT - Event

eeee - Event number

synchronizer status data bytes

- Synchronizer status data in binary form

Three bytes of synchronizer status data are output. These bytes are named "byte1", "byte2", and "byte3" in the explanations below. They would appear on output as "byte1 byte2 byte3" in place of "synchronizer status data bytes". The eight bits in each byte are labeled abcdefgh in left to right order. These bits are set to "1" for the listed conditions:

byte1 - Overall status and configuration

bit	Condition
abcd	TLI type
0000	TXB1, 1.544 Mb/s DS1 Extractor
0001	TXB2, 2.048 Mb/s Primary Block (120 OHM) Extractor
0010	TXCC, Composite Clock Extractor
0011	TXUC, High Level Unipolar Clock Extractor
0100	TXRF, Basic System Reference Frequency
0101	TDCC, 64 kb/s Composite Clock Distributor
0110	TDS2, 2.048 MHz Sine Distributor
0111	TXCP, CEPT 2.048 MHz Sine (120 Ohm) Extractor
e	TLI is grown
f	TLI out-of-service
g	TLI hardware error
h	Unused bit

byte2 - Hardware status and diagnostic results

bit	Condition
a	Hardware energy detector on the time base strobe signal has failed
b	Loss of time base strobe signal coming from the DPLL
c	Hardware energy detector on the CRO signal has failed
d	Loss of reference clock signal coming from the CRO
Note: These bits have meaning only for TDCC and TDS2 TLIs and when the SYNC is a master timing source.	
e	Side 0
f	Side 1
Note: These bits have meaning only for TE TLIs.	
For TXB1 or TXB2 TLIs:	
Framer chip on side 0 (e) and/or side 1 (f) has failed.	
For TXCC TLIs:	
Out-of-lock detector on side 0 (e) and/or side 1 (f) has failed.	
g, h	Unused bits

byte3 - Hardware status and diagnostic results for timing distributor type TLI only

<i>bit</i>	<i>Condition</i>
a	Clock alignment detector failed diagnostic
b	Clock generator energy detector failed diagnostic
c	30 ms sync pulse energy detector failed diagnostic
d	Signal generating prom parity error detector failed diagnostic
e	Output clock alignment error
f	Loss of energy on the output clock generator ripple carry, indicating the distributed clock signals have died
g	Loss of energy on the 30 ms sync pulse coming from the DPLL board
h	Signal generating prom parity error detected

COND - Condition

cccc - Hexadecimal condition code

cccc	<i>Explanation</i>
E500	TLI error, link went down before status read
E501	TLI hardware error
E700	CRO error, unknown due to link, SYNC error
E701	CRO loss of energy detected SYNC error
E702	CRO loss of energy CRO error
E703	CRO frequency offset
E704	CRO declared OOS

ERR,ESR,SYNC,TN,EVENT,COND

ERROR RECOVERY

Explanation Of Command

This message indicates that error recovery was called to handle an error that occurred in the specified synchronizer. The message also indicates the nature of the error.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01331]

I hh:mm:ss xy,ww ERR [ESR] SYNC a \
TN dddd EVENT eeee 2 LN MSG:
<byte1> <byte2> <byte3> <byte4> <byte5> COND cccc COMPL

Explanation Of Parameters

I Information

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

SYNC - Synchronizer

a - Synchronizer number (0 or 1)

TN - Transaction

dddd - Transaction number

EVENT - Event

eeee - Event number

byte1,

byte2,

...,

byte5 - Synchronizer status data bytes

Synchronizer status data in binary form. The number of data bytes ranges from 1 to 5, depending upon the synchronizer error type. Each byte has eight bits labeled abcdefgh in left to right order.

If main processor to synchronizer communication has failed, Error Recovery may not get the correct status data from the Synchronizer. All bits in "synchronizer status data bytes" will then be set to 1 by default.

byte1 - Synchronizer status data

bit *Explanation*

a MC is down flag

b SYNC is down flag

c Mate SYNC is OOS

d Time Base is down

efgh Timing link inservice status

byte2 - Timing link (SSP) inservice status

byte3 - Synchronizer status data

bit	Explanation
a	SYNC restart flag
b	Hardware summary, error on DPLL
c	PLL summary, any major cross-couple error
d	Cross-couple summary, any major cross-couple error
e	Clock Reference Oscillator summary error, any major CRO error
fgh	unused

byte4 - Synchronizer status data

bit	Explanation
ab	Synchronizer architecture
ab	Explanation
00	Slave in master-slave configuration
01	Master in master-slave configuration
cde	Operational stratum field
cde	Explanation
000	Domestic stratum 3
011	Domestic stratum 2
fg	PLL locking mode field
fg	Explanation
00	Normal
01	Fast
10	Holdover
h	Hit timing holdover field

byte5 - Synchronizer status data

bit	Explanation
ab	Active timing link source field
ab	Explanation
00	Holdover
01	Timing link
10	Cross-couple
11	CRO
cde	Active link field
cde	Explanation
000	TLI(Timing link interface) 1, SSP0(Synchronizer sync port 0)
001	TLI 1, SSP1
010	TLI 2, SSP0
011	TLI 2, SSP1
100	TLI 3, SSP0
101	TLI 3, SSP1
110	TLI 4, SSP0
111	TLI 4, SSP1
fgh	unused

cccc - Error recovery condition code

cccc - Hexadecimal condition code

cccc	<i>Explanation</i>
E000	CCNI summary bit set; no more info
E001	Sync says its down
E002	Sync says its time base is down
E003	SYNC autonomously restarted itself
E004	MP-SYNC communications failure
E100	Unknown DPLL error
E101	ROM checksum error
E102	RAM data error, RAM address line stuck
E103	Phase/frequency output latch error
E104	Loss of energy on output of frequency synth.
E105	Loss of energy on output of phase shifter
E106	Loss of energy on generated SYNC pulse
E107	Loss of energy on time base strobe signal
E108	Interrupt controller error
E109	Interrupt holding register error
E10A	Uart error
E10B	Control data readable output latch error

cccc *Explanation*

E200 Unknown time base error
E201 Time base loss of energy detector
E202 TB i/o err. cant read TB packid or oven monitor
E203 Time base frequency drift
E204 Both syncs time base oven is cold
E205 Time base oven is cold
E300 Unknown PLL error,link went down before reading status
E301 PLL end of range
E302 PLL excessive phase error (125 uSec out of phase)
E303 PLL real time violations
E304 PLL fast start time out
E305 PLL end of range implicating TL
E400 Unknown mate error, link went down before read status
E401 Mate out of service
E402 Mate sync hardware error
E403 Cross couple loss of energy
E404 Cross couple loss of energy
E405 Mate link down
E406 Cross couple real time violation
E407 Cross couple fast lock range
E408 Cross couple frequency offset error
E409 Cross couple out of lock

ERR,ESR,TSI,TN,EVENT,COND

ERROR RECOVERY TIME SLOT INTERCHANGE

Explanation Of Command

This error recovery message indicates that an error is occurring in the time slot interchange. This message reports an alarm on a time slot interchange circuit pack. The error type is contained in the error condition code.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01353]

I hh:mm:ss xy,ww ERR [ESR] TSI sft \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

Explanation Of Parameters

I Information

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents can not be read.

TSI - Time slot interchanger

sft - TSI identifier

s - Cross-connect side (0 or 1)

f - FROM unit (1 through 6)

t - TO unit (1 through 6)

TN - Transaction

dddd - Transaction number

EVENT - Event

eeee - Event number

error analysis data

- The error analysis data consists of from 2 to 10 four-digit hexadecimal fields labeled regn below. The number of fields reported depends upon the error condition. The data is used for internal troubleshooting purposes only.

For pack id errors and TSI stuck bit errors the data include the pack id and the TSI number.

regn - Device register n (n ranges from 2 through 10)

For the TSI identified by sft:

There are 16 TSI devices in a TSI circuit pack.

Each bit set in the summary status register indicates an alarming device on TSI sft.

For each alarming TSI device, the device status register is dumped in device fields <reg1> through <reg2>, one device per register. Up to four devices can dump their status register, per message. If less than four devices are alarming, the fields will have a 0000 value.

Register Bit Definitions

reg1 - TSI summary status register

bit	Definition
15	Error on TSI sft device 15
14	Error on TSI sft device 14
13	Error on TSI sft device 13
12	Error on TSI sft device 12
11	Error on TSI sft device 11
10	Error on TSI sft device 10
09	Error on TSI sft device 09
08	Error on TSI sft device 08
07	Error on TSI sft device 07
06	Error on TSI sft device 06
05	Error on TSI sft device 05
04	Error on TSI sft device 04
03	Error on TSI sft device 03
02	Error on TSI sft device 02
01	Error on TSI sft device 01
00	Error on TSI sft device 00

reg2,

reg3,

reg4,

reg5 - TSI device summary status registers 2 through 5

For up to four TSI devices indicated by reg2 through reg5, each device will be represented by a summary status register indicating the following information:

bit(s)	Definition
15	Not used
14	Not used
13	Odd parity over data bits 12 through 00
12	TSI memory diagnostic in progress
11-08	4-bit TSI ID
07	Exercise in progress
06	Not used
05	Memory error overflow
04	Failure of memory diagnostic
03	Loss of 8 MHz clock
02	Output data error
01	Control RAM parity error
00	Microprocessor bus error

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

- B0** Pack id error, can't read pack
- B1** TSI stuck bit, summary bit set, no devices alarming
- B2** TSI device error
- B3** TSI device id error, cannot read device
- B4** Illegal exercise bits set
- B5** Bus address error
- B6** Device clock error
- B7** Device control ram parity error
- B8** Output data parity error (from an FTM)
- B9** Corresponding CCNI bit is stuck

ERR,ESR,UNIT,DSPI,TN,EVENT,COND

ERROR RECOVERY UNIT DSPI

Explanation Of Command

This autonomous message reports that DACS II detected an alarm on the specified unit's digital signal processing interface.

Command

Not applicable.

Completion Message

[O.01365]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q DSPI TN dddd \
EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

I Information

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register content cannot be read.

UNIT - Unit

[q]q - Unit number (1 through 16)

DSPI - Digital signal processing interface

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data for this error recovery event.

error analysis data

- Troubleshooting data (four-digit hexadecimal)

Six words of troubleshooting data. For purposes of explanation they are here labeled and appear in the the following manner:

aaaa bbbb cccc dddd eeee ffff

Name	Explanation
aaaa	CPU Interrupt Holding Register contents
bbbb	CPU Interrupt Mask Register contents
cccc	DSPI Interrupt Capturing Register 0 contents
dddd	DSPI Interrupt Capturing Register 0 contents
eeee	DSPI Interrupt Capturing Register 1 contents
ffff	DSPI Interrupt Capturing Register 1 contents

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

6D DSPI access error (e.g. pack not there)
6E DSPI bus data parity error
6F DSPI bus address parity error
D1 Source of error is unknown
D2 Source of error was not found
D3 Stuck bit in register
D5 Illegal/unknown condition code

ERR,ESR,UNIT,FC,TN,EVENT,COND

ERROR RECOVERY UNIT FC

Explanation Of Command

This autonomous message reports that DACS II has detected an alarm on a given facility terminating unit's format converter.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01364]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q FC sb \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

Explanation Of Parameters

I Information

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

UNIT - Unit

[q]q - Unit number (1 through 16)

FC - Format converter

sb - FC identifier

s - FC side (0 or 1)

b - FC No. (1 through 4)

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data for this error recovery event.

error analysis data

- troubleshooting data (four-digit hexadecimal)

Six words of troubleshooting data. For purposes of explanation they are here labeled and appear in the the following manner:

aaaa bbbb cccc dddd eeee ffff

Name Explanation

aaaa	Board Level ESR0 & ESR1 content
bbbb	Board Level EMR0 & EMR1 content
cccc	RF Device ESR0 & EMR0 content
dddd	RF Device ESR1 & EMR1 content
eeee	RF Device ESR2 & EMR2 content
ffff	RF Device & TF Device Status Register content

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

4C	FC can't be accessed
4D	Timer Error
4E	Circuit ID Error
4F	Transmit Formatter Error
50	Receiver Formatter Error
51	Sanity Timer Interrupt
52	RF bus error
D5	Illegal/unknown condition code

ERR,ESR,UNIT,FLI,TN,EVENT,COND

ERROR RECOVERY FLI

Explanation Of Command

This command reports that a failure was detected in a facility line interface of a DS3 unit.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01401]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q FLI k TN dddd \
EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

Explanation Of Parameters

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

UNIT - Unit

[q]q - Unit number (1 through 16)

FLI - Facility Line Interface

k - Side identifier of the FLI

<i>k</i>	<i>Explanation</i>

S	Service side

P	Protection side

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data for this error recovery event.

error analysis data

- Troubleshooting data.

The error analysis data consists of three two-byte hexadecimal numbers. For explanatory purposes only these numbers are labeled below as a1b1, c1c2, and f1f2. Each byte of a number consists of two hexadecimal characters.

byte	Explanation
a1	Circuit pack identifier
b1	Hardware Firmware version
c1	Communications Interface (CI) esr 1
c2	CI esr 2
f1	FLI esr 1
f2	FLI esr 2

COND - Condition

cc - Hexadecimal condition code

cc	<i>Explanation</i>
02	Firmware error
03	Transmit underrun threshold exceeded
04	Bad EMXR Acknowledgement
05	Timeout while waiting for msg from EMXR
06	RAM data error
07	Invalid code checksum
08	Error in PRISM register
09	Error in HSCC register
0A	EPROM checksum error
0B	Timer 1 error
0C	Timer 2 error
0D	DUART error
0E	MIU access error
12	FLI register bit stuck
13	FLI lock and key alarm
3B	FLI access error
3C	FLI communication link error
BA	FLI loss of clock
BB	FLI loss of signal
BC	FLI circuit id error
BD	FLI frame sync or internal error
BE	FLI address bus parity error
D2	Source of error was not found
D6	MIU communication link error

ERR,ESR,UNIT,FMT,TN,EVENT,COND

ERROR RECOVERY FMT

Explanation Of Command

This message indicates that a failure was detected in a formatter of a DS3 unit.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01402]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q FMT s TN dddd \
EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

Explanation Of Parameters

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

UNIT - Unit

[q]q - Unit number (1 through 16)

FMT - Formatter

s - Side identifier of the FMT (0 or 1)

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data for this error recovery event.

error analysis data

- Twelve words of troubleshooting data each consisting of four hexadecimal characters (two hexadecimal bytes). The form and ordering of these words, as they would appear in the output message, is shown below labeled for explanatory purposes.

abm1 e0e1 r0r1 r2r3 r4s0 s1s2 s3s4 t0t1 t2t3 t4u0 u1u2 u3u4

a	Circuit pack
b	Firmware version
m1	Maintenance esr
e0	CI esr 0
e1	CI esr 1
r0	FMT 0RF esr 0
r1	FMT 1RF esr 0
r2	FMT 2RF esr 0
r3	FMT 3RF esr 0
r4	FMT 4RF esr 0
s0	FMT 0RF esr 1
s1	FMT 1RF esr 1
s2	FMT 2RF esr 1
s3	FMT 3RF esr 1
s4	FMT 4RF esr 1
t0	FMT 0RF esr 2
t1	FMT 1RF esr 2
t2	FMT 2RF esr 2
t3	FMT 3RF esr 2
t4	FMT 4RF esr 2
u0	FMT 0TF status
u1	FMT 1TF status
u2	FMT 2TF status
u3	FMT 3TF status
u4	FMT 4TF status

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

33	FMT TF control bus error
35	FMT multiple TF network data error
36	FMT single TF network data error
37	FMT TF device or clock receiver error
38	FMT multiple TF clock error
39	FMT single TF sync error
3A	FMT multiple TF sync error
D1	Source of error is unknown
D7	FMT communication link error
F0	FMT access error

cc *Explanation*

- F1** FMT timing error
- F2** FMT link id error
- F3** FMT bus timeout
- F4** FMT serial address parity error
- F5** FMT 0-4TF timing error
- F6** FMT 0-4TF timing error
- F7** FMT error summary 1 stuck bit
- F8** FMT timing error, RF data parity
- F9** FMT error summary 2 stuck bit
- FA** FMT lock override, active select or kill parity
- FB** FMT FIFO or control PROM error
- FC** FMT RF control bus error
- FD** FMT RF port and monitor alarms
- FE** FMT RF port alarm; no monitor alarms

ERR,ESR,UNIT,FTMI,TN,EVENT,COND

ERROR RECOVERY UNIT FTMI

Explanation Of Command

This autonomous message indicates that DACS II has detected an alarm on the unit's facility terminating module interface. The error type is indicated by the error condition code.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01363]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q FTMI b TN dddd \
EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

Explanation Of Parameters

I Information

UNIT - Unit

[q]q - Unit number (1 through 16)

FTMI - Facility Terminating Module Interface

b - FTMI No. (1 through 4)

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data for this error recovery event.

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

ERR - Error recovery

error analysis data

- Seven words of 4-digit hexadecimal data.

The words are labeled as follows:

aaaa bbbb cccc dddd eeee ffff gggg

aaaa - Board level register contents

bbbb - CIA device ESR contents

cccc - CIB device ESR contents

dddd - CIC device ESR contents

eeee - CIA device EMR contents

ffff - CIB device EMR contents

gggg - CIC device EMR contents

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

- 40** Bus Error Alarm
- 41** CIA Device Error
- 42** CIB Device Error
- 43** CIC Device Error
- 44** Pack can't be accessed
- 45** Loss of timing alarm
- 46** Chip ID Comparison
- 47** Data Strobe Signal
- 48** Address Parity Error
- 49** FC Stuck Bit on FTMI
- 4A** DDC Stuck Bit on FTMI
- 4B** FTMI lost clock
- D5** Illegal/unknown condition code

ERR,ESR,UNIT,HFMT,TN,EVENT,COND

ERROR RECOVERY HYBRID FMT

Explanation Of Command

This message indicates that a failure was detected in a formatter of a Hybrid DS3 unit.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01405]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q HFMT s TN dddd \
EVENT eeee 3 LN MSG:
<error analysis data - line 1>
<error analysis data - line 2> COND cc COMPL

Explanation Of Parameters

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

UNIT - Unit

[q]q - Unit number (1 through 16)

HFMT - Hybrid Formatter

s - Side identifier of the FMT (0 or 1)

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data for this error recovery event.

error analysis data - line 1
error analysis data - line 2

- This data will be generated as seventeen fields. Each field contains a four-digit hexadecimal number representing two bytes of trouble shooting data. For identification purposes these fields are labeled as shown below and will appear in the order shown within the message.

abm1 c1c2 d1d2 r0r1 r2s0 s1s2 t0t1 t2u0 u1u2 x0x1 x2x3
e0e1 f0f1 g0g1 h0h1 k0k1 k2k3

a	Circuit pack
b	Firmware version
m1	Hybrid FMT esr
c1	CI esr 1
c2	CI esr 2
d1	Format Converter error summary register
d2	Configure FPGA Enable Register
r0	Receive Format Converter 0 esr 0
r1	Receive Format Converter 0 esr 1
r2	Receive Format Converter 0 esr 2
s0	Receive Format Converter 1 esr 0
s1	Receive Format Converter 1 esr 1
s2	Receive Format Converter 1 esr 2
t0	Receive Format Converter 2 esr 0
t1	Receive Format Converter 2 esr 1
t2	Receive Format Converter 2 esr 2
u0	Receive Format Converter 3 esr 0
u1	Receive Format Converter 3 esr 1
u2	Receive Format Converter 3 esr 2
x0	Transmit Format Converter 0 esr
x1	Transmit Format Converter 1 esr
x2	Transmit Format Converter 2 esr
x3	Transmit Format Converter 3 esr
e0	Receive Format Converter MXR Link 0 esr 0
e1	Receive Format Converter MXR Link 0 esr 1
f0	Receive Format Converter MXR Link 1 esr 0
f1	Receive Format Converter MXR Link 1 esr 1
g0	Receive Format Converter MXR Link 2 esr 0
g1	Receive Format Converter MXR Link 2 esr 1
h0	Receive Format Converter MXR Link 3 esr 0
h1	Receive Format Converter MXR Link 3 esr 1
k0	Receive Format Converter PMXR Link 0 esr
k1	Receive Format Converter PMXR Link 1 esr
k2	Receive Format Converter PMXR Link 2 esr
k3	Receive Format Converter PMXR Link 3 esr

COND - Condition

cc - Hexadecimal condition code

cc	<i>Explanation</i>
33	FMT TF control bus error
35	FMT multiple TF network data error
36	FMT single TF network data error
3A	FMT multiple TF sync error
D1	source of error is unknown
D7	FMT communication link error
F0	FMT access error
F1	FMT timing error
F2	FMT link id error
F3	FMT bus timeout
F4	FMT serial address parity error
F5	FMT 0-4TF timing error
F9	FMT error summary 2 stuck bit
FA	FMT lock override, active select or kill parity
FC	FMT RF control bus error
FD	FMT RF port and monitor alarms
FE	FMT RF port alarm; no monitor alarms
FF	HFMT FPGA control and config. error

ERR,ESR,UNIT,HMXR,DEV,TN,EVENT,COND

ERROR RECOVERY HMXR

Explanation Of Command

This message indicates a failure was detected in a multiplexer of a DS3 Unit.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01406]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q HMXR c[DEV <devc>] \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

Explanation Of Parameters

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

UNIT - Unit

[q]q - Unit number (1 through 16)

MXR - Multiplexer

c - MXR number (P, 1 through 6)

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data for this error recovery event.

DEV - Device

devc - Device identifier

The devices for the KCR8-HMXR circuit pack introduced in Release 8.0 are:

<i>devc</i>	<i>Explanation</i>
M13	M13 device
URT	Dual Universal Asynchronous Receiver and Transmitter
HSC	High-level Serial Communication Controller
CCxx	DS1 Channel Controller (xx = 01 through 14)
ECxx	E1 Channel Controller (xx = 01 through 14)
TXyy	DS1 Transceiver device (yy = 01 through 28)
EXyy	E1 Transceiver device (yy = 01 through 27) (E1 Transceivers 4, 8, 12, 16, 20, 24, and 28 do not exist)

error analysis data

- **For the KCR8-HMXR circuit pack introduced in Release 8.0,**
this data may be output with 0 to 12 fields depending upon the error
condition. Each field contains a four-digit hexadecimal number
representing troubleshooting data. For identification purposes these
fields are labeled as shown below and would appear in the order shown
within the message.

m1s1 m2s2 m3s3 m4s4 m5s5 h1h2 x1x2 x3x4 y1y2 z1z2 [d1d2 d3d4]

m1	HMXR mask register 1
s1	HMXR error source register 1
m2	HMXR mask register 2
s2	HMXR error source register 2
m3	HMXR mask register 3
s3	HMXR error source register 3
m4	HMXR mask register 4
s4	HMXR error source register 4
m5	HMXR mask register 5
s5	HMXR error source register 5
h1	Hardware error summary 1
h2	Hardware error summary 2
x1	Not used for DS1 -- E1 Transceiver device register 1
x2	DS1/E1 Transceiver device register 2
x3	DS1/E1 Transceiver device register 3
x4	DS1/E1 Transceiver device register 4
y1	M13 device Revision register
y2	DS1/E1 Channel controller ESR register
z1	Circuit ID & version
z2	DS1/E1 select register
d1	Byte 1 of devc data
d2	Byte 2 of devc data (not used for device CC)
d3	Byte 3 of devc data (not used for device CC)
d4	Byte 4 of devc data (not used for devices CC and TX)

- **For the KCR5-EMXR circuit pack introduced in Release 6.0,** this data may be output with 0 to ?? fields depending upon the error condition. Each field contains a four-digit hexadecimal number representing troubleshooting data. For identification purposes these fields are labeled as shown below and would appear in the order shown within the message.

Data Fields

d1	Description
d2	Description
.	.
.	.
.	.
dn	Description

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

14	MXR DS3 loss of signal
15	MXR unknown error
3D	E1CC ROM error
3E	loss of timing
3F	OOS test ran while IS
97	MXR communication link error
A6	MXR channel controller transmit data error
A7	MXR channel controller receiver data error
A8	MXR channel controller exercise error
A9	MXR channel controller stuck bit error
AA	MXR transceiver framer error
AB	MXR transceiver receive sync error
AC	MXR transceiver transmitter error
D5	Illegal/unknown condition code
D8	MXR ROM error
DA	MXR queue overflow
DB	MXR channel controller loss of clock
DC	MXR channel controller frame sync error
DD	MXR channel controller configuration register error
DE	MXR channel controller instruction ram error
DF	MXR channel controller parity error
E1	MXR access error (can't access pack)
E2	MXR hard error stuck bit
E3	MXR facility error stuck bit
E4	MXR pack is in reset state
E6	MXR loss of clock from unselected FLI
E7	MXR 8.192MHz is not phase locked to system clock
E8	MXR firmware error

cc	<i>Explanation</i>
E9	MXR HSCC device error
EB	MXR M13 summary stuck bit error
EC	MXR transceiver summary stuck bit error
ED	MXR program error
EF	MXR RAM error
E0	HMXR software error
EE	MXR external bus error
FF	HMXR E1 transceiver summary error
01	MX hardware does not match UC data base
103C	MXR TS0 queue overflow

ERR,ESR,UNIT,MIU,TN,EVENT,COND

ERROR RECOVERY MIU

Explanation Of Command

This message reports that a failure was detected in a multiple interface unit of a DS3 unit.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01404]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q MIU c TN dddd \
EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

Explanation Of Parameters

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

UNIT - Unit

[q]q - Unit number (1 through 16)

MIU - Multiplexer interface unit

c - the number identifier of the MIU (P 1 through 6)

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data for this error recovery event.

error analysis data

- Two and one half words of troubleshooting data. The First two words consist of four hexadecimal digits each (two hexadecimal bytes). The half word is only two hexadecimal digits. The form and order of these words in the message text is shown below where, for explanatory purposes only, the words have been labeled.

e1e2 f1s1 c1

byte	Explanation

e1	MIU error code

e2	MIU ESR register

f1	Firmware version

s1	Software version

c1	Circuit pack

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

- 01** CEC bit on PRISM not cleared
- 02** Firmware error
- 03** Transmit underrun threshold exceeded
- 04** Bad EMXR Acknowledgement
- 05** Timeout while waiting for msg from EMXR
- 06** RAM data error
- 07** Invalid code checksum
- 08** Error in PRISM register
- 09** Error in HSCC register
- 0A** EPROM checksum error
- 0B** Timer 1 error
- 0C** Timer 2 error
- 0D** DUART error
- 0E** MIU access error
- D6** MIU communication link error
- F2** MIU got reset
- F3** Timeout for Yellow Inhibit/Enable Request
- F4** Queue overflow error

ERR,ESR,UNIT,MXR,DEV,TN,EVENT,COND

ERROR RECOVERY MXR

Explanation Of Command

This message indicates a failure was detected in a multiplexer of a DS3 Unit.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01403]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q MXR c[DEV <devc>] \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

Explanation Of Parameters

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

UNIT - Unit

[q]q - Unit number (1 through 16)

MXR - Multiplexer

c - MXR number (P, 1 through 6)

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data for this error recovery event.

DEV - Device

devc - Device identifier

The devices for the KCR1-MXR circuit pack introduced in Release 4.0 are:

<i>devc</i>	<i>Explanation</i>
DS3	General devices
M12x	M12 devices (x = 1 through 7)
M23	M23 device
PIF	Processor Interface
HSC	High-level Serial Communication Controller
CCxx	Channel Controller (xx = 1 through 14)
TXyy	Transceiver devices (yy = 1 through 28)

The devices for the KCR5-EMXR circuit pack introduced in Release 6.0 are:

<i>devc</i>	<i>Explanation</i>
DS3	General devices
M12x	M12 devices (x = 1 through 7)
M23	M23 device
URT	Dual Universal Asynchronous Receiver and Transmitter
HSCy	High-level Serial Communication Controller (y = 1 through 2)
TMR	Timer device
CCxx	Channel Controller (xx = 1 through 14)
TXyy	Transceiver devices (yy = 1 through 28)

error analysis data

- **For the KCR1-MXR circuit pack introduced in Release 4.0,**
this data may be output with 0 to 10 fields depending upon the error condition. Each field contains a four-digit hexadecimal number representing troubleshooting data. For identification purposes these fields are labeled as shown below and would appear in the order shown within the message.

m1s1 m2s2 m3s3 h1h2 x1x2 x3x4 y1y2 z1z2 [d1d2 d3d4]

m1	MXR mask register 1
s1	MXR error source register 1
m2	MXR mask register 2
s2	MXR error source register 2
m3	MXR mask register 3
s3	MXR error source register 3
h1	Hardware error summary 1
h2	Hardware error summary 2
x1	Transceiver device register 1
x2	Transceiver device register 2
x3	Transceiver device register 3
x4	Transceiver device register 4
y1	M13 device ID register
y2	Channel controller ESR register
z1	Circuit ID & version
z2	Not used
d1	Byte 1 of devc data
d2	Byte 2 of devc data (not used for device CC)
d3	Byte 3 of devc data (not used for device CC)
d4	Byte 4 of devc data (not used for devices CC and TX)

- **For the KCR5-EMXR circuit pack introduced in Release 6.0,**
this data may be output with 0 to ?? fields depending upon the error condition. Each field contains a four-digit hexadecimal number representing troubleshooting data. For identification purposes these fields are labeled as shown below and would appear in the order shown within the message.

Data Fields

d1	Description
d2	Description
.	.
.	.
.	.
dn	Description

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

14	MXR DS3 loss of signal
15	MXR unknown error
34	MXR M23 summary stuck error
97	MXR communication link error
A6	MXR channel controller transmit data error
A7	MXR channel controller receiver data error
A8	MXR channel controller exercise error
A9	MXR channel controller stuck bit error
AA	MXR transceiver framer error
AB	MXR transceiver receive sync error
AC	MXR transceiver transmitter error
AD	MXR M23 device error
AE	MXR M12 device error
AF	MXR M12 summary stuck error
D5	Illegal/unknown condition code
D8	MXR ROM error
D9	MXR LCA error
DA	MXR queue overflow
DB	MXR channel controller loss of clock
DC	MXR channel controller frame sync error
DD	MXR channel controller configuration register error
DE	MXR channel controller instruction ram error
DF	MXR channel controller parity error
E1	MXR access error (can't access pack)
E2	MXR hard error stuck bit
E3	MXR facility error stuck bit
E4	MXR pack is in reset state
E5	MXR PIF Bus Parity Error
E6	MXR loss of clock from unselected FLI
E7	MXR 45MHz is not phase locked to system clock
E8	MXR firmware error
E9	MXR HSCC device error
EA	MXR PIF I/O device error
EB	MXR M13 summary stuck bit error
EC	MXR transceiver summary stuck bit error
ED	MXR program error
EF	MXR RAM error
F0	EMXR Timer error
F1	EMXR DUART error

ERR,ESR,UNIT,UC,UBX,TN,EVENT,COND

ERROR RECOVERY UNIT

Explanation Of Command

This message reports that DACS II detected an alarm on a given units' unit controller or unit bus extender.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01361]

I hh:mm:ss xy,ww ERR[ESR] UNIT [q]q {UC|UBX} \
TN dddd EVENT eeee 2 LN MSG:
<error analysis data> COND cc COMPL

Explanation Of Parameters

I Information

ERR - Error recovery

ESR - Error source register

The ESR keyword is not output if the register contents cannot be read.

UNIT - Unit

[q]q - Unit number (1 through 16)

UC - Unit controller

UBX - Unit bus extender

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

EVENT - Event

eeee - Event number

The event number can be specified in UTL::QRY, ERR to retrieve the contents of the DACS II error recovery log file which contains the data for this error recovery event.

error analysis data

- 2 to 8 words, depending on the unit type, of four hexadecimal digits each containing troubleshooting data.

For a DS3U the words are labeled as follows:

ire0, ire1, ire2, cies, irm0, irm1, irm2, cima

ire0 - Error source register 0

ire1 - Error source register 1

ire2 - Error source register 2

cies - Communications interface error source register

irm0 - MASK register 0

irm1 - MASK register 1

irm2 - MASK register 2

cima - Communications interface MASK register

For an FTU the words are labeled as follows:

aabb eeff

- aa** - CPU interrupt mask register contents
- bb** - CPU interrupt holding register contents
- ee** - UBX interrupt mask register contents
- ff** - UBX interrupt holding register contents

For a DSPU the words are labeled as follows:

aaaa bbbb cccc dddd eeee ffff

- aaaa** - CPU interrupt holding register contents
- bbbb** - CPU interrupt mask register contents
- cccc** - DSPI interrupt capturing register 0 contents
- dddd** - DSPI interrupt mask register 0 contents
- eeee** - DSPI interrupt capturing register 1 contents
- ffff** - DSPI interrupt mask register 1 contents

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

- 00** No conditions
- 0F** CPU internal bus error
- 10** CPU parallel bus parity error
- 11** CPU serial bus parity error
- 31** Sanity Time-out
- D0** CPU RAM Parity error
- D1** Source of error is unknown
- D2** Source of error was not found
- D3** Stuck bit in register
- D4** Bad UBX pack
- D5** Illegal/unknown condition code

ERR,HARDWARE,TN,COND,EVENT,ACTION

ERROR RECOVERY HARDWARE

Explanation Of Command

This message is printed out when applications software attempted some operation on a circuit, but that operation failed. The type of failure is indicated in the condition code. The applications software may have requested some autonomous action on the circuit and that action will be reflected with an autonomous request for removal and/or diagnostics. Additional information can be gathered by querying the error recovery log file, but this will require technical assistance for interpretation.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01392]

```
I hh:mm:ss xy,ww  ERR HARDWARE <entity> 4 LN MSG:
  TN=dddd COND=cc EVENT=xxxx ACTION=<action>
  SOURCE=<source> DP=<dp> PROC=<proc> <load>
  TSARGS=cn [<tsargs>]  COMPL
```

Explanation Of Parameters

ERR - Error recovery

HARDWARE

- Hardware

TN - Transaction

dddd - Transaction number (hexadecimal)

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

COND - Condition

EVENT - Event

xxxx - Event number

SOURCE - Source

source - Source filename

DACS II internal software filename (up to 12 characters)

DP - Decision point

dp - Decision point value

Number associated with a particular location in the software file specified in the "source" field. Value is 0- to 8-digit positive decimal number.

ACTION - Action

action - Action to be taken

<i>(CBaction</i>	<i>Explanation</i>
REPORT	Report only, no action
REMOVE	Remove processor from service

PROC - Process

proc - Process value

TSARGS - Trouble shooting arguments

cn - The number of trouble shooting arguments that follow (00 through 10)

tsargs - List of "count" trouble shooting arguments

load - Load number

The load number is a ten digit number of the following form:

abcdefghij

ab	software generic number
cd	software point issue number
ef	software release number
gh	year
ij	load number

entity - DACS II entity involved

entity

BTS s
CCB sf
CCI s
CCNI s s
ETSI sqq
LINK n
NPC [s]abc[-[t]def][SIDE s]
NPC uvmp[-wxkqr][SIDE s]
SYNC s
SYNC s TLI m
TSI sft
UC [q]q
UNIT [q]q DSPI
UNIT [q]q FC sb
UNIT [q]q FTMI b
UNIT [q]q MXR n DEV devc
UNIT [q]q UBX
UNIT [q]q MIU I
UNIT [q]q FLI d
UNIT [q]q FMT k
UNIT [q]q MMFG y

cc - Hexadecimal condition code

cc *Explanation*

E0	Hardware database mismatch
E1	Hardware Failure
E2	Hardware Boot Failed
E3	Can't access link
E4	Transmit Time-out
E5	Receiver Time-out
E6	softerr failure which forces link removal
E7	Unit could not be reset

cc *Explanation*

- E8** Unit failed sanity check
- E9** failure to insert TCC
- EA** failure to remove TCC
- EB** failed to switch CCN sides
- EC** NPC's facility queue overflow condition
- ED** Duplex entity failed diagnostics
- EE** Lost Clear-To-Send signal on X.25 links
- EF** Frame Audit reboot DDC failure
- F5** Packet layer parameters are mismatched between DACS II and the network
- F6** Failed to write XPC register
- F7** Transmit time-out because Clear To Send lost
- F8** R20 counter reaches limit
- F9** T3 timer expires
- FA** Too many interrupts or illegal interrupt from XPC

ERR, LINK, TN, STATUS

ERROR RECOVERY

Explanation Of Command

This message reports that error recovery was called to handle an error occurring in an administrative link.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01321]

I hh:mm:ss xy,ww ERR LINK a TN dddd STATUS a0 a1 a2 COMPL

Explanation Of Parameters

ERR - Error recovery

LINK - Link

a - Link number (1 through 6)

TN - Transaction

dddd - Transaction number

STATUS - Status

a0,

a1,

a2 - Status data

The following status data is for asynchronous links.

a0 - Message code

<i>a0</i>	<i>Explanation</i>

00	Link has gone protocol in-service

01	Link has gone protocol out-of-service

a1 - Link mode status

<i>a1</i>	<i>Explanation</i>

00	Idle

01	Input message in progress

02	Output message in progress

a2 - Link interrupt register (hexadecimal)

Bit numbering 76543210

<i>Bit</i>	<i>Explanation</i>

7	Received break

6	Parity error

5	Framing error

4	Overrun error

3	Transmitter empty

2	Transmitter ready

1	Receiver full

0	Receiver Ready

If bits 4, 5, and 6 are all set (equal to 1) simultaneously it indicates a transmission error.

The following status data is for synchronous links.

<i>a0</i>	<i>Explanation</i>
00	Session established on virtual circuit
01	Session closed on virtual circuit

<i>a1</i>	<i>Explanation</i>
00	always set to 00

a2 - Virtual circuit number (hexadecimal)

<i>a2</i>	<i>Virtual circuit number</i>
01	1
02	2
03	3
04	4
05	5
06	6
07	7
08	8
09	9
0A	10
0B	11
0C	12
0D	13
0E	14
0F	15
10	16

ERR,MSG,TO,LOG,DISCARDED

ERROR RECOVERY

Explanation Of Command

This autonomous message reports that due to large numbers of error reports being passed through the system, not all transient error events were transferred to the disk. Logging will resume automatically when activity decreases to a manageable level.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01337]

I hh:mm:ss xy,ww ERR MSGS TO LOG DISCARDED COMPL

Explanation Of Parameters

ERR - Error recovery

MSG - Messages

TO - To

LOG - Log

DISCARDED
- Discarded

ERR,PMEM,SMEM,TN,EVENT,COND

REPORT MEMORY CARD ERROR

Explanation Of Command

This autonomous message reports that a hardware error has been detected on the Primary Memory Card (PMEM) or the Secondary Memory Card (SMEM). The message identifies the source of the error by displaying error and status registers. Each bit in a register corresponds to a particular type of error. A specific error exists when its corresponding bit is set to one.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01315]

I hh:mm:ss xy,ww ERR {PMEM|SMEM} TN dddd EVENT eeee COND cc COMPL

Explanation Of Parameters

ERR - Error

PMEM - Primary memory card.

SMEM - Secondary memory card.

TN - Transaction Number

dddd - Four digit (hexadecimal) transaction number

The transaction number is a unique tag used to identify a specific event that is recorded in the error recovery log. Specific events may be retrieved from the error log using message I.55011 if the user knows their transaction numbers.

EVENT - Event

eeee - Four digit (hexadecimal) event number

The event number is a unique tag used to identify a specific event that is recorded in the error recovery log. Specific events may be retrieved from the error log using message I.55011 if the user knows their event numbers.

cc - Hexadecimal condition code

cc *Explanation*

80 Memory card cannot be accessed

ERR,PWR,PMC,PMA,DMA,MI,TN

ERROR RECOVERY POWER

Explanation Of Command

This message indicates that error recovery was called by DACS II because of a power failure on the frame.

This message also indicates which power supply failed. The 4-digit hexadecimal "fields" of the error status register indicate the failed power source(s). These hexadecimal values must be decoded into their individual bits. A bit set to 1 indicates an errored power source.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01301]

pa <il> hh:mm:ss xy,ww ERR PWR {PMC|PMA|DMA|MI} \
aaaa bbbb cccc dddd TN dddd COMPL

Explanation Of Parameters

pa - Priority of action field.

pa Explanation

I	Information
*	Minor alarm
**	Major alarm
*C	Critical alarm

il - Intervention level.

il Explanation

AMI	Immediate maintenance action
AMD	Deferred maintenance action
SI	No intervention

PMC	Prompt Maintenance Action Critical
PMA	Prompt Maintenance Action Major
DMA	Deferred Maintenance Action Minor
MI	Maintenance Information

PWR - Power

ERR - Error recovery

aaaa - EMTC ESR0

aaaa is a four-digit hexadecimal number representing the sixteen bits of ESR0. Each bit of this register contains the status of an individual power source. A power source has failed if the bit corresponding to it is set to 1.

bit # Explanation

15-12	Unused
11	CCN/ECCN 1 PWR failure
10	CCN/ECCN 0 PWR failure
9	SYNC 1 PWR failure
8	SYNC 0 PWR failure
7	Unit 7 PWR failure
	Unused if non-Capacity Expansion Frame (CEF)
6	Unused
5	Unit 6 PWR failure
4	Unit 5 PWR failure
3	Unit 4 PWR failure
2	Unit 3 PWR failure
1	Unit 2 PWR failure
0	Unit 1 PWR failure

bbbb - EMTC ESR1

bbbb is similar to aaaa above but represents the sixteen bits of ESR1.

bit #	Explanation
15-14	Unused
13	The +12 V disk and tape power unit has failed (484GA, 484GB, or 484GC)
12	The +5 V main controller power unit has failed (411AA, 411AB, or 411AC)
	OR
	the +/-12 V main controller power unit for communication links has failed (SM565, SM624, or SM565B)
11-00	Unused

cccc - EMTC ESR2 (Reserved for future use)

dddd - EMTC ESR3 (Unused if non-CEF)

dddd is similar to aaaa above but represents the sixteen bits of ESR3.

<i>bit #</i>	<i>Explanation</i>
15-9	Unused
8	Unit 16 PWR failure
7	Unit 15 PWR failure
6	Unit 14 PWR failure
5	Unit 13 PWR failure
4	Unit 12 PWR failure
3	Unit 11 PWR failure
2	Unit 10 PWR failure
1	Unit 9 PWR failure
0	Unit 8 PWR failure

TN - Transaction

dddd - Transaction number

The TN number can be specified by the UTL::QRY,ERR message to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

ERR,SOFTWARE,MC,ERROR,MID,TN,RC,ACTION

ERROR RECOVERY SOFTWARE

Explanation Of Command

This output message reports that an error was detected by the software in the indicated processor. The report also gives the error type, the source of the error, and the action taken.

The action taken should be sufficient to recover from the problem, in which case no craft action is necessary. Or the action taken was to isolate the problem and prevent system inconsistencies. In this case, manual action will be required to restore the appropriate entities.

⇒ NOTE:

All new or unknown occurrences of this error should be reported to the development organizations immediately.

The word "SOFTWARE", in the message text, is replaced by "MC" when the error type is "DISK" or "TAPE".

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

[O.01362]

```
I hh:mm:ss xy,ww  ERR {SOFTWARE|MC} <error type> ERROR 4 LN MSG:
MID=<mid> TN=dddd RC=<rc> ACTION=<action> ENTITY=<entity>
SOURCE=<source> DP=<dp> PROC=<proc>
TSARGS=<tsargs> COMPL
```

Explanation Of Parameters

[illegible]

SOFTWARE

- Software

MC - Main controller

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the content of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

error type

- Type of error

<i>error type</i>	<i>Explanation</i>
CHECKSUM	Text or data checksum error
COMMUNICATION	Difficulty talking to remove processes of processors
CPUDGN	CPU diagnostic failed
DATA BASE	Error in data base access
DBCHECKSUM	Data base checksum error
DISK	Trouble accessing disk
EXCESSIVE INT	Too many error recovery calls
HARDWARE	External hardware failure
JOURNAL	Trouble sending journal to disk
PROGRAM	Program error, bad internal data passed
RAMTEST	Internal RAM test failed
RECOVERY	Internal recovery error
REMOTE PROGRAM	Program error encountered on other processor local process report
TAPE	Trouble accessing tape
VMACHINE	Operating system or interface problem

ERROR - Error

SOURCE - Source

source - Internal DACS II software filename (12 characters)

DP - Decision point

dp - Decision point value (0- to 8-digit positive decimal number)
Number associated with a specific point in the file specified in
the source field.

RC - Return code

rc - Return code value (0- to 8-digit positive or negative number)
Number returned by an internal function.

ACTION - Action

action - Action to be taken

<i>action</i>	<i>Explanation</i>
RSCOLDBT	Super Cold Boot
REPORT	Report only, no action
HWBOOT	Hardware boot (boot of processor with existing data base)
WMBOOT	Warm boot (boot of processor with disk data base)
CDBOOT	Cold boot (boot of processor programs and data base)
REMOVE	Remove processor from service
MCOND	Put frame into MCOND
PARK	Stop processor immediately

ENTITY - Entity

entity - Entity identifier

<i>entity</i>	<i>Explanation</i>
MP	Action on Main Processor
CI	Action on Communication Interface
MC	Action on MC
UNIT [q]q	Action on specific unit (1 through 16)
FRAME	Frame wide action

MID - Mailbox identifier

mid - Identifier

PROC - Process

proc - Process value

TSARGS - Trouble shooting arguments

tsargs - Trouble shooting arguments value

ERR,SYNC,MODE,FAST,HOLDOVER,NORMAL

ERROR RECOVERY

Explanation Of Command

This message reports that the active sync has switched to a new operating mode. Additional autonomous actions may be reported (that is, side switch) based on the state of the mate synchronizer.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01366]

I hh:mm:ss xy,ww ERR SYNC a MODE {FAST|HOLDOVER|NORMAL}\
{MATE|CRO|TLI m SSP c} TN dddd 2 LN MSG:
<synchronizer status data bytes> COND cccc COMPL

Explanation Of Parameters

I	Information
ERR	- Error recovery
SYNC	- Synchronizer
a	- Synchronizer number (0 or 1)
MODE	- Mode New synchronizer operating mode
FAST	- Fast Synchronizer is in fast phase locked loop mode
HOLDOVER	- Holdover Synchronizer is in holdover mode, or has a timing source but has not locked to it
NORMAL	- Normal Synchronizer is normal (locked to indicated reference)
MATE	- Mate Synchronizer is receiving timing from the mate synchronizer (that is, the synchronizer is locked to cross couple)
CRO	- Clock reference oscillator CRO synchronizer is receiving timing from a CRO
TLI	- Timing link interface
m	- TLI number (1 through 4)
SSP	- Synchronizer sync port
c	- SSP on TLI (0 or 1)
TN	- Transaction
dddd	- Transaction number
cccc	- Error recovery condition code

synchronizer status data bytes

- Synchronizer status information (hexadecimal)

Up to five bytes of synchronizer status data. The actual number of bytes output depends upon cccc. The bits of each byte are labeled abcdefgh in that order. The output will appear in the following order:

byte 1, byte 2, byte 3, byte 4, and byte 5.

byte 1

<i>bit</i>	<i>Explanation</i>
a	MC is down flag
b	SYNC is down flag
c	Mate SYNC is out-of-service
d	Time Base is down

Timing link service status. A bit set to 1 indicates in-service.

<i>bit</i>	<i>Explanation</i>
e	TLI1
f	TLI2
g	TLI3
h	TLI4

byte 2 - Timing link (SSP) in-service status

A bit set to 1 indicates the indicated entity is in-service

<i>bit</i>	<i>Explanation</i>
a	SSP 0 on TLI 1
b	SSP 1 on TLI 1
c	SSP 0 on TLI 2
d	SSP 1 on TLI 2
e	SSP 0 on TLI 3
f	SSP 1 on TLI 3
g	SSP 0 on TLI 4
h	SSP 1 on TLI 4

byte 3

<i>bit</i>	<i>Explanation</i>
a	SYNC restart flag
b	Hardware summary, error on DPLL
c	PLL summary, any major cross-couple error
d	Cross-couple summary, any major cross-couple error
e	CRO summary error, any major CRO error
fgh	Not used

byte 4

<i>bit</i>	<i>Explanation</i>
ab	Synchronizer architecture
00	Slave in master slave configuration
01	Master in master slave configuration
10	Mutual synchronization system
cde	Operational stratum field
000	Domestic stratum 3
011	Domestic stratum 2
fg	PLL locking mode field
00	Normal
01	Fast
10	Holdover
h	Hit timing holdover field

byte 5

bit Explanation

ab Active timing link source field

00 Holdover

01 Timing Link

10 Cross couple

11 CRO

cde Active link field

000 TLI 1, SSP 0

001 TLI 1, SSP 1

010 TLI 2, SSP 0

011 TLI 2, SSP 1

100 TLI 3, SSP 0

101 TLI 3, SSP 1

110 TLI 4, SSP 0

111 TLI 4, SSP 1

fgh Not used

COND - Condition

cccc - Hexadecimal condition code

cccc *Explanation*

EF00 Unknown what sync switched to

EF01 SYNC switched to NORMAL mode

EF02 SYNC switched to HOLDOVER

EF03 SYNC switched to FAST mode

EF04 SYNC switched TLIs/SSPs

EF05 SYNC switched to cross couple

ERR,SYNC,TLI,SSP,NPC,TN,ALM,LOS,LEN

ERROR RECOVERY, SYNCHRONIZER

Explanation Of Command

This message reports the results of the error recovery process on the synchronizer with the alarms cleared.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.01335]

```
I hh:mm:ss xy,ww  ERR SYNC a TLI m SSP b [NPC abc] \  
TN dddd  3 LN MSG:  
ALM[ LOS][ LEN][ EXJ][ PHS][ OOF][ MAJ][ MIN] CLR  
<byte 1> <byte 2> <byte 3> <byte 4> <byte 5> COND cccc COMPL
```

Hierarchical

[O.01335]

I hh:mm:ss xy,ww ERR SYNC a TLI m SSP b [NPC uvmp] \
TN dddd 3 LN MSG:
ALM[LOS][LEN][EXJ][PHS][OOF][MAJ][MIN] CLR
<byte 1> <byte 2> <byte 3> <byte 4> <byte 5> COND cccc COMPL

Explanation Of Parameters

ERR - Error recovery

SYNC - Synchronizer

a - SYNC number (0 or 1)

TLI - Timing link interface

m - TLI number (1 through 4)

SSP - Synchronizer sync port

b - SSP number (0 or 1)

NPC - Network processing circuit

abc - Nonhierarchical NPC number

uvmp - Hierarchical NPC number

uv - Unit number

m - Module number

np - NPC number within the module

TN - Transaction

dddd - Transaction number

ALM - Alarm

LOS - Loss of signal

LEN - Loss of energy

EXJ - Excessive jitter

PHS - Phase step

00F - Out of frame

MAJ - Major framing error rate

MIN - Minor framing error rate

CLR - Clear

byte 1,

byte 2,

...,

byte 5 - Synchronizer status bytes

Synchronizer status data in binary form. The number of data bytes ranges from 1 to 5, depending upon the synchronizer error type. These bytes are a coded form of the information shown in "explanation of error condition code". Each byte has eight bits labeled abcdefgh.

If Main Processor to Synchronizer communication has failed, Error Recovery may not get the correct status data from the Synchronizer. All bits in "synchronizer status data bytes" will then be set to 1 by default.

byte 1

bit	Explanation
a	Timing link equipped by MC
b	Timing link declared out-of-service
c	Timing link out-of-service due to error
d	Associated Timing Extractor TLI error
efgh	Not used

byte 2 - Priority weighting of link, a number from 1 through 8

byte 3 - Framing format, line format, and frequency

bit Explanation

abc Framing format (valid only for TXB1 or TXB2 TLIs)

TXB1

000 D4

001 ESF

010 DDS

TXB2

000 CCS

001 ERSM

010 CAS0

011 CAS1

de Line format (valid only for TXB1 or TXB2 TLIs)

TXB1

00 Bipolar

01 B8ZS

TXB2

10 AMI

AA HDB3

fgh Frequency (TXUC TLI)

000 512 kHz

001 1.000 MHz

010 1.544 MHz

011 2.048 MHz

100 5.000 MHz

byte 4 - Mixed status

bit Explanation

a Carrier failure alarm/loss of signal (TXB1, TXB2, and TXCC)

b Timing signal loss of energy

c Autobaud failure

d Frequency offset flag

e Excessive jitter

f Phase step

gh Not used

byte 5 - Framing status

bit	Explanation
a	Out of frame
b	Major framing error rate
c	Major framing error rate
defgh	Not used

COND - Condition

cccc - Error recovery condition code

cccc - Hexadecimal condition code

cccc	<i>Explanation</i>

E805	TL error cleared

ERR,SYNC,TLI,SSP,TN,ALM,LOS,LEN,EXJ

ERROR RECOVERY

Explanation Of Command

This message reports the results of the error recovery process on the synchronizer with the alarms set.

The errors can be of the following types:

- Loss of signal
- Loss of energy
- Excessive jitter
- Phase step
- Out of frame
- Major framing error rate
- Minor framing error rate

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.01333]

pa <il> hh:mm:ss xy,ww ERR SYNC a TLI m SSP b TN dddd 3 LN MSG:
ALM[LOS][LEN][EXJ][PHS][OOF][MAJ][MIN] {PMC|PMA|DMA|MI} SET
<byte 1> <byte 2> <byte 3> <byte 4> <byte 5> COND cccc COMPL

Hierarchical

[O.01333]

pa <il> hh:mm:ss xy,ww ERR SYNC a TLI m SSP b TN dddd 3 LN MSG:
ALM[LOS][LEN][EXJ][PHS][OOF][MAJ][MIN] {PMC|PMA|DMA|MI} SET
<byte 1> <byte 2> <byte 3> <byte 4> <byte 5> COND cccc COMPL

Explanation Of Parameters

pa - Priority of action field.

pa Explanation

I Information

* Minor alarm

** Major alarm

*C Critical alarm

il Intervention Level

il Explanation

AMI Immediate maintenance action

AMD Deferred maintenance action

SI No intervention

PMC Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

ERR - Error recovery

SYNC - Synchronizer

a - SYNC number (0 or 1)

TLI - Timing link interface
m - TLI number (1 through 4)
SSP - Synchronizer sync port
b - SSP number (0 or 1)
uvmnp - Hierarchical NPC number
 uv - Unit number
 m - Module number
 np - NPC number within the module
TN - Transaction
dddd - Transaction number
ALM - Alarm
LOS - Loss of signal
LEN - Loss of energy
EXJ - Excessive jitter
PHS - Phase step
00F - Out of frame
MAJ - Major
 Major framing error rate
MIN - Minor
 Minor framing error rate
SET - Set
COND - Condition
cccc - Error recovery condition code

byte 1,
byte 2,

...,

byte 5 - Synchronizer status data bytes

The letters a through h used below are the names given to the individual bits in a synchronizer status data byte. The eight bits in each byte are labeled abcdefgh in left to right order.

byte 1

bit	Explanation
a	Timing link equipped by MC
b	Timing link declared out-of-service
c	Timing link out-of-service due to error
d	Associated Timing Extractor TLI error
efgh	Not used

byte 2 - Priority weighting of link, a number from 1 through 8

byte 3 - Framing format, line format, and frequency

bit	Explanation
abc	Framing format (valid only for TXB1 or TXB2 TLIs)
000	D4 (TXB1)
001	ESF (TXB1)
010	DDS (TXB1)
000	CCS (TXB2)
001	ERSM (TXB2)
010	CAS0 (TXB2)
011	CAS1 (TXB2)
de	Line format (valid only for TXB1 or TXB2 TLIs)
00	Bipolar (TXB1)
01	B8ZS (TXB1)
10	AMI (TXB2)
AA	HDB3 (TXB2)
fgh	Frequency (TXUC TLI)
000	512 kHz
001	1.000 MHz
010	1.544 MHz
011	2.048 MHz
100	5.000 MHz

byte 4 - Mixed status

bit	Explanation
a	Carrier failure alarm/loss of signal (TXB1, TXB2, and TXCC)
b	Timing signal loss of energy
c	Autobaud failure
d	Frequency offset flag
e	Excessive jitter
f	Phase step
gh	Not used

byte 5 - Framing status

bit	Explanation
a	Out of frame
b	Major framing error rate
c	Major framing error rate
defgh	Not used

cccc - Hexadecimal condition code

cccc *Explanation*

- E601** TL out of service or loss of signal
E602 Timing Extractor type TLI has hardware problem

EXC,MACRO

EXECUTE MACRO

Explanation Of Command

This message requests the execution of macro **<name>**. The optional fields **p1**, **p2**, etc., specify parameters used in the macro.

To list the contents of a macro, use the **UTL QRY,LIST,MACRO** command, Message I.54131.

The **NULL** keyword may be used as a parameter.

Command

[I.39301]

EXC:FRM xy,SEQ ww:MACRO <macro name>[,(<p1>[,<p2>[,<p3>
[, ...[,<p10>]]]])]!

Completion Message

[O.39301]

M hh:mm:ss xy,ww n[vv] EXC MACRO <macro name>
[(<p1>[,<p2>[,<p3>[, ...[,<p10>]]]])] COMPL

[O.39302]

**M hh:mm:ss xy,ww n[vv] EXC MACRO <macro name> STOP **
COMPL

[O.39303]

M hh:mm:ss xy,ww n[vv] EXC MACRO IN PROGRESS

Denial Message

[O.39301.01]

M hh:mm:ss xy,ww n[vv] **EXC MACRO** <macro name> **COND** cc \
DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

p1,
p2,
p3,

...,

p10 - Macro parameter values (1 to 7 uppercase alphanumeric characters)

Within a macro a parameter is referred to by #nn. The # sign indicates a parameter reference follows and the nn indicates the position in the command line from which the parameter value will be taken. That is, if the parameter reference #03 is contained in a line within a macro then the third parameter on the EXC::MACRO command line will be substituted for each appearance of the parameter reference #03.

A maximum of 10 parameters can be specified.

MACRO - Macro

macro name

- Macro name (seven characters maximum length)

The name of a collection of DACS II commands executed as a group.

A macro name is a string of capitalized alphanumeric characters. There are two type of macros; public and private. A private macros is created by a user in space allocated to the user by the system administrator. Only the user that created it can execute or read (LIST) a private macro. A public macro is created by the system administrator and is executable and readable by all users. A public macro name must start with the letter "P". A private macro name must not start with the letter "P".

STOP - Indicates that macro execution is stopped

cc - Hexadecimal condition code

cc *Explanation*

- 62** File is being accessed
- 64** File doesn't exist/can't be accessed
- 68** Incorrect language/addressing mode
- 69** Incorrect number of parameters
- D5** No user is logged in on the link/vc

Contents

FRADTS,BMCMP	12-2
■ Explanation Of Command	12-2
■ Command	12-2
■ Completion Message	12-2
■ Denial Message	12-2
■ Autonomous Message	12-2
■ Explanation Of Parameters	12-3
FRADTS,DGN,DEV	12-4
■ Explanation Of Command	12-4
■ Command	12-4
■ Completion Message	12-4
■ Denial Message	12-4
■ Autonomous Message	12-4
■ Explanation Of Parameters	12-5
FRADTS,FRCMP	12-8
■ Explanation Of Command	12-8
■ Command	12-8
■ Completion Message	12-8
■ Denial Message	12-8
■ Autonomous Message	12-8
■ Explanation Of Parameters	12-9
FRADTS,MC,DGN	12-108
■ Explanation Of Command	12-108
■ Command	12-108
■ Completion Message	12-108
■ Denial Message	12-108



Contents

■ Autonomous Message	12-108
■ Explanation Of Parameters	12-109

FRADTS

FRADTS

This section documents the **FRADTS** command.

FRADTS,BMCMP

FRAME AUDITS

Explanation Of Command

This completed, autonomously-generated action message from frame audits indicates that the data in Main Controller (MC) Random Access Memory (RAM) did not match the data on the PMEM PCMCIA card. A similar message may be used for mismatches between the Main Controller and individual Unit Controllers (UC) or between Main Controller and the Communications Interface (CI).

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.82003]

I hh:mm:ss xy,ww FRADTS BMCMP <ttt> d8 d7 d6 d5 d4 d3 d2 d1 COMPL

Explanation Of Parameters

t t t - Entity name

t t t *Explanation*

MP Main processor

CI Communications interface

U1-U16 Unit controller (1 through 16)

d8 - Data base file number on PMEM card

d7 - Invalid page number divided by 100 ($d7 / 100$)

d6 - Invalid page number modulo by 100 ($d6 \% 100$)

If RAM page checksum is invalid, $d5 = d4 = d3 = d2 = d1 = FF$.

If DACS II cannot get the data base file on the PMEM card, $d7 = d5 = FF$.

FRADTS,DGN,DEV

FRAME AUDITS DIAGNOSTICS

Explanation Of Command

This autonomously-generated action message from frame audits indicates that an in-service diagnostic was run on the entity **ttt** for the element **eee** and the diagnostic test is complete.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.82001]

I hh:mm:ss xy,ww FRADTS DGN <ttt> <eee>[DEV <devc>] d0 COMPL

Explanation Of Parameters

ttt - Diagnosed entity name

eee - Element of diagnosed entity

<i>ttt</i>	<i>eee</i>	<i>Explanation</i>
CRO		Clock reference oscillator
	0smc	s - Side number (0 or 1) m - TLI number (1 through 4) c - TLR number (1 or 2)
DSPI		Digital signal processor interface
	0qqr	qq - Unit number (01 through 16) r - DSPI number (3 through 6)
FTMI		Facility terminating module interface
	0qqb	qq - Unit number (01 through 16) b - FTMI in the FTU (1 through 4)
NPC		Network processing circuit
	nnnn	NPC number (0001 through 2560) (Does not include NPCs equipped in DS3 or HDS3 Units)
SYNC		Synchronizer
	000s	s - Side number (0 or 1)
TLI		Timing link interface
	00sm	s - Side number (0 or 1) m - TLI number (1 through 4)
TSI		Time slot interchanger
	0sft	s - Side number (0 or 1) f - CCB number (1 through 6). FROM Unit t - TSI number (1 through 6). TO Unit

ETSI	Expanded time slot interchanger
0sqq	s - Side number (0 or 1) qq - Unit number (01 through 16)
UFC	Format Converter
0qqb	qq - Unit number (01 through 16) b - Format Converter number (1 through 4)
UNIT	Unit
00qq	qq - Unit number (01 through 16)
FMT	Formatter or Hybrid Formatter
0qq s	qq - Unit number (01 through 16) s - Side number (0 or 1)
FLI	Facility line interface
0qqk	qq - Unit number (01 through 16) k - Identifier (k = S or P)
MXR	Multiplexer or Hybrid Multiplexer
0qqc	qq - Unit number (01 through 16) c - MXR/HMXR identifier (1 through 6,P)
MIU	Multiple interface unit
0qqc	qq - Unit number (01 through 16) c - MIU number (1 through 6,P)
CCI	Clock and control interface
000s	s - Side number (0 or 1)

DEV - Device

devc - Device identifier

This optional field will be shown only if the entity is MXR/HMXR.

devc Explanation

DS3	General devices
M13	M12 and M13 devices
PIF	Processor Interface
HSC	High-level Serial Communication Controller
CCxx	DS1 Channel Controller (xx = 1 through 14)
ECxx	E1 Channel Controller (xx = 1 through 14)
TXyy	DS1 Transceiver devices (yy = 1 through 28)
EXyy	E1 Transceiver devices (yy = 1 through 27)
	(E1 Transceivers 4, 8, 12, 16, 20, 24, 28 do not exist.)

d0 - Return code from the diagnostic:

d0 Explanation

FC	Failed diagnostic

FRADTS,FRCMP

FRAME AUDITS

Explanation Of Command

This autonomously-generated message indicates that test number **ttt** was run and that this frame audit found data in the incorrect state. The message also indicates that this frame audit has completed.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.82002]

**I hh:mm:ss xy,ww FRADTS FRCMP ttt[d9 d8 d7 d6] \
d5 d4 d3 d2 d1 d0 COMPL**

Explanation Of Parameters

ttt - Test Number

d9 - d0 - Hexadecimal values of errored data bytes
Data bytes d9 through d6 are used by some but not all tests.

ttt *Explanation*

002 FTU FTMI status flags are inconsistent

The FTMI equipage flag in the MP data base does not match the equipage flag in the UC data base.

d0 FTMI flag from MP data base
d1 FTMI flag from UC data base
d2 Not used
d3 Not used
d4 FTMI number
d5 UNIT number

003 FTU FC status flags are inconsistent

The FC equipage flag in the MP data base does not match the equipage flag in the UC data base.

d0 FC flag from MP data base
d1 FC flag from UC data base
d2 Not used
d3 FC side
d4 FTMI number
d5 UNIT number

004 FTU FTMI left side equalization values are inconsistent

The FTMI left side equalization values in the MP data base do not match those in the UC data base.

d0 Second byte of the equalization value from MP data base
d1 First byte of the equalization value from MP data base
d2 Second byte of the equalization value from UC data base
d3 First byte of the equalization value from UC data base
d4 FTMI number
d5 UNIT number

005 FTU FTMI right side equalization values are inconsistent

The FTMI right side equalization values in the MP data base do not match those in the UC data base.

- d0 Second byte of the equalization value from MP data base
- d1 First byte of the equalization value from MP data base
- d2 Second byte of the equalization value from UC data base
- d3 First byte of the equalization value from UC data base
- d4 FTMI number
- d5 UNIT number

006 FTU FTMI mode flags are inconsistent

The mode of the FTMI in the MP data base does not match the mode of the FTMI in the UC data base.

- d0 FTMI mode from MP data base
- d1 FTMI mode from UC data base
- d2 Not used
- d3 Not used
- d4 FTMI number
- d5 UNIT number

007 Unit flags are inconsistent

The UNIT equipage flag in the MP data base does not match the UNIT equipage flag in the unit data base.

- d0 UNIT flag from MP data base
- d1 UNIT flag from UC data base
- d2 Not used
- d3 Not used
- d4 Not used
- d5 UNIT number

008 Unit Cross-Connect side status flag is inconsistent

The Cross-Connect side status flag in the MP data base does not match the CCN/ECCN side status flag in the unit data base.

- d0 Cross-Connect side flag from MP data base
- d1 Cross-Connect side flag from UNIT data base
- d2 Not used
- d3 Not used
- d4 Cross-Connect side
- d5 UNIT number

009 DS3 FMT/HFMT equipage inconsistent

FMT/HFMT equipage in the MP data base is not consistent with that of the unit data base

d0 MP equipage flag
d1 UA equipage flag
d2 Not used
d3 Not used
d4 FMT/HFMT Number
d5 Unit Number

00A DS3 MXR/HMXR equipage inconsistent

MXR/HMXR equipage in the MP data base is not consistent with that of the unit data base

d0 MP data base equipage flag
d1 UA data base equipage flag
d2 Not used
d3 Not used
d4 MXR/HMXR Number
d5 Unit Number

00B DS3 MIU equipage inconsistent

MIU equipage in the MP data base is not consistent with that of the Unit data base

d0 MP data base equipage flag
d1 UA data base equipage flag
d2 Not used
d3 Not used
d4 MIU Number
d5 Unit Number

00C DS3 FLI equipage inconsistent

FLI equipage in the MP data base is not consistent with that of the Unit data base

d0 MP equipage flag
d1 UA equipage flag
d2 Not used
d3 Not used
d4 FLI Number
d5 Unit Number

00D NPC Transmit Pseudo Framing Word is out of range

The Transmit Pseudo Framing Word is out of range in the MP data base

d0	The Transmit Pseudo Framing Word of NPC from MP data base
d1	Not used
d2	Not used
d3	Not used
d4	NPC number
d5	UNIT number

00E NPC Receive Pseudo Framing Word is out of range

The Receive Pseudo Framing Word is out of range in the MP data base

d0	The Receive Pseudo Framing Word of NPC from MP data base
d1	Not used
d2	Not used
d3	Not used
d4	NPC number
d5	UNIT number

00F NPC AIS Alarm data are inconsistent

The AIS Alarm data of the NPC in the MP data base does not match that in the unit data base

d0	The AIS Alarm data of NPC from MP data base
d1	The AIS Alarm data of NPC from unit data base
d2	Not used
d3	Not used
d4	NPC number
d5	UNIT number

011 FTU NPC flags are inconsistent

The FTU (or DSPU) NPC equipage flag in the MP data base does not match the FTU (or DSPU) NPC equipage flag in the Unit data base.

d0	NPC flag from MP data base
d1	NPC flag from UC data base
d2	Not used
d3	Not used
d4	NPC number
d5	UNIT number

012 FTU NPC insertion words are inconsistent

The FTU NPC insertion word in the MP data base does not match the FTU NPC insertion word in the UC data base.

- d0 NPC insertion word from MP data base
- d1 NPC insertion word from UC data base
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

013 FTU NPC types are inconsistent

The type of the FTU NPC in the MP data base does not match the type of the FTU NPC in the UC data base.

- d0 NPC type from MP data base
- d1 NPC type from UC data base
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

014 FTU NPC X option values are inconsistent

The X option of the FTU NPC in the MP data base does not match that in the UC data base.

- d0 Second byte of the X option of NPC from MP data base
- d1 First byte of the X option of NPC from MP data base
- d2 Second byte of the X option of NPC from UC data base
- d3 First byte of the X option of NPC from UC data base
- d4 NPC number
- d5 UNIT number

015 FTU NPC Y option values are inconsistent

The Y option of the FTU NPC in the MP data base does not match that in the UC data base.

- d0 Second byte of the Y option of NPC from MP data base
- d1 First byte of the Y option of NPC from MP data base
- d2 Second byte of the Y option of NPC from UC data base
- d3 First byte of the Y option of NPC from UC data base
- d4 NPC number
- d5 UNIT number

016 FTU NPC Z option values are inconsistent

The Z option of the FTU NPC in the MP data base does not match that in the UC data base.

- d0 Second byte of the Z option of NPC from MP data base
- d1 First byte of the Z option of NPC from MP data base
- d2 Second byte of the Z option of NPC from UC data base
- d3 First byte of the Z option of NPC from UC data base
- d4 NPC number
- d5 UNIT number

017 FTU NPC threshold values are inconsistent

The threshold value of the FTU NPC in the MP data base does not match that in the UC data base.

- d0 Second byte of the threshold value of NPC from MP data base
- d1 First byte of the threshold value of NPC from MP data base
- d2 Second byte of the threshold value of NPC from UC data base
- d3 First byte of the threshold value of NPC from UC data base
- d4 NPC number
- d5 UNIT number

018 FTU NPC Signaling field is inconsistent

The FTU NPC SIG field in the MP data base does not match the FTU NPC SIG field in the UC data base.

- d0 NPC SIG field from MP data base
- d1 NPC SIG field from UC data base
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

019 FTU NPC TS0 bit value is inconsistent

The FTU NPC TS0 bits in the MP data base do not match the FTU NPC TS0 bits in the UC data base.

- d0 NPC TS0 bits from MP data base
- d1 NPC TS0 bits from UC data base
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

01A FTU NPC loopback field is inconsistent

The FTU NPC LPBK field in the MP data base does not match the FTU NPC LPBK field in the UC data base.

- d0 NPC LPBK field from MP data base
- d1 NPC LPBK field from UC data base
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

01B FTU NPC TS0M bit value is inconsistent

The FTU NPC TS0M bits in the MP data base do not match the FTU NPC TS0M bits in the UC data base.

- d0 NPC TS0M bits from MP data base
- d1 NPC TS0M bits from UC data base
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

01C FTU syncmode value is inconsistent

The FTU syncmode in the MP data base does not match the FTU syncmode in the UC data base.

- d0 syncmode from MP data base
- d1 syncmode from UC data base
- d2 Not used
- d3 Not used
- d4 Not used
- d5 UNIT number

01D CPR channel modify activated information is inconsistent

The CPR channel modify activated information stored in UC data base does not match that stored in the MP data base.

- d0 Not used
- d1 Not used
- d2 Not used
- d3 Not used
- d4 FTU NPC number
- d5 UNIT number

01E NPC Insertion AIS values are inconsistent

The Insertion AIS of the NPC in the MP data base does not match that in the unit data base

- d0 The AIS Insertion of NPC from MP data base
- d1 The AIS Insertion of NPC from MP data base
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

01F NPC alarm disable flag values are inconsistent

The alarm disable flag of the NPC in the MP data base does not match that in the unit data base

- d0 Second byte of the alarm disable flag of NPC from MP data base
- d1 First byte of the alarm disable flag of NPC from MP data base
- d2 Second byte of the alarm disable flag of NPC from unit data base
- d3 First byte of the alarm disable flag of NPC from unit data base
- d4 NPC number
- d5 UNIT number

021 CCN side entity flags are inconsistent

The equipage flag of the CCN side entity in the MP data base does not match that in the CCN data base.

- d0 CCN side flag from MP data base
- d1 CCN side flag from CCN data base
- d2 Not used
- d3 Not used
- d4 Not used
- d5 CCN side

022 CCN CCNI entity flags are inconsistent

The equipage flag of the CCN CCNI entity in the MP data base does not match that in the CCN data base.

- d0 CCNI flag from MP data base
- d1 CCNI flag from CCN data base
- d2 Not used
- d3 Not used
- d4 Not used
- d5 CCN side

023 CCN CCB entity flags are inconsistent

The equipage flag of the CCN CCB entity in the MP data base does not match that in the CCN data base.

- d0 CCB flag from MP data base
- d1 CCB flag from CCN data base
- d2 Not used
- d3 Not used
- d4 CCB number
- d5 CCN side

024 CCN TSI entity flags are inconsistent

The equipage flag of the CCN TSI entity in the MP data base does not match that in the CCN data base.

- d0 CCN TSI flag from MP data base
- d1 CCN TSI flag from CCN data base
- d2 Not used
- d3 CCB number - TO side
- d4 CCB number - FROM side
- d5 CCN side

025 CCN active side flags are inconsistent

The CCN active side reported by the MP data base does not match the CCN active side reported by the CCN data base.

- d0 CCN active side flag MP data base
- d1 CCN active side from CCN data base
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Not used

026 ECCN side entity flags are inconsistent

The equipage flag of the ECCN side entity in the MP data base does not match that in the ECCN data base.

- d0 ECCN side flag from MP data base
- d1 ECCN side flag from ECCN data base
- d2 Not used
- d3 Not used
- d4 Not used
- d5 ECCN side

027 ECCN CCI entity flags are inconsistent

The equipage flag of the ECCN CCI entity in the MP data base does not match that in the ECCN data base.

- d0 CCI flag from MP data base
- d1 CCI flag from ECCN data base
- d2 Not used
- d3 Not used
- d4 Not used
- d5 ECCN side

028 ECCN ETSI entity flags are inconsistent

The equipage flag of the ECCN ETSI entity in the MP data base does not match that in the ECCN data base.

- d0 ECCN ETSI flag from MP data base
- d1 ECCN ETSI flag from ECCN data base
- d2 Not used
- d3 Not used
- d4 ETSI number
- d5 ECCN side

029 ECCN active side flags are inconsistent

The ECCN active side reported by the MP data base does not match the ECCN active side reported by the ECCN data base.

- d0 ECCN active side flag MP data base
- d1 ECCN active side from ECCN data base
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Not used

02A NPC Transmit Pseudo Framing Words are inconsistent

The Transmit Pseudo Framing Word of the NPC in the MP data base does not match that in the unit data base

- d0 The Transmit Pseudo Framing word of NPC from MP data base
- d1 The Transmit Pseudo Framing word of NPC from unit data base
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

02B NPC Receive Pseudo Framing Word values are inconsistent

The Receive Pseudo Framing Word of the NPC in the MP data base does not match that in the unit data base

- d0 The Receive Pseudo Framing Word of NPC from MP data base
- d1 The Receive Pseudo Framing Word of NPC from unit data base
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

02C NPC Non Frame Word Setting values are inconsistent

The Non Frame Word Setting of the NPC in the MP data base does not match that in the unit data base

- d0 Fourth byte of the Non Frame Word Setting of NPC from MP data base
- d1 Third byte of the Non Frame Word Setting of NPC from MP data base
- d2 Fourth byte of the Non Frame Word Setting of NPC from unit data base
- d3 Third byte of the Non Frame Word Setting of NPC from unit data base
- d4 NPC number
- d5 UNIT number

02D NPC Transmit and Receive Pseudo Framing word values are inconsistent

The Transmit Pseudo Framing Word of a NPC does not match the Receive Pseudo Framing Word in the MP data base when one of them is set to the Non-Framing Word

- d0 The Transmit Pseudo Framing Word of NPC from MP data base
- d1 The Receive Pseudo Framing Word of NPC from MP data base
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

02E CCN and Sync are running on opposite sides

The CCN active side reported by the MP data base does not match the Sync active side reported by the frame data base.

- d0 CCN active side from MP data base
- d1 Sync active side from frame data base
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Not used

02F ECCN and Sync are running on opposite sides

The ECCN active side reported by the MP data base does not match the Sync active side reported by the frame data base.

- d0 ECCN active side from MP data base
- d1 Sync active side from frame data base
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Not used

032 DSPI entity flags are inconsistent

The equipage flag of the DSPI entity in the MP data base does not match that in the DSPU data base.

- d0 DSPI flag from MP data base
- d1 DSPI flag from UD data base
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Unit number

033 HUB-ID value in data bases is inconsistent

The HUB-ID is inconsistent between the MP data base and the UD data base.

- d0 HUB-ID value from MP data base
- d1 HUB-ID value from UD data base
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Unit number

034 NPC connected to a time slot is inconsistent

The NPC connected to a time slot in the MP data base does not match with the UD data base.

- d0 The connected NPC number from MP data base
- d1 The connected NPC number from UD data base
- d2 Not used
- d3 The time slot number
- d4 The NPC number
- d5 Unit number

035 Function block for a time slot is inconsistent

The function block connected to a time slot in the MP data base does not match with the UD data base.

- d0 The connected function block number from MP data base
- d1 The connected function block number from UD data base
- d2 Not used
- d3 The time slot number
- d4 The NPC number
- d5 Unit number

036 SRM customer number or MJU branch number is inconsistent

The SRM customer number or MJU branch number in the MP data base does not match with the UD data base.

- d0 The SRM customer number or MJU branch number from MP data base
- d1 The SRM customer number or MJU branch number from UD data base
- d2 Not used
- d3 The SRM number or the MJU number
- d4 The NPC number
- d5 Unit number

037 Time slot rate is inconsistent

The time slot rate in the MP data base does not match with that of the UD data base.

- d0 The time slot rate from MP data base
- d1 The time slot rate from UD data base
- d2 Not used
- d3 The time slot number
- d4 The NPC number
- d5 Unit number

038 Time slot functional usage is inconsistent

The functional usage in the MP data base does not match with that of the UD data base.

- d0 the functional usage from MP data base
- d1 the functional usage from UD data base
- d2 Not used
- d3 The time slot number
- d4 The NPC number
- d5 Unit number

039 SRDC unexpected errors

An unexpected error was encountered during Subrate Circuit audits.

- d0 The Unit where the error is found
- d1 Not used
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Not used

03B DS3 FLI LBO data base inconsistent

FLI/Line Build Out in the MP data base is not consistent with that of the Unit data base

- d0 MP lbo
- d1 UA lbo
- d2 Not used
- d3 Not used
- d4 MXR/HMXR Number
- d5 Unit Number

03C DS3 MXR/HMXR data base flag inconsistent

MXR/HMXR data base flag in the MP data base is not consistent with that of the Unit data base

- d0 MP data base flag
- d1 UA data base flag
- d2 Not used
- d3 Not used
- d4 MXR/HMXR Number
- d5 Unit Number

03D DS3 MXR/HMXR data base type inconsistent

MXR/HMXR type in the MP data base is not consistent with that of the Unit data base

- d0 MP data base type
- d1 UA data base type
- d2 Not used
- d3 Not used
- d4 MXR/HMXR Number
- d5 Unit Number

03E DS3 MXR/HMXR data base xoption inconsistent

MXR/HMXR 'x' option in the MP data base is not consistent with that of the Unit data base

d0 MP data base xoption
d1 UA data base xoption
d2 Not used
d3 Not used
d4 MXR/HMXR Number
d5 Unit Number

03F DS3 MXR/HMXR data base yoption inconsistent

MXR/HMXR 'y' option in the MP data base is not consistent with that of the Unit data base

d0 MP data base yoption
d1 UA data base yoption
d2 Not used
d3 Not used
d4 MXR/HMXR Number
d5 Unit Number

040 DS3 MXR/HMXR data base zoption inconsistent

MXR/HMXR 'z' option in the MP data base is not consistent with that of the Unit data base

d0 MP data base zoption
d1 UA data base zoption
d2 Not used
d3 Not used
d4 MXR/HMXR Number
d5 Unit Number

041 DS3 MXR/HMXR data base BER threshold inconsistent

MXR/HMXR 'BER' threshold in the MP data base is not consistent with that of the Unit data base

d0 MP data base ber threshold
d1 UA data base ber threshold
d2 Not used
d3 Not used
d4 Unit Number
d5 MXR/HMXR Number

042 DS3 MXR/HMXR data base BER type inconsistent

MXR/HMXR 'BER' type in the MP data base is not consistent with that of the Unit data base

- d0 MP data base ber type
- d1 UA data base ber type
- d2 Not used
- d3 Not used
- d4 Unit Number
- d5 MXR/HMXR Number

043 DS3 MIU data base flag inconsistent

MIU data base flag in the MP data base is not consistent with that of the Unit data base

- d0 MP data base flag
- d1 UA data base flag
- d2 Not used
- d3 Not used
- d4 MIU Number
- d5 Unit Number

044 DS3 MIU data base type inconsistent

MIU data base type in the MP data base is not consistent with that of the Unit data base

- d0 MP data base type
- d1 UA data base type
- d2 Not used
- d3 Not used
- d4 MIU Number
- d5 Unit Number

045 DS3 MIU data base xoption inconsistent

MIU 'x' option in the MP data base is not consistent with that of the Unit data base

- d0 MP data base xoption
- d1 UA data base xoption
- d2 Not used
- d3 Not used
- d4 MIU Number
- d5 Unit Number

046 DS3 MIU data base yoption inconsistent

MIU 'y' option in the MP data base is not consistent with that of the Unit data base

- d0 MP data base yoption
- d1 UA data base yoption
- d2 Not used
- d3 Not used
- d4 MIU Number
- d5 Unit Number

047 DS3 MIU data base zoption inconsistent

MIU 'z' option in the MP data base is not consistent with that of the Unit data base

- d0 MP data base zoption
- d1 UA data base zoption
- d2 Not used
- d3 Not used
- d4 MIU Number
- d5 Unit Number

048 MMFG data base inhibit flag inconsistent

MMFG inhibit status in the MP data base is not consistent with that of the Unit data base

- d0 Protection switch data base flag
- d1 UA data base flag
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Unit Number

049 MMFG data base protection status inconsistent

MMFG protected status in the MP data base is not consistent with that of the Unit data base

- d0 Protection switch data base status
- d1 UA data base status
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Unit Number

04A MMFG data base protection index inconsistent

MMFG protected index in the MP data base is not consistent with that of the Unit data base

- d0 Protection switch data base index
- d1 UA data base index
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Unit Number

04B MMFG data base protection mode inconsistent

MMFG protected mode in the MP data base is not consistent with that of the Unit data base

- d0 Protection switch data base mode
- d1 UA data base mode
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Unit Number

04C MMFG data base service status of MXR P/HMXR P inconsistent

MXR-P/HMXR-P service status in the MP data base is not consistent with that of the Unit data base

- d0 Protection switch data base status
- d1 UA data base status
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Unit Number

04D MMFG data base service status of MIU P inconsistent

MIU-P service status in the MP data base is not consistent with that of the Unit data base

- d0 Protection switch data base status
- d1 UA data base status
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Unit Number

050 Time slot partner is inconsistent

The time slot's partner time slot in the MP data base does not match with that of the UC data base.

- d0 The partner time slot from MP data base
- d1 The partner time slot from UC data base
- d2 Not used
- d3 The time slot number
- d4 The NPC number
- d5 Unit number

052 Time slot TLA state is inconsistent

The time slot's TLA state in the MP data base does not match with that of the UC data base.

- d0 The TLA state from MP data base
- d1 The TLA state from UC data base
- d2 Not used
- d3 The time slot number
- d4 The NPC number
- d5 Unit number

055 RTs external number is inconsistent

An RTs external number in the MP data base does not match with that of the UC data base.

- d0 Left byte of the RT external number in MP data base
- d1 Right byte of the RT external number in MP data base
- d2 Left byte of the RT external number in UC data base
- d3 Right byte of the RT external number in UC data base
- d4 Not used
- d5 The Unit of the RT

056 RTs digroup NPC number is inconsistent

An RTs digroup NPC number in the MP data base does not match with that of the UC data base (d3=2); An RTs digroup NPC number does not match with the associated DCLUs both in the MP data base (d3=1)

- d0 The RT digroup NPC number in MP data base
- d1 The RT digroup NPC number in UC data base
- d2 Index of the digroup (1,2,3,4,5 for DGA,DGB,DGC,DGD,DGP respectively)
- d3 Not used
- d4 The RT internal number
- d5 The Unit of the RT

057 RTs index of protected digroup is inconsistent

An RTs index of protected digroup in the MP data base does not match with that of the UC data base

- d0 The RT index of protected digroup in MP data base
- d1 The RT index of protected digroup in UC data base
- d2 Not used
- d3 Not used
- d4 The RT internal number
- d5 The Unit of the RT

058 RTs Zoption is inconsistent

An RTs Zoption in the MP data base does not match with that of the UC data base

- d0 The RT Zoption in MP data base
- d1 The RT Zoption in UC data base
- d2 Not used
- d3 Not used
- d4 The RT internal number
- d5 The Unit of the RT

059 RTs inhibit state is inconsistent

An RTs inhibit state in the MP data base does not match with that of the UC data base

- d0 The RT inhibit state in MP data base
- d1 The RT inhibit state in UC data base
- d2 Index of the digroup
- d3 Not used
- d4 The RT internal number
- d5 The Unit of the RT

05A SLC[®] carrier unexpected errors

An unexpected error is encountered during SLC carrier RT audits.

- d0 The Unit where the error is found
- d1 Not used
- d2 Not used
- d3 Not used
- d4 Not used
- d5 Not used

05B This entity is expected to be inservice and equipped

This entity (indicated in d0) is expected to be inservice and equipped.

d0 1-frame; 2-Unit; 3-channel; 4-time slot;
d1 The time slot number if applicable
d2 the channel number if applicable
d3 The NPC number if applicable
d4 Unit number if applicable
d5 Not used

05C Data base is inconsistent with the configuration file

Data in the MP data base do not agree with those in the configuration file.

d0 Not used
d1 Not used
d2 Not used
d3 Not used
d4 Not used
d5 Not used

060 RTs loopback state is inconsistent

An RTs loopback state in the MP data base does not match with that of the UC data base

d0 The RT loopback state in MP data base
d1 The RT loopback state in UC data base
d2 Index of the digroup
d3 Not used
d4 The RT internal number
d5 The Unit of the RT

061 RTs protection status is inconsistent

An RTs protection status in the MP data base does not match with that of the UC data base

d0 The RT protection status in MP data base
d1 The RT protection status in UC data base
d2 Not used
d3 Not used
d4 The RT internal number
d5 The Unit of the RT

062 RTs data link status is inconsistent

An RTs data link status in the MP data base does not match with that of the UC data base

- d0 The RT data link in MP data base
- d1 The RT data link in UC data base
- d2 Not used
- d3 Not used
- d4 The RT internal number
- d5 The Unit of the RT

063 RTs alarm class is inconsistent

An RTs alarm class in the MP data base does not match with that of the UC data base

- d0 The RT alarm class in MP data base
- d1 The RT alarm class in UC data base
- d2 Not used
- d3 Not used
- d4 The RT internal number
- d5 The Unit of the RT

064 RTs SLC carrier mode is inconsistent

An RTs SLC carrier mode in the MP data base does not match with that of the UC data base

- d0 The RT SLC carrier mode in MP data base
- d1 The RT SLC carrier mode in UC data base
- d2 Not used
- d3 Not used
- d4 The RT internal number
- d5 The Unit of the RT

065 Can not find an RT internal number for the associate DCLU of an RT.

Given an RT with SLC 96 carrier mode I or SLC series 5 carrier feature package B, it may have a DCLU with the external number being 10000 greater. But that external number cannot be retrieved from the MP data base.

- d0 Right byte of the DCLUs external number in MP data base
- d1 Left byte of the DCLUs external number in MP data base
- d2 Right byte of the RTs external number in MP data base
- d3 Left byte of the RTs external number in MP data base
- d4 The RT internal number
- d5 The Unit of the RT

066 Cannot find the associate DCLU of an RT.

Given an RT with SLC 96 carrier mode I or SLC series 5 carrier feature package B, it may have a DCLU with the external number being 10000 greater. But such DCLU is not found from the RT list in the MP data base.

d0	Right byte of the DCLUs external number
d1	Left byte of the DCLUs external number
d2	Not used
d3	Not used
d4	The DCLU internal number
d5	The Unit of the RT

069 Invalid internal MJU number or internal NPC number

An NPC indicates there is an MJU allocated to it, after the MJU query returns a different internal MJU number or that MJU is marked to allocate to another NPC.

d0	the MJU number
d1	The NPC number
d2	the UNIT number
d3	the MJU internal number from the query
d4	the internal NPC number from the query
d5	Not used

070 Inconsistent mapping between a facility channel and a time slot.

A channel is connected to a time slot but the time slot does not connect the channel in the MP data base.

d0	the channel number
d1	The NPC number
d2	the UNIT number
d3	The time slot
d4	The time slot NPC
d5	The time slot Unit

071 Inconsistent time slot mapping between a facility channel and a MVEC.

An MVEC is expected to connect to a facility channel but the MP data base shows the channel does not connect to the MVEC.

d0	the channel number
d1	The NPC number
d2	the UNIT number
d3	the MVEC time slot
d4	the MVEC NPC
d5	MVEC Unit

072 Inconsistent time slot mapping a channel to a PCHEC.

A PCHEC is expected to connect to a facility channel but the MP data base shows the channel does not connect to the PCHEC.

d0 the channel number
d1 The NPC number
d2 the UNIT number
d3 the PCHEC time slot
d4 the PCHEC NPC
d5 the PCHEC Unit

073 Inconsistent time slot mapping a channel to a PCHECs parity leg.

A PCHEC parity leg is expected to connect to a facility channel but the MP data base shows the channel does not connect to the leg.

d0 the channel number
d1 The NPC number
d2 the UNIT number
d3 the PCHEC time slot
d4 the PCHEC NPC
d5 the PCHEC Unit

074 Inconsistent time slot mapping a channel to a PCHECs data leg

A PCHEC data leg is expected to connect to a facility channel but the MP data base shows the channel does not connect to the leg.

d0 the channel number
d1 The NPC number
d2 the UNIT number
d3 the PCHEC time slot
d4 the PCHEC NPC
d5 the PCHEC Unit

076 Invalid time slot assignment to an MJU's master leg.

An MJU's master leg is expected to connect a time slot but the MP data base shows that the time slot does not connect to the master leg.

d0 the MJU number
d1 The NPC number
d2 the UNIT number
d3 the MJU master leg index
d4 Not used
d5 Not used

077 Invalid time slot assignment to an MJU's branch leg.

An MJU's branch leg is expected to connect a time slot but the MP data base shows that the time slot does not connect to the branch leg.

d0 the MJU number
d1 The NPC number
d2 the UNIT number
d3 the MJU branch leg
d4 Not used
d5 Not used

078 Inconsistent time slot mapping a channel to a PCHECs customer leg.

A PCHEC customer leg is expected to connect to a facility channel but the MP data base shows the channel does not connect to the leg.

d0 the channel number
d1 The NPC number
d2 the UNIT number
d3 the PCHEC time slot
d4 the PCHEC NPC
d5 the PCHEC Unit

079 Cascaded MJUs do not have same rate.

An MJU is cascaded with MJU b, their rate must be the same.

d0 the MJU b number
d1 The NPC number of MJU b
d2 the UNIT number of MJU b
d3 the MJU a number
d4 The NPC number of MJU a
d5 the UNIT number of MJU a

080 SRM rate is invalid

An SRM rate is invalid.

d0 The SRM number
d1 The NPC number of SRM
d2 the UNIT number of SRM
d3 Not used
d4 Not used
d5 Not used

081 Invalid time slot assignment to an SRMs leg.

An SRMs branch leg is expected to connect a time slot but the MP data base shows that the time slot does not connect to the branch leg.

d0 The SRM number
d1 The NPC number
d2 the UNIT number
d3 Index of SRM leg
d4 Not used
d5 Not used

084 A DS0A channel does not connect to an EC.

A DS0A channel is expected to connect to an error corrector through a time slot but the MP data base shows that the time slot does not connect to an error corrector.

d0 the DS0A channel number
d1 The NPC number of the channel
d2 the UNIT number of the channel
d3 The ECs time slot
d4 The ECs NPC number
d5 The ECs Unit number

086 RTs external number is inconsistent with DCLU

An RTs external number in the MP data base does not match with that of the DCLU in the MP data base.

d0 Left byte of the RT external number in MP data base
d1 Right byte of the RT external number in MP data base
d2 Left byte of the DCLU external number in MP data base
d3 Right byte of the DCLU external number in MP data base
d4 Not used
d5 The Unit of the RT

089 RTs Zoption is inconsistent with DCLU Zoption

An RTs Zoption in the MP data base does not match with that of the DCLU in the MP data base

d0 The RT Zoption in MP data base
d1 The DCLU Zoption in MP data base
d2 Not used
d3 Not used
d4 The RT internal number
d5 The Unit of the RT

090 RTs inhibit state is inconsistent with DCLU

An RTs inhibit state in the MP data base does not match with that of the DCLU in the MP data base

- d0 The RT inhibit state in MP data base
- d1 The DCLU inhibit state in MP data base
- d2 Index of the digroup
- d3 Not used
- d4 The RT internal number
- d5 The Unit of the RT

091 RTs loopback state is inconsistent with DCLU

An RTs loopback state in the MP data base does not match with that of the DCLU in the MP data base

- d0 The RT loopback state in MP data base
- d1 The DCLU loopback state in MP data base
- d2 Index of the digroup
- d3 Not used
- d4 The RT internal number
- d5 The Unit of the RT

093 RTs data link status is inconsistent with DCLU

An RTs data link status in the MP data base does not match with that of the DCLU in the MP data base

- d0 The RT data link in MP data base
- d1 The DCLU data link in MP data base
- d2 Not used
- d3 Not used
- d4 The RT internal number
- d5 The Unit of the RT

095 RTs SLC carrier mode is inconsistent with DCLU

An RTs SLC carrier mode in the MP data base does not match with that of the DCLU in the MP data base

- d0 The RT SLC carrier mode in MP data base
- d1 The DCLU SLC carrier mode in MP data base
- d2 Not used
- d3 Not used
- d4 The RT internal number
- d5 The Unit of the RT

102 MP two-way two-point connection types are inconsistent

The two-way two-point connection types in the MP data base do not match between two sides.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 UNIT number of the TO side
- d3 Channel number of the FROM side
- d4 NPC number of the FROM side
- d5 UNIT number of the FROM side

103 MP two-way two-point connection data are inconsistent

The two-way two-point connection data in the MP data base do not match between two sides.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 UNIT number of the TO side
- d3 Channel number of the FROM side
- d4 NPC number of the FROM side
- d5 UNIT number of the FROM side

104 UC two-way two-point connection data are inconsistent

The two-way two-point connection channel data in the UC data base do not match that from MP data base.

- d0 TCC audit result - equal 1 if inconsistency detected
- d1 Flag audit result - equal 1 if inconsistency detected
- d2 Connected NPC audit result - equal 1 if inconsistency detected
- d3 Channel number
- d4 NPC number
- d5 UNIT number

105 CCN two-way two-point connection map error detected

The two-way two-point connection TSI map in the CCN does not match between two sides.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 UNIT number of the TO side
- d3 Channel number of the FROM side
- d4 NPC number of the FROM side
- d5 UNIT number of the FROM side

106 ECCN two-way two-point connection map error detected

The two-way two-point connection ETSI map in the ECCN does not match between two sides.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 UNIT number of the TO side
- d3 Channel number of the FROM side
- d4 NPC number of the FROM side
- d5 UNIT number of the FROM side

112 MP one-way two-point connection types are inconsistent

The one-way two-point connection types in the MP data base do not match between two sides.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 UNIT number of the TO side
- d3 Channel number of the FROM side
- d4 NPC number of the FROM side
- d5 UNIT number of the FROM side

113 MP one-way two-point connection data are inconsistent

The one-way two-point connection data in the MP data base does not match between two sides.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 UNIT number of the TO side
- d3 Channel number of the FROM side
- d4 NPC number of the FROM side
- d5 UNIT number of the FROM side

114 UC one-way two-point connection data are inconsistent

The one-way two-point connection channel data in the UC data base do not match that MP data base.

- d0 TCC audit result - equal 1 if inconsistency detected
- d1 Flag audit result - equal 1 if inconsistency detected
- d2 Connected NPC audit result - equal 1 if inconsistency detected
- d3 Channel number
- d4 NPC number
- d5 UNIT number

115 CCN one-way two-point connection map error detected

The one-way two-point connection TSI map in the CCN does not match between two sides.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 UNIT number of the TO side
- d3 Channel number of the FROM side
- d4 NPC number of the FROM side
- d5 UNIT number of the FROM side

116 CCN unmapped connection error detected

The TSI map shows that there is a connection map to an NPC and channel in CCN data base while the NPC and channel are marked as unmapped in MP data base.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 Unit number of the TO side
- d3 Not used
- d4 Not used
- d5 Not used

121 UC virtual conference leg channel alternate message store (AMS) value is inconsistent

The virtual conference leg channel AMS data in the UC data base does not match the TCC value in the MP data base.

- d0 Not used
- d1 Not used
- d2 Not used
- d3 Channel number
- d4 NPC number
- d5 UNIT number

122 UC virtual conference leg channel connected NPC is inconsistent

The connected NPC of the virtual conference leg channel in the UC data base does not match the BBL NPC number from the MP data base.

- d0 Not used
- d1 Not used
- d2 Not used
- d3 Channel number
- d4 NPC number
- d5 UNIT number

123 UC virtual conference leg channel flag is inconsistent

The virtual conference leg channel flag in the UC data base does not match the flag from the MP data base.

- d0 Not used
- d1 Not used
- d2 Not used
- d3 Channel number
- d4 NPC number
- d5 UNIT number

125 CCN virtual conference leg channel connection map error detected

The two-point connection TSI map in the CCN does not match between the BBL channel and the leg channel.

- d0 Channel number of the BRD leg
- d1 NPC number of the BRD leg
- d2 UNIT number of the BRD leg
- d3 Channel number of the BBL leg
- d4 NPC number of the BBL leg
- d5 UNIT number of the BBL leg

126 ECCN virtual conference leg channel connection map error detected

The two-point connection ETSI map in the ECCN does not match between the BBL channel and the leg channel.

- d0 Channel number of the BRD leg
- d1 NPC number of the BRD leg
- d2 UNIT number of the BRD leg
- d3 Channel number of the BBL leg
- d4 NPC number of the BBL leg
- d5 UNIT number of the BBL leg

127 ECCN one-way two-point connection map error detected

The one-way two-point connection ETSI map in the ECCN does not match between two sides.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 UNIT number of the TO side
- d3 Channel number of the FROM side
- d4 NPC number of the FROM side
- d5 UNIT number of the FROM side

128 ECCN unmapped connection error detected

The ETSI map shows that there is a connection map to an NPC and channel in ECCN data base while they are marked as unmapped in MP data base.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 Unit number of the TO side
- d3 Not used
- d4 Not used
- d5 Not used

131 UC BCON leg channel alternate message store (AMS) value is inconsistent

The BCON leg channel AMS data in the UC data base does not match the TCC value from the MP data base.

- d0 Not used
- d1 Not used
- d2 Not used
- d3 Channel number
- d4 NPC number
- d5 UNIT number

132 UC BCON leg channel connected NPC is inconsistent

The connected NPC of the BCON leg channel in the UC data base does not match the BBL NPC number from the MP data base.

- d0 Not used
- d1 Not used
- d2 Not used
- d3 Channel number
- d4 NPC number
- d5 UNIT number

133 UC BCON leg channel flag is inconsistent

The BCON leg channel flag in the UC data base does not match the flag from the MP data base.

- d0 Not used
- d1 Not used
- d2 Not used
- d3 Channel number
- d4 NPC number
- d5 UNIT number

135 CCN BCON leg channel connection map error detected

The two-point connection TSI map in the CCN does not match between the BBL channel and the leg channel.

- d0 Channel number of the BRD leg
- d1 NPC number of the BRD leg
- d2 UNIT number of the BRD leg
- d3 Channel number of the BBL leg
- d4 NPC number of the BBL leg
- d5 UNIT number of the BBL leg

136 ECCN BCON leg channel connection map error detected

The two-point connection ETSI map in the ECCN does not match between the BBL channel and the leg channel.

- d0 Channel number of the BRD leg
- d1 NPC number of the BRD leg
- d2 UNIT number of the BRD leg
- d3 Channel number of the BBL leg
- d4 NPC number of the BBL leg
- d5 UNIT number of the BBL leg

150 UC DMB conference leg channel connected NPC is inconsistent

The connected NPC of the DMB conference leg channel in the UC data base does not match that from MP data base.

- d0 Channel flag in the UC data base
- d1 Connected NPC number
- d2 Connected Unit number
- d3 Channel number
- d4 NPC number
- d5 UNIT number

151 UC DMB conference leg channel alternate message store (AMS) value is inconsistent

The DMB conference leg channel AMS data in the UC data base does not match the TCC value from the MP data base.

- d0 Channel flag in the UC data base
- d1 Connected NPC number
- d2 Connected Unit number
- d3 Channel number
- d4 NPC number
- d5 UNIT number

152 UC DMB conference leg channel flag is inconsistent

The DMB conference leg channel flag in the UC data base does not match the flag from the MP data base.

- d0 Channel flag in the UC data base
- d1 Connected NPC number
- d2 Connected Unit number
- d3 Channel number
- d4 NPC number
- d5 UNIT number

154 CCN one-way DMB conference connection map error detected

The one-way DMB conference connection TSI map in the CCN does not match between two legs.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 UNIT number of the TO side
- d3 Channel number of the FROM side
- d4 NPC number of the FROM side
- d5 UNIT number of the FROM side

155 CCN two-way DMB conference connection map error detected

The two-way DMB conference connection TSI map in the CCN does not match between two legs.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 UNIT number of the TO side
- d3 Channel number of the FROM side
- d4 NPC number of the FROM side
- d5 UNIT number of the FROM side

156 ECCN one-way DMB conference connection map error detected

The one-way DMB conference connection ETSI map in the ECCN does not match between two legs.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 UNIT number of the TO side
- d3 Channel number of the FROM side
- d4 NPC number of the FROM side
- d5 UNIT number of the FROM side

157 ECCN two-way DMB conference connection map error detected

The two-way DMB conference connection ETSI map in the ECCN does not match between two legs.

- d0 Channel number of the TO side
- d1 NPC number of the TO side
- d2 UNIT number of the TO side
- d3 Channel number of the FROM side
- d4 NPC number of the FROM side
- d5 UNIT number of the FROM side

160 UD DMB conference leg is inconsistent

The DMB conference number of the leg channel in the UD data base does not match the number from the MP data base.

- d0 Connected NPC number of the leg
- d1 Connected UC Unit number of the leg
- d2 Conference number of the leg stored in the UD data base
- d3 Channel number of the leg
- d4 DMB NPC number of the leg
- d5 UNIT number

161 UD DMB conference leg channel connected NPC is inconsistent

The connected NPC of the DMB conference leg channel in the UD data base does not match the NPC number from the MP data base.

- d0 Connected NPC number of the leg
- d1 Connected UC Unit number of the leg
- d2 Conference number of the leg
- d3 Channel number of the leg
- d4 DMB NPC number of the leg
- d5 UNIT number

162 UD DMB conference leg connected conference is inconsistent

The connected conference number of the DMB conference leg channel in the UD data base does not match the number from the MP data base.

- d0 Connected NPC number of the leg from UD data base
- d1 Connected UC Unit number of the leg
- d2 Conference number of the leg
- d3 Channel number of the leg
- d4 DMB NPC number of the leg
- d5 UNIT number

163 UD DMB conference leg type is inconsistent

The type of the DMB conference leg channel in the UD data base does not match the type from the MP data base.

- d0 Connected NPC number of the leg
- d1 Connected UC Unit number of the leg
- d2 Conference number of the leg
- d3 Channel number of the leg
- d4 DMB NPC number of the leg
- d5 UNIT number

164 UD DMB channel tlpin value is inconsistent

The value of transmit level into bridge of the DMB conference leg channel from UD data base does not match that from the MP data base.

- d0 Connected NPC number of the leg
- d1 Connected UC Unit number of the leg
- d2 Conference number of the leg
- d3 Channel number of the leg
- d4 DMB NPC number of the leg
- d5 UNIT number

165 UD DMB channel tlpout value is inconsistent

The value of transmit level out of bridge of the DMB conference leg channel from UD data base does not match that from the MP data base.

- d0 Connected NPC number of the leg
- d1 Connected UC Unit number of the leg
- d2 Conference number of the leg
- d3 Channel number of the leg
- d4 DMB NPC number of the leg
- d5 UNIT number

166 UD DMB channel noise guard value is inconsistent

The value of noise guard of the DMB conference leg channel from UD data base does not match that from the MP data base.

- d0 Connected NPC number of the leg
- d1 Connected UC Unit number of the leg
- d2 Conference number of the leg
- d3 Channel number of the leg
- d4 DMB NPC number of the leg
- d5 UNIT number

167 UD DMB channel echo suppression value is inconsistent

The value of echo suppression of the DMB conference leg channel from UD data base does not match that from the MP data base.

- d0 Connected NPC number of the leg
- d1 Connected UC Unit number of the leg
- d2 Conference number of the leg
- d3 Channel number of the leg
- d4 DMB NPC number of the leg
- d5 UNIT number

168 UD DMB channel NTR state is inconsistent

The current NTR state of the DMB conference leg from UD data base does not match that from the MP data base.

- d0 Connected NPC number of the leg
- d1 Connected UC Unit number of the leg
- d2 Conference number of the leg
- d3 Channel number of the leg
- d4 DMB NPC number of the leg
- d5 UNIT number

171 DSPU CPR channel modify activated/monitor enabled information is inconsistent

The CPR channel modify activated/monitor enabled information stored in UD data base does not match that stored in the MP data base.

- d0 Not used
- d1 Not used
- d2 Not used
- d3 Channel number
- d4 CPR NPC number
- d5 UNIT number

172 DSPU CPR channel modify activated/monitor enabled information is inconsistent

The CPR channel modify activated/monitor enabled information stored in UD data base does not match that stored in the CPR hardware.

- d0 Not used
- d1 Not used
- d2 Not used
- d3 Channel number
- d4 CPR NPC number
- d5 UNIT number

173 DSPU CPR liaison C-Bit modify pattern information is inconsistent

The CPR liaison C-Bit modify pattern information stored in UD data base does not match that stored in the CPR hardware.

d0	Not used
d1	Not used
d2	Not used
d3	Channel number
d4	CPR NPC number
d5	UNIT number

174 DSPU CPR pack type is inconsistent

The CPR pack type stored in UD data base does not match with the CPR pack.

d0	Type on Uddb
d1	CPR pack type
d2	Not used
d3	Channel number
d4	CPR NPC number
d5	UNIT number

205 FTU FTMI hardware not in service

The FTU FTMI hardware status is not in service but the equipage flag in the UC data base is in service.

d0	Not used
d1	Not used
d2	Not used
d3	Not used
d4	FTMI number
d5	UNIT number

207 FTU FC hardware not in service

The FTU FC hardware status is not in service but the equipage flag in the UC data base is in service.

d0	Not used
d1	Not used
d2	Not used
d3	FC side
d4	FTMI number
d5	UNIT number

208 NPC hardware not in service

The Unit NPC hardware status is not in service but the equipage flag in the UC data base is in service.

- d0 Not used
- d1 Not used
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

209 UC NPC type not match with hardware

The Unit NPC type in the UC data base does not match with that indicated in the hardware.

- d0 NPC type in hardware
- d1 NPC type in data base
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

210 FTU FC hardware mode is inconsistent

The FTU FC hardware mode status does not match the FC mode stored in the UC data base.

- d0 Not used
- d1 FC hardware mode
- d2 FC mode in the UC data base
- d3 FC side
- d4 FTMI number
- d5 UNIT number

211 FTU or DS3U/HDS3U NPC channel alternate message store (AMS) value is inconsistent

The FTU or DS3U/HDS3U NPC channel AMS value stored in the unit data base does not match the AMS value from the DDC hardware.

- d0 Not used
- d1 Not used
- d2 Side
- d3 Channel number
- d4 NPC number
- d5 UNIT number

215 DPC NPC TS0M value is inconsistent

The TS0M value stored in UC data base does not match that stored in the DPC hardware.

- d0 NPC TS0M bits from DPC hardware
- d1 NPC TS0M bits from UC data base
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

216 DPC NPC loopback value is inconsistent

The LPBK value stored in UC data base does not match that stored in the DPC hardware.

- d0 NPC LPBK bits from DPC hardware
- d1 NPC LPBK bits from UC data base
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 UNIT number

217 FTU and DS3U/HDS3U NPC pgfbits in the channel are inconsistent

The pgfbits in the data base do not match the pgfbits stored in the transceiver loopback parity channel hardware. The F and G bits determine the signaling type (16-state, 4-state or transparent). This comparison is only done on domestic NPCs on the RECEIVE side.

- d0 Data base F and G bits
- d1 Transceiver Hardware F and G bits
- d2 CHANNEL side : (Receive side)
- d3 CHANNEL number
- d4 NPC number
- d5 UNIT number

218 FTU NPC Channel AIS flag is inconsistent.

The AIS flag set in the DDC Digital Signal Interface (DSI) hardware register does not match with the associated flag saved in the UC data base.

- d0 AIS flag in the DSI register
- d1 AIS flag in the UC data base
- d2 Not used
- d3 Channel side
- d4 NPC number
- d5 Unit number

220 FTU and DS3U/HDS3U NPC COFAMAJ threshold value is inconsistent

The Change Of Frame Alignment Major value of the FTU NPC threshold value stored in the FTU Unit data base does not match that stored in the DDC hardware.

- d0 Second byte of the cofamaj value from DDC hardware
- d1 First byte of the cofamaj value from DDC hardware
- d2 Second byte of the cofamaj value from UC data base
- d3 First byte of the cofamaj value from UC data base
- d4 NPC number
- d5 UNIT number

221 FTU and DS3U/HDS3U NPC COFAMIN threshold value is inconsistent

The Change Of Frame Alignment Minor value of the FTU NPC NPC threshold value stored in the FTU data base does not match that stored in the DDC hardware.

- d0 Second byte of the cofamin value from DDC hardware
- d1 First byte of the cofamin value from DDC hardware
- d2 Second byte of the cofamin value from UC data base
- d3 First byte of the cofamin value from UC data base
- d4 NPC number
- d5 UNIT number

222 FTU NPC SLIPMAJ threshold value is inconsistent

The Slip Major value stored in the UC data base does not match that stored in the DDC hardware

- d0 Second byte of the slipmaj value from DDC hardware
- d1 First byte of the slipmaj value from DDC hardware
- d2 Second byte of the slipmaj value from UC data base
- d3 First byte of the slipmaj value from UC data base
- d4 NPC number
- d5 UNIT number

223 FTU and DS3U/HDS3U NPC SLIPMIN threshold value is inconsistent

The Slip Minor threshold value stored in the UC data base does not match that stored in the DDC hardware

- d0 Second byte of the slipmin value from DDC hardware
- d1 First byte of the slipmin value from DDC hardware
- d2 Second byte of the slipmin value from UC data base
- d3 First byte of the slipmin value from UC data base
- d4 NPC number
- d5 UNIT number

224 FTU and DS3U/HDS3U NPC SES threshold value is inconsistent

The Severe Errored Seconds value stored in the UC data base does not match that stored in the DDC hardware.

- d0 Second byte of the ses value from DDC hardware
- d1 First byte of the ses value from DDC hardware
- d2 Second byte of the ses value from UC data base
- d3 First byte of the ses value from UC data base
- d4 NPC number
- d5 UNIT number

225 FTU and DS3U/HDS3U NPC ES threshold value is inconsistent

The Errored Seconds value stored in the UC data base does not match that stored in the DDC hardware.

- d0 Second byte of the es value from DDC hardware
- d1 First byte of the es value from DDC hardware
- d2 Second byte of the es value from UC data base
- d3 First byte of the es value from UC data base
- d4 NPC number
- d5 UNIT number

226 FTU and DS3U/HDS3U NPC BERMAJ threshold value is inconsistent

The Bit Error Rate Major value stored in the UC data base does not match that stored in the DDC hardware.

- d0 Second byte of the bermaj value from DDC hardware
- d1 First byte of the bermaj value from DDC hardware
- d2 Second byte of the bermaj value from UC data base
- d3 First byte of the bermaj value from UC data base
- d4 NPC number
- d5 UNIT number

227 FTU and DS3U/HDS3U NPC BERMIN threshold value is inconsistent

The Bit Error Rate Minor value stored in the UC data base does not match that stored in the DDC hardware.

- d0 Second byte of the bermin value from DDC hardware
- d1 First byte of the bermin value from DDC hardware
- d2 Second byte of the bermin value from UC data base
- d3 First byte of the bermin value from UC data base
- d4 NPC number
- d5 UNIT number

228 NPC (DIU/DPC) Error Seconds 15 min. threshold value is inconsistent

The Error Seconds 15 min. (ERS15) threshold value stored in UC data base does not match that stored in the NPC hardware.

- d0 Second byte of the ERS15 value of the NPC from hardware
- d1 First byte of the ERS15 value of the NPC from hardware
- d2 Second byte of the ERS15 value of the NPC from UC data base
- d3 First byte of the ERS15 value of the NPC from UC data base
- d4 NPC number
- d5 Unit number

229 DIU NPC Bursty Error Seconds 15 Min threshold value is inconsistent

The Bursty Error Seconds 15 min. threshold value of a DIU NPC stored in the UC data base does not match with that in the hardware.

- d0 Second byte of the BERS15 value of the NPC from hardware
- d1 First byte of the BERS15 value of the NPC from hardware
- d2 Second byte of the BERS15 value of the NPC from UC data base
- d3 First byte of the BERS15 value of the NPC from UC data base
- d4 DIU NPC number
- d5 Unit number

230 NPC (DIU/DPC) Severely Error Seconds 15 min. threshold value is inconsistent

The Severely Error Seconds 15 min. (SERS15) threshold value stored in the UC data base does not match with that in the hardware.

- d0 Second byte of the SERS15 value of the NPC from hardware
- d1 First byte of the SERS15 value of the NPC from hardware
- d2 Second byte of the SERS15 value of the NPC from UC data base
- d3 First byte of the SERS15 value of the NPC from UC data base
- d4 NPC number
- d5 Unit number

231 NPC (DIU/DPC) Unavailable Seconds 15 min. threshold value is inconsistent

The Unavailable Seconds 15 min. (US15) threshold value of an NPC stored in the UC data base does not match with that in the hardware.

- d0 Second byte of the US15 value of the NPC from hardware
- d1 First byte of the US15 value of the NPC from hardware
- d2 Second byte of the US15 value of the NPC from UC data base
- d3 First byte of the US15 value of the NPC from UC data base
- d4 NPC number
- d5 Unit number

232 NPC (DIU/DPC) Slips 15 min. threshold value is inconsistent

The Slips Error Seconds 15 min. (SLP15) threshold value stored in the UC data base does not match with that in the hardware.

- d0 Second byte of the SLP15 value of the NPC from hardware
- d1 First byte of the SLP15 value of the NPC from hardware
- d2 Second byte of the SLP15 value of the NPC from UC data base
- d3 First byte of the SLP15 value of the NPC from UC data base
- d4 NPC number
- d5 Unit number

233 NPC (DIU/DPC) Error Seconds 24 hr. threshold value is inconsistent

The Error Seconds 24 hr. (ESR24) threshold value stored in UC data base does not match that stored in the hardware.

- d0 Second byte of the ERS24 value of the NPC from hardware
- d1 First byte of the ERS24 value of the NPC from hardware
- d2 Second byte of the ERS24 value of the NPC from UC data base
- d3 First byte of the ERS24 value of the NPC from UC data base
- d4 NPC number
- d5 Unit number

234 DIU NPC Bursty Error Seconds 24 Min threshold value is inconsistent

The Bursty Error Seconds 24 min. threshold value of a DIU NPC stored in the UC data base does not match with that in the hardware.

- d0 Second byte of the BERS24 value of the NPC from hardware
- d1 First byte of the BERS24 value of the NPC from hardware
- d2 Second byte of the BERS24 value of the NPC from UC data base
- d3 First byte of the BERS24 value of the NPC from UC data base
- d4 DIU NPC number
- d5 Unit number

235 NPC (DIU/DPC) Severely Error Seconds 24 hr. threshold value is inconsistent

The Severely Error Seconds 24 hr. (SERS24) threshold value stored in the UC data base does not match with that in the hardware.

- d0 Second byte of the SERS24 value of the NPC from hardware
- d1 First byte of the SERS24 value of the NPC from hardware
- d2 Second byte of the SERS24 value of the NPC from UC data base
- d3 First byte of the SERS24 value of the NPC from UC data base
- d4 NPC number
- d5 Unit number

- 236 NPC (DIU/DPC) Unavailable Seconds 24 hr. threshold value is inconsistent

The Unavailable Seconds 24 hr. (US24) threshold value stored in the UC data base does not match with that in the hardware.

- d0 Second byte of the US24 value of the NPC from hardware
- d1 First byte of the US24 value of the NPC from hardware
- d2 Second byte of the US24 value of the NPC from UC data base
- d3 First byte of the US24 value of the NPC from UC data base
- d4 NPC number
- d5 Unit number

- 237 NPC (DIU/DPC) Slips Error Seconds 24 hr. threshold value is inconsistent

The Slips Error Seconds 24 hr. (SLP24) threshold value stored in the UC data base does not match with that in the hardware.

- d0 Second byte of the SLP24 value of the NPC from hardware
- d1 First byte of the SLP24 value of the NPC from hardware
- d2 Second byte of the SLP24 value of the NPC from UC data base
- d3 First byte of the SLP24 value of the NPC from UC data base
- d4 NPC number
- d5 Unit number

- 238 DPC NPC Degraded Minute 1 hr (DM) threshold value is inconsistent

The Degraded Minute 1 hr. threshold value stored in UC data base does not match that stored in the DPC hardware.

- d0 Second byte of the DM value from DPC hardware
- d1 First byte of the DM value from DPC hardware
- d2 Second byte of the DM value from UC data base
- d3 First byte of the DM value from UC data base
- d4 NPC number
- d5 UNIT number

- 239 DPC NPC Degraded Minute 24 hr (DM24) threshold value is inconsistent

The Degraded Minute 24 hr. threshold value stored in UC data base does not match that stored in the DPC hardware.

- d0 Second byte of the DM24 value from DPC hardware
- d1 First byte of the DM24 value from DPC hardware
- d2 Second byte of the DM24 value from UC data base
- d3 First byte of the DM24 value from UC data base
- d4 NPC number
- d5 UNIT number

240 SLC carrier NPC SANE threshold value is inconsistent

The SLC carrier NPC SANE threshold value stored in the UC data base does not match with that stored in the DDC hardware

- d0 Second byte of the sane threshold value from DDC hardware
- d1 First byte of the sane threshold value from DDC hardware
- d2 Second byte of the sane threshold value from UC data base
- d3 First byte of the sane threshold value from UC data base
- d4 NPC number
- d5 UNIT number

241 SLC carrier NPC SAFE threshold value is inconsistent

The SLC carrier NPC SAFE threshold value stored in the UC data base does not match with that stored in the DDC hardware

- d0 Second byte of the SAFE threshold value from DDC hardware
- d1 First byte of the SAFE threshold value from DDC hardware
- d2 Second byte of the SAFE threshold value from UC data base
- d3 First byte of the SAFE threshold value from UC data base
- d4 NPC number
- d5 UNIT number

242 SLC carrier NPC SELF alarm threshold value is inconsistent

The SLC carrier NPC SELF alarm threshold value stored in the UC data base does not match with that stored in the DDC hardware

- d0 Second byte of the SELF alarm threshold value from DDC hardware
- d1 First byte of the SELF alarm threshold value from DDC hardware
- d2 Second byte of the SELF alarm threshold value from UC data base
- d3 First byte of the SELF alarm threshold value from UC data base
- d4 NPC number
- d5 UNIT number

250 HUB-ID value in hardware is inconsistent

The HUB-ID is inconsistent between the MP data base and the hardware.

- d0 HUB-ID value from MP data base
- d1 HUB-ID value from the hardware
- d2 Not used
- d3 Not used
- d4 NPC number
- d5 Unit number

251 The time slot hardware image or control memory is inconsistent
The EC Hardware Image/Control Memory is inconsistent between MP data base and the hardware.

d0 The EC image value from MP data base
d1 The EC image value from the hardware
d2 SRM hardware data
d3 The time slot number
d4 The NPC number of the time slot
d5 The Unit number of the time slot

252 E1/T1 hardware selection flag inconsistent

d0 UH hardware flag
d1 UH database flag
d2 Not used
d3 DS2 Number (1 through 7)
d4 HMXR Number
d5 Unit Number

253 DS3 FLI LOG hardware inconsistent

d0 UA hardware
d1 UA lbo
d2 Not used
d3 Not used
d4 MXR/HMXR Number
d5 Unit Number

254 DS3 MXR/HMXR hardware flag inconsistent

d0 UA hardware flag
d1 UA data base flag
d2 Not used
d3 Not used
d4 MXR/HMXR Number
d5 Unit Number

255 DS3 MXR/HMXR hardware type inconsistent

d0 UA hardware type
d1 UA data base type
d2 Not used
d3 Not used
d4 MXR/HMXR Number
d5 Unit Number

- 256 DS3 MXR/HMXR hardware xoption inconsistent
 - d0 UA hardware xoption
 - d1 UA data base xoption
 - d2 Not used
 - d3 Not used
 - d4 MXR/HMXR Number
 - d5 Unit Number
- 257 DS3 MXR/HMXR hardware yoption inconsistent
 - d0 UA hardware yoption
 - d1 UA data base yoption
 - d2 Not used
 - d3 Not used
 - d4 MXR/HMXR Number
 - d5 Unit Number
- 258 DS3 MXR/HMXR hardware zoption inconsistent
 - d0 UA hardware zoption
 - d1 UA data base zoption
 - d2 Not used
 - d3 Not used
 - d4 MXR/HMXR Number
 - d5 Unit Number
- 259 DS3 MXR/HMXR hardware BER threshold inconsistent
 - d0 UA hardware BER threshold
 - d1 UA data base BER threshold
 - d2 Not used
 - d3 Not used
 - d4 MXR/HMXR Number
 - d5 Unit Number
- 25A DS3 MXR/HMXR hardware BER type inconsistent
 - d0 UA hardware BER type
 - d1 UA data base BER type
 - d2 Not used
 - d3 Not used
 - d4 MXR/HMXR Number
 - d5 Unit Number

25B	DS3 MIU hardware flag inconsistent
d0	UA hardware flag
d1	UA data base flag
d2	Not used
d3	Not used
d4	MIU Number
d5	Unit Number
25C	DS3 MIU hardware type inconsistent
d0	UA hardware type
d1	UA data base type
d2	Not used
d3	Not used
d4	MIU Number
d5	Unit Number
25D	DS3 MIU hardware xoption inconsistent
d0	UA hardware xoption
d1	UA data base xoption
d2	Not used
d3	Not used
d4	MIU Number
d5	Unit Number
25E	DS3 MIU hardware yoption inconsistent
d0	UA hardware yoption
d1	UA data base yoption
d2	Not used
d3	Not used
d4	MIU Number
d5	Unit Number
25F	DS3 MIU hardware zoption inconsistent
d0	UA hardware zoption
d1	UA data base zoption
d2	Not used
d3	Not used
d4	MIU Number
d5	Unit Number

- 260 MMFG data base inhibit flag inconsistent
- d0 UA hardware flag
 - d1 UA data base flag
 - d2 Not used
 - d3 Not used
 - d4 Not used
 - d5 Unit Number
- 261 MMFG data base protection status inconsistent
- d0 UA hardware status
 - d1 UA data base status
 - d2 Not used
 - d3 Not used
 - d4 Not used
 - d5 Unit Number
- 262 MMFG data base protection index inconsistent
- d0 UA hardware index
 - d1 UA data base index
 - d2 Not used
 - d3 Not used
 - d4 Not used
 - d5 Unit Number
- 263 MMFG data base protection mode inconsistent
- d0 UA hardware mode
 - d1 UA data base mode
 - d2 Not used
 - d3 Not used
 - d4 Not used
 - d5 Unit Number
- 264 MMFG data base service status of MXR P/HMXR P inconsistent
- d0 UA hardware status
 - d1 UA data base status
 - d2 Not used
 - d3 Not used
 - d4 Not used
 - d5 Unit Number

- 265 MMFG data base service status of MIU P inconsistent
- d0 UA hardware status
 - d1 UA data base status
 - d2 Not used
 - d3 Not used
 - d4 Not used
 - d5 Unit Number
- 266 Invalid value of Receive Framer Mode A register
- d0 Not used
 - d1 Not used
 - d2 Expected value
 - d3 Actual value read back from the hardware
 - d4 NPC number
 - d5 Unit Number
- 267 Invalid value of Receive Framer Mode B register
- d0 Not used
 - d1 Not used
 - d2 Expected value
 - d3 Actual value read back from the hardware
 - d4 NPC number
 - d5 Unit Number
- 268 Invalid value of Receive Framer Exercise register
- d0 Not used
 - d1 Not used
 - d2 Expected value
 - d3 Actual value read back from the hardware
 - d4 NPC number
 - d5 Unit Number
- 269 Invalid value of Receive Synchronizer Mode A register
- d0 Not used
 - d1 Not used
 - d2 Expected value
 - d3 Actual value read back from the hardware
 - d4 NPC number
 - d5 Unit Number

26A Invalid value of Receive Synchronizer Mode B register

d0 Not used
d1 Not used
d2 Expected value
d3 Actual value read back from the hardware
d4 NPC number
d5 Unit Number

26B Invalid value of Receive Exercise Mode register

d0 Not used
d1 Not used
d2 Expected value
d3 Actual value read back from the hardware
d4 NPC number
d5 Unit Number

26C Invalid value of Transmit Exercise Mode register

d0 Not used
d1 Not used
d2 Expected value
d3 Actual value read back from the hardware
d4 NPC number
d5 Unit Number

26D Invalid value of Transmit Framing Mode register

d0 Not used
d1 Not used
d2 Expected value
d3 Actual value read back from the hardware
d4 NPC number
d5 Unit Number

26E Invalid value of Transmit Signaling Mode register

d0 Not used
d1 Not used
d2 Expected value
d3 Actual value read back from the hardware
d4 NPC number
d5 Unit Number

26F Invalid value of Transmit System Mode register

d0 Not used
d1 Not used
d2 Expected value
d3 Actual value read back from the hardware
d4 NPC number
d5 Unit Number

270 NPC Daily Near-end Path Coding Violations threshold values are inconsistent

The Daily Near-end Path Coding Violations of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long ANSI threshold value in the hardware
d1 Long ANSI threshold value in the hardware
d2 Long ANSI threshold value in the hardware
d3 Long ANSI threshold value in the hardware
d4 Long ANSI threshold value in the data base
d5 Long ANSI threshold value in the data base
d6 Long ANSI threshold value in the data base
d7 Long ANSI threshold value in the data base
d8 NPC number
d9 UNIT number

271 NPC Daily Near-end Path Errored Seconds threshold values are inconsistent

The Daily Near-end Path Errored Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long ANSI threshold value in the hardware
d1 Long ANSI threshold value in the hardware
d2 Long ANSI threshold value in the hardware
d3 Long ANSI threshold value in the hardware
d4 Long ANSI threshold value in the data base
d5 Long ANSI threshold value in the data base
d6 Long ANSI threshold value in the data base
d7 Long ANSI threshold value in the data base
d8 NPC number
d9 UNIT number

272 NPC Daily Near-end Path Severely Errored Seconds threshold values are inconsistent

The Daily Near-end Path Severely Errored Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long ANSI threshold value in the hardware
d1 Long ANSI threshold value in the hardware
d2 Long ANSI threshold value in the hardware
d3 Long ANSI threshold value in the hardware
d4 Long ANSI threshold value in the data base
d5 Long ANSI threshold value in the data base
d6 Long ANSI threshold value in the data base
d7 Long ANSI threshold value in the data base
d8 NPC number
d9 UNIT number

273 NPC Daily Near-end Severely Errored Framing Seconds threshold values are inconsistent

The Daily Near-end Severely Errored Framing Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long ANSI threshold value in the hardware
d1 Long ANSI threshold value in the hardware
d2 Long ANSI threshold value in the hardware
d3 Long ANSI threshold value in the hardware
d4 Long ANSI threshold value in the data base
d5 Long ANSI threshold value in the data base
d6 Long ANSI threshold value in the data base
d7 Long ANSI threshold value in the data base
d8 NPC number
d9 UNIT number

- 274 NPC Daily Near-end Controlled Slip Seconds threshold values are inconsistent

The Daily Near-end Controlled Slip Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long ANSI threshold value in the hardware
- d1 Long ANSI threshold value in the hardware
- d2 Long ANSI threshold value in the hardware
- d3 Long ANSI threshold value in the hardware
- d4 Long ANSI threshold value in the data base
- d5 Long ANSI threshold value in the data base
- d6 Long ANSI threshold value in the data base
- d7 Long ANSI threshold value in the data base
- d8 NPC number
- d9 UNIT number

- 275 NPC Daily Near-end Unavailable Seconds threshold values are inconsistent

The Daily Near-end Unavailable Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long ANSI threshold value in the hardware
- d1 Long ANSI threshold value in the hardware
- d2 Long ANSI threshold value in the hardware
- d3 Long ANSI threshold value in the hardware
- d4 Long ANSI threshold value in the data base
- d5 Long ANSI threshold value in the data base
- d6 Long ANSI threshold value in the data base
- d7 Long ANSI threshold value in the data base
- d8 NPC number
- d9 UNIT number

- 276 NPC Daily Near-end Line Coding Violations threshold values are inconsistent

The Daily Near-end Line Coding Violations of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long ANSI threshold value in the hardware
- d1 Long ANSI threshold value in the hardware
- d2 Long ANSI threshold value in the hardware
- d3 Long ANSI threshold value in the hardware
- d4 Long ANSI threshold value in the data base
- d5 Long ANSI threshold value in the data base
- d6 Long ANSI threshold value in the data base
- d7 Long ANSI threshold value in the data base
- d8 NPC number
- d9 UNIT number

- 277 NPC Daily Near-end Line Errored Seconds threshold values are inconsistent

The Daily Near-end Line Errored Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long ANSI threshold value in the hardware
- d1 Long ANSI threshold value in the hardware
- d2 Long ANSI threshold value in the hardware
- d3 Long ANSI threshold value in the hardware
- d4 Long ANSI threshold value in the data base
- d5 Long ANSI threshold value in the data base
- d6 Long ANSI threshold value in the data base
- d7 Long ANSI threshold value in the data base
- d8 NPC number
- d9 UNIT number

278 NPC Daily Near-end Line Severely Errored Seconds threshold
 are inconsistent

The Daily Near-end Line Severely Errored Seconds of the ANSI NPC
threshold value stored in the unit data base does not match that
stored in the hardware

- d0 Long ANSI threshold value in the hardware
- d1 Long ANSI threshold value in the hardware
- d2 Long ANSI threshold value in the hardware
- d3 Long ANSI threshold value in the hardware
- d4 Long ANSI threshold value in the data base
- d5 Long ANSI threshold value in the data base
- d6 Long ANSI threshold value in the data base
- d7 Long ANSI threshold value in the data base
- d8 NPC number
- d9 UNIT number

279 NPC Daily Far-end Path Coding Violations threshold values are
 inconsistent

The Daily Far-end Path Coding Violations of the ANSI NPC threshold
value stored in the unit data base does not match that stored in the
hardware

- d0 Long ANSI threshold value in the hardware
- d1 Long ANSI threshold value in the hardware
- d2 Long ANSI threshold value in the hardware
- d3 Long ANSI threshold value in the hardware
- d4 Long ANSI threshold value in the data base
- d5 Long ANSI threshold value in the data base
- d6 Long ANSI threshold value in the data base
- d7 Long ANSI threshold value in the data base
- d8 NPC number
- d9 UNIT number

27A NPC Daily Far-end Path Errored Seconds threshold values are inconsistent

The Daily Far-end Path Errored Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long ANSI threshold value in the hardware
d1 Long ANSI threshold value in the hardware
d2 Long ANSI threshold value in the hardware
d3 Long ANSI threshold value in the hardware
d4 Long ANSI threshold value in the data base
d5 Long ANSI threshold value in the data base
d6 Long ANSI threshold value in the data base
d7 Long ANSI threshold value in the data base
d8 NPC number
d9 UNIT number

27B NPC Daily Far-end Path Severely Errored Seconds threshold values are inconsistent

The Daily Far-end Path Severely Errored Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long ANSI threshold value in the hardware
d1 Long ANSI threshold value in the hardware
d2 Long ANSI threshold value in the hardware
d3 Long ANSI threshold value in the hardware
d4 Long ANSI threshold value in the data base
d5 Long ANSI threshold value in the data base
d6 Long ANSI threshold value in the data base
d7 Long ANSI threshold value in the data base
d8 NPC number
d9 UNIT number

27C NPC Daily Far-end Severely Errored Framing Seconds threshold values are inconsistent

The Daily Far-end Severely Errored Framing Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long ANSI threshold value in the hardware
- d1 Long ANSI threshold value in the hardware
- d2 Long ANSI threshold value in the hardware
- d3 Long ANSI threshold value in the hardware
- d4 Long ANSI threshold value in the data base
- d5 Long ANSI threshold value in the data base
- d6 Long ANSI threshold value in the data base
- d7 Long ANSI threshold value in the data base
- d8 NPC number
- d9 UNIT number

27D NPC Daily Far-end Controlled Slip Seconds threshold values are inconsistent

The Daily Far-end Controlled Slip Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long ANSI threshold value in the hardware
- d1 Long ANSI threshold value in the hardware
- d2 Long ANSI threshold value in the hardware
- d3 Long ANSI threshold value in the hardware
- d4 Long ANSI threshold value in the data base
- d5 Long ANSI threshold value in the data base
- d6 Long ANSI threshold value in the data base
- d7 Long ANSI threshold value in the data base
- d8 NPC number
- d9 UNIT number

27E NPC Daily Far-end Unavailable Seconds threshold values are inconsistent

The Daily Far-end Unavailable Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0	Long ANSI threshold value in the hardware
d1	Long ANSI threshold value in the hardware
d2	Long ANSI threshold value in the hardware
d3	Long ANSI threshold value in the hardware
d4	Long ANSI threshold value in the data base
d5	Long ANSI threshold value in the data base
d6	Long ANSI threshold value in the data base
d7	Long ANSI threshold value in the data base
d8	NPC number
d9	UNIT number

27F NPC Daily Far-end Line Errored Seconds threshold values are inconsistent

The Daily Far-end Line Errored Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0	Long ANSI threshold value in the hardware
d1	Long ANSI threshold value in the hardware
d2	Long ANSI threshold value in the hardware
d3	Long ANSI threshold value in the hardware
d4	Long ANSI threshold value in the data base
d5	Long ANSI threshold value in the data base
d6	Long ANSI threshold value in the data base
d7	Long ANSI threshold value in the data base
d8	NPC number
d9	UNIT number

280 NPC 15-Minute Near-end Path Coding Violations threshold values are inconsistent

The 15-Minute Near-end Path Coding Violations of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0	Long ANSI threshold value in the hardware
d1	Long ANSI threshold value in the hardware
d2	Long ANSI threshold value in the hardware
d3	Long ANSI threshold value in the hardware
d4	Long ANSI threshold value in the data base
d5	Long ANSI threshold value in the data base
d6	Long ANSI threshold value in the data base
d7	Long ANSI threshold value in the data base
d8	NPC number
d9	UNIT number

281 NPC 15-Minute Near-end Path Errored Seconds threshold values are inconsistent

The 15-Minute Near-end Path Errored Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0	Long ANSI threshold value in the hardware
d1	Long ANSI threshold value in the hardware
d2	Long ANSI threshold value in the hardware
d3	Long ANSI threshold value in the hardware
d4	Long ANSI threshold value in the data base
d5	Long ANSI threshold value in the data base
d6	Long ANSI threshold value in the data base
d7	Long ANSI threshold value in the data base
d8	NPC number
d9	UNIT number

282 NPC 15-Minute Near-end Path Severely Errored Seconds threshold values are inconsistent

The 15-Minute Near-end Path Severely Errored Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long ANSI threshold value in the hardware
d1 Long ANSI threshold value in the hardware
d2 Long ANSI threshold value in the hardware
d3 Long ANSI threshold value in the hardware
d4 Long ANSI threshold value in the data base
d5 Long ANSI threshold value in the data base
d6 Long ANSI threshold value in the data base
d7 Long ANSI threshold value in the data base
d8 NPC number
d9 UNIT number

283 NPC 15-Minute Near-end Severely Errored Framing Seconds threshold values are inconsistent

The 15-Minute Near-end Severely Errored Framing Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long ANSI threshold value in the hardware
d1 Long ANSI threshold value in the hardware
d2 Long ANSI threshold value in the hardware
d3 Long ANSI threshold value in the hardware
d4 Long ANSI threshold value in the data base
d5 Long ANSI threshold value in the data base
d6 Long ANSI threshold value in the data base
d7 Long ANSI threshold value in the data base
d8 NPC number
d9 UNIT number

284 NPC 15-Minute Near-end Controlled Slip Seconds threshold values are inconsistent

The 15-Minute Near-end Controlled Slip Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0	Long ANSI threshold value in the hardware
d1	Long ANSI threshold value in the hardware
d2	Long ANSI threshold value in the hardware
d3	Long ANSI threshold value in the hardware
d4	Long ANSI threshold value in the data base
d5	Long ANSI threshold value in the data base
d6	Long ANSI threshold value in the data base
d7	Long ANSI threshold value in the data base
d8	NPC number
d9	UNIT number

285 NPC 15-Minute Near-end Unavailable Seconds threshold values are inconsistent

The 15-Minute Near-end Unavailable Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0	Long ANSI threshold value in the hardware
d1	Long ANSI threshold value in the hardware
d2	Long ANSI threshold value in the hardware
d3	Long ANSI threshold value in the hardware
d4	Long ANSI threshold value in the data base
d5	Long ANSI threshold value in the data base
d6	Long ANSI threshold value in the data base
d7	Long ANSI threshold value in the data base
d8	NPC number
d9	UNIT number

286 NPC 15-Minute Near-end Line Coding Violations threshold values
 are inconsistent

The 15-Minute Near-end Line Coding Violations of the ANSI NPC
threshold value stored in the unit data base does not match that
stored in the hardware

d0 Long ANSI threshold value in the hardware
d1 Long ANSI threshold value in the hardware
d2 Long ANSI threshold value in the hardware
d3 Long ANSI threshold value in the hardware
d4 Long ANSI threshold value in the data base
d5 Long ANSI threshold value in the data base
d6 Long ANSI threshold value in the data base
d7 Long ANSI threshold value in the data base
d8 NPC number
d9 UNIT number

287 NPC 15-Minute Near-end Line Errored Seconds threshold values
 are inconsistent

The 15-Minute Near-end Line Errored Seconds of the ANSI NPC threshold
value stored in the unit data base does not match that stored in the
hardware

d0 Long ANSI threshold value in the hardware
d1 Long ANSI threshold value in the hardware
d2 Long ANSI threshold value in the hardware
d3 Long ANSI threshold value in the hardware
d4 Long ANSI threshold value in the data base
d5 Long ANSI threshold value in the data base
d6 Long ANSI threshold value in the data base
d7 Long ANSI threshold value in the data base
d8 NPC number
d9 UNIT number

288 NPC 15-Minute Near-end Line Severely Errored Seconds threshold values are inconsistent

The 15-Minute Near-end Line Severely Errored Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long ANSI threshold value in the hardware
d1 Long ANSI threshold value in the hardware
d2 Long ANSI threshold value in the hardware
d3 Long ANSI threshold value in the hardware
d4 Long ANSI threshold value in the data base
d5 Long ANSI threshold value in the data base
d6 Long ANSI threshold value in the data base
d7 Long ANSI threshold value in the data base
d8 NPC number
d9 UNIT number

289 NPC 15-Minute Far-end Path Coding Violations threshold values are inconsistent

The 15-Minute Far-end Path Coding Violations of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long ANSI threshold value in the hardware
d1 Long ANSI threshold value in the hardware
d2 Long ANSI threshold value in the hardware
d3 Long ANSI threshold value in the hardware
d4 Long ANSI threshold value in the data base
d5 Long ANSI threshold value in the data base
d6 Long ANSI threshold value in the data base
d7 Long ANSI threshold value in the data base
d8 NPC number
d9 UNIT number

28A NPC 15-Minute Far-end Path Errored Seconds threshold values are inconsistent

The 15-Minute Far-end Path Errored Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0	Long ANSI threshold value in the hardware
d1	Long ANSI threshold value in the hardware
d2	Long ANSI threshold value in the hardware
d3	Long ANSI threshold value in the hardware
d4	Long ANSI threshold value in the data base
d5	Long ANSI threshold value in the data base
d6	Long ANSI threshold value in the data base
d7	Long ANSI threshold value in the data base
d8	NPC number
d9	UNIT number

28B NPC 15-Minute Far-end Path Severely Errored Seconds threshold values are inconsistent

The 15-Minute Far-end Path Severely Errored Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0	Long ANSI threshold value in the hardware
d1	Long ANSI threshold value in the hardware
d2	Long ANSI threshold value in the hardware
d3	Long ANSI threshold value in the hardware
d4	Long ANSI threshold value in the data base
d5	Long ANSI threshold value in the data base
d6	Long ANSI threshold value in the data base
d7	Long ANSI threshold value in the data base
d8	NPC number
d9	UNIT number

28C NPC 15-Minute Far-end Severely Errored Framing Seconds threshold values are inconsistent

The 15-Minute Far-end Severely Errored Framing Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long ANSI threshold value in the hardware
- d1 Long ANSI threshold value in the hardware
- d2 Long ANSI threshold value in the hardware
- d3 Long ANSI threshold value in the hardware
- d4 Long ANSI threshold value in the data base
- d5 Long ANSI threshold value in the data base
- d6 Long ANSI threshold value in the data base
- d7 Long ANSI threshold value in the data base
- d8 NPC number
- d9 UNIT number

28D NPC 15-Minute Far-end Controlled Slip Seconds threshold values are inconsistent

The 15-Minute Far-end Controlled Slip Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long ANSI threshold value in the hardware
- d1 Long ANSI threshold value in the hardware
- d2 Long ANSI threshold value in the hardware
- d3 Long ANSI threshold value in the hardware
- d4 Long ANSI threshold value in the data base
- d5 Long ANSI threshold value in the data base
- d6 Long ANSI threshold value in the data base
- d7 Long ANSI threshold value in the data base
- d8 NPC number
- d9 UNIT number

28E NPC 15-Minute Far-end Unavailable Seconds threshold values are inconsistent

The 15-Minute Far-end Unavailable Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0	Long ANSI threshold value in the hardware
d1	Long ANSI threshold value in the hardware
d2	Long ANSI threshold value in the hardware
d3	Long ANSI threshold value in the hardware
d4	Long ANSI threshold value in the data base
d5	Long ANSI threshold value in the data base
d6	Long ANSI threshold value in the data base
d7	Long ANSI threshold value in the data base
d8	NPC number
d9	UNIT number

28F NPC 15-Minute Far-end Line Errored Seconds threshold values are inconsistent

The 15-Minute Far-end Line Errored Seconds of the ANSI NPC threshold value stored in the unit data base does not match that stored in the hardware

d0	Long ANSI threshold value in the hardware
d1	Long ANSI threshold value in the hardware
d2	Long ANSI threshold value in the hardware
d3	Long ANSI threshold value in the hardware
d4	Long ANSI threshold value in the data base
d5	Long ANSI threshold value in the data base
d6	Long ANSI threshold value in the data base
d7	Long ANSI threshold value in the data base
d8	NPC number
d9	UNIT number

290 NPC Daily CRC Block Error Count threshold values are inconsistent

The Daily CRC Block Error Count of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

291 NPC Daily Framing Error Count threshold values are inconsistent

The Daily Framing Error Count of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

292 NPC Daily Out of Frame Seconds threshold values are inconsistent

The Daily Out of Frame Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long enhanced-30-channel threshold value in the hardware
- d1 Long enhanced-30-channel threshold value in the hardware
- d2 Long enhanced-30-channel threshold value in the hardware
- d3 Long enhanced-30-channel threshold value in the hardware
- d4 Long enhanced-30-channel threshold value in the data base
- d5 Long enhanced-30-channel threshold value in the data base
- d6 Long enhanced-30-channel threshold value in the data base
- d7 Long enhanced-30-channel threshold value in the data base
- d8 NPC number
- d9 UNIT number

293 NPC Errored Seconds threshold values are inconsistent

The Errored Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long enhanced-30-channel threshold value in the hardware
- d1 Long enhanced-30-channel threshold value in the hardware
- d2 Long enhanced-30-channel threshold value in the hardware
- d3 Long enhanced-30-channel threshold value in the hardware
- d4 Long enhanced-30-channel threshold value in the data base
- d5 Long enhanced-30-channel threshold value in the data base
- d6 Long enhanced-30-channel threshold value in the data base
- d7 Long enhanced-30-channel threshold value in the data base
- d8 NPC number
- d9 UNIT number

- 294 NPC Daily Severely Errored Seconds threshold values are inconsistent

The Daily Severely Errored Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long enhanced-30-channel threshold value in the hardware
- d1 Long enhanced-30-channel threshold value in the hardware
- d2 Long enhanced-30-channel threshold value in the hardware
- d3 Long enhanced-30-channel threshold value in the hardware
- d4 Long enhanced-30-channel threshold value in the data base
- d5 Long enhanced-30-channel threshold value in the data base
- d6 Long enhanced-30-channel threshold value in the data base
- d7 Long enhanced-30-channel threshold value in the data base
- d8 NPC number
- d9 UNIT number

- 295 NPC Daily Controlled Slip Seconds threshold values are inconsistent

The Daily Controlled Slip Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long enhanced-30-channel threshold value in the hardware
- d1 Long enhanced-30-channel threshold value in the hardware
- d2 Long enhanced-30-channel threshold value in the hardware
- d3 Long enhanced-30-channel threshold value in the hardware
- d4 Long enhanced-30-channel threshold value in the data base
- d5 Long enhanced-30-channel threshold value in the data base
- d6 Long enhanced-30-channel threshold value in the data base
- d7 Long enhanced-30-channel threshold value in the data base
- d8 NPC number
- d9 UNIT number

296 NPC Daily Code Violation Count threshold values are inconsistent

The Daily Code Violation Count of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long enhanced-30-channel threshold value in the hardware
- d1 Long enhanced-30-channel threshold value in the hardware
- d2 Long enhanced-30-channel threshold value in the hardware
- d3 Long enhanced-30-channel threshold value in the hardware
- d4 Long enhanced-30-channel threshold value in the data base
- d5 Long enhanced-30-channel threshold value in the data base
- d6 Long enhanced-30-channel threshold value in the data base
- d7 Long enhanced-30-channel threshold value in the data base
- d8 NPC number
- d9 UNIT number

297 NPC Daily Unavailable Seconds threshold values are inconsistent

The Daily Unavailable Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long enhanced-30-channel threshold value in the hardware
- d1 Long enhanced-30-channel threshold value in the hardware
- d2 Long enhanced-30-channel threshold value in the hardware
- d3 Long enhanced-30-channel threshold value in the hardware
- d4 Long enhanced-30-channel threshold value in the data base
- d5 Long enhanced-30-channel threshold value in the data base
- d6 Long enhanced-30-channel threshold value in the data base
- d7 Long enhanced-30-channel threshold value in the data base
- d8 NPC number
- d9 UNIT number

- 298 NPC Daily Unavailable Time Count threshold values are inconsistent

The Daily Unavailable Time Count of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long enhanced-30-channel threshold value in the hardware
- d1 Long enhanced-30-channel threshold value in the hardware
- d2 Long enhanced-30-channel threshold value in the hardware
- d3 Long enhanced-30-channel threshold value in the hardware
- d4 Long enhanced-30-channel threshold value in the data base
- d5 Long enhanced-30-channel threshold value in the data base
- d6 Long enhanced-30-channel threshold value in the data base
- d7 Long enhanced-30-channel threshold value in the data base
- d8 NPC number
- d9 UNIT number

- 299 NPC Daily Multiframe Alignment Error Count threshold values are inconsistent

The Daily Multiframe Alignment Error Count of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long enhanced-30-channel threshold value in the hardware
- d1 Long enhanced-30-channel threshold value in the hardware
- d2 Long enhanced-30-channel threshold value in the hardware
- d3 Long enhanced-30-channel threshold value in the hardware
- d4 Long enhanced-30-channel threshold value in the data base
- d5 Long enhanced-30-channel threshold value in the data base
- d6 Long enhanced-30-channel threshold value in the data base
- d7 Long enhanced-30-channel threshold value in the data base
- d8 NPC number
- d9 UNIT number

- 29A NPC Daily Far End Block Error Count threshold values are inconsistent

The Daily Far End Block Error Count of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long enhanced-30-channel threshold value in the hardware
- d1 Long enhanced-30-channel threshold value in the hardware
- d2 Long enhanced-30-channel threshold value in the hardware
- d3 Long enhanced-30-channel threshold value in the hardware
- d4 Long enhanced-30-channel threshold value in the data base
- d5 Long enhanced-30-channel threshold value in the data base
- d6 Long enhanced-30-channel threshold value in the data base
- d7 Long enhanced-30-channel threshold value in the data base
- d8 NPC number
- d9 UNIT number

- 29B NPC Daily Far End Errored Seconds threshold values are inconsistent

The Daily Far End Errored Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

- d0 Long enhanced-30-channel threshold value in the hardware
- d1 Long enhanced-30-channel threshold value in the hardware
- d2 Long enhanced-30-channel threshold value in the hardware
- d3 Long enhanced-30-channel threshold value in the hardware
- d4 Long enhanced-30-channel threshold value in the data base
- d5 Long enhanced-30-channel threshold value in the data base
- d6 Long enhanced-30-channel threshold value in the data base
- d7 Long enhanced-30-channel threshold value in the data base
- d8 NPC number
- d9 UNIT number

29C NPC Daily Far End Severely Errored Seconds threshold values are inconsistent

The Daily Far End Severely Errored Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

29D NPC Daily Far End Unavailable Seconds threshold values are inconsistent

The Daily Far End Unavailable Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

29E NPC 15-Minute CRC Block Error Count threshold values are
 inconsistent

The 15-Minute CRC Block Error Count of the enhanced-30-channel NPC
threshold value stored in the unit data base does not match that
stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

29F NPC 15-Minute Framing Error Count threshold values are
 inconsistent

The 15-Minute Framing Error Count of the enhanced-30-channel NPC
threshold value stored in the unit data base does not match that
stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

2A0 NPC 15-Minute Out of Frame Seconds threshold values are inconsistent

The 15-Minute Out of Frame Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

2A1 NPC 15-Minute Errored Seconds threshold values are inconsistent

The 15-Minute Errored Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

2A2 NPC 15-Minute Severely Errored Seconds threshold values are inconsistent

The 15-Minute Severely Errored Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

2A3 NPC 15-Minute Controlled Slip Seconds threshold values are inconsistent

The 15-Minute Controlled Slip Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

2A4 NPC 15-Minute Code Violation Count threshold values are inconsistent

The 15-Minute Code Violation Count of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

2A5 NPC 15-Minute Unavailable Seconds threshold values are inconsistent

The 15-Minute Unavailable Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

2A6 NPC 15-Minute Unavailable Time Count threshold values are inconsistent

The 15-Minute Unavailable Time Count of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

2A7 NPC 15-Minute Multiframe Alignment Error Count threshold values are inconsistent

The 15-Minute Multiframe Alignment Error Count of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

2A8 NPC 15-Minute Far End Block Error Count threshold values are inconsistent

The 15-Minute Far End Block Error Count of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

2A9 NPC 15-Minute Far End Errored Seconds threshold values are inconsistent

The 15-Minute Far End Errored Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

2AA NPC 15-Minute Far End Severely Errored Seconds threshold values are inconsistent

The 15-Minute Far End Severely Errored Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

2AB NPC 15-Minute Far End Unavailable Seconds threshold values are inconsistent

The 15-Minute Far End Unavailable Seconds of the enhanced-30-channel NPC threshold value stored in the unit data base does not match that stored in the hardware

d0 Long enhanced-30-channel threshold value in the hardware
d1 Long enhanced-30-channel threshold value in the hardware
d2 Long enhanced-30-channel threshold value in the hardware
d3 Long enhanced-30-channel threshold value in the hardware
d4 Long enhanced-30-channel threshold value in the data base
d5 Long enhanced-30-channel threshold value in the data base
d6 Long enhanced-30-channel threshold value in the data base
d7 Long enhanced-30-channel threshold value in the data base
d8 NPC number
d9 UNIT number

2B1 NPC Transmit or Receive Pseudo Framing Word values are inconsistent

The Transmit or Receive Pseudo Framing Word of the NPC mismatch between unit data base and the hardware

d0 The Receive Pseudo Framing Word of NPC from hardware
d1 The Receive Pseudo Framing Word of NPC from unit data base
d2 The Transmit Pseudo Framing Word of NPC from hardware
d3 The Transmit Pseudo Framing Word of NPC from unit data base
d4 NPC number
d5 UNIT number

2B2 NPC Non Framing Setting values are inconsistent

The Non Framing Setting value the NPC mismatch between unit data base and the hardware

- d0 Fourth byte the Non Framing Setting of NPC from hardware
- d1 Third byte of the Non Framing Setting of NPC from hardware
- d2 Fourth byte of the Non Framing Setting of NPC from unit data base
- d3 Third byte of the Non Framing Setting of NPC from unit data base
- d4 NPC number
- d5 UNIT number

300 E1/T1 Select Registers are inconsistent

The various select registers are not consistently provisioned for either E1 or T1 within a DS2

- d0 NPC type
- d1 Not used
- d2 Not used
- d3 DS2 number
- d4 HMXR number
- d5 UNIT number

301 CCN sides is unpested (INS) in DB but pested in hardware (BXREG).

- d0 Not used
- d1 Not used
- d2 Not used
- d3 Not used
- d4 Not used
- d5 CCN side

302 TSI entity is unpested (INS) in DB but pested in hardware (CCNI EMR).

- d0 Not used
- d1 Not used
- d2 Not used
- d3 To UNIT
- d4 From UNIT
- d5 CCNI side

303 CCB entity is unpested (INS) in DB but pested in hardware (CCNI EMR).

- d0 Not used
- d1 Not used
- d2 Not used
- d3 Not used
- d4 CCB number
- d5 CCN side

- 305 SYNC entity is in-service in DB but cannot communicate with MP.
- d0 Not used
 - d1 Not used
 - d2 Not used
 - d3 Not used
 - d4 Not used
 - d5 SYNC side
- 306 TLI entity is in-service in DB but out-of-service in SYNC data.
- d0 Syncdata.arch
 - d1 TLI data base flags
 - d2 TLI hardware status
 - d3 Number of times data mismatch verified
 - d4 TLI number
 - d5 SYNC side
- 307 TLR entity is in-service in DB but out-of-service in SYNC data.
- d0 Not used
 - d1 Not used
 - d2 Not used
 - d3 TLR number
 - d4 TLI number
 - d5 SYNC side
- 308 CI links is in-service in DB but out of service in CI hardware data
- d0 Not used
 - d1 Not used
 - d2 Not used
 - d3 Not used
 - d4 Not used
 - d5 link number
- 310 TLR entity priority is different b/t DB and SYNC data (TE and TP)
- d0 Not used
 - d1 SYNC hardware TLR priority
 - d2 Data base priority
 - d3 TLR number
 - d4 TLI number
 - d5 SYNC side

- 311 TLR entity x and y value is different b/t DB and SYNC data
- d0 SYNC hardware y value
 - d1 Data base y value
 - d2 SYNC hardware x value
 - d3 Data base x value
 - d4 [AB] A = TLI number; B = TLR number;
 - d5 SYNC side
- 312 SYNC entity architect or stratum value is different b/t DB and SYNC.
- d0 SYNC hardware stratum value
 - 0 - domestic stratum 3
 - 1 - CEPT local exchange
 - 2 - CEPT toll exchange
 - 3 - domestic stratum 2
 - d1 Data base stratum value
 - 0 - no type defined
 - 1 - stratum 2 sync
 - 2 - stratum 3 sync
 - 3 - CEPT local
 - 4 - CEPT toll
 - d2 SYNC hardware architect value
 - 0 - slaved in master-slave system
 - 1 - master in master-slave system
 - 2 - mutual synchronization system
 - d3 Data base architect value
 - 0 - no type defined
 - 1 - master in master-slave system
 - 2 - slaved in master-slave system
 - 3 - mutual synchronization system
 - d4 Not used
 - d5 SYNC side
- 313 SYNC entity mode is different b/t DB and SYNC data
- d0 Not used
 - d1 Not used
 - d2 SYNC hardware mode value
 - 0 - normal
 - 1 - fast
 - 2 - holdover
 - d3 Data base sync mode value
 - 1 - normal
 - 2 - fast
 - 3 - holdover
 - d4 Not used
 - d5 SYNC side

- 314 SYNC timing source or active link is different b/t DB and hardware
- d0 SYNC hardware active link
This field is only valid when the source is timing link and the architecture field is slave in the master-slave system
0 - TLI #1, Link #0
1 - TLI #1, Link #1
2 - TLI #2, Link #0
3 - TLI #2, Link #1
4 - TLI #3, Link #0
5 - TLI #3, Link #1
6 - TLI #4, Link #0
7 - TLI #4, Link #1
- d1 Data base sync active link
This field is only valid when the source is timing link and the architecture field is slave in the master-slave system
0 - TLI #1, Link #0
1 - TLI #1, Link #1
2 - TLI #2, Link #0
3 - TLI #2, Link #1
4 - TLI #3, Link #0
5 - TLI #3, Link #1
6 - TLI #4, Link #0
7 - TLI #4, Link #1
- d2 SYNC hardware timing source
0 - holdover
1 - timing link
2 - cross couples
3 - CRO
- d3 Data base sync timing source
1 - holdover
2 - timing link
3 - cross couples
4 - CRO
- d4 Not used
- d5 SYNC side
- 315 SYNC TLI type is different b/t DB and SYNC hardware
- d0 Not used
- d1 Data base TLIs x option if TLI type is TDTYPE
- d2 SYNC hardware type
- d3 Data base TLI type
- d4 TLI number
- d5 SYNC side

316 ECCN sides is unpested (INS) in DB but pested in hardware (BXREG).

d0 Not used
d1 Not used
d2 Not used
d3 Not used
d4 Not used
d5 ECCN side

317 ETSI entity is unpested (INS) in DB but pested in hardware(CCI EMR).

d0 Not used
d1 Not used
d2 Not used
d3 Not used
d4 ETSI number
d5 ECCN side

320 Receive sync upper address different b/t UA DB and PS DB

d0 Not used
d1 UA value
d2 PS value
d3 Channel
d4 NPC number
d5 Unit number

321 Receive sync lower address different b/t UA DB and PS DB

d0 Not used
d1 UA value
d2 PS value
d3 Channel
d4 NPC number
d5 Unit number

322 Receive sync data b/t UA DB and PS DB

d0 Not used
d1 UA value
d2 PS value
d3 Channel
d4 NPC number
d5 Unit number

- 323 PIF data differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 Not used
 - d4 MXR/HMXR number
 - d5 Unit number
- 324 Receive frame mode A differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 NPC
 - d4 MXR/HMXR number
 - d5 Unit number
- 325 Receive frame mode B differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 NPC
 - d4 MXR/HMXR number
 - d5 Unit number
- 326 Receive sync mode A differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 NPC
 - d4 MXR/HMXR number
 - d5 Unit number
- 327 Receive sync mode B differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 NPC
 - d4 MXR/HMXR number
 - d5 Unit number

- 328 Transmit framing mode differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 NPC
 - d4 MXR/HMXR number
 - d5 Unit number
- 329 Transmit signaling mode differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 NPC
 - d4 MXR/HMXR number
 - d5 Unit number
- 32A Transmit system mode differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 NPC
 - d4 MXR/HMXR number
 - d5 Unit number
- 32B Even NPC receive ams 0 value differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 Channel
 - d4 NPC number
 - d5 Unit number
- 32C Even NPC receive ams 1 value differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 Channel
 - d4 NPC number
 - d5 Unit number

32D Even NPC receive ams 2 value differs b/t UA DB and PS DB

d0 Not used
d1 UA value
d2 PS value
d3 Channel
d4 NPC number
d5 Unit number

32E Even NPC transmit ams 0 value differs b/t UA DB and PS DB

d0 Not used
d1 UA value
d2 PS value
d3 Channel
d4 NPC number
d5 Unit number

32F Even NPC transmit ams 1 value differs b/t UA DB and PS DB

d0 Not used
d1 UA value
d2 PS value
d3 Channel
d4 NPC number
d5 Unit number

330 Even NPC transmit ams 2 value differs b/t UA DB and PS DB

d0 Not used
d1 UA value
d2 PS value
d3 Channel
d4 NPC number
d5 Unit number

331 Odd NPC receive ams 0 value differs b/t UA DB and PS DB

d0 Not used
d1 UA value
d2 PS value
d3 Channel
d4 NPC number
d5 Unit number

- 332 Odd NPC receive ams 1 value differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 Channel
 - d4 NPC number
 - d5 Unit number
- 333 Odd NPC receive ams 2 value differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 Channel
 - d4 NPC number
 - d5 Unit number
- 334 Odd NPC transmit ams 0 value differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 Channel
 - d4 NPC number
 - d5 Unit number
- 335 Odd NPC transmit ams 1 value differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 Channel
 - d4 NPC number
 - d5 Unit number
- 336 Odd NPC transmit ams 2 value differs b/t UA DB and PS DB
- d0 Not used
 - d1 UA value
 - d2 PS value
 - d3 Channel
 - d4 NPC number
 - d5 Unit number

- 351 E1 Channel Controller Data - Special Function A
 - d0 Not used
 - d1 HMXR register value
 - d2 PSWDB value
 - d3 NPC number
 - d4 HMXR number
 - d5 Unit number

- 352 E1 Channel Controller Data - Special Function B
 - d0 Not used
 - d1 HMXR register value
 - d2 PSWDB value
 - d3 NPC number
 - d4 HMXR number
 - d5 Unit number

- 353 E1 Channel Controller Data - AMS[512] Array Mismatch
 - d0 Index to instruction RAM arrays
 - d1 HMXR register value
 - d2 PSWDB value
 - d3 NPC number
 - d4 HMXR number
 - d5 Unit number

- 358 E1 Transceiver Data - Spare Bit Provisioning
 - d0 Not used
 - d1 HMXR register value
 - d2 PSWDB value
 - d3 Transceiver number
 - d4 HMXR number
 - d5 Unit number

- 359 E1 Transceiver Data - Link Option 1
 - d0 Not used
 - d1 HMXR register value
 - d2 PSWDB value
 - d3 Transceiver number
 - d4 HMXR number
 - d5 Unit number

360 E1 Transceiver Data - Transmit TS16 Spare Bits
d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Transceiver number
d4 HMXR number
d5 Unit number

361 E1 Transceiver Data - TS0 Cross-Connect Transmit 0
d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Transceiver number
d4 HMXR number
d5 Unit number

362 E1 Transceiver Data - TS0 Cross-Connect Transmit 1
d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Transceiver number
d4 HMXR number
d5 Unit number

363 E1 Transceiver Data - TS0 Cross-Connect Transmit 2
d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Transceiver number
d4 HMXR number
d5 Unit number

364 E1 Transceiver Data - TS0 Cross-Connect Transmit 3
d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Transceiver number
d4 HMXR number
d5 Unit number

365	E1 Transceiver Data - Link Action-FP Control
d0	Not used
d1	HMXR register value
d2	PSWDB value
d3	Transceiver number
d4	HMXR number
d5	Unit number
366	E1 Transceiver Data - Consequent Action Option
d0	Not used
d1	HMXR register value
d2	PSWDB value
d3	Transceiver number
d4	HMXR number
d5	Unit number
367	E1 Transceiver Data - System RCV Data Option
d0	Not used
d1	HMXR register value
d2	PSWDB value
d3	Transceiver number
d4	HMXR number
d5	Unit number
368	E1 Transceiver Data - TS0 Receive 0
d0	Not used
d1	HMXR register value
d2	PSWDB value
d3	Transceiver number
d4	HMXR number
d5	Unit number
369	E1 Transceiver Data - TS0 Receive 1
d0	Not used
d1	HMXR register value
d2	PSWDB value
d3	Transceiver number
d4	HMXR number
d5	Unit number

370 E1 Transceiver Data - TS0 Receive 2

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Transceiver number
d4 HMXR number
d5 Unit number

371 E1 Transceiver Data - TS0 Receive 3

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Transceiver number
d4 HMXR number
d5 Unit number

372 E1 Transceiver Data - Link Option 3

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Transceiver number
d4 HMXR number
d5 Unit number

373 E1 Transceiver Data - Link Option 2

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Transceiver number
d4 HMXR number
d5 Unit number

374 E1 Transceiver Data - Force Reframe

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Transceiver number
d4 HMXR number
d5 Unit number

375 E1 Transceiver Data - Parity Block Fail Options

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Transceiver number
d4 HMXR number
d5 Unit number

376 M13 Data - DS3 Framer Configuration

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Not used
d4 HMXR number
d5 Unit number

377 M13 Data - MX23 Configuration

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Not used
d4 HMXR number
d5 Unit number

378 M13 Data - Master Loopback Configuration

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Not used
d4 HMXR number
d5 Unit number

379 M13 Data - DS2 Framer Configuration

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 DS2 number
d4 HMXR number
d5 Unit number

380 M13 Data - DS2 MX12 Configuration and Control

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 DS2 number
d4 HMXR number
d5 Unit number

381 M13 Data - DS2 MX12 AIS Insert

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 DS2 number
d4 HMXR number
d5 Unit number

382 M13 Data - DS2 MX12 Loopback Activate

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 DS2 number
d4 HMXR number
d5 Unit number

383 M13 Data - MX23 Demux AIS Insert

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Not used
d4 HMXR number
d5 Unit number

384 M13 Data - DS3 TRAN Configuration

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 Not used
d4 HMXR number
d5 Unit number

390 MXR Protection Switch Database does not match Shared RAM

d0 Not used
d1 HMXR register value
d2 PSWDB value
d3 NPC number
d4 HMXR number
d5 Unit number

3A7 E1 Opaque Data - E1 Opaque Data Array

d0 Index to opaque data
d1 HMXR register value
d2 PSWDB value
d3 NPC number
d4 HMXR number
d5 Unit number

3B0 Fully-connected pseudo-channels not actually cross-connected

Two channels are in a fully-connected pseudo-channel entry,
but are not actually cross-connected to each other.

d0 Unused
d1 Unused
d2 Pseudo-channel number Low Byte
d3 Pseudo-channel number High Byte
d4 Channel number on NPC 2
d5 NPC number 2 Low Byte
d6 NPC number 2 High Byte
d7 Channel number on NPC 1
d8 NPC number 1 Low Byte
d9 NPC number 1 High Byte

3B1 Duplicate NPC/channel number in pseudo-channel connection.

Two pseudo-channel entries contain the same NPC number and
channel number.

d0 Unused
d1 Unused
d2 Unused
d3 Pseudo-channel 2 Low Byte
d4 Pseudo-channel 2 High byte
d5 Pseudo-channel 1 Low Byte
d6 Pseudo-channel 1 High byte
d7 Channel number
d8 NPC number Low Byte
d9 NPC number High Byte

3B2 Reserved pseudo-channel already involved in a cross-connect

A pseudo-channel entry is in the reserved state and the NPC and channel present are already involved in an actual cross-connect.

- d0 Unused
- d1 Unused
- d2 Pseudo-channel number Low Byte
- d3 Pseudo-channel number High byte
- d4 Channel number cross-connected to
- d5 NPC number cross-connected to Low Byte
- d6 NPC number cross-connected to High Byte
- d7 Channel number in pseudo-channel entry
- d8 NPC number in pseudo-channel entry Low Byte
- d9 NPC number in pseudo-channel entry High Byte

3B3 The DSP Platform software version is inconsistent.

The DSP Platform software version stored in the main controller does not match that stored in the hardware.

- d0 Not used
- d1 Data stored in the database
- d2 Data stored in the hardware
- d3 Index - the reason of failure
 - 1 - DSPP software generic is inconsistent
 - 2 - DSPP software issue is inconsistent
 - 3 - DSPP software release is inconsistent
 - 4 - DSPP software year load is inconsistent
 - 5 - CP code version is inconsistent
 - 6 - DSP code version is inconsistent
- d4 NPC number
- d5 UNIT number

3B4 The DSP Platform application database does not match that stored in hardware

- d0 Not used
- d2 Not used
- d3 Not used
- d4 NPC number of circuit pack that is running the application
- d5 UNIT number

FRADTS,MC,DGN

FRAME AUDITS MAIN CONTROLLER

Explanation Of Command

This autonomous output message from frame audits indicates that a diagnostic test was run on the main controller (MC) but failed.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.82004]

I hh:mm:ss xy,ww FRADTS MC DGN <tt> COMPL

Explanation Of Parameters

MC - Main controller

DGN - Diagnose

tt - Entity identifier

tt *Explanation*

BX Bus Extender RAM

CI Communications Interface

EBX Expanded Bus Extender RAM

EMTC Expanded Maintenance Circuit

MP Main Processor

MTC Maintenance Circuit

PMEM Primary Memory Device

SMEM Secondary Memory Device

Contents

GRTH,FRAME,CHAR,UID	13-2
■ Explanation Of Command	13-2
■ Command	13-2
■ Completion Message	13-3
■ Denial Message	13-3
■ Autonomous Message	13-3
■ Explanation Of Parameters	13-3
GRTH,NPC,NPCTG	13-5
■ Explanation Of Command	13-5
■ Command	13-5
■ Nonhierarchical	13-5
■ Hierarchical	13-5
■ Completion Message	13-5
■ Nonhierarchical	13-5
■ Hierarchical	13-6
■ Denial Message	13-6
■ Nonhierarchical	13-6
■ Hierarchical	13-6
■ Autonomous Message	13-6
■ Explanation Of Parameters	13-6
GRTH,NPC,NPCTP	13-12
■ Explanation Of Command	13-12
■ Command	13-12
■ Nonhierarchical	13-12
■ Hierarchical	13-12
■ Completion Message	13-12

Contents

■ Nonhierarchical	13-12
■ Hierarchical	13-13
■ Denial Message	13-13
■ Nonhierarchical	13-13
■ Hierarchical	13-13
■ Autonomous Message	13-13
■ Explanation Of Parameters	13-13
GRTH,NPC,TYPE	13-17
■ Explanation Of Command	13-17
■ Command	13-18
■ Nonhierarchical	13-18
■ Hierarchical	13-18
■ Completion Message	13-18
■ Nonhierarchical	13-18
■ Hierarchical	13-18
■ Denial Message	13-18
■ Nonhierarchical	13-18
■ Hierarchical	13-19
■ Autonomous Message	13-19
■ Explanation Of Parameters	13-19
GRTH,NPC,TYPE,CBTIMER	13-24
■ Explanation Of Command	13-24
■ Command	13-24
■ Nonhierarchical	13-24
■ Hierarchical	13-24
■ Completion Message	13-25
■ Nonhierarchical	13-25
■ Hierarchical	13-25
■ Denial Message	13-25
■ Nonhierarchical	13-25
■ Hierarchical	13-25
■ Autonomous Message	13-25
■ Explanation Of Parameters	13-26
GRTH,NPC,TYPE,OPTS,IW,X	13-31
■ Explanation Of Command	13-31
■ Command	13-31
■ Nonhierarchical	13-31
■ Hierarchical	13-32

Contents

■ Completion Message	13-32
■ Nonhierarchical	13-32
■ Hierarchical	13-32
■ Denial Message	13-32
■ Nonhierarchical	13-32
■ Hierarchical	13-33
■ Autonomous Message	13-33
■ Explanation Of Parameters	13-33
GRTH,NPC,TYPE,OPTS,IW,X,INCL,AIS,INFO	13-40
■ Explanation Of Command	13-40
■ Command	13-42
■ Nonhierarchical	13-42
■ Hierarchical	13-42
■ Completion Message	13-43
■ Nonhierarchical	13-43
■ Hierarchical	13-45
■ Denial Message	13-46
■ Nonhierarchical	13-46
■ Hierarchical	13-47
■ Autonomous Message	13-47
■ Explanation Of Parameters	13-47
GRTH,NPC,TYPE,OPTS,IW,X,INCL,AIS,INFO	13-62
■ Explanation Of Command	13-62
■ Command	13-63
■ Nonhierarchical	13-63
■ Hierarchical	13-63
■ Completion Message	13-64
■ Nonhierarchical	13-64
■ Hierarchical	13-64
■ Denial Message	13-64
■ Nonhierarchical	13-64
■ Hierarchical	13-65
■ Autonomous Message	13-65
■ Explanation Of Parameters	13-65
GRTH,SYNC,TB,TYPE	13-75
■ Explanation Of Command	13-75
■ Command	13-75
■ Completion Message	13-75

Contents

■ Denial Message	13-75
■ Autonomous Message	13-75
■ Explanation Of Parameters	13-76
GRTH,SYNC,TLI,TYPE	13-77
■ Explanation Of Command	13-77
■ Command	13-77
■ Completion Message	13-77
■ Denial Message	13-77
■ Autonomous Message	13-77
■ Explanation Of Parameters	13-78
GRTH,SYNC,TLI,TYPE,SSP,SRC	13-79
■ Explanation Of Command	13-79
■ Command	13-79
■ Completion Message	13-79
■ Denial Message	13-79
■ Autonomous Message	13-80
■ Explanation Of Parameters	13-80
GRTH,TG,NPCTG	13-83
■ Explanation Of Command	13-83
■ Command	13-83
■ Completion Message	13-83
■ Denial Message	13-83
■ Autonomous Message	13-84
■ Explanation Of Parameters	13-84
GRTH,TP	13-86
■ Explanation Of Command	13-86
■ Command	13-86
■ Completion Message	13-86
■ Denial Message	13-87
■ Autonomous Message	13-87
■ Explanation Of Parameters	13-87
GRTH,UNIT,FTMI,EQL	13-90
■ Explanation Of Command	13-90
■ Command	13-90
■ Completion Message	13-90
■ Denial Message	13-90
■ Autonomous Message	13-90

Contents

■ Explanation Of Parameters	13-91
GRTH,UNIT,MIU,TYPE	13-93
■ Explanation Of Command	13-93
■ Command	13-93
■ Completion Message	13-93
■ Denial Message	13-93
■ Autonomous Message	13-93
■ Explanation Of Parameters	13-94
GRTH,UNIT,MXR,TYPE,BERM,BERT,LBO	13-95
■ Explanation Of Command	13-95
■ Command	13-95
■ Completion Message	13-95
■ Denial Message	13-96
■ Autonomous Message	13-96
■ Explanation Of Parameters	13-96
GRTH,UNIT,TYPE,CONN	13-99
■ Explanation Of Command	13-99
■ Command	13-100
■ Completion Message	13-100
■ Denial Message	13-101
■ Autonomous Message	13-101
■ Explanation Of Parameters	13-101

GRTH

GRTH

This section documents the **GRTH** command.

GRTH,FRAME,CHAR,UID

GROWTH FRAME

Explanation Of Command

This command allows the optional frame identifier and unique frame identifier to be set.

Until this command is used, the frame identifier defaults to 00.

⇒ NOTE:

Note: If the frame identifier is protected (hard wired), it cannot be changed by this command.

The **CHAR** field determines the number of characters in the frame identifier (2 is the default).

For DACS II Capacity Expansion Frames (CEF), this command also results in the provisioning of virtual NPCs [9]961, [9]962, [9]963, [9]964, [9]965, and [9]966 (99101, 99102, 99103, 99104, 99105, and 99106 in the hierarchical NPC numbering format), default type VI100.

For Non-CEF frames, this command also results in the provisioning of virtual NPCs 961 and 962 (99101 and 99102 in the hierarchical NPC numbering format), default type VI100. This NPC type may be changed if necessary by the **CHG : NPC, TYPE** command (Message 38211).

Command

[I.30101]

GRTH:FRM xy,SEQ ww:FRAME fg[,CHAR m][,UID <uid>]!

Completion Message

[O.30101]

M hh:mm:ss fg,ww n[vv] GRTH FRAME fg CHAR m UID [<uid>] COMPL

Denial Message

[O.30101.01]

M hh:mm:ss xy,ww n[vv] GRTH FRAME fg CHAR m UID [<uid>] \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FRAME - Frame

fg - Frame identifier. (alphanumeric, 01 through ZZ).

The frame identifier is required. If the disk-stored frame identifier is 00, then this command sets the frame identifier to fg. Until the GRTH::FRAME command is used, the frame number defaults to 00.

The frame identifier is used in input and output messages.

CHAR - Character

m - The number of characters in the frame identifier. (2 or 3).

UID - Unique identifier

uid - Unique frame identifier. (1 to 20 alphanumeric characters)

If the UID field is entered, the unique frame identifier will be assigned the value of uid.

cc - Hexadecimal condition code

cc *Explanation*

81 Frame ID is protected

GRTH,NPC,NPCTG

GROWTH TEST-ACCESS GROUP NPC

Explanation Of Command

This command is used to designate a network processing circuit (NPC) as a test-access group NPC (NPCTG).

To provision an individual test-access group (TG) use the GRTH::TG,NPCTG command

Command

Nonhierarchical

[I.31401]

GRTH:FRM xy,SEQ ww:NPC [s]abc,NPCTG rrr!

Hierarchical

[I.31401]

GRTH:FRM xy,SEQ ww:NPC uvmnp,NPCTG rrr!

Completion Message

Nonhierarchical

[O.31401]

M hh:mm:ss xy,ww n[vv] GRTH NPC [s]abc NPCTG rrr COMPL

Hierarchical

[O.31401]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvmnp NPCTG rrr COMPL

Denial Message

Nonhierarchical

[O.31401.01]

M hh:mm:ss xy,ww n[vv] GRTH NPC [s]abc NPCTG rrr COND cc DNY

Hierarchical

[O.31401.01]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvmnp NPCTG rrr COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit	Unit	Unit	Unit
13	14	15	16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

NPCTG - NPC (for) test group

rrr - Test-access Group NPC number (1 through 400)
NPC used as a test-access group NPC.

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

- 01** Subject entity is equipped
- 15** NPC is unequipped
- 26** NPC type error
- 83** Attention: preceding ccode 83 is an anomaly - see problem list
- 85** NPC has been designated as NPCTP
- 10** NPC out of service or failed
- 57** Designated TG or circuit to be tested in process of being rolled
- A1** NPC has been designated as NPCTG
- A2** All channels assigned, cannot be grown as NPCTG

GRTH,NPC,NPCTP

GROWTH TEST PORT NPC

Explanation Of Command

This message requests the designation of a Network Processing Circuit as a test port NPC.

The growth of an individual test port is described in GRTH,TP.

Command

Nonhierarchical

[I.31381]

GRTH:FRM xy,SEQ ww:NPC [s]abc,NPCTP n!

Hierarchical

[I.31381]

GRTH:FRM xy,SEQ ww:NPC uvmnp,NPCTP n!

Completion Message

Nonhierarchical

[O.31381]

M hh:mm:ss xy,ww n[vv] GRTH NPC [s]abc NPCTP n TPS kk-mm\
COMPL

Hierarchical

[O.31381]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvmnp NPCTP n TPS kk-mm\
COMPL

Denial Message

Nonhierarchical

[O.31381.01]

M hh:mm:ss xy,ww n[vv] GRTH NPC [s]abc NPCTP n COND cc DNY

Hierarchical

[O.31381.01]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvmnp NPCTP n COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit Module NPC
01-16 1-4 01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit Module NPC
01-16 1-6 01-28

NPCTP - NPC (for) test ports

n - Test Port NPC number (must be in the range from 1 to 8).

TPS - Test Ports

kk, mm - Test port numbers

<i>n</i>	<i>kk</i>	<i>mm</i>
1	01	12
2	13	24
3	25	36
4	37	48
5	49	60
6	61	72
7	73	84
8	85	96

cc - Hexadecimal condition code

cc *Explanation*

00	No conditions
01	Subject entity is equipped
15	NPC is unequipped
26	NPC type error
2F	Channels assigned, cannot be grown as test port
83	Attention: preceding ccode 83 is an anomaly - see problem list
85	NPC has been designated as NPCTP
19	Test ports must be on CAS
FF	Termination is in process of being rolled
A1	NPC has been designated as NPCTG

GRTH,NPC,TYPE

PROVISION DIGITAL SIGNAL PROCESSING PLATFORM NPC

Explanation Of Command

This command is used to request the provisioning of a Digital Signal Processing Platform (DSPP) circuit pack. A DSPP circuit pack is used to run one of the following applications:

1. The X.50/X.57 International Subrate application, which has the type field SD111.
2. The Digital Multipoint Bridge (DMB) application, which has the type field SD311 (this application is similar to the DMB feature that may be provisioned in the DSPU).
3. The DDS Subrate and Multipoint Junction Unit application, which has the type field SD411 (this application is similar to the SRM and MJU features that may be provisioned in the DSPU). This application supports 19.2 MJU circuits, which the DSPU MJU does not support.
4. Any future application, which has a type field of the form SDxyz.

The DSPP circuit pack may be provisioned in an FTU, IFTU, or IFTU2. In those units it may be provisioned in a North American module or in an International module. When being provisioned in an International module a full complement of 64 channels are usable, unless the application itself restricts the number of channels. A total number of 16 DSPP circuit packs may be provisioned in an International module. When being provisioned in a North American module a maximum number of 50 channels are available to the application running on the circuit pack. A total of 20 DSPP circuit packs may be provisioned in a North American module. Customers running a North American DACS II installation may want to set one or more FTU (IFTU or IFTU2) modules aside and provision them as International modules for running the DSPP circuit packs with a maximum of 64 channels.

Only odd numbered DSPP NPCs may be provisioned. The next higher even numbered NPC is not available for other NPC types and must be unequipped when an SDxyz NPC is provisioned. When specifying a range of NPCs to be provisioned the beginning and end of the range should be specified as odd numbers.

DSPP applications are separately orderable products and are shipped with their own documentation. See command I.55721 INSTALL on how to install an application.

Command

Nonhierarchical

[I.31331]

GRTH:[FRM xy,SEQ ww]:NPC [s]abc[-[t]def],TYPE mnxyz!

Hierarchical

[I.31331]

GRTH:[FRM xy,SEQ ww]:NPC uvmnp[-wxkqr],TYPE mnxyz!

Completion Message

Nonhierarchical

[O.31331]

M hh:mm:ss xy,ww n[vv] GRTH NPC [s]abc[-[t]def] TYPE mnxyz COMPL

Hierarchical

[O.31331]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvmnp[-wxkqr] TYPE mnxyz COMPL

Denial Message

Nonhierarchical

[O.31331.01]

M hh:mm:ss xy,ww n[vv] GRTH NPC [s]abc[-[t]def] TYPE mnxyz EQD DNY

[O.31331.02]

M hh:mm:ss xy,ww n[vv] GRTH NPC [s]abc[-[t]def] TYPE mnxyz COND cc DNY

Hierarchical

[O.31331.01]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvmnp[-wxkqr] TYPE mnxyz EQD DNY

[O.31331.02]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvmnp[-wxkqr] TYPE mnxyz COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network Processing Circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

[t]def - The 3- or 4-digit nonhierarchical NPC number designating the end of a range specification

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Hierarchical NPC number

wxkqr - Hierarchical NPC number designating the end of a range specification

uv,wx - Unit number

m,k - Module number

np,qr - NPC number within the module

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

mnxyz - NPC type

mnxyz *Explanation*

SD111 X.50/X.57 International Subrate application

SD311 Digital Multipoint Bridge (DMB) application

SD411 DDS Subrate and MJU application

SDxyz Any future DSPP application

cc - Hexadecimal condition code

cc *Explanation*

26 NPC type error

F2 Invalid NPC number specified

A1 The parameter specified does not match with the NPC type

GRTH,NPC,TYPE,CBTIMER

PROVISION DIGITAL SIGNAL PROCESSING UNIT NPC

Explanation Of Command

This command requests the provisioning of a non-FTU (facility terminating unit) type network processing circuit (NPC). There are two NPCs in a non-FTU circuit pack. Although only one network processing circuit is specified in the command, two NPCs will be provisioned; NPCs [s]abc and [s]abc+1. Provisioning of both NPCs will be reported in the output message.

For the Subrate Feature, there is only one network processing circuit per circuit pack.

The growth command results in the provisioning of all NPCs in the circuit pack on both duplicated sides. For subrate circuit packs, there is only one NPC per circuit pack.

Command

Nonhierarchical

[I.31351]

GRTH:FRM xy,SEQ ww:NPC [s]abc,TYPE mnxyz[,CBTIMER [t]v]!

Hierarchical

[I.31351]

GRTH:FRM xy,SEQ ww:NPC uvmnp,TYPE mnxyz[,CBTIMER [t]v]!

Completion Message

Nonhierarchical

[O.31351]

M hh:mm:ss xy,ww n[vv] GRTH NPC [s]abc TYPE mnxyz [CBTIMER [t]v]\
COMPL

Hierarchical

[O.31351]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvmnp TYPE mnxyz [CBTIMER [t]v]\
COMPL

Denial Message

Nonhierarchical

[O.31351.01]

M hh:mm:ss xy,ww n[vv] GRTH NPC [s]abc TYPE mnxyz [CBTIMER [t]v] EQD DNY

[O.31351.02]

M hh:mm:ss xy,ww n[vv] GRTH NPC [s]abc TYPE mnxyz COND cc [CBTIMER [t]v]\
DNY

Hierarchical

[O.31351.01]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvmnp TYPE mnxyz [CBTIMER [t]v] EQD DNY

[O.31351.02]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvmnp TYPE mnxyz [CBTIMER [t]v] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical NPC number.

If NPC numbers are expressed in three digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

uvmp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The valid NPC numbers are:

MB, SR, and MJ type numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

mnxyz - NPC type

mnxyz Explanation

MB100 Digital Multipoint Bridge
MJ100 Multipoint Junction Unit
SR100 Subrate Multiplexer

[t]def - Nonhierarchical NPC numbers applicable only to MBxyz type NPCs.

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

uvmqr - Hierarchical NPC numbers applicable only to MBxyz type NPCs. The valid NPC numbers are:

CBTIMER

- C-bit timer; can only be used with CB10z NPC types.

[t]v - A timer value 1-10

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

EQD - Equipped

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

9A hub id not set when MJU pack grown

F3 Maximum number of CPRs have already been grown for this unit

GRTH,NPC,TYPE,OPTS,IW,X

PROVISION NPC TYPE DS

Explanation Of Command

This SLC® 96 carrier command requests the equipage of network processing circuit (NPC) type **DSxyz**. It may also be used to request the equipage of a range of NPCs. Arguments **x**, **y**, and **z** following **DS** specify the multiframe format for the digroup, line and signaling format, and counting sequence format.

The **OPTS** keyword is used to select prestored values for facility performance parameter alarm thresholds from a secondary data base using the variables **rr** and **m**. **rr** specifies the alarm threshold to be set and **m** selects from the secondary data base one of the prestored values of the given threshold. Values of **rr** range from 01 through 10. There are four values stored for each of the ten facility performance parameters. All unspecified options will be set to the default value 0.

A special code, called the disconnect code (DCC), is transmitted by this NPC on unassigned channels. This code is specified by **pq** in the optional field **IW X'pq**. The default is the unassigned channel code with the value **X'7F**. The DCC may be assigned any 2-digit hexadecimal value.

The execution of this command may be stopped by entering **ABT**.

Command

Nonhierarchical

[I.31371]

```
GRTH:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TYPE DSxyz \  
[,OPTS(rr/m [,rr/m][...])][,IW X'pq]!
```

Hierarchical

[I.31371]

GRTH:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],TYPE DSxyz \
[,OPTS(rr/m [,rr/m][...]))[,IW X'pq]!

Completion Message

Nonhierarchical

[O.31371]

M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl TYPE DSxyz IW pq \
4 LN MSG:

	SLIP		BER		ERS	SERS	COFA		SANE	SAFE	
THRESHOLDS	mmm	nnn	p	q	rrrrr	sss	ttt	uuu	xxxxx	zzzzz	
OPTIONS	e	f	g	h	i	j	k	l	v	w	COMPL

Hierarchical

[O.31371]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl TYPE DSxyz IW pq \
4 LN MSG:

	SLIP		BER		ERS	SERS	COFA		SANE	SAFE	
THRESHOLDS	mmm	nnn	p	q	rrrrr	sss	ttt	uuu	xxxxx	zzzzz	
OPTIONS	e	f	g	h	i	j	k	l	v	w	COMPL

Denial Message

Nonhierarchical

[O.31371.01]

M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl[-[t]mno] \
TYPE DSxyz [ss/n][IW pq] COND cc DNY

[O.31371.02]

M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl[-[t]mno] \
TYPE DSxyz EQD DNY

Hierarchical

[O.31371.01]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl[-uvmno] \
TYPE DSxyz [ss/n][IW pq] COND cc DNY

[O.31371.02]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl[-uvmno] \
TYPE DSxyz EQD DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number the first NPC number of a range.

[t]def - The 3- or 4-digit nonhierarchical NPC number the last NPC number of a range.

If NPC numbers are expressed in three digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

uvmnp - Hierarchical NPC number, the first NPC number of a range.

uvkqr - Hierarchical NPC number, the last NPC number of a range.

uv - Unit number

m, k - Module number

np, qr - NPC number within the module

The allowable value are presented below:

DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TYPE - Type

DS-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	Not assigned
4	Not assigned
5	Not assigned
6	SLC® 96 carrier Fs
7	SLC 5 carrier ESF with data link
8-9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	Zero code suppression (ZCS)
1	No zero code suppression (NZCS)
2	Bipolar with 8 zero substitution (B8ZS)
3-9	Not assigned

z - Counting sequence format

z	<i>Explanation</i>
0	SLC 96 carrier Mode III D4 counting sequence
1	SLC 96 carrier Mode III D1D counting sequence
2	SLC 96 carrier Mode I D1D counting sequence
3	SLC Series 5 carrier D4 counting sequence
4-9	Not assigned

OPTS - Options

rr - Facility performance parameter number

Variable rr specifies the parameter whose alarm threshold is being selected.

m - Facility performance parameter threshold index (0 through 3)

Variable m is used to select threshold values previously programmed for rr. The default threshold value, the value selected by m=0, for each parameter is shown in the table below under the column heading "Default Threshold Value". Threshold values selected by m=1 through m=3 must exist, that is, must have been programmed, prior to being selected. These other thresholds can be set by using the CHG::SETOP (I.38201) command. Thresholds of all unspecified parameters will be set to the default value associated with m=0. The options field must not be given without the NPC type field.

For DE, TE, or DS type NPCs:

For DE type NPCs, parameters with values rr = 1 through 8 are valid.
For DS type NPCs, parameters with values rr = 1 through 10 are valid.
For TE type NPCs, parameters with values rr = 1 through 8 are valid.
For Clear-DS1 DE type NPCs, parameters with values rr = 1 through 4 are valid.
For Clear-DS1 TE type NPCs, parameters with values rr = 1 through 2 are valid.

rr	Parameter	Threshold Value Range	Default Threshold Value
01	Slip major	000 to 255	255
02	Slip minor	000 to 255	4
03	Bit Error Rate major	1E-3* to 1E-6 [†]	1E-3*
04	Bit Error Rate minor	1E-3* to 1E-6 [†]	1E-6
05	Errored Seconds [‡]	00001 to 65535	864
06	Severely Errored Seconds [‡]	001 to 255	225
07	Change of Frame Alignment major	001 to 511	511
08	Change of Frame Alignment minor	001 to 255	17
09	Shelf Alarm Near End(SANE)§	00001 to 65535	00000
10	Shelf Alarm Far End(SAFE)§	00001 to 65535	00000

* 4 for clear-DS1 NPCs or DS type NPCs (default)

[†] 7 on DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing

[‡] Only applicable to DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing

§ Applicable only to DS type NPCs

Note 1: Major thresholds must be greater than minor thresholds.

Note 2: For Bit Error Rates, enter only the power of 10 (DACS assumes its sign is negative). For example, for a BER of 10^{-3} (.001), enter 3.

Note 3: Slip major and Slip minor threshold crossing alarms may be disabled by programming threshold values of zero for the respective parameters.

Note 3: The SANE and SAFE parameters are not applicable to DS1yz and DS7yz type NPCs.

Note 4: Except for BER, major thresholds may not be equal to or less than the minor thresholds. The BER major threshold can be equal to the BER minor threshold.

Note: If the queried NPC can not be accessed for some reason, for example because the Facility Terminating Module is not equipped or the FTMI or Unit Controller is out of service, then the NPC's parameter count fields are printed as a string of dashes to indicate that the counts are not available. The parameter thresholds and options are still correctly output in this case.

In addition, some parameters are not applicable to all NPCs. Certain parameters may or may not be collected based on NPC type. In the cases where specific parameters do not apply to the queried NPC, the respective parameter count fields, threshold values and threshold options are all displayed as a string of dashes.

IW	- Insertion word
pq	- Insertion word value (hexadecimal) Variable pq is a user defined insertion word. The default value of pq is 7F. The insertion word FF is recommended for unconnected channels in the SLC® interface and CPI applications.
[s]jkl	- The 3- or 4-digit nonhierarchical NPC number ($[s]abc \leq [s]jkl \leq [t]def$)
[t]mno	- The 3- or 4-digit nonhierarchical DS TYPE NPC number denoting the end of a range ($[s]jkl \leq [t]mno \leq [t]def$)
uvjkl	- Hierarchical DS TYPE NPC number ($uvmnp \leq uvjkl \leq uvmno$)
uvmno	- Hierarchical DS TYPE NPC number ($uvjkl \leq uvmno \leq uvkqr$)
mmm	- SLIP major alarm threshold (0 through 255)
nnn	- SLIP minor alarm threshold (0 through 255)
e	- SLIP major option selection (0 through 3)
f	- SLIP minor option selection (0 through 3)
p	- BER major alarm threshold (4 through 6)
q	- BER minor alarm threshold (4 through 6)
g	- BER major option selection (0 through 3)
h	- BER minor option selection (0 through 3)
rrrrr	- ERS threshold (1 through 65535)
i	- ERS option selection (0 through 3)
sss	- SERS threshold (1 through 255)
j	- SERS option selection (0 through 3)

ttt - COFA major alarm threshold (1 through 511)
uuu - COFA minor alarm threshold (1 through 255)
k - COFA major option selection (0 through 3)
l - COFA minor option selection (0 through 3)

xxxxx - SANE threshold (0 through 65535)
v - SANE option selection (0 through 3)

zzzzz - SAFE threshold (0 through 65535)
w - SAFE option selection (0 through 3)

ss/n - First improper values of "rr/m" for which message is denied.

cc - Hexadecimal condition code

cc *Explanation*

00 No conditions
10 Unit is not equipped
11 UC is out of service
12 UC is in service but failed
13 FTMI is not equipped
20 Option rr/m has not been set up on 2nd database
21 Minor $\geq$ major for SLIP opt
22 Minor $\leq$ major for BER opt
23 Minor $\geq$ major for COFA opt
24 Unit type error
34 NPC type option xyz is unassigned
83 NPC type is inconsistent with FTMI type
84 Incompatible types of NPCs in a DDC
7C Different DSxyz types are used for DGA/DGP on same DDC for Mode I
7F NPC is not added
8A x & z parameters on DSxyz are inconsistent
BE NPC type option Y is invalid for SLC-96 NPC
FD NPC range crosses unit boundary
1A The facility parameter not programmable for specified x or z parameter
0A Minor Slip threshold disabled before Major Slip threshold

GRTH,NPC,TYPE,OPTS,IW,X,INCL,AIS,INFO

GROWTH ANSI NPC

Explanation Of Command

This command provisions type D_{Axyz} Network Processing Circuits (NPCs) in DACS II Facility Terminating Units and type T_{Axyz} (NPCs) in DACS II DS3 Units. A single NPC or a range of NPCs may be provisioned with one input command.

This command also provisions the alert thresholds for DS1 facility performance parameters on the NPC. Default threshold values will be programmed if the optional parameter threshold selection arguments are not specified. The parameter threshold selection arguments are indices into the DACS II threshold database, which must be preconfigured by the user.

The maximum length of this input command must not exceed 208 characters. Any input command longer than 208 characters is treated as a syntax error by DACS II. Options that do not fit into this GRTH command can be specified in additional commands.

An idle code is transmitted on the NPC's unassigned DS0 channels. The idle code is specified by **pq** in the optional field **Iw X'pq** (in this application pq is called the growth insertion word). The growth insertion word may be assigned a 2-digit hexadecimal value. If **pq** is not specified, it will default to the hexadecimal value 7F if the NPC is provisioned with D4 or ESF framing, and to the hexadecimal value 18 if the NPC is provisioned with T1DM framing.

As a protection to users, the INCL keyword must be added to provision an NPC with D4 framing and an Insertion Word with bit 2 equal to zero. NPCs provisioned in the D4 format (DA1yz/TA1yz) transmit a DS1 yellow alarm by setting bit 2 to zero in all 24 DS0 channels. If the Insertion Word is unknowingly provisioned in this manner, the NPC will transmit a D4 yellow alarm signal when it is restored. The D4 yellow alarm is generated by any Insertion Word with the binary value a0cdefgh, where the letters a-h represent the eight bits of the binary word. The D4 yellow alarm is not generated by an Insertion Word with a binary value a1cdefgh.

For clear DS1 NPCs, the insertion word option is NOT available and the message will be denied if this option is entered. The alarm indication signal is transmitted in the disconnected or idle state.

Since a growth command which addresses a range of NPCs can take considerable time to complete, the ABT command is allowed with this message. If the ABT command is entered, DACS II will stop execution on the current NPC growth and will report what has been completed.

One output message is printed for each NPC requested and successfully provisioned.

Provisioning commands where the specified NPC range crosses a Unit boundary will be denied.

When a provisioning command addressing a range of NPCs is denied for successive NPCs in the range for the same reason, a summary denial message will be output, giving the range of NPC numbers denied and the reason for the denial.

When a provisioning command addressing a range of NPCs within a unit crosses a facility terminating module (FTM) boundary, if the FTM is unequipped or provisioned as a CEPT module, then the FTM will be skipped as a whole, with a summary denial message, as noted below.

- If the type field is specified, and it is inconsistent with the first FTM specified or the first FTM specified is unequipped, the entire command is denied. Otherwise, the specified type field is applied to the entire NPC range.
- If the type field is omitted, the NPC type will default to the type of the first FTM, either domestic or CEPT.

Whether or not the type field is specified, if an FTM, beyond the first one addressed, is of a different type, that entire FTM will be denied.

The execution of the normal completions, or of denials for a reason other than diagnostic failures, then resumes at the next NPC and continues until the end of the range.

A summary denial message will not be issued for denial of range NPC RESTORE commands if the reason is an NPC diagnostic failure. In this case, there is one output

message for each NPC in the range.

Command

Nonhierarchical

[l.31341]

```
GRTH:FRM xy,SEQ ww:NPC [s]abc[-[t]def],TYPE mnxyz[,OPTS(rr/m\  
[,rr/m][...]))[,IW X'pq[,INCL]][,AIS {INFO|MJ|MN}][,PL {ENA|DSA}]!
```

Hierarchical

[l.31341]

```
GRTH:FRM xy,SEQ ww:NPC uvmnp[-uvkqr],TYPE mnxyz[,OPTS(rr/m\  
[,rr/m][...]))[,IW X'pq[,INCL]][,AIS {INFO|MJ|MN}][,PL {ENA|DSA}]!
```


Completion Message

Nonhierarchical

[O.31341]

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl TYPE mnxyz IW pq[ INCL]\
[ AIS {INFO|MJ|MN}}[ PL {ENA|DSA}} 4 LN MSG:
DAILY NE      CVP      ESP      SESP      SEFS      CSSP      UASP      CVL      ESL      SESL
THRESHOLDS    aaaaaaaa bbbbbb cccccc dddddd eeeee   fffff   gggggggg hhhhh   iiiii
OPTIONS       a         b         c         d         e         f         g         h         i         EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl TYPE mnxyz IW pq[ INCL]\
[ AIS {INFO|MJ|MN}}[ PL {ENA|DSA}} 4 LN MSG:
DAILY FE      CVP      ESP      SESP      SEFS      CSSP      UASP      ESL
THRESHOLDS    jjjjjjjj kkkkkk lllll  mmmmm  nnnnn  ooooo  ppppp
OPTIONS       j         k         l         m         n         o         p         EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl TYPE mnxyz IW pq[ INCL]\
[ AIS {INFO|MJ|MN}}[ PL {ENA|DSA}} 4 LN MSG:
15MIN NE      CVP      ESP      SESP      SEFS      CSSP      UASP      CVL      ESL      SESL
THRESHOLDS    aaaaaaa  bbb    ccc    ddd    eee    fff    gggggggg hhh    iii
OPTIONS       a         b         c         d         e         f         g         h         i         EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl TYPE mnxyz IW pq[ INCL]\
[ AIS {INFO|MJ|MN}}[ PL {ENA|DSA}} 4 LN MSG:
15MIN FE      CVP      ESP      SESP      SEFS      CSSP      UASP      ESL
THRESHOLDS    jjjjjjj  kkk    lll    mmm    nnn    ooo    ppp
OPTIONS       j         k         l         m         n         o         p         COMPL
```

If the segment header exceeds 80 characters, the output format is:

[O.31342]

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl TYPE mnxyz 5 LN MSG:
IW pq [INCL ][AIS {INFO|MJ|MN} ][PL {ENA|DSA}]
DAILY NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
THRESHOLDS aaaaaaaa bbbbbb cccccc dddddd eeeee fffff ggggggggg hhhhh iiiii
OPTIONS a b c d e f g h i EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl TYPE mnxyz 5 LN MSG:
IW pq [INCL ][AIS {INFO|MJ|MN} ][PL {ENA|DSA}]
DAILY FE CVP ESP SESP SEFS CSSP UASP ESL
THRESHOLDS jjjjjjjjj kkkkk lllll mmmmm nnnnn ooooo ppppp
OPTIONS j k l m n o p EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl TYPE mnxyz 5 LN MSG:
IW pq [INCL ][AIS {INFO|MJ|MN} ][PL {ENA|DSA}]
15MIN NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
THRESHOLDS aaaaaaa bbb ccc ddd eee fff gggggggg hhh iii
OPTIONS a b c d e f g h i EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl TYPE mnxyz 5 LN MSG:
IW pq [INCL ][AIS {INFO|MJ|MN} ][PL {ENA|DSA}]
15MIN FE CVP ESP SESP SEFS CSSP UASP ESL
THRESHOLDS jjjjjjj kkk lll mmm nnn ooo ppp
OPTIONS j k l m n o p COMPL
```

Hierarchical

[O.31341]

```
M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl TYPE mnxyz IW pq[ INCL]\
[ AIS {INFO|MJ|MN}][ PL {ENA|DSA}} 4 LN MSG:
DAILY NE      CVP      ESP      SESP      SEFS      CSSP      UASP      CVL      ESL      SESL
THRESHOLDS    aaaaaaaa bbbbbb ccccc ddddd eeeee fffff ggggggggg hhhhh iiiii
OPTIONS       a         b         c         d         e         f         g         h         i         EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl TYPE mnxyz IW pq[ INCL]\
[ AIS {INFO|MJ|MN}][ PL {ENA|DSA}} 4 LN MSG:
DAILY FE      CVP      ESP      SESP      SEFS      CSSP      UASP      ESL
THRESHOLDS    jjjjjjjj kkkkk lllll mmmm nnnn ooooo ppppp
OPTIONS       j         k         l         m         n         o         p         EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl TYPE mnxyz IW pq[ INCL]\
[ AIS {INFO|MJ|MN}][ PL {ENA|DSA}} 4 LN MSG:
15MIN NE      CVP      ESP      SESP      SEFS      CSSP      UASP      CVL      ESL      SESL
THRESHOLDS    aaaaaaa bbb  ccc  ddd  eee  fff  ggggggg hhh  iii
OPTIONS       a         b         c         d         e         f         g         h         i         EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl TYPE mnxyz IW pq[ INCL]\
[ AIS {INFO|MJ|MN}][ PL {ENA|DSA}} 4 LN MSG:
15MIN FE      CVP      ESP      SESP      SEFS      CSSP      UASP      ESL
THRESHOLDS    jjjjjjj kkk  lll  mmm  nnn  ooo  ppp
OPTIONS       j         k         l         m         n         o         p         COMPL
```

If the segment header exceeds 80 characters, the output format is:

[O.31342]

```
M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl TYPE mnxyz 5 LN MSG:
IW pq [INCL ][AIS {INFO|MJ|MN} ][PL {ENA|DSA}]
DAILY NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
THRESHOLDS aaaaaaaaa bbbbbb cccccc dddddd eeeee fffff gggggggggg hhhhh iiiii
OPTIONS a b c d e f g h i EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl TYPE mnxyz 5 LN MSG:
IW pq [INCL ][AIS {INFO|MJ|MN} ][PL {ENA|DSA}]
DAILY FE CVP ESP SESP SEFS CSSP UASP ESL
THRESHOLDS jjjjjjjjj kkkkk lllll mmmmm nnnnn ooooo ppppp
OPTIONS j k l m n o p EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl TYPE mnxyz 5 LN MSG:
IW pq [INCL ][AIS {INFO|MJ|MN} ][PL {ENA|DSA}]
15MIN NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
THRESHOLDS aaaaaaa bbb ccc ddd eee fff gggggggg hhh iii
OPTIONS a b c d e f g h i EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl TYPE mnxyz 5 LN MSG:
IW pq [INCL ][AIS {INFO|MJ|MN} ][PL {ENA|DSA}]
15MIN FE CVP ESP SESP SEFS CSSP UASP ESL
THRESHOLDS jjjjjjj kkk lll mmm nnn ooo ppp
OPTIONS j k l m n o p COMPL
```

Denial Message

Nonhierarchical

[O.31341.01]

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl[-[t]mno] TYPE mnxyz 2 LN MSG:
[ ss/n][ IW pq[ INCL]][ AIS {INFO|MJ|MN}][ PL {ENA|DSA}] COND cc DNY
```

[O.31341.02]

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl[-[t]mno] TYPE mnxyz 2 LN MSG:
[ ss/n][ IW pq[ INCL]][ AIS {INFO|MJ|MN}][ PL {ENA|DSA}] EQD DNY
```

Hierarchical

[O.31341.01]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl[-uvmno] TYPE mnxyz 2 LN MSG:
[ss/n][IW pq[INCL]][AIS {INFO|MJ|MN}][PL {ENA|DSA}] COND cc DNY

[O.31341.02]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl[-uvmno] TYPE mnxyz 2 LN MSG:
[ss/n][IW pq[INCL]][AIS {INFO|MJ|MN}][PL {ENA|DSA}] EQD DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

- NPC** - Network processing circuit
- [s]abc** - The 3- or 4-digit nonhierarchical NPC number, denoting the beginning of a range specification
- [t]def** - The 3- or 4-digit nonhierarchical NPC number, denoting the end of a range specification
- The valid numbers are:

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number
uvkqr - Specific Hierarchical NPC number

uv - Unit number
m, k - Module number
np, qr - NPC number within the module

The valid numbers are:

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TYPE - Type

mnxyz - NPC-type identifier

<i>mn</i>	<i>Explanation</i>

DA	FTU DS1 ANSI NPC type
TA	DS3U DS1 ANSI NPC type

If the NPC type field is omitted in the input command, the NPC will default to a non-ANSI DE100 NPC type in an FTU and a non-ANSI TE100 NPC type in a DS3U.

DA-type xyz fields**x** - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DA-type clear-DS1 NPC.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).**z** - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

DA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a DA NPC with both a valid framing format (D4, ESF, T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the DA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II FTU, the NPC must be provisioned as NPC type **DE9y9**.

Zero Byte Time Slot Interchange (ZBTSI) encoding is not supported by the DA NPC type. If ZBTSI is desired on an NPC in a DACS II FTU, the NPC must be provisioned as a DE NPC type with its **y** option selecting ZBTSI (**DEx3z**).

TA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the TA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II DS3U, the NPC must be provisioned as NPC type TE919.

OPTS - Options

rr - Facility performance parameter number

Variable rr specifies the parameter whose alarm threshold is being selected

m - Facility performance parameter threshold index (0 through 3)

Variable m is used to select threshold values previously programmed for rr. The default threshold value, the value selected by m=0, for each parameter is shown in the table below under the column heading "Default Threshold Value". Threshold values selected by m=1 through m=3 must exist; that is, must have been programmed prior to being selected. The non-default thresholds can be set by using the CHG::SETOP (I.38201) command. Thresholds of all unspecified parameters will be set to the default value associated with m=0. The options field must not be given without the NPC type field.

Clear-DS1 ANSI NPCs (DAxy9/TAxy9) provide the same set of path and line performance monitoring parameters that are provided by channelized DS1 ANSI NPC types. ANSI NPCs in DS3 Units (TAxyz) do not provide near-end DS1 line performance monitoring parameters.

For DA and TA type NPCs:

For Channelized and Clear-DS1 DA type NPCs with ESF framing, all of the following Near-end and Far-end parameters are valid.

For Channelized and Clear-DS1 DA type NPCs with D4 or T1DM framing, all of the following Near-end parameters are valid, but the only valid Far-end parameter is Unavailable Seconds (rr = 55,71).

For Channelized and Clear-DS1 TA type NPCs with ESF framing, all of the following Near-end Path parameters are valid, but the Near-End Line parameters (rr = 47-49, 63-65) are invalid. All of the following Far-end parameters are valid.

For Channelized and Clear-DS1 TA type NPCs with D4 or T1DM framing, the following Near-end Path parameters are valid, but the Near-End Line parameters (rr = 47-49, 63-65) are invalid. The only valid Far-end parameter is Unavailable Seconds (rr = 55,71).

rr	Parameter	Threshold Value Range	Default Threshold Value
41	Daily Near-end Path Coding Violations	000000000 to 134217727	132960 [†]
42	Daily Near-end Path Errored Seconds	00000 to 86400	648
43	Daily Near-end Path Severely Errored Seconds	00000 to 86400	100
44	Daily Near-end Severely Errored Framing Seconds	00000 to 86400	17
45	Daily Near-end Controlled Slip Seconds	00000 to 86400	4
46	Daily Near-end Unavailable Seconds	00000 to 86400	10
47	Daily Near-end Line Coding Violations	000000000 to 134217727	133400
48	Daily Near-end Line Errored Seconds	00000 to 86400	648
49	Daily Near-end Line Severely Errored Seconds	00000 to 86400	100
50	Daily Far-end Path Coding Violations	000000000 to 134217727	132960 [†]
51	Daily Far-end Path Errored Seconds	00000 to 86400	648
52	Daily Far-end Path Severely Errored Seconds	00000 to 86400	100
53	Daily Far-end Severely Errored Framing Seconds	00000 to 86400	17
54	Daily Far-end Controlled Slip Seconds	00000 to 86400	4
55	Daily Far-end Unavailable Seconds	00000 to 86400	10
56	Daily Far-end Line Errored Seconds	00000 to 86400	648
57	15-Minute Near-end Path Coding Violations	0000000 to 2097151	13296 [‡]
58	15-Minute Near-end Path Errored Seconds	000 to 900	65
59	15-Minute Near-end Path Severely Errored Seconds	000 to 900	10
60	15-Minute Near-end Severely Errored Framing Seconds	000 to 900	2
61	15-Minute Near-end Controlled Slip Seconds	000 to 900	1
62	15-Minute Near-end Unavailable Seconds	000 to 900	10
63	15-Minute Near-end Line Coding Violations	0000000 to 2097151	13340
64	15-Minute Near-end Line Errored Seconds	000 to 900	65
65	15-Minute Near-end Line Severely Errored Seconds	000 to 900	10
66	15-Minute Far-end Path Coding Violations	0000000 to 2097151	13296 [‡]
67	15-Minute Far-end Path Errored Seconds	000 to 900	65
68	15-Minute Far-end Path Severely Errored Seconds	000 to 900	10
69	15-Minute Far-end Severely Errored Framing Seconds	000 to 900	2
70	15-Minute Far-end Controlled Slip Seconds	000 to 900	1
71	15-Minute Far-end Unavailable Seconds	000 to 900	10
72	15-Minute Far-end Line Errored Seconds	000 to 900	65

[†] The value shown applies to ESF framing and is a count of CRC errors. When the DS1 has D4 or T1DM framing, framing errors are counted and the default Daily value is 691.

[‡] The value shown applies to ESF framing and is a count of CRC errors. When the DS1 has D4 or T1DM framing, framing errors are counted and the default 15-Minute value is 72.

Note: If the queried NPC can not be accessed for some reason, for example because the Facility Terminating Module is not equipped or the FTMI or Unit Controller is out of service, then the NPC's parameter count fields are printed as a string of dashes to indicate that the counts are not available. The parameter thresholds and options will still be correctly output.

In addition, certain parameters do not apply to ANSI NPCs depending on whether the NPC is equipped in a Facility Terminating Unit (DA type NPCs) or a DS3 Unit (TA type NPCs) and whether the NPC is using ESF framing or not. In the cases where specific parameters do not apply to the queried NPC, the respective parameter count fields, threshold values and threshold options are all displayed as a string of dashes.

IW - Insertion word

pq - Hexadecimal value of the growth insertion word (GIW). Specifies the insertion word in the transmit direction on unassigned channels.

An eight-bit code, called the growth insertion word, is transmitted by this NPC on unassigned DS0 channels. This code is specified by the optional keyword IW and its argument pq. This code was previously called the Disconnect Code (DCC), but that name is properly reserved for the cross-connect insertion word, which is transmitted when the disconnect message with the DCC option is used.

Although any 2-digit hexadecimal code may be used, the default GIWs are:

<i>pq</i>	<i>Explanation</i>
7F	Unassigned Channel Code (UAC), the default value for DA/TA type NPCs provisioned with D4 or ESF framing.
18	Unassigned Multiplex Code (UMC), the default value for DA/TA type NPCs provisioned with T1DM framing. This value should only be provisioned with T1DM framing (DA4yz or TA4yz), so the growth command enforces this restriction.

For Clear-DS1 NPCs, the insertion word option is **NOT** available and the message will be denied if this option is entered.

The alarm indication signal (AIS) is transmitted in the disconnect or idle state.

INCL - Inclusive

As a protection to users, this keyword must be added to provision an NPC with D4 framing and an Insertion Word with bit 2 equal to zero. NPCs grown in the D4 format (DA1yz/TA1yz) transmit a DS1 yellow alarm by setting bit 2 to zero in all 24 DS0 channels. If the Insertion Word "pq" is unknowingly provisioned in this manner, the NPC will transmit a D4 yellow alarm signal when it is restored. The D4 yellow alarm is generated by any Insertion Word with the binary value a0cdefgh, where the letters a-h define the eight bits of the binary word. The D4 yellow alarm is not generated by an Insertion Word with a binary value a1cdefgh.

AIS - Alarm indication signal

INFO - Information
Information message (not an alarm). This is the default option.

MJ - Major

MN - Minor

PL - Payload loopback

ENA - Enabled
Payload loopback commands received from far-end equipment on the ESF data link are recognized and performed by the ANSI NPC. This is the default option.

DSA - Disabled
Payload loopback commands received from far-end equipment on the ESF data link are ignored by the ANSI NPC. This prevents customer equipment from controlling network configurations.

CVP - Path Coding Violations
ESP - Path Errored Seconds
SESP - Path Severely Errored Seconds
SEFS - Severely Errored Framing Seconds
CSSP - Path Controlled Slip Seconds
UASP - Path Unavailable Seconds
CVL - Line Coding Violations
ESL - Line Errored Seconds
SESL - Line Severely Errored Seconds

ss/n - First improper value of "rr/m" for which the message is denied.

aaaaaaaa	- Daily near-end path coding violation threshold, (000000000 through 134217727)
a	- Daily near-end path coding violation threshold selection, (0 through 3)
bbbbbb	- Daily near-end path errored second threshold, (00000 through 86400)
b	- Daily near-end path errored second threshold selection, (0 through 3)
cccccc	- Daily near-end path severely errored second threshold, (00000 through 86400)
c	- Daily near-end path severely errored second threshold selection, (0 through 3)
dddddd	- Daily near-end severely errored framing second threshold, (00000 through 86400)
d	- Daily near-end severely errored framing second threshold selection, (0 through 3)
eeeeee	- Daily near-end path controlled slip second threshold, (00000 through 86400)
e	- Daily near-end path controlled slip second threshold selection, (0 through 3)
ffffff	- Daily near-end path unavailable second threshold, (00000 through 86400)
f	- Daily near-end path unavailable second threshold selection, (0 through 3)
gggggggggg	- Daily near-end line coding violation threshold, (000000000 through 134217727, or ----- if not applicable)
g	- Daily near-end line coding violation threshold selection, (0 through 3)
hhhhh	- Daily near-end line errored second threshold, (00000 through 86400, or ----- if not applicable)
h	- Daily near-end line errored second threshold selection, (0 through 3)

iiii	- Daily near-end line severely errored second threshold, (00000 through 86400, or ----- if not applicable)
i	- Daily near-end line severely errored second threshold selection, (0 through 3)
jjjjjjjj	- Daily far-end path coding violation threshold, (000000000 through 134217727, or ----- if not applicable)
j	- Daily far-end path coding violation threshold selection, (0 through 3)
kkkkk	- Daily far-end path errored second threshold, (00000 through 86400, or ----- if not applicable)
k	- Daily far-end path errored second threshold selection, (0 through 3)
lllll	- Daily far-end path severely errored second threshold, (00000 through 86400, or ----- if not applicable)
l	- Daily far-end path severely errored second threshold selection, (0 through 3)
mmmm	- Daily far-end severely errored framing second threshold, (00000 through 86400, or ----- if not applicable)
m	- Daily far-end severely errored framing second threshold selection, (0 through 3)
nnnnn	- Daily far-end path controlled slip second threshold, (00000 through 86400, or ----- if not applicable)
n	- Daily far-end path controlled slip second threshold selection, (0 through 3)
oooo	- Daily far-end path unavailable second threshold, (00000 through 86400)
o	- Daily far-end path unavailable second threshold selection, (0 through 3)
ppppp	- Daily far-end line errored second threshold, (00000 through 86400, or ----- if not applicable)
p	- Daily far-end line errored second threshold selection, (0 through 3)

a a a a a a

- 15-Minute near-end path coding violation threshold,
(0000000 through 2097151)
- a** - 15-Minute near-end path coding violation threshold selection,
(0 through 3)
- bbb** - 15-Minute near-end path errored second threshold,
(000 through 900)
- b** - 15-Minute near-end path errored second threshold selection,
(0 through 3)
- ccc** - 15-Minute near-end path severely errored second threshold,
(000 through 900)
- c** - 15-Minute near-end path severely errored second threshold selection,
(0 through 3)
- ddd** - 15-Minute near-end severely errored framing second threshold,
(000 through 900)
- d** - 15-Minute near-end severely errored framing second threshold
selection, (0 through 3)
- eee** - 15-Minute near-end path controlled slip second threshold,
(000 through 900)
- e** - 15-Minute near-end path controlled slip second threshold selection,
(0 through 3)
- fff** - 15-Minute near-end path unavailable second threshold,
(000 through 900)
- f** - 15-Minute near-end path unavailable second threshold selection,
(0 through 3)

g g g g g g

- 15-Minute near-end line coding violation threshold,
(0000000 through 2097151, or ----- if not applicable)
- g** - 15-Minute near-end line coding violation threshold selection,
(0 through 3)
- hhh** - 15-Minute near-end line errored second threshold,
(000 through 900, or --- if not applicable)
- h** - 15-Minute near-end line errored second threshold selection,
(0 through 3)

iii	- 15-Minute near-end line severely errored second threshold, (000 through 900, or --- if not applicable)
i	- 15-Minute near-end line severely errored second threshold selection, (0 through 3)
jjjjjjj	- 15-Minute far-end path coding violation threshold, (0000000 through 2097151, or ----- if not applicable)
j	- 15-Minute far-end path coding violation threshold selection, (0 through 3)
kkk	- 15-Minute far-end path errored second threshold, (000 through 900, or --- if not applicable)
k	- 15-Minute far-end path errored second threshold selection, (0 through 3)
lll	- 15-Minute far-end path severely errored second threshold, (000 through 900, or --- if not applicable)
l	- 15-Minute far-end path severely errored second threshold selection, (0 through 3)
mmm	- 15-Minute far-end severely errored framing second threshold, (000 through 900, or --- if not applicable)
m	- 15-Minute far-end severely errored framing second threshold selection, (0 through 3)
nnn	- 15-Minute far-end path controlled slip second threshold, (000 through 900, or --- if not applicable)
n	- 15-Minute far-end path controlled slip second threshold selection, (0 through 3)
ooo	- 15-Minute far-end path unavailable second threshold, (000 through 900)
o	- 15-Minute far-end path unavailable second threshold selection, (0 through 3)
ppp	- 15-Minute far-end line errored second threshold, (000 through 900, or --- if not applicable)
p	- 15-Minute far-end line errored second threshold selection, (0 through 3)

Note: A threshold of zero for any parameter inhibits threshold crossing monitoring for that parameter.

cc - Hexadecimal condition code

cc *Explanation*

- 00** No conditions
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 13** FTMI is not equipped
- 20** Option rr/m has not been set up on 2nd database
- 29** IW is UMUX (18) but NPC not type DE4yz
- 2A** DMI combined with T1DM
- 34** NPC type option xyz is unassigned
- 83** NPC type is inconsistent with FTMI type
- 84** Incompatible types of NPCs in a DDC
- 25** Invalid FPI value
- 4E** IW option is not allowed for new type of Clear-DS1 NPC
- F1** Parameter only valid with PA, PB, or PC type NPCs
- FC** ZBTSL option is only valid with the ESF mode
- FD** NPC range crosses unit boundary
- A5** AIS keyword incompatible with NPC type
- 03** This NPC type does not allow unframed Clear-DS1
- 04** This NPC type does not allow Payload
- 07** Mismatch between MXR and NPC types
- 35** Invalid use of INCL keyword
- 36** INCL keyword needed when restricted Insertion Word specified
- E5** Invalid combination of "x" and "z" values
- E7** Invalid combination of "x" and "y" values

GRTH,NPC,TYPE,OPTS,IW,X,INCL,AIS,INFO

GROWTH NPC

Explanation Of Command

This message requests the equipage of the facility terminating unit network processing circuit, type DExyz/TExyz. It may also be used to request the equipage of a range of NPCs.

The optional alarm threshold arguments are indices used to select prestored values for facility performance parameter alarm thresholds from a secondary data base.

A special code, called the idle code, is transmitted by this NPC on unassigned channels. The idle code is specified by pq in the optional field **IW X'pq** (generally called the growth insertion word) or it defaults to the hexadecimal value 7F (unassigned channel code) for DE/TE type NPCs. The growth insertion word may be assigned any 2-digit hexadecimal value.

As a protection to users, the INCL keyword must be added to provision an NPC with D4 framing and an Insertion Word with bit 2 equal to zero. NPCs grown in the D4 format (DE1yz/TE1yz) transmit a DS1 yellow alarm by setting bit 2 to zero in all 24 DS0 channels. If the Insertion Word is unknowingly provisioned in this manner, the NPC will transmit a D4 yellow alarm signal when it is restored. The D4 yellow alarm is generated by any Insertion Word with the binary value a0cdefgh, where the letters a-h represent the eight bits of the binary word. The D4 yellow alarm is not generated by an Insertion Word with a binary value a1cdefgh.

For clear DS1 NPCs, the insertion word option is NOT available and the message will be denied if this option is entered. The alarm indication signal is transmitted in the disconnect or idle state.

Since range provisioning commands could take considerable time to complete, the ABT command is allowed with this message. If the ABT command is entered, DACS II will quit on execution of the current NPC growth and will report what has been finished.

One output message is printed for each NPC requested and successfully provisioned.

Provisioning commands where the specified NPC range crosses a Unit boundary will be denied.

When a provisioning command addressing a range of NPCs is denied for successive NPCs in the range for the same reason, a summary denial message will be output, giving the range of NPC numbers denied and the reason for the denial.

When a provisioning command addressing a range of NPCs within a unit crosses a facility terminating module (FTM) boundary, if the FTM is unequipped or provisioned as a CEPT module, then the FTM will be skipped as a whole, with a summary denial message, as noted below.

- If the type field is specified, and it is inconsistent with the first FTM specified or the first FTM specified is unequipped, the entire command is denied. Otherwise, the specified type field is applied to the entire NPC range.
- If the type field is omitted, the NPC type will default to the type of the first FTM, either domestic or CEPT.

Whether or not the type field is specified, if an FTM, beyond the first one addressed, is of a different type, that entire FTM will be denied.

The execution of the normal completions, or of denials for a reason other than diagnostic failures, then resumes at the next NPC and continues until the end of the range.

Command

Nonhierarchical

[I.31352]

```
GRTH:FRM xy,SEQ ww:NPC [s]abc[-[t]def][,TYPE mnxyz]\
[,OPTS(rr/m[,rr/m][,...])][,IW X'pq[,INCL]][,AIS {INFO|MJ|MN}]!
```

Hierarchical

[I.31352]

```
GRTH:FRM xy,SEQ ww:NPC uvmnp[-uvkqr][,TYPE mnxyz]\
[,OPTS(rr/m[,rr/m][,...])][,IW X'pq[,INCL]][,AIS {INFO|MJ|MN}]!
```

Completion Message

Nonhierarchical

[O.31352]

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl TYPE mnxyz IW pq[ INCL]\
[ AIS {INFO|MJ|MN}] 4 LN MSG:
      SLIP      BER      ERS      SERS      COFA
THRESHOLDS mmm nnn  p q    rrrrr  sss    ttt  uuu
OPTIONS     e  f    g h    i     j     k   l    COMPL
```

Hierarchical

[O.31352]

```
M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl TYPE mnxyz IW pq[ INCL]\
[ AIS {INFO|MJ|MN}] 4 LN MSG:
      SLIP      BER      ERS      SERS      COFA
THRESHOLDS mmm nnn  p q    rrrrr  sss    ttt  uuu
OPTIONS     e  f    g h    i     j     k   l    COMPL
```

Denial Message

Nonhierarchical

[O.31352.01]

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl[-[t]mno][ mnxyz]\
[ rr/m][ IW pq[ INCL]][ AIS {INFO|MJ|MN}] COND cc DNY
```

If the output message requires more than 80 characters:

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl[-[t]mno][ mnxyz] \
2 LN MSG:
[rr/m ][IW pq [INCL ]][AIS {INFO|MJ|MN} ]COND cc DNY
```

[O.31352.02]

```
M hh:mm:ss xy,ww n[vv] GRTH NPC [s]jkl[-[t]mno][ mnxyz]\
[ rr/m][ IW pq[ INCL]][ AIS {INFO|MJ|MN}] EQD DNY
```

Hierarchical

[O.31352.01]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl[-uvmno][mnxyz][rr/m]\
[IW pq[INCL]][AIS {INFO|MJ|MN}] COND cc DNY

If the output message requires more than 80 characters:

M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl[-uvmno][mnxyz] \
2 LN MSG:
[rr/m][IW pq [INCL]][AIS {INFO|MJ|MN}]COND cc DNY

[O.31352.02]

M hh:mm:ss xy,ww n[vv] GRTH NPC uvjkl[-uvmno][mnxyz][rr/m]\
[IW pq[INCL]][AIS {INFO|MJ|MN}] EQD DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

- [s]abc - The 3- or 4-digit nonhierarchical NPC number, denoting the beginning of a range specification
- [t]def - The 3- or 4-digit nonhierarchical NPC number, denoting the end of a range specification

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number
uvkqr - Specific Hierarchical NPC number

uv - Unit number
m, k - Module number
np, qr - NPC number within the module

The valid numbers are:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TYPE - Type

If the NPC type field is omitted, the NPC type will be set to the default type.

mnxyz - NPC-type identifier

<i>mn</i>	<i>Type</i>
DE	FTU DS1 NPC; default type is DE100
TE	DS3U or HDS3U DS1 NPC; default type is TE100
xyz	- Format specification

DE-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4, y=5, and y=6, DMI signalling.

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3†	ZBTSI - Zero-bit time-slot interchanger
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DE-type clear-DS1 NPC.

† Only valid with ESF (x = 2 or 3)

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	No channel numbering format, clear-DS1

TE-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4 and y=5, DMI signalling.

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TE-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** No channel numbering format, clear-DS1

OPTS - Options

rr - Facility performance parameter number

Variable rr specifies the parameter whose alarm threshold is being selected

m - Facility performance parameter threshold index (0 through 3)

Variable m is used to select threshold values previously programmed for rr. The default threshold value, the value selected by m=0, for each parameter is shown in the table below under the column heading "Default Threshold Value". Threshold values selected by m=1 through m=3 must exist; that is, must have been programmed prior to being selected. These other thresholds can be set by using the CHG::SETOP (I.38201) command. Thresholds of all unspecified parameters will be set to the default value associated with m=0. The options field must not be given without the NPC type field.

Clear-DS1 FTU NPCs have a limited number of parameters for performance monitoring, 01 through 04 only. Clear-DS1 DS3U or HDS3U NPCs have only parameters 01 and 02.

For DE type NPCs, parameters with values rr = 1 through 8 are valid.

For TE type NPCs, parameters with values rr = 1 through 8 are valid.

For Clear-DS1 DE type NPCs, parameters with values rr = 1 through 4 are valid.

For Clear-DS1 TE type NPCs, parameters with values rr = 1 through 2 are valid.

rr	Parameter	Threshold Value Range	Default Threshold Value
01	Slip major	000 to 255	255
02	Slip minor	000 to 255	4
03	Bit Error Rate major	10^{-3*} to $10^{-6†}$	10^{-3*}
04	Bit Error Rate minor	10^{-3*} to $10^{-6†}$	10^{-6}
05	Errored Seconds [‡]	00001 to 65535	864
06	Severely Errored Seconds [‡]	001 to 255	225
07	Change of Frame Alignment major	001 to 511	511
08	Change of Frame Alignment minor	001 to 255	17

- * 4 for clear-DS1 NPCs or DS type NPCs
- † 7 on DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing
- ‡ Only applicable to DE or TE type NPCs using T1DM (x = 4) or ESF (x = 2 or 3) framing

Note 1: Major thresholds must be greater than minor thresholds.

Note 2: For Bit Error Rates, enter only the power of 10 (DACS assumes its sign is negative). For example, for a BER of 10^{-3} (.001), enter 3.

Note 3: Slip major and Slip minor threshold crossing alarms may be disabled by programming threshold values of zero for the respective parameters.

Note 4: For TG80B circuit packs, the bit error rate parameters 03 and 04 are valid for clear DS1 NPCs with a threshold value of 10^{-4} . In that case the BER is calculated from the BPV rate. In all other cases, clear-DS1 NPCs can only have rr parameter values of 01 and 02.

Note: If the queried NPC cannot be accessed for some reason, for example because the Facility Terminating Module is not equipped or the FTMI or Unit Controller is out of service, then the NPC's parameter count fields are printed as a string of dashes to indicate that the counts are not available. The parameter thresholds and options are still correctly output in this case.

In addition, some parameters are not applicable to all NPCs. Certain parameters may or may not be collected based on NPC type, whether the NPC is equipped in a Facility Terminating Unit (DE type NPC) or a DS3 or a HDS3 Unit (TE type NPC) and whether the NPC carries a Clear or Channelized facility. In the cases where specific parameters do not apply to the queried NPC, the respective parameter count fields, threshold values and threshold options are all displayed as a string of dashes.

IW - Insertion word

pq - Hexadecimal value of the growth insertion word (GIW). Specifies the insertion word in the transmit direction on unassigned channels.

An eight-bit code, called the growth insertion word, is transmitted by this NPC on unassigned DS0 channels. This code is specified by the optional keyword IW and its argument pq. This code was previously called the Disconnect Code (DCC), but that name is properly reserved for the cross-connect insertion word, which is transmitted when the disconnect message with the DCC specified is used.

Although any 2-digit hexadecimal code may be used, the default GIWs are:

<i>pq</i>	<i>Explanation</i>
7F	Unassigned Channel Code (UAC), the default value for DE/TE type NPCs provisioned with D4 or ESF framing.
18	Unassigned Multiplex Code (UMC), the default value for DE/TE type NPCs provisioned with T1DM framing. This value should only be provisioned with T1DM framing (DE4yz or TE4yz), so the growth command enforces this restriction.

For Clear-DS1 NPCs, the insertion word option is **NOT** available and the message will be denied if this option is entered. The alarm indication signal (AIS) is transmitted in the disconnect or idle state.

INCL - Inclusive

As a protection to users, this keyword must be added to provision an NPC with D4 framing and an Insertion Word with bit 2 equal to zero. NPCs grown in the D4 format (DE1yz/TE1yz) transmit a DS1 yellow alarm by setting bit 2 to zero in all 24 DS0 channels. If the Insertion Word "pq" is unknowingly provisioned in this manner, the NPC will transmit a D4 yellow alarm signal when it is restored. The D4 yellow alarm is generated by any Insertion Word with the binary value a0cdefgh, where the letters a-h define the eight bits of the binary word. The D4 yellow alarm is not generated by an Insertion Word with a binary value a1cdefgh.

AIS - Alarm indication signal

INFO - Information

Information message (not an alarm). This is the default option.

MJ - Major

MN - Minor

ss/n - First improper value of "rr/m" for which the message is denied.

mmm - Slip major alarm threshold (0 through 255)

nnn - Slip minor alarm threshold (0 through 255)

e - Slip major alarm threshold selection (0 through 3)

f - Slip minor alarm threshold selection (0 through 3)

- p** - BER major alarm threshold, $(1.0(10^{-5}), 3^{\dagger}$ through $6^{*})$
q - BER minor alarm threshold, $(1.0^{-q}, 3^{\dagger}$ through $6^{*})$
- * 7 on T1DM and Fe framing
 $\dagger$ 4 for clear-DS1 FTU NPC
- g** - BER major alarm threshold selection (0 through 3)
h - BER minor alarm threshold selection (0 through 3)
- rrrrr** - ERS threshold (1 through 65535, or ----- if not applicable)
i - ERS threshold selection (0 through 3)
- sss** - SERS threshold (1 through 255, or --- if not applicable)
j - SERS threshold selection (0 through 3)
- ttt** - COFA major alarm threshold (1 through 511)
uuu - COFA minor alarm threshold (1 through 255)
- k** - COFA major alarm threshold selection (0 through 3)
l - COFA minor alarm threshold selection (0 through 3)

Note: Major thresholds must be greater than minor thresholds. For clear-DS1 FTU NPC only SLIP and BER parameters are listed. For clear-DS1 DS3U or HDS3U NPC only SLIP parameters are listed.

cc - Hexadecimal condition code

cc *Explanation*

- 00** No conditions
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 13** FTMI is not equipped
- 20** Option rr/m has not been set up on 2nd database
- 21** Minor $\geq$ major for SLIP opt
- 22** Minor $\leq$ major for BER opt
- 23** Minor $\geq$ major for COFA opt
- 24** Unit type error
- 26** NPC type error
- 29** IW is UMUX (18) but NPC not type DE4yz
- 2A** DMI combined with T1DM
- 2B** Maj|Min BER threshold is 7, but not in T1DM or Fe mode
- 34** NPC type option xyz is unassigned
- 83** NPC type is inconsistent with FTMI type
- 84** Incompatible types of NPCs in a DDC
- 25** Invalid FPI value
- 37** Major/Minor BER threshold value is invalid for SLC NPCs

cc *Explanation*

- 4E** IW option is not allowed for new type of Clear-DS1 NPC
- 4F** BER must not be less than 4 for Clear DS1
- BF** MIU is not equipped
- F1** Parameter only valid with PA, PB, or PC type NPCs
- FC** ZBTSI option is only valid with the ESF mode
- FD** NPC range crosses unit boundary
- 05** This NPC type does not allow unframed Clear-DS1
- 1A** The facility parameter not programmable for specified x or z parameter
- 9B** The MXR is not grown
- A5** AIS keyword incompatible with NPC type
- 04** This NPC type does not allow Payload
- 07** Mismatch between MXR and NPC types
- 0A** Minor Slip threshold disabled before Major Slip threshold
- 35** Invalid use of INCL keyword
- 36** INCL keyword needed when restricted Insertion Word specified
- 91** Option not programmable for this NPC type
- E5** Invalid combination of "x" and "z" values
- E7** Invalid combination of "x" and "y" values

GRTH,SYNC,TB,TYPE

GROW SYNCHRONIZER TIME BASE

Explanation Of Command

This message requests equipage of the time base circuit packs of the synchronizer. Both sides of the time base (sides 0 and 1) will be equipped by entering this command.

Command

[I.31101]

GRTH:FRM xy,SEQ ww:SYNC,TB,TYPE TBpqr !

Completion Message

[O.31101]

M hh:mm:ss xy,ww n[vv] GRTH SYNC TB TYPE TBpqr COMPL

Denial Message

[O.31101.01]

M hh:mm:ss xy,ww n[vv] GRTH SYNC TB TYPE TBpqr COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer

TB - Time base

p - Time base identifier

qr - Unassigned

q and r can take any value from 0 through 9

p *Time base*

0 Stratum 3

1 CEPT Local

2 CEPT Toll

3 Stratum 2

cc - Hexadecimal condition code

cc *Explanation*

AA Syncs are equipped

GRTH,SYNC,TLI,TYPE

GROWTH CLOCK REFERENCE OSCILLATOR

Explanation Of Command

This message requests equipage of the synchronizer time base as a clock reference oscillator (CRO), which is the extra (third) time base on the synchronizer. The CRO is required to provision the synchronizer to the master mode and is located in timing link interface 3 of side 1 of the synchronizer.

Command

[I.31111]

GRTH:FRM xy,SEQ ww:SYNC,TLI 3,TYPE TBpqr!

Completion Message

[O.31111]

M hh:mm:ss xy,ww n[vv] GRTH SYNC TLI 3 TYPE TBpqr CRO COMPL

Denial Message

[O.31111.01]

M hh:mm:ss xy,ww n[vv] GRTH SYNC TLI 3 TYPE TBpqr CRO \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer

TLI - Timing Link Interface

TYPE - Type

TB - Time base

p - Time base identifier

qr - Unassigned

q and r can take any value from 0 through 9

p *Time base*

0 Stratum 3

1 CEPT Local

2 CEPT Toll

3 Stratum 2

CRO - Clock reference oscillator

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

01 Subject entity is equipped

16 SYNC TB is not equipped

33 Wrong TLI type

A5 (Timing Distributor) TLI is not equipped

A7 Sync 0 is not in-service

A8 Sync 1 is not in-service

A9 Both syncs are out-of-service

AA Syncs are equipped

AB Bad sync mode

GRTH,SYNC,TLI,TYPE,SSP,SRC

PROVISION SYNCHRONIZER TIMING LINK INTERFACE

Explanation Of Command

This message requests provisioning of the synchronizer's timing link interface. The TLI can be configured as a timing extractor or as a timing distributor.

If the timing extractor is selected, you must also select synchronizer sync port (SSP) 0 or 1 and its source for priority.

Timing extractor types must be compatible for both **SSP 0** and **SSP 1**.

Command

[I.31121]

GRTH:FRM xy,SEQ ww:SYNC,TLI m,
{TYPE texyz,SSP a,SRC p|TYPE TDxyz}!

Completion Message

[O.31121]

M hh:mm:ss xy,ww n[vv] GRTH SYNC TLI m 2 LN MSG:
{TYPE texyz SSP a SRC p|TYPE TDxyz} COMPL

Denial Message

[O.31121.01]

M hh:mm:ss xy,ww n[vv] GRTH SYNC TLI m 2 LN MSG:
{TYPE texyz SSP a SRC p|TYPE TDxyz} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer

TLI - Timing link interface

m - TLI number (1 through 4)

TYPE - Type

texyz - Timing Extractor type

<i>te</i>	<i>Explanation</i>
TC	Composite Clock Timing Extractor
TE	DS1 Timing Extractor
TP	Primary Block Timing Extractor
TR	Basic System Reference Frequency (BSRF)
TU	Unipolar Clock Timing Extractor

Note: For the TC, TU and TR timing extractors the x, y and z parameters can be any value from 0 to 9.

Valid x, y, and z values for the other timing extractors are:

TE-type TLI xyz fields

x - Frame format

x	<i>Explanation</i>
0	Invalid
1	D4 Format
2, 3	ESF Format
4	DDS (T1DM) Format
5-9	Invalid

y - Line format

y	<i>Explanation</i>
0, 1	Bipolar Line Coding
2	B8ZS Line Coding
3	Invalid
4, 5	Bipolar Line Coding
6	B8ZS Line Coding
7-9	Invalid

z - Channel format

z	<i>Explanation</i>
0-9	Unassigned

SSP - Synchronizer synchronization port

a - SSP number (0 or 1)

Required when texyz is specified.

Note: Timing Extractors must have the same "te" type for both SSP 0 and SSP 1.

SRC - Source

p - Priority (1 through 8)

Required when texyz is specified. 1 = HIGHEST priority, 8 = LOWEST priority

TDxyz - Timing Distributor type

The valid values for x, y, and z are:

TD-type TLI xyz fields

x - Timing distributor identification**x** *Explanation***1** Composite Clock Timing Distribution**2** Sinusoidal 2.048 MHz Timing Distribution**y** - Unassigned**z** - Unassigned**cc** - Hexadecimal condition code**cc** *Explanation***01** Subject entity is equipped**16** SYNC TB is not equipped**A7** Sync 0 is not in-service**A8** Sync 1 is not in-service**A9** Both syncs are out-of-service**AC** Timing Extractor type TLI (need SSP info)**AD** Not Timing Extractor type TLI (not SSP)**AE** Wrong TLI type (need CRO grow command)**AF** 3 Timing Distributor type TLIs are equipped**B1** Illegal priority value**B2** Illegal SSP type (not same as other SSPs)**B3** X option is illegal**B4** Y option is illegal**B5** Z option is illegal**BE** Hardware mismatch or not present**CB** NPC parameter only valid with TU type TLI**CC** NPC is still provisioned to provide sync timing**CD** NPC not designated as sync timing source**CE** NPC already allocated as sync timing source**F1** Parameter only valid with PA, PB, or PC type NPCs**E4** NPC already has Equipment Loopback

GRTH,TG,NPCTG

GROWTH TEST-ACCESS GROUP

Explanation Of Command

This command is used to provision a test-access group (TG) as a network processing circuit for test groups (NPCTG) covering a specific channel range.

The TG consists of two bundles of n consecutive DS0 channels each. The TG's width is determined by the number of channels within the range specified in the command. The east bundle of the TG is located on the first NPCTG and spans the given channel range; the west bundle is located on the second NPCTG and spans the second channel range. Both bundles may be assigned to the same NPCTG, provided the necessary bandwidth is available.

Command

[I.31421]

```
GRTH:FRM xy,SEQ ww:TG mmm,NPCTG (rrr,eee[-fff];sss,www[-xxx])\
[,<tc>]!
```

Completion Message

[O.31421]

```
M hh:mm:ss xy,ww n[vv] GRTH TG mmm NPCTG (rrr,eee[-fff];sss,\
www[-xxx]) 2 LN MSG:
[<tc>] COMPL
```

Denial Message

[O.31421.01]

```
M hh:mm:ss xy,ww n[vv] GRTH TG mmm[ <tc>] COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

TG - Test (access) group

mmm - TG number (1 through 400)

NPCTG - NPC (for) test group

rrr - NPCTG number supporting the east bundle

sss - NPCTG number supporting the west bundle, may be same as rrr

eee, fff
- Channel range for east bundle

www, xxx
- Channel range for west bundle

001 through 024

tc - Trunk conditioning
For this command trunk conditioning is limited to "TRSP,IW X'pq".
Any other trunk conditioning specification will be denied.

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

- 1E** Customer control or red circuit exists
- 85** Using the 24th channel of a T1DM NPC
- 86** Using the 24th channel of a DMI NPC
- 4A** channel part of a TP or TG
- 4B** channel already under test
- 57** Designated TG or circuit to be tested in process of being rolled
- 59** Invalid TC specification
- 5D** Inconsistent Signaling on CEPT NPCTGs
- 64** TG width too large for single NPCTG
- 65** Ending channel is out of range
- 66** TG number previously assigned
- 95** TG East/West type inconsistent with each other or circuit
- A1** NPC has been designated as NPCTG
- A3** Channels assigned, cannot be grown as test group

cc *Explanation*

A8 NPCTG not grown

GRTH,TP

GROW TEST PORT

Explanation Of Command

This message requests the provisioning of a test port.

If trunk conditioning is omitted from the input command the test port is provisioned as a *dynamic* test port. A dynamic test port's trunk conditioning is set to match the trunk conditioning of the circuit under test at the time the circuit is accessed.

If trunk conditioning is given in the input command the test port is provisioned as a *static* test port. A static test port's trunk conditioning is set at the time the port is provisioned. Its trunk conditioning does not change when a circuit is accessed for testing.

The *static* or *dynamic* designations have meaning only for access to unmapped terminations.

For access to a mapped termination, trunk conditioning is always adopted from the circuit under test.

Command

[I.31411]

GRTH:FRM xy,SEQ ww:TP kk[,<tc>]!

Completion Message

[O.31411]

M hh:mm:ss xy,ww n[vv] GRTH TP kk [<tc>] COMPL

Denial Message

[O.31411.01]

M hh:mm:ss xy,ww n[vv] GRTH TP kk[<tc>] NPCTP UEQD DNY

[O.31411.02]

M hh:mm:ss xy,ww n[vv] GRTH TP kk[<tc>] TP NSO DNY

[O.31411.03]

M hh:mm:ss xy,ww n[vv] GRTH TP kk[<tc>] TERM ASGN DNY

[O.31411.04]

M hh:mm:ss xy,ww n[vv] GRTH TP kk[<tc>] IMPR TC DNY

[O.31411.08]

M hh:mm:ss xy,ww n[vv] GRTH TP kk[<tc>] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TP - Test port

kk - Test port number (01 through 96)

A 1.544Mbit/s non-SLC NPC will support 12 test ports numbered as follows:

TA Port	Channel	
	FROM	TO
01,13,25,37,49,61,73,85	1	2
02,14,26,38,50,62,74,86	3	4
03,15,27,39,51,63,75,87	5	6
04,16,28,40,52,64,76,88	7	8
05,17,29,41,53,65,77,89	9	10
06,18,30,42,54,66,78,90	11	12
07,19,31,43,55,67,79,91	13	14
08,20,32,44,56,68,80,92	15	16
09,21,33,45,57,69,81,93	17	18
10,22,34,46,58,70,82,94	19	20
11,23,35,47,59,71,83,95	21	22
12,24,36,48,60,72,84,96	23	24

tc - Trunk conditioning

Represents the desired signaling and insertion word to be applied when a failure occurs. A trunk conditioning specification consists of a combination of a signaling specification followed by an insertion word specification. For example, TRSP,IW X'pq (input form).

<i>signaling</i>	<i>Explanation</i>
TC(ijkl,mnop)	2-way, 4-state signaling in binary.
TC(ijklmnop,qrstuvwxy)	2-way, 16-state signaling in binary.
TC(X'ab,X'cd)	2-way, 16-state in hexadecimal.
TRSP	Transparent, no signaling.

<i>insertion word</i>	<i>Explanation</i>
IW X'pq	The 8-bit pattern corresponding to the hexadecimal value of pq will be inserted in the downstream direction of a failure on either line.
TRB	Standard trouble code, equal to IW X'E4.
MUX	MUX out of sync code, equal to IW X'1A.

For 4-state signaling, the A/B signaling bits of both test port channels are specified by ijkl for the receive time slot interchange (RTSI), and by mnop for the transmit time slot interchange (TTSI).

For 16-state signaling, the A/B/C/D signaling bits of both test port channels are specified by efghijkl (or hexadecimal digits ab) for the RTSI, and by mnopqrst (or hexadecimal digits cd) for the TTSI.

NPCTP - NPC for test ports

UEQD - Unequipped

TP NSO - Test port not in sequence order

TERM - Terminated

ASGN - Assigned

IMPR - Improper

TC - Trunk conditioning

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

- 1E** Customer control or red circuit exists
- 82** Can not use 12-th TP when NPCTP is in the T1DM or DMI mode
- FF** Termination is in process of being rolled
- 50** Invalid MIU/MXR type specified
- 4B** channel already under test

GRTH,UNIT,FTMI,EQL

PROVISION FACILITY TERMINATING MODULE INTERFACE

Explanation Of Command

This message requests provisioning of the facility terminating module (FTM) and its interface and format converter in DACS II **UNIT q** with a specified equalization. Equalization may be specified for either a half or a whole FTM.

Command

[I.31321]

GRTH:FRM xy,SEQ ww:UNIT [q]q,FTMI d,EQL(l,r)!

Completion Message

[O.31321]

M hh:mm:ss xy,ww n[vv] GRTH UNIT [q]q FTMI d FC 0d 1d EQL(l r) \
COMPL

Denial Message

[O.31321.01]

M hh:mm:ss xy,ww n[vv] GRTH UNIT [q]q FTMI d FC 0d 1d EQL(l r) \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FC - Format converter

0 - FC side 0

1 - FC side 1

d - FC number (1 through 4)

FTMI - Facility terminating module interface

d - FTMI in the DACS II unit (1 through 4)

EQL - Equalization

l - Left half shelf equalization value (first 10 Dual Digroup Circuits)

r - Right half shelf equalization value (second 10 Dual Digroup Circuits)

Equalization option values for 255AS/24 gauge cable

l	<i>Explanation</i>
r	
1	000 to 100 feet
2	100 to 200 feet
3	200 to 300 feet
4	300 to 400 feet
5	400 to 500 feet

Equalization option values for 600 series/22 gauge cable

l	<i>Explanation</i>
r	
1	000 to 050 feet
2	051 to 267 feet
3	268 to 400 feet
4	401 to 533 feet
5	534 to 655 feet

Equalization option values for 1249/26 gauge cable

l	
r	<i>Explanation</i>
1	000 to 090 feet
2	090 to 180 feet
3	180 to 270 feet
4	270 to 360 feet
5	360 to 450 feet

COND - Condition

cc - Hexadecimal condition code

cc	<i>Explanation</i>
01	Subject entity is equipped
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
24	Unit type error

GRTH,UNIT,MIU,TYPE

GROWTH MULTIPLEXER INTERFACE UNIT

Explanation Of Command

This message equips one or more Multiplexer Interface Unit (MIU) circuit packs in a DS3 Unit. As many as seven MIUs can be equipped with one command.

Command

[I.31501]

GRTH:FRM xy,SEQ ww:UNIT [q]q,MIU c[-d][,TYPE mnxyz]!

Completion Message

[O.31501]

M hh:mm:ss xy,ww n[vv] GRTH UNIT [q]q MIU a TYPE mnxyz COMPL

Denial Message

[O.31501.01]

M hh:mm:ss xy,ww n[vv] GRTH UNIT [q]q MIU a[TYPE mnxyz] EQD \
DNY

[O.31501.02]

M hh:mm:ss xy,ww n[vv] GRTH UNIT [q]q MIU a[TYPE mnxyz] \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MIU - Multiplexer interface unit

c,
d - MIU numbers within the unit (P, 1 through 6)

TYPE - Type

mnxyz - MIU type. The only MIU type available is MI100.

EQD - the MIU is already equipped.

a - MIU number within the range of MIU c and MIU d.

cc - Hexadecimal condition code

cc *Explanation*

10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
50	Invalid MIU/MXR type specified
52	The MMFG is protected
09	Wrong MXR type grown for this MIU

GRTH,UNIT,MXR,TYPE,BERM,BERT,LBO

GROWTH MULTIPLEXER

Explanation Of Command

This command equips one or more regular Multiplexer (MXR) circuit packs and their associated DS3 facility's in the service slots of a DACS II DS3 Unit. It is also used to equip the Hybrid Multiplexer (HMXR) circuit packs and their associated DS3 facility's in the service slots of a DACS II Hybrid DS3 (HDS3) Unit.

The protection MXR or HMXR circuit pack is not grown because no specific DS3 facility is associated with it. The protection MXR or HMXR is provisioned when DS3 or HDS3 unit is grown.

Up to six MXRs or HMXRs and their DS3 facilities can be grown with one command.

There will be one output message (either completion or denial) for each MXR or HMXR that is grown.

Command

[I.31511]

```
GRTH:FRM xy,SEQ ww:UNIT [q]q,MXR c[-d]\  
[,TYPE mnxyz][,BERM s][,BERT t][,LBO <b>]!
```

Completion Message

[O.31511]

```
M hh:mm:ss xy,ww n[vv] GRTH UNIT [q]q MXR a \  
TYPE mnxyz BERM s BERT t LBO <b> COMPL
```

Denial Message

[O.31511.01]

M hh:mm:ss xy,ww n[vv] GRTH UNIT [q]q MXR a[TYPE mnxyz] \
[BERM s][BERT t][LBO] EQD DNY

[O.31511.02]

M hh:mm:ss xy,ww n[vv] GRTH UNIT [q]q MXR a 2 LN MSG:
[TYPE mnxyz][BERM s][BERT t][LBO]COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MXR - Multiplexer

c - MXR number within the unit (1 through 6)

d - MXR number within the unit (1 through 6)

Variable d is used to specify a range of MXRs

a - MXR number within the range of MXR c and MXR d

TYPE - Type

mnxyz - The DS3 format processed by the MXR:

mn - DS3 type

mn *Explanation*

MX The original R4.0 DS3 facility type supported by the Multiplexer (MXR) circuit pack (KCR-1).

EX The enhanced R6.0 DS3 facility type supported by the Enhanced Multiplexer (EMXR) circuit pack (KCR-5).

HX The hybrid facility type supported by the Hybrid Multiplexer (HMXR) circuit pack (KCR-8).

If the unit is a regular DS3U of unit type DT100, then the default is the MX type for backward compatibility.

If the unit is a Hybrid DS3U of unit type HT100, then the default is HX.

Allowed xyz values

Type Explanation

MX100 KCR-1 circuit pack with M13 framing
MX200 KCR-1 circuit pack with C-bit parity framing
EX100 KCR-5 circuit pack with M13 framing
EX200 KCR-5 circuit pack with C-bit parity framing
HX110 KCR-8 Hybrid circuit pack with M13 framing
 ANSI interpretation of X-bit values
HX100 KCR-8 Hybrid circuit pack with M13 framing
 Reverse of ANSI interpretation of X-bit values.

Type HX110 and HX100 set the X-bits (carried by the DS3 signal) in the transmit direction and interpret the value of the X-bits in the receive direction for the purpose of obtaining a Remote Alarm Indication (RAI) for the DS3 signal. Type HX110 interprets X-bit values (there are two X-bits) of "1" as normal, while values of "0" indicate an RAI. Type HX100 interprets X-bit values of "0" as normal and X-bit values of "1" as RAI.

The optional settings available for each MXR are:

BERM - Bit error rate calculation method

s - The requested BER calculation method

s BER calculation method

B Bipolar violations (BPV - default)

P DS3 Parity Errors

C Both Bipolar violations (BPV) and DS3 Parity Errors, support by HMXR only

BERT - Bit error rate threshold for declaring High BER condition

t - Requested BER threshold

t BER threshold

3 Corresponds to threshold of 10^{-3} (default)

6 Corresponds to threshold of 10^{-6}

LBO - Line buildout

b - LBO specification

b Explanation

ON Line build out is turned on

OFF Line build out is turned off (default)

LBO is required as shown in the following table for the different cabling types to the DSX-3.

734A Cabling	KS-19224,L2 Cabling	LBO
0 to 225 feet	0 to 75 feet	ON
225 to 450 feet	75 to 150 feet	OFF

Note: LBO may be used to change the LBO setting of an in-service, traffic- carrying Multiplexer-Multiplexer Interface Unit (MMFG).

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

GRTH,UNIT,TYPE,CONN

PROVISION A UNIT

Explanation Of Command

This command requests the provisioning of a DACS II unit.

For a NonCEF frame this will result in the provisioning of all cross-connect and time slot interchange circuit packs. For a CEF frame this will result in the provisioning of the expanded time slot interchanger. When this request has completed, all circuit packs required by the subject unit to cross-connect to other equipped units have been provisioned.

The unit type is optionally specified in the **TYPE** field.

The unit type can be a facility terminating unit, a DS3 terminating unit, a Hybrid DS3 terminating unit, or a digital signal processing unit.

If the unit is a digital signal processing unit, its associated digital signal processing interface is also provisioned. If the unit is a DS3 or a Hybrid DS3 facility terminating unit, both of its associated service and protection facility line interface packs, both sides of its formatter or hybrid formatter packs (side 0 and 1), and its protection multiplexer or hybrid multiplexer are also provisioned. Only facility line interface packs, Hybrid Formatter packs (HFMT), and Hybrid Multiplexer packs (HMXR) can be equipped in the Hybrid DS3 facility terminating unit. Therefore, FMT and MXR as shown in the command output messages should be interpreted as HFMT and HMXR when the Hybrid DS3 Unit type HT100 is provisioned.

Note: DMB, TSI, and FMT/HFMT circuit packs must be inserted into the inactive side of

DACS II. Inserting circuit packs into the active side may result in transmission "hits."

Command

For DACS II Non-CEF frames:

[I.31211]

```
GRTH:FRM xy,SEQ ww:UNIT q[,TYPE utxyz]\  
[,CONN(a[,b[,c[,d[,e [,f]]]]]])]!
```

For DACS II CEF frames:

[I.31211]

```
GRTH:FRM xy,SEQ ww:UNIT [q]q[,TYPE utxyz]!
```

Completion Message

For DACS II Non-CEF frames:

[O.31211]

```
M hh:mm:ss xy,ww n[vv] GRTH UNIT q utxyz\  
[ CONN a b c d e f]\
```

5 LN MSG:

```
CCB 0q 1q TOTAL TSIS tt NEW TSIS nn
```

```
sft sft sft sft sft sft sft sft sft sft sft sft  
sft sft sft sft sft sft sft sft sft sft sft sft  
sft sft sft sft sft sft sft sft sft sft sft sft EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH UNIT q utxyz\  
[ CONN a b c d e f]\
```

5 LN MSG:

```
CCB 0q 1q TOTAL TSIS tt NEW TSIS nn
```

```
sft sft sft sft sft sft sft sft sft sft sft sft  
sft sft sft sft sft sft sft sft sft sft sft sft  
sft sft sft sft sft sft sft sft sft sft sft sft EOM
```

```
M hh:mm:ss xy,ww n[vv] GRTH UNIT q utxyz\  
[ CONN a b c d e f]\
```

e LN MSG:

```
CCB 0q 1q TOTAL TSIS tt NEW TSIS nn
```

```
NEW TSIS sft sft ... sft sft  
NEW TSIS sft sft ... sft sft [COMPL]  
[FMT 0 1 FLI S P MXR P COMPL]
```

For DACS II CEF frames:

[O.31212]

```
M hh:mm:ss xy,ww n[vv] GRTH UNIT qq TYPE utxyz e LN MSG:
ETSI 0qq 1qq TOTAL ETSIS kk
0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr
0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr 0rr 1rr\
[ COMPL]
[FMT 0 1   FLI S P   MXR P COMPL]
```

Note: If the unit type is FT100 or DP100, the output will be a 4-line message. If the unit type is DT100 or HT100, the output will be a 5-line message.

Denial Message

[O.31211.01]

```
M hh:mm:ss xy,ww n[vv] GRTH UNIT [q]q TYPE utxyz\
{EQD uexyz|NSUP} DNY
```

[O.31211.02]

```
M hh:mm:ss xy,ww n[vv] GRTH UNIT [q]q TYPE utxyz COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

utxyz - Unit type as submitted in the input message

uexyz - Type of unit already equipped as

uexyz Explanation

FT100 FT = Facility Terminating Unit

DP100 DP = Digital Signal Processing Unit

DT100 DT = DS3 Facility Terminating Unit

HT100 HT = Hybrid DS3 Facility Terminating Unit

The unit type is optionally specified in the TYPE utxyz field. The unit type can be an FTxyz (Facility Terminating Unit), a DTxyz (DS3 Terminating Unit), a HTxyz (Hybrid DS3 Terminating Unit) or a DPxyz (Digital Signal Processing Unit) type.

Currently, only FT100, DT100, HT100, and DP100 types are supported by DACS II.

The unit type entered must be consistent with the unit type entered for the configuration file.

If the unit is a DPxyz type, its associated DSPI (Digital Signal Processing Interface) is also provisioned.

If the unit is a DTxyz or HTxyz type, both of its associated Service and Protection Facility Line Interface (FLI) packs, both sides of its Formatter (FMT) or Hybrid Formatter (HFMT) packs (side 0 and 1), and its Protection Multiplexer(MXR) or Hybrid Multiplexer (HMXR) pack are also provisioned.

For both Non-CEF and CEF frames, if the unit type is not entered, the unit type will default to FT100.

For Non-CEF frames, the optional CONN field is used if only a partial complement of the unit's TSI circuit packs is to be provisioned. If this field is not used, all TSI circuit packs are provisioned and the unit has full connectivity with other provisioned units.

CONN - Connectivity

a, b, c, d, e, f

- Time slot interchange numbers

A partial complement of the unit's TSIs have been provisioned. (If this field is absent, all of the unit's TSIs were provisioned.)

CCB - Cross-connect buffer

0q - CCB number side 0

1q - CCB number side 1

0q and 1q identify the cross-connect buffer(s) provisioned. q is the unit number (see UNIT above).

tt - Total number of provisioned TSIs in frame (02 through 72)

NEW - New

TSIS - Time slot interchangers

nn - Number of TSIs provisioned by command (02 through 22)

sft - TSI equipped status

s - Service side number (0 or 1)

f - Equipped FROM unit number (1 through 6) if equipped
- Not equipped

t - Equipped TO unit number (1 through 6) if equipped
- Not equipped

e - Number of lines in message

Equals either 4 or 5 depending on the type of the unit provisioned.

ETSI - Expanded time slot interchanger

0qq - ETSI number side 0

1qq - ETSI number side 1

0qq and 1qq identify the ETSI packs provisioned by this command.
qq is the unit number (see UNIT above).

Three dashes "---" are shown if an ETSI pack is not provisioned.

kk - Total number of provisioned ETSIs in frame (02 through 32)

rr - Unit number with the same definition as qq.

FMT - Formatter (FMT) or Hybrid Formatter (HFMT), sides 0 and 1
(automatically provisioned FMT with DT100 or HFMT with HT100 units)

FLI - Facility line interface

S - Service FLI (automatically provisioned with DT100 or HT100 units)

FLI - Facility line interface

P - Protection FLI (automatically provisioned with DT100 or HT100 units)

MXR - Multiplexer (MXR) or Hybrid Multiplexer (HMXR)

P - Protection multiplexer (MXR) or Hybrid Multiplexer (HMXR)
(automatically provisioned MXR with DT100 or HMXR with HT100 units)

EQD - Equipped

NSUP - Not supported

cc - Hexadecimal condition code

cc *Explanation*

- 27** Illegal connectivity specified
- 28** Connectivity contains unequipped units
- 97** Entity can't be addressed in this configuration
- 99** Unit type (xyz) not supported
- CA** Connectivity can not be specified for CEF unit

Contents

IN,PROGRESS	14-2
■ Explanation Of Command	14-2
■ Command	14-2
■ Completion Message	14-2
■ Denial Message	14-2
■ Autonomous Message	14-2
■ Explanation Of Parameters	14-3
INH,PMREPT,NPC,ALL	14-4
■ Explanation Of Command	14-4
■ Command	14-4
■ Nonhierarchical	14-4
■ Hierarchical	14-5
■ Completion Message	14-5
■ Nonhierarchical	14-5
■ Hierarchical	14-5
■ Denial Message	14-5
■ Nonhierarchical	14-5
■ Hierarchical	14-5
■ Autonomous Message	14-5
■ Explanation Of Parameters	14-6
INHSW,UNIT,MMFG,TOPRTN,TOSRVC	14-9
■ Explanation Of Command	14-9
■ Command	14-9
■ Completion Message	14-9
■ Denial Message	14-10
■ Autonomous Message	14-10

Contents

■ Explanation Of Parameters	14-10
INSTALL	14-11
■ Explanation Of Command	14-11
■ Command	14-17
■ Completion Message	14-18
■ Denial Message	14-18
■ Autonomous Message	14-18
■ Explanation Of Parameters	14-18
INVALID,SFW,ID,BLOCK,COND	14-19
■ Explanation Of Command	14-19
■ Command	14-19
■ Completion Message	14-19
■ Denial Message	14-19
■ Autonomous Message	14-19
■ Explanation Of Parameters	14-20

IN — INVALID

IN — INVALID

This section documents the commands **IN** through **INVALID**.

IN,PROGRESS

GENERIC IN PROGRESS MESSAGE

Explanation Of Command

This output message indicates that the requested action (verb) is in progress.

Command

Not applicable.

Completion Message

[O.55703]

M hh:mm:ss xy,ww n[vv] <verb> IN PROGRESS

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

Not applicable.

INH,PMREPT,NPC,ALL

INHIBIT DS1 PERFORMANCE MONITORING REPORT

Explanation Of Command

This message inhibits DACS II scheduled performance monitoring report output for DA and TA type NPCs. The user may inhibit performance monitoring report output for a single, range or all NPCs on the frame.

This command will handle NPC addressing in the input command as follows: If only a single NPC is addressed in the input command, then either a completion or denial response will be generated for the addressed NPC. DACS II will always deny invalid commands to specifically addressed NPCs.

If a range of NPCs is addressed and the feature applies to one or more NPCs within the range, DACS II will inhibit outputting the scheduled reports for the NPCs in the range that support this feature, but skip the NPCs which do not support this feature. DACS II provides a variety of line termination types which support different features and can be randomly mixed within the frame. If at least one of the NPCs in the addressed range supports this feature, DACS II will generate a completion response for the entire range of NPCs; individual denial responses will not be generated for NPCs within the range which do not support the feature. If *none* of the NPCs in the addressed range support the requested feature, DACS II will generate a range denial response.

Command

Nonhierarchical

[I.51161]

INH:FRM xy,SEQ ww:PMREPT,{NPC [s]abc[-[t]def]|ALL}!

Hierarchical

[I.51161]

INH:FRM xy,SEQ ww:PMREPT,{NPC uvmnp[-wxkqr]|ALL}!

Completion Message

Nonhierarchical

[O.51161]

M hh:mm:ss xy,ww n[vv] INH PMREPT {NPC [s]abc[-[t]def]|ALL} COMPL

Hierarchical

[O.51161]

M hh:mm:ss xy,ww n[vv] INH PMREPT {NPC uvmnp[-wxkqr]|ALL} COMPL

Denial Message

Nonhierarchical

[O.51161.01]

M hh:mm:ss xy,ww n[vv] INH PMREPT {NPC [s]abc[-[t]def]|ALL} COND cc DNY

Hierarchical

[O.51161.01]

M hh:mm:ss xy,ww n[vv] INH PMREPT {NPC uvmnp[-wxkqr]|ALL} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical starting NPC number

[t]def - The 3- or 4-digit nonhierarchical ending NPC number

The valid values are:

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical starting NPC number

wxkqr - Hierarchical ending NPC number

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

cc - Hexadecimal condition code

cc *Explanation*

15	NPC is unequipped
26	NPC type error
0C	PM scheduling report is already inhibited for this entity
17	Command did not execute for any entity specified in the command

INHSW,UNIT,MMFG,TOPRTN,TOSRVC

INHIBIT SWITCH MMFG

Explanation Of Command

This message requests the inhibition of automatic protection switching from multiplexer-multiple interface unit functional group (MMFG) c on a DS3 unit (DS3U) or a Hybrid DS3 unit (HDS3U) to MMFG P or the automatic switchback from MMFG P to service MMFG c (when MMFG c becomes in-service). Only automatic switches due to failure will be affected by this message.

If **TOPRTN** is specified and MMFG P is already protecting the MMFG c's facility, the command will be denied.

If **TOSRVC** is specified and MMFG c is not under protection, the command will be denied.

This inhibition will be removed if a switch occurs from the "selected" MMFG.

Command

[I.35311]

INHSW:FRM xy,SEQ ww:UNIT [q]q,MMFG c[-d],{TOPRTN|TOSRVC}!

Completion Message

[O.35311]

**M hh:mm:ss xy,ww n[vv] INHSW UNIT [q]q MMFG a {TOPRTN|TOSRVC} **
COMPL

Denial Message

[O.35311.01]

M hh:mm:ss xy,ww n[vv] INHSW UNIT [q]q MMFG a {TOPRTN|TOSRVC} \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MMFG - Multiplexer-multiplexer interface unit functional group

c, d - The number of the MMFG within the unit (1 - 6)

TOPRTN - To protection

TOSRVC - To service

When TOSRVC is specified, a range of MMFGs is not acceptable. In this case the command will be denied.

a - The number of the service MMFG within the range c and d

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

44 Service MXR is not equipped

4B The Service MMFG is already under protection

4C The Service MMFG is not under protection

4E The switch is already inhibited

INSTALL

UTILITY FOR APPLICATION SOFTWARE RELEASE INSTALLATION, REMOVAL, AND UPGRADE

Explanation Of Command

Software that runs on the Digital Signal Processing Platform (DSPP) circuit pack is called application software because it is treated by DACS II as a separate and distinct application that interacts with the DACS II generic software through an operating system like interface. Applications for the DSPP circuit pack are packaged and shipped as separately orderable software releases on PCMCIA cards. Documentation for an individual application is also separate from regular DACS II documentation and is shipped together with the PCMCIA card containing that application.

This command (**INSTALL**) performs installation services for application releases. These services consist of:

1. Listing application releases currently installed.
2. Installation of a new application release.
3. Upgrading an older release of an application with a newer release of that application.
4. Removal of an application release.

Usage of this command is limited to the Frame Administrator and users with Restricted Maintenance privileges. The following configuration must be present for a successful application installation, removal, or upgrade.

1. The Main Controller (MC) must be in Maintenance Condition (MCOND).
2. The SMEM slot of the MC must contain the following depending on the task:
 - For installing or upgrading an application the SMEM slot must have inserted into it a PCMCIA card purchased from Lucent Technologies that contains the application to be installed or upgraded.
 - For removing an application the SMEM slot should contain the normal DACS II card with the current executables and system database.

This command allows the listing of application version information, but DACS II must be in MCOND for this to work. Command I.51001 UTL::QRY,MEMSTAT should be used for listing application version information while DACS II is in-service.

The customer must perform the following steps to install an application:

1. The Main Controller must be placed in Maintenance Condition (MCOND).
2. The regular memory card in the SMEM slot must be removed logically and physically.
3. The memory card with the application must be inserted into slot SMEM and then must be restored.
4. The customer must invoke the INSTALL command as shown in the input command format section.
5. The INSTALL command appears as shown in Menu Display 1 below. The user is asked to respond with a number between "1" and "3" or with a "Q" to quit. A response of "1" initially generates a response as shown in Menu Display 1, which shows that in the PMEM slot there is a regular DACS II memory card. This card does not have an application program, thus no application line is shown. The memory card in the SMEM slot is identified as an application distribution card (called DSP DISTRIBUTION CARD), and it **does** have an application on it. Note that the type, the version, and the date stamp of when the application was built is given; this is the identity of the application.
6. The actual install happens when the user responds with a "2" to the INSTALL menu. This is shown in Menu Display 4.
7. Then the user can quit out of the install menu as shown in Menu Display 9. After quitting the install menu the user should remove the application card from the SMEM slot both logically and physically and then restore the regular DACS II memory card in the SMEM slot that had previously been removed.
8. Next the user must copy the executables from the regular PMEM card to the regular SMEM card by executing the command:

UTL : :BMTR, FROM PMEM, TO SMEM, EXCT !

This copying step is mandatory in order to ensure that the application does also reside on SMEM.

9. The user can now verify that the application resides on both memory cards by invoking the INSTALL menu one more time. A listing of the application will be like the one shown in Menu Display 2.
10. The user is now ready to put the Main Controller (MC) back into service.

Upgrading an application from one version to another is a very similar procedure as given above. The memory card carrying the new version of the application must be in the SMEM slot. Menu Display 3 shows what a listing of the applications looks like. Notice that the

regular DACS II card in PMEM has the application version that is to be replaced, while the application card in the SMEM slot has the application version that is to replace the current version. Menu Display 5 shows how the actual upgrade takes place if no NPCs are actually running the application. Menu Display 6 shows how the actual upgrade takes place if at least one NPC is running the application. The user gets a chance to reconsider the upgrade, which must be responded to with a "Y", before the actual upgrade takes place. Please note that as part of the upgrade the application is downloaded into the appropriate DSPP Circuit Pack(s) if they are in service and each affected DSPP Circuit Pack is then rebooted after the download is complete. This last step happens at the time the MC is placed back into service.

Menu Display 7 shows how to remove an application from the regular DACS II memory card. Again, the user is required to respond to "ARE YOU REALLY SURE" questions to ensure that no inadvertent mistakes are made. Menu Display 8 shows what happens when an attempt is being made to remove an application when at least one NPC is still running that application. The removal attempt is denied.

As previously stated, the execution of the **INSTALL** command generates a menu for the user. These menus are shown in nine displays next:

Menu Display 1:

Listing application releases (No application installed, but application card in SMEM slot):

***** DSP PLATFORM - LOAD INSTALLATION UTILITY *****

1. List DSPP Load Files
2. Install DSPP Load Files
3. Remove DSPP Load Files

Enter number of command [1-3], or Q to QUIT:1

DSP LOADS ON MEMORY CARDS:

```
===== LOADS ON PMEM: (DACS II CARD) =====
NAME          BYTES  TYPE  VERSION    DATE BUILT
-----
===== LOADS ON SMEM: (DSP DISTRIBUTION CARD) =====
NAME          BYTES  TYPE  VERSION    DATE BUILT
-----
SDxload       bbbbbb  SDx   g.ii.rr   yy/mm/dd hh:mm:ss
-----
```

Menu Display 2:

Listing application releases (Both PMEM and SMEM have the same application):

***** DSP PLATFORM - LOAD INSTALLATION UTILITY *****

1. List DSPP Load Files
2. Install DSPP Load Files
3. Remove DSPP Load Files

Enter number of command [1-3], or Q to QUIT:1

DSP LOADS ON MEMORY CARDS:

```
===== LOADS ON PMEM: (DACS II CARD) =====
NAME          BYTES  TYPE  VERSION    DATE BUILT
-----
SDxload        bbbbbbb SDx   g.ii.rr   yy/mm/dd hh:mm:ss
=====
===== LOADS ON SMEM: (DACS II CARD) =====
NAME          BYTES  TYPE  VERSION    DATE BUILT
-----
SDxload        bbbbbbb SDx   g.ii.rr   yy/mm/dd hh:mm:ss
=====
```

Menu Display 3:

Listing application releases (PMEM and SMEM have different versions of the same application, SMEM has an application card)

***** DSP PLATFORM - LOAD INSTALLATION UTILITY *****

1. List DSPP Load Files
2. Install DSPP Load Files
3. Remove DSPP Load Files

Enter number of command [1-3], or Q to QUIT:1

DSP LOADS ON MEMORY CARDS:

```
===== LOADS ON PMEM: (DACS II CARD) =====
NAME          BYTES  TYPE  VERSION    DATE BUILT
-----
SDxload        bbbbbbb SDx   g.ii.rr   yy/mm/dd hh:mm:ss
=====
===== LOADS ON SMEM: (DSP DISTRIBUTION CARD) =====
NAME          BYTES  TYPE  VERSION    DATE BUILT
-----
SDxload        bbbbbbb SDx   g.ii.rr   yy/mm/dd hh:mm:ss
=====
```

Menu Display 4:

Installing a new application release:

***** DSP PLATFORM - LOAD INSTALLATION UTILITY *****

1. List DSPP Load Files
2. Install DSPP Load Files
3. Remove DSPP Load Files

Enter number of command [1-3], or Q to QUIT:2

Installing DSP load file: x.xx/SDxload, bbbbbb bytes from SMEM to PMEM

Installation Complete, Number of files installed from SMEM to PMEM: 1.

Menu Display 5:

Upgrading an older release of an application with a newer release of that application:

***** DSP PLATFORM - LOAD INSTALLATION UTILITY *****

1. List DSPP Load Files
2. Install DSPP Load Files
3. Remove DSPP Load Files

Enter number of command [1-3], or Q to QUIT:2

WARNING: different SDxload file exists on target: PMEM

OLD (PMEM): SDxxx g.ii.rr yy/mm/dd hh:mm:ss

NEW (SMEM): SDxxx g.ii.rr yy/mm/dd hh:mm:ss

0 NPCs may be affected

Do you wish to continue overwrite of this file? [y/N]:Y

Installing DSP load file: x.xx/SDxload, bbbbbb bytes from SMEM to PMEM

Installation Complete, Number of files installed from SMEM to PMEM: 1.

Menu Display 6:

Upgrading an older release of an application with a newer release
of that application while at least one NPC is running the application.

***** DSP PLATFORM - LOAD INSTALLATION UTILITY *****

1. List DSPP Load Files
2. Install DSPP Load Files
3. Remove DSPP Load Files

Enter number of command [1-3], or Q to QUIT:2

WARNING: different SDxload file exists on target: PMEM

OLD (PMEM): SDxxx g.ii.rr yy/mm/dd hh:mm:ss

NEW (SMEM): SDxxx g.ii.rr yy/mm/dd hh:mm:ss

x NPCs may be affected

Do you wish to continue overwrite of this file? [y/N]:Y

Installing DSP load file: x.xx/SDxload, bbbbbbb bytes from SMEM to PMEM

Installation Complete, Number of files installed from SMEM to PMEM: 1.

Menu Display 7:

Removing an application release:

***** DSP PLATFORM - LOAD INSTALLATION UTILITY *****

1. List DSPP Load Files
2. Install DSPP Load Files
3. Remove DSPP Load Files

Enter number of command [1-3], or Q to QUIT:3

WARNING: This function will REMOVE a DSP PLATFORM load
from the ISX flash card you specify.

Are you REALLY SURE you wish to proceed? [y/N]: Y

Enter Device [A=PMEM, B=SMEM]: A

----- REMOVE FILES: PMEM DEVICE -----

1. Remove SDxload (bbbbbbb bytes)
- Q. QUIT

Enter File number to remove, or "Q" to QUIT: 1

WARNING: This will remove SDxload on PMEM.

Are you REALLY sure? [y/N]: Y

File SDxload removed from PMEM.

Menu Display 8:

Attempting to remove an application release when NPCs are running that application:

***** DSP PLATFORM - LOAD INSTALLATION UTILITY *****

1. List DSPP Load Files
2. Install DSPP Load Files
3. Remove DSPP Load Files

Enter number of command [1-3], or Q to QUIT:3

WARNING: This function will REMOVE a DSP PLATFORM load
from the ISX flash card you specify.

Are you REALLY SURE you wish to proceed? [y/N]: Y

Enter Device [A=PMEM, B=SMEM]: A

----- REMOVE FILES: PMEM DEVICE -----

1. Remove SDxload (bbbbbbb bytes) 1 NPCs using load!
- Q. QUIT

Enter File number to remove, or "Q" to QUIT: 1

Can't remove file SDxload, there are 1 NPCs using this load

Menu Display 9:

Quitting the INSTALL menu:

***** DSP PLATFORM - LOAD INSTALLATION UTILITY *****

1. List DSPP Load Files
2. Install DSPP Load Files
3. Remove DSPP Load Files

Enter number of command [1-3], or Q to QUIT:Q

INSTALL QUIT

Command

[I.55721]

INSTALL;

Completion Message

[O.55721]

<install menu> and <user responses>
INSTALL QUIT

Denial Message

M hh:mm:ss xy,ww n[vv] INSTALL 2 LN MSG:
[MUST BE USER DAX OR HAVE RMON PRIVILEGE TO USE INSTALL DNY]
[FRAME MUST BE IN MCOND TO USE INSTALL DNY]

Autonomous Message

Not applicable.

Explanation Of Parameters

INSTALL

- Invoke the install menu to list, install, upgrade, or remove application files.

g.ii.rr - Generic.issue.release string that identifies the version of the application

SDx - The "x" in the type field SDx identifies the application

SD1 X.50/X.57 Subrate application

SD3 Digital Multipoint Bridge application

SD4 DDS Subrate and Multipoint Junction Unit application

SDx Any future application with identity "x"

bbbbbb - Number of bytes in this version of the application

INVALID,SFW,ID,BLOCK,COND

INVALID SOFTWARE IDENTIFICATION BLOCK

Explanation Of Command

This message indicates that either a software identification block check failed or that a mismatch exists in the generic number, point issue, or release number.

Command

Not applicable.

Completion Message

[O.01291]

I hh:mm:ss xy,ww INVALID SFW ID BLOCK COND cc COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

SFW - Software

ID - Identification

BLOCK - Block

COND - Condition

cc - Hexadecimal condition code

cc	Explanation

20	Software Identification Block is not readable

21	Software Identification Block failed comparison

22	Release number mismatch

23	Point number mismatch

24	PDI Version number mismatch

A5	FPI on SMEM does not match one on PMEM

Contents

LINE	15-2
■ Explanation Of Command	15-2
■ Command	15-2
■ Completion Message	15-2
■ Denial Message	15-2
■ Autonomous Message	15-2
■ Explanation Of Parameters	15-3
LIST,END	15-4
■ Explanation Of Command	15-4
■ Command	15-4
■ Completion Message	15-4
■ Denial Message	15-5
■ Autonomous Message	15-6
■ Explanation Of Parameters	15-6
LOGIN,USER,PASSWD	15-7
■ Explanation Of Command	15-7
■ Command	15-8
■ Completion Message	15-8
■ Denial Message	15-8
■ Autonomous Message	15-8
■ Explanation Of Parameters	15-9
LOGOFF,USER,LINK,INCL	15-10
■ Explanation Of Command	15-10
■ Command	15-10
■ Completion Message	15-10
■ Denial Message	15-11



Contents

■ Autonomous Message	15-11
■ Explanation Of Parameters	15-11

LINE — LOGOFF

LINE — LOGOFF

This section documents the commands **LINE** through **LOGOFF**.

LINE

QUERY LINE NUMBER

Explanation Of Command

This command retrieves the current line number and the total number of lines within the macro while in a macro session.

Command

[I.19071]

LINE[:FRM xy,SEQ ww:]!

Completion Message

[O.19071]

**M hh:mm:ss xy,ww n[vv] LINE <line pointer> TOTAL \
<line total> COMPL**

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

LINE - Line

line pointer

- Current line number

TOTAL - Total

line total

- Total number of lines within the macro

LIST,END

LIST MACRO CONTENTS

Explanation Of Command

This command is used to list the contents of a macro. If neither a range of line numbers nor END is specified then the line pointed to by the line pointer (the current line) is listed.

Command

[I.19061]

LIST[:FRM xy,SEQ ww:{<starting line>|END}[-{<ending line>|\nEND}]]!

Completion Message

If the macro contains no component command,

[O.19061]

M hh:mm:ss xy,ww n[vv] LIST[{<starting line>|\nEND}[-{<ending line>|END}]] NONE COMPL

If the macro contains one or more component commands,

[O.19062]

```
M hh:mm:ss xy,ww n[vv] LIST[ {<starting line>|\
END}[-{<ending line>|END}]] e LN MSG:
00001 <first 65 characters of 1st component command text>
    <remaining characters of 1st component command text>
    .
    .
    .
mmmmm <first 65 characters of mth component command text>
    <remaining characters of mth component command text> \
{EOM|COMPL}

M hh:mm:ss xy,ww n[vv] LIST[ <starting line>\
[-<ending line>]] e LN MSG:
nnnnn <first 65 characters of nth component command text>
    <remaining characters of nth component command text>
    .
    .
    .
ppppp <first 65 characters of pth component command text>
    <remaining characters of pth component command text> \
{EOM|COMPL}

M hh:mm:ss xy,ww n[vv] LIST[ <starting line>\
[-<ending line>]] e LN MSG:
qqqqq <first 65 characters of qth component command text>
    <remaining characters of qth component command text>
    .
    .
    .
zzzzz <first 65 characters of zth component command text>
    <remaining characters of zth component command text> \
COMPL
```

Denial Message

[O.19061.01]

```
M hh:mm:ss xy,ww n[vv] LIST[ {<starting line>|\
END}[-{<ending line>|END}]] COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

starting line

- Beginning line number of a line range (1, 2, ..., n)

Starting line indicates the line number of the first line of a range of lines within a macro that are to be listed.

ending line

- Ending line number of a line range (2, 3, ..., n+1)

Ending line indicates the line number of the last line of a range of lines within a macro that are to be deleted.

END - End

Line number of the line at the end of the macro.

00001,

mmmmm,

nnnnn,

ppppp,

qqqqq,

zzzzz - Component command line numbers (00001 through 99999)

cc - Hexadecimal condition code

cc *Explanation*

6B Invalid line number

6E No edit session active

LOGIN,USER,PASSWD

LOG ON TO DACS II

Explanation Of Command

Note: Before logging on to DACS II for the first time, it is suggested that the user thoroughly read the documentation for this message.

This command allows a user or frame administrator to identify himself/herself to DACS II by an identification code, the **user id**, on any link.

DACS II checks the user id and password against entries previously stored in the data base. If the user is not authorized, DACS II will deny the input command.

A user can log on to DACS II from more than one link.

If on a Snider administrative link, the command must be entered as follows:

LOGIN:FRM xy,SEQ ww:USER <user id>!

The DACS II system will respond with the following dialogue:

PASSWD: The user enters a password. Note that the password is not echoed by DACS II.

If on an X.25 administrative link, the command must be entered as follows:

LOGIN:FRM xy,SEQ ww:USER <user id>,PASSWD <user password>!

Output from this command is sent only to the link on which the command was input.

Command

[I.39001]

LOGIN:FRM xy,SEQ ww:USER <user id>[,PASSWD <user password>]!

If the user is on a Snider protocol administrative link, the message is entered as follows:

[I.39001]

LOGIN:FRM xy,SEQ ww:USER <user id>!

Then DACS II will prompt the following:

PASSWD: <user enters the user password>

Completion Message

[O.39001]

M hh:mm:ss xy,ww n[vv] LOGIN USER <user id> COMPL

WARNING MESSAGE

THIS SYSTEM IS RESTRICTED TO [Lucent Technologies]AUTHORIZED USERS FOR BUSINESS PURPOSES. UNAUTHORIZED ACCESS IS A VIOLATION OF THE LAW. THIS SERVICE MAY BE MONITORED FOR ADMINISTRATIVE AND SECURITY REASONS. BY PROCEEDING, YOU CONSENT TO THIS MONITORING.

Denial Message

[O.39001.01]

M hh:mm:ss xy,ww n[vv] LOGIN USER <user id> COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

USER - User

user id

- User identifier

The user login identification (two to eight alphabetic characters)

PASSWD - Password

user password

- User password (at least six alphanumeric characters)

cc - Hexadecimal condition code

cc *Explanation*

D3 User does not exist

D4 A user is already logged in on the link/vc

D6 Incorrect or missing password

LOGOFF,USER,LINK,INCL

LOG OFF USER OR LINK

Explanation Of Command

This command requests DACS II to log off a user or a link. A user is specified by his or her **<user id>**; a link, by its physical link number. The virtual circuit number is optional. The INCL keyword is also optional. The virtual circuit number and INCL are mutually exclusive. The INCL keyword must be specified to log off all virtual circuits of an X.25 link (5 or 6).

The DACS II frame administrator can use the **<user id>** option from any link to log off any user on another link. If the user is logged in on more than one link and is not the frame administrator, DACS II will log the user off every link. An autonomous message will appear on the user's link if the frame administrator logs a user out.

Output from this command is sent only to the link on which the command was input.

Command

[I.39101]

LOGOFF:FRM xy,SEQ ww:{USER <user id>|LINK j[mm][,INCL]}!

Completion Message

[O.39101]

**M hh:mm:ss xy,ww n[vv] LOGOFF {USER <user id>|LINK j[mm][,INCL]} **
COMPL

Denial Message

[O.39101.01]

M hh:mm:ss xy,ww n[vv] LOGOFF {USER <user id>|LINK j[mm][,INCL]} \

COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

USER - User

user id

- User identifier (two to eight alphabetic characters)

User login identification

TERM - Terminal (link)

LINK - Link

j [mm] - Administrative link number

j - Physical link number (1 through 6)

mm - Virtual circuit number (01 through 16)

The virtual circuit number must be entered when logging off a single virtual circuit of an X.25 link.

INCL - Inclusive

Include virtual circuits of links 5 and 6. The INCL keyword can only be entered with X.25 links 5 and 6, and no virtual circuit number is allowed when this keyword is used. That is, "mm" and "INCL" are mutually exclusive. In addition, the INCL keyword is also mutually exclusive with the "<user id>". When the INCL keyword is entered, it means that the logoff applies to all the virtual circuits of X.25 link (5 or 6).

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

- D3** User does not exist
- D5** No user is logged in on the link/vc
- D7** Cannot execute privileged command
- DA** User is not logged in
- E1** Virtual circuit is not specified for X.25 link
- E2** Invalid link number specified
- E3** Invalid keyword(s) combination specified

Contents

MC,MCOND	16-2
■ Explanation Of Command	16-2
■ Command	16-2
■ Completion Message	16-2
■ Denial Message	16-2
■ Autonomous Message	16-2
■ Explanation Of Parameters	16-3
MC,RESET,RELEASE,ISSUE,FPKG,COND	16-4
■ Explanation Of Command	16-4
■ Command	16-4
■ Completion Message	16-4
■ Denial Message	16-4
■ Autonomous Message	16-4
■ Explanation Of Parameters	16-5
MOVE,FROM,END,TO	16-8
■ Explanation Of Command	16-8
■ Command	16-8
■ Completion Message	16-8
■ Denial Message	16-8
■ Autonomous Message	16-9
■ Explanation Of Parameters	16-9
MP,STARTUP,STF,ATP	16-10
■ Explanation Of Command	16-10
■ Command	16-10
■ Completion Message	16-10
■ Denial Message	16-10

Contents

■ Autonomous Message	16-10
■ Explanation Of Parameters	16-11
MTC,STF,ATP	16-12
■ Explanation Of Command	16-12
■ Command	16-12
■ Completion Message	16-12
■ Denial Message	16-12
■ Autonomous Message	16-12
■ Explanation Of Parameters	16-13

MC — MTC

MC — MTC

This section documents the commands **MC** through **MTC**.

MC,MCOND

UTILITIES

Explanation Of Command

This autonomous message reports that the Main Controller is in maintenance condition during the boot process.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.58011]

I hh:mm:ss xy,ww MC MCOND

Explanation Of Parameters

MC - Main controller

MCOND - Maintenance condition

MC,RESET,RELEASE,ISSUE,FPKG,COND

MAIN CONTROLLER RESET RELEASE DACS II ISSUE

Explanation Of Command

This message is used to report that the reset procedure has successfully completed.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01261]

I hh:mm:ss xy,ww n[vv] MC RESET RELEASE DACSIgg.pp ISSUE r \\
2 LN MSG:
FPKG kkttuuvv [COND cc] COMPL

Explanation Of Parameters

MC - Main controller

RESET - Reset

RELEASE
- Release

ISSUE - Issue

gg.pp - DACS II software release number

r - Software issue number of the release

FPKG - Feature package

kkttuuvv
- Feature package identification (Hex)

00000001	DS1
00000002	CEPT
00000004	Subrate
00000008	Direct SLC® 96 and Series 5 Carrier Interface
00000010	DS3 Terminations
00000020	Enhanced CEPT
	C-bit
	C-bit filtering
	RPSFI
00000040	Switched Teleconferencing
00000080	CEF
00000100	Enhanced DS1 Performance Monitoring
00000200	DS0/DS1 Roll
00000400	Security Warning Message
00000800	Nx64kbit Test Access
00001000	Clear 2MB/s Interface
00002000	TS0 to Non-TS0 Cross-connection
00004000	2MB/S Roll
00008000	SPARE
00010000	TRT/FT Features
	Intervention Level
00020000	DS3 Hybrid

In general a feature package identification code is a combination of several individual feature package numbers. To determine the individual features that make up a feature package it is necessary to decode the feature package identification code. This code is an eight digit hexadecimal number. Each hexadecimal number represents a four-bit binary number. Within this binary number each feature is associated with one particular bit. Consequently to determine the feature list from a feature package identification code it is necessary to convert each hexadecimal digit to its binary equivalent and look up the features in the list above. For example the feature package identification code 0000000F can be converted to the following binary number working from left to right one hex digit at a time.

0000 0000 0000 0000 0000 0000 0000 1111

This number contains eight binary numbers each representing one of the hexadecimal numbers in the feature package identification code 0000000F. The rightmost number of the code contains four features since there are four bits set to one. This would be decoded as follows using the table of features above.

	binary	hex	Feature
	0001	1	DS1
	0010	2	CEPT
	0100	4	Subrate
	1000	8	Direct SLC
Total	1111	F	(DS1 + CEPT + Subrate + SLC)

COND - Condition

DACSII - Digital access and crossconnect system II

cc - Hexadecimal condition code

cc *Explanation*

- 46** Failed to boot CONF file
- 47** Failed to boot DB
- 48** Failed to boot journal--recurrence indicates database corruption
- 49** Failed to boot unit
- 4A** SMEM error, boot from PMEM
- 4B** PMEM error, boot from SMEM
- 4C** Failed to boot CI
- 51** General boot failure (vanilla flavor)
- 18** DSPI not equipped, not in service, or failed
- 20** Software Identification Block is not readable
- 21** Software Identification Block failed comparison
- 22** Release number mismatch
- 23** Point number mismatch

cc *Explanation*

- 24** PDI Version number mismatch
- 4D** MP database not consistent with Configuration file
- 52** Database is empty
- 3F** G4 to G4.1 retrofit failed
- 91** Can't mount or unmount SMEM
- 92** Can't mount or unmount PMEM

MOVE, FROM, END, TO

MOVE MACRO LINES

Explanation Of Command

This command is used to move one or more lines and place them after a specified line in the macro while in a macro session.

If only one line is specified, the **starting line** or **END**, then only that line is moved to **destination line**.

Command

[I.19091]

```
MOVE:FRM xy,SEQ ww:FROM {<starting line>|END}\  
[-{<ending line>|END}],TO {<destination line>|END}!
```

Completion Message

[O.19091]

```
M hh:mm:ss xy,ww n[vv] MOVE FROM {<starting line>|END}\  
[-{<ending line>|END}] TO {<destination line>|END} COMPL
```

Denial Message

[O.19091.01]

```
M hh:mm:ss xy,ww n[vv] MOVE FROM {<starting line>|END}\  
[-{<ending line>|END}] TO {<destination line>|END} COND cc \  
DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From

starting line

- Beginning line number of a line number range (1, 2, ..., n)

Starting line indicates the first line of the group of lines to be moved.

ending line

- Ending line number of a line number range (2, 3, ..., n+1)

Ending line indicates the end line of the group of lines to be moved.

END - End

END is a special line number that marks the position of the last line in the macro. If END is specified in place of ending line then the lines from starting line through END will be moved to destination line.

If END is specified as destination line then the line range specified in the command will be moved, as a unit, to the line following END.

The line number associated with END will change to the new line number of the last line moved.

TO - To

destination line

- Destination line number for the move (0, 1, 2, ..., n)

The first line of the lines to be moved will be placed on the line following destination line.

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

6B Invalid line number

MP,STARTUP,STF,ATP

STARTUP

Explanation Of Command

This message indicates that The main processor has initialized itself, established local area network communications between itself and the communications interface or the enhanced communications interface and has performed self-diagnostics. The results of these diagnostics are reported as some tests failed or all tests passed.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01221]

MP STARTUP {STF|ATP}

Explanation Of Parameters

MP - Main processor

STARTUP

- Startup

Indicates initialization

STF - Some tests failed

ATP - All tests passed

MTC,STF,ATP

MAINTENANCE

Explanation Of Command

This message indicates that the maintenance controller has initialized itself and has performed self-diagnostics. The results of these diagnostics are reported as some tests failed or as all tests passed passed.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01281]

MTC {STF|ATP}

Explanation Of Parameters

MTC - Maintenance circuit

STF - Some tests failed

ATP - All tests passed

Contents

OCNT, FROM, TO, MPM, CUS, INCL, RDC	17-2
■ Explanation Of Command	17-2
■ Command	17-2
■ Nonhierarchical	17-2
■ Hierarchical	17-2
■ Completion Message	17-3
■ Nonhierarchical	17-3
■ Hierarchical	17-3
■ Denial Message	17-3
■ Nonhierarchical	17-3
■ Hierarchical	17-3
■ Autonomous Message	17-4
■ Explanation Of Parameters	17-4
OCNT, FROM, TO, RDC, CUS, INCL, PRIOUT	17-15
■ Explanation Of Command	17-15
■ Command	17-15
■ Nonhierarchical	17-15
■ Hierarchical	17-16
■ Completion Message	17-16
■ Nonhierarchical	17-16
■ Hierarchical	17-16
■ Denial Message	17-16
■ Nonhierarchical	17-16
■ Hierarchical	17-17
■ Autonomous Message	17-17
■ Explanation Of Parameters	17-17

Contents

OCNT,FROM,TO,RDC,CUS,INCL,PRIOUT	17-28
■ Explanation Of Command	17-28
■ Command	17-28
■ Nonhierarchical	17-28
■ Hierarchical	17-28
■ Completion Message	17-29
■ Nonhierarchical	17-29
■ Hierarchical	17-29
■ Denial Message	17-29
■ Nonhierarchical	17-29
■ Hierarchical	17-29
■ Autonomous Message	17-29
■ Explanation Of Parameters	17-30
OCON,FROM,TO,MPM,CUS,INCL,RDC	17-37
■ Explanation Of Command	17-37
■ Command	17-37
■ Nonhierarchical	17-37
■ Hierarchical	17-37
■ Completion Message	17-38
■ Nonhierarchical	17-38
■ Hierarchical	17-38
■ Denial Message	17-38
■ Nonhierarchical	17-38
■ Hierarchical	17-38
■ Autonomous Message	17-39
■ Explanation Of Parameters	17-39
OCON,FROM,TO,RDC,CUS,INCL,PRIOUT	17-51
■ Explanation Of Command	17-51
■ Command	17-51
■ Nonhierarchical	17-51
■ Hierarchical	17-51
■ Completion Message	17-52
■ Nonhierarchical	17-52
■ Hierarchical	17-52
■ Denial Message	17-52
■ Nonhierarchical	17-52
■ Hierarchical	17-53
■ Autonomous Message	17-53

Contents

■ Explanation Of Parameters	17-53
OCN,FROM,TO,RDC,CUS,INCL,PRIOUT	17-63
■ Explanation Of Command	17-63
■ Command	17-63
■ Nonhierarchical	17-63
■ Hierarchical	17-63
■ Completion Message	17-63
■ Nonhierarchical	17-64
■ Hierarchical	17-64
■ Denial Message	17-64
■ Nonhierarchical	17-64
■ Hierarchical	17-64
■ Autonomous Message	17-64
■ Explanation Of Parameters	17-65
ODIS,FROM,TO,INCL,OOS,DCC,PRIOUT	17-72
■ Explanation Of Command	17-72
■ Command	17-72
■ Nonhierarchical	17-72
■ Hierarchical	17-72
■ Completion Message	17-72
■ Nonhierarchical	17-72
■ Hierarchical	17-73
■ Denial Message	17-73
■ Nonhierarchical	17-73
■ Hierarchical	17-73
■ Autonomous Message	17-73
■ Explanation Of Parameters	17-74
ODIS,FROM,TO,OOS,INCL,PRIOUT	17-81
■ Explanation Of Command	17-81
■ Command	17-81
■ Nonhierarchical	17-81
■ Hierarchical	17-81
■ Completion Message	17-81
■ Nonhierarchical	17-81
■ Hierarchical	17-82
■ Denial Message	17-82
■ Nonhierarchical	17-82
■ Hierarchical	17-82

Contents

■ Autonomous Message	17-82
■ Explanation Of Parameters	17-83
OPR,LPBK,NPC,LOCN	17-90
■ Explanation Of Command	17-90
■ Command	17-91
■ Nonhierarchical	17-91
■ Hierarchical	17-91
■ Completion Message	17-91
■ Nonhierarchical	17-91
■ Hierarchical	17-92
■ Denial Message	17-92
■ Nonhierarchical	17-92
■ Hierarchical	17-92
■ Autonomous Message	17-92
■ Explanation Of Parameters	17-92
OPR,LPBK,UNIT,MMFG	17-100
■ Explanation Of Command	17-100
■ Command	17-100
■ Completion Message	17-101
■ Denial Message	17-101
■ Autonomous Message	17-101
■ Explanation Of Parameters	17-101
OPR,TSIG,NPC	17-103
■ Explanation Of Command	17-103
■ Command	17-104
■ Nonhierarchical	17-104
■ Hierarchical	17-104
■ Completion Message	17-104
■ Nonhierarchical	17-104
■ Hierarchical	17-104
■ Denial Message	17-104
■ Nonhierarchical	17-104
■ Hierarchical	17-104
■ Autonomous Message	17-105
■ Explanation Of Parameters	17-105
OVERLOAD,MP,CI,UNIT,UC,TN,PROCESSOR	17-108
■ Explanation Of Command	17-108

Contents

■ Command	17-108
■ Completion Message	17-108
■ Denial Message	17-108
■ Autonomous Message	17-109
■ Explanation Of Parameters	17-110

OCNT — OVERLOAD

OCNT — OVERLOAD

This section documents the commands **OCNT** through **OVERLOAD**.

OCNT, FROM, TO, MPM, CUS, INCL, RDC

ONE-WAY CROSS-CONNECT TERMINATED MULTIPOINT CIRCUIT

Explanation Of Command

This message requests a leg to be one-way terminated and cross-connected to a multipoint circuit. The terminated cross-connection means that the circuit will be set up in the terminated state with the disconnect channel code inserted in both directions of transmission. Note that for the SLC[®] related denial messages, "not provisioned" means not added and/or not grown.

The backbone and broadcast terminations are on the virtual NPCs.

If the user wants to cross-connect Nx64 kbits/s circuits, then the range feature of this command should be used.

Command

Nonhierarchical

[|.12121]

OCNT:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk],\
MPM(fmd,tmd),<tc>[, {CUS|INCL}][,RDC]!

Hierarchical

[|.12121]

OCNT:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\
MPM(fmd,tmd),<tc>[, {INCL|CUS}][,RDC]!

Completion Message

Nonhierarchical

[O.12121]

M hh:mm:ss xy,ww n[vv] OCNT [s]abcddd[-eee],[t]ghijjj[-kkk] \\
2 LN MSG:
fmd,tmd <tc>[NOBBL {F|T}][CUS][RDC] COMPL

Hierarchical

[O.12121]

M hh:mm:ss xy,ww n[vv] OCNT uvmnpddd[-eee],wxkqrjjj[-kkk] \\
fmd,tmd <tc>[NOBBL {F|T}][CUS][RDC] COMPL

Denial Message

Nonhierarchical

[O.12121.01]

M hh:mm:ss xy,ww n[vv] OCNT [s]abcddd[-eee],[t]ghijjj[-kkk] \\
[mmm,nnn] cc <st> DNY

[O.12121.02]

M hh:mm:ss xy,ww n[vv] OCNT [s]abcddd[-eee],[t]ghijjj[-kkk] \\
[mmm,nnn] d <st> DNY

Hierarchical

[O.12121.01]

M hh:mm:ss xy,ww n[vv] OCNT uvmnpddd[-eee],wxkqrjjj[-kkk] \\
[mmm,nnn] cc <st> DNY

[O.12121.02]

M hh:mm:ss xy,ww n[vv] OCNT uvmnpddd[-eee],wxkqrjjj[-kkk] \\
[mmm,nnn] d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

TO - To

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

9961-9966

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical FROM NPC number

uv, wx - Unit number

m, k - Module number

np, qr - NPC number within the module

The valid values are listed below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

VI NPC numbers listed by unit, module, and NPC Number
Unit Type VI (Virtual)

Unit	Module	NPC	
99	1	01-02	(DACS II Non-CEF frames)
99	1	01-06	(DACS II CEF frames)

ddd,
jjj
eee,
kkk

- FROM channel numbers

- TO channel numbers denoting end of range specification

Channel numbers

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers

001-500 (Virtual NPC)

001-085 (MB NPC)

MPM - Multipoint mode

fmd - FROM mode

tmd - TO mode

Modes fmd and tmd set the modes of the FROM and TO ends of the circuit.
There are three possible values of fmd and tmd:

fmd

tmd *Explanation*

LEG Nonvirtual circuit end of the cross-connections. Must be an FTU, DS3U or HDS3U channel.

BRD Nonbackbone leg of a virtual conference. Must be a virtual NPC channel.

BBL Backbone leg of a virtual conference. Must be a virtual NPC channel.

For OCNT multipoint circuits, there are two valid combinations for fmd and tmd:

fmd, tmd

(LEG,BBL) - for the backbone leg of a broadcast multipoint circuit

(BRD,LEG) - for the broadcast legs of the multipoint circuit.

Note: Default values for noise guard (NG) and echo suppression (ES) are applied to symmetrical bridges (multipoint mode SYM) and polling circuits (multipoint mode BBL,BRD). These default values are:

Symmetrical bridges	NG = -18 db	ES = -18 db
Polling circuits	NG = 0 db	ES = 0 db

NOBBL - No Backbone Leg

F - From

T - To

tc - Trunk conditioning

Represents the desired cross-connected signaling and insertion word applied when a failure occurs. The tc options allowed are as follows:

<i>tc</i>	<i>Explanation</i>
TRSP, TRB	no signaling, insertion word pattern of E4
TRSP, MUX	no signaling, insertion word pattern of 1A
TRSP, IW X'pq	no signaling, insertion word pattern of pq
TRSP	no signaling

All leg connections to multipoint circuits using a virtual NPC must use TRSP signaling (no signaling). The insertion word (IW) portion is user specified and may be varied from leg to leg.

Note: In a gateway application, when E1 channels are connected to T1 channels, the following rules apply to the transmittal of the Insertion Word (IW) towards the facility. If the Insertion Word needs to be transmitted towards the facility as a result of consequent action, then the Insertion Word transmitted by the T1 NPC towards its transmission facility is the Insertion Word specified in this command; however, the Insertion Word transmitted by the E1 NPC towards its facility is always X'FF.

CUS

- Customer

The optional CUS keyword indicates a Customer Controlled Circuit. All legs on a multipoint Customer-Controlled circuit must be designated as CUS.

A disconnected termination previously marked CUS remains as a Customer Controlled termination.

INCL

- Inclusive

The INCL keyword must be used to reconnect this termination to other terminations. However, if they are reconnected without the CUS keyword, they lose their Customer Controlled status.

RDC

- Red circuit

If the optional RDC field is present, the circuit will be flagged as a Red Circuit. All legs on a multipoint Red Circuit must be designated RDC.

mmm

- FROM channel number involved in the denial (ddd through eee)

nnn

- TO channel number involved in the denial (jjj through kkk)

d

- Direction

d	Explanation
F	FROM
T	TO
B	Both

st - Status

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
06	INERR	Invalid range for specified FROM NPC type
07	INERR	Invalid range for specified TO NPC type
08	INERR	Invalid FROM NPC type for AIS insertion
09	INERR	Invalid TO NPC type for AIS insertion
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
18	MCOND	DSPI not equipped, not in service, or failed
20	MCOND	Line format types are incompatible
21	MCOND	Trunk conditioning is invalid
22	MCOND	FMC cannot be cross-connected in this format
50	INERR	Trunk conditioning doesn't match that of conference
51	INERR	CUS flag doesn't match that of conference
52	INERR	RDC flag doesn't match that of conference
70	CONFERR	Try to add a BBL to VC, but the VC already has backbone
79	CONFERR	Try to operate a TWO-WAY conference with an ONE-WAY input command
80	CONFERR	Database conference width does not match the range in input command
83	INERR	Invalid input BBL in terminated TWOWAY/ONEWAY command
84	CONFERR	Trying to add or delete a leg when a conference is under test
85	CONFERR	Input BRD (BBL) has same NPC and channel as BBL (BRD)
B0	INERR	Bad use of INCL, cannot override the current state of the conference
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
D0	SCERR	FROM NPC is not provisioned as DGA
D1	SCERR	TO NPC is not provisioned as DGA
D6	INERR	Invalid FROM channel number
D7	INERR	Invalid TO channel number
D9	INERR	Invalid FROM channel number range
DA	INERR	Invalid TO channel number range

cc	st	<i>Explanation</i>
DC	INERR	A loopback is active on the FROM termination
DD	INERR	A loopback is active on the TO termination
E0	SCERR	Unmatched channel range involving SLC Mode III termination
E4	SCERR	RT-DCLU cross-connect with different ids
E5	SCERR	RT-DCLU cross-connect with different channel number
E6	SCERR	Cross-connect a non Mode I channel to DCLU
E7	SCERR	Cross-connect a non SLC channel to DCLU
E8	INERR	SC invalid for cross-connection specified
E9	INERR	MUX or TRB invalid for cross-connection specified
EA	INERR	AIS invalid for cross-connection specified
EB	INERR	NAM invalid for cross-connection specified
EC	INERR	Invalid channel 000 cross-connection specified
ED	INERR	Invalid channel 031 cross-connection specified
FF	ROLL	Termination is in process of being rolled

st	d	<i>Explanation</i>
ASGN	{F T B}	Termination assigned
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
TG	{F T B}	
TP	{F T B}	NPC is used for test access
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

OCNT, FROM, TO, RDC, CUS, INCL, PRIOUT

ONE-WAY CROSS-CONNECTION TERMINATE

Explanation Of Command

This message requests the connection of a one-way terminated circuit or a range of one-way terminated circuits. The circuit(s) will be formed with the disconnect code (DCC) inserted in the direction of transmission unless the trunk conditioning specification TRSP, MUX has been used; in this case, the unassigned multiplex code (UMC = X'18) is inserted.

If the user wants to cross-connect Nx64 kbits/s circuits, then the range feature of this command should be used.

⇒ NOTE:

For denial messages related to the SLC[®] carrier, "not provisioned" means not added and/or not grown.

⇒ NOTE:

For the Gateway application, cross-connection of a CEPT channel to the 24th channel of a T1DM DS1 is not allowed.

Command

Nonhierarchical

[I.12101]

OCNT: FRM xy, SEQ ww: FROM [s]abcddd[-eee], TO [t]ghijjj[-kkk]\
, <tc>[, RDC][, {CUS|INCL}][, PRIOUT]!

Hierarchical

[I.12101]

OCNT:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\
<tc>[,RDC][,{CUS|INCL}][,PRIOUT]!

Completion Message

Nonhierarchical

[O.12101]

M hh:mm:ss xy,ww n[vv] OCNT [s]abcdddd[-eee],[t]ghijjj[-kkk]\
<tc>[RDC][CUS][PRIOUT] COMPL

[O.12102]

M hh:mm:ss xy,ww n[vv] OCNT [s]abcdddd[-eee],[t]ghijjj[-kkk] \
2 LN MSG:
<tc> [RDC][CUS][PRIOUT]COMPL

Hierarchical

[O.12101]

M hh:mm:ss xy,ww n[vv] OCNT uvmnp[-eee],wxkqrjjj[-kkk] \
<tc>[RDC][CUS][PRIOUT] COMPL

[O.12102]

M hh:mm:ss xy,ww n[vv] OCNT uvmnpddd[-eee],wxkqrjjj[-kkk] \
2 LN MSG:
<tc> [RDC][CUS][PRIOUT]COMPL

Denial Message

Nonhierarchical

[O.12101.01]

M hh:mm:ss xy,ww n[vv] OCNT [s]abcdddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.12101.02]

M hh:mm:ss xy,ww n[vv] OCNT [s]abcddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] d <st> DNY

Hierarchical

[O.12101.01]

M hh:mm:ss xy,ww n[vv] OCNT uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] d <st> DNY

[O.12101.02]

M hh:mm:ss xy,ww n[vv] OCNT uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

TO -To

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

uv, wx - Unit number

m, k - Module number

np, qr - NPC number within the module

The values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ddd,

jjj

eee,

kkk

- Channel numbers, denoting the beginning of a range

- Channel numbers, denoting the end of a range

001 through 024

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)

049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)

001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)

025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)

049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)

073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)

001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)

025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)

049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)

073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

The Facility Data Link (FDL) channel 000 is not allowed in a range.

Only the FDL of DE type NPC with ESF Format can be cross-connected.

tc

- Trunk conditioning specification

This specifies the signaling and insertion word to be applied to the cross-connection when a failure occurs. In the input command the signaling and insertion word specifications are entered separately, with a comma as the delimiter. An example of tc is "TC(----,mnop),TRB". The following signaling options are allowed:

<i>signaling</i>	<i>Explanation</i>
TC(----,mnop)	One-way, 4-state signaling in binary. For ESF type framing format, software will expand 4-state to 16-state by duplicating the format on the remaining frames on a superframe.
TC(-----,mnopqrst)	One-way, 16-state signaling in binary. Only valid for ESF framing formats
TC(X'--,X'cd)	One-way, 16-state signaling in hexadecimal
TRSP	Transparent, no signaling

The following insertion word options are allowed:

<i>insertion word</i>	<i>Explanation</i>
IW X'pq	The 8-bit pattern corresponding to the hexadecimal value of pq will be inserted in the downstream direction of a failure on either line
TRB	Standard trouble code, equal to IW X'E4.
MUX	MUX out of sync code, equal to IW X'1A.

Note: In a gateway application, when E1 channels are connected to T1 channels, the following rules apply to the transmittal of the Insertion Word (IW) towards the facility. If the Insertion Word needs to be transmitted towards the facility as a result of consequent action, then the Insertion Word transmitted by the T1 NPC towards its transmission facility is the Insertion Word specified in this command; however, the Insertion Word transmitted by the E1 NPC towards its facility is always X'FF.

CUS - Customer

The circuit will be flagged as a customer controlled circuit.

RDC - Red circuit

INCL - Inclusive

A termination designated as CUS or RDC cannot be disconnected or modified without using the INCL keyword in the message. Also, an NPC which supports these circuits cannot be manually removed unless the INCL keyword is given in the remove message.

PRIOUT - Priority Output

This keyword is used on the command line to prioritize the output response.

mmm - FROM channel number involved in the denial (ddd through eee)

nnn - TO channel number involved in the denial (jjj through kkk)

d - Direction

d	Explanation
F	From
T	To
B	Both

st - Status

cc - Hexadecimal condition code

cc	st	Explanation
06	INERR	Invalid range for specified FROM NPC type
07	INERR	Invalid range for specified TO NPC type
08	INERR	Invalid FROM NPC type for AIS insertion
09	INERR	Invalid TO NPC type for AIS insertion
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
20	MCOND	Line format types are incompatible
21	MCOND	Trunk conditioning is invalid
22	MCOND	FMC cannot be cross-connected in this format
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
D0	SCERR	FROM NPC is not provisioned as DGA
D1	SCERR	TO NPC is not provisioned as DGA
D6	INERR	Invalid FROM channel number
D7	INERR	Invalid TO channel number
D9	INERR	Invalid FROM channel number range
DA	INERR	Invalid TO channel number range

cc	st	<i>Explanation</i>
DC	INERR	A loopback is active on the FROM termination
DD	INERR	A loopback is active on the TO termination
DF	INERR	Unmatched channel range
E0	SCERR	Unmatched channel range involving SLC Mode III termination
E2	INERR	Attempt to one way cross-connect a locally switched channel
E4	SCERR	RT-DCLU cross-connect with different ids
E5	SCERR	RT-DCLU cross-connect with different channel number
E6	SCERR	Cross-connect a non Mode I channel to DCLU
E7	SCERR	Cross-connect a non SLC channel to DCLU
E8	INERR	SC invalid for cross-connection specified
E9	INERR	MUX or TRB invalid for cross-connection specified
EA	INERR	AIS invalid for cross-connection specified
EB	INERR	NAM invalid for cross-connection specified
EC	INERR	Invalid channel 000 cross-connection specified
ED	INERR	Invalid channel 031 cross-connection specified
FF	ROLL	Termination is in process of being rolled

st	d	<i>Explanation</i>
ASGN	{F T B}	Termination assigned
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
TG	{F T B}	NPC is grown as a test group
TP	{F T B}	NPC is used for test access
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

OCNT, FROM, TO, RDC, CUS, INCL, PRIOUT

TERMINATED ONE-WAY CROSS CONNECT

Explanation Of Command

This message terminates one-way cross-connections of non-channelized network processing circuits (NPCs). The alarm-indication signal (AIS) is the idle code and does not need to be entered. Trunk condition options for 64 kbit/s cross-connections are not allowed for non-channelized connections. When a failure occurs or during an alarm state, the AIS is transmitted toward the TO NPC.

Command

Nonhierarchical

[I.12131]

OCNT:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,RDC]\
[, {CUS|INCL}][,PRIOUT]!

Hierarchical

[I.12131]

OCNT:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,RDC]\
[, {CUS|INCL}][,PRIOUT]!

Completion Message

Nonhierarchical

[O.12131]

M hh:mm:ss xy,ww n[vv] OCNT [s]abc,[t]ghi[RDC]\
[{CUS|INCL}][PRIOUT] COMPL

Hierarchical

[O.12131]

M hh:mm:ss xy,ww n[vv] OCNT uvmnp,wxkqr[RDC]\
[{CUS|INCL}][PRIOUT] COMPL

Denial Message

Nonhierarchical

[O.12131.01]

M hh:mm:ss xy,ww n[vv] OCNT [s]abc,[t]ghi cc <st> DNY

[O.12131.02]

M hh:mm:ss xy,ww n[vv] OCNT [s]abc,[t]ghi d <st> DNY

Hierarchical

[O.12131.01]

M hh:mm:ss xy,ww n[vv] OCNT uvmnp,wxkqr cc <st> DNY

[O.12131.02]

M hh:mm:ss xy,ww n[vv] OCNT uvmnp,wxkqr d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From

[s]abc - The 3- or 4-digit non-hierarchical non-channelized FROM NPC number

TO - To

[t]ghi - The 3- or 4-digit non-hierarchical non-channelized TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number
wxkqr - Hierarchical TO NPC number

uv, wx - Unit number

m, k - Module number

np, qr - NPC number

The valid values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number

Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

RDC - Red circuit

CUS - Customer

Customer-controller circuit

INCL - Inclusive

Inclusive option will remove CUS marking

PRIOUT - Priority Output

This keyword is used on the command line to prioritize the output response.

st - Status of denial

d - Direction

d *Explanation*

F From

T To

B Both

cc - Hexadecimal condition code

cc **st** *Explanation*

04 INERR No NPC's out of service and OOS keyword used

12 MCOND Active CCN side not IS or failed or pested or hardware OOS

13 MCOND UNIT not equipped, not in service, or failed

14 MCOND CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS

15 MCOND FTMI not equipped, not in service, or failed

16 MCOND FC not eqd, not IS, or failed or inactive side FC not eqd or not IS

17 MCOND TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS

1A MCOND Required FLI not equipped, not in service, or failed

1B MCOND Required MXR not equipped, not in service, or failed

1C MCOND Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS

1D MCOND Required MIU not equipped, not in service, or failed

FF ROLL Termination is in process of being rolled

st **d** *Explanation*

ASGN {F|T|B} Termination assigned

CUS {F|T|B} Customer-controlled Circuit

FAIL {F|T|B} Failed

INVLD {F|T|B} Invalid NPC type

NPCTA {F|T|B} NPC used for Test Access

OOS {F|T|B} Out-of-service

RDC {F|T|B} Red Circuit

UEQD {F|T|B} Unequipped

UTST {F|T|B} Under Test

OCON, FROM, TO, MPM, CUS, INCL, RDC

ONE WAY CROSS-CONNECTIONS

Explanation Of Command

This command requests a one-way cross-connection from the specified FROM termination(s) and to the TO termination. It is used to construct a one-way multipoint circuit. The backbone and broadcast terminations are on the virtual NPCs.

If the user wants to cross-connect Nx64 kbits/s circuits, then the range feature of this command should be used.

Command

Nonhierarchical

[l.11121]

```
OCON:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk],\  
MPM(fmd,tmd),<tc>[, {CUS|INCL}][,RDC]!
```

Hierarchical

[l.11121]

```
OCON:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\  
MPM(fmd,tmd),<tc>[, {INCL|CUS}][,RDC]!
```

Completion Message

Nonhierarchical

[O.11121]

M hh:mm:ss xy,ww n[vv] OCON [s]abcddd[-eee],[t]ghijjj[-kkk] \\
2 LN MSG:
fmd,tmd <tc>[NOBBL {F|T}][CUS][RDC][NAM] COMPL

Hierarchical

[O.11121]

M hh:mm:ss xy,ww n[vv] OCON uvmnpddd[-eee],wxkqrjjj[-kkk] \\
2 LN MSG:
fmd,tmd <tc>[NOBBL {F|T}][CUS][RDC][NAM] COMPL

Denial Message

Nonhierarchical

[O.11121.01]

M hh:mm:ss xy,ww n[vv] OCON [s]abcddd[-eee],[t]ghijjj[-kkk] \\
[mmm,jjj] cc <st> DNY

[O.11121.02]

M hh:mm:ss xy,ww n[vv] OCON [s]abcddd[-eee],[t]ghijjj[-kkk] \\
[mmm,jjj] d <st> DNY

Hierarchical

[O.11121.01]

M hh:mm:ss xy,ww n[vv] OCON uvmnpddd[-eee],wxkqrjjj[-kkk] \\
[mmm,jjj] cc <st> DNY

[O.11121.02]

M hh:mm:ss xy,ww n[vv] OCON uvmnpddd[-eee],wxkqrjjj[-kkk] \\
[mmm,jjj] d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

9961-9966

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

uv, wx - Unit number

m, k - Module number

np, qr - NPC number within the module

The values are listed below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

VI NPC numbers listed by unit, module, and NPC Number
Unit Type VI (Virtual)

Unit	Module	NPC	
99	1	01-02	(DACS II Non-CEF frames)
99	1	01-06	(DACS II CEF frames)

ddd,
jjj
eee,
kkk

- Channel numbers

- Channel numbers denoting the end of a range specification

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)
001-500	(Virtual NPC)

Note: Range values -eee, -kkk apply only to the FTU/DS3U/HDS3U end of an FTU/DS3U/HDS3U Virtual NPC circuit, that is, they cannot apply to the Virtual NPC end of the circuit.

MPM - Multipoint mode
fmd - FROM mode
tmd - TO mode

Multipoint modes of the FROM and TO ends of the circuit

<i>fmd</i>	
tmd	Explanation
LEG	Non-VI circuit end of the cross connections. Must be an FTU/DS3U/HDS3U channel.
BRD	Nonbackbone leg of a virtual conference. Must be a virtual NPC channel.
BBL	Backbone leg of a virtual conference. Must be a Virtual NPC channel.

For OCON multipoint circuits, there are two valid combinations for fmd and tmd:

fmd,tmd	Explanation
LEG,BBL	For the backbone leg of a broadcast multipoint circuit
BRD,LEG	For the broadcast legs of the multipoint circuit.

Note: Default values for noise guard (NG) and echo suppression (ES) are applied to symmetrical bridges (multipoint mode SYM) and polling circuits (multipoint mode BBL,BRD). These default values are:

Symmetrical bridges	NG = -18db	ES = -18db
Polling circuits	NG = 0db	ES = 0db

tc - Trunk conditioning, which has the input form

TRSP, {IW X'pq|TRB|MUX}

Represents the desired cross-connected signaling and insertion word applied when a failure occurs. A trunk conditioning specification consists of a combination of a signaling specification followed by an insertion word specification. The TRSP (transparent) signaling specification is the only one allowed.

The following signaling option is allowed:

<i>tc</i>	<i>Explanation</i>
TRSP	Transparent, no signaling.

The following insertion word options are allowed:

<i>IW</i>	<i>Explanation</i>
IW X'pq	The 8-bit pattern corresponding to the hexadecimal value of pq will be inserted in the downstream direction of a failure on either line.
TRB	Standard trouble code, equal to IW X'E4, not valid for CEPT.
MUX	MUX out of sync code, equal to IW X'1A, not valid for CEPT.
Omitted	Only valid for CEPT, will default to IW-X-FF.

NOBBL - No backbone leg

F - From

T - To

IW - Insertion word

The insertion word is provided with the DCC option, an 8-bit pattern that is inserted in the specified time slot when the circuit is disconnected.

During the alarm state, AIS (all ones) is sent out in the specified time slot.

All leg connections to multipoint circuits using a Virtual NPC must use TRSP signaling (no signaling). The insertion word portion is user specified as noted above and may be varied from leg to leg.

Note: In a gateway application, when E1 channels are connected to T1 channels, the following rules apply to the transmittal of the Insertion Word (IW) towards the facility. If the Insertion Word needs to be transmitted towards the facility as a result of consequent action, then the Insertion Word transmitted by the T1 NPC towards its transmission facility is the Insertion Word specified in this command; however, the Insertion Word transmitted by the E1 NPC towards its facility is always X'FF.

NAM - No A-law to μ -law

The A-law to μ -law and μ -law to A-law code translators on the E1 type NPC are disabled. This keyword is valid in the following types of cross-connects:

Multi-Point:

E1 to E1 Multi-point cross-connects have A-law to μ -law and μ -law to A-law set as a default. This conversion is performed on pure E1 multi-point connections in case a DS1 leg is ever added to the broadcast connection. The **NAM** keyword is used to disable the conversions. It may be desirable to disable conversions in a pure E1 multi-point cross-connect since such a connection has more quantization noise than a pure E1 two-point cross-connect. This is due to the back to back A-law to μ -law and μ -law to A-law conversions which are taking place.

E1 to DS1 or DS1 to E1 Same explanation as E1 to E1.

DS1 to DS1 Not applicable.

CUS - Customer

Customer-controlled circuit

The optional CUS field indicates a customer controlled circuit. All legs on a multipoint customer-controlled circuit must be designated CUS.

INCL - Inclusive

A disconnected termination previously marked CUS remains as a customer controlled termination. The INCL keyword must be used to reconnect this termination to other terminations. However, if they are reconnected without the CUS keyword, they lose their customer controlled status.

RDC - Red circuit

All legs on a multipoint red circuit must be designated RDC.

ddd,jjj -Channel numbers

mmm - FROM channel number involved in the denial ($ddd \leq mmm \leq eee$)

st - Status

d - Direction (F = From, T = To, B = Both)

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
06	INERR	Invalid range for specified FROM NPC type
07	INERR	Invalid range for specified TO NPC type
08	INERR	Invalid FROM NPC type for AIS insertion
09	INERR	Invalid TO NPC type for AIS insertion
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
18	MCOND	DSPI not equipped, not in service, or failed
20	MCOND	Line format types are incompatible
21	INERR	Trunk conditioning is invalid
22	MCOND	FMC cannot be cross-connected in this format
50	INERR	Trunk conditioning doesn't match that of conference
51	INERR	CUS flag doesn't match that of conference
52	INERR	RDC flag doesn't match that of conference
70	CONFERR	Try to add a BBL to VC,but the VC already has backbone
79	CONFERR	Try to operate a TWO-WAY conference with an ONE-WAY input command
80	CONFERR	Database conference width does not match the range in input command
84	CONFERR	Trying to add or delete a leg when a conference is under test
85	CONFERR	Input BRD (BBL) has same NPC and channel as BBL (BRD)
B0	INERR	Bad use of INCL, cannot override the current state of the conference
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
D0	SCERR	FROM NPC is not provisioned as DGA
D1	SCERR	TO NPC is not provisioned as DGA
D6	INERR	Invalid FROM channel number
D7	INERR	Invalid TO channel number
D9	INERR	Invalid FROM channel number range
DA	INERR	Invalid TO channel number range
DC	INERR	A loopback is active on the FROM termination
DD	INERR	A loopback is active on the TO termination

cc	st	Explanation
E0	SCERR	Unmatched channel range involving SLC Mode III termination
E4	SCERR	RT-DCLU cross-connect with different ids
E5	SCERR	RT-DCLU cross-connect with different channel number
E6	SCERR	Cross-connect a non Mode I channel to DCLU
E7	SCERR	Cross-connect a non SLC channel to DCLU
E8	INERR	SC invalid for cross-connection specified
E9	INERR	MUX or TRB invalid for cross-connection specified
EA	INERR	AIS invalid for cross-connection specified
EB	INERR	NAM invalid for cross-connection specified
EC	INERR	Invalid channel 000 cross-connection specified
ED	INERR	Invalid channel 031 cross-connection specified
FF	ROLL	Termination is in process of being rolled

st	d	Explanation
ASGN	{F T B}	Termination assigned
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
TG	{F T B}	
TP	{F T B}	NPC is used for test access
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

OCON, FROM, TO, RDC, CUS, INCL, PRIOUT

ONE WAY CROSS-CONNECTIONS

Explanation Of Command

This message requests the connection of a one-way cross-connect circuit or a range of one-way circuits.

If the user wants to cross-connect Nx64 kbits/s circuits, then the range feature of this command should be used.

Command

Nonhierarchical

[|.11101]

```
OCON:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk],\  
<tc>[,RDC][{,CUS|,INCL}][,PRIOUT]!
```

Hierarchical

[|.11101]

```
OCON:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\  
<tc>[,RDC][{,CUS|,INCL}][,PRIOUT]!
```

Completion Message

Nonhierarchical

[O.11101]

M hh:mm:ss xy,ww n[vv] OCON [s]abcddd[-eee],[t]ghijjj[-kkk] \
<tc>[RDC][{CUS|INCL}][PRIOUT] COMPL

[O.11102]

M hh:mm:ss xy,ww n[vv] OCON [s]abcddd[-eee],[t]ghijjj[-kkk] \
2 LN MSG:
<tc>[RDC][{CUS|INCL}][PRIOUT] COMPL

Hierarchical

[O.11101]

M hh:mm:ss xy,ww n[vv] OCON uvmnp[-eee],wxkqrjjj[-kkk] \
<tc>[RDC][{CUS|INCL}][PRIOUT] COMPL

[O.11102]

M hh:mm:ss xy,ww n[vv] OCON uvmnpddd[-eee],wxkqrjjj[-kkk] \
2 LN MSG:
<tc>[RDC][{CUS|INCL}][PRIOUT] COMPL

Denial Message

Nonhierarchical

[O.11101.01]

M hh:mm:ss xy,ww n[vv] OCON [s]abcddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.11101.02]

M hh:mm:ss xy,ww n[vv] OCON [s]abcddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] d <st> DNY

Hierarchical

[O.11101.01]

M hh:mm:ss xy,ww n[vv] OCN uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.11101.02]

M hh:mm:ss xy,ww n[vv] OCN uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

uv, wx - Unit number

m, k - Module number

np, qr - NPC number within the module

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ddd,
jjj

- Channel numbers

eee,
kkk

- Channel numbers denoting the end of a range

001 through 024

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

The Facility Data Link (FDL) channel 000 is not allowed in a range.
Only the FDL of DE type NPC with ESF Format can be cross-connected.

tc - Trunk conditioning

tc represents the desired cross-connected signaling and insertion word applied when a failure occurs. The signaling and the insertion word specification are entered separately, with a comma as the delimiter, which have the following form:

<tc_sig>,<tc_iw>

The following signaling options are allowed:

<i>tc_sig</i>	<i>Explanation</i>
TC(----,mnop)	1-way, 4-state signaling in binary. For ESF type framing format, software will expand 4-state to 16-state by duplicating the format on the remaining frames on a superframe.
TC(-----,mnopqrst)	1-way, 16-state in binary. Only valid for ESF framing formats.
TC(X'--,X'cd)	1-way, 16-state in hexadecimal.
TRSP	Transparent, no signaling.

If the channel being connected is a Facility Data Link (FDL), then ddd (jjj) is 000 and signaling type should be of type TC(ijkl,mnop).

The following insertion word options are allowed:

<i>tc_iw</i>	<i>Explanation</i>
IW X'pq	The 8-bit pattern corresponding to the hexadecimal value of pq will be inserted to the downstream direction of a failure on the line.
TRB	Standard trouble code, equal to IW X'E4.
MUX	MUX out of sync code, equal to IW X'1A.

Note: In a gateway application, when E1 channels are connected to T1 channels, the following rules apply to the transmittal of the Insertion Word (IW) towards the facility. If the Insertion Word needs to be transmitted towards the facility as a result of consequent action, then the Insertion Word transmitted by the T1 NPC towards its transmission facility is the Insertion Word specified in this command; however,

the Insertion Word transmitted by the E1 NPC towards its facility is always X'FF.

CUS - Customer

Used to indicate a customer-controlled circuit

RDC - Red circuit

INCL - Inclusive

A termination designated as customer controlled or a red circuit cannot be disconnected or modified without using the INCL keyword in the message. Also, an NPC which supports these circuits cannot be manually removed unless the inclusive keyword is given in the remove message.

PRIOUT - Priority Output

This keyword is used on the command line to prioritize the output response.

mmm - FROM channel number involved in the denial (ddd through eee)

nnn - TO channel number involved in the denial (jjj through kkk)

st - Status of denial

d - Direction

d Explanation

F From

T To

B Both

cc - Hexadecimal condition code

cc st Explanation

06 INERR Invalid range for specified FROM NPC type

07 INERR Invalid range for specified TO NPC type

08 INERR Invalid FROM NPC type for AIS insertion

09 INERR Invalid TO NPC type for AIS insertion

12 MCOND Active CCN side not IS or failed or pested or hardware OOS

13 MCOND UNIT not equipped, not in service, or failed

14 MCOND CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS

15 MCOND FTMI not equipped, not in service, or failed

16 MCOND FC not eqd, not IS, or failed or inactive side FC not eqd or not IS

17 MCOND TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS

20 MCOND Line format types are incompatible

cc	st	Explanation
21	MCOND	Trunk conditioning is invalid
22	MCOND	FMC cannot be cross-connected in this format
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
D0	SCERR	FROM NPC is not provisioned as DGA
D1	SCERR	TO NPC is not provisioned as DGA
D6	INERR	Invalid FROM channel number
D7	INERR	Invalid TO channel number
D9	INERR	Invalid FROM channel number range
DA	INERR	Invalid TO channel number range
DC	INERR	A loopback is active on the FROM termination
DD	INERR	A loopback is active on the TO termination
DF	INERR	Unmatched channel range
E0	SCERR	Unmatched channel range involving SLC Mode III termination
E2	INERR	Attempt to one way cross-connect a locally switched channel
E4	SCERR	RT-DCLU cross-connect with different ids
E5	SCERR	RT-DCLU cross-connect with different channel number
E6	SCERR	Cross-connect a non Mode I channel to DCLU
E7	SCERR	Cross-connect a non SLC channel to DCLU
E8	INERR	SC invalid for cross-connection specified
E9	INERR	MUX or TRB invalid for cross-connection specified
EA	INERR	AIS invalid for cross-connection specified
EB	INERR	NAM invalid for cross-connection specified
EC	INERR	Invalid channel 000 cross-connection specified
ED	INERR	Invalid channel 031 cross-connection specified
FF	ROLL	Termination is in process of being rolled

st	d	Explanation
ASGN	{F T B}	Termination assigned
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
TG	{F T B}	NPC is grown as a test group
TP	{F T B}	NPC is used for test access
UNEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

OCN,FRM,TO,RDC,CUS,INCL,PRIOUT

ONE-WAY NON-CANNELIZED DIGITAL SIGNAL CROSS CONNECT

Explanation Of Command

This message requests a one-way cross-connection between two non-channelized network processing circuits.

The idle code is the alarm-indication signal (AIS-all ones), and does not need to be specified. The disconnect code for 64 kbit/s disconnection cannot be used for non-channelized network processing circuits.

When a failure occurs or during an alarm state, the AIS is transmitted toward the TO network processing circuits.

Command

Nonhierarchical

[I.11131]

OCN:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,RDC][,{CUS|INCL}][,PRIOUT]!

Hierarchical

[I.11131]

OCN:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,RDC][,{CUS|INCL}][,PRIOUT]!

Completion Message

Nonhierarchical

[O.11131]

M hh:mm:ss xy,ww n[vv] OCON [s]abc,[t]ghi[RDC][CUS][PRIOUT] COMPL

Hierarchical

[O.11131]

M hh:mm:ss xy,ww n[vv] OCON uvmnp,wxkqr[RDC][CUS][PRIOUT] COMPL

Denial Message

Nonhierarchical

[O.11131.01]

M hh:mm:ss xy,ww n[vv] OCON [s]abc,[t]ghi cc <st> DNY

[O.11131.02]

M hh:mm:ss xy,ww n[vv] OCON [s]abc,[t]ghi d <st> DNY

Hierarchical

[O.11131.01]

M hh:mm:ss xy,ww n[vv] OCON uvmnp,wxkqr cc <st> DNY

[O.11131.02]

M hh:mm:ss xy,ww n[vv] OCON uvmnp,wxkqr d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit non-hierarchical non-channelized FROM NPC

[t]ghi - The 3- or 4-digit non-hierarchical non-channelized TO NPC

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

uv, wx - Unit number

m, k - Module number

np, qr - NPC number within the module

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

RDC - Red circuit
CUS - Customer-controller circuit
INCL - Inclusive option will remove CUS marking

PRIOUT - Priority Output

This keyword is used on the command line to prioritize the output response.

st - Status

d - Direction

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
04	INERR	No NPC's out of service and OOS keyword used
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
21	INERR	Trunk conditioning is invalid
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
FF	ROLL	Termination is in process of being rolled

st	d	<i>Explanation</i>
ASGN	{F T B}	Termination assigned
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
INVLD	{F T B}	Invalid NPC type
NPCTA	{F T B}	NPC used for Test Access
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

ODIS, FROM, TO, INCL, OOS, DCC, PRIOUT

ONE-WAY DISCONNECT

Explanation Of Command

This message requests the disconnection of a one-way two-point cross-connect circuit or a range of one-way circuits.

Command

Nonhierarchical

[I.15101]

ODIS:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk]\
[,INCL][,OOS][,DCC][,PRIOUT]!

Hierarchical

[I.15101]

ODIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\
[,INCL][,OOS][,DCC][,PRIOUT]!

Completion Message

Nonhierarchical

[O.15101]

M hh:mm:ss xy,ww n[vv] ODIS [s]abcddd[-eee],[t]ghijjj[-kkk]\
[OOS][DCC][CUS][RDC][PRIOUT] COMPL

Hierarchical

[O.15101]

M hh:mm:ss xy,ww n[vv] ODIS uvmnpddd[-eee],wxkqrjjj[-kkk]\
[OOS][DCC][CUS][RDC][PRIOUT] COMPL

Denial Message

Nonhierarchical

[O.15101.01]

M hh:mm:ss xy,ww n[vv] ODIS [s]abcdddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.15101.02]

M hh:mm:ss xy,ww n[vv] ODIS [s]abcdddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] <d> <st> DNY

Hierarchical

[O.15101.01]

M hh:mm:ss xy,ww n[vv] ODIS uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.15101.02]

M hh:mm:ss xy,ww n[vv] ODIS uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] <d> <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From
TO - To

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number
[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number for beginning of NPC range

wxkqr - Hierarchical TO NPC number for end of NPC range

The valid values are listed below:

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ddd - FROM channel number
jjj - TO channel number
eee - FROM channel number denoting the end of a channel range.
kkk - TO channel number denoting the end of a channel range.

001 through 024

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

INCL - Inclusive

To disconnect a circuit or range of circuits including one or more circuits marked either RDC or CUS, use the optional INCL keyword. If this keyword is not used, the message will be denied if any circuits in the range are red circuits or customer controlled circuits.

OOS - Out-of-service

An Out-Of-Service disconnect may be done by giving the optional OOS keyword. At least one end of the circuit must be out-of-service or the OOS disconnect will be denied.

PRIOUT - Priority Output

This keyword is used on the command line to prioritize the output response.

DCC - Disconnect code

If DCC is specified, DACS II will insert the user-defined disconnect code and signaling into the disconnected channels. This disconnect code and signaling are specified by the <tc> field of the TCON command that initially connected the channels. If the DCC option is not used, the disconnect code specified in the GRTH NPC command will be used.

RDC - Red circuit

CUS - Customer

Customer-controlled circuit

Terminations cross-connected using the optional CUS keyword retain their CUS status when disconnected. If the terminations are reconnected without the CUS or INCL keyword, the command will be denied. When they are reconnected with the INCL keyword, they lose their customer controlled status.

mmm, nnn

- Channel number involved in denial. Otherwise the same as ddd.

d - Direction

<i>d</i>	<i>Explanation</i>
F	From
T	To
B	Both

st - Status

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
04	INERR	No NPC's out of service and OOS keyword used
06	INERR	Invalid range for specified FROM NPC type
07	INERR	Invalid range for specified TO NPC type
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed

cc	st	Explanation
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
D0	SCERR	FROM NPC is not provisioned as DGA
D1	SCERR	TO NPC is not provisioned as DGA
D6	INERR	Invalid FROM channel number
D7	INERR	Invalid TO channel number
D9	INERR	Invalid FROM channel number range
DA	INERR	Invalid TO channel number range
DC	INERR	A loopback is active on the FROM termination
DD	INERR	A loopback is active on the TO termination
DF	INERR	Unmatched channel range
E0	SCERR	Unmatched channel range involving SLC Mode III termination
E4	SCERR	RT-DCLU cross-connect with different ids
E5	SCERR	RT-DCLU cross-connect with different channel number
E6	SCERR	Cross-connect a non Mode I channel to DCLU
E7	SCERR	Cross-connect a non SLC channel to DCLU
EC	INERR	Invalid channel 000 cross-connection specified
ED	INERR	Invalid channel 031 cross-connection specified
FF	ROLL	Termination is in process of being rolled
E0	MCOND	ETSI not equipped, not in service, or failed

st	d	Explanation
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
NOMTH	{F T B}	No Match
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
TP	{F T B}	NPC is used for test access
UNPASGN	{F T B}	Unassigned or Not Properly Assigned
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

ODIS, FROM, TO, OOS, INCL, PRIOUT

ONE-WAY DISCONNECT

Explanation Of Command

This message disconnects a one-way cross-connection between two non-channelized network processing circuits. When the circuit is disconnected, the idle code (AIS) is transmitted.

Command

Nonhierarchical

[I.15111]

ODIS:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,OOS][,INCL][,PRIOUT]!

Hierarchical

[I.15111]

ODIS:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,OOS][,INCL][,PRIOUT]!

Completion Message

Nonhierarchical

[O.15111]

M hh:mm:ss xy,ww n[vv] ODIS [s]abc,[t]ghi[OOS][RDC][CUS] \
[PRIOUT] COMPL

Hierarchical

[O.15111]

M hh:mm:ss xy,ww n[vv] ODIS uvmnp,wxkqr[OOS][RDC][CUS] \
[PRIOUT] COMPL

Denial Message

Nonhierarchical

[O.15111.01]

M hh:mm:ss xy,ww n[vv] ODIS [s]abc,[t]ghi cc <st> DNY

[O.15111.02]

M hh:mm:ss xy,ww n[vv] ODIS [s]abc,[t]ghi d <st> DNY

Hierarchical

[O.15111.01]

M hh:mm:ss xy,ww n[vv] ODIS uvmnp,wxkqr cc <st> DNY

[O.15111.02]

M hh:mm:ss xy,ww n[vv] ODIS uvmnp,wxkqr d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

- [s]abc** - The 3- or 4-digit non-hierarchical non-channelized FROM NPC number
[t]ghi - The 3- or 4-digit non-hierarchical non-channelized TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical number of non-channelized FROM NPC

wxkqr - Hierarchical number of non-channelized TO NPC

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

The values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

INCL - Inclusive
Required for a customer-controlled circuit or a red circuit

OOS - Out-of-Service
May be specified if one or both NPCs are out of service

RDC - Red circuit
Disconnection of Red circuit

RDLD - Red lined

CUS - Customer
Disconnection of Customer-controlled circuit

PRIOUT - Priority Output

This keyword is used on the command line to prioritize the output response.

st - Status of denial

d - Direction {F-from | T-to | B-both}

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
04	INERR	No NPC's out of service and OOS keyword used
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
FF	ROLL	Termination is in process of being rolled
E0	MCOND	ETSI not equipped, not in service, or failed

st	d	<i>Explanation</i>
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
INVLD	{F T B}	Invalid NPC type
NOMTH	{F T B}	No Match
NPCTA	{F T B}	NPC used for Test Access
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
UNPASGN	{F T B}	Unassigned or Not Properly Assigned
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

OPR,LPBK,NPC,LOCN

FACILITY LOOPBACK ACTIVATE

Explanation Of Command

For DA and TA type NPCs:

ANSI (American National Standards Institute) T1.403 is a DS1 interface specification, which among other things, specifies the use of the 4kb/s ESF data link for network maintenance. The data link is used to communicate between network elements which transport the DS1 facility.

This command is used to initiate near-end (at the DACS II) and far-end (at the terminal on the other end of the DS1 facility) loopbacks for ESF formatted facilities as defined by ANSI T1.403.

DACS II will execute a near-end payload loopback by transmitting the received information bits of each frame back onto the DS1 facility. The framing bit position is regenerated by DACS II during a payload loopback.

DACS II will also send payload and line loopback commands on the ESF data link to far-end equipment, ordering the equipment on the other end of the DS1 facility to execute the respective loopbacks.

For TE and TH type NPCs on HDS3Us:

This command can be used to request line loopbacks towards the facility for all TE and TH type NPCs provisioned on Hybrid MXRs (KCR8s) within a Hybrid DS3U for DS1 or E1 facilities respectively. However, line loopbacks for TE type NPCs provisioned on MXR/EMXR circuit packs (KCR1s/KCR5s), even though provisioned within a Hybrid DS3U, are not supported. AIS will be sent downstream as a default operation unless stopped under user control (t=N). Near end (LOCN NEND) line (LINE) loopback is the only type of loopback that may be requested for TE or TH type NPCs on an HDS3U.

An E1 or DS1 line loopback on an HDS3U will be activated without regard to whether a DS3 loopback is already active. If a DS3 line loopback is active (see command I.26161), the DS1 or E1 line loopback will have no effect until the DS3 line loopback is removed. If a DS3 equipment loopback is active, the DS1 or E1 line loopback will be operating, but it results in a circular transmission path for the DS1 or E1, which is most likely undesirable.

If a loopback is active another loopback request to the same NPC will be denied.

Local loopbacks are dropped during a system reset or a system reboot.

Command

Nonhierarchical

[I.26141]

OPR:FRM xy,SEQ ww:LPBK loop[t],NPC [s]abc,LOCN locn!

Hierarchical

[I.26141]

OPR:FRM xy,SEQ ww:LPBK loop[t],NPC uvmnp,LOCN locn!

Completion Message

Nonhierarchical

[O.26141]

M hh:mm:ss xy,ww n[vv] OPR LPBK loop[t] NPC [s]abc LOCN locn COMPL

Hierarchical

[O.26141]

M hh:mm:ss xy,ww n[vv] OPR LPBK loop[t] NPC uvmnp LOCN locn COMPL

Denial Message

Nonhierarchical

[O.26141.01]

M hh:mm:ss xy,ww n[vv] OPR LPBK loop[t] NPC [s]abc LOCN locn \
COND cc DNY

Hierarchical

[O.26141.01]

M hh:mm:ss xy,ww n[vv] OPR LPBK loop[t] NPC uvmnp LOCN locn \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

LPBK - Loopback

loop - Loopback Type

loop Explanation

LINE - Line

PYLD - Payload

t - Loopback signal transmission specifier

t Explanation

N Do not send AIS downstream

For TE and TH type NPCs on an HDS3U, AIS is sent downstream as a default.

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

The valid values are as follows, except that for TH type NPCs that carry E1s within a Hybrid DS3U all NPC numbers that are divisible by 4 as well as all NPC numbers that end with a "D" or "H" are invalid:

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit Module NPC
01-16 1-4 01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

LOCN - Location

locn - Loopback Location

locn *Explanation*

NEND Near-end

FEND Far-end

The NEND parameter must be coded for DS1 (T1) or E1 loopbacks that are carried within a Hybrid DS3, even though the Far-end loopbacks cannot be invoked.

cc - Hexadecimal condition code

cc *Explanation*

02	Subject entity is not equipped
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
26	NPC type error
9B	The MXR is not grown
B2	MXR is out of service
05	Invalid parameter combination
0B	Another signal already active prevents this signal from being sent
29	This signal is already being sent
30	No signals active
84	NPC is non-channelized
86	NPC number out of range

OPR,LPBK,UNIT,MMFG

HYBRID DS3 LOOPBACK

Explanation Of Command

This command requests a local loopback for a DS3 signal that is being processed on the addressed Hybrid Multiplexer (HMXR) in a Hybrid DS3 Unit (HDS3U). Following HDS3U and DS3U convention the HMXR is addressed as an MXR/MIU Functional Group (MMFG). Note that the loopback operation for a DS3 signal is not allowed for a regular multiplexer (MXR/EMXR) in an MMFG of a DS3 Unit (DS3U) or Hybrid DS3 Unit (HDS3U).

The HDS3U supports two kinds of local loopback functions:

- A. Equipment loopback (diagnostic local loopback): The outgoing DS3 signal is looped back towards the DACS II equipment overriding the normally received DS3 signal. AIS will be substituted for the transmitted signal, it can be stopped under user control (t=N).
- B. Facility loopback (line local loopback): The incoming DS3 signal is looped back and transmitted towards the facility. When the DS3 loopback is activated, DACS II will no longer output its own clock on the DS3 line. AIS will be substituted for the received signal, it can be stopped under user control (t=N).

Only one of the two types of loopback (equipment or facility) may be activated at one time. Also, the command will deny a loopback request when that same type of loopback is already active.

An active loopback will be removed if the system is reset or re-booted.

Command

[I.26161]

OPR:FRM xy,SEQ ww:LPBK d[t],UNIT [q]q,MMFG a!

Completion Message

[O.26161]

M hh:mm:ss xy,ww n[vv] OPR LPBK d[t] UNIT [q]q MMFG a COMPL

Denial Message

[O.26161.01]

M hh:mm:ss xy,ww n[vv] OPR LPBK d[t] UNIT [q]q MMFG a\
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

LPBK - Loopback

d - Loopback Type

<i>d</i>	<i>Explanation</i>

E	Equipment loopback (diagnostic local loopback), the outgoing DS3 signal is looped back towards the DACS II equipment.

F	Facility loopback (line local loopback), the incoming DS3 signal is looped back towards the facility.

N	Stop loopback

t - Loopback signal AIS specifier

<i>t</i>	<i>Explanation</i>

N	Do not send AIS upstream towards the facility while DS3 signal is looped back towards the DACS II equipment, or do not send AIS downstream towards the DACS II equipment while DS3 signal is looped back towards the facility.

If t is not specified for an equipment loopback request, the default is to send AIS upstream towards the facility while the DS3 signal is looped back towards the DACS II equipment.

UNIT - Unit

[q]q - Unit number (1 through 16)

MMFG - Hybrid Multiplexer-Multiplexer Interface Unit Functional Group

a - The number of the MMFG within the unit (P,1 through 6) (P means the protection MMFG)

OPR,TSIG,NPC

FACILITY TEST SIGNAL ACTIVATE

Explanation Of Command

This command is used to initiate facility test signals on DACS II DA and TA DS1 facility types. The test signals support network maintenance activities.

For the Yellow Test, High Density Test, Low Density Test, and Quasi-Random Test Signals, once the test signal activation command is received and executed, the test signal remains on the line until it is deactivated by a subsequent user command.

The In-Band Loop-back Activate and In-Band Loop-back Deactivate Signals are temporary test signals. These test signals are activated by a command, transmitted for a duration of 5-8 seconds, and then automatically deactivated. When these are deactivated, the facility returns to its previous state, transmitting either normal data or any previously active test signal.

DACS II always applies downstream trunk conditioning before the NPC begins transmitting the requested test signal.

For DA and TA type DS1 facilities using the ESF format, DACS II will also transmit a Loopback Retention signal on the ESF-DL. Transmission of this signal does not cause DACS II to apply downstream trunk conditioning because the Loopback Retention signal affects only the contents of the ESF-DL.

This signal is defined in ANSI (American National Standards Institute) T1.403 as a Bit Oriented Message which is reserved for network use. ANSI T1.403 is a DS1 interface specification, which among other things, specifies the use of the 4kb/s ESF data link for network maintenance. The data link is used to communicate between network elements which transport the DS1 facility.

⇒ NOTE:

Test signals overwrite, by design, any cross-connect signal on the line regardless of which was initiated first; the cross-connect or the test signal.

Command

Nonhierarchical

[I.28101]

OPR:FRM xy,SEQ ww:TSIG test,NPC [s]abc!

Hierarchical

[I.28101]

OPR:FRM xy,SEQ ww:TSIG test,NPC uvmnp!

Completion Message

Nonhierarchical

[O.28101]

M hh:mm:ss xy,ww n[vv] OPR TSIG test NPC [s]abc COMPL

Hierarchical

[O.28101]

M hh:mm:ss xy,ww n[vv] OPR TSIG test NPC uvmnp COMPL

Denial Message

Nonhierarchical

[O.28101.01]

M hh:mm:ss xy,ww n[vv] OPR TSIG test NPC [s]abc COND cc DNY

Hierarchical

[O.28101.01]

M hh:mm:ss xy,ww n[vv] OPR TSIG test NPC uvmnp COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TSIG - Test signal

test - Test signal type

test Explanation

YELT Yellow Test Signal
 HDTS High Density Test Signal
 LDTS Low Density Test Signal
 QRTS Quasi-Random Test Signal
 ILBA In-Band Loopback Activate Signal
 ILBD In-Band Loopback Deactivate Signal
 LRET Loopback Retention Signal

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

The valid values are:

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

cc - Hexadecimal condition code

cc *Explanation*

02	Subject entity is not equipped
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
26	NPC type error
9B	The MXR is not grown
B2	MXR is out of service
BE	Invalid loopback type and location
05	Invalid parameter combination
0B	Another signal already active prevents this signal from being sent
29	This signal is already being sent
30	No signals active
84	NPC is non-channelized
86	NPC number out of range

OVERLOAD,MP,CI,UNIT,UC,TN,PROCESSOR

OVERLOAD

Explanation Of Command

This troubleshooting message is used only by the DACS II developers and occurs when the indicated CPU processor has reported an internal error from which recovery is not possible. The error may be in the CPU hardware or related software. The resulting troubleshooting data can be useful in isolating software problems.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01381]

```
pahh:mm:ss xy,ww  OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd \
PROCESSOR DATA  5 LN MSG:
<d01> <d02> <d03> <d04>    <d05> < d06 > < d07 > < d08 >
<d09> <d10> <d11> <d12>    <d13> < d14 > < d15 > < d16 >
<d17> <d18> <d19> <d20>    <d21> < d22 > < d23 > < d24 >
<d25> <d26> <d27> <d28>    <d29> <d3031> < d3233> < d34353637> \
EOM
```

```
pahh:mm:ss xy,ww  OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd \
PROGRAM TEXT  5 LN MSG:
<d01> <d02> <d03> <d04>    <d05> <d06> <d07> <d08>
<d09> <d10> <d11> <d12>    <d13> <d14> <d15> <d16>
<d17> <d18> <d19> <d20>    <d21> <d22> <d23> <d24>
<d25> <d26> <d27> <d28>    <d29> <d30> <d31> <d32> EOM
```

```
pahh:mm:ss xy,ww  OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd \
MEMORY DATA  5 LN MSG:
<d01> <d02> <d03> <d04>    <d05> <d06> <d07> <d08>
<d09> <d10> <d11> <d12>    <d13> <d14> <d15> <d16>
<d17> <d18> <d19> <d20>    <d21> <d22> <d23> <d24>
<d25> <d26> <d27> <d28>    <d29> <d30> <d31> <d32> EOM
```

```
pahh:mm:ss xy,ww  OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd READY \
QUEUE DATA  3 LN MSG:
<d01> <d02> <d03> <d04>    <d05> <d06> <d07> <d08>
<d09> <d10> <d11> <d12>    <d13> <d14> <d15> <d16> EOM
```

```
pahh:mm:ss xy,ww  OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd PAUSE \
QUEUE DATA  3 LN MSG:
<d01> <d02> <d03> <d04>    <d05> <d06> <d07> <d08>
<d09> <d10> <d11> <d12>    <d13> <d14> <d15> <d16> EOM
```

```
pahh:mm:ss xy,ww  OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd \
LOCAL STACK DATA  5 LN MSG:
<d01> <d02> <d03> <d04>    <d05> <d06> <d07> <d08>
<d09> <d10> <d11> <d12>    <d13> <d14> <d15> <d16>
<d17> <d18> <d19> <d20>    <d21> <d22> <d23> <d24>
<d25> <d26> <d27> <d28>    <d29> <d30> <d31> <d32> EOM
```

```
pahh:mm:ss xy,ww  OVERLOAD {MP|CI|UNIT [q]q UC} TN dddd STACK \
TRACE  5 LN MSG:
<d01> <d02> <d03> <d04>    <d05> <d06> <d07> <d08>
<d09> <d10> <d11> <d12>    <d13> <d14> <d15> <d16>
<d17> <d18> <d19> <d20>    <d21> <d22> <d23> <d24>
<d25> <d26> <d27> <d28>    <d29> <d30> <d31> <d32> COMPL
```

Explanation Of Parameters

pa - Priority of action field.

pa *Explanation*

I Information
***** Minor alarm
****** Major alarm
***C** Critical alarm

OVERLOAD

- Overload

DATA - Data

****** - Major Alarm

MP - Main processor

CI - Communications interface

UC - Unit controller

UNIT - Unit

[q]q - Unit number (1 through 16)

MC - Main controller

TN - Transaction

dddd - Transaction number

The TN number can be specified in UTL::QRY,ERR to retrieve the contents of the DACS II error recovery log file which contains the past history of all error recovery events related to this output report.

The following interpretations are listed in alphabetical order by the capitalized names

LOCAL - Local

LOCAL STACK DATA interpretation

dx *Explanation*

01 user stack pointer (A7)
02-32 dump of stack data (in reverse order)

MEMORY - Memory

MEMORY DATA interpretation

dx *Explanation*

- 01 Address of bad memory segment
- 02 Number of attached memory segments
- 03 Memory size
- 04-08 Not used
- 09-32 Memory dump

This displays the memory attached to the process at the time of the OVERLOAD. If the memory address and memory dump section contain zeros, this indicates that there was no memory corruption. Otherwise, if corruption was detected, the address of the bad segment along with a memory dump of that segment will be displayed.

PAUSE - Pause

QUEUE - Queue

PAUSE QUEUE interpretation

d01-d16

- process name (ASCII)

This displays the processes that were in the pause queue at the time of the OVERLOAD.

PROCESSOR

- Processor

PROCESSOR DATA interpretation

This displays all relevant data about the processor at the time of the OVERLOAD. Note that pcb stands for process control block.

dx	<i>Explanation</i>
01	process name
02	stack pc
03	pcb address
04	pack id
05	exception vector
06	status register
07	special status word
08	fault address
09	usp
10	fp
11	A5
12	A4
13	A3
14	A2
15	A1
16	A0
17	D7
18	D6
19	D5
20	D4
21	D3
22	D2
23	D1
24	D0
25	pcb memory segs
26	pcb ssp
27	pcb pc
28	pcb return addr
29	pcb usp
30	pcb events
31	pcb tslice
32	pcb sr
33	pcb signals
34	pcb prior
35	pcb mode
36	pcb dflag
37	pcb status

PROGRAM

- Program

TEXT - Text

PROGRAM TEXT interpretation

d01-d32

- disassembled listing of program text (ASCII)

This displays the disassembled listing of the program text. The display contains up to 254 ASCII characters starting at the value of the program counter (pc) at the time the OVERLOAD occurred.

READY - Ready

READY QUEUE interpretation

d01-d16

- process name (ASCII)

This displays the processes that were in the ready-to-run queue at the time of the OVERLOAD.

STACK - Stack

TRACE - Trace

STACK TRACE interpretation

dxx Explanation

01 previous stack 1 (A6)
02 program counter
03-08 stack dump

09 previous stack 2 (A6)
10 program counter
11-16 stack dump

17 previous stack 3 (A6)
18 program counter
19-24 stack dump

25 previous stack 4 (A6)
26 program counter
27-32 stack dump

This message dumps the previous four function calls prior to the function where the OVERLOAD occurred.

Contents**REPT,PM,NPC,PARAM,COUNT,VLDTY,LOCN,AI 18-2**

- Explanation Of Command 18-2
- Command 18-2
- Completion Message 18-2
- Denial Message 18-2
- Autonomous Message 18-3
- Nonhierarchical 18-3
- Hierarchical 18-4
- Explanation Of Parameters 18-4

RESET,DATE,TOD,FORMAT,MDY,DMY 18-9

- Explanation Of Command 18-9
- Command 18-9
- Completion Message 18-9
- Denial Message 18-9
- Autonomous Message 18-9
- Explanation Of Parameters 18-10

RESET,STOPPED 18-11

- Explanation Of Command 18-11
- Command 18-11
- Completion Message 18-11
- Denial Message 18-11
- Autonomous Message 18-11
- Explanation Of Parameters 18-12

RLS,LPBK,NPC,LOCN 18-13

- Explanation Of Command 18-13
- Command 18-13

Contents

■ Nonhierarchical	18-13
■ Hierarchical	18-14
■ Completion Message	18-14
■ Nonhierarchical	18-14
■ Hierarchical	18-14
■ Denial Message	18-14
■ Nonhierarchical	18-14
■ Hierarchical	18-14
■ Autonomous Message	18-14
■ Explanation Of Parameters	18-15
RLS,TSIG,NPC	18-22
■ Explanation Of Command	18-22
■ Command	18-22
■ Nonhierarchical	18-22
■ Hierarchical	18-23
■ Completion Message	18-23
■ Nonhierarchical	18-23
■ Hierarchical	18-23
■ Denial Message	18-23
■ Nonhierarchical	18-23
■ Hierarchical	18-23
■ Autonomous Message	18-23
■ Explanation Of Parameters	18-24
RMV,CCB	18-27
■ Explanation Of Command	18-27
■ Command	18-27
■ Completion Message	18-27
■ Denial Message	18-27
■ Autonomous Message	18-27
■ Explanation Of Parameters	18-28
RMV,CCI	18-29
■ Explanation Of Command	18-29
■ Command	18-30
■ Completion Message	18-30
■ Denial Message	18-30
■ Autonomous Message	18-30
■ Explanation Of Parameters	18-30

Contents

RMV,CCNI	18-32
■ Explanation Of Command	18-32
■ Command	18-32
■ Completion Message	18-32
■ Denial Message	18-32
■ Autonomous Message	18-32
■ Explanation Of Parameters	18-33
RMV,ETSI	18-34
■ Explanation Of Command	18-34
■ Command	18-34
■ Completion Message	18-34
■ Denial Message	18-34
■ Autonomous Message	18-34
■ Explanation Of Parameters	18-35
RMV,ETSI,S,ECCN,ALL	18-36
■ Explanation Of Command	18-36
■ Command	18-36
■ Completion Message	18-36
■ Denial Message	18-36
■ Autonomous Message	18-37
■ Explanation Of Parameters	18-37
RMV,LINK	18-38
■ Explanation Of Command	18-38
■ Command	18-38
■ Completion Message	18-38
■ Denial Message	18-38
■ Autonomous Message	18-38
■ Explanation Of Parameters	18-39
RMV,MC	18-40
■ Explanation Of Command	18-40
■ Command	18-40
■ Completion Message	18-40
■ Denial Message	18-40
■ Autonomous Message	18-40
■ Explanation Of Parameters	18-41
RMV,NPC,SIDE,INCL	18-42

Contents

■ Explanation Of Command	18-42
■ Command	18-43
■ Nonhierarchical	18-43
■ Hierarchical	18-43
■ Completion Message	18-44
■ Nonhierarchical	18-44
■ Hierarchical	18-44
■ Denial Message	18-44
■ Nonhierarchical	18-44
■ Hierarchical	18-44
■ Autonomous Message	18-44
■ Nonhierarchical	18-44
■ Hierarchical	18-45
■ Explanation Of Parameters	18-45
RMV,RT,DL	18-72
■ Explanation Of Command	18-72
■ Command	18-72
■ Completion Message	18-72
■ Nonhierarchical	18-72
■ Hierarchical	18-73
■ Denial Message	18-73
■ Nonhierarchical	18-73
■ Hierarchical	18-73
■ Common	18-73
■ Autonomous Message	18-73
■ Explanation Of Parameters	18-74
RMV,SMEM,PMEM	18-75
■ Explanation Of Command	18-75
■ Command	18-75
■ Completion Message	18-75
■ Denial Message	18-76
■ Autonomous Message	18-76
■ Explanation Of Parameters	18-76
RMV,SYNC	18-78
■ Explanation Of Command	18-78
■ Command	18-78
■ Completion Message	18-78
■ Denial Message	18-78

Contents

■ Autonomous Message	18-78
■ Explanation Of Parameters	18-79
RMV,SYNC,TLI,CRO	18-80
■ Explanation Of Command	18-80
■ Command	18-80
■ Completion Message	18-80
■ Denial Message	18-80
■ Autonomous Message	18-80
■ Explanation Of Parameters	18-81
RMV,SYNC,TLI,PMC,PMA,DMA,MI,COND	18-82
■ Explanation Of Command	18-82
■ Command	18-82
■ Completion Message	18-82
■ Denial Message	18-82
■ Autonomous Message	18-82
■ Explanation Of Parameters	18-83
RMV,SYNC,TLI,SSP	18-84
■ Explanation Of Command	18-84
■ Command	18-84
■ Completion Message	18-84
■ Denial Message	18-85
■ Autonomous Message	18-85
■ Explanation Of Parameters	18-85
RMV,TSI	18-87
■ Explanation Of Command	18-87
■ Command	18-87
■ Completion Message	18-87
■ Denial Message	18-87
■ Autonomous Message	18-87
■ Explanation Of Parameters	18-88
RMV,TSIS,CCN,ALL	18-89
■ Explanation Of Command	18-89
■ Command	18-89
■ Completion Message	18-90
■ Denial Message	18-90
■ Autonomous Message	18-90
■ Explanation Of Parameters	18-90

Contents

RMV,TSIS,CCN,UNIT,CONN	18-92
■ Explanation Of Command	18-92
■ Command	18-92
■ Completion Message	18-92
■ Denial Message	18-93
■ Autonomous Message	18-93
■ Explanation Of Parameters	18-93
RMV,UNIT,FC	18-95
■ Explanation Of Command	18-95
■ Command	18-95
■ Completion Message	18-95
■ Denial Message	18-95
■ Autonomous Message	18-95
■ Explanation Of Parameters	18-96
RMV,UNIT,FLI	18-98
■ Explanation Of Command	18-98
■ Command	18-98
■ Completion Message	18-98
■ Denial Message	18-98
■ Autonomous Message	18-99
■ Explanation Of Parameters	18-99
RMV,UNIT,FMT	18-100
■ Explanation Of Command	18-100
■ Command	18-100
■ Completion Message	18-100
■ Denial Message	18-100
■ Autonomous Message	18-101
■ Explanation Of Parameters	18-101
RMV,UNIT,FTMI,DSPI	18-102
■ Explanation Of Command	18-102
■ Command	18-102
■ Completion Message	18-102
■ Denial Message	18-102
■ Autonomous Message	18-102
■ Explanation Of Parameters	18-103
RMV,UNIT,MIU,INCL	18-105

Contents

■ Explanation Of Command	18-105
■ Command	18-105
■ Completion Message	18-105
■ Denial Message	18-106
■ Autonomous Message	18-106
■ Explanation Of Parameters	18-106
RMV,UNIT,MMFG,FRC,INCL	18-107
■ Explanation Of Command	18-107
■ Command	18-107
■ Completion Message	18-108
■ Denial Message	18-108
■ Autonomous Message	18-108
■ Explanation Of Parameters	18-108
RMV,UNIT,UC	18-111
■ Explanation Of Command	18-111
■ Command	18-111
■ Completion Message	18-111
■ Denial Message	18-111
■ Autonomous Message	18-111
■ Explanation Of Parameters	18-112
RPT,T,NPC,LOCN,AI,COUNT,THLEV,ALM	18-113
■ Explanation Of Command	18-113
■ Command	18-113
■ Completion Message	18-113
■ Denial Message	18-113
■ Autonomous Message	18-114
■ Nonhierarchical	18-114
■ Hierarchical	18-114
■ Explanation Of Parameters	18-114

REPT — RPT

REPT — RPT

This section documents the commands **REPT** through **RPT**.

REPT,PM,NPC,PARAM,COUNT,VLDTY,LOCN,AI

REPORT DS1 PERFORMANCE MONITORING

Explanation Of Command

This message is automatically generated by DACS II as the result of a user scheduling automatic DACS II performance reports for DA and TA type NPCs. The autonomous report format specifies the NPC along with all of the data necessary to identify the specific performance parameters and accumulation time periods that are being reported. The actual parameter counts are reported along with their historical validity indicators.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

[O.61011.01]

I hh:mm:ss xy,ww REPT PM ABORT COMPL

Autonomous Message

Nonhierarchical

[O.61011]

I hh:mm:ss xy,ww REPT PM e LN MSG:

NPC	PARAM	COUNT	VLDTY	LOCN	AI	MONDAT	MONTIM
[s]abc	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
[v]ghi	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm EOM

I hh:mm:ss xy,ww REPT PM e LN MSG:

NPC	PARAM	COUNT	VLDTY	LOCN	AI	MONDAT	MONTIM
[u]jkl	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm
[t]def	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm COMPL

Hierarchical

[O.61011]

I hh:mm:ss xy,ww REPT PM e LN MSG:

NPC	PARAM	COUNT	VLDTY	LOCN	AI	MONDAT	MONTIM	
uvmnp	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
edhfg	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	EOM

I hh:mm:ss xy,ww REPT PM e LN MSG:

NPC	PARAM	COUNT	VLDTY	LOCN	AI	MONDAT	MONTIM	
opjst	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
.	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	
wxkqr	pppp	cccccccc	v	locn	aaaaa	mmdd	hhmm	COMPL

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical starting NPC number

[v]ghi - The 3- or 4-digit nonhierarchical NPC number ([s]abc through [t]def)

[u]jkl - The 3- or 4-digit nonhierarchical NPC number ([s]abc through [t]def)

[t]def - The 3- or 4-digit nonhierarchical ending NPC number

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical starting NPC number
edhfg - Hierarchical NPC number (uvmnp through wxkqr)
opjst - Hierarchical NPC number (uvmnp through wxkqr)
wxkqr - Hierarchical ending NPC number

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit Module NPC
01-16 1-4 01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit Module NPC
01-16 1-6 01-28

PARAM - Parameter

pppp - Parameter name

The type of monitored parameter whose value is reported.

<i>pppp</i>	<i>Explanation</i>
CVP	Path Coding Violations
CVL	Line Coding Violations
ESP	Path Errored Seconds
ESL	Line Errored Seconds
SESP	Path Severely Errored Seconds
SESL	Line Severely Errored Seconds
SEFS	Path Severely Errored Framing Seconds
CSSP	Path Controlled Slip Seconds
UASP	Path Unavailable Seconds

COUNT - Count

cccccccc

- The accumulated count of a monitored parameter.
(000000000 through 134217728)

This parameter is meaningless if the VLDTY parameter indicates that data is not available for the interval.

VLDTY - Validity

v - Validity indicator

Indicates the validity of historical monitoring information. This parameter indicates whether the information for the specified accumulation interval was accumulated over the entire interval or some portion of it.

<i>v</i>	<i>Explanation</i>
A	Adjusted, data was manually initialized
C	Complete, data was accumulated over the entire interval
L	Long, data was accumulated longer than the interval period
P	Partial, data was accumulated over only part of the interval

LOCN - Location

locn - The location being performance monitored

<i>locn</i>	<i>Explanation</i>
NEND	Near-end
FEND	Far-end

AI - Accumulation interval

aaaaa - Accumulation interval specification

The accumulation or performance monitoring period for the specified parameter.

aaaaa Explanation

15MIN Parameter count from a 15-minute accumulator

DAILY Parameter count from a daily accumulator

MONDAT - Monitored date

mddd - Beginning date of the performance monitoring period

The date on which the performance monitoring period begins. This period is specified in the AI parameter.

mm - Month of year (01 through 12)

dd - Day of the month (01 through 31)

MONTIM - Monitored time

hhmm - Time at which performance monitoring begins

When outputting current or historical data, this parameter indicates the beginning time of day of the historical accumulation interval specified in the AI parameter.

hh - Hour of day (00 through 23)

mm - Minute of hour (00 through 59)

ABORT - Abort

The autonomous ABORT message is generated when the buffer is overfilled with scheduled PM reports.

RESET,DATE,TOD,FORMAT,MDY,DMY

ERROR RECOVERY

Explanation Of Command

This autonomously generated message is used to inform the craft that the system clock has been recovered automatically by the frame. The field can either be date of the year, time of day, or both.

The date and time will default to 12/31/9999 and 00:00:00, respectively.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01393]

I hh:mm:ss xy,ww RESET {DATE|TOD|TOD DATE} hr:mn:sc \
{mo/da/yr FORMAT MDY|da/mo/yr FORMAT DMY} COMPL

Explanation Of Parameters

RESET - Reset

TOD - Time of day

DATE - Date

mo/da/yr

- date DACS II is reset to

da/mo/yr

- date DACS II is reset to

yr - 4- digit calendar year

mo - month (01 through 12)

da - day (01 through 31)

hr:mn:sc

- time DACS II is reset to

hr - hour (00 through 23)

mn - minute (00 through 59)

sc - second (00 through 59)

FORMAT - Date display format

MDY - Month/Day/Year format

DMY - Day/Month/Year format

RESET, STOPPED

STARTUP

Explanation Of Command

This autonomous message indicates that the reset procedure has not successfully completed.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.01251]

RESET STOPPED

RESET, STOPPED
01251

DACS II/Rel 8.2.3
365-353-222

Explanation Of Parameters

RLS,LPBK,NPC,LOCN

FACILITY LOOPBACK RELEASE

Explanation Of Command

For TA type NPCs on DS3Us:

ANSI (American National Standards Institute) T1.403 is a DS1 interface specification, which among other things, specifies the use of the 4kb/s ESF data link for network maintenance. The data link is used to communicate between network elements which transport the DS1 facility.

This command is used to deactivate near-end (at the DACS II) and far-end (at the terminal on the other end of the DS1 facility) loopbacks on ESF formatted facilities as defined by ANSI T1.403.

This command can be used to deactivate a DACS II near-end payload loopback or to cause DACS II to transmit payload or line loopback deactivate commands on the ESF data link to far-end equipment, ordering the equipment on the other end of the DS1 facility to deactivate the respective loopbacks.

For TE and TH type NPCs on Hybrid DS3Us:

This command can also be used to release a line loopback towards the facility of a DS1 circuit of type TE or of an E1 circuit of type TH within a Hybrid DS3. (See command I.26141 to activate such loopbacks.)

Command

Nonhierarchical

[I.26151]

RLS:FRM xy,SEQ ww:LPBK loop,NPC [s]abc,LOCN locn!

Hierarchical

[I.26151]

RLS:FRM xy,SEQ ww:LPBK loop,NPC uvmnp,LOCN locn!

Completion Message

Nonhierarchical

[O.26151]

M hh:mm:ss xy,ww n[vv] RLS LPBK loop NPC [s]abc LOCN locn COMPL

Hierarchical

[O.26151]

M hh:mm:ss xy,ww n[vv] RLS LPBK loop NPC uvmnp LOCN locn COMPL

Denial Message

Nonhierarchical

[O.26151.01]

M hh:mm:ss xy,ww n[vv] RLS LPBK loop NPC [s]abc LOCN locn \
COND cc DNY

Hierarchical

[O.26151.01]

M hh:mm:ss xy,ww n[vv] RLS LPBK loop NPC uvmnp LOCN locn \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

LPBK - Loopback

loop - Loopback type

loop Explanation

LINE - Line

PYLD - Payload

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

The valid values are as follows, except that for TH type NPCs that carry E1s within a Hybrid DS3U all NPC numbers that are divisible by 4 as well as all NPC numbers that end with a "D" or "H" are invalid:

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit Module NPC
01-16 1-4 01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

LOCN - Location

locn - Loopback Location

locn Explanation

NEND Near-end

FEND Far-end

The NEND parameter must be coded for DS1 (T1) or E1 loopbacks that are carried within a Hybrid DS3, even though the Far-end loopbacks cannot be invoked.

cc - Hexadecimal condition code

cc *Explanation*

02	Subject entity is not equipped
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
26	NPC type error
9B	The MXR is not grown
B2	MXR is out of service
05	Invalid parameter combination
0B	Another signal already active prevents this signal from being sent
29	This signal is already being sent
30	No signals active
84	NPC is non-channelized
86	NPC number out of range

RLS,TSIG,NPC

FACILITY TEST SIGNAL DEACTIVATE

Explanation Of Command

This command is used to deactivate facility test signals and ANSI data link bit-oriented messages on DACS II DA and TA DS1 facility types. The test signals support network maintenance activities.

This command is required to deactivate any Yellow Test, High Density Test, Low Density Test, or Quasi-Random Test Signal previously applied to a facility because once these test signals are activated, they remain on the line until they are deactivated by this command.

Although this command also deactivates any currently active In-Band Loop-back Activate or In-Band Loop-back Deactivate Signal, these signals are temporary test signals which are transmitted for a duration of 5-8 seconds and then automatically deactivated by DACS II.

Deactivating a test signal also causes DACS II to remove any downstream trunk conditioning that was applied because the test signal was activated.

This command is also used to deactivate all data link test signals on DA or TA type DS1 facilities using the ESF format. Data link test signals include the Yellow Test signal (ESF mode), the Loopback Retention signal, and the ANSI far-end loopback activate/deactivate sequences which are initiated using the "Operate Loopback" command (26141). Data link test signals are defined in ANSI (American National Standards Institute) T1.403 as Bit Oriented Messages. ANSI T1.403 is a DS1 interface specification, which among other things, specifies the use of the 4kb/s ESF data link for network maintenance. The data link is used to communicate between network elements which transport the DS1 facility.

Command

Nonhierarchical

[I.28201]

RLS:FRM xy,SEQ ww:TSIG test,NPC [s]abc!

Hierarchical

[I.28201]

RLS:FRM xy,SEQ ww:TSIG test,NPC uvmnp!

Completion Message

Nonhierarchical

[O.28201]

M hh:mm:ss xy,ww n[vv] RLS TSIG test NPC [s]abc COMPL

Hierarchical

[O.28201]

M hh:mm:ss xy,ww n[vv] RLS TSIG test NPC uvmnp COMPL

Denial Message

Nonhierarchical

[O.28201.01]

M hh:mm:ss xy,ww n[vv] RLS TSIG test NPC [s]abc COND cc DNY

Hierarchical

[O.28201.01]

M hh:mm:ss xy,ww n[vv] RLS TSIG test NPC uvmnp COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TSIG - Test signal

test - Test signal type

test Explanation

ALLP - All Payload Test Signals, including High Density Test Signal, Low Density Test Signal, Quasi-Random Test Signal, In-Band Loopback Activate Signal, In-Band Loopback Deactivate Signal, and Yellow Test Signal in D4/T1DM mode

ALLD - All Data Link Test Signals, including Yellow Test Signal in ESF mode, Loopback Retention Signal, and ANSI Bit-Oriented Far-End Loopback Activate/Deactivate Sequences.

ALL - All Test Signals in both the payload and data link.

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

The valid values are:

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical NPC number

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

cc - Hexadecimal condition code

cc *Explanation*

- 02** Subject entity is not equipped
- 04** Subject entity is out of service
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 13** FTMI is not equipped
- 14** FTMI is out of service
- 26** NPC type error
- 9B** The MXR is not grown
- B2** MXR is out of service
- 05** Invalid parameter combination
- 0B** Another signal already active prevents this signal from being sent
- 29** This signal is already being sent
- 30** No signals active
- 84** NPC is non-channelized
- 86** NPC number out of range

RMV,CCB

REMOVE CROSS-CONNECT BUFFER

Explanation Of Command

This command applies only to the noncapacity expansion frame (NCEF).

It requests the removal of the cross-connect buffer from service.

Command

[I.33202]

RMV:FRM xy,SEQ ww:CCB sf!

Completion Message

[O.33202]

M hh:mm:ss xy,ww n[vv] RMV CCB sf COND 00 COMPL

Denial Message

[O.33202.01]

**hh:mm:ss xy,ww n[vv] RMV CCB sf COND cc DNY

Autonomous Message

[O.33202]

pa <il> hh:mm:ss xy,ww n[vv] RMV CCB sf {PMC|PMA|DMA|MI} \
COND 00 COMPL

[O.33202.01]

pa <il> hh:mm:ss xy,ww n[vv] RMV CCB sf {PMC|PMA|DMA|MI} \
COND cc DNY

Explanation Of Parameters

pa - Priority of action field.

pa *Explanation*

I Information

***** Minor alarm

****** Major alarm

***C** Critical alarm

il - Intervention level.

il *Explanation*

AMI Immediate maintenance action

AMD Deferred maintenance action

SI No intervention

PMC Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

CCB - Cross-connect buffer

sf - CCB identification

s - Side No. (0 or 1).

f - CCB No. (1 through 6).

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

02 Subject entity is not equipped

04 Subject entity is out of service

18 CCNI is out of service

19 Mate CCN side is out of service

RMV,CCI

REMOVE CLOCK CONTROL INTERFACE

Explanation Of Command

pa - Priority of action field.

#beginlist

<i>pa</i>	<i>Explanation</i>
I	Information
*	Minor alarm
**	Major alarm
*C	Critical alarm

#endlist

il - Intervention level.

il	Explanation
AMI	Immediate maintenance action
AMD	Deferred maintenance action
SI	No intervention

PMC	Prompt Maintenance Action Critical
PMA	Prompt Maintenance Action Major
DMA	Deferred Maintenance Action Minor
MI	Maintenance Information

This command is applicable only to the capacity expansion frame (CEF).

It requests that the clock and control interface (CCI) in side s be removed from service.

When a CCI pack is removed from service, its two corresponding bus terminator (BT) packs are also removed.

Command

[I.33251]

RMV:FRM xy,SEQ ww:CCI s!

Completion Message

[O.33251]

M hh:mm:ss xy,ww n[vv] RMV CCI s COND 00 COMPL

Denial Message

[O.33251.01]

M hh:mm:ss xy,ww n[vv] RMV CCI s COND cc DNY

Autonomous Message

[O.33251]

pa <il> hh:mm:ss xy,ww n[vv] RMV CCI s {PMC|PMA|DMA|MI} \
COND    COMPL

[O.33251.01]

pa <il> hh:mm:ss xy,ww n[vv] RMV CCI s {PMC|PMA|DMA|MI} \
COND cc DNY

Explanation Of Parameters

CCI - Clock and control interface

s - Side No. (0 or 1)

cc - Completion condition code (hexadecimal)

To interpret values of    see cc below.

cc - Hexadecimal condition code

cc Explanation

04 Subject entity is out of service

19 Mate CCN side is out of service

RMV,CCNI

REMOVE CROSS-CONNECT NETWORK INTERFACE

Explanation Of Command

This command applies only to the noncapacity expansion frame (NCEF).

It requests the removal of the cross-connect network interface from service.

Command

[I.33201]

RMV:FRM xy,SEQ ww:CCNI s!

Completion Message

[O.33201]

M hh:mm:ss xy,ww n[vv] RMV CCNI s COND cc COMPL

Denial Message

[O.33201.01]

M hh:mm:ss xy,ww n[vv] RMV CCNI s COND cc DNY

Autonomous Message

[O.33201]

**pa <il> hh:mm:ss xy,ww n[vv] RMV CCNI s {PMC|PMA|DMA|MI} \
COND cc COMPL**

[O.33201.01]

pa <il> hh:mm:ss xy,ww n[vv] RMV CCNI s {PMC|PMA|DMA|MI} \
COND cc DNY

Explanation Of Parameters

pa - Priority of action field.

pa	<i>Explanation</i>

I	Information

*	Minor alarm

**	Major alarm

*C	Critical alarm

il - Intervention level.

il	<i>Explanation</i>

AMI	Immediate maintenance action

AMD	Deferred maintenance action

SI	No intervention

PMC Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

CCNI - Cross-connect network interface

s - CCNI number (0 or 1)

cc - Hexadecimal condition code

cc	<i>Explanation</i>

04	Subject entity is out of service

19	Mate CCN side is out of service

RMV,ETSI

REMOVE ETSI

Explanation Of Command

This command applies only to the capacity expansion frame (CEF).

It requests the removal of an expanded time slot interchanger (ETSI) from service. DACS II will deny this command if the mate expanded cross-connect network (ECCN) side is out-of-service (OOS).

Command

[I.33261]

RMV:FRM xy,SEQ ww:ETSI sqq!

Completion Message

[O.33261]

M hh:mm:ss xy,ww n[vv] RMV ETSI sqq COND 00 COMPL

Denial Message

[O.33261.01]

M hh:mm:ss xy,ww n[vv] RMV ETSI sqq COND cc DNY

Autonomous Message

[O.33261]

pa <il> hh:mm:ss xy,ww n[vv] RMV ETSI sqq {PMC|PMA|DMA|MI} \
COND 00 COMPL

[O.33261.01]

pa <il> hh:mm:ss xy,ww n[vv] RMV ETSI sqq {PMC|PMA|DMA|MI} \
COND cc DNY

Explanation Of Parameters

pa - Priority of action field.

pa	<i>Explanation</i>

I	Information

*	Minor alarm

**	Major alarm

*C	Critical alarm

il - Intervention level.

il	<i>Explanation</i>

AMI	Immediate maintenance action

AMD	Deferred maintenance action

SI	No intervention

PMC Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

ETSI - Expanded time slot interchanger

s - Side (0 or 1).

qq - Unit number (01 through 16)

COND - Condition

cc - Hexadecimal condition code

cc	Explanation

02	Subject entity is not equipped

04	Subject entity is out of service

19	Mate CCN side is out of service

CE	CCI is out of service

RMV,ETIS,ECCN,ALL

REMOVE ETIS ALL

Explanation Of Command

This command applies only to the capacity expansion frame (CEF).

It requests the removal of all in-service expanded time slot interchangers (ETISs) in side "s" of the expanded cross-connect network (ECCN). This message is denied if ECCN side "s" is the active side and the mate ECCN side is out-of-service (OOS).

Command

[I.33271]

RMV:FRM xy,SEQ ww:ETIS,ECCN s,ALL!

Completion Message

[O.33271]

M hh:mm:ss xy,ww n[vv] RMV ETIS ECCN s ALL 5 LN MSG:

TOTAL ETIS kk

s01 r nn s02 r nn s03 r nn s04 r nn s05 r nn s06 r nn

s07 r nn s08 r nn s09 r nn s10 r nn s11 r nn s12 r nn

s13 r nn s14 r nn s15 r nn s16 r nn

COND 00 COMPL

Denial Message

[O.33271.01]

**M hh:mm:ss xy,ww n[vv] RMV ETIS ECCN s ALL **

COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ETSI - Expanded time slot interchangers

ECCN - Expanded cross-connect network

s - Side number (0 or 1)

kk - Total number of ETSlS equipped in side s (01 through 16).

r - Indication of the completion or denial of the removal for each individual ETSI pack.

r *Explanation*

C Completed

D Denied

- ETSI not equipped

nn - Hexadecimal condition code for the particular ETSI.

For r = C

nn *Explanation*

00 No condition

For r = D

nn *Explanation*

04 Subject entity is out of service

"nn" will be shown as "--" if "r" is "-". **cc** - Hexadecimal condition code

cc *Explanation*

02 Subject entity is not equipped

04 Subject entity is out of service

19 Mate CCN side is out of service

CE CCI is out of service

RMV, LINK

REMOVE LINK

Explanation Of Command

This message requests the removal of the administrative link from service.

Command

[I.33011]

RMV:FRM xy,SEQ ww:LINK j!

Completion Message

[O.33011]

M hh:mm:ss xy,ww n[vv] RMV LINK j COND cc COMPL

Denial Message

[O.33011.01]

M hh:mm:ss xy,ww n[vv] RMV LINK j COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

LINK - Link

j - Administrative link number (1 through 6)

pa - Priority of action field.

pa *Explanation*

***** Minor alarm

****** Major alarm

M Manual Response

cc - Hexadecimal condition code

cc **Explanation**

00 No conditions

04 Subject entity is out of service

08 Cannot remove own link

09 Last link in service

D0 Command is Frame administrator (DAX) only.

FC Superuser logged on

FD Command not allowed

RMV,MC

REMOVE MAIN CONTROLLER

Explanation Of Command

This message removes the main controller from service. The MC must be in service for this command to be accepted. Diagnostic and restore messages can still be run on the MC.

Command

[I.33001]

RMV:FRM xy,SEQ ww:MC!

Completion Message

[O.33001]

M hh:mm:ss xy,ww n[vv] RMV MC COND 00 COMPL

Denial Message

[O.33001.01]

M hh:mm:ss xy,ww n[vv] RMV MC COND cc DNY

Autonomous Message

[O.33001]

pa <il> hh:mm:ss xy,ww RMV MC {PMC|PMA|DMA|MI} COND cc COMPL

Explanation Of Parameters

MC - Main controller

pa - Priority of action field.

pa *Explanation*

I Information

***** Minor alarm

****** Major alarm

***C** Critical alarm

il - Intervention level.

il *Explanation*

AMI Immediate maintenance action

AMD Deferred maintenance action

SI No intervention

PMC Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

cc - Hexadecimal condition code

cc **Explanation**

04 **Subject entity is out of service**

RMV,NPC,SIDE,INCL

REMOVE NPCs

Explanation Of Command

This command removes a single Network Processing Circuit (NPC) or a range of NPCs within a unit from service.

The NPCs can belong to a Facility Terminating Unit, a DS3 Unit, a HDS3 Unit or a Digital Signal Processing Unit. For TH type NPCs, the NPC numbers which are divisible by four with a remainder of zero are not valid THxyz NPCs. However, the range of THxyz type NPC numbers is still supported with the understanding that there may be gaps in the NPC number range.

Digital Signal Processing Platform (DSPP) NPCs in Facility Terminating Units may also be removed by this command. Please note also that DSPP NPCs are always odd and the next higher even NPC number is not used.

A range of NPCs cannot be specified for Digital Signal Processing Unit NPCs in a DSPU. When a range of NPCs is being removed, execution of this command may be aborted by entering **ABT**.

The **INCL** keyword is required for removal of one or more cross-connected Network Processing Circuits with customer or red circuit marking.

Note: **INCL** is also required for subrate Network Processing Circuits with established channels (i.e., channels connected by the **SECH** command). The **INCL** keyword is required for removal of one or more cross-connected Network Processing Circuits with customer or red circuit marking.

Note: **INCL** is also required for C-bit processing DSPU packs with C-bit connected channels.

One message segment is output for each Network Processing Circuit requested and successfully removed.

For NPCs with a Digital Signal Processing Unit (DSPU), this command results in the removal of all NPCs in the circuit pack on only one of the duplicated sides.

When an NPC remove command addresses a range of NPCs, the removal of two or more consecutive NPCs in the range or even an entire Facility Terminating Module (FTM) of NPCs can be skipped, with a summary message, for the following conditions: A range command addressing NPCs within a Unit crosses an FTM boundary and the FTM is unequipped; Addressed NPCs are unequipped; Addressed NPCs are out-of-service; Addressed NPCs have other conditions not involving a failure condition determined by diagnostics.

Specifically:

- Remove commands where the address range crosses a Unit boundary shall be denied.
- For remove commands which address a range of NPCs, denials for sets of two or more NPCs shall be output in a summary command. The summary denial shall use a floating window denial:

Floating Window Denial Message

- When a remove command for a range of NPCs is denied for successive NPCs in the range for the same reason, a summary denial message shall be output, identifying the relevant range of NPCs and the reason. The generation of additional completion or denial responses for reasons other than diagnostic failure resumes at the next NPC and continues to the end of the range.

Command

Nonhierarchical

[I.33351]

RMV:[FRM xy,SEQ ww]:NPC [s]abc[-[t]def][,SIDE s][,INCL]!

Hierarchical

[I.33351]

RMV:[FRM xy,SEQ ww]:NPC uvmp[-uvkqr][,SIDE s][,INCL]!

Completion Message

Nonhierarchical

[O.33351]

M hh:mm:ss xy,ww n[vv] RMV NPC [s]ghi[SIDE s] TYPE mnxyz[INCL] \
COND kk COMPL

Hierarchical

[O.33351]

M hh:mm:ss xy,ww n[vv] RMV NPC uvghi[SIDE s] TYPE mnxyz[INCL] \
COND kk COMPL

Denial Message

Nonhierarchical

[O.33351.01]

M hh:mm:ss xy,ww n[vv] RMV NPC [s]jkl[-[t]mno][SIDE s] TYPE mnxyz\
[INCL] COND cc DNY

Hierarchical

[O.33351.01]

M hh:mm:ss xy,ww n[vv] RMV NPC uvjkl[-uvmno][SIDE s] TYPE mnxyz\
[INCL] COND cc DNY

Autonomous Message

Nonhierarchical

[O.33351]

pa hh:mm:ss xy,ww n[vv] RMV NPC [s]ghi[SIDE s] TYPE mnxyz[INCL] \
COND kk COMPL

[O.33351.01]

pa hh:mm:ss xy,ww n[vv] RMV NPC [s]jkl[SIDE s] TYPE mnxyz[INCL] \
COND cc DNY

Hierarchical

[O.33351]

pa hh:mm:ss xy,ww n[vv] RMV NPC uvghi[SIDE s] TYPE mnxyz[INCL] \
COND kk COMPL

[O.33351.01]

pa hh:mm:ss xy,ww n[vv] RMV NPC uvjkl[SIDE s] TYPE mnxyz[INCL] \
COND cc DNY

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number (beginning of the range).

[t]def - The 3- or 4-digit nonhierarchical NPC number (end of the range).

The allowable values are presented below:

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Hierarchical NPC number (beginning of the range).

uvkqr - Hierarchical NPC number (end of the range).

uv - Unit number

m, k - Module number

np, qr - NPC number within the module

The allowable values are:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

MB, SR, and MJ type numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

SIDE - Side

s - Side of duplicated DSPU circuit to be removed (0 or 1)

INCL - Inclusive

This keyword is required for removal of one or more NPCs which have cross-connections marked as customer or red. It is also required for Substrate NPCs with established channels. For Substrate circuit packs, there is only one NPC per circuit pack.

pa - Priority of action

pa *Explanation*

***C** Critical

****** Major

***** Minor

A Autonomous

il - Intervention level.

il Explanation

AMI Immediate maintenance action

AMD Deferred maintenance action

SI No intervention

PMC - Prompt Maintenance Action Critical

PMA - Prompt Maintenance Action Major

DMA - Deferred Maintenance Action Minor

MI - Maintenance Information

[s]ghi - The 3- or 4-digit nonhierarchical number of a successfully removed NPC.

(**[s]abc** through **[t]def**)

[s]jkl - The 3- or 4-digit nonhierarchical number of an NPC whose removal is denied.

If used in a range, it denotes the first NPC of the range.

(**[s]abc** through **[t]def**)

[t]mno - The 3- or 4-digit nonhierarchical number of an NPC whose removal is denied.

It denotes the last NPC of a range. (**[s]abc** through **[t]def**)

uvghi - Hierarchical number of a successfully removed NPC.

(**uvmnp** through **uvkqr**)

uvjkl - Hierarchical number of an NPC whose removal is denied.

If used in a range, it denotes the first NPC of the range.

(**uvmnp** through **uvkqr**)

uvmno - Hierarchical number of an NPC whose removal is denied.

It denotes the last NPC of a range. (**uvmnp** through **uvkqr**)

uv - Unit number

m, g, k, j

- Module number

np, qr, hi, kl, no

- NPC number within the module

TYPE - Type

mnxyz - NPC-type identifier

mn Explanation

DA Dual digroup ANSI NPC

DE Dual digroup NPC

DS SLC® carrier NPC

SD Digital Signal Processing Application Circuit Pack

TA DS3U ANSI NPC

TE DS3U or HDS3U Noninterface unit NPC

TH Hybrid DS3U CEPT NPC

MB Digital multipoint bridge NPC

MJ Multipoint junction unit NPC
SR Subrate multiplexer unit NPC

DE-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4, y=5, and y=6, DMI signalling.

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3†	ZBTSI - Zero-bit time-slot interchanger
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DE-type clear-DS1 NPC.

† Only valid with ESF (x = 2 or 3)

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	No channel numbering format, clear-DS1

DS-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	Not assigned
4	Not assigned
5	Not assigned
6	SLC® 96 carrier Fs
7	SLC 5 carrier ESF with data link
8-9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	Zero code suppression (ZCS)
1	No zero code suppression (NZCS)
2	Bipolar with 8 zero substitution (B8ZS)
3-9	Not assigned

z - Counting sequence format

z	<i>Explanation</i>
0	SLC 96 carrier Mode III D4 counting sequence
1	SLC 96 carrier Mode III D1D counting sequence
2	SLC 96 carrier Mode I D1D counting sequence
3	SLC Series 5 carrier D4 counting sequence
4-9	Not assigned

DA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DA-type clear-DS1 NPC.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

DA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a DA NPC with both a valid framing format (D4, ESF, T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the DA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II FTU, the NPC must be provisioned as NPC type **DE9y9**.

Zero Byte Time Slot Interchange (ZBTSI) encoding is not supported by the DA NPC type. If ZBTSI is desired on an NPC in a DACS II FTU, the NPC must be provisioned as a DE NPC type with its **y** option selecting ZBTSI (**DEx3z**).

SD-type xyz fields (Digital Signal Processing Platform (DSPP) Applications)

SD111 X.50/X.57 International subrate application

SD311 Digital Multipoint Bridge application

SD411 North American DDS Subrate and MJU application

SDxyz Possible future applications with specific values for xyz

TE-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4 and y=5, DMI signalling.

y - Line and signaling format

y *Explanation*

0 ZCS - Zero code suppression

1* NZCS - No zero code suppression

2 Not assigned

3 Not assigned

4 ZCS/DMI - Zero code suppression/DMI signaling

5 NZCS/DMI - No zero code suppression/DMI signaling

6-9 Not assigned

* Only option 1 is applicable to TE-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

0 D4 channel bank channel numbering

1 D2 channel bank channel numbering

2 D1D channel bank channel numbering

3-8 Not assigned

9 No channel numbering format, clear-DS1

TA-type xyz fields

x - Multiframe format for the digroup

x *Explanation*

0 Not assigned

1 D4

2 ESF - Voice

3 ESF - Data

4 DDST (T1DM - R bit connection via channel 24)

5-7 Not assigned

8 Ericsson Cellular format

9 Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the TA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II DS3U, the NPC must be provisioned as NPC type TE919.

TH-Type xyz field

The provisioning values of x, y, and z for the TH type are shown in the following tables (a 'Y' in a column of the Table indicates that the feature at the top of the column is enabled by the corresponding (x, y or z) provisioning value):

Table 18-1. Provisioning values for x

x value	CRC-4 Mode	Automatic CRC-4
0	Y	
8		Y
B		

Table Notes:

1. The "Automatic CRC-4" is also known as CRC-4 Interworking.
2. If the CRC-4 mode is enabled (x value 0) the NPC will compute checksums over the transmitted data and transmit the checksum as part of the CRC-4 multiframe pattern in TS0. The NPC will also monitor the incoming CRC-4 multiframe and verify the CRC-4 checksum. If the CRC-4 multiframe cannot be found using the CRC-4 reframe algorithm, then the NPC will declare an alarm.

If the automatic CRC-4 option is selected (x value 8), the NPC will perform all the functions of the CRC-4 mode. However, if the CRC-4 multiframe is lost, the NPC will not declare an alarm or apply consequent actions.

3. x value B does not enable any of the features shown in the Table; this is a valid option.
4. Only x values 0, 8, and B are valid x values, all other x values will be denied.

Table 18-2. Provisioning values for y

y value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

Table Notes:

1. y values 1, 3, 5, 7, A-B and E-F are unassigned (that is, invalid).
2. For y values 0, 2, 4 and 6 Channel Associated Signaling (CAS) is enabled. In this mode the Telephone Channel Numbering system is always used.

If the "Convert TS16" option is selected (y values 0 and 2), the *abcd* bits of TS16 will be converted to '1111' if they are received as '0000'. This is to prevent false framing in the TS16 multiframe. If this option is not selected (y values 4 and 6), a value of '0000' in the *abcd* bits will be transmitted transparently.

If the "AIS in TS16" option is selected (y value 0 and 4), AIS will always be applied to received TS16 signaling channels on detection of RAI (Remote Alarm Indication, Bit 3 of TS0 NFW), RAIS (Remote AIS Indication, Bit 4 of TS0 NFW, if provisioned) or R16 (Remote Alarm Indication received in TS16). If this option is not selected (y values 2 and 6), AIS will not be applied on detection of RAI, RAIS, or R16.

3. For y values 8 and 9 the NPC will be Non Signaling Associated (NSA). In this mode, Telephone Channel Numbering ($y=8$) or Timeslot Channel Numbering ($y=9$) may be selected.
4. The NPC can be set up as a framed clear 2 Mbit/s interface ($y=C$) or as an unframed clear 2 Mbit/s interface ($y=D$). When provisioned as a clear 2 Mbit/s interface, an NPC does not modify the cross-connected data in any way. This means that the following functions are not performed in the clear 2 Mbit/s mode:
 - Outgoing CRC-4 checksum generation (applies to framed clear 2 Mbit/s interfaces with CRC-4 option enabled).
 - Remote alarm indications (line format errors are reported locally, but no alarm indicators are sent in TS0 to the remote end).

Table 18-3. Provisioning values for z

z value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	166ms	500ms	RAIS	RBER	166ms	500ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
A	Y		Y							Y
B		Y	Y							Y

Table Notes:

1. *z* values 8, 9, C, D, E and F are unassigned (that is, invalid).
2. For *z* values 1, 3, 5, 7 and B the consequent action timing is under firmware (FW) control. For *z* values 0, 2, 4, 6 and A the consequent action timing is under hardware (HW) control.

The G.732 consequent action of inserting the AIS in data channels is applied within 2 ms whether the timing is under HW control or FW control, but when under FW control, the AIS in data channels is overridden by the Insertion Word sourced from the Alternate Message Store (AMS) after detection of the local alarm:

in **500 ms**
if *z* = 1, 3 or 5
in **2496 ms**
if *z* = 7 or B

The Insertion Word pattern can be specified in the cross-connect command; on 2Mbit/s NPCs in a *gateway* **cross-connection** the Insertion Word always defaults to AIS.

The selection of HW or FW control is also used to provision the consequent actions on signaling bits. On detection of loss of frame (LOF) or multiframe alignment (LMA, Loss of Multiframe Alarm) error, the hardware immediately applies a signaling freeze by using the last good frame's signaling information. The signaling freeze remains in effect until two multiframes without errors are received. When HW control is used, the AIS in signaling bits is applied within 2 ms, overriding the signaling freeze. When FW control is used, the trunk conditioning pattern from the AMS overrides the signaling freeze once the 2Mbit/s NPC goes into the alarm state.

3. The Consequent Action timing also selects the time after which the **local** alarms are declared and cleared:*
 - HW Control: **Both** remote and local alarms are declared and cleared in 166 ms.
 - FW Control: Only remote alarms are declared and cleared in 166 ms. The **local** alarms are declared and cleared in 500 ms, **except when *z* = 7 or B.**
4. On the transmitting NPC, bit 3 in the NFW, the remote alarm indication (RAI), will be processed as specified in ITU-T Recommendation G.704 Section 2.3.2 (**that is, within 2 ms after detecting the failure**) when *z* = 0, 1, 4, 5, 6, 7, A or B. **However,** for *z* value 2 the set time is 166 ms and for *z* value 3 the set time is 500 ms. NFW bit 3 is always set to 0 for non-alarm condition and is set to 1 for alarm conditions.
5. On the transmitting NPC, if bit 4 of the NFW is used as RAIS (Remote AIS) indicator, NFW bit 4 will be set in 166 ms (for *z* = 4) or 500 ms (for *z* = 5) after AIS is detected in the received signal. The default idle state for Bit 4 is a '1'. The idle state can be changed to a '0' with the CHG::NPC,TS0 command. The bit is put into the

* Local alarms are those generated for the events: PWR, PBF, BER, AIS, LMA, and A16. Remote alarms are those generated for the events: RAI, RAIS, RBER, and R16.

active state by inverting the value of the idle state. Similarly, if NFW bit 4 is in the active state in the received signal, consequent actions are taken 166 ms after detecting this condition.

6. z values 6-7 and A-B enable the Minor Bit Error Rate and Signaling Freeze Delay Time Features.

Common Options (z = 6-7 or A-B)

- [i] Enable BER calculations, and when in the BER state:

DACS takes the alarm state consequent actions: sending a message, and activating appropriate alarm relays and summary LEDs.

When out of the BER state, DACS II retires the alarm state consequent actions: sends a retirement message, and deactivates appropriate alarm relays and summary LEDs.

- [ii] RAI set in 2 ms

- [iii] Signaling Freeze Delay Timing, Consequent Action Clear Timing:

z=6 or A hardware timing

z=7 or B firmware timing (SFDT=2496 ms, CACT=624 ms)

- [iv] BER alarm level = DMA

Specific Options for z= 6 or 7

- [v] RBER alarm level = MI

- [vi] NFW bit 4=RBER:

- DACS II sends a remote indicator in bit 4 (RBER) of the time slot 0 Non Frame Word (NFW) upstream to the far end 166 ms after detecting the Minor Bit Error Rate (BER) condition.

DACS II sets the RBER bit to its idle state, on clearing of the BER condition.

- DACS II detects the remote setting of the received bit 4 as an RBER condition and generates an appropriate message. Consequent actions are taken 166 ms after detecting this condition.

DACS II generates an appropriate retirement message when the received bit 4 returns to the idle state.

Specific Options for z= A or B

[v] RBER unalarmed

[vi] NFW bit 4=disabled

NFW bit 4 is NOT used as RBER, although the local Minor Bit Error Rate (BER) condition is detected and cleared with the alarm state consequent actions.

Additionally:

- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.

The following tables provide a summary of invalid combinations of *xyz* for the TH type NPC.

Table 18-4. Combinations of *x* and *y* Values

Invalid <i>xyz</i> Combinations	Explanation
8Cz	Framed clear 2 Mbit/s (<i>y</i> value C) is valid for all valid <i>x</i> options except the one invoking automatic CRC-4 interworking. The interworking algorithm requires setting of outgoing E-bits, which is not permitted for a clear signal.
0Dz 8Dz	Unframed clear 2 Mbit/s (<i>y</i> value D) is only valid for <i>x</i> value B. This is the only <i>x</i> option which does not require decoding of TS0 content.

Table 18-5. Combinations of y and z Values

Invalid xyz Combinations	Explanation
xC1 xC3 xC5 xC7 xCB xD1 xD3 xD5 xD7 xDB	Clear 2 Mbit/s (y value C or D) cannot be used with Firmware controlled Consequent Action (z values 1, 3, 5, 7 or B).
xD4 xD6	Unframed clear 2 Mbit/s (y value D) cannot be used with z value 4 (NFW Bit 4 used for RAIS) or with z value 6 (NFW Bit 4 used for RBER) because unframed clear signals cannot obtain TS0 framing.

Table Notes:

1. If framed clear 2 Mbit/s (y value C) is selected with z value 4 (NFW Bit 4 used for RAIS) only the receive side of this function will be enabled. Outgoing RAIS indicators cannot be transmitted during clear signal operation.
2. If framed clear 2Mbit/s (y value C) is selected with z = value 6 (NFW Bit 4 used for RBER) only the receive side of this function will be enabled. Outgoing RBER indicators cannot be transmitted during clear signal operation.

There are no combinations between valid x and z values that are invalid.

MB-type xyz fields

x - Fixed at 1
y - Fixed at 0
z - Fixed at 0

SR- and MJ-type xyz fields

x - Fixed at 1
y - Fixed at 0
z - Fixed at 0

COND - Condition

kk - Hexadecimal completion code
See cc to interpret values.

cc - Hexadecimal condition code

cc Explanation

00	No conditions
02	Subject entity is not equipped
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
15	NPC is unequipped
19	Mate CCN side is out of service
1E	Customer control or red circuit exists
1F	FTMI is in service but failed
37	DSPI out-of-service
3E	DSPI failed
5C	NPC providing timing to inservice SSP
86	Attempt to remove DGA w/o INCL keyword or prior prot. sw. request

cc Explanation

- 8E DGA protected; use INCL to remove, or
unswitch protection**
- 9B INCL must be specified for SRDC ckts**
- F2 Invalid NPC number specified**
- FD NPC range crosses unit boundary**
- A0 The selected MXR associated with the NPC is
Out-Of-Service**
- A1 The selected MXR associated with the NPC is
In-Service but failed**
- A3 The selected MIU associated with the NPC is
In-Service but failed**
- B7 The associated MXR is In-Service but pested**
- 69 Use of this NPC is RESERVED for SLC 96 MD 1**

RMV,RT,DL

RMV RT | DL

Explanation Of Command

This command is used to remove from service all the NPCs associated with the specified RT or DL so that the type of the NPCs can be changed using the CHG RT command I.38481. Each NPC removed will print a RMV (O.33351) message. If an NPC removal fails the error condition of the RMV NPC message(O.33351) will give the reason. This command will remove the NPCs associated with the RT or DL one at a time in the proper order. If it encounters an error removing any one of the NPCs it will not continue removing the remaining NPCs.

Command

[I.33481]

RMV:FRM xy,SEQ ww:{RT|DL} ffff!

Completion Message

Nonhierarchical

[O.33481]

**M hh:mm:ss xy,ww n[vv] RMV {RT|DL} ffff 3 LN MSG:
DGA [s]aaa OOS [DGB [s]bbb OOS] [DGC [s]ccc OOS] [DGD [s]ddd OOS] \
[DGP [s]ppp OOS]
COMPL**

Hierarchical

[O.33481]

M hh:mm:ss xy,ww n[vv] RMV {RT|DL} ffff 3 LN MSG:
DGA uvjab OOS [DGB uvkcd OOS] [DGC uvlef OOS] [DGD uvmgh OOS] \
[DGP uvjpr OOS]
COMPL

Denial Message

Nonhierarchical

[O.33481.01]

M hh:mm:ss xy,ww n[vv] RMV {RT|DL} ffff 3 LN MSG:
[DGA [s]aaa {OOS|INS}][DGB [s]bbb {OOS|INS}][DGC [s]ccc {OOS|INS}]\
[DGD [s]ddd {OOS|INS}][DGP [s]ppp {OOS|INS}]
COND cc DNY

Hierarchical

[O.33481.01]

M hh:mm:ss xy,ww n[vv] RMV {RT|DL} ffff 3 LN MSG:
[DGA uvjab {OOS|INS}][DGB uvkcd {OOS|INS}][DGC uvlef {OOS|INS}]\
[DGD uvmgh {OOS|INS}][DGP uvjpr {OOS|INS}]
COND cc DNY

Common

If there is no RT or DL:

[O.33481.01]

M hh:mm:ss xy,ww n[vv] RMV {RT|DL} ffff 2 LN MSG:
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

RT	- SLC remote terminal
DL	- Digital carrier line unit
ffff	- Bank identification number (0000 through 9999)
OOS	- Out of Service
INS	- Inservice
DNY	- Denied
DGA	- Digroup A of SLC
DGB	- Digroup B of SLC
DGC	- Digroup C of SLC
DGD	- Digroup D of SLC
DGP	- Digroup P of SLC
[s]aaa	- DGA NPC number
[s]bbb	- DGB NPC number
[s]ccc	- DGC NPC number
[s]ddd	- DGD NPC number
[s]ppp	- DGP NPC number
uvjab	- DGA NPC number
uvkcd	- DGB NPC number
uvlef	- DGC NPC number
uvmgh	- DGD NPC number
uvjpr	- DGP NPC number

RMV,SMEM,PMEM

REMOVE PMEM OR SMEM

Explanation Of Command

This message removes the Primary Memory card (PMEM) or Secondary Memory card (SMEM) from service.

The SMEM card can be alarmed but the PMEM card cannot.

The PMEM card may only be removed when the main controller (MC) is in maintenance condition (MCOND). The SMEM card may be removed when the MC is in service (IS) or MCOND.

If either card fails autonomously, they are removed by software. However, if the PMEM fails autonomously, the MC will first go into MCOND.

If the SMEM is removed manually, it is removed by software also. Removing the SMEM card will not change the state of the MC. When the MC is IS, all writes to the card will be completed before the this command completes.

Command

[I.33211]

RMV:FRM xy,SEQ ww:{SMEM|PMEM}!

Completion Message

[O.33211]

M hh:mm:ss xy,ww n[vv] RMV {PMEM|SMEM} COMPL

Denial Message

[O.33211.01]

M hh:mm:ss xy,ww n[vv] RMV {PMEM|SMEM} COND cc DNY

Autonomous Message

[O.33211]

pa <il> hh:mm:ss xy,ww n[vv] RMV {PMEM|SMEM} {PMC|PMA|DMA|MI} COMPL

Explanation Of Parameters

PMEM - Primary memory.

SMEM - Secondary memory.

pa - Priority of Action
pa Explanation
A Autonomous
I Informational
* Minor
** Major
*C Critical

il - Intervention level.
il Explanation
AMI Immediate maintenance action
AMD Deferred maintenance action
SI No intervention

PMC Prompt Maintenance Action Critical
PMA Prompt Maintenance Action Major
DMA Deferred Maintenance Action Minor
MI Maintenance Information

COND - Condition

cc - Hexadecimal condition code

cc Explanation

03	Subject entity is in service
0B	BOOT on subject entity failed
8B	PMEM not in service or not ready
F1	PMEM and SMEM synchronization fail
F2	Not a DACS II compatible Flash Card
F3	Flash Card is empty
F4	PMEM and SMEM are different
F5	Flash Card is not present
F6	Flash Card is bad

RMV,SYNC

REMOVE SYNCHRONIZER

Explanation Of Command

This command is used to remove the synchronizer from service. This includes the timing extractor circuit, the phase-locked loop, the clock generator circuit, and the service and reply circuit.

If the mate synchronizer is not available for switchover, this message will be denied.

Command

[I.33101]

RMV:FRM xy,SEQ ww:SYNC a!

Completion Message

[O.33101]

M hh:mm:ss xy,ww n[vv] RMV SYNC a COND 00 COMPL

Denial Message

[O.33101.01]

M hh:mm:ss xy,ww n[vv] RMV SYNC a COND cc DNY

Autonomous Message

pa <il> hh:mm:ss xy,ww RMV SYNC a {PMC|PMA|DMA|MI} COND 00 COMPL

Explanation Of Parameters

SYNC - Synchronizer

a - Synchronizer side (0 or 1)

pa - Priority of action field.

pa *Explanation*

I Information

M Manual

***** Minor alarm

****** Major alarm

***C** Critical alarm

il - Intervention level.

il *Explanation*

AMI Immediate maintenance action

AMD Deferred maintenance action

SI No intervention

PMCi Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

COND - Condition

cc - Hexadecimal condition code

cc **Explanation**

02 Subject entity is not equipped

04 Subject entity is out of service

19 Mate CCN side is out of service

1A Mate SYNC is out of service

31 Failed to switch SYNC side

AB Bad sync mode

RMV,SYNC,TLI,CRO

REMOVE SYNCHRONIZER TIME BASE AS A CLOCK
REFERENCE OSCILLATOR

Explanation Of Command

This command requests the removal of the synchronizer time base as a clock reference oscillator.

Command

[I.33111]

RMV:FRM xy,SEQ ww:SYNC,TLI 3,CRO!

Completion Message

[O.33111]

M hh:mm:ss xy,ww n[vv] RMV SYNC TLI 3 CRO COND 00 COMPL

Denial Message

[O.33111.01]

M hh:mm:ss xy,ww n[vv] RMV SYNC TLI 3 CRO COND cc DNY

Autonomous Message

[O.33111]

pa <il> hh:mm:ss xy,ww RMV SYNC a TLI m[CRO] \
{PMC|PMA|DMA|MI} COND 00 COMPL

[O.33111.01]

pa <il> hh:mm:ss xy,ww RMV SYNC a TLI m[CRO] \
{PMC|PMA|DMA|MI} COND cc DNY

Explanation Of Parameters

pa - Priority of Action
*C - Critical
** - Major
* - Minor
A - Autonomous

il - Intervention level.
il Explanation
AMI Immediate maintenance action
AMD Deferred maintenance action
SI No intervention

PMC Prompt Maintenance Action Critical
PMA Prompt Maintenance Action Major
DMA Deferred Maintenance Action Minor
MI Maintenance Information

SYNC - Synchronizer

a - Synchronizer number (0 or 1)

TLI - Timing link interface

m - TLI number (1 through 4)

CRO - Clock Reference Oscillator

COND - Condition

cc - Hexadecimal condition code

cc Explanation

02 Subject entity is not equipped
04 Subject entity is out of service
33 Wrong TLI type
A9 Both syncs are out-of-service

RMV,SYNC,TLI,PMC,PMA,DMA,MI,COND

REMOVE SYNCHRONIZER'S TLI

Explanation Of Command

This message prints when a synchronizer's timing link interface(TLI) extractor is autonomously removed from service. The message 33121 prints to identify the SSPs being removed from service.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.33131]

```
pa <il> hh:mm:ss xy,ww  RMV SYNC a TLI m \  
{PMC|PMA|DMA|MI} COND 00 COMPL
```

Explanation Of Parameters

pa - Priority of action field.

pa *Explanation*

I Information

M Manual

***** Minor alarm

****** Major alarm

***C** Critical alarm

il - Intervention level.

il Explanation

AMI Immediate maintenance action

AMD Deferred maintenance action

SI No intervention

PMC - Prompt Maintenance Action Critical

PMA - Prompt Maintenance Action Major

DMA - Deferred Maintenance Action Minor

MI - Maintenance Information

SYNC - Synchronizer

a - SYNC number (0 or 1)

TLI - Timing Link Interface

m - TLI number (1 through 4)

RMV,SYNC,TLI,SSP

REMOVE SYNCHRONIZER'S TLI OR SSP

Explanation Of Command

Input Command:

This command requests the removal from service of a synchronizer's timing link interface(TLI) if the TLI is grown as a distributor or the removal from service of a SSP if the TLI was grown as an extractor. If the timing link interface was configured as a timing extractor, synchronizer sync Port 0 or 1 must also be specified.

Autonomous Removal:

The same autonomous removal message will be used to indicate that either a TLI is being removed or that a SSP is being removed. If a SSP is identified in the output, the message is indicating that a SSP is being removed and the alarm level used will be that assigned to TREF in Alarm Severity. If the SSP is not identified in the output, the message is indicating that the TLI is being removed and the alarm level used will be that assigned to TLI in Alarm Severity.

Command

[I.33121]

RMV:FRM xy,SEQ ww:SYNC a,TLI m[,SSP b]!

Completion Message

[O.33121]

**M hh:mm:ss xy,ww n[vv] RMV SYNC a TLI m[SSP b] COND cc **
COMPL

Denial Message

[O.33121.01]

M hh:mm:ss xy,ww n[vv] RMV SYNC a TLI m[SSP b] COND cc DNY

Autonomous Message

[O.33121]

pa <il> hh:mm:ss xy,ww RMV SYNC a TLI m[SSP b[c]] \
{PMC|PMA|DMA|MI} COND 00 COMPL

Explanation Of Parameters

pa - Priority of action field.

pa	<i>Explanation</i>

I	Information

M	Manual

*	Minor alarm

**	Major alarm

*C	Critical alarm

il - Intervention level.

il	<i>Explanation</i>

AMI	Immediate maintenance action

AMD	Deferred maintenance action

SI	No intervention

PMC Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

SYNC - Synchronizer

a - SYNC number (0 or 1)

TLI - Timing Link Interface

m - TLI number (1 through 4)

SSP - Synchronizer Sync Port

b, c - SSP number of TLI-m (0 or 1)

Only a single SSP, "b", can be specified in the input command. Two SSPs, "b" and "c", can appear in an autonomous removal message.

cc - Hexadecimal condition code

cc Explanation

02	Subject entity is not equipped
04	Subject entity is out of service
16	SYNC TB is not equipped
17	SYNC is out of service
33	Wrong TLI type
BE	Hardware mismatch or not present
C8	Sync pack denied command

RMV,TSI

REMOVE TIME SLOT INTERCHANGE

Explanation Of Command

This command applies only to a noncapacity expansion frame (NCEF).

It requests the removal of the time slot interchange (TSI) from service.

If the TSI on the other side has already been removed this command will be denied unless there are no provisioned circuits for this TSI.

Command

[I.33221]

RMV:FRM xy,SEQ ww:TSI sft!

Completion Message

[O.33221]

M hh:mm:ss xy,ww n[vv] RMV TSI sft COND cc COMPL

Denial Message

[O.33221.01]

M hh:mm:ss xy,ww n[vv] RMV TSI sft COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

pa - Priority of action field.

pa *Explanation*

I Information

***** Minor alarm

****** Major alarm

***C** Critical alarm

il - Intervention level.

il *Explanation*

AMI Immediate maintenance action

AMD Deferred maintenance action

SI No intervention

PMC Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

TSI - Time slot interchange

s - Side number (0 or 1)

f - Cross-connect buffer (CCB) number (1 through 6)

t - TSI number (1 through 6)

COND - Condition

cc - Hexadecimal condition code

cc **Explanation**

02 **Subject entity is not equipped**

04 **Subject entity is out of service**

19 **Mate CCN side is out of service**

RMV,TSIS,CCN,ALL

REMOVE

Explanation Of Command

This command is applicable only to a noncapacity expansion frame (NCEF).

It requests the removal of all in-service time slot interchanges in the cross-connect network side.

This message will be denied if the cross-connect network side specified is the active side and any time slot interchange on the inactive side is out of service. The exception to this is if there are no cross-connected circuits in the system.

Command

[I.33241]

RMV:FRM xy,SEQ ww:TSIS,CCN s,ALL!

Completion Message

[O.33241]

M hh:mm:ss xy,ww n[vv] RMV TSIS ALL 5 LN MSG:
TOTAL TSIS tt
sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn
sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn
sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn
EOP

M hh:mm:ss xy,ww n[vv] RMV TSIS ALL 5 LN MSG:
TOTAL TSIS tt
sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn
sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn
sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn
COND cc COMPL

Denial Message

[O.33241.01]

M hh:mm:ss xy,ww n[vv] RMV TSIS CCN s ALL COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TSIS - Time slot interchanges

CCN - Cross-connect network

s - CCN side (0 or 1)

ALL - All

TOTAL - Total

f - Cross-connect buffer number (1 through 6)

t - TSI number (1 through 6)

tt - Number of TSIs currently in service (01 through 72)

r - Status of the removal request for the particular TSI

r *Explanation*

C COMPL

D DNY

nn - Hexadecimal condition code for the particular TSI

See cc below to interpret values of nn.

COND - Condition

cc - Completion condition code

See cc below to interpret values of cc.

cc - Hexadecimal condition code

cc *Explanation*

00 No conditions

02 Subject entity is not equipped

04 Subject entity is out of service

18 CCNI is out of service

19 Mate CCN side is out of service

RMV,TSIS,CCN,UNIT,CONN

REMOVE

Explanation Of Command

This command is applicable only to a noncapacity expansion frame (NCEF).

This message allows removal of all time slot interchanges (TSI) that connect the specified unit to the indicated units, one of which may be the specified unit in cross-connect network side 0 or 1 through use of the optional field. If the field is omitted, then all TSIs connected to the specified unit are removed.

Note that if the TSI on the other CCN side has already been removed, this command will be executed only if no circuits are cross-connected through the TSI. The reason for allowing removal on both sides is to degrow the UNIT or change its connectivity.

Command

[I.33231]

```
RMV:FRM xy,SEQ ww:TSIS,CCN s,UNIT q\  
[,CONN(a[,b[,c[,d[,e[,f]]]]))]]!
```

Completion Message

[O.33231]

```
M hh:mm:ss xy,ww n[vv] RMV TSIS UNIT q\  
[ CONN (a[ b[ c[ d[ e[ f]]]]))]  
e LN MSG:  
sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn  
sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn \  
COND 00 COMPL
```

Denial Message

[O.33231.01]

M hh:mm:ss xy,ww n[vv] **RMV TSIS CCN s UNIT q**
[CONN (a[b[c[d[e[f]]]]]]] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

e - Number of lines in the message segment

TSIS - Time slot interchanges

CCN - Cross-connect network

s - Side number (0 or 1).

UNIT - Unit

q - Unit number containing TSIs (1 through 6).

CONN - Connect

a, b, c, d, e, f
- Unit number to which UNIT q can be connected (1 through 6).

sft - TSI identifier

s - Side number (0 or 1)

f - CCB (Cross-Connect Buffer) number (1 through 6)

t - TSI number (1 through 6).

r - Status code

r *Explanation*

C COMPL

D DNY

nn - Hexadecimal condition code for the particular TSI.

For r = C

<i>nn</i>	<i>Explanation</i>
00	No Condition

For r = D

<i>nn</i>	<i>Explanation</i>
02	Subject entity is not equipped
04	Subject entity is out of service

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

04	Subject entity is out of service
10	Unit is not equipped
18	CCNI is out of service
19	Mate CCN side is out of service
28	Connectivity contains unequipped units

RMV,UNIT,FC

REMOVE UNIT FORMAT CONVERTER

Explanation Of Command

This message requests removal of the unit format converter from service.

Command

[I.33331]

RMV:FRM xy,SEQ ww:UNIT [q]q,FC sb!

Completion Message

[O.33331]

M hh:mm:ss xy,ww n[vv] RMV UNIT [q]q FC sb COND cc COMPL

Denial Message

[O.33331.01]

M hh:mm:ss xy,ww n[vv] RMV UNIT [q]q FC sb COND cc DNY

Autonomous Message

[O.33331]

pa <il> hh:mm:ss xy,ww n[vv] RMV UNIT [q]q FC sb {PMC|PMA|DMA|MI} \
COND cc COMPL

[O.33331.01]

pa <il> hh:mm:ss xy,ww n[vv] RMV UNIT [q]q FC sb {PMC|PMA|DMA|MI} \
COND cc DNY

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FC - Format converter

s - Side number (0 or 1)

b - FC number (1 through 4)

pa - *Priority of action*

pa	Explanation

**	Major

*C	Critical

*	Minor

I	Information

il - Intervention level.

il	Explanation

AMI	Immediate maintenance action

AMD	Deferred maintenance action

SI	No intervention

PMC Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

COND - Condition

cc - Completion condition code

Explanations of these codes are given in the explanation of cc below.

cc - Hexadecimal condition code

cc Explanation

04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
19	Mate CCN side is out of service
1F	FTMI is in service but failed

RMV,UNIT,FLI

REMOVE FACILITY LINE INTERFACE

Explanation Of Command

This command requests and reports the removal of one facility line interface (FLI) in a DS3 unit (DS3U) or a Hybrid DS3 Unit (HDS3U). The removal can be caused by either a manual request or autonomously by error recovery.

A request for removal of a FLI will cause a protection switch. A request to remove an unprotected FLI will be denied unless no service multiplexer (MXR) or hybrid multiplexer (HMXR) or protection MIU is equipped and the protection MMFG is out-of-service in that DS3U or HDS3U.

This message also reports an unsuccessful automatic attempt to remove an unprotected FLI, which will cause a critical alarm.

Command

[I.33401]

RMV:FRM xy,SEQ ww:UNIT [q]q,FLI k!

Completion Message

[O.33401]

M hh:mm:ss xy,ww n[vv] RMV UNIT [q]q FLI k COMPL

Denial Message

[O.33401.01]

M hh:mm:ss xy,ww n[vv] RMV UNIT [q]q FLI k COND cc DNY

Autonomous Message

[O.33401]

****hh:mm:ss xy,ww RMV UNIT [q]q FLI k COMPL**

[O.33401.01]

***Chh:mm:ss xy,ww RMV UNIT [q]q FLI k COND cc DNY**

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FLI - Facility line interface

k - FLI identifier

k Explanation

S Service FLI

P Protection FLI

COND - Condition

cc - Hexadecimal condition code

cc Explanation

02 Subject entity is not equipped

04 Subject entity is out of service

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

37 Major/Minor BER threshold value is invalid
for SLC NPCs

35 The mate FLI is OOS and Protection MIU is
equipped

36 The mate FLI is OOS and Protection MXR is IS

37 The mate FLI is OOS and at least one Service
MXR is equipped

38 The selected FLI is IS and Pested and at
least 1 Service MXR is eqd

39 An autonomous switch is in progress

B0 FLI is out of service

RMV,UNIT,FMT

REMOVE FORMATTER

Explanation Of Command

This command requests and reports the removal of one formatter (FMT) or Hybrid Formatter (HFMT) in a DS3 unit or Hybrid DS3 unit (HDS3U). The removal can be either manually by a command or autonomously by error recovery.

A successful request to remove an FMT or HFMT will automatically cause a switch to the other cross-connect side. A request for removal of an FMT or HFMT will be denied if the switch to the other cross-connect side is not possible. The output of this command also reports an unsuccessful automatic attempt to remove an unprotected FMT or HFMT. The removal of both FMTs/HFMTs will automatically come into effect when the unit is degrown.

Command

[I.33411]

RMV:FRM xy,SEQ ww:UNIT [q]q,FMT s!

Completion Message

[O.33411]

M hh:mm:ss xy,ww n[vv] RMV UNIT [q]q FMT s COMPL

Denial Message

[O.33411.01]

M hh:mm:ss xy,ww n[vv] RMV UNIT [q]q FMT s COND cc DNY

Autonomous Message

[O.33411]

pahh:mm:ss xy,ww RMV UNIT [q]q FMT s COMPL

[O.33411.01]

pahh:mm:ss xy,ww RMV UNIT [q]q FMT s COND cc DNY

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FMT - Formatter or Hybrid Formatter

s - Side

<i>s</i>	<i>Explanation</i>

0	Side 0

1	Side 1

pa - Priority of action

<i>pa</i>	<i>Priority</i>

*C	Critical

**	Major

M	Manual

OOS - Out-of-service

cc - Hexadecimal condition code

cc	Explanation

02	Subject entity is not equipped

04	Subject entity is out of service

10	Unit is not equipped

11	UC is out of service

12	UC is in service but failed

19	Mate CCN side is out of service

B1	FMT is out of service

RMV,UNIT,FTMI,DSPI

REMOVE FTMI OR DSPI

Explanation Of Command

This message allows removal of a facility terminating module interface or a digital signal processor interface from service.

Command

[I.33321]

RMV:FRM xy,SEQ ww:UNIT [q]q,{FTMI d|DSPI}!

Completion Message

[O.33321]

M hh:mm:ss xy,ww n[vv] RMV UNIT [q]q {FTMI d|DSPI} \
COND cc COMPL

Denial Message

[O.33321.01]

M hh:mm:ss xy,ww n[vv] RMV UNIT [q]q {FTMI d|DSPI} COND cc \
DNY

Autonomous Message

[O.33321]

pa <il> hh:mm:ss xy,ww n[vv] RMV UNIT [q]q {FTMI d|DSPI} \
COND cc COMPL

[O.33321.01]

pa <il> hh:mm:ss xy,ww n[vv] RMV UNIT [q]q {FTMI d|DSPI} \
COND cc DNY

Explanation Of Parameters

pa - Priority of action field.

pa *Explanation*

I Information

***** Minor alarm

****** Major alarm

***C** Critical alarm

il - Intervention level.

il *Explanation*

AMI Immediate maintenance action

AMD Deferred maintenance action

SI No intervention

PMC Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

UNIT - Unit

[q]q - Unit number (1 through 16)

FTMI - Facility terminating module interface

d - FTMI number (1 through 4)

DSPI - Digital signal processor interface

OOS - Out-of-service

cc - Completion condition code (hexadecimal)

cc - Hexadecimal condition code

cc Explanation

02	Subject entity is not equipped
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed

RMV,UNIT,MIU,INCL

REMOVE MULTIPLEXER INTERFACE UNIT

Explanation Of Command

This message removes from service one or more Multiplexer Interface Unit (MIU) circuit packs in a DS3 unit. Using the INCL (inclusive) option, this remove command removes all TA-type NPCs associated with the MIU. Executing this command results in protection switching if any TA-type NPCs are in-service. TA type NPCs provide ESF data link communications according to the ANSI T1.403-1989 standard and enhanced performance monitoring.

Note: This command can not be generated autonomously.

A **RMV IN PROGRESS** message will be generated at 20-second intervals while this command is being executed.

There will be one completion or denial output message for each circuit pack removed.

Command

[I.33431]

RMV:FRM xy,SEQ ww:UNIT [q]q,MIU c[-d][,INCL]!

Completion Message

[O.33431]

**M hh:mm:ss xy,ww n[vv] RMV UNIT [q]q MIU a[INCL] TYPE MI100 **
COMPL

Denial Message

[O.33431.01]

M hh:mm:ss xy,ww n[vv] **RMV UNIT** [q]q **MIU** a[**INCL**] **COND** cc **DNY**

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MIU - Multiplexer interface unit

c, d - The number of the MIU within the unit (P,1 through 6) (P means the protection MIU)

a - The MIU number within the range of c and d.

INCL - Inclusive

This keyword will cause the removal of all TA type NPCs served by the MIU.

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

24 Unit type error

BF MIU is not equipped

9D Attempt to remove a Service MIU which is under protection

A9 INCL not specified and at least one NPC In Service

CF MIU is out of service

RMV,UNIT,MMFG,FRC,INCL

REMOVE MMFG

Explanation Of Command

This command requests and reports the removal of the circuit packs of one or more Multiplexer - Multiplexer Interface Unit Functional Group (MMFG). The removal of an MMFG can be caused either by manual command or autonomous DACS II error recovery action.

An **RMV MMFG** command will remove the Multiplexer (MXR) or Hybrid Multiplexer (HMXR) and the Multiplexer Interface Unit (MIU) if the MIU is in-service. Note that MIU currently is not supported by HDS3U, therefore, MIU does not exist in an MMFG with the HMXR.

A manual removal request of an MMFG will cause protection switching if protection is available. However, the automatic switch to protection (or the automatic switchback from a protection MMFG) can be inhibited by specifying the FRC option, which can result in loss of service. The FRC option must be used to request the unprotected removal of an MMFG. Any resulting loss of service will not cause an alarm. An attempt to remove more than one MMFG without the FRC option will be denied.

The Inclusive (INCL) keyword must be used if at least one of the DS3's tributary NPCs is in service. This option will remove the NPCs together with the MMFG.

This command also reports the unsuccessful automatic attempt to remove an unprotected MMFG, which will cause a critical alarm. An **RMV IN PROGRESS** message will be generated at 20-second intervals while this command is being executed. There will be one completion or denial output message for each circuit pack removed.

Command

[I.33421]

RMV:FRM xy,SEQ ww:UNIT [q]q,MMFG c[-d][,FRC[,INCL]]!

Completion Message

[O.33421]

M hh:mm:ss xy,ww n[vv] RMV UNIT [q]q MMFG a[FRC[INCL]] \\
2 LN MSG:
MXR a TYPE mnxyz[MIU a TYPE MI100] COMPL

Denial Message

[O.33421.01]

M hh:mm:ss xy,ww n[vv] RMV UNIT [q]q MMFG a[FRC[INCL]] \\
COND cc DNY

Autonomous Message

[O.33421]

**hh:mm:ss xy,ww RMV UNIT [q]q MMFG a[FRC[INCL]] 2 LN MSG:
MXR a TYPE mnxyz[MIU a TYPE MI100] COMPL

[O.33421.01]

*Chh:mm:ss xy,ww RMV UNIT [q]q MMFG a[FRC[INCL]] COND cc \\
DNY

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MMFG - Multiplexer-Multiplexer Interface Unit functional group.

c, d - The number of the MMFG within the unit (P,1 through 6) (P means the protection MMFG)

a - The number of the MMFG that is removed or denied (c or d)

FRC - Force

This keyword will force a manual removal (in the case that protection is not available) and will prevent automatic protection switching from accompanying the removal, thus forcing the removal of all the DS1 facilities served by the MMFG.

INCL - Inclusive

This keyword will cause all tributary NPCs which are still in service to be removed. A command with the INCL keyword must also contain the FRC keyword or it will be denied by DACS II.

***C** - Critical priority of action

****** - Major priority of action

M - Manual priority of action

MXR - Multiplexer (MXR) or Hybrid Multiplexer (HMXR)

a - MXR or HMXR identifier (P, 1 through 6)

TYPE - Type

mnxyz - The DS3 format processed by the MXR:

mn - DS3 type

mn *Explanation*

MX The original R4.0 DS3 facility type supported by the Multiplexer (MXR) circuit pack (KCR-1).

EX The enhanced R6.0 DS3 facility type supported by the Enhanced Multiplexer (EMXR) circuit pack (KCR-5).

HX The hybrid facility type supported by the Hybrid Multiplexer (HMXR) circuit pack (KCR-8).

If the unit is a regular DS3U of unit type DT100, then the default is the MX type for backward compatibility.

If the unit is a Hybrid DS3U of unit type HT100, then the default is HX.

MX/EX/HX-type xyz fields

x - DS3 framing format

x *Explanation*

1 M13 format (default)

2 C-bit parity format, not supported by HMXR

y - not assigned (the only valid value is 0)

z - not assigned (the only valid value is 0)

MIU - Multiplexer interface unit

a - MIU identifier (P, 1 through 6)

cc - Hexadecimal condition code

cc Explanation

10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
24	Unit type error
9B	The MXR is not grown
A8	The MMFG is Out Of Service
A9	INCL not specified and at least one NPC In Service
AA	Range entered without FRC keyword
AB	FRC specified for protection, and service MMFG is In Service
AC	No protection is available for the Service MMFG
AD	The Protection MMFG is selected, and auto. switchback is unavailable
B7	The associated MXR is In-Service but pested

RMV,UNIT,UC

REMOVE UNIT CONTROLLER

Explanation Of Command

This message requests removal of the specified unit controller from service. Only the unit controller for the IFTU and DSPU will have a changeable alarm severity and intervention level.

Command

[I.33311]

RMV:FRM xy,SEQ ww:UNIT [q]q,UC!

Completion Message

[O.33311]

M hh:mm:ss xy,wz n RMV UNIT [q]q UC COND cc COMPL

Denial Message

[O.33311.01]

M hh:mm:ss xy,ww n[vv] RMV UNIT [q]q UC COND cc DNY

Autonomous Message

[O.33311]

pa <il> hh:mm:ss xy,wz n RMV UNIT [q]q UC {PMC|PMA|DMA|MI} \
COND cc COMPL

[O.33311.01]

pa <il> hh:mm:ss xy,ww n[vv] RMV UNIT [q]q UC {PMC|PMA|DMA|MI} \
COND cc DNY

Explanation Of Parameters

pa - Priority of action field.

pa *Explanation*

I Information

M Manual

***** Minor alarm

****** Major alarm

***C** Critical alarm

il - Intervention level.

il *Explanation*

AMI Immediate maintenance action

AMD Deferred maintenance action

SI No intervention

PMC Prompt Maintenance Action Critical

PMA Prompt Maintenance Action Major

DMA Deferred Maintenance Action Minor

MI Maintenance Information

UC - Unit controller

UNIT - Unit

[q]q - Unit number (1 through 16)

COND - Condition

cc - Completion condition code

cc - Hexadecimal condition code

cc **Explanation**

02 Subject entity is not equipped

04 Subject entity is out of service

RPT,T,NPC,LOCN,AI,COUNT,THLEV,ALM

REPORT NPC THRESHOLD CROSSING ALARM FOR PA, TA, DA, AND TH TYPE NPCS

Explanation Of Command

This autonomous output message reports a facility performance monitoring parameter threshold crossing event for the specified DA, TA or TH type NPC. For DA and TA type NPCs, this is a non-alarmed event. Threshold crossing alert messages can be generated for both 15-minute and daily parameter accumulation intervals.

For DS3Us, if alarm messages for DS1s embedded within a DS3 are turned off in the event the DS3 signal fails, then it is possible for a threshold message for a TA type NPC to be generated in the 10 second alarm integration interval between the beginning of the DS3 signal failure and the generation of the DS3 alarm message, even though DS1 threshold messages are normally suppressed during the time interval that the carrying DS3 signal is in a failed state (LOS, LOF, BER, or AIS).

The command that turns alarm message suppression on or off for DS1s embedded within DS3s is: **CHG : :DS1ALMDS3**.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

For DA and TA type NPCs:

[O.65061]

I hh:mm:ss xy,ww RPT T-<parameter> NPC [s]abc 2 LN MSG:
LOCN locn **AI** aaaaa **COUNT** cccccccc **THLEV** llllllll **COMPL**

For TH type NPCs:

[O.65061]

pa <il> hh:mm:ss xy,ww **ALM** <state> <parameter> NPC [s]abc 2 LN MSG:
AI aaaaa **COUNT** cccccccc **THLEV** llllllll **COMPL**

Hierarchical

For DA and TA type NPCs:

[O.65061]

I hh:mm:ss xy,ww RPT T-<parameter> NPC uvmnp 2 LN MSG:
LOCN locn **AI** aaaaa **COUNT** cccccccc **THLEV** llllllll **COMPL**

For TH type NPCs:

[O.65061]

pa <il> hh:mm:ss xy,ww **ALM** <state> <parameter> NPC uvmnp 2 LN MSG:
AI aaaaa **COUNT** cccccccc **THLEV** llllllll **COMPL**

Explanation Of Parameters

AI - Accumulation Interval

aaaaa - The accumulation time period for the specified parameter

aaaaa Explanation

15MIN Parameter count from a 15-minute accumulator

DAILY Parameter count from a daily accumulator

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

T-parameter

- Threshold crossing parameter

T

- Threshold

parameter

- The type of monitored parameter for which a threshold crossing is reported.

For DA or TA type NPC

<i>parameter</i>	<i>Explanation</i>
CVP	Path Coding Violations
CVL	Line Coding Violations
ESP	Path Errored Seconds
ESL	Line Errored Seconds
SESP	Path Severely Errored Seconds
SESL	Line Severely Errored Seconds
SEFS	Path Severely Errored Framing Seconds
CSSP	Path Controlled Slip Seconds
UASP	Path Unavailable Seconds

LOCN - Location

locn - The location being performance monitored

<i>locn</i>	<i>Explanation</i>
NEND	Near-end
FEND	Far-end

COUNT - Count

cccccccc

- The count accumulated for the monitored parameter
(000000001 through 134217728)

THLEV - Threshold Level

11111111

- The programmed threshold level of the monitored parameter
(000000001 through 134217728)

Values of threshold levels within the ranges above may cause threshold
crossing alert messages

pa - Priority of Action

pa *Explanation*

I Information
***** Minor alarm
****** Major alarm, service affecting
***C** Critical alarm, service affecting

il Intervention level.

il *Explanation*

AMI Immediate maintenance action
AMD Deferred maintenance action
SI No intervention

state - Alarm state

state *Explanation*

MI Maintenance Information
DMA Deferred Maintenance Minor Alarm
PMA Prompt Maintenance Major Alarm
PMC Prompt Maintenance Critical Alarm

For TH type NPCs:

<i>parameter</i>	<i>Explanation</i>
CRC	CRC Block Errors
FRER	Framing Errors
OFS	Out of Frame Seconds
ES	Errored Seconds
SES	Severely Errored Seconds
CSS	Controlled Slip Seconds
UAS	Unavailable Seconds
UATC	Unavailable Time Count
MER	Multiframe Errors

Contents

RST,CCB	19-2
■ Explanation Of Command	19-2
■ Command	19-2
■ Completion Message	19-2
■ Denial Message	19-2
■ Autonomous Message	19-2
■ Explanation Of Parameters	19-3
RST,CCI	19-4
■ Explanation Of Command	19-4
■ Command	19-4
■ Completion Message	19-4
■ Denial Message	19-4
■ Autonomous Message	19-4
■ Explanation Of Parameters	19-5
RST,CCNI	19-6
■ Explanation Of Command	19-6
■ Command	19-6
■ Completion Message	19-6
■ Denial Message	19-6
■ Autonomous Message	19-6
■ Explanation Of Parameters	19-7
RST,ETSI	19-8
■ Explanation Of Command	19-8
■ Command	19-8
■ Completion Message	19-8
■ Denial Message	19-8

Contents

■ Autonomous Message	19-8
■ Explanation Of Parameters	19-9
RST,ETSI,ECN,ALL	19-10
■ Explanation Of Command	19-10
■ Command	19-10
■ Completion Message	19-10
■ Denial Message	19-10
■ Autonomous Message	19-11
■ Explanation Of Parameters	19-11
RST,LINK	19-13
■ Explanation Of Command	19-13
■ Command	19-13
■ Completion Message	19-13
■ Denial Message	19-13
■ Autonomous Message	19-13
■ Explanation Of Parameters	19-14
RST,MC,MCOND,NOJRN,FR,CLR,ALL	19-15
■ Explanation Of Command	19-15
■ Command	19-17
■ Completion Message	19-18
■ Denial Message	19-18
■ Autonomous Message	19-18
■ Explanation Of Parameters	19-19
RST,NPC,SIDE	19-21
■ Explanation Of Command	19-21
■ Command	19-22
■ Nonhierarchical	19-22
■ Hierarchical	19-22
■ Completion Message	19-22
■ Nonhierarchical	19-22
■ Hierarchical	19-22
■ Denial Message	19-22
■ Nonhierarchical	19-22
■ Hierarchical	19-23
■ Autonomous Message	19-23
■ Explanation Of Parameters	19-23
RST,NPC,TS0M	19-48

Contents

■ Explanation Of Command	19-48
■ Command	19-48
■ Nonhierarchical	19-48
■ Hierarchical	19-48
■ Completion Message	19-48
■ Nonhierarchical	19-48
■ Hierarchical	19-49
■ Denial Message	19-49
■ Nonhierarchical	19-49
■ Hierarchical	19-49
■ Autonomous Message	19-49
■ Explanation Of Parameters	19-49
RST,PMEM,SMEM,CLR,FRC,BKGRND	19-53
■ Explanation Of Command	19-53
■ Command	19-53
■ Completion Message	19-54
■ Denial Message	19-54
■ Autonomous Message	19-54
■ Explanation Of Parameters	19-54
RST,RT,DL	19-59
■ Explanation Of Command	19-59
■ Command	19-59
■ Completion Message	19-59
■ Nonhierarchical	19-59
■ Hierarchical	19-60
■ Denial Message	19-60
■ Nonhierarchical	19-60
■ Hierarchical	19-60
■ Common	19-60
■ Autonomous Message	19-60
■ Explanation Of Parameters	19-61
RST,SYNC	19-62
■ Explanation Of Command	19-62
■ Command	19-62
■ Completion Message	19-62
■ Denial Message	19-62
■ Autonomous Message	19-62
■ Explanation Of Parameters	19-63

Contents

RST,SYNC,TLI,CRO	19-64
■ Explanation Of Command	19-64
■ Command	19-64
■ Completion Message	19-64
■ Denial Message	19-64
■ Autonomous Message	19-64
■ Explanation Of Parameters	19-65
RST,SYNC,TLI,SSP	19-66
■ Explanation Of Command	19-66
■ Command	19-66
■ Completion Message	19-66
■ Denial Message	19-66
■ Autonomous Message	19-66
■ Explanation Of Parameters	19-67
RST,TSI	19-68
■ Explanation Of Command	19-68
■ Command	19-68
■ Completion Message	19-68
■ Denial Message	19-68
■ Autonomous Message	19-68
■ Explanation Of Parameters	19-69
RST,TSIS,CCN,ALL	19-70
■ Explanation Of Command	19-70
■ Command	19-70
■ Completion Message	19-70
■ Denial Message	19-71
■ Autonomous Message	19-71
■ Explanation Of Parameters	19-71
RST,TSIS,CCN,UNIT,CONN	19-73
■ Explanation Of Command	19-73
■ Command	19-73
■ Completion Message	19-73
■ Denial Message	19-73
■ Autonomous Message	19-74
■ Explanation Of Parameters	19-74
RST,UNIT,FC	19-76

Contents

■ Explanation Of Command	19-76
■ Command	19-76
■ Completion Message	19-76
■ Denial Message	19-76
■ Autonomous Message	19-76
■ Explanation Of Parameters	19-77
RST,UNIT,FLI	19-78
■ Explanation Of Command	19-78
■ Command	19-78
■ Completion Message	19-78
■ Denial Message	19-78
■ Autonomous Message	19-78
■ Explanation Of Parameters	19-79
RST,UNIT,FMT	19-80
■ Explanation Of Command	19-80
■ Command	19-80
■ Completion Message	19-80
■ Denial Message	19-80
■ Autonomous Message	19-80
■ Explanation Of Parameters	19-81
RST,UNIT,FTML,DSPI	19-82
■ Explanation Of Command	19-82
■ Command	19-82
■ Completion Message	19-82
■ Denial Message	19-82
■ Autonomous Message	19-82
■ Explanation Of Parameters	19-83
RST,UNIT,MIU,INCL	19-84
■ Explanation Of Command	19-84
■ Command	19-84
■ Completion Message	19-84
■ Denial Message	19-85
■ Autonomous Message	19-85
■ Explanation Of Parameters	19-85
RST,UNIT,MMFG,INCL	19-87
■ Explanation Of Command	19-87
■ Command	19-87

Contents

■ Completion Message	19-87
■ Denial Message	19-88
■ Autonomous Message	19-88
■ Explanation Of Parameters	19-88
RST,UNIT,UC	19-91
■ Explanation Of Command	19-91
■ Command	19-91
■ Completion Message	19-91
■ Denial Message	19-91
■ Autonomous Message	19-91
■ Explanation Of Parameters	19-92

RST

RST

This section documents the **RST** command.

RST,CCB

RESTORE CROSS-CONNECT BUFFER

Explanation Of Command

This command applies only to the noncapacity expansion frame (NCEF).
It requests the restoration of the specified cross-connect buffer to service.

Command

[I.34202]

RST:FRM xy,SEQ ww:CCB sf!

Completion Message

[O.34202]

M hh:mm:ss xy,ww n[vv] RST CCB sf COND cc COMPL

Denial Message

[O.34202.01]

M hh:mm:ss xy,ww n[vv] RST CCB sf COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

CCB - Cross-connect buffer

s - Side number (0 or 1)

f - CCB number (1 through 6)

COND - Condition

cc - Completion condition code (hexadecimal)

To interpret values see cc.

cc - Hexadecimal condition code

cc	Explanation

02	Subject entity is not equipped

03	Subject entity is in service

0A	DGN on subject entity failed

0B	BOOT on subject entity failed

16	SYNC TB is not equipped

17	SYNC is out of service

18	CCNI is out of service

1B	CCN side s is in service

CF	SYNC is inservice but failed

D3	CCNI is inservice but failed

RST,CCI

RESTORE CONTROL AND CLOCK INTERFACE

Explanation Of Command

This command applies only to the capacity expansion frame (CEF).

It requests that the clock and control interface pack of side s be restored to service. The two bus terminator packs of side s are also restored along with the CCI pack.

Command

[I.34251]

RST:FRM xy,SEQ ww:CCI s!

Completion Message

[O.34251]

M hh:mm:ss xy,ww n[vv] RST CCI s COND cc COMPL

Denial Message

[O.34251.01]

M hh:mm:ss xy,ww n[vv] RST CCI s COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

CCI - Clock and control interface

s - Side number (0 or 1)

COND - Condition

cc - Completion condition code (hexadecimal)

To interpret values see cc below.

cc - Hexadecimal condition code

cc	Explanation

00	No conditions

03	Subject entity is in service

0A	DGN on subject entity failed

0B	BOOT on subject entity failed

16	SYNC TB is not equipped

17	SYNC is out of service

CF	SYNC is inservice but failed

RST,CCNI

RESTORE CROSS-CONNECT NETWORK INTERFACE

Explanation Of Command

This command is applicable only to the noncapacity expansion frame (NCEF).

It allows restoral of a cross-connect network interface to service.

Command

[I.34201]

RST:FRM xy,SEQ ww:CCNI s!

Completion Message

[O.34201]

M hh:mm:ss xy,ww n[vv] RST CCNI s COND cc COMPL

Denial Message

[O.34201.01]

M hh:mm:ss xy,ww n[vv] RST CCNI s COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

CCNI - Cross-connect network interface.

s - Side No. (0 or 1).

COND - Condition

cc - Completion condition code
To interpret values see cc.

cc - Hexadecimal condition code

cc	Explanation

03	Subject entity is in service
0A	DGN on subject entity failed
0B	BOOT on subject entity failed
16	SYNC TB is not equipped
17	SYNC is out of service
1B	CCN side s is in service
CF	SYNC is inservice but failed

RST,ETSI

RESTORE EXPANDED TIME SLOT INTERCHANGER

Explanation Of Command

This command is applicable only to the capacity expansion frame (CEF).

It requests that an expanded time slot interchanger (ETSI) be restored to service.

Command

[I.34261]

RST:FRM xy,SEQ ww:ETSI sqq!

Completion Message

[O.34261]

M hh:mm:ss xy,ww n[vv] RST ETSI sqq COND 00 COMPL

Denial Message

[O.34261.01]

M hh:mm:ss xy,ww n[vv] RST ETSI sqq COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ETSI - Expanded time slot interchanger

s - Side number (0 or 1)

qq - Unit number (01 through 16)

Note that the unit number qq must always be shown with two digits in both the input and output. The leading 0 is required.

cc - Hexadecimal condition code

cc *Explanation*

02 Subject entity is not equipped

03 Subject entity is in service

0A DGN on subject entity failed

0B BOOT on subject entity failed

16 SYNC TB is not equipped

17 SYNC is out of service

CE CCI is out of service

CF SYNC is inservice but failed

D1 CCI is not present

D4 CCI is inservice but failed

RST,ETISIS,ECCN,ALL

RESTORE ALL ETISIS

Explanation Of Command

This command is applicable only to the capacity expansion frame (CEF).

It requests that all equipped expanded time slot interchangers (ETISIs) in side s of the expanded cross-connect network (ECCN) be restored to service.

Command

[I.34271]

RST:FRM xy,SEQ ww:ETISIS,ECCN s,ALL!

Completion Message

[O.34271]

M hh:mm:ss xy,ww n[vv] RST ETISIS ECCN s ALL 5 LN MSG:

TOTAL ETISIS kk

s01 r nn s02 r nn s03 r nn s04 r nn s05 r nn s06 r nn

s07 r nn s08 r nn s09 r nn s10 r nn s11 r nn s12 r nn

**s13 r nn s14 r nn s15 r nn s16 r nn **

COND cc COMPL

Denial Message

[O.34271.01]

M hh:mm:ss xy,ww n[vv] RST ETISIS ECCN s ALL COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ETSiS - Expanded time slot interchangers

ECCN - Expanded cross-connect network

s - Side number (0 or 1)

kk - Total number of ETSiSs equipped (01 through 16)

r - Restore status

Indication of the completion or denial of the restoration for each individual ETSi pack.

<i>r</i>	<i>Explanation</i>

C	Completed

D	Denied

-	ETSi not equipped

nn - Hexadecimal condition code for the particular ETSi

To interpret values of nn see cc below.

cc - Hexadecimal completion condition code.

To interpret values of cc see cc below.

cc - Hexadecimal condition code

cc *Explanation*

00	No conditions
02	Subject entity is not equipped
03	Subject entity is in service
0A	DGN on subject entity failed
0B	BOOT on subject entity failed
0C	DGN on subject entity denied
16	SYNC TB is not equipped
17	SYNC is out of service
41	Failed to boot subject CCN side
CE	CCI is out of service
CF	SYNC is inservice but failed
D1	CCI is not present
D4	CCI is inservice but failed

RST,LINK

RESTORE ADMINISTRATIVE LINK

Explanation Of Command

This message requests the restoration of the administrative **LINK** to service. The autonomous output message will be generated when the administrative link is successfully restored by the auto-restoration option.

Command

[I.34011]

RST:FRM xy,SEQ ww:LINK j!

Completion Message

[O.34011]

M hh:mm:ss xy,ww n[vv] RST LINK j COND cc COMPL

Denial Message

[O.34011.01]

M hh:mm:ss xy,ww n[vv] RST LINK j COND cc DNY

Autonomous Message

[O.34011]

A hh:mm:ss xy,ww RST LINK j COND cc COMPL

Explanation Of Parameters

LINK - Link

j - Administrative link number (1 through 6)

cc - Hexadecimal condition code

cc Explanation

00 No conditions

03 Subject entity is in service

0A DGN on subject entity failed

RST,MC,MCOND,NOJRNL,FRC,CLR,ALL

RESTORE MAIN CONTROLLER

Explanation Of Command

The RST::MC command provides different functions when different keywords are entered. DACS II responses to each keyword entered are explained below:

1. **RST:FRM xy,SEQ ww:MC,MCOND!**

The MCOND keyword transfers the DACS II Main Controller (MC) from the normal in-service state to the Maintenance Condition (MCOND) state. MCOND is a state of the MC in which it is not fully OOS but is in a restricted mode to allow certain maintenance operations. Network traffic carried by the system will not be affected by MCOND.

2. **RST:FRM xy,SEQ ww:MC!**

This command restores the MC to the normal in-service state from either the OOS or the MCOND state by using the data base on the PMEM. Therefore, if the primary memory data base contains the state existing prior to entering the OOS or MCOND state, the system will return to the original state without affecting service, that is, no network traffic disruption. Normal in-service or original state imply that only states provisioned by the user are recorded in the data base and will be used for restoral; transient states will not be recorded or used for restoral. This command should be used to restore the system for normal operations.

Any test groups and ports established prior to entering the RST::MC command will be autonomously released by this command. Upon completion of the command a test group release message will be issued for the last test group released as a result of the RST::MC. No messages will be issued for any test ports released during command execution.

3. **RST:FRM xy,SEQ ww:MC,NOJRNL!**

The NOJRNL keyword causes the system to be restored without the data base journals on the PMEM. At the completion of this command the system returns to the state of the last data base backup from RAM to PMEM. The effect of the commands entered after the last data base backup is destroyed. Therefore, if cross-connect commands were executed after the last backup, the resulting cross-connections will be disconnected by this command. This command is useful for system restoration after the system fails to boot due to JOURNAL failure.

4. **RST:FRM xy,SEQ ww:MC,FRC!**

The FRC keyword forces the system to be restored when there is an empty data base in the PMEM. At the completion of the command the MC will be in IS state.

- For Installation and Product Evaluation Only. Can be used only if the Lucent Technologies security warning feature bit is set.

RST:FRM xy,SEQ ww:MC,CLR!

The CLR keyword erases Main Processor (MP) and all Unit data bases in the processor memory and on the PMEM before restoring the system. Thus, all transmission equipment is de-grown and all cross-connects are disconnected. This command should be used for installation only and should NOT be used for any other maintenance operations. Note that the Communications Interface (CI) data base is not erased by this command.

- For Installation and Product Evaluation Only. Can be used only if the Lucent Technologies security warning feature bit is set.

RST:FRM xy,SEQ ww:MC,CLR,ALL!

The only difference between using only the CLR keyword and using both the CLR and ALL keywords is that entering ALL will cause the Communications Interface (CI) data base to be erased before restoring the system. Therefore, all information associated with user logins (except the Frame Administrator DAX login) will be deleted from the data base and the provisioning data for the administrative links will return to the default values.

WARNING:

The use of the NOJRNL or FRC keywords can also affect existing services. DACS II treats the following commands as restricted commands (See Message 36103 for RMON privilege):

RST:FRM xy,SEQ ww:MC,NOJRNL!
RST:FRM xy,SEQ ww:MC,FRC!

RST:FRM xy,SEQ ww:MC,CLR!
RST:FRM xy,SEQ ww:MC,CLR,ALL!

That is, these commands are restricted to only the users who have the RMON privilege. In addition, to prevent users from accidentally destroying services, when any of these commands is entered, DACS II will respond with:

ARE YOU SURE?(YES/NO)

When the RST::MC,FRC command is entered, DACS II will respond with:

WARNING:

EXECUTION OF THIS COMMAND WILL RESULT IN LOSS OF SERVICE
AND WILL REQUIRE REPROVISIONING OF THE FRAME.

DO YOU STILL WANT THIS COMMAND EXECUTED?(YES/NO)

Only if the answer is **YES**, will the command be executed. If **NO**, DACS II will display the **COMMAND ABORTED** response.

Command

For Normal Operations:
[I.34001]

RST:FRM xy,SEQ ww:MC[, {MCOND|NOJRNL|FRC}]!

For Installation and Product Evaluation Only:
(Can be used only if the Lucent Technologies security warning feature bit is set)

[I.34001]

RST:FRM xy,SEQ ww:MC,CLR[, ALL]!

Completion Message

For Normal Operations:
[O.34001]

M hh:mm:ss xy,ww n[vv] RST MC[{MCOND|NOJRNL|FRC}] COND cc COMPL

For Installation and Product Evaluation Only:
(Will be available only if the Lucent Technologies security warning feature bit is set)
[O.34001]

M hh:mm:ss xy,ww n[vv] RST MC CLR[ALL] COND cc COMPL

Denial Message

For Normal Operations:
[O.34001.01]

M hh:mm:ss xy,ww n[vv] RST MC[{MCOND|NOJRNL|FRC}] COND cc DNY

For Installation and Product Evaluation Only:
(Will be available only if the Lucent Technologies security warning feature bit is set)
[O.34001.01]

M hh:mm:ss xy,ww n[vv] RST MC CLR[ALL] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

MC - Main controller

MCOND - Maintenance condition

NOJRNL - No Journal
Boot frame without journals.

FRC - Force
Force the frame to boot when there is an empty
data base in the PMEM.

Note that the FRC option is a restricted command.

cc - Hexadecimal condition code

cc Explanation

03	Subject entity is in service
04	Subject entity is out of service
0A	DGN on subject entity failed
0B	BOOT on subject entity failed
46	Failed to boot CONF file
47	Failed to boot DB
48	Failed to boot journal--recurrence indicates database corruption
49	Failed to boot unit
4B	PMEM error, boot from SMEM
18	DSPI not equipped, not in service, or failed
20	Software Identification Block is not readable
21	Software Identification Block failed comparison
22	Release number mismatch
23	Point number mismatch
24	PDI Version number mismatch
52	Database is empty
53	Database is not empty
91	Can't mount or unmount SMEM
92	Can't mount or unmount PMEM
93	SMEM is not present
F9	Cannot clear journals for OOS unit
EE	Can't RST MC CLR when a unit is IN Service
EF	SSC circuit pack is still equipped; pull- out/remove SSC
F1	PMEM and SMEM synchronization fail
F2	Not a DACS II compatible Flash Card
F3	Flash Card is empty

cc Explanation

F4 PMEM and SMEM are different
F5 Flash Card is not present
F6 Flash Card is bad

RST,NPC,SIDE

RESTORE NPCs

Explanation Of Command

This command restores Facility Terminating Unit (FTU/IFTU/IFTU2), DS3 Unit (DS3U), Hybrid DS3 Unit (HDS3U), or Digital Signal Processing Unit (DSPU) Network Processing Circuits (NPC) to service. This command also restores applications on Digital Signal Processing Platform (DSPP) NPCs (TG193) which have been grown in Facility Terminating Units. DSPP NPCs are always odd.

A range of FTU (IFTU or IFTU2), DS3U and HDS3U NPCs may be specified, but DSPU NPCs must be individually restored.

One output message, either completion or denial, is printed for each NPC addressed in the restore command.

DSPU NPCs are duplicated and are associated with the DACS II Cross-Connect Network (CCN) sides. DSPU NPCs are addressed with a side number, and are restored one side at a time. A single DSPU NPC restore command restores only the one addressed side of the duplicated DSPU NPC.

Note: Each DMB circuit pack supports two NPCs. Restoring either side of a DMB NPC restores both NPCs supported by the circuit pack.

Note: Each Subrate circuit pack supports one NPC. Restoring either side of a Subrate NPC restores the NPC supported by the circuit pack.

Note: To restore RT(DL) SLC carrier terminated digroups with the range command, digroup A (DGA) must have been restored previously or must be one of the NPCs specified in the command.

Execution of this command may be stopped by entering the **ABT** command.

Command

Nonhierarchical

[I.34351]

RST:[FRM xy,SEQ ww]:NPC [s]abc[-[t]def][,SIDE s]!

Hierarchical

[I.34351]

RST:[FRM xy,SEQ ww]:NPC uvmp[-uvkqr][,SIDE s]!

Completion Message

Nonhierarchical

[O.34351]

M hh:mm:ss xy,ww n[vv] RST NPC [s]ghi[SIDE s] TYPE mnxyz COND 00 \
COMPL

Hierarchical

[O.34351]

M hh:mm:ss xy,ww n[vv] RST NPC uvghi[SIDE s] TYPE mnxyz COND 00 \
COMPL

Denial Message

Nonhierarchical

[O.34351.01]

M hh:mm:ss xy,ww n[vv] RST NPC [s]jkl[-[t]mno][SIDE s] TYPE mnxyz \
COND cc DNY

Hierarchical

[O.34351.01]

M hh:mm:ss xy,ww n[vv] RST NPC uvjkl[-uvmno][SIDE s] TYPE mnxyz \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number (beginning of the range).

[t]def - The 3- or 4-digit nonhierarchical NPC number (end of the range).

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Hierarchical NPC number (beginning of the range).

uvkqr - Hierarchical NPC number (end of the range).

uv - Unit number

m - Module number

np, qr - NPC number within the module

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

MB, SR, and MJ type numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

SIDE - Side

s - Side of duplicated DSPU circuit to be removed (0 or 1)

[s]ghi - The 3- or 4-digit nonhierarchical number of a successfully restored NPC.
(**[s]abc** through **[t]def**)

[s]jkl - The 3- or 4-digit nonhierarchical number of an NPC whose restoral is denied.
If used in a range, it denotes the first NPC of the range.
(**[s]abc** through **[t]def**)

[t]mno - The 3- or 4-digit nonhierarchical number of an NPC whose restoral is denied.
It denotes the last NPC of a range. (**[s]abc** through **[t]def**)

uvghi - Hierarchical number of a successfully restored NPC.
(**uvmnp** through **uvkqr**)

uvjkl - Hierarchical number of an NPC whose restoral is denied.
If used in a range, it denotes the first NPC of the range.
(**uvmnp** through **uvkqr**)

uvmno - Hierarchical number of an NPC whose restoral is denied.
It denotes the last NPC of a range. (**uvmnp** through **uvkqr**)

uv - Unit number
m, g, k, j - Module number
np, qr, hi, kl, no - NPC number within the module

TYPE - Type of NPC

mnxyz - NPC-type identifier

<i>mn</i>	<i>Explanation</i>
DA	Dual digroup ANSI NPC
DE	Dual digroup NPC
DS	SLC® carrier NPC
TA	DS3U ANSI NPC
TE	DS3U or HDS3U Noninterface unit NPC
TH	Hybrid DS3U CEPT NPC
MB	Digital multipoint bridge NPC
MJ	Multipoint junction unit NPC
SR	Subrate multiplexer unit NPC
SD	Digital Signal Processing Application Circuit Pack

DE-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4, y=5, and y=6, DMI signalling.

y - Line and signaling format

y *Explanation*

- 0** ZCS - Zero code suppression
- 1*** NZCS - No zero code suppression
- 2*** B8ZS - Bipolar with 8 zero substitution
- 3†** ZBTSI - Zero-bit time-slot interchanger
- 4** ZCS/DMI - Zero code suppression/DMI signaling
- 5** NZCS/DMI - No zero code suppression/DMI signaling
- 6** B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
- 7-9** Not assigned

* Only options 1 and 2 are applicable to DE-type clear-DS1 NPC.

† Only valid with ESF (x = 2 or 3)

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** No channel numbering format, clear-DS1

DS-type xyz fields

x - Multiframe format

x *Explanation*

- 0** Not assigned
- 1** D4
- 2** ESF - Voice
- 3** Not assigned
- 4** Not assigned
- 5** Not assigned
- 6** SLC® 96 carrier Fs
- 7** SLC 5 carrier ESF with data link
- 8-9** Not assigned

y - Line and signaling format

y *Explanation*

- 0** Zero code suppression (ZCS)
- 1** No zero code suppression (NZCS)
- 2** Bipolar with 8 zero substitution (B8ZS)
- 3-9** Not assigned

z - Counting sequence format

z *Explanation*

- 0** SLC 96 carrier Mode III D4 counting sequence
- 1** SLC 96 carrier Mode III D1D counting sequence
- 2** SLC 96 carrier Mode I D1D counting sequence
- 3** SLC Series 5 carrier D4 counting sequence
- 4-9** Not assigned

DA-type xyz fields

x - Multiframe format for the digroup

x *Explanation*

- 0** Not assigned
- 1** D4
- 2** ESF - Voice
- 3** ESF - Data
- 4** DDST (T1DM - R bit connection via channel 24)
- 5-7** Not assigned
- 8** Ericsson Cellular format
- 9** Not assigned

y - Line and signaling format

y *Explanation*

- 0** ZCS - Zero code suppression
- 1*** NZCS - No zero code suppression
- 2*** B8ZS - Bipolar with 8 zero substitution
- 3** Not assigned
- 4** ZCS/DMI - Zero code suppression/DMI signaling
- 5** NZCS/DMI - No zero code suppression/DMI signaling
- 6** B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
- 7-9** Not assigned

* Only options 1 and 2 are applicable to DA-type clear-DS1 NPC.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** Unchannelized Framed Clear DS1 Cross-connection

DA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a DA NPC with both a valid framing format (D4, ESF, T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the DA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II FTU, the NPC must be provisioned as NPC type **DE9y9**.

Zero Byte Time Slot Interchange (ZBTSI) encoding is not supported by the DA NPC type. If ZBTSI is desired on an NPC in a DACS II FTU, the NPC must be provisioned as a DE NPC type with its **y** option selecting ZBTSI (**DEx3z**).

SD-type xyz fields (Digital Signal Processing Platform (DSPP) Applications)

- SD111** X.50/X.57 International subrate application
- SD311** Digital Multipoint Bridge application
- SD411** North American DDS Subrate and MJU application
- SDxyz** Possible future applications with specific values for xyz

TE-type xyz fields**x** - Multiframe format**x** *Explanation***0** Not assigned**1** D4**2** ESF - Voice**3** ESF - Data**4** DDST (T1DM - R bit connection via channel 24)**5-7** Not assigned**8*** Ericsson Cellular format**9** No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4 and y=5, DMI signalling.

y - Line and signaling format**y** *Explanation***0** ZCS - Zero code suppression**1*** NZCS - No zero code suppression**2** Not assigned**3** Not assigned**4** ZCS/DMI - Zero code suppression/DMI signaling**5** NZCS/DMI - No zero code suppression/DMI signaling**6-9** Not assigned

* Only option 1 is applicable to TE-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).**z** - Channel numbering format**z** *Explanation***0** D4 channel bank channel numbering**1** D2 channel bank channel numbering**2** D1D channel bank channel numbering**3-8** Not assigned**9** No channel numbering format, clear-DS1

TA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the TA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II DS3U, the NPC must be provisioned

as NPC type TE919.

MB-type xyz fields

x - Fixed at 1
y - Fixed at 0
z - Fixed at 0

SR- and MJ-type xyz fields

x - Fixed at 1
y - Fixed at 0
z - Fixed at 0

TH-Type xyz field

The provisioning values of *x*, *y*, and *z* for the **TH** type are shown in the following tables (a 'Y' in a column of the Table indicates that the feature at the top of the column is enabled by the corresponding (*x*, *y* or *z*) provisioning value):

Table 19-1. Provisioning values for *x*

x value	CRC-4 Mode	Automatic CRC-4
0	Y	
8		Y
B		

Table Notes:

1. The "Automatic CRC-4" is also known as CRC-4 Interworking.
2. If the CRC-4 mode is enabled (*x* value 0) the NPC will compute checksums over the transmitted data and transmit the checksum as part of the CRC-4 multiframe pattern in TS0. The NPC will also monitor the incoming CRC-4 multiframe and verify the CRC-4 checksum. If the CRC-4 multiframe cannot be found using the CRC-4 reframe algorithm, then the NPC will declare an alarm.

If the automatic CRC-4 option is selected (x value 8), the NPC will perform all the functions of the CRC-4 mode. However, if the CRC-4 multiframe is lost, the NPC will not declare an alarm or apply consequent actions.

3. x value B does not enable any of the features shown in the Table; this is a valid option.
4. Only x values 0, 8, and B are valid x values, all other x values will be denied.

Table 19-2. Provisioning values for y

y value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

Table Notes:

1. y values 1, 3, 5, 7, A-B and E-F are unassigned (that is, invalid).
2. For y values 0, 2, 4 and 6 Channel Associated Signaling (CAS) is enabled. In this mode the Telephone Channel Numbering system is always used.

If the "Convert TS16" option is selected (y values 0 and 2), the *abcd* bits of TS16 will be converted to '1111' if they are received as '0000'. This is to prevent false framing in the TS16 multiframe. If this option is not selected (y values 4 and 6), a value of '0000' in the *abcd* bits will be transmitted transparently.

If the "AIS in TS16" option is selected (y value 0 and 4), AIS will always be applied to received TS16 signaling channels on detection of RAI (Remote Alarm Indication, Bit 3 of TS0 NFW), RAIS (Remote AIS Indication, Bit 4 of TS0 NFW, if provisioned) or R16 (Remote Alarm Indication received in TS16). If this option is not selected (y values 2 and 6), AIS will not be applied on detection of RAI, RAIS, or R16.

3. For y values 8 and 9 the NPC will be Non Signaling Associated (NSA). In this mode, Telephone Channel Numbering (y=8) or Timeslot Channel Numbering (y=9) may be selected.
4. The NPC can be set up as a framed clear 2 Mbit/s interface (y=C) or as an unframed clear 2 Mbit/s interface (y=D). When provisioned as a clear 2 Mbit/s interface, an NPC does not modify the cross-connected data in any way. This means that the

following functions are not performed in the clear 2 Mbit/s mode:

- Outgoing CRC-4 checksum generation (applies to framed clear 2 Mbit/s interfaces with CRC-4 option enabled).
- Remote alarm indications (line format errors are reported locally, but no alarm indicators are sent in TS0 to the remote end).

Table 19-3. Provisioning values for *z*

<i>z</i> value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	166ms	500ms	RAIS	RBER	166ms	500ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
A	Y		Y							Y
B		Y	Y							Y

Table Notes:

1. *z* values 8, 9, C, D, E and F are unassigned (that is, invalid).
2. For *z* values 1, 3, 5, 7 and B the consequent action timing is under firmware (FW) control. For *z* values 0, 2, 4, 6 and A the consequent action timing is under hardware (HW) control.

The G.732 consequent action of inserting the AIS in data channels is applied within 2 ms whether the timing is under HW control or FW control, but when under FW control, the AIS in data channels is overridden by the Insertion Word sourced from the Alternate Message Store (AMS) after detection of the local alarm:

in **500 ms**
if *z* = 1, 3 or 5
in **2496 ms**
if *z* = 7 or B

The Insertion Word pattern can be specified in the cross-connect command; on 2Mbit/s NPCs in a *gateway* **cross-connection** the Insertion Word always defaults to AIS.

The selection of HW or FW control is also used to provision the consequent actions on signaling bits. On detection of loss of frame (LOF) or multiframe alignment (LMA, Loss of Multiframe Alarm) error, the hardware immediately applies a signaling freeze by using the last good frame's signaling information. The signaling freeze remains in effect until two multiframes without errors are received. When HW control is used, the AIS in signaling bits is applied within 2 ms, overriding the signaling freeze. When FW control is used, the trunk conditioning pattern from the AMS overrides the signaling freeze once the 2Mbit/s NPC goes into the alarm state.

3. The Consequent Action timing also selects the time after which the **local** alarms are declared and cleared:^{*}
 - HW Control: **Both** remote and local alarms are declared and cleared in 166 ms.
 - FW Control: Only remote alarms are declared and cleared in 166 ms. The **local** alarms are declared and cleared in 500 ms, **except when z = 7 or B**.
4. On the transmitting NPC, bit 3 in the NFW, the remote alarm indication (RAI), will be processed as specified in ITU-T Recommendation G.704 Section 2.3.2 (**that is, within 2 ms after detecting the failure**) when z = 0, 1, 4, 5, 6, 7, A or B. **However**, for z value 2 the set time is 166 ms and for z value 3 the set time is 500 ms. NFW bit 3 is always set to 0 for non-alarm condition and is set to 1 for alarm conditions.
5. On the transmitting NPC, if bit 4 of the NFW is used as RAIS (Remote AIS) indicator, NFW bit 4 will be set in 166 ms (for z = 4) or 500 ms (for z = 5) after AIS is detected in the received signal. The default idle state for Bit 4 is a '1'. The idle state can be changed to a '0' with the CHG::NPC,TS0 command. The bit is put into the active state by inverting the value of the idle state. Similarly, if NFW bit 4 is in the active state in the received signal, consequent actions are taken 166 ms after detecting this condition.
6. z values 6-7 and A-B enable the Minor Bit Error Rate and Signaling Freeze Delay Time Features.

Common Options (z = 6-7 or A-B)

- [i] Enable BER calculations, and when in the BER state:

DACS takes the alarm state consequent actions: sending a message, and activating appropriate alarm relays and summary LEDs.

When out of the BER state, DACS II retires the alarm state consequent actions: sends a retirement message, and deactivates appropriate alarm relays and summary LEDs.

- [ii] RAI set in 2 ms

^{*} Local alarms are those generated for the events: PWR, PBF, BER, AIS, LMA, and A16. Remote alarms are those generated for the events: RAI, RAIS, RBER, and R16.

[iii] Signaling Freeze Delay Timing, Consequent Action Clear Timing:

z=6 or A hardware timing

z=7 or B firmware timing (SFDT=2496 ms, CACT=624 ms)

[iv] BER alarm level = DMA

Specific Options for z= 6 or 7

[v] RBER alarm level = MI

[vi] NFW bit 4=RBER:

- DACS II sends a remote indicator in bit 4 (RBER) of the time slot 0 Non Frame Word (NFW) upstream to the far end 166 ms after detecting the Minor Bit Error Rate (BER) condition.

DACS II sets the RBER bit to its idle state, on clearing of the BER condition.

- DACS II detects the remote setting of the received bit 4 as an RBER condition and generates an appropriate message. Consequent actions are taken 166 ms after detecting this condition.

DACS II generates an appropriate retirement message when the received bit 4 returns to the idle state.

Specific Options for z= A or B

[vii] RBER unalarmed

[viii] NFW bit 4=disabled

NFW bit 4 is NOT used as RBER, although the local Minor Bit Error Rate (BER) condition is detected and cleared with the alarm state consequent actions.

Additionally:

- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.

The following tables provide a summary of invalid combinations of xyz for the TH type NPC.

Table 19-4. Combinations of x and y Values

Invalid xyz Combinations	Explanation
8Cz	Framed clear 2 Mbit/s (y value C) is valid for all valid x options except the one invoking automatic CRC-4 interworking. The interworking algorithm requires setting of outgoing E-bits, which is not permitted for a clear signal.
0Dz 8Dz	Unframed clear 2 Mbit/s (y value D) is only valid for x value B. This is the only x option which does not require decoding of TS0 content.

Table 19-5. Combinations of y and z Values

Invalid xyz Combinations	Explanation
xC1 xC3 xC5 xC7 xCB xD1 xD3 xD5 xD7 xDB	Clear 2 Mbit/s (y value C or D) cannot be used with Firmware controlled Consequent Action (z values 1, 3, 5, 7 or B).
xD4 xD6	Unframed clear 2 Mbit/s (y value D) cannot be used with z value 4 (NFW Bit 4 used for RAIS) or with z value 6 (NFW Bit 4 used for RBER) because unframed clear signals cannot obtain TS0 framing.

Table Notes:

1. If framed clear 2 Mbit/s (y value C) is selected with z value 4 (NFW Bit 4 used for RAIS) only the receive side of this function will be enabled. Outgoing RAIS indicators cannot be transmitted during clear signal operation.

2. If framed clear 2Mbit/s (y value C) is selected with z= value 6 (NFW Bit 4 used for RBER) only the receive side of this function will be enabled. Outgoing RBER indicators cannot be transmitted during clear signal operation.

There are no combinations between valid x and z values that are invalid.

cc - Hexadecimal condition code

cc *Explanation*

02	Subject entity is not equipped
03	Subject entity is in service
0A	DGN on subject entity failed
0B	BOOT on subject entity failed
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
16	SYNC TB is not equipped
17	SYNC is out of service
18	CCNI is out of service
1F	FTMI is in service but failed
36	DSPI not equipped
37	DSPI out-of-service
3E	DSPI failed
40	FC out of service
E0	Hardware database mismatch
0D	Unpestering error registers for subj. entity failed
67	DGA is not added
7F	NPC is not added
84	Mate NPC is not equipped
8D	RT/DL has unrestored DGA
F2	Invalid NPC number specified
FD	NPC range crosses unit boundary
A0	The selected MXR associated with the NPC is Out-Of-Service
A2	The selected MIU associated with the NPC is Out-Of-Service
A3	The selected MIU associated with the NPC is In-Service but failed
B7	The associated MXR is In-Service but pestered
69	Use of this NPC is RESERVED for SLC 96 MD 1
CE	CCI is out of service
CF	SYNC is inservice but failed
D1	CCI is not present
D2	ETSI is not present
D3	CCNI is inservice but failed
D4	CCI is inservice but failed
D5	CCB is not equipped

cc *Explanation*

- D6** CCB is out of service
- D7** CCB is inservice but failed
- D8** ETSI is not equipped
- D9** ETSI is out of service
- DA** ETSI is inservice but failed
- DB** FC is inservice but failed

RST,NPC,TS0M

RESTORE NPC TIME SLOT 0 MONITOR

Explanation Of Command

This message requests that the current TS0M buffer overflow condition on the specified TH type NPC be reset.

Command

Nonhierarchical

[I.34371]

RST:FRM xy,SEQ ww:NPC [s]abc,TS0M!

Hierarchical

[I.34371]

RST:FRM xy,SEQ ww:NPC uvmnp,TS0M!

Completion Message

Nonhierarchical

[O.34371]

M hh:mm:ss xy,ww <n[vv]> RST NPC [s]abc TS0M COMPL

Hierarchical

[O.34371]

M hh:mm:ss xy,ww <n[vv]> RST NPC uvmnp TS0M COMPL

Denial Message

Nonhierarchical

[O.34371.01]

M hh:mm:ss xy,ww <n[vv]> RST NPC [s]abc TS0M COND cc DNY

Hierarchical

[O.34371.01]

M hh:mm:ss xy,ww <n[vv]> RST NPC uvmnp TS0M COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

TS0M - Time slot 0 monitor

cc - Hexadecimal condition code

cc *Explanation*

04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
15	NPC is unequipped
1F	FTMI is in service but failed
24	Unit type error
E0	Hardware database mismatch
46	NPC Failed or Out of Service
F1	Parameter only valid with PA, PB, or PC type NPCs
F2	Invalid NPC number specified
9B	The MXR is not grown
AE	MXR is failed
B2	MXR is out of service

RST,PMEM,SMEM,CLR,FRC,BKGRND

RESTORE PMEM AND/OR SMEM

Explanation Of Command

This message restores the primary memory card (**PMEM**) or secondary memory card (**SMEM**) to service. The **PMEM** card may be restored manually when the main controller (MC) is in maintenance condition (MCOND). The **SMEM** card may be restored manually when the MC is in-service (IS) or in MCOND.

The options **CLR**, **FRC**, and **BKGRND** can only be used with **SMEM**. In addition, the option **CLR** can only be used when the main controller is in MCOND. The options **FRC** and **BKGRND** can only be used when the main controller is IS. The options do the following:

1. The **CLR** option is used when the frame administrator wants to create a blank card. The executables and the database will be erased from the card. The **CLR** option cannot be used together with the **FRC** or **BKGRND** option.
2. The **FRC** option is used when an **SMEM** card is to be synchronized but one or more items on the **SMEM** card are incompatible with the same item on the **PMEM** card. The purpose of the **FRC** option is to allow the frame administrator to force synchronization, even though an incompatibility has been detected.
3. The **FRC** option may be used together with **BKGRND** option. It is incompatible with the **CLR** option.
4. The **BKGRND** option is used when the frame administrator wants to allow the execution of a certain set of commands to proceed while the synchronization of the **SMEM** card is proceeding in the background. The **BKGRND** keyword is incompatible with the **CLR** keyword, but it may be used together with the **FRC** keyword.

Command

[I.34211]

RST:FRM xy,SEQ ww:{PMEM|SMEM[{,CLR|[,FRC][,BKGRND]}}]!

Completion Message

[O.34211]

M hh:mm:ss xy,ww n[vv] RST {PMEM|SMEM[CLR][FRC][BKGRND]} COMPL

Denial Message

[O.34211.01]

M hh:mm:ss xy,ww n[vv] RST {PMEM|SMEM[CLR][FRC][BKGRND]} COND cc DNY

Autonomous Message

Normal completion message when command is issued during Boot procedure

[O.34211]

I hh:mm:ss xy,ww n[vv] RST SMEM BKGRND COMPL

Error message when command issued during Boot procedure terminates abnormally

[O.34211.01]

A hh:mm:ss xy,ww n[vv] RST SMEM BKGRND COND cc DNY

Explanation Of Parameters

PMEM - Primary memory card.

CLR - Clear

The CLR option will cause all volumes on the card inserted in the SMEM slot to be initialized. It is not allowed for the PMEM option.

If the **CLR** keyword is entered, DACS II will respond:

ARE YOU SURE?(YES/NO)

If **YES**, the command request will be submitted to DACS II. After completion, all of the file volumes on the SMEM card will be initialized and all information stored previously will be cleared.

If **NO**, DACS II will respond as indicated under the Completion or Denial Message.

SMEM - Secondary memory card.

If the MC is in MCOND, the SMEM card will be restored without any transfer of databases or executables to the card. It will be restored if it passes hardware diagnostics and is recognized as a DACS II compatible memory card.

If the MC is IS, restoring an SMEM card will result in the following actions:

1. The card will go through hardware diagnostics and a check to ensure it is a DACS II compatible card.
2. The SMEM card will be made bit-for-bit identical to the PMEM card.
3. The system software will ensure that subsequent writes to the PMEM card will also be written to the SMEM card, so that the contents of the PMEM and SMEM cards will always be synchronized.

FRC - Force.

If the MC is IS and the SMEM has passed hardware diagnostics and is a compatible card, then the following conditions are checked on the SMEM:

- a) blank or uninitialized card
- b) a frame ID mismatch between the PMEM and SMEM cards
- c) a unique ID mismatch between the PMEM and SMEM cards
- d) a release version mismatch between the PMEM and SMEM cards
- e) the database on the SMEM is corrupted, missing or unrecognizable
- f) the PMEM and SMEM cards do not contain identical DSP Platform applications

If any of the above conditions exist, the frame will generate a warning message listing the condition and deny the command as follows:

Warning: The SMEM Card being restored has the following problems!

<message describing the problem>

IF YOU STILL WISH TO PROCEED, USE FRC OPTION

If the user re-issues the command with the FRC option, then the following message will appear:

ARE YOU SURE? (YES/NO)

A response of YES will cause the command to be executed. Any other response, or a 60-second time interval, will cause the command to be aborted.

BKGRND - Background

The BKGRND command is used when the main controller is In Service and is only valid when used with SMEM.

The following is a list of commands that are available while the backup procedure is running in the background.

[I.11001] TCON, FROM, TO, RDC, CUS, INCL
[I.11011] TCON, FROM, TO, RDC, CUS, INCL (clear DS1/clear 2M bps)
[I.11021] TCON, FROM, TO, MPM, NAM, NTR, RDC, CUS, INCL
[I.11051] TCON, FROM, TO, PFW, NFW(TS0 to non-TS0)
[I.15001] TDIS, FROM, TO, INCL, OOS, DCC
[I.15002] TDIS, FROM, TO, INCL, OOS, DCC (multi-point)
[I.15011] TDIS, FROM, TO, OOS, INCL (clear DS1/clear 2M bps)
[I.19001] ED, MACRO, MAP
[I.19101] SECH, TO, DS0A, DS0B, SEC, PCH
[I.19111] SECH, TO, RATE, DP, PCH
[I.19151] SDCH, TO, PCH, DCC
[I.19201] SCON, RATE, TPT, FROM, TO
[I.19211] SCON, DS0A, RATE, TPT, FROM, TO, DS0B
[I.19221] SCON, RATE, MPTM, MJU, MA
[I.19401] SDIS, RATE, TPT, FROM, TO
[I.19411] SDIS, RATE, TPT, FROM, TO
[I.19421] SDIS, RATE, MPTM, MJU (MJU branch)
[I.19431] SDIS, RATE, MPTM, MJU, ALL (MJU master)
[I.19501] CHG, SECH, OLD, NEW, PCH, DCC
[I.19581] CHG, SCON, OLD, NEW (change MJU branch)
[I.19591] CHG, SCON, OLD, NEW, MPTM (change MJU master)
[I.39001] LOGIN, USER, PASSWD, DACS, II
[I.39101] LOGOFF, USER, LINK
[I.51011] UTL, TOD, CFA, MONDAT, FAC, BMTR, PRIM, BKGRND
[I.51041] UTL, QRY, WHO
[I.51131] UTL, QRY, SQN
[I.52011] UTL, QRY, CMAP
[I.52041] UTL, QRY, TO
[I.52061] UTL, QRY, TO (clear DS1/clear 2M bps)
[I.52501] UTL, QRY, SECH, TO
[I.52511] UTL, QRY, SCON, CH, TO
[I.52521] UTL, QRY, SCON, TO
[I.52531] UTL, QRY, SRHDW, TO
[I.55711] ABT
[I.56311] UTL, QRY, STATE, NPC (except DA, TA, PA types)
[I.56314] UTL, QRY, STATE, NPC (DA, TA, PA types only)
[I.56501] UTL, QRY, SROOF, TO, ALL
[I.81001] AUD, QRY, CFA, CGA, LFVR, FFER

Additionally, the following test access commands are available for use during a

background backup procedure.

[I.19601] STST, MON, TO, TP
[I.19621] STST, MON, TO, MJU, TP
[I.19631] STST, SPL, TO, TP
[I.19651] STST, SPL, TO, MJU, TP
[I.19671] STST, TPR, TP
[I.19681] STST, TPR, ALL, LINKS
[I.20001] CTST, FAD, FROM, TO, AIS, INCL
[I.20031] CTST, HUB, FAD, TO, INCL
[I.20101] CTST, FAD, AIS, INCL
[I.20111] CTST, FAD, EMODE, FMODE, INCL
[I.20201] CTST, TNR, FAD, OOS, RDC, CUS, UMPD, EMODE
[I.20202] CTST, TNR, ALL, OOS
[I.20301] CTST, LPBKT, FAD, INCL
[I.21001] TTST, MON, TO, TP
[I.21021] TTST, MON, TO, TG
[I.21031] TTST, MON, TG
[I.23001] TTST, SPL, TP
[I.23021] TTST, SPL, TG
[I.24001] TTST, HUB, TO, TP
[I.24021] TTST, HUB, TO, TG
[I.26101] TTST, RT, DGA, DGB, DGC, DGD, DGP
[I.27001] TTST, TPR, TP, OOS
[I.27002] TTST, TPR, ALL, OOS
[I.27021] TTST, TGR, TG, OOS
[I.29001] TTST, LPD, TP
[I.29021] TTST, LPD, TG
[I.53061] UTL, QRY, TPS
[I.53081] UTL, QRY, TGS
[I.53091] UTL, QRY, NPCTG

cc - Hexadecimal condition code

cc Explanation

03 Subject entity is in service
06 Device failed to format
07 Device failed to initialize
0B BOOT on subject entity failed
91 Can't mount or unmount SMEM
FB PMEM verification failed
11 PMEM type no longer supported
F1 PMEM and SMEM synchronization fail
F2 Not a DACS II compatible Flash Card
F3 Flash Card is empty
F4 PMEM and SMEM are different
F5 Flash Card is not present
F6 Flash Card is bad

RST,RT,DL

RST RT | DL

Explanation Of Command

This command is used to restore to service all the NPCs associated with the specified RT or DL. Each NPC restored will print a RST (O.34351) message. If an NPC restoral fails the cc of the RST NPC message(O.34351) will give the reason. This command will restore the NPCs associated with the RT or DL one at a time in the proper order. If it encounters an error restoring any one of the NPCs it will not continue restoring the remaining NPCs. This command will insure that the two NPCs associated with the DL and RT of DGA or DGP have the same type before it restores them.

Command

[I.34481]

RST:FRM xy,SEQ ww:{RT|DL} ffff!

Completion Message

Nonhierarchical

[O.34481]

**M hh:mm:ss xy,ww n[vv] RST {RT|DL} ffff 3 LN MSG:
DGA [s]aaa INS [DGB [s]bbb INS] [DGC [s]ccc INS] [DGD [s]ddd INS] \
[DGP [s]ppp INS]
COMPL**

Hierarchical

[O.34481]

M hh:mm:ss xy,ww n[vv] RST {RT|DL} ffff 3 LN MSG:
DGA uvjab INS [DGB uvkcd INS] [DGC uvlef INS] [DGD uvmgh INS] \
[DGP uvjpr INS]
COMPL

Denial Message

Nonhierarchical

[O.34481.01]

M hh:mm:ss xy,ww n[vv] RST {RT|DL} ffff 3 LN MSG:
[DGA [s]aaa {OOS|INS}][DGB [s]bbb {OOS|INS}][DGC [s]ccc {OOS|INS}]\
[DGD [s]ddd {OOS|INS}]
COND cc DNY

Hierarchical

[O.34481.01]

M hh:mm:ss xy,ww n[vv] RST {RT|DL} ffff 3 LN MSG:
[DGA uvjab {OOS|INS}][DGB uvkcd {OOS|INS}][DGC uvlef {OOS|INS}]\
[DGD uvmgh {OOS|INS}][DGP uvjpr {OOS|INS}
COND cc DNY

Common

If there is no RT or DL:

[O.33481.01]

M hh:mm:ss xy,ww n[vv] RST {RT|DL} ffff 2 LN MSG:
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

RT - SLC remote terminal
DL - Digital carrier line unit
ffff - Bank identification number (0000 through 9999)
OOS - Out of Service
INS - IN Service
DNY - Denied
DGA - Digroup A of SLC
DGB - Digroup B of SLC
DGC - Digroup C of SLC
DGD - Digroup D of SLC
DGP - Digroup P of SLC

[s]aaa - DGA NPC number
[s]bbb - DGB NPC number
[s]ccc - DGC NPC number
[s]ddd - DGD NPC number
[s]ppp - DGP NPC number

uvjab - DGA NPC number
uvkcd - DGB NPC number
uvlef - DGC NPC number
uvmgh - DGD NPC number
uvjpr - DGP NPC number

RST,SYNC

RESTORE SYNCHRONIZER

Explanation Of Command

This command restores the specified synchronizer to service. This includes all constituent circuit packs; i.e., the timing extractor circuit, the phase-locked loop, the clock generator circuit, and the service and reply circuit.

Command

[I.34101]

RST:FRM xy,SEQ ww:SYNC a!

Completion Message

[O.34101]

M hh:mm:ss xy,ww n[vv] RST SYNC a COND cc COMPL

Denial Message

[O.34101.01]

M hh:mm:ss xy,ww n[vv] RST SYNC a COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer

a - Synchronizer side number (0 or 1)

cc - Hexadecimal condition code

cc	Explanation

00	No conditions
02	Subject entity is not equipped
03	Subject entity is in service
0A	DGN on subject entity failed
91	Sync is not configured yet
92	Boot TLI failed
93	TB type in hardware mismatches DB
AB	Bad sync mode
C8	Sync pack denied command
C9	Syncs failed to cross couple
CA	Mate sync pack denied command
CB	Sync not completely reset

RST,SYNC,TLI,CRO

RESTORE CLOCK REFERENCE OSCILLATOR

Explanation Of Command

This command requests the restoration of the synchronizer time base as a clock reference oscillator.

Command

[I.34111]

RST:FRM xy,SEQ ww:SYNC,TLI 3,CRO!

Completion Message

[O.34111]

M hh:mm:ss xy,ww n[vv] RST SYNC TLI 3 CRO COND 00 COMPL

Denial Message

[O.34111.01]

M hh:mm:ss xy,ww n[vv] RST SYNC TLI 3 CRO COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer

TLI - Timing link interface

CRO - Clock reference oscillator

cc - Hexadecimal condition code

cc	Explanation

02	Subject entity is not equipped

03	Subject entity is in service

0A	DGN on subject entity failed

0B	BOOT on subject entity failed

16	SYNC TB is not equipped

A0	Not a CRO TLI

A9	Both syncs are out-of-service

36	TD on one(both) sync(s) is not equipped or not in-service

RST,SYNC,TLI,SSP

RESTORE SYNCHRONIZER'S TIMING LINK INTERFACE

Explanation Of Command

This command requests the restoration of the synchronizer's timing link interface.

If the timing link interface is configured as a timing extractor, synchronizer sync port 0 or 1 must be specified.

Command

[I.34121]

RST:FRM xy,SEQ ww:SYNC a,TLI m[,SSP b]!

Completion Message

[O.34121]

M hh:mm:ss xy,ww n[vv] RST SYNC a TLI m[SSP b] COND 00 COMPL

Denial Message

[O.34121.01]

M hh:mm:ss xy,ww n[vv] RST SYNC a TLI m[SSP b] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer
a - SYNC number (0 or 1)
TLI - Timing link interface
m - TLI number (1 through 4)
SSP - Synchronizer synchronization port
b - SSP number (0 or 1)
cc - Hexadecimal condition code

cc Explanation

02 Subject entity is not equipped
03 Subject entity is in service
0A DGN on subject entity failed
16 SYNC TB is not equipped
17 SYNC is out of service
33 Wrong TLI type

RST,TSI

RESTORE TIME SLOT INTERCHANGE

Explanation Of Command

This command is applicable only to the noncapacity expansion frame (NCEF).

It requests the restoration of the time slot interchange to service.

Command

[I.34221]

RST:FRM xy,SEQ ww:TSI sft!

Completion Message

[O.34221]

M hh:mm:ss xy,ww n[vv] RST TSI sft COND cc COMPL

Denial Message

[O.34221.01]

M hh:mm:ss xy,ww n[vv] RST TSI sft COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

- TSI** - Time slot interchange
- s** - Side No. (0 or 1).
- f** - From unit No. (1 through 6).
- t** - To unit No. (1 through 6).
- cc** - Hexadecimal condition code

cc *Explanation*

- 02** Subject entity is not equipped
- 03** Subject entity is in service
- 0A** DGN on subject entity failed
- 0B** BOOT on subject entity failed
- 16** SYNC TB is not equipped
- 17** SYNC is out of service
- 18** CCNI is out of service
- 1B** CCN side s is in service
- CF** SYNC is inservice but failed
- D3** CCNI is inservice but failed
- D5** CCB is not equipped
- D6** CCB is out of service
- D7** CCB is inservice but failed

RST,TSIS,CCN,ALL

RESTORE TIME SLOT INTERCHANGES

Explanation Of Command

This command applies only to the noncapacity expansion frame (NCEF).

It requests the restoration of all in-service Time Slot Interchanges in the specified Cross-Connect Network side.

Command

[I.34241]

RST:FRM xy,SEQ ww:TSIS,CCN s,ALL!

Completion Message

[O.34241]

M hh:mm:ss xy,ww n[vv] RST TSIS CCN s ALL 5 LN MSG:

TOTAL TSIS tt

sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn

sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn

sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn

EOP

M hh:mm:ss xy,ww n[vv] RST TSIS CCN s ALL 5 LN MSG:

TOTAL TSIS tt

sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn

sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn

**sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn **

COND    COMPL

Denial Message

[O.34241.01]

M hh:mm:ss xy,ww n[vv] RST TSIS CCN s ALL COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TSIS - Time slot interchanges

ALL - All

TOTAL - Total

tt - Number of TSIs currently in service (01 through 36)

CCN - Cross-connect network

s - Cross-connect network side number (0 or 1)

f - From unit number (1 through 6)

t - To unit number (1 through 6)

r - Status

<i>r</i>	<i>Explanation</i>

C	COMPL

D	DNY

nn - Hexadecimal condition code for the particular TSI

for r = C

nn Explanation

00 No condition

for r = D

nn Explanation

02 Subject entity is not equipped

03 Subject entity is in service

0A Diagnostic (DGN) on subject entity failed

0B Boot on subject entity failed

COND - Condition

cc - Completion condition code

To interpret values see cc.

cc - Hexadecimal condition code

cc Explanation

00 No conditions

0C DGN on subject entity denied

16 SYNC TB is not equipped

17 SYNC is out of service

18 CCNI is out of service

1B CCN side s is in service

CF SYNC is inservice but failed

D3 CCNI is inservice but failed

D5 CCB is not equipped

D6 CCB is out of service

D7 CCB is inservice but failed

RST,TSIS,CCN,UNIT,CONN

RESTORE

Explanation Of Command

This command applies only to the noncapacity expansion frame (NCEF). It requests the restoration of time slot interchanges (TSIs) that connect **UNIT q** to other specified units. **CCN s** specifies which cross-connect network side the TSIs are on.

If the optional connectivity field is omitted, then all TSIs connected to **UNIT q** are restored.

Command

[I.34231]

```
RST:FRM xy,SEQ ww:TSIS,CCN s,UNIT q \  
[,CONN(a[,b[,c[,d[,e[,f]]]]]])]!
```

Completion Message

[O.34231]

```
M hh:mm:ss xy,ww n[vv] RST TSIS CCN s UNIT q \  
[ CONN (a[ b[ c[ d[ e[ f]]]]]]]  
e LN MSG:  
sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn  
sft r nn sft r nn sft r nn sft r nn sft r nn sft r nn  
COND cc COMPL
```

Denial Message

[O.34231.01]

```
M hh:mm:ss xy,ww n[vv] RST TSIS CCN s UNIT q \  
[ CONN (a[ b[ c[ d[ e[ f]]]]]]] COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

q - Unit number containing TSIs (1 through 6)

TSIS - Time Slot Interchanges

a, b, c, d, e, f

- Unit numbers to which UNIT q can be connected

CCN - Cross-Connect Network

sft - CCN identifier

s - Side number (0 or 1)

f - FROM unit number (1 through 6)

t - TO unit number (1 through 6)

r - Status

r *Explanation*

C COMPL

D DNY

nn - Hexadecimal condition code for the particular TSI

for r = C

nn *Explanation*

00 No condition

for r = D

nn *Explanation*

03 Subject entity is in service

0A Diagnostic on subject entity failed

0B Boot on subject entity failed

cc - Hexadecimal condition code

cc *Explanation*

0B	BOOT on subject entity failed
0C	DGN on subject entity denied
10	Unit is not equipped
16	SYNC TB is not equipped
17	SYNC is out of service
18	CCNI is out of service
1B	CCN side s is in service
27	Illegal connectivity specified
CF	SYNC is inservice but failed
D3	CCNI is inservice but failed
D5	CCB is not equipped
D6	CCB is out of service
D7	CCB is inservice but failed

RST,UNIT,FC

RESTORE UNIT

Explanation Of Command

This command requests that a format converter of a facility terminating unit be restored to service.

Command

[I.34331]

RST:FRM xy,SEQ ww:UNIT [q]q,FC sb!

Completion Message

[O.34331]

M hh:mm:ss xy,ww n[vv] RST UNIT [q]q FC sb COND 00\
COMPL

Denial Message

[O.34331.01]

M hh:mm:ss xy,ww n[vv] RST UNIT [q]q FC sb COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FC - Format converter

s - Side number (0 or 1)

b - Format Converter number (1 through 4)

cc - Hexadecimal condition code

cc *Explanation*

02	Subject entity is not equipped
03	Subject entity is in service
0A	DGN on subject entity failed
0B	BOOT on subject entity failed
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
16	SYNC TB is not equipped
17	SYNC is out of service
18	CCNI is out of service
1B	CCN side s is in service
1F	FTMI is in service but failed
40	FC out of service
CE	CCI is out of service
CF	SYNC is inservice but failed
D1	CCI is not present
D2	ETSI is not present
D3	CCNI is inservice but failed
D4	CCI is inservice but failed
D5	CCB is not equipped
D6	CCB is out of service
D7	CCB is inservice but failed
D8	ETSI is not equipped
D9	ETSI is out of service
DA	ETSI is inservice but failed
DB	FC is inservice but failed

RST,UNIT,FLI

RESTORE FACILITY LINE INTERFACE

Explanation Of Command

This command requests and reports the restoration of one facility line interface (FLI) in a DS3 unit (DS3U) or a Hybrid DS3 unit (HDS3U).

Command

[I.34401]

RST:FRM xy,SEQ ww:UNIT [q]q,FLI k!

Completion Message

[O.34401]

M hh:mm:ss xy,ww n[vv] RST UNIT [q]q FLI k COMPL

Denial Message

[O.34401.01]

M hh:mm:ss xy,ww n[vv] RST UNIT [q]q FLI k COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FLI - Facility line interface

k - FLI identifier

k *Explanation*

S Service side

P Protection side

cc - Hexadecimal condition code

cc *Explanation*

02 Subject entity is not equipped

03 Subject entity is in service

0A DGN on subject entity failed

0B BOOT on subject entity failed

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

16 SYNC TB is not equipped

17 SYNC is out of service

18 CCNI is out of service

B1 FMT is out of service

CE CCI is out of service

CF SYNC is inservice but failed

D1 CCI is not present

D2 ETSI is not present

D3 CCNI is inservice but failed

D4 CCI is inservice but failed

D5 CCB is not equipped

D6 CCB is out of service

D7 CCB is inservice but failed

D8 ETSI is not equipped

D9 ETSI is out of service

DA ETSI is inservice but failed

DD FMT is in service but failed

RST,UNIT,FMT

RESTORE FORMATTER

Explanation Of Command

This command requests and reports the restoration of one Formatter (FMT) in a DS3 Unit or Hybrid Formatter (HFMT) in a Hybrid DS3 (HDS3) Unit. If the restoration of the FMT or HFMT causes all the packs in the associated side to be in service, the side will be marked In-Service. If an attempt is made to restore an FMT in an HDS3 or an HFMT in a DS3 unit, then a diagnostic failure will result.

Command

[I.34411]

RST:FRM xy,SEQ ww:UNIT [q]q,FMT s!

Completion Message

[O.34411]

M hh:mm:ss xy,ww n[vv] RST UNIT [q]q FMT s COMPL

Denial Message

[O.34411.01]

M hh:mm:ss xy,ww n[vv] RST UNIT [q]q FMT s COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FMT - Formatter or Hybrid Formatter

s - FMT/HFMT side

s *Explanation*

0 Side 0

1 Side 1

cc - Hexadecimal condition code

cc *Explanation*

02 Subject entity is not equipped

03 Subject entity is in service

0A DGN on subject entity failed

0B BOOT on subject entity failed

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

16 SYNC TB is not equipped

17 SYNC is out of service

18 CCNI is out of service

0D Unpesteing error registers for subj. entity failed

CE CCI is out of service

CF SYNC is inservice but failed

D1 CCI is not present

D2 ETSI is not present

D3 CCNI is inservice but failed

D4 CCI is inservice but failed

D5 CCB is not equipped

D6 CCB is out of service

D7 CCB is inservice but failed

D8 ETSI is not equipped

D9 ETSI is out of service

DA ETSI is inservice but failed

RST,UNIT,FTMI,DSPI

RESTORE FTMI or DSPI

Explanation Of Command

This command allows restoral of a facility terminating module interface or a digital signal processor interface to service.

Command

[I.34321]

RST:FRM xy,SEQ ww:UNIT [q]q,{FTMI d|DSPI}!

Completion Message

[O.34321]

**M hh:mm:ss xy,ww n[vv] RST UNIT [q]q,{FTMI d|DSPI} COND 00
COMPL**

Denial Message

[O.34321.01]

M hh:mm:ss xy,ww n[vv] RST UNIT [q]q {FTMI d|DSPI} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

- UNIT** - Unit
- [q]q** - Unit number (1 through 16)
- FTMI** - Facility terminating module interface
- d** - FTMI number (1 through 4).
- DSPI** - Digital signaling processing interface
- COND** - Condition
- cc** - Hexadecimal condition code

cc *Explanation*

- 02** Subject entity is not equipped
- 03** Subject entity is in service
- 0A** DGN on subject entity failed
- 0B** BOOT on subject entity failed
- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- 16** SYNC TB is not equipped
- 17** SYNC is out of service
- 18** CCNI is out of service
- CE** CCI is out of service
- CF** SYNC is inservice but failed
- D1** CCI is not present
- D2** ETSI is not present
- D3** CCNI is inservice but failed
- D4** CCI is inservice but failed
- D5** CCB is not equipped
- D6** CCB is out of service
- D7** CCB is inservice but failed
- D8** ETSI is not equipped
- D9** ETSI is out of service
- DA** ETSI is inservice but failed

RST,UNIT,MIU,INCL

RESTORE MULTIPLEXER INTERFACE UNIT

Explanation Of Command

The purpose of this command is to add ANSI performance monitoring capability to an already operating Multiplexer-Multiplexer Interface Unit Functional Group(s) (MMFG) in a DS3 unit without interrupting service. This command follows a **GRTH UNIT MIU TYPE** command for an already-operating MMFG with only the MXR circuit pack in service.

Failure to restore all equipped TA-type tributary Network Processing Circuits will result in denial of the whole command. The **INCL** option will be ignored if the MMFG is not selected to carry service.

An **RST IN PROGRESS** message will be generated every 20 seconds while this command is being executed.

A completion or denial message occurs for each MIU.

Command

[I.34431]

RST:FRM xy,SEQ ww:UNIT [q]q,MIU c[-d][,INCL]!

Completion Message

[O.34431]

**M hh:mm:ss xy,ww n[vv] RST UNIT [q]q MIU a[INCL] TYPE mnxyz **
COMPL

Denial Message

[O.34431.01]

M hh:mm:ss xy,ww n[vv] RST UNIT [q]q MIU a[INCL] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MIU - Multiplexer interface unit

c, d - The number of the MIU in the DS3 Unit (P, 1 through 6)

a - The number of the MIU within the range of c and d

INCL - Restore all equipped TA type tributary NPCs.

Failure to restore *all* equipped NPCs will result in denial of the whole command. This keyword will be ignored if the associated MMFG is not selected to carry service.

TYPE - Type

mnxyz - NPC-type identifier

mnxyz Explanation

MI100 Multiplexer interface unit

----- Type unassigned

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

16 SYNC TB is not equipped

17 SYNC is out of service

18 CCNI is out of service

24 Unit type error

B3 MIU is already in service

BF MIU is not equipped

99 No Facility Line Interface (FLI) is In Service

cc *Explanation*

- 9A** Formatter (FMT) on active CCN side is Out-Of-Service
- A6** The MIU diagnostics failed
- A7** The MIU boot failed
- AE** MXR is failed
- B2** MXR is out of service
- B7** The associated MXR is In-Service but pested
- CE** CCI is out of service
- CF** SYNC is inservice but failed
- D1** CCI is not present
- D2** ETSI is not present
- D3** CCNI is inservice but failed
- D4** CCI is inservice but failed
- D5** CCB is not equipped
- D6** CCB is out of service
- D7** CCB is inservice but failed
- D8** ETSI is not equipped
- D9** ETSI is out of service
- DA** ETSI is inservice but failed
- DD** FMT is in service but failed
- DF** FLI is inservice but failed

RST,UNIT,MMFG,INCL

RESTORE MMFG

Explanation Of Command

This message requests and reports the restoration of one or more Multiplexer-Multiplexer Interface Unit Functional Groups (MMFG) in a DS3 or Hybrid DS3 Unit (HDS3U). One MMFG consists of one Multiplexer (MXR), and one Multiplexer Interface Unit (MIU). Note that an MIU is currently not supported by the HDS3U. Failure to restore either the MXR/HMXR or the MIU will result in a denial. There is also an option (INCL) to restore all equipped NPCs associated with the MMFG using this command.

Failure to restore any of the NPCs will result in denial of the whole command. The **INCL** option will be ignored if the MMFG is not selected to carry service.

A **RST IN PROGRESS** message will be generated every 20 seconds while this command is being executed.

A completion or denial message occurs for each MMFG.

Command

[I.34421]

RST:FRM xy,SEQ ww:UNIT [q]q,MMFG c[-d][,INCL]!

Completion Message

[O.34421]

**M hh:mm:ss xy,ww n[vv] RST UNIT [q]q MMFG a[INCL] 2 LN MSG:
MXR a TYPE mnxyz[MIU a TYPE MI100] COMPL**

Denial Message

[O.34421.01]

M hh:mm:ss xy,ww n[vv] **RST UNIT** [q]q **MMFG** c[**INCL**] \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MMFG - Multiplexer-multiplexer interface unit functional group

c, d - MMFG number within the unit (P,1 through 6)

INCL - Inclusive

Restore all tributary NPCs that are equipped. Failure to restore any of the NPCs will result in the denial of the whole command. This INCL option will be ignored if the MMFG is not selected to carry service.

TYPE - Type

mnxyz - Type identifier

mn - *Multiplexer type*

MX The original R4.0 DS3 facility type supported by the multiplexer (MXR) circuit pack (KCR-1).

EX The enhanced R6.0 DS3 facility type supported by the enhanced multiplexer (EMXR) circuit pack (KCR-5).

HX The hybrid facility type supported by the Hybrid Multiplexer(HMXR) circuit pack (KCR-8).

If the unit is a regular DS3U of unit type DT100, then the Default is the MX type for backward compatibility. If the unit is a Hybrid DS3U of unit type HT100, then the default is HX.

xyz - Format type

x - *The DS3 framing format*

1 - M13 (default)

2 - C-bit parity format, not supported by HMXR

y - Not assigned (the only valid value is 0)

z - Not assigned (the only valid value is 0)

MIU - Multiplexer interface unit

a - The number of the MMFG/MXR/MIU within the range of c and d.

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

16 SYNC TB is not equipped

17 SYNC is out of service

18 CCNI is out of service

24 Unit type error

99 No Facility Line Interface (FLI) is In Service

9A Formatter (FMT) on active CCN side is Out-Of-Service

9B The MXR is not grown

9C The MMFG is already In-Service

A4 The MXR diagnostics failed

A6 The MIU diagnostics failed

A7 The MIU boot failed

B6 The MXR boot failed

CE CCI is out of service

cc *Explanation*

- CF** SYNC is inservice but failed
- D1** CCI is not present
- D2** ETSI is not present
- D3** CCNI is inservice but failed
- D4** CCI is inservice but failed
- D5** CCB is not equipped
- D6** CCB is out of service
- D7** CCB is inservice but failed
- D8** ETSI is not equipped
- D9** ETSI is out of service
- DA** ETSI is inservice but failed
- DD** FMT is in service but failed
- DF** FLI is inservice but failed
- FF** EMXR/MXR can't be used as P-MXR for HDS3U
- 08** Mismatch between service MXR and protection MXR types

RST,UNIT,UC

RESTORE UNIT CONTROLLER

Explanation Of Command

This message requests the restoration of the unit controller to service.

Command

[I.34311]

RST:FRM xy,SEQ ww:UNIT [q]q,UC!

Completion Message

[O.34311]

M hh:mm:ss xy,ww n[vv] RST UNIT [q]q UC COND cc COMPL

[O.34312]

M hh:mm:ss xy,ww n[vv] RST IN PROGRESS

Denial Message

[O.34311.01]

M hh:mm:ss xy,ww n[vv] RST UNIT [q]q UC COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

UC - Unit controller

COND - Condition

cc - Completion condition code (hexadecimal)

To interpret values of cc see cc below

cc - Hexadecimal condition code

cc *Explanation*

02 Subject entity is not equipped

03 Subject entity is in service

0A DGN on subject entity failed

0B BOOT on subject entity failed

42 RST failed to boot program

47 Failed to boot DB

48 Failed to boot journal--recurrence indicates database corruption

49 Failed to boot unit

51 General boot failure (vanilla flavor)

18 DSPI not in service or failed

43 RST failed to boot DB

C4 XMIT continuity test won't be run: no XMIT timeslots available

C6 No available timeslots on any of the inservice NPCS associated with
FC/FMT

Contents

SAVE	20-2
■ Explanation Of Command	20-2
■ Command	20-2
■ Completion Message	20-2
■ Denial Message	20-2
■ Autonomous Message	20-2
■ Explanation Of Parameters	20-3
SC,ALM,CGA,DLF,INH,MRV,MSW,PSW,RT,DL	20-4
■ Explanation Of Command	20-4
■ Command	20-4
■ Completion Message	20-4
■ Denial Message	20-4
■ Autonomous Message	20-4
■ Nonhierarchical	20-4
■ Hierarchical	20-5
■ Explanation Of Parameters	20-5
SC,ALM,COMP,RT,INDX,LBRV,AB,CD,P,ALP	20-8
■ Explanation Of Command	20-8
■ Command	20-8
■ Completion Message	20-8
■ Denial Message	20-8
■ Autonomous Message	20-8
■ Explanation Of Parameters	20-9
SC,ALM,DPLX,SYNC,CCB,CCNI,CCI,TSI,ETSI	20-10
■ Explanation Of Command	20-10
■ Command	20-10

Contents

■ Completion Message	20-10
■ Denial Message	20-10
■ Autonomous Message	20-10
■ Nonhierarchical	20-10
■ Hierarchical	20-11
■ Explanation Of Parameters	20-11
SC,ALM,MC,UC,FTMI,DSPI,NE	20-15
■ Explanation Of Command	20-15
■ Command	20-15
■ Completion Message	20-15
■ Denial Message	20-15
■ Autonomous Message	20-15
■ Explanation Of Parameters	20-16
SC,ALM,RT,DL,FE	20-17
■ Explanation Of Command	20-17
■ Command	20-17
■ Completion Message	20-17
■ Denial Message	20-17
■ Autonomous Message	20-17
■ Explanation Of Parameters	20-18

SAVE — SC

SAVE — SC

This section documents the commands **SAVE** through **SC**.

SAVE

SAVE COMPONENT COMMANDS

Explanation Of Command

This command is used to save the contents of a macro while in the macro session.

Command

[I.19081]

SAVE[:FRM xy,SEQ ww:]!

Completion Message

[O.19081]

M hh:mm:ss xy,ww n[vv] SAVE <macro name> SPACE sss \
USED uuu COMPL

Denial Message

[O.19081.01]

M hh:mm:ss xy,ww n[vv] SAVE <macro name> SPACE sss \
USED uuu COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

macro name

- The name of the macro to be saved

SPACE - Space

sss - Number representing the percent of total disk space allocated to macro storage

USED - Used

uuu - Number representing the percent of the allocated disk space (sss) being used to store macros

cc - Hexadecimal condition code

cc *Explanation*

60 User macro/map space is full

61 System macro/map space is full

65 Command invalid while backup in progress

6E No edit session active

6C File is empty

SC,ALM,CGA,DLF,INH,MRV,MSW,PSW,RT,DL

SLC® ALARM

Explanation Of Command

This autonomous output message reports a SLC® carrier interface related alarm. The message provides the affected bank, the alarm-causing digroup, the associated network processing circuit (NPC) number, and the state and location of the alarm.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.65131]

pahh:mm:ss xy,ww SC ALM <state>[{CGA|DLF|INH|MRV|MSW|PSW}] {RT|DL} \
ffff {DGA|DGB|DGC|DGD|DGP} [s]abc[k] <location> COMPL

Hierarchical

[O.65131]

pahh:mm:ss xy,ww SC ALM <state>[{CGA|DLF|INH|MRV|MSW|PSW}] {RT|DL} \
ffff {DGA|DGB|DGC|DGD|DGP} uvmnp[k] <location> COMPL

Explanation Of Parameters

The permissible output parameters are somewhat different if the CGA option is present in this message. These are noted below.

pa - Priority of action

<i>pa</i>	<i>Explanation</i>

I	Information (Only without CGA)

*	Minor alarm, non-service-affecting (no CGA declaration)

**	Major alarm, service-affecting, 1 to 5 NPCs including AIS state. (With or without CGA)

*C	Critical alarm, service-affecting, more than 5 NPCs. (With or without CGA)

SC - SLC® carrier

ALM - Alarm

state - Alarm state

<i>state</i>	<i>Explanation</i>

MJ	Major alarm (with or without CGA)

MN	Minor alarm (no CGA declaration)

IDLD	Idled

MJ - Major

MN - Minor

IDLD - Idled

CGA - Carrier group alarm

DLF - Data link failure

INH - Inhibition (Protection switch)

MRV - Manually Removed

MSW - Manual (protection) switch

PSW - Autonomous protection switch

RT - Remote terminal
DL - Digital carrier line unit (DCLU)
ffff - Bank identification number (0000 through 9999)

DGA - SLC Carrier Digroup A
DGB - SLC Carrier Digroup B
DGC - SLC Carrier Digroup C
DGD - SLC Carrier Digroup D
DGP - SLC Carrier Digroup P

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

The valid numbers are:

If NPC numbers are expressed in three digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

uvmnp - Hierarchical NPC number

DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

k - Alarm type

k Explanation

Y	Yellow
R	Red
B	Both yellow and red

location

- Alarm location

location Explanation

CLF	Carrier loop failure (with or without CGA)
NE	Near end (the DACS II end) (with or without CGA)
FE	Far end

SC,ALM,COMP,RT,INDX,LBRV,AB,CD,P,ALP

SLC® CARRIER ALARM

Explanation Of Command

This output message reports the existence of a minor alarm between a SLC® Series 5 carrier feature package C (FPC) remote terminal (RT) and the DACS II frame. Also reported is any incompatible provisioning between the two ends. The message keywords indicate the reason for the incompatibility.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.65171]

I hh:mm:ss xy,ww SC ALM COMP <state> RT ffff[INDX][LBRV]\
[AB][CD][P][ALP] COMPL

Explanation Of Parameters

ALM - Alarm

COMP - Compatibility

state - Alarm state

MN - Minor

IDLD - Idled

RT - Remote Terminal

ffff - RT bank id number

reasons

- Reasons for the alarm

INDX - Index

The release generic index value does not match.

LBRV - Low bit rate voice

The low bit rate voice byte value does not match.

AB - A and B

Digroups A and B provisioning information does not match.

CD - C and D

Digroups C and D provisioning information does not match.

P - Protection

Digroup P provisioning information does not match.

ALP - Alpha

The ALPHA byte value does not match.

SC,ALM,DPLX,SYNC,CCB,CCNI,CCI,TSI,ETSI

SLC® ALARM DUPLEX

Explanation Of Command

This autonomous output message reports the existence of an alarm and duplex failure on the frame. Duplex means failures that affect both sides of the system. The entity printed in the message is the most recently failed side.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.65151]

```
I hh:mm:ss xy,ww SC ALM <state> DPLX {SYNC a|CCB sf|CCNI s|\
CCI s|TSI sft|ETSI sqq|FC sb UNIT [q]q|FMT s UNIT [q]q|\
NPC [s]abc SIDE s} NE COMPL
```


Hierarchical

[O.65151]

I hh:mm:ss xy,ww SC ALM <state> DPLX {SYNC a|CCB sf|CCNI s|\
CCI s|TSI sft|ETSI sqq|FC sb UNIT [q]q|FMT s UNIT [q]q|\
NPC uvmp SIDE s} NE COMPL

Explanation Of Parameters

SC - SLC®

DPLX - Duplex

ALM - Alarm

state - Alarm status

<i>state</i>	<i>Explanation</i>

CR	Critical alarm

IDLD	Idled

SYNC - Synchronizer

a - Synchronizer number (0 or 1)

UNIT - Unit

[q]q - Unit number (1 through 16)

CCB - Cross-connect buffer

CCNI - Cross-connect network interface

SIDE - Side

s - Side number (0 or 1)

f - CCB number (1 through 6)

TSI - Time slot interchange

t - TSI number (1 through 6)

CCI - Clock and control interface

ETSI - Expanded time slot interchanger

s - Side number (0 or 1)

FC - Format converter

b - Module Number (1, 2, 3, or 4)

FMT - Formatter

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical DSPU NPC number

The valid numbers are:

If NPC numbers are expressed in three digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

uvmnp - Hierarchical DSPU NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are listed below:

MB, SR, and MJ type numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

NE - Near end

IDLD - Idled

SC,ALM,MC,UC,FTMI,DSPI,NE

SLC® CARRIER ALARM

Explanation Of Command

This autonomous output message reports an alarm and a possible service-affecting failure. The failures could be the main controller, facility terminating module interface (FTMI), or the digital signal processing interface (DSPI) circuit pack.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.65161]

I hh:mm:ss xy,ww SC ALM <state> {MC|UC [q]q|FTMI [q]qb|\
DSPI [q]q} NE COMPL

Explanation Of Parameters

MC - Main controller

UC - Unit controller

[q]q - Unit number (1 through 16)

FTMI - Facility terminating module interface

[q]qb - FTMI identifier

[q]q - Unit number (see above)

b - FTMI number (1 through 4)

DSPI - Digital signal processing interface

[q]q - Unit number (see above)

state - Alarm state

MJ - Major

MN - Minor

IDLD - Idled

NE - Near End

SC,ALM,RT,DL,FE

SLC® CARRIER ALARM

Explanation Of Command

This output message reports the existence of a power (PWR) or miscellaneous (MISC) alarm and its state at the far end.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.65141]

pahh:mm:ss xy,ww SC ALM[<alarm type>] <state> {RT|DL} \
ffff[FE] COMPL

Explanation Of Parameters

RT - Remote Terminal

DL - Digital Carrier Line Unit (DCLU)

ffff - Bank id number (0000 to 9999)

alarm type

- The type of SLC Carrier failure or alarm

type	Explanation
PWR	Power failure alarm
MISC	Miscellaneous alarm (SLC 96 Carrier only)
MISC1	Miscellaneous alarm (SLC Series 5 Carrier FPC only)
MISC2	Miscellaneous alarm (SLC Series 5 Carrier FPC only)
RGF	Ringing Generator Failure (SLC Series 5 Carrier FPC only)
EEPROM	EEPROM alarm (SLC Series 5 Carrier FPC only)
COMP	Compatibility alarm (SLC Series 5 Carrier FPC only)

state - Alarm state

state *Explanation*

MJ	Major alarm
MN	Minor alarm
IDLD	Idled

pa - Priority of action

pa *Explanation*

*	Minor alarm, not service-affecting
**	Major alarm, service-affecting, 1 to 5 NPCs including AIS state

FE - Far End

Contents

SCNT,RATE,MPTM,MJU,MA	21-2
■ Explanation Of Command	21-2
■ Command	21-2
■ Nonhierarchical	21-2
■ Hierarchical	21-3
■ Completion Message	21-3
■ Nonhierarchical	21-3
■ Hierarchical	21-3
■ Denial Message	21-3
■ Nonhierarchical	21-3
■ Hierarchical	21-4
■ Autonomous Message	21-4
■ Explanation Of Parameters	21-4
SCNT,RATE,TPT,FROM,TO	21-11
■ Explanation Of Command	21-11
■ Command	21-11
■ Nonhierarchical	21-11
■ Hierarchical	21-11
■ Completion Message	21-11
■ Nonhierarchical	21-11
■ Hierarchical	21-12
■ Denial Message	21-12
■ Nonhierarchical	21-12
■ Hierarchical	21-12
■ Autonomous Message	21-12
■ Explanation Of Parameters	21-12

Contents

SCNT,RATE,TPT,FROM,TO	21-19
■ Explanation Of Command	21-19
■ Command	21-19
■ Nonhierarchical	21-19
■ Hierarchical	21-19
■ Completion Message	21-20
■ Nonhierarchical	21-20
■ Hierarchical	21-20
■ Denial Message	21-21
■ Nonhierarchical	21-21
■ Hierarchical	21-21
■ Autonomous Message	21-21
■ Explanation Of Parameters	21-22
SCON,RATE,MPTM,MJU,MA	21-28
■ Explanation Of Command	21-28
■ Command	21-28
■ Nonhierarchical	21-28
■ Hierarchical	21-29
■ Completion Message	21-29
■ Nonhierarchical	21-29
■ Hierarchical	21-29
■ Denial Message	21-29
■ Nonhierarchical	21-29
■ Hierarchical	21-30
■ Autonomous Message	21-30
■ Explanation Of Parameters	21-30
SCON,RATE,TPT,FROM,TO	21-40
■ Explanation Of Command	21-40
■ Command	21-40
■ Nonhierarchical	21-40
■ Hierarchical	21-40
■ Completion Message	21-40
■ Nonhierarchical	21-40
■ Hierarchical	21-41
■ Denial Message	21-41
■ Nonhierarchical	21-41
■ Hierarchical	21-41
■ Autonomous Message	21-41

Contents

■ Explanation Of Parameters	21-41
SCON,RATE,TPT,FROM,TO	21-49
■ Explanation Of Command	21-49
■ Command	21-49
■ Nonhierarchical	21-49
■ Hierarchical	21-50
■ Completion Message	21-50
■ Nonhierarchical	21-50
■ Hierarchical	21-50
■ Denial Message	21-51
■ Nonhierarchical	21-51
■ Hierarchical	21-51
■ Autonomous Message	21-51
■ Explanation Of Parameters	21-52
SDCH,TO,PCH,DCC	21-58
■ Explanation Of Command	21-58
■ Command	21-58
■ Nonhierarchical	21-58
■ Hierarchical	21-58
■ Completion Message	21-58
■ Nonhierarchical	21-58
■ Hierarchical	21-59
■ Denial Message	21-59
■ Nonhierarchical	21-59
■ Hierarchical	21-59
■ Autonomous Message	21-59
■ Explanation Of Parameters	21-59
SDIS,RATE,MPTM,MJU	21-65
■ Explanation Of Command	21-65
■ Command	21-66
■ Nonhierarchical	21-66
■ Hierarchical	21-66
■ Completion Message	21-66
■ Nonhierarchical	21-66
■ Hierarchical	21-66
■ Denial Message	21-67
■ Nonhierarchical	21-67
■ Hierarchical	21-67

Contents

■ Autonomous Message	21-67
■ Explanation Of Parameters	21-67
SDIS,RATE,MPTM,MJU,ALL	21-77
■ Explanation Of Command	21-77
■ Command	21-77
■ Nonhierarchical	21-77
■ Hierarchical	21-77
■ Completion Message	21-78
■ Nonhierarchical	21-78
■ Hierarchical	21-78
■ Denial Message	21-79
■ Nonhierarchical	21-79
■ Hierarchical	21-79
■ Autonomous Message	21-79
■ Explanation Of Parameters	21-80
SDIS,RATE,TPT,FROM,TO	21-89
■ Explanation Of Command	21-89
■ Command	21-89
■ Nonhierarchical	21-89
■ Hierarchical	21-89
■ Completion Message	21-90
■ Nonhierarchical	21-90
■ Hierarchical	21-90
■ Denial Message	21-90
■ Nonhierarchical	21-90
■ Hierarchical	21-90
■ Autonomous Message	21-90
■ Explanation Of Parameters	21-91
SDIS,RATE,TPT,FROM,TO	21-97
■ Explanation Of Command	21-97
■ Command	21-97
■ Nonhierarchical	21-97
■ Hierarchical	21-97
■ Completion Message	21-98
■ Nonhierarchical	21-98
■ Hierarchical	21-98
■ Denial Message	21-98
■ Nonhierarchical	21-98

Contents

■ Hierarchical	21-98
■ Autonomous Message	21-98
■ Explanation Of Parameters	21-99
SECH,TO,DS0A,DS0B,SEC,PCH	21-105
■ Explanation Of Command	21-105
■ Command	21-107
■ Nonhierarchical	21-107
■ Hierarchical	21-107
■ Completion Message	21-108
■ Nonhierarchical	21-108
■ Hierarchical	21-108
■ Denial Message	21-108
■ Nonhierarchical	21-108
■ Hierarchical	21-108
■ Autonomous Message	21-108
■ Explanation Of Parameters	21-109
SECH,TO,RATE,DP,PCH	21-115
■ Explanation Of Command	21-115
■ Command	21-115
■ Nonhierarchical	21-115
■ Hierarchical	21-115
■ Completion Message	21-115
■ Nonhierarchical	21-115
■ Hierarchical	21-116
■ Denial Message	21-116
■ Nonhierarchical	21-116
■ Hierarchical	21-116
■ Autonomous Message	21-116
■ Explanation Of Parameters	21-116

SCNT — SECH

SCNT — SECH

This section documents the commands **SCNT** through **SECH**.

SCNT,RATE,MPTM,MJU,MA

SUBRATE TERMINATED CROSS-CONNECTION

Explanation Of Command

This command performs a subrate terminated multipoint cross-connection of **MJU ssss**.

The master leg of the multipoint circuit (MPTM) is specified by digroup **abc**, channel **ddd**, and customer number **ff**, and serves as the reference for addressing all MJUs and branches in the circuit.

The command inserts the Unassigned multiplexer channel (UMC) code towards both the upstream (MJU) and downstream (branch facility) directions of the cross-connected branch. If a digroup and channel of a customer to be connected to a branch is error corrected, termination takes place after error correction is performed. If no branch field appears in the command, it is denied since there is nothing to terminate.

MJU control legs are not terminated with this command. This includes the control leg of MJU 0001 that is connected to the multipoint master. MJU control legs can be terminated using the STST command. By not terminating control legs, the user can set up a circuit using a mixture of SCNT commands (to connect to terminated branches) and SCON commands (to connect to unterminated or active branches). Also, by not terminating the multipoint master and MJU control legs, transmission to and from the active (not terminated) customers is always preserved.

All channels [s]abcddd and [t]ghijj must be established before they can be cross-connected with SCNT.

Command

Nonhierarchical

[I.19321]

```
SCNT:FRM xy,SEQ ww:[RATE rr,]MPTM [s]abcddd[/ff],MJU ssss\  
[,MA(tttt,u)],<branch>[,<branch>][,<branch>][,<branch>]!
```


Hierarchical

[I.19321]

SCNT:FRM xy,SEQ ww:[RATE rr,]MPTM uvmnpddd[/ff],MJU ssss\
[,MA(tttt,u)],<branch>[,<branch>][,<branch>][,<branch>]!

Completion Message

Nonhierarchical

[O.19321]

M hh:mm:ss xy,ww n[vv] SCNT RATE rr MPTM [s]abcdddd/ff \
MJU ssss 4 LN MSG:
[MA tttt,u]<branch>[<branch>][<branch>][<branch>]
NEW MJU ssss MA {tttt,u|MPTM} s BR1 <data> s BR2 <data> s
BR3 <data> s BR4 <data> s \
COMPL

Hierarchical

[O.19321]

M hh:mm:ss xy,ww n[vv] SCNT RATE rr MPTM uvmnpddd/ff \
MJU ssss 4 LN MSG:
[MA tttt,u]<branch>[<branch>][<branch>][<branch>]
NEW MJU ssss MA {tttt,u|MPTM} s BR1 <data> s BR2 <data> s
BR3 <data> s BR4 <data> s \
COMPL

Denial Message

Nonhierarchical

[O.19321.01]

M hh:mm:ss xy,ww n[vv] SCNT RATE rr MPTM [s]abcdddd/ff \
MJU ssss 3 LN MSG:
[MA tttt,u]<branch>[<branch>][<branch>][<branch>]
<reason> DNY

Hierarchical

[O.19321.01]

M hh:mm:ss xy,ww n[vv] SCNT RATE rr MPTM uvmnpddd/ff \
MJU ssss 3 LN MSG:
[MA tttt,u]<branch>[<branch>][<branch>][<branch>]
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

RATE - Rate

rr - Circuit rate specification (24, 48, 96, or 56)

rr Rate

24	2.4 kilobit/second (kb/s)
48	4.8 kb/s
96	9.6 kb/s
56	56 kb/s

MPTM - Multipoint Master

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number of the multipoint circuit master leg

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical FROM NPC number of the multipoint circuit master leg

uv - Unit number
m - Module number
np - NPC number within the module

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - FROM channel number of the multipoint circuit master leg

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - FROM customer number of the multipoint circuit master leg

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

NEW - New

MJU - Multipoint junction unit

ssss - MJU number of cross-connected MJU (0001-9999)

This command cross-connects MJU ssss to MJU tttt.

s - Termination state of the MJU control or branch leg

Indicates whether either or both ends of the cross-connection are in the terminate and leave state. The "TO" direction is defined as the direction facing the MJU.

<i>s</i>	<i>Explanation</i>
R	RELEASED. Neither side is terminated
F	FROM side is terminated
T	TO side is terminated
B	BOTH sides are terminated

BR1 - Branch 1

BR2 - Branch 2

BR3 - Branch 3

BR4 - Branch 4

MA - Master

tttt - MJU number (0001 through 9999)

u - Branch number (1 through 4)

MA, tttt, and u specify an MJU to MJU connection. MJU tttt branch u is connected to the control leg of MJU ssss.

branch - External facility terminations for branches connected to MJU ssss.

The branch listed in the branch field is connected to the external facility termination, and is left in the terminate and leave state in both directions of transmission. The NEW MJU fields list the resulting cross-connection and terminate and leave status for all connections associated with MJU ssss. Note that the control leg and other branches not named in the SCNT command may be in any of the possible terminate and leave states as a result of previous cross-connect, change, or test access commands.

branch

BRI [t]ghijj[/II]

BR - Branch

i - Branch number of MJU ssss (1 through 4)

[t]ghijj[/II]- External facility termination of added branch

[t]ghi - The 3- or 4-digit nonhierarchical NPC number of termination connected to BRI.

For valid values see [s]abc above.

jij - Channel number of termination connected to BRI.

For valid values see ddd above.

II - Customer number of termination connected to BRI

For valid values see ff above.

data - Branch connection data

<i>data</i>	<i>Explanation</i>
[0]000000/00	Unassigned branch
MJU-nnnn	Branch connected to MJU nnnn (0002 through 9999).

reason - Reason for denial

reason

CHANNEL [s]abctddd IS A PARITY CHANNEL
CUSTOMER NUMBER MUST BE SPECIFIED FOR DS-0B CHANNEL [s]abctddd
CHANNEL [s]abctddd WITH SUBRATE ERROR CORRECTION AND RATE 56 NOT
ALLOWED

CHANNEL [s]abctddd SUBRATE MULTIPLEXER RATE CANNOT SUPPORT
CIRCUIT RATE

CHANNEL [s]abctddd/ff IS CONNECTED BUT NOT AS A MULTIPOINT MASTER
LEG

CHANNEL [s]abctddd/ff IS SPECIFIED MORE THAN ONCE
INVALID CHANNEL NUMBER FOR CHANNEL [s]abctddd

SPECIFIED RATE DOES NOT MATCH EXISTING CIRCUIT RATE
MJU 1 MUST BE SPECIFIED AS THE MULTIPOINT MASTER LEG MJU
CIRCUIT RATE MUST BE SPECIFIED
MA FIELD MUST BE SPECIFIED FOR A NEW MJU
MA FIELD MUST MATCH CIRCUIT
MA FIELD NOT ALLOWED WHEN MJU 1 IS SPECIFIED
MJU NAMED IN MJU AND MA FIELDS CANNOT BE THE SAME
UPSTREAM BRANCH SPECIFIED IN MA FIELD IS ASSIGNED
UPSTREAM BRANCH SPECIFIED IN MA FIELD DOES NOT EXIST

CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS-0A CHANNEL [s]abctddd
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS-0B CHANNEL [s]abctddd
CHANNEL [s]abctddd IS OUT OF RANGE

CHANNEL [s]abctddd/ff IS ASSIGNED

BR i IS ALREADY ASSIGNED TO ANOTHER CHANNEL OR MJU
BR i IS SPECIFIED MORE THAN ONCE

CHANNEL [s]abctddd IS NOT ESTABLISHED TO SUBRATE FEATURE
CIRCUIT IS UNDER TEST

CHANNEL [s]abctddd/ff IS UNDER TEST

NPC [X]abc IS NOT PROVISIONED AS DIGROUP-A OF AN RT
DIGROUP-B ASSOCIATED WITH VIRTUAL CHANNEL [s]abctddd IS
NOT PROVISIONED

DIGROUP-C ASSOCIATED WITH VIRTUAL CHANNEL [s]abctddd IS
NOT PROVISIONED

DIGROUP-D ASSOCIATED WITH VIRTUAL CHANNEL [s]abctddd IS
NOT PROVISIONED

NPC [s]abc IS IN LINE LOOPBACK STATE

Maintenance Conditions

UNIT [q]q IS NOT FACILITY TERMINATING TYPE

TSI sft IS NOT EQUIPPED
CCB sf IS NOT EQUIPPED
ETSI sqq IS NOT EQUIPPED
UNIT [q]q IS NOT EQUIPPED
UNIT [q]q FTMI d IS NOT EQUIPPED
UNIT [q]q FC sb IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED
UNIT [q]q MXR c NOT EQUIPPED

CCNI s IS OUT-OF-SERVICE
TSI sft IS OUT-OF-SERVICE
CCB sf IS OUT-OF-SERVICE
CCI s IS OUT-OF-SERVICE
ETSI sqq IS OUT-OF-SERVICE
UNIT [q]q IS OUT-OF-SERVICE
UNIT [q]q FTMI d IS OUT-OF-SERVICE
UNIT [q]q FC sb IS NOT EQUIPPED
DSPI IN UNIT [q]q IS OUT-OF-SERVICE
NPC [s]abc IS OUT-OF-SERVICE
NPC [s]abc SIDE s IS OUT-OF-SERVICE
UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE

MAINTENANCE CONDITION PREVENTS COMPLETION OF THIS COMMAND
ACTIVE CCN SIDE IS PESTED

CCNI s IS FAILED
TSI sft IS FAILED
CCB sf IS FAILED
CCI s IS FAILED
ETSI sqq IS FAILED
UNIT [q]q IS FAILED
UNIT [q]q FTMI d IS FAILED
UNIT [q]q FC sb IS FAILED
DSPI IN UNIT [q]q IS FAILED
NPC [s]abc IS FAILED
NPC [s]abc SIDE s IS FAILED
UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
UNIT [q]q MIU c IS FAILED

SCNT,RATE,TPT,FROM,TO

SUBRATE TERMINATED CROSS-CONNECTION

Explanation Of Command

This command performs a terminated cross-connection of the FROM and TO subrate customers in both directions. The customer number fields are optional for DS-0A terminations. If not specified, the default value is 01.

Command

Nonhierarchical

[I.19301]

```
SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM [s]abcddd[/ff],\  
TO [t]ghijjj[/ll]!
```

Hierarchical

[I.19301]

```
SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM uvmnpddd[/ff],\  
TO wxkqrjjj[/ll]!
```

Completion Message

Nonhierarchical

[O.19301]

```
M hh:mm:ss xy,ww n[vv] SCNT RATE rr [s]abcddd/ff \  
[t]ghijjj/ll COMPL
```

Hierarchical

[O.19301]

M hh:mm:ss xy,ww n[vv] SCNT RATE rr uvmnpddd/ff wxkqrjjj/ll \
COMPL

Denial Message

Nonhierarchical

[O.19301.01]

M hh:mm:ss xy,ww n[vv] SCNT RATE rr FROM [s]abcdddd/ff \
TO [t]ghijjj/ll 2 LN MSG:
<reason> DNY

Hierarchical

[O.19301.01]

M hh:mm:ss xy,ww n[vv] SCNT RATE rr FROM uvmnpddd/ff \
TO wxkqrjjj/ll 2 LN MSG:
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

RATE - Rate

rr Circuit rate specification (24, 48, 96, or 56)

rr Rate

24 2.4 kilobit/second (kb/s)

48 4.8 kb/s

96 9.6 kb/s

56 56 kb/s

TPT - Two-Point

Retained only for DACS/SRDC compatibility.

FROM - From

TO - To

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - FROM channel number
jjj - TO channel number

001-024 (Domestic)

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - FROM customer number
ll - TO customer number

01 (DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20 (DS0B at 2.4 kb/s)
01-10 (DS0B at 4.8 kb/s)
01-05 (DS0B at 9.6 kb/s)

If [s]abctddd or [t]ghijj is an error corrected channel, termination is performed after error correction is done. Also, this command does not allow the FROM and TO customers to be the same (that is, a looped connection), nor does it allow the use of a semi-colon in place of a comma after the TPT keyword. Both directions of the circuit are terminated with insertion of the Unassigned Multiplexer Channel (UMC) control code.

reason - Reason for denial

Input Errors

reason

CHANNEL [s]abctddd IS A PARITY CHANNEL
CUSTOMER NUMBER MUST BE SPECIFIED FOR DS0B CHANNEL [s]abctddd
CHANNEL [s]abctddd WITH SR ERROR CORRECTION AND RATE 56 NOT ALLOWED
CHANNEL [s]abctddd SR MULTIPLEXER RATE CANNOT SUPPORT CIRCUIT RATE
CUSTOMER NUMBER RANGE NOT ALLOWED FOR DS0A CHANNEL [s]abctddd
CHANNEL RANGE NOT ALLOWED FOR DS0B CHANNEL [s]abctddd
FROM AND TO RANGES ARE NOT THE SAME SIZE
FROM AND TO RANGES PARTIALLY OVERLAP
INVALID CHANNEL NUMBER FOR CHANNEL [s]abctddd
CHANNEL [s]abctddd/ff IS SPECIFIED MORE THAN ONCE
CHANNEL [s]abctddd/ff IS CONNECTED BUT NOT AS A MULTIPOINT MASTER LEG
SPECIFIED RATE DOES NOT MATCH EXISTING CIRCUIT RATE
MJU 1 MUST BE SPECIFIED AS THE MULTIPOINT MASTER LEG MJU
CIRCUIT RATE MUST BE SPECIFIED
MA FIELD MUST BE SPECIFIED FOR A NEW MJU
MA FIELD MUST MATCH CIRCUIT
UPSTREAM BRANCH SPECIFIED IN MA FIELD IS ASSIGNED
UPSTREAM BRANCH SPECIFIED IN MA FIELD DOES NOT EXIST
BR i IS SPECIFIED MORE THAN ONCE
MA FIELD NOT ALLOWED WHEN MJU 1 IS SPECIFIED
MJU NAMES IN MJU AND MA FIELDS CANNOT BE THE SAME
SCNT CANNOT BE SPECIFIED FOR A LOOPED CIRCUIT
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A CHANNEL [s]abctddd
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B CHANNEL [s]abctddd
CHANNEL [s]abctddd IS OUT OF RANGE
[s]abctddd-ff IS AN INVALID RANGE OF CHANNELS
CHANNEL [s]abctddd/ff IS ASSIGNED
BR i IS ALREADY ASSIGNED TO ANOTHER CHANNEL OR MJU
MJU ssss ALREADY EXISTS IN THE CIRCUIT
CHANNEL [s]abctddd IS NOT ESTABLISHED TO SR FEATURE
CHANNEL [s]abctddd/ff IS UNDER TEST

NPC [s]abc IS NOT PROVISIONED AS DIGROUP-A OF AN RT
THE NPC ASSOCIATED WITH VIRTUAL CHANNEL [s]abcd
IS NOT PROVISIONED
NPC [s]abc IS IN LINE LOOPBACK STATE
CIRCUIT IS UNDER TEST

Maintenance Conditions

reason

UNIT [q]q IS NOT FACILITY TERMINATING TYPE
NO DSPU IS EQUIPPED
NO SRM TYPE NPC IS EQUIPPED
NO MJU TYPE NPC IS EQUIPPED
TSI sft IS NOT EQUIPPED
CCB sf IS NOT EQUIPPED
ETSI sqq IS NOT EQUIPPED
UNIT [q]q IS NOT EQUIPPED
UNIT [q]q FTMI d IS NOT EQUIPPED
UNIT [q]q FC s IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED
UNIT [q]q MXR c NOT EQUIPPED
CONNECTION EXCEEDS REMAINING EC CAPACITY
BOTH CCN SIDES ARE OUT-OF-SERVICE
INACTIVE CCN SIDE IN-SERVICE AND NPC ON INACTIVE
SIDE IS OOS
ACTIVE CCN SIDE IS OUT-OF-SERVICE
CCNI s IS OUT-OF-SERVICE
TSI sft IS OUT-OF-SERVICE
CCB sf IS OUT-OF-SERVICE
CCI s IS OUT-OF-SERVICE
ETSI sqq IS OUT-OF-SERVICE
UNIT [q]q IS OUT-OF-SERVICE
UNIT [q]q FTMI d IS OUT-OF-SERVICE
UNIT [q]q FC sb IS OUT-OF-SERVICE
DSPI IN UNIT [q]q IS OUT-OF-SERVICE
NPC [s]abc IS OUT-OF-SERVICE
NPC [s]abc SIDE s IS OUT-OF-SERVICE
UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE
ACTIVE CCN SIDE IS PESTED
MAINTENANCE CONDITION PREVENTS COMPLETION
OF THIS COMMAND
ACTIVE CCN SIDE IS FAILED
CCNI s IS FAILED
TSI sft IS FAILED
CCB sf IS FAILED

CCI s IS FAILED
ETSI sqq IS FAILED
UNIT [q]q IS FAILED
UNIT [q]q FTMI d IS FAILED
UNIT [q]q FC sb IS FAILED
DSPI IN UNIT [q]q IS FAILED
NPC [s]abc IS FAILED
NPC [s]abc SIDE s IS FAILED
UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
UNIT [q]q MIU c IS FAILED

st	d	Explanation
ROLL	{F T B}	Circuit is involved in a roll

SCNT,RATE,TPT,FROM,TO

SUBRATE TERMINATED CROSS-CONNECTION

Explanation Of Command

This command performs a terminated cross-connection of the **FROM** and **TO** customers in both directions.

Command

Nonhierarchical

USAGE: The following applies to a range of DS-0A channels:

[l.19311]

```
SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM [s]abcd-dd-eee[/01],\  
TO [t]ghijjj-kkk[/01]!
```

USAGE: The following applies to a range of DS-0B channels:

[l.19311]

```
SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM [s]abcd-dd/ff-mm,\  
TO [t]ghijjj/ll-nn!
```

Hierarchical

USAGE: The following applies to a range of DS-0A channels:

[l.19311]

```
SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM uvmp-ddd-eee[/01],\  
TO wxkqrjjj-kkk[/01]!
```

USAGE: The following applies to a range of DS-0B channels:

[I.19311]

**SCNT:FRM xy,SEQ ww:RATE rr[,TPT],FROM uvmnpddd/ff-mm,\
TO wxkqrjjj/ll-nn!**

Completion Message

Nonhierarchical

USAGE: The following applies to a range of DS-0A channels:

[O.19311]

**M hh:mm:ss xy,ww n[vv] SCNT RATE rr [s]abcd-dd-eee[/01] \
[t]ghijjj-kkk[/01] COMPL**

USAGE: The following applies to a range of DS-0B channels:

[O.19311]

**M hh:mm:ss xy,ww n[vv] SCNT RATE rr [s]abcd-dd/ff-mm \
[t]ghijjj/ll-nn COMPL**

Hierarchical

USAGE: The following applies to a range of DS-0A channels:

[O.19311]

**M hh:mm:ss xy,ww n[vv] SCNT RATE rr uvmnpddd-eee[/01] \
wxkqrjjj-kkk[/01] COMPL**

USAGE: The following applies to a range of DS-0B channels:

[O.19311]

**M hh:mm:ss xy,ww n[vv] SCNT RATE rr uvmnpddd/ff-mm \
wxkqrjjj/ll-nn COMPL**

Denial Message

Nonhierarchical

USAGE: The following applies to a range of DS-0A channels:

[O.19311.01]

```
M hh:mm:ss xy,ww n[vv] SCNT RATE rr FROM [s]abcd-dd-eee[/01] \
3 LN MSG:
TO [t]ghijjj-kkk[/01] ppp/pp,qqq/qq
<reason> DNY
```

USAGE: The following applies to a range of DS-0B channels:

[O.19311.01]

```
M hh:mm:ss xy,ww n[vv] SCNT RATE rr FROM [s]abcd-dd/ff-mm \
3 LN MSG:
TO [t]ghijjj/ll-nn ppp/pp,qqq/qq
<reason> DNY
```

Hierarchical

USAGE: The following applies to a range of DS-0A channels:

[O.19311.01]

```
M hh:mm:ss xy,ww n[vv] SCNT RATE rr FROM uvmnpddd-eee[/01] \
3 LN MSG:
TO wxqrrjjj-kkk[/01] ppp/pp,qqq/qq
<reason> DNY
```

USAGE: The following applies to a range of DS-0B channels:

[O.19311.01]

```
M hh:mm:ss xy,ww n[vv] SCNT RATE rr FROM uvmnpddd/ff-mm \
3 LN MSG:
TO wxqrrjjj/ff-nn ppp/pp,qqq/qq
<reason> DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters**rr** - Circuit rate (24, 48, 96 or 56)**[s]abc** - The 3- or 4-digit nonhierarchical FROM NPC number**[t]ghi** - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

uv,wx - Unit number

m,k - Module number

np,qr - NPC number within the module

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - FROM channel number
eee - FROM channel number for end of range specified
jjj - TO channel number
kkk - TO channel number for end of range specified

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - FROM customer number
mm - FROM customer number for end of range specified
ll - TO customer number
nn - TO customer number for end of range specified

Customer Number:

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

If a digroup and channel in the range is error corrected, termination takes place after error correction is performed. This command does not allow the FROM and TO customers to be the same (that is, a looped connection).

ppp/pp - FROM channel number/FROM customer number

ppp FROM channel number
pp FROM customer number

qqq/qq - TO channel number/TO customer number

qqq TO channel number
qq TO customer number

reason - *Reason for denial*
reason

CHANNEL [s]abcddd IS A PARITY CHANNEL
CUSTOMER NUMBER MUST BE SPECIFIED FOR DS0B
CHANNEL [s]abcddd
CHANNEL [s]abcddd WITH SR ERROR CORRECTION AND RATE 56
NOT ALLOWED
CHANNEL [s]abcddd SR MULTIPLEXER RATE CANNOT SUPPORT
CIRCUIT RATE
CUSTOMER NUMBER RANGE NOT ALLOWED FOR DS0A
CHANNEL [s]abcddd
CHANNEL RANGE NOT ALLOWED FOR DS0B CHANNEL [s]abcddd
INVALID CHANNEL NUMBER FOR CHANNEL [X]XXXXYY
SCNT CANNOT BE SPECIFIED FOR A LOOPED CIRCUIT
FROM AND TO RANGES ARE NOT THE SAME SIZE
FROM AND TO RANGES PARTIALLY OVERLAP

CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A
CHANNEL [s]abcddd
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B
CHANNEL [s]abcddd
CHANNEL [s]abcddd IS OUT OF RANGE
[X]XXXXYY-FFF IS AN INVALID RANGE OF CHANNELS

CHANNEL [s]abcddd/ff IS ASSIGNED

CHANNEL [s]abcddd IS NOT ESTABLISHED TO SR FEATURE
CHANNEL [s]abcddd/ff IS UNDER TEST
NPC [X]XXX IS NOT PROVISIONED AS DIGROUP-A OF AN RT
THE NPC ASSOCIATED WITH VIRTUAL CHANNEL [X]XXXYYY IS NOT
PROVISIONED
NPC [X]XXX IS IN LINE LOOPBACK STATE

UNIT [q]q IS NOT FACILITY TERMINATING TYPE

NO DSPU IS EQUIPPED
NO SRM TYPE NPC IS EQUIPPED
NO MJU TYPE NPC IS EQUIPPED
TSI sft IS NOT EQUIPPED
CCB sf IS NOT EQUIPPED
ETSI sqq IS NOT EQUIPPED
UNIT [q]q IS NOT EQUIPPED
UNIT [q]q FTMI d IS NOT EQUIPPED
UNIT [q]q FC sb IS NOT EQUIPPED
DSPI IN UNIT [q]q IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED
UNIT [q]q MXR c NOT EQUIPPED

CONNECTION EXCEEDS REMAINING EC CAPACITY

BOTH CCN SIDES ARE OUT-OF-SERVICE
INACTIVE CCN SIDE IN-SERVICE AND NPC ON INACTIVE SIDE
IS OOS
ACTIVE CCN SIDE IS OUT-OF-SERVICE
CCNI s IS OUT-OF-SERVICE
TSI sft IS OUT-OF-SERVICE
CCB sf IS OUT-OF-SERVICE
CCI s IS OUT-OF-SERVICE
ETSI sqq IS OUT-OF-SERVICE
UNIT [q]q IS OUT-OF-SERVICE
UNIT [q]q FTMI d IS OUT-OF-SERVICE
UNIT [q]q FC sb IS OUT-OF-SERVICE
DSPI IN UNIT [q]q IS OUT-OF-SERVICE
NPC [s]abc IS OUT-OF-SERVICE
NPC [s]abc SIDE s IS OUT-OF-SERVICE
UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE
MAINTENANCE CONDITION PREVENTS COMPLETION OF
THIS COMMAND

ACTIVE CCN SIDE IS FAILED
CCNI s IS FAILED
TSI sft IS FAILED
CCB sf IS FAILED
CCI s IS FAILED
ETSI sqq IS FAILED
UNIT [q]q IS FAILED
UNIT [q]q FTMI d IS FAILED
UNIT [q]q FC sb IS FAILED
DSPI IN UNIT [q]q IS FAILED
NPC [s]abc IS FAILED
NPC [s]abc SIDE s IS FAILED
UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
UNIT [q]q MIU c IS FAILED

ACTIVE CCN SIDE IS PESTED

SCON,RATE,MPTM,MJU,MA

SUBRATE CROSS-CONNECTION

Explanation Of Command

This command performs a subrate multipoint cross-connection of the specified MJU. The master leg of the multipoint circuit is specified by digroup and channel and customer number, and serves as the reference for addressing all multipoint junction units and branches in the circuit.

All channels ddd and jjj must be established before they can be cross-connected by this command.

Multipoint circuits are built incrementally, one command at a time. Many commands can address the same multipoint circuit. Indeed, many commands can address the same MJU of a circuit. A command addressing an MJU, say MJU 0005, might connect customers to branches 1 and 2. Another command might also address MJU 0005 and connect a customer to branch 3. This command results in no service interruption to branches 1 and 2 that are already connected.

Command

Nonhierarchical

[I.19221]

```
SCON:FRM xy,SEQ ww:[RATE rr,]MPTM [s]abcddd[/ff],MJU ssss\  
[,MA(tttt,u)]  
[,<branch>][,<branch>][,<branch>][,<branch>]!
```

Hierarchical

[I.19221]

SCON:FRM xy,SEQ ww:[RATE rr,]MPTM uvmnpddd[/ff],MJU ssss\
[,MA(tttt,u)][,<branch>][,<branch>][,<branch>][,<branch>]!

Completion Message

Nonhierarchical

[O.19221]

M hh:mm:ss xy,ww n[vv] SCON RATE rr MPTM [s]abcdddd/ff \
MJU ssss e LN MSG:
[MA tttt,u][<branch>][<branch>][<branch>][<branch>]
NEW MJU ssss MA {tttt,u|MPTM} s BR1 <data> s BR2 <data> s
BR3 <data> s BR4 <data> s \
COMPL

Hierarchical

[O.19221]

M hh:mm:ss xy,ww n[vv] SCON RATE rr MPTM uvmnpddd/ff \
MJU ssss e LN MSG:
[MA tttt,u][<branch>][<branch>][<branch>][<branch>]\
NEW MJU ssss MA {tttt,u|MPTM} s BR1 <data> s BR2 <data> s

Denial Message

Nonhierarchical

[O.19221.01]

M hh:mm:ss xy,ww n[vv] SCON[RATE rr] MPTM [s]abcdddd/ff \
MJU ssss e LN MSG:
[MA tttt,u][<branch>][<branch>][<branch>][<branch>]\
<reason> DNY

Hierarchical

[O.19221.01]

M hh:mm:ss xy,ww n[vv] SCON[RATE rr] MPTM uvmnpddd/ff \
MJU ssss e LN MSG:
[MA tttt,u] [<branch>] [<branch>] [<branch>] \
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

RATE - Rate

rr - Transmission rate (24, 48, 96, or 56)

rr *rate in kb/s*

24	2.4
48	4.8
96	9.6
56	56

rr determines the transmission rate of the customers' cross-connection, and thus, the rate at which the MJU operates. All MJUs in the same circuit must operate at the same rate. The "RATE rr" field must be specified in the first command addressing MJU 0001. "RATE rr" need not be re-specified after it has once been set for MJU 0001. Hence, it is shown as optional. If "RATE rr" is omitted from subsequent commands, any additional MJUs connected will operate at the rate specified for MJU 0001. If "RATE rr" appears in subsequent commands, it will be checked against the rate specified for MJU 0001. If the rates are not the same, the command will be denied.

In addition to assuring that all MJUs in a circuit operate at the same rate, there is an additional check performed on the rate. In circuits that connect customers in DS0B channels, the rate of the MJUs cannot exceed the maximum customer rate of the subrate multiplexers associated with those DS0B channels. The allowed customer numbers used in either the master leg or branch connections depend on the rate of the circuit and the type of DS0B channel associated with each termination, as shown below:

For DS0A channels, rr is checked against the type of error correction previously specified in the SECH command for that channel. Similarly, if the channel has subrate error correction, a circuit rate of 56 is not allowed.

Circuit Rate	DS0B Type		
	20-channel (max. customer rate 2.4 kb/s)	10-channel (max. customer rate 4.8 kb/s)	5-channel (max. customer rate 9.6 kb/s)
RATE 24	Cust. #s 1-20 Allowed	Cust. #s 1-10 Allowed	Cust. #s 1-5 Allowed
RATE 48	Denied	Cust. #s 1-10 Allowed	Cust. #s 1-5 Allowed
RATE 96	Denied	Denied	Cust. #s 1-5 Allowed
RATE 56	Denied	Denied	Denied

MPTM - Multipoint master

[s]abcd[/ff]

- Termination number

There is exactly one multipoint master for a multipoint circuit. The multipoint master termination number is connected to the control leg of MJU 1. MJU 1 must be the first MJU connected in any circuit. This field uniquely identifies the circuit.

The data sent by this multipoint master is broadcast to all branches on the circuit. The data sent to the multipoint master is a summation of data sent by the branches.

Because the multipoint master is used to uniquely identify the circuit as a whole, it is required for all SCON commands, regardless of which MJU the command addresses (MJU ssss in the message format).

The first time a particular termination number is named in a command as a multipoint master, "MJU ssss" must be specified as "MJU 0001". The system will connect the termination to the control leg of MJU 0001. Subsequently, the multipoint master is included in commands addressing an MJU only to identify the circuit to which the MJU belongs.

[s]abc - The 3- or 4-digit nonhierarchical NPC number of the multipoint circuit master leg

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number of the multipoint circuit master leg

uv - Unit number
m - Module number
np - NPC number within the module

The values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit 01-16	Module 1-4	NPC 01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

MJU - Multipoint junction unit

ssss - MJU number addressed by this command (0001 through 9999)

If the MJU being addressed by the SCON command is 0001 (MJU ssss is MJU 0001) then the field "MA(tttt,u)" must not appear in the command (see the explanation of MA(tttt,u) below).

As previously discussed, it must always be connected to the multipoint master termination. The first time an MJU other than 0001 appears in a command, the command must also contain the MJU connection field.

No MJU can be created with an unconnected control leg.

MA - Master

tttt - MJU number (1 through 9999)

u - Branch number (1 through 4)

The master is also known as the control leg. Every MJU has a control leg. The control leg of MJU 0001 must be connected to the multipoint master. The control leg of an MJU other than 0001 must be connected to a branch of another MJU to form an MJU-to-MJU connection. The field MA(tttt,u) specifies the MJU-to-MJU connection. The control leg of MJU ssss is connected to branch u of MJU tttt.

The first command addressing an MJU in the circuit must address MJU 1. Otherwise, a new MJU of any number can be connected to any existing MJU in the circuit, assuming the new MJU's number is not already used in the circuit and the old MJU has an unconnected branch available to connect to.

The MJU connection field "MA(tttt,u)" specifies where to connect the control leg of MJU ssss. If MJU ssss is addressed in a subsequent SCON command, after a connection for its control leg has been specified, the MJU connection field need not be re-specified. Hence, "MA(tttt,u)" appears as an optional field in the message format. If it is respecified, it will be checked against the actual MJU-to-MJU connection.

It should also be noted that tttt cannot equal ssss. Also, branch u of MJU tttt must not have been previously connected. If it were, it could not be connected to the control leg of MJU ssss.

branch - Branch and termination number

branch termination number

BRi [t]ghijj[l]

The termination is connected to branch i of MJU ssss.

One branch field is listed for each branch specified in the input command. Since some multipoint SCON input commands do not list any branch data, this line may be absent.

The branch and termination number can appear from zero to four times in a subrate cross-connect command, connecting up to four different customers to the four branches of MJU ssss. The branch fields for the four branches of MJU ssss can appear in any order and any or all branch fields can be omitted. Nothing is connected to branch fields that are omitted from (do not appear in) the command.

Branch fields might be omitted for several reasons. If branches 1 and 2 of MJU ssss were already connected, and the user wished to connect a customer to branch 3 of MJU ssss, then only BR3 and its associated termination number would appear in the command.

Branches 1 and 2 would not appear because they are already connected and branch 4 would not appear because nothing is to be connected to it. Branch 4 might be saved to provide an MJU-to-MJU connection at a later time.

[t]ghi - The 3- or 4-digit nonhierarchical NPC number of termination connected to BRi with the same valid values as the master leg.

jjj - Channel number of termination connected to BRi with the same valid values as the master leg.

ll - Customer number of termination connected to BRi with the same valid values as the master leg.

If the customer is a DS0A customer, ll is optional and if present, must be 01.

ff - Customer number of the multipoint circuit master leg (1 through 20)

The customer number is optional when the customer to be connected is in a DS0A signal. This is because there is only one customer in a DS0A signal. If specified, it must appear as 01.

BR - Branch

i - Branch number (1 through 4)

BRi refers to branch i of MJU ssss, the MJU addressed by this command.

Red Circuit and Customer Control Marking

SRDC cross-connections are marked automatically as red circuits. This results in the need to specify the INCL keyword in the RMV,NPC command whenever a facility terminating NPC carrying SRDC circuits is removed. Also, the SCON verb does not affect the customer control marking of a channel. The CUS marking is disabled while the channel is established to the Subrate feature, but is returned once the channel is disestablished.

Secondary Channel Capability

This command supports secondary channel capability. Circuits that use DDS secondary channel capability can be assigned to any DS0B channel, provided that the channel's facility terminating NPC was provisioned without zero suppression. If the facility terminating NPC has zero suppression, the user must ensure that secondary channel services are only assigned to the following customers of the given DS0B type:

DS0B nn	Customer Numbers Compatible with Secondary Channel
DS0B 20	2,3,6,8,11,12,13,18
DS0B 10	2,3,6,8
DS0B 5	2,3

ddd - Channel number of the multipoint circuit master leg

001 through 024

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)
 049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
 001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
 025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
 049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
 073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
 001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
 025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
 049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
 073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

01 (DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20 (DS0B at 2.4 kb/s)
01-10 (DS0B at 4.8 kb/s)
01-05 (DS0B at 9.6 kb/s)

wxkqr - Hierarchical NPC number of termination connected to BRi with the same valid values as the master leg.

data - Data

The data fields refer to the connection data associated with the four branch legs of MJU ssss. Each branch data field can take one of three forms, depending on whether the branch is unassigned, cross-connected to an external facility termination, or cross-connected to a cascaded MJU control leg.

<i>data</i>	<i>Explanation</i>
000000/00	For unassigned branches
ghijjj/ll	For branches connected to external facility terminations
MJU nnnn	For branches connected to another MJU with number nnnn (0002 through 9999)

s - Termination state of the MJU control or branch leg

Variable s contained in the MA and branch data indicates the terminate and leave status of each MJU connection. Branches or MJUs connected by the SCON command are automatically assigned the terminate and leave released status. The "TO" direction is defined as the direction facing the MJU.

<i>s</i>	<i>Explanation</i>
R	RELEASED. Neither side is terminated
F	FROM side is terminated
T	TO side is terminated
B	BOTH sides are terminated

reason - Reason for denial

Reason

CHANNEL [s]abctddd IS A PARITY CHANNEL
CUSTOMER NUMBER MUST BE SPECIFIED FOR DS0B CHANNEL [s]abctddd
CHANNEL [s]abctddd WITH SR ERROR CORRECTION AND RATE 56
NOT ALLOWED
CHANNEL [s]abctddd SR MULTIPLEXER RATE CANNOT SUPPORT
CIRCUIT RATE
CUSTOMER NUMBER RANGE NOT ALLOWED FOR DS0A CHANNEL [s]abctddd
CHANNEL RANGE NOT ALLOWED FOR DS-OB CHANNEL [s]abctddd
FROM AND TO RANGES ARE NOT THE SAME SIZE
FROM AND TO RANGES PARTIALLY OVERLAP
INVALID CHANNEL NUMBER FOR CHANNEL [s]abctddd
SPECIFIED RATE DOES NOT MATCH EXISTING CIRCUIT RATE
MJU 1 MUST BE SPECIFIED AS THE MULTIPOINT MASTER LEG MJU
CIRCUIT RATE MUST BE SPECIFIED
CHANNEL [s]abctddd/ff IS CONNECTED BUT NOT AS A
MULTIPOINT MASTER LEG
MA FIELD MUST BE SPECIFIED FOR A NEW MJU
MA FIELD MUST MATCH CIRCUIT
UPSTREAM BRANCH SPECIFIED IN MA FIELD IS ASSIGNED
UPSTREAM BRANCH SPECIFIED IN MA FIELD DOES NOT EXIST
CHANNEL [s]abctddd/ff IS SPECIFIED MORE THAN ONCE
BR i IS SPECIFIED MORE THAN ONCE
MA FIELD NOT ALLOWED WHEN MJU 1 IS SPECIFIED
MJU NAMES IN MJU AND MA FIELDS CANNOT BE THE SAME
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A CHANNEL [s]abctddd
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B CHANNEL [s]abctddd
CHANNEL [s]abctddd IS OUT OF RANGE
CHANNEL [s]abctddd/ff IS ASSIGNED
BR i IS ALREADY ASSIGNED TO ANOTHER CHANNEL OR MJU
MJU ssss ALREADY EXISTS IN THE CIRCUIT
CHANNEL [s]abctddd IS NOT ESTABLISHED TO SR FEATURE
CHANNEL [s]abctddd/ff IS UNDER TEST
NPC [s]abc IS NOT PROVISIONED AS DIGROUP-A OF AN RT
DIGROUP-B ASSOCIATED WITH VIRTUAL CHANNEL [s]abctddd IS
NOT PROVISIONED
DIGROUP-C ASSOCIATED WITH VIRTUAL CHANNEL [s]abctddd IS
NOT PROVISIONED
DIGROUP-D ASSOCIATED WITH VIRTUAL CHANNEL [s]abctddd IS
NOT PROVISIONED
NPC [s]abc IS IN LINE LOOPBACK STATE
CIRCUIT IS UNDER TEST
UNIT [q]q IS NOT FACILITY TERMINATING TYPE
NO DSPU IS EQUIPPED
NO SRM TYPE NPC IS EQUIPPED
NO MJU TYPE NPC IS EQUIPPED
CCNI s IS NOT EQUIPPED
TSI sft IS NOT EQUIPPED
CCB sf IS NOT EQUIPPED
CCI s IS NOT EQUIPPED

ETSI sqq IS NOT EQUIPPED
UNIT [q]q IS NOT EQUIPPED
UNIT [q]q FTMI d IS NOT EQUIPPED
UNIT [q]q FC sb IS NOT EQUIPPED
DSPI IN UNIT [q]q IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED
NPC [s]abc SIDE s IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED
UNIT [q]q MXR c NOT EQUIPPED
CONNECTION EXCEEDS REMAINING MJU CAPACITY
BOTH CCN SIDES ARE OUT-OF-SERVICE
ACTIVE CCN SIDE IS OUT-OF-SERVICE
ACTIVE CCN SIDE IS PESTED
INACTIVE CCN SIDE IN-SERVICE AND NPC [s]abc ON INACTIVE
SIDE IS OOS
CCNI s IS OUT-OF-SERVICE
TSI sft IS OUT-OF-SERVICE
CCB sf IS OUT-OF-SERVICE
CCI s IS OUT-OF-SERVICE
ETSI sqq IS OUT-OF-SERVICE
UNIT [q]q IS OUT-OF-SERVICE
UNIT [q]q FTMI d IS OUT-OF-SERVICE
UNIT [q]q FC sb IS OUT-OF-SERVICE
DSPI IN UNIT [q]q IS OUT-OF-SERVICE
NPC [s]abc IS OUT-OF-SERVICE
NPC [s]abc SIDE s IS OUT-OF-SERVICE
UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
UNIT [q]q MIU c IS FAILED
MAINTENANCE CONDITION PREVENTS COMPLETION OF THIS COMMAND
ACTIVE CCN SIDE IS FAILED
CCNI s IS FAILED
TSI sft IS FAILED
CCB sb IS FAILED
CCI s IS FAILED
ETSI sqq IS FAILED
UNIT [q]q IS FAILED
UNIT [q]q FTMI d IS FAILED
UNIT [q]q FC sb IS FAILED
DSPI IN UNIT [q]q IS FAILED
NPC [s]abc IS FAILED
NPC [s]abc SIDE s IS FAILED
UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
NIT [q]q MIU c IS FAILED

SCON,RATE,TPT,FROM,TO

SUBRATE CROSS-CONNECTION

Explanation Of Command

This command cross-connects the FROM and TO customers defined by the **ff** and **ll** fields. The customer number fields are optional for DS0A terminations; if not specified, the default value is 01.

Command

Nonhierarchical

[I.19201]

```
SCON:FRM xy,SEQ ww:RATE rr[,TPT],FROM [s]abcddd[/ff],\  
TO [t]ghijjj[/ll]!
```

Hierarchical

[I.19201]

```
SCON:FRM xy,SEQ ww:RATE rr[,TPT],FROM uvmnpddd[/ff],\  
TO wxkqrjjj[/ll]!
```

Completion Message

Nonhierarchical

[O.19201]

```
M hh:mm:ss xy,ww n[vv] SCON RATE rr,TPT;[s]abcddd/ff,\  
[t]ghijjj/ll COMPL
```

Hierarchical

[O.19201]

M hh:mm:ss xy,ww n[vv] SCON RATE rr,TPT;uvmnpddd/ff,\
wxkqrjjj/ll COMPL

Denial Message

Nonhierarchical

[O.19201.01]

M hh:mm:ss xy,ww n[vv] SCON RATE rr,TPT;[s]abcdddd/ff,\
[t]ghijjj/ll 2 LN MSG:
<reason> DNY

Hierarchical

[O.19201.01]

M hh:mm:ss xy,ww n[vv] SCON RATE rr,TPT;uvmnpddd/ff,\
wxkqrjjj/ll 2 LN MSG:
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TPT - Two-Point (optional).

Retained only for DACS/SRDC compatibility. The command format above shows that RATE rr and the optional TPT are followed by a comma (.). To preserve DACS/SRDC compatibility, this comma may also be replaced with a semicolon (;).

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number
[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

uv,wx - Unit number

m,k - Module number

np,qr - NPC number within the module

Values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit 01-16	Module 1-4	NPC 01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - FROM channel number
jjj - TO channel number

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - FROM customer number
ll - TO customer number

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

RATE - Rate

Rate at which the FROM and TO customers are cross-connected

rr - Circuit rate (24, 48, 96, or 56)

rr	rate in kb/s
24	2.4
48	4.8
96	9.6
56	56

The channels abcd and ghijkl must be established using a subrate establish command before they can be cross-connected.

The RATE cannot exceed the maximum customer rate of the subrate multiplexers associated with those DS0B channels. The allowed customer numbers (ff and ll) depend on the rate of the circuit and the type of DS0B channel associated with each termination, as shown below:

Circuit Rate rr	DS0B Type		
	20-channel (max. customer rate 2.4 kb/s)	10-channel (max. customer rate 4.8 kb/s)	5-channel (max. customer rate 9.6 kb/s)
RATE 24	Cust. #s 1-20 Allowed	Cust. #s 1-10 Allowed	Cust. #s 1-5 Allowed
RATE 48	Denied	Cust. #s 1-10 Allowed	Cust. #s 1-5 Allowed
RATE 96	Denied	Denied	Cust. #s 1-5 Allowed
RATE 56	Denied	Denied	Denied

The customer numbers ff and ll, are optional when the customer to be connected is in a DS0A signal. This is because there is only one customer in a DS0A signal. If specified, it must appear as 01. Also, for DS0A channels, the RATE is checked against the type of error correction previously specified in the command used to establish that channel. If the channel has subrate error correction, a circuit rate of 56 is not allowed.

The user must ensure that a circuit using the secondary channel capability is assigned only to a facility termination that is compatible with this capability. If the termination is a DS0A or if its associated facility NPC was grown without zero suppression, any assignment of the NEW termination is compatible with the secondary channel capability. If the termination is in a DS0B **and** its associated facility NPC was grown with zero suppression, the user can only assign secondary channel services to a termination with the following customer numbers within the given DS0B type:

DS0B Type	Allowed Customer Numbers
20-channel	2, 3, 6, 8, 11, 12, 13, and 18
10-channel	2, 3, 6, and 8
5-channel	2 and 3

The fields, FROM [s]abcd[ff] and TO [t]ghij[ll] specify the customers to cross-connect. FROM and TO have no significance to DACS II and either customer of the circuit may be designated FROM or TO. To loop a customer back to itself, specify the FROM and TO fields identically.

Subrate cross-connections are marked automatically as red circuits. This results in the need to specify the INCL keyword in the command to remove an NPC whenever a facility terminating NPC carrying SRDC circuits is removed.

Also, the SCON verb does not affect the customer control marking of a channel. The CUS marking is disabled while the channel is established to the Subrate feature, but is returned once the channel is disestablished. The **RATE rr** field indicates the customer rate of the circuit specified in the input command **ff** and **ll** define the customer numbers associated with the FROM and TO channel pair. These fields are optional in the input command for DS0A terminations. If the input command did not specify one or both of these numbers, the output value is 01.

reason - Reason for denial

reason

CHANNEL [s]abcddd IS A PARITY CHANNEL
CUSTOMER NUMBER MUST BE SPECIFIED FOR DS0B CHANNEL [s]abcddd
CHANNEL [s]abcddd SR MULTIPLEXER RATE CANNOT SUPPORT CIRCUIT
RATE
CHANNEL [s]abcddd WITH SR ERROR CORRECTION AND RATE 56 NOT
ALLOWED
INVALID CHANNEL NUMBER FOR CHANNEL [s]abcddd

CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A CHANNEL [s]abcddd
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B CHANNEL [s]abcddd
CHANNEL [s]abcddd IS OUT OF RANGE

CHANNEL [s]abcddd/ff IS ASSIGNED

CHANNEL [s]abcddd IS NOT ESTABLISHED TO THE SR FEATURE
CHANNEL [s]abcddd/ff IS UNDER TEST
DIGROUP-B ASSOCIATED WITH VIRTUAL CHANNEL [s]abcddd IS NOT
PROVISIONED
DIGROUP-C ASSOCIATED WITH VIRTUAL CHANNEL [s]abcddd IS NOT
PROVISIONED
DIGROUP-D ASSOCIATED WITH VIRTUAL CHANNEL [s]abcddd IS NOT
PROVISIONED
NPC [s]abc IS NOT PROVISIONED AS DIGROUP-A OF AN RT
NPC [s]abc IS IN LINE LOOPBACK STATE

NO DSPU IS EQUIPPED
NPC [s]abc IS NOT EQUIPPED
TSI sft IS NOT EQUIPPED
CCB sf IS NOT EQUIPPED
ETSI sqq IS NOT EQUIPPED

UNIT [q]q IS NOT FACILITY TERMINATING TYPE

CONNECTION EXCEEDS REMAINING EC CAPACITY

BOTH CCN SIDES ARE OUT-OF-SERVICE
NO SRM TYPE NPC IS EQUIPPED
NO MJU TYPE NPC IS EQUIPPED
INACTIVE CCN SIDE IN-SERVICE AND NPC ON INACTIVE SIDE IS OOS
ACTIVE CCN SIDE IS OUT-OF-SERVICE
CCNI s IS OUT-OF-SERVICE
TSI sft IS OUT-OF-SERVICE
CCB sf IS OUT-OF-SERVICE
CCI s IS OUT-OF-SERVICE
ETSI sqq IS OUT-OF-SERVICE
DSPI IN UNIT [q]q IS OUT-OF-SERVICE
NPC [s]abc IS OUT-OF-SERVICE
NPC [s]abc SIDE s IS OUT-OF-SERVICE
MAINTENANCE CONDITION PREVENTS COMPLETION OF THIS COMMAND
UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE
UNIT [q]q MXR c NOT EQUIPPED

UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
UNIT [q]q MIU c IS FAILED
ACTIVE CCN SIDE IS FAILED
CCNI s IS FAILED
CCI s IS FAILED
TSI sft IS FAILED
CCB sf IS FAILED
ETSI sqq IS FAILED
DSPI IN UNIT [q]q IS FAILED
NPC [s]abc IS FAILED
NPC [s]abc SIDE s IS FAILED

ACTIVE CCN SIDE IS PESTED

st	d	Explanation
ROLL	{F T B}	Circuit is involved in a roll

SCON,RATE,TPT,FROM,TO

SUBRATE CROSS-CONNECTION

Explanation Of Command

This command cross-connects the FROM and TO customers in both directions. This command also extends the format of I.19201 to support ranges of two-point, two-way cross-connections.

Command

Nonhierarchical

[I.19211]

For a DS0A Channel

```
SCON:FRM xy,SEQ ww:RATE rr,[TPT,]FROM [s]abcd-dd-eee[/01],\  
TO [t]ghijjj-kkk[/01]!
```

For a DS0B Channel

```
SCON:FRM xy,SEQ ww:RATE rr,[TPT,]FROM [s]abcd-dd/ff-mm,\  
TO [t]ghijjj/ll-nn!
```

Hierarchical

[I.19211]

For a DS0A Channel

**SCON:FRM xy,SEQ ww:RATE rr,[TPT,]FROM uvmnpddd-eee[/01],\
TO wxkqrjjj-kkk[/01]!**

For a DS0B Channel

**SCON:FRM xy,SEQ ww:RATE rr,[TPT,]FROM uvmnpddd/ff-mm,\
TO wxkqrjjj/ll-nn!**

Completion Message

Nonhierarchical

USAGE: For range connections of DS0A channels

[O.19211]

**M hh:mm:ss xy,ww n[vv] SCON RATE rr [s]abcd-dd-eee/01 \
[t]ghijjj-kkk/01 COMPL**

USAGE: For range connections of subrate customer numbers

[O.19211]

**M hh:mm:ss xy,ww n[vv] SCON RATE rr [s]abcd-dd-eee/ff-mm \
[t]ghijjj-kkk/ll-nn COMPL**

Hierarchical

USAGE: For range connections of DS0A channels

[O.19211]

**M hh:mm:ss xy,ww n[vv] SCON RATE rr uvmnpddd-eee/01 \
wxkqrjjj-kkk/01 COMPL**

USAGE: For range connections of subrate customer numbers

[O.19211]

**M hh:mm:ss xy,ww n[vv] SCON RATE rr uvmnpddd-eee/ff-mm \
wxkqrjjj-kkk/ll-nn COMPL**

Denial Message

Nonhierarchical

USAGE: For range connections of DS0A channels

[O.19211.01]

M hh:mm:ss xy,ww n[vv] SCON RATE rr FROM [s]abcd-dd-eee/01 \\
3 LN MSG:
TO [t]ghijjj-kkk/01 ppp/pp,qqq/qq
<reason> DNY

USAGE: For range connections of subrate customer numbers

[O.19211.01]

M hh:mm:ss xy,ww n[vv] SCON RATE rr FROM [s]abcd-dd-eee/ff-mm \\
3 LN MSG:
TO [t]ghijjj-kkk/ll-nn ppp/pp,qqq/qq
<reason> DNY

Hierarchical

USAGE: For range connections of DS0A channels

[O.19211.01]

M hh:mm:ss xy,ww n[vv] SCON RATE rr FROM uvmnpddd-eee/01 \\
3 LN MSG:
TO wxkqrjjj-kkk/01 ppp/pp,qqq/qq
<reason> DNY

USAGE: For range connections of subrate customer numbers

[O.19211.01]

M hh:mm:ss xy,ww n[vv] SCON RATE rr FROM uvmnpddd-eee/ff-mm \\
3 LN MSG:
TO wxkqrjjj-kkk/ll-nn ppp/pp,qqq/qq
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

The values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - FROM channel number
eee - FROM channel number for end of range specified
jjj - TO channel number
kkk - TO channel number for end of range specified

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - FROM customer number
mm - FROM customer number for end of range specified
ll - TO customer number
nn - TO customer number for end of range specified

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

RATE - Circuit rate
rr - Circuit rate value (24, 48, 96, or 56)

The FROM and TO fields specify the customers to cross-connect. The FROM and TO keywords have no significance to DACS II and either customer of the circuit may be designated FROM or TO. To loop a range of customers back to themselves, specify the FROM and TO fields identically.

There are two ways to specify ranges, as evidenced by the two formats that may follow the FROM and TO keywords:

- Range specified in channel field: [s]abcd-dd-eee[/01]

Ranges must be specified in the channel field when a range of DS0A customers is desired. However, a range is allowed in the channel field only if the channels are DS0A channels. The optional field must, if present, be 01. As an example, [0]001002-010/01 specifies a range of nine DS0A customers on NPC [0]001. [0]001002-010 does the same thing without the optional customer number field.

- Range specified in customer number field: [s]abcd-dd/ff-mm

Ranges must be specified in the customer number field when a range of DS0B customers is desired. If NPC [0]020, channel 004 was established as a 10-customer DS0B channel, then [0]020004/01-09 specifies a range of nine customers on NPC [0]020 channel 004.

Specifying a range in both the channel and customer number field for the same customer specification, such as [0]001001-009/01-09, will be denied.

RATE - Circuit rate

rr - Circuit rate value (24, 48, 96, 56)

ppp/pp - FROM termination involved in the denial where:

ppp - FROM channel number
pp - FROM customer number

qqq/qq - TO termination involved in the denial where:

qqq - TO channel number
qq - TO customer number

reason - Reason for denial

Input Errors

reason

explanation of error condition code

CHANNEL [s]abcd-dd IS A PARITY CHANNEL

CUSTOMER NUMBER MUST BE SPECIFIED FOR DS0B

CHANNEL [s]abcd-dd

CHANNEL [s]abcd-dd WITH SR ERROR CORRECTION AND RATE 56

NOT ALLOWED
CHANNEL [s]abcddd SR MULTIPLEXER RATE CANNOT SUPPORT
CIRCUIT RATE
CUSTOMER NUMBER RANGE NOT ALLOWED FOR DS0A
CHANNEL [s]abcddd
CHANNEL RANGE NOT ALLOWED FOR DS-OB CHANNEL [s]abcddd
FROM AND TO RANGES ARE NOT THE SAME SIZE
FROM AND TO RANGES PARTIALLY OVERLAP
INVALID CHANNEL NUMBER FOR CHANNEL [s]abcddd
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A
CHANNEL [s]abcddd
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B
CHANNEL [s]abcddd
CHANNEL [s]abcddd IS OUT OF RANGE
[s]abcddd-eee IS AN INVALID RANGE OF CHANNELS
CHANNEL [s]abcddd/ff IS ALREADY ASSIGNED
CHANNEL [s]abcddd IS NOT ESTABLISHED TO SR FEATURE
CHANNEL [s]abcddd/ff IS UNDER TEST
NPC [s]abc IS NOT PROVISIONED AS DIGROUP-A OF AN RT
DIGROUP-B ASSOCIATED WITH VIRTUAL CHANNEL [s]abcddd IS
NOT PROVISIONED
DIGROUP-C ASSOCIATED WITH VIRTUAL CHANNEL [s]abcddd IS
NOT PROVISIONED
DIGROUP-D ASSOCIATED WITH VIRTUAL CHANNEL [s]abcddd IS
NOT PROVISIONED
NPC [s]abc IS IN LINE LOOPBACK STATE

Maintenance Conditions

reason

NO DSPU IS EQUIPPED
NO SRM TYPE NPC IS EQUIPPED
NO MJU TYPE NPC IS EQUIPPED
TSI sft IS NOT EQUIPPED
CCB sf IS NOT EQUIPPED
ETSI sqq IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED
UNIT [q]q MXR c NOT EQUIPPED
UNIT [q]q IS NOT EQUIPPED
UNIT [q]q FTMI d IS NOT EQUIPPED{OUT-OF-SERVICE|FAILED}
UNIT [q]q FC sb IS NOT EQUIPPED
UNIT [q]q IS NOT FACILITY TERMINATING TYPE
CONNECTION EXCEEDS REMAINING EC CAPACITY

BOTH CCN SIDES ARE OUT-OF-SERVICE
INACTIVE CCN SIDE IN-SERVICE AND NPC ON INACTIVE SIDE
IS OOS

ACTIVE CCN SIDE IS OUT-OF-SERVICE
CCNI s IS OUT-OF-SERVICE
TSI sft IS OUT-OF-SERVICE
CCB sf IS OUT-OF-SERVICE
CCI s IS OUT-OF-SERVICE
ETSI sqq IS OUT-OF-SERVICE
DSPI IN UNIT [q]q IS OUT-OF-SERVICE
NPC [s]abc IS OUT-OF-SERVICE
NPC [s]abc SIDE s IS OUT-OF-SERVICE
UNIT [q]q IS OUT-OF-SERVICE
UNIT [q]q FTMI d IS OUT-OF-SERVICE
UNIT [q]q FC sb IS OUT-OF-SERVICE
DSPI IN UNIT [q]q IS OUT-OF-SERVICE
UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE
MAINTENANCE CONDITION PREVENTS COMPLETION OF THIS
COMMAND
ACTIVE CCN SIDE IS FAILED
ACTIVE CCN SIDE IS PESTED
CCNI s IS FAILED
TSI sft IS FAILED
CCB sf IS FAILED
CCI s IS FAILED
ETSI sqq IS FAILED
DSPI IN UNIT [q]q IS FAILED
NPC [s]abc IS FAILED
NPC [s]abc SIDE s IS FAILED
UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
UNIT [q]q MIU c IS FAILED
UNIT [q]q IS FAILED
UNIT [q]q FTMI d IS FAILED
UNIT [q]q FC sb IS FAILED
DSPI IN UNIT [q]q IS FAILED

SDCH,TO,PCH,DCC

SUBRATE DISESTABLISH CHANNEL

Explanation Of Command

This message disconnects a channel (or a range of channels) in a digroup from use by the subrate feature. If an error correction parity channel is associated with the named channel and is *not* named in the input command, the system automatically finds and disestablishes it as well. However, one should not take this to imply that the parity channel may be disconnected in a range, since this is not the case.

Command

Nonhierarchical

[I.19151]

SDCH:FRM xy,SEQ ww:TO [s]abcddd[-eee][,PCH[ppp]][,DCC]!

Hierarchical

[I.19151]

SDCH:FRM xy,SEQ ww:TO uvmnpddd[-eee][,PCH[ppp]][,DCC]!

Completion Message

Nonhierarchical

[O.19151]

**M hh:mm:ss xy,ww n[vv] SDCH [s]abcddd[-eee] [PCH ppp][DCC]\
[OOS] COMPL**

Hierarchical

[O.19151]

M hh:mm:ss xy,ww n[vv] SDCH uvmnpddd[-eee] [PCH ppp][DCC]\
[OOS] COMPL

Denial Message

Nonhierarchical

[O.19151.01]

M hh:mm:ss xy,ww n[vv] SDCH [s]abcddd[-eee][PCH[ppp]][DCC] 2 LN MSG:
<reason> DNY

Hierarchical

[O.19151.01]

M hh:mm:ss xy,ww n[vv] SDCH uvmnpddd[-eee][PCH[ppp]][DCC] 2 LN MSG:
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number
eee - Channel number for end of range specified

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

PCH - Parity Channel

ppp - Parity error correction channel number

Included only for downward compatibility with the equivalent DACS/Subrate command. The PCH field indicates that a parity channel associated with channel ddd is to be disestablished as well.

If the PCH field is not used and a parity channel is present, the system automatically finds and disestablishes the parity channel associated with channel ddd.

ppp must agree with the parity channel assignment associated with channel ddd or the command will be denied. Channel ranges are not allowed if the range includes any channel associated with parity channel error correction.

Note: Disestablishment can only be done after all Subrate cross-connections are disconnected.

DCC - Disconnect Code

Causes the Digital Data System (DDS) Unassigned Multiplexer Channel (UMC) control code to be inserted in the disestablished channel(s) towards the digroup facility. If DDC is not specified, the disconnect code specified in the growth NPC command associated with the specified digroup is used.

OOS - Out of service

Channels connected with an out-of-service facility NPC may be disestablished with this command. Such disestablishments require no special keyword in the input command, but the output message will contain the OOS keyword to indicate that the facility is out-of-service. The user should note that the appropriate disconnect channel code may not be inserted in the disestablished channel until the facility is restored to service under these conditions.

CUS - Customer

Customer-controlled circuit

This disestablish command returns the customer control marking of channels that were previously marked with as CUS prior to being established to the Subrate feature.

The optional **PCH ppp** field appears whenever an associated error correction parity channel is also disestablished. It is not necessary for this field to be included in the input command, as the system automatically locates and disestablishes the parity channel whenever the associated data channel is disestablished.

If a problem is found within a range of channels, then no channel is completed. Also, the user should note that the first problem found within a range of channels stops the search for additional problems within that range, thus subsequent channels may or may not have additional problems.

reason - Reason for denial

INPUT ERRORS

reason

CHANNEL NUMBER IS OUT OF RANGE FOR NPC TYPE SPECIFIED
SPECIFIED CHANNEL IS NOT ESTABLISHED TO THE SUBRATE
SPECIFIED CHANNEL HAS NO ASSOCIATED PARITY CHANNEL
SPECIFIED DATA AND PARITY CHANNEL NUMBERS ARE INCONSISTENT
RANGE DISCONNECT OF CHANNEL WITH PCH IS NOT ALLOWED
CHANNEL [s]abcddd OR A CUSTOMER IS UNDER TEST
RANGE DISESTABLISH OF DATA CH [s]abcddd HAVING PCH IS NOT
ALLOWED
ACTIVE SUBRATE CROSS-CONNECTS ARE PRESENT ON THE CHANNEL

MAINTENANCE CONDITIONS

reason

ACTIVE CROSS-CONNECT NETWORK SIDE IS FAILED
SPECIFIED NPC IS UNEQUIPPED
REQUIRED UNIT NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED CCB NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED TSI NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED ETSI NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED FTMI NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED FC NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED DSPi NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED SUBRATE PACK NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED SRM NOT EQUIPPED, NOT IN SERVICE, OR FAILED

DS3U reasons for denial

reason

UNIT [q]q MXR c NOT EQUIPPED
UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE
UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
UNIT [q]q MIU c IS FAILED

st	d	Explanation
ROLL	{F T B}	Circuit is involved in a roll

SDIS,RATE,MPTM,MJU

SUBRATE DISCONNECTION

Explanation Of Command

This command provides multipoint branch disconnection of customers in both directions. All channels must have been cross-connected using the **SCON** or **SCNT** commands before they can be disconnected with **SDIS**. It is used to disconnect customers from the branches of a multipoint junction unit (MJU). The MJU itself remains connected to the circuit. As many as four branches can be disconnected from an MJU with one command. This command *cannot* be used to disconnect MJUs or branches that are cascaded to additional MJUs. To disconnect MJUs and branches, see **SDIS : RATE,MPTM,MJU,ALL**

Multipoint circuits can be disconnected incrementally, one command at a time. Many commands can address the same multipoint circuit. Indeed, many commands can address the same MJU of a circuit. A command might address an MJU, say MJU 0005 which has branches 1, 2, 3, and 4 connected, and disconnect customers from branches 1 and 2. This command results in no service interruption to branches 3 and 4 which are still connected. Another command might also address MJU 0005 and disconnect the customer from branch 3, leaving branch 4 undisturbed.

Red Circuit and Customer Control Marking

Subrate cross-connections are automatically marked as red circuits. Removal (RMV) of a facility terminating NPC with Subrate circuits connected to it requires the INCL keyword.

The **SDIS** action does not affect the customer control marking of a channel. The CUS marking is disabled while the channel is established to the Subrate feature, but is enabled once the channel is disestablished.

Once customers are disconnected, the UMC code is sent towards the customers' facilities. Disconnected customers do not require a re-establishment (**SECH**) of their channels before being re-connected (**SCON** or **SCNT**).

The master leg of the multipoint circuit (MPTM) is specified by digroup abc, channel ddd,

customer number ff, and serves as the reference for addressing all MJUs and branches in the circuit. At least one branch must be specified with its corresponding external facility termination data.

Command

Nonhierarchical

[I.19421]

SDIS:FRM xy,SEQ ww:[RATE rr,]MPTM [s]abcddd[/ff],MJU ssss,\
<branch>[,<branch>][,<branch>][,<branch>]!

Hierarchical

[I.19421]

SDIS:FRM xy,SEQ ww:[RATE rr,]MPTM uvmnpddd[/ff],MJU ssss,\
<branch>[,<branch>][,<branch>][,<branch>]!

Completion Message

Nonhierarchical

[O.19421]

M hh:mm:ss xy,ww n[vv] SDIS RATE rr MPTM [s]abcddd/ff \
MJU ssss 4 LN MSG:
BRi [t]ghijjj/ll[<branch>][<branch>][<branch>]
NEW MJU ssss MA {tttt,u|MPTM} s BR1 <data> s BR2 <data> s
BR3 <data> s BR4 <data> s \
[OOS]COMPL

Hierarchical

[O.19421]

M hh:mm:ss xy,ww n[vv] SDIS RATE rr MPTM uvmnpddd/ff \
MJU ssss 4 LN MSG:
BRi wxkqrjjj/ll[<branch>][<branch>][<branch>]
NEW MJU ssss MA {tttt,u|MPTM} s BR1 <data> s BR2 <data> s
BR3 <data> s BR4 <data> s \
[OOS]COMPL

Denial Message

Nonhierarchical

[O.19421.01]

M hh:mm:ss xy,ww n[vv] SDIS[RATE rr] MPTM [s]abcddd/ff \
MJU ssss 3 LN MSG:
BRi[[t]ghijjj/ll][<branch>][<branch>][<branch>]
<reason> DNY

Hierarchical

[O.19421.01]

M hh:mm:ss xy,ww n[vv] SDIS[RATE rr] MPTM uvmnpddd/ff \
MJU ssss 3 LN MSG:
BRi[wxqrrjjj/ll][<branch>][<branch>][<branch>]
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number of the master leg

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical FROM NPC number of the master leg

The allowable values are presented below:

uv - Unit number
m - Module number
np - NPC number within the module

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number of the multipoint circuit master leg

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - Customer number of the multipoint circuit master leg (1 through 20)

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

RATE - Rate

rr - Circuit rate (24, 48, 56, or 96).

RATE rr is always optional on an **SDIS**. rr specifies the rate at which customers are cross-connected, and thus, the rate at which MJUs operate. All MJUs in the same circuit operate at the same rate. If specified, RATE rr will be checked, and must be the same rate as originally appeared in the **SCON** or **SCNT** command. If it is not the same, the **SDIS** command will be denied.

MPTM - Multipoint master

[s]abcd[ff]

- The **NPC**, channel, and optional customer number connected to the control leg of MJU 1.

This field is used to identify the circuit as a whole. There is exactly one multipoint master for a multipoint circuit.

The data sent BY the multipoint master is broadcast to all branches on the circuit. The data sent TO the multipoint master is a summation of data sent by the branches.

The customer number, ff, is optional when the customer is in a DS0A channel because there is only one customer in a DS0A channel. If specified, it must appear as 01.

A customer number is required when specifying a customer in a DS0B signal. Allowed customer numbers differ depending on the type of DS0B channel, as shown below.

<i>DS0B nn</i>	<i>Allowed Subrate Customer Numbers</i>
DS0B 20	1 through 20
DS0B 10	1 through 10
DS0B 5	1 through 5

Because the multipoint master is used to uniquely identify the circuit as a whole, it is required for all **SDIS** commands, regardless of which MJU the command addresses (MJU ssss in the message formats above).

MJU - Multipoint junction unit

ssss - MJU number of cross-connected MJU (0001-9999)

MJU ssss identifies the MJU that the command addresses. All MJUs are given a number, ssss, when the circuit is built with the **SCON** or **SCNT** commands. This number should be used in the **SDIS** command to address an MJU.

branch - External facility termination for branch connected to MJU ssss

branch	<i>Explanation</i>
BRi [[t]ghijj[/ll]]	Nonhierarchical branch and termination identification (see BRi [t]ghijj/ll below)
BRi [wxkqrjjj/ll]	Hierarchical branch and termination identification (see BRi wxkqrjjj/ll below)

The termination part of the branch is optional since the system knows what customer is connected to MJU ssss branch i.

The branch field identifies a branch that will be disconnected from the customer connected to it. If the customer is a DS0A customer, the customer number is optional and, if present, must be 01. If the NPC and channel numbers are specified for a DS0B customer the customer number is required.

From one to four branches can be specified in an **SDIS** command; disconnecting up to four customers from the four branches of an MJU. At least one branch must be specified. A maximum of four branches is allowed. The <branch> fields can appear in any order. Nothing is disconnected from branches that are not specified in the command.

Branch fields might be omitted for several reasons. Suppose branches 1, 2, and 3 of MJU ssss are connected with branch 4 unconnected. If the user wished to disconnect only the customer from branch 3, then only **BR3 [[t]ghijj[/ll]]** would appear in the command. Branches 1 and 2 would not appear because the user does not want to disconnect them. Branch 4 would not appear because there is no customer to disconnect.

If an unconnected branch, like branch 4, is specified in an **SDIS** command, the command will be denied.

BRi [t]ghijj/ll

- Nonhierarchical termination number connected to branch
i of MJU ssss

BRi wxkqrjjj/ll

- Hierarchical termination number connected to branch i of MJU ssss

BR	- Branch
i	- Branch number of MJU ssss (1 through 4)
[t]ghi	- The 3- or 4-digit nonhierarchical NPC number of termination connected to BRi

wxkqr	- Hierarchical NPC number of termination connected to BRi.
jjj	- Channel number of termination connected to BRi
ll	- Customer number of termination connected to BRi
NEW	- New
BR1	- Branch 1
BR2	- Branch 2
BR3	- Branch 3
BR4	- Branch 4
data	- Branch connection data upon completion of the branch disconnection
data	<i>Explanation</i>
[0]000000/00	Nonhierarchical format for unassigned branch
00000000/00	Hierarchical format for unassigned branch
[t]ghijj/ll	Nonhierarchical format for branch connected to an external facility termination
wxkqrjjj/ll	Hierarchical format for branch connected to an external facility termination
MJU nnnn (0002 through 999)	Branch connected to MJU number nnnn
tttt	- MJU number connected to control leg of MJU ssss (0001 through 9999)
u	- Branch number of MJU tttt (1 through 4)
s	- Termination state of the MJU control or branch leg
	Indicates the terminate and leave state of one or both ends of the cross-connection. The "TO" direction is defined as the direction facing the MJU.
s	<i>Explanation</i>
F	FROM (FROM side is terminated)
T	TO (TO side is terminated)
B	BOTH (BOTH sides are terminated)
R	RELEASED (Neither side is terminated)

MA - Master

MA identifies the upstream MJU number and branch connected to the control leg of MJU ssss. In the case of MJU 1, the control leg is actually the master leg of the circuit and is indicated in the MA field by MPTM.

OOS - Out-of-service

OOS appears in the output whenever the disconnection involves an out-of-service or failed facility termination NPC. In this case, the user should note that the Unassigned Multiplexer Channel (UMC) code may not be inserted towards the facilities of the disconnected circuit until the facility is restored to service.

reason - Reason for denial

reason

CHANNEL [s]abcddd IS A PARITY CHANNEL
CUSTOMER NUMBER MUST BE SPECIFIED FOR
DS0B CHANNEL [s]abcddd
CHANNEL [s]abcddd/FF IS CONNECTED BUT NOT
AS A MULTIPOINT MASTER LEG
CHANNEL [s]abcddd/ff IS IS SPECIFIED MORE
THAN ONCE
INVALID CHANNEL NUMBER FOR CHANNEL
[X]XXXXYY
SPECIFIED RATE DOES NOT MATCH EXISTING
CIRCUIT RATE
BR i IS SPECIFIED MORE THAN ONCE
BR i IS CONNECTED TO A DOWNSTREAM MJU
MJU ssss DOES NOT EXIST IN THE CIRCUIT
BR i IS NOT CONNECTED AS SPECIFIED

CUSTOMER NUMBER ff IS OUT OF RANGE FOR
DS0A CHANNEL [s]abcddd
CUSTOMER NUMBER ff IS OUT OF RANGE FOR
DS0B CHANNEL [s]abcddd
CHANNEL [s]abcddd IS OUT OF RANGE
[X]XXXXYY-FFF IS AN INVALID RANGE OF
CHANNELS

BR i IS UNASSIGNED
CHANNEL [s]abcddd/ff IS UNASSIGNED

CHANNEL [s]abcddd IS NOT ESTABLISHED TO SR
FEATURE
CHANNEL [s]abcddd/ff IS UNDER TEST
NPC [X]XXX IS NOT PROVISIONED AS DIGROUP-A
OF AN RT
THE NETWORK PROCESSING CIRCUIT ASSOCIATED
WITH VIRTUAL CHANNEL [X]XXXYYY IS
NOT PROVISIONED
NPC [X]XXX IS IN LINE LOOPBACK STATE
CIRCUIT IS UNDER TEST

TSI sft IS NOT EQUIPPED
CCB sf IS NOT EQUIPPED
ETSI sqq IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED
UNIT [q]q IS NOT EQUIPPED
UNIT [q]q FTMI d IS NOT EQUIPPED
UNIT [q]q FC sb IS OUT-OF-SERVICE
UNIT [q]q MXR c NOT EQUIPPED

UNIT [q]q IS NOT FACILITY TERMINATING TYPE

BOTH CCN SIDES ARE OUT-OF-SERVICE
ACTIVE CCN SIDE IS OUT-OF-SERVICE
CCNI s IS OUT-OF-SERVICE
TSI sft IS OUT-OF-SERVICE
CCB sf IS OUT-OF-SERVICE
CCI s IS OUT-OF-SERVICE
ETSI sqq IS OUT-OF-SERVICE
UNIT [q]q IS OUT-OF-SERVICE
UNIT [q]q FTMI d IS OUT-OF-SERVICE
UNIT [q]q FC sb IS OUT-OF-SERVICE
DSPI IN UNIT [q]q IS OUT-OF-SERVICE
NPC [s]abc IS OUT-OF-SERVICE
NPC [s]abc SIDE s IS OUT-OF-SERVICE
UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE

ACTIVE CCN SIDE IS FAILED
ACTIVE CCN SIDE IS PESTED
CCNI s IS FAILED
TSI sft IS FAILED
CCB sf IS FAILED
CCI s IS FAILED
ETSI sqq IS FAILED
UNIT [q]q IS FAILED
UNIT [q]q FTMI d IS FAILED
UNIT [q]q FC sb IS OUT-OF-SERVICE
DSPI IN UNIT [q]q IS FAILED
NPC [s]abc SIDE s IS FAILED
UNIT [q]q FLI k IS FAILED
U:g/NIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
UNIT [q]q MIU c IS FAILED

SDIS,RATE,MPTM,MJU,ALL

SUBRATE DISCONNECTION

Explanation Of Command

This command provides deletion of MJUs and disconnection of customers in both directions. Customers must have been cross-connected (using the **SCON** or **SCNT** verbs) before they can be disconnected with **SDIS**. This command performs a cascaded MJU disconnection. The **MJU ssss** field identifies the place to begin the disconnection. **MJU ssss** as well as any MJUs cascaded from it will be disconnected. A maximum of 21 MJUs can be disconnected in one command. Message Number I.19421 only disconnects customers from branches of MJUs.

Command

Nonhierarchical

[I.19431]

**SDIS:FRM xy,SEQ ww:[RATE rr,]MPTM [s]abcddd[/ff],MJU ssss \
[,ALL]!**

Hierarchical

[I.19431]

**SDIS:FRM xy,SEQ ww:[RATE rr,]MPTM uvmnpddd[/ff],MJU ssss \
[,ALL]!**

Completion Message

Nonhierarchical

[O.19431]

M hh:mm:ss xy,ww n[vv] SDIS RATE rr MPTM [s]abcddd/ff \
MJU ssss[ALL] e LN MSG:
OLD MJU ssss MA {tttt,u|MPTM } s BR1 <data> s BR2 <data> s
BR3 <data> s BR4 <data> s
<Two data lines for each additional disconnected OLD MJU (see \
below)> EOM

.
.
.

M hh:mm:ss xy,ww n[vv] SDIS RATE rr MPTM [s]abcddd/ff \
MJU ssss[ALL] e LN MSG:
OLD MJU vvvv MA wwwv,x s BR1 <data> s BR2 <data> s
BR3 <data> s BR4 <data> s

.
.
.

NEW MJU tttt MA {yyyy,z|MPTM } s BR1 <data> s BR2 <data> s
BR3 <data> s BR4 <data> s\
[OOS]COMPL

Hierarchical

[O.19431]

M hh:mm:ss xy,ww n[vv] SDIS RATE rr MPTM uvmnpddd/ff \
MJU ssss[ALL] e LN MSG:
OLD MJU ssss MA {tttt,u|MPTM } s BR1 <data> s BR2 <data> s
BR3 <data> s BR4 <data> s
<Two data lines for each additional disconnected OLD MJU (see \
below)> EOM

.
.
.

```
M hh:mm:ss xy,ww n[vv] SDIS RATE rr MPTM uvmnpddd/ff \
MJU ssss[ ALL] e LN MSG:
OLD MJU vvvv MA www,x s BR1 <data> s BR2 <data> s
                        BR3 <data> s BR4 <data> s
.
.
.
NEW MJU tttt MA {yyyy,z|MPTM } s BR1 <data> s BR2 <data> s
                        BR3 <data> s BR4 <data> s\
[OOS ]COMPL
```

Denial Message

Nonhierarchical

[O.19431.01]

```
M hh:mm:ss xy,ww n[vv] SDIS[ RATE rr] MPTM [s]abcdddd/ff \
MJU ssss[ ALL] e LN MSG:
[OLD MJU ssss MA {tttt,u|MPTM } s BR1 <data> s BR2 <data> s]
[ BR3 <data> s BR4 <data> s]
<reason> DNY
```

Hierarchical

[O.19431.01]

```
M hh:mm:ss xy,ww n[vv] SDIS[ RATE rr] MPTM uvmnpddd/ff \
MJU ssss[ ALL] e LN MSG:
[OLD MJU ssss MA {tttt,u|MPTM } s BR1 <data> s BR2 <data> s]
[ BR3 <data> s BR4 <data> s]
<reason> DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

e - Number of lines in the message

RATE - Rate

rr - Circuit rate (24, 48, 96, 56)

The optional RATE rr field specifies the rate at which customers are cross-connected, and thus, the rate at which MJUs operate. All MJUs in the same circuit operate at the same rate. If specified, rr will be checked and must be the same rate as given in the SCON or SCNT command. If it is not the same, the SDIS command will be denied.

MPTM - Multipoint master

The NPC, channel, and optional customer number of the external facility termination connected to the control leg of MJU 1. There is exactly one multipoint master for a multipoint circuit. This field is used to identify the circuit as a whole. The data sent by this multipoint master is broadcast to all branches on the circuit. The data sent to the multipoint master is a summation of data sent by the branches.

The multipoint master is required for all SDIS commands, since it uniquely identifies the circuit, regardless of which MJU the command addresses (MJU ssss in the INPUT FORMATS).

[s]abc - The 3- of 4-digit nonhierarchical NPC number of the multipoint circuit master leg

The allowable values are presented below:

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number of the multipoint circuit master leg

uv - Unit number
m - Module number
np - NPC number within the module

The allowable values are presented below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number of the multipoint circuit master leg

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - Customer number of the multipoint circuit master leg (1 through 20)

ff is optional when the customer is in a DS0A channel because there is only one customer in a DS0A channel. If specified, it must appear as 01.

ff is required when specifying a customer in a DS0B signal. Allowed customer numbers differ depending on the type of DS0B channel, as shown below.

<i>DS0B nn</i>	<i>Allowed Subrate Customer Numbers</i>
DS0B 20	1 through 20
DS0B 10	1 through 10
DS0B 5	1 through 5

ff *Explanation*

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

NEW - New

The lines in the output message associated with the NEW keyword list the new connection data for the just-upstream MJU after the disconnection of the control leg of MJU ssss. These cross-connections remain in effect after completion of the disconnect. If the disconnected MJU ssss is MJU 1, the NEW MJU fields are filled with zeroes, indicating that no MJUs remain in the circuit.

OLD - Old

The lines in the output message associated with the OLD keyword list all of the disconnected MJUs and branches associated with MJU ssss. This includes the branch data of MJU ssss, as well as the data for up to twenty additional MJUs that may have been cascaded from MJU ssss and its associated downstream connections.

MJU - Multipoint junction unit

ssss - MJU number of disconnected MJU (0001 through 9999)

ssss identifies the MJU at which to begin the disconnection. Leading zeros are not required when specifying ssss. All MJUs are given a number, ssss, when the circuit is built with the SCON or SCNT commands. This number should be used in the SDIS command to choose the MJU at which to begin the disconnection. The maximum number of MJUs that can be disconnected with a single command is 21. If there are more than 20 MJUs cascaded (connected directly or indirectly) to MJU ssss, the command will be denied. If by specifying ssss, 21 or fewer MJUs will be disconnected, the control leg of MJU ssss will be disconnected as will everything cascaded from the branches of MJU ssss. If the multipoint circuit is composed of 21 or fewer MJUs and ssss is specified as 0001, the entire multipoint circuit is disconnected.

ALL - All

If ALL is not specified, all the branches of MJU ssss must be unconnected. Then, MJU ssss and its control leg will be disconnected.

If ALL is specified, it denotes that MJU ssss, its control leg, and everything connected directly or indirectly to the branches of MJU ssss will be disconnected.

ALL appears in the output message only if present in the input command, and is normally used whenever the disconnection of MJU ssss also results in the disconnection of its branches from external facility terminations or cascaded MJUs.

MA - Master

The MA keyword identifies the upstream MJU number and branch connected to the control leg of MJU ssss. In the case of MJU 1, the control leg is actually the master leg of the circuit and is indicated in the MA field by MPTM.

tttt - MJU number connected to control leg of MJU ssss (0001 through 9999)
u - Branch number of MJU tttt (1 through 4)

vvvv - MJU number of additional cascaded MJUs (0002 through 9999)

wwwv - MJU number connected to control leg of MJU vvvv
x - Branch number of MJU connected to control leg of MJU vvvv

yyyy - MJU number connected to control leg of MJU tttt
z - Branch number of MJU connected to control leg of MJU tttt

BR1 - Branch 1

BR2 - Branch 2

BR3 - Branch 3

BR4 - Branch 4

The BRi <data> fields refer to the connection data associated with the four branch legs of MJU ssss. Each branch data field can take one of three forms, depending on whether the branch is unassigned, cross-connected to an external facility termination, or cross-connected to a cascaded MJU control leg.

data - Branch connection data in the form:

data	<i>Explanation</i>
[0]000000/00	- Nonhierarchical format for unassigned branches
[t]ghijjj/ll	- Nonhierarchical format for branches connected to external facility terminations
00000000/00	- Nonhierarchical format for unassigned branches
wxkqrjjj/ll	- Nonhierarchical format for branches connected to external facility terminations
MJU nnnn	- For branches connected to another MJU with number nnnn (0002 through 9999)

s - Termination state of the MJU control or branch leg

Indicates whether either or both ends of the cross-connection are in the terminate and leave state. The "TO" direction is defined as the direction facing the MJU.

s Explanation

R Released. Neither side is terminated
F FROM side is terminated
T TO side is terminated
B BOTH sides are terminated

OOS - Out-of-service

If the disconnected facilities are associated with one or more OOS facility terminating NPCs, the OOS keyword appears in the output message. In this case, the user should note that the Unassigned Multiplexer Channel (UMC) code may not be inserted towards the facilities of the disconnected circuits until they are restored to service.

reason - Reason for denial

reason

CHANNEL [s]abcddd IS NOT ESTABLISHED TO SR
FEATURE
CHANNEL [s]abcddd IS A PARITY CHANNEL
CUSTOMER NUMBER ff IS OUT OF RANGE FOR
DS0A CHANNEL [s]abcddd
CUSTOMER NUMBER MUST BE SPECIFIED FOR
DS0B CHANNEL [s]abcddd
CUSTOMER NUMBER ff IS OUT OF RANGE FOR
DS0B CHANNEL [s]abcddd
CHANNEL [s]abcddd/FF IS CONNECTED BUT NOT
AS A MULTIPOINT MASTER LEG
CHANNEL [s]abcddd/ff IS UNDER TEST
CHANNEL [s]abcddd/ff IS UNASSIGNED
CHANNEL [s]abcddd IS OUT OF RANGE

NPC [X]XXX IS NOT PROVISIONED AS DIGROUP-A
OF AN RT
THE NPC ASSOCIATED WITH VIRTUAL CHANNEL
[X]XXXXYY IS
NOT PROVISIONED
INVALID CHANNEL NUMBER FOR CHANNEL
[X]XXXXYY
[X]XXXXYY-FFF IS AN INVALID RANGE OF
CHANNELS
NPC [X]XXX IS IN LINE LOOPBACK STATE
MJU ssss DOES NOT EXIST IN THE CIRCUIT
NUMBER OF DISCONNECTED MJUS EXCEEDS
THE LIMIT OF 21
SPECIFIED RATE DOES NOT MATCH EXISTING
CIRCUIT RATE
CIRCUIT IS UNDER TEST
CONNECTED BRANCHES ARE PRESENT AND
THE ALL KEYWORD IS NOT SPECIFIED

BOTH CCN SIDES ARE OUT-OF-SERVICE
ACTIVE CCN SIDE IS {OUT-OF-SERVICE|FAILED
|PESTED}
UNIT [q]q IS NOT FACILITY TERMINATING TYPE
CCNI s IS {OUT-OF-SERVICE|FAILED}
TSI sft IS {NOT EQUIPPED|OUT-OF-SERVICE
|FAILED}
CCB sf IS {NOT EQUIPPED|OUT-OF-SERVICE
|FAILED}
CCI s IS {OUT-OF-SERVICE|FAILED}
ETSI sqq IS {NOT EQUIPPED|OUT-OF-SERVICE
|FAILED}
UNIT [q]q IS {NOT EQUIPPED|OUT-OF-SERVICE
|FAILED}
UNIT [q]q FTMI d IS {NOT EQUIPPED
|OUT-OF-SERVICE|FAILED}
UNIT [q]q FC sb IS {NOT EQUIPPED
|OUT-OF-SERVICE|FAILED}
DSPI IN UNIT [q]q IS {OUT-OF-SERVICE|FAILED}
NPC [s]abc IS NOT EQUIPPED
NPC [s]abc SIDE s IS {OUT-OF-SERVICE|FAILED}
MAINTENANCE CONDITION PREVENTS
COMPLETION OF THIS COMMAND

DS3U related errors

UNIT [q]q MXR c NOT EQUIPPED

UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE

UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
UNIT [q]q MIU c IS FAILED

SDIS,RATE,TPT,FROM,TO

SUBRATE DISCONNECTION

Explanation Of Command

This command disconnects the **FROM** and **TO** customers in both directions. The channels **abcd** and **ghij** must be cross-connected (using the **SCON** or **SCNT** verbs) before they can be disconnected with **SDIS**.

The optional **RATE rr** field defines the rate at which the **FROM** and **TO** customers were cross-connected. If specified it will be checked and must be the same rate as originally appeared in the **SCON** or **SCNT** command. The **TPT** keyword means two-point and is optional. It conveys no information and is retained for DACS/SRDC compatibility.

Command

Nonhierarchical

[I.19401]

```
SDIS:FRM xy,SEQ ww:[RATE rr[,TPT],] FROM [s]abcd[/ff],\  
TO [t]ghij[/ll]!
```

Hierarchical

[I.19401]

```
SDIS:FRM xy,SEQ ww:[RATE rr[,TPT],] FROM uvmnpdd[/ff],\  
TO wxkqrj[/ll]!
```

Completion Message

Nonhierarchical

[O.19401]

M hh:mm:ss xy,ww n[vv] SDIS RATE rr,TPT;[s]abcddd/ff,\
[t]ghijjj/ll[OOS] COMPL

Hierarchical

[O.19401]

M hh:mm:ss xy,ww n[vv] SDIS RATE rr,TPT;uvmnpddd/ff,\
wxkqrjjj/ll[OOS] COMPL

Denial Message

Nonhierarchical

[O.19401.01]

M hh:mm:ss xy,ww n[vv] SDIS[RATE rr] FROM [s]abcddd/ff \
TO [t]ghijjj/ll 2 LN MSG:
<reason> DNY

Hierarchical

[O.19401.01]

M hh:mm:ss xy,ww n[vv] SDIS[RATE rr] FROM uvmnpddd/ff \
TO wxkqrjjj/ll 2 LN MSG:
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

rr - Circuit rate (24, 48, 96, or 56)

TPT - Two-point

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - FROM channel number
jjj - TO channel number

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ll - TO customer number
ff - FROM customer number

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

00S - Out-of-service

OOS appears in the output whenever the disconnection involves an out-of-service or failed facility termination NPC. In this case, the user should note that the Unassigned Multiplexer Channel (UMC) code may not be inserted towards the facilities of the disconnected circuit until the facility is restored to service.

reason - Reason for denial

reason

CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A
CHANNEL [s]abcddd

CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B
CHANNEL [s]abcddd

CHANNEL [s]abcddd IS OUT OF RANGE

CHANNELS ARE NOT CONNECTED TO EACH OTHER

CHANNEL [s]abcddd IS NOT ESTABLISHED TO SR FEATURE

CHANNEL [s]abcddd/ff IS UNDER TEST

NPC [X]XXX IS NOT PROVISIONED AS DIGROUP-A OF AN RT

THE NPC ASSOCIATED WITH VIRTUAL CHANNEL [X]XXXYYY IS NOT
PROVISIONED

NPC [X]XXX IS IN LINE LOOPBACK STATE

CHANNEL [s]abcddd IS A PARITY CHANNEL

CUSTOMER NUMBER MUST BE SPECIFIED FOR DS0B

CHANNEL [s]abcddd

INVALID CHANNEL NUMBER FOR CHANNEL [X]XXXYYY

SPECIFIED RATE DOES NOT MATCH EXISTING CIRCUIT RATE

UNIT [q]q IS NOT FACILITY TERMINATING TYPE

TSI sft IS NOT EQUIPPED

CCB sf IS NOT EQUIPPED

ETSI sqq IS NOT EQUIPPED

NPC [s]abc IS NOT EQUIPPED

UNIT [q]q IS NOT EQUIPPED

UNIT [q]q FTMI d IS NOT EQUIPPED

UNIT [q]q FC sb IS OUT-OF-SERVICE

UNIT [q]q MXR c NOT EQUIPPED

BOTH CCN SIDES ARE OUT-OF-SERVICE
ACTIVE CCN SIDE IS OUT-OF-SERVICE
CCNI s IS OUT-OF-SERVICE
TSI sft IS OUT-OF-SERVICE
CCB sf IS OUT-OF-SERVICE
CCI s IS OUT-OF-SERVICE
ETSI sqq IS OUT-OF-SERVICE
UNIT [q]q IS OUT-OF-SERVICE
UNIT [q]q FTMI d IS OUT-OF-SERVICE
UNIT [q]q FC sb IS OUT-OF-SERVICE
DSPI IN UNIT [q]q IS OUT-OF-SERVICE
NPC [s]abc IS OUT-OF-SERVICE
NPC [s]abc SIDE s IS OUT-OF-SERVICE
UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE
MAINTENANCE CONDITION PREVENTS COMPLETION OF THIS
COMMAND

ACTIVE CCN SIDE IS FAILED
CCNI s IS FAILED
TSI sft IS FAILED
CCB sf IS FAILED
CCI s IS FAILED
ETSI sqq IS FAILED
UNIT [q]q IS FAILED
UNIT [q]q FTMI d IS FAILED
UNIT [q]q FC sb IS OUT-OF-SERVICE
DSPI IN UNIT [q]q IS FAILED
NPC [s]abc IS FAILED
NPC [s]abc SIDE s IS FAILED
UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
UNIT [q]q MIU c IS FAILED
ACTIVE CCN SIDE IS PESTED

st	d	Explanation
ROLL	{F T B}	Circuit is involved in a roll

SDIS,RATE,TPT,FROM,TO

SUBRATE DISCONNECTION

Explanation Of Command

This command disconnects the **FROM** and **TO** customers in both directions. It extends the format of the **SDIS, RATE, TPT, FROM, TO** command to ranges of two-point, two-way disconnections. This command is the same as the **SDIS, RATE, TPT, FROM, TO** command except for the range feature. See the **SDIS, RATE, TPT, FROM, TO** command for an explanation of features not related to the range feature.

The **FROM** and **TO** fields specify the customers to disconnect. The **FROM** and **TO** keywords have no significance to DACS II and either customer or range of customers may be designated **FROM** or **TO**. The **FROM** and **TO** designations do not have to be the same on an **SDIS, RATE, TPT, FROM, TO** command as they were on the corresponding **SCON** or **SCNT** command.

Command

Nonhierarchical

[l.19411]

```
SDIS:FRM xy,SEQ ww:[RATE rr,][TPT,] FROM [s]abcddd{-eee[/01]|\  
/ff-mm},TO [t]ghijjj{-kkk[/01]|/ll-nn}!
```

Hierarchical

[l.19411]

```
SDIS:FRM xy,SEQ ww:[RATE rr,][TPT,] FROM uvmnpdd{-eee[/01]|\  
/ff-mm},TO wxkqrjjj{-kkk[/01]|/ll-nn}!
```

Completion Message

Nonhierarchical

[O.19411]

M hh:mm:ss xy,ww n[vv] SDIS [RATE rr] [s]abcddd{-eee[/01]|\
/ff-mm}[t]ghijjj{-kkk[/01]|/ll-nn} [OOS] COMPL

Hierarchical

[O.19411]

M hh:mm:ss xy,ww n[vv] SDIS [RATE rr] uvmnpddd{-eee[/01]|\
/ff-mm}wxkqrjjj{-kkk[/01]|/ll-nn}[OOS] COMPL

Denial Message

Nonhierarchical

[O.19411.01]

M hh:mm:ss xy,ww n[vv] SDIS[RATE rr] FROM [s]abcddd{-eee\
[/01]|/ff-mm} 3 LN MSG:
TO [t]ghijjj{-kkk[/01]|/ll-nn} ddd/{01|ff},jjj/{01|ll}
<reason> DNY

Hierarchical

[O.19411.01]

M hh:mm:ss xy,ww n[vv] SDIS[RATE rr] FROM uvmnpddd{-eee\
[/01]|/ff-mm} 3 LN MSG:
TO wxkqrjjj{-kkk[/01]|/ll-nn} ddd/{01|ff},jjj/{01|ll}
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

RATE - Rate

rr - Circuit rate (24, 48, 96, or 56)

TPT - Two-Point, Two-way disconnection

FROM - From

TO - To

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

The allowable values are presented below:

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical FROM NPC number
wxkqr - Hierarchical TO NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

The allowable values are presented below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - FROM Channel number
eee - FROM channel number for end of range specified
jjj - TO Channel number
kkk - TO channel number for end of range specified

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - FROM DS0A or DS0B Customer number
mm - FROM DS0B Customer number for end of range
ll - TO DS0A or DS0B Customer number, similar to ff
nn - TO DS0B Customer number for end of range

ff explanation

01 (DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20 (DS0B at 2.4 kb/s)
01-10 (DS0B at 4.8 kb/s)
01-05 (DS0B at 9.6 kb/s)

There are two ways to specify ranges.

- Range specified in channel field: [s]abcd-dd-eee[/01]

This option applies only to DS0A channels, and the channel range, i.e., eee, must be specified when a range of DS0A customers is desired. The customer number for DS0A channels is always 01. For example, [0]001002-010/01 specifies a range of nine DS0A customers on NPC 001, while [0]001002-010 does the same thing without the optional customer number.

- Range specified in customer number field: [s]abcd-dd/ff-mm

This option applies only to a DS0B channel, and the range must be specified in the customer number field when a range of DS0B customers is desired. If NPC [0]020, channel 004 was established (using the SECH verb) as a 10 customer DS0B channel, then [0]020004/01-09 specifies a range of nine customers on NPC [0]020 channel 004.

Specifying a range in both the channel and customer number field for the same customer specification, such as [0]001001-009/01-09, will be denied.

00S - Out-of-service

OOS appears in the output whenever the disconnection involves an out-of-service or failed facility termination NPC. In this case, the user should note that the Unassigned Multiplexer Channel (UMC) code may not be inserted towards the facilities of the disconnected circuit until the facility is restored to service.

reason - Reason for denial

Reason

CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A
CHANNEL [s]abcddd

CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B
CHANNEL [s]abcddd

CHANNEL [s]abcddd IS OUT OF RANGE
[X]XXXXYY-FFF IS AN INVALID RANGE OF CHANNELS

CHANNEL [s]abcddd/ff IS UNDER TEST
CHANNELS ARE NOT CONNECTED TO EACH OTHER

CHANNEL [s]abcddd/ff IS UNASSIGNED

CHANNEL [s]abcddd IS NOT ESTABLISHED TO SR FEATURE
NPC [X]XXX IS NOT PROVISIONED AS DIGROUP-A OF AN RT
THE NPC ASSOCIATED WITH VIRTUAL CHANNEL [X]XXXXYY IS NOT
PROVISIONED
NPC [X]XXX IS IN LINE LOOPBACK STATE

CHANNEL [s]abcddd IS A PARITY CHANNEL
CUSTOMER NUMBER MUST BE SPECIFIED FOR DS0B
CHANNEL [s]abcddd
CUSTOMER NUMBER RANGE NOT ALLOWED FOR DS0A
CHANNEL [s]abcddd
CHANNEL RANGE NOT ALLOWED FOR DS-OB CHANNEL [s]abcddd
INVALID CHANNEL NUMBER FOR CHANNEL [X]XXXXYY
FROM AND TO RANGES ARE NOT THE SAME SIZE
FROM AND TO RANGES PARTIALLY OVERLAP
SPECIFIED RATE DOES NOT MATCH EXISTING CIRCUIT RATE
UNIT [q]q IS NOT FACILITY TERMINATING TYPE

TSI sft IS NOT EQUIPPED
CCB sf IS NOT EQUIPPED
ETSI sqq IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED
UNIT [q]q IS NOT EQUIPPED
UNIT [q]q FTMI d IS NOT EQUIPPED
UNIT [q]q FC sb IS OUT-OF-SERVICE
UNIT [q]q MXR c NOT EQUIPPED

BOTH CCN SIDES ARE OUT-OF-SERVICE
ACTIVE CCN SIDE IS OUT-OF-SERVICE
CCNI s IS OUT-OF-SERVICE
TSI sft IS OUT-OF-SERVICE
CCB sf IS OUT-OF-SERVICE
CCI s IS OUT-OF-SERVICE
ETSI sqq IS OUT-OF-SERVICE
UNIT [q]q IS OUT-OF-SERVICE
UNIT [q]q FTMI d IS OUT-OF-SERVICE
UNIT [q]q FC sb IS OUT-OF-SERVICE
DSPI IN UNIT [q]q IS OUT-OF-SERVICE
NPC [s]abc IS OUT-OF-SERVICE
NPC [s]abc SIDE s IS OUT-OF-SERVICE
UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE
MAINTENANCE CONDITION PREVENTS COMPLETION OF THIS
COMMAND

ACTIVE CCN SIDE IS FAILED
CCNI s IS FAILED
TSI sft IS FAILED
CCB sf IS FAILED
CCI s IS FAILED
ETSI sqq IS FAILED
DSPI IN UNIT [q]q IS FAILED
NPC [s]abc IS FAILED
NPC [s]abc SIDE s IS FAILED
UNIT [q]q IS FAILED
UNIT [q]q FTMI d IS FAILED
UNIT [q]q FC sb IS OUT-OF-SERVICE
UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
UNIT [q]q MIU c IS FAILED
ACTIVE CCN SIDE IS PESTED

SECH,TO,DS0A,DS0B,SEC,PCH

SUBRATE ESTABLISH CHANNEL

Explanation Of Command

This command connects a channel (or a range of channels) in a digroup to the subrate feature. When connected to the subrate feature, the channel is provided with test access capability using the **STST** commands and, if specified, a subrate multiplexer and/or an error correction function. A channel must be established before any cross-connections can be made via the **SCON** command. This command is recommended over the DACS/SRDC-compatible version **SECH: : TO, RATE, DP, PCH** (I.19111) due to its improved clarity.

DACS II will deny this command if it attempts to establish a DS0B channel on channel 24 of a DS1 provisioned with the T1DM framing format.

This command is used to establish five types of channels as follows:

1. A DS0B channel capable of multiplexing 5, 10, or 20 subrate customers.
2. A DS0A channel (at any rate) without error correction.
3. A subrate DS0A channel with subrate dataport error correction.
4. A 56-kb/s channel with parity channel error correction. (This type of error correction is also commonly referred to as "56-kb/s dataport" error correction.)
5. A DS0B channel capable of multiplexing 5, 10, or 20 subrate customers and parity channel error correction.

When a channel is established, it cannot be already established, cross-connected, or under test access. All channels within a specified range are established with the same parameters.

Note: For user convenience, an alphabetical "O" or a numerical "0" can be typed for the zero in DS0.

DS0B Channels Without Error Correction

A DS0B channel is established by specifying a digroup and channel and the DS0B nn field.

The SEC or PCH fields must not be present for this type of channel.

As indicated above, a mix of customer rates can be cross-connected, provided the maximum rate for each type of subrate multiplexer is not exceeded.

DS0A Channels Without Error Correction

A DS0A channel without error correction is established by specifying a digroup and channel and DS0A rr.

Again, the SEC or PCH keywords must not be present.

Note: The Subrate feature performs no rate-sensitive processing on this type of channel, and cross-connection is allowed to any other Subrate channel. The user must ensure that the signal rate is compatible with the intended cross-connection.

For example, if a DS0A channel with an actual rate of 4.8 kb/s is established, a cross-connection to a 10-channel or 20-channel multiplexer is allowed, but only the connection to the 10-channel multiplexer will provide error-free transmission.

DS0A Channels With Subrate Error Correction

A subrate DS0A channel with subrate error correction is established by specifying the DS0A keyword with an rr value of 24, 48, or 96, and the SEC keyword. Subrate error correction performs a majority vote among the repeated bytes inherent in the byte-stuffed subrate DS0A signal to determine the corrected data. An rr value of 56 is not allowed, and the PCH keyword must not be present in specifying this type of channel.

56 kb/s Channels With Error Correction

A 56-kb/s channel with parity channel error correction is established by specifying the DS0A keyword with an rr value of 56, and the PCH keyword. This command has the effect of establishing two channels, one for carrying the customer data and one for carrying parity error correction information. If no parity channel number (ppp) is specified, the parity channel is assigned automatically to the next higher numbered channel from the data channel (ddd + 1). Due to the need to assign parity channels, range provisioning of 56 kb/s channels with error correction is not allowed. Also, use of the PCH keyword when the rr value is less than 56 is not allowed.

DS0B Channels With Error Correction

A DS0B channel that also has parity channel error correction performed on it is established by specifying the DS0B nn and PCH keywords. As above, the nn value determines the type of multiplexer, and the PCH keyword assigns a parity channel number ppp or defaults to ddd + 1. Also, range provisioning of this type of channel is not allowed.

Subrate established channels are marked automatically as red circuits. This results in the need to specify the INCL keyword in the RMV NPC command whenever a facility terminating NPC carrying Subrate channels is removed.

Also, the Subrate establish channel command has no effect on the customer controlled marking status of DACS II channels that previously have been marked with the CUS keyword. The CUS marking is disabled while the channel is established to the Subrate feature, but is enabled again once the channel is disestablished.

Note: When all 24 channels of an NPC using D4 superframe are established as DS0B channels, a yellow CGA can be declared for the NPC, even though there is no failure, if either of the following conditions exists:

1. The DS1 signal is looped at the DSX-1 and the mux out of sync (MOS) code is transmitted on all channels.
2. The far end is transmitting the MOS code on all 24 channels.

When all 24 channels are receiving MOS, the D4 superframe yellow alarm signal is simulated thus causing the CGA to be declared.

Command

Nonhierarchical

[I.19101]

```
SECH:FRM xy,SEQ ww:TO [s]abcddd[-eee],{DS0A rr|DS0B nn}\  
[, {SEC|PCH[ ppp]}}!
```

Hierarchical

[I.19101]

```
SECH:FRM xy,SEQ ww:TO uvmnpddd[-eee],{DS0A rr|DS0B nn}\  
[, {SEC|PCH[ ppp]}}!
```

Completion Message

Nonhierarchical

[O.19101]

M hh:mm:ss xy,ww n[vv] SECH [s]abcddd[-eee] {DS0A rr|DS0B nn}\
[{SEC|PCH ppp}] COMPL

Hierarchical

[O.19101]

M hh:mm:ss xy,ww n[vv] SECH uvmnpddd[-eee] {DS0A rr|DS0B nn}\
[{SEC|PCH ppp}] COMPL

Denial Message

Nonhierarchical

[O.19101.01]

M hh:mm:ss xy,ww n[vv] SECH [s]abcddd[-eee] {DS0A rr|DS0B nn}\
[{SEC|PCH[ppp]}] 2 LN MSG:
<reason> DNY

Hierarchical

[O.19101.01]

M hh:mm:ss xy,ww n[vv] SECH uvmnpddd[-eee] {DS0A rr|DS0B nn}\
[{SEC|PCH[ppp]}] 2 LN MSG:
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

T0 - To

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmpnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number
eee - Channel number for end of range specified

Channel numbers
001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

DS0A - Digital signal 0A

rr - DS0A channel rate (24, 48, 96, or 56)

The established channel is a DS0A type, that is, a single customer signal at rate rr.

DS0B - Digital signal 0B

nn - Number of DS0B subrate customer channels (05, 10, or 20)

The established channel is connected to a subrate multiplexer capable of multiplexing nn customers.

SEC - Subrate error correction

Subrate error correction is performed on the established channel. SEC cannot be used for either a DS0A or DS0B channel without error correction.

PCH - Parity channel

Parity error correction is performed on this channel. PCH cannot be used for either a DS0A or DS0B channel without error correction.

The SEC and PCH fields are present only if specified in the input command.

ppp - Parity channel number

Specifies the associated parity channel number. If not specified in the input command, this number defaults to the channel number + 1 (ddd + 1).

reason - Reason for denial

If a denial pertains to a particular channel in a range, the channel number is given in the optional qqq field. The user should note that *none* of the preceding channels in a range are completed if a problem is found, and subsequent channels may or may not have additional problems.

reason

SPECIFIED DIGROUP DOES NOT SUPPORT SUBRATE CHANNELS
CHANNEL dd IS OUT OF RANGE FOR NPC TYPE SPECIFIED
CHANNEL [s]abcddd IS A TEST GROUP CHANNEL
PARITY CHANNEL [s]abcddd IS A TEST GROUP CHANNEL
SPECIFIED CHANNEL IS A TEST PORT
SPECIFIED CHANNEL IS ALREADY ASSIGNED
SPECIFIED CHANNEL IS ALREADY ESTABLISHED
SPECIFIED CHANNEL IS UNDER TEST
SPECIFIED PARITY CHANNEL IS A TEST PORT
SPECIFIED PARITY CHANNEL IS ALREADY ASSIGNED
SPECIFIED PARITY CHANNEL IS UNDER TEST
SPECIFIED PARITY CHANNEL IS ALREADY SPECIFIED AS DATA CHANNEL
PARITY CHANNEL NUMBER IS OUT OF RANGE
SUBRATE ERROR CORRECTION NOT ALLOWED WITH RATE 56
PARITY CHANNEL ERROR CORRECTION NOT ALLOWED FOR 24, 48, OR 96
RATES
PCH KEYWORD NOT ALLOWED WITH RANGE CROSS-CONNECTS
CONNECTION EXCEEDS REMAINING SRM CAPACITY
ERROR CORRECTION CAPACITY UNAVAILABLE ON DESIRED TYPE SUBRATE
PACK

ACTIVE CROSS-CONNECT NETWORK SIDE IS FAILED
SPECIFIED NPC IS UNEQUIPPED
SPECIFIED NPC IS OUT-OF-SERVICE
SPECIFIED NPC IS FAILED
REQUIRED UNIT NOT EQUIPPED, NOT IN SERVICE, OR FAILED

REQUIRED CCB NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED TSI NOT EQUIPPED, NOT IN SERVICE, OR FAILED

REQUIRED ETSI NOT EQUIPPED, NOT IN SERVICE, OR FAILED

REQUIRED FTMI NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED FC NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED DSPI NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED SRM NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED SUBRATE PACK NOT EQUIPPED, NOT IN SERVICE, OR FAILED

UNIT [q]q MXR c NOT EQUIPPED

IDNV Input, data not valid

CHANNEL [s]abc-ddd IS A TEST GROUP CHANNEL
PARITY CHANNEL [s]abc-ddd IS A TEST GROUP CHANNEL

SAAS Status, already assigned

Termination is in process of being rolled

UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE

UNIT [q]q FLI k IS FAILED
UNIT [q]q FMT s IS FAILED
UNIT [q]q MXR c IS FAILED
UNIT [q]q MIU c IS FAILED

st	d	Explanation

ROLL	{F T B}	Circuit is involved in a roll

SECH,TO,RATE,DP,PCH

SUBRATE ESTABLISH CHANNEL

Explanation Of Command

This message connects a channel or a range of channels in a given digroup to the subrate feature. When connected to the subrate feature, the channel is provided with test access capability using the STST commands and, if specified, a subrate multiplexer and/or an error correction function.

Command

Nonhierarchical

[I.19111]

SECH:FRM xy,SEQ ww:TO [s]abcddd[-eee],RATE rr[,DP]\
[,PCH[ppp]]!

Hierarchical

[I.19111]

SECH:FRM xy,SEQ ww:TO uvmnpddd[-eee],RATE rr[,DP]\
[,PCH[ppp]]!

Completion Message

Nonhierarchical

[O.19111]

M hh:mm:ss xy,ww n[vv] SECH [s]abcddd[-eee] RATE rr [DP]\
[PCH ppp] COMPL

Hierarchical

[O.19111]

M hh:mm:ss xy,ww n[vv] SECH uvmnpddd[-eee] RATE rr [DP]\
[PCH ppp] COMPL

Denial Message

Nonhierarchical

[O.19111.01]

M hh:mm:ss xy,ww n[vv] SECH [s]abcdddd[-eee] RATE rr[DP]\
[PCH[ppp]] 2 LN MSG:
<reason> DNY

Hierarchical

[O.19111.01]

M hh:mm:ss xy,ww n[vv] SECH uvmnpddd[-eee] RATE rr[DP]\
[PCH[ppp]] 2 LN MSG:
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

A channel must be established before any cross-connections can be made.

This command is used to establish five different types of channels as follows:

1. A DS0B channel capable of multiplexing 5, 10, or 20 subrate customers.
2. A 56-kb/s channel without error correction.
3. A subrate DS0A channel with subrate dataport error correction.
4. A 56-kb/s channel with parity channel error correction. (This type of error correction is also commonly referred to as "56-kb/s dataport" error correction.)
5. A DS0B channel capable of multiplexing 5, 10, or 20 subrate customers and parity channel error correction.

When a channel (or range of channels) is established, it (they) cannot be already established, cross-connected, or under test access. All channels within a specified range are established with the same parameters.

DS0B Channels (Without Error Correction)

A DS0B channel is established by specifying a digroup and channel and the RATE rr field. The DP and PCH fields must not be present for this type of channel. The RATE rr field defines the number of customer channels and the maximum customer rate of the subrate multiplexer as follows:

rr - Subrate multiplexer rate

<i>rr</i>	<i>Explanation</i>
24	20 - 2.4-kb/s customers
48	10 - 2.4- or 4.8-kb/s customers
96	5 - 2.4, 4.8, or 9.6-kb/s customers

As indicated in the table above, a mix of customer rates can be cross- connected provided the maximum rate for each type of subrate multiplexer is not exceeded. 56-kb/s Channels Without Error Correction

A 56-kb/s DS0A channel without error correction is established by specifying a digroup and channel and RATE 56. The DP keyword is also allowed if desired, but otherwise is ignored by the system. The PCH keyword must not be present. This type of channel actually can be operated at any DDS rate since the Subrate performs no rate-sensitive processing on it. The user must ensure, however, that any subsequent cross-connections to other Subrate channels are compatible with the rate actually present in the channel. For example, when the channel actually carries a 4.8-kb/s byte-stuffed DS0A, the user may connect it to a 10-channel multiplexer or to a 20-channel multiplexer. In both cases, the command is allowed, but only the connection to the 10- channel multiplexer will provide error-free transmission.

DS0A Channels With Subrate Error Correction

A subrate DS0A channel with subrate error correction is established by specifying an rr value of 24, 48, or 96, and the DP keyword. Subrate error correction performs a majority vote among the repeated bytes inherent in the byte-stuffed subrate DS0A signal to determine the corrected data. An rr value of 56 is not allowed, and the PCH keyword must not be present in specifying this type of channel.

56-kb/s Channels With Error Correction

A 56-kb/s channel with parity channel error correction is established by specifying an rr value of 56 and both the DP and PCH keywords. This command has the effect of establishing two channels, one for carrying the customer data and one for carrying parity error correction information. If no parity channel number (ppp) is specified, the parity channel is assigned automatically to the next higher numbered channel from the data channel (ddd + 1). Due to the need to assign parity channels, range provisioning of 56-kb/s

channels with error correction is not allowed.

DS0B Channels With Error Correction

A DS0B channel that also has parity channel error correction performed on it is established by specifying a RATE of 24, 48, or 96, corresponding to 20, 10, or 5 channel multiplexers, respectively, and the DP and PCH keywords. As above, if no parity channel number (ppp) is specified, the parity channel is assigned to ddd + 1. Also, no range provisioning of this type of channel is allowed.

Subrate established channels are marked automatically as red circuits. This results in the need to specify the **INCL** keyword in the RMV NPC command whenever a facility terminating NPC carrying Subrate channels is removed.

Also, the Subrate establish channel command has no effect on the customer control marking status of DACS II channels that previously have been marked with the **CUS** keyword. The **CUS** marking is disabled while the channel is established to the Subrate feature, but is returned once the channel is disestablished.

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit	Unit	Unit	Unit
13	14	15	16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical NPC number

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number

eee - Channel number for end of range specified

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

The channel is now ready for Subrate cross-connection. Optional field **eee** appears if the input message requested the establishment of a range of channels.

The **RATE rr** field specifies the channel rate. If the optional **DP** and **PCH** fields are not present and rr = 24, 48, or 96, the established channel is connected to a subrate multiplexer capable of multiplexing 20, 10, or 5 customers, respectively. If rr = 56 and the optional fields are not present, the established channel is a DS0A type, i.e., a single customer signal without error correction.

When the optional **DP** field is present and rr = 24, 48, or 96, the established channel is a DS0A type with subrate error correction. If both **DP** and **PCH** fields are present and rr = 24, 48, or 96, the established channel is connected to a subrate multiplexer capable of multiplexing 20, 10, or 5 customers, respectively, and has parity channel error correction.

An **rr** value of 56 in combination with both **DP** and **PCH** fields indicate a 56 kb/s DS0A channel with parity channel error correction.

The **ppp** field specifies the parity channel number associated with the parity channel error correction function. If not specified in the input command, this number is defaulted to ddd + 1.

rr - Channel rate (24, 48, 96, or 56)

ppp - Number of parity error correction channel

If the reason for denial pertains to a particular channel in a range, the user should note that *none* of the preceding channels in the range are completed if a problem is found, and subsequent channels may or may not have additional problems.

The optional **DP** and **PCH** **ppp** fields indicate subrate and parity channel error correction, respectively. These fields are present only if specified in the input command.

reason - reason for denial

Input Errors

reason

SPECIFIED DIGROUP DOES NOT SUPPORT SUBRATE CHANNELS
CHANNEL dd IS OUT OF RANGE FOR NPC TYPE SPECIFIED
CHANNEL [s]abcddd IS A TEST GROUP CHANNEL
PARITY CHANNEL [s]abcddd IS A TEST GROUP CHANNEL
SPECIFIED CHANNEL IS A TEST PORT
SPECIFIED CHANNEL IS ALREADY ASSIGNED
SPECIFIED CHANNEL IS ALREADY ESTABLISHED
SPECIFIED CHANNEL IS UNDER TEST
SPECIFIED PARITY CHANNEL IS A TEST PORT
SPECIFIED PARITY CHANNEL IS ALREADY ASSIGNED
SPECIFIED PARITY CHANNEL IS UNDER TEST
SPECIFIED PARITY CHANNEL IS ALREADY SPECIFIED AS DATA
CHANNEL
PARITY CHANNEL NUMBER IS OUT OF RANGE
DP KEYWORD WITHOUT PCH KEYWORD NOT ALLOWED WITH RATE 56
PCH KEYWORD WITHOUT DP KEYWORD NOT ALLOWED
PCH KEYWORD NOT ALLOWED FOR RANGE CROSS-CONNECTS
CONNECTION EXCEEDS REMAINING SRM CAPACITY
ERROR CORRECTION CAPACITY UNAVAILABLE ON DESIRED TYPE
SUBRATE PACK

Maintenance Conditions

reason

ACTIVE CROSS-CONNECT NETWORK SIDE IS FAILED
SPECIFIED NPC IS UNEQUIPPED
SPECIFIED NPC IS OUT-OF-SERVICE
SPECIFIED NPC IS FAILED
REQUIRED UNIT NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED CCB NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED TSI NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED ETSI NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED FTMI NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED FC NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED DSPI NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED SRM NOT EQUIPPED, NOT IN SERVICE, OR FAILED
REQUIRED SUBRATE PACK NOT EQUIPPED, NOT IN SERVICE, OR FAILED

Error condition code for DS3U

reason

UNIT [q]q MXR c NOT EQUIPPED

CHANNEL [s]abc-ddd IS A TEST GROUP CHANNEL
PARITY CHANNEL [s]abc-ddd IS A TEST GROUP CHANNEL

UNIT [q]q FLI k IS OUT-OF-SERVICE
UNIT [q]q FMT s IS OUT-OF-SERVICE
UNIT [q]q MXR c IS OUT-OF-SERVICE
UNIT [q]q MIU c IS OUT-OF-SERVICE

UNIT [q]q FMT s IS FAILED
UNIT [q]q FLI k IS FAILED
UNIT [q]q MIU c IS FAILED
UNIT [q]q MXR c IS FAILED

Contents

START,LOG	22-2
■ Explanation Of Command	22-2
■ Command	22-2
■ Completion Message	22-2
■ Denial Message	22-2
■ Autonomous Message	22-2
■ Explanation Of Parameters	22-3
STOP,MACRO,LINK	22-4
■ Explanation Of Command	22-4
■ Command	22-4
■ Completion Message	22-4
■ Denial Message	22-4
■ Autonomous Message	22-5
■ Explanation Of Parameters	22-5
STST,MON,TO,MJU,TP	22-6
■ Explanation Of Command	22-6
■ Command	22-6
■ Nonhierarchical	22-6
■ Hierarchical	22-6
■ Completion Message	22-7
■ Nonhierarchical	22-7
■ Hierarchical	22-7
■ Denial Message	22-7
■ Nonhierarchical	22-7
■ Hierarchical	22-7
■ Autonomous Message	22-7

Contents

■ Explanation Of Parameters	22-8
STST,MON,TO,TP	22-16
■ Explanation Of Command	22-16
■ Command	22-17
■ Nonhierarchical	22-17
■ Hierarchical	22-17
■ Completion Message	22-17
■ Nonhierarchical	22-17
■ Hierarchical	22-17
■ Denial Message	22-18
■ Nonhierarchical	22-18
■ Hierarchical	22-18
■ Autonomous Message	22-18
■ Explanation Of Parameters	22-18
STST,SPL,TO,MJU,TP	22-26
■ Explanation Of Command	22-26
■ Command	22-26
■ Nonhierarchical	22-26
■ Hierarchical	22-26
■ Completion Message	22-27
■ Nonhierarchical	22-27
■ Hierarchical	22-27
■ Denial Message	22-27
■ Nonhierarchical	22-27
■ Hierarchical	22-27
■ Autonomous Message	22-27
■ Explanation Of Parameters	22-28
STST,SPL,TO,TP	22-36
■ Explanation Of Command	22-36
■ Command	22-37
■ Nonhierarchical	22-37
■ Hierarchical	22-37
■ Completion Message	22-37
■ Nonhierarchical	22-37
■ Hierarchical	22-37
■ Denial Message	22-38
■ Nonhierarchical	22-38
■ Hierarchical	22-38

Contents

■ Autonomous Message	22-38
■ Explanation Of Parameters	22-38
STST,TLA,TLR,TP	22-46
■ Explanation Of Command	22-46
■ Command	22-46
■ Completion Message	22-47
■ Nonhierarchical	22-47
■ Hierarchical	22-47
■ Denial Message	22-48
■ Autonomous Message	22-48
■ Explanation Of Parameters	22-48
STST,TPR,ALL,LINKS	22-56
■ Explanation Of Command	22-56
■ Command	22-56
■ Completion Message	22-56
■ Denial Message	22-57
■ Autonomous Message	22-57
■ Explanation Of Parameters	22-57
STST,TPR,TP	22-58
■ Explanation Of Command	22-58
■ Command	22-58
■ Completion Message	22-58
■ Nonhierarchical	22-58
■ Hierarchical	22-59
■ Denial Message	22-59
■ Autonomous Message	22-60
■ Explanation Of Parameters	22-60
SW,BCAST,OLD,NEW,INCL	22-66
■ Explanation Of Command	22-66
■ Command	22-67
■ Nonhierarchical	22-67
■ Hierarchical	22-67
■ Completion Message	22-67
■ Nonhierarchical	22-67
■ Hierarchical	22-67
■ Denial Message	22-68
■ Nonhierarchical	22-68

Contents

■ Hierarchical	22-68
■ Autonomous Message	22-68
■ Explanation Of Parameters	22-68
SW,BCAST,OLD,NEW,INCL	22-73
■ Explanation Of Command	22-73
■ Command	22-74
■ Nonhierarchical	22-74
■ Hierarchical	22-74
■ Completion Message	22-74
■ Nonhierarchical	22-74
■ Hierarchical	22-74
■ Denial Message	22-75
■ Nonhierarchical	22-75
■ Hierarchical	22-75
■ Autonomous Message	22-75
■ Explanation Of Parameters	22-75
SW,DISC,OOS	22-80
■ Explanation Of Command	22-80
■ Command	22-81
■ Nonhierarchical	22-81
■ Hierarchical	22-81
■ Completion Message	22-81
■ Nonhierarchical	22-81
■ Hierarchical	22-81
■ Denial Message	22-81
■ Nonhierarchical	22-81
■ Hierarchical	22-82
■ Autonomous Message	22-82
■ Explanation Of Parameters	22-82
SW,DISC,OOS	22-86
■ Explanation Of Command	22-86
■ Command	22-86
■ Nonhierarchical	22-86
■ Hierarchical	22-87
■ Completion Message	22-87
■ Nonhierarchical	22-87
■ Hierarchical	22-87
■ Denial Message	22-87

Contents

■ Nonhierarchical	22-87
■ Hierarchical	22-87
■ Autonomous Message	22-87
■ Explanation Of Parameters	22-88
SW,NPC,RT,PSW,USW,ALW,INH,FRC,INCL	22-92
■ Explanation Of Command	22-92
■ Command	22-92
■ Nonhierarchical	22-92
■ Hierarchical	22-92
■ Completion Message	22-93
■ Nonhierarchical	22-93
■ Hierarchical	22-93
■ Denial Message	22-93
■ Nonhierarchical	22-93
■ Hierarchical	22-93
■ Autonomous Message	22-93
■ Nonhierarchical	22-93
■ Hierarchical	22-94
■ Explanation Of Parameters	22-94
SW,ROLL,OLD,NEW,INCL,FRC,OOS	22-97
■ Explanation Of Command	22-97
■ Command	22-98
■ Nonhierarchical	22-98
■ Hierarchical	22-98
■ Completion Message	22-98
■ Nonhierarchical	22-98
■ Hierarchical	22-98
■ Denial Message	22-98
■ Nonhierarchical	22-98
■ Hierarchical	22-99
■ Autonomous Message	22-99
■ Explanation Of Parameters	22-99
SW,ROLL,OLD,NEW,INCL,FRC,OOS,TWAY	22-104
■ Explanation Of Command	22-104
■ Command	22-104
■ Nonhierarchical	22-104
■ Hierarchical	22-105
■ Completion Message	22-105

Contents

■ Nonhierarchical	22-105
■ Hierarchical	22-105
■ Denial Message	22-105
■ Nonhierarchical	22-105
■ Hierarchical	22-105
■ Autonomous Message	22-105
■ Explanation Of Parameters	22-106
SW,UNIT,FLI,TOPRTN	22-110
■ Explanation Of Command	22-110
■ Command	22-110
■ Completion Message	22-110
■ Denial Message	22-110
■ Autonomous Message	22-110
■ Explanation Of Parameters	22-111
SW,UNIT,FLI,TOSRVC	22-112
■ Explanation Of Command	22-112
■ Command	22-112
■ Completion Message	22-112
■ Denial Message	22-112
■ Autonomous Message	22-112
■ Explanation Of Parameters	22-113
SW,UNIT,MMFG,TOPRTN,FRC	22-114
■ Explanation Of Command	22-114
■ Command	22-115
■ Completion Message	22-116
■ Denial Message	22-116
■ Autonomous Message	22-116
■ Explanation Of Parameters	22-116
SW,UNIT,MMFG,TOSRVC	22-118
■ Explanation Of Command	22-118
■ Command	22-118
■ Completion Message	22-118
■ Denial Message	22-118
■ Autonomous Message	22-118
■ Explanation Of Parameters	22-119

START — SW

START — SW

This section documents the commands **START** through **SW**.

START,LOG

BEGINNING OF RETRIEVED LOGGED MESSAGES

Explanation Of Command

This is an autonomous message marking the beginning of a block of retrieved logged messages. The logged messages will follow this autonomous message with no break until the "END LOG MSG" autonomous message (O.83011). The messages will be output as a result of the command I.57011.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.83001]

A hh:mm:ss xy,ww START LOG MSG COMPL

Explanation Of Parameters

START LOG MSG

- Start of a block of logged messages

STOP,MACRO,LINK

STOP MACRO

Explanation Of Command

This command is used to stop the execution of a macro.

A regular DACS II user can use the link number option to stop macro execution on the link he or she is currently using. A frame administrator may use this option to stop macro execution on any link.

If this command was entered by the frame administrator then output from this command will be sent only to the link on which the frame administrator entered the command.

Command

[I.39311]

STOP:FRM xy,SEQ ww:MACRO[,LINK l[mm]]!

Completion Message

[O.39311]

M hh:mm:ss xy,ww n[vv] STOP MACRO <macro name>[l[mm]] COMPL

Denial Message

[O.39311.01]

**M hh:mm:ss xy,ww n[vv] STOP MACRO <macro name>[l[mm]] \
COND cc DNY**

Autonomous Message

Not applicable.

Explanation Of Parameters

MACRO - Macro

LINK - Link

l[mm] - Administrative link number

l - Physical link number (1 through 6)

mm - Virtual circuit number (01 through 16)

Variable m is the virtual circuit number in the administrative link.
mm may only be specified when l is 5 or 6.

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

6A No macro is currently executing

D0 Command is Frame administrator (DAX) only.

STST,MON,TO,MJU,TP

SUBRATE TEST ACCESS

Explanation Of Command

This command requests monitor test access on test port **kk** to a Subrate multipoint circuit. In this mode, data transmission in the tested circuit is not interrupted.

This command can only be used when the test port is in the released mode. If the desired multipoint test access point is already in the split mode, the STST,MON,TO,TP command can be used to place it in the monitor mode.

This command overrides any static trunk conditioning that may have been specified for the test port. The test port is given TRSP,MUX trunk conditioning for the duration of the Subrate test access and returned to its previous trunk conditioning state upon release.

Command

Nonhierarchical

[I.19621]

**STST:FRM xy,SEQ ww:MON,TO [s]abcddd[/ff],MJU ssss,[BRi,]\
TP kk!**

Hierarchical

[I.19621]

**STST:FRM xy,SEQ ww:MON,TO uvmnpddd[/ff],MJU ssss,[BRi,]\
TP kk!**

Completion Message

Nonhierarchical

[O.19621]

M hh:mm:ss xy,ww n[vv] STST MON MPTM [s]abcddd/ff MJU ssss\
[BRi] 2 LN MSG:
RATE rr TP kk[UNMAPPED] CGA (ftp) TLA s COMPL

Hierarchical

[O.19621]

M hh:mm:ss xy,ww n[vv] STST MON MPTM uvmnpddd/ff MJU ssss\
[BRi] 2 LN MSG:
RATE rr TP kk[UNMAPPED] CGA (ftp) TLA s COMPL

Denial Message

Nonhierarchical

[O.19621.01]

M hh:mm:ss xy,ww n[vv] STST MON [s]abcddd[/ff] MJU ssss\
[BRi] 3 LN MSG:
TP kk <reason 1>
<reason 2> DNY

Hierarchical

[O.19621.01]

M hh:mm:ss xy,ww n[vv] STST MON uvmnpddd[/ff] MJU ssss\
[BRi] 3 LN MSG:
TP kk <reason 1>
<reason 2> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical NPC number of the multipoint circuit master leg

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical NPC number of the multipoint circuit muster leg

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number of the multipoint circuit master leg

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - TO customer number of the multipoint circuit master leg (1 through 20)

The customer number **ff** is required when the master leg of the multipoint circuit is a customer within a multiplexed DS0B channel. When the master leg is a nonmultiplexed (DS0A) channel, the customer number is entered as **01**, or if the user prefers, the customer number can be omitted and the system will default the value to 01. The customer number will appear in the output message only if specified in the input command.

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

MON - Monitor

TO - To

MJU - Multipoint junction unit

ssss - MJU number of accessed MJU (0001 through 9999)

ssss is the MJU requested for connection to the TO test port. If MJU 0001 is specified, the TO test port faces the control leg of MJU 0001 and the FROM test port faces the master leg external facility termination. If an MJU number other than 0001 is specified and the **BR** is not listed, the TO side faces towards the control leg of the specified MJU and the FROM side faces upstream towards the branch of a cascaded MJU.

BR - Branch

i - Branch number of MJU **ssss** (1 through 4)

Specify **BRi** to connect branch *i* (*i* = 1 through 4) of MJU **ssss** to the TO test port. The FROM side will face downstream.

BRi is present only if specified in the input command.

RATE - Rate

rr - Transmission rate specification

rr *rate in kb/s*

24 2.4

48 4.8

96 9.6

56 56

TP - Test port

kk - Test port number (01 through 96)

Indicates the test port number used for test access to the circuit.

UNMAPPED

- Unmapped

UNMAPPED is output if the specified test access point is not cross-connected. (This situation can occur only when test access to a branch is specified.) When the test access point is unmapped, no signal is connected to the odd test port channel.

MPTM - Multipoint master

[s]abcddd/ff or uvmnpddd/ff specifies the NPC, channel, and optional customer number of the multipoint master (MPTM) leg of the circuit. Note that this is *not* the facility connected to the TO side of the test port. The TO test port is connected to an MJU defined by ssss.

CGA - Carrier group alarm

ftp - CGA status

f - FROM CGA state

f *Explanation*

F FROM facility in CGA

0 FROM facility is not in CGA

t - TO CGA state

t *Explanation*

T TO facility in CGA

0 TO facility is not in CGA

p - Test port digroup CGA state

p *Explanation*

P Test port digroup in CGA

0 Test port digroup is not in CGA

The side of the test access port that faces the control leg of an MJU (that is, downstream) always has the corresponding CGA status listed as "0", indicating no alarm. The CGA status of a side facing upstream corresponds to the status of the circuit's master leg facility.

F - FROM facility in CGA

0 - FROM facility is not in CGA

T - TO facility in CGA

0 - TO facility is not in CGA

- P** - Test port digroup in CGA
0 - Test port digroup is not in CGA

The side of the test access port that faces the control leg of an MJU (that is, downstream) always has the corresponding CGA status listed as "0"; indicating no alarm. The CGA status of a side facing upstream corresponds to the status of the circuit's master leg facility.

- TLA** - Terminate and leave active

- s** - Terminate and leave status of the test access point.

s determines whether the access point is terminated in the FROM, TO, or BOTH, directions, or whether all terminations are released. The user should note that unmapped access points cannot be terminated.

<i>s</i>	<i>Explanation</i>
R	RELEASED. Neither side is terminated
F	FROM side is terminated
T	TO side is terminated
B	BOTH sides are terminated

reason 1

- Coded reason for denial

reason 2

- Explanation of reason 1

reason 1	reason 2
INERR	THE SPECIFIED TEST PORT IS NOT EQUIPPED
UEQD	THE TEST PORT GROUP NPC [s]abc IS NOT EQUIPPED
F UEQD	THE FROM SIDE NPC [s]abc IS NOT EQUIPPED
T UEQD	THE TO SIDE NPC [s]abc IS NOT EQUIPPED
MCOND	TSI sft IS NOT EQUIPPED
MCOND	CCB sf IS NOT EQUIPPED
MCOND	ETSI sqq IS NOT EQUIPPED
MCOND	UNIT [q]q IS NOT EQUIPPED
MCOND	UNIT [q]q FTMI d IS NOT EQUIPPED
MCOND	UNIT [q]q FC sb IS NOT EQUIPPED
MCOND	NPC [s]abc IS NOT EQUIPPED
MCOND	NO DSPU IS EQUIPPED
MCOND	NO SRM OR MJU TYPE NPC IS EQUIPPED
RNGIE	CHANNEL NUMBER ddd IS OUT OF RANGE FOR NPC [s]abc
CN RATE	CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B CHANNEL [s]abcddd
CN RATE	CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A CHANNEL [s]abcddd
PCH	THE SPECIFIED ACCESS POINT IS A PARITY CHANNEL
INERR	MJU ssss DOES NOT EXIST IN THE CIRCUIT
PTLA	THE SPECIFIED TEST ACCESS POINT IS ALREADY IN TLA MODE
NTLA	THE SPECIFIED TEST ACCESS POINT IS ALREADY IN TLR MODE
MPTM	CUSTOMER IS NOT SPECIFIED FOR THE DS0B CHANNEL
INERR	CHANNEL [s]abcddd IS NOT A MULTIPOINT MASTER LEG
INERR	THE SPECIFIED NPC [s]abc IS NOT FACILITY TERMINATING TYPE
MCOND	UNIT [q]q IS NOT FACILITY TERMINATING TYPE
MCOND	BOTH CCN SIDES ARE OUT-OF-SERVICE
MCOND	ACTIVE CCN SIDE s IS OUT-OF -SERVICE
OOS	THE TEST PORT GROUP NPC [s]abc IS OUT-OF-SERVICE
MCOND	INACTIVE CCN SIDE IN-SERVICE AND NPC [s]abc ON INACTIVE SIDE IS OOS
F OOS	THE FROM SIDE NPC [s]abc IS OUT-OF-SERVICE
T OOS	THE TO SIDE NPC [s]abc IS OUT-OF-SERVICE
MCOND	CCNI s IS OUT-OF-SERVICE
MCOND	TSI sft IS OUT-OF-SERVICE
MCOND	CCB sf IS OUT-OF-SERVICE
MCOND	CCI s IS OUT-OF-SERVICE
MCOND	ETSI sqq IS OUT-OF-SERVICE
MCOND	UNIT [q]q IS OUT-OF-SERVICE
MCOND	UNIT [q]q FTMI d IS OUT-OF-SERVICE
MCOND	UNIT [q]q FC sb IS OUT-OF-SERVICE
MCOND	DSPI IN UNIT [q]q IS OUT-OF-SERVICE
MCOND	NPC [s]abc SIDE s IS OUT-OF-SERVICE

INERR	THE SPECIFIED TEST PORT CANNOT BE USED FOR SR CIRCUITS
INERR	TESTPORTS IN THIS GROUP INVALID FOR SR CIRCUIT
MCOND	ACTIVE CCN SIDE s IS FAILED
MCOND	ACTIVE CCN SIDE s IS PESTED
FAIL	THE TEST PORT GROUP NPC [s]abc IS FAILED
F FAIL	THE FROM SIDE NPC [s]abc IS FAILED
T FAIL	THE TO SIDE NPC [s]abc IS FAILED
MCOND	CCNI s IS FAILED
MCOND	TSI sft IS FAILED
MCOND	CCB sf IS FAILED
MCOND	CCI s IS FAILED
MCOND	ETSI sqq IS FAILED
MCOND	UNIT [q]q IS FAILED
MCOND	UNIT [q]q FTMI d IS FAILED
MCOND	UNIT [q]q FC sb IS FAILED
MCOND	DSPI IN UNIT [q]q IS FAILED
MCOND	NPC [s]abc SIDE s IS FAILED
ASGN	THE SPECIFIED TEST PORT IS UNDER TEST
UTST	THE SPECIFIED ACCESS POINT IS UNDER TEST
CH NOT EST	THE SPECIFIED ACCESS POINT IS NOT ESTABLISHED TO SR FEATURE
MONITOR	THE SPECIFIED TEST PORT IS ALREADY IN MONITOR MODE
NUTST	THE SPECIFIED TEST PORT IS UNASSIGNED
NA	CONNECTION EXCEEDS REMAINING CAPACITY

STST,MON,TO,TP

SUBRATE TEST ACCESS

Explanation Of Command

This command requests a change of test port **kk** to the monitor mode for a Subrate circuit. [Note: The format of this command is compatible with DACS/SRDC.] In this mode, data transmission in the tested circuit is not interrupted.

The named external facility termination can be part of a two-point circuit or the master leg or branch termination of a multipoint circuit. (See STST,MON,TO,MJU,BR for a monitor command that specifies the test point in terms of MJU and branch numbers.)

If the test access point specified is established to the Subrate feature but not cross-connected, the output message will contain the keyword **UNMAPPED**. When the test access point is unmapped, no signal is connected to the odd test port channel. A **DS0B** channel is always considered mapped, even when there are no customers cross-connected to it. In this case, the even test port faces the external facility and the odd test port faces the internal subrate multiplexer hardware.

This command can also be entered by using the **TTST** verb. In the case where an external facility termination is specified, no customer number can be present or the command will be denied. This limits this case to testing either entire **DS0B** channels or nonmultiplexed **DS0A** channels. If the Subrate circuit is already under test, the **TTST** verb can be used to place any type of Subrate termination in the monitor mode. In all cases, the resulting output format is the same as that for the **STST** command except for the substitution of the **TTST** verb for the **STST** verb.

This command also overrides any static trunk conditioning that may have been specified for the test port. The test port is given TRSP,MUX trunk conditioning for the duration of the Subrate test access and returned to its previous trunk conditioning state upon release.

Command

Nonhierarchical

[I.19601]

STST:FRM xy,SEQ ww:MON[,TO [s]abcddd[/ff]],TP kk!

Hierarchical

[I.19601]

STST:FRM xy,SEQ ww:MON[,TO uvmnpddd[/ff]],TP kk!

Completion Message

Nonhierarchical

[O.19601]

M hh:mm:ss xy,ww n[vv] STST MON [s]abcddd[/ff] RATE rr TP kk\
[UNMAPPED| LOOPED] 2 LN MSG:
CGA (ftp) TLA s COMPL

[O.19602]

M hh:mm:ss xy,ww n[vv] STST MON [s]abcddd DS0B nn TP kk \
CGA (0tp) TLA s COMPL

Hierarchical

[O.19601]

M hh:mm:ss xy,ww n[vv] STST MON uvmnpddd[/ff] RATE rr TP kk\
[UNMAPPED| LOOPED] 2 LN MSG:
CGA (ftp) TLA s COMPL

[O.19602]

M hh:mm:ss xy,ww n[vv] STST MON uvmnpddd DS0B nn TP kk \
CGA (0tp) TLA s COMPL

Denial Message

Nonhierarchical

[O.19601.01]

M hh:mm:ss xy,ww n[vv] STST MON[[s]abcddd[/ff]] TP kk \
<reason 1> 2 LN MSG:
<reason 2> DNY

Hierarchical

[O.19601.01]

M hh:mm:ss xy,ww n[vv] STST MON[uvmnpddd[/ff]] TP kk \
<reason 1> 2 LN MSG:
<reason 2> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number of the circuit side to be connected to the TO test port channel

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical FROM NPC number of the circuit side to be connected to the TO test port channel

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number of the circuit side connected to the TO test port channel

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - Customer number of the circuit side connected to the TO test port channel

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

kk - Test port number (01 through 96)

kk is used to indicate the test port number to be used for test access to the circuit.

MON - Monitor

If the test port is in the released mode, the **[s]abcddd[/ff]** external facility termination must be specified. This termination is connected to the even test port channel. If the test port already has a Subrate circuit under test, the external facility termination must not be specified or the command will be denied.

Variable **[s]abcddd/ff** specifies the NPC, channel, and customer numbers to be connected to the test port. If a multiplexed DS0B channel is tested, the customer number **ff** is omitted. To test a single customer in the DS0B channel, the customer number field must be specified. When the tested channel is a nonmultiplexed (DS0A) channel, the customer number is listed as **01**, or if the user prefers, the customer number can be omitted and the system will default the value to 01.

RATE - Circuit rate
rr - Circuit rate value (24, 48, 96, or 56)

rr indicates the customer rate of the circuit. If the circuit is mapped; i.e., subrate cross-connected, the listed RATE is equal to the subrate cross-connect rate. For unmapped circuits, in which case the **UNMAPPED** keyword appears in the output, the listed rate depends on the type of test access point. If test access is to a DS0A established channel, the establish channel rate is listed. If the access is to an unconnected subrate channel of a DS0B, the listed rate is the maximum subrate supported by the DS0B. If the circuit is mapped; that is, subrate cross-connected, the listed RATE is equal to the subrate cross-connect rate.

CGA - Carrier group alarm

ftp - CGA status

ftp defines the alarm status of the FROM, TO, and test port facilities, respectively. In the case where the FROM side of the test access faces the master leg of a multipoint circuit, the corresponding FROM CGA status is always listed as "0"; i.e., no alarm. If the test access is associated with a branch of a multipoint circuit, in which case the FROM side faces upstream towards an MJU, the CGA status of the circuit's master leg facility is listed in the FROM field.

f - FROM CGA state

f *Explanation*

F FROM facility in CGA
0 FROM facility is not in CGA

t - TO CGA state

t *Explanation*

T TO facility in CGA
0 TO facility is not in CGA

p - Test port digroup CGA state

p *Explanation*

P Test port digroup in CGA
0 Test port digroup is not in CGA

DS0B - Subrate customer channel

nn - Number of subrate customer channels (05, 10, or 20)

TLA - Terminate and leave activate

s - Termination state of the access point

s indicates the terminate and leave status of the test access point.
s states whether the access point is terminated in the FROM, TO, or BOTH, directions, or whether all terminations are released. The user should note that unmapped or looped access points cannot be terminated.

s Explanation

B BOTH sides are terminated
F FROM side is terminated
R Neither side is terminated
T TO side is terminated

LPD - Looped

Appears in the case of a two-point circuit that is looped on itself.

[s]abcddd/ff

- External facility termination connected to the TO test port channel

reason 1

- Coded reason for denial

reason 2

- Explanation of reason 1

reason 1

INERR
UEQD
F UEQD
T UEQD

reason 2

THE SPECIFIED TEST PORT IS NOT EQUIPPED
THE TEST PORT GROUP NPC [s]abc IS NOT EQUIPPED
THE FROM SIDE NPC [s]abc IS NOT EQUIPPED
THE TO SIDE NPC [s]abc IS NOT EQUIPPED

MCOND	TSI sft IS NOT EQUIPPED
MCOND	CCB sf IS NOT EQUIPPED
MCOND	ETSI sqq IS NOT EQUIPPED
MCOND	UNIT [q]q IS NOT EQUIPPED
MCOND	UNIT [q]q FTMI d IS NOT EQUIPPED
MCOND	UNIT [q]q FC sb IS NOT EQUIPPED
MCOND	NPC [s]abc IS NOT EQUIPPED
MCOND	NO DSPU IS EQUIPPED
MCOND	NO SRM OR MJU TYPE NPC IS EQUIPPED
RNGIE	CHANNEL NUMBER ddd IS OUT OF RANGE FOR NPC [s]abc
CN RATE	CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B CHANNEL [s]abcddd
CN RATE	CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A CHANNEL [s]abcddd
PCH	THE SPECIFIED ACCESS POINT IS A PARITY CHANNEL
INERR	THE SPECIFIED NPC [s]abc IS NOT FACILITY TERMINATING TYPE
MCOND	UNIT [q]q IS NOT FACILITY TERMINATING TYPE
MCOND	BOTH CCN SIDES ARE OUT-OF-SERVICE
MCOND	ACTIVE CCN SIDE s IS OUT-OF -SERVICE
OOS	THE TEST PORT GROUP NPC [s]abc IS OUT-OF-SERVICE
MCOND	INACTIVE CCN SIDE IN-SERVICE AND NPC [s]abc ON INACTIVE SIDE IS OOS
F OOS	THE FROM SIDE NPC [s]abc IS OUT-OF-SERVICE
T OOS	THE TO SIDE NPC [s]abc IS OUT-OF-SERVICE
MCOND	CCNI s IS OUT-OF-SERVICE
MCOND	TSI sft IS OUT-OF-SERVICE
MCOND	CCB sf IS OUT-OF-SERVICE
MCOND	CCI s IS OUT-OF-SERVICE
MCOND	ETSI sqq IS OUT-OF-SERVICE
MCOND	UNIT [q]q IS OUT-OF-SERVICE
MCOND	UNIT [q]q FTMI d IS OUT-OF-SERVICE
MCOND	UNIT [q]q FC sb IS OUT-OF-SERVICE
MCOND	DSPI IN UNIT [q]q IS OUT-OF-SERVICE
MCOND	NPC [s]abc SIDE s IS OUT-OF-SERVICE
INERR	THE SPECIFIED TEST PORT CANNOT BE USED FOR SR CIRCUITS
INERR	TESTPORTS IN THIS GROUP INVALID FOR SR CIRCUIT
MCOND	ACTIVE CCN SIDE s IS FAILED
MCOND	ACTIVE CCN SIDE s IS PESTED
FAIL	THE TEST PORT GROUP NPC [s]abc IS FAILED
F FAIL	THE FROM SIDE NPC [s]abc IS FAILED
T FAIL	THE TO SIDE NPC [s]abc IS FAILED

MCOND	CCNI s IS FAILED
MCOND	TSI sft IS FAILED
MCOND	CCB sf IS FAILED
MCOND	CCI s IS FAILED
MCOND	ETSI sqq IS FAILED
MCOND	UNIT [q]q IS FAILED
MCOND	UNIT [q]q FTMI d IS FAILED
MCOND	UNIT [q]q FC sb IS FAILED
MCOND	DSPI IN UNIT [q]q IS FAILED
MCOND	NPC [s]abc SIDE s IS FAILED
ASGN	THE SPECIFIED TEST PORT IS UNDER TEST
UTST	THE SPECIFIED ACCESS POINT IS UNDER TEST
CH NOT EST	THE SPECIFIED ACCESS POINT IS NOT ESTABLISHED TO TO SR FEATURE
MONITOR	THE SPECIFIED TEST PORT IS ALREADY IN MONITOR MODE
NUTST	THE SPECIFIED TEST PORT IS UNASSIGNED
NA	CONNECTION EXCEEDS REMAINING CAPACITY

STST,SPL,TO,MJU,TP

SUBRATE TEST ACCESS SPLIT

Explanation Of Command

This command requests split test access on a test port to a Subrate multipoint circuit.

This command overrides any static trunk conditioning that may have been specified for the test port. The test port is given TRSP,MUX trunk conditioning for the duration of the subrate test access and returned to its previous trunk conditioning state upon release.

The master leg of the multipoint circuit is specified by network processing circuit, channel, and customer number and serves as the circuit reference for the multipoint junction unit named in the command.

Command

Nonhierarchical

[I.19651]

STST:FRM xy,SEQ ww:SPL,TO [s]abcddd[/ff],MJU ssss,[BRi,],TP kk!

Hierarchical

[I.19651]

STST:FRM xy,SEQ ww:SPL,TO uvmnpddd[/ff],MJU ssss,[BRi,],TP kk!

Completion Message

Nonhierarchical

[O.19651]

M hh:mm:ss xy,ww n[vv] STST SPL MPTM [s]abcddd/ff MJU ssss\
[BRi] 2 LN MSG:
RATE rr TP kk[UNMAPPED] CGA (ftp) TLA s COMPL

Hierarchical

[O.19651]

M hh:mm:ss xy,ww n[vv] STST SPL MPTM uvmnpddd/ff MJU ssss\
[BRi] 2 LN MSG:
RATE rr TP kk[UNMAPPED] CGA (ftp) TLA s COMPL

Denial Message

Nonhierarchical

[O.19651.01]

M hh:mm:ss xy,ww n[vv] STST SPL MPTM [s]abcddd/ff \
MJU ssss[BRi] <reason 1> 2 LN MSG:
<reason 2> DNY

Hierarchical

[O.19651.01]

M hh:mm:ss xy,ww n[vv] STST SPL MPTM uvmnpddd/ff \
MJU ssss[BRi] <reason 1> 2 LN MSG:
<reason 2> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters**SPL** - Split test access**TO** - To Termination**[s]abc** - The 3- or 4-digit nonhierarchical NPC number of TO external facility termination of circuit master leg

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical NPC number of TO external facility termination of circuit master leg

uv - Unit number
m - Module number
np - NPC number within the module

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number of the multipoint circuit master leg

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - Customer number of the multipoint circuit master leg

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

The optional customer number **ff** is required when the master leg of the multipoint circuit is a customer within a multiplexed DS0B channel. When the master leg is a nonmultiplexed (DS0A) channel, the customer number is listed as **01**, or if the user prefers, the customer number can be omitted and the system will default the value to 01.

The external facility termination of the circuit is given by the NPC, channel, and customer number for the master leg of the multipoint circuit. Note that this is *not* the facility defined as the TO side of the circuit.

MJU - Multipoint junction unit

ssss - MJU number of accessed MJU (0001 through 9999)

The TO test port is connected to an MJU defined by **ssss**. If MJU 0001 is specified, the TO test port faces the control leg of MJU 0001 and the FROM test port faces the master leg external facility termination. If an MJU number other than 0001 is specified and a branch has not been entered, the TO side faces towards the control leg of the specified MJU and the FROM side faces upstream towards the branch of a cascaded MJU.

If branch *i* was specified then branch *i* of MJU **ssss** is connected to the TO test port and the FROM side faces downstream.

BR - Branch

i - Branch number of MJU **ssss** (1 through 4)

If the **BRi** field is present, the TO side faces upstream towards the indicated branch of the specified MJU and the FROM side faces downstream, either towards another MJU or towards an external facility termination.

TP - Test port

kk - Test port number (01 through 96)

kk indicates the test port number used for test access to the circuit.

UNMAPPED

- Unmapped

This keyword will be output if the test access point specified is not cross-connected. (This situation can occur only when test access to a branch is specified.) When the test access point is unmapped, no signal is connected to the odd test port channel.

TLA - Terminate and leave activate

s - Termination state of the access point

s defines whether the access point is terminated in the FROM, TO, or BOTH, directions, or whether all terminations are released. The user should note that unmapped access points cannot be terminated.

<i>s</i>	<i>Explanation</i>

R	Released. Neither side is terminated

F	FROM side is terminated

T	TO side is terminated

B	BOTH sides are terminated

RATE - Rate

rr - Transmission rate specification

rr	<i>rate in kb/s</i>

24	2.4

48	4.8

96	9.6

56	56

The customer rate of the circuit is indicated by rr. If the access is to an unconnected or unmapped branch the listed rate is the same as the rest of the multipoint circuit.

MPTM - Multipoint master

The multipoint master leg of the circuit is specified by the termination number which consists of the NPC, channel, and customer numbers combined. Note that this is *not* the facility connected to the TO side of the test port.

CGA - Carrier group alarm

ftp - Alarm status, FROM, TO, and test port, respectively

The side of the test access port that faces the control leg of an MJU (that is, downstream) always has the corresponding CGA status listed as "0"; indicating no alarm. The CGA status of a side facing upstream corresponds to the status of the circuit's master leg facility.

f - FROM CGA state

f *Explanation*

F FROM facility in CGA

0 FROM facility is not in CGA

t - TO CGA state

t *Explanation*

T TO facility in CGA

0 TO facility is not in CGA

p - Test port digroup CGA state

p *Explanation*

P Test port digroup in CGA

0 Test port digroup is not in CGA

reason 1

- Coded reason for denial

reason 2

- Explanation of reason 1

reason 1	reason 2
INERR	THE SPECIFIED TEST PORT IS NOT EQUIPPED
UEQD	THE TEST PORT GROUP NPC [s]abc IS NOT EQUIPPED
F UEQD	THE FROM SIDE NPC [s]abc IS NOT EQUIPPED
T UEQD	THE TO SIDE NPC [s]abc IS NOT EQUIPPED
MCOND	TSI sft IS NOT EQUIPPED
MCOND	CCB sf IS NOT EQUIPPED
MCOND	ETSI sqq IS NOT EQUIPPED
MCOND	UNIT [q]q IS NOT EQUIPPED
MCOND	UNIT [q]q FTMI d IS NOT EQUIPPED
MCOND	UNIT [q]q FC sb IS NOT EQUIPPED
MCOND	NPC [s]abc IS NOT EQUIPPED
MCOND	NO DSPU IS EQUIPPED
MCOND	NO SRM OR MJU TYPE NPC IS EQUIPPED
RNGIE	CHANNEL NUMBER ddd IS OUT OF RANGE FOR NPC [s]abc
CN RATE	CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B CHANNEL [s]abcddd
CN RATE	CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A CHANNEL [s]abcddd
INERR	MJU ssss DOES NOT EXIST IN THE CIRCUIT
PCH	THE SPECIFIED ACCESS POINT IS A PARITY CHANNEL
PTLA	THE SPECIFIED TEST ACCESS POINT IS ALREADY IN TLA MODE
NTLA	THE SPECIFIED TEST ACCESS POINT IS ALREADY IN TLR MODE
MPTM	CUSTOMER IS NOT SPECIFIED FOR THE DS0B CHANNEL
INERR	CHANNEL [s]abcddd IS NOT A MULTIPOINT MASTER LEG
INERR	THE SPECIFIED NPC [s]abc IS NOT FACILITY TERMINATING TYPE
MCOND	UNIT [q]q IS NOT FACILITY TERMINATING TYPE
INERR	TESTPORTS IN THIS GROUP INVALID FOR SR CIRCUIT
MCOND	BOTH CCN SIDES ARE OUT-OF-SERVICE
MCOND	ACTIVE CCN SIDE s IS OUT-OF -SERVICE
OOS	THE TEST PORT GROUP NPC [s]abc IS OUT-OF-SERVICE
MCOND	INACTIVE CCN SIDE IN-SERVICE AND NPC [s]abc ON INACTIVE SIDE IS OOS
F OOS	THE FROM SIDE NPC [s]abc IS OUT-OF-SERVICE
T OOS	THE TO SIDE NPC [s]abc IS OUT-OF-SERVICE
MCOND	CCNI s IS OUT-OF-SERVICE
MCOND	TSI sft IS OUT-OF-SERVICE
MCOND	CCB sf IS OUT-OF-SERVICE
MCOND	CCI s IS OUT-OF-SERVICE
MCOND	ETSI sqq IS OUT-OF-SERVICE
MCOND	UNIT [q]q IS OUT-OF-SERVICE
MCOND	UNIT [q]q FTMI d IS OUT-OF-SERVICE
MCOND	UNIT [q]q FC sb IS OUT-OF-SERVICE
MCOND	DSPI IN UNIT [q]q IS OUT-OF-SERVICE
MCOND	NPC [s]abc SIDE s IS OUT-OF-SERVICE
MCOND	ACTIVE CCN SIDE s IS FAILED
MCOND	ACTIVE CCN SIDE s IS PESTED
FAIL	THE TEST PORT GROUP NPC [s]abc IS FAILED

F FAIL	THE FROM SIDE NPC [s]abc IS FAILED
T FAIL	THE TO SIDE NPC [s]abc IS FAILED
MCOND	CCNI s IS FAILED
MCOND	TSI sft IS FAILED
MCOND	CCB sf IS FAILED
MCOND	CCI s IS FAILED
MCOND	ETSI sqq IS FAILED
MCOND	UNIT [q]q IS FAILED
MCOND	UNIT [q]q FTMI d IS FAILED
MCOND	UNIT [q]q FC sb IS FAILED
MCOND	DSPI IN UNIT [q]q IS FAILED
MCOND	NPC [s]abc SIDE s IS FAILED
ASGN	THE SPECIFIED TEST PORT IS UNDER TEST
UTST	THE SPECIFIED ACCESS POINT IS UNDER TEST
CH NOT EST	THE SPECIFIED ACCESS POINT IS NOT ESTABLISHED TO
	SR FEATURE
NMON	THE SPECIFIED TEST PORT IS ALREADY IN SPLIT MODE
NMON	A DS-OB CHANNEL CANNOT BE SPLIT UNLESS MONITORED FIRST
NUTST	THE SPECIFIED TEST PORT IS UNASSIGNED
NA	CONNECTION EXCEEDS REMAINING EC CAPACITY

STST,SPL,TO,TP

SUBRATE SPLIT TEST ACCESS

Explanation Of Command

This command connects a subrate circuit to test port **kk** and places it in the split mode. In this mode, data transmission in the tested circuit is interrupted.

The user must specify the termination number (digroup, channel, and customer numbers) to be connected to the test port. To test a single customer in a DS0B channel, the customer number is required.

Split test access to an entire multiplexed DS0B channel (rather than a single subrate circuit within the DS0B) can only be done by first monitoring the channel and then splitting it by use of this command without a digroup and channel number.

When the tested channel is a nonmultiplexed (DS0A) channel, the customer number is entered as **01**, or if the user prefers, the customer number can be omitted and the system will default the value to **01**.

The specified termination can be part of a two-point circuit or the master leg or branch termination of a multipoint circuit.

This command overrides any static trunk conditioning that may have been specified for the test port. The test port is given TRSP,MUX trunk conditioning for the duration of the subrate test access, and returned to its previous trunk conditioning state upon release.

CAUTION: Split test access to a **DS0B** channel can potentially cause loss of service to

as many as 20 subrate customers.

Command

Nonhierarchical

[I.19631]

STST:FRM xy,SEQ ww:SPL[,TO [s]abcddd[/ff]],TP kk!

Hierarchical

[I.19631]

STST:FRM xy,SEQ ww:SPL[,TO uvmnpddd[/ff]],TP kk!

Completion Message

Nonhierarchical

[O.19631]

M hh:mm:ss xy,ww n[vv] STST SPL [s]abcddd/ff RATE rr TP kk\
[UNMAPPED] LOOPED] 2 LN MSG:
CGA (ftp) TLA s COMPL

[O.19632]

M hh:mm:ss xy,ww n[vv] STST SPL [s]abcddd DS0B nn TP kk \
CGA (0tp) TLA s COMPL

Hierarchical

[O.19631]

M hh:mm:ss xy,ww n[vv] STST SPL uvmnpddd/ff RATE rr TP kk\
[UNMAPPED] LOOPED] 2 LN MSG:
CGA (ftp) TLA s COMPL

[O.19632]

M hh:mm:ss xy,ww n[vv] STST SPL uvmnpddd DS0B nn TP kk \
CGA (0tp) TLA s COMPL

Denial Message

Nonhierarchical

[O.19631.01]

M hh:mm:ss xy,ww n[vv] STST SPL[[s]abcddd/ff] TP kk \
<reason 1> 2 LN MSG:
<reason 2> DNY

Hierarchical

[O.19631.01]

M hh:mm:ss xy,ww n[vv] STST SPL[uvmnpddd/ff] TP kk \
<reason 1> 2 LN MSG:
<reason 2> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SPL - Split

TO - To

[s]abc - The 3- or 4-digit nonhierarchical NPC number of the circuit side connected to the TO test port channel

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number of the circuit side connected to the TO test port channel

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number of the circuit side connected to the TO test port channel

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - Customer number of the circuit side connected to the TO test port channel

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

TP - Test port

kk - Test port number (01 through 96)

The **TP kk** field indicates the test port number used for test access to the channel.

If the test port is in the released mode, [s]abcddd[/ff] or uvmnpddd[/ff] must be specified. This termination is connected to the even test port channel. If the test port already has a Subrate circuit under test, the external facility termination must not be specified or the command will be denied.

UNMAPPED

- Unmapped

UNMAPPED appears in the output message if the test access point specified is established to the subrate feature but not cross-connected. When the test access point is unmapped, no signal is connected to the odd test port channel.

A DS0B channel is always considered mapped, even when there are no customers cross-connected to it. In this case, the even test port faces the external facility and the odd test port faces the internal subrate multiplexer hardware.

DS0B - Digital Signal 0B

nn - Number of subrate customer channels (05, 10, or 20)

LOOPED - Looped

The two-point circuit is looped upon itself.

RATE - Customer rate

rr - Circuit rate (24, 48, 96, or 56)

If the circuit is mapped; that is, subrate cross-connected the listed RATE is equal to the subrate cross-connect rate. For unmapped circuits, in which case the **UNMAPPED** keyword appears in the output, the listed rate depends on the type of test access point. If test access is to a DS0A established channel, the establish channel rate is listed. If the access is to an unconnected subrate channel of a DS0B, the listed rate is the maximum subrate supported by the DS0B.

CGA - Carrier group alarm

ftp - FROM, TO, and test port CGA status, respectively

Where the FROM side of the test access faces the master leg of a multipoint circuit, the corresponding FROM CGA status is always listed as "0"; indicating no alarm. If the test access is associated with a branch of a multipoint circuit, in which case the FROM side faces upstream towards an MJU, the CGA status of the circuit's master leg facility is listed in the FROM field.

f - FROM CGA state

<i>f</i>	<i>Explanation</i>

F	FROM facility in CGA

0	FROM facility is not in CGA

t - TO CGA state

<i>t</i>	<i>Explanation</i>

T	TO facility in CGA

0	TO facility is not in CGA

p - Test port digroup CGA state

<i>p</i>	<i>Explanation</i>

P	Test port digroup in CGA

0	Test port digroup is not in CGA

TLA - Terminate and leave active

s - Termination state of the access point

For DS0B access points s = R since such access points cannot be terminated.

<i>s</i>	<i>Explanation</i>
R	RELEASED. Neither side is terminated
F	FROM side is terminated
T	TO side is terminated
B	BOTH sides are terminated

LPD - Looped

reason 1

- Coded reason for denial

reason 2

- Explanation of reason 1

reason 1 reason 2

INERR	THE SPECIFIED TEST PORT IS NOT EQUIPPED
UEQD	THE TEST PORT GROUP NPC [s]abc IS NOT EQUIPPED
F UEQD	THE FROM SIDE NPC [s]abc IS NOT EQUIPPED
T UEQD	THE TO SIDE NPC [s]abc IS NOT EQUIPPED
MCOND	TSI sft IS NOT EQUIPPED
MCOND	CCB sf IS NOT EQUIPPED
MCOND	ETSI sqq IS NOT EQUIPPED
MCOND	UNIT [q]q IS NOT EQUIPPED
MCOND	UNIT [q]q FTMI d IS NOT EQUIPPED
MCOND	UNIT [q]q FC sb IS NOT EQUIPPED
MCOND	NPC [s]abc IS NOT EQUIPPED
MCOND	NO DSPU IS EQUIPPED
MCOND	NO SRM OR MJU TYPE NPC IS EQUIPPED
RNGIE	CHANNEL NUMBER ddd IS OUT OF RANGE FOR NPC [s]abc
CN RATE	CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B CHANNEL [s]abcddd
CN RATE	CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A CHANNEL [s]abcddd
PCH	THE SPECIFIED ACCESS POINT IS A PARITY CHANNEL
INERR	TESTPORTS IN THIS GROUP INVALID FOR SR CIRCUIT
INERR	THE SPECIFIED NPC [s]abc IS NOT FACILITY TERMINATING TYPE
MCOND	UNIT [q]q IS NOT FACILITY TERMINATING TYPE
MCOND	BOTH CCN SIDES ARE OUT-OF-SERVICE
MCOND	ACTIVE CCN SIDE s IS OUT-OF -SERVICE
OOS	THE TEST PORT GROUP NPC [s]abc IS OUT-OF-SERVICE
MCOND	INACTIVE CCN SIDE IN-SERVICE AND NPC [s]abc ON INACTIVE SIDE IS OOS
F OOS	THE FROM SIDE NPC [s]abc IS OUT-OF-SERVICE
T OOS	THE TO SIDE NPC [s]abc IS OUT-OF-SERVICE
MCOND	CCNI s IS OUT-OF-SERVICE
MCOND	TSI sft IS OUT-OF-SERVICE
MCOND	CCB sf IS OUT-OF-SERVICE
MCOND	CCI s IS OUT-OF-SERVICE
MCOND	ETSI sqq IS OUT-OF-SERVICE
MCOND	UNIT [q]q IS OUT-OF-SERVICE
MCOND	UNIT [q]q FTMI d IS OUT-OF-SERVICE
MCOND	UNIT [q]q FC sb IS OUT-OF-SERVICE
MCOND	DSPI IN UNIT [q]q IS OUT-OF-SERVICE
MCOND	NPC [s]abc SIDE s IS OUT-OF-SERVICE
INERR	THE SPECIFIED TEST PORT CANNOT BE USED FOR SR CIRCUITS
MCOND	ACTIVE CCN SIDE s IS FAILED
MCOND	ACTIVE CCN SIDE s IS PESTED
FAIL	THE TEST PORT GROUP NPC [s]abc IS FAILED

F FAIL	THE FROM SIDE NPC [s]abc IS FAILED
T FAIL	THE TO SIDE NPC [s]abc IS FAILED
MCOND	CCNI s IS FAILED
MCOND	TSI sft IS FAILED
MCOND	CCB sf IS FAILED
MCOND	CCI s IS FAILED
MCOND	ETSI sqq IS FAILED
MCOND	UNIT [q]q IS FAILED
MCOND	UNIT [q]q FTMI d IS FAILED
MCOND	UNIT [q]q FC sb IS FAILED
MCOND	DSPI IN UNIT [q]q IS FAILED
MCOND	NPC [s]abc SIDE s IS FAILED
ASGN	THE SPECIFIED TEST PORT IS UNDER TEST
UTST	THE SPECIFIED ACCESS POINT IS UNDER TEST
CH NOT EST	THE SPECIFIED ACCESS POINT IS NOT ESTABLISHED TO SR FEATURE
NMON	THE SPECIFIED TEST PORT IS ALREADY IN SPLIT MODE
NMON	A DS-OB CHANNEL CANNOT BE SPLIT UNLESS MONITORED FIRST
NUTST	THE SPECIFIED TEST PORT IS UNASSIGNED
NA	CONNECTION EXCEEDS REMAINING EC CAPACITY
IDNV	Input, data not valid
	THE SPECIFIED ACCESS POINT IS A PARITY CHANNEL
	TESTPORTS IN THIS GROUP INVALID FOR SR CIRCUIT
	THE SPECIFIED NPC [s]abc IS NOT FACILITY TERMINATING TYPE
	UNIT [q]q IS NOT FACILITY TERMINATING TYPE

STST,TLA,TLR,TP

SUBRATE TEST ACCESS

Explanation Of Command

This command requests termination of a subrate circuit under test on test port **kk**. Before using this command, the circuit must be attached to a test port by use of either the STST,MON,TO,TP or the STST,SPL,TO,TP command.

This command can only be used on cross-connected two-point or multipoint circuits. It cannot be used during test access to entire **DS0B** channels or to unmapped (established but not cross-connected) external facility terminations and unmapped multipoint circuit branches. It also cannot be used for two-point circuits that are looped on themselves.

Note: If the termination under test is a DS0B customer and on an Out-Of-Service NPC, this command will complete; however, the new state for that termination will NOT take effect until that NPC is restored to service.

Command

[I.19661]

STST:FRM xy,SEQ ww:{TLA|TLR} m,TP kk!

Completion Message

Nonhierarchical

USAGE: For standard (DS0A) access points:

[O.19661]

**M hh:mm:ss xy,ww n[vv] STST {TLA|TLR} m [s]abcddd/ff RATE rr **
TP kk 2 LN MSG:
CGA (ftp) TLA s COMPL

USAGE: For access points specified in terms of an MJU and (optional)
branch number:

[O.19662]

M hh:mm:ss xy,ww n[vv] STST {TLA|TLR} m MPTM [s]abcddd/ff
MJU ssss[BRi] 2 LN MSG:
RATE rr TP kk CGA(ftp) TLA s COMPL

Hierarchical

USAGE: For standard (DS0A) access points:

[O.19661]

**M hh:mm:ss xy,ww n[vv] STST {TLA|TLR} m uvmnpddd/ff RATE rr **
TP kk 2 LN MSG:
CGA (ftp) TLA s COMPL

USAGE: For access points specified in terms of an MJU and (optional) branch
number:

[O.19662]

M hh:mm:ss xy,ww n[vv] STST {TLA|TLR} m MPTM uvmnpddd/ff
MJU ssss[BRi] 2 LN MSG:
RATE rr TP kk CGA(ftp) TLA s COMPL

Denial Message

[O.19661.01]

M hh:mm:ss xy,ww n[vv] STST {TLA|TLR} m TP kk <reason 1> \
2 LN MSG:
<reason 2> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

- TLA - Terminate and leave activate
TLR - Terminate and leave released
s - The resulting terminate and leave state of the access point upon completion of the command.
m - The requested TLA/TLR modification:

<i>m</i>	<i>Explanation</i>
F	Terminate/release the FROM side
T	Terminate/release the TO side
B	Terminate/release BOTH sides

m is used to specify the terminate and leave state change for either the FROM, TO, or BOTH direction(s) of the circuit. The TO side is defined as the side of the circuit connected to the even numbered test port channel, and the FROM side is connected to the odd numbered test port channel. The Unassigned Multiplexer Channel (UMC) control code is inserted in the direction towards the named circuit end(s).

PRIOR STATE	REQUESTED CHANGE	NEW STATE	PRIOR STATE	REQUESTED CHANGE	NEW STATE
R	TLA F	F	R	TLR F	DNY
R	TLA T	T	R	TLR T	DNY
R	TLA B	B	R	TLR B	DNY
F	TLA F	DNY	F	TLR F	R
F	TLA T	B	F	TLR T	DNY
F	TLA B	B	F	TLR B	R
B	TLA F	DNY	B	TLR F	T
B	TLA T	DNY	B	TLR T	F
B	TLA B	DNY	B	TLR B	R
T	TLA T	DNY	T	T	R
T	F	B	T	F	DNY
T	B	B	T	B	R

TP - Test Port

kk - Test port number (01 through 96)

kk indicates the test port number used for test access to the circuit.

MJU - Multipoint junction unit

ssss - MJU number of MJU under test (0001 through 9999)

BR - Branch

i - Branch number of MJU under test (1 through 4)

ff - Customer number of circuit under test, or of multipoint master leg

01 (DS0A at 2.4, 4.8, 9.6, or 56 kb/s)

01-20 (DS0B at 2.4 kb/s)

01-10 (DS0B at 4.8 kb/s)

01-05 (DS0B at 9.6 kb/s)

[s]abc - Nonhierarchical NPC number of the external facility termination connected to the TO test port channel or of multipoint master leg

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number of the external facility termination connected to the TO test port channel or of multipoint master leg

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are given below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number of the external facility termination connected to the
TO test port channel or of multipoint master leg

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

RATE - Rate

rr - Transmission rate specification

rr *rate in kb/s*

24	2.4
48	4.8
96	9.6
56	56

The customer rate of the circuit is indicated by rr. This is the rate
at which the circuit is mapped (that is, subrate cross-connected via an
SCON or SCNT command.

CGA - Carrier group alarm

ftp - FROM, TO, and test port CGA alarm status.

Where the FROM side of the test access faces the master leg of a
multipoint circuit, the corresponding FROM CGA status is always
listed as "0"; indicating no alarm.

If the test access is associated with a branch of a multipoint circuit,
in which case the FROM side faces upstream towards an MJU, the CGA
status of the circuit's master leg facility is listed in the FROM field.

f - FROM CGA state
f Explanation
F FROM facility in CGA
0 FROM facility is not in CGA

t - TO CGA state
t Explanation
T TO facility in CGA
0 TO facility is not in CGA

p - Test port digroup CGA state
p Explanation
P Test port digroup in CGA
0 Test port digroup is not in CGA

F - FROM facility in CGA
0 - FROM facility is not in CGA

T - TO facility in CGA
0 - TO facility is not in CGA

P - Test port digroup in CGA
0 - Test port digroup is not in CGA

s - Termination state of the access point
s Explanation

F FROM side is terminated
T TO side is terminated
B BOTH sides are terminated
R Neither side is terminated

reason 1

- Coded reason for denial

reason 2

- Explanation of reason 1

<i>reason 1</i>	<i>reason 2</i>
INERR	THE SPECIFIED TEST PORT IS NOT EQUIPPED
UEQD	THE TEST PORT GROUP NPC [s]abc IS NOT EQUIPPED
F UEQD	THE FROM SIDE NPC [s]abc IS NOT EQUIPPED
T UEQD	THE TO SIDE NPC [s]abc IS NOT EQUIPPED
MCOND	TSI sft IS NOT EQUIPPED
MCOND	CCB sf IS NOT EQUIPPED
MCOND	ETSI sqq IS NOT EQUIPPED
MCOND	UNIT [q]q IS NOT EQUIPPED
MCOND	UNIT [q]q FTMI d IS NOT EQUIPPED
MCOND	UNIT [q]q FC sb IS NOT EQUIPPED
MCOND	NO DSPU IS EQUIPPED
MCOND	NO SRM OR MJU TYPE NPC IS EQUIPPED
INERR	TLA CANNOT BE SPECIFIED FOR A LOOPED CHANNEL
INERR	CUSTOMER NUMBER MUST BE SPECIFIED FOR DS-0B
UASGN	TLA CANNOT BE SPECIFIED FOR AN UNMAPPED CIRCUIT
UASGN	TLR CANNOT BE SPECIFIED FOR AN UNMAPPED CIRCUIT
MCOND	UNIT [q]q IS NOT FACILITY TERMINATING TYPE
MCOND	BOTH CCN SIDES ARE OUT-OF-SERVICE
MCOND	ACTIVE CCN SIDE s IS OUT-OF -SERVICE
OOS	THE TEST PORT GROUP NPC [s]abc IS OUT-OF-SERVICE
MCOND	INACTIVE CCN SIDE IN-SERVICE AND NPC [s]abc ON INACTIVE SIDE IS OOS
F OOS	THE FROM SIDE NPC [s]abc IS OUT-OF-SERVICE
T OOS	THE TO SIDE NPC [s]abc IS OUT-OF-SERVICE
MCOND	CCNI s IS OUT-OF-SERVICE
MCOND	TSI sft IS OUT-OF-SERVICE
MCOND	CCB sf IS OUT-OF-SERVICE
MCOND	CCI s IS OUT-OF-SERVICE
MCOND	ETSI sqq IS OUT-OF-SERVICE
MCOND	UNIT [q]q IS OUT-OF-SERVICE
MCOND	UNIT [q]q FTMI d IS OUT-OF-SERVICE
MCOND	UNIT [q]q FC sb IS OUT-OF-SERVICE
MCOND	DSPi IN UNIT [q]q IS OUT-OF-SERVICE
MCOND	NPC [s]abc SIDE s IS OUT-OF-SERVICE
MCOND	ACTIVE CCN SIDE s IS FAILED
MCOND	ACTIVE CCN SIDE s IS PESTED
FAIL	THE TEST PORT GROUP NPC [s]abc IS FAILED
F FAIL	THE FROM SIDE NPC [s]abc IS FAILED
T FAIL	THE TO SIDE NPC [s]abc IS FAILED
MCOND	CCNI s IS FAILED
MCOND	TSI sft IS FAILED
MCOND	CCB sf IS FAILED
MCOND	CCI s IS FAILED
MCOND	ETSI sqq IS FAILED
MCOND	UNIT [q]q IS FAILED
MCOND	UNIT [q]q FTMI d IS FAILED
MCOND	UNIT [q]q FC sb IS FAILED
MCOND	DSPi IN UNIT [q]q IS FAILED
MCOND	NPC [s]abc SIDE s IS FAILED
M OOS	THE MULTIPOINT MASTER (MPTM) NPC [s]abc IS OUT-OF-SERVICE

	M UEQD	THE MULTIPOINT MASTER (MPTM) NPC [s]abc IS NOT EQUIPPED
	M FAIL	THE MULTIPOINT MASTER (MPTM) NPC [s]abc IS FAILED
	CH NOT EST	THE SPECIFIED TEST PORT IS NOT ESTABLISHED TO THE
SR FEATURE		
	INERR	TESTPORTS IN THIS GROUP INVALID FOR SR CIRCUIT
	NTLA	THE SPECIFIED TEST ACCESS POINT IS ALREADY IN TLA MODE
	PTLA	THE SPECIFIED TEST ACCESS POINT IS ALREADY IN TLA MODE
	NUTST	THE SPECIFIED TEST PORT IS UNASSIGNED
	NA	CONNECTION EXCEEDS REMAINING EC CAPACITY

STST,TPR,ALL,LINKS

DISCONNECT TEST ACCESS TIME SLOT

Explanation Of Command

This command releases all Subrate circuits from test access and restores the circuit to normal. If the **ALL** keyword is specified, only those test ports whose test access was originally connected by administrative link **n[vv]** are released. If the **LINKS** keyword is specified, all test ports connected to subrate channels or customers are released, regardless of which administrative link initiated the test access.

This command does not affect the terminate and leave state of the released circuit. If the circuit was terminated either before or during test access, it will retain the termination state upon release.

Command

[I.19681]

STST:FRM xy,SEQ ww:TPR,{ALL|LINKS}!

Completion Message

[O.19681]

M hh:mm:ss xy,ww n[vv] STST TPR ALL COMPL

[O.19682]

**M hh:mm:ss xy,ww n[vv] STST TPR ALL 2 LN MSG:
NO SUBRATE TEST PORTS WERE ACTIVE BY LINK COMPL**

[O.19687]

**M hh:mm:ss xy,ww n[vv] STST TPR LINKS 2 LN MSG:
NO SUBRATE TEST PORTS WERE ACTIVE COMPL**

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

TPR - Test port release

ALL - All

When specified, this keyword causes the release of only those test ports whose test access was initiated (that is, originally connected) by administrative link n[vv]. If the ALL keyword is used, both SRDC and non-SRDC circuits are released.

LINKS - Links

When specified, this keyword causes all test ports connected to Substrate channels or customers to be released, regardless of which administrative link initiated the test access.

STST,TPR,TP

SUBRATE TEST ACCESS

Explanation Of Command

This command releases a subrate circuit from test access on a test port and restores the circuit to normal. The output from this command depends upon whether the access point is a DS0A, DS0B, or MJU.

This command does not affect the terminate and leave state of the released circuit. If the circuit is terminated either before or during test access, it will retain the termination state upon release.

Command

[I.19671]

STST:FRM xy,SEQ ww:TPR,TP kk!

Completion Message

Nonhierarchical

USAGE: For standard (DS0A) Subrate test access points:

[O.19671]

M hh:mm:ss xy,ww n[vv] STST TPR [s]abcddd/ff RATE rr TP kk 2 LN MSG:
TLA s[UNMAPPED|LOOPED][OOS] COMPL

USAGE: For DS0B test access points:

[O.19672]

M hh:mm:ss xy,ww n[vv] STST TPR [s]abcddd DS0B nn TP kk 2 LN MSG:
TLA R[00S] COMPL

USAGE: For access points specified in terms of an MJU and
(optional) branch number:

[O.19674]

M hh:mm:ss xy,ww n[vv] STST TPR [s]abcddd/ff RATE rr TP kk \
MJU ssss[BRi] 2 LN MSG:
TLA s[UNMAPPED][00S] COMPL

Hierarchical

USAGE: For standard (DS0A) Subrate test access points:

[O.19671]

M hh:mm:ss xy,ww n[vv] STST TPR uvmnpddd/ff RATE rr TP kk 2 LN MSG:
TLA s[UNMAPPED|LOOPED][00S] COMPL

USAGE: For DS0B test access points:

[O.19672]

M hh:mm:ss xy,ww n[vv] STST TPR uvmnpddd DS0B nn TP kk 2 LN MSG:
TLA R[00S] COMPL

USAGE: For access points specified in terms of an MJU and
(optional) branch number:

[O.19674]

M hh:mm:ss xy,ww n[vv] STST TPR uvmnpddd/ff RATE rr TP kk \
MJU ssss[BRi] 2 LN MSG:
TLA s[UNMAPPED][00S] COMPL

Denial Message

[O.19671.01]

M hh:mm:ss xy,ww n[vv] STST TPR TP kk <reason 1> 2 LN MSG:
<reason 2> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TPR - Test port release

The termination number (combined NPC, channel, and customer number) indicates the external facility termination of the circuit released from the TO side of the test port.

TP - Test port

kk - Test port number (01 through 96)

[s]abcddd/ff

- External facility termination released from the TO test port channel

RATE - Rate

rr - Transmission rate specification

rr *rate in kb/s*

24 2.4

48 4.8

96 9.6

56 56

If the circuit is mapped (subrate cross-connected) the listed RATE is equal to the subrate cross-connect rate. For unmapped circuits, the listed rate depends on the type of test access point. If test access is to a DS0A established channel, the establish channel rate is listed. If the access is to an unconnected subrate channel of a DS0B, the listed rate is the maximum subrate supported by the DS0B.

UNMAPPED

- Unmapped

LOOPED

- Looped

This keyword appears when a two-point circuit is looped on itself.

TLA - Terminate and leave status of the circuit after it is released from test access.

s - Termination state of the released circuit

<i>s</i>	<i>Explanation</i>
F	FROM side is terminated
B	BOTH sides are terminated
R	RELEASED. Neither side is terminated
T	TO side is terminated

[s]abc - The 3- or 4-digit nonhierarchical NPC number of circuit under test, or of multipoint master leg

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number of circuit under test, or of multipoint master leg

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number of circuit under test, or of multipoint master leg

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - Customer number of circuit under test, or of multipoint master leg

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

DS0B - Digital signal zero B

nn - Number of DS0B substrate customer channels (05, 10, or 20)

MJU - Multipoint junction unit

ssss - MJU number of MJU under test (0001 through 9999)

BR - Branch

i - Branch number of MJU under test (1 - 4)

OOS - Out of service

The facility terminating NPC is out-of-service

reason 1

- Coded reason for denial

reason 2

- Explanation of reason 1

reason 1

reason 2

INERR	THE SPECIFIED TEST PORT IS NOT EQUIPPED
INERR	TESTPORTS IN THIS GROUP INVALID FOR SR CIRCUIT
UEQD	THE TEST PORT GROUP NPC [s]abc IS NOT EQUIPPED
MCOND	TSI sft IS NOT EQUIPPED
MCOND	CCB sf IS NOT EQUIPPED
MCOND	ETSI sqq IS NOT EQUIPPED
MCOND	UNIT [q]q IS NOT EQUIPPED
MCOND	UNIT [q]q FTMI d IS NOT EQUIPPED
MCOND	UNIT [q]q FC sb IS NOT EQUIPPED
MCOND	NO DSPU IS EQUIPPED
MCOND	NO SRM OR MJU TYPE NPC IS EQUIPPED
MCOND	UNIT [q]q IS NOT FACILITY TERMINATING TYPE
MCOND	BOTH CCN SIDES ARE OUT-OF-SERVICE
MCOND	ACTIVE CCN SIDE s IS OUT-OF -SERVICE
OOS	THE TEST PORT GROUP NPC [s]abc IS OUT-OF-SERVICE
MCOND	INACTIVE CCN SIDE IN-SERVICE AND NPC [s]abc ON INACTIVE SIDE IS OOS

MCOND	CCNI s IS OUT-OF-SERVICE
MCOND	TSI sft IS OUT-OF-SERVICE
MCOND	CCB sf IS OUT-OF-SERVICE
MCOND	CCI s IS OUT-OF-SERVICE
MCOND	ETSI sqq IS OUT-OF-SERVICE
MCOND	UNIT [q]q IS OUT-OF-SERVICE
MCOND	UNIT [q]q FTMI d IS OUT-OF-SERVICE
MCOND	UNIT [q]q FC sb IS OUT-OF-SERVICE
MCOND	DSPI IN UNIT [q]q IS OUT-OF-SERVICE
MCOND	NPC [s]abc SIDE s IS OUT-OF-SERVICE
MCOND	ACTIVE CCN SIDE s IS FAILED
MCOND	ACTIVE CCN SIDE s IS PESTED
FAIL	THE TEST PORT GROUP NPC [s]abc IS FAILED
F FAIL	THE FROM SIDE NPC [s]abc IS FAILED
T FAIL	THE TO SIDE NPC [s]abc IS FAILED
MCOND	CCNI s IS FAILED
MCOND	TSI sft IS FAILED
MCOND	CCB sf IS FAILED
MCOND	CCI s IS FAILED
MCOND	ETSI sqq IS FAILED
MCOND	UNIT [q]q IS FAILED
MCOND	UNIT [q]q FTMI d IS FAILED
MCOND	UNIT [q]q FC sb IS FAILED
MCOND	DSPI IN UNIT [q]q IS FAILED
MCOND	NPC [s]abc SIDE s IS FAILED
CH NOT EST	THE SPECIFIED TEST PORT IS NOT ESTABLISHED TO A SR CIRCUIT
NUTST	THE SPECIFIED TEST PORT IS UNASSIGNED
NA	CONNECTION EXCEEDS REMAINING EC CAPACITY

SW,BCAST,OLD,NEW,INCL

DS0 CIRCUIT ROLL - BRIDGE COMMAND

Explanation Of Command

This command is used to perform the Bridge step of the DS0 (64kbit/s) Roll operation. (For DS1 or 2 Mbit/s Roll operations use the commands I.14061, I.14071, and I.14081.)

Test signals may exist on the new DS0. If allowed to remain they will overwrite the signal transferred from the old DS0.

Use the UTL::QRY,TSIG,NPC command, prior to executing this command, to verify that no test signals exist on the new DS0.

The DS0 (64kbit/s) Roll procedure consists of three commands:

1. Bridge

This step will bridge the transmit data by broadcasting to the new DS0 as well as the old DS0. Use this command.

2. Roll

This step rolls the service by switching the receive data from the old DS0 to the new DS0. Use command I.14031.

3. Cut

This step takes down the bridge by disconnecting the transmit data from the old DS0. Use command I.14041.

NOTE: The ROLL procedure will re-direct ALL cross-connections associated with the DS0 signal being rolled.

The user should limit the number of substrate channels established to a digroup using D4-type framing. When the unassigned multiplex code (UMC) is present on too many channels it simulates a yellow alarm. A limit of 10 channels is safe for a Lucent Technologies D-bank. This problem only exists when the DS0Bs are established but not connected.

Command

Nonhierarchical

[I.14021]

SW:FRM xy,SEQ ww:BCAST,OLD [s]abcddd[-eee],NEW [t]ghijjj\
[-kkk][,INCL]

Hierarchical

[I.14021]

SW:FRM xy,SEQ ww:BCAST,OLD uvmnpddd[-eee],NEW wxkqrjjj\
[-kkk][,INCL]

Completion Message

Nonhierarchical

[O.14021]

M hh:mm:ss xy,ww n[vv] SW BCAST [s]abcddd[-eee],[t]ghijjj[-kkk)\
[INCL] COMPL

Hierarchical

[O.14021]

M hh:mm:ss xy,ww n[vv] SW BCAST uvmnpddd[-eee],wxkqrjjj[-kkk)\
[INCL] COMPL

Denial Message

Nonhierarchical

[O.14021.01]

M hh:mm:ss xy,ww n[vv] SW BCAST [s]abcd[-eee],[t]ghij[-kkk]\
[INCL][mmm,nnn] COND cc DNY

Hierarchical

[O.14021.01]

M hh:mm:ss xy,ww n[vv] SW BCAST uvmp[-eee],wxqr[-kkk]\
[INCL][mmm,nnn] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

BCAST - Broadcast

OLD - Old

The bridge step does not need the OLD NPC to be in service, however the roll step does. Therefore, it is possible that the bridge step will be allowed when the subsequent roll step will be denied.

For the hierarchical unit entities, however, the bridge step needs both the OLD NPC hierarchy and the NEW NPC hierarchy to be in service. Otherwise, the bridge step will be denied.

NEW - New

[s]abc - The 3- or 4-digit nonhierarchical OLD NPC number

[t]ghi - The 3- or 4-digit nonhierarchical NEW NPC number

Note: Valid types for old and new NPC's are DExyz and DAxyz (except DE9y9 and DA9y9) and TExyz and TAxyz (except TE9y9 and TA9y9).

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmp - Hierarchical OLD NPC number

wxkqr - Hierarchical NEW NPC number

uv,wx - Unit number

m,k - Module number

np,qr - NPC number within the module

The values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd, jjj

- Channel numbers for beginning of channel range

eee, kkk

- Channel numbers for end of channel range

To connect a range of channels, use the optional fields eee and kkk.

INCL - Inclusive

A circuit designated as a customer controlled circuit, a red circuit or a subrate T1 circuit cannot be modified without using the inclusive keyword in the message. Also, an NPC which supports these circuits cannot be manually removed unless the INCL keyword is given in the remove message.

mmm - The OLD channel number involved in denial (ddd through eee).

nnn - The NEW channel number involved in denial (jjj through kkk).

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
02		Subject entity is not equipped
04		Subject entity is out of service
05		Subject entity is pested
1E		Customer control or red circuit exists
26		NPC type error
01		Invalid range for specified NPC type
12		Active CCN side not IS or failed or pested or hardware OOS
13		UNIT not equipped, not in service, or failed
14		CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15		FTMI not equipped, not in service, or failed
16		FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17		TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
18		DSPI not equipped, not in service, or failed
21		Trunk conditioning is invalid
32		Termination is under test
33		Termination is a test port
C8		Exceeded depth limit of 6 on broadcast conference concatenation

cc	st	<i>Explanation</i>
1A		Required FLI not equipped, not in service, or failed
1B		Required MXR not equipped, not in service, or failed
1C		Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
1D		Required MIU not equipped, not in service, or failed
46		NPC Failed or Out of Service
A9		Cross-connect not consistent with feature package
B7		No DSP unit equipped
B8		No CBTYPE NPC equipped
B9		No CBTYPE NPC capacity remaining
BA		Inactive side NPC out of service and inactive side in service
EA		AIS invalid for cross-connection specified
EC	MCOND	Invalid channel 000 cross-connection specified
ED	MCOND	Invalid channel 031 cross-connection specified
0A		All CBTYPE NPCs out of service or failed
7E		Incomplete circuit exists on OLD NPC
E0		ETSI not equipped, not in service, or failed
68		NEW NPC already cross-connect or mapped channel(s) on new
69		Mapped parity channel(s) on new
6C		Old and new chan on same NPC and within the range
6E		Old or new is a non-channelized type in a DS0 command
6F		The OLD or NEW NPC is already being rolled.
70		One of the FAR end channels is being rolled
71		Unmapped channel(s) on old
72		One of the far NPC(s) is SLC
73		Channel has a FAR, which is within the range
77		Obsolete circuit type
78		Ranges of old and new do not match
79		DCTN conference channel cannot be rolled
7A		Testport/testgroup channel cannot be rolled
7B		Channel out-of-bounds in a Broadcast or Virtual circuit.
7C		Parity channel out of bound on new
7D		Not first channel in a BCON/virtual conf
9C		Parity channel cannot be within the range of a DS0 command.

SW,BCAST,OLD,NEW,INCL

FACILITY ROLL - BRIDGE COMMAND

Explanation Of Command

This input command is used to perform the Bridge step of the DS1 or 2Mbit/s Roll operation. (For DS0 Roll operations use the commands I.14021, I.14031, and I.14041.)

Test signals may exist on the new DS0. If allowed to remain they will overwrite the signal transferred from the old DS0.

Use the UTL::QRY,TSIG,NPC command, prior to executing this command, to verify that no test signals exist on the new DS0.

This command will be denied with a condition code of **73** if one or more pairs of channels within the old NPC are cross-connected to each other. This command will also be denied with the same condition code if a channel is looped back on itself.

The error message that corresponds to condition code **73** is:

Channel has a FAR, which is within the range

The term **FAR** in that error message refers to the other channel that is cross-connected to a channel on the NPC that is being rolled, but the other channel of the cross-connection must not be rolled, thus the error message occurs for a cross-connection that connects two channels on the same NPC.

The DS1 or 2Mbit/s Roll procedure consists of three commands:

1. Bridge

This step will bridge the transmit data by broadcasting to the new NPC as well as the old NPC. Use this command.

2. Roll

This step rolls the service by switching the receive data from the old NPC to the new NPC. Use command I.14071.

3. Cut

This step takes down the bridge by disconnecting the transmit data from the old NPC. Use command I.14081.

The user should limit the number of substrate channels established to a digroup using D4-type framing. When the unassigned multiplex code (UMC) is present on too many channels it simulates a yellow alarm. A limit of 10 channels is safe for a Lucent Technologies D-bank. This problem only exists when the DS0Bs are established but not connected.

Command

Nonhierarchical

[I.14061]

SW:FRM xy,SEQ ww:BCAST,OLD [s]abc,NEW [t]ghi[,INCL]

Hierarchical

[I.14061]

SW:FRM xy,SEQ ww:BCAST,OLD uvmnp,NEW wxkqr[,INCL]

Completion Message

Nonhierarchical

[O.14061]

M hh:mm:ss xy,ww n[vv] SW BCAST [s]abc,[t]ghi[INCL] COMPL

Hierarchical

[O.14061]

M hh:mm:ss xy,ww n[vv] SW BCAST uvmnp,wxkqr[INCL] COMPL

Denial Message

Nonhierarchical

[O.14061.01]

M hh:mm:ss xy,ww n[vv] SW BCAST [s]abc,[t]ghi\
[INCL][mmm,nnn] COND cc DNY

Hierarchical

[O.14061.01]

M hh:mm:ss xy,ww n[vv] SW BCAST uvmnp,wxkqr\
[INCL][mmm,nnn] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

BCAST - Broadcast

OLD - Old

The bridge step does not need the OLD NPC to be in service, however the roll step does. Therefore, it is possible that the bridge step will be allowed but the subsequent roll step will be denied.

For the hierarchical unit entities, however, the bridge step needs both the OLD NPC hierarchy and the NEW NPC hierarchy to be in service. Otherwise, the bridge step will be denied.

NEW - New

[s]abc - The 3- or 4-digit nonhierarchical OLD NPC number

[t]ghi - The 3- or 4-digit nonhierarchical NEW NPC number

Note: Valid types for old and new NPC's are DExyz, DAXyz, TExyz and TAxzy.

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical OLD NPC number
wxkqr - Hierarchical NEW NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

The values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

INCL - Inclusive

A circuit designated as a customer controlled circuit, a red circuit or a subrate T1 circuit cannot be modified without using the inclusive keyword in the message. Also, an NPC which supports these circuits cannot be manually removed unless the INCL keyword is given in the remove message.

cc - Hexadecimal condition code

cc *Explanation*

02	Subject entity is not equipped
04	Subject entity is out of service
05	Subject entity is pested
1E	Customer control or red circuit exists
26	NPC type error
01	Invalid range for specified NPC type
12	Active CCN side not IS or failed or pested or hardware OOS
13	UNIT not equipped, not in service, or failed
14	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	FTMI not equipped, not in service, or failed
16	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
18	DSPI not equipped, not in service, or failed
21	Trunk conditioning is invalid
32	Termination is under test
C8	Exceeded depth limit of 6 on broadcast conference concatenation
1A	Required FLI not equipped, not in service, or failed
1B	Required MXR not equipped, not in service, or failed
1C	Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
1D	Required MIU not equipped, not in service, or failed
46	NPC Failed or Out of Service
A9	Cross-connect not consistent with feature package
B6	C-bit operations are enabled
B7	No DSP unit equipped
B8	No CBTYPE NPC equipped
B9	No CBTYPE NPC capacity remaining
BA	Inactive side NPC out of service and inactive side in service
EA	AIS invalid for cross-connection specified
0A	All CBTYPE NPCs out of service or failed
7E	Incomplete circuit exists on OLD NPC
E0	ETSI not equipped, not in service, or failed

cc *Explanation*

- 68** NEW NPC already cross-connect or mapped channel(s) on new
- 6B** No mapped channel on old
- 6D** One NPC is a non-channelized type and the other is not
- 6F** The OLD or NEW NPC is already being rolled.
- 70** One of the FAR end channels is being rolled
- 72** One of the far NPC(s) is SLC
- 73** Channel has a FAR, which is within the range
- 74** Old and new are the same NPC in a DS1 command
- 77** Obsolete circuit type
- 79** DCTN conference channel cannot be rolled
- 7A** Testport/testgroup channel cannot be rolled
- 7B** Channel out-of-bounds in a Broadcast or Virtual circuit.
- 7C** Parity channel out of bound on new
- 7D** Not first channel in a BCON/virtual conf
- 9B** Termination is under test or is a test port or group
- 9C** Parity channel cannot be within the range of a DS0 command.

SW,DISC,OOS

DS0 CIRCUIT ROLL - DISCONNECT COMMAND

Explanation Of Command

This input command is used to perform the Cut step of the DS0 (or 64kbit/s) Roll operation. (For DS1 or 2 Mbit/s Roll operations use the commands I.14061, I.14071, and I.14081.)

The DS0 (or 64kbit/s) Roll procedure consists of three commands:

1. Bridge

This step will bridge the transmit data by broadcasting to the new DS0 as well as the old DS0. Use command I.14021.

2. Roll

This step rolls the service by switching the receive data from the old DS0 to the new DS0. Use command I.14031.

3. Cut

This step takes down the bridge by disconnecting the transmit data from the old DS0. Use this command.

NOTE:

The ROLL procedure will re-direct ALL cross-connections associated with the DS0 signal being rolled.

Command

Nonhierarchical

[I.14041]

SW:FRM xy,SEQ ww:DISC [s]abcddd[-eee][,OOS]

Hierarchical

[I.14041]

SW:FRM xy,SEQ ww:DISC uvmnpddd[-eee][,OOS]

Completion Message

Nonhierarchical

[O.14041]

M hh:mm:ss xy,ww n[vv] SW DISC [s]abcddd[-eee][OOS] COMPL

Hierarchical

[O.14041]

M hh:mm:ss xy,ww n[vv] SW DISC uvmnpddd[-eee][OOS] COMPL

Denial Message

Nonhierarchical

[O.14041.01]

M hh:mm:ss xy,ww n[vv] SW DISC [s]abcddd[-eee]\
[OOS][mmm] COND cc DNY

Hierarchical

[O.14041.01]

M hh:mm:ss xy,ww n[vv] SW DISC uvmnpddd[-eee]\
[OOS][mmm] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

DISC - Disconnect

[s]abc - The 3- or 4-digit nonhierarchical NPC number

Note: Valid NPC types are DExyz and DAxyz (except DE9y9 and DA9y9) and TExyz and TAxzy (except TE9y9 and TA9y9).

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmp - Hierarchical OLD NPC number

wxkqr - Hierarchical NEW NPC number

uv,wx - Unit number

m,k - Module number

np,qr - NPC number within the module

The values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number for beginning of channel range

eee - Channel number for end of channel range

To connect a range of channels, use the optional field eee.

OOS - Out Of Service

The OOS keyword is used to force a disconnect from an NPC which is out of service.

mmm - The channel number involved in denial (ddd through eee).

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
02		Subject entity is not equipped
04		Subject entity is out of service
01		Invalid range for specified NPC type
12		Active CCN side not IS or failed or pested or hardware OOS
13		UNIT not equipped, not in service, or failed

cc	st	<i>Explanation</i>
14		CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15		FTMI not equipped, not in service, or failed
16		FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17		TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
18		DSPI not equipped, not in service, or failed
C8		Exceeded depth limit of 6 on broadcast conference concatenation
1A		Required FLI not equipped, not in service, or failed
1B		Required MXR not equipped, not in service, or failed
1C		Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
1D		Required MIU not equipped, not in service, or failed
A9		Cross-connect not consistent with feature package
B7		No DSP unit equipped
B8		No CBTYP NPC equipped
B9		No CBTYP NPC capacity remaining
BA		Inactive side NPC out of service and inactive side in service
EC	MCOND	Invalid channel 000 cross-connection specified
ED	MCOND	Invalid channel 031 cross-connection specified
0A		All CBTYP NPCs out of service or failed
E0		ETSI not equipped, not in service, or failed
67		Improper roll command sequence
6C		Old and new chan on same NPC and within the range
75		Old and new channels have not been paired by a BCAST command.
76		Channel or NPC not bridged
79		DCTN conference channel cannot be rolled
7A		Testport/testgroup channel cannot be rolled
7B		Channel out-of-bounds in a Broadcast or Virtual circuit.
7C		Parity channel out of bound on new
7D		Not first channel in a BCON/virtual conf
9C		Parity channel cannot be within the range of a DS0 command.

SW,DISC,OOS

FACILITY ROLL - DISCONNECT COMMAND

Explanation Of Command

This input command is used to perform the Cut step of the DS1 or 2Mbit/s Roll procedure. (For DS0 Roll operations use the commands I.14021, I.14031, and I.14041.)

The DS1 or 2Mbit/s Roll procedure consists of three commands:

1. Bridge

This step will bridge the transmit data by broadcasting to the new NPC as well as the old NPC. Use command I.14061.

2. Roll

This step rolls the service by switching the receive data from the old NPC to the new NPC. Use command I.14071.

3. Cut

This step takes down the bridge by disconnecting the transmit data from the old NPC. Use this command.

Command

Nonhierarchical

[I.14081]

SW:FRM xy,SEQ ww:DISC [s]abc[,OOS]

Hierarchical

[I.14081]

SW:FRM xy,SEQ ww:DISC uvmnp[,OOS]

Completion Message

Nonhierarchical

[O.14081]

M hh:mm:ss xy,ww n[vv] SW DISC [s]abc[OOS] COMPL

Hierarchical

[O.14081]

M hh:mm:ss xy,ww n[vv] SW DISC uvmnp[OOS] COMPL

Denial Message

Nonhierarchical

[O.14081.01]

M hh:mm:ss xy,ww n[vv] SW DISC [s]abc[OOS][mmm] COND cc DNY

Hierarchical

[O.14081.01]

M hh:mm:ss xy,ww n[vv] SW DISC uvmnp [OOS][mmm] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

DISC - Disconnect

[s]abc - The 3- or 4-digit nonhierarchical NPC number

Note: Valid NPC types are DExyz, DAxyz, TExyz, TAxzy, THxyz.

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical OLD NPC number
wxkqr - Hierarchical NEW NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

The values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

OOS - Out of service

The OOS keyword is used to force a disconnect from an NPC which is out of service.

cc - Hexadecimal condition code

cc *Explanation*

02	Subject entity is not equipped
04	Subject entity is out of service
01	Invalid range for specified NPC type
12	Active CCN side not IS or failed or pested or hardware OOS
13	UNIT not equipped, not in service, or failed
14	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	FTMI not equipped, not in service, or failed
16	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
18	DSPI not equipped, not in service, or failed
C8	Exceeded depth limit of 6 on broadcast conference concatenation
1A	Required FLI not equipped, not in service, or failed
1B	Required MXR not equipped, not in service, or failed
1C	Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
1D	Required MIU not equipped, not in service, or failed
A9	Cross-connect not consistent with feature package
B7	No DSP unit equipped
B8	No CBTYPE NPC equipped
B9	No CBTYPE NPC capacity remaining
BA	Inactive side NPC out of service and inactive side in service
0A	All CBTYPE NPCs out of service or failed
E0	ETSI not equipped, not in service, or failed

cc *Explanation*

- 67** Improper roll command sequence
- 6B** No mapped channel on old
- 75** Old and new channels have not been paired by a BCAST command.
- 76** Channel or NPC not bridged
- 79** DCTN conference channel cannot be rolled
- 7A** Testport/testgroup channel cannot be rolled
- 7B** Channel out-of-bounds in a Broadcast or Virtual circuit.
- 7C** Parity channel out of bound on new
- 7D** Not first channel in a BCON/virtual conf
- 9C** Parity channel cannot be within the range of a DS0 command.

SW,NPC,RT,PSW,USW,ALW,INH,FRC,INCL

SWITCH::

Explanation Of Command

This command requests the activation (PSW), termination (USW), permission (ALW) or inhibition (INH) of protection switching on the SLC® Carrier terminated digroups. The **INCL** keyword must always be used for any digroup A switching activity such as activation, inhibition, permission, or termination. The **FRC** keyword is meaningful only when used with the **INH** option to inhibit a failed digroup from being protected.

Command

Nonhierarchical

[I.39401]

```
SW:FRM xy,SEQ ww:{NPC [s]abc|RT ffff,xxx},\
{PSW|USW|ALW|INH}[ ,FRC][ ,INCL]!
```

Hierarchical

[I.39401]

```
SW:FRM xy,SEQ ww:{NPC uvmnp|RT ffff,xxx},\
{PSW|USW|ALW|INH}[ ,FRC][ ,INCL]!
```

Completion Message

Nonhierarchical

[O.39401]

M hh:mm:ss xy,ww n[vv] SW {NPC [s]abc|RT ffff,xxx}\
{PSW|USW|ALW|INH}[FRC][INCL] COMPL

Hierarchical

[O.39401]

M hh:mm:ss xy,ww n[vv] SW {NPC uvmnp|RT ffff,xxx}\
{PSW|USW|ALW|INH} [FRC][INCL] COMPL

Denial Message

Nonhierarchical

[O.39401.01]

M hh:mm:ss xy,ww n[vv] SW {NPC [s]abc|RT ffff,xxx}\
{PSW|USW|ALW|INH} [FRC][INCL] COND cc DNY

Hierarchical

[O.39401.01]

M hh:mm:ss xy,ww n[vv] SW {NPC uvmnp|RT ffff,xxx}\
{PSW|USW|ALW|INH}[FRC][INCL] COND cc DNY

Autonomous Message

Nonhierarchical

[O.39401]

* hh:mm:ss xy,ww SW NPC [s]abc RT ffff DGx USW COMPL

Hierarchical

[O.39401]

* hh:mm:ss xy,ww SW NPC uvmnp RT ffff DGx USW COMPL

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number within the unit
np - NPC number within the module
The allowable values are presented below:

DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

RT - Remote terminal
ffff - RT bank identification number (0000 - 9999 inclusive)

xxx - Digroup designation

<i>xxx</i>	<i>Explanation</i>
DGA	Digroup A
DGB	Digroup B
DGC	Digroup C
DGD	Digroup D
ALL	All Digroups (DGA, DGB, DGC and DGD)

The "ALL" option is not applicable to the MML message.
The "DGx" in the autonomous output means DGA, DGB, DGC, or DGD.

PSW - Perform a protection switch
USW - Perform an unswitch
ALW - Allow a digroup to be protected
INH - Inhibit a digroup from protection
FRC - Force
INCL - Inclusive

cc - Hexadecimal condition code

cc	<i>Explanation</i>
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
15	NPC is unequipped
46	NPC Failed or Out of Service
63	NPC is a DGP
6A	NPC type is not DS type
78	Protection switch process failed

cc *Explanation*

- 7E** Bank id number not found
- 7F** NPC is not added
- 87** DGP is protecting a primary digroup
- 8B** Digroup name and bank id don't match
- C9** The INCL keyword is needed for DGA
- CA** No protection switch is currently active
- CB** Protection entity out of service or failed
- CC** Protection entity is unequipped
- CD** Data link failed
- CE** Far end failed to respond
- D1** Protection switch existing is autonomous
- D2** Protection switching is already inhibited
- D3** Protection switching is already allowed
- D4** Active CCN side is out of service
- D5** Boot in progress, can't service request
- FD** Line Loop Back is active
- A6** Invalid switch request for DCLU

SW,ROLL,OLD,NEW,INCL,FRC,OOS

DS0 CIRCUIT ROLL- ROLL COMMAND

Explanation Of Command

This input command is used to perform the Roll step of the DS0 (or 64kbit/s) Roll operation. (For DS1 or 2 Mbit/s Roll operations use the commands I.14061, I.14071, and I.14081.)

The DS0 (or 64kbit/s) Roll procedure consists of three commands:

1. Bridge

This step will bridge the transmit data by broadcasting to the new DS0 as well as the old DS0. Use command I.14021.

2. Roll

This step rolls the service by switching the receive data from the old DS0 to the new DS0. Use this command.

3. Cut

This step takes down the bridge by disconnecting the transmit data from the old DS0. Use command I.14041.

NOTE:

The ROLL procedure will re-direct ALL cross-connections associated with the DS0 signal being rolled.

Command

Nonhierarchical

[I.14031]

SW:FRM xy,SEQ ww:ROLL,OLD [s]abcddd[-eee],NEW [t]ghijjj[-kkk]\
[,INCL][,FRC][,OOS]

Hierarchical

[I.14031]

SW:FRM xy,SEQ ww:ROLL,OLD uvmnpddd[-eee],NEW wxkqrjjj[-kkk]\
[,INCL][,FRC][,OOS]

Completion Message

Nonhierarchical

[O.14031]

M hh:mm:ss xy,ww n[vv] SW ROLL [s]abcddd[-eee],[t]ghijjj[-kkk]\
[INCL][FRC][OOS] COMPL

Hierarchical

[O.14031]

M hh:mm:ss xy,ww n[vv] SW ROLL uvmnpddd[-eee],wxkqrjjj[-kkk]\
[INCL][FRC][OOS] COMPL

Denial Message

Nonhierarchical

[O.14031.01]

M hh:mm:ss xy,ww n[vv] SW ROLL [s]abcddd[-eee],[t]ghijjj[-kkk]\
[INCL][FRC][OOS] 2 LN MSG:
[mmm,nnn] COND cc DNY

Hierarchical

[O.14031.01]

M hh:mm:ss xy,ww n[vv] SW ROLL uvmnpddd[-eee],wxkqrjjj[-kkk]\
[INCL][FRC][OOS] 2 LN MSG:
[mmm,nnn] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ROLL - Roll

OLD - Old termination

NEW - New termination

[s]abc - The 3- or 4-digit nonhierarchical OLD NPC number

[t]ghi - The 3- or 4-digit nonhierarchical NEW NPC number

Note: Valid types for old and new NPC's are DExyz and DAxyz (except DE9y9 and DA9y9) and TExyz and TAxzy (except TE9yz and TA9y9).

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical OLD NPC number
wxkqr - Hierarchical NEW NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

The values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd, jjj
- Channel numbers for beginning of channel range

eee, kkk
- Channel numbers for end of channel range

To connect a range of channels, use the optional fields eee and kkk.

INCL - Inclusive

A circuit designated as a customer controlled circuit, a red circuit or a substrate T1 circuit cannot be modified without using the inclusive keyword in the message.

FRC - Force

The FRC keyword is used to force a roll to an NPC which is in CGA.

OOS - Out of service

The OOS keyword is used to force a roll from an NPC which is out of service.

mmm - The OLD channel number involved in denial (ddd through eee).

nnn - The NEW channel number involved in denial (jjj through kkk).

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
02		Subject entity is not equipped
04		Subject entity is out of service
05		Subject entity is pested
1E		Customer control or red circuit exists
01		Invalid range for specified NPC type
12		Active CCN side not IS or failed or pested or hardware OOS
13		UNIT not equipped, not in service, or failed
14		CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15		FTMI not equipped, not in service, or failed
16		FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17		TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
18		DSPI not equipped, not in service, or failed
C8		Exceeded depth limit of 6 on broadcast conference concatenation
1A		Required FLI not equipped, not in service, or failed
1B		Required MXR not equipped, not in service, or failed
1C		Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
1D		Required MIU not equipped, not in service, or failed
46		NPC Failed or Out of Service
A9		Cross-connect not consistent with feature package
B7		No DSP unit equipped
B8		No CBTYPE NPC equipped
B9		No CBTYPE NPC capacity remaining
BA		Inactive side NPC out of service and inactive side in service
EC	MCOND	Invalid channel 000 cross-connection specified
ED	MCOND	Invalid channel 031 cross-connection specified
0A		All CBTYPE NPCs out of service or failed
E0		ETSI not equipped, not in service, or failed

cc	st	<i>Explanation</i>
67		Improper roll command sequence
6A		New in CGA or PBA
6C		Old and new chan on same NPC and within the range
75		Old and new channels have not been paired by a BCAST command.
78		Ranges of old and new do not match
79		DCTN conference channel cannot be rolled
7A		Testport/testgroup channel cannot be rolled
7B		Channel out-of-bounds in a Broadcast or Virtual circuit.
7C		Parity channel out of bound on new
7D		Not first channel in a BCON/virtual conf
9C		Parity channel cannot be within the range of a DS0 command.

SW,ROLL,OLD,NEW,INCL,FRC,OOS,TWAY

FACILITY ROLL - ROLL COMMAND

Explanation Of Command

This input command is used to perform the Roll step of the DS1 or 2Mbit/s Roll procedure. (For DS0 Roll operations use the commands I.14021, I.14031, and I.14041.)

The DS1 or 2Mbit/s Roll procedure consists of three commands:

1. Bridge

This step will bridge the transmit data by broadcasting to the new NPC as well as the old NPC. Use command I.14061.

2. Roll

This step rolls the service by switching the receive data from the old NPC to the new NPC. Use this command.

3. Cut

This step takes down the bridge by disconnecting the transmit data from the old NPC. Use command I.14081.

Command

Nonhierarchical

[I.14071]

**SW:FRM xy,SEQ ww:ROLL,OLD [s]abc,NEW [t]ghi[,INCL][,FRC]\
[,OOS][,TWAY]**

Hierarchical

[I.14071]

SW:FRM xy,SEQ ww:ROLL,OLD uvmnp,NEW wxkqr[,INCL][,FRC]\
[,OOS][,TWAY]

Completion Message

Nonhierarchical

[O.14071]

M hh:mm:ss xy,ww n[vv] SW ROLL [s]abc,[t]ghi[INCL][FRC]\
[OOS][TWAY] COMPL

Hierarchical

[O.14071]

M hh:mm:ss xy,ww n[vv] SW ROLL uvmnp,wxkqr[INCL][FRC][OOS]\
[TWAY] COMPL

Denial Message

Nonhierarchical

[O.14071.01]

M hh:mm:ss xy,ww n[vv] SW ROLL [s]abc,[t]ghi\
[INCL][FRC][OOS][TWAY][mmm,nnn] COND cc DNY

Hierarchical

[O.14071.01]

M hh:mm:ss xy,ww n[vv] SW ROLL uvmnp,wxkqr\
[INCL][FRC][OOS][TWAY][mmm,nnn] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ROLL - Roll

OLD - Old

The old termination

NEW - New

The new termination

[s]abc - The 3- or 4-digit nonhierarchical OLD NPC number

[t]ghi - The 3- or 4-digit nonhierarchical NEW NPC number

Note: Valid types for old and new NPC's are DExyz, DAxyz, TExyz and TAxzy.

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical OLD NPC number
wxkqr - Hierarchical NEW NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

The values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

INCL - Inclusive

A circuit designated as a customer controlled circuit, a red circuit or a substrate T1 circuit cannot be modified without using the inclusive keyword in the message. Also, an NPC which supports these circuits cannot be manually removed unless the INCL keyword is given in the remove message.

FRC - Force

The FRC keyword is used to force a roll to an NPC which is in CGA.

OOS - Out of service

The OOS keyword is used to force a roll from an NPC which is out of service.

TWAY - Two-way

The TWAY keyword is used to request a two-way Roll (Bridge and Roll combined).

cc - Hexadecimal condition code

cc *Explanation*

02	Subject entity is not equipped
04	Subject entity is out of service
05	Subject entity is pested
1E	Customer control or red circuit exists
01	Invalid range for specified NPC type
12	Active CCN side not IS or failed or pested or hardware OOS
13	UNIT not equipped, not in service, or failed
14	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	FTMI not equipped, not in service, or failed
16	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
18	DSPI not equipped, not in service, or failed
C8	Exceeded depth limit of 6 on broadcast conference concatenation
1A	Required FLI not equipped, not in service, or failed
1B	Required MXR not equipped, not in service, or failed
1C	Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
1D	Required MIU not equipped, not in service, or failed
46	NPC Failed or Out of Service
A9	Cross-connect not consistent with feature package
B6	C-bit operations are enabled
B7	No DSP unit equipped
B8	No CBTYPE NPC equipped
B9	No CBTYPE NPC capacity remaining
BA	Inactive side NPC out of service and inactive side in service
0A	All CBTYPE NPCs out of service or failed
E0	ETSI not equipped, not in service, or failed
67	Improper roll command sequence
6A	New in CGA or PBA
6B	No mapped channel on old
75	Old and new channels have not been paired by a BCAST command.
79	DCTN conference channel cannot be rolled
7A	Testport/testgroup channel cannot be rolled
7B	Channel out-of-bounds in a Broadcast or Virtual circuit.
7C	Parity channel out of bound on new
7D	Not first channel in a BCON/virtual conf
9C	Parity channel cannot be within the range of a DS0 command.

SW,UNIT,FLI,TOPRTN

SWITCH FLI TO PROTECTION

Explanation Of Command

This message requests and reports a switch from the selected facility line interface (FLI) on a DS3 unit (DS3U) or a Hybrid DS3 unit (HDS3U). This message only covers the direction of switch from the service FLI in a DS3U or HDS3U to protection. The other direction of the FLI switch is covered in Message I.35105. The output message reports the occurrence of autonomous protection switching.

Command

[I.35101]

SW:FRM xy,SEQ ww:UNIT [q]q,FLI, TOPRTN!

Completion Message

[O.35101]

M hh:mm:ss xy,ww n[vv] SW UNIT [q]q FLI TOPRTN COMPL

Denial Message

[O.35101.01]

M hh:mm:ss xy,ww n[vv] SW UNIT [q]q FLI TOPRTN COND cc DNY

Autonomous Message

[O.35101]

I hh:mm:ss xy,ww SW UNIT [q]q FLI TOPRTN COMPL

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FLI - Facility Line Interface

TOPRTN - To protection pack

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

40 The service FLI is out of service or pested (TOSRVC option)

41 The protection FLI is out of service or pested (TOPRTN option)

42 The service FLI is already selected (TOSRVC option)

43 The protection FLI is already selected (TOPRTN option)

SW,UNIT,FLI,TOSRVC

SWITCH FLI TO SERVICE

Explanation Of Command

This message requests and reports a switch from the protected facility line interface (FLI) on a DS3 unit (DS3U) or a Hybrid DS3 unit (HDS3U) to the service FLI. The output message reports the occurrence of automatic switchback.

Command

[I.35105]

SW:FRM xy,SEQ ww:UNIT [q]q,FLI,TOSRVC!

See I.35101

Completion Message

[O.35105]

M hh:mm:ss xy,ww n[vv] SW UNIT [q]q FLI TOSRVC COMPL

Denial Message

M hh:mm:ss xy,ww n[vv] SW UNIT [q]q FLI TOSRVC COND cc DNY

Autonomous Message

[O.35105]

I hh:mm:ss xy,ww SW UNIT [q]q FLI TOSRVC COMPL

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

TOSRVC - To Service Pack

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

40 The service FLI is out of service or pested (TOSRVC option)

42 The service FLI is already selected (TOSRVC option)

SW,UNIT,MMFG,TOPRTN,FRC

SWITCH MMFG TO PROTECTION

Explanation Of Command

This command requests and reports a switch from multiplexer-multiple interface unit functional group (MMFG) c to MMFG P on a DS3 or HDS3 unit. The input message can force MMFG P to serve the MMFG c facility, even though MMFG P was serving another facility which can result in that facility being out-of-service. Alarm reporting is discussed below in the case of a switch that results in that facility being out-of-service.

Alarm reporting in the case of double MMFG failures:

(For example, a unit is equipped with MMFG 1 , 2 and P).

Event	MMFG 1 fails
	Automatic protection switch occurs
Message	I hh:mm:ss xy,ww SW UNIT q MMFG 1 TOPRTN COMPL
	MMFG 1 is autonomously removed
Message	**hh:mm:ss xy,ww RMV UNIT q MMFG 1 COMPL
Event	MMFG 2 fails
Message	*C hh:mm:ss xy,ww RMV UNIT q MMFG 2 COND cc DNY
Event	The craft decides that MMFG-2 is more important and makes a switch
Command	SW:FRM xy,ww:UNIT q,MMFG 2,TOPRTN,FRC!
Message	M hh:mm:ss xy,ww[n[vv]] SW UNIT q MMFG 1 TOPRTN FRC COMPL
	MMFG 1 will switch back to service automatically
Message	I hh:mm:ss xy,ww SW UNIT q MMFG 1 TOSRVC COMPL

Notice that after the switch to protection of MMFG 2, there will be no alarm reporting associated with loss of service of MMFG 1. The alarm condition, which is escalated to critical after loss of service of MMFG 2, actually covers both failures. If the FRC keyword is used, then the MMFG that **was** under protection will no longer be in alarm but will still need to be restored. When the FRC keyword is used, the alarm is idled on the MMFG that **was** under protection, even though it is still OOS. Note also that the autonomous switch message will precede the removal command on the first failure.

Command

[I.35111]

SW:FRM xy,SEQ ww:UNIT [q]q,MMFG c,TOPRTN[,FRC]!

Completion Message

[O.35111]

M hh:mm:ss xy,ww[n[vv]] SW UNIT [q]q MMFG c TOPRTN[FRC] \
COMPL

Denial Message

[O.35111.01]

M hh:mm:ss xy,ww n[vv] SW UNIT [q]q MMFG c TOPRTN[FRC] COND \
cc DNY

Autonomous Message

[O.35111]

I hh:mm:ss xy,ww[n[vv]] SW UNIT [q]q MMFG c TOPRTN[FRC] \
COMPL

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MMFG - Multiplexer-multiplexer interface unit functional Group

c - The number of the service MMFG within the unit ($1 \leq c \leq 6$)

TOPRTN - Protection Pack

FRC - Force the switch to protection MMFG even though it was serving
another facility.

cc - Hexadecimal condition code

cc Explanation

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

1A Required FLI not equipped, not in service,
or failed

cc Explanation

- 1C** Req'd FMT not eq'd, not IS, or failed, or inactive FMT not eq'd, or not IS
- 44** Service MXR is not equipped
- 47** Protection MXR is out of service
- 48** Protection MIU is not equipped
- 49** Protection MIU is out of service
- 4A** The protection MMFG is serving another facility
- 4B** The Service MMFG is already under protection

SW,UNIT,MMFG,TOSRVC

SWITCH MMFG TO SERVICE

Explanation Of Command

This command requests and reports a switch from multiplexer-multiple interface unit functional group (MMFG) P to MMFG c on a DS3 or HDS3 unit. MMFG P was serving the DS3 or HDS3 facility associated with MMFG c. The output message also reports the occurrence of automatic switchback from protection.

Command

[I.35121]

SW:FRM xy,SEQ ww:UNIT [q]q,MMFG c,TOSRVC!

Completion Message

[O.35121]

M hh:mm:ss xy,ww n[vv] SW UNIT [q]q MMFG c TOSRVC COMPL

Denial Message

[O.35121.01]

M hh:mm:ss xy,ww n[vv] SW UNIT [q]q MMFG c TOSRVC COND cc DNY

Autonomous Message

[O.35121]

I hh:mm:ss xy,ww SW UNIT [q]q MMFG c TOSRVC COMPL

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MMFG - Multiplexer-multiplexer interface unit functional group

c - The number of the service MMFG within the unit (1 through 6)

TOSRVC - To service

Priority of action

I - Information

M - Manual

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

1A Required FLI not equipped, not in service, or failed

1C Req'd FMT not eq'd, not IS, or failed, or inact side FMT not eq'd, or not IS

44 Service MXR is not equipped

45 Service MXR is out of service

46 Service MIU is out of service

4C The Service MMFG is not under protection

Index

A

ABT, 6-2
ACO, ACTIVE, 6-5
ACON, OLD, NEW, INCL, 6-7
ACT, MAP, CLR, INCL, 6-13
ADD, LINK, APPL, ASCS, ASCD, PM, L2AD, POLL, 6-22
ADD, LINK, K, T1, T3, N2, A, B, 6-24
ADD, LINK, PTCOL, S, X, T, M, BAUD, ALM, BS, ENQ, 6-26
ADD, LINK, W, P, T20, T22, T23, T25, T26, R20, 6-31
ADD, NPC, 6-38
ADD, RT, DL, MD, DGA, DGB, DGC, DGD, DGP, NDL, 6-44
ADD, USER, LINK, INCL, ALL, LANG, M, P, F, 6-51
ADD, USER, NEW, PASSWD, 6-59
ALM, IDLD, AI, NPC, 6-62
ALM, IDLD, NPC, 6-66
ALM, IDLD, UNIT, DS3, 6-70, 1
ALM, MJ, MN, INFO, NPC, 6-72
ALM, MN, IDLD, DS3UNPROTALM, DS3U, 6-77
ALM, PMC, PMA, DMA, MI, CCN, OOS, 6-79
ALM, PMC, PMA, DMA, MI, ECCN, OOS, 6-81
ALM, PMC, PMA, DMA, MI, SMEM, 6-83
ALM, RESET, DATE, TOD, FORMAT, MDY, DMY, PMC, 6-85
ALM, UNIT, DS3, 6-87, 1
ALW, PMREPT, NPC, ALL, 6-89
ALWSW, UNIT, MMFG, TOPRTN, TOSRVC, 6-94
APPEND, END, 6-96
APPL, RESET, IN, PROGRESS, 6-98, 1
AR01, MISC, ALM, CGA, LOS, 6-100
AR01, MISC, ALM, IDLD, CGA, LOS, 6-107
AUD, PARAMS, 6-114
AUD, QRY, BER, ALL, FTU, NPCS, TOT, EOM, DS3U, 6-116
AUD, QRY, BER, ALL, NPCS, TOT, 6-130
AUD, QRY, CFA, CGA, LOS, 6-132, 6-146, 6-158

B

BADVERB, BAD, SYNTAX, STOPPED, 7-2
BADVERB, CMD, INERR, STOPPED, 7-4
BCON, FROM, TO, NTR, LPD, CONV, CUS, INCL, RDC, 7-7
BCON, FROM, TO, RDC, CUS, INCL, NTR, LPD, CONV, 7-20
BCON, FROM, TOX, NTR, LPD, CONV, CUS, INCL, 7-30, 1
BCON, FROM, TOX, RDC, CUS, INCL, NTR, LPD, 7-44

BDIS, FROM, TO, CONV, OOS, DCC, INCL, 7-54, 1
BDIS, FROM, TO, OOS, INCL, CONV, 7-64
BDIS, FROM, TOX, CONV, OOS, DCC, INCL, 7-74, 1
BDIS, FROM, TOX, OOS, INCL, CONV, 7-84
BOOT, FAILED, BAD, DEVICE, 7-93
BOOT, FROM, PMEM, FAILED, ATTEMPTING, TO, 7-95
BOOT, FROM, PMEM, SMEM, 7-97
BX2, STF, ATP, 7-99

C

CFR, FRAME, 8-2
CFR, SYNC, FPLL, 8-4
CFR, SYNC, MASTER, SLAVED, 8-6
CFR, SYNC, STRATUM, STR2, STR3, 8-8
CFR, XC, INCL, 8-10
CHG, DS1ALMDS3, ON, OFF, 8-12
CHG, DS3ALMDLY, 8-15, 1
CHG, DS3UNPROTALM, ON, OFF, 8-17
CHG, ECLOC, TYPE, MJU, SRM, 8-19
CHG, FROM, TO, NOT, TLA, TLR, F, T, B, A, INCL, 8-21
CHG, FROM, TO, NOT, TLA, TLR, F, T, B, L, G, A, 8-31
CHG, FROM, TO, TLP, NG, ES, INCL, 8-44
CHG, HUBID, O, 8-57
CHG, MACRO, MAP, SPACE, 8-59
CHG, MSGLOG, ON, OFF, 8-61
CHG, NPC, ALMOPT, PLOPT, AIS, INFO, MJ, MN, PL, 8-63
CHG, NPC, NFS, 8-76, 1
CHG, NPC, OPTS, 8-83
CHG, NPC, RT, DL, TYPE, OPTS, 8-118
CHG, NPC, TS0, 8-141, 1
CHG, NPC, TS0M, 8-147, 1
CHG, NPC, TYPE, IW, X, 8-153
CHG, NPC, TYPE, IW, X, INCL, 8-166, 8-176
CHG, PASSWD, OLD, NEW, 8-185
CHG, RT, DL, TO, 8-188
CHG, RT, DL, ZCS, B8ZS, 8-190
CHG, RT, RTF, SWMN, 8-193
CHG, SCON, OLD, NEW, 8-197
CHG, SCON, OLD, NEW, MPTM, 8-206
CHG, SECH, OLD, NEW, PCH, DCC, 8-216
CHG, SETOP, TYPE, ALL, NPCOP, 8-225
CHG, SWCH, TOX, INCL, 8-239, 8-248
CHG, SYNC, TLI, SSP, TYPE, SRC, 8-257
CHG, TLA, TLR, TO, 8-262
CHG, TLA, TLR, TO, MJU, 8-271
CHG, TYPE, OPTS, 8-281
CHG, UNIT, CONN, 8-306
CHG, UNIT, DS3, BERM, BERT, LBO, TYPE, 8-309, 1
CHG, UNIT, FTMI, EQL, 8-313

CHG,USER,LINK,INCL,SCR,GR,MCON,MCOFF, 8-316
CI,ECI,RESET, 8-320
CI,ECI,STARTUP,STF,ATP, 8-322
CMD,MC,OOS,MCOND,INSERVICE,MPDBASE, 8-324
COPY,NPC,TO, 8-326
CTST,FAD,AIS,INCL, 8-353
CTST,FAD,EMODE,FMODE,INCL, 8-361
CTST,FAD,FROM,TO,AIS,INCL, 8-368
CTST,HUB,FAD,TO,INCL, 8-377
CTST,LPBKT,FAD,INCL, 8-383
CTST,TNR,ALL,OOS, 8-388
CTST,TNR,FAD,OOS, 8-390

DGRTH,TG, 10-37
DGRTH,TP, 10-39
DGRTH,UNIT, 10-41
DGRTH,UNIT,FTMI, 10-47
DGRTH,UNIT,MIU, 10-49
DGRTH,UNIT,MXR, 10-51, 1
DLT,FPKG, 10-54
DLT,MACRO,MAP,USER, 10-58
DLT,NPC, 10-60
DLT,RT,DL,DGA,DGB,DGC,DGD,DGP, 10-67
DLT,USER, 10-72
DSPC, 10-74, 1

D

DDIS,FROM,TO, 9-2, 1
DELETE,END, 9-7
DGN,CCB,CFT,X, 9-9
DGN,CCI,CFT,X, 9-16
DGN,CCNI,CFT,X, 9-20
DGN,CI,CFT,X, 9-26
DGN,ETSI,CFT,X, 9-30
DGN,ETSI,ECCN,ALL, 9-34
DGN,IN,PROGRESS, 9-37
DGN,LINK,CFT,X, 9-39
DGN,MC,CFT,X, 9-42
DGN,MP,CFT,X, 9-46
DGN,NPC, 9-49
DGN,NPC,SIDE,CFT,X, 9-55
DGN,PMEM,SMEM,CFT,X,EXCT,DBASE,VERIFY, 9-77
DGN,SYNC, 9-82
DGN,SYNC,TLI,CRO, 9-85
DGN,SYNC,TLI,SSP, 9-88
DGN,TSI,CFT,X, 9-91
DGN,TSIS,CCN,ALL, 9-99
DGN,TSIS,CCN,UNIT,CONN, 9-102
DGN,UNIT,DSPI,CFT,X, 9-105
DGN,UNIT,FC,CFT,X, 9-108
DGN,UNIT,FLI,CFT,X, 9-113
DGN,UNIT,FMT,CFT,X, 9-117
DGN,UNIT,FTMI,CFT,X, 9-123
DGN,UNIT,MIU,CFT,X, 9-126
DGN,UNIT,MXR,DEV,CFT,X, 9-129
DGN,UNIT,UC,CFT,X, 9-135
DGRTH,NPC, 10-2
DGRTH,NPC,NPCTG,TGR, 10-18
DGRTH,NPC,NPCTP,TPR, 10-26
DGRTH,SYNC,TB, 10-31
DGRTH,SYNC,TLI,SSP, 10-33

E

EBX,STARTUP,STF,ATP, 11-2
ED,CRET,MAP,PIC, 11-4
ED,MACRO,MAP, 11-11
EMTC,STARTUP,STF,ATP, 11-17
END,LOG, 11-19
END,LOG,ABORTED, 11-21
ERR,CMD,ABT,TN,STOPPED, 11-23
ERR,ESR,ANALYSIS,REPORT,EVENT, 11-25
ERR,ESR,CCB,TN,EVENT,COND, 11-28
ERR,ESR,CCI,TN,EVENT,COND, 11-30
ERR,ESR,CCNI,TN,EVENT,COND, 11-33
ERR,ESR,ETSI,TN,EVENT,COND, 11-40
ERR,ESR,MC,MP,CI,TN, 11-43
ERR,ESR,MC,MP,TN,EVENT,COND,CI,BX,EBX, 11-45
ERR,ESR,NPC,SIDE,TN,EVENT,COND, 11-49
ERR,ESR,NPC,TN,EVENT,COND, 11-57
ERR,ESR,SYNC,TLI,SSP,TN,EVENT,COND, 11-62
ERR,ESR,SYNC,TLI,TN,EVENT,COND, 11-67
ERR,ESR,SYNC,TN,EVENT,COND, 11-71
ERR,ESR,TSI,TN,EVENT,COND, 11-76
ERR,ESR,UNIT,DSPI,TN,EVENT,COND, 11-80
ERR,ESR,UNIT,FC,TN,EVENT,COND, 11-83
ERR,ESR,UNIT,FLI,TN,EVENT,COND, 11-86
ERR,ESR,UNIT,FMT,TN,EVENT,COND, 11-89
ERR,ESR,UNIT,FTMI,TN,EVENT,COND, 11-93
ERR,ESR,UNIT,HFMT,TN,EVENT,COND, 11-96
ERR,ESR,UNIT,HMXR,DEV,TN,EVENT,COND, 11-100
ERR,ESR,UNIT,MIU,TN,EVENT,COND, 11-105
ERR,ESR,UNIT,MXR,DEV,TN,EVENT,COND, 11-108
ERR,ESR,UNIT,UC,UBX,TN,EVENT,COND, 11-113
ERR,HARDWARE,TN,COND,EVENT,ACTION, 11-116
ERR,LINK,TN,STATUS, 11-120
ERR,MSG,TO,LOG,DISCARDED, 11-123
ERR,PMEM,SMEM,TN,EVENT,COND, 11-125

ERR,PWR,PMC,PMA,DMA,MI,TN, 11-127
ERR,SOFTWARE,MC,ERROR,MID,TN,RC,ACTION, 11-130
ERR,SYNC,MODE,FAST,HOLDOVER,NORMAL, 11-134
ERR,SYNC,TLI,SSP,NPC,TN,ALM,LOS,LEN, 11-139
ERR,SYNC,TLI,SSP,TN,ALM,LOS,LEN,EXJ, 11-144
EXC,MACRO, 11-149

F

FRADTS,BMCMP, 12-2
FRADTS,DGN,DEV, 12-4
FRADTS,FRCMP, 12-8
FRADTS,MC,DGN, 12-108

G

GRTH,FRAME,CHAR,UID, 13-2
GRTH,NPC,NPCTG, 13-5
GRTH,NPC,NPCTP, 13-12
GRTH,NPC,TYPE, 13-17
GRTH,NPC,TYPE,CBTIMER, 13-24
GRTH,NPC,TYPE,OPTS,IW,X, 13-31
GRTH,NPC,TYPE,OPTS,IW,X,INCL,AIS,INFO, 13-40,
13-62
GRTH,SYNC,TB,TYPE, 13-75
GRTH,SYNC,TLI,TYPE, 13-77
GRTH,SYNC,TLI,TYPE,SSP,SRC, 13-79
GRTH,TG,NPCTG, 13-83
GRTH,TP, 13-86
GRTH,UNIT,FTMI,EQL, 13-90
GRTH,UNIT,MIU,TYPE, 13-93
GRTH,UNIT,MXR,TYPE,BERM,BERT,LBO, 13-95, 1
GRTH,UNIT,TYPE,CONN, 13-99

I

IN,PROGRESS, 14-2
INH,PMREPT,NPC,ALL, 14-4
INH,SW,UNIT,MMFG,TOPRTN,TOSRVC, 14-9
INSTALL, 14-11, 1
INVALID,SFW,ID,BLOCK,COND, 14-19

L

LINE, 15-2
LIST,END, 15-4
LOGIN,USER,PASSWD, 15-7
LOGOFF,USER,LINK,INCL, 15-10

M

MC,MCOND, 16-2
MC,RESET,RELEASE,ISSUE,FPKG,COND, 16-4
MOVE,FROM,END,TO, 16-8
MP,STARTUP,STF,ATP, 16-10
MTC,STF,ATP, 16-12

O

OCNT,FROM,TO,MPM,CUS,INCL,RDC, 17-2
OCNT,FROM,TO,RDC,CUS,INCL,PRIOUT, 17-15, 17-28
OCON,FROM,TO,MPM,CUS,INCL,RDC, 17-37
OCON,FROM,TO,RDC,CUS,INCL,PRIOUT, 17-51, 17-63
ODIS,FROM,TO,INCL,OOS,DCC,PRIOUT, 17-72
ODIS,FROM,TO,OOS,INCL,PRIOUT, 17-81
OPR,LPBK,NPC,LOCN, 17-90
OPR,LPBK,UNIT,MMFG, 17-100
OPR,TSIG,NPC, 17-103
OVERLOAD,MP,CI,UNIT,UC,TN,PROCESSOR, 17-108

R

REPT,PM,NPC,PARAM,COUNT,VLDTY,LOCN,AI, 18-2
RESET,DATE,TOD,FORMAT,MDY,DMY, 18-9
RESET,STOPPED, 18-11
RLS,LPBK,NPC,LOCN, 18-13
RLS,TSIG,NPC, 18-22
RMV,CCB, 18-27
RMV,CCI, 18-29
RMV,CCNI, 18-32
RMV,ETSI, 18-34
RMV,ETSI,ECCN,ALL, 18-36
RMV,LINK, 18-38
RMV,MC, 18-40

RMV,NPC,SIDE,INCL, 18-42
RMV,RT,DL, 18-72
RMV,SMEM,PMEM, 18-75
RMV,SYNC, 18-78
RMV,SYNC,TLI,CRO, 18-80
RMV,SYNC,TLI,PMC,PMA,DMA,MI,COND, 18-82
RMV,SYNC,TLI,SSP, 18-84
RMV,TSI, 18-87
RMV,TSIS,CCN,ALL, 18-89
RMV,TSIS,CCN,UNIT,CONN, 18-92
RMV,UNIT,FC, 18-95
RMV,UNIT,FLI, 18-98
RMV,UNIT,FMT, 18-100
RMV,UNIT,FTMI,DSPI, 18-102
RMV,UNIT,MIU,INCL, 18-105
RMV,UNIT,MMFG,FRC,INCL, 18-107
RMV,UNIT,UC, 18-111
RPT,T,NPC,LOCN,AI,COUNT,THLEV,ALM, 18-113
RST,CCB, 19-2
RST,CCI, 19-4
RST,CCNI, 19-6
RST,ETSI, 19-8
RST,ETSI,ECCN,ALL, 19-10
RST,LINK, 19-13
RST,MC,MCOND,NOJRNL,FRC,CLR,ALL, 19-15
RST,NPC,SIDE, 19-21
RST,NPC,TSOM, 19-48
RST,PMEM,SMEM,CLR,FRC,BKGRND, 19-53
RST,RT,DL, 19-59
RST,SYNC, 19-62
RST,SYNC,TLI,CRO, 19-64
RST,SYNC,TLI,SSP, 19-66
RST,TSI, 19-68
RST,TSIS,CCN,ALL, 19-70
RST,TSIS,CCN,UNIT,CONN, 19-73
RST,UNIT,FC, 19-76
RST,UNIT,FLI, 19-78
RST,UNIT,FMT, 19-80
RST,UNIT,FTMI,DSPI, 19-82
RST,UNIT,MIU,INCL, 19-84
RST,UNIT,MMFG,INCL, 19-87
RST,UNIT,UC, 19-91
RTRV,ALM,T3,DS3ALM, 1

S

SAVE, 20-2
SC,ALM,CGA,DLF,INH,MRV,MSW,PSW,RT,DL, 20-4
SC,ALM,COMP,RT,INDX,LBRV,AB,CD,P,ALP, 20-8
SC,ALM,DPLX,SYNC,CCB,CCNI,CCI,TSI,ETSI, 20-10
SC,ALM,MC,UC,FTMI,DSPI,NE, 20-15
SC,ALM,RT,DL,FE, 20-17
SCNT,RATE,MPTM,MJU,MA, 21-2
SCNT,RATE,TPT,FROM,TO, 21-11, 21-19
SCON,RATE,MPTM,MJU,MA, 21-28
SCON,RATE,TPT,FROM,TO, 21-40, 21-49
SDCH,TO,PCH,DCC, 21-58
SDIS,RATE,MPTM,MJU, 21-65
SDIS,RATE,MPTM,MJU,ALL, 21-77
SDIS,RATE,TPT,FROM,TO, 21-89, 21-97
SECH,TO,DS0A,DS0B,SEC,PCH, 21-105
SECH,TO,RATE,DP,PCH, 21-115
START,LOG, 22-2
STOP,MACRO,LINK, 22-4
STST,MON,TO,MJU,TP, 22-6
STST,MON,TO,TP, 22-16
STST,SPL,TO,MJU,TP, 22-26
STST,SPL,TO,TP, 22-36
STST,TLA,TLR,TP, 22-46
STST,TPR,ALL,LINKS, 22-56
STST,TPR,TP, 22-58
SW,BCAST,OLD,NEW,INCL, 22-66, 22-73
SW,DISC,OOS, 22-80, 22-86
SW,NPC,RT,PSW,USW,ALW,INH,FRC,INCL, 22-92
SW,ROLL,OLD,NEW,INCL,FRC,OOS, 22-97
SW,ROLL,OLD,NEW,INCL,FRC,OOS,TWAY, 22-104
SW,UNIT,FLI,TOPRTN, 22-110
SW,UNIT,FLI,TOSRVC, 22-112
SW,UNIT,MMFG,TOPRTN,FRC, 22-114
SW,UNIT,MMFG,TOSRVC, 22-118

T

TABS, 23-2
TABS,IN,PROGRESS, 23-4
TCNT,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT, 23-6
TCNT,FROM,TO,MPM,NTR,RDC,CUS,INCL, 23-19
TCNT,FROM,TO,PFW,NFW, 23-36
TCNT,FROM,TO,RDC,CUS,INCL,PRIOUT, 23-43
TCON,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT, 23-52

TCON, FROM, TO, MPM, NTR, RDC, CUS, INCL, 23-65
TCON, FROM, TO, PFW, NFW, 23-82, 1
TCON, FROM, TO, RDC, CUS, INCL, PRIOUT, 23-89, 1
TDIS, FROM, TO, INCL, OOS, DCC, 23-98
TDIS, FROM, TO, INCL, OOS, DCC, PRIOUT, 23-113
TDIS, FROM, TO, OOS, INCL, PRIOUT, 23-123
TS0MBOFL, 23-132
TTST, HUB, TO, TG, 23-136
TTST, HUB, TO, TP, 23-145
TTST, LPD, TG, 23-152
TTST, LPD, TP, 23-154
TTST, MON, TG, 23-158
TTST, MON, TO, TG, 23-167
TTST, MON, TO, TP, 23-177, 1
TTST, RT, DGA, DGB, DGC, DGD, DGP, LLB, TO, 23-190
TTST, SPL, TG, NOYLW, 23-193
TTST, SPL, TP, 23-202
TTST, TGR, TG, OOS, 23-210
TTST, TLA, NOT, TP, 23-221
TTST, TLA, TG, 23-232
TTST, TLR, NOT, TP, 23-240
TTST, TLR, TG, 23-250
TTST, TPR, ALL, OOS, 23-258
TTST, TPR, TP, OOS, FRC, 23-260, 1

U

UTL, ACO, 24-2
UTL, BMTR, FROM, TO, EXCT, INCL, UPGRD, 24-4, 1
UTL, BOOT, FRAME, CLR, 24-10
UTL, CLR, ALL, 24-12
UTL, CLR, ERR, HWER, SWER, 24-14
UTL, CLR, MSGLOG, RSTNUM, 24-16
UTL, CLR, NPC, ALL, AI, LOCN, MONDAT, MONTIM, 24-18
UTL, CLR, NPC, PARAMS, 24-30
UTL, CLR, NPC, RT, DL, 24-35
UTL, CLR, PWR, 24-43
UTL, CLR, UNIT, DS3, ALLDS3, AI, MONDAT, 24-45, 1
UTL, DATE, FORMAT, INT, 24-51
UTL, INIT, ALM, 24-54
UTL, LOC, 24-56
UTL, QRY, ALL, 24-69
UTL, QRY, ALL, COMMON, 24-80
UTL, QRY, ALL, UNIT, 24-86
UTL, QRY, ALM, DS3, 24-113, 1
UTL, QRY, ALMOPT, NPC, AIS, 24-118
UTL, QRY, ALMS, 24-132, 1
UTL, QRY, ALMS, DBASE, 24-169
UTL, QRY, ALMS, RT, DL, 24-178
UTL, QRY, APPL, NPC, ALL, 24-181, 1
UTL, QRY, BCAST, ALL, 24-187, 1
UTL, QRY, BCAST, FROM, 24-195, 24-205, 1
UTL, QRY, CMAP, 24-214, 1
UTL, QRY, CNFGR, 24-252
UTL, QRY, CS, NPC, 24-255
UTL, QRY, DATE, 24-260
UTL, QRY, DMAP, 24-262, 1
UTL, QRY, DS3, BERMT, UNIT, 24-298
UTL, QRY, DS3, LBO, 24-300
UTL, QRY, ECLOC, 24-302
UTL, QRY, EQD, COMMON, 24-304
UTL, QRY, EQD, CONN, 24-308
UTL, QRY, EQD, ETSIS, 24-310
UTL, QRY, EQD, MIUS, 24-312
UTL, QRY, EQD, MXRS, 24-314
UTL, QRY, EQD, NPCS, TOTAL, UNIT, 24-317
UTL, QRY, EQD, TSIS, 24-335
UTL, QRY, EQD, UNIT, 24-337
UTL, QRY, EQD, UNITS, 24-361
UTL, QRY, ERR, SWER, HWER, INT, DATE, TOD, TN, 24-363
UTL, QRY, ESR, CCN, 24-373
UTL, QRY, ESR, ECCN, 24-376
UTL, QRY, ESR, MP, 24-380
UTL, QRY, ESR, NPC, SIDE, 24-385
UTL, QRY, ESR, UNIT, 24-395
UTL, QRY, ESR, UNIT, DSPI, 24-399
UTL, QRY, ESR, UNIT, FC, 24-401
UTL, QRY, ESR, UNIT, FLI, 24-404
UTL, QRY, ESR, UNIT, FMT, 24-407
UTL, QRY, ESR, UNIT, FTMI, 24-410
UTL, QRY, ESR, UNIT, MIU, 24-414
UTL, QRY, ESR, UNIT, MXR, 24-416
UTL, QRY, FPKG, 24-421
UTL, QRY, FROM, 24-425, 24-452
UTL, QRY, HUBID, 24-460
UTL, QRY, LIST, MACRO, USER, 24-462
UTL, QRY, LIST, MAP, USER, 24-465
UTL, QRY, LOAD, NPC, TOTAL, 24-468
UTL, QRY, LOG, ALL, 24-475
UTL, QRY, LPBK, NPC, 24-479
UTL, QRY, LPBK, UNIT, 24-493
UTL, QRY, MACRO, ATTR, USER, ALL, 24-495
UTL, QRY, MACRO, MAP, SPACE, USER, ALL, 24-499
UTL, QRY, MACRO, USER, 24-502
UTL, QRY, MAP, ATTR, ALL, USER, MAPNM, 24-505
UTL, QRY, MARK, 24-508, 24-524
UTL, QRY, MEMSTAT, 24-542, 1
UTL, QRY, MSGLOG, RANGE, 24-550
UTL, QRY, NFS, NPC, 24-552, 1
UTL, QRY, NPC, ALL, AI, LV, LOCN, MONDAT, 24-558

UTL, QRY, NPC, MAP, USER, 24-578
UTL, QRY, NPC, RT, DL, 24-587
UTL, QRY, NPCTG, 24-603
UTL, QRY, OPT, TYPE, ALL, NPC, 24-611
UTL, QRY, PEST, FAIL, OOS, COMMON, 24-618
UTL, QRY, PEST, FAIL, OOS, UNIT, 24-623
UTL, QRY, PMSCHED, NPC, ALL, 24-649
UTL, QRY, PSTATE, UNIT, 24-659
UTL, QRY, ROLL, DS0, NPC, ALL, UNIT, 24-663
UTL, QRY, ROLL, DS1, NPC, ALL, UNIT, 24-670
UTL, QRY, RTMAP, DLMAP, 24-678
UTL, QRY, SCON, CH, TO, 24-697
UTL, QRY, SCON, TO, 24-704
UTL, QRY, SCR, LINK, USER, LINKS, USERS, 24-712
UTL, QRY, SECH, TO, 24-721
UTL, QRY, SIGST, 24-728
UTL, QRY, SQN, 24-733
UTL, QRY, SRHDW, TO, 24-735
UTL, QRY, SROOF, TO, ALL, 24-746
UTL, QRY, STATE, ACO, 24-754
UTL, QRY, STATE, NPC, 24-756, 24-785
UTL, QRY, STATE, SCDG, NPC, RT, DL, ALL, 24-819
UTL, QRY, STATE, SYNC, 24-827
UTL, QRY, STATE, UNIT, DS3, 24-830, 1
UTL, QRY, STR, LINK, 24-835
UTL, QRY, STR, SYNC, 24-845
UTL, QRY, STR, SYNC, TLI, 24-851
UTL, QRY, STR, SYNC, TLI, SSP, 24-854
UTL, QRY, STR, XC, 24-858
UTL, QRY, SYNC, TYPE, 24-860
UTL, QRY, TGS, 24-863
UTL, QRY, TO, 24-870, 24-900, 1
UTL, QRY, TOD, CFA, 24-920
UTL, QRY, TPS, 24-923
UTL, QRY, TS0, NPC, 24-930, 1
UTL, QRY, TS0M, NPC, 24-936
UTL, QRY, TSIG, NPC, 24-941
UTL, QRY, UNIT, DS3, ALLDS3, AI, LV, MONDAT, 24-948, 1
UTL, QRY, UNIT, FTMI, EQL, 24-957
UTL, QRY, WHO, 24-960
UTL, QRY, XCSB, UNIT, 24-963
UTL, RCY, COND, IN, PROGRESS, 24-972
UTL, RCY, PASSWD, 24-975
UTL, SCHED, PMREPT, NPC, RI, ST, NI, LV, LOCN, 24-977
UTL, TOD, CFA, FAC, X, PRIM, MONDAT, 24-987, 1

Lucent Technologies
Bell Labs Innovations



DACS II
Release 8.2.3 PDS
Command and Message Manual

Volume III

365-353-222
Issue 2
February 1999

Copyright © 1999 Lucent Technologies
All Rights Reserved
Printed in U.S.A

Notice

Every effort was made to ensure that the information in this document was complete and accurate at the time of printing. However, information is subject to change.

Mandatory Information

Security Statement

In rare instances, unauthorized individuals make connections to the telecommunications network through the use of remote access features. In such event, applicable tariffs require that the customer pay all network charges for traffic. Lucent Technologies cannot be responsible for such charges, and will not make any allowance or give any credit for charges that result from unauthorized access.

Trademarks

5ESS is a registered trademark of Lucent Technologies.

COMMON LANGUAGE is a registered trademark and CLEI, CLLI, CLCI, and CLFI are trademarks of Bell Communications Research, Inc.

SLC is a registered trademark of Lucent Technologies.

Acknowledgements

This document was developed by the Lucent Technologies Customer Training and Information Products Organization.

Documentation Ordering Information

The ordering number for this document is Lucent Technologies 365-353-222. To order this document, call the Lucent Technologies Customer Information Center in Indianapolis, Indiana, on 1-888-582-3688. For more ordering information, refer to "How to Order Documentation" in the section "About this Document."

Technical Support Telephone Number

The Lucent Technologies Regional Technical Assistance Center (RTAC) provides a technical assistance telephone number which is staffed 24 hours a day. For technical assistance, simply call 1-800-225-RTAC.

Documentation Support Telephone Number

Lucent Technologies provides a telephone number for you to report errors or to ask questions about the information in this document. The support telephone numbers are:

Outside North Carolina - 1-800-334-0404
Inside North Carolina - 1-910-727-6681.

Developed by The Lucent Technologies Customer Training & Information Products Organization

How Are We Doing?

Document Title: DACS II Release 8.2.3 PDS Command and Message Manual Volume III

Document No.: 365-353-222

Issue 2

Date: February 1999

Lucent Technologies welcomes your feedback on this document. Your comments can be of great value in helping us improve our documentation.

1. Please rate the effectiveness of this document in the following areas:

	Excellent	Good	Fair	Poor	Not Applicable
Ease of Use					////////////////
Clarity					////////////////
Completeness					////////////////
Accuracy					////////////////
Organization					////////////////
Appearance					////////////////
Examples					
Illustrations					
Overall Satisfaction					////////////////

2. Please check the ways you feel we could improve this document:

☐ Improve the overview/introduction	☐ Make it more concise/brief
☐ Improve the table of contents	☐ Add more step-by-step procedures/tutorials
☐ Improve the organization	☐ Add more troubleshooting information
☐ Include more figures	☐ Make it less technical
☐ Add more examples	☐ Add more/better quick reference aids
☐ Add more detail	☐ Improve the index

Please provide details for the suggested improvement. _____

3. What did you like most about this document?

4. Feel free to write any comments below or on an attached sheet.

If we may contact you concerning your comments, please complete the following:

Name: _____ Telephone Number: _____

Company/Organization: _____ Date: _____

 
Address: _____

When you have completed this form, please fold, tape, and return to address on back
or Fax to: 910-727-3043.


Lucent Technologies
Bell Labs Innovations



-----Do Not Cut—Fold Here And Tape-----



 NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES



BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 1999 GREENSBORO, N.C.

POSTAGE WILL BE PAID BY ADDRESSEE

DOCUMENTATION SERVICES
2400 Reynolda Road
Winston-Salem, NC 27199-2029



Contents

Introduction	1-1
■ DACS II Messages	1-2
■ Communicating With DACS II	1-6
■ DACS II Administrative Links	1-14
■ NPC Addressing	1-16
■ On-Line Help Feature	1-16
■ System Configuration	1-22
■ Documentation Support	1-37
■ Glossary	1-49

Alphabetic List of Messages	2-1
■ Alphabetic List of Keywords	2-1

Numerical List of Messages	3-1
■ Numeric List of Keywords	3-1

Summary of Input Commands	4-1
■ Alphabetic Command Summary	4-2
■ Numeric Command Summary	4-42

Autonomous Messages	5-1
■ Alarms Messages	5-2
■ Audits Messages	5-4
■ Error Recovery Messages	5-10
■ Event Reporting Messages	5-16
■ Input Denials Messages	5-17

Contents

■ Scheduled Pm Reporting Messages	5-18
■ Startup Messages	5-20

ABT — AUD	6-1
■ ABT	6-2
■ ACO,ACTIVE	6-5
■ ACON,OLD,NEW,INCL	6-7
■ ACT,MAP,CLR,INCL	6-13
■ ADD,LINK,APPL,ASCS,ASCD,PM,L2AD,POLL	6-22
■ ADD,LINK,K,T1,T3,N2,A,B	6-24
■ ADD,LINK,PTCOL,S,X,T,M,BAUD,ALM,BS,ENQ	6-26
■ ADD,LINK,W,P,T20,T22,T23,T25,T26,R20	6-31
■ ADD,NPC	6-38
■ ADD,RT,DL,MD,DGA,DGB,DGC,DGD,DGP,NDL	6-44
■ ADD,USER,LINK,INCL,ALL,LANG,M,P,F	6-51
■ ADD,USER,NEW,PASSWD	6-59
■ ALM,IDLD,AI,NPC	6-62
■ ALM,IDLD,NPC	6-66
■ ALM,IDLD,UNIT,DS3	6-70
■ ALM,MJ,MN,INFO,NPC	6-72
■ ALM,MN,IDLD,DS3UNPROTALM,DS3U	6-77
■ ALM,PMC,PMA,DMA,MI,CCN,OOS	6-79
■ ALM,PMC,PMA,DMA,MI,ECCN,OOS	6-81
■ ALM,PMC,PMA,DMA,MI,SMEM	6-83
■ ALM,RESET,DATE,TOD,FORMAT,MDY,DMY,PMC	6-85
■ ALM,UNIT,DS3	6-87
■ ALW,PMREPT,NPC,ALL	6-89
■ ALWSW,UNIT,MMFG,TOPRTN,TOSRVC	6-94
■ APPEND,END	6-96
■ APPL,RESET,IN,PROGRESS	6-98
■ AR01,MISC,ALM,CGA,LOS	6-100
■ AR01,MISC,ALM,IDLD,CGA,LOS	6-107
■ AUD,PARAMS	6-114
■ AUD,QRY,BER,ALL,FTU,NPCS,TOT,EOM,DS3U	6-116
■ AUD,QRY,BER,ALL,NPCS,TOT	6-130
■ AUD,QRY,CFA,CGA,LOS	6-132

Contents

■ AUD,QRY,CFA,CGA,LOS	6-146
■ AUD,QRY,CFA,CGA,LOS	6-158

BADVERB — BX2	7-1
■ BADVERB,BAD,SYNTAX,STOPPED	7-2
■ BADVERB,CMD,INERR,STOPPED	7-4
■ BCON,FROM,TO,NTR,LPD,CONV,CUS,INCL,RDC	7-7
■ BCON,FROM,TO,RDC,CUS,INCL,NTR,LPD,CONV	7-20
■ BCON,FROM,TOX,NTR,LPD,CONV,CUS,INCL	7-30
■ BCON,FROM,TOX,RDC,CUS,INCL,NTR,LPD	7-44
■ BDIS,FROM,TO,CONV,OOS,DCC,INCL	7-54
■ BDIS,FROM,TO,OOS,INCL,CONV	7-64
■ BDIS,FROM,TOX,CONV,OOS,DCC,INCL	7-74
■ BDIS,FROM,TOX,OOS,INCL,CONV	7-84
■ BOOT,FAILED,BAD,DEVICE	7-93
■ BOOT,FROM,PMEM,FAILED,ATTEMPTING,TO	7-95
■ BOOT,FROM,PMEM,SMEM	7-97
■ BX2,STF,ATP	7-99

CFR — CTST	8-1
■ CFR,FRAME	8-2
■ CFR,SYNC,FPLL	8-4
■ CFR,SYNC,MASTER,SLAVED	8-6
■ CFR,SYNC,STRATUM,STR2,STR3	8-8
■ CFR,XC,INCL	8-10
■ CHG,DS1ALMDS3,ON,OFF	8-12
■ CHG,DS3ALMDLY	8-15
■ CHG,DS3UNPROTALM,ON,OFF	8-17
■ CHG,ECLOC,TYPE,MJU,SRM	8-19
■ CHG,FROM,TO,NOT,TLA,TLR,F,T,B,A,INCL	8-21
■ CHG,FROM,TO,NOT,TLA,TLR,F,T,B,L,G,A	8-31
■ CHG,FROM,TO,TLP,NG,ES,INCL	8-44
■ CHG,HUBID,O	8-57

Contents

■ CHG,MACRO,MAP,SPACE	8-59
■ CHG,MSGLOG,ON,OFF	8-61
■ CHG,NPC,ALMOPT,PLOPT,AIS,INFO,MJ,MN,PL	8-63
■ CHG,NPC,NFS	8-76
■ CHG,NPC,OPTS	8-83
■ CHG,NPC,RT,DL,TYPE,OPTS	8-118
■ CHG,NPC,TS0	8-141
■ CHG,NPC,TS0M	8-147
■ CHG,NPC,TYPE,IW,X	8-153
■ CHG,NPC,TYPE,IW,X,INCL	8-166
■ CHG,NPC,TYPE,IW,X,INCL	8-176
■ CHG,PASSWD,OLD,NEW	8-185
■ CHG,RT,DL,TO	8-188
■ CHG,RT,DL,ZCS,B8ZS	8-190
■ CHG,RT,RTF,SWMN	8-193
■ CHG,SCON,OLD,NEW	8-197
■ CHG,SCON,OLD,NEW,MPTM	8-206
■ CHG,SECH,OLD,NEW,PCH,DCC	8-216
■ CHG,SETOP,TYPE,ALL,NPCOP	8-225
■ CHG,SWCH,TOX,INCL	8-239
■ CHG,SWCH,TOX,INCL	8-248
■ CHG,SYNC,TLI,SSP,TYPE,SRC	8-257
■ CHG,TLA,TLR,TO	8-262
■ CHG,TLA,TLR,TO,MJU	8-271
■ CHG,TYPE,OPTS	8-281
■ CHG,UNIT,CONN	8-306
■ CHG,UNIT,DS3,BERM,BERT,LBO,TYPE	8-309
■ CHG,UNIT,FTMI,EQL	8-313
■ CHG,USER,LINK,INCL,SCR,GR,MCON,MCOFF	8-316
■ CI,ECI,RESET	8-320
■ CI,ECI,STARTUP,STF,ATP	8-322
■ CMD,MC,OOS,MCOND,INSERVICE,MPDBASE	8-324
■ COPY,NPC,TO	8-326
■ CTST,FAD,AIS,INCL	8-353
■ CTST,FAD,EMODE,FMODE,INCL	8-361
■ CTST,FAD,FROM,TO,AIS,INCL	8-368
■ CTST,HUB,FAD,TO,INCL	8-377
■ CTST,LPBKT,FAD,INCL	8-383

Contents

■ CTST,TNR,ALL,OOS	8-388
■ CTST,TNR,FAD,OOS	8-390

DELETE — DGN	9-1
■ DDIS,FROM,TO	9-2
■ DELETE,END	9-7
■ DGN,CCB,CFT,X	9-9
■ DGN,CCI,CFT,X	9-16
■ DGN,CCNI,CFT,X	9-20
■ DGN,CI,CFT,X	9-26
■ DGN,ETSI,CFT,X	9-30
■ DGN,ETSI,ECCN,ALL	9-34
■ DGN,IN,PROGRESS	9-37
■ DGN,LINK,CFT,X	9-39
■ DGN,MC,CFT,X	9-42
■ DGN,MP,CFT,X	9-46
■ DGN,NPC	9-49
■ DGN,NPC,SIDE,CFT,X	9-55
■ DGN,PMEM,SMEM,CFT,X,EXCT,DBASE,VERIFY	9-77
■ DGN,SYNC	9-82
■ DGN,SYNC,TLI,CRO	9-85
■ DGN,SYNC,TLI,SSP	9-88
■ DGN,TSI,CFT,X	9-91
■ DGN,TSIS,CCN,ALL	9-99
■ DGN,TSIS,CCN,UNIT,CONN	9-102
■ DGN,UNIT,DSPI,CFT,X	9-105
■ DGN,UNIT,FC,CFT,X	9-108
■ DGN,UNIT,FLI,CFT,X	9-113
■ DGN,UNIT,FMT,CFT,X	9-117
■ DGN,UNIT,FTMI,CFT,X	9-123
■ DGN,UNIT,MIU,CFT,X	9-126
■ DGN,UNIT,MXR,DEV,CFT,X	9-129
■ DGN,UNIT,UC,CFT,X	9-135

DGRTH — DSPC	10-1

Contents

■ DGRTH,NPC	10-2
■ DGRTH,NPC,NPCTG,TGR	10-18
■ DGRTH,NPC,NPCTP,TPR	10-26
■ DGRTH,SYNC,TB	10-31
■ DGRTH,SYNC,TLI,SSP	10-33
■ DGRTH,TG	10-37
■ DGRTH,TP	10-39
■ DGRTH,UNIT	10-41
■ DGRTH,UNIT,FTMI	10-47
■ DGRTH,UNIT,MIU	10-49
■ DGRTH,UNIT,MXR	10-51
■ DLT,FPKG	10-54
■ DLT,MACRO,MAP,USER	10-58
■ DLT,NPC	10-60
■ DLT,RT,DL,DGA,DGB,DGC,DGD,DGP	10-67
■ DLT,USER	10-72
■ DSPC	10-74

EBX — EXC	11-1
■ EBX,STARTUP,STF,ATP	11-2
■ ED,CRET,MAP,PIC	11-4
■ ED,MACRO,MAP	11-11
■ EMTC,STARTUP,STF,ATP	11-17
■ END,LOG	11-19
■ END,LOG,ABORTED	11-21
■ ERR,CMD,ABT,TN,STOPPED	11-23
■ ERR,ESR,ANALYSIS,REPORT,EVENT	11-25
■ ERR,ESR,CCB,TN,EVENT,COND	11-28
■ ERR,ESR,CCI,TN,EVENT,COND	11-30
■ ERR,ESR,CCNI,TN,EVENT,COND	11-33
■ ERR,ESR,ETSI,TN,EVENT,COND	11-40
■ ERR,ESR,MC,MP,CI,TN	11-43
■ ERR,ESR,MC,MP,TN,EVENT,COND,CI,BX,EBX	11-45
■ ERR,ESR,NPC,SIDE,TN,EVENT,COND	11-49
■ ERR,ESR,NPC,TN,EVENT,COND	11-57
■ ERR,ESR,SYNC,TLI,SSP,TN,EVENT,COND	11-62

Contents

■ ERR,ESR,SYNC,TLI,TN,EVENT,COND	11-67
■ ERR,ESR,SYNC,TN,EVENT,COND	11-71
■ ERR,ESR,TSI,TN,EVENT,COND	11-76
■ ERR,ESR,UNIT,DSPI,TN,EVENT,COND	11-80
■ ERR,ESR,UNIT,FC,TN,EVENT,COND	11-83
■ ERR,ESR,UNIT,FLI,TN,EVENT,COND	11-86
■ ERR,ESR,UNIT,FMT,TN,EVENT,COND	11-89
■ ERR,ESR,UNIT,FTMI,TN,EVENT,COND	11-93
■ ERR,ESR,UNIT,HFMT,TN,EVENT,COND	11-96
■ ERR,ESR,UNIT,HMXR,DEV,TN,EVENT,COND	11-100
■ ERR,ESR,UNIT,MIU,TN,EVENT,COND	11-105
■ ERR,ESR,UNIT,MXR,DEV,TN,EVENT,COND	11-108
■ ERR,ESR,UNIT,UC,UBX,TN,EVENT,COND	11-113
■ ERR,HARDWARE,TN,COND,EVENT,ACTION	11-116
■ ERR,LINK,TN,STATUS	11-120
■ ERR,MSGs,TO,LOG,DISCARDED	11-123
■ ERR,PMEM,SMEM,TN,EVENT,COND	11-125
■ ERR,PWR,PMC,PMA,DMA,MI,TN	11-127
■ ERR,SOFTWARE,MC,ERROR,MID,TN,RC,ACTION	11-130
■ ERR,SYNC,MODE,FAST,HOLDOVER,NORMAL	11-134
■ ERR,SYNC,TLI,SSP,NPC,TN,ALM,LOS,LEN	11-139
■ ERR,SYNC,TLI,SSP,TN,ALM,LOS,LEN,EXJ	11-144
■ EXC,MACRO	11-149

FRADTS	12-1
■ FRADTS,BMCMP	12-2
■ FRADTS,DGN,DEV	12-4
■ FRADTS,FRCMP	12-8
■ FRADTS,MC,DGN	12-108

GRTH	13-1
■ GRTH,FRAME,CHAR,UID	13-2
■ GRTH,NPC,NPCTG	13-5

Contents

■ GRTH,NPC,NPCTP	13-12
■ GRTH,NPC,TYPE	13-17
■ GRTH,NPC,TYPE,CBTIMER	13-24
■ GRTH,NPC,TYPE,OPTS,IW,X	13-31
■ GRTH,NPC,TYPE,OPTS,IW,X,INCL,AIS,INFO	13-40
■ GRTH,NPC,TYPE,OPTS,IW,X,INCL,AIS,INFO	13-62
■ GRTH,SYNC,TB,TYPE	13-75
■ GRTH,SYNC,TLI,TYPE	13-77
■ GRTH,SYNC,TLI,TYPE,SSP,SRC	13-79
■ GRTH,TG,NPCTG	13-83
■ GRTH,TP	13-86
■ GRTH,UNIT,FTMI,EQL	13-90
■ GRTH,UNIT,MIU,TYPE	13-93
■ GRTH,UNIT,MXR,TYPE,BERM,BERT,LBO	13-95
■ GRTH,UNIT,TYPE,CONN	13-99

IN — INVALID	14-1
■ IN,PROGRESS	14-2
■ INH,PMREPT,NPC,ALL	14-4
■ INHSW,UNIT,MMFG,TOPRTN,TOSRVC	14-9
■ INSTALL	14-11
■ INVALID,SFW,ID,BLOCK,COND	14-19

LINE — LOGOFF	15-1
■ LINE	15-2
■ LIST,END	15-4
■ LOGIN,USER,PASSWD	15-7
■ LOGOFF,USER,LINK,INCL	15-10

MC — MTC	16-1
■ MC,MCOND	16-2

Contents

■ MC,RESET,RELEASE,ISSUE,FPKG,COND	16-4
■ MOVE,FROM,END,TO	16-8
■ MP,STARTUP,STF,ATP	16-10
■ MTC,STF,ATP	16-12

OCNT — OVERLOAD	17-1
■ OCNT,FROM,TO,MPM,CUS,INCL,RDC	17-2
■ OCNT,FROM,TO,RDC,CUS,INCL,PRIOUT	17-15
■ OCNT,FROM,TO,RDC,CUS,INCL,PRIOUT	17-28
■ OCON,FROM,TO,MPM,CUS,INCL,RDC	17-37
■ OCON,FROM,TO,RDC,CUS,INCL,PRIOUT	17-51
■ OCON,FROM,TO,RDC,CUS,INCL,PRIOUT	17-63
■ ODIS,FROM,TO,INCL,OOS,DCC,PRIOUT	17-72
■ ODIS,FROM,TO,OOS,INCL,PRIOUT	17-81
■ OPR,LPBK,NPC,LOCN	17-90
■ OPR,LPBK,UNIT,MMFG	17-100
■ OPR,TSIG,NPC	17-103
■ OVERLOAD,MP,CI,UNIT,UC,TN,PROCESSOR	17-108

REPT — RPT	18-1
■ REPT,PM,NPC,PARAM,COUNT,VLDTY,LOCN,AI	18-2
■ RESET,DATE,TOD,FORMAT,MDY,DMY	18-9
■ RESET,STOPPED	18-11
■ RLS,LPBK,NPC,LOCN	18-13
■ RLS,TSIG,NPC	18-22
■ RMV,CCB	18-27
■ RMV,CCI	18-29
■ RMV,CCNI	18-32
■ RMV,ETSI	18-34
■ RMV,ETSI,ECCN,ALL	18-36
■ RMV,LINK	18-38
■ RMV,MC	18-40
■ RMV,NPC,SIDE,INCL	18-42

Contents

■ RMV,RT,DL	18-72
■ RMV,SMEM,PMEM	18-75
■ RMV,SYNC	18-78
■ RMV,SYNC,TLI,CRO	18-80
■ RMV,SYNC,TLI,PMC,PMA,DMA,MI,COND	18-82
■ RMV,SYNC,TLI,SSP	18-84
■ RMV,TSI	18-87
■ RMV,TSIS,CCN,ALL	18-89
■ RMV,TSIS,CCN,UNIT,CONN	18-92
■ RMV,UNIT,FC	18-95
■ RMV,UNIT,FLI	18-98
■ RMV,UNIT,FMT	18-100
■ RMV,UNIT,FTMI,DSPI	18-102
■ RMV,UNIT,MIU,INCL	18-105
■ RMV,UNIT,MMFG,FRC,INCL	18-107
■ RMV,UNIT,UC	18-111
■ RPT,T,NPC,LOCN,AI,COUNT,THLEV,ALM	18-113

RST	19-1
■ RST,CCB	19-2
■ RST,CCI	19-4
■ RST,CCNI	19-6
■ RST,ETSI	19-8
■ RST,ETSI,ECCN,ALL	19-10
■ RST,LINK	19-13
■ RST,MC,MCOND,NOJRNLFRC,CLR,ALL	19-15
■ RST,NPC,SIDE	19-21
■ RST,NPC,TS0M	19-48
■ RST,PMEM,SMEM,CLR,FRC,BKGRND	19-53
■ RST,RT,DL	19-59
■ RST,SYNC	19-62
■ RST,SYNC,TLI,CRO	19-64
■ RST,SYNC,TLI,SSP	19-66
■ RST,TSI	19-68
■ RST,TSIS,CCN,ALL	19-70
■ RST,TSIS,CCN,UNIT,CONN	19-73

Contents

■ RST,UNIT,FC	19-76
■ RST,UNIT,FLI	19-78
■ RST,UNIT,FMT	19-80
■ RST,UNIT,FTMI,DSPI	19-82
■ RST,UNIT,MIU,INCL	19-84
■ RST,UNIT,MMFG,INCL	19-87
■ RST,UNIT,UC	19-91

SAVE — SC	20-1
■ SAVE	20-2
■ SC,ALM,CGA,DLF,INH,MRV,MSW,PSW,RT,DL	20-4
■ SC,ALM,COMP,RT,INDX,LBRV,AB,CD,P,ALP	20-8
■ SC,ALM,DPLX,SYNC,CCB,CCNI,CCI,TSI,ETSI	20-10
■ SC,ALM,MC,UC,FTMI,DSPI,NE	20-15
■ SC,ALM,RT,DL,FE	20-17

SCNT — SECH	21-1
■ SCNT,RATE,MPTM,MJU,MA	21-2
■ SCNT,RATE,TPT,FROM,TO	21-11
■ SCNT,RATE,TPT,FROM,TO	21-19
■ SCON,RATE,MPTM,MJU,MA	21-28
■ SCON,RATE,TPT,FROM,TO	21-40
■ SCON,RATE,TPT,FROM,TO	21-49
■ SDCH,TO,PCH,DCC	21-58
■ SDIS,RATE,MPTM,MJU	21-65
■ SDIS,RATE,MPTM,MJU,ALL	21-77
■ SDIS,RATE,TPT,FROM,TO	21-89
■ SDIS,RATE,TPT,FROM,TO	21-97
■ SECH,TO,DS0A,DS0B,SEC,PCH	21-105
■ SECH,TO,RATE,DP,PCH	21-115

START — SW	22-1

Contents

■ START,LOG	22-2
■ STOP,MACRO,LINK	22-4
■ STST,MON,TO,MJU,TP	22-6
■ STST,MON,TO,TP	22-16
■ STST,SPL,TO,MJU,TP	22-26
■ STST,SPL,TO,TP	22-36
■ STST,TLA,TLR,TP	22-46
■ STST,TPR,ALL,LINKS	22-56
■ STST,TPR,TP	22-58
■ SW,BCAST,OLD,NEW,INCL	22-66
■ SW,BCAST,OLD,NEW,INCL	22-73
■ SW,DISC,OOS	22-80
■ SW,DISC,OOS	22-86
■ SW,NPC,RT,PSW,USW,ALW,INH,FRC,INCL	22-92
■ SW,ROLL,OLD,NEW,INCL,FRC,OOS	22-97
■ SW,ROLL,OLD,NEW,INCL,FRC,OOS,TWAY	22-104
■ SW,UNIT,FLI,TOPTN	22-110
■ SW,UNIT,FLI,TOSRVC	22-112
■ SW,UNIT,MMFG,TOPTN,FRC	22-114
■ SW,UNIT,MMFG,TOSRVC	22-118

TABS — TTST	23-1
■ TABS	23-2
■ TABS,IN,PROGRESS	23-4
■ TCNT,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT	23-6
■ TCNT,FROM,TO,MPM,NTR,RDC,CUS,INCL	23-19
■ TCNT,FROM,TO,PFW,NFW	23-36
■ TCNT,FROM,TO,RDC,CUS,INCL,PRIOUT	23-43
■ TCON,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT	23-52
■ TCON,FROM,TO,MPM,NTR,RDC,CUS,INCL	23-65
■ TCON,FROM,TO,PFW,NFW	23-82
■ TCON,FROM,TO,RDC,CUS,INCL,PRIOUT	23-89
■ TDIS,FROM,TO,INCL,OOS,DCC	23-98
■ TDIS,FROM,TO,INCL,OOS,DCC,PRIOUT	23-113
■ TDIS,FROM,TO,OOS,INCL,PRIOUT	23-123
■ TS0MBOFL	23-132

Contents

■ TTST,HUB,TO,TG	23-136
■ TTST,HUB,TO,TP	23-145
■ TTST,LPD,TG	23-152
■ TTST,LPD,TP	23-154
■ TTST,MON,TG	23-158
■ TTST,MON,TO,TG	23-167
■ TTST,MON,TO,TP	23-177
■ TTST,RT,DGA,DGB,DGC,DGD,DGP,LLB,TO	23-190
■ TTST,SPL,TG,NOYLW	23-193
■ TTST,SPL,TP	23-202
■ TTST,TGR,TG,OOS	23-210
■ TTST,TLA,NOT,TP	23-221
■ TTST,TLA,TG	23-232
■ TTST,TLR,NOT,TP	23-240
■ TTST,TLR,TG	23-250
■ TTST,TPR,ALL,OOS	23-258
■ TTST,TPR,TP,OOS,FRC	23-260

UTL	24-1
■ UTL,ACO	24-2
■ UTL,BMTR,FROM,TO,EXCT,INCL,UPGRD	24-4
■ UTL,BOOT,FRAME,CLR	24-10
■ UTL,CLR,ALL	24-12
■ UTL,CLR,ERR,HWER,SWER	24-14
■ UTL,CLR,MSGLOG,RSTNUM	24-16
■ UTL,CLR,NPC,ALL,AI,LOCN,MONDAT,MONTIM	24-18
■ UTL,CLR,NPC,PARAMS	24-30
■ UTL,CLR,NPC,RT,DL	24-35
■ UTL,CLR,PWR	24-43
■ UTL,CLR,UNIT,DS3,ALLDS3,AI,MONDAT	24-45
■ UTL,DATE,FORMAT,INT	24-51
■ UTL,INIT,ALM	24-54
■ UTL,LOC	24-56
■ UTL,QRY,ALL	24-69
■ UTL,QRY,ALL,COMMON	24-80
■ UTL,QRY,ALL,UNIT	24-86

Contents

■ UTL, QRY, ALM, DS3	24-113
■ UTL, QRY, ALMOPT, NPC, AIS	24-118
■ UTL, QRY, ALMS	24-132
■ UTL, QRY, ALMS, DBASE	24-169
■ UTL, QRY, ALMS, RT, DL	24-178
■ UTL, QRY, APPL, NPC, ALL	24-181
■ UTL, QRY, BCAST, ALL	24-187
■ UTL, QRY, BCAST, FROM	24-195
■ UTL, QRY, BCAST, FROM	24-205
■ UTL, QRY, CMAP	24-214
■ UTL, QRY, CNFGR	24-252
■ UTL, QRY, CS, NPC	24-255
■ UTL, QRY, DATE	24-260
■ UTL, QRY, DMAP	24-262
■ UTL, QRY, DS3, BERMT, UNIT	24-298
■ UTL, QRY, DS3, LBO	24-300
■ UTL, QRY, ECLOC	24-302
■ UTL, QRY, EQD, COMMON	24-304
■ UTL, QRY, EQD, CONN	24-308
■ UTL, QRY, EQD, ETSIS	24-310
■ UTL, QRY, EQD, MIUS	24-312
■ UTL, QRY, EQD, MXRS	24-314
■ UTL, QRY, EQD, NPCS, TOTAL, UNIT	24-317
■ UTL, QRY, EQD, TSIS	24-335
■ UTL, QRY, EQD, UNIT	24-337
■ UTL, QRY, EQD, UNITS	24-361
■ UTL, QRY, ERR, SWER, HWER, INT, DATE, TOD, TN	24-363
■ UTL, QRY, ESR, CCN	24-373
■ UTL, QRY, ESR, ECCN	24-376
■ UTL, QRY, ESR, MP	24-380
■ UTL, QRY, ESR, NPC, SIDE	24-385
■ UTL, QRY, ESR, UNIT	24-395
■ UTL, QRY, ESR, UNIT, DSPI	24-399
■ UTL, QRY, ESR, UNIT, FC	24-401
■ UTL, QRY, ESR, UNIT, FLI	24-404
■ UTL, QRY, ESR, UNIT, FMT	24-407
■ UTL, QRY, ESR, UNIT, FTMI	24-410
■ UTL, QRY, ESR, UNIT, MIU	24-414

Contents

■ UTL, QRY, ESR, UNIT, MXR	24-416
■ UTL, QRY, FPKG	24-421
■ UTL, QRY, FROM	24-425
■ UTL, QRY, FROM	24-452
■ UTL, QRY, HUBID	24-460
■ UTL, QRY, LIST, MACRO, USER	24-462
■ UTL, QRY, LIST, MAP, USER	24-465
■ UTL, QRY, LOAD, NPC, TOTAL	24-468
■ UTL, QRY, LOG, ALL	24-475
■ UTL, QRY, LPBK, NPC	24-479
■ UTL, QRY, LPBK, UNIT	24-493
■ UTL, QRY, MACRO, ATTR, USER, ALL	24-495
■ UTL, QRY, MACRO, MAP, SPACE, USER, ALL	24-499
■ UTL, QRY, MACRO, USER	24-502
■ UTL, QRY, MAP, ATTR, ALL, USER, MAPNM	24-505
■ UTL, QRY, MARK	24-508
■ UTL, QRY, MARK	24-524
■ UTL, QRY, MEMSTAT	24-542
■ UTL, QRY, MSGLOG, RANGE	24-550
■ UTL, QRY, NFS, NPC	24-552
■ UTL, QRY, NPC, ALL, AI, LV, LOCN, MONDAT	24-558
■ UTL, QRY, NPC, MAP, USER	24-578
■ UTL, QRY, NPC, RT, DL	24-587
■ UTL, QRY, NPCTG	24-603
■ UTL, QRY, OPT, TYPE, ALL, NPCS	24-611
■ UTL, QRY, PEST, FAIL, OOS, COMMON	24-618
■ UTL, QRY, PEST, FAIL, OOS, UNIT	24-623
■ UTL, QRY, PMSCHED, NPC, ALL	24-649
■ UTL, QRY, PSTATE, UNIT	24-659
■ UTL, QRY, ROLL, DS0, NPC, ALL, UNIT	24-663
■ UTL, QRY, ROLL, DS1, NPC, ALL, UNIT	24-670
■ UTL, QRY, RTMAP, DLMAP	24-678
■ UTL, QRY, SCON, CH, TO	24-697
■ UTL, QRY, SCON, TO	24-704
■ UTL, QRY, SCR, LINK, USER, LINKS, USERS	24-712
■ UTL, QRY, SECH, TO	24-721
■ UTL, QRY, SIGST	24-728
■ UTL, QRY, SQN	24-733

Contents

■ UTL, QRY, SRHDW, TO	24-735
■ UTL, QRY, SROOF, TO, ALL	24-746
■ UTL, QRY, STATE, ACO	24-754
■ UTL, QRY, STATE, NPC	24-756
■ UTL, QRY, STATE, NPC	24-785
■ UTL, QRY, STATE, SCDG, NPC, RT, DL, ALL	24-819
■ UTL, QRY, STATE, SYNC	24-827
■ UTL, QRY, STATE, UNIT, DS3	24-830
■ UTL, QRY, STR, LINK	24-835
■ UTL, QRY, STR, SYNC	24-845
■ UTL, QRY, STR, SYNC, TLI	24-851
■ UTL, QRY, STR, SYNC, TLI, SSP	24-854
■ UTL, QRY, STR, XC	24-858
■ UTL, QRY, SYNC, TYPE	24-860
■ UTL, QRY, TGS	24-863
■ UTL, QRY, TO	24-870
■ UTL, QRY, TO	24-900
■ UTL, QRY, TOD, CFA	24-920
■ UTL, QRY, TPS	24-923
■ UTL, QRY, TS0, NPC	24-930
■ UTL, QRY, TS0M, NPC	24-936
■ UTL, QRY, TSIG, NPC	24-941
■ UTL, QRY, UNIT, DS3, ALLDS3, AI, LV, MONDAT	24-948
■ UTL, QRY, UNIT, FTMI, EQL	24-957
■ UTL, QRY, WHO	24-960
■ UTL, QRY, XCSB, UNIT	24-963
■ UTL, RCY, COND, IN, PROGRESS	24-972
■ UTL, RCY, PASSWD	24-975
■ UTL, SCHED, PMREPT, NPC, RI, ST, NI, LV, LOCN	24-977
■ UTL, TOD, CFA, FAC, X, PRIM, MONDAT	24-987

Glossary

G-1

IN

Index

IN-1

Tables

8-1.	Parameter Register Threshold Range and Default Values	8-97
8-2.	Provisioning values for x	8-103
8-3.	Provisioning values for y	8-104
8-4.	Provisioning values for z	8-105
8-5.	Combinations of x and y Values	8-108
8-6.	Combinations of y and z Values	8-108
8-7.	Provisioning values for x	8-158
8-8.	Provisioning values for y	8-159
8-9.	Provisioning values for z	8-160
8-10.	Combinations of x and y Values	8-163
8-11.	Combinations of y and z Values	8-163
8-12.	Parameter Register Threshold Range and Default Values	8-230
8-13.	Provisioning values for x	8-289
8-14.	Provisioning values for y	8-290
8-15.	Provisioning values for z	8-291
8-16.	Combinations of x and y Values	8-294
8-17.	Combinations of y and z Values	8-294
8-18.	Parameter Register Threshold Range and Default Values	8-299
8-19.	Parameter Register Threshold Range and Default Values	8-347
18-1.	Provisioning values for x	18-64
18-2.	Provisioning values for y	18-64
18-3.	Provisioning values for z	18-65
18-4.	Combinations of x and y Values	18-68
18-5.	Combinations of y and z Values	18-69
19-1.	Provisioning values for x	19-40
19-2.	Provisioning values for y	19-41
19-3.	Provisioning values for z	19-42
19-4.	Combinations of x and y Values	19-45
19-5.	Combinations of y and z Values	19-45
24-1.	Provisioning values for x	24-240
24-2.	Provisioning values for y	24-241
24-3.	Provisioning values for z	24-242
24-4.	Combinations of x and y Values	24-245
24-5.	Combinations of y and z Values	24-245
24-6.	Provisioning values for x	24-284

Tables

24-7.	Provisioning values for y	24-284
24-8.	Provisioning values for z	24-285
24-9.	Combinations of x and y Values	24-288
24-10.	Combinations of y and z Values	24-288
24-11.	Provisioning values for x	24-441
24-12.	Provisioning values for y	24-442
24-13.	Provisioning values for z	24-443
24-14.	Combinations of x and y Values	24-446
24-15.	Combinations of y and z Values	24-447
24-16.	Provisioning values for x	24-773
24-17.	Provisioning values for y	24-774
24-18.	Provisioning values for z	24-775
24-19.	Combinations of x and y Values	24-777
24-20.	Combinations of y and z Values	24-778
24-21.	Provisioning values for x	24-803
24-22.	Provisioning values for y	24-803
24-23.	Provisioning values for z	24-805
24-24.	Combinations of x and y Values	24-808
24-25.	Combinations of y and z Values	24-808
24-26.	Provisioning values for x	24-910
24-27.	Provisioning values for y	24-911
24-28.	Provisioning values for z	24-912
24-29.	Combinations of x and y Values	24-914
24-30.	Combinations of y and z Values	24-915

About This Document

About This Document

Purpose

The *DACS II Release 8.2.3 Command and Message Manual* describes the input commands and output messages of Release 8.2.3 of the Digital Access and Cross-Connect System II (DACS II). In addition, it provides full support for previous product releases.

⇒ NOTE:

Those customers using this manual with Releases 3 through 7.0.3 software should be aware that all features of a particular message shown for Release 8.2.3 may or may not apply to previous releases.

This manual consists of three volumes as follows:

- **Volume I** - This volume contains general information about the document, a detailed introduction that defines DACS II messages, relates how to communicate with DACS II, introduces the administrative links, and discusses in detail NPC addressing, on-line help feature, system configuration and features a listing of related documentation. Message listings in this volume include alphabetical and numerical, summary list of input commands and a list of autonomous messages. A comprehensive presentation of input commands and output messages (ABT through DGN) concludes this volume.
- **Volume II and III** - These two volumes contain input commands and output messages in the following order:
 - **Volume II** - DGRTH through SW
 - **Volume III** - TABS through UTL and the Glossary

Reason for Issue

The *DACS II Release 8.2.3 Command and Message Manual* has been issued to include updated and new commands applicable to Release 8.2.3.

Intended Audiences

This manual is a catalog of messages intended for reference by a technician or craftperson who needs additional details about a message. It provides the user with supplemental information for the Digital Access and Cross-Connect System II (DACS II) that is programmed in the Program Documentation Standards (PDS) language. An example of a user is someone performing a task from an operation and maintenance manual who needs the definition of a specific keyword to complete the task.

How to Order Documentation

To order additional copies of this document, send or call in an order as follows:

- To order by Mail:

Lucent Technologies
Customer Information Center
Attention: Order Entry Section
2855 N. Franklin Road
P. O. Box 19901
Indianapolis, IN 46219

-
- To order by Telephone (Monday through Friday);

Within the United States of America:

1-888-LUCENT8 (582-3688) (7:30 a.m. to 6:30 p.m. EST)

From Canada:

1-800-255-1242

Worldwide:

Toll: **1-317-352-8557**

FAX: **1-317-352-8484**

For RBOC/BOC customers, process orders through your Company Documentation Coordinator.

For commercial customers, a check, money order, purchase order number, or charge card number is required with all orders. Make checks payable to Lucent Technologies.

Lucent Technologies entities should use Form IND 1-80.80 FA, available through the Customer Information Center.

One-time orders include a binder (if applicable) and the document contents for the current issue in effect at the time of order. After placing a one-time order, you can request a standing order for any document revisions *of that software release*. Documents for new software releases do *not* go to standing-order customers. You will only get those documents if you order the new software release.

How to Comment on This Document

A feedback form is located at the beginning of this publication, immediately after the title page. Please fill out the feedback form and return it (postage free) to the address on the back.

If the feedback form is missing, send comment on this publication to:

Lucent Technologies
DACS II Documentation Coordinator
Attn: Tabatha Wright
101 Crawfords Corner Road
Room 1B-320
Holmdel, NJ 07733-3030 USA

Contents

TABS	23-2
■ Explanation Of Command	23-2
■ Command	23-2
■ Completion Message	23-2
■ Denial Message	23-2
■ Autonomous Message	23-2
■ Explanation Of Parameters	23-3
TABS,IN,PROGRESS	23-4
■ Explanation Of Command	23-4
■ Command	23-4
■ Completion Message	23-4
■ Denial Message	23-4
■ Autonomous Message	23-4
■ Explanation Of Parameters	23-5
TCNT,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT	23-6
■ Explanation Of Command	23-6
■ Command	23-6
■ Nonhierarchical	23-6
■ Hierarchical	23-6
■ Completion Message	23-7
■ Nonhierarchical	23-7
■ Hierarchical	23-7
■ Denial Message	23-7
■ Nonhierarchical	23-7
■ Hierarchical	23-8
■ Autonomous Message	23-8

Contents

■ Explanation Of Parameters	23-8
TCNT, FROM, TO, MPM, NTR, RDC, CUS, INCL	23-19
■ Explanation Of Command	23-19
■ Command	23-19
■ Nonhierarchical	23-19
■ Hierarchical	23-19
■ Completion Message	23-20
■ Nonhierarchical	23-20
■ Hierarchical	23-20
■ Denial Message	23-20
■ Nonhierarchical	23-20
■ Hierarchical	23-20
■ Autonomous Message	23-21
■ Explanation Of Parameters	23-21
TCNT, FROM, TO, PFW, NFW	23-36
■ Explanation Of Command	23-36
■ Command	23-36
■ Nonhierarchical	23-36
■ Hierarchical	23-36
■ Completion Message	23-37
■ Nonhierarchical	23-37
■ Hierarchical	23-37
■ Denial Message	23-37
■ Nonhierarchical	23-37
■ Hierarchical	23-37
■ Autonomous Message	23-37
■ Explanation Of Parameters	23-38
TCNT, FROM, TO, RDC, CUS, INCL, PRIOUT	23-43
■ Explanation Of Command	23-43
■ Command	23-43
■ Nonhierarchical	23-43
■ Hierarchical	23-43
■ Completion Message	23-43
■ Nonhierarchical	23-43
■ Hierarchical	23-44
■ Denial Message	23-44
■ Nonhierarchical	23-44
■ Hierarchical	23-44

Contents

■ Autonomous Message	23-44
■ Explanation Of Parameters	23-44
TCON,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT	23-52
■ Explanation Of Command	23-52
■ Command	23-52
■ Nonhierarchical	23-52
■ Hierarchical	23-52
■ Completion Message	23-53
■ Nonhierarchical	23-53
■ Hierarchical	23-53
■ Denial Message	23-53
■ Nonhierarchical	23-53
■ Hierarchical	23-54
■ Autonomous Message	23-54
■ Explanation Of Parameters	23-54
TCON,FROM,TO,MPM,NTR,RDC,CUS,INCL	23-65
■ Explanation Of Command	23-65
■ Command	23-65
■ Nonhierarchical	23-65
■ Hierarchical	23-65
■ Completion Message	23-66
■ Nonhierarchical	23-66
■ Hierarchical	23-66
■ Denial Message	23-66
■ Nonhierarchical	23-66
■ Hierarchical	23-66
■ Autonomous Message	23-67
■ Explanation Of Parameters	23-67
TCON,FROM,TO,PFW,NFW	23-82
■ Explanation Of Command	23-82
■ Command	23-82
■ Nonhierarchical	23-82
■ Hierarchical	23-82
■ Completion Message	23-82
■ Nonhierarchical	23-82
■ Hierarchical	23-83
■ Denial Message	23-83
■ Nonhierarchical	23-83

Contents

■ Hierarchical	23-83
■ Autonomous Message	23-83
■ Explanation Of Parameters	23-84
TCON, FROM, TO, RDC, CUS, INCL, PRIOUT	23-89
■ Explanation Of Command	23-89
■ Command	23-89
■ Nonhierarchical	23-89
■ Hierarchical	23-89
■ Completion Message	23-90
■ Nonhierarchical	23-90
■ Hierarchical	23-90
■ Denial Message	23-90
■ Nonhierarchical	23-90
■ Hierarchical	23-90
■ Autonomous Message	23-90
■ Explanation Of Parameters	23-91
TDIS, FROM, TO, INCL, OOS, DCC	23-98
■ Explanation Of Command	23-98
■ Command	23-98
■ Nonhierarchical	23-98
■ Hierarchical	23-98
■ Completion Message	23-99
■ Nonhierarchical	23-99
■ Hierarchical	23-99
■ Denial Message	23-99
■ Nonhierarchical	23-99
■ Hierarchical	23-99
■ Autonomous Message	23-100
■ Explanation Of Parameters	23-100
TDIS, FROM, TO, INCL, OOS, DCC, PRIOUT	23-113
■ Explanation Of Command	23-113
■ Command	23-113
■ Nonhierarchical	23-113
■ Hierarchical	23-113
■ Completion Message	23-113
■ Nonhierarchical	23-113
■ Hierarchical	23-114
■ Denial Message	23-114

Contents

■ Nonhierarchical	23-114
■ Hierarchical	23-114
■ Autonomous Message	23-114
■ Explanation Of Parameters	23-115
TDIS,FROM,TO,OOS,INCL,PRIOUT	23-123
■ Explanation Of Command	23-123
■ Command	23-123
■ Nonhierarchical	23-123
■ Hierarchical	23-123
■ Completion Message	23-123
■ Nonhierarchical	23-123
■ Hierarchical	23-124
■ Denial Message	23-124
■ Nonhierarchical	23-124
■ Hierarchical	23-124
■ Autonomous Message	23-124
■ Explanation Of Parameters	23-125
TS0MBOFL	23-132
■ Explanation Of Command	23-132
■ Command	23-132
■ Completion Message	23-132
■ Denial Message	23-132
■ Autonomous Message	23-132
■ Nonhierarchical	23-132
■ Hierarchical	23-133
■ Explanation Of Parameters	23-133
TTST,HUB,TO,TG	23-136
■ Explanation Of Command	23-136
■ Command	23-136
■ Nonhierarchical	23-136
■ Hierarchical	23-136
■ Completion Message	23-137
■ Nonhierarchical	23-137
■ Hierarchical	23-137
■ Denial Message	23-137
■ Nonhierarchical	23-137
■ Hierarchical	23-137
■ Autonomous Message	23-137

Contents

■ Explanation Of Parameters	23-138
TTST,HUB,TO,TP	23-145
■ Explanation Of Command	23-145
■ Command	23-145
■ Nonhierarchical	23-145
■ Hierarchical	23-145
■ Completion Message	23-146
■ Nonhierarchical	23-146
■ Hierarchical	23-146
■ Denial Message	23-146
■ Nonhierarchical	23-146
■ Hierarchical	23-146
■ Autonomous Message	23-147
■ Explanation Of Parameters	23-147
TTST,LPD,TG	23-152
■ Explanation Of Command	23-152
■ Command	23-152
■ Completion Message	23-152
■ Denial Message	23-152
■ Autonomous Message	23-152
■ Explanation Of Parameters	23-153
TTST,LPD,TP	23-154
■ Explanation Of Command	23-154
■ Command	23-154
■ Completion Message	23-154
■ Denial Message	23-155
■ Autonomous Message	23-155
■ Explanation Of Parameters	23-155
TTST,MON,TG	23-158
■ Explanation Of Command	23-158
■ Command	23-158
■ Completion Message	23-158
■ Nonhierarchical	23-158
■ Hierarchical	23-159
■ Denial Message	23-159
■ Autonomous Message	23-159
■ Explanation Of Parameters	23-159

Contents

TTST,MON,TO,TG	23-167
■ Explanation Of Command	23-167
■ Command	23-167
■ Nonhierarchical	23-167
■ Hierarchical	23-167
■ Completion Message	23-168
■ Nonhierarchical	23-168
■ Hierarchical	23-168
■ Denial Message	23-168
■ Nonhierarchical	23-168
■ Hierarchical	23-168
■ Autonomous Message	23-168
■ Explanation Of Parameters	23-169
TTST,MON,TO,TP	23-177
■ Explanation Of Command	23-177
■ Command	23-178
■ Nonhierarchical	23-178
■ Hierarchical	23-178
■ Completion Message	23-178
■ Nonhierarchical	23-178
■ Hierarchical	23-178
■ Denial Message	23-179
■ Nonhierarchical	23-179
■ Hierarchical	23-179
■ Autonomous Message	23-179
■ Explanation Of Parameters	23-180
TTST,RT,DGA,DGB,DGC,DGD,DGP,LLB,TO	23-190
■ Explanation Of Command	23-190
■ Command	23-190
■ Completion Message	23-191
■ Denial Message	23-191
■ Autonomous Message	23-191
■ Explanation Of Parameters	23-191
TTST,SPL,TG,NOYLW	23-193
■ Explanation Of Command	23-193
■ Command	23-193
■ Completion Message	23-193

Contents

■ Nonhierarchical	23-193
■ Hierarchical	23-194
■ Denial Message	23-194
■ Autonomous Message	23-194
■ Explanation Of Parameters	23-194
TTST,SPL,TP	23-202
■ Explanation Of Command	23-202
■ Command	23-202
■ Completion Message	23-203
■ Nonhierarchical	23-203
■ Hierarchical	23-203
■ Denial Message	23-203
■ Nonhierarchical	23-203
■ Hierarchical	23-203
■ Common	23-203
■ Autonomous Message	23-203
■ Explanation Of Parameters	23-204
TTST,TGR,TG,OOS	23-210
■ Explanation Of Command	23-210
■ Command	23-210
■ Completion Message	23-211
■ Nonhierarchical	23-211
■ Hierarchical	23-212
■ Denial Message	23-212
■ Autonomous Message	23-212
■ Nonhierarchical	23-212
■ Hierarchical	23-213
■ Common	23-213
■ Explanation Of Parameters	23-213
TTST,TLA,NOT,TP	23-221
■ Explanation Of Command	23-221
■ Command	23-221
■ Nonhierarchical	23-221
■ Hierarchical	23-221
■ Completion Message	23-222
■ Nonhierarchical	23-222
■ Hierarchical	23-222
■ Denial Message	23-222

Contents

■ Nonhierarchical	23-222
■ Hierarchical	23-222
■ Common	23-223
■ Autonomous Message	23-223
■ Explanation Of Parameters	23-223
TTST,TLA,TG	23-232
■ Explanation Of Command	23-232
■ Command	23-232
■ Completion Message	23-232
■ Nonhierarchical	23-232
■ Hierarchical	23-233
■ Denial Message	23-233
■ Autonomous Message	23-233
■ Explanation Of Parameters	23-233
TTST,TLR,NOT,TP	23-240
■ Explanation Of Command	23-240
■ Command	23-240
■ Nonhierarchical	23-240
■ Hierarchical	23-240
■ Completion Message	23-241
■ Nonhierarchical	23-241
■ Hierarchical	23-241
■ Denial Message	23-241
■ Nonhierarchical	23-241
■ Hierarchical	23-241
■ Common	23-242
■ Autonomous Message	23-242
■ Explanation Of Parameters	23-242
TTST,TLR,TG	23-250
■ Explanation Of Command	23-250
■ Command	23-250
■ Completion Message	23-250
■ Nonhierarchical	23-250
■ Hierarchical	23-251
■ Denial Message	23-251
■ Autonomous Message	23-251
■ Explanation Of Parameters	23-251

Contents

TTST,TPR,ALL,OOS	23-258
■ Explanation Of Command	23-258
■ Command	23-258
■ Completion Message	23-258
■ Denial Message	23-258
■ Autonomous Message	23-258
■ Explanation Of Parameters	23-259
TTST,TPR,TP,OOS,FRC	23-260
■ Explanation Of Command	23-260
■ Command	23-260
■ Completion Message	23-260
■ Nonhierarchical	23-260
■ Hierarchical	23-261
■ Denial Message	23-261
■ Nonhierarchical	23-261
■ Hierarchical	23-261
■ Common	23-261
■ Autonomous Message	23-261
■ Nonhierarchical	23-261
■ Hierarchical	23-262
■ Common	23-262
■ Explanation Of Parameters	23-262

TABS — TTST

TABS — TTST

This section documents the commands **TABS** through **TTST**.

TABS

TABS COMPLETE

Explanation Of Command

This autonomous message indicates a remote TABS (Telemetry Asynchronous Block Serial) protocol request has completed on DACS II.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.55705]

I hh:mm:ss xy,ww TABS COMPL

Explanation Of Parameters

TABS - Telemetry asynchronous block serial

TABS,IN,PROGRESS

TELEMETRY ASYNCHRONOUS BLOCK SERIAL IN PROGRESS

Explanation Of Command

This autonomous output message indicates that a remote request using a telemetry asynchronous block serial protocol has been submitted to the DACS II frame and is in progress.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.55704]

I hh:mm:ss xy,ww TABS IN PROGRESS

Explanation Of Parameters

TABS - Telemetry asynchronous block serial

TCNT, FROM, TO, AIS, CUS, INCL, RDC, PRIOUT

TWO-WAY CROSS-CONNECTION TERMINATED

Explanation Of Command

This command requests a set of terminated cross-connections over a range of specified From-direction and To-direction terminations.

If the user wants to cross-connect Nx64 kbits/s circuits, then the range feature of this command should be used.

The circuit will be formed in the terminated state with the disconnect code (DCC) inserted in both directions of transmission unless the trunk conditioning was specified as **TRSP, MUX**; in this case, the Unassigned Multiplex Code (UMC), equal to hex 18, is inserted.

Command

Nonhierarchical

[I.12001]

```
TCNT:[FRM xy,SEQ ww]:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk],\  
<tc>[,AIS][,{CUS|INCL}][,RDC][,PRIOUT]!
```

Hierarchical

[I.12001]

```
TCNT:[FRM xy,SEQ ww]:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\  
<tc>[,AIS][,{CUS|INCL}][,RDC][,PRIOUT]!
```

Completion Message

Nonhierarchical

[O.12001]

M hh:mm:ss xy,ww n[vv] TCNT [s]abcddd[-eee],[t]ghijjj[-kkk] \
<tc>[AIS][CUS][RDC][PRIOUT] COMPL

[O.12002]

M hh:mm:ss xy,ww n[vv] TCNT [s]abcddd[-eee],[t]ghijjj[-kkk] 2 LN MSG:
<tc>[AIS][CUS][RDC][PRIOUT] COMPL

Hierarchical

[O.12001]

M hh:mm:ss xy,ww n[vv] TCNT uvmnpddd[-eee],wxkqrjjj[-kkk] \
<tc>[AIS][CUS][RDC][PRIOUT] COMPL

[O.12002]

M hh:mm:ss xy,ww n[vv] TCNT uvmnpddd[-eee],wxkqrjjj[-kkk] 2 LN MSG:
<tc>[AIS][CUS][RDC][PRIOUT] COMPL

Denial Message

Nonhierarchical

[O.12001.01]

M hh:mm:ss xy,ww n[vv] TCNT [s]abcddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.12001.02]

M hh:mm:ss xy,ww n[vv] TCNT [s]abcddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] <d> <st> DNY

Hierarchical

[O.12001.01]

M hh:mm:ss xy,ww n[vv] TCNT uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.12001.02]

M hh:mm:ss xy,ww n[vv] TCNT uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] <d> <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From

[s]abcd

- Nonhierarchical termination in to direction

[s]abc - The 3- or 4-digit NPC number
ddd - Channel number, beginning of range

TO - To

[s]ghij

- Nonhierarchical termination in from direction

[s]ghi - NPC number
jjj - Channel number, beginning of range
The values are listed below:

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnpddd

- Hierarchical termination in from direction

wxkqrjjj

- Hierarchical termination in to direction

uv, wx - Unit number

m, k - Module number

np, qr - NPC number within the module

ddd, jjj

- Channel number, beginning of range

The values are listed below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

eee, kkk

- Channel numbers for end of channel range

To connect a range of channels, use the optional fields **eee** and **kkk**.

001 through 024

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

The Facility Data Link (FDL) channel 000 is not allowed in a range.
Only the FDL of DE type NPC with ESF Format can be cross-connected.

tc - Trunk conditioning

Defines the cross-connected signaling and insertion word applied to the circuit during a failure condition. The signaling and insertion word are separately specified, using a comma as the delimiter using the form:

<tc_sig>,<tc_iw>

where: tc_sig is the **signaling** portion of trunk conditioning and
tc_iw is the **insertion word** portion of trunk conditioning.

Valid values for two-way cross-connects are:

4-state signaling

TC(ijkl,mnop),TRB

TC(ijkl,mnop),IW X'nn

16-state signaling

TC(efghijkl,mnopqrst),TRB

TC(X'uv,X'yz),TRB

TC(efghijkl,mnopqrst),IW X'nn

TC(X'uv,X'yz),IW X'nn

Transparent signaling

TRSP,TRB

TRSP,IW X'nn

TRSP,MUX

TRSP

Note: For ESF type framing, 4-state signaling will be expanded to 16-state by duplicating the bits.

ijkl - 4-state binary signaling value - From direction

mnop - 4-state binary signaling value - To direction

efghijkl

- 16-state binary signaling value - From direction

mnopqrst

- 16-state binary signaling value - To direction

uv - 16-state hexadecimal signaling value - From direction

yz - 16-state hexadecimal signaling value - To direction

nn - Hexadecimal Insertion Word

TRB - Trouble Code

Equal to **nn** value of **E4**.

MUX - Multiplexer Out of Sync Code

Equal to **nn** value of **1A**. This keyword can not be entered in combination with signaling trunk conditioning. Instead, it must always be accompanied by the **TRSP** keyword. The Multiplexer Out of Sync Code is only used for cross-connections of T1DM data circuits which do not use robbed bit signaling.

TRSP - Transparent

No robbed bit signaling is performed.

Note: In a gateway application, when E1 channels are connected to T1 channels, the following rules apply to the transmittal of the Insertion Word (IW) towards the facility. If the Insertion Word needs to be transmitted towards the facility as a result of consequent action, then the Insertion Word transmitted by the T1 NPC towards its transmission facility is the Insertion Word specified in this command; however, the Insertion Word transmitted by the E1 NPC towards its facility is always X'FF.

AIS - Alarm indication signal

This optional keyword is used to cause the all ones signal to be inserted on the downstream digroup when detected on the incoming digroup or when the incoming digroup exhibits a CGA (Carrier Group Alarm).

CUS - Customer

This optional keyword is used to flag a circuit as a customer controlled circuit. On output it indicates that the circuit is customer controlled.

RDC - Red circuit

This optional keyword is used to mark a circuit as a Red Circuit. On output it indicates that the circuit is a Red Circuit.

INCL - Inclusive

A termination designated as a customer controlled circuit or a red circuit cannot be disconnected or modified without using this keyword in the message. Also, an NPC which supports these circuits cannot be manually removed unless this keyword is given in the remove command.

PRIOUT - Priority Output

This keyword is used on the command line to prioritize the output response.

mmm - The From-direction channel number involved in denial (**ddd** through **eee**).

nnn - The To-direction channel number involved in denial (**jjj** through **kkk**).

d - Direction

d	<i>Explanation</i>
F	FROM
T	TO
B	Both

st - Status of denial

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
06	INERR	Invalid range for specified FROM NPC type
07	INERR	Invalid range for specified TO NPC type
08	INERR	Invalid FROM NPC type for AIS insertion
09	INERR	Invalid TO NPC type for AIS insertion
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
20	MCOND	Line format types are incompatible
21	MCOND	Trunk conditioning is invalid
22	MCOND	FMC cannot be cross-connected in this format
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS

cc	st	<i>Explanation</i>
1D	MCOND	Required MIU not equipped, not in service, or failed
D0	SCERR	FROM NPC is not provisioned as DGA
D1	SCERR	TO NPC is not provisioned as DGA
D6	INERR	Invalid FROM channel number
D7	INERR	Invalid TO channel number
D9	INERR	Invalid FROM channel number range
DA	INERR	Invalid TO channel number range
DC	INERR	A loopback is active on the FROM termination
DD	INERR	A loopback is active on the TO termination
DF	INERR	Unmatched channel range
E0	SCERR	Unmatched channel range involving SLC Mode III termination
E4	SCERR	RT-DCLU cross-connect with different ids
E5	SCERR	RT-DCLU cross-connect with different channel number
E6	SCERR	Cross-connect a non Mode I channel to DCLU
E7	SCERR	Cross-connect a non SLC channel to DCLU
E8	INERR	SC invalid for cross-connection specified
E9	INERR	MUX or TRB invalid for cross-connection specified
EA	INERR	AIS invalid for cross-connection specified
EC	INERR	Invalid channel 000 cross-connection specified
ED	INERR	Invalid channel 031 cross-connection specified
EE	INERR	Trunk type is not allowed in the circuit specified
40	MCOND	Not enough DSPPs are equipped
41	MCOND	Not enough DSPPs are in service
FF	ROLL	Termination is in process of being rolled

st	d	<i>Explanation</i>
ASGN	{F T B}	Termination assigned
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
TG	{F T B}	NPC is grown as a test group
TP	{F T B}	NPC is used for test access
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

TCNT, FROM, TO, MPM, NTR, RDC, CUS, INCL

**TWO-WAY CROSS-CONNECT TERMINATE,
FROM, TO, MULTIPOINT MODE**

Explanation Of Command

This message requests the two-way terminated cross-connection of a leg to a multipoint circuit. The circuit will be set up in the terminated state with the disconnect channel code (DCC) inserted in both directions of transmission.

Note: Range values apply only to the FTU end of an FTU to Virtual NPC circuit.

Command

Nonhierarchical

[I.12021]

```
TCNT:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk],\  
MPM(fmd,tmd),<tc>[,NTR m][,RDC][,{CUS|INCL}]!
```

Hierarchical

[I.12021]

```
TCNT:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\  
MPM(fmd,tmd),<tc>[,NTR m][,RDC][,{CUS|INCL}]!
```

Completion Message

Nonhierarchical

[O.12021]

M hh:mm:ss xy,ww n[vv] TCNT [s]abcddd[-eee],[t]ghijjj[-kkk] \\
2 LN MSG:
fmd,tmd <tc>[NTR m][NOBBL {F|T}][CUS][RDC] COMPL

Hierarchical

[O.12021]

M hh:mm:ss xy,ww n[vv] TCNT uvmnpddd[-eee],wxkqrjjj[-kkk] \\
2 LN MSG:
fmd,tmd <tc>[NTR m][NOBBL {F|T}][CUS][RDC] COMPL

Denial Message

Nonhierarchical

[O.12021.01]

M hh:mm:ss xy,ww n[vv] TCNT [s]abcddd[-eee],[t]ghijjj[-kkk] \\
[mmm,nnn] cc <st> DNY

[O.12021.02]

M hh:mm:ss xy,ww n[vv] TCNT [s]abcddd[-eee],[t]ghijjj[-kkk] \\
[mmm,nnn] <d> <st> DNY

Hierarchical

[O.12021.01]

M hh:mm:ss xy,ww n[vv] TCNT uvmnpddd[-eee],wxkqrjjj[-kkk] \\
[mmm,nnn] cc <st> DNY

[O.12021.02]

M hh:mm:ss xy,ww n[vv] TCNT uvmnpddd[-eee],wxkqrjjj[-kkk] \\
[mmm,nnn] <d> <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number
[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

9961-9966

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

The list of valid values given below is limited by the equipage of the frame.

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

VI NPC numbers listed by unit, module, and NPC Number
Unit Type VI (Virtual)

Unit	Module	NPC	
99	1	01-02	(DACS II Non-CEF frames)
99	1	01-06	(DACS II CEF frames)

ddd,
jjj - Channel numbers
eee,
kkk - Channel numbers denoting the end of a range specification

Range variables **eee** and **kkk** apply only to the FTU end of an FTU to Virtual NPC circuit; that is, they cannot apply to the Virtual NPC end. Range variables do not apply to either end of an FTU to DMB or DMB to DMB circuit.

Channel numbers
001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers
001-085 (MB NPC)

001-500 (Virtual NPC)

Cross-connections may be between various Network Processing Circuit (NPC) types:

Facility Terminating Unit (IFTU/FTU)/DS3U NPC and DMB
DMB and DMB
IFTU/FTU/DS3U NPC and Virtual NPC

MPM - Multipoint mode
fmd - Multipoint mode of FROM end of the circuit
tmd - Multipoint mode of TO end of the circuit

The direction of data flow is indicated by MPM (fmd,tmd)

For DMB circuits, there are four possible values for fmd and tmd:

fmd	
tmd	<i>Explanation</i>
SYM	For legs of a symmetrical multipoint circuit (must be a DMB channel)
BRD	For nonbackbone (tributary) legs of a broadcast multipoint circuit (must be a DMB channel)
BBL	For the backbone leg of a broadcast multipoint circuit (must be a DMB channel)
LEG	For the end that does not terminate on the multipoint circuit (must be an FTU/DS3U channel)

For virtual NPC circuits, there are three possible values for fmd and tmd:

fmd	
tmd	<i>Explanation</i>
BRD	For nonbackbone legs of a broadcast multipoint circuit (must be a virtual NPC channel)
BBL	For the backbone leg of a broadcast multipoint circuit (must be a virtual NPC channel)
LEG	For the end that does not terminate on the multipoint circuit (must be FTU/DS3U channels)

The possible combinations are:

For within a DMB or virtual conference:

LEG,BBL
LEG,BRD
SYM,LEG (only for DMB)

For concatenation of conferences:

BRD,BBL
BBL,BBL
SYM,SYM

Note: To avoid possible transmission delays in the conferencers, DACS II will not allow DMB broadcast conferences to be concatenated more than six deep. However, each concatenated conference will support the maximum allowable number of legs. This allows conferences to branch out at any point in the daisy chain, as long as each branch does not concatenate more than six conferences from the backbone leg.

Note: Default values for noise guard (NG) and echo suppression (ES) are applied to symmetrical bridges (multipoint mode SYM) and polling circuits (multipoint mode BBL, BRD). These default values are:

Symmetrical bridges	NG = -18db	ES = -18db
Polling circuits	NG = 0db	ES = 0db

tc - Trunk conditioning, which has the input form

TRSP, {IW X'pq|TRB|MUX}

Represents the desired cross-connected signaling and insertion word applied when a failure occurs. A trunk conditioning specification consists of a combination of a signaling specification followed by an insertion word specification. The TRSP (transparent) signaling specification is the only one allowed.

The following signaling options are allowed:

<i>signaling</i>	<i>Explanation</i>
TRSP	Transparent, no signaling

The following insertion word options are allowed:

<i>IW</i>	<i>Explanation</i>
IW X'pq	The 8-bit pattern corresponding to the hexadecimal value of pq will be inserted in the downstream direction of a failure on either line.
TRB	Standard trouble code, equal to IW X'E4, not valid for CEPT.
MUX	MUX out of sync code, equal to IW X'1A, not valid for CEPT.
Omitted	Only valid for CEPT, will default to IW-X-FF.

All leg connections to multipoint circuits using a DMB NPC or a Virtual NPC must use TRSP signaling. The insertion word portion is user specified as noted above and may be varied from leg to leg.

For all multipoint to multipoint conference cross-connections (DMB concatenated conferences) the only allowable trunk conditioning specification is TRSP, and need not be specified, as it is the default. An insertion word is not valid for concatenated conferences.

Note: In a gateway application, when E1 channels are connected to T1 channels, the following rules apply to the transmittal of the Insertion Word (IW) towards the facility. If the Insertion Word needs to be transmitted towards the facility as a result of consequent action, then the Insertion Word transmitted by the T1 NPC towards its transmission facility is the Insertion Word specified in this command; however, the Insertion Word transmitted by the E1 NPC towards its facility is always X'FF.

NTR - No transmit

m - Direction in which transmission is shut off

<i>m</i>	<i>Explanation</i>

F	FROM

T	TO

To set up one-way connections; that is, to shut off transmission towards a FROM or TO termination, use NTR and specify the direction in variable m. If NTR m is specified on the BBL (backbone leg) of a multipoint circuit, then the broadcast (BRD) legs of this circuit have their outward transmission turned off.

NTR m is optional if the virtual NPC is part of the circuit.

NOBBL - No backbone leg

If the type of circuit was a broadcast circuit, NOBBL indicates that no backbone leg is yet specified in either the FROM or TO direction. This argument will appear until a backbone leg is specified for this circuit.

<i>m</i>	<i>Explanation</i>

F	- From

T	- To

CUS - Customer

Customer-controlled circuit

The optional CUS keyword is used to flag a circuit as a customer controlled circuit. On output it indicates that the circuit is customer controlled.

All legs on a multipoint customer controlled circuit must be designated as CUS.

RDC - Red circuit

On input the optional RDC keyword is used to mark a circuit as a Red Circuit. On output it indicates that the circuit is a Red Circuit.

All legs on a multipoint Red Circuit must be designated RDC.

INCL - Inclusive

A termination designated as CUS or RDC cannot be disconnected or modified without using the INCL keyword in the message. Also, an NPC which supports these circuits cannot be manually removed unless the INCL keyword is given in the remove message.

A disconnected termination previously marked CUS remains a customer controlled termination. The INCL keyword must be used to reconnect this termination to other terminations. However, if they are reconnected without the CUS keyword, they lose their customer controlled status.

NAM - No A-law to μ -law

The A-law to μ -law and μ -law to A-law code translators on the E1 type NPC are disabled. This keyword is valid in the following types of cross-connects:

Multi-Point:

E1 to E1 Multi-point cross-connects have A-law to μ -law and μ -law to A-law set as a default. This conversion is performed on pure E1 multi-point connections in case a DS1 leg is ever added to the broadcast connection. The **NAM** keyword is used to disable the conversions. It may be desirable to disable conversions in a pure E1 multi-point cross-connect since such a connection has more quantization noise than a pure E1 two-point cross-connect. This is due to the back to back A-law to μ -law and μ -law to A-law conversions which are taking place.

E1 to DS1 or DS1 to E1 Same explanation as E1 to E1.

DS1 to DS1 Not applicable.

mmm - FROM channel number involved in the denial (ddd through eee)

nnn - TO channel number involved in the denial (jjj through kkk)

st - Status of denial

d - Direction

d	<i>Explanation</i>
B	Both
F	FROM
T	TO

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
06	INERR	Invalid range for specified FROM NPC type
07	INERR	Invalid range for specified TO NPC type
08	INERR	Invalid FROM NPC type for AIS insertion
09	INERR	Invalid TO NPC type for AIS insertion
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed

cc	st	<i>Explanation</i>
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
18	MCOND	DSPI not equipped, not in service, or failed
20	MCOND	Line format types are incompatible
21	MCOND	Trunk conditioning is invalid
22	MCOND	FMC cannot be cross-connected in this format
50	INERR	Trunk conditioning doesn't match that of conference
51	INERR	CUS flag doesn't match that of conference
52	INERR	RDC flag doesn't match that of conference
70	CONFERR	Try to add a BBL to VC, but the VC already has backbone
78	CONFERR	Try to operate a ONE-WAY conference with a TWO-WAY input command
80	CONFERR	Database conference width does not match the range in input command
83	INERR	Invalid input BBL in terminated TWOWAY/ONEWAY command
84	CONFERR	Trying to add or delete a leg when a conference is under test
85	CONFERR	Input BRD (BBL) has same NPC and channel as BBL (BRD)
A0	INERR	Illegal LEG LEG combination
A1	INERR	Illegal BBL BBL combination
A2	INERR	Illegal BRD BRD combination
A3	INERR	Illegal SYM BRD combination
A4	INERR	Illegal BRD SYM combination
A5	INERR	Illegal BBL SYM combination
A6	INERR	Illegal SYM BBL combination
A7	INERR	LEG mode was assigned to a DSPU-type NPC on the input
A8	INERR	A DMB mode was assigned to a FTU-type NPC on the input
A9	INERR	Trying to add a BBL to a DMB conference that already has one
AA	INERR	Trying to add a broadcast leg to a conference set up as SYM
AB	INERR	Trying to add a SYM leg to conference set up as broadcast
AC	INERR	Trying to add a BBL leg to a conference set up as SYM
B0	INERR	Bad use of INCL, cannot override the current state of the conference
B1	INERR	Bad use of INCL, cannot use keyword on conf.-to-conf. connection
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS

cc	st	Explanation
1D	MCOND	Required MIU not equipped, not in service, or failed
B5	INERR	CPR circuit pack specified in the command
D0	SCERR	FROM NPC is not provisioned as DGA
D1	SCERR	TO NPC is not provisioned as DGA
D6	INERR	Invalid FROM channel number
D7	INERR	Invalid TO channel number
D9	INERR	Invalid FROM channel number range
DA	INERR	Invalid TO channel number range
DC	INERR	A loopback is active on the FROM termination
DD	INERR	A loopback is active on the TO termination
DF	INERR	Unmatched channel range
E0	SCERR	Unmatched channel range involving SLC Mode III termination
E1	INERR	A locally switched channel is specified as BBL, LEG, or BRD
E4	SCERR	RT-DCLU cross-connect with different ids
E5	SCERR	RT-DCLU cross-connect with different channel number
E6	SCERR	Cross-connect a non Mode I channel to DCLU
E7	SCERR	Cross-connect a non SLC channel to DCLU
E8	INERR	SC invalid for cross-connection specified
E9	INERR	MUX or TRB invalid for cross-connection specified
EA	INERR	AIS invalid for cross-connection specified
EB	INERR	NAM invalid for cross-connection specified
EC	INERR	Invalid channel 000 cross-connection specified
ED	INERR	Invalid channel 031 cross-connection specified
FF	ROLL	Termination is in process of being rolled

st	d	Explanation
ASGN	{F T B}	Termination assigned
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
NOCHAN	{F T B}	Conference has no more channels to connect
NOCUS	{F T B}	Conference not CUS
NORDC	{F T B}	Conference not RDC
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
TG	{F T B}	
TP	{F T B}	NPC is used for test access
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

TCNT, FROM, TO, PFW, NFW

TWO WAY CROSS-CONNECTION TERMINATE

Explanation Of Command

This command requests the terminated connection of timeslot 0 (TS0) of one NPC to a timeslot other than TS0 (non-TS0) on another NPC. A cross-connect mode must be chosen to prevent the TS0 Frame Alignment Signal from being transmitted in a non-TS0 timeslot.

Command

Nonhierarchical

[I.12051]

```
TCNT:FRM xy,SEQ ww:FROM [s]abcddd,TO [t]ghijjj\  
[, {PFW(abcdefg,ijklmno)|NFW}]!
```

Hierarchical

[I.12051]

```
TCNT:FRM xy,SEQ ww:FROM uvmnpddd,TO wxkqrjjj\  
[, {PFW(abcdefg,ijklmno)|NFW}]!
```

Completion Message

Nonhierarchical

[O.12051]

M hh:mm:ss xy,ww n[vv] TCNT [s]abcddd,[t]ghijjj \
{PFW(abcdefg,ijklmno)|NFW} COMPL

Hierarchical

M hh:mm:ss xy,ww n[vv] TCNT uvmnpddd,wxkqrjjj \
{PFW(abcdefg,ijklmno)|NFW} COMPL

Denial Message

Nonhierarchical

[O.12051.01]

M hh:mm:ss xy,ww n[vv] TCNT [s]abcddd,[t]ghijjj\
[{PFW(abcdefg,ijklmno)|NFW}] cc <st> DNY

[O.12051.02]

M hh:mm:ss xy,ww n[vv] TCNT [s]abcddd,[t]ghijjj\
[{PFW(abcdefg,ijklmno)|NFW}] d <st> DNY

Hierarchical

[O.12051.01]

M hh:mm:ss xy,ww n[vv] TCNT uvmnpddd,wxkqrjjj\
[{PFW(abcdefg,ijklmno)|NFW}] cc <st> DNY

[O.12051.02]

M hh:mm:ss xy,ww n[vv] TCNT uvmnpddd,wxkqrjjj\
[{PFW(abcdefg,ijklmno)|NFW}] d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FRM - Frame

FROM - From

TO - To

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number
wxkqr - Hierarchical TO NPC number

uv, wx - Unit number
m, k - Module number
np, qr - NPC number

The values are listed below:

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ddd - Channel number for FROM NPC

jjj - Channel number for TO NPC

000-030 on CEPT type NPCs grown as CAS
000-031 on CEPT type NPCs grown as NSA

Note: One of the channel numbers specified (ddd or jjj) must be channel 000 (TS0), while the other channel number (jjj or ddd) must be a number other than channel 000 (non-TS0).

The NPC containing the TS0 channel must be a PA or TH type NPC, while the NPC containing the non-TS0 channel can be either a PA, PB, PC or TH type NPC.

PFW - Pseudo Frame Word

The PFW parameter is used to select Mode 1 of TS0 Cross-Connect:
In both directions of transmission the Frame Word is replaced
by a Pseudo Frame Word.

abcdefg

- Value of the Pseudo Frame Word

This value replaces the Frame Alignment Signal (Bits 2 - 8) of the Frame
Word being transmitted from the TO NPC to the FROM NPC.

The characters in the field represent the following bits:

- a** - Pseudo Frame Word Bit 2
- b** - Pseudo Frame Word Bit 3
- c** - Pseudo Frame Word Bit 4
- d** - Pseudo Frame Word Bit 5
- e** - Pseudo Frame Word Bit 6
- f** - Pseudo Frame Word Bit 7
- g** - Pseudo Frame Word Bit 8

Values for bits a - g:

- "0" - Sets the corresponding bit to "0"
- "1" - Sets the corresponding bit to "1"

ijklmno

- Value of the Pseudo Frame Word

This value replaces the Frame Alignment Signal (Bits 2 - 8) of the Frame
Word being transmitted from the FROM NPC to the TO NPC.

The characters in the field represent the following bits:

- i** - Pseudo Frame Word Bit 2
- j** - Pseudo Frame Word Bit 3
- k** - Pseudo Frame Word Bit 4
- l** - Pseudo Frame Word Bit 5
- m** - Pseudo Frame Word Bit 6
- n** - Pseudo Frame Word Bit 7
- o** - Pseudo Frame Word Bit 8

Values for bits i - o:

- "0" - Sets the corresponding bit to "0"
- "1" - Sets the corresponding bit to "1"

Note: Bit 2 of timeslot 0 in a 2Mbit/s signal is used to distinguish the Frame Word from the Non Frame Word and it must always be '0' in the FW and '1' in the NFW. When defining the Pseudo Frame Word the user must make sure that the Pseudo Frame Word can be distinguished from the Non Frame Word.

NFW - Non frame word

The NFW parameter is used to select Mode 2 of TS0 Cross-Connect. In both directions of transmission the Frame Word is replaced by the Non Frame Word, thus repeating the content of the Non Frame Word in consecutive frames.

If no mode is selected in the command, the default shall be NFW, that is, the default mode of operation is Mode 2.

d - Direction

d	<i>Explanation</i>
F	From
T	To
B	Both

st - Status

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
FF	ROLL	Termination is in process of being rolled

TCNT, FROM, TO, RDC, CUS, INCL, PRIOUT

TERMINATED TWO-WAY CROSS CONNECT

Explanation Of Command

This message terminates two-way cross connections of non-channelized network processing circuits. The alarm-indication signal (AIS) is the idle code and does not need to be entered. Trunk condition options for 64 kbit/s cross connection are not allowed for non-channelized connections.

When a failure occurs or during an alarm state, the AIS is transmitted toward the TO NPC.

Command

Nonhierarchical

[I.12031]

TCNT:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,RDC][,{CUS|INCL}][,PRIOUT]!

Hierarchical

[I.12031]

TCNT:FRM xy,SEQ ww:FROM uvmpn,TO wxkqr[,RDC][,{CUS|INCL}][,PRIOUT]!

Completion Message

Nonhierarchical

[O.12031]

M hh:mm:ss xy,ww n[vv] TCNT [s]abc,[t]ghi[RDC][CUS][PRIOUT] COMPL

Hierarchical

[O.12031]

M hh:mm:ss xy,ww n[vv] TCNT uvmnp,wxkqr[RDC][CUS][PRIOUT] COMPL

Denial Message

Nonhierarchical

[O.12031.01]

M hh:mm:ss xy,ww n[vv] TCNT [s]abc,[t]ghi cc <st> DNY

[O.12031.02]

M hh:mm:ss xy,ww n[vv] TCNT [s]abc,[t]ghi d <st> DNY

Hierarchical

[O.12031.01]

M hh:mm:ss xy,ww n[vv] TCNT uvmnp,wxkqr cc <st> DNY

[O.12031.02]

M hh:mm:ss xy,ww n[vv] TCNT uvmnp,wxkqr d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit non-hierarchical non-channelized FROM NPC number

[t]ghi - The 3- or 4-digit non-hierarchical non-channelized TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical non-channelized FROM NPC number

wxkqr - Hierarchical non-channelized TO NPC number

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

The valid values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
 Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
 Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
 Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
 Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

RDC - Red circuit

CUS - Customer
 Customer-controlled circuit

INCL - Inclusive
 This option will remove CUS marking

PRIOUT - Priority Output
 This keyword is used on the command line to prioritize
 the output response.

st - Status of denial

d - Direction

d **FIExplanation**

F From
T To
B Both

cc - Hexadecimal condition code

cc **st** *Explanation*

04	INERR	No NPC's out of service and OOS keyword used
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
FF	ROLL	Termination is in process of being rolled

st **d** *Explanation*

ASGN	{F T B}	Termination assigned
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
INVLD	{F T B}	Invalid NPC type
NPCTA	{F T B}	NPC used for Test Access
OOS	{F T B}	Out-of-service
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

TCON, FROM, TO, AIS, CUS, INCL, RDC, PRIOUT

TWO-WAY CROSS-CONNECTION

Explanation Of Command

This command requests the two-point two-way connection of two specified cross-connect circuits or a range of cross-connected circuits.

If the user wants to cross-connect Nx64 kbits/s circuits, then the range feature of this command should be used.

Channel 24 of DS1 circuits that have T1DM framing may not be cross-connected.

Command

Nonhierarchical

[1.11001]

```
TCON:[FRM xy,SEQ ww]:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk],\  
<tc>[,AIS][,{CUS|INCL}][,RDC][,PRIOUT]!
```

Hierarchical

[1.11001]

```
TCON:[FRM xy,SEQ ww]:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\  
<tc>[,AIS][,{CUS|INCL}][,RDC][,PRIOUT]!
```

Completion Message

Nonhierarchical

[O.11001]

M hh:mm:ss xy,ww n[vv] TCON [s]abcddd[-eee],[t]ghijjj[-kkk] \
<tc>[AIS][CUS][RDC][PRIOUT] COMPL

[O.11002]

M hh:mm:ss xy,ww n[vv] TCON [s]abcddd[-eee],[t]ghijjj[-kkk] 2 LN MSG:
<tc>[AIS][CUS][RDC][PRIOUT] COMPL

Hierarchical

[O.11001]

M hh:mm:ss xy,ww n[vv] TCON uvmnpddd[-eee],wxkqrjjj[-kkk] \
<tc>[AIS][CUS][RDC][PRIOUT] COMPL

[O.11002]

M hh:mm:ss xy,ww n[vv] TCON uvmnpddd[-eee],wxkqrjjj[-kkk] 2 LN MSG:
<tc>[AIS][CUS][RDC][PRIOUT] COMPL

Denial Message

Nonhierarchical

[O.11001.01]

M hh:mm:ss xy,ww n[vv] TCON [s]abcddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.11001.02]

M hh:mm:ss xy,ww n[vv] TCON [s]abcddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] d <st> DNY

Hierarchical

[O.11001.01]

M hh:mm:ss xy,ww n[vv] TCON uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.11001.02]

M hh:mm:ss xy,ww n[vv] TCON uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From

[s]abcd

- Nonhierarchical termination in from direction

[s]abc - The 3- or 4-digit NPC number

ddd - Channel number, beginning of range

TO - To

[s]ghijj

- Nonhierarchical termination in to direction

[s]ghi - The 3- or 4-digit NPC number

jjj - Channel number, beginning of range

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnpddd

- Hierarchical termination in from direction

wxkqrjjj

- Hierarchical termination in to direction

uv, wx - Unit number

m, k - Module number

np, qr - NPC number within the module

ddd, jjj

- Channel number, beginning of range

The values are listed below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

If the channel being connected is an FDL (Facility Data Link), then **ddd** (**jjj**) is **000** and signaling type should be of type **TC(ijkl, mnop)**.
Only the FDL of a DE type NPC with ESF Format can be cross-connected.

eee, kkk

- Channel numbers for end of channel range

To connect a range of channels, use the optional fields **eee** and **kkk**.

001 through 024

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

tc - Trunk conditioning

Defines the cross-connected signaling and insertion word applied to the circuit during a failure condition. The signaling and insertion word are separately specified, using a comma as the delimiter using the form:

<tc_sig>,<tc_iw>

where: tc_sig is the **signaling** portion of trunk conditioning and
tc_iw is the **insertion word** portion of trunk conditioning.

Valid values for two-way cross-connects are:

4-state signaling

TC(ijkl, mnop), TRB

TC(ijkl, mnop), IW X'nn

16-state signaling

TC(efghijkl, mnopqrst), TRB

TC(X'uv, X'yz), TRB

TC(efghijkl, mnopqrst), IW X'nn

TC(X'uv, X'yz), IW X'nn

Transparent signaling

TRSP, TRB

TRSP, IW X'nn

TRSP, MUX

TRSP

Note: For ESF type framing, 4-state signaling will be expanded to 16-state by duplicating the bits.

ijkl - 4-state binary signaling value - From direction

mnop - 4-state binary signaling value - To direction

efghijkl

- 16-state binary signaling value - From direction

mnopqrst

- 16-state binary signaling value - To direction

uv - 16-state hexadecimal signaling value - From direction

yz - 16-state hexadecimal signaling value - To direction

nn - Hexadecimal Insertion Word

TRB - Trouble Code
Equal to **nn** value of **E4**.

MUX - Multiplexer Out of Sync Code
Equal to **nn** value of **1A**. This keyword can not be entered in combination with signaling trunk conditioning. Instead, it must always be accompanied by the **TRSP** keyword.

TRSP - Transparent
No robbed bit signaling is performed.

Note: In a gateway application, when E1 channels are connected to T1 channels, the following rules apply to the transmittal of the Insertion Word (IW) towards the facility. If the Insertion Word needs to be transmitted towards the facility as a result of consequent action, then the Insertion Word transmitted by the T1 NPC towards its transmission facility is the Insertion Word specified in this command; however, the Insertion Word transmitted by the E1 NPC towards its facility is always X'FF.

AIS - Alarm indication signal

This optional keyword is used to cause the all ones signal to be inserted on the downstream digroup when detected on the incoming digroup or when the incoming digroup exhibits a CGA (Carrier Group Alarm).

CUS - Customer

This optional keyword is used to flag a circuit as a customer controlled circuit. On output it indicates that the circuit is customer controlled.

RDC - Red circuit

This optional keyword is used to mark a circuit as a Red Circuit. On output it indicates that the circuit is a Red Circuit.

INCL - Inclusive

A termination designated as a customer controlled circuit or a red circuit cannot be disconnected or modified without using this keyword in the message. Also, an NPC which supports these circuits cannot be manually removed unless this keyword is given in the remove command.

PRIOUT - Priority Output

This keyword is used on the command line to prioritize the output response.

mmm - The From-direction channel number involved in denial (**ddd** through **eee**).

nnn - The To-direction channel number involved in denial (**jjj** through **kkk**).

d - Direction

d	<i>Explanation</i>
F	FROM
T	TO
B	Both

st - Status

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
06	INERR	Invalid range for specified FROM NPC type
07	INERR	Invalid range for specified TO NPC type
08	INERR	Invalid FROM NPC type for AIS insertion
09	INERR	Invalid TO NPC type for AIS insertion
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed

cc	st	<i>Explanation</i>
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
20	MCOND	Line format types are incompatible
21	MCOND	Trunk conditioning is invalid
22	MCOND	FMC cannot be cross-connected in this format
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
D0	SCERR	FROM NPC is not provisioned as DGA
D1	SCERR	TO NPC is not provisioned as DGA
D6	INERR	Invalid FROM channel number
D7	INERR	Invalid TO channel number
D9	INERR	Invalid FROM channel number range
DA	INERR	Invalid TO channel number range
DC	INERR	A loopback is active on the FROM termination
DD	INERR	A loopback is active on the TO termination
DF	INERR	Unmatched channel range
E0	SCERR	Unmatched channel range involving SLC Mode III termination
E4	SCERR	RT-DCLU cross-connect with different ids
E5	SCERR	RT-DCLU cross-connect with different channel number
E6	SCERR	Cross-connect a non Mode I channel to DCLU
E7	SCERR	Cross-connect a non SLC channel to DCLU
E8	INERR	SC invalid for cross-connection specified
E9	INERR	MUX or TRB invalid for cross-connection specified
EA	INERR	AIS invalid for cross-connection specified
EB	INERR	NAM invalid for cross-connection specified
EC	INERR	Invalid channel 000 cross-connection specified
ED	INERR	Invalid channel 031 cross-connection specified
EE	INERR	Trunk type is not allowed in the circuit specified
40	MCOND	Not enough DSPPs are equipped
41	MCOND	Not enough DSPPs are in service
85	INERR	Using the 24th channel of a T1DM NPC
FF	ROLL	Termination is in process of being rolled
E0	MCOND	ETSI not equipped, not in service, or failed

st	d	Explanation
ASGN	{F T B}	Termination assigned
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
INVLD	{F T B}	Invalid NPC type
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
TG	{F T B}	NPC is grown as a test group
TP	{F T B}	NPC is used for test access
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

TCON, FROM, TO, MPM, NTR, RDC, CUS, INCL

TWO-WAY CROSS-CONNECT FROM, TO MULTIPOINT MODE

Explanation Of Command

This command requests a multipoint two-way cross-connection between the specified FROM and TO end terminations and is used to connect a DS0 leg to a multipoint circuit, or to cross-connect a leg, consisting of a single or a contiguous range of DS0 channels, to a multipoint circuit in the virtual network processing circuit. Cross-connections may be between various network processing circuit types.

If the user wants to cross-connect Nx64 kbits/s circuits, then the range feature of this command should be used.

Command

Nonhierarchical

[I.11021]

```
TCON:FRM xy,SEQ ww:FROM [s]abcdddd[-eee],TO [t]ghijjj[-kkk],\  
MPM(fmd,tmd),<tc>,[NTR m][,RDC][,{CUS|INCL}]!
```

Hierarchical

[I.11021]

```
TCON:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk],\  
MPM(fmd,tmd),<tc>,[NTR m][,RDC][,{CUS|INCL}]!
```

Completion Message

Nonhierarchical

[O.11021]

M hh:mm:ss xy,ww n[vv] TCON [s]abcddd[-eee],[t]ghijjj[-kkk] \\
2 LN MSG:
fmd,tmd <tc>[NTR m][NOBBL {F|T}][{CUS|INCL}][RDC] COMPL

Hierarchical

[O.11021]

M hh:mm:ss xy,ww n[vv] TCON uvmnpddd[-eee],wxkqrjjj[-kkk] \\
2 LN MSG:
fmd,tmd <tc>[NTR m][NOBBL {F|T}][{CUS|INCL}][RDC] COMPL

Denial Message

Nonhierarchical

[O.11021.01]

M hh:mm:ss xy,ww n[vv] TCON [s]abcddd[-eee],[t]ghijjj[-kkk] \\
[mmm,nnn] cc <st> DNY

[O.11021.02]

M hh:mm:ss xy,ww n[vv] TCON [s]abcddd[-eee],[t]ghijjj[-kkk] \\
[mmm,nnn] d <st> DNY

Hierarchical

[O.11021.01]

M hh:mm:ss xy,ww n[vv] TCON uvmnpddd[-eee],wxkqrjjj[-kkk] \\
[mmm,nnn] cc <st> DNY

[O.11021.02]

M hh:mm:ss xy,ww n[vv] TCON uvmnpddd[-eee],wxkqrjjj[-kkk] \\
[mmm,nnn] d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number
[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

9961-9966

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

The values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

VI NPC numbers listed by unit, module, and NPC Number
Unit Type VI (Virtual)

Unit	Module	NPC	
99	1	01-02	(DACS II Non-CEF frames)
99	1	01-06	(DACS II CEF frames)

ddd,
jjj - Channel or conference numbers
eee,
kkk - Channel or conference numbers denoting the end of range specification

Channel numbers

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers

001-085 (MB NPC)

001-500 (Virtual NPC)

Cross-connections may be between various Network Processing Circuit (NPC) types:

Facility Terminating Unit (FTU)/IFTU/DS3U/HDS3U NPC and DMB
DMB and DMB
FTU/IFTU/DS3U/HDS3U NPC and Virtual NPC

Range values -eee and -kkk apply only to the FTU/IFTU/DS3U/HDS3U end of an FTU/IFTU/DS3U/HDS3U-Virtual NPC circuit; i.e., cannot apply to the Virtual NPC end. No range values can apply to either end of an FTU/IFTU/DS3U/HDS3U NPC-DMB or DMB-DMB circuit. Note also that the range of allowable NPC numbers is dependent on the equipage of the frame.

MPM - Multipoint mode

fmd - FROM mode

tmd - TO mode

Multipoint modes of the FROM and TO ends of the circuit

For DMB circuits, there are four possible values for fmd and tmd:

fmd

tmd

- SYM For legs of a symmetrical multipoint circuit (must be a DMB channel)
- BRD For nonbackbone (tributary) legs of a broadcast multipoint circuit (must be a DMB channel)
- BBL For the backbone leg of a broadcast multipoint circuit (must be a DMB channel)
- LEG For the end that does not terminate on the multipoint circuit (must be an FTU/DS3U/HDS3U channel)

For virtual NPC circuits, there are three possible values for fmd and tmd:

fmd

tmd

- BRD For nonbackbone legs of a broadcast multipoint circuit (must be a virtual NPC channel)
- BBL For the backbone leg of a broadcast multipoint circuit (must be a virtual NPC channel)
- LEG For the end that does not terminate on the multipoint circuit (must be FTU/DS3U/HDS3U channels)

The valid combinations of fmd and tmd are:

For within a DMB or virtual conference:

LEG, BBL or BBL, LEG
LEG, BRD or BRD, LEG
SYM, LEG or LEG, SYM (only for DMB)

For concatenation of conferences:

BRD, BBL or BBL, BRD
BBL, BBL
SYM, SYM

Note: Default values for noise guard (NG) and echo suppression (ES) are applied to symmetrical bridges (multipoint mode SYM) and polling circuits (multipoint mode BBL, BRD). These default values are:

Symmetrical bridges	NG = -18db	ES = -18db
Polling circuits	NG = 0db	ES = 0db

Note: To avoid possible transmission delays in the conferencers, DACS II will not allow DMB broadcast conferences to be concatenated more than six deep. However, each concatenated conference will support the maximum allowable number of legs. This allows conferences to branch out at any point in the daisy chain, as long as each branch does not concatenate more than six conferences from the backbone leg.

tc - Trunk conditioning, which has the input form

TRSP, {IW X'pq|TRB|MUX}

Represents the desired cross-connected signaling and insertion word applied when a failure occurs. A trunk conditioning specification consists of a combination of a signaling specification followed by an insertion word specification. The TRSP (transparent) signaling specification is the only one allowed.

The following signaling options are allowed:

<i>signaling</i>	<i>Explanation</i>
TRSP	Transparent, no signaling

The following insertion word options are allowed:

<i>IW</i>	<i>Explanation</i>
IW X'pq	The 8-bit pattern corresponding to the hexadecimal value of pq will be inserted in the downstream direction of a failure on either line.
TRB	Standard trouble code, equal to IW X'E4, not valid for CEPT.
MUX	MUX out of sync code, equal to IW X'1A, not valid for CEPT.
Omitted	Only valid for CEPT, will default to IW-X-FF.

All leg connections to multipoint circuits using a DMB NPC or a Virtual NPC must use TRSP signaling. The insertion word is user specified and may be varied from leg to leg.

For all multipoint to multipoint conference cross-connections (DMB concatenated conferences) only TRSP signaling is allowed and is the default hence it need not be specified. The insertion word is not valid for concatenated conferences.

Note: In a gateway application, when E1 channels are connected to T1 channels, the following rules apply to the transmittal of the Insertion Word (IW) towards the facility. If the Insertion Word needs to be transmitted towards the facility as a result of consequent action, then the Insertion Word transmitted by the T1 NPC towards its transmission facility is the Insertion Word specified in this command; however, the Insertion Word transmitted by the E1 NPC towards its facility is always X'FF.

NTR - No Transmit

m - The direction toward which transmission is shut off

m *Explanation*

F FROM

T TO

The NTR option is used to set up one-way connections; that is, to shut off transmission towards the specified FROM or TO termination. If NTR m is specified on the BBL (backbone leg) of a multipoint circuit, then the BRD (broadcast) legs of this circuit have their outward transmission turned off.

The NTR field is optional if the virtual NPC is part of the circuit. The direction of the data flow is indicated by the MPM (fmd,tmd) field.

CUS - Customer

All legs on a multipoint customer controlled circuit must be designated as CUS. A disconnected termination previously marked CUS remains as a customer controlled termination.

INCL - Inclusive

The INCL keyword must be used to reconnect a termination to other terminations. However, if they are reconnected without the CUS keyword, they lose their customer controlled status.

NAM - No A-law to μ -law

The A-law to μ -law and μ -law to A-law code translators on the E1 type NPC are disabled. This keyword is valid in the following types of cross-connects:

Multi-Point:

E1 to E1 Multi-point cross-connects have A-law to μ -law and μ -law to A-law set as a default. This conversion is performed on pure E1 multi-point connections in case a DS1 leg is ever added to the broadcast connection. The **NAM** keyword is used to disable the conversions. It may be desirable to disable conversions in a pure E1 multi-point cross-connect since such a connection has more quantization noise than a pure E1 two-point cross-connect. This is due to the back to back A-law to μ -law and μ -law to A-law conversions which are taking place.

E1 to DS1 or Same explanation as E1 to E1.
DS1 to E1

DS1 to DS1 Not applicable.

RDC - Red circuit

If the optional RDC field is present, the circuit will be flagged as a Red Circuit. All legs on a multipoint red circuit must be designated RDC.

NOBBL - No backbone leg

If the type of circuit was a broadcast circuit, the optional NOBBL indicates that no backbone leg is yet specified in either the FROM or TO direction. This argument will appear until a backbone leg is specified for this circuit.

F - From

T - To

mmm - FROM channel number involved in the denial (ddd through eee)

nnn - TO channel number involved in the denial (jjj through kkk)

st - Status

d - Direction

d *Explanation*

F FROM

T TO

B BOTH

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
06	INERR	Invalid range for specified FROM NPC type
07	INERR	Invalid range for specified TO NPC type
08	INERR	Invalid FROM NPC type for AIS insertion
09	INERR	Invalid TO NPC type for AIS insertion
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
18	MCOND	DSPI not equipped, not in service, or failed
20	MCOND	Line format types are incompatible
21	MCOND	Trunk conditioning is invalid
22	MCOND	FMC cannot be cross-connected in this format

cc	st	Explanation
37	INERR	Two confs. were prev. connected or the concat. cause BRD-BBL loop
50	INERR	Trunk conditioning doesn't match that of conference
51	INERR	CUS flag doesn't match that of conference
52	INERR	RDC flag doesn't match that of conference
70	CONFERR	Try to add a BBL to VC, but the VC already has backbone
78	CONFERR	Try to operate a ONE-WAY conference with a TWO-WAY input command
80	CONFERR	Database conference width does not match the range in input command
84	CONFERR	Trying to add or delete a leg when a conference is under test
85	CONFERR	Input BRD (BBL) has same NPC and channel as BBL (BRD)
A1	INERR	Illegal BBL BBL combination
A2	INERR	Illegal BRD BRD combination
A3	INERR	Illegal SYM BRD combination
A4	INERR	Illegal BRD SYM combination
A5	INERR	Illegal BBL SYM combination
A6	INERR	Illegal SYM BBL combination
A7	INERR	LEG mode was assigned to a DSPU-type NPC on the input
A8	INERR	A DMB mode was assigned to a FTU-type NPC on the input
A9	INERR	Trying to add a BBL to a DMB conference that already has one
AA	INERR	Trying to add a broadcast leg to a conference set up as SYM
AB	INERR	Trying to add a SYM leg to conference set up as broadcast
AC	INERR	Trying to add a BBL leg to a conference set up as SYM
B0	INERR	Bad use of INCL, cannot override the current state of the conference
B1	INERR	Bad use of INCL, cannot use keyword on conf.-to-conf. connection
C8	INERR	Exceeded depth limit of 6 on broadcast conference concatenation
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
AE	INERR	A substrate circuit pack is specified in the command line
B5	INERR	CPR circuit pack specified in the command
D0	SCERR	FROM NPC is not provisioned as DGA
D1	SCERR	TO NPC is not provisioned as DGA
D6	INERR	Invalid FROM channel number
D7	INERR	Invalid TO channel number
D9	INERR	Invalid FROM channel number range
DA	INERR	Invalid TO channel number range

cc	st	<i>Explanation</i>
DC	INERR	A loopback is active on the FROM termination
DD	INERR	A loopback is active on the TO termination
DF	INERR	Unmatched channel range
E0	SCERR	Unmatched channel range involving SLC Mode III termination
E1	INERR	A locally switched channel is specified as BBL, LEG, or BRD
E4	SCERR	RT-DCLU cross-connect with different ids
E5	SCERR	RT-DCLU cross-connect with different channel number
E6	SCERR	Cross-connect a non Mode I channel to DCLU
E7	SCERR	Cross-connect a non SLC channel to DCLU
E8	INERR	SC invalid for cross-connection specified
E9	INERR	MUX or TRB invalid for cross-connection specified
EA	INERR	AIS invalid for cross-connection specified
EB	INERR	NAM invalid for cross-connection specified
EC	INERR	Invalid channel 000 cross-connection specified
ED	INERR	Invalid channel 031 cross-connection specified
FF	ROLL	Termination is in process of being rolled

st	d	<i>Explanation</i>
ASGN	{F T B}	Termination assigned
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
NOCHAN	{F T B}	Conference has no more channels to connect
NOCUS	{F T B}	Conference not CUS
NORDC	{F T B}	Conference not RDC
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
TG	{F T B}	
TP	{F T B}	NPC is used for test access
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

TCON, FROM, TO, PFW, NFW

TWO-WAY CROSS-CONNECTIONS

Explanation Of Command

This command requests a TS0 to non-TS0 cross-connection. A cross-connect mode must be chosen to prevent the TS0 Frame Alignment Signal from being transmitted in a non-TS0 timeslot.

Command

Nonhierarchical

[I.11051]

```
TCON:FRM xy,SEQ ww:FROM [s]abcddd,TO [t]ghijjj\  
[, {PFW(abcdefg,ijklmno)|NFW}]!
```

Hierarchical

[I.11051]

```
TCON:FRM xy,SEQ ww:FROM uvmnpddd,TO wxkqrjjj\  
[, {PFW(abcdefg,ijklmno)|NFW}]!
```

Completion Message

Nonhierarchical

[O.11051]

```
M hh:mm:ss xy,ww n[vv] TCON [s]abcddd,[t]ghijjj \  
{PFW(abcdefg,ijklmno)|NFW} COMPL
```

Hierarchical

[O.11051]

M hh:mm:ss xy,ww n[vv] TCON uvmnpddd,wxkqrjjj \
{PFW(abcdefg,ijklmno)|NFW} COMPL

Denial Message

Nonhierarchical

[O.11051.01]

M hh:mm:ss xy,ww n[vv] TCON [s]abcddd,[t]ghijjj\
[{PFW(abcdefg,ijklmno)|NFW}] cc <st> DNY

[O.11051.02]

M hh:mm:ss xy,ww n[vv] TCON [s]abcddd,[t]ghijjj\
[{PFW(abcdefg,ijklmno)|NFW}] d <st> DNY

Hierarchical

[O.11051.01]

M hh:mm:ss xy,ww n[vv] TCON uvmnpddd,wxkqrjjj\
[{PFW(abcdefg,ijklmno)|NFW}] cc <st> DNY

[O.11051.02]

M hh:mm:ss xy,ww n[vv] TCON uvmnpddd,wxkqrjjj\
[{PFW(abcdefg,ijklmno)|NFW}] d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

TO - To

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number
wxkqr - Hierarchical TO NPC number

uv, wx - Unit number
m, k - Module number
np, qr - NPC number

The values are listed below:

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ddd - Channel number for FROM NPC

jjj - Channel number for TO NPC

000-030 on CEPT type NPCs grown as CAS

000-031 on CEPT type NPCs grown as NSA

Note: One of the channel numbers specified (ddd or jjj) must be channel 000 (TS0), while the other channel number (jjj or ddd) must be a number other than channel 000 (non-TS0).

The NPC containing the TS0 channel must be a PA or TH type NPC, while the NPC containing the non-TS0 channel can be either a PA, PB or PC or TH type NPC.

PFW - Pseudo Frame Word

The PFW parameter is used to select Mode 1 of TS0 Cross-Connect: In both directions of transmission the Frame Word is replaced by a Pseudo Frame Word.

abcdefg - Value of the Pseudo Frame Word

This value replaces the Frame Alignment Signal (Bits 2 - 8) of the Frame Word being transmitted from the TO NPC to the FROM NPC.

The characters in the field represent the following bits:

a	- Pseudo Frame Word Bit 2
b	- Pseudo Frame Word Bit 3
c	- Pseudo Frame Word Bit 4
d	- Pseudo Frame Word Bit 5
e	- Pseudo Frame Word Bit 6
f	- Pseudo Frame Word Bit 7
g	- Pseudo Frame Word Bit 8

Values for bits a - g:

- "0" - Sets the corresponding bit to "0"
- "1" - Sets the corresponding bit to "1"

ijklmno - Value of the Pseudo Frame Word

This value replaces the Frame Alignment Signal (Bits 2 - 8) of the Frame Word being transmitted from the FROM NPC to the TO NPC.

The characters in the field represent the following bits:

- i** - Pseudo Frame Word Bit 2
- j** - Pseudo Frame Word Bit 3
- k** - Pseudo Frame Word Bit 4
- l** - Pseudo Frame Word Bit 5
- m** - Pseudo Frame Word Bit 6
- n** - Pseudo Frame Word Bit 7
- o** - Pseudo Frame Word Bit 8

Values for bits i - o:

- "0" - Sets the corresponding bit to "0"
- "1" - Sets the corresponding bit to "1"

Note: Bit 2 of timeslot 0 in a 2Mbit/s signal is used to distinguish the Frame Word from the Non Frame Word and it must always be '0' in the FW and '1' in the NFW. When defining the Pseudo Frame Word the user must make sure that the Pseudo Frame Word can be distinguished from the Non Frame Word.

NFW - Non frame word

The NFW parameter is used to select Mode 2 of TS0 Cross-Connect. In both directions of transmission the Frame Word is replaced by the Non Frame Word, thus repeating the content of the Non Frame Word in consecutive frames.

If no mode is selected in the command, the default shall be NFW, that is, the default mode of operation is Mode 2.

NORM - Normal

NORM, NORM means that the cross-connection will come up in the normal state. The NORM keyword corresponds to the PDS TCON command.

TERM - Terminate

TERM, TERM means that the cross-connection will come up in the terminated state. The TERM keyword corresponds to the PDS TCNT command.

d - Direction

d **Explanation**

F From

T To

B Both

st - Status

cc - Hexadecimal condition code

cc **st** *Explanation*

FF **ROLL** Termination is in process of being rolled

st **d** *Explanation*

ASGN **F** Termination assigned

CUS **F** Customer-controlled Circuit

FAIL **F** Failed

OOS **F** Out-of-service

UEQD **F** Unequipped

UTST **F** Under Test

TCON, FROM, TO, RDC, CUS, INCL, PRIOUT

TWO-WAY NON-CANNELIZED DIGITAL SIGNAL CROSS CONNECTION

Explanation Of Command

This message is used to form a two-way cross-connection between two non-channelized network processing circuits (NPCs). It is also used to form a terminated two-way cross-connection. The idle code is the alarm-indication signal (AIS, all ones) and does not need to be specified. The disconnect code (DCC) for 64 kbit/s disconnection cannot be used for non-channelized NPCs.

When a failure occurs or during an alarm state, the AIS is transmitted toward the TO NPC.

NPCs with customer-controlled marking retain the CUS status when disconnected. When the NPCs are reconnected without CUS or inclusive (INCL) keyword, the command will be denied. If the NPCs are reconnected with INCL keyword, they lose the CUS status.

Red circuit marking is removed when the circuit is disconnected.

Command

Nonhierarchical

[I.11011]

TCON:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,RDC][,{CUS|INCL}][,PRIOUT]!

Hierarchical

[I.11011]

TCON:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,RDC][,{CUS|INCL}][,PRIOUT]!

Completion Message

Nonhierarchical

[O.11011]

M hh:mm:ss xy,ww n[vv] TCON [s]abc,[t]ghi[RDC][CUS][PRIOUT] COMPL

Hierarchical

[O.11011]

M hh:mm:ss xy,ww n[vv] TCON uvmnp,wxkqr[RDC][CUS][PRIOUT] COMPL

Denial Message

Nonhierarchical

[O.11011.01]

M hh:mm:ss xy,ww n[vv] TCON [s]abc,[t]ghi cc <st> DNY

[O.11011.02]

M hh:mm:ss xy,ww n[vv] TCON [s]abc,[t]ghi d <st> DNY

Hierarchical

[O.11011.01]

M hh:mm:ss xy,ww n[vv] TCON uvmnp,wxkqr cc <st> DNY

[O.11011.02]

M hh:mm:ss xy,ww n[vv] TCON uvmnp,wxkqr d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number
wxkqr - Hierarchical TO NPC number

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module
The values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number

Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

RDC - Red circuit

CUS - Customer

Indicates a customer-controlled Circuit

INCL - Inclusive

Inclusive option must be used to remove CUS marking

PRIOUT - Priority Output

This keyword is used on the command line to prioritize the output response.

st - Status of denial

d - Direction

d *Explanation*

F From

T To

B Both

cc - Hexadecimal condition code

cc **st** *Explanation*

04 **INERR** No NPC's out of service and OOS keyword used

12 **MCOND** Active CCN side not IS or failed or pested or hardware OOS

13 **MCOND** UNIT not equipped, not in service, or failed

14 **MCOND** CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS

15 **MCOND** FTMI not equipped, not in service, or failed

16 **MCOND** FC not eqd, not IS, or failed or inactive side FC not eqd or not IS

17 **MCOND** TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS

1A **MCOND** Required FLI not equipped, not in service, or failed

1B **MCOND** Required MXR not equipped, not in service, or failed

1C **MCOND** Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS

1D **MCOND** Required MIU not equipped, not in service, or failed

EC **INERR** Invalid channel 000 cross-connection specified

FF **ROLL** Termination is in process of being rolled

st **d** *Explanation*

ASGN {F|T|B} Termination assigned

CUS {F|T|B} Customer-controlled Circuit

FAIL {F|T|B} Failed

INVLD {F|T|B} Invalid NPC type

NPCTA {F|T|B} NPC used for Test Access

OOS {F|T|B} Out-of-service

ROLL {F|T|B} Circuit is involved in a roll

UEQD {F|T|B} Unequipped

UTST {F|T|B} Under Test

TDIS, FROM, TO, INCL, OOS, DCC

TWO-WAY DISCONNECTIONS

Explanation Of Command

This message requests a disconnection between the specified FROM and TO end terminations and is used to disconnect a leg or legs from a multipoint circuit.

Disconnections may be between various Network Processing Circuit (NPC) types:

Facility Terminating Unit (FTU)/DS3U/HDS3U NPC and Digital Signal Processing (DSPU) Unit NPC

FTU/DS3U/HDS3U NPC and Virtual NPC

DSPU NPC and DSPU NPC

Command

Nonhierarchical

[I.15002]

**TDIS:FRM xy, SEQ ww:FROM [s]abcddd, TO [t]ghijjj[, INCL][, OOS]\
[, DCC]!**

Hierarchical

[I.15002]

**TDIS:FRM xy, SEQ ww:FROM uvmnpddd, TO wxkqrjjj[, INCL][, OOS]\
[, DCC]!**

Completion Message

Nonhierarchical

[O.15002]

M hh:mm:ss xy,ww n[vv] TDIS [s]abcddd,[t]ghijjj 2 LN MSG:
[NOBBL {F|T}][MPDIS {F|T|B}][OOS][CUS][DDC][RDC] COMPL

Hierarchical

[O.15002]

M hh:mm:ss xy,ww n[vv] TDIS uvmnpddd,wxkqrjjj 2 LN MSG:
[NOBBL {F|T}][MPDIS {F|T|B}][OOS][CUS][DDC][RDC] COMPL

Denial Message

Nonhierarchical

[O.15001.01]

M hh:mm:ss xy,ww n[vv] TDIS [s]abcddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.15001.02]

M hh:mm:ss xy,ww n[vv] TDIS [s]abcddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] <d> <st> DNY

Hierarchical

[O.15001.01]

M hh:mm:ss xy,ww n[vv] TDIS uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.15001.02]

M hh:mm:ss xy,ww n[vv] TDIS uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] <d> <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From termination

TO - To termination

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

9961-9966

uvmnp - Hierarchical FROM NPC number for beginning of NPC range

wxkqr - Hierarchical TO NPC number for end of NPC range

uv, wx - Unit number

m, k - Module number

np, qr - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

VI NPC numbers listed by unit, module, and NPC Number
Unit Type VI (Virtual)

Unit	Module	NPC	
99	1	01-02	(DACS II Non-CEF frames)
99	1	01-06	(DACS II CEF frames)

Note: The range of allowable NPC numbers is dependent on the equipage of the frame.

ddd - FROM channel or conference number

jjj - TO channel number or conference number

Channel Numbers

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference Numbers

001-085	(MB NPC)
001-500	(Virtual NPC)

INCL - Inclusive

To disconnect a channel or range of channels including one or more channels marked as a Red Circuit, use the INCL (inclusive) option. If this option is not used, the message will be denied if any circuits in the range are Red Circuits.

OOS - Out-of-service

An Out-Of-Service disconnection may be done by giving the optional OOS keyword. At least one end of the circuit must be out-of-service or the OOS disconnection will be denied.

DCC - Disconnect code

If DCC is specified, DACS II will insert the user-defined disconnect code and signaling into the disconnected channels. This disconnect code and signaling are specified by the trunk conditioning field of the TCON command that initially connected to the channels. If the DCC option is not used, the disconnect code specified in the GRTH NPC command will be used.

mmm, nnn

- Channel numbers involved in the denial. Otherwise, the same as ddd.

CUS - Customer

Indicates the circuit is a customer controlled Circuit.

NOBBL - No backbone leg

This optional field will appear if the multipoint circuit(s) FROM or TO is in the broadcast mode but has no backbone leg after the TDIS command.

MPDIS - Multipoint disconnect

Full disconnection of the multipoint circuits is indicated by MPDIS for FROM, TO, or BOTH.

RDC - Red circuit

RDC indicates that the disconnection was performed on a Red Circuit. This implies that the INCL keyword was given in the input message. If the disconnection was given on more than one circuit, then at least one of them was a Red Circuit.

d - Direction

d *Explanation*

F - From

T - To

B - Both

st - Status of denial

17 Required ETSI not equipped, not in service, or failed
or inactive side ETSI not equipped or not in service

cc - Hexadecimal condition code

cc **st** *Explanation*

04 **INERR** No NPC's out of service and OOS keyword used

06 **INERR** Invalid range for specified FROM NPC type

07 **INERR** Invalid range for specified TO NPC type

12 **MCOND** Active CCN side not IS or failed or pested or hardware OOS

13 **MCOND** UNIT not equipped, not in service, or failed

15 **MCOND** FTMI not equipped, not in service, or failed

16 **MCOND** FC not eqd, not IS, or failed or inactive side FC not eqd or not IS

17 **MCOND** TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS

18 **MCOND** DSPI not equipped, not in service, or failed

71 **CONFERR** Try to delete a BBL leg from VC; however, VC has no BBL leg

72 **CONFERR** The NPC of VC BBL leg doesn't match that in the input command

73 **CONFERR** The first channel of VC BBL leg doesn't match that in the input command

cc	st	<i>Explanation</i>
74	CONFERR	Try to delete a BRD leg from VC; however, VC has no BRD leg
75	CONFERR	The input BRD leg is not in VC
76	CONFERR	The first channel of VC BRD leg doesn't match that in the input command
77	CONFERR	Tried to disconnect a nonexistent VC
78	CONFERR	Try to operate a ONE-WAY conference with a TWO-WAY input command
80	CONFERR	Database conference width does not match the range in input command
84	CONFERR	Trying to add or delete a leg when a conference is under test
A1	INERR	Illegal BBL BBL combination
A2	INERR	Illegal BRD BRD combination
A3	INERR	Illegal SYM BRD combination
A4	INERR	Illegal BRD SYM combination
A5	INERR	Illegal BBL SYM combination
A6	INERR	Illegal SYM BBL combination
AF	INERR	Delete or change a leg from a conference that has no leg
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inactive side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
D0	SCERR	FROM NPC is not provisioned as DGA
D1	SCERR	TO NPC is not provisioned as DGA
D3	SCERR	Corresponding NPC for FROM virtual channel is not provisioned
D4	SCERR	Corresponding NPC for TO virtual channel is not provisioned
D6	INERR	Invalid FROM channel number
D7	INERR	Invalid TO channel number
D9	INERR	Invalid FROM channel number range
DA	INERR	Invalid TO channel number range
DC	INERR	A loopback is active on the FROM termination
DD	INERR	A loopback is active on the TO termination
DF	INERR	Unmatched channel range
E0	SCERR	Unmatched channel range involving SLC Mode III termination
E4	SCERR	RT-DCLU cross-connect with different ids
E5	SCERR	RT-DCLU cross-connect with different channel number
E6	SCERR	Cross-connect a non Mode I channel to DCLU
E7	SCERR	Cross-connect a non SLC channel to DCLU
EC	INERR	Invalid channel 000 cross-connection specified
ED	INERR	Invalid channel 031 cross-connection specified
FF	ROLL	Termination is in process of being rolled

st	d	Explanation
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
NOMTH	{F T B}	No Match
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
TP	{F T B}	NPC is used for test access
UNPASGN	{F T B}	Unassigned or Not Properly Assigned
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

TDIS, FROM, TO, INCL, OOS, DCC, PRIOUT

DISCONNECTIONS, CROSS-CONNECT CIRCUITS

Explanation Of Command

This message requests the disconnection of two-way, two-point cross-connect circuits or a range of cross-connected circuits.

Command

Nonhierarchical

[I.15001]

TDIS:FRM xy,SEQ ww:FROM [s]abcddd[-eee],TO [t]ghijjj[-kkk]\
[,INCL][,OOS][,DCC][,PRIOUT]!

Hierarchical

[I.15001]

TDIS:FRM xy,SEQ ww:FROM uvmnpddd[-eee],TO wxkqrjjj[-kkk]\
[,INCL][,OOS][,DCC][,PRIOUT]!

Completion Message

Nonhierarchical

[O.15001]

M hh:mm:ss xy,ww n[vv] TDIS [s]abcddd[-eee],[t]ghijjj[-kkk]\
[OOS][DCC][RDC][PRIOUT] COMPL

Hierarchical

[O.15001]

M hh:mm:ss xy,ww n[vv] TDIS uvmnpddd[-eee],wxkqrjjj[-kkk]\
[OOS][DCC][RDC][PRIOUT] COMPL

Denial Message

Nonhierarchical

[O.15001.01]

M hh:mm:ss xy,ww n[vv] TDIS [s]abcdddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.15001.02]

M hh:mm:ss xy,ww n[vv] TDIS [s]abcdddd[-eee],[t]ghijjj[-kkk]\
[mmm,nnn] <d> <st> DNY

Hierarchical

[O.15001.01]

M hh:mm:ss xy,ww n[vv] TDIS uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] cc <st> DNY

[O.15001.02]

M hh:mm:ss xy,ww n[vv] TDIS uvmnpddd[-eee],wxkqrjjj[-kkk]\
[mmm,nnn] <d> <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From termination
TO - To termination

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number
[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM NPC number
wxkqr - Hierarchical TO NPC number

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module
The values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

ddd, jjj

- Channel numbers

eee, kkk

- Channel numbers, denoting the end of a range.

001 through 024

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

INCL - Inclusive

To disconnect a circuit or range of circuits including one or more circuits marked either RDC or CUS, use the optional INCL keyword. If this keyword is not used, the message will be denied if any circuits in the range are red circuits or customer controlled circuits.

OOS - Out of service

An Out-Of-Service disconnection may be done by giving the optional OOS keyword. At least one end of the circuit must be out-of-service or the OOS disconnection will be denied. This keyword is not valid if the DSPP NPC is the only NPC out-of-service.

DCC - Disconnect code

If the Disconnect Code (DCC) option is specified, DACS II will insert the user-defined disconnect code and signaling into the disconnected channels. This disconnect code and signaling are specified by the trunk conditioning field of the cross connect command that initially connected the channels. Only the post 2.5 second signaling will be inserted in the disconnected channels. If the DCC option was specified on a fully transparent (TRSP with no insertion word) domestic circuit, DACS II will insert the default trouble code X'E4. If the DCC option is not used, the disconnect code specified in the grow NPC command will be used.

PRIOUT - Priority Output

This keyword is used on the command line to prioritize the output response.

CUS - Customer

Customer-controlled circuit

Terminations cross-connected using the optional CUS keyword retain their CUS status when disconnected. If the terminations are reconnected without the CUS or INCL keyword, the command will be denied. When they are reconnected with the INCL keyword, they lose their customer controlled status.

RDC - Red circuit

mmm, nnn

- Channel number involved in the denial. Otherwise the same as ddd.

d - Direction

d	<i>Explanation</i>
F	From
T	To
B	Both

st - Status of denial

cc - Hexadecimal condition code

cc	st	<i>Explanation</i>
04	INERR	No NPC's out of service and OOS keyword used
06	INERR	Invalid range for specified FROM NPC type
07	INERR	Invalid range for specified TO NPC type
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
D0	SCERR	FROM NPC is not provisioned as DGA
D1	SCERR	TO NPC is not provisioned as DGA
D6	INERR	Invalid FROM channel number
D7	INERR	Invalid TO channel number
D9	INERR	Invalid FROM channel number range
DA	INERR	Invalid TO channel number range
DC	INERR	A loopback is active on the FROM termination
DD	INERR	A loopback is active on the TO termination
DF	INERR	Unmatched channel range
E0	SCERR	Unmatched channel range involving SLC Mode III termination
E4	SCERR	RT-DCLU cross-connect with different ids
E5	SCERR	RT-DCLU cross-connect with different channel number
E6	SCERR	Cross-connect a non Mode I channel to DCLU
E7	SCERR	Cross-connect a non SLC channel to DCLU
EC	INERR	Invalid channel 000 cross-connection specified
ED	INERR	Invalid channel 031 cross-connection specified
42	MCOND	DSPP not in service, or failed
FF	ROLL	Termination is in process of being rolled
E0	MCOND	ETSI not equipped, not in service, or failed

st	d	Explanation
CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
NOMTH	{F T B}	No Match
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
TP	{F T B}	NPC is used for test access
UNPASGN	{F T B}	Unassigned or Not Properly Assigned
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

TDIS, FROM, TO, OOS, INCL, PRIOUT

TWO-WAY DISCONNECTION

Explanation Of Command

This message disconnects a two-way cross-connection between two non-channelized network processing circuits. When the circuit is disconnected, the idle code (AIS) is transmitted.

Command

Nonhierarchical

[I.15011]

TDIS:FRM xy,SEQ ww:FROM [s]abc,TO [t]ghi[,OOS][,INCL][,PRIOUT]!

Hierarchical

[I.15011]

TDIS:FRM xy,SEQ ww:FROM uvmnp,TO wxkqr[,OOS][,INCL][,PRIOUT]!

Completion Message

Nonhierarchical

[O.15011]

M hh:mm:ss xy,ww n[vv] TDIS [s]abc,[t]ghi[OOS][RDC][CUS] \
[PRIOUT] COMPL

Hierarchical

[O.15011]

M hh:mm:ss xy,ww n[vv] TDIS uvmnp,wxkqr[OOS][RDC][CUS] \
[PRIOUT] COMPL

Denial Message

Nonhierarchical

[O.15011.01]

M hh:mm:ss xy,ww n[vv] TDIS [s]abc,[t]ghi cc <st> DNY

[O.15011.02]

M hh:mm:ss xy,ww n[vv] TDIS [s]abc,[t]ghi d <st> DNY

Hierarchical

[O.15011.01]

M hh:mm:ss xy,ww n[vv] TDIS uvmnp,wxkqr cc <st> DNY

[O.15011.02]

M hh:mm:ss xy,ww n[vv] TDIS uvmnp,wxkqr d <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From termination
TO - To termination

[s]abc - The 3- or 4-digit non-hierarchical non-channelized FROM NPC number
[t]ghi - The 3- or 4-digit non-hierarchical non-channelized TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical number of non-channelized FROM NPC

wxkqr - Hierarchical number of non-channelized TO NPC

uv, wx - Unit number
m, k - Module number
np, qr - NPC number

The valid values are listed below:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

INCL - Inclusive

Required for a CUS circuit or a red circuit

PRIOUT - Priority Output

This keyword is used on the command line to prioritize the output response.

OOS - Out-of-Service

May be specified if one or both NPCs are out of service

RDC - Red circuit

Disconnection of Red circuit

CUS - Customer

Disconnection of Customer-controlled Circuit

st - Status of denial

d - Direction

d *Explanation*

F From

T To

B Both

cc - Hexadecimal condition code

cc **st** *Explanation*

04	INERR	No NPC's out of service and OOS keyword used
12	MCOND	Active CCN side not IS or failed or pested or hardware OOS
13	MCOND	UNIT not equipped, not in service, or failed
14	MCOND	CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15	MCOND	FTMI not equipped, not in service, or failed
16	MCOND	FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17	MCOND	TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
1A	MCOND	Required FLI not equipped, not in service, or failed
1B	MCOND	Required MXR not equipped, not in service, or failed
1C	MCOND	Reqd FMT not eqd, not IS, or failed, or inact side FMT not eqd, or not IS
1D	MCOND	Required MIU not equipped, not in service, or failed
FF	ROLL	Termination is in process of being rolled
E0	MCOND	ETSI not equipped, not in service, or failed

st **d** *Explanation*

CUS	{F T B}	Customer-controlled Circuit
FAIL	{F T B}	Failed
INVLD	{F T B}	Invalid NPC type
NOMTH	{F T B}	No Match
NPCTA	{F T B}	NPC used for Test Access
OOS	{F T B}	Out-of-service
RDC	{F T B}	Red Circuit
ROLL	{F T B}	Circuit is involved in a roll
UNPASGN	{F T B}	Unassigned or Not Properly Assigned
UEQD	{F T B}	Unequipped
UTST	{F T B}	Under Test

TS0MBOFL

ALARM TS0MBOFL

Explanation Of Command

This output message prints out the buffer overflow condition for the time slot zero monitor (TS0M).
This message applies to TH type NPCs.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

Nonhierarchical

[O.65231]

I hh:mm:ss xy,ww TS0MBOFL [s]abc COMPL

Hierarchical

[O.65231]

I hh:mm:ss xy,ww TS0MBOFL uvmnp COMPL

Explanation Of Parameters

TS0MBOFL

- Time Slot 0 Monitor Buffer Overflow

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number

The values are listed below:

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

TTST,HUB,TO,TG

NX64Kbit/s TWO-WAY TEST ACCESS, HUB

Explanation Of Command

To set up an Nx64Kbit/s hub test access connection via a test-access group to an Nx64Kbit/s TO termination. The TO termination consists of two Nx64Kbit/s bundles that will be connected to the test-access group's east and west bundles. These channel bundles must be of the same width as the test-access group. If all of the channels, starting at the number specified for the TO termination, are not available the first unavailable channel encountered will cause the command to be denied. The channel that caused the denial will be reported in the denial message.

Command

Nonhierarchical

[I.24021]

TTST:FRM xy,SEQ ww:HUB,TO ([s]abcddd,[t]ghijjj),TG mmm[,<tc>]!

Hierarchical

[I.24021]

TTST:FRM xy,SEQ ww:HUB,TO (uvmnpddd,wxkqrjjj),TG mmm[,<tc>]!

Completion Message

Nonhierarchical

[O.24021]

M hh:mm:ss xy,ww n[vv] TTST HUB [s]abcddd,[t]ghijjj NN TG mmm \
2 LN MSG:
<tc> CGA(fsb) COMPL

Hierarchical

[O.24021]

M hh:mm:ss xy,ww n[vv] TTST HUB uvmnpddd,wxkqrjjj NN TG mmm \
2 LN MSG:
<tc> CGA(fsb) COMPL

Denial Message

Nonhierarchical

[O.24021.01]

M hh:mm:ss xy,ww n[vv] TTST HUB [s]abcddd,[t]ghijjj TG mmm \
[[u]jklppp] COND cc DNY

Hierarchical

[O.24021.01]

M hh:mm:ss xy,ww n[vv] TTST HUB uvmnpddd,wxkqrjjj TG mmm \
[jklmnp] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TG - Test (access) group

mmm - Test access group number (001 through 400)

TG is designated as in the GRTH,TG,NPCTG command.

HUB - Hub

[s]abc - 3- or 4-digit non-hierarchical first TO NPC number

[t]ghi - 3- or 4-digit non-hierarchical second TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical first TO NPC number
wxkqr - Hierarchical second TO NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

The valid values are listed below:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Starting channel number of first TO NPC
jjj - Starting channel number of second TO NPC
ppp - First channel causing denial

001 through 024

tc - Trunk conditioning

If the static tc was not furnished in the growth TG command, it must be dynamically specified in this command or the test access will be denied. A dynamic tc will override any static tc. The effective tc will be used for all channels used in this test connection, and will be shown in the output.

CGA - Carrier group alarm

PBA - Primary block alarm

fsb - CGA or PBA state

f - First TO NPC CGA or PBA state

f Explanation

F	First TO NPC is in CGA or PBA
0	First TO NPC is not in CGA or PBA

s - Second TO NPC CGA or PBA state

s Explanation

S Second TO NPC is in CGA or PBA
0 Second TO NPC is not in CGA or PBA

b - TG digroup CGA or PBA state

b Explanation

E East-bundle NPCTG in CGA or PBA
W West-bundle NPCTG in CGA or PBA
B NPCTG(s) supporting both bundles in CGA or PBA
0 NPCTG(s) not in CGA or PBA

RDC - Red circuit

The cross-connection tested is a red circuit.

CUS - Customer

The cross-connection tested is a customer-controlled circuit.

COND - Condition

NN - TG width (1 through 24)

cc - Hexadecimal condition code

cc Explanation

26 NPC type error
12 Active CCN side not IS or failed or pested or hardware OOS
13 UNIT not equipped, not in service, or failed
14 CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
15 FTMI not equipped, not in service, or failed
16 FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
17 TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
18 DSPI not equipped, not in service, or failed
1A Required FLI not equipped, not in service, or failed
1B Required MXR not equipped, not in service, or failed
1C Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
1D Required MIU not equipped, not in service, or failed
E0 ETSI not equipped, not in service, or failed
47 Invalid channel number
49 test group unequipped
4A channel part of a TP or TG
4B channel already under test
4D Gateway test access not supported
51 TG width incompatible with circuit
53 inconsistent HUB width for specified TG

cc *Explanation*

- 59** Invalid TC specification
- 5A** NPC not in service or failed
- 5D** Inconsistent Signaling on CEPT NPCTGs
- 5E** invalid test access mode
- 5F** input channel out of range (SLC not supported)
- 60** circuit contains mapped channels for HUB request
- 95** TG East/West type inconsistent with each other or circuit
- 96** incompatible HUB feature types

TTST,HUB,TO,TP

TWO-WAY TEST ACCESS, HUB

Explanation Of Command

This command requests a hubbing mode test access via a specified test port (TP) to the TO termination. In the hubbing mode, DACS II is used as a test access concentrator to connect a local TP to a remote TP. The cross-connection will be made between TP **kk** and two 64-kb/s channels, the TO end of which is specified in the command. Successive termination numbers **jjj** and **ddd** correspond to lower and upper channels of the test port, respectively. These two channels are from a test port in another DACS II or other test access device to be cross-connected. DACS II does not know if the requested access is, in fact, to a hubbed test port on another frame; however, the request will be denied if either channel is mapped, under test, or if channel **jjj** would be out of range on the NPC.

Trunk conditioning **<tc>** may be specified, however, it only has an effect on Gateway (T1-E1) conversion circuits. For hub test access of non-Gateway circuits, any trunk conditioning values entered by the user will be overwritten by all one values for the circuit's signaling and insertion word.

Command

Nonhierarchical

[I.24001]

TTST:FRM xy,SEQ ww:HUB,<tc>,TO [t]ghijjj,TP kk!

Hierarchical

[I.24001]

TTST:FRM xy,SEQ ww:HUB,<tc>,TO uvmnpjjj,TP kk!

Completion Message

Nonhierarchical

[O.24001]

M hh:mm:ss xy,ww n[vv] TTST HUB [t]ghijjj,[t]ghimmm TP kk \\
2 LN MSG:
<tc>[NAM] CGA(ftp) COMPL

Hierarchical

[O.24001]

M hh:mm:ss xy,ww n[vv] TTST HUB uvmnpjjj,uvmnpmmm TP kk \\
2 LN MSG:
<tc>[NAM] CGA(ftp) COMPL

Denial Message

Nonhierarchical

[O.24001.01]

M hh:mm:ss xy,ww n[vv] TTST HUB [t]ghijjj <tc>[NAM] TP kk <st> \\
DNY

If the error response exceeds 80 characters:

[O.24001.02]

M hh:mm:ss xy,ww n[vv] TTST HUB [t]ghijjj <tc> 2 LN MSG:
[NAM]TP kk <st> DNY

Hierarchical

[O.24001.01]

M hh:mm:ss xy,ww n[vv] TTST HUB uvmnpjjj <tc>[NAM] TP kk <st> \\
DNY

If the error response exceeds 80 characters:

[O.24001.02]

M hh:mm:ss xy,ww n[vv] **TTST HUB** uvmnpjjj <tc> **2 LN MSG:**
[NAM]TP kk <st> **DNY**

Autonomous Message

Not applicable.

Explanation Of Parameters

HUB - Hub

TO - To

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical TO NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

jjj - TO channel number

The TO channel number must correspond to a lower channel of a test port.

tc - Trunk conditioning

tc represents the desired cross-connected signaling and insertion word applied when a failure occurs. A trunk conditioning specification consists of a combination of a signaling specification followed by an insertion word specification. The signaling and the insertion word specification are entered separately, with a comma as the delimiter.

<i>signaling</i>	<i>Explanation</i>
TC(ijkl,mnop)	2-way, 4-state signaling in binary.
TC(ijklmnop,qrstuvw)	2-way, 16-state signaling in binary.
TC(X'ab,X'cd)	2-way, 16-state in hexadecimal.
TRSP	Transparent, no signaling.

<i>insertion word</i>	<i>Explanation</i>
IW X'pq	The 8-bit pattern corresponding to the hexadecimal value of pq will be inserted in the downstream direction of a failure on either line.
TRB	Standard trouble code, equal to IW X'E4.
MUX	MUX out of sync code, equal to IW X'1A.
mmm	- Channel number Variable mmm is equal to jjj + 1. Must be an even number.
TP	- Test port
kk	- Test port number (01 through 96)
CGA	- Carrier group alarm
f	- FROM CGA status
<i>f</i>	<i>Explanation</i>
F	FROM NPC is in CGA
0	FROM NPC is not in CGA
t	- TO CGA status
<i>t</i>	<i>Explanation</i>
T	TO NPC is in CGA
0	TO NPC is not in CGA
p	- Test port NPC CGA status
<i>p</i>	<i>Explanation</i>
P	Test port NPC is in CGA
0	Test port NPC is not in CGA

Note: FROM test port NPC will never appear in the CGA condition.

Signaling mode of port

T	- Transparent
R	- Robbed bit Signaling
C	- Channel associated signaling (CAS)
H	- Hubbing

ASGN - Assigned
The test port is already assigned.

NMON - Not monitor
The test port is not in monitor mode.

st - Status

st	<i>Explanation</i>
BADCCB	CCB OOS or failed
BADCCN	CCN OOS or failed
BADCHAN	Bad channel number was specified
BADFC	FC OOS or failed
BADFCB	FCB OOS or failed
BADFLI	FLI OOS or failed
BADFMT	FMT (Formatter) OOS or failed
BADFTMI	FTMI OOS or failed
BADMIU	MIU OOS or failed
BADMXR	MXR OOS or failed
BADNPC	Bad NPC number
BADTSI	TSI OOS or failed
BADUNIT	UNIT OOS or failed
EVEN	TO termination is not an odd channel
FAIL	Test port Group NPC failed
IMPR TC	Improper trunk conditioning specification
MCOND	An entity in the network is OOS or failed
NA	DACS CCN or UNIT involved cannot perform the cross-connect
NAM_NA	NAM keyword is not applicable to the cross-connection type
NOT IDLE	Test port is not idle
OOS	Test port Group NPC out of service
SG COND 02	Test port is static
T CLR	The TO NPC is a clear-DS1 or clear-2Mb NPC
T FAIL	TO side NPC is marked failed
T NOT CAS	TO termination not CAS.
T NOT LOWER	TO termination is not the lower test access channel
T OOS	TO side NPC is Out Of Service
T UEQD	TO side NPC is Unequipped
T UTST	TO termination is under test
TERM ASGN	TO termination is assigned
TG	
TP	TO termination is a test port
T_SCDG	TO termination is an RT (DL) termination
UEQD	The test port Group NPC is unequipped

TTST,LPD,TG

NX64Kbit/s LOOPED TEST ACCESS

Explanation Of Command

This command is used to place both bundles of a test-access group (TG) in the looped mode. If the TG is not provisioned or currently assigned the command will be denied.

Command

[I.29021]

TTST:FRM xy,SEQ ww:LPD,TG mmm[,<tc>]!

Completion Message

[O.29021]

M hh:mm:ss xy,ww n[vv] TTST LPD TG mmm NN <tc> COMPL

Denial Message

[O.29021.01]

M hh:mm:ss xy,ww n[vv] TTST LPD TG mmm COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

LPD - Looped

TG - Test (access) group

mmm - TG number (001 through 400)

tc - Trunk conditioning

If the static tc was not furnished in the growth TG command, it must be dynamically specified in this command or the test access will be denied. A dynamic tc will override any static tc. The effective tc will be used, and will be output.

COND - Condition

NN - TG width (1 through 24)

cc - Hexadecimal condition code

cc *Explanation*

- 12** Active CCN side not IS or failed or pested or hardware OOS
- 13** UNIT not equipped, not in service, or failed
- 14** CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
- 15** FTMI not equipped, not in service, or failed
- 16** FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
- 17** TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
- 18** DSPI not equipped, not in service, or failed
- 1A** Required FLI not equipped, not in service, or failed
- 1B** Required MXR not equipped, not in service, or failed
- 1C** Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
- 1D** Required MIU not equipped, not in service, or failed
- E0** ETSI not equipped, not in service, or failed
- 49** test group unequipped
- 59** Invalid TC specification
- 5A** NPC not in service or failed
- 5D** Inconsistent Signaling on CEPT NPCTGs
- 5E** invalid test access mode

TTST,LPD,TP

LOOPED TEST ACCESS

Explanation Of Command

This message requests that both test port channels on a given test port be placed in the looped mode.

Trunk conditioning *may be specified* to loop a static test port **kk**. If specified it will override the specification given when the test port was equipped. If not specified it will default to the specification given when the test port was equipped.

Trunk conditioning *must be specified* to loop a dynamic test port **kk** since tc is dynamically set when any test access message makes the test port active. If trunk conditioning is omitted, the request will be denied.

TTST::TPR,TP will undo this command.

The test port is mapped to predesignated channels of a network processing circuit for test ports (NPCTP) during the provisioning of that test port. All domestic non-SLC NPC types can be provisioned as NPCTP. For the mapping between the test ports and the channels of the test NPCs, see the GRTH::TP message.

Command

[I.29001]

TTST:FRM xy,SEQ ww:LPD,TP kk,<tc>!

Completion Message

[O.29001]

M hh:mm:ss xy,ww n[vv] TTST LPD TP kk <tc> COMPL

Denial Message

[O.29001.01]

M hh:mm:ss xy,ww n[vv] TTST LPD TP kk <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

LPD - Looped

TP - Test port

kk - Test port number (01 through 96)

tc - Trunk conditioning

Represents the desired cross-connected signaling and insertion word applied when a failure occurs. A trunk conditioning specification consists of a combination of a signaling specification followed by an insertion word specification. For example, TRSP,IW X'pq (input form).

The following signaling options are allowed:

<i>signaling</i>	<i>Explanation</i>
TC(ijkl,mnop)	2-way,4-state signaling in binary. For ESF type framing format, software will expand 4-state to 16-state by duplicating the format on the remaining frames on a superframe.
TC(efghijkl,mnopqrst)	2-way,16-state in binary. Only valid for ESF framing format.
TC(X'ab,X'cd)	2-way,16-state in hexadecimal
TRSP	Transparent, no signaling

The following insertion words options are allowed:

insertion word Explanation

IW X'pq	The 8-bit pattern corresponding to the hexadecimal value of pq will be inserted to the downstream direction of a failure on either line.
TRB	Standard trouble code, equal to IW X'E4.
MUX	MUX out of sync code, equal to IW X'A1. (only valid with signaling option TRSP)

The following trunk conditioning usage applies:

- If trunk conditioning is omitted from this message and was omitted from GRTH::TP, the message will be denied.
- If trunk conditioning is omitted from this message but was provided in GRTH::TP, the trunk conditioning value provided in GRTH::TP, is applied.
- If trunk conditioning is provided in this message, it overrides the value, (if provided), in GRTH::TP.

st - Status

st *Explanation*

ASGN	Termination assigned
BADCCN	CCN OOS or failed
BADFC	FC OOS or failed
BADFLI	FLI OOS or failed
BADFMT	FMT (Formatter) OOS or failed
BADFTMI	FTMI OOS or failed
BADMIU	MIU OOS or failed
BADMXR	MXR OOS or failed
BADTSI	TSI OOS or failed
BADUNIT	UNIT OOS or failed
FAIL	Test port Group NPC failed
IMPR TC	Improper trunk conditioning specification
MCOND	An entity in the network is OOS or failed
NA	DACS CCN or UNIT involved cannot perform the cross-connect
NO TC	<tc> not provided
NOT IDLE	Test port is not idle

st	<i>Explanation</i>
00S	Test port Group NPC out of service
SG COND 02	Trunk conditioning not given for dynamic test port
UEQD	The test port Group NPC is unequipped

TTST,MON,TG

NX64Kbit/s TWO-WAY TEST ACCESS, MONITOR

Explanation Of Command

This command is used to change the mode of a test-access group, that is currently in the split mode, to the monitor mode.

Note: If the test-access group is already in the monitor mode this command will be denied.

Command

[I.21031]

TTST:FRM xy,SEQ ww:MON,TG mmm!

Completion Message

Nonhierarchical

[O.21031]

```
M hh:mm:ss xy,ww n[vv] TTST MON TG mmm FROM [s]abc TO [t]ghi \
5 LN MSG:
SG g CGA(ftb)[ RDC][ CUS][ ONEWAY] {TLA s|BCAST|UMPD <tc>}
ddd ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd ddd COMPL
```

Hierarchical

[O.21031]

M hh:mm:ss xy,ww n[vv] TTST MON TG mmm FROM uvmnp TO wxkqr \\
5 LN MSG:
SG g CGA(ftb)[RDC][CUS][ONEWAY] {TLA s|BCAST|UMPD <tc>}
ddd ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd ddd COMPL

Denial Message

[O.21031.01]

M hh:mm:ss xy,ww n[vv] TTST MON TG mmm COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TG - Test-access group

mmm - Test-access group number (001 through 400)

The TG is designated as in message 31421, and must have the same width as the number of channels specified in this message.

MON - Monitor

[s]abc - 3- or 4-digit non-hierarchical FROM NPC number

[t]ghi - 3- or 4-digit non-hierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uv**mn****p** - Hierarchical FROM NPC number
wx**kqr** - Hierarchical TO NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

The valid values are listed below:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - FROM Channel numbers

001 through 024

The FROM channel ddd will be '---' for circuits not involved in this test session. For unmapped TO channel(s) or a BBL without return, ddd will be '000' in the corresponding channel position(s). If TO channel is mapped to a channel 000, the circuit can only be tested as N = 1, the corresponding FROM channel ddd will be '000'.

tc - Trunk conditioning

For mapped circuits, <tc> will be omitted.

For unmapped circuits, the effective <tc> will be output.

SG - Signaling

g - Signaling mode of the TG

g Explanation

T All channels are Transparent (TRSP)

R One or more channels is robbed-bit or non-TRSP

CGA - Carrier group alarm

PBA - Primary block alarm

ftb - CGA or PBA state

f - FROM CGA or PBA state

f Explanation

F FROM NPC is in CGA or PBA

0 FROM NPC is not in CGA or PBA

t - TO CGA or PBA state

t Explanation

T TO NPC is in CGA or PBA

0 TO NPC is not in CGA or PBA

b - TG digroup CGA or PBA state

b Explanation

E East-bundle NPCTG in CGA or PBA

W West-bundle NPCTG in CGA or PBA

B NPCTG(s) supporting both bundles in CGA or PBA

0 NPCTG(s) not in CGA or PBA

RDC - Red circuit

The cross-connection tested is a red circuit.

CUS - Customer

The cross-connection tested is a customer-controlled circuit.

ONEWAY - One-way

The cross-connection tested is a one-way circuit.

BCAST - Broadcast

The cross-connection tested is part of a broadcast circuit.

TLA - Terminate and leave active

s

- Termination state of the circuit

s Explanation

R All channels are released

F One or more FROM channel is terminated

T One or more TO channel is terminated

B One or more of FROM and TO channels are terminated

UMPD - Unmapped

The circuit under test is unmapped.

COND - Condition

cc - Hexadecimal condition code

cc Explanation

12 Active CCN side not IS or failed or pested or hardware OOS

13 UNIT not equipped, not in service, or failed

14 CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS

15 FTMI not equipped, not in service, or failed

16 FC not eqd, not IS, or failed or inactive side FC not eqd or not IS

17 TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS

18 DSPI not equipped, not in service, or failed

1A Required FLI not equipped, not in service, or failed

1B Required MXR not equipped, not in service, or failed

cc *Explanation*

- 1C** Req'd FMT not eq'd, not IS, or failed, or inact side FMT not eq'd, or not IS
- 1D** Required MIU not equipped, not in service, or failed
- E0** ETSI not equipped, not in service, or failed
- 47** Invalid channel number
- 49** test group unequipped
- 5A** NPC not in service or failed
- 5E** invalid test access mode

TTST,MON,TO,TG

NX64Kbit/s TWO-WAY TEST ACCESS, MONITOR

Explanation Of Command

This command is used to request a monitor test access of a specified group of Nx64Kbit/s terminations. Monitor test access of a broadcast TS0 to non-TS0 connection will not use this command but will use I.21001 instead. The test access is made through the test-access group specified in the command line.

The N TO channels to be tested may be entered as a range, a list, or a combination of both, in ascending order. For two-point circuits, the numbers do not have to be consecutive, and the circuits may have been cross-connected separately. For a one-way circuit under test, the other direction of the same termination cannot be tested at the same time. For Nx64Kbit/s broadcast circuits, the channels have to be consecutive and must have been set up together for the same broadcast circuit.

The primary output line will not echo the input with range(s) of channels, but will show a list of all channels.

Command

Nonhierarchical

[I.21021]

```
TTST:FRM xy,SEQ ww:MON,TO [t]ghi(jjj[-kkk][,lll,...])[,<tc>],\  
TG mmm!
```

Hierarchical

[I.21021]

```
TTST:FRM xy,SEQ ww:MON,TO wxkqr(jjj[-kkk][,lll,...])[,<tc>],\  
TG mmm!
```

Completion Message

Nonhierarchical

[O.21021]

M hh:mm:ss xy,ww n[vv] TTST MON TG mmm FROM [s]abc TO [t]ghi \\
5 LN MSG:
SG g CGA(ftb)[RDC][CUS][ONEWAY] {TLA s|BCAST|UMPD <tc>}
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd COMPL

Hierarchical

[O.21021]

M hh:mm:ss xy,ww n[vv] TTST MON TG mmm FROM uvmnp TO wxkqr \\
5 LN MSG:
SG g CGA(ftb)[RDC][CUS][ONEWAY] {TLA s|BCAST|UMPD <tc>}
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd COMPL

Denial Message

Nonhierarchical

[O.21021.01]

M hh:mm:ss xy,ww n[vv] TTST MON TG mmm[[t]ghipp] COND cc DNY

Hierarchical

[O.21021.01]

M hh:mm:ss xy,ww n[vv] TTST MON TG mmm[wxkqrppp] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

MON - Monitor

TO - To

[s]abc - 3- or 4-digit non-hierarchical FROM NPC number

[t]ghi - 3- or 4-digit non-hierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

uv,wx - Unit number

m,k - Module number

np,qr - NPC number within the module

The valid values are listed below:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

For an unmapped TO termination, or a backbone leg (BBL) without return, the FROM NPC number will be shown as zeroes.

ddd - FROM Channel number
jjj, kkk, lll
- TO Channel numbers
ppp - First TO Channel number causing denial

kkk is shown as an example of a range jjj-kkk of TO channels, and lll is an example of an item on a list of TO channels.

001 through 024

The FROM channel ddd will be '---' for circuits not involved in this test session. For unmapped TO channel(s) or a BBL without return, ddd will be '000' in the corresponding channel position(s). If channel jjj is mapped to a channel 000, the circuit can only be tested as N = 1, and the corresponding FROM channel ddd will be '000'.

tc - Trunk conditioning

For mapped circuits, regardless of what is specified here, the circuit's tc will be used but not shown in the output response.

For unmapped circuits, if the static tc was not furnished when the TG was provisioned, it must be dynamically specified in this command or the test access will be denied. A dynamic tc will override any static tc. The effective tc will be used for all channels under test, and will be shown in the output.

TG - Test-access Group

mmm - Test-access Group number (001 through 400)

The TG is designated as in GRTH::TG,NPCTG and must have the same width as the number of channels specified in this message.

SG - Signaling

g - Signaling mode of the TG

g *Explanation*

T All channels are Transparent (TRSP)

R One or more channels is robbed-bit or non-TRSP

CGA - Carrier group alarm

PBA - Primary block alarm

ftb - CGA or PBA state

f - FROM CGA or PBA state

f *Explanation*

F FROM NPC is in CGA or PBA

0 FROM NPC is not in CGA or PBA

t - TO CGA or PBA state

t *Explanation*

T TO NPC is in CGA or PBA

0 TO NPC is not in CGA or PBA

b - TG digroup CGA or PBA state

b *Explanation*

B NPCTG(s) supporting both bundles in CGA or PBA

E East-bundle NPCTG in CGA or PBA

W West-bundle NPCTG in CGA or PBA

0 NPCTG(s) not in CGA or PBA

RDC - Red circuit

The cross-connection tested is a red circuit.

CUS - Customer

The cross-connection tested is a customer-controlled circuit.

ONEWAY - One-way

The cross-connection tested is a one-way circuit.

BCAST - Broadcast

The cross-connection tested is part of a broadcast circuit.

TLA - Terminate and leave active

S

- Termination state of the circuit

s Explanation

R All channels are released

F At least one FROM channel is terminated

T At least one TO channel is terminated

B At least one FROM and TO channel is terminated

UMPD - Unmapped

The circuit under test is unmapped.

COND - Condition

cc - Hexadecimal condition code

cc Explanation

26 NPC type error

12 Active CCN side not IS or failed or pested or hardware OOS

13 UNIT not equipped, not in service, or failed

14 CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS

15 FTMI not equipped, not in service, or failed

16 FC not eqd, not IS, or failed or inactive side FC not eqd or not IS

17 TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS

1A Required FLI not equipped, not in service, or failed

1B Required MXR not equipped, not in service, or failed

1C Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS

1D Required MIU not equipped, not in service, or failed

E0 ETSI not equipped, not in service, or failed

45 NPC not provisioned as DGA

46 virtual SLC NPC not provisioned

47 Invalid channel number

48 Invalid SLC Mode-III channel number

cc *Explanation*

- 49** test group unequipped
- 4A** channel part of a TP or TG
- 4B** channel already under test
- 4C** BCON BBL has one or more legs under test
- 4D** Gateway test access not supported
- 4F** inconsistent BCON width for test access
- 50** invalid channel designation for BCON
- 51** TG width incompatible with circuit
- 52** FDL selected with width not 1
- 57** Designated TG or circuit to be tested in process of being rolled
- 59** Invalid TC specification
- 5A** NPC not in service or failed
- 5B** channel is OCON in opposite direction
- 5C** Inconsistent or invalid circuit type for Nx64Kbit TA
- 5D** Inconsistent Signaling on CEPT NPCTGs
- 5E** invalid test access mode
- 5F** input channel out of range (SLC not supported)
- 61** not all FROM channels on same NPC
- 95** TG East/West type inconsistent with each other or circuit
- A9** Circuits TCONed itself cannot be UTST

TTST,MON,TO,TP

TWO-WAY TEST ACCESS, MONITOR

Explanation Of Command

This command can be used to do one of two things:

1. To set up a previously unassigned test port to monitor a particular termination.
2. To change a previously assigned test port to monitor mode.

If the test port is already in the monitor mode, DACS II will deny the execution of the message.

The trunk conditioning (**tc**) specified in this command applies only when accessing an unmapped termination. For an access to a mapped circuit, **tc** is adopted from the circuit being accessed and, therefore, will be ignored if specified.

The DACS II test ports are either static or dynamic. A test port is defined as static when trunk conditioning is specified in a test port provisioning command otherwise it is a dynamic test port. If this test port is static, trunk conditioning must be specified.

If the test port is in the split mode, do not specify the TO NPC number.

For Broadcast (BCON) connections test access shall be denied except for the TS0 to non-TS0 connection.

This command does **not** monitor any connections inside a Digital Signal Processing Platform (DSPP) application, such as the DDS Subrate and MJU application, the X.50 International subrate application, or the DMB application. However, test ports may be established to any of the applications via application commands, and may then be used, again via application commands, to monitor or split circuits within the application. If a test port has been established to an application, then that test port will always appear as a split connection in an invocation of the UTL::QRY,TPS command, regardless of whether that test port is in monitor, split, or release mode inside the application.

Command

Nonhierarchical

[I.21001]

TTST:FRM xy,SEQ ww:MON[,TO [t]ghijjj][,<tc>],TP kk!

Hierarchical

[I.21001]

TTST:FRM xy,SEQ ww:MON[,TO uvmnpjjj][,<tc>],TP kk!

Completion Message

Nonhierarchical

[O.21001]

M hh:mm:ss xy,ww n[vv] TTST MON [s]abcddd,[t]ghijjj TP kk \\
2 LN MSG:
<tc> SG g CGA(ftp)[RDC][CUS][ONEWAY] TLA s COMPL

[O.21002]

M hh:mm:ss xy,ww n[vv] TTST MON [t]ghijjj TP kk SG g \\
2 LN MSG:
<tc> CGA(ftp) UMPD COMPL

Hierarchical

[O.21001]

M hh:mm:ss xy,ww n[vv] TTST MON wxkqrddd,uvmnpjjj TP kk \\
2 LN MSG:
<tc> SG g CGA(ftp)[RDC][CUS][ONEWAY] TLA s COMPL

[O.21002]

M hh:mm:ss xy,ww n[vv] TTST MON uvmnpjjj TP kk SG g \\
2 LN MSG:
<tc> CGA(ftp) UMPD COMPL

Denial Message

Nonhierarchical

[O.21001.01]

M hh:mm:ss xy,ww n[vv] TTST TP kk <reason> DNY

[O.21001.02]

M hh:mm:ss xy,ww n[vv] TTST MON[[t]ghijjj] TP kk 2 LN MSG:
[<tc>]<reason> DNY

[O.21001.03]

M hh:mm:ss xy,ww n[vv] TTST MON [t]ghijjj TP kk [s] \
klmnnn,[t]pqrsss ASGN DNY

[O.21001.04]

M hh:mm:ss xy,ww n[vv] TTST MON [s]abcddd,[t]ghijjj TP \
kk <reason> DNY

Hierarchical

[O.21001.01]

M hh:mm:ss xy,ww n[vv] TTST TP kk <reason> DNY

[O.21001.02]

M hh:mm:ss xy,ww n[vv] TTST MON[uvmnpjjj] TP kk \
2 LN MSG:
[<tc>]<reason> DNY

[O.21001.03]

M hh:mm:ss xy,ww n[vv] TTST MON uvmnpjjj TP kk edhfgnnn, \
opjstsss ASGN DNY

[O.21001.04]

M hh:mm:ss xy,ww n[vv] TTST MON wxkqrddd,uvmnpjjj TP \
kk <reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TP - Test port

kk - Test port number (01 through 96)

A test port is mapped to predesignated channels of a network processing circuit for test ports (NPCTP) during the provisioning of that test port.

Only nonSLC® NPC types can be provisioned as an NPCTP.

For the mapping between the test ports and the channels of the test NPCs, see the GRTH::TP Message

The DACS II test ports are either static or dynamic, as defined in the GRTH::TP message.

If the test port is in the split mode, TO [t]ghijj may not be specified.

In a gateway frame, NPC types that have been provisioned for channel associated signaling (CAS) can also be provisioned as an NPCTP.

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

uvmnp - Hierarchical TO NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

MB, SR, and MJ type numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

jjj - TO Channel number

Channel numbers
001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers
001-085 (MB NPC)

If channel **jjj** is an FDL (Facility Data Link), then **jjj** = 000.

tc - Trunk conditioning

If the **tc** option was not furnished in the test port provisioning command, it must be furnished in this input command to provide a test connection for unmapped circuits; otherwise, the test access will be denied.

Represents the desired signaling and insertion word to be applied when a failure occurs. A trunk conditioning specification consists of a combination of a signaling specification followed by an insertion word specification. For example, TRSP,IW X'pq (input form).

tc cannot be specified if jjj = 000.

Note: For mapped terminations, tc takes on the mapped cross-connect tc value and overrides any tc option provided in the input command.

For unmapped terminations, trunk conditioning will be applied as follows:
If tc is omitted from this command and was omitted in the test port provisioning command, the command will be denied.

If tc is omitted from this command but was provided in the test port provisioning command, the tc value provided in the provisioning command is applied.

If tc is provided in this command, it overrides the value, (if provided), in the test port provisioning command.

<i>signaling</i>	<i>Explanation</i>
TC(ijkl,mnop)	2-way, 4-state signaling in binary.
TC(ijklmnop,qrstuvw)	2-way, 16-state signaling in binary.
TC(X'ab,X'cd)	2-way, 16-state in hexadecimal.
TRSP	Transparent, no signaling.

<i>insertion word</i>	<i>Explanation</i>
IW X'pq	The 8-bit pattern corresponding to the hexadecimal value of pq will be inserted in the downstream direction of a failure on either line.
TRB	Standard trouble code, equal to IW X'E4.
MUX	MUX out of sync code, equal to IW X'1A.

For 4-state signaling, the A/B signaling bits of both test port channels are specified by ijkl for the receive time slot interchange (RTSI), and by mnop for the transmit time slot interchange (TTSI).

For 16-state signaling, the A/B/C/D signaling bits of both test port channels are specified by efghijkl (or hexadecimal digits ab) for the RTSI, and by mnopqrst (or hexadecimal digits cd) for the TTSI.

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number
[s]klm - The 3- or 4-digit nonhierarchical FROM NPC number
[t]pqr - The 3- or 4-digit nonhierarchical TO NPC number

uvmnp - Hierarchical TO NPC number
wxkqr - Hierarchical FROM NPC number.

Supports the termination that is cross-connected to channel ghijj.

[s]klmnnn
- Nonhierarchical format termination being tested as FROM on test port kk otherwise the same as [s]abcd. If this field is all zeroes, test port kk is assigned to an unmapped termination.

edhfgnnn
- Hierarchical format of [s]klmnnn

pqrsss
- Nonhierarchical format termination being tested as TO on test port kk; otherwise, the same as abcd.

opjstsss
- Hierarchical format of [t]pqrsss

ddd - FROM channel number of the termination that is cross-connected to
nnn - FROM channel number of the termination that is cross-connected to channel [t]ghi-jjj.

sss - TO channel number

SG - Signaling

g - Signaling mode of test port kk

<i>g</i>	<i>Explanation</i>
R	Robbed Bit Signaling
T	Transparent

CGA - Carrier group alarm

ftp - CGA state

f - FROM CGA state

<i>f</i>	<i>Explanation</i>
F	FROM NPC is in CGA
0	FROM NPC is not in CGA

t - TO CGA state

t *Explanation*

T TO NPC is in CGA
0 TO NPC is not in CGA

p - Test port digroup CGA state

p *Explanation*

P Test port NPC is in CGA
0 Test port NPC is not in CGA

RDC - Red circuit

CUS - Customer

The cross-connection tested is a customer controlled circuit.

ONEWAY

- One-way

The cross-connection tested is a one-way circuit.

TLA - Terminate and leave activate

s

- Termination state of the circuit

s *Explanation*

R RELEASED. Neither side is terminated
F FROM side is terminated
T TO side is terminated
B BOTH sides are terminated

ASGN - Assigned

The test port is already assigned to another termination, denoted
by [s]klmnnn,[t]pqrsss (or edhfgnnn,opjstsss)

UMPD - Unmapped

reason - Reason for denial

cc - Hexadecimal condition code

cc **st** *Explanation*

D1 **SCERR** TO NPC is not provisioned as DGA
D4 **SCERR** Corresponding NPC for TO virtual channel is not provisioned
D7 **SCERR** Invalid TO channel number

st *Explanation*

BADCCB CCB OOS or failed
BADCCN CCN OOS or failed
BADCHAN Bad channel number was specified
BADDSPI DSPI OOS or failed
BADFC FC OOS or failed
BADFLI FLI OOS or failed
BADFMT FMT (Formatter) OOS or failed
BADFTMI FTMI OOS or failed
BADMIU MIU OOS or failed
BADMXR MXR OOS or failed
BADNPC Bad NPC number
BADTSI TSI OOS or failed
BCAST The TO side is part of a broadcast circuit
C TOO DEEP DMB concatenations go too deep (for more than 6 level)
CBIT The TO side is part of a c-bit cross-connection
CWNOT1 Conference width is not equal to 1 (for virtual conferences)
F ASGN The FROM side NPC, wx-k-qr, is assigned
F FAIL FROM side NPC is marked failed
F OOS FROM side NPC (abc) is out of service
F UEQD The DACS unit supporting the FROM termination is out-of-service or failed

FAIL Test port Group NPC failed
IMPR TC Improper trunk conditioning specification
INERR Input error
INV CKT TYPE TO termination has invalid circuit type for test access
NA DACS CCN or UNIT involved cannot perform the cross-connect
OOS Test port Group NPC out of service
SG COND 02 Test port is dynamic
T ASGN The TO side NPC is assigned
T CLR The TO NPC is a clear-DS1 NPC
T FAIL TO side NPC is marked failed
T OOS TO side NPC is Out Of Service
T UEQD TO side NPC is Unequipped
T UTST TO termination is under test
TG
TP The TO termination is part of a test port
T_DCLU Attempt to test a locally switched channel
UEQD Test port kk is unequipped

st	<i>Explanation</i>
UTST	Under Test

TTST,RT,DGA,DGB,DGC,DGD,DGP,LLB,TO

TWO-WAY TEST ACCESS LINE LOOPBACK

Explanation Of Command

This message will enable the users to initiate, terminate, allow or inhibit a line loopback (LLB) towards the RT or the DL (DCLU) on one of the digroups of the specified bank, optionally.

If neither the TO nor the FROM option is specified, the system will take the TO option as the default value and will respond accordingly.

The TO option will enable the user to program the DACS II to take appropriate action; that is, INI, TRM, ALW or INH, with regard to sending a far-end loopback (FELP) message towards the RT or the DL.

The FROM option will enable the user to program the DACS II to take appropriate action; that is, INH or ALW, in the case where a FELP is received from an RT or DL.

If the FROM keyword is used, the INI or TERM options are not allowed.

Note that an autonomous message will be reported if a loopback is initiated (terminated) by the remote terminal.

Command

[I.26101]

TTST:FRM xy,SEQ ww:RT ffff,{DGA|DGB|DGC|DGD|DGP},\
LLB[, {TO|FROM}], {INI|TRM|ALW|INH}!

Completion Message

[O.26101]

M hh:mm:ss xy,ww n[vv] TTST RT ffff {DGA|DGB|DGC|DGD|\
DGP} LLB {TO|FROM} {INI|TRM|ALW|INH} COMPL

Denial Message

[O.26101.01]

M hh:mm:ss xy,ww n[vv] TTST RT ffff {DGA|DGB|DGC|\
DGD|DGP} LLB[{TO|FROM}] {INI|TRM|ALW|INH} COND cc DNY

Autonomous Message

[O.26101]

I hh:mm:ss xy,ww n[vv] TTST RT ffff {DGA|DGB|DGC|DGD|DGP} \
LLB FROM {INI|TRM} COMPL

Explanation Of Parameters

LLB - Line loopback

INI - Initiate LLB

TRM - Terminate LLB

ALW - Allow LLB

INH - Inhibit LLB

RT - Remote Terminal

ffff - Bank identification number (0000 - 9999)

DGA - Digroup A of the bank

DGB - Digroup B of the bank

DGC - Digroup C of the bank

DGD - Digroup D of the bank

DGP - Digroup P of the bank

TO - Allows the loopback message to be sent toward the RT
FROM - Allows the loopback message to be received from the RT
COND - Condition
cc - Hexadecimal condition code

cc *Explanation*

35 NPC has active circuit
6B Operation mode and digroup name don't match
7E Bank id number not found
8B Digroup name and bank id don't match
A1 Loop back inhibited for digroup
A2 The requested digroup is carrying service
A3 LLB not initiated
A5 Autonomous loopback is active on DGA

TTST,SPL,TG,NOYLW

NX64Kbit/s TWO-WAY TEST ACCESS, SPLIT

Explanation Of Command

This command is used to split each direction of transmission of an Nx64Kbit/s circuit that is currently under test access in monitor mode.

The optional keyword NOYLW is added to allow DACS II to disable the yellow alarm transmission while the facility is connected to a Test Group which is set to split mode via this command with NOYLW option.

Note: If the test-access group is connected to an unmapped Nx64Kbit/s termination, this command connects both directions of the unmapped termination to the test-access group's west bundle.

Command

[I.23021]

TTST:FRM xy,SEQ ww:SPL,TG mmm[,NOYLW]!

Completion Message

Nonhierarchical

[O.23021]

```
M hh:mm:ss xy,ww n[vv] TTST SPL TG mmm[ NOYLW] FROM [s]abc TO [t]ghi \
5 LN MSG:
SG g CGA(ftb)[ RDC][ CUS][ ONEWAY] {TLA s|BCAST|UMPD <tc>}
ddd ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd ddd COMPL
```

Hierarchical

[O.23021]

```
M hh:mm:ss xy,ww n[vv] TTST SPL TG mmm[ NOYLW] FROM uvmnp TO wxkqr \
5 LN MSG:
SG g CGA(ftb)[ RDC][ CUS][ ONEWAY] {TLA s|BCAST|UMPD <tc>}
ddd ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd COMPL
```

Denial Message

[O.23021.01]

```
M hh:mm:ss xy,ww n[vv] TTST SPL TG mmm[ NOYLW] COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

TG - Test-access group

mmm - Test-access Group number (001 through 400)

The TG is designated as in message 31421

SPL - Split

NOYLW - No Yellow Alarm Transmission

The NOYLW option is used to disable the yellow alarm transmission for the TO-end facility NPC that is in test access split mode and recognizes a Carrier Group Alarm (CGA) condition. A command that changes the test access group from split mode to monitor mode or a command that releases the active test access group will enable the yellow alarm behavior.

[s]abc - 3- or 4-digit non-hierarchical FROM NPC number

[t]ghi - 3- or 4-digit non-hierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical FROM NPC number

wxkqr - Hierarchical TO NPC number

uv,wx - Unit number

m,k - Module number

np,qr - NPC number within the module

The valid values are listed below:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - FROM Channel numbers

001 through 024

The FROM channel ddd will be '---' for circuits not involved in this test session. For unmapped TO channel(s) or a BBL without return, ddd will be '000' in the corresponding channel position(s). If TO channel is mapped to a channel 000, the circuit can only be tested as N = 1, the corresponding FROM channel ddd will be '000'.

tc - Trunk conditioning

For mapped circuits, <tc> will be omitted.

For unmapped circuits, the effective <tc> will be output.

SG - Signaling

g - Signaling mode of the TG

<i>g</i>	<i>Explanation</i>

T	All channels are Transparent (TRSP)

R	One or more channels is robbed-bit or non-TRSP

CGA - Carrier group alarm

PBA - Primary block alarm

ftb - CGA or PBA state

f - FROM CGA or PBA state

f Explanation

F FROM NPC is in CGA or PBA

0 FROM NPC is not in CGA or PBA

t - TO CGA or PBA state

t Explanation

T TO NPC is in CGA or PBA

0 TO NPC is not in CGA or PBA

b - TG digroup CGA or PBA state

b Explanation

E East-bundle NPCTG in CGA or PBA

W West-bundle NPCTG in CGA or PBA

B NPCTG(s) supporting both bundles in CGA or PBA

0 NPCTG(s) not in CGA or PBA

RDC - Red circuit

The cross-connection tested is a red circuit.

CUS - Customer

The cross-connection tested is a customer-controlled circuit.

TLA - Terminate and leave active

S - Termination state of the circuit

<i>s</i>	<i>Explanation</i>
R	All channels are released
F	One or more FROM channel is terminated
T	One or more TO channel is terminated
B	One or more of FROM and TO channels are terminated

COND cc
- Condition code

cc - Hexadecimal condition code

cc	<i>Explanation</i>
51	TG width incompatible with circuit
5A	NPC not in service or failed
5E	invalid test access mode

TTST,SPL,TP

TWO-WAY TEST ACCESS

Explanation Of Command

This command splits a mapped circuit in the normal circuit state. Also, in the normal circuit state, it connects both directions of an unmapped termination to test port **kk** (01 through 48). If the test port is connected to an unmapped termination, this command will connect both directions of an unmapped termination to the test port. When this command is used with the substrate feature for a circuit termination, the system response will be a substrate test access message.

This command does **not** split any connections inside a Digital Signal Processing Platform (DSPP) application, such as the DDS Subrate and MJU application, the X.50 International subrate application, or the DMB application. However, test ports may be established to any of the applications via application commands, and may then be used, again via application commands, to monitor or split circuits within the application. If a test port has been established to an application, then that test port will always appear as a split connection in an invocation of the UTL::QRY,TPS command, regardless of whether that test port is in monitor, split, or release mode inside the application.

Command

[I.23001]

TTST:FRM xy,SEQ ww:SPL,TP kk!

Completion Message

Nonhierarchical

[O.23001]

M hh:mm:ss xy,ww n[vv] TTST SPL [s]abcddd,[t]ghijjj \
[RDC] [CUS] TP kk[TLA s] COMPL

Hierarchical

[O.23001]

M hh:mm:ss xy,ww n[vv] TTST SPL wxkqrddd,uvmnpjjj \
[RDC] [CUS] TP kk[TLA s] COMPL

Denial Message

Nonhierarchical

[O.23001.02]

M hh:mm:ss xy,ww n[vv] TTST SPL [s]abcddd,[t]ghijjj \
TP kk <st> DNY

Hierarchical

[O.23001.02]

M hh:mm:ss xy,ww n[vv] TTST SPL wxkqrddd,uvmnpjjj \
TP kk <st> DNY

Common

[O.23001.01]

M hh:mm:ss xy,ww n[vv] TTST SPL TP kk <st> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TP - Test port

kk - Test port number (01 through 96)

The test port is mapped to predesignated channels of a network processing circuit for test ports (NPCTP) during the provisioning of that test port. The NPC types that can be provisioned as NPCTP are all domestic non-SLC NPC types and all CEPT types that have been provisioned for channel associated signaling (CAS). For the mapping between the test ports and the channels of the test NPCs, see Message No. 31411.

The DACS II test ports are either static or dynamic, as defined in Message No. I.31411.

SPL - Split

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001	NPC 161	NPC 321	NPC 481	NPC 641	NPC 801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001	NPC 0161	NPC 0321	NPC 0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmp - Hierarchical TO NPC number

wxkqr - Hierarchical FROM NPC number

uv,wx - Unit number

m,k - Module number

np,qr - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

MB, SR, and MJ type numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - FROM channel number

jjj - TO channel number

The valid values are:

Channel numbers

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers

001-085 (MB NPC)

NOTE: If the field [s]abcddd (or wxkqrddd in Hierarchical addressing) is all zeroes, then this test port is assigned to a unmapped termination.

CUS - Customer

Customer-controlled circuit.

RDC - Red circuit

TLA - Terminate and leave activate

s - Termination state of the circuit:

<i>s</i>	<i>Explanation</i>
R	RELEASED. Neither side is terminated
F	FROM side is terminated
T	TO side is terminated
B	BOTH sides are terminated

st - Status

st	<i>Explanation</i>
F FAIL	FROM side NPC is marked failed
F OOS	FROM side NPC (abc) is out of service
MCOND	An entity in the network is OOS or failed
NA	DACS CCN or UNIT involved cannot perform the cross-connect
NMON	Not Monitor, the testport is not currently in monitor mode
SIG TS NS	Signaling timeslot (CAS TS16) cannot be split
T FAIL	TO side NPC is marked failed
T OOS	TO side NPC is Out Of Service

TTST,TGR,TG,OOS

NX64Kbit/s TWO-WAY TEST ACCESS, TEST- ACCESS GROUP RELEASE

Explanation Of Command

This command is used to release one or more currently active test-access groups, and restore any circuits under test to their normal, terminated, or unmapped state. The OOS keyword is required to release a test-access group in two cases:

1. The associated circuit under test is out-of-service.
2. One of both of the NPCs supporting the test-access group is out-of-service.

Where more than one test-access group is specified in the input command the completion message will list the test-access groups in ascending order by the test-access group number and provide information for all test-access groups. If an attempt is made to release a range of test-access groups and no test-access groups in the range have been provisioned the release will be denied. The output for test-access groups testing in other monitor or split modes is printed with a mapping of channels.

When an administrative link fails, all test-access groups associated with that link will be released; automatically. All circuits under test by those TGs will be restored to their normal state; mapped or unmapped. Any termination state entered before or during the test access will remain in effect.

If a failure in an entity involved in an autonomous test-access group release causes the release to fail the release may be performed manually by this command.

Command

[I.27021]

TTST:FRM xy,SEQ ww:TGR,TG mmm[-nnn][,OOS]!

Completion Message

Nonhierarchical

[O.27021]

M hh:mm:ss xy,ww n[vv] TTST TGR TG mmm NN[OOS] 5 LN MSG:
FROM [s]abc TO [t]ghi[RDC][CUS][TLA s][NTR]
ddd ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd ddd {EOM|COMPL}

or

M hh:mm:ss xy,ww n[vv] TTST TGR TG mmm[-nnn] UEQD {EOM|COMPL}

or

M hh:mm:ss xy,ww n[vv] TTST TGR TG mmm NN {UASGN|LPD} {EOM|COMPL}

or

M hh:mm:ss xy,ww n[vv] TTST TGR TG mmm NN HUB [s]abcddd,\
[t]ghijjj[OOS] {EOM|COMPL}

Hierarchical

[O.27021]

M hh:mm:ss xy,ww n[vv] TTST TGR TG mmm NN[OOS] 5 LN MSG:
FROM uvmnp TO wxkqr[RDC][CUS][TLA s][NTR]
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd {EOM|COMPL}

or

M hh:mm:ss xy,ww n[vv] TTST TGR TG mmm[-nnn] UEQD {EOM|COMPL}

or

M hh:mm:ss xy,ww n[vv] TTST TGR TG mmm NN {UASGN|LPD} {EOM|COMPL}

or

M hh:mm:ss xy,ww n[vv] TTST TGR TG mmm NN HUB uvmnpddd,wxkqrjjj\
[OOS] {EOM|COMPL}

Denial Message

[O.27021.01]

M hh:mm:ss xy,ww n[vv] TTST TGR TG mmm[-nnn] COND cc DNY

Autonomous Message

Nonhierarchical

[O.27021]

I hh:mm:ss xy,ww TTST TGR TG mmm NN[OOS] 5 LN MSG:
FROM [s]abc TO [t]ghi[RDC][CUS][TLA s][NTR]
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd COMPL

or

I hh:mm:ss xy,ww TTST TGR TG mmm NN HUB [s]abcddd [t]ghijjj\
[OOS] COMPL

Hierarchical

[O.27021]

```
I hh:mm:ss xy,ww  TTST TGR TG mmm NN[ OOS]  5 LN MSG:
FROM uvmnp TO wxkqr[ RDC][ CUS][ TLA s][ NTR]
ddd ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd ddd COMPL
```

or

```
I hh:mm:ss xy,ww  TTST TGR TG mmm NN HUB uvmnpddd wxkqrjjj\
[ OOS] COMPL
```

Common

[O.27021]

```
I hh:mm:ss xy,ww  TTST TGR TG mmm NN {UASGN|LPD} COMPL
```

[O.27021.01]

```
I hh:mm:ss xy,ww  TTST TGR TG mmm COND cc DNY
```

Explanation Of Parameters

TGR - Test (access) group release

TG - Test (access) group

mmm - TG number (001 through 400)

nnn - TG number (001 through 400, greater than mmm)

Variable mmm is used to specify a single TG number or to specify the beginning of a range of TG numbers. Variable nnn is used to specify the end of a range of TG numbers.

[s]abc - 3- or 4-digit non-hierarchical FROM NPC number or first TO NPC number if TG is in HUB mode

[t]ghi - 3- or 4-digit non-hierarchical TO NPC number or second TO NPC number if TG is in HUB mode

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical FROM NPC number or first TO NPC number if TG is in HUB mode

wxkqr - Hierarchical TO NPC number or second TO NPC number if TG is in HUB mode

uv,wx - Unit number

m,k - Module number

np,qr - NPC number within the module

The valid values are listed below:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

For an unmapped TO termination, or a backbone leg (BBL) without a return, the FROM NPC number will be shown as zeroes.

ddd - FROM channel number or starting channel of first TO NPC in HUB mode
jjj - Starting channel of second TO NPC in HUB mode

001 through 024

001-031*	Primary NPCs grown as Channel Associated Signaling (CAS)
001-031	Primary NPCs grown as Non Signaling Associated (NSA)

* Circuits involving CAS channel 31 can only be tested for N = 1.

The FROM channel ddd will be '---' for circuits not involved in this test session. For unmapped TO channel(s) or a BBL without return, ddd will be '000' in the corresponding channel position(s).
If channel jjj is mapped to a channel 000 (N = 1 only), the corresponding FROM channel ddd will be '000'.

OOS - Out-of-service

RDC - Red circuit

The circuit is a red circuit

CUS - Customer

The circuit is customer controlled

TLA - Terminate and leave active

s - Termination state of the circuit

s Explanation

R All channels are released

F One or more FROM channel is terminated

T One or more TO channel is terminated

B One or more of FROM and TO channels are terminated

NTR - No Transmit

Backbone leg with no return

UASGN - Unassigned

TG is unassigned or idle

LPD - Looped

UEQD - Unequipped

TG is not equipped

HUB - Hub

TG is in Hub mode

COND - Condition

NN - TG width (1 through 24)

cc - Hexadecimal condition code

cc *Explanation*

12 Active CCN side not IS or failed or pested or hardware OOS

13 UNIT not equipped, not in service, or failed

14 CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS

15 FTMI not equipped, not in service, or failed

16 FC not eqd, not IS, or failed or inactive side FC not eqd or not IS

17 TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS

18 DSPI not equipped, not in service, or failed

1A Required FLI not equipped, not in service, or failed

1B Required MXR not equipped, not in service, or failed

1C Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS

1D Required MIU not equipped, not in service, or failed

E0 ETSI not equipped, not in service, or failed

49 test group unequipped

cc *Explanation*

58 NPC is OOS for a TGR command and OOS keyword not specified

5A NPC not in service or failed

TTST,TLA,NOT,TP

TWO-WAY TEST ACCESS

Explanation Of Command

This message is used to modify the terminate and leave activate status of one or both ends of the cross-connected channel associated with the specified test port. The test port is mapped to a predesignated channel of a network processing circuit for test ports during the provisioning of that test port. All domestic NPC types except SLC® NPCs can be provisioned as NPC test ports (NPCTP). All CEPT NPC types that have been provisioned with channel associated signaling may be provisioned as NPC test ports (NPCTP).

Command

Nonhierarchical

[I.25101]

TTST:FRM xy,SEQ ww:TLA m[,NOT [t]rstvvv],TP kk!

Hierarchical

[I.25101]

TTST:FRM xy,SEQ ww:TLA m[,NOT uvmnpvvv],TP kk!

Completion Message

Nonhierarchical

[O.25101]

M hh:mm:ss xy,ww n[vv] TTST TLA m [s]abcddd,[t]ghijjj TP kk \\
2 LN MSG:
[NOT [t]rstvvv][RDC][CUS] TLA s COMPL

Hierarchical

[O.25101]

M hh:mm:ss xy,ww n[vv] TTST TLA m edhfgddd,wxkqrjjj TP kk \\
2 LN MSG:
[NOT uvmnpvvv][RDC][CUS] TLA s COMPL

Denial Message

Nonhierarchical

[O.25101.02]

M hh:mm:ss xy,ww n[vv] TTST TLA m [t]ghijjj TP kk T UASGN\
DNY

[O.25101.03]

M hh:mm:ss xy,ww n[vv] TTST TLA m [s]abcddd,[t]ghijjj\
TP kk <reason> DNY

[O.25101.04]

M hh:mm:ss xy,ww n[vv] TTST TLA m [s]abcddd,[t]ghijjj\
[RDC] [CUS] TP kk TLA s PTLA DNY

Hierarchical

[O.25101.02]

M hh:mm:ss xy,ww n[vv] TTST TLA m wxkqrjjj TP kk T UASGN DNY

[O.25101.03]

M hh:mm:ss xy,ww n[vv] TTST TLA m edhfgddd,wxkqrjjj\
TP kk <reason> DNY

[O.25101.04]

M hh:mm:ss xy,ww n[vv] TTST TLA m edhfgddd,wxkqrjjj\
[RDC] [CUS] TP kk TLA s PTLA DNY

Common

[O.25101.01]

M hh:mm:ss xy,ww n[vv] TTST TLA m TP kk <reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TLA - Terminate and leave activate

m - The end of the tested circuit that must be put into the TLA state.
Set m to one of the values given below:

<i>m</i>	<i>Explanation</i>
F	Apply TLA to the FROM end
T	Apply TLA to the TO end
B	Apply TLA to BOTH ends

The following apply only to a DMB/conference

L	Apply TLA on all legs towards facilities
G	Apply TLA on all legs towards bridge
A	Apply TLA on all legs in both directions

The end or ends of the channel to which termination has been applied will transmit the idle code specified in the insertion word entered in the GRTH::NPC message, or its default, instead of passing data from the other end of the circuit. If the growth insertion word is MUX (X'1A), the terminate transmit word is the UMC code (X'18).

This message will be denied if test port kk is not in the monitor or split mode or if the tested circuit is already in the specified termination state.

[t]rst - The 3- or 4-digit nonhierarchical NPC number of a termination that must not be affected by this command.

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

9961-9966

uvmnp - Hierarchical TO NPC number of a termination that must not be affected by this command.

uv - Unit number

m - Module number

np - NPC number within the module

The values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

VI NPC numbers listed by unit, module, and NPC Number
Unit Type VI (Virtual)

Unit	Module	NPC	
99	1	01-02	(DACS II Non-CEF frames)
99	1	01-06	(DACS II CEF frames)

vvv - Channel or conference number

Channel numbers
001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers

001-085 (MB NPC)

001-500 (Virtual NPC)

NOT - Not

Not means that the following channel number must not be affected by this command. This field is only valid if the termination state is equal to L, G, or A.

TP - Test port

kk - Test port number (01 through 96)

The test port is mapped to predesignated channels of a Network Processing Circuit for test ports (NPCTP) during the provisioning of that test port.

The NPC types that can be provisioned as an NPCTP are all domestic non-SLC NPC types.

For information on the mapping between the test ports and the channels of the test NPCs (NPCTP), see GRTH::TP kk[,<tc>].

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number with the same valid values as [t]rst.

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number with the same valid values as [t]rst.

wxkqr - Hierarchical NPC number of the TO termination of the circuit assigned to the test port (with the same valid values as uvmnp).

edhfg - Hierarchical NPC number side of the FROM termination of the circuit assigned to the test port. If the test port is assigned to an unmapped termination, this field will be all zeroes (with the same valid values as uvmnp).

ed,wx - Unit number
h,k - Module number
fg,qr - NPC number

jjj - TO channel number with the same value as vvv.
ddd - FROM channel number with the same value as vvv.

s - Termination state of the circuit

<i>s</i>	<i>Explanation</i>
B	BOTH sides are terminated
F	FROM side is terminated
R	RELEASED. Neither side is terminated
T	TO side is terminated

RDC - Red circuit

CUS - Customer
Customer-controlled circuit

T UASGN
- The test port is assigned to an unmapped termination.

PTLA - The requested TLA state is the present TLA state.

reason - Denial reason

<i>st</i>	<i>Explanation</i>
SCERR D2	NOT NPC is not provisioned as DGA
SCERR D5	Corresponding NPC for NOT virtual channel is not provisioned
SCERR D8	Invalid NOT channel number
BADCCN	CCN OOS or failed
BADFC	FC OOS or failed
BADFLI	FLI OOS or failed
BADFMT	FMT (Formatter) OOS or failed
BADFTMI	FTMI OOS or failed
BADMIU	MIU OOS or failed
BADMXR	MXR OOS or failed
BADUNIT	UNIT OOS or failed

st	<i>Explanation</i>
CHREST	CAS channel 031 not allowed
F FAIL	FROM side NPC is marked failed
F OOS	FROM side NPC (abc) is out of service
FAIL	Test port Group NPC failed
INERR	Input error in the specification of TLA direction
MCOND	An entity in the network is OOS or failed
NA	DACS CCN or UNIT involved cannot perform the cross-connect
OOS	Test port Group NPC out of service
T FAIL	TO side NPC is marked failed
T OOS	TO side NPC is Out Of Service

TTST,TLA,TG

NX64Kbit/s TWO-WAY TEST ACCESS, TERMINATE- AND-LEAVE-ACTIVE

Explanation Of Command

This command is used to terminate one or both ends of an Nx64Kbit/s cross-connection associated with a test-access group.

Note: In the terminated state the data normally transmitted over the circuit is replaced by the trunk conditioning specified when the cross-connection was made. The Nx64Kbit/s circuit must be an unterminated, mapped one-way or two-way circuit that is currently in the Monitor or Split test access mode.

Command

[I.25121]

TTST:FRM xy,SEQ ww:TLA m,TG mmm!

Completion Message

Nonhierarchical

[O.25121]

M hh:mm:ss xy,ww n[vv] TTST TLA m TG mmm FROM [s]abc TO [t]ghi \\
5 LN MSG:
TLA s[RDC][CUS][ONEWAY]
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd ddd COMPL

Hierarchical

[O.25121]

M hh:mm:ss xy,ww n[vv] TTST TLA m TG mmm FROM uvmnp TO wxkqr \\
5 LN MSG:
TLA s[RDC][CUS][ONEWAY]
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd COMPL

Denial Message

[O.25121.01]

M hh:mm:ss xy,ww n[vv] TTST TLA m TG mmm COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TG - Test-access Group

mmm - Test-access Group number (001 through 400)

The TG is designated as in message 31421

[s]abc - 3- or 4-digit non-hierarchical FROM NPC number

[t]ghi - 3- or 4-digit non-hierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical FROM NPC number
wxkqr - Hierarchical TO NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

The valid values are listed below:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - FROM Channel numbers

001 through 024

The FROM channel ddd will be '---' for circuits not involved in this test session. For unmapped TO channel(s) or a BBL without return, ddd will be '000' in the corresponding channel position(s). If TO channel is mapped to a channel 000, the circuit can only be tested as N = 1, the corresponding FROM channel ddd will be '000'.

RDC - Red circuit

The cross-connection tested is a red circuit.

CUS - Customer

The cross-connection tested is a customer-controlled circuit.

TLA - Terminate and leave active

m

- Direction of the circuit to be terminated

<i>m</i>	<i>Explanation</i>

F	FROM side is terminated

T	TO side is terminated

B	BOTH sides are terminated

s

- Termination state of the circuit

<i>s</i>	<i>Explanation</i>

F	One or more FROM channel is terminated

T	One or more TO channel is terminated

B	One or more of FROM and TO channels are terminated

UMPD - Unmapped

Circuit under test is unmapped.

COND cc

- Condition code

cc - Hexadecimal condition code

cc *Explanation*

- 12** Active CCN side not IS or failed or pested or hardware OOS
- 13** UNIT not equipped, not in service, or failed
- 14** CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
- 15** FTMI not equipped, not in service, or failed
- 16** FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
- 17** TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
- 18** DSPI not equipped, not in service, or failed
- 1A** Required FLI not equipped, not in service, or failed
- 1B** Required MXR not equipped, not in service, or failed
- 1C** Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
- 1D** Required MIU not equipped, not in service, or failed
- E0** ETSI not equipped, not in service, or failed
- 44** Invalid direction specified for NTST TLA/TLR
- 49** test group unequipped
- 54** invalid mode for TLA/TLR
- 55** circuit already terminated
- 5A** NPC not in service or failed

TTST,TLR,NOT,TP

TWO-WAY TEST ACCESS

Explanation Of Command

This message is used to modify the Terminate and Leave Release status of one or both ends of the cross-connected channels associated with the specified test port. This message will be denied if the specified test port is not in the monitor or split mode or if the tested circuit is already in the specified termination release state. When used with the Subrate Feature for a circuit termination, the system response will be STST TLA TP or STST TLA MPTM TP. When used with the Subrate Feature for a circuit termination, the system response will be DISC TACC TS RLS or DISC TACC TS RLS MJU.

Command

Nonhierarchical

[I.25501]

TTST:FRM xy,SEQ ww:TLR m[,NOT [t]rstvvv],TP kk!

Hierarchical

[I.25501]

TTST:FRM xy,SEQ ww:TLR m[,NOT uvmnpvvv],TP kk!

Completion Message

Nonhierarchical

[O.25501]

M hh:mm:ss xy,ww n[vv] TTST TLR m [s]abcddd,[t]ghijjj TP kk \\
2 LN MSG:
[NOT [t]rstvvv][RDC][CUS] TLR s COMPL

Hierarchical

[O.25501]

M hh:mm:ss xy,ww n[vv] TTST TLR m edhfgddd,wxkqrjjj TP kk \\
2 LN MSG:
[NOT uvmnpvvv] [RDC] [CUS] TLR s COMPL

Denial Message

Nonhierarchical

[O.25501.02]

M hh:mm:ss xy,ww n[vv] TTST TLR m [t]ghijjj TP kk T UASGN DNY

[O.25501.03]

M hh:mm:ss xy,ww n[vv] TTST TLR m [s]abcddd,[t]ghijjj TP kk\
<reason> DNY

[O.25501.04]

M hh:mm:ss xy,ww n[vv] TTST TLR m [s]abcddd,[t]ghijjj TP kk\
TLR s NTLA DNY

Hierarchical

[O.25501.02]

M hh:mm:ss xy,ww n[vv] TTST TLR m wxkqrjjj TP kk T UASGN DNY

[O.25501.03]

M hh:mm:ss xy,ww n[vv] TTST TLR m edhfgddd,wxkqrjjj TP kk\
<reason> DNY

[O.25501.04]

M hh:mm:ss xy,ww n[vv] TTST TLR m edhfgddd,wxkqrjjj TP kk\
TLR s NTLA DNY

Common

[O.25501.01]

M hh:mm:ss xy,ww n[vv] TTST TLR m TP kk <reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TLR - Terminate and leave release

m - The end of the tested circuit that must be put into the terminate and leave release state.

Set m to one of the values listed below:

<i>m</i>	<i>Explanation</i>

F	Apply TLR to the FROM end

T	Apply TLR to the TO end

B	Apply TLR to BOTH ends

The following apply only to multipoint circuits

L	Apply TLR on all legs towards facilities

G	Apply TLR on all legs towards bridge

A	Apply TLR on all legs in both directions

NOT - Not

NOT means that the termination number following the NOT keyword is not to be affected by this command. This field is only valid for m values

L, G, or A.

TP - Test port

kk - Test port number (01 through 96)

The test port is mapped to predesignated channels of a network processing circuit for test ports (NPCTP) during the provisioning of that test port. All domestic nonSLC NPC types can be provisioned as NPCTP. For the mapping between the test ports and the channels of the test NPCs, see the GRTH::TP message.

[t]rst - The 3- or 4-digit Nonhierarchical NPC number of a termination that must not be affected by the command.

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
 Unit 13	 Unit 14	 Unit 15	 Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

9961-9966

uvmnp - Hierarchical NPC number of a termination that must not be affected by this command

uv - Unit number

m - Module number

np - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

MB type NPC numbers listed by unit, module, and NPC Number

Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

VI NPC numbers listed by unit, module, and NPC Number

Unit Type VI (Virtual)

Unit	Module	NPC	
99	1	01-02	(DACS II Non-CEF frames)
99	1	01-06	(DACS II CEF frames)

vvv - Channel or conference number

Channel numbers

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers

001-085	(MB NPC)
001-500	(Virtual NPC)

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number with the same valid values as [t]rst.

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number with the same valid values as [t]rst.

wxkqr - The hierarchical NPC number of the TO termination of the circuit assigned to the test port with the same valid values as uvmnp.

edhfg - The hierarchical NPC number of the FROM termination of the circuit assigned to the test port. If the test port is assigned to an unmapped termination, this field will be all zeros (with the same valid values as uvmnp).

ed,wx - Unit number
h,k - Module number
fg,qr - NPC number

jjj - TO channel with the same valid values as vvv.
ddd - FROM channel with the same valid values as vvv.

CUS - Customer
The circuit is a Customer-controlled Circuit

RDC - Red circuit
The tested circuit is a protected circuit

s - Termination state of the circuit

s Explanation

F FROM side is terminated
T TO side is terminated
B BOTH sides are terminated
R Neither side is terminated

T UASGN

- The test port is assigned to an unmapped termination

NTLA - The requested TLA state is the present TLR (RLS) state

reason - Denial reason

st Explanation

SCERR D2 NOT NPC is not provisioned as DGA
SCERR D5 Corresponding NPC for NOT virtual channel is not provisioned
SCERR D8 Invalid NOT channel number
BADCCN CCN OOS or failed
BADFC FC OOS or failed
BADFLI FLI OOS or failed
BADFMT FMT (Formatter) OOS or failed
BADFTMI FTMI OOS or failed
BADMIU MIU OOS or failed
BADMXR MXR OOS or failed
BADUNIT UNIT OOS or failed
CHREST CAS channel 031 not allowed
F FAIL FROM side NPC is marked failed
F OOS FROM side NPC (abc) is out of service
FAIL Test port Group NPC failed
INERR Input error in the specification of TLA direction
MCOND An entity in the network is OOS or failed
NA DACS CCN or UNIT involved cannot perform the cross-connect
OOS Test port Group NPC out of service
T FAIL TO side NPC is marked failed
T OOS TO side NPC is Out Of Service

TTST,TLR,TG

NX64Kbit/s TWO-WAY TEST ACCESS, TERMINATE- AND-LEAVE-RELEASE

Explanation Of Command

This command is used to release one or both ends of an Nx64Kbit/s cross-connection associated with the specified test-access group. The circuit to be released must be a terminated, mapped one-way or two-way circuit, that is currently in the Monitor or Split test access mode. Upon release normal data transmission is restored in the direction specified in the command.

Command

[I.25521]

TTST:FRM xy,SEQ ww:TLR m,TG mmm!

Completion Message

Nonhierarchical

[O.25521]

M hh:mm:ss xy,ww n[vv] TTST TLR m TG mmm FROM [s]abc TO [t]ghi \\
5 LN MSG:
TLA s[RDC][CUS][ONEWAY]
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd COMPL

Hierarchical

[O.25521]

M hh:mm:ss xy,ww n[vv] TTST TLR m TG mmm FROM uvmnp TO wxkqr \\
5 LN MSG:
TLA s[RDC][CUS][ONEWAY]
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd
ddd ddd ddd ddd ddd ddd ddd COMPL

Denial Message

[O.25521.01]

M hh:mm:ss xy,ww n[vv] TTST TLR m TG mmm COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TG - Test-access group

mmm - Test-access Group number (001 through 400)

The TG is designated as in message 31421

[s]abc - 3- or 4-digit non-hierarchical FROM NPC number

[t]ghi - 3- or 4-digit non-hierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical FROM NPC number
wxkqr - Hierarchical TO NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

The valid values are listed below:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - FROM Channel number

001 through 024

The FROM channel ddd will be '---' for circuits not involved in this test session. For unmapped TO channel(s) or a BBL without return, ddd will be '000' in the corresponding channel position(s). If TO channel is mapped to a channel 000, the circuit can only be tested as N = 1, the corresponding FROM channel ddd will be '000'.

RDC - Red circuit

The cross-connection tested is a red circuit.

CUS - Customer

The cross-connection tested is a customer-controlled circuit.

TLR - Terminate and leave released

m

- Direction of the circuit to be released

<i>m</i>	<i>Explanation</i>

F	FROM side is released

T	TO side is released

B	BOTH sides are released

TLA - Terminate and leave active

s

- Termination state of the circuit

<i>s</i>	<i>Explanation</i>

R	All channels are released

F	One or more FROM channel is terminated

T	One or more TO channel is terminated

UMPD - Unmapped

Circuit under test is unmapped.

COND cc

- Condition code

cc - Hexadecimal condition code

cc *Explanation*

- 12** Active CCN side not IS or failed or pested or hardware OOS
- 13** UNIT not equipped, not in service, or failed
- 14** CCB not eqd, not IS, or failed or inactive side CCB not eqd or not IS
- 15** FTMI not equipped, not in service, or failed
- 16** FC not eqd, not IS, or failed or inactive side FC not eqd or not IS
- 17** TSI not eqd, not IS, or failed or inactive side TSI not eqd or not IS
- 18** DSPI not equipped, not in service, or failed
- 1A** Required FLI not equipped, not in service, or failed
- 1B** Required MXR not equipped, not in service, or failed
- 1C** Reqd FMT not eqd,not IS,or failed,or inact side FMT not eqd, or not IS
- 1D** Required MIU not equipped, not in service, or failed
- E0** ETSI not equipped, not in service, or failed
- 44** Invalid direction specified for NTST TLA/TLR
- 49** test group unequipped
- 56** circuit not terminated
- 5A** NPC not in service or failed

TTST,TPR,ALL,OOS

TEST PORT RELEASE

Explanation Of Command

This command requests that all test ports set up by the link on which this command is input be restored to the released mode. An individual output message will be received for each test port released (see TTST,TPR,TP,OOS)

This output message will be received after all test ports have been released.

Substrate test sessions are also released by this command.

Command

[I.27002]

TTST:FRM xy,SEQ ww:TPR,ALL[,OOS]!

Completion Message

[O.27002]

M hh:mm:ss xy,ww n[vv] TTST TPR ALL COND cc COMPL

Denial Message

Not applicable.

Autonomous Message

[O.27002]

I hh:mm:ss xy,ww TTST TPR ALL COND cc COMPL

Explanation Of Parameters

TPR - Test Port Release

ALL - All

OOS - Out-of-service

The OOS keyword is used to release test ports on an out-of-service circuit. Any test port, regardless of the type of circuit accessed, will be released.

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

00 No conditions

01 No test ports were activated by link n

02 One or more test ports could not be released

TTST,TPR,TP,OOS,FRC

TWO-WAY TEST ACCESS

Explanation Of Command

This command allows a circuit under test to be put in the release mode and to be restored to its mapped (terminated or normal) state. When the Subrate Feature is used for a circuit termination, the system response will be a Subrate test port release message.

The FRC keyword is only used for an emergency disconnect of a test port from a DSP Platform application in the unlikely event that an application cannot disconnect the test port itself using an application command. The FRC keyword may only be used by users who have the RMON (Restricted Maintenance privilege ON) privilege. After the use of this command with the FRC keyword, the user should use the DDIS command (I.15061) to disconnect the cross-connect that was used for the test port connection to the application. The UTL::QRY,CMAP command (I.52011) should be used to find the appropriate pair of application channel numbers **before** this command and command I.15061 are used to take the test port and then the cross-connection down.

Command

[I.27001]

TTST:FRM xy,SEQ ww:TPR,TP kk[,OOS][,FRC]!

Completion Message

Nonhierarchical

[O.27001]

M hh:mm:ss xy,ww n[vv] TTST TPR [s]abcddd,[t]ghijjj \
[RDC][CUS] TP kk[TLA s][OOS][FRC] [NTR] COMPL

Hierarchical

[O.27001]

M hh:mm:ss xy,ww n[vv] TTST TPR wxkqrddd,uvmnpjjj \
[RDC][CUS] TP kk[TLA s][OOS][FRC] [NTR] COMPL

Denial Message

Nonhierarchical

[O.27001.02]

M hh:mm:ss xy,ww n[vv] TTST TPR [s]abcddd,[t]ghijjj \
TP kk <reason> DNY

Hierarchical

[O.27001.02]

M hh:mm:ss xy,ww n[vv] TTST TPR wxkqrddd,uvmnpjjj \
TP kk <reason> DNY

Common

[O.27001.01]

M hh:mm:ss xy,ww n[vv] TTST TPR TP kk <reason> DNY

Autonomous Message

Nonhierarchical

[O.27001]

I hh:mm:ss xy,ww TTST TPR [s]abcddd,[t]ghijjj \
[RDC][CUS] TP kk[TLA s][OOS] [NTR] COMPL

[O.27001.02]

I hh:mm:ss xy,ww TTST TPR [s]abcddd,[t]ghijjj\
TP kk <reason> DNY

Hierarchical

[O.27001]

I hh:mm:ss xy,ww TTST TPR wxkqrddd,uvmnpjjj \
[RDC][CUS] TP kk[TLA s][OOS] [NTR] COMPL

[O.27001.02]

I hh:mm:ss xy,ww TTST TPR wxkqrddd,uvmnpjjj \
TP kk <reason> DNY

Common

[O.27001.01]

I hh:mm:ss xy,ww TTST TPR TP kk <reason> DNY

Explanation Of Parameters

TP - Test port

kk - Test port number (01 through 96)

OOS - Out-of-service
Used to release test ports on an out-of-service circuit

FRC - Force the disconnect
This keyword is used only in an emergency, when a DSP Platform application (such as DDS Subrate, X.50 Subrate, or DMB) running on a TG193B circuit pack cannot disestablish a test port via an application command. This keyword is also restricted to users with the RMON privilege.

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-002	NPC 161-162	NPC 321-322	NPC 481-482	NPC 641-642	NPC 801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC
961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC
961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC
9961-9966

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Hierarchical TO NPC number of the circuit assigned to the test port.

wxkqr - Hierarchical FROM NPC number of the circuit assigned to the test port.

If the test port is assigned to an unmapped termination, this field will be all zeroes.

uv,wx - Unit number

m,k - Module number

np,qr - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

VI NPC numbers listed by unit, module, and NPC Number
Unit Type VI (Virtual)

Unit	Module	NPC
99	1	01-02 (DACS II Non-CEF frames)
99	1	01-06 (DACS II CEF frames)

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

ddd - FROM channel or conference number
jjj - TO channel or conference number

Channel numbers

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers

001-085	(MB NPC)
001-500	(Virtual NPC)

TPR - Test port release

TLA - Terminate and leave active

s - Termination state of the circuit

s	Explanation
R	RELEASED. Neither side is terminated
F	FROM side is terminated
T	TO side is terminated
B	Both sides are terminated

RDC - Red circuit

CUS - Customer
Customer-controlled circuit

NTR - No transmit

st	<i>Explanation</i>
F FAIL	FROM side NPC is marked failed
F OOS	FROM side NPC (abc) is out of service
F UEQD	The DACS unit supporting the FROM termination is out-of-service or failed
FAIL	Test port Group NPC failed
MCOND	An entity in the network is OOS or failed
NA	DACS CCN or UNIT involved cannot perform the cross-connect
NUTST	Test port kk is presently idle
OOS	Test port Group NPC out of service
T FAIL	TO side NPC is marked failed
T OOS	TO side NPC is Out Of Service
T UEQD	The DACS unit supporting the TO termination is out-of-service or failed
UEQD	The test port Group NPC or the test port is not equipped

Contents

UTL,ACO	24-2
■ Explanation Of Command	24-2
■ Command	24-2
■ Completion Message	24-2
■ Denial Message	24-2
■ Autonomous Message	24-3
■ Explanation Of Parameters	24-3
UTL,BMTR,FROM,TO,EXCT,INCL,UPGRD	24-4
■ Explanation Of Command	24-4
■ Command	24-6
■ Completion Message	24-6
■ Denial Message	24-6
■ Autonomous Message	24-6
■ Explanation Of Parameters	24-7
UTL,BOOT,FRAME,CLR	24-10
■ Explanation Of Command	24-10
■ Command	24-10
■ Completion Message	24-10
■ Denial Message	24-11
■ Autonomous Message	24-11
■ Explanation Of Parameters	24-11
UTL,CLR,ALL	24-12
■ Explanation Of Command	24-12
■ Command	24-12
■ Completion Message	24-12
■ Denial Message	24-12

Contents

■ Autonomous Message	24-12
■ Explanation Of Parameters	24-13
UTL,CLR,ERR,HWER,SWER	24-14
■ Explanation Of Command	24-14
■ Command	24-14
■ Completion Message	24-14
■ Denial Message	24-14
■ Autonomous Message	24-14
■ Explanation Of Parameters	24-15
UTL,CLR,MSGLOG,RSTNUM	24-16
■ Explanation Of Command	24-16
■ Command	24-16
■ Completion Message	24-16
■ Denial Message	24-16
■ Autonomous Message	24-16
■ Explanation Of Parameters	24-17
UTL,CLR,NPC,ALL,AI,LOCN,MONDAT,MONTIM	24-18
■ Explanation Of Command	24-18
■ Command	24-19
■ Nonhierarchical	24-19
■ Hierarchical	24-19
■ Completion Message	24-19
■ Nonhierarchical	24-19
■ Hierarchical	24-20
■ Denial Message	24-20
■ Nonhierarchical	24-20
■ Hierarchical	24-21
■ Autonomous Message	24-21
■ Explanation Of Parameters	24-21
UTL,CLR,NPC,PARAMS	24-30
■ Explanation Of Command	24-30
■ Command	24-30
■ Nonhierarchical	24-30
■ Hierarchical	24-30
■ Completion Message	24-30
■ Nonhierarchical	24-30
■ Hierarchical	24-31

Contents

■ Denial Message	24-31
■ Nonhierarchical	24-31
■ Hierarchical	24-31
■ Autonomous Message	24-31
■ Explanation Of Parameters	24-31
UTL,CLR,NPC,RT,DL	24-35
■ Explanation Of Command	24-35
■ Command	24-35
■ Nonhierarchical	24-35
■ Hierarchical	24-35
■ Completion Message	24-36
■ Nonhierarchical	24-36
■ Hierarchical	24-36
■ Denial Message	24-36
■ Nonhierarchical	24-36
■ Hierarchical	24-36
■ Autonomous Message	24-36
■ Explanation Of Parameters	24-37
UTL,CLR,PWR	24-43
■ Explanation Of Command	24-43
■ Command	24-43
■ Completion Message	24-43
■ Denial Message	24-43
■ Autonomous Message	24-43
■ Explanation Of Parameters	24-44
UTL,CLR,UNIT,DS3,ALLDS3,AI,MONDAT	24-45
■ Explanation Of Command	24-45
■ Command	24-46
■ Completion Message	24-47
■ Denial Message	24-47
■ Autonomous Message	24-47
■ Explanation Of Parameters	24-47
UTL,DATE,FORMAT,INT	24-51
■ Explanation Of Command	24-51
■ Command	24-51
■ Completion Message	24-51
■ Denial Message	24-51

Contents

■ Autonomous Message	24-51
■ Explanation Of Parameters	24-52
UTL,INIT,ALM	24-54
■ Explanation Of Command	24-54
■ Command	24-54
■ Completion Message	24-54
■ Denial Message	24-54
■ Autonomous Message	24-54
■ Explanation Of Parameters	24-55
UTL,LOC	24-56
■ Explanation Of Command	24-56
■ Command	24-56
■ Completion Message	24-56
■ Denial Message	24-56
■ Autonomous Message	24-56
■ Explanation Of Parameters	24-57
UTL,QR,ALL	24-69
■ Explanation Of Command	24-69
■ Command	24-69
■ Completion Message	24-69
■ Nonhierarchical	24-69
■ Hierarchical	24-71
■ Denial Message	24-72
■ Autonomous Message	24-72
■ Explanation Of Parameters	24-72
UTL,QR,ALL,COMMON	24-80
■ Explanation Of Command	24-80
■ Command	24-80
■ Completion Message	24-80
■ Denial Message	24-81
■ Autonomous Message	24-81
■ Explanation Of Parameters	24-81
UTL,QR,ALL,UNIT	24-86
■ Explanation Of Command	24-86
■ Command	24-86
■ Completion Message	24-87
■ Nonhierarchical	24-87

Contents

■ Hierarchical	24-91
■ Denial Message	24-95
■ Autonomous Message	24-95
■ Explanation Of Parameters	24-96
UTL, QRY, ALM, DS3	24-113
■ Explanation Of Command	24-113
■ Command	24-113
■ Completion Message	24-114
■ Denial Message	24-115
■ Autonomous Message	24-115
■ Explanation Of Parameters	24-116
UTL, QRY, ALMOPT, NPC, AIS	24-118
■ Explanation Of Command	24-118
■ Command	24-118
■ Nonhierarchical	24-118
■ Hierarchical	24-118
■ Completion Message	24-119
■ Nonhierarchical	24-119
■ Hierarchical	24-120
■ Denial Message	24-121
■ Nonhierarchical	24-121
■ Hierarchical	24-121
■ Autonomous Message	24-121
■ Explanation Of Parameters	24-121
UTL, QRY, ALMS	24-132
■ Explanation Of Command	24-132
■ Command	24-132
■ Completion Message	24-132
■ Nonhierarchical	24-132
■ Hierarchical	24-139
■ Denial Message	24-145
■ Autonomous Message	24-145
■ Explanation Of Parameters	24-146
UTL, QRY, ALMS, DBASE	24-169
■ Explanation Of Command	24-169
■ Command	24-169
■ Completion Message	24-170

Contents

■ Nonhierarchical	24-170
■ Hierarchical	24-171
■ Denial Message	24-171
■ Autonomous Message	24-171
■ Explanation Of Parameters	24-172
UTL, QRY, ALMS, RT, DL	24-178
■ Explanation Of Command	24-178
■ Command	24-178
■ Completion Message	24-178
■ Denial Message	24-179
■ Autonomous Message	24-179
■ Explanation Of Parameters	24-179
UTL, QRY, APPL, NPC, ALL	24-181
■ Explanation Of Command	24-181
■ Command	24-182
■ Nonhierarchical	24-182
■ Hierarchical	24-182
■ Completion Message	24-183
■ Nonhierarchical	24-183
■ Hierarchical	24-184
■ Denial Message	24-184
■ Nonhierarchical	24-184
■ Hierarchical	24-184
■ Autonomous Message	24-184
■ Explanation Of Parameters	24-185
UTL, QRY, BCAST, ALL	24-187
■ Explanation Of Command	24-187
■ Command	24-187
■ Completion Message	24-187
■ Nonhierarchical	24-187
■ Hierarchical	24-188
■ Common	24-188
■ Denial Message	24-188
■ Autonomous Message	24-188
■ Explanation Of Parameters	24-189
UTL, QRY, BCAST, FROM	24-195
■ Explanation Of Command	24-195

Contents

■ Command	24-195
■ Nonhierarchical	24-195
■ Hierarchical	24-195
■ Completion Message	24-196
■ Nonhierarchical	24-196
■ Hierarchical	24-196
■ Denial Message	24-196
■ Nonhierarchical	24-196
■ Hierarchical	24-197
■ Autonomous Message	24-197
■ Explanation Of Parameters	24-197
UTL, QRY, BCAST, FROM	24-205
■ Explanation Of Command	24-205
■ Command	24-205
■ Nonhierarchical	24-205
■ Hierarchical	24-205
■ Completion Message	24-205
■ Nonhierarchical	24-205
■ Hierarchical	24-206
■ Denial Message	24-207
■ Nonhierarchical	24-207
■ Hierarchical	24-207
■ Autonomous Message	24-207
■ Explanation Of Parameters	24-207
UTL, QRY, CMAP	24-214
■ Explanation Of Command	24-214
■ Command	24-215
■ Nonhierarchical	24-215
■ Hierarchical	24-215
■ Completion Message	24-216
■ Nonhierarchical	24-216
■ Hierarchical	24-219
■ Denial Message	24-222
■ Nonhierarchical	24-222
■ Hierarchical	24-222
■ Autonomous Message	24-222
■ Explanation Of Parameters	24-223
UTL, QRY, CNFGR	24-252

Contents

■ Explanation Of Command	24-252
■ Command	24-252
■ Completion Message	24-252
■ Denial Message	24-252
■ Autonomous Message	24-252
■ Explanation Of Parameters	24-253
UTL, QRY, CS, NPC	24-255
■ Explanation Of Command	24-255
■ Command	24-255
■ Nonhierarchical	24-255
■ Hierarchical	24-255
■ Completion Message	24-255
■ Nonhierarchical	24-255
■ Hierarchical	24-256
■ Denial Message	24-256
■ Nonhierarchical	24-256
■ Hierarchical	24-256
■ Autonomous Message	24-256
■ Explanation Of Parameters	24-256
UTL, QRY, DATE	24-260
■ Explanation Of Command	24-260
■ Command	24-260
■ Completion Message	24-260
■ Denial Message	24-260
■ Autonomous Message	24-260
■ Explanation Of Parameters	24-261
UTL, QRY, DMAP	24-262
■ Explanation Of Command	24-262
■ Command	24-262
■ Completion Message	24-263
■ Nonhierarchical	24-263
■ Hierarchical	24-266
■ Denial Message	24-268
■ Autonomous Message	24-269
■ Explanation Of Parameters	24-269
UTL, QRY, DS3, BERMT, UNIT	24-298
■ Explanation Of Command	24-298

Contents

■ Command	24-298
■ Completion Message	24-298
■ Denial Message	24-298
■ Autonomous Message	24-299
■ Explanation Of Parameters	24-299
UTL, QRY, DS3, LBO	24-300
■ Explanation Of Command	24-300
■ Command	24-300
■ Completion Message	24-300
■ Denial Message	24-300
■ Autonomous Message	24-301
■ Explanation Of Parameters	24-301
UTL, QRY, ECLOC	24-302
■ Explanation Of Command	24-302
■ Command	24-302
■ Completion Message	24-302
■ Denial Message	24-302
■ Autonomous Message	24-302
■ Explanation Of Parameters	24-303
UTL, QRY, EQD, COMMON	24-304
■ Explanation Of Command	24-304
■ Command	24-304
■ Completion Message	24-305
■ Denial Message	24-305
■ Autonomous Message	24-305
■ Explanation Of Parameters	24-306
UTL, QRY, EQD, CONN	24-308
■ Explanation Of Command	24-308
■ Command	24-308
■ Completion Message	24-308
■ Denial Message	24-308
■ Autonomous Message	24-309
■ Explanation Of Parameters	24-309
UTL, QRY, EQD, ETSIS	24-310
■ Explanation Of Command	24-310
■ Command	24-310
■ Completion Message	24-310

Contents

■ Denial Message	24-310
■ Autonomous Message	24-310
■ Explanation Of Parameters	24-311
UTL, QRY, EQD, MIUS	24-312
■ Explanation Of Command	24-312
■ Command	24-312
■ Completion Message	24-312
■ Denial Message	24-313
■ Autonomous Message	24-313
■ Explanation Of Parameters	24-313
UTL, QRY, EQD, MXRS	24-314
■ Explanation Of Command	24-314
■ Command	24-314
■ Completion Message	24-314
■ Denial Message	24-314
■ Autonomous Message	24-315
■ Explanation Of Parameters	24-315
UTL, QRY, EQD, NPCS, TOTAL, UNIT	24-317
■ Explanation Of Command	24-317
■ Command	24-318
■ Completion Message	24-319
■ Nonhierarchical	24-319
■ Hierarchical	24-320
■ Common	24-321
■ Denial Message	24-321
■ Autonomous Message	24-321
■ Explanation Of Parameters	24-322
UTL, QRY, EQD, TSIS	24-335
■ Explanation Of Command	24-335
■ Command	24-335
■ Completion Message	24-335
■ Denial Message	24-336
■ Autonomous Message	24-336
■ Explanation Of Parameters	24-336
UTL, QRY, EQD, UNIT	24-337
■ Explanation Of Command	24-337
■ Command	24-337

Contents

■ Completion Message	24-338
■ Nonhierarchical	24-338
■ Hierarchical	24-343
■ Denial Message	24-347
■ Autonomous Message	24-347
■ Explanation Of Parameters	24-347
UTL, QRY, EQD, UNITS	24-361
■ Explanation Of Command	24-361
■ Command	24-361
■ Completion Message	24-361
■ Denial Message	24-361
■ Autonomous Message	24-361
■ Explanation Of Parameters	24-362
UTL, QRY, ERR, SWER, HWER, INT, DATE, TOD, TN	24-363
■ Explanation Of Command	24-363
■ Command	24-364
■ Completion Message	24-365
■ Denial Message	24-365
■ Autonomous Message	24-365
■ Explanation Of Parameters	24-366
UTL, QRY, ESR, CCN	24-373
■ Explanation Of Command	24-373
■ Command	24-373
■ Completion Message	24-373
■ Denial Message	24-373
■ Autonomous Message	24-373
■ Explanation Of Parameters	24-374
UTL, QRY, ESR, ECCN	24-376
■ Explanation Of Command	24-376
■ Command	24-376
■ Completion Message	24-377
■ Denial Message	24-377
■ Autonomous Message	24-377
■ Explanation Of Parameters	24-378
UTL, QRY, ESR, MP	24-380
■ Explanation Of Command	24-380
■ Command	24-380

Contents

■ Completion Message	24-380
■ Denial Message	24-380
■ Autonomous Message	24-380
■ Explanation Of Parameters	24-381
UTL, QRY, ESR, NPC, SIDE	24-385
■ Explanation Of Command	24-385
■ Command	24-385
■ Nonhierarchical	24-385
■ Hierarchical	24-385
■ Completion Message	24-386
■ Nonhierarchical	24-386
■ Hierarchical	24-386
■ Denial Message	24-386
■ Nonhierarchical	24-386
■ Hierarchical	24-387
■ Autonomous Message	24-387
■ Explanation Of Parameters	24-387
UTL, QRY, ESR, UNIT	24-395
■ Explanation Of Command	24-395
■ Command	24-395
■ Completion Message	24-395
■ Denial Message	24-395
■ Autonomous Message	24-396
■ Explanation Of Parameters	24-396
UTL, QRY, ESR, UNIT, DSPI	24-399
■ Explanation Of Command	24-399
■ Command	24-399
■ Completion Message	24-399
■ Denial Message	24-399
■ Autonomous Message	24-399
■ Explanation Of Parameters	24-400
UTL, QRY, ESR, UNIT, FC	24-401
■ Explanation Of Command	24-401
■ Command	24-401
■ Completion Message	24-401
■ Denial Message	24-401
■ Autonomous Message	24-401

Contents

■ Explanation Of Parameters	24-402
UTL, QRY, ESR, UNIT, FLI	24-404
■ Explanation Of Command	24-404
■ Command	24-404
■ Completion Message	24-404
■ Denial Message	24-404
■ Autonomous Message	24-404
■ Explanation Of Parameters	24-405
UTL, QRY, ESR, UNIT, FMT	24-407
■ Explanation Of Command	24-407
■ Command	24-407
■ Completion Message	24-407
■ Denial Message	24-407
■ Autonomous Message	24-407
■ Explanation Of Parameters	24-408
UTL, QRY, ESR, UNIT, FTMI	24-410
■ Explanation Of Command	24-410
■ Command	24-410
■ Completion Message	24-410
■ Denial Message	24-410
■ Autonomous Message	24-410
■ Explanation Of Parameters	24-411
UTL, QRY, ESR, UNIT, MIU	24-414
■ Explanation Of Command	24-414
■ Command	24-414
■ Completion Message	24-414
■ Denial Message	24-414
■ Autonomous Message	24-414
■ Explanation Of Parameters	24-415
UTL, QRY, ESR, UNIT, MXR	24-416
■ Explanation Of Command	24-416
■ Command	24-416
■ Completion Message	24-416
■ Denial Message	24-416
■ Autonomous Message	24-417
■ Explanation Of Parameters	24-417

Contents

UTL, QRY, FPKG	24-421
■ Explanation Of Command	24-421
■ Command	24-421
■ Completion Message	24-422
■ Denial Message	24-422
■ Autonomous Message	24-422
■ Explanation Of Parameters	24-423
UTL, QRY, FROM	24-425
■ Explanation Of Command	24-425
■ Command	24-425
■ Nonhierarchical	24-425
■ Hierarchical	24-425
■ Completion Message	24-426
■ Nonhierarchical	24-426
■ Hierarchical	24-426
■ Denial Message	24-427
■ Nonhierarchical	24-427
■ Hierarchical	24-427
■ Autonomous Message	24-427
■ Explanation Of Parameters	24-428
UTL, QRY, FROM	24-452
■ Explanation Of Command	24-452
■ Command	24-452
■ Nonhierarchical	24-452
■ Hierarchical	24-452
■ Completion Message	24-452
■ Nonhierarchical	24-452
■ Hierarchical	24-453
■ Denial Message	24-453
■ Nonhierarchical	24-453
■ Hierarchical	24-453
■ Autonomous Message	24-453
■ Explanation Of Parameters	24-453
UTL, QRY, HUBID	24-460
■ Explanation Of Command	24-460
■ Command	24-460
■ Completion Message	24-460

Contents

■ Denial Message	24-460
■ Autonomous Message	24-460
■ Explanation Of Parameters	24-461
UTL, QRY, LIST, MACRO, USER	24-462
■ Explanation Of Command	24-462
■ Command	24-462
■ Completion Message	24-463
■ Denial Message	24-463
■ Autonomous Message	24-463
■ Explanation Of Parameters	24-464
UTL, QRY, LIST, MAP, USER	24-465
■ Explanation Of Command	24-465
■ Command	24-465
■ Completion Message	24-465
■ Denial Message	24-466
■ Autonomous Message	24-466
■ Explanation Of Parameters	24-466
UTL, QRY, LOAD, NPC, TOTAL	24-468
■ Explanation Of Command	24-468
■ Command	24-468
■ Nonhierarchical	24-468
■ Hierarchical	24-468
■ Completion Message	24-469
■ Nonhierarchical	24-469
■ Hierarchical	24-469
■ Common	24-470
■ Denial Message	24-470
■ Nonhierarchical	24-470
■ Hierarchical	24-470
■ Autonomous Message	24-470
■ Explanation Of Parameters	24-470
UTL, QRY, LOG, ALL	24-475
■ Explanation Of Command	24-475
■ Command	24-475
■ Completion Message	24-475
■ Denial Message	24-476
■ Autonomous Message	24-476

Contents

■ Explanation Of Parameters	24-477
UTL, QRY, LPBK, NPC	24-479
■ Explanation Of Command	24-479
■ Command	24-479
■ Nonhierarchical	24-479
■ Hierarchical	24-479
■ Completion Message	24-480
■ Nonhierarchical	24-480
■ Hierarchical	24-482
■ Denial Message	24-483
■ Nonhierarchical	24-483
■ Hierarchical	24-483
■ Autonomous Message	24-483
■ Explanation Of Parameters	24-484
UTL, QRY, LPBK, UNIT	24-493
■ Explanation Of Command	24-493
■ Command	24-493
■ Completion Message	24-493
■ Denial Message	24-493
■ Autonomous Message	24-494
■ Explanation Of Parameters	24-494
UTL, QRY, MACRO, ATTR, USER, ALL	24-495
■ Explanation Of Command	24-495
■ Command	24-495
■ Completion Message	24-496
■ Denial Message	24-496
■ Autonomous Message	24-496
■ Explanation Of Parameters	24-497
UTL, QRY, MACRO, MAP, SPACE, USER, ALL	24-499
■ Explanation Of Command	24-499
■ Command	24-499
■ Completion Message	24-499
■ Denial Message	24-500
■ Autonomous Message	24-500
■ Explanation Of Parameters	24-501
UTL, QRY, MACRO, USER	24-502
■ Explanation Of Command	24-502

Contents

■ Command	24-502
■ Completion Message	24-502
■ Denial Message	24-502
■ Autonomous Message	24-502
■ Explanation Of Parameters	24-503
UTL, QRY, MAP, ATTR, ALL, USER, MAPNM	24-505
■ Explanation Of Command	24-505
■ Command	24-505
■ Completion Message	24-506
■ Denial Message	24-506
■ Autonomous Message	24-506
■ Explanation Of Parameters	24-506
UTL, QRY, MARK	24-508
■ Explanation Of Command	24-508
■ Command	24-509
■ Nonhierarchical	24-509
■ Hierarchical	24-509
■ Completion Message	24-509
■ Nonhierarchical	24-509
■ Hierarchical	24-510
■ Denial Message	24-510
■ Nonhierarchical	24-510
■ Hierarchical	24-510
■ Autonomous Message	24-511
■ Explanation Of Parameters	24-511
UTL, QRY, MARK	24-524
■ Explanation Of Command	24-524
■ Command	24-524
■ Nonhierarchical	24-524
■ Hierarchical	24-524
■ Completion Message	24-525
■ Nonhierarchical	24-525
■ Hierarchical	24-526
■ Denial Message	24-527
■ Nonhierarchical	24-527
■ Hierarchical	24-527
■ Autonomous Message	24-527
■ Explanation Of Parameters	24-527

Contents

UTL, QRY, MEMSTAT	24-542
■ Explanation Of Command	24-542
■ Command	24-543
■ Completion Message	24-544
■ Denial Message	24-546
■ Autonomous Message	24-546
■ Explanation Of Parameters	24-546
UTL, QRY, MSGLOG, RANGE	24-550
■ Explanation Of Command	24-550
■ Command	24-550
■ Completion Message	24-550
■ Denial Message	24-550
■ Autonomous Message	24-550
■ Explanation Of Parameters	24-551
UTL, QRY, NFS, NPC	24-552
■ Explanation Of Command	24-552
■ Command	24-552
■ Nonhierarchical	24-552
■ Hierarchical	24-552
■ Completion Message	24-553
■ Nonhierarchical	24-553
■ Hierarchical	24-553
■ Denial Message	24-553
■ Nonhierarchical	24-553
■ Hierarchical	24-553
■ Autonomous Message	24-553
■ Explanation Of Parameters	24-554
UTL, QRY, NPC, ALL, ALV, LOCN, MONDAT	24-558
■ Explanation Of Command	24-558
■ Command	24-559
■ Nonhierarchical	24-559
■ Hierarchical	24-559
■ Completion Message	24-560
■ Nonhierarchical	24-560
■ Hierarchical	24-563
■ Denial Message	24-565
■ Nonhierarchical	24-565

Contents

■ Hierarchical	24-566
■ Autonomous Message	24-566
■ Explanation Of Parameters	24-566
UTL, QRY, NPC, MAP, USER	24-578
■ Explanation Of Command	24-578
■ Command	24-578
■ Completion Message	24-579
■ Nonhierarchical	24-579
■ Hierarchical	24-580
■ Denial Message	24-580
■ Autonomous Message	24-580
■ Explanation Of Parameters	24-581
UTL, QRY, NPC, RT, DL	24-587
■ Explanation Of Command	24-587
■ Command	24-587
■ Nonhierarchical	24-587
■ Hierarchical	24-588
■ Completion Message	24-588
■ Nonhierarchical	24-588
■ Hierarchical	24-592
■ Denial Message	24-595
■ Nonhierarchical	24-595
■ Hierarchical	24-595
■ Autonomous Message	24-595
■ Explanation Of Parameters	24-595
UTL, QRY, NPCTG	24-603
■ Explanation Of Command	24-603
■ Command	24-603
■ Completion Message	24-604
■ Nonhierarchical	24-604
■ Hierarchical	24-605
■ Denial Message	24-605
■ Autonomous Message	24-605
■ Explanation Of Parameters	24-605
UTL, QRY, OPT, TYPE, ALL, NPCS	24-611
■ Explanation Of Command	24-611
■ Command	24-611

Contents

■ Completion Message	24-612
■ Denial Message	24-615
■ Autonomous Message	24-615
■ Explanation Of Parameters	24-615
UTL, QRY, PEST, FAIL, OOS, COMMON	24-618
■ Explanation Of Command	24-618
■ Command	24-618
■ Completion Message	24-618
■ Denial Message	24-619
■ Autonomous Message	24-619
■ Explanation Of Parameters	24-620
UTL, QRY, PEST, FAIL, OOS, UNIT	24-623
■ Explanation Of Command	24-623
■ Command	24-623
■ Completion Message	24-624
■ Nonhierarchical	24-624
■ Hierarchical	24-629
■ Denial Message	24-634
■ Autonomous Message	24-634
■ Explanation Of Parameters	24-634
UTL, QRY, PMSCHED, NPC, ALL	24-649
■ Explanation Of Command	24-649
■ Command	24-650
■ Nonhierarchical	24-650
■ Hierarchical	24-650
■ Completion Message	24-650
■ Nonhierarchical	24-650
■ Hierarchical	24-651
■ Denial Message	24-652
■ Nonhierarchical	24-652
■ Hierarchical	24-652
■ Autonomous Message	24-652
■ Explanation Of Parameters	24-653
UTL, QRY, PSTATE, UNIT	24-659
■ Explanation Of Command	24-659
■ Command	24-659
■ Completion Message	24-659

Contents

■ Denial Message	24-660
■ Autonomous Message	24-660
■ Explanation Of Parameters	24-660
UTL, QRY, ROLL, DS0, NPC, ALL, UNIT	24-663
■ Explanation Of Command	24-663
■ Command	24-664
■ Nonhierarchical	24-664
■ Hierarchical	24-664
■ Completion Message	24-664
■ Nonhierarchical	24-664
■ Hierarchical	24-665
■ Denial Message	24-665
■ Autonomous Message	24-665
■ Explanation Of Parameters	24-666
UTL, QRY, ROLL, DS1, NPC, ALL, UNIT	24-670
■ Explanation Of Command	24-670
■ Command	24-671
■ Nonhierarchical	24-671
■ Hierarchical	24-671
■ Completion Message	24-671
■ Nonhierarchical	24-671
■ Hierarchical	24-672
■ Denial Message	24-674
■ Autonomous Message	24-674
■ Explanation Of Parameters	24-674
UTL, QRY, RTMAP, DLMAP	24-678
■ Explanation Of Command	24-678
■ Command	24-678
■ Completion Message	24-679
■ Nonhierarchical	24-679
■ Hierarchical	24-682
■ Denial Message	24-683
■ Autonomous Message	24-684
■ Explanation Of Parameters	24-684
UTL, QRY, SCON, CH, TO	24-697
■ Explanation Of Command	24-697
■ Command	24-697

Contents

■ Nonhierarchical	24-697
■ Hierarchical	24-697
■ Completion Message	24-698
■ Nonhierarchical	24-698
■ Hierarchical	24-698
■ Denial Message	24-699
■ Nonhierarchical	24-699
■ Hierarchical	24-699
■ Autonomous Message	24-699
■ Explanation Of Parameters	24-700
UTL, QRY, SCON, TO	24-704
■ Explanation Of Command	24-704
■ Command	24-704
■ Nonhierarchical	24-704
■ Hierarchical	24-704
■ Completion Message	24-704
■ Nonhierarchical	24-704
■ Hierarchical	24-705
■ Denial Message	24-706
■ Nonhierarchical	24-706
■ Hierarchical	24-706
■ Autonomous Message	24-706
■ Explanation Of Parameters	24-706
UTL, QRY, SCR, LINK, USER, LINKS, USERS	24-712
■ Explanation Of Command	24-712
■ Command	24-713
■ Completion Message	24-713
■ Denial Message	24-714
■ Autonomous Message	24-714
■ Explanation Of Parameters	24-715
UTL, QRY, SECH, TO	24-721
■ Explanation Of Command	24-721
■ Command	24-721
■ Nonhierarchical	24-721
■ Hierarchical	24-722
■ Completion Message	24-722
■ Nonhierarchical	24-722
■ Hierarchical	24-723

Contents

■ Denial Message	24-723
■ Nonhierarchical	24-723
■ Hierarchical	24-723
■ Autonomous Message	24-724
■ Explanation Of Parameters	24-724
UTL, QRY, SIGST	24-728
■ Explanation Of Command	24-728
■ Command	24-728
■ Nonhierarchical	24-728
■ Hierarchical	24-728
■ Completion Message	24-729
■ Nonhierarchical	24-729
■ Hierarchical	24-729
■ Denial Message	24-729
■ Nonhierarchical	24-729
■ Hierarchical	24-729
■ Autonomous Message	24-729
■ Explanation Of Parameters	24-730
UTL, QRY, SQN	24-733
■ Explanation Of Command	24-733
■ Command	24-733
■ Completion Message	24-733
■ Denial Message	24-733
■ Autonomous Message	24-733
■ Explanation Of Parameters	24-734
UTL, QRY, SRHDW, TO	24-735
■ Explanation Of Command	24-735
■ Command	24-735
■ Nonhierarchical	24-735
■ Hierarchical	24-735
■ Completion Message	24-736
■ Nonhierarchical	24-736
■ Hierarchical	24-736
■ Denial Message	24-737
■ Nonhierarchical	24-737
■ Hierarchical	24-737
■ Autonomous Message	24-737
■ Explanation Of Parameters	24-738

Contents

UTL, QRY, SROOF, TO, ALL	24-746
■ Explanation Of Command	24-746
■ Command	24-746
■ Nonhierarchical	24-746
■ Hierarchical	24-746
■ Completion Message	24-747
■ Nonhierarchical	24-747
■ Hierarchical	24-747
■ Common	24-748
■ Denial Message	24-748
■ Nonhierarchical	24-748
■ Hierarchical	24-749
■ Autonomous Message	24-749
■ Explanation Of Parameters	24-749
UTL, QRY, STATE, ACO	24-754
■ Explanation Of Command	24-754
■ Command	24-754
■ Completion Message	24-754
■ Denial Message	24-754
■ Autonomous Message	24-754
■ Explanation Of Parameters	24-755
UTL, QRY, STATE, NPC	24-756
■ Explanation Of Command	24-756
■ Command	24-757
■ Nonhierarchical	24-757
■ Hierarchical	24-757
■ Completion Message	24-757
■ Nonhierarchical	24-757
■ Hierarchical	24-758
■ Denial Message	24-759
■ Nonhierarchical	24-759
■ Hierarchical	24-759
■ Autonomous Message	24-759
■ Explanation Of Parameters	24-759
UTL, QRY, STATE, NPC	24-785
■ Explanation Of Command	24-785
■ Command	24-785

Contents

■ Nonhierarchical	24-785
■ Hierarchical	24-786
■ Completion Message	24-786
■ Nonhierarchical	24-786
■ Hierarchical	24-788
■ Denial Message	24-789
■ Nonhierarchical	24-789
■ Hierarchical	24-790
■ Autonomous Message	24-790
■ Explanation Of Parameters	24-790
UTL, QRY, STATE, SCDG, NPC, RT, DL, ALL	24-819
■ Explanation Of Command	24-819
■ Command	24-820
■ Nonhierarchical	24-820
■ Hierarchical	24-820
■ Completion Message	24-820
■ Nonhierarchical	24-820
■ Hierarchical	24-821
■ Denial Message	24-821
■ Nonhierarchical	24-821
■ Hierarchical	24-822
■ Autonomous Message	24-822
■ Explanation Of Parameters	24-822
UTL, QRY, STATE, SYNC	24-827
■ Explanation Of Command	24-827
■ Command	24-827
■ Completion Message	24-827
■ Denial Message	24-827
■ Autonomous Message	24-827
■ Explanation Of Parameters	24-828
UTL, QRY, STATE, UNIT, DS3	24-830
■ Explanation Of Command	24-830
■ Command	24-830
■ Completion Message	24-830
■ Denial Message	24-830
■ Autonomous Message	24-831
■ Explanation Of Parameters	24-831

Contents

UTL, QRY, STR, LINK	24-835
■ Explanation Of Command	24-835
■ Command	24-835
■ Completion Message	24-835
■ Denial Message	24-836
■ Autonomous Message	24-837
■ Explanation Of Parameters	24-837
UTL, QRY, STR, SYNC	24-845
■ Explanation Of Command	24-845
■ Command	24-845
■ Completion Message	24-845
■ Denial Message	24-845
■ Autonomous Message	24-845
■ Explanation Of Parameters	24-846
UTL, QRY, STR, SYNC, TLI	24-851
■ Explanation Of Command	24-851
■ Command	24-851
■ Completion Message	24-851
■ Denial Message	24-851
■ Autonomous Message	24-851
■ Explanation Of Parameters	24-852
UTL, QRY, STR, SYNC, TLI, SSP	24-854
■ Explanation Of Command	24-854
■ Command	24-854
■ Completion Message	24-854
■ Nonhierarchical	24-854
■ Hierarchical	24-854
■ Denial Message	24-855
■ Autonomous Message	24-855
■ Explanation Of Parameters	24-855
UTL, QRY, STR, XC	24-858
■ Explanation Of Command	24-858
■ Command	24-858
■ Completion Message	24-858
■ Denial Message	24-858
■ Autonomous Message	24-858
■ Explanation Of Parameters	24-859

Contents

UTL, QRY, SYNC, TYPE	24-860
■ Explanation Of Command	24-860
■ Command	24-860
■ Completion Message	24-860
■ Denial Message	24-860
■ Autonomous Message	24-860
■ Explanation Of Parameters	24-861
UTL, QRY, TGS	24-863
■ Explanation Of Command	24-863
■ Command	24-863
■ Completion Message	24-863
■ Nonhierarchical	24-863
■ Hierarchical	24-864
■ Denial Message	24-864
■ Autonomous Message	24-864
■ Explanation Of Parameters	24-864
UTL, QRY, TO	24-870
■ Explanation Of Command	24-870
■ Command	24-871
■ Nonhierarchical	24-871
■ Hierarchical	24-871
■ Completion Message	24-871
■ Nonhierarchical	24-871
■ Hierarchical	24-873
■ Denial Message	24-875
■ Nonhierarchical	24-875
■ Hierarchical	24-875
■ Autonomous Message	24-875
■ Explanation Of Parameters	24-876
UTL, QRY, TO	24-900
■ Explanation Of Command	24-900
■ Command	24-900
■ Nonhierarchical	24-900
■ Hierarchical	24-900
■ Completion Message	24-900
■ Nonhierarchical	24-900
■ Hierarchical	24-901

Contents

■ Denial Message	24-901
■ Nonhierarchical	24-901
■ Hierarchical	24-901
■ Autonomous Message	24-901
■ Explanation Of Parameters	24-902
UTL, QRY, TOD, CFA	24-920
■ Explanation Of Command	24-920
■ Command	24-920
■ Completion Message	24-920
■ Denial Message	24-920
■ Autonomous Message	24-920
■ Explanation Of Parameters	24-921
UTL, QRY, TPS	24-923
■ Explanation Of Command	24-923
■ Command	24-923
■ Completion Message	24-924
■ Nonhierarchical	24-924
■ Hierarchical	24-925
■ Denial Message	24-925
■ Autonomous Message	24-925
■ Explanation Of Parameters	24-926
UTL, QRY, TS0, NPC	24-930
■ Explanation Of Command	24-930
■ Command	24-930
■ Nonhierarchical	24-930
■ Hierarchical	24-930
■ Completion Message	24-931
■ Nonhierarchical	24-931
■ Hierarchical	24-931
■ Denial Message	24-931
■ Nonhierarchical	24-931
■ Hierarchical	24-931
■ Autonomous Message	24-931
■ Explanation Of Parameters	24-932
UTL, QRY, TS0M, NPC	24-936
■ Explanation Of Command	24-936
■ Command	24-936

Contents

■ Nonhierarchical	24-936
■ Hierarchical	24-936
■ Completion Message	24-937
■ Nonhierarchical	24-937
■ Hierarchical	24-937
■ Denial Message	24-937
■ Nonhierarchical	24-937
■ Hierarchical	24-937
■ Autonomous Message	24-938
■ Explanation Of Parameters	24-938
UTL, QRY, TSIG, NPC	24-941
■ Explanation Of Command	24-941
■ Command	24-941
■ Nonhierarchical	24-941
■ Hierarchical	24-941
■ Completion Message	24-942
■ Nonhierarchical	24-942
■ Hierarchical	24-943
■ Denial Message	24-943
■ Nonhierarchical	24-943
■ Hierarchical	24-943
■ Autonomous Message	24-944
■ Explanation Of Parameters	24-944
UTL, QRY, UNIT, DS3, ALLDS3, AL, LV, MONDAT	24-948
■ Explanation Of Command	24-948
■ Command	24-949
■ Completion Message	24-950
■ Denial Message	24-951
■ Autonomous Message	24-951
■ Explanation Of Parameters	24-951
UTL, QRY, UNIT, FTMI, EQL	24-957
■ Explanation Of Command	24-957
■ Command	24-957
■ Completion Message	24-957
■ Denial Message	24-957
■ Autonomous Message	24-957
■ Explanation Of Parameters	24-958

Contents

UTL, QRY, WHO	24-960
■ Explanation Of Command	24-960
■ Command	24-960
■ Completion Message	24-960
■ Denial Message	24-960
■ Autonomous Message	24-960
■ Explanation Of Parameters	24-961
UTL, QRY, XCSB, UNIT	24-963
■ Explanation Of Command	24-963
■ Command	24-964
■ Completion Message	24-964
■ Nonhierarchical	24-964
■ Hierarchical	24-965
■ Common	24-965
■ Denial Message	24-965
■ Autonomous Message	24-965
■ Explanation Of Parameters	24-966
UTL, RCY, COND, IN, PROGRESS	24-972
■ Explanation Of Command	24-972
■ Command	24-972
■ Completion Message	24-972
■ Denial Message	24-972
■ Autonomous Message	24-972
■ Explanation Of Parameters	24-973
UTL, RCY, PASSWD	24-975
■ Explanation Of Command	24-975
■ Command	24-975
■ Completion Message	24-975
■ Denial Message	24-975
■ Autonomous Message	24-975
■ Explanation Of Parameters	24-976
UTL, SCHED, PMREPT, NPC, RI, ST, NI, LV, LOCN	24-977
■ Explanation Of Command	24-977
■ Command	24-978
■ Nonhierarchical	24-978
■ Hierarchical	24-978
■ Completion Message	24-978

Contents

■ Nonhierarchical	24-978
■ Hierarchical	24-978
■ Denial Message	24-979
■ Nonhierarchical	24-979
■ Hierarchical	24-979
■ Autonomous Message	24-979
■ Explanation Of Parameters	24-979
UTL,TOD,CFA,FAC,X,PRIM,MONDAT	24-987
■ Explanation Of Command	24-987
■ Command	24-988
■ Completion Message	24-988
■ Denial Message	24-989
■ Autonomous Message	24-989
■ Explanation Of Parameters	24-989

UTL

UTL

This section documents the **UTL** command.

UTL,ACO

ALARM CUTOFF

Explanation Of Command

This message executes an audible alarm cutoff (ACO), silencing any currently active central office audible frame alarms. DACS II also illuminates the green ACO LED on the front status panel. The ACO remains active and the green LED remains illuminated until all frame alarms are retired or a new alarm appears on the system.

Note that executing an ACO **does not** inhibit subsequent audible alarms from being generated for additional failures. In addition, the ACO does not retire local or remote **visible** indications and does not cause the system to issue an alarm clear notification.

Executing an ACO by inputting this command is equivalent to pressing the status panel ACO push-button. When the ACO push-button is pressed, a message indicating that the ACO has been activated is generated by the system.

Command

[I.51111]

UTL:FRM xy,SEQ ww:ACO!

Completion Message

[O.51111]

pahh:mm:ss xy,ww n[vv] UTL ACO {ACTIVE|INACT} COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

ACO - Alarm cutoff

ACTIVE - Active alarm

The appearance of this keyword indicates that the audible alarm cutoff has been activated in the system.

INACT - Inactive alarm

The appearance of this keyword indicates that there were no alarms on the system and the audible alarm cutoff was not activated.

UTL,BMTR,FROM,TO,EXCT,INCL,UPGRD

BACKUP MEMORY TRANSFER

Explanation Of Command

This command performs the following functions:

1. When the MC is in-service, it may be used to request a transfer of database information from random access memory (RAM) to the memory device (MEM) or devices that are in-service. The Primary Memory (PMEM) device will always be in-service. The Secondary Memory (SMEM) device may or may not be in-service. If SMEM is in-service, then a transfer of database information will be performed from RAM to SMEM.
2. When the MC is in maintenance condition (MCOND), it may be used to request a transfer of executables or database information between PMEM and SMEM or between SMEM and PMEM. If the optional EXCT keyword is **not** used, only database information will be transferred. If the EXCT keyword **is** used only executables will be transferred.
3. During a release upgrade procedure, when in MCOND, it transfers the database and DSP Platform Applications, if any, from SMEM to PMEM. The UPGRD keyword must be used in that case. Note that the UPGRD keyword is only available to user DAX with the frame in MCOND.

Restricted maintenance privilege is required for transfers of executables or database information from SMEM to PMEM.

Every ten minutes the state of the frame is checked to look for changes in provisioning and/or cross connections. If a change has occurred within that period, an autonomous request is made to transfer data base information from RAM to MEM.

If the user issues a command transferring database information or executables from PMEM to SMEM, the command is executed immediately; however, if the transfer occurs from SMEM to PMEM the following message will appear (see below when the UPGRD keyword is used):

ARE YOU SURE? (YES/NO)

Only if the answer is YES, will the command be executed. If the answer is not YES or the user does not respond within 60 seconds, the following will be displayed:

COMMAND ABORTED

When transferring executables between PMEM and SMEM in either direction, Digital Signal Processing Platform (DSPP) application executables (if present) are treated as follows:

1. If executables for a particular application are on the source card, but not on the destination card, the transfer of those application executables takes place.
2. If executables for a particular application are on the destination card, but not on the source card, the application executables are not erased, even if executables for another application are copied from source to destination card.
3. If executables of the same application (the "x" in SDxyz is the same) that have the same version identifiers are on both the source and the destination card, then both executables remain untouched and no transfer takes place for that application.
4. If different versions of the executables of the same application are on the source and the destination card respectively, then this command is denied. The user must invoke the INSTALL command to first list and then remove one or the other version of the application before invoking this command again.

The **UPGRD** keyword must only be used during an upgrade procedure for the purpose of copying the database and previously installed DSP Platform Applications from SMEM to PMEM. The following restrictions apply for the use of the UPGRD keyword.

1. Only a copy from SMEM to PMEM is allowed.
2. The EXCT keyword is not allowed.
3. The INCL keyword is not allowed.
4. The Main Controller must be in Maintenance Condition (MCOND).
5. The user must be user DAX.
6. The release identifier for the executables on the PMEM card must refer to a newer release than the release identifier of the database on the SMEM card; i.e., this must be a genuine upgrade situation.

At the beginning of the invocation of this utility with the UPGRD keyword the following message will appear:

**WARNING - YOU HAVE INVOKED THE "UPGRD" KEYWORD.
THE "UPGRD" KEYWORD SHOULD ONLY BE USED DURING A GENERIC UPGRADE.
DO YOU WISH TO CONTINUE? (YES/NO)**

The user should respond with a **YES** if and only if an upgrade for the DACS II generic is to be done.

During the execution of this copy utility during an upgrade procedure (i.e., with the UPGRD keyword), the database is copied from SMEM to PMEM and a retrofit of the size of the database takes place if needed. In addition, all the applications residing on SMEM, if any, are copied to PMEM.

New PMEM cards with new DACS II executable software should **not** have any application software on them. Therefore, if for some reason, a different version of the same application resides on the PMEM card that resides on the SMEM card, then this command will be denied.

Command

[I.55701]

UTL:FRM xy,SEQ ww:BMTR,FROM <from>,TO <to>[, {EXCT|INCL|UPGRD}]!

Completion Message

[O.55701]

M hh:mm:ss xy,ww n[vv] UTL BMTR FROM <from> TO <to>
[{EXCT|INCL|UPGRD}] COMPL

[O.55702]

M hh:mm:ss xy ww n[vv] UTL BMTR IN PROGRESS

Denial Message

[O.55701.01]

**M hh:mm:ss xy,ww n[vv] UTL BMTR FROM <from> TO <to>[{EXCT|INCL|UPGRD}] **
COND cc DNY

Autonomous Message

[O.55701]

A hh:mm:ss xy,ww UTL BMTR FROM <from> TO <to>[EXCT] COMPL

[O.55701.01]

A hh:mm:ss xy,ww UTL BMTR FROM <from> TO <to>[EXCT] \
COND cc DNY

Explanation Of Parameters

BMTR - Backup memory transfer

FROM - From

from - Source for backup memory transfer

TO - To

to - Destination for backup memory transfer

RAM Random access memory
PMEM Primary memory device
SMEM Secondary memory device
MEM PMEM, SMEM or both

Note: The only permissible combinations are listed below:

from to

RAM MEM
PMEM SMEM
SMEM PMEM

EXCT - Executable

Transfer generic executable software only. May not be used when transferring memory contents from RAM to MEM. Frame must be in maintenance condition state (MCOND) when transferring executable software from PMEM to SMEM or SMEM to PMEM. Additionally, SMEM to PMEM requires restricted maintenance (RMON) privileges.

INCL - Inclusive

The INCL keyword is used to request that the data base on PMEM be transferred to SMEM excluding the generic journal files. This keyword cannot be combined with the EXCT keyword. INCL may not be used when transferring RAM to MEM.

The INCL keyword is used only as a preparatory step before starting a generic upgrade. It makes sure that the database residing on the SMEM card has no journal files before the upgrade is started. This is different from an invocation of this utility to copy from RAM to MEM, which converts the journals to the database leaving the journal files empty, but which does not remove the journal files.

UPGRD - Upgrade

The UPGRD keyword must be used only during a DACS II Release upgrade for the purpose of copying the database and any previously installed DSP Platform Applications from SMEM to PMEM. It is an assumption that the PMEM card has the new executables and nothing else, while the SMEM card contains the old executables, all installed DSPP Applications, and a complete database with no remaining journal entries. Only user DAX may use this keyword; also, the MC must be in MCOND.

cc - Hexadecimal condition code

cc Explanation

8C	DB MP or units ram error
8D	DB PMEM error OP-CL-RD-WR-SK
8E	DB can't send or receive mail
8F	Can't lock or unlock ram database
90	DB can't get the slave mail box
95	Invalid option,mailbox or flag
96	Unit(s) OOS, and additional backup required
97	Entity can't be addressed in this configuration
98	Checksums verification failed
99	G1 SMEM for SMEM->PMEM w/journals
20	Software Identification Block is not readable
21	Software Identification Block failed comparison
A5	FPI on SMEM does not match one on PMEM
84	Problem occurred while accessing SMEM or unformatted SMEM
85	Problem occurred while accessing PMEM
86	Source does not contain requested information
87	Old_tape is a special install tape
88	SMEM is a normal SMEM
89	Problem occurred while accessing BOTH_MEM
90	Can't mount or unmount BOTH_MEM
91	Can't mount or unmount SMEM
92	Can't mount or unmount PMEM
93	SMEM is not present
94	SMEM unit is not restored
E6	DB SMEM error OP-CL-RD-WR-SK
E7	PMEM not restored
B4	Can't copy executables
B8	Application version mismatch
F0	SSC Diagnostic Failure
F7	Can't mount or unmount old_tape
F8	Old_tape is not present
F9	Old_tape unit is not restored
FA	Bad old_tape DB generic
FB	Old_tape with journal
FC	Invalid executable on card

cc *Explanation*

FD Problem occurred while accessing old_tape
FE Fail transfer DB from old_tape to SMEM
FF DB retrofit fail

UTL,BOOT,FRAME,CLR

UTILITY BOOT

Explanation Of Command

This command requests the transfer of the data base from the primary memory (PMEM) to the random access memory (RAM).

Note: No hardware circuit packs or memory cards should be removed from or inserted into the frame while a boot or reset is in progress.

The optional CLR keyword is unnecessary but it is allowed for compatibility with older software releases.

Command

[I.58001]

UTL:FRM xy,SEQ ww:BOOT,FRAME[,CLR]!

Completion Message

[O.58001]

M hh:mm:ss xy,ww n[vv] UTL BOOT FRAME[CLR] COND cc COMPL

[O.58002]

M hh:mm:ss xy,ww n[vv] UTL BOOT FRAME IN PROGRESS

Denial Message

[O.58001.01]

M hh:mm:ss xy,ww n[vv] **UTL BOOT FRAME[CLR] COND cc DNY**

Autonomous Message

Not applicable.

Explanation Of Parameters

CLR - Clear

The optional CLR keyword is unnecessary but it is allowed for compatibility with older software releases.

PMEM - Primary memory card.

cc - Hexadecimal condition code

cc *Explanation*

- 46** Failed to boot CONF file
- 47** Failed to boot DB
- 48** Failed to boot journal--recurrence indicates database corruption
- 49** Failed to boot unit
- 4C** Failed to boot CI
- 51** General boot failure (vanilla flavor)
- 18** DSPI not equipped, not in service, or failed
- 52** Database is empty
- 92** Can't mount or unmount PMEM

UTL,CLR,ALL

UTILITY CLEAR

Explanation Of Command

This message requests a clear of the counters or state on a specified facility performance parameter for all in-service network processing circuits (NPCs) which have the specified parameter.

DACS II will silently skip NPCs which can not be cleared.

Command

[I.56011]

UTL:FRM xy,SEQ ww:CLR,<parameter>,ALL!

Completion Message

[O.56011]

M hh:mm:ss xy,ww n UTL CLR <parameter> ALL COMPL

Denial Message

[O.56011.01]

M hh:mm:ss xy,ww n UTL CLR <parameter> ALL COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

CLR - Clear

parameter

- Facility performance monitoring parameter

parameter Explanation

BER	Bit error rate
BPV	Bipolar violation
COFA	Change of frame alignment
CRC	Cyclic redundancy code
ER	Error rate (same as BER for D4 framing)
ERS	Errored seconds
FRER	Framing error
OOF	Out of frame
SERS	Severely errored seconds
SLIP	Slip count
SAFE	SAFE count
SANE	SANE count

cc - Hexadecimal condition code

cc *Explanation*

04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
14	FTMI is out of service
15	NPC is unequipped
1F	FTMI is in service but failed
24	Unit type error
26	NPC type error
46	NPC Failed or Out of Service
47	IU/TI type NPC
7E	Bank id number not found
A0	No SAFE alarm for DGP
A1	The parameter specified does not match with the NPC type

UTL,CLR,ERR,HWER,SWER

UTILITY CLEAR HARDWARE/SOFTWARE ERROR RECOVERY LOG FILE

Explanation Of Command

This message clears the DACS II error rate (ERR) recovery log. The log is a file that contains the history of the recovery events.

Command

[I.56061]

UTL:FRM xy,SEQ ww:CLR,ERR,{HWER|SWER}!

Completion Message

[O.56061]

M hh:mm:ss xy,ww n[vv] UTL CLR ERR {HWER|SWER} COMPL

Denial Message

[O.56061.01]

M hh:mm:ss xy,ww n[vv] UTL CLR ERR {HWER|SWER} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

CLR - Clear

ERR - Error rate recovery

HWER - Hardware error recovery log file

SWER - Software error recovery log file

cc - Hexadecimal condition code

cc *Explanation*

F1 File has already been cleared

UTL,CLR,MSGLOG,RSTNUM

CLEAR MESSAGE LOG

Explanation Of Command

This message will clear the Message Log. Using this command does not automatically reset the message log counter to 1, however there is an option provided that will allow the counter to be reset. This command is restricted to those with superuser permissions.

Command

[I.57031]

UTL:FRM xy,SEQ ww:CLR,MSGLOG[,RSTNUM]!

Completion Message

[O.57031]

M hh:mm:ss xy,ww n[vv] UTL CLR MSGLOG[,RSTNUM] COMPL

Denial Message

[O.57031.01]

M hh:mm:ss xy.ww n[vv] UTL CLR MSGLOG[,RSTNUM] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

MSGLOG - Message Log

CLR - Clear

RSTNUM - Reset the message log counter to 1

cc - Hexadecimal condition code

cc *Explanation*

06 Feature is (already) off

UTL,CLR,NPC,ALL,AI,LOCN,MONDAT,MONTIM

UTILITY CLEAR DA/TA/PA/TH NPC PARAMETERS

Explanation Of Command

This message clears the facility performance monitoring parameter counts of DA, TA, TH, and PA type NPCs.

This command will handle NPC addressing in the input command as follows: If only a single NPC is addressed in the input command, then either a completion or denial response will be generated for the addressed NPC. DACS II will always deny invalid commands to specifically addressed NPCs.

If a range of NPCs is addressed or the ALL NPC keyword is used and the feature applies to one or more NPCs within the range, DACS II will perform the operation on the NPCs in the range that support the requested feature, but skip the NPCs which do not support the requested feature. DACS II provides a variety of line termination types which support different features and can be randomly mixed within the frame. If at least one of the NPCs in the addressed range supports the requested feature, DACS II will generate a completion response for the entire range of NPCs; individual denial responses will not be generated for NPCs within the range which do not support the feature. If *none* of the NPCs in the addressed range support the requested feature, DACS II will generate a range denial response. NPC - Network processing circuit

If an NPC range is specified in the input command, the following floating window rules apply:

1. Unequipped NPCs within the requested range will be skipped.
2. If a CEPT gap is within the requested range, the NPCs in the gap will be skipped.
3. If an endpoint of the requested range is in a CEPT gap, then the command will be denied."

Command

Nonhierarchical

[I.56071]

UTL:FRM xy,SEQ ww:CLR,{NPC [s]abc[-[t]def]|ALL},<parameter>[,AI aaaaa] \
[,LOCN locn][,MONDAT dddd][,MONTIM tttt]!

Hierarchical

[I.56071]

UTL:FRM xy,SEQ ww:CLR,{NPC uvmp[-wxkqr]|ALL},<parameter>[,AI aaaaa] \
[,LOCN locn][,MONDAT dddd][,MONTIM tttt]!

Completion Message

Nonhierarchical

If the output message requires less than 80 characters:

[O.56071]

M hh:mm:ss xy,ww n[vv] UTL CLR {NPC [s]abc[-[t]def]|ALL} <parameter> \
[AI aaaaa][LOCN locn][MONDAT dddd][MONTIM tttt]COMPL

If the output message requires more than 80 characters:

[O.56071]

M hh:mm:ss xy,ww n[vv] UTL CLR {NPC [s]abc[-[t]def]|ALL} <parameter> 2 LN MSG:
[AI aaaaa][LOCN locn][MONDAT dddd][MONTIM tttt]COMPL

Hierarchical

If the output message requires less than 80 characters:

[O.56071]

M hh:mm:ss xy,ww n[vv] UTL CLR {NPC uvmp[-wxqr]|ALL} <parameter> \
[AI aaaaa][LOCN locn][MONDAT dddd][MONTIM tttt]COMPL

If the output message requires more than 80 characters:

[O.56071]

M hh:mm:ss xy,ww n[vv] UTL CLR {NPC uvmp[-wxqr]|ALL} <parameter> 2 LN MSG:
[AI aaaaa][LOCN locn][MONDAT dddd][MONTIM tttt]COMPL

Denial Message

Nonhierarchical

If the output message requires less than 80 characters:

[O.56071.01]

M hh:mm:ss xy,ww n[vv] UTL CLR {NPC [s]abc[-[t]def]|ALL} <parameter> \
[AI aaaaa][LOCN locn][MONDAT dddd][MONTIM tttt]COND cc DNY

If the output message requires more than 80 characters:

[O.56071.01]

M hh:mm:ss xy,ww n[vv] UTL CLR {NPC [s]abc[-[t]def]|ALL} <parameter> 2 LN MSG:
[AI aaaaa][LOCN locn][MONDAT dddd][MONTIM tttt]COND cc DNY

Hierarchical

If the output message requires less than 80 characters:

[O.56071.01]

M hh:mm:ss xy,ww n[vv] UTL CLR {NPC uvmnp[-wxkqr]|ALL} <parameter> \
[AI aaaaa][LOCN locn][MONDAT dddd][MONTIM tttt]COND cc DNY

If the output message requires more than 80 characters:

[O.56071.01]

M hh:mm:ss xy,ww n[vv] UTL CLR {NPC uvmnp[-wxkqr]|ALL} <parameter> 2 LN MSG:
[AI aaaaa][LOCN locn][MONDAT dddd][MONTIM tttt]COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

ALL - All

This keyword is a valid option for NPCs rather than specifying a single or range of NPCs. It is used to clear a single parameter on all ANSI NPCs. If the ALL NPC option is selected, the input command must specify only a single facility parameter. An input command with the ALL NPC key word and any facility parameter groupings will be denied.

[s]abc - The 3- or 4-digit nonhierarchical NPC number

[t]def - The 3- or 4-digit nonhierarchical NPC number

The valid values are:

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number

wxkqr - Hierarchical NPC number

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit Module NPC
01-16 1-4 01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit Module NPC
01-16 1-6 01-28

parameter

- Parameter name

The type of monitored parameter accumulation registers which are to be reset. If only a single NPC is specified in the input command, all types of its parameter accumulators may be reset (possibly restricted by the choices of other input parameters) by selecting the value ALLPAR in the <parameter> field. If more than one NPC is specified in the input command, then ALLPAR, ALLL, and ALLP are not valid values for parameter.

The values ALLL and ALLP may be selected only if MONDAT and MONTIM are set to a value of HIST to clear a set of historical registers. They are used to clear all historical 15-minute and daily line parameters and path parameters, respectively, as a group. The AI parameter must not be entered on the input command line. (The value ALLPAR may also be selected if the MONDAT and MONTIM parameters are programmed to clear a set of historical registers. It is used to clear the group of all historical line and path parameters.)

parameter *Explanation*

ALLL All line parameters listed below
ALLP All path parameters listed below
ALLPAR All parameters listed below
CSSP Path Controlled Slip Seconds
CVL Line Coding Violations
CVP Path Coding Violations
ESL Line Errored Seconds
ESP Path Errored Seconds
SEFS Path Severely Errored Framing Seconds
SESL Line Severely Errored Seconds
SESP Path Severely Errored Seconds
UASP Path Unavailable Seconds

AI - Accumulation interval

aaaaa - The accumulation time period for the specified parameter.

This parameter must be specified in the input command line unless MONDAT and MONTIM are programmed to reset a group of historical performance parameters. When a group of historical parameters is reset, both the 15-minute and daily accumulators are reset.

aaaaa *Explanation*

15MIN Parameter count from a 15-minute accumulator
DAILY Parameter count from a daily accumulator

LOCN - Location

locn - Facility location

The facility location which corresponds to the set of performance monitoring registers which are to be reset. If this optional parameter is not present in the input command, it defaults to a value of NEND.

locn *Explanation*

ALL Near-end and Far-end

FEND Far-end

NEND Near-end

MONDAT - Monitored Date

dddd - Performance monitoring period begin date

The date of the beginning of the performance monitoring period to reset (specified in the AI parameter) as MMDD, where MM is the month (01-12) and DD is the day (01-31) of the month. If this optional input parameter is not present in the command, it defaults to a value of CURD, the current date.

The value HIST is an option for input commands. The value HIST provides a group reset of near-end and/or far-end historical 15-minute and daily accumulators on a per-line and per-path basis. If the value HIST is selected for MONDAT, it must also be selected for MONTIM. The only valid options for <parameter> in this case are {ALLPAR|ALLL|ALLP} and the valid options for LOCN are {NEND|FEND|ALL}. The AI parameter must not be entered on the input command line.

dddd *Explanation*

{01-12}{01-31} Month of Year/Day of Month Format

CURD Current Date

HIST All historical accumulators

MONTIM - Monitored Time

tttt - Performance monitoring period begin time

The beginning time of day of the performance monitoring period to reset (specified in the AI parameter) as HHMM, where HH is the hour (00-23) and MM is the minute {00,15,30,45} of the hour. If this optional input parameter is not present in the command, it defaults to a value of CURT, the current time.

The value HIST is an option for input commands. The value HIST provides a group reset of near-end and/or far-end historical 15-minute and daily accumulators on a per-line and per-path basis. If the value HIST is selected for MONTIM, it must also be selected for MONDAT. The only valid options for <parameter> in this case are {ALLPAR|ALLL|ALLP} and the valid options for LOCN are {NEND|FEND|ALL}. The AI parameter must not be entered on the input command line.

This parameter must not appear in input commands which specify daily accumulation intervals (AI = DAILY).

tttt	<i>Explanation</i>
{00-23}{00,15,30,45}	Hour of Day/Minute of Hour
HIST	All historical accumulators
CURT	Current Time

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number

wxkqr - Hierarchical NPC number

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

cc - Hexadecimal condition code

cc *Explanation*

04	Subject entity is out of service
11	UC is out of service
12	UC is in service but failed
14	FTMI is out of service
15	NPC is unequipped
1F	FTMI is in service but failed
26	NPC type error
0C	The MONDAT and MONTIM parameters can not both be specified
B7	The associated MXR is In-Service but pested
A1	The parameter specified does not match with the NPC type
17	Command did not execute for any entity specified in the command
1B	Historical data can not be specified
1E	Monitored Date field is not allowed
20	Only DAILY for accumulation interval is allowed
21	Only 15MIN for accumulation interval is allowed
22	FTMI is PESTED
23	No PM data available
24	Monitored Time field is not allowed
25	Accumulation Interval field is missing
27	Only historical data can be specified
31	Accumulation Interval field is not allowed
89	Interval is not valid/not available

UTL,CLR,NPC,PARAMS

CLEAR FACILITY PERFORMANCE PARAMETERS

Explanation Of Command

This message requests the facility performance parameters be cleared of the values or state for one network processing circuit (NPC).

This command does not clear the parameters on a digital interface unit (DIU) NPC.

Command

Nonhierarchical

[I.56051]

UTL:FRM xy,SEQ ww:CLR,NPC [s]abc,PARAMS!

Hierarchical

[I.56051]

UTL:FRM xy,SEQ ww:CLR,NPC uvmnp,PARAMS!

Completion Message

Nonhierarchical

[O.56051]

M hh:mm:ss xy,ww n[vv] UTL CLR NPC [s]abc PARAMS COMPL

Hierarchical

[O.56051]

M hh:mm:ss xy,ww n[vv] UTL CLR NPC uvmnp PARAMS COMPL

Denial Message

Nonhierarchical

[O.56051.01]

M hh:mm:ss xy,ww n[vv] UTL CLR NPC [s]abc PARAMS COND cc DNY

Hierarchical

[O.56051.01]

M hh:mm:ss xy,ww n[vv] UTL CLR NPC uvmnp PARAMS COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

CLR - Clear

PARAMS - Parameters

For domestic NPCs, the parameters which will be cleared with this command are:

<i>Parameter</i>	<i>Explanation</i>
BER	Bit Error Rate
BPV	Bipolar Violation
COFA	Change Of Frame Alignment
CRC	Cyclic Redundancy Code
ER	Error Rate (same as BER for D4 framing)
ERS	Errored Seconds
FRER	Framing Error
OOF	Out Of Frame
SERS	Severely Errored Seconds
SLIP	Slip count
SAFE	Shelf Alarm Far End count
SANE	Shelf Alarm Near End count

cc - Hexadecimal condition code

cc	<i>Explanation</i>
02	Subject entity is not equipped
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
1F	FTMI is in service but failed
45	IU/TI type NPC failed
46	NPC Failed or Out of Service
47	IU/TI type NPC
B7	The associated MXR is In-Service but pested

UTL,CLR,NPC,RT,DL

UTILITY CLEAR

Explanation Of Command

This message requests a given facility performance parameter be cleared of the count or state for a single network processing circuit (NPC) or a range of circuits in a facility terminating unit (FTU) or a DS3 unit.

Note that if the remote terminal (RT) or the digital carrier line unit (DL) option is specified during input, the specified parameter clears the count on all digroups in that bank which have the specified parameter.

Command

Nonhierarchical

[I.56001]

```
UTL:FRM xy,SEQ ww:CLR,<parameter>,{NPC [s]abc[-[t]def]|\  
RT ffff|DL ffff}!
```

Hierarchical

[I.56001]

```
UTL:FRM xy,SEQ ww:CLR,<parameter>,{NPC uvmnp[-wxkqr]|\  
RT ffff|DL ffff}!
```

Completion Message

Nonhierarchical

[O.56001]

M hh:mm:ss xy,ww n UTL CLR <parameter>
{NPC [s]abc[-[t]def][NONE]|{RT|DL} ffff MD [g]g} COMPL

Hierarchical

[O.56001]

M hh:mm:ss xy,ww n UTL CLR <parameter> {NPC uvmnp[-wxkqr][NONE]|{RT|\
DL} ffff MD [g]g} COMPL

Denial Message

Nonhierarchical

[O.56001.01]

M hh:mm:ss xy,ww n UTL CLR <parameter> NPC [s]abc[-[t]def] {UEQD|\
BADNPC} DNY

[O.56001.02]

M hh:mm:ss xy,ww n UTL CLR <parameter>[NPC [s]abc]\
[{RT|DL} ffff] COND cc DNY

Hierarchical

[O.56001.01]

M hh:mm:ss xy,ww n UTL CLR <parameter> NPC uvmnp[-wxkqr] {UEQD|\
BADNPC} DNY

[O.56001.02]

M hh:mm:ss xy,ww n UTL CLR <parameter>[NPC uvmnp]\
[{RT|DL} ffff] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

CLR - Clear

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number, the first NPC number of a range

[t]def - The 3- or 4-digit nonhierarchical NPC number, the last NPC number of a range

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number, the first NPC number of a range
wxkqr - Hierarchical NPC number, the last NPC number of a range

uv,wx - Unit number
m,k - Module number
np,qr - NPC number

The allowable values are presented below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

parameter

- One chosen from the list below:

Parameter	Explanation
BER	Bit Error Rate
BPV	Bipolar Violation
COFA	Change Of Frame Alignment
CRC	Cyclic redundancy (CR) code CR checksum errors (CRC-6) in ESF mode
ER	Error Rate (same as BER for D4 framing)
ERS	Errored Seconds
FRER	Framing Error
LOFA	Loss of Frame Alignment Events
OOF	Out Of Frame
SAFE	Shelf Alarm Far End count
SANE	Shelf Alarm Near End count
SERS	Severely Errored Seconds
SLIP	Slip count

Note: Only the BER and SLIP parameters are allowed for Clear-DS1 NPCs.
SERS, ERS, and SLIP are only individually clearable for domestic NPCs.
For CEPT NPCs they will be cleared by the PM parameter.

- RT** - Remote terminal (SLC® carrier system)
- DL** - Digital carrier line unit (SLC carrier system)
- ffff** - Bank identification number (0000 through 9999) (SLC carrier system)
- MD** - Mode
- [g]g** - Mode of operation

<i>[g]g</i>	<i>Explanation</i>
1	SLC 96 Carrier Mode 1
3	SLC 96 Carrier Mode 3
C	SLC Series 5 Carrier (Feature Package C)

UEQD - Unequipped

BADNPC - Bad NPC

The selected parameter is not valid for this NPC.

cc - Hexadecimal condition code

cc	<i>Explanation</i>
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
1F	FTMI is in service but failed
24	Unit type error
26	NPC type error
0B	Invalid CEPT NPC
46	NPC Failed or Out of Service
47	IU/TI type NPC
7E	Bank id number not found
A0	No SAFE alarm for DGP
0E	The specified parameter is not applicable to operation mode of the RT
A1	The parameter specified does not match with the NPC type

UTL,CLR,PWR

CLEAR POWER SUPPLY OR BACKUP FAILURE

Explanation Of Command

This message clears alarms caused by a power supply failure.

Command

[I.56052]

UTL:FRM xy,SEQ ww:CLR,PWR pp!

Completion Message

[O.56052]

M hh:mm:ss xy,,ww n[vv] UTL CLR PWR pp COMPL

Denial Message

[O.56052.01]

M hh:mm:ss xy,,ww n[vv] UTL CLR PWR pp COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

CLR - Clear

PWR - Power

pp - Power supply identifier

<i>pp</i>	<i>Explanation</i>
00	All power supplies
01	Unit Controller (UC) 1
02	UC 2
03	UC 3
04	UC 4
05	UC 5
06	UC 6
07	Synchronizer (SYNC) 0
08	SYNC 1
09	Cross-connect network (CCN)/Expanded cross-connect network (ECCN) 0
10	CCN/ECCN 1
11	UC 7
12	UC 8
13	UC 9
14	UC 10
15	UC 11
16	UC 12
17	UC 13
18	UC 14
19	UC 15
20	UC 16

cc - Hexadecimal condition code

cc *Explanation*

96 Subject PWR to be cleared is not failed

UTL,CLR,UNIT,DS3,ALLDS3,AI,MONDAT

CLEAR PERFORMANCE MONITORING DATA FOR HYBRID DS3S

Explanation Of Command

This command clears (sets to zero) the facility performance monitoring parameter counts for Hybrid DS3 facilities on KCR8 circuit packs. This command is denied for DS3 facilities provisioned on KCR1 or KCR5 circuit packs.

The current or all historical counts may be cleared for one of the two accumulation intervals (DAILY or 15MIN) as follows:

- The current count is cleared for an individual parameter and an individual DS3 by specifying
 - the individual DS3 and UNIT number,
 - the individual parameter,
 - the Accumulation Interval (AI) equal to DAILY or 15MIN,
 - and if AI=DAILY, MONDAT=CURD, or if AI=15MIN, MONTIM=CURT
- The current counts are cleared for all parameters on an individual DS3 by specifying
 - the individual DS3 and UNIT number,
 - ALLPAR for the parameter,
 - the accumulation interval DAILY or 15MIN,
 - and if AI=DAILY, MONDAT=CURD, or if AI=15MIN, MONTIM=CURT.
- The current counts are cleared for an individual parameter on all Hybrid DS3s by specifying
 - ALLDS3 in place of DS3 and UNIT number,
 - the individual parameter,
 - the accumulation interval DAILY or 15MIN,

— and if AI=DAILY, MONDAT=CURD, or if AI=15MIN, MONTIM=CURT.

- All historical counts (i.e., all but the current count) for an individual parameter for an individual DS3 may be cleared by specifying
 - the individual DS3 and UNIT number,
 - the individual parameter,
 - the accumulation interval DAILY or 15MIN,
 - and if AI=DAILY, MONDAT=HIST, or if AI=15MIN, MONTIM=HIST.
- All historical counts (i.e., all but the current counts) for all parameters on an individual DS3 may be cleared by specifying
 - the individual DS3 and UNIT number,
 - ALLPAR for the parameter,
 - the accumulation interval DAILY or 15MIN,
 - and if AI=DAILY, MONDAT=HIST, or if AI=15MIN, MONTIM=HIST.
- All historical counts (i.e., all but the current counts) for an individual parameter on all Hybrid DS3s may be cleared by specifying
 - ALLDS3 in place of the DS3 number and UNIT number,
 - the particular performance parameter,
 - the accumulation interval DAILY or 15MIN,
 - and if AI=DAILY, MONDAT=HIST, or if AI=15MIN, MONTIM=HIST.

Specifying a range of DS3 facilities within the same UNIT follows the same rules as specifying ALLDS3 for all Hybrid DS3s within the frame.

Command

[I.56101]

```
UTL:FRM xy,SEQ ww:CLR,{UNIT [q]q,DS3 c[-d]|ALLDS3},<parameter>\n,AI aaaaa[,MONDAT dddd][,MONTIM tttt]!
```

Completion Message

[O.56101]

M hh:mm:ss xy,ww n[vv] UTL CLR {UNIT [q]q DS3 c[-d]|ALLDS3} \
<parameter> 2 LN MSG:
AI aaaaa [MONDAT dddd][MONTIM tttt]COMPL

Denial Message

[O.56101.01]

M hh:mm:ss xy,ww n[vv] UTL CLR {UNIT [q]q DS3 c[-d]|ALLDS3} \
<parameter> 2 LN MSG:
AI aaaaa [MONDAT dddd][MONTIM tttt]COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Peripheral unit housing the DS3s

[q]q - Number of unit ranging between 1 and 16

DS3 - Hybrid DS3 circuit

c - The DS3 facility in the unit or the first DS3 of a range of DS3s in the unit

d - The last DS3 facility of a range of DS3s in the unit

If a range of DS3s within the same UNIT is specified, then the ALLPAR parameter is not allowed.

ALLDS3 - All Hybrid DS3s that are in service are selected.

When ALLDS3 is coded in place of the UNIT number and DS3 number, then only an individual performance parameter must be coded. The value ALLPAR for parameter is not allowed.

<parameter> - Parameter name

The parameter names and their meaning are listed as follows:

<i>Parameter</i>	<i>Explanation</i>
CVL	Code Violation for the DS3 Line
ESL	Errored Seconds for the DS3 Line
SESL	Severely Errored Seconds for the DS3 Line
CVP	Code Violation for the DS3 Path
FMP	F- or M-bit errors for the DS3 Path
ESP	Errored Seconds for the DS3 Path
SESP	Severely Errored Seconds for the DS3 Path
FSESP	Far End Severely Errored Seconds for the DS3 Path
UASP	Unavailable Seconds for the DS3 Path
ALLPAR	causes all parameters within an accumulation interval to be cleared.

The following is a more detailed description for each parameter:

The **CVL** parameter keeps a count of Bipolar Violations (BPV) and Excessive Zero (EXC) counts. This count may get quite large. If one assumes an error rate of 1 bit per thousand, then a daily count may get as large as 100 million.

The **ESL** parameter counts the number of seconds that have one or more BPVs, one or more EXZs, or one or more LOS defect. This parameter is limited to the number of seconds in the measurement interval, which is 900 in 15 minutes and 86,400 in 24 hours.

The **SESL** parameter counts the number of seconds that have more than 44 BPVs and EXZs, or one or more LOS defects. This parameter is limited to the number of seconds in the measurement interval.

The **CVP** parameter keeps a count of P-bit parity errors. This count may get quite large. If one assumes an error rate of 1 bit per thousand, then a daily count may get as large as 100 million.

The **FMP** parameters keeps a count of F- and M-bit errors. This count may get quite large. If one assumes an error rate of 1 bit per thousand, then a daily count may get as large as 100 million.

The **ESP** parameter counts the number of seconds containing one or more F- and/or M-bit errors, one or more OOF (Out-of-Frame) defects, or one or more AIS defects. This parameter is limited to the number of seconds in the measurement interval.

The **SESP** parameters counts the number of seconds containing more than 44 F- and M-bit errors, one or more OOF defects, or one or more AIS defects. This parameter is limited to the number of seconds in the measurement interval.

The **FSESP** parameter counts the number of seconds that have a Remote Alarm Indication (RAI), i.e., the X-bits transmitted from the Far-End indicate RAI. This parameter is not counted if the DS3 facility has an LOS or OOF defect. This parameter is limited to the number of seconds in the measurement interval.

The **UASP** parameter counts the number of seconds that the DS3 facility is unavailable. The DS3 is declared unavailable, if the DS3 path experiences 10 consecutive seconds of SESP. The DS3 is also declared unavailable, if the DS3 line experiences 10 consecutive seconds of SESL. This parameter is limited to the number of seconds in the measurement interval.

None of the other parameters accumulate counts if the Hybrid DS3 facility is unavailable.

If **ALLPAR** is specified, then the command must specify only a single Hybrid DS3 facility, ranges are not allowed. Nor is it permitted to specify ALLDS3 for all Hybrid DS3s within the frame.

AI - Accumulation interval

aaaaa - The accumulation time period for the specified parameter.

aaaaa Explanation

15MIN Parameter count for a 15-minute accumulator

DAILY Parameter count for a daily accumulator

MONDAT - Monitored Date

dddd - Begin date of a performance monitoring period

This parameter is only allowed if the AI parameter has been specified as DAILY.

The following are the values for MONDAT:

dddd Explanation

HIST All previous 24-hour accumulators

CURD Current 24-hour accumulators (default)

If MONDAT is a legal option and not present in the command, then it defaults to a value of CURD.

Note that the meaning of the value HIST for MONDAT is different from its meaning in command I.56111, where it means **the** previous and not **all** previous counts.

MONTIM - Monitored Time

tttt - Begin time of the performance monitoring period

This parameter is only allowed if the AI parameter has been specified as 15MIN.

The following are the values for MONTIM:

tttt *Explanation*

HIST All previous 15-minute accumulators

CURT Current 15-minute accumulators (default)

If MONTIM is a legal option and not present in the command, then it defaults to a value of CURT.

Note that the meaning of the value HIST for MONTIM is different from its meaning in command I.56111, where it means **the** previous and not **all** previous counts.

cc - Hexadecimal condition code

cc *Explanation*

04 Subject entity is out of service

11 UC is out of service

12 UC is in service but failed

0C The MONDAT and MONTIM parameters can not both be specified

B7 The associated MXR is In-Service but pested

17 Command did not execute for any entity specified in the command

1B Historical data can not be specified

1E Monitored Date field is not allowed

20 Only DAILY for accumulation interval is allowed

21 Only 15MIN for accumulation interval is allowed

23 No PM data available

24 Monitored Time field is not allowed

25 Accumulation Interval field is missing

27 Only historical data can be specified

89 Interval is not valid/not available

UTL,DATE,FORMAT,INT

SET DATE

Explanation Of Command

This command sets the date (month-day-year or day-month-year) and the interval at which it will be printed for the DACS II clock.

Command

[I.51021]

UTL:FRM xy,SEQ ww:DATE <new-date>[,FORMAT ggg][,INT ii]!

Completion Message

[O.51021]

M hh:mm:ss xy,ww n[vv] UTL DATE aa/bb/cc FORMAT ggg INT ii COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

DATE - Date

new-date

- Date specified in one of the following formats:

<i>new-date</i>	<i>Date format</i>
moda[ce]yr	Month, followed by day, followed by year
damo[ce]yr	Day, followed by month, followed by year

mo - month
da - day
ce - century
yr - year

The 2-digit century (ce) field is optional. If the user enters a 2-digit number for the year field, DACS II assumes a default value of 19 for the century for the range of years between 86 and 99 and a default value of 20 for the century for the range between 00 and 85. Any 4-digit century-year entry from 1986 onward is also acceptable.

INT - Interval

ii - Interval at which DACS II will print the date

<i>ii</i>	<i>Meaning</i>
01	Every hour on the hour
02	Every even hour on the hour
04	Every fourth hour on the hour: 04, 08, 12, 16, 20, 24
06	Every sixth hour on the hour: 06, 12, 18, 24
08	Every eighth hour on the hour: 08, 16, 24
12	Twice daily on the hour: 12, 24
24	Once daily at midnight (default)

FORMAT - Format

ggg - Date format

The format to be used for interpreting the date from the input message and printing it on PDS output messages.

ggg	Date format
MDY	Month/Day/Year (USA format)
DMY	Day/Month/Year (International format)

DATE - Date

aa - Month or day

bb - Day or Month

cc - Year (2 or 4 digits)

The DATE will be displayed in either the USA format or the International format, depending on the value of ggg.

UTL,INIT,ALM

UTILITIES, ALARM REPORTING

Explanation Of Command

This message sets the DACS II audio/visual alarm reporting method to either remote only (**a = 2**) or to local and remote (**a = 3**).

Command

[I.51101]

UTL:FRM xy,SEQ ww:INIT,ALM a!

Completion Message

[O.51101]

M hh:mm:ss xy,ww n[vv] UTL INIT ALM a COMPL

Denial Message

[O.51101.01]

M hh:mm:ss xy,ww n[vv] UTL INIT ALM a COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

INIT - Initialize

ALM - Alarm

a - Alarm reporting method

a Explanation

2 Remote

3 Local and Remote

cc - Hexadecimal condition code

cc *Explanation*

03 Subject entity is in service

11 UC is out of service

12 UC is in service but failed

14 FTMI is out of service

15 NPC is unequipped

1F FTMI is in service but failed

0B Invalid CEPT NPC

44 NPC not IU/TI type

46 NPC Failed or Out of Service

UTL,LOC

UTILITY LOCATION

Explanation Of Command

This message requests a printout of the physical location of a plug-in entity using the equipment location (EQL) method. A similar method must be used if nonplug-in entities must be located, such as a network processing circuit, main controller, cross-connect network, etc.

Command

[I.56401]

UTL:FRM xy,SEQ ww:LOC,<entity>!

Completion Message

[O.56401]

**M hh:mm:ss xy,ww n[vv] UTL LOC <entity> \
b[-[q]q]-vv hhh[,c[-[q]q]-uu iii] COMPL**

Denial Message

[O.56401.01]

M hh:mm:ss xy,ww n[vv] UTL LOC <entity> COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

LOC - Location

Physical location

entity - Plug-in equipment entity

Main Controller Entities:

<i>entity</i>	<i>Explanation</i>	
MC	Main controller	
CPU	Central processing unit	
BX	Bus extender	(SBF/Non-CEF)
MTC	Maintenance circuit pack	(SBF/Non-CEF)
EBX	Expanded bus extender	(CEF/ECEF/ESBF)
EMTC	Expanded maintenance circuit pack	(CEF/ECEF/ESBF)
CI	Communications interface	
PMEM	Primary Memory Card, within CPU board	
DISK	Secondary Memory Card, plugs into the CPU board	
STATUS PANEL	(Note 1)	

Note 1: The location of this entity is not on the designation strip. The approximate location is returned in the output message.

The entity CPU cannot be used with UNIT to query the Unit Controller; instead only the entity UC can be used.

Synchronizer entities:

entity	Explanation
SYNC 0 SYNC 1	Synchronizer
SYNC 0,TB SYNC 1,TB	Synchronizer Time Base
SYNC 0,TLI 1 SYNC 0,TLI 2 SYNC 0,TLI 3 SYNC 0,TLI 4 SYNC 1,TLI 1 SYNC 1,TLI 2 SYNC 1,TLI 3 SYNC 1,TLI 4	Synchronizer Timing Link Interface
SYNC,TLI 3,CRO	Synchronizer Clock Reference Oscillator (Note 2)

Note 2: The location of the CRO is not on the designation strip. It is a Time Base application for TLI slots 3 and 4 on sides 0 and 1.

Cross-Connect entities:

entity	Explanation	
CCN 0 CCN 1	Cross-connect network	(SBF/ESBF/Non-CEF)
CCNI 0 CCNI 1	Cross-connect network interface	(SBF/ESBF/Non-CEF)
CCB 01 CCB 02 CCB 03 CCB 04 CCB 05 CCB 06 CCB 11 CCB 12 CCB 13 CCB 14 CCB 15 CCB 16	Cross-connect buffer	(SBF/ESBF/Non-CEF)
ECCN 0 ECCN 1	Expanded cross-connect network	(CEF/ECEF)
CCI 0 CCI 1	Clock and control interface	(CEF/ECEF)
BT 01 BT 02 BT 11 BT 12	Bus terminator	(CEF/ECEF)

entity	Explanation
ETSI 001	Expanded Time Slot Interchanger (CEF/ECEF)
ETSI 002	
ETSI 003	
ETSI 004	
ETSI 005	
ETSI 006	
ETSI 007	
ETSI 008	
ETSI 009	
ETSI 010	
ETSI 011	
ETSI 012	
ETSI 013	
ETSI 014	
ETSI 015	
ETSI 016	
ETSI 101	Expanded Time Slot Interchanger (CEF/ECEF)
ETSI 102	
ETSI 103	
ETSI 104	
ETSI 105	
ETSI 106	
ETSI 107	
ETSI 108	
ETSI 109	
ETSI 110	
ETSI 111	
ETSI 112	
ETSI 113	
ETSI 114	
ETSI 115	
ETSI 116	

UNIT Common Equipment entities:

entity	location
UNIT 01	NPC 0001
UNIT 02	NPC 0161
UNIT 03	NPC 0321
UNIT 04	NPC 0481
UNIT 05	NPC 0641
UNIT 06	NPC 0801
UNIT 07	NPC 0961 (UNITS 07 through UNIT 16, CEF/ECEF)
UNIT 08	NPC 1121
UNIT 09	NPC 1281
UNIT 10	NPC 1441
UNIT 11	NPC 1601
UNIT 12	NPC 1761
UNIT 13	NPC 1921
UNIT 14	NPC 2081
UNIT 15	NPC 2241
UNIT 16	NPC 2401

UNIT [q]q,UC Unit controller

FTU/IFTU/IFTU2 entities:

<i>entity</i>	Explanation
UNIT [q]q,UBX	Unit bus extender
UNIT [q]q,FTMI b	Facility terminating module interface (b = 1 through 4)
UNIT [q]q,FC 0b	Format converter
UNIT [q]q,FC 1b	

DSPU entities:

<i>entity</i>	Explanation
UNIT [q]q,DSPI	Digital signal processing interface

If the unit is equipped as a DS3 Unit or a Hybrid DS3 Unit:

UNIT Common Equipment entities:

entity	Explanation
UNIT [q]q	Unit [q]q's Protection MXR (1 through 16)
UNIT [q]q,UC	Unit Controller
UNIT [q]q,MXR d	Multiplexer/Hybrid Multiplexer (d = P,1 through 6)
UNIT [q]q,MIU d	Multiple Interface Unit
UNIT [q]q,FLI k	Facility Line Interface (k = S or P)
UNIT [q]q,FMT s	Formatter/Hybrid Formatter (s = 0 or 1)

Network Processing Circuit entities of an FTU:

entity	Explanation
NPC [s]abc[-[t]def]	Nonhierarchical NPC number
NPC uvmnp[-wxkqr]	Hierarchical NPC number

Network Processing Circuit entities of a DS3U:

entity	Explanation
NPC [s]abc[-[t]def]	Nonhierarchical NPC number
NPC uvmnp[-wxkqr]	Hierarchical NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

If an NPC is in an FTU, the command will return the location of the Dual Digroup Card that processes the NPC.

The valid nonhierarchical FTU NPC numbers are:

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

The valid hierarchical FTU NPC numbers are:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

If an NPC is in a DS3/HDS3 Unit, the command will return the location of the Service
MXR/HMXR that processes the NPC.

Network Processing Circuit entities of a DSPU:

entity

NPC [s]abc[-[t]def],SIDE-s
NPC uvmnp[-wxkqr],SIDE-s

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

As shown above, the command will return the location of the DSPC pack including the side information, the value of "s" can be either 0 or 1.

The valid nonhierarchical DSPU NPC numbers are:

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

If NPC numbers are expressed in three digits, the valid values are:

SR and MJ type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

SR and MJ type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

The valid hierarchical DSPU NPC numbers are:

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

SR and MJ NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

b, c - Bay number (1 through 7)

The bay in which the entity is located.

[q]q - Unit number (1 through 16)

vv,uu - Entity height, in inches.

For an FTU, the value is the number of inches from the bottom of the unit shelf to the center of the entity. The possible vv and uu values are:

02, 06, 10, 14, and 18 inches

For a DSPU the value of variables vv and uu can only be 06.

For a DS3U/HDS3U the value of variables vv and uu can only be 06.

hhh,iii

- Entity horizontal location in inches

Entity horizontal distance from the left front side of the bay, approximately 1-1/4 inches to the right of the bay upright, in 1/8 inch increments, to the center of the circuit pack slot of the entity (000 through 158).

The values for any entity will be the same as those shown on the designation strips for that entity, located above the entity. Note, however, that for duplicated entities the side (0 or 1) value precedes the name on the designation strip. **cc** - Hexadecimal condition code

cc *Explanation*

97 Entity can't be addressed in this configuration

UTL,QRY,ALL

UTILITY QUERY ALL

Explanation Of Command

This message requests a printout on a specified facility performance parameter for all Network Processing Circuits (NPCs).

Note that DS3U message segment applies to both DS3 unit and Hybrid DS3 unit (HDS3U). The MXR applies to both MXR and Hybrid MXR.

Command

[I.56031]

UTL:FRM xy,SEQ ww:QRY,<parameter>,ALL!

Completion Message

Nonhierarchical

[O.56031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> ALL \
NPCS [s]abc-[t]def[ RESET] TOT nnnn 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM
.
.
.
```

Note: The above message applies to a Facility Terminating Module (FTM) and parameter other than ER and BER.

[O.56031]

M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> ALL \
NPCS [s]abc-[t]def[RESET] TOT nnnn 5 LN MSG:
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx EOM

.
.
.

Note: The above message applies to a DS3 or Hybrid DS3 module (that is, a MXR or a HMXR) and parameter other than ER and BER.

[O.56032]

M hh:mm:ss xy,ww n[vv] UTL QRY BER ALL NPCS [s]abc-[t]def\
[RESET] TOT nnnn 5 LN MSG:
xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx
xx xx xx xx xx xx xx xx xx xx EOM

.
.
.

Note: The above message applies to a Facility Terminating Module (FTM) and either parameter ER or BER.

[O.56032]

M hh:mm:ss xy,ww n[vv] UTL QRY BER ALL NPCS [s]abc-[t]def\
[RESET] TOT nnnn 5 LN MSG:
xx xx xx xx xx xx xx
xx xx xx xx xx xx xx
xx xx xx xx xx xx xx
xx xx xx xx xx xx xx EOM

M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> ALL COMPL

Note: The above message applies to a DS3 or a HDS3 module (that is, a MXR or HMXR) and either parameter ER or BER.

Hierarchical

[O.56031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> ALL NPCS uvmnp-uvmqr\  
[ RESET] TOT nnnn 5 LN MSG:  
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx  
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx  
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx  
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx EOM  
.  
.  
.
```

Note: The above message applies to a Facility Terminating Module (FTM) and parameter other than ER and BER.

[O.56031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> ALL NPCS uvmnp-uvmqr\  
[ RESET] TOT nnnn 5 LN MSG:  
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx  
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx  
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx  
xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx xxxxxx EOM  
.  
.  
.
```

Note: The above message applies to a DS3 or a HDS3 module (that is, a MXR or HMXR) and parameter other than ER and BER.

[O.56032]

```
M hh:mm:ss xy,ww n[vv] UTL QRY BER ALL NPCS uvmnp-uvmqr[ RESET] \  
TOT nnnn 5 LN MSG:  
xx xx xx xx xx xx xx xx xx xx  
xx xx xx xx xx xx xx xx xx xx  
xx xx xx xx xx xx xx xx xx xx  
xx xx xx xx xx xx xx xx xx xx EOM  
.  
.  
.
```

Note: The above message applies to a Facility Terminating Module (FTM) and either parameter ER or BER.

[O.56032]

M hh:mm:ss xy,ww n[vv] UTL QRY BER ALL NPCS uvmnp-uvmq[RESET] \
TOT nnnn 5 LN MSG:
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX EOM

M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> ALL COMPL

Note: The above message applies to a DS3 or a HDS3 module (that is, a MXR or HMXR) and either parameter ER or BER.

[O.56033]

M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> ALL NPCS TOT 0000 COMPL

[O.56034]

M hh:mm:ss xy,ww n[vv] UTL QRY BER ALL NPCS TOT 0000 COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

ALL - All

parameter

- Facility performance parameter

The parameter and its period of measurement are chosen from the set below:

<i>parameter</i>	<i>Explanation</i>	<i>Period of measurement</i>
BER	Bit Error Rate	Total since local midnight
BPV	Bipolar Violation	Total since local midnight
COFA	Change Of Frame Alignment	Total since local midnight
CGA	Carrier Group Alarm	Total since local midnight
CRC	Cyclic Redundancy Code	Total since local midnight
ER	Error Rate (same as BER for D4 framing)	Previous 24-hour total
ERS	Errored Seconds	Previous 24-hour total
FRER	Framing Error	Total since local midnight
OOF	Out Of Frame	Total since local midnight
SERS	Severely Errored Seconds	Previous 24-hour total
SLIP	Slip count	Previous 24-hour total
SAFE	Shelf Alarm Far End count	Total since local midnight
SANE	Shelf Alarm Near End count	Total since local midnight

Note: If the frame contains NPCs that are provisioned with D4 framing only the ER parameter should be used, the BER parameter should not be used.

A message segment will be omitted for:

- Unequipped FTMs
 - DS3 modules in the case of BPV request
- Equipped FTM with no equipped NPC
- Equipped FTM with all NPCs having zero value of <parameter>
- Equipped CEPT FTM with all NPCs being PA type but with a parameter other than BER.

xxxxxx - Parameter count values

Dashes ("-") will be output for NPCs that are not equipped or are provisioned with a type unapplicable to the parameter. If an entire FTM is unequipped or all its NPCs are dashes, the segment is skipped.

xx - BER states

<i>xx</i>	<i>State</i>
MJ	Major
MN	Minor
ER	Error
CL	Clear (a facility type NPC without errors)
--	Unequipped NPC

Unless the CHG::NPC, TS0 command is used to redefine the active value of bit 4 of CTS 0, the RBER values are:

RBER Explanation

1	Inactive
0	Active

NPC(S) - Network processing circuit(s)

[s]abc - The first 3- or 4-digit nonhierarchical NPC number in a module

[t]def - The last 3- or 4-digit nonhierarchical NPC number in a module

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number of the first NPC in a module

uvmqr - Hierarchical NPC number of the last NPC in a module

uv, - Unit number
m, - Module number
np, qr - NPC number within the module

The allowable values are presented below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

The parameter value for the first NPC is listed in the first position (upper left corner) of the first line of each message segment. The value for the last NPC occurs in the last position (lower right corner).

TOT - Total

nnnn - Cumulative count of NPCs returning nonzero states or values

The last nnnn, the one printed out in the last message module, gives the total number of NPCs with nonzero states or values in the frame.

RESET - Reset

Indicates that one or more autonomous resets have occurred.

UTL, QRY, ALL, COMMON

QUERY ALL COMMON EQUIPMENT

Explanation Of Command

This message is used to request reports on the out-of-service, fail, or pest status of the common frame equipment. Common frame equipment includes the administrative links, cross-connects, clock and control interfaces or cross-connect network interfaces (CEF or nonCEF, respectively), synchronizers, clock reference oscillator, timing link interfaces, time slot interchangers and expanded time slot interchangers.

Command

[I.53104]

UTL:FRM xy,SEQ ww:QRY,ALL,COMMON!

Completion Message

[O.53104]

M hh:mm:ss xy,ww n[vv] UTL QRY ALL COMMON 4 LN MSG:
OOS g h i j k l m n o p
FAIL g h i j k l m n o p
PEST g h i j k l m n o p EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALL COMMON 4 LN MSG:
SYNC ofp ófp CRO ofp
TLI ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp
a b c d e f g h i j k l m n o p EOM

The next segment(s) describes the CCN hardware but the format depends upon whether the frame is a CEF or nonCEF.

For DACS II nonCEF frames there are two segments:

M hh:mm:ss xy,ww n[vv] UTL QRY ALL TOTAL TSIS tt oo ff pp 5 LN MSG:
11 ofp ofp 12 ofp ofp 13 ofp ofp 14 ofp ofp 15 ofp ofp 16 ofp ofp
21 ofp ofp 22 ofp ofp 23 ofp ofp 24 ofp ofp 25 ofp ofp 26 ofp ofp
31 ofp ofp 32 ofp ofp 33 ofp ofp 34 ofp ofp 35 ofp ofp 36 ofp ofp
41 ofp ofp 42 ofp ofp 43 ofp ofp 44 ofp ofp 45 ofp ofp 46 ofp ofp EOP

M hh:mm:ss xy,ww n[vv] UTL QRY ALL TOTAL TSIS tt oo ff pp 3 LN MSG:
51 ofp ofp 52 ofp ofp 53 ofp ofp 54 ofp ofp 55 ofp ofp 56 ofp ofp
61 ofp ofp 62 ofp ofp 63 ofp ofp 64 ofp ofp 65 ofp ofp 66 ofp ofp EOM

For DACS II CEF frames there is only one segment:

M hh:mm:ss xy,ww n[vv] UTL QRY ALL TOTAL ETSIS tt oo ff pp 5 LN MSG:
01 ofp ofp 02 ofp ofp 03 ofp ofp 04 ofp ofp
05 ofp ofp 06 ofp ofp 07 ofp ofp 08 ofp ofp
09 ofp ofp 10 ofp ofp 11 ofp ofp 12 ofp ofp
13 ofp ofp 14 ofp ofp 15 ofp ofp 16 ofp ofp EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALL COMMON COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

ALL - All

COMMON - Common

OOS - Out of service

FAIL - Fail

PEST - Pest

For the OOS, FAIL and PEST keywords, variables g through p each represent a frame entity. The values of these variables give the OOS, FAIL, or PEST status of the associated entity. Values are interpreted using the table below. The entity associated with a given variable is given following the explanation of PEST below.

Value	OOS	FAIL	PEST
1	out-of-service	failed	pested
0	in service	not failed	unpested
-	not applicable	not applicable	not applicable

to the particular entity. For example, an unequipped circuit would display a "-" in the position of its OOS, FAIL and PEST indicators g through p.

The keyword PEST is used to indicate that error reporting is disabled. Out-of-service (OOS) entities and entities related to a side that is out of service are pested to prevent error messages from being reported to the main controller. Error reporting is undesirable if an entity is OOS since it would interrupt normal operations by repeatedly interrupting the microprocessor.

- g** - Link 1
- h** - Link 2
- i** - Link 3
- j** - Link 4
- k** - Link 5
- l** - Link 6
- m** - XC0 (cross-connect 0)
- n** - XC1 (cross-connect 1)

CEF frame

- o** - CCI 0 (clock and control interface 0)
- p** - CCI 1 (clock and control interface 1)

nonCEF frame

- o** - CCNI (cross-connect network interface 0)
- p** - CCNI (cross-connect network interface 1)

SYNC - Synchronizer

ofp - Side 0 synchronizer status

- o** - Out of service
- f** - Fail
- p** - Pest

ofp - Side 1 synchronizer status

o - Out of service
f - Fail
p - Pest

CRO - Clock reference oscillator

ofp - CRO status

o - Out of service
f - Fail
p - Pest

To aid in interpreting the variables associated with the timing link interface the following lines from the message are printed here for reference.

|<----- Side 0 ----->|<----- Side 1 ----->|

TLI	ofp a	ofp b	ofp c	ofp d	ofp e	ofp f	ofp g	ofp h	ofp i	ofp j	ofp k	ofp l	ofp m	ofp n	ofp o	ofp p	EOM
	1	1	2	2	3	3	4	4	1	1	2	2	3	3	4	4	TLI No.
	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	SSP No.

TLI - Timing link interface

ofp - Side 0 TLI status

o - Out of service
f - Fail
p - Pest

ofp - Side 1 TLI status

o - Out of service
f - Fail
p - Pest

TLI - Timing link interface

There are four TLIs in each synchronizer side and each TLI has two synchronizer synchronization ports (SSP) for a total of eight SSPs per side. Variables a through p represent these SSPs and are associated with each TLI as shown below. The values of a through p give the priority of each SSP as a synchronization source. Priorities range in value from 1 through 8 and are interpreted as shown below.

- 1** - Highest priority
- 8** - Lowest priority

- a** - TLI 1 SSP 0 priority
- b** - TLI 1 SSP 1 priority

- c** - TLI 2 SSP 0 priority
- d** - TLI 2 SSP 1 priority

- e** - TLI 3 SSP 0 priority
- f** - TLI 4 SSP 1 priority

- g** - TLI 4 SSP 0 priority
- h** - TLI 4 SSP 1 priority

- i** - TLI 1 SSP 0 priority
- j** - TLI 1 SSP 1 priority

- k** - TLI 2 SSP 0 priority
- l** - TLI 2 SSP 1 priority

- m** - TLI 3 SSP 0 priority
- n** - TLI 3 SSP 1 priority

- o** - TLI 4 SSP 0 priority
- p** - TLI 4 SSP 1 priority

TSI - Time slot interchanger

ETSI - Expanded time slot interchanger

- f** - FROM unit (1 through 6)
- t** - TO Unit (1 through 6)

ofp - Side 0 TLI status

- o** - Out of service
- f** - Fail
- p** - Pest

ofp - Side 1 TLI status

o - Out of service

f - Fail

p - Pest

TSIS - Time slot interchanger

ETSIS - Expanded time slot interchangers

tt - Total number of equipped TSIs or ETSIs

oo - Total number of out-of-service TSIs or ETSIs.

ff - Total number of failed TSIs or ETSIs.

pp - Total number of pested TSIs or ETSIs.

UTL, QRY, ALL, UNIT

QUERY ALL

Explanation Of Command

This command is used to request reports on the out-of-service, failed, or pested status of the entire DACS II frame, including the common frame equipment, or the equipment in a specific unit.

The text of the output message varies depending on the input message format and immediately follows the input format.

The UNIT option is specified to query that unit only. The UNIT field must be omitted if the command is used for the entire frame. If the UNIT option is specified, only the information related to the equipment in that unit will be generated.

Note: The odd and even DSPU NPCs do not have independent service states.

Note: The DS3U message segment applies to both the DS3 unit and the Hybrid DS3 unit (HDS3U). Also, the MXR portion of the message applies to both MXR and Hybrid MXR.

Command

[I.53101]

UTL:FRM xy,SEQ ww:QRY,ALL[,UNIT [q]q]!

Nonhierarchical

```

M hh:mm:ss xy,ww n[vv] UTL QRY ALL COMMON  4 LN MSG:
SYNC ofp rst CRO ofp
TLI ofp ofp ofp ofp  ofp ofp ofp ofp  rst rst rst rst  rst rst rst rst
      a  b  c  d      e  f  g  h      i  j  k  l      m  n  o  p  EOM

```

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL TOTAL ETSIS tt oo ff pp 5 LN MSG:
01 ofp rst 02 ofp rst 03 ofp rst 04 ofp rst
05 ofp rst 06 ofp rst 07 ofp rst 08 ofp rst
09 ofp rst 10 ofp rst 11 ofp rst 12 ofp rst
13 ofp rst 14 ofp rst 15 ofp rst 16 ofp rst EOM
```

If one or more FTU (IFTU or IFTU2) is equipped, the FTU segment shown below will be output:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL FTU 3 LN MSG:
UNIT [q]q UC ofp FTMI ofp ofp ofp ofp [CCB ofp rst]
FC ofp rst ofp rst ofp rst ofp rst EOM
```

If one or more DS3U or Hybrid DS3U is equipped, the DS3U or HDS3U segment shown below will be output:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL DS3U 3 LN MSG:
UNIT [q]q UC ofp FLI ofp rst FMT ofp rst [CCB ofp rst]
MXR ofp ofp ofp ofp ofp ofp ofp MIU ofp ofp ofp ofp ofp ofp EOM
```

If one or more DSPU is equipped, the DSPU segment shown below will be output:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q UC ofp DSPI ofp [CCB ofp rst] EOM
```

Then, the output message continues with information about individual NPCs. One output segment will be printed for each FTM, each MXR or HMXR, or each unit in the case of a DSPU.

If an equipped FTM has at least one NPC in the PEST, FAIL, or OOS state, the output segment for a DS1 FTM, shown below, will be generated. If any of the odd NPCs has been provisioned with a Digital Signal Processing Platform (DSPP) application (TG193), then the even NPC following it does not exist and dashes will be shown in its place:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL FTU NPCS [s]aaa-[t]bbb tt 5 LN MSG:
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp OOS oo FAIL ff PEST pp
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp EOM
```


If a DS3U MXR or Hybrid DS3U HMXR has at least one NPC in the PEST, FAIL, or OOS state, the output segment for a DS3U MXR or HDS3U HMXR, shown below, will be generated. Please note, if one or more DS2s in an HMXR have been provisioned with E1 NPCs, then the fourth NPC positions in those DS2s do not exist and will be represented by dashes in the output:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL DS3U NPCS [s]aaa-[t]bbb tt 5 LN MSG:
ofp ofp ofp ofp ofp ofp ofp OOS oo FAIL ff PEST pp
ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp EOM
```

If a DSPU has at least one NPC in the PEST, FAIL, or OOS state, the output segment for DSPU NPCs, shown below, will be generated:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL DSPU NPCS [s]aaa-[t]bbb 3 LN MSG:
[z]zzz ofp rst [z]zzz ofp rst [z]zzz ofp rst [z]zzz ofp rst
[z]zzz ofp rst [z]zzz ofp rst [z]zzz ofp rst [z]zzz ofp rst EOM
```

For an equipped FTM/MXR or HMXR/DSPU with no equipped NPC in PEST, FAIL and/or OOS state, the following output segment will be generated:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL {FTU|DS3U|DSPU} NPCS [s]aaa-[t]bbb tt 2 LN MSG:
OOS oo FAIL oo PEST oo EOM
```

If an FTM/MXR or HMXR/DSPU is not equipped or if it is equipped but has no NPCs equipped, the message segment for that FTM/MXR or HMXR/DSPU will not appear.

The following segment is output to complete the message:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL COMPL
```

The response to UTL::QRY,ALL,UNIT starts with:

For an FTU, IFTU, or IFTU2:

[O.53101]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL FTU UNIT [q]q 3 LN MSG:
UC ofp FTMI ofp ofp ofp ofp [CCB ofp rst]
FC ofp rst ofp rst ofp rst ofp rst EOM
```

This message will be followed by up to 4 of the following segments depending on the FTM equipage. If any of the odd NPCs has been provisioned with a Digital Signal Processing Platform (DSPP) application (TG193), then the even NPC following it does not exist and dashes will be shown in its place:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q FTU NPCS [s]aaa-[t]bbb tt 5 LN MSG:
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp 00S oo FAIL ff PEST pp
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp EOM
```

For a DS3U or HDS3U:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL DS3U UNIT [q]q 3 LN MSG:
UC ofp FLI ofp rst FMT ofp rst [CCB ofp rst]
MXR ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp EOM
```

This message is followed by up to 7 of the following segments depending on the MXR or HMXR equipage. Please note, if one or more DS2s in an HMXR have been provisioned with E1 NPCs, then the fourth NPC positions in those DS2s do not exist and will be represented by dashes in the output:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q DS3U NPCS [s]aaa-[t]bbb tt 5 LN MSG:
ofp ofp ofp ofp ofp ofp ofp ofp 00S oo FAIL ff PEST pp
ofp ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp ofp EOM
```

For a Digital Signal Processing Unit (DSPU):

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q UC opf DSPI opf [CCB opf rst] EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q DSPU NPCS [s]aaa-[t]bbb tt 3 LN MSG:
[z]zzz ofp rst [z]zzz ofp rst [z]zzz ofp rst [z]zzz ofp rst
[z]zzz ofp rst [z]zzz ofp rst [z]zzz ofp rst [z]zzz ofp rst EOM
```

For an equipped FTM/MXR or HMXR/DSPU with no equipped NPC in PEST, FAIL and/or OOS state, the following segment will be generated:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q {FTU|DS3U|DSPU} NPCS [s]aaa-[t]bbb
tt 2 LN MSG:
OOS 00 FAIL 00 PEST 00 EOM
```

If an FTM/MXR or HMXR/DSPU is not equipped or if it is equipped but has no NPCs equipped, the message segment for that FTM/MXR or HMXR/DSPU will not appear.

The following segment is output to complete the message:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q COMPL
```

Hierarchical

The response to UTL::QRY ALL starts with:

[O.53101]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL COMMON 4 LN MSG:
OOS g h i j k l m n o p
FAIL g h i j k l m n o p
PEST g h i j k l m n o p EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL COMMON 4 LN MSG:
SYNC ofp rst CRO ofp
TLI ofp ofp ofp ofp ofp ofp ofp ofp rst rst rst rst rst rst rst rst
a b c d e f g h i j k l m n o p EOM
```

For DACS II Non-CEF frames, the next segment describes the CCN hardware:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL TOTAL TSIS tt oo ff pp 5 LN MSG:
11 ofp rst 12 ofp rst 13 ofp rst 14 ofp rst 15 ofp rst 16 ofp rst
21 ofp rst 22 ofp rst 23 ofp rst 24 ofp rst 25 ofp rst 26 ofp rst
31 ofp rst 32 ofp rst 33 ofp rst 34 ofp rst 35 ofp rst 36 ofp rst
41 ofp rst 42 ofp rst 43 ofp rst 44 ofp rst 45 ofp rst 46 ofp rst EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL TOTAL TSIS tt oo ff pp 3 LN MSG:
51 ofp rst 52 ofp rst 53 ofp rst 54 ofp rst 55 ofp rst 56 ofp rst
61 ofp rst 62 ofp rst 63 ofp rst 64 ofp rst 65 ofp rst 66 ofp rst EOM
```

For DACS II CEF frames, the next segment describes the ECCN hardware:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL TOTAL ETSIS tt oo ff pp 5 LN MSG:
01 ofp rst 02 ofp rst 03 ofp rst 04 ofp rst
05 ofp rst 06 ofp rst 07 ofp rst 08 ofp rst
09 ofp rst 10 ofp rst 11 ofp rst 12 ofp rst
13 ofp rst 14 ofp rst 15 ofp rst 16 ofp rst EOM
```

The output then continues with segments about the common equipment in the units. One module will be generated per unit, in ascending order by number. The unit equipped for a given unit number determines the output segment printed.

The output segment for an FTU, IFTU, or IFTU2:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL FTU 3 LN MSG:
UNIT [q]q UC ofp FTMI ofp ofp ofp ofp [CCB ofp rst]
FC ofp rst ofp rst ofp rst ofp rst EOM
```

The output segment for a DS3 or HDS3 Unit:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL DS3U 3 LN MSG:
UNIT [q]q UC ofp FLI ofp rst FMT ofp rst [CCB ofp rst]
MXR ofp ofp ofp ofp ofp ofp ofp MIU ofp ofp ofp ofp ofp ofp EOM
```

The output segment for a DSPU:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q UC ofp DSPI ofp [CCB ofp rst] EOM
```

Then, the output continues with information about individual NPCs. One output message will be printed for each FTM (Facility Terminating Module), each MXR (Multiplexer) or Hybrid MXR, or each unit in the case of a DSPU.

The output segment for a DS1 FTM. If any of the odd NPCs has been provisioned with a Digital Signal Processing Platform (DSPP) application (TG193), then the even NPC following it does not exist and dashes will be shown in its place:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL FTU NPCS uvmnp-uxkqr tt 5 LN MSG:
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp 00S oo FAIL ff PEST pp
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp EOM
```

The output segment for NPCs of a DS3U MXR or HDS3U HMXR. Please note, if one or more DS2s in an HMXR have been provisioned with E1 NPCs, then the fourth NPC positions in those DS2s do not exist and will be represented by dashes in the output:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL DS3U NPCS uvmnp-uxkqr tt 5 LN MSG:
ofp ofp ofp ofp ofp ofp ofp ofp 00S oo FAIL ff PEST pp
ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp EOM
```

The output segment for NPCs of a DSPU:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL DSPU NPCS uvmnp-uxkqr 3 LN MSG:
uvmnp ofp rst uvmnp ofp rst uvmnp ofp rst uvmnp ofp rst
uvmnp ofp rst uvmnp ofp rst uvmnp ofp rst uvmnp ofp rst EOM
```

The output segment for an equipped FTM/MXR or HMXR/DSPU with no NPC in FAIL, PEST and/or OOS state:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL {FTU|DS3U|DSPU} NPCS uvmnp-uxkqr tt 2 LN MSG:
OOS 00 FAIL 00 PEST 00 EOM
```

If an FTM/MXR HMXR/DSPU is not equipped or if it is equipped but has no NPC equipped, then the message segment for that FTM will not appear.

The following segment is output to complete the message:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL COMPL
```

The response to UTL::QRY ALL UNIT starts with:

The output segment for an FTU, IFTU, or IFTU2:

[O.53101]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL FTU UNIT [q]q 3 LN MSG:
UC ofp FTMI ofp ofp ofp ofp [CCB ofp rst]
FC ofp rst ofp rst ofp rst ofp rst EOM
```

This message will be followed by up to 4 of the following segments depending on the FTM equipage. If any of the odd NPCs has been provisioned with a Digital Signal Processing Platform (DSPP) application (TG193), then the even NPC following it does not exist and dashes will be shown in its place:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL FTU NPCS uvmnp-uxkqr tt 5 LN MSG:
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp 00S oo FAIL ff PEST pp
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp ofp ofp ofp EOM
```

The output segment for a DS3U or a HDS3U:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL DS3U UNIT [q]q 3 LN MSG:
UC ofp FLI ofp rst FMT ofp rst [CCB ofp rst]
MXR ofp ofp ofp ofp ofp ofp ofp ofp MIU ofp ofp ofp ofp ofp ofp ofp EOM
```

This message is followed by up to 7 of the following segments depending on the MXR or HMXR equipage. Please note, if one or more DS2s in an HMXR have been provisioned with E1 NPCs, then the fourth NPC positions in those DS2s do not exist and will be represented by dashes in the output:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q DS3U NPCS uvmnp-uxkqr tt 5 LN MSG:
ofp ofp ofp ofp ofp ofp ofp ofp 00S oo FAIL ff PEST pp
ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp
ofp ofp ofp ofp ofp ofp ofp EOM
```

The output segment format for a DSPU:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q UC ofp DSPI ofp [CCB ofp rst] EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q DSPU NPCS uvmnp-uxkqr tt 3 LN MSG:
uvmnp ofp rst uvmnp ofp rst uvmnp ofp rst uvmnp ofp rst
uvmnp ofp rst uvmnp ofp rst uvmnp ofp rst uvmnp ofp rst EOM
```

The output segment for an equipped FTM/MXR or HMXR/DSPU with no NPC in FAIL, PEST and/or OOS state:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q {FTU|DS3U|DSPU} NPCS uvmnp-uxkqr
tt 2 LN MSG:
OOS 00 FAIL 00 PEST 00 EOM
```

If an FTM/MXR or HMXR/DSPU is not equipped or if it is equipped but has no NPC equipped, then the message segment for that FTM will not appear.

The following segment is output to complete the message:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q COMPL
```

Denial Message

[O.53101.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL UNIT [q]q COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

To aid referencing the parameters listed for a given message in a number of cases, the line containing the parameters is listed for those cases just before the explanation of that particular set of parameters is given.

ALL - All

UNIT - Unit

[q]q - Unit number (1 through 16)

The UNIT option is specified to query that unit. The UNIT field will be null when the command is used for the entire frame. If the UNIT option is specified, only the information related to the equipment in that unit will be generated.

OOS - Out of service

FAIL - Failed

PEST - Pested

For the OOS, FAIL and PEST keywords, variables g through p each represent a frame entity. The values of these variables give the OOS, FAIL, or PEST status of the associated entity. Values are interpreted using the table below. The entity associated with a given variable is given following the explanation of PEST below.

Value	OOS	FAIL	PEST
1	out-of-service	failed	pested
0	in service	not failed	unpested
-	not applicable	not applicable	not applicable

As shown above, a hyphen "-" indicates the parameter is not applicable to the particular entity. For example, an unequipped entity would display a "-" in the position of its OOS, FAIL and PEST indicators g through p.

The keyword PEST is used to indicate that error reporting is disabled. Out-of-service (OOS) entities and entities related to a side that is out of service are pested to prevent error messages from being reported to the main controller. Error reporting is undesirable if an entity is OOS since it would interrupt normal operations by repeatedly interrupting the microprocessor.


```
00S  g h i j k l m n o p          (message line for reference)
FAIL g h i j k l m n o p          "
PEST g h i j k l m n o p EOM      "
```

The DACS II entities and their status fields are as follows:

g - Link 1
h - Link 2
i - Link 3
j - Link 4
k - Link 5
l - Link 6
m - XC0 (Cross-Connect 0)
n - XC1 (Cross-Connect 1)
o - CCNI 0 (Cross-Connect Network Interface 0) NonCEF
p - CCNI 1 (Cross-Connect Network Interface 1) NonCEF
o - CCI 0 (Clock and Control Interface 0) CEF
p - CCI 1 (Clock and Control Interface 1) CEF

SYNC ofp rst CRO ofp (message line for reference)

SYNC - Synchronizer

ofp - Side 0 sync status
rst - Side 1 sync status
o, r - Out of service
f, s - Failed
p, t - Pested

CRO - Clock reference oscillator

ofp - CRO status
o - Out of service
f - Failed
p - Pested

To aid in interpreting the variables associated with the timing link interface, two lines from the message are printed below for reference. These lines have been marked with identifying information.

```
|<----- Side 0 ----->|<----- Side 1 ----->|
      TLI ofp ofp ofp ofp ofp ofp ofp ofp rst rst rst rst rst rst rst rst
      a b c d e f g h i j k l m n o p EOM
TLI No. 1 1 2 2 3 3 4 4 1 1 2 2 3 3 4 4
SSP No. 0 1 0 1 0 1 0 1 0 1 0 1 0 1 0 1
```

TLI - Timing link interface

ofp - Side 0 TLI status

o - Out of service
f - Failed
p - Pested

rst - Side 1 TLI status

r - Out of service
s - Failed
t - Pested

There are four TLIs in each synchronizer side and each TLI has two synchronizer synchronization ports (SSP) for a total of eight SSPs per side. Variables a through p represent these SSPs and are associated with each TLI as shown below. The values of a through p give the priority of each SSP as a synchronization source. Priorities range in value from 1 through 8 and are interpreted as shown below.

1 - Highest priority
8 - Lowest priority

a - TLI 1 SSP 0 priority
b - TLI 1 SSP 1 priority

c - TLI 2 SSP 0 priority
d - TLI 2 SSP 1 priority

e - TLI 3 SSP 0 priority
f - TLI 4 SSP 1 priority

g - TLI 4 SSP 0 priority
h - TLI 4 SSP 1 priority

i - TLI 1 SSP 0 priority
j - TLI 1 SSP 1 priority

k - TLI 2 SSP 0 priority
l - TLI 2 SSP 1 priority

m - TLI 3 SSP 0 priority
n - TLI 3 SSP 1 priority

o - TLI 4 SSP 0 priority
p - TLI 4 SSP 1 priority

UTL QRY ALL TOTAL TSIS tt oo ff pp (message line for reference)

UTL QRY ALL TOTAL ETSIS tt oo ff pp (message line for reference)

TOTAL - Total

TSIS - Time slot interchangers Non-CEF

ETSID - Expanded time slot interchangers CEF

tt - Total number of equipped TSIS or ETSIS

oo - Total number of equipped but out-of-service TSIS or ETSIS

ff - Total number of equipped but failed TSIS or ETSIS

pp - Total number of equipped but pested TSIS or ETSIS

The following lines are message lines for reference.

UNIT [q]q UC ofp FTMI ofp ofp ofp ofp [CCB ofp rst]

FTM number 1 2 3 4

FC ofp rst ofp rst ofp rst ofp rst EOM

FTM No. 1	1	2	2	3	3	4	4
Side No. 0	1	0	1	0	1	0	1

UC - Unit controller

FTMI - Facility terminating module interface

CCB - Cross-connect buffer Non-CEF

FC - Format converter

o, r - Out of service

f, s - Failed

p, t - Pested

The following line is a message line for reference.

UNIT [q]q UC ofp FLI ofp rst FMT ofp rst [CCB ofp rst]

FLI ID.	S	P		
FMT Side No.			0	1

FLI - Facility line interface

FMT - Formatter or Hybrid Formatter

ofp - Service (S) FLI

rst - Protection (P) FLI

o, r - Out of service

f, s - Failed

p, t - Pested

The following line is a message line for reference.

MXR	ofp	ofp	ofp	ofp	ofp	ofp	ofp	ofp	MIU	ofp	ofp	ofp	ofp	ofp	ofp	ofp	ofp
No.	P	1	2	3	4	5	6		P	1	2	3	4	5	6		

MIU - Multiplexer interface unit

MXR - Multiplexer or Hybrid Multiplexer (HMXR)

The MXRs or HMXRs and MIUs are identified below the reference message line. P stands for Protection.

FTU - Facility terminating unit

The term FTU represents the original facility terminating unit as well as the Integrated facility terminating units (IFTU or IFTU2) that have been delivered as part of a DACS II.

DS3U - DS3 unit or Hybrid DS3 unit

DSPU - Digital signal processing unit

UC ofp DSPI ofp [CCB ofp,rst] (message line for reference)

DSPI - Digital signal processing interface

ofp - UC, DSPI, and for non-CEFs, side 0 of the CCB

rst - for non-CEFs, side 1 of the CCB

o, r - Out of service

f, s - Failed

p, t - Pested

The following lines are message lines for reference.

[z]zzz ofp rst [z]zzz ofp rst [z]zzz ofp rst [z]zzz ofp rst EOM

uvmnp ofp rst uvmnp ofp rst uvmnp ofp rst uvmnp ofp rst EOM

ofp - Refers to side 0 DSPU NPC
rst - Refers to side 1 DSPU NPC

o, r - Out of service
f, s - Failed
p, t - Pested

[s]aaa - The first 3- or 4-digit nonhierarchical NPC number of an FTM, MXR, or DSPU

[t]bbb - The last 3- or 4-digit nonhierarchical NPC number of an FTM, MXR, or DSPU

[z]zzz - The 3- or 4-digit nonhierarchical DSPU NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261
 Unit 9	 Unit 10	 Unit 11	 Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
 Unit 13	 Unit 14	 Unit 15	 Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - The first hierarchical NPC number of an FTM, MXR, or DSPU
uxkqr - The last hierarchical NPC number of an FTM, MXR, or DSPU

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

MB, SR, and MJ type numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

- tt** - Total number of equipped NPCs
- oo** - Total number of equipped but out-of-service NPCs
- ff** - Total number of equipped but failed NPCs
- pp** - Total number of equipped but pested NPCs
- cc** - Hexadecimal condition code
- cc** *Explanation*
- 02** Subject entity is not equipped

UTL,QRY,ALM,DS3

QUERY DS3 ALARMS

Explanation Of Command

This command queries the state of the facility alarm on all DS3 and Hybrid DS3 facilities. In addition, if the respective bit has been enabled in Message 51011, this command generates an autonomous message and appends it to the midnight output message.

For Hybrid DS3 facilities the Remote Alarm Indications (RAI) that are carried by the X-bits of the DS3 signal are reported also.

Command

[I.56331]

UTL:FRM xy,SEQ ww:QRY,ALM,DS3!

Completion Message

This output message applies to DS3s in regular DS3 Units

[O.56331]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALM DS3 TOT ppp e LN MSG:
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai]
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai]
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai]
UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai {EOM|COMPL}
```

```
.....
.....
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY ALM DS3 TOT ppp e LN MSG:]
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai]
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai]
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai]
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai COMPL]
```

[O.56332]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALM DS3 TOT 000 COMPL
```

This output applies to DS3s in Hybrid DS3 Units.

[O.56333]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALM DS3 TOT ppp e LN MSG:
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair]
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair]
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair]
UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair {EOM|COMPL}
```

```
.....
.....
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY ALM DS3 TOT ppp e LN MSG:]
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair]
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair]
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair]
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair COMPL]
```

[O.56332]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALM DS3 TOT 000 COMPL
```

Denial Message

Not applicable.

Autonomous Message

This output message applies to DS3s in regular DS3 Units

[O.56331]

```
I hh:mm:ss xy,ww n[vv] UTL QRY ALM DS3 TOT ppp e LN MSG:
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai]
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai]
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai]
UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai {EOM|COMPL}
```

```
.....
.....
```

```
[I hh:mm:ss xy,ww n[vv] UTL QRY ALM DS3 TOT ppp e LN MSG:]
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai]
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai]
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai]
[UNIT [q]q xxlobai xxlobai xxlobai xxlobai xxlobai xxlobai COMPL]
```

[O.56332]

```
I hh:mm:ss xy,ww n[vv] UTL QRY ALM DS3 TOT 000 COMPL
```

This output applies to DS3s in Hybrid DS3 Units.

[O.56333]

```
I hh:mm:ss xy,ww n[vv] UTL QRY ALM DS3 TOT ppp e LN MSG:
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair]
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair]
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair]
UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair {EOM|COMPL}
```

```
.....
.....
```

```
[I hh:mm:ss xy,ww n[vv] UTL QRY ALM DS3 TOT ppp e LN MSG:]
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair]
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair]
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair]
[UNIT [q]q xxlobair xxlobair xxlobair xxlobair xxlobair xxlobair COMPL]
```

[O.56332]

```
I hh:mm:ss xy,ww n[vv] UTL QRY ALM DS3 TOT 000 COMPL
```

Explanation Of Parameters

ALM - Alarm

TOT - Total number of facilities reporting alarms

ppp - The total number of DS3 facilities in the output segment that are reporting critical and major facility alarms

UNIT - Unit

[q]q - Unit number (1 through 16)

LOS - Loss of signal

00F - Out of frame

BER - Bit error rate

AIS - Alarm indication signal

IDLE - Idle signal

RAI - Remote Alarm Indication (Hybrid DS3s only)

- xx** - The facility alarm status of the DS3:
 - CR** - Critical alarm
 - MJ** - Major alarm for RAI (Hybrid DS3s only)
 - - The DS3 is unequipped
 - ER** - Error (either the MMFG selected to serve the facility is Out of Service or In Service_Pested, or the FLI selected to serve the facility is In Service_Pested)
 - CL** - Clear (no alarm, no AIS or IDLE condition)
 - UX** - The unit is out of service, data unavailable
 - IN** - Informational alarm (either AIS or IDLE)

- l** - The loss of signal alarm status for a DS3 facility:
 - 0** - The loss of signal alarm is clear
 - 1** - The loss of signal alarm is active
 - - The xx field is either UX, ER or --

- o** - The out of frame alarm status for a DS3 facility:
 - 0** - The out of frame alarm is clear
 - 1** - The out of frame alarm is active
 - - The xx field is either UX, ER or --

- b** - The high bit error rate alarm status for a DS3 facility:
 - 0** - The high BER alarm is clear
 - 1** - The high BER alarm is active
 - - The xx field is either UX, ER or --

- a** - The alarm indication signal (AIS) alarm status for a DS3 facility:
 - 0** - The AIS alarm is clear
 - 1** - The AIS alarm is active
 - - The xx field is either UX, ER or --

- i** - The idle signal alarm status for a DS3 facility:
 - 0** - The idle signal alarm is clear
 - 1** - The idle signal alarm is active
 - - The xx field is either UX, ER or --

- r** - The Remote Alarm Indication (RAI) for a Hybrid DS3 facility:
 - 0** - The RAI alarm is clear
 - 1** - The RAI alarm is active
 - - The xx field is either CR, UX, ER, or --

- e** - Number of lines in each segment (2 to 5)

UTL, QRY, ALMOPT, NPC, AIS

UTILITY QUERY, ALARM OPTION, AIS

Explanation Of Command

This command requests alarm indication signal (AIS) information for one or more facility terminating unit (FTU/IFTU/IFTU2), DS3 unit (DS3U) or Hybrid DS3 Unit (HDS3U) network processing circuits. The range can cross the unit boundary, and the two NPCs entered can be from different types of units. This command is not applicable to digital signal processing unit (DSPU) NPCs. DSPU NPCs will be skipped in the output message if they are within the range.

Digital Signal Processing Platform (DSPP) NPCs and the even numbered NPCs immediately following the actual DSPP NPCs will be skipped in the output by using dashes if they are within the range of this command.

Command

Nonhierarchical

[I.56021]

UTL:FRM xy,SEQ ww:QRY,ALMOPT,NPC [s]abc[-[v]ghi],AIS!

Hierarchical

[I.56021]

UTL:FRM xy,SEQ ww:QRY,ALMOPT,NPC uvmnp[-wxkqr],AIS!

Completion Message

Nonhierarchical

[O.56021]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPCS [s]abc-[t]def AIS \  
TOT nnn e LN MSG:  
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt  
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt  
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt  
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPCS [u]jkl-[v]ghi AIS \  
TOT nnn e LN MSG:  
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt  
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt  
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt  
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt EOM
```

M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPCS [s]abc-[v]ghi AIS COMPL

Note: The above message applies to FTU, IFTU, or IFTU2 units.

[O.56022]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPCS [s]abc-[t]def AIS \  
TOT nnn e LN MSG:  
tttt tttt tttt tttt tttt tttt tttt  
tttt tttt tttt tttt tttt tttt tttt  
tttt tttt tttt tttt tttt tttt tttt  
tttt tttt tttt tttt tttt tttt tttt EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPCS [u]jkl-[v]ghi AIS \  
TOT nnn e LN MSG:  
tttt tttt tttt tttt tttt tttt tttt  
tttt tttt tttt tttt tttt tttt tttt  
tttt tttt tttt tttt tttt tttt tttt  
tttt tttt tttt tttt tttt tttt tttt EOM
```

M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPCS [s]abc-[v]ghi AIS COMPL

Note: The above message applies to DS3 or HDS3 units.

Hierarchical

[O.56021]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPCS uvmnp-defgh AIS \
TOT nnn e LN MSG:
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPCS ijklm-wxkqr AIS \
TOT nnn e LN MSG:
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt
tttt tttt tttt tttt tttt tttt tttt tttt tttt tttt EOM
```

M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPCS uvmnp-wxkqr AIS COMPL

Note: The above message applies to FTU, IFTU, or IFTU2 units.

[O.56022]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPCS uvmnp-defgh AIS \
TOT nnn e LN MSG:
tttt tttt tttt tttt tttt tttt tttt tttt
tttt tttt tttt tttt tttt tttt tttt tttt
tttt tttt tttt tttt tttt tttt tttt tttt
tttt tttt tttt tttt tttt tttt tttt tttt EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPCS ijklm-wxkqr AIS \
TOT nnn e LN MSG:
tttt tttt tttt tttt tttt tttt tttt tttt
tttt tttt tttt tttt tttt tttt tttt tttt
tttt tttt tttt tttt tttt tttt tttt tttt
tttt tttt tttt tttt tttt tttt tttt tttt EOM
```

M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPCS uvmnp-wxkqr AIS COMPL

Note: The above message applies to DS3 or HDS3 units.

Denial Message

Nonhierarchical

[O.56021.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPC [t]def[-[u]jkl] AIS \\
UEQD DNY

[O.56021.02]

M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPC [t]def[-[u]jkl] AIS \\
COND cc DNY

Hierarchical

[O.56021.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPC defgh[-ijklm] AIS UEQD DNY

[O.56021.02]

M hh:mm:ss xy,ww n[vv] UTL QRY ALMOPT NPC defgh[-ijklm] AIS \\
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ALMOPT - Alarm option

NPC - Network processing circuit

[s]abc - The 3- or 4-digit starting nonhierarchical NPC number

[v]ghi - The 3- or 4-digit ending nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Starting hierarchical NPC number
wxkqr - Ending hierarchical NPC number

uv,wx - Unit number
m,k - Module number
np,qr - NPC number within the module

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

[t]def - The 3- or 4-digit nonhierarchical NPC number ([s]abc through [u]jkl)

[u]jkl - The 3- or 4-digit nonhierarchical NPC number ([t]def through [v]ghi)

edfgh - Hierarchical NPC number (uvmnp through ijklm)

ijklm - Hierarchical NPC number (edfgh through wxqqr)

ed - Unit number (uv through wx)

f - Module number

gh - NPC number

e - Number of lines in message

The number of lines in the message depends on the number of equipped NPCs to be reported.

nnn - Total number of alarms

TOT - Total

tttt - AIS Alarm option programmed for the NPC

tttt *Explanation*

INFO Information message (for all domestic NPCs)

MJ Major alarm (for all domestic NPCs)

MN Minor alarm (for domestic non-SLC type NPCs)

-- Unequipped

Digital Signal Processing Platform NPCs that run applications will also cause dashes to be produced for **tttt**.

UEQD - Unequipped

cc - Hexadecimal condition code

cc *Explanation*

0B Invalid CEPT NPC

60 Selectable AIS not valid for specified NPC(s) type

61 All NPC(s) are either not valid or not grown

UTL,QRY,ALMS

UTILITY QUERY ALARMS

Explanation Of Command

This command reports the source of all alarms currently on the DACS II frame. For each entity that has been autonomously removed, the resulting alarm state is given.

If there are no alarms to report, a short line message is output indicating that the total number of alarms is **000**.

Note that the DS3U message segment applies to both the DS3 unit and the Hybrid DS3 unit (HDS3U). The MXR message applies to both MXR and Hybrid MXR.

Separate message segments will be shown for the "Alarm Severity - Intervention Level - Message Logging" feature as appropriate.

Command

[I.53111]

UTL:FRM xy,SEQ ww:QRY,ALMS!

Completion Message

Nonhierarchical

When there are no alarms active on the frame, the following output appears:

[O.53112]

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS TOTAL 000 COMPL

When there are alarms active on the frame, the following output appears:

The individual message segments are shown in the order they appear.
Explanatory text accompanies each message segment.

[O.53111]

1) The following segment appears only if the alarm severity, intervention level, and message logging features are present.

M hh:mm:ss xy,ww n[vv] Alarm Severity Feature is {ON|OFF}
M hh:mm:ss xy,ww n[vv] Intervention Level Feature is {ON|OFF}

2) Summary line showing status of CR, MJ, MN, MC, and PWR alarms.

**M hh:mm:ss xy,ww n[vv] UTL QRY ALMS SUMMARY CR t MJ u MN v **
MC w PWR z EOM

3) Summary line showing alarm status of the various power units within each FTU/IFTU/IFTU2/DSPU/DS3U, the Synchronizer, the Main Controller, and CCN/ECCN.

For DACS II NonCEF frames (CCN),

M hh:mm:ss xy,ww n[vv] UTL QRY PWR w w w w w w w w w w EOM

For DACS II CEF frames (ECCN),

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS PWR 2 LN MSG:
w w w w w w w w w w w w w w w w w w w w EOM

4) Summary line showing status of alarms on the main controller and switch complex (CCN/ECCN).

For both DACS II NonCEF and CEF frames (CCN and ECCN)

**M hh:mm:ss xy,ww n[vv] UTL QRY ALMS a b c d e f g h i j k l m **
n o p q r s EOM

For DACS II nonCEF and CEF frames (CCN and ECCN) **with** the alarm severity, intervention level, and message logging feature present.

```

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS a b c d e f g h i j k l m \
n o p q r s
                                     y - - - y - - - - - y \
y y y y y y
                                     z - - - z - - - - - z \
z z z z z z
                                     u - - - u - - - - - u \
u u u u u u EOM

```

5) Summary line showing synchronizer entities alarm status.

Without the alarm severity, intervention level, and message logging feature present.

```

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS 3 LN MSG:
SYNC x y CRO x
TLI a b c d e f g h a b c d e f g h EOM

```

With the alarm severity, intervention level, and message logging feature present.

```

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS 9 LN MSG:
SYNC x y CRO x
    y y      y
    z z      z
    u u      u
TLI a b c d e f g h a b c d e f g h
    y y y y y y y y y y y y y y
    z z z z z z z z z z z z z z
    u u u u u u u u u u u u u u EOM

```

6) Summary line showing cross-connect (CCN/ECCN) entity alarm status.

For DACS II NonCEF frames (CCN)

```

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS TOTAL TSIS tt nn 5 LN MSG:
ft x y ft x y ft x y ft x y ft x y ft x y
ft x y ft x y ft x y ft x y ft x y ft x y
ft x y ft x y ft x y ft x y ft x y ft x y
ft x y ft x y ft x y ft x y ft x y ft x y EOP

```

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS TOTAL TSIS tt nn 3 LN MSG:
ft x y ft x y ft x y ft x y ft x y ft x y
ft x y ft x y ft x y ft x y ft x y ft x y EOM

For DACS II CEF frames (ECCN)

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS TOTAL ETSIS tt nn 3 LN MSG:
01 x y 02 x y 03 x y 04 x y 05 x y 06 x y 07 x y 08 x y
09 x y 10 x y 11 x y 12 x y 13 x y 14 x y 15 x y 16 x y EOM

7) Alarm status of the common equipment within each unit, in unit number order (Only those units which are equipped will be shown in the output; for example, if only two units are equipped, only two data lines will appear).

For NonCEF frames:

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS e LN MSG:
<data line for first equipped unit>
<data line for second equipped unit>
<data line for third equipped unit>
<data line for fourth equipped unit>
EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS e LN MSG:
<data line for fifth equipped unit>
<data line for sixth equipped unit>
EOM

For CEF frames:

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS e LN MSG:
<data line for first equipped unit>
<data line for second equipped unit>
<data line for third equipped unit>
<data line for fourth equipped unit> EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS e LN MSG:
<data line for fifth equipped unit>
<data line for sixth equipped unit>
<data line for seventh equipped unit>
<data line for eighth equipped unit> EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS e LN MSG:
<data line for ninth equipped unit>
<data line for tenth equipped unit>
<data line for eleventh equipped unit>
<data line for twelfth equipped unit> EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS e LN MSG:
<data line for thirteenth equipped unit>
<data line for fourteenth equipped unit>
<data line for fifteenth equipped unit>
<data line for sixteenth equipped unit> EOM

Data Lines For Summary Alarm Information On A Unit (FTU/IFTU/IFTU2, DSPU, DS3U)

Data line for a unit equipped as an FTU/IFTU/IFTU2:

UNIT [q]q UC a FTMI b c d e FC f g h i j k l m[CCB r s][00S]

Data line for a unit equipped as a DS3U or a HDS3U:

UNIT [q]q UC a FLI b c FMT l m MXR d e f g h i j MIU n o p q u v w \
DU <aa> [CCB r s][00S]

Data line for a unit equipped as a DSPU:

UNIT [q]q UC a DSPI b [CCB r s][00S]

8) DS3 or HDS3U facility alarm segment (only shown if DS3 or HDS3 units are equipped and in alarm)

For NonCEF frames:

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS DS3 rr e LN MSG:
UNIT q y y y y y y ALMS gg
UNIT q y y y y y y
UNIT q y y y y y y
UNIT q y y y y y y EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS DS3 rr e LN MSG:
UNIT q y y y y y y ALMS gg
UNIT q y y y y y y EOM

For CEF frames:

Up to 4 five-line output segments can be printed, depending on the number of DS3 Units equipped (1-16).

9) RT alarm segment (only shown if RT is provisioned and in alarm)

[M hh:mm:ss xy,ww n[vv] UTL QRY ALMS {RT|DL} ffff x EOM]

10) NPC alarm data per unit (FTU/IFTU/IFTU2, DS3U, HDS3U, DSPU), shown in unit order (1,2,...). If a unit or module is unequipped or there are no NPC alarms, the corresponding message segment is skipped:

For a DS1 Facility Terminating Module (FTM) **without** the alarm severity, intervention level, and message logging feature present, or if present, with intervention levels turned off:

**M hh:mm:ss xy,ww n[vv] UTL QRY ALMS FTU NPCS [s]aaa-[t]bbb **
tt[00S] 5 LN MSG:
x x x x x x x x x x ALMS nn
x x x x x x x x x x
x x x x x x x x x x
x x x x x x x x x x EOM

Note: If Digital Signal Processing Platform (DSPP) NPCs, which are always odd, are provisioned within the FTU/IFTU/IFTU2, then the even NPCs immediately following those DSPP NPCs will appear as being unequipped. Therefore, these even NPCs will always be shown as dashes.

For a DS1 Facility Terminating Module (FTM) **with** the alarm severity, intervention level, and message logging feature present and intervention levels turned on:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS FTU NPCS [s]aaa-[t]bbb \
tt[ 00S]  5 LN MSG:
[s]ccc-[t]ddd
x x x x x  x x x x x
y y y y y  y y y y y
z z z z z  z z z z z
u u u u u  u u u u u
[s]ccc-[t]ddd
x x x x x  x x x x x
y y y y y  y y y y y
z z z z z  z z z z z
u u u u u  u u u u u
[s]ccc-[t]ddd
x x x x x  x x x x x
y y y y y  y y y y y
z z z z z  z z z z z
u u u u u  u u u u u
[s]ccc-[t]ddd
x x x x x  x x x x x
y y y y y  y y y y y
z z z z z  z z z z z
u u u u u  u u u u u
ALMS nn          EOM
```

Note: If Digital Signal Processing Platform (DSPP) NPCs, which are always odd, are provisioned within the FTU/IFTU/IFTU2, then the even NPCs immediately following those DSPP NPCs will appear as being unequipped. Therefore, these even NPCs will always be shown as dashes.

For a DS3 or a HDS3U module:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS DS3U NPCS [s]aaa-[t]bbb tt\
[ 00S]  5 LN MSG:
x x x x x x x ALMS nn
x x x x x x x
x x x x x x x
x x x x x x x EOM
```

For a DSPU:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS UNIT [q]q DSPU NPC\
[ 00S] 3 LN MSG:
[s]zzz x y [s]zzz x y [s]zzz x y [s]zzz x y ALMS nn
[s]zzz x y [s]zzz x y [s]zzz x y [s]zzz x y EOM
```

11) Completion line

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS COMPL
```

Hierarchical

When there are no alarms active on the frame, the following output appears:

[O.53112]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS TOTAL 000 COMPL
```

When there are alarms active on the frame, the following output appears:

The individual message segments are shown in the order they appear.
Explanatory text accompanies each message segment.

[O.53111]

1) The following segment appears only if the alarm severity, intervention level, and message logging features are present.

```
M hh:mm:ss xy,ww n[vv] Alarm Severity Feature is {ON|OFF}
M hh:mm:ss xy,ww n[vv] Intervention Level Feature is {ON|OFF}
```

2) Summary line showing status of CR, MJ, MN, MC, and PWR alarms.

**M hh:mm:ss xy,ww n[vv] UTL QRY ALMS SUMMARY CR t MJ u MN v **
MC w PWR z EOM

3) Summary line showing alarm status of the various power units within each FTU/IFTU/IFTU2/DSPU/DS3U, the Synchronizer, the Main Controller, and CCN/ECCN.

For DACS II NonCEF frames (CCN),

M hh:mm:ss xy,ww n[vv] UTL QRY PWR w w w w w w w w w w EOM

For DACS II CEF frames (ECCN),

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS PWR 2 LN MSG:
w w w w w w w w w w w w w w w w w w EOM

4) Summary line showing status of alarms on the main controller and switch complex (CCN/ECCN).

For both DACS II NonCEF and CEF frames (CCN and ECCN)

**M hh:mm:ss xy,ww n[vv] UTL QRY ALMS a b c d e f g h i j k l m **
n o p q r s EOM

For DACS II nonCEF and CEF frames (CCN and ECCN) with the alarm severity, intervention level, and message logging feature present.

**M hh:mm:ss xy,ww n[vv] UTL QRY ALMS a b c d e f g h i j k l m **
n o p q r s

	y - - - - y - - - - - y \
y y y y y y	
	z - - - - z - - - - - z \
z z z z z z	
	u - - - - u - - - - - u \
u u u u u u EOM	

5) Summary line showing synchronizer entities alarm status.

Without the alarm severity, intervention level, and message logging feature present.

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS 3 LN MSG:
SYNC x y CRO x
TLI a b c d e f g h a b c d e f g h EOM
```

With the alarm severity, intervention level, and message logging feature present.

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS 9 LN MSG:
SYNC x y CRO x
      y y      y
      z z      z
      u u      u
TLI a b c d e f g h a b c d e f g h
    y y y y y y y y y y y y y y
    z z z z z z z z z z z z z z
    u u u u u u u u u u u u u u EOM
```

6) Summary line showing cross-connect (CCN/ECCN) entity alarm status.

For DACS II NonCEF frames (CCN)

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS TOTAL TSIS tt nn 5 LN MSG:
ft x y ft x y ft x y ft x y ft x y ft x y
ft x y ft x y ft x y ft x y ft x y ft x y
ft x y ft x y ft x y ft x y ft x y ft x y
ft x y ft x y ft x y ft x y ft x y ft x y EOP

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS TOTAL TSIS tt nn 3 LN MSG:
ft x y ft x y ft x y ft x y ft x y ft x y
ft x y ft x y ft x y ft x y ft x y ft x y EOM
```

For DACS II CEF frames (ECCN)

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS TOTAL ETSIS tt nn 3 LN MSG:
01 x y 02 x y 03 x y 04 x y 05 x y 06 x y 07 x y 08 x y
09 x y 10 x y 11 x y 12 x y 13 x y 14 x y 15 x y 16 x y EOM
```

7) Alarm status of the common equipment within each unit, in unit number order (Only those units which are equipped will be shown in the output; for example, if only two units are equipped, only two data lines will appear).

For NonCEF frames:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS e LN MSG:
<data line for first  equipped unit>
<data line for second equipped unit>
<data line for third  equipped unit>
<data line for fourth equipped unit>
EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS e LN MSG:
<data line for fifth equipped unit>
<data line for sixth equipped unit>
EOM
```

For CEF frames:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS e LN MSG:
<data line for first  equipped unit>
<data line for second equipped unit>
<data line for third  equipped unit>
<data line for fourth equipped unit> EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS e LN MSG:
<data line for fifth  equipped unit>
<data line for sixth  equipped unit>
<data line for seventh equipped unit>
<data line for eighth equipped unit> EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS e LN MSG:
<data line for ninth   equipped unit>
<data line for tenth   equipped unit>
<data line for eleventh equipped unit>
<data line for twelfth equipped unit> EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS e LN MSG:
<data line for thirteenth equipped unit>
<data line for fourteenth equipped unit>
<data line for fifteenth  equipped unit>
<data line for sixteenth  equipped unit> EOM
```

Data Lines For Summary Alarm Information On A Unit (FTU/IFTU/IFTU2, DSPU, DS3U)

Data line for a unit equipped as an FTU/IFTU/IFTU2:

UNIT [q]q UC a FTMI b c d e FC f g h i j k l m[CCB r s][00S]

Data line for a unit equipped as a DS3U or a HDS3U:

**UNIT [q]q UC a FLI b c FMT l m MXR d e f g h i j MIU n o p q u v w **
DU <aa> [CCB r s][00S]

Data line for a unit equipped as a DSPU:

UNIT [q]q UC a DSPI b [CCB r s][00S]

8) DS3 or HDS3U facility alarm segment (only shown if DS3 or HDS3 units are equipped and in alarm)

For NonCEF frames:

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS DS3 rr e LN MSG:
UNIT q y y y y y y ALMS gg
UNIT q y y y y y y
UNIT q y y y y y y
UNIT q y y y y y y EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS DS3 rr e LN MSG:
UNIT q y y y y y y ALMS gg
UNIT q y y y y y y EOM

For CEF frames:

Up to 4 five-line output segments can be printed, depending on the number of DS3 Units equipped (1-16).

9) RT alarm segment (only shown if RT is provisioned and in alarm)

[M hh:mm:ss xy,ww n[vv] UTL QRY ALMS {RT|DL} ffff x EOM]

10) NPC alarm data per unit (FTU/IFTU/IFTU2, DS3U, HDS3U, DSPU), shown in unit order (1,2,...). If a unit or module is unequipped or there are no NPC alarms, the corresponding message segment is skipped:

For a DS1 Facility Terminating Module (FTM) **without** the alarm severity, intervention level, and message logging feature present, or if present, with intervention levels turned off:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS FTU NPCS uvmnp-wxkqr tt\  
[ 00S] 5 LN MSG:  
x x x x x x x x x x ALMS nn  
x x x x x x x x x x  
x x x x x x x x x x  
x x x x x x x x x x EOM
```

Note: If Digital Signal Processing Platform (DSPP) NPCs, which are always odd, are provisioned within the FTU/IFTU/IFTU2, then the even NPCs immediately following those DSPP NPCs will appear as being unequipped. Therefore, these even NPCs will always be shown as dashes.

For a DS1 Facility Terminating Module (FTM) **with** the alarm severity, intervention level, and message logging feature present and intervention levels turned on:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS FTU NPCS uvmnp-wxkqr tt\  
[ 00S] 5 LN MSG:  
uvmnp-wxkqr  
x x x x x x x x x x  
y y y y y y y y y y  
z z z z z z z z z z  
u u u u u u u u u u  
uvmnp-wxkqr  
x x x x x x x x x x  
y y y y y y y y y y  
z z z z z z z z z z  
u u u u u u u u u u  
uvmnp-wxkqr  
x x x x x x x x x x  
y y y y y y y y y y  
z z z z z z z z z z  
u u u u u u u u u u  
uvmnp-wxkqr  
x x x x x x x x x x  
y y y y y y y y y y  
z z z z z z z z z z  
u u u u u u u u u u  
ALMS nn EOM
```


Note: If Digital Signal Processing Platform (DSPP) NPCs, which are always odd, are provisioned within the FTU/IFTU/IFTU2, then the even NPCs immediately following those DSPP NPCs will appear as being unequipped. Therefore, these even NPCs will always be shown as dashes.

For a DS3 or a HDS3U module:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS DS3U NPCS uvmnp-wxkqr tt\  
[ 00S] 5 LN MSG:  
x x x x x x x ALMS nn  
x x x x x x x  
x x x x x x x  
x x x x x x x EOM
```

For a DSPU:

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS UNIT [q]q DSPU NPCS\  
[ 00S] 3 LN MSG:  
uvmnp x y uvmnp x y uvmnp x y uvmnp x y ALMS nn  
uvmnp x y uvmnp x y uvmnp x y uvmnp x y EOM
```

11) Completion line

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS COMPL
```

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

To aid referencing the parameters listed for a given message, the line containing the parameters is listed below just before the explanation of that particular set of parameters is given.

The DACS II frame alarm state summary is given at the beginning of the alarm report for these variables:

CR t MJ u MN v MC w PWR z

CR - Critical

t - Critical alarm status

MJ - Major

u - Major alarm status

MN - Minor

v - Minor alarm status

MC - Main controller

w - Main controller alarm status

PWR - Power

z - Power alarm status

The value of variables t, u, v, w, and z determines the alarm status. These values and their meaning are given below for t through z.

t-z Status

1 Active

0 Not Active

w - Power failure indicator

Each *w* in the output message corresponds to a particular power unit in the frame. The *w*'s are numbered from left to right beginning with 1. If the frame is a non-CEF frame, the *w*'s will end with 10. If the frame is a CEF, the *w*'s will end with 20.

Determine the number associated with the *w* of interest then use the table below to determine the affected power unit.

The value of *w* determines the status of the power unit

<i>w</i>	<i>Power unit status</i>
M	Power failure (Major)
-	No power failure
1	Power unit of unit 1
2	Power unit of unit 2
3	Power unit of unit 3
4	Power unit of unit 4
5	Power unit of unit 5
6	Power unit of unit 6
7	Synchronizer (SYNC) 0
8	SYNC 1
9	Cross-Connect Network (CCN or ECCN) 0
10	CCN or ECCN 1

For CEF frames,

11	power unit of unit 7
12	power unit of unit 8
13	power unit of unit 9
14	power unit of unit 10
15	power unit of unit 11
16	power unit of unit 12
17	power unit of unit 13
18	power unit of unit 14
19	power unit of unit 15
20	power unit of unit 16

ALMS a b c d e f g h i j k l m n o p q r s

x - Alarm Severity

x	<i>Explanation</i>
a	Autonomously removed
-	Does not apply, or part of a larger failure group
*	Minor alarm
M	Major alarm
C	Critical alarm

The following y,z,and u parameters are printed only if the Intervention Level feature is ON.

y -Intervention level setting(1-6)

z -Intervention Level

z *Intervention Level*

I IMA (Immediate Maintenance Action)

D DMA(Deferred Maintenance Action

N NI(No Intervention)

- Not applicable

u - New Individual Alarm Status effected by Intervention Level

- *No alarm or unprovisioned*

I Information

M Major alarm

C Critical

ALMS - Alarms

Each of the letters a through s following the keyword ALMS represents an entity in the DACS II frame. The entities are listed following this paragraph by the letter used to represent them. The values these letters assume give the alarm status of the particular entity. These values are listed immediately following the entity listing. Some entities do not use the full range of values but their values are separately described in the list of entities.

- a** - MC (Main controller)
- b** - MP (Main processor)
- c** - CI/ECI (Communications interface)
- d** - SCC (Secondary source controller)
- e** - PMEM
- f** - SMEM
- g** - Link 1
- h** - Link 2
- i** - Link 3
- j** - Link 4
- k** - Link 5
- l** - Link 6
- m** - XC0 (Cross-Connect 0)
- n** - XC1 (Cross-Connect 1)
- o** - CCNI 0 (Cross-Connect Network Interface 0 for NonCEF frame)
CCI 0 (Clock and Control Interface 0 for CEF frame)
- p** - CCNI 1 (Cross-Connect Network Interface 1 for NonCEF frame)
CCI 1 (Clock and Control Interface 1 for CEF frame)
- q** - TOD (Time of Day) reset
- r** - DATE (Time of Day) reset
- s** - SMEM OOS

Value *Explanation*

- a** Autonomously removed
- Does not apply, or part of a larger failure group
- *** Minor alarm
- M** Major alarm
- C** Critical alarm
- I** Information

"I" reports maintenance information for E1 signals. This state exists for the conditions listed below:

- AIS - Alarm indication signal
- RAI - Remote alarm indication
- RBERR - Remote bit error rate indication
- RAIS - Remote alarm indication signal
- SFI - Synchronization failure indication
- A16 - AIS in CTS 16
- R16 - RAI in CTS 16

The value "I" will appear in reports for E1s where performance monitoring thresholds have been exceeded if those thresholds were provisioned at the maintenance information (MI) level.

The value "*" will appear in reports of a BER alarm on CEPT NPCs (E1s), in addition to reporting all the minor alarm conditions supported in previous releases.

If the embedded signals within a DS3 or a Hybrid DS3 signal are in AIS (Alarm Indication Signal), then an "I" is shown for that signal. In addition, when the entire DS3 or Hybrid DS3 is receiving AIS the embedded DS1 and E1 signals will show an "I".

Where a failure group includes more than one circuit pack and individual circuit pack information is available, the character "a" will be used to indicate removal or attempted removal of that pack.

A hyphen (-) indicates the alarm state is not applicable to the particular circuit. For example, an unequipped circuit would display a "-" in its status field.

DS3U/HDS3U equipment entities:

Failure of a circuit pack might set the alarm bits of related circuit packs. Alarm bits a through s will be set according to the following rules.

- All DS3 or HDS3U circuit pack entities can be in either state "a" or "-".
- A multiplexer-multiplexer interface unit functional group (MMFG) or an incoming DS3 signal failure will put the associated NPCs in the state "-".
- A failure of a multiplexer (MXR) will not cause the multiplexer interface unit (MIU) pair to be marked "a", even though the failure may cause the attempt to remove that MIU. If only the MXR fails, the MIU will still be in state "-".
- A failure of an MIU will not cause the MXR pair to be marked "a", even though the failure may cause the attempt to remove that MXR. If only the MIU fails, the MXR will still be in state "-".
- A manual removal of a DS3 facility will remove any alarm that might exist on its associated MXR/HMXR or MIU.
- Because of protection switching in the DS3U or HDS3U, autonomous removal indications (a) for DS3U or HDS3U circuit packs are preserved across a frame boot. The boot operation is required to configure the unit to the protection state maintained in the data base. Data base consistency requires preservation of the "a" state.

SLC carrier equipment entities:

Alarm bits a through s will be set according to the following rules.

- Because of protection switching for SLC carrier NPCs, an autonomous removal of a SLC carrier NPC is preserved across a frame boot. The boot operation is required to configure SLC carrier circuits to the protection state maintained in the data base. Data base consistency requires preservation of the "a" state.

SYNC x y

SYNC - Synchronizer

x - Side 0 alarm status of the synchronizer

y - Side 1 alarm status of the synchronizer

x *Explanation*

a Autonomously removed

- Does not apply, or part of a larger failure group

***** Minor alarm

M Major alarm

C Critical alarm

CRO - Clock reference oscillator

x - Side 0 alarm status of the oscillator

x *Explanation*

a Autonomously removed

- Does not apply, or part of a larger failure group

***** Minor alarm

M Major alarm

C Critical alarm

TLI **a b c d e f g h** **a b c d e f g h**

TLI - Timing link interface

a - TLI 1 or Synchronizer sync port (SSP) 0 of TLI 1 side 0
b - SSP 1 of TLI 1 side 0
c - TLI 2 or SSP 0 of TLI 2 side 0
d - SSP 1 of TLI 2 side 0
e - TLI 3 or SSP 0 of TLI 3 side 0
f - SSP 1 of TLI 3 side 0
g - TLI 4 or SSP 0 of TLI 4 side 0
h - SSP 1 of TLI 4 side 0

a - TLI 1 or SSP 0 of TLI 1 side 1
b - SSP 1 of TLI 1 side 1
c - TLI 2 or SSP 0 of TLI 2 side 1
d - SSP 1 of TLI 2 side 1
e - TLI 3 or SSP 0 of TLI 3 side 1
f - SSP 1 of TLI 3 side 1
g - TLI 4 or SSP 0 of TLI 4 side 1
h - SSP 1 of TLI 4 side 1

See the ALMS section given previously for the alarm status values.

For NonCEF frames only:

TSIS tt nn

TSIS - Time slot interchangers

tt - Total No. of equipped TSIs (1-36)
nn - Total No. of alarming TSIs (0-36)
ft - Unit numbers
f - FROM unit number (1-6)
t - TO unit number (1-6)

x - Side 0 alarm status of the TSI
y - Side 1 alarm status of the TSI

Variables x and y can assume one of the two alarm status values given below.

a *Autonomously removed*
- Does not apply, or part of a larger failure group
***** Minor alarm
M Major alarm
C Critical alarm

For CEF frames only:

ETSttn

ETSt - Expanded time slot interchangers

tt - Total No. of equipped ETSts (01 through 32)

nn - Total No. of alarming ETSts (01 through 32)

UNIT [q]q UC a FTMI b c d e FC f g h i j k l m [CCB r s] [OOS]

UNIT - Unit

[q]q - Unit number (1 through 16)

UC - Unit controller

a - UC status

The UC status values are the same as those given previously for entities a through s in the explanation of ALMS. This table follows the explanation of variable s.

FTMI b c d e

FTMI - Facility terminating module interface

b - Status for FTMI 1 of specified unit

c - Status for FTMI 2 of specified unit

d - Status for FTMI 3 of specified unit

e - Status for FTMI 4 of specified unit

See the ALMS section given previously for the alarm status values.

FC f g h i j k l m

FC - Format converter

f - Status for FC 01 of specified FTU

g - Status for FC 11 of specified FTU

h - Status for FC 02 of specified FTU

i - Status for FC 12 of specified FTU

j - Status for FC 03 of specified FTU

k - Status for FC 13 of specified FTU

l - Status for FC 04 of specified FTU

m - Status for FC 14 of specified FTU

See the ALMS section given previously for the alarm status values.

For NonCEF frames only:

CCB r s

CCB - Cross-connect buffer

r - Status for CCB 0q in CCN 0 for specified unit q

s - Status for CCB 1q in CCN 1 for specified unit q

See the ALMS section given previously for the alarm status values.

OOS - Out-of-Service

The OOS state applies to the Unit Controller.

FMT l m

FMT - Formatter

l - Status for FMT 0 of specified DS3 unit or HDS3 unit

m - Status for FMT 1 of specified DS3 unit or HDS3 unit

See the ALMS section given previously for the alarm status values.

FLI b c

FLI - Facility line interface

b - Status for service FLI of specified DS3 or HDS3 unit

c - Status for protection FLI of specified DS3 or HDS3 unit

See the ALMS section given previously for the alarm status values.

MXR d e f g h i j

MXR - Multiplexer

d - Status for protection MXR of specified DS3 or HDS3 unit

e - Status for MXR 1 of specified DS3 or HDS3 unit

f - Status for MXR 2 of specified DS3 or HDS3 unit

g - Status for MXR 3 of specified DS3 or HDS3 unit

h - Status for MXR 4 of specified DS3 or HDS3 unit

i - Status for MXR 5 of specified DS3 or HDS3 unit

j - Status for MXR 6 of specified DS3 or HDS3 unit

See the ALMS section given previously for the alarm status values.

MIU n o p q u v w

MIU - Multiple interface unit

- n** - Status for protection MIU of specified DS3 or HDS3 unit
- o** - Status for MIU 1 of specified DS3 or HDS3 unit
- p** - Status for MIU 2 of specified DS3 or HDS3 unit
- q** - Status for MIU 3 of specified DS3 or HDS3 unit
- u** - Status for MIU 4 of specified DS3 or HDS3 unit
- v** - Status for MIU 5 of specified DS3 or HDS3 unit
- w** - Status for MIU 6 of specified DS3 or HDS3 unit

See the ALMS section given previously for the alarm status values.

DSPI b

DSPI - Digital signal processing interface

- b** - Status for DSPI (digital signal processing interface) of specified DSPU

See the ALMS section given previously for the alarm status values.

DU DS3 or HDS3 Unprotected Alarm

- aa** - Status of alarm

See the ALMS section given previously for the alarm status values.

DS3 or HDS3 FACILITY ALARMS

ALMS DS3 rr

DS3 - Digital signal 3 (44.736 Mb/s rate)

- rr** - Total number of **equipped** DS3 or HDS3 facilities in the frame
 - NonCEF (01 through 36)
 - CEF (01 through 96)

UNIT [q]q y y y y y ALMS gg

UNIT - Unit

[q]q - Unit number (1 through 16)

y - DS3 facility alarm status.

The DS3 facility will be in a critical alarm if the incoming facility is in LOS, OOF, or BER. The DS3 facility will be in a major alarm if the incoming facility has a Remote Alarm Indication (RAI). There will be an informational "I" alarm, if AIS is received on the DS3 facility.

gg - Total number of alarming DS3 facilities in the frame

NonCEF (01 through 36)

CEF (01 through 96)

SLC CARRIER ALARMS

ffff - RT or DCLU Bank Identification Number (0000 through 9999)

x - Status of RT or DCLU alarm

See the ALMS section given previously for the alarm status values.

FOR FTU AND DS3U/HDS3U NPC ALARM DATA LINES

[s]aaa - The 3- or 4-digit nonhierarchical number of the first NPC in the module

[t]bbb - The 3- or 4-digit nonhierarchical number of the last NPC in the module

[s]ccc - The 3- or 4-digit nonhierarchical number of the last NPC in the module

[t]ddd - The 3- or 4-digit nonhierarchical number of the last NPC in the module

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Hierarchical number of the first NPC in the module
wxkqr - Hierarchical number of the last NPC in the module

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

Valid values are listed below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

SR and MJ NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

tt - Total number of equipped NPCs

01 through 40

nn - Total number of alarming NPCs

01 through 40

FOR DSPU NPC ALARM DATA LINE

[s]zzz - The 3- or 4-digit nonhierarchical DSPU NPC number

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

If NPC numbers are expressed in three digits, the valid values are:

SR and MJ type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

SR and MJ type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

UTL,QRY,ALMS,DBASE

UTILITY QUERY ALARMS

Explanation Of Command

This message reports the following alarms:

- Critical frame alarms caused by duplex failures.
- Failed or out-of-service alarms for the FTU/IFTU/IFTU2 NPCs. This includes Digital Signal Processing Platform (DSPP) NPCs.

Command

[I.53151]

UTL:FRM xy,SEQ ww:QRY,ALMS,DBASE!

Completion Message

Nonhierarchical

[O.53151]

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS c EOM

[M hh:mm:ss xy,ww n[vv] UTL QRY ALMS CB NPC BOFL 2 LN MSG:]
[[s]ghi [s]ghi [s]ghi [s]ghi [s]ghi [s]ghi [s]ghi [s]ghi EOM]

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS FTU NPC A00S e LN MSG:
[s]abc [s]abc [s]abc [s]abc [s]abc [s]abc [s]abc [s]abc

.
[s]abc [s]abc [s]abc [s]abc [s]abc [s]abc [s]abc [s]abc EOM

.
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS FTU NPC A00S e LN MSG:
[s]abc [s]abc [s]abc [s]abc [s]abc [s]abc [s]abc [s]abc

.
[s]abc [s]abc [s]abc [s]abc [s]abc [s]abc [s]abc [s]abc EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS CGA [s]abc k[l[m[...]]] EOM

.
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS CGA [t]def k[l[m[...]]] EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS NPC [s]abc[PBA k[l[m[...]]] \\
[TS0 abcdefgh] EOM

.
M hh:mm:ss xy,ww n[vv] UTL QRY ALMS NPC [t]def[PBA k[l[m[...]]] \\
[TS0 abcdefgh] EOM

M hh:mm:ss xy,mm n[vv] UTL QRY ALMS DBASE COMPL

Hierarchical

[O.53151]

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS c EOM

[M hh:mm:ss xy,ww n[vv] UTL QRY ALMS CB NPC BOFL 2 LN MSG:]

[edfgh edfgh edfgh edfgh edfgh edfgh edfgh EOM]

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS FTU NPC A00S e LN MSG:

uvmnp uvmnp uvmnp uvmnp uvmnp uvmnp uvmnp

.

.

uvmnp uvmnp uvmnp uvmnp uvmnp uvmnp uvmnp EOM

.

.

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS FTU NPC A00S e LN MSG:

uvmnp uvmnp uvmnp uvmnp uvmnp uvmnp uvmnp

.

.

uvmnp uvmnp uvmnp uvmnp uvmnp uvmnp uvmnp EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS CGA uvmnp k[l[m]...] EOM

.

.

.

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS CGA wxkqr k[l[m]...] EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS NPC uvmnp[PBA k[l[m]...]] \

[TS0 abcdefgh] EOM

.

.

.

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS NPC wxkqr[PBA k[l[m]...]] \

[TS0 abcdefgh] EOM

M hh:mm:ss xy,mm n[vv] UTL QRY ALMS DBASE COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

ALM(S) - Alarm(s)

DBASE - Data base

Used to provide the output necessary to verify data base coherence between DACS II and the DACS controller.

c - Duplex frame alarm status

c Explanation

1 Duplex frame alarm

0 No Duplex frame alarm

NPC - Network processing circuit

e - Number of lines in message (from 1 to 5 lines)

FTU - Facility terminating unit

Only alarmed FTU NPCs (including DSPP NPCs) will be reported. Hence the number of NPCs in the message and the number of lines will be variable.

[s]abc, [t]def

- The 3- or 4-digit nonhierarchical NPC numbers.

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-031	NPC 161-191	NPC 321-351	NPC 481-511	NPC 641-671	NPC 801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0031	NPC 0161-0191	NPC 0321-0351	NPC 0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Hierarchical FTU NPC number
wxkqr - Hierarchical FTU NPC number

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

The values are:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

BOFL - Buffer overflow

A00S - Autonomous out-of-service (autonomous removal)

CGA - Carrier group alarm

k, l, m, . . .
- Representation for multiple alarms

k, l, or m (CGA) Explanation

A	AIS - Alarm Indication Signal; also known as All Ones Signal or Blue Signal
B	Both - Yellow and Red (Note: B is valid only for SLC® Series 5 NPCs)
L	LMA - Local Multiframe Alarm
M	RMA - Remote Multiframe Alarm

R	Red
Y	Yellow

UTL, QRY, ALMS, RT, DL

UTILITY QUERY ALARMS

Explanation Of Command

This message retrieves the information of non-digroup-associated alarm(s) declared for a SLC® carrier remote terminal. Two completion output formats, O.53141 and O.53142, are employed for this message. Message O.53141 is used to present SLC® Series 5 carrier Feature Package C (FPC) related alarms, and message O.53142 is used for SLC 96 carrier-related alarms.

Command

[I.53141]

UTL:FRM xy,SEQ ww:QRY,ALMS,{RT|DL} ffff!

Completion Message

[O.53141]

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS {RT|DL} ffff MD g[g] 3 LN MSG:
DLF MISC1 MISC2 PWR COMP EEPROM RGF {RT|DL}
tuu uu uu uu uu uu uu uu COMPL

[O.53142]

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS {RT|DL} ffff MD g[g][SWMN x] 3 LN MSG:
PWR MISC {RT|DL}
uu uu uu COMPL

Denial Message

[O.53141.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ALMS {RT|DL} ffff[MD g[g]] \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ALMS - Alarm

RT - Remote terminal

DL - Digital carrier line unit (DCLU)

ffff - Remote Terminal ID number (0000 through 9999)

MD - Mode

g[g] - Operation Mode of a SLC® carrier bank

g[g]	Explanation
1	SLC 96 carrier Mode 1
3	SLC 96 carrier Mode 3
C	SLC Series 5 carrier FPC

DLF - Data link failure

tuu - DLF states

tuu	Explanation
AMN	DLF on Digroup A causes minor alarm
PMN	DLF on Digroup P causes minor alarm
---	No DLF

MISC1 - Miscellaneous alarm 1

MISC2 - Miscellaneous alarm 2

PWR - Power alarm

COMP - Compatibility alarm

EEPROM - EEPROM Alarm

RGF - Ringing generator failure

uu - States for other alarms

uu *Explanation*

MJ Major alarm

MN Minor alarm

MM Major alarm and Minor alarm coexisting

-- No alarm

SWMN - Protection switch related minor alarm

x - Protection switch related minor alarm handling setting

x Explanation

R Declare locally and send MN via data link to the DCLU

L Declare locally only

cc - Hexadecimal condition code

cc *Explanation*

11 UC is out of service

12 UC is in service but failed

7E Bank id number not found

FA The mode of the RT is not applicable

UTL,QRY,APPL,NPC,ALL

RETRIEVE CROSS-CONNECT INFORMATION BETWEEN PLATFORM APPLICATIONS

Explanation Of Command

This command retrieves the cross-connect information between platform application cards either for all application cards grown in the frame or for an individual application card.

The output message identifies:

1. The pseudo channel number for an individual connection that is used in the application-to-application cross-connect commands to identify the connection.
2. The NPC number and application assigned channel number for the first (FROM) application that is part of the connection.
3. The NPC number and application assigned channel number for the second (TO) application if available that is part of the connection.
4. The status of the connection, which is either:
 - fully connected, or
 - reserved.

A reserved connection can be identified by the missing channel number for the application that has not yet requested the connection or the application that has already disconnected the connection. A missing channel number is represented by "---".

Pseudo channel numbers are not real channel numbers; instead, they identify table entries in DACS II that contain the pairs of application channels that are cross-connected to each other. Each cross-connection between application card channels has a unique pseudo channel number that identifies it. Cross-connections between application cards are established by using the NPC number of the other application card that the first application card expects to be cross-connected to and the pseudo channel number. A command to each of the two applications referring to the other application in the command is required. DACS II matches the requests from the two applications that have requested to be cross-

connected by matching the pseudo channel numbers in both requests. For further information, see the manual(s) for the application(s) that you are using.

A cross-connection between applications is considered to be in the "reserved" state if at the time of executing this utility

1. only one application has made a request for the connection, or
2. one of the applications has already disconnected, but the other has not.

An actual physical cross-connect is only made when both applications have made matching requests. Also, the physical cross-connection between applications is taken down when the first of the two applications issues a disconnect command.

Command

Nonhierarchical

[I.51201]

UTL:[FRM xy,SEQ ww]:QRY,APPL,{NPC [s]abc|ALL}!

Hierarchical

[I.51201]

UTL:[FRM xy,SEQ ww]:QRY,APPL,{NPC uvmp|ALL}!

Completion Message

Nonhierarchical

[O.51201]

M hh:mm:ss xy,ww n[vv] UTL QRY APPL {NPC [s]abc|ALL} e LN MSG:

PCHAN APPL1 CHAN1 APPL2 CHAN2

ddd [s]abc eee [v]ghi jjj

.

.

ddd [s]abc eee [v]ghi jjj EOM

.

.

M hh:mm:ss xy,ww n[vv] UTL QRY APPL {NPC [s]abc|ALL} e LN MSG:

PCHAN APPL1 CHAN1 APPL2 CHAN2

ddd [s]abc eee [v]ghi jjj

.

.

ddd [s]abc eee [v]ghi jjj

UTL QRY APPL COMPL

Hierarchical

[O.51201]

M hh:mm:ss xy,ww n[vv] UTL QRY APPL {NPC uvmnp|ALL} e LN MSG:

PCHAN	APPL1	CHAN1	APPL2	CHAN2
ddd	uvmnp	eee	wxkqr	jjj

.

.

ddd	uvmnp	eee	wxkqr	jjj	EOM

.

.

M hh:mm:ss xy,ww n[vv] UTL QRY APPL {NPC uvmnp|ALL} e LN MSG:

PCHAN	APPL1	CHAN1	APPL2	CHAN2
ddd	uvmnp	eee	wxkqr	jjj

.

.

ddd	uvmnp	eee	wxkqr	jjj

UTL QRY APPL COMPL

Denial Message

Nonhierarchical

[O.51201.01]

M hh:mm:ss xy,ww n[vv] UTL QRY APPL {NPC [s]abc|ALL} COND cc DNY

Hierarchical

[O.51201.01]

M hh:mm:ss xy,ww n[vv] UTL QRY APPL {NPC uvmnp|ALL} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

APPL - This utility refers to application cards

The following are currently available applications:

Type *Application*

SD111 X.50/X.57 Subrate Application

SD311 Digital Multipoint Bridge (DMB) Application

SD411 DDS Subrate and MJU Application

SDxyz Any other application created after issuing this manual

NPC - This command refers to an NPC of the application type

[s]abc - NPC number for the application card (3- or 4-digit),
which must always be odd.

uvmnp - NPC number for the application card (hierarchical), "np" must always be odd.

If the NPC number is coded, then the command will generate output for only those application-to-application cross-connections that connect to that application card.

ALL - Output of the entire application-to-application card
cross-connect table is requested.

e - number of lines in message (maximum of 10)

PCHAN - Pseudo Channel number column

ddd - Pseudo channel number for this connection, range 1-999

APPL1 - Column for NPC number(s) of first application

[s]abc - NPC number of first application (3- or 4-digit)

uvmnp - NPC number of first application (hierarchical)

CHAN1 - Column for channel number(s) assigned by first application

eee - Channel number assigned by first application

If the channel number is not present because the first application has already disconnected, then three dashes are shown as channel number.

APPL2 - Column for NPC number(s) of second application

[v]ghi - NPC number of second application (3- or 4-digit)

wxkqr - NPC number of second application (hierarchical)

CHAN2 - Column for channel number(s) assigned by second application

jjj - Channel number assigned by second application

If the channel number is not present because the second application has not yet requested the connection or the second application has already disconnected, then three dashes are shown as channel number.

cc - Hexadecimal condition code

cc *Explanation*

02 Subject entity is not equipped

6A No application NPCs grown in the frame

6B No application-to-application connections present in the frame

6D This application card does not connect to another application card

UTL,QRY,BCAST,ALL

QUERY BROADCAST ALL

Explanation Of Command

This message requests a source listing for all the FROM terminations or for the clear DS1 network processing circuits that are associated with broadcast connections.

The ABT command may be used to stop the output of this message.

Command

[I.52101]

UTL : : QRY, BCAST, ALL !

Completion Message

Nonhierarchical

[O.52101]

```
M hh:mm:ss xy,ww n[vv] UTL QRY BCAST ALL xx e LN MSG:
[[s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj]
[[s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj]
[[s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj]
[s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY BCAST ALL xx e LN MSG:
[[s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj]
[[s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj]
[[s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj]
[[s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj [s]rstjjj COMPL
```

Hierarchical

[O.52101]

```
M hh:mm:ss xy,ww n[vv] UTL QRY BCAST ALL xx e LN MSG:
[uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj]
[uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj]
[uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj]
[uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj]
uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj {EOM|COMPL}
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY BCAST ALL xx e LN MSG:
[uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj]
[uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj]
[uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj]
[uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj]
uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj uvmnpjjj COMPL
```

Common

If there is no broadcast connection

[O.52101]

```
M hh:mm:ss xy,ww n[vv] UTL QRY BCAST ALL 000 COMPL
```

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

BCAST - Broadcast

ALL - All (NPCs)

xx - Number of data fields (terminations) in a segment (01 through 32)

e - Number of lines in a message segment (2 through 5)

[s]rstjjj

- Nonhierarchical termination number of a broadcast source

The termination number will be output as 0000000 if there is no source information for the termination.

[s]rst - The 3- or 4-digit nonhierarchical NPC number belonging to FTU, DS3U or HDS3U

jjj - Source channel number

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnpjjj

- Hierarchical NPC number of a broadcast source

The termination number will be output as 0000000 if there is no source information for the termination.

uv - Unit number
m - Module number
np - NPC number within the module
jjj - Source channel number

The allowable values are presented below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

jjj - Source channel number

001 through 024

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

UTL,QRY,BCAST,FROM

UTILITY QUERY BROADCAST

Explanation Of Command

This command requests a listing of the tributaries (**T0**) connected to a specified broadcast type source (**FROM**).

The output message header line lists the full tributary, and the data lines list all the tributaries (**T0s**) connected to a broadcast type circuit with the specified source (**FROM**). Other **T0s** will appear in following lines, with sufficient lines to report all of the **T0s** involved, six per line. The last line of the message will be filled with zeros if there are less than eight **T0s** (or a multiple thereof) connected.

You must enter the first channel of the broadcast source for this command.

Command

Nonhierarchical

[I.52111]

UTL:FRM xy,SEQ ww:QRY,BCAST,FROM [s]abcddd!

Hierarchical

[I.52111]

UTL:FRM xy,SEQ ww:QRY,BCAST,FROM uvmnpddd!

Completion Message

Nonhierarchical

[O.52111]

M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM [s]abcd-dd-eee TO [t]ghijjj xx e LN MSG:
[[t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu]
[[t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu]
[[t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu]
[t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu [t]rstuuu COMPL

Hierarchical

[O.52111]

M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM uvmnpddd-eee TO wxkqrjjj xx e LN MSG:
[edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu]
[edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu]
[edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu]
edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu edhfguuu COMPL

Denial Message

Nonhierarchical

[O.52111.01]

M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM [s]abcd-dd UEQD DNY

[O.52111.02]

M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM [s]abcd-dd NOBBL DNY

[O.52111.03]

M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM [s]abcd-dd RT ffff MD g[g] [t]aaa COND cc DNY

[O.52111.04]

M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM [s]abcd-dd COND cc DNY

Hierarchical

[O.52111.01]

M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM uvmnpddd UEQD DNY

[O.52111.02]

M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM uvmnpddd NOBBL DNY

[O.52111.03]

M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM uvmnpddd RT ffff MD g[g] \wxjaa COND cc DNY

[O.52111.04]

M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM uvmnpddd COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abcddd

- Nonhierarchical FROM termination number

[s]abc - The 3- or 4-digit nonhierarchical FROM NPC number belonging to FTU (FT type), DS3U (DT type) or HDS3U (HT type)

ddd - Channel number denoting the first channel of a channel range specification

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FROM termination number

uv - Unit number
m - Module number
np - NPC number within the module

The allowable values are presented below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

001-024 (Domestic)

001-047 Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095 Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024 Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048 Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072 Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096 Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096 Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

If a data line contains fewer tributaries than data fields the data fields without corresponding tributary information will be filled with zeros.

[t]ghijj

- Nonhierarchical termination number

[t]ghi - The 3- or 4-digit nonhierarchical NPC number of the full tributary with the same valid values as [s]abc.

jjj - Channel number of the full tributary with the same valid values as ddd.

[t]rstuuu

- Nonhierarchical termination number

[t]rst - The 3- or 4-digit nonhierarchical NPC number of additional tributaries with the same valid values as [s]abc.

uuu - Channel number of additional tributaries with the same valid values as ddd.

[t]aaa - The 3- or 4-digit nonhierarchical TO NPC number of an RT/DL Digroup A with the same valid values as [s]abc.

wxkqr - Hierarchical TO termination number with the same valid values as uvmnp.

edhfg - Hierarchical TO termination number with the same valid values as uvmnp

wxjaa - Hierarchical TO termination number of an RT/DL Digroup A with the same valid values as uvmnp

eee - Channel number denoting the last channel of a range specification with the same valid values as ddd.

xx - Number of data fields in the current message segment (01 through 32)

e - Number of lines in the message (2 through 5)

UEQD - Unequipped

NOBBL - No backbone leg

The requested printout of all the tributaries connected to the DACS II broadcast source abcd44 was denied because the source NPC was not a backbone leg.

RT - Remote terminal

ffff - Bank identification number (0000 through 9999)

MD - Mode

[g]g - Mode of operation

<i>[g]g</i>	<i>Explanation</i>
1	SLC 96 Carrier Mode 1
3	SLC 96 Carrier Mode 3
C	SLC Series 5 Carrier (Feature Package C)

COND - Condition

cc - Hexadecimal condition code

cc	Explanation
0B	Invalid CEPT NPC
62	Invalid channel number
63	NPC is a DGP
7F	NPC is not added
F7	Corresponding NPC for virtual channel is not provisioned
70	NPC invalid type

UTL,QRY,BCAST,FROM

UTILITY QUERY BROADCAST FROM

Explanation Of Command

This message requests a listing of the tributary network processing circuits that is associated with a non-channelized digital signal broadcast connection.

Command

Nonhierarchical

[I.52121]

UTL:FRM xy,SEQ ww:QRY,BCAST,FROM [s]abc!

Hierarchical

[I.52121]

UTL:FRM xy,SEQ ww:QRY,BCAST,FROM uvmnp!

Completion Message

Nonhierarchical

[O.52121]

```
M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM [s]abc \
TO [t]ghi xxx e LN MSG:
  [t]rst [t]rst [t]rst [t]rst  [t]rst [t]rst [t]rst [t]rst
  [t]rst [t]rst [t]rst [t]rst  [t]rst [t]rst [t]rst [t]rst
  [t]rst [t]rst [t]rst [t]rst  [t]rst [t]rst [t]rst [t]rst
  [t]rst [t]rst [t]rst [t]rst  [t]rst [t]rst [t]rst [t]rst EOM

      .
      .
      .
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM [s]abc \
TO [t]ghi xxx e LN MSG:
  [t]rst [t]rst [t]rst [t]rst  [t]rst [t]rst [t]rst [t]rst
  [t]rst [t]rst [t]rst [t]rst  [t]rst [t]rst [t]rst [t]rst
  [t]rst [t]rst [t]rst [t]rst  [t]rst [t]rst [t]rst [t]rst
  [t]rst [t]rst [t]rst [t]rst  [t]rst [t]rst [t]rst [t]rst COMPL
```

OR

```
M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM [s]abc 000 COMPL
```

Hierarchical

[O.52121]

```
M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM uvmnp \
TO ghijk xxx e LN MSG:
  wxkqr wxkqr wxkqr wxkqr  wxkqr wxkqr wxkqr wxkqr
  wxkqr wxkqr wxkqr wxkqr  wxkqr wxkqr wxkqr wxkqr
  wxkqr wxkqr wxkqr wxkqr  wxkqr wxkqr wxkqr wxkqr
  wxkqr wxkqr wxkqr wxkqr  wxkqr wxkqr wxkqr wxkqr EOM

      .
      .
      .
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM uvmnp \
TO ghijk xxx e LN MSG:
  wxkqr wxkqr wxkqr wxkqr  wxkqr wxkqr wxkqr wxkqr
  wxkqr wxkqr wxkqr wxkqr  wxkqr wxkqr wxkqr wxkqr
  wxkqr wxkqr wxkqr wxkqr  wxkqr wxkqr wxkqr wxkqr
  wxkqr wxkqr wxkqr wxkqr  wxkqr wxkqr wxkqr wxkqr COMPL
```

OR

```
M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM uvmnp 000 COMPL
```

Denial Message

Nonhierarchical

[O.52121.01]

M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM [s]abc COND cc DNY

Hierarchical

[O.52121.01]

M hh:mm:ss xy,ww n[vv] UTL QRY BCAST FROM uvmp COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

BCAST - Broadcast

FROM - From

Source network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical non-channelized source (FROM)
NPC Number, whose tributaries will be listed

[t]ghi - The 3- or 4-digit full tributary (TO) NPC number

[t]rst - The 3- or 4-digit tributary (TO) NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical number of source (FROM) NPC
ghijk - Hierarchical number of full tributary (TO) NPC
wxkqr - Hierarchical number of tributary (TO) NPC

uv, gh, wx

- Unit number

m, i, k

- Module number

np, jk, qr

- NPC number within the module

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

T0 - To

Tributary

e - Number of lines in each message segment (2 through 5)

xxx - Number of tributary NPCs in the broadcast connection

cc - Hexadecimal condition code

cc Explanation

15 NPC is unequipped

AD No BBL leg

0B Invalid CEPT NPC

B4 NPC is channelized type

UTL, QRY, CMAP

QUERY PARTIAL CROSS-CONNECT MAP

Explanation Of Command

This command requests a printout of the DACS II cross-connect map for a single network processing circuit (NPC) or a range of NPCs in a facility terminating unit (FTU, IFTU, or IFTU2), digital signal processing unit (DSPU), DS3 unit (DS3U) or Hybrid DS3 Unit (HDS3U).

If a range of NPCs is specified in this command, DACS II will output the cross-connect maps for only those NPCs that are equipped and have at least one cross-connected channel.

The execution of the command and the generation of the output are aborted by entering ABT.

If the NPCs are unmapped, the TO NPC number is omitted.

For 64 kbit/s test access, the FROM and TO terminations under test by the corresponding active testport channels will be displayed rather than far-end mapped terminations.

For non-channelized digital signal test access, the FROM and TO NPCs of the circuit under test are listed, and if only one NPC is actually under test, it is listed first.

For broadcast circuits that map to multiple channels, only one of the channels is shown. The user should use command

UTL : : QRY, BCAST, FROM

(I.52111)

to get a complete listing of all the tributaries for a broadcast circuit.

Note: No range is allowed for virtual NPCs.

Note 2: This command does not generate output for Subrate NPCs.

This command will also generate cross-connect maps for application cards that have the type SDxyz (where xyz is a set of hexadecimal numbers that define a particular application). Even though the actual channel numbers of application cards are assigned by the application and not by the user, actual channel numbers are given by this command to ensure consistency.

If an SDxyz application is provisioned in a North American module of an FTU, IFTU, or IFTU2, the number of channels available to the application is 48. If an SDxyz application is provisioned in an international module of an FTU, IFTU, or IFTU2, the number of channels available to the application is 64. The output of this command reflects this difference. Please note that individual modules in an FTU, IFTU, or IFTU2 may be provisioned as international modules, even though the other three modules are provisioned as North American modules.

For application-to-application type cross-connects the user should issue command UTL::QRY,APPL (I.51201) to generate the correlation between pseudo channels that the user refers to in commands and the actual channels assigned by the application.

Command

Nonhierarchical

[I.52011]

UTL:[FRM xy,SEQ ww]:QRY,CMAP [s]abc[-[t]def]!

Hierarchical

[I.52011]

UTL:[FRM xy,SEQ ww]:QRY,CMAP uvmnp[-wxkqr]!

Completion Message

Nonhierarchical

Note: The following message segments will be output for each DE, DS, DA, TE, and TA NPC.

If the 3-digit nonhierarchical NPC number is used, the following message segment will be output for each 24-channel NPC. Each segment shall contain eight terminations per line as shown below, where **ghi** is the nonhierarchical NPC number:

If the header line has 80 or less characters:

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP abc mnxyz ccc-ddd[ {ACTPL|NACPL}]\
[ kkk][ {SWMR|SWAR}][ FDL tlmndddr][ {NPCTP|NPCTG|ROLL}] 4 LN MSG:
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr {EOM|COMPL}
```

If the header line is longer than 80 characters:

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP def mnxyz ccc-ddd[ {ACTPL|NACPL}]\
[ kkk][ {SWMR|SWAR}] 5 LN MSG:
[ FDL tlmndddr][ {NPCTP|NPCTG|ROLL}]
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr {EOM|COMPL}
```

Note: If the 3-digit nonhierarchical NPC number is used, the following message segment will be output for each Clear-DS1 NPC.

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP jkl mnxyz[ {FAD <tmode>|ROLL}] \
[t]ghi[r][ ghi] {EOM|COMPL}
```


If the 4-digit nonhierarchical NPC number is used, the following message segment will be output for each 24-channel NPC. Each segment shall contain six terminations per line as shown below, where the **vg**hi is the nonhierarchical NPC number.

If the header line has 80 or less characters:

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP sabc mnxyz ccc-ddd[ {ACTPL|NACPL}]\
[ tkkk][ {SWMR|SWAR}][ FDL tulmndddr][ {NPCTP|NPCTG|ROLL}] 5 LN MSG:
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr {EOM|COMPL}
```

If the header line is longer than 80 characters:

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP sabc mnxyz ccc-ddd[ {ACTPL|NACPL}]\
[ tkkk][ {SWMR|SWAR}] 6 LN MSG:
[FDL tulmndddr][ {NPCTP|NPCTG|ROLL}]
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr {EOM|COMPL}
```

If the 4-digit nonhierarchical NPC number is used, the following message segment will be output for each Clear-DS1 NPC.

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP sjkl mnxyz[ {FAD <tmode>|ROLL}] \
[t]vg
```

hi[r][vghi] {EOM|COMPL}

Note: The following two message segments will be output for each TH NPC.

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP [s]abc mnxyz 000-015[ {NPCTP|NPCTG|ROLL}] \
5 LN MSG:
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP [s]abc mnxyz 016-031[ {NPCTP|NPCTG|ROLL}] \
5 LN MSG:
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr {EOM|COMPL}
```

Note: The following message segment will be output for each Clear-E1 TH type NPC.

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP [s]jkl mnxyz[ {FAD <tmode>|ROLL}] \
[t][v]ghi[r][ [v]ghi] {EOM|COMPL}
```

Note: The following four message segments will be output for each SDxyz-type NPC:

If an SDxyz-type NPC is located in a North American module, then only 48 of the total 64 channels are usable. In that case the [v]ghijj field for channels 4, 8, 12, 16, ..., 64 will appear as unmapped ([0]000000).

[O.52012]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP [s]abc SDxyz 001-016 5 LN MSG:
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP [s]abc SDxyz 017-032 5 LN MSG:
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP [s]abc SDxyz 033-048 5 LN MSG:
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP [s]abc SDxyz 049-064 5 LN MSG:
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr {EOM|COMPL}
```

Note: The following two message segments will be output for each MB NPC.

[O.52013]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP [s]mbn MB100 001-064 DPLX 5 LN MSG:
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP [s]mbn MB100 065-085 DPLX 3 LN MSG:
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll {EOM|COMPL}
```

Note: The following message segment will be output as many times as needed for each VI NPC.

[O.52014]

```
M hh:mm ss xy,ww n[vv] UTL QRY CMAP [s]vnp VI100 xx e LN MSG:
[tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn]
[tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn]
[tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn]
tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn {EOM|COMPL}
```

Note: For the case when multiple NPCs are queried, the following completion message segment will be output after all other NPC segments have been output.

[O.52011]

```
M hh:mm ss xy,ww n[vv] UTL QRY CMAP COMPL
```

Hierarchical

Note: The following message segment will be output for each DE, DS, DA, TE, and TA NPC.

If the header line has 80 or less characters:

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP uvmnp mnxyz ccc-ddd[ {ACTPL|NACPL}]\
[ uvkkk][ {SWMR|SWAR}][ FDL tjklmndddr][ {NPCTP|NPCTG|ROLL}] 7 LN MSG:
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr {EOM|COMPL}
```

If the header line is longer than 80 characters:

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP uvmnp mnxyz ccc-ddd[ {ACTPL|NACPL}]\
[ uvkkk][ {SWMR|SWAR}] 8 LN MSG:
[FDL tjklmndddr][ {NPCTP|NPCTG|ROLL}]
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr {EOM|COMPL}
```

Note: The following message segment will be output for each Clear-DS1 NPC.

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP edhfg mnxyz[ {FAD <tmode>|ROLL}] \
[t]ghikl[r][ ghikl] {EOM|COMPL}
```

Note: The following two message segments will be output for each TH type NPC.

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP uvmnp mnxyz 000-015[ {NPCTP|NPCTG|ROLL}] \
5 LN MSG:
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP uvmnp mnxyz 016-031[ {NPCTP|NPCTG|ROLL}] \
5 LN MSG:
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr {EOM|COMPL}
```

Note: The following message segment will be output for each Clear-E1 TH type NPC.

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP edhfg mnxyz[ {FAD <tmode>|ROLL}] \
[t]ghikl[r][ ghikl] {EOM|COMPL}
```

Note: The following four message segments will be output for each SDxyz-type NPC:

If an SDxyz-type NPC is located in a North American module, then only 48 of the total 64 channels are usable. In that case the ghikljij field for channels 4, 8, 12, 16, ..., 64 will appear as unmapped (00000000).

[O.52012]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP uvmnp SDxyz 001-016 5 LN MSG:
tghikljijr tghikljijr tghikljijr tghikljijr
tghikljijr tghikljijr tghikljijr tghikljijr
tghikljijr tghikljijr tghikljijr tghikljijr
tghikljijr tghikljijr tghikljijr tghikljijr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY CMAP uvmnp SDxyz 017-032 5 LN MSG:
tghikljijr tghikljijr tghikljijr tghikljijr
tghikljijr tghikljijr tghikljijr tghikljijr
tghikljijr tghikljijr tghikljijr tghikljijr
tghikljijr tghikljijr tghikljijr tghikljijr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY CMAP uvmnp SDxyz 033-048 5 LN MSG:
tghikljijr tghikljijr tghikljijr tghikljijr
tghikljijr tghikljijr tghikljijr tghikljijr
tghikljijr tghikljijr tghikljijr tghikljijr
tghikljijr tghikljijr tghikljijr tghikljijr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY CMAP uvmnp SDxyz 049-064 5 LN MSG:
tghikljijr tghikljijr tghikljijr tghikljijr
tghikljijr tghikljijr tghikljijr tghikljijr
tghikljijr tghikljijr tghikljijr tghikljijr
tghikljijr tghikljijr tghikljijr tghikljijr {EOM|COMPL}
```

Note: The following two message segments will be output for each MB NPC.

[O.52013]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP mbnop MB100 001-064 DPLX 5 LN MSG:
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll EOM

M hh:mm:ss xy,ww n[vv] UTL QRY CMAP mbnop MB100 065-085 DPLX 3 LN MSG:
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll {EOM|COMPL}
```

Note: The following message segment will be output as many times as needed for each VI NPC.

[O.52014]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP vnprs VI100 xx e LN MSG:
[tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn]
[tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn]
[tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn]
tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn {EOM|COMPL}
```

Note: For the case when multiple NPCs are queried, the following completion message segment will be output after all other NPC segments have been output.

[O.52011]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP COMPL
```

Denial Message

Nonhierarchical

[O.52011.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP [w]mno UEQD DNY
```

[O.52011.02]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP [s]abc[-[t]def] COND cc DNY
```

Hierarchical

[O.52011.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP edmno UEQD DNY
```

[O.52011.02]

```
M hh:mm:ss xy,ww n[vv] UTL QRY CMAP uvmnp[-wxkqr] COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

CMAP - Cross-connect map

[s]abc - The 3- or 4-digit nonhierarchical NPC number, the first number of a range

[t]def - The 3- or 4-digit nonhierarchical NPC number, the last number of a range

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

9961-9966

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Hierarchical NPC number, the first number of a range

wxkqr - Hierarchical NPC number, the last number of a range

uv, wx - Unit number

m, k - Module number

np, qr - NPC number within the module

The valid values are:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

VI NPC numbers listed by unit, module, and NPC Number
Unit Type VI (Virtual)

Unit	Module	NPC	
99	1	01-02	(DACS II Non-CEF frames)
99	1	01-06	(DACS II CEF frames)

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

[s]jkl - Nonhierarchical non-channelized NPC number in range [s]abc-[s]def

edhfg - Hierarchical non-channelized NPC number in range uvmnp-wkxqr

mnxyz - NPC-type identifier

mnxyz Explanation

DA	Dual digroup ANSI NPC
DE	Dual digroup NPC
DS	SLC® carrier NPC
SD	Digital Signal Processing Application Circuit Pack
TA	DS3U ANSI NPC
TE	DS3U or HDS3U Noninterface unit NPC
TH	Hybrid DS3U CEPT NPC
MB	Digital multipoint bridge NPC
VI	Virtual NPC

DA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y *Explanation*

- 0** ZCS - Zero code suppression
- 1*** NZCS - No zero code suppression
- 2*** B8ZS - Bipolar with 8 zero substitution
- 3** Not assigned
- 4** ZCS/DMI - Zero code suppression/DMI signaling
- 5** NZCS/DMI - No zero code suppression/DMI signaling
- 6** B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
- 7-9** Not assigned

* Only options 1 and 2 are applicable to DA-type clear-DS1 NPC.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** Unchannelized Framed Clear DS1 Cross-connection

DA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a DA NPC with both a valid framing format (D4, ESF, T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the DA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II FTU, the NPC must be provisioned as NPC type **DE9y9**.

Zero Byte Time Slot Interchange (ZBTSI) encoding is not supported by the DA NPC type. If ZBTSI is desired on an NPC in a DACS II FTU, the NPC must be provisioned as a DE NPC type with its **y** option selecting ZBTSI (**DEx3z**).

DE-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4, y=5, and y=6, DMI signalling.

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3†	ZBTISI - Zero-bit time-slot interchanger
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DE-type clear-DS1 NPC.

† Only valid with ESF (x = 2 or 3)

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	No channel numbering format, clear-DS1

DS-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	Not assigned
4	Not assigned
5	Not assigned
6	SLC® 96 carrier Fs
7	SLC 5 carrier ESF with data link
8-9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	Zero code suppression (ZCS)
1	No zero code suppression (NZCS)
2	Bipolar with 8 zero substitution (B8ZS)
3-9	Not assigned

z - Counting sequence format

z	<i>Explanation</i>
0	SLC 96 carrier Mode III D4 counting sequence
1	SLC 96 carrier Mode III D1D counting sequence
2	SLC 96 carrier Mode I D1D counting sequence
3	SLC Series 5 carrier D4 counting sequence
4-9	Not assigned

SD-type xyz fields (Digital Signal Processing Platform (DSPP) Applications)

- SD111** X.50/X.57 International subrate application
- SD311** Digital Multipoint Bridge application
- SD411** North American DDS Subrate and MJU application
- SDxyz** Possible future applications with specific values for xyz

TE-type xyz fields

x - Multiframe format

x *Explanation*

- 0** Not assigned
- 1** D4
- 2** ESF - Voice
- 3** ESF - Data
- 4** DDST (T1DM - R bit connection via channel 24)
- 5-7** Not assigned
- 8*** Ericsson Cellular format
- 9** No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4 and y=5, DMI signalling.

y - Line and signaling format

y *Explanation*

- 0** ZCS - Zero code suppression
- 1*** NZCS - No zero code suppression
- 2** Not assigned
- 3** Not assigned
- 4** ZCS/DMI - Zero code suppression/DMI signaling
- 5** NZCS/DMI - No zero code suppression/DMI signaling
- 6-9** Not assigned

* Only option 1 is applicable to TE-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** No channel numbering format, clear-DS1

TA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the TA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II DS3U, the NPC must be provisioned

as NPC type TE919.

TH-Type xyz field

The provisioning values of *x*, *y*, and *z* for the TH type are shown in the following tables (a 'Y' in a column of the Table indicates that the feature at the top of the column is enabled by the corresponding (*x*, *y* or *z*) provisioning value):

Table 24-1. Provisioning values for *x*

x value	CRC-4 Mode	Automatic CRC-4
0	Y	
8		Y
B		

Table Notes:

1. The "Automatic CRC-4" is also known as CRC-4 Interworking.
2. If the CRC-4 mode is enabled (*x* value 0) the NPC will compute checksums over the transmitted data and transmit the checksum as part of the CRC-4 multiframe pattern in TS0. The NPC will also monitor the incoming CRC-4 multiframe and verify the CRC-4 checksum. If the CRC-4 multiframe cannot be found using the CRC-4 reframe algorithm, then the NPC will declare an alarm.

If the automatic CRC-4 option is selected (*x* value 8), the NPC will perform all the functions of the CRC-4 mode. However, if the CRC-4 multiframe is lost, the NPC will not declare an alarm or apply consequent actions.

3. *x* value B does not enable any of the features shown in the Table; this is a valid option.
4. Only *x* values 0, 8, and B are valid *x* values, all other *x* values will be denied.

Table 24-2. Provisioning values for *y*

<i>y</i> value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

Table Notes:

1. *y* values 1, 3, 5, 7, A-B and E-F are unassigned (that is, invalid).
2. For *y* values 0, 2, 4 and 6 Channel Associated Signaling (CAS) is enabled. In this mode the Telephone Channel Numbering system is always used.

If the "Convert TS16" option is selected (*y* values 0 and 2), the *abcd* bits of TS16 will be converted to '1111' if they are received as '0000'. This is to prevent false framing in the TS16 multiframe. If this option is not selected (*y* values 4 and 6), a value of '0000' in the *abcd* bits will be transmitted transparently.

If the "AIS in TS16" option is selected (*y* value 0 and 4), AIS will always be applied to received TS16 signaling channels on detection of RAI (Remote Alarm Indication, Bit 3 of TS0 NFW), RAIS (Remote AIS Indication, Bit 4 of TS0 NFW, if provisioned) or R16 (Remote Alarm Indication received in TS16). If this option is not selected (*y* values 2 and 6), AIS will not be applied on detection of RAI, RAIS, or R16.

3. For *y* values 8 and 9 the NPC will be Non Signaling Associated (NSA). In this mode, Telephone Channel Numbering (*y*=8) or Timeslot Channel Numbering (*y*=9) may be selected.
4. The NPC can be set up as a framed clear 2 Mbit/s interface (*y*=C) or as an unframed clear 2 Mbit/s interface (*y*=D). When provisioned as a clear 2 Mbit/s interface, an NPC does not modify the cross-connected data in any way. This means that the following functions are not performed in the clear 2 Mbit/s mode:
 - Outgoing CRC-4 checksum generation (applies to framed clear 2 Mbit/s interfaces with CRC-4 option enabled).
 - Remote alarm indications (line format errors are reported locally, but no alarm indicators are sent in TS0 to the remote end).

Table 24-3. Provisioning values for *z*

<i>z</i> value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	166ms	500ms	RAIS	RBER	166ms	500ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
A	Y		Y							Y
B		Y	Y							Y

Table Notes:

1. *z* values 8, 9, C, D, E and F are unassigned (that is, invalid).
2. For *z* values 1, 3, 5, 7 and B the consequent action timing is under firmware (FW) control. For *z* values 0, 2, 4, 6 and A the consequent action timing is under hardware (HW) control.

The G.732 consequent action of inserting the AIS in data channels is applied within 2 ms whether the timing is under HW control or FW control, but when under FW control, the AIS in data channels is overridden by the Insertion Word sourced from the Alternate Message Store (AMS) after detection of the local alarm:

in **500 ms**
if *z* = 1, 3 or 5
in **2496 ms**
if *z* = 7 or B

The Insertion Word pattern can be specified in the cross-connect command; on 2Mbit/s NPCs in a *gateway* **cross-connection** the Insertion Word always defaults to AIS.

The selection of HW or FW control is also used to provision the consequent actions on signaling bits. On detection of loss of frame (LOF) or multiframe alignment (LMA, Loss of Multiframe Alarm) error, the hardware immediately applies a signaling freeze by using the last good frame's signaling information. The signaling freeze remains in effect until two multiframes without errors are received. When HW control is used, the AIS in signaling bits is applied within 2 ms, overriding the signaling freeze. When FW control is used, the trunk conditioning pattern from the AMS overrides the signaling freeze once the 2Mbit/s NPC goes into the alarm state.

3. The Consequent Action timing also selects the time after which the **local** alarms are declared and cleared:*
- HW Control: **Both** remote and local alarms are declared and cleared in 166 ms.
- FW Control: Only remote alarms are declared and cleared in 166 ms. The **local** alarms are declared and cleared in 500 ms, **except when z = 7 or B**.
4. On the transmitting NPC, bit 3 in the NFW, the remote alarm indication (RAI), will be processed as specified in ITU-T Recommendation G.704 Section 2.3.2 (**that is, within 2 ms after detecting the failure**) when z = 0, 1, 4, 5, 6, 7, A or B. **However**, for z value 2 the set time is 166 ms and for z value 3 the set time is 500 ms. NFW bit 3 is always set to 0 for non-alarm condition and is set to 1 for alarm conditions.
5. On the transmitting NPC, if bit 4 of the NFW is used as RAIS (Remote AIS) indicator, NFW bit 4 will be set in 166 ms (for z = 4) or 500 ms (for z = 5) after AIS is detected in the received signal. The default idle state for Bit 4 is a '1'. The idle state can be changed to a '0' with the CHG::NPC,TS0 command. The bit is put into the active state by inverting the value of the idle state. Similarly, if NFW bit 4 is in the active state in the received signal, consequent actions are taken 166 ms after detecting this condition.
6. z values 6-7 and A-B enable the Minor Bit Error Rate and Signaling Freeze Delay Time Features.

Common Options (z = 6-7 or A-B)

- [i] Enable BER calculations, and when in the BER state:

DACS takes the alarm state consequent actions: sending a message, and activating appropriate alarm relays and summary LEDs.

When out of the BER state, DACS II retires the alarm state consequent actions: sends a retirement message, and deactivates appropriate alarm relays and summary LEDs.

- [ii] RAI set in 2 ms

- [iii] Signaling Freeze Delay Timing, Consequent Action Clear Timing:

z=6 or A hardware timing

z=7 or B firmware timing (SFDT=2496 ms, CACT=624 ms)

- [iv] BER alarm level = DMA

Specific Options for z= 6 or 7

- [v] RBER alarm level = MI

* Local alarms are those generated for the events: PWR, PBF, BER, AIS, LMA, and A16. Remote alarms are those generated for the events: RAI, RAIS, RBER, and R16.

[vi] NFW bit 4=RBEB:

- DACS II sends a remote indicator in bit 4 (RBEB) of the time slot 0 Non Frame Word (NFW) upstream to the far end 166 ms after detecting the Minor Bit Error Rate (BER) condition.

DACS II sets the RBEB bit to its idle state, on clearing of the BER condition.

- DACS II detects the remote setting of the received bit 4 as an RBEB condition and generates an appropriate message. Consequent actions are taken 166 ms after detecting this condition.

DACS II generates an appropriate retirement message when the received bit 4 returns to the idle state.

Specific Options for z= A or B

[vii] RBEB unalarmed

[viii] NFW bit 4=disabled

NFW bit 4 is NOT used as RBEB, although the local Minor Bit Error Rate (BER) condition is detected and cleared with the alarm state consequent actions.

Additionally:

- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.

The following tables provide a summary of invalid combinations of xyz for the TH type NPC.

Table 24-4. Combinations of x and y Values

Invalid xyz Combinations	Explanation
8Cz	Framed clear 2 Mbit/s (y value C) is valid for all valid x options except the one invoking automatic CRC-4 interworking. The interworking algorithm requires setting of outgoing E-bits, which is not permitted for a clear signal.
0Dz 8Dz	Unframed clear 2 Mbit/s (y value D) is only valid for x value B. This is the only x option which does not require decoding of TS0 content.

Table 24-5. Combinations of y and z Values

Invalid xyz Combinations	Explanation
xC1 xC3 xC5 xC7 xCB xD1 xD3 xD5 xD7 xDB	Clear 2 Mbit/s (y value C or D) cannot be used with Firmware controlled Consequent Action (z values 1, 3, 5, 7 or B).
xD4 xD6	Unframed clear 2 Mbit/s (y value D) cannot be used with z value 4 (NFW Bit 4 used for RAIS) or with z value 6 (NFW Bit 4 used for RBER) because unframed clear signals cannot obtain TS0 framing.

Table Notes:

1. If framed clear 2 Mbit/s (y value C) is selected with z value 4 (NFW Bit 4 used for RAIS) only the receive side of this function will be enabled. Outgoing RAIS indicators cannot be transmitted during clear signal operation.

2. If framed clear 2Mbit/s (y value C) is selected with z= value 6 (NFW Bit 4 used for RBER) only the receive side of this function will be enabled. Outgoing RBER indicators cannot be transmitted during clear signal operation.

There are no combinations between valid x and z values that are invalid.

MB-type xyz fields

x - Fixed at 1
y - Fixed at 0
z - Fixed at 0

VI-type xyz fields

x - Fixed at 1
y - Fixed at 0
z - Fixed at 0

DPLX - Duplex
Duplex equipped

ccc-ddd

- Channel number range

The channel number range varies with the NPC type. It is not printed for non-channelized NPCs

<i>ccc-ddd</i>	<i>Explanation</i>
001-024	Channel range for type DExyz and DAXyz NPC
001-024	Channel range for type TExyz and TAxz NPC

For DSxyz-type NPC (SLC® carrier interface digroup)

<i>ccc-ddd</i>	<i>Digroup & Mode</i>
001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers
001-085 (MB NPC)

SWMR - Switch manually requested

Protection switch manually requested for SLC carrier NPC

SWAR - Switch automatically requested

Protection switch automatically requested for SLC carrier NPC

ACTPL - Active protection line

Queried SLC carrier NPC is a protection line which is active

NACPL - Nonactive protection line

Queried SLC carrier NPC is a protection line which is not active

[t]kkk - Nonhierarchical corresponding SLC carrier Digroup A (DGA) NPC number
(with the same valid values as [s]abc)

uvkkk - Hierarchical SLC carrier Digroup A (DGA) NPC number

FDL - Facility data link
Only for DE-type NPCs

[u] lmnddd
- Nonhierarchical termination number to which the FDL is mapped

jk lmnddd
- Hierarchical termination number to which the FDL is mapped

[u] lmn - The 3- or 4-digit nonhierarchical NPC number (with the same valid values as [s]abc)

t - type of connection

t *Type of connection*

***** One-way

" " Two-way (a blank)

B Broadcast (BCON)

R Roll

T Test Access*

P DSP Platform Application connection, two-way

Q DSP Platform Application connection, one-way

* T will not be displayed for mapped terminations.

NPCTP - Network processing circuit for test port
DExyz or TExyz type NPC for DS0 Test Ports

ROLL - Roll
Bridged facility in Roll procedure

FAD - Facility access digroup
Non-channelized test NPC

Note: In a segment containing information for a FAD type NPC, the NPCs under test will be listed without the type of the connection they are in.

tmode - Test mode of non-channelized test NPC

tmode Test mode

HUB	Hub
LOOPE	Loop E
LOOPF	Loop F
LPBKT	Terminal Loopback
MONE	Monitor E(FROM)
MONEF	Monitor E and F
MONF	Monitor F(TO)
SPLTA	Split A
SPLTAB	Split A and B
SPLTB	Split B
SPLTE	Split E
SPLTEF	Split E and F
SPLTF	Split F

[v]ghijjj

- Nonhierarchical number of NPC and channel or conference port number/circuit ID. For a non-channelized cross-connect, the channel number jjj will not be shown.

[v]ghi - Nonhierarchical NPC with the same valid values as [s]abc.

For an FAD, the tested NPC is listed first if only one of the two mapped NPCs is under test.

jjj - Channel number (If [v]ghi is MB type, the range for jjj is 001 to 085.)

Some examples of [v]ghijjj are listed below:

[v]ghijjj Explanation

[0]000000 Unmapped channel

[v]ghi000 Mapped channel connected to an FDL of NPC [v]ghi

[-]-SECH- Mapped channel connected to a Subrate (SR) or MJ-type NPC.

[v]ghijjj Mapped channel NOT connected to an FDL, SR or MJ channel

r - Termination status

r Termination status

T Terminated

blank Not Terminated

ghikljjj

- Hierarchical number of NPC and channel or conference port number/circuit ID. For a non-channelized cross-connection, the channel number jjj will not be shown.

00000000

- Unmapped channel

ghikl000

- Mapped channel connected to an FDL of NPC ghikl

ghikljjj

- Mapped channel NOT connected to an FDL, SR and MJ channel

jjj

- Channel number

If ghikl is an MB type, the range for jjj is 001 to 085.

[s]cbn

- The 3- or 4-digit nonhierarchical CB type NPC number.

[s]mbn

- The 3- or 4-digit nonhierarchical MB type NPC number

mbnop - Hierarchical MB type NPC number

- mb** - Unit number
- n** - Module number
- op** - NPC number

lll

- Number of legs for the multipoint termination (003 through 256)

[s]vnp

- The 3- or 4-digit nonhierarchical virtual NPC number

vnprs - Hierarchical virtual NPC number

- vn** - Unit number
- p** - Module number
- rs** - NPC number

xx

- Number of conferences reported in the segment (01 through 48)

e

- Number of lines in the segment

t nnn - Virtual conference type and number

t - *Virtual conference type*

t Explanation

***** One-way

" " Two-way (a blank)

nnn - Virtual conference number (001 through 500)

[w]mno - The 3- or 4-digit nonhierarchical NPC number that caused the denial
([s]abc through [t]def)

edmno - Hierarchical NPC number that caused the denial
(uvmnp through wxkqr)

cc - Hexadecimal condition code

cc *Explanation*

0B Invalid CEPT NPC

7F NPC is not added

91 SR NPC was specified - not allowed

UTL, QRY, CNFGR

UTILITY QUERY CONFIGURE

Explanation Of Command

This command requests information about the configuration of a DACS II frame.

Command

[I.51091]

UTL:FRM xy,SEQ ww:QRY,CNFGR!

Completion Message

[O.51091]

M hh:mm:ss xy,ww n[vv] UTL QRY CNFGR 4 LN MSG:
ID xy UID <uid> SS <ssn>
BAY aa TYPE fff-fff UNITS bb CCN c HG d
UNIT a a a a a a a a a a a a a a \
NPCAD[E][X] H COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

ID - Identifier (frame)

xy - Frame identifier (00 through ZZ)

UID - Unique identifier

uid - Unique (frame) identifier (1 to 20 alphanumeric characters)

SS - Software serial number

ssn - Software serial number value (1 to 10 alphanumeric characters)

The software serial number may be assigned by the user to identify a particular software package. This would eliminate problems in an office where the user has multiple frames and more than one software package is in use.

BAY - Bay

aa - Total number of bays, in decimal (01 through 07)

TYPE - Type

fff-fff

- Bay types (-, 1, or 2)

Variable fff-fff gives the bay type assigned to each bay in the frame. Bays are numbered from 1 through 7. When viewed from the front of the frame the bays are positioned in the frame in the same order as the bay numbers shown below. Consult this table to determine the bay associated with the position of a given f.

Bay numbers	6 4 1 2 3 5 7
Assignment	f f f - f f f

<i>f</i>	<i>Explanation</i>

-	Not configured or the Switch Bay (Bay 2)

1	Original Interface Bay

2	Flexible Interface Bay

UNITS - Units

bb - Number of equipped units, in decimal (01 through 16)

CCN - Cross-connect network

c - Cross-connect network type

c *Explanation*

1 Multibay CCN
2 Single-bay CCN
E ECCN

HG - Height

d - Height of bay

d *Explanation*

0 7'0" (2133mm)
1 11'6" (3505mm)
2 7'2.6" (2200mm)

UNIT - Unit

a - Unit type

a *Explanation*

- Not configured
1 FTU
2 DSPU
3 DS3U(or HDS3U)
4 IFTU
5 IFTU2
6 HDS3U

NOTE: The Unit type of 3 indicates DS3U or HDS3U because if the Unit is configured but not grown it can be either. If it is grown as a DS3U, the unit type will be 3. If it is grown as an HDS3U, the unit type will be 6.

NPCAD - Network processing circuit addressing

E - The 3-digit nonhierarchical (Extended) addressing scheme

X - The 4-digit nonhierarchical (Extended) addressing scheme

H - Hierarchical addressing scheme

UTL, QRY, CS, NPC

UTILITY QUERY CIRCUIT STATUS, NPC

Explanation Of Command

This message requests the Circuit Status (CS) of an ANSI type Network Processing Circuit (NPC). The response to this query displays the ANSI NPC's Near-end and Far-end Alarm/Status bytes. ANSI capability is supported by DA-type NPCs in a DACS II Facility Terminating Unit or TA-type NPCs in a DACS II DS3 Unit.

Note: This message will be denied if the NPC is not equipped as an DA/TA type NPC.

Command

Nonhierarchical

[I.53121]

UTL:FRM xy,SEQ ww:QRY,CS,NPC [s]abc!

Hierarchical

[I.53121]

UTL:FRM xy,SEQ ww:QRY,CS,NPC uvmnp!

Completion Message

Nonhierarchical

[O.53121]

M hh:mm:ss xy,ww n[vv] UTL QRY CS NPC [s]abc 2 LN MSG:
furyatlo fumcablo COMPL

Hierarchical

[O.53121]

M hh:mm:ss xy,ww n[vv] UTL QRY CS NPC uvmnp 2 LN MSG:
furyatlo fumcablo COMPL

Denial Message

Nonhierarchical

[O.53121.01]

M hh:mm:ss xy,ww n[vv] UTL QRY CS NPC [s]abc COND cc DNY

Hierarchical

[O.53121.01]

M hh:mm:ss xy,ww n[vv] UTL QRY CS NPC uvmnp COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

CS - Circuit status

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within Unit

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit Module NPC
01-16 1-4 01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit Module NPC
01-16 1-6 01-28

furyatlo

- Near-end circuit status. The bits in the near-end byte identify the following alarm/status conditions:

Field	Explanation
f	f = 1, if u or r or y or a or t or l or o = 1
u	u = 1, if an unavailable signal status exists
r	r = 1, if a Red-CGA exists
y	y = 1, if a Yellow-CGA exists
a	a = 1, if an AIS-CGA exists
t	t = 0, (unused)
l	l = 1, if a payload loopback or test signal is active
o	o = 0, (unused)

fumcablo

- Far-end circuit status. The bits in the far-end byte identify the following alarm/status conditions:

Field	Explanation
f	f = 1, if u or m or c or a or b or l or o = 1
u	u = 1, if a far-end unavailable signal status exists
m	m = 1, if no ANSI PRMs or RAI has been received for 4.5 seconds
c	c = 1, if loopback retention code is being received
a	a = 1, if a far-end AIS-CGA or Red-CGA exists
b	b = 1, if loopback retention code is being transmitted
l	l = 1, if a far-end payload loopback is active
o	o = 0, (unused)

cc - Hexadecimal condition code

cc	<i>Explanation</i>
02	Subject entity is not equipped
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
24	Unit type error
0B	Invalid CEPT NPC
44	NPC not IU/TI type
46	NPC Failed or Out of Service
BF	MIU is not equipped
AF	MIU is failed
CF	MIU is out of service
33	NPC not DA or TA type.

UTL, QRY, DATE

QUERY DATE

Explanation Of Command

This message requests a printout of the current date (month, day, year) and the time interval at which DACS II prints the date.

Command

[I.51031]

UTL:FRM xy,SEQ ww:QRY,DATE!

Completion Message

[O.51031]

M hh:mm:ss xy,ww n[vv] UTL QRY DATE aa/bb/cc FORMAT ggg INT ii \
COMPL

Denial Message

Not applicable.

Autonomous Message

[O.51031]

I hh:mm:ss xy,ww UTL QRY DATE aa/bb/cc FORMAT ggg INT ii COMPL

Explanation Of Parameters

INT - Interval

ii - Interval at which DACS II will print the date.

ii Meaning

01 Every hour on the hour.

02 Every even hour on the hour.

04 Every fourth hour on the hour: 04, 08, 12, 16, 20, 24

06 Every sixth hour on the hour: 06, 12, 18, 24

08 Every eighth hour on the hour: 08, 16, 24

12 Twice daily on the hour: 12, 24

24 Once daily at midnight (default).

DATE - Date

aa - Month or day

bb - Day or Month

cc - Year (2 or 4 digits)

The DATE will be displayed in the International format

FORMAT - Format

ggg - Date format

ggg *Date format*

MDY Month/Day/Year (USA format)

DMY Day/Month/Year (International format)

UTL,QRY,DMAP

QUERY FULL CROSS-CONNECT MAP

Explanation Of Command

This command requests a printout of the DACS II map on ALL cross-connected channels.

The output lists all FROM and TO side identifiers for all equipped network processing circuits (NPCs). Unequipped and fully unassigned Network Processing Circuits will not be listed. The outputs are similar to the **UTL : :QRY, CMAP** output. This command may produce a large volume of output. To terminate the output enter the **ABT** command.

Command

[I.52031]

UTL : [FRM xy, SEQ ww] : QRY, DMAP !

Completion Message

Nonhierarchical

Note: The following message segments will be output for each DE, DS, DA, TE, and TA NPC.

If the 3-digit nonhierarchical NPC number is used, the following message segment will be output for each 24-channel NPC. Each segment shall contain eight terminations per line as shown below, where **ghi** is the nonhierarchical NPC number:

If the header line has 80 or less characters:

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP abc mnxyz ccc-ddd[ {ACTPL|NACPL}]\
[ kkk][ {SWMR|SWAR}][ FDL tlmndddr][ {NPCTP|NPCTG|ROLL}] 4 LN MSG:
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr EOM
```

If the header line is longer than 80 characters:

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP def mnxyz ccc-ddd[ {ACTPL|NACPL}]\
[ kkk][ {SWMR|SWAR}] 5 LN MSG:
[ FDL tlmndddr][ {NPCTP|NPCTG|ROLL}]
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr EOM
```

Note: If the 3-digit nonhierarchical NPC number is used, the following message segment will be output for each Clear-DS1 NPC.

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP jkl mnxyz[ {FAD <tmode>|ROLL}] \
[t]ghi[r][ ghi] EOM
```

If the 4-digit nonhierarchical NPC number is used, the following message segment will be output for each 24-channel NPC. Each segment shall contain six terminations per line as shown below, where the **vg***hi* is the nonhierarchical NPC number.

If the header line has 80 or less characters:

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP sabc mnxyz ccc-ddd[ {ACTPL|NACPL}]\
[ tkkk][ {SWMR|SWAR}][ FDL tulmndddr][ {NPCTP|NPCTG|ROLL}] 5 LN MSG:
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr EOM
```

If the header line is longer than 80 characters:

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP sabc mnxyz ccc-ddd[ {ACTPL|NACPL}]\
[ tkkk][ {SWMR|SWAR}] 6 LN MSG:
[FDL tulmndddr][ {NPCTP|NPCTG|ROLL}]
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr
tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr tvghijjrr EOM
```

If the 4-digit nonhierarchical NPC number is used, the following message segment will be output for each Clear-DS1 NPC.

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP sjkl mnxyz[ {FAD <tmode>|ROLL}] \
[t]vghi[r][ vgi] EOM
```

Note: The following two message segments will be output for each TH NPC.

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP [s]abc mnxyz 000-015[ {NPCTP|NPCTG|ROLL}] \
5 LN MSG:
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP [s]abc mnxyz 016-031[ {NPCTP|NPCTG|ROLL}] \
5 LN MSG:
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr EOM
```


Note: The following message segment will be output for each Clear-E1 TH type NPC.

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP [s]jkl mnxyz[ {FAD <mode>|ROLL}] \
[t][v]ghi[r][ [v]ghi] EOM
```

Note: The following four message segments will be output for each SDxyz-type NPC:

If an SDxyz-type NPC is located in a North American module, then only 48 of the total 64 channels are usable. In that case the [v]ghijj field for channels 4, 8, 12, 16, ..., 64 will appear as unmapped ([0]000000).

[O.52032]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP [s]abc SDxyz 001-016 5 LN MSG:
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP [s]abc SDxyz 017-032 5 LN MSG:
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP [s]abc SDxyz 033-048 5 LN MSG:
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP [s]abc SDxyz 049-064 5 LN MSG:
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr
t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr t[v]ghijjrr EOM
```

Note: The following two message segments will be output for each MB NPC.

[O.52033]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP [s]mbn MB100 001-064 DPLX 5 LN MSG:
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP [s]mbn MB100 065-085 DPLX 3 LN MSG:
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll EOM
```

Note: The following message segment will be output as many times as needed for each VI NPC.

[O.52034]

```
M hh:mm ss xy,ww n[vv] UTL QRY DMAP [s]vnp TYPE VI100 xx e LN MSG:
[tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn]
[tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn]
[tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn]
tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn EOM
```

Note: The following completion message segment will be output after all other NPC segments have been output.

[O.52031]

```
M hh:mm ss xy,ww n[vv] UTL QRY DMAP COMPL
```

Hierarchical

Note: The following message segment will be output for each DE, DS, DA, TE, and TA NPC.

If the header line has 80 or less characters:

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP uvmnp mnxyz ccc-ddd[ {ACTPL|NACPL}]\
[ uvkkk][ {SWMR|SWAR}][ FDL tjklmndddr][ {NPCTP|NPCTG|ROLL}] 7 LN MSG:
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr EOM
```

If the header line is longer than 80 characters:

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP uvmnp mnxyz ccc-ddd[ {ACTPL|NACPL}]\
[ uvkkk][ {SWMR|SWAR}] 8 LN MSG:
[FDL tjklmndddr][ {NPCTP|NPCTG|ROLL}]
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr EOM
```

Note: The following message segment will be output for each Clear-DS1 NPC.

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP edhfg mxyz[ {FAD <tmode>|ROLL}] 2 LN MSG:
[t]ghikl[r][ ghikl] EOM
```

Note: The following two message segments will be output for each TH type NPC.

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP uvmnp mxyz 000-015[ {NPCTP|NPCTG|ROLL}] \
5 LN MSG:
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP uvmnp mxyz 016-031[ {NPCTP|NPCTG|ROLL}] \
5 LN MSG:
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr EOM
```

Note: The following message segment will be output for each Clear-E1 TH type NPC.

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP edhfg mxyz[ {FAD <tmode>|ROLL}] 2 LN MSG:
[t]ghikl[r][ ghikl] EOM
```

Note: The following four message segments will be output for each SDxyz-type NPC:

If an SDxyz-type NPC is located in a North American module, then only 48 of the total 64 channels are usable. In that case the ghikljj field for channels 4, 8, 12, 16, ..., 64 will appear as unmapped (00000000).

[O.52032]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP uvmnp SDxyz 001-016 5 LN MSG:
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP uvmnp SDxyz 017-032 5 LN MSG:
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr
tghikljjr tghikljjr tghikljjr tghikljjr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP uvmnp SDxyz 033-048 5 LN MSG:
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP uvmnp SDxyz 049-064 5 LN MSG:
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr
tghikljjjr tghikljjjr tghikljjjr tghikljjjr EOM
```

Note: The following two message segments will be output for each MB NPC.

[O.52033]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP mbnop MB100 001-064 DPLX 5 LN MSG:
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP mbnop MB100 065-085 DPLX 3 LN MSG:
lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll lll
lll lll lll lll lll lll EOM
```

Note: The following message segment will be output as many times as needed for each VI NPC.

[O.52034]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP vnprs TYPE VI100 xx e LN MSG:
[tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn]
[tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn]
[tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn]
tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn tnnn EOM
```

Note: The following completion message segment will be output after all other NPC segments have been output.

[O.52031]

```
M hh:mm:ss xy,ww n[vv] UTL QRY DMAP COMPL
```

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

DMAP - Digroup map

[s]abc - The 3- or 4-digit nonhierarchical NPC number
For FT NPCs excluding non-channelized NPCs.

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919
 Unit 13	 Unit 14	 Unit 15	 Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note: The valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

mnxyz - NPC-type identifier

<i>mn</i>	<i>Explanation</i>

DA	Dual digroup ANSI NPC
DE	Dual digroup NPC

DS	SLC® carrier NPC

SD	Digital Signal Processing Application Circuit Pack

MB	Digital multipoint bridge NPC

TA	DS3U ANSI NPC
TE	DS3U or HDS3U Noninterface unit NPC

TH	Hybrid DS3U CEPT NPC

DE-type xyz fields

x - Multiframe format for the digroup

x *Explanation*

0 Not assigned

1 D4

2 ESF - Voice

3 ESF - Data

4 DDST (T1DM - R bit connection via channel 24)

5-7 Not assigned

8* Ericsson Cellular format

9 No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4, y=5, and y=6, DMI signalling.

y - Line and signaling format

y *Explanation*

0 ZCS - Zero code suppression

1* NZCS - No zero code suppression

2* B8ZS - Bipolar with 8 zero substitution

3† ZBTSI - Zero-bit time-slot interchanger

4 ZCS/DMI - Zero code suppression/DMI signaling

5 NZCS/DMI - No zero code suppression/DMI signaling

6 B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling

7-9 Not assigned

* Only options 1 and 2 are applicable to DE-type clear-DS1 NPC.

† Only valid with ESF (x = 2 or 3)

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

0 D4 channel bank channel numbering

1 D2 channel bank channel numbering

2 D1D channel bank channel numbering

3-8 Not assigned

9 No channel numbering format, clear-DS1

DS-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	Not assigned
4	Not assigned
5	Not assigned
6	SLC® 96 carrier Fs
7	SLC 5 carrier ESF with data link
8-9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	Zero code suppression (ZCS)
1	No zero code suppression (NZCS)
2	Bipolar with 8 zero substitution (B8ZS)
3-9	Not assigned

z - Counting sequence format

z	<i>Explanation</i>
0	SLC 96 carrier Mode III D4 counting sequence
1	SLC 96 carrier Mode III D1D counting sequence
2	SLC 96 carrier Mode I D1D counting sequence
3	SLC Series 5 carrier D4 counting sequence
4-9	Not assigned

DA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DA-type clear-DS1 NPC.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

DA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a DA NPC with both a valid framing format (D4, ESF, T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the DA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II FTU, the NPC must be provisioned as NPC type **DE9y9**.

Zero Byte Time Slot Interchange (ZBTSI) encoding is not supported by the DA NPC type. If ZBTSI is desired on an NPC in a DACS II FTU, the NPC must be provisioned as a DE NPC type with its **y** option selecting ZBTSI (**DEx3z**).

SD-type xyz fields (Digital Signal Processing Platform (DSPP) Applications)

- SD111** X.50/X.57 International subrate application
- SD311** Digital Multipoint Bridge application
- SD411** North American DDS Subrate and MJU application
- SDxyz** Possible future applications with specific values for xyz

TE-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4 and y=5, DMI signalling.

y - Line and signaling format

y *Explanation*

- 0** ZCS - Zero code suppression
- 1*** NZCS - No zero code suppression
- 2** Not assigned
- 3** Not assigned
- 4** ZCS/DMI - Zero code suppression/DMI signaling
- 5** NZCS/DMI - No zero code suppression/DMI signaling
- 6-9** Not assigned

* Only option 1 is applicable to TE-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** No channel numbering format, clear-DS1

TA-type xyz fields

x - Multiframe format for the digroup

x *Explanation*

- 0** Not assigned
- 1** D4
- 2** ESF - Voice
- 3** ESF - Data
- 4** DDST (T1DM - R bit connection via channel 24)
- 5-7** Not assigned
- 8** Ericsson Cellular format
- 9** Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the TA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II DS3U, the NPC must be provisioned as NPC type TE919.

TH-Type xyz field

The provisioning values of *x*, *y*, and *z* for the **TH type** are shown in the following tables (a 'Y' in a column of the Table indicates that the feature at the top of the column is enabled by the corresponding (*x*, *y* or *z*) provisioning value):

Table 24-6. Provisioning values for x

x value	CRC-4 Mode	Automatic CRC-4
0	Y	
8		Y
B		

Table Notes:

1. The "Automatic CRC-4" is also known as CRC-4 Interworking.
2. If the CRC-4 mode is enabled (x value 0) the NPC will compute checksums over the transmitted data and transmit the checksum as part of the CRC-4 multiframe pattern in TS0. The NPC will also monitor the incoming CRC-4 multiframe and verify the CRC-4 checksum. If the CRC-4 multiframe cannot be found using the CRC-4 reframe algorithm, then the NPC will declare an alarm.

If the automatic CRC-4 option is selected (x value 8), the NPC will perform all the functions of the CRC-4 mode. However, if the CRC-4 multiframe is lost, the NPC will not declare an alarm or apply consequent actions.

3. x value B does not enable any of the features shown in the Table; this is a valid option.
4. Only x values 0, 8, and B are valid x values, all other x values will be denied.

Table 24-7. Provisioning values for y

y value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

Table Notes:

1. y values 1, 3, 5, 7, A-B and E-F are unassigned (that is, invalid).
2. For y values 0, 2, 4 and 6 Channel Associated Signaling (CAS) is enabled. In this mode the Telephone Channel Numbering system is always used.

If the "Convert TS16" option is selected (y values 0 and 2), the *abcd* bits of TS16 will be converted to '1111' if they are received as '0000'. This is to prevent false framing in the TS16 multiframe. If this option is not selected (y values 4 and 6), a value of '0000' in the *abcd* bits will be transmitted transparently.

If the "AIS in TS16" option is selected (y value 0 and 4), AIS will always be applied to received TS16 signaling channels on detection of RAI (Remote Alarm Indication, Bit 3 of TS0 NFW), RAIS (Remote AIS Indication, Bit 4 of TS0 NFW, if provisioned) or R16 (Remote Alarm Indication received in TS16). If this option is not selected (y values 2 and 6), AIS will not be applied on detection of RAI, RAIS, or R16.

3. For y values 8 and 9 the NPC will be Non Signaling Associated (NSA). In this mode, Telephone Channel Numbering ($y=8$) or Timeslot Channel Numbering ($y=9$) may be selected.
4. The NPC can be set up as a framed clear 2 Mbit/s interface ($y=C$) or as an unframed clear 2 Mbit/s interface ($y=D$). When provisioned as a clear 2 Mbit/s interface, an NPC does not modify the cross-connected data in any way. This means that the following functions are not performed in the clear 2 Mbit/s mode:
 - Outgoing CRC-4 checksum generation (applies to framed clear 2 Mbit/s interfaces with CRC-4 option enabled).
 - Remote alarm indications (line format errors are reported locally, but no alarm indicators are sent in TS0 to the remote end).

Table 24-8. Provisioning values for z

z value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	166ms	500ms	RAIS	RBER	166ms	500ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
A	Y		Y							Y
B		Y	Y							Y

Table Notes:

1. z values 8, 9, C, D, E and F are unassigned (that is, invalid).
2. For z values 1, 3, 5, 7 and B the consequent action timing is under firmware (FW) control. For z values 0, 2, 4, 6 and A the consequent action timing is under hardware (HW) control.

The G.732 consequent action of inserting the AIS in data channels is applied within 2 ms whether the timing is under HW control or FW control, but when under FW control, the AIS in data channels is overridden by the Insertion Word sourced from the Alternate Message Store (AMS) after detection of the local alarm:

in **500 ms**
if $z = 1, 3$ or 5
in **2496 ms**
if $z = 7$ or B

The Insertion Word pattern can be specified in the cross-connect command; on 2Mbit/s NPCs in a *gateway* **cross-connection** the Insertion Word always defaults to AIS.

The selection of HW or FW control is also used to provision the consequent actions on signaling bits. On detection of loss of frame (LOF) or multiframe alignment (LMA, Loss of Multiframe Alarm) error, the hardware immediately applies a signaling freeze by using the last good frame's signaling information. The signaling freeze remains in effect until two multiframes without errors are received. When HW control is used, the AIS in signaling bits is applied within 2 ms, overriding the signaling freeze. When FW control is used, the trunk conditioning pattern from the AMS overrides the signaling freeze once the 2Mbit/s NPC goes into the alarm state.

3. The Consequent Action timing also selects the time after which the **local** alarms are declared and cleared:*
 - HW Control: **Both** remote and local alarms are declared and cleared in 166 ms.
 - FW Control: Only remote alarms are declared and cleared in 166 ms. The **local** alarms are declared and cleared in 500 ms, **except when $z = 7$ or B.**
4. On the transmitting NPC, bit 3 in the NFW, the remote alarm indication (RAI), will be processed as specified in ITU-T Recommendation G.704 Section 2.3.2 (**that is, within 2 ms after detecting the failure**) when $z = 0, 1, 4, 5, 6, 7, A$ or B. **However,** for z value 2 the set time is 166 ms and for z value 3 the set time is 500 ms. NFW bit 3 is always set to 0 for non-alarm condition and is set to 1 for alarm conditions.
5. On the transmitting NPC, if bit 4 of the NFW is used as RAIS (Remote AIS) indicator, NFW bit 4 will be set in 166 ms (for $z = 4$) or 500 ms (for $z = 5$) after AIS is detected in the received signal. The default idle state for Bit 4 is a '1'. The idle state can be changed to a '0' with the CHG::NPC,TS0 command. The bit is put into the

* Local alarms are those generated for the events: PWR, PBF, BER, AIS, LMA, and A16. Remote alarms are those generated for the events: RAI, RAIS, RBER, and R16.

active state by inverting the value of the idle state. Similarly, if NFW bit 4 is in the active state in the received signal, consequent actions are taken 166 ms after detecting this condition.

6. z values 6-7 and A-B enable the Minor Bit Error Rate and Signaling Freeze Delay Time Features.

Common Options (z = 6-7 or A-B)

- [i] Enable BER calculations, and when in the BER state:

DACS takes the alarm state consequent actions: sending a message, and activating appropriate alarm relays and summary LEDs.

When out of the BER state, DACS II retires the alarm state consequent actions: sends a retirement message, and deactivates appropriate alarm relays and summary LEDs.

- [ii] RAI set in 2 ms

- [iii] Signaling Freeze Delay Timing, Consequent Action Clear Timing:

z=6 or A hardware timing

z=7 or B firmware timing (SFDT=2496 ms, CACT=624 ms)

- [iv] BER alarm level = DMA

Specific Options for z= 6 or 7

- [v] RBER alarm level = MI

- [vi] NFW bit 4=RBER:

- DACS II sends a remote indicator in bit 4 (RBER) of the time slot 0 Non Frame Word (NFW) upstream to the far end 166 ms after detecting the Minor Bit Error Rate (BER) condition.

DACS II sets the RBER bit to its idle state, on clearing of the BER condition.

- DACS II detects the remote setting of the received bit 4 as an RBER condition and generates an appropriate message. Consequent actions are taken 166 ms after detecting this condition.

DACS II generates an appropriate retirement message when the received bit 4 returns to the idle state.

Specific Options for z= A or B

- [vii] RBER unalarmed

- [viii] NFW bit 4=disabled

NFW bit 4 is NOT used as RBER, although the local Minor Bit Error Rate (BER) condition is detected and cleared with the alarm state consequent actions.

Additionally:

- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.

The following tables provide a summary of invalid combinations of xyz for the TH type NPC.

Table 24-9. Combinations of x and y Values

Invalid xyz Combinations	Explanation
8Cz	Framed clear 2 Mbit/s (y value C) is valid for all valid x options except the one invoking automatic CRC-4 interworking. The interworking algorithm requires setting of outgoing E-bits, which is not permitted for a clear signal.
0Dz 8Dz	Unframed clear 2 Mbit/s (y value D) is only valid for x value B. This is the only x option which does not require decoding of TS0 content.

Table 24-10. Combinations of y and z Values

Invalid xyz Combinations	Explanation
xC1 xC3 xC5 xC7 xCB xD1 xD3 xD5 xD7 xDB	Clear 2 Mbit/s (y value C or D) cannot be used with Firmware controlled Consequent Action (z values 1, 3, 5, 7 or B).
xD4 xD6	Unframed clear 2 Mbit/s (y value D) cannot be used with z value 4 (NFW Bit 4 used for RAIS) or with z value 6 (NFW Bit 4 used for RBER) because unframed clear signals cannot obtain TS0 framing.

Table Notes:

1. If framed clear 2 Mbit/s (y value C) is selected with z value 4 (NFW Bit 4 used for RAIS) only the receive side of this function will be enabled. Outgoing RAIS indicators cannot be transmitted during clear signal operation.
2. If framed clear 2Mbit/s (y value C) is selected with z= value 6 (NFW Bit 4 used for RBER) only the receive side of this function will be enabled. Outgoing RBER indicators cannot be transmitted during clear signal operation.

There are no combinations between valid x and z values that are invalid.

MB-type xyz fields

x	- Fixed at 1
y	- Fixed at 0
z	- Fixed at 0
ccc	- Starting channel or conference number
ddd	- Ending channel or conference number

Channel numbers
001 through 024 for DA, DE, TA, and TE type NPCs

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers
001-085 (MB NPC)

FDL - Facility data link

Only for DE type NPCs

The FDL is mapped to the following termination:

t[u]lmnddr

- Nonhierarchical termination number and state

t - Type of connection

[u]lmn - The 3- or 4-digit nonhierarchical NPC number

ddd - Channel number

r - Termination state

tjklmnddd

- Hierarchical termination number

t - Type of connection

jk - Unit number

l - Module number

mn - NPC number within the module

ddd - Channel number

r - Termination state

r Explanation

T Terminated

blank Not Terminated

NPCTP - NPC for DS0 Test Ports

NPCTG - NPC for Nx64 kbit/s Test-access Groups

ROLL - bridged facility in Roll procedure

t[v]ghijjrr

- Nonhierarchical termination number and state

t - Type of connection

[v]ghi - Nonhierarchical NPC number

jjj - Channel/conference number

r - Termination state

t *Explanation*

***** One-way
blank Two-way
B Broadcast
R Bridged (from Roll)
T Test access
P DSP Platform Application connection, two-way
Q DSP Platform Application connection, one-way

[v]ghi**jjj**

- Nonhierarchical termination number

Number of NPC and channel or conference port number/circuit ID.

[0]000000 Unmapped termination number
[v]ghi000 Mapped termination number connected to an FDL
[-]-SECH- Mapped termination connected to a Subrate (SR)
 or Multijunction (MJ) type NPC.

r *Explanation*

T Terminated
blank Not Terminated

tghikl**jjjr**

- Hierarchical termination number and state

t - Type of connection
gh - Unit number
i - Module number
kl - NPC number
jjj - Channel/conference number
r - Termination state

ghikl**jjj** Hierarchical termination number
00000000 Unmapped termination number
ghikl000 Mapped termination number connected to an FDL
---SECH--- Mapped termination connected to a Subrate (SR)
 or Multijunction (MJ) type NPC.

[s]mbn - The 3- or 4-digit nonhierarchical MB type NPC number

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

mbnop - Hierarchical MB type NPC number

mb - Unit number
n - Module number
op - NPC number

The valid values are:

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

lll - Number of legs involved in the multipoint conference (000 through 256)

[s]vnp - The 3- or 4-digit nonhierarchical virtual NPC number

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

9961-9966

vnprs - Hierarchical virtual NPC number

vn - Unit number

p - Module number

rs - NPC number

The valid values are:

VI NPC numbers listed by unit, module, and NPC Number

Unit Type VI (Virtual)

Unit	Module	NPC	
99	1	01-02	(DACS II Non-CEF frames)
99	1	01-06	(DACS II CEF frames)

e - Number of lines in the message segment

tnnn - Virtual conference type and number

t - Virtual conference type

nnn - Virtual conference number (001 through 500)

t Explanation

***** one-way

blank two-way

DPLX - Duplex

Duplex equipped

ACTPL - Active protection line

Queried SLC[®] carrier NPC is a protection line which is active

NACPL - Nonactive protection line

Queried SLC carrier NPC is a protection line which is not active

[t]kkk - The 3- or 4-digit nonhierarchical NPC number

Corresponding SLC carrier Digroup A (DGA) NPC number

Valid values are identical to [s]abc

uvkkk - Hierarchical NPC number

SLC carrier digroup A (DGA) NPC number

SWMR - Switch manually requested

Protection switch manually requested for SLC carrier NPC

SWAR - Switch automatically requested

Protection switch automatically requested for SLC carrier NPC

FAD - Facility access digroup

Non-channelized Test NPC

Note: In a message segment containing information for an FAD type NPC, the NPCs under test will be listed without the type of the connection they are in.

tmode - Nonchannelized test mode

E-end - Equipment end

F-end - Facility end

tmode Explanation

MONE Monitor signal from E-end NPC to F-end NPC of unmapped or one-/two-way mapped test session

MONF Monitor signal from F-end NPC to E-end NPC of a two-way mapped test session

MONEF Monitor a two-way mapped connection in both directions
Two FADs are connected for the test session,
and test mode can only be changed to SPLTEF

SPLTA Split the A signal from the E-end NPC to the F-end NPC of one-/two-way mapped test session

SPLTB Split the B signal from the F-end NPC to the E-end NPC of a mapped two-way test session

SPLTAB Split a two-way mapped circuit in both directions

SPLTE Split the input and output ports of E-end NPC of an unmapped or two-way mapped test session

SPLTF Split the input and output ports of F-end NPC of a two-way mapped test session

SPLTEF Split a two-way mapped test session in both directions
Two FADs are connected for the test session,
and test mode can only be changed to MONEF

LOOPE Loop the E-end input port to the output port,
and connect the looped signal to the FAD
The test session may include an unmapped or two-way mapped connection

LOOPF Loop the F-end input port to the output port,
and connect the looped signal to the FAD
Only for a two-way mapped test session
Not allowed for one-way broadcast tributaries

[s]jkl - The 3- or 4-digit nonhierarchical NPC number

Values are identical to [s]abc

For Clear DS1 NPCs

edhfg - Hierarchical NPC number

ed - Unit number
h - Module number
fg - NPC number within the module

Valid values are identical to uvmnp

[t][v]ghi[r]

- Nonhierarchical termination number and state

t - Type of connection
[v]ghi - The 3- or 4- digit nonhierarchical NPC number
r - Termination state

Valid values are identical to abc

[t]ghikl[r]

- Hierarchical termination number and state

t - Type of connection
gh - Unit number
i - Module number
kl - NPC number
r - Termination state

Valid values are identical to uvmnp

Note: For an FAD, the tested NPC is listed first if only one of the two mapped NPCs is under test.

UTL, QRY, DS3, BERMT, UNIT

UTILITY QUERY DS3 BIT ERROR RATE

Explanation Of Command

This message reports the bit error rate calculation method and the bit error rate threshold setting for the DS3 facilities in a DS3 or Hybrid DS3 (HDS3) unit or for all of the DS3 units, including HDS3U, in a DACS II frame.

Command

[I.53221]

UTL:FRM xy,SEQ ww:QRY,DS3,BERMT[,UNIT [q]q]!

Completion Message

[O.53221]

M hh:mm:ss xy,ww n[vv] UTL QRY DS3 BERMT UNIT [q]q 3 LN MSG:

BERM m₁ . . . m₆
BERT t₁ . . . t₆ EOM

M hh:mm:ss xy,ww n[vv] UTL QRY DS3 BERMT COMPL

[O.53222]

M hh:mm:ss xy,ww n[vv] UTL QRY DS3 BERMT NONE COMPL

Denial Message

[O.53221.01]

M hh:mm:ss xy,ww n[vv] UTL QRY DS3 BERMT UNIT [q]q COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

DS3 - Digital signal 3

UNIT - Unit

[q]q - Unit number (1 through 16)

BERM - Bit error rate calculation method

BERT - Bit error rate threshold

BERMT - Both BERM and BERT

$m_1 \dots m_6$
- BERM setting for DS3 1 through 6

<i>m</i>	<i>Explanation</i>

B	Bipolar violations

P	DS3 Parity Errors

C	Both Bipolar violations (BPV) and DS3 Parity Errors, support by HMXR only

-	The Service MXR or HMXR associated with the DS3 facility is unequipped

$t_1 \dots t_6$
- BERT setting for DS3 1 through 6

<i>t</i>	<i>Explanation</i>

3	10^{-3} threshold

6	10^{-6} threshold

-	The Service MXR or HMXR associated with the DS3 facility is unequipped

cc - Hexadecimal condition code

cc	<i>Explanation</i>

10	Unit is not equipped

UTL, QRY, DS3, LBO

QUERY DS3 LINE BUILD OUT

Explanation Of Command

This message reports the line buildout (LBO) settings for the DS3 facilities on the DACS II frame. Output is printed only for DS3 units, including DS3 Hybrid units, that are equipped.

Command

[I.53231]

UTL:FRM xy,SEQ ww:QRY,DS3,LBO!

Completion Message

[O.53231]

M hh:mm:ss xy,ww n[vv] UTL QRY DS3 LBO e LN MSG:

UNIT [q]q 1bbb 2bbb 3bbb 4bbb 5bbb 6bbb

. . .
. . .

UNIT [q]q 1bbb 2bbb 3bbb 4bbb 5bbb 6bbb COMPL

The following message will be generated if no service MXR is equipped in the DACS frame.

[O.53232]

M hh:mm:xx xy,ww n[vv] UTL QRY DS3 LBO NONE COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

DS3 - Digital signal 3 (44.736 Mb/s rate)

e - Number of line in the segment (2 through 5)

UNIT - Unit

[q]q - Unit number (1 through 16)

LBO - The line buildout setting provisioned per DS3 facility.

bbb - LBO setting for each DS3 facility

bbb Explanation

ON Line buildout is turned on

OFF Line build out is turned off

--- Service MXR or HMXR corresponding to the DS3 or Hybrid DS3 is not equipped

LBO is required as shown in the following table.

734A Cabling to DSX-3 KS-19224,L2 Cabling to DSX-3 LBO

0 to 225 feet	0 to 75 feet	ON
225 to 450 feet	75 to 150 feet	OFF

UTL, QRY, ECLOC

QUERY ERROR CORRECTION LOCATION

Explanation Of Command

This Subrate message requests the current setting of the error correction location (ECLOC) functions. The ECLOC is the type of Subrate circuit pack to which all new error correction functions will be allocated. Such resources are allocated for channels requiring parity channel error correction and for circuits with Subrate error correction that do not connect to a Subrate multiplexer or a multipoint junction unit. The ECLOC is set using the CHG, FROM, TO, NOT or CHG, FROM, TO, TLP commands. The ECLOC is set using the ED, PRMTR, T0, INCL, TERM or ED, PRMTR, T0, INCL, TLP commands.

Command

[I.51511]

UTL:FRM xy,SEQ ww:QRY,ECLOC!

Completion Message

[O.51511]

M hh:mm:ss xy,ww v[nn] UTL QRY ECLOC TYPE sss COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

ECLOC - Error correction location

TYPE - Type

sss - Subrate NPC type

<i>sss</i>	<i>Explanation</i>

SRM	Subrate multiplexer

MJU	Multipoint junction unit (default)

UTL, QRY, EQD, COMMON

UTILITY QUERY EQUIPAGE, COMMON

Explanation Of Command

This message requests reports on the equipage of common equipment in the frame.

In the output message each entity is represented by a single character alphabetic variable.
The value of this variable gives the equipage status of the entity represented by the variable.

Command

[I.53109]

UTL:FRM xy,SEQ ww:QRY,EQD,COMMON!

Completion Message

[O.53109]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD g h i j k l m n o p EOM

M hh:mm:ss xy,ww n[vv] UTL QRY EQD 3 LN MSG:
SYNC x y CRO x
TLI x x x x x x x x y y y y y y y y EOM

For DACS II Non-CEF frames, the next segment describes the CCN hardware:

M hh:mm:ss xy,ww n[vv] UTL QRY EQD TOTAL TSIS tt nn 5 LN MSG:
11 x y 12 x y 13 x y 14 x y 15 x y 16 x y
21 x y 22 x y 23 x y 24 x y 25 x y 26 x y
31 x y 32 x y 33 x y 34 x y 35 x y 36 x y
41 x y 42 x y 43 x y 44 x y 45 x y 46 x y EOP

M hh:mm:ss xy,ww n[vv] UTL QRY EQD TOTAL TSIS tt nn 3 LN MSG:
51 x y 52 x y 53 x y 54 x y 55 x y 56 x y
61 x y 62 x y 63 x y 64 x y 65 x y 66 x y EOM

For DACS II CEF frames, the next segment describes the ECCN hardware:

M hh:mm:ss xy,ww n[vv] UTL QRY EQD TOTAL ETSIS tt 3 LN MSG:
01 x y 02 x y 03 x y 04 x y 05 x y 06 x y 07 x y 08 x y
09 x y 10 x y 11 x y 12 x y 13 x y 14 x y 15 x y 16 x y EOM

M hh:mm:ss xy,ww n[vv] UTL QRY EQD COMMON COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

EQD - Equipped

The equipage status of an entity is given as follows:

1	Equipped
0	Unequipped

The DACS II entities and their status fields are as follows:

g	- Link 1
h	- Link 2
i	- Link 3
j	- Link 4
k	- Link 5
l	- Link 6
m	- XC0 (Cross-connect 0)
n	- XC1 (Cross-connect 1)
o	- CCNI/CCI 0 (Cross-connect network interface 0 for non-CEF frame) (Clock and control interface 0 for CEF frame)
p	- CCNI/CCI 1 (Cross-connect network interface 1 for non-CEF frame) (Clock and control interface 1 for CEF frame)

TLI - Timing link interface

x - Side 0

y - Side 1

The TLI entities are listed, in the messages, from left to right in the following order.

TLI 1, SSP 0

TLI 1, SSP 1

TLI 2, SSP 0

TLI 2, SSP 1

TLI 3, SSP 0

TLI 3, SSP 1

TLI 4, SSP 0

TLI 4, SSP 1

TLI 1, SSP 0

TLI 1, SSP 1

TLI 2, SSP 0

TLI 2, SSP 1

TLI 3, SSP 0

TLI 3, SSP 1

TLI 4, SSP 0

TLI 4, SSP 1

TSIS - Time slot interchanges **NonCEF**

ETSIS - Expanded time slot interchangers **CEF**

f - FROM unit (1 through 6)

t - TO Unit (1 through 6)

SYNC - Synchronizer

x - Side 0 synchronizer equipage status

y - Side 1 synchronizer equipage status

CRO - Clock reference oscillator

x - CRO equipage status

tt - Total number of equipped TSIs/ETSIs.

UTL, QRY, EQD, CONN

UTILITY QUERY, EQUIPMENT CONNECTIVITY

Explanation Of Command

This message requests a printout of an interunit connectivity matrix. A "1" indicates cross-connections are made between the two units listed in the row and column. A "0" indicates no connectivity between the two units.

The matrix also serves as an equipage map of the time slot interchange (TSI) circuit packs on each side of the cross-connect network.

The 6 X 6 matrix is shown in halves in the PDS output message.

Command

[I.53031]

UTL:FRM xy,SEQ ww:QRY,EQD,CONN!

Completion Message

[O.53031]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD CONN 5 LN MSG:
UNITS 1 2 3 4 5 6 UNITS 1 2 3 4 5 6
1 x x x x x x 4 x x x x x x
2 x x x x x x 5 x x x x x x
3 x x x x x x 6 x x x x x x COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

EQD - Request equipage status

CONN - Request information on connectivity between units

x - Interunit connectivity

x Explanation

1 Connectivity

0 No connectivity

UTL, QRY, EQD, ETSIS

UTILITIES, ETSIS

Explanation Of Command

This message requests equipage information for all expanded time slot interchange circuit packs.

Command

[I.53022]

UTL:FRM xy,SEQ ww:QRY,EQD,ETISIS!

Completion Message

[O.53022]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD ETSIS 4 LN MSG:

TOTAL ETSIS tt

0qq 1qq	0qq 1qq	0qq 1qq	0qq 1qq	0qq 1qq	0qq 1qq	0qq 1qq	0qq 1qq	0qq 1qq	0qq 1qq
0qq 1qq	0qq 1qq	0qq 1qq	0qq 1qq	0qq 1qq	0qq 1qq	0qq 1qq	0qq 1qq	0qq 1qq	COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

EQD - Request equipage status

ETSI - Request information on ETSI circuit packs

tt - Total number of equipped ETSIs (00 through 32)

qq - Unit number (01 through 16)

If the ETSI pack is not equipped, the number "00" shall be shown in the "qq" field. The "0" or "1" shown before the "qq" is the side number.

UTL, QRY, EQD, MIUS

QUERY EQUIPPED MULTIPLEXER INTERFACE UNITS

Explanation Of Command

This message queries the equipage of the Multiple Interface Units (MIUs) in a DACS II frame.

This message queries the equipage of the Multiplexer Interface Units (MIUs) in a DACS II frame.

Command

[I.53201]

UTL:FRM xy,SEQ ww:QRY,EQD,MIUS!

Completion Message

[O.53201]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD MIUS ttt e LN MSG:
UNIT [q]q Pmxyz 1mxyz 2mxyz 3mxyz 4mxyz 5mxyz 6mxyz \
TOTAL a

.
.
.

UNIT [q]q Pmxyz 1mxyz 2mxyz 3mxyz 4mxyz 5mxyz 6mxyz \
TOTAL a COMPL

[O.53202]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD MIUS TOTAL 000 COMPL

Note: This command will be generated if no MIUs are equipped in the DACS II frame.

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

EQD - Equipped state

MIUS - Multiplexer interface units

Only units that are equipped as DS3 units will have corresponding output lines.

ttt - Total number of equipped MIUs in the DACS frame (001 through 112)
(including protection MIUs)

e - Number of lines in a message segment (2 through 5)

UNIT - Unit

[q]q - Unit number (1 through 16)

TOTAL - Total

a - The number of equipped MIUs in a unit (1 through 7)

mnxyz - NPC-type identifier

mnxyz Explanation

MI100 Multiplexer interface unit

----- Unequipped

Variable xyz will always have the value 100.

UTL, QRY, EQD, MXRS

UTILITIES, QUERY, EQUIPPED, MULTIPLEXERS

Explanation Of Command

This message queries the equipment of the Multiplexers (MXRs) or Hybrid Multiplexers (HMXRs) in the DS3 or Hybrid DS3 (HDS3) Unit Service slots of the DACS II frame.

Command

[I.53211]

UTL:FRM xy,SEQ ww:QRY,EQD,MXRS!

Completion Message

[O.53211]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD MXRS tt e LN MSG:

UNIT [q]q 1mnxyz 2mnxyz 3mnxyz 4mnxyz 5mnxyz 6mnxyz TOTAL a

.
.
.

UNIT [q]q 1mnxyz 2mnxyz 3mnxyz 4mnxyz 5mnxyz 6mnxyz TOTAL a COMPL

[O.53212]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD MXRS TOTAL 00 COMPL

Note: This command will be generated if no MXRs are equipped in the DACS II frame.

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

EQD - Equipped state

MXRS - Service Multiplexers (MXR or HMXR)

Only units that are equipped as DS3 or HDS3 Units will have corresponding output lines.

tt - total number of equipped MXRs or HMXRs in the DACS frame (01 through 96) (not including Protection MXRs or HMXRs)

e - number of lines in a segment (2 through 5)

a - the number of equipped Service MXRs or HMXRs in a unit (1 through 6)

mnxyz - The DS3 format processed by the MXR:

mn - DS3 type

mn *Explanation*

MX The original R4.0 DS3 facility type supported by the Multiplexer (MXR) circuit pack (KCR-1).

EX The enhanced R6.0 DS3 facility type supported by the Enhanced Multiplexer (EMXR) circuit pack (KCR-5).

HX The hybrid facility type supported by the Hybrid Multiplexer (HMXR) circuit pack (KCR-8).

If the unit is a regular DS3U of unit type DT100, then the default is the MX type for backward compatibility.

If the unit is a Hybrid DS3U of unit type HT100, then the default is HX.

MX/EX/HX-type xyz fields

x - DS3 framing format

x *Explanation*

1 M13 format (default)

2 C-bit parity format, not supported by HMXR

y - not assigned (the only valid value is 0)

z - not assigned (the only valid value is 0)

Note: If a particular MXR or HMXR is not equipped, five hyphens(-----) will occupy the mxyz field.

UTL,QRY,EQD,NPCS,TOTAL,UNIT

QUERY EQUIPPED NPCS

Explanation Of Command

This command reports the equipage state for each of the network processing circuits (NPCs) on the DACS II frame and can provide the total number of circuits that are equipped in the facility terminating units (FTU/IFTU/IFTU2), DS3 units (DS3U), Hybrid DS3 units (HDS3U) and digital signal processing units (DSPU).

Digital Signal Processing Platform (DSPP) NPCs that are provisioned within an FTU, IFTU, or IFTU2 will be displayed in the output message or will be counted in the total number of circuits as appropriate. One NPC will count as one circuit even though one NPC occupies a physical slot that normally is occupied by two NPCs.

The results of the output message are in fragment sequence starting with the lowest unit number and ending with the highest unit number.

Within a fragment, the information is listed in NPC number sequence, starting with the lowest number at the top left and increasing to the right. The next line starts with the next highest NPC number.

The output of a partially equipped frame should conform to these rules:

- Omit the output message fragments for half of facility terminating module (FTM) for which there are no equipped NPCs.
- In nonhierarchical addressing, omit the output message fragment for one DS3 or HDS3 FTM (MXR or HMXR) for which there are no equipped NPCs.
- In hierarchical addressing, omit the output message fragment for half a DS3 or HDS3 FTM (MXR or HMXR) for which there are no equipped NPCs.
- Unequipped unit or module will not be reported
- The output will report on NPCs in increasing unit number order, regardless of whether the units are equipped as FTU, DS3U, HDS3U or DSPU.
- If there are no DSPUs, the DSPU part is omitted.
- If there are no equipped FTUs, DS3Us, HDS3Us and DSPU NPCs, the output is given in message 53043.
- The DS3U or HDS3U keyword will only be generated in message 53043 if the DS3 feature bit is enabled in the software.
- The range of NPCs in one FTM will be spanned in two output segments.
- The range of nonhierarchical NPCs in one DS3 or HDS3 FTM will be spanned in one output segment.
- The range of hierarchical NPCs in one DS3 or HDS3 FTM will be spanned in two output segments.
- The range of NPCs in one DSPU will be spanned by one output segment.

Command

[I.53041]

UTL:FRM xy,SEQ ww:QRY,EQD,NPCS[, {TOTAL|UNIT [q]q}]!

Completion Message

Nonhierarchical

Output message fragment for NPCS in one DS1 FTM:

[O.53041]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD FTU NPCS [UNIT [q]q] tt 5 LN MSG:
[c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz
[c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz
[c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz
[c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD FTU NPCS [UNIT [q]q] tt 5 LN MSG:
[c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz
[c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz
[c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz
[c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz [c]cccmnxyz EOM
```

Output message fragment for NPCS in one DS3 or HDS3 FTM (NPCs served by one MXR or HMXR):

[O.53041]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD DS3U NPCS [UNIT [q]q] tt 5 LN MSG:
[d]dddmnxyz [d]dddmnxyz [d]dddmnxyz [d]dddmnxyz [d]dddmnxyz \
[d]dddmnxyz [d]dddmnxyz
[d]dddmnxyz [d]dddmnxyz [d]dddmnxyz [d]dddmnxyz [d]dddmnxyz \
[d]dddmnxyz [d]dddmnxyz
[d]dddmnxyz [d]dddmnxyz [d]dddmnxyz [d]dddmnxyz [d]dddmnxyz \
[d]dddmnxyz [d]dddmnxyz
[d]dddmnxyz [d]dddmnxyz [d]dddmnxyz [d]dddmnxyz [d]dddmnxyz \
[d]dddmnxyz [d]dddmnxyz EOM
```

Output message fragment for 3 digit nonhierarchical NPCS in one DSP unit:

[O.53041]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD DSPU NPCS [UNIT [q]q] tt 2 LN MSG:
aaamnxyz aaamnxyz aaamnxyz aaamnxyz aaamnxyz aaamnxyz \
aaamnxyz aaamnxyz EOM
```

Output message fragment for 4-digit nonhierarchical NPCS in one DSP unit:

[O.53041]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD DSPU NPCS [UNIT [q]q] tt 3 LN MSG:
[a]aaamnxyz [a]aaamnxyz [a]aaamnxyz [a]aaamnxyz
[a]aaamnxyz [a]aaamnxyz [a]aaamnxyz [a]aaamnxyz EOM
```

Hierarchical

Output message fragment for NPCs in one DS1 FTM:

[O.53041]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD FTU NPCS [UNIT [q]q] tt 5 LN MSG:
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD FTU NPCS [UNIT [q]q] tt 5 LN MSG:
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz EOM
```

Output message fragment for NPCs in one DS3 or HDS3 FTM (NPCs served by one MXR or HMXR):

[O.53041]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD DS3U NPCS [UNIT [q]q] tt 5 LN MSG:
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz
uvmnpxmxyz uvmnpxmxyz EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD DS3U NPCS [UNIT [q]q] tt 5 LN MSG:
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz
uvmnpxmxyz uvmnpxmxyz EOM
```

Output message fragment for NPCs in one DSP unit:

[O.53041]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD DSPU NPCS [UNIT [q]q] tt e LN MSG:
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz
uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz uvmnpxmxyz EOM
```


Common

Output message when the TOTAL keyword is specified:

[O.53042]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD NPCS TOTAL e LN MSG:
FTU nnnn fff fff fff fff fff fff fff fff fff fff fff \
fff fff fff fff
DS3U hhhh ggg ggg ggg ggg ggg ggg ggg ggg ggg ggg ggg \
ggg ggg ggg ggg
DSPU pppp qqq qqq qqq qqq qqq qqq qqq qqq qqq qqq \
qqq qqq qqq qqq COMPL
```

Output message when there are no equipped NPCs on the frame:

[O.53043]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD NPCS [UNIT [q]q] [FTU 0000]\
[ DS3U 0000][ DSPU 000] COMPL
```

Overall completion message:

[O.53041]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD NPCS [UNIT [q]q] COMPL
```

Denial Message

[O.53041.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD NPCS UNIT [q]q COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

EQD - Equipped

Request equipage status

NPCS - Network processing circuits

Request information on NPCs

UNIT - Unit

[q]q - Unit number (1 through 16)

TOTAL - Total

Request summary information

tt - Total number of NPCs in a segment

mnxyz - The equipage state and type of the NPCs

mnxyz *Explanation*

----- Not equipped

mn - The type of NPC

Valid values are listed below:

mn	Explanation

DA	Dual digroup ANSI NPC

DE	Dual digroup NPC

DS	SLC® carrier NPC

MB	Digital multipoint bridge NPC

MJ	Multipoint junction unit NPC

SR	Subrate multiplexer unit NPC

TA	DS3U ANSI NPC

TE	DS3U or HDS3U Noninterface unit NPC

TH	Hybrid DS3U CEPT NPC

SD	Digital Signal Processing Application Circuit Pack

xyz - The parameters used to provision the NPC.

See GRTH,NPC,TYPE and GRTH,NPC,TYPE,OPTS,IW,X,AIS,INFO,MJ,MN for values.

SDxyz - Digital Signal Processing Platform (DSPP) Applications

SDxyz Type of Application

SD111 X.50/X.57 International Subrate Application

SD311 Digital Multipoint Bridge (DMB) Application

SD411 DDS Subrate and MJU Application

SDxyz Future applications with specific values for x, y, and z

[a]aaa - The 3- or 4-digit nonhierarchical NPC number for DSPU NPCs

Valid values are listed below (or ---).

If NPC numbers are expressed in three digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

uvmnp - Hierarchical NPC number

On either DS1 FTM, DS3 FTM, HDS3 FTM or DSP unit.

uv - Unit number
m - Module number
np - NPC number within the module

Valid values are listed below (or -----, -----).

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

MB, SR, and MJ type numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

nnnn - Total number of FTU NPCs on the frame.

Dashes (----) will be shown if no unit is grown.

fff - Total number of NPCs on each FTU.

Dashes (---) will be shown if the unit is not grown or is not grown as an FTU.

pppp - Total number of DSPU NPCs on the frame.

Dashes (----) will be shown if no unit is equipped.

qqq - Total number of NPCs on each DSPU.

Dashes (---) will be shown if the unit is not grown or is not grown as a DSPU.

e - number of lines in a segment

[c]ccc - The 3- or 4-digit nonhierarchical NPC number for FTM

Valid values are listed below (or ---).

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

[d]ddd - The 3- or 4-digit nonhierarchical NPC number for DS3U or HDS3U NPCs
Valid values are listed below (or ---).

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

hhhh - Total number of DS3U or HDS3U NPCs on the frame.

Dashes (----) will be shown if no unit is grown.

ggg - Total number of NPCs on each DS3U or HDS3U.

Dashes (---) will be shown if the unit is not grown or is not grown as a DS3U or HDS3U.

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

UTL, QRY, EQD, TSIS

UTILITY QUERY EQUIPPED

Explanation Of Command

This message requests a printout for all the equipped time slot interchange (TSI) circuit packs.

A fully equipped Enclosed Single Bay Frame (ESBF) shows the following TSI equipage status:

11 15 51 55

A fully equipped non-ESBF frame shows the following TSI equipage status:

11 12 13 14 15 16	41 42 43 44 45 46
21 22 23 24 25 26	51 52 53 54 55 56
31 32 33 34 35 36	61 62 63 64 65 66

Command

[I.53021]

UTL:FRM xy,SEQ ww:QRY,EQD,TSIS!

Completion Message

[O.53021]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD TSIS 5 LN MSG:
TOTAL TSIS tt
ft ft ft ft ft ft ft ft ft ft ft ft
ft ft ft ft ft ft ft ft ft ft ft ft
ft ft ft ft ft ft ft ft ft ft ft ft COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

EQD - Request equipage status

TSIS - Request information on TSI circuit packs

tt - Total number of equipped TSIs on the in-service side. The total number of equipped TSIs in the frame is twice this number.

ft - TSI equipage status:

<i>ft</i>	<i>Explanation</i>
00	Unequipped
TSI No.	Equipped

UTL, QRY, EQD, UNIT

UTILITY QUERY ENTITY EQUIPAGE

Explanation Of Command

This command is used to retrieve the state information associated with equipment.

The UNIT option is specified only when the EQPT modifier is used to query that unit. The UNIT field will be null when the command is used to query the whole frame.

Command

[I.53108]

UTL:FRM xy,SEQ ww:QRY,EQD[,UNIT [q]q]!

Completion Message

Nonhierarchical

If the unit number is not entered, the following output messages will be generated:

The output message starts with:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD g h i j k l m n o p EOM

M hh:mm:ss xy,ww n[vv] UTL QRY EQD 3 LN MSG:

SYNC x x CRO x

TLI x x x x x x x x x x x x x x x x EOM

For DACS II Non-CEF frames, the next segment describes the CCN hardware:

M hh:mm:ss xy,ww n[vv] UTL QRY EQD TOTAL TSIS tt 5 LN MSG:

11 x 12 x 13 x 14 x 15 x 16 x

21 x 22 x 23 x 24 x 25 x 26 x

31 x 32 x 33 x 34 x 35 x 36 x

41 x 42 x 43 x 44 x 45 x 46 x EOP

M hh:mm:ss xy,ww n[vv] UTL QRY EQD TOTAL TSIS tt 3 LN MSG:

51 x 52 x 53 x 54 x 55 x 56 x

61 x 62 x 63 x 64 x 65 x 66 x EOM

For DACS II CEF frames, the segment describes the ECCN hardware:

M hh:mm:ss xy,ww n[vv] UTL QRY EQD TOTAL ETSIS tt 3 LN MSG:

01 x 02 x 03 x 04 x 05 x 06 x 07 x 08 x

09 x 10 x 11 x 12 x 13 x 14 x 15 x 16 x EOM

The output then continues with segments that contain information about common equipment in the equipped units. If more than 4 units are equipped, the unit equipage output will be divided into multiple segments.

[O.53108]

```
[M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNITS e LN MSG:]
[<data line for common equipment in the first equipped unit>]
[<data line for common equipment in the second equipped unit>]
[<data line for common equipment in the third equipped unit>]
[<data line for common equipment in the fourth equipped unit> EOM]
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNITS e LN MSG:]
[<data line for common equipment in the fifth equipped unit>]
[<data line for common equipment in the sixth equipped unit>]
[<data line for common equipment in the seventh equipped unit>]
[<data line for common equipment in the eighth equipped unit> EOM]
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNITS e LN MSG:]
[<data line for common equipment in the ninth equipped unit>]
[<data line for common equipment in the tenth equipped unit>]
[<data line for common equipment in the eleventh equipped unit>]
[<data line for common equipment in the twelfth equipped unit> EOM]
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNITS e LN MSG:]
[<data line for common equipment in the thirteenth equipped unit>]
[<data line for common equipment in the fourteenth equipped unit>]
[<data line for common equipment in the fifteenth equipped unit>]
[<data line for common equipment in the sixteenth equipped unit> EOM]
```

Data line for a unit equipped as a DS1 FTU:

```
UNIT [q]q UC a FTMI b c d e FC f g h j k m p q[ CCB r s]
```

Data line for a unit equipped as a DS3U/HDS3U:

```
UNIT [q]q UC a FLI b c FMT l m MXR d e f g h j k MIU n o p q u v w[ CCB r s]
```

Data line for a unit equipped as a DSPU:

```
UNIT [q]q UC a DSPI b[ CCB r s]
```

The output message then lists the NPC numbers of equipped NPCs in each FTM/MXR/HMXR/DSPU. Output messages will be generated successively in ascending order by NPC number. If an FTM/MXR/HMXR/DSPU has no NPC equipped, the segment for that FTM/MXR/HMXR/DSPU will not be output.

Output message for equipage of NPCs in a DS1 FTM.

Please note, if any of the odd NPCs has been provisioned with a Digital Signal Processing Platform (DSP) application (TG193), then the even NPC following it does not exist and dashes will be shown in its place:

[O.53108]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD FTU NPCS [a]aaa-[b]bbb tt 5 LN MSG:
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx EOM
```

Output message for equipage of NPCs in a DS3U MXR/HDS3U HMXR.

Please note, if one or more DS2s in an HMXR have been provisioned with E1 NPCs, then the fourth NPC positions in those DS2s do not exist and will be represented by dashes in the output:

[O.53108]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD DS3U NPCS [a]aaa-[b]bbb tt 5 LN MSG:
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx EOM
```

Output message for equipage of NPCs in a DSPU:

[O.53108]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD DSPU NPCS [a]aaa-[b]bbb tt 2 LN MSG:
[z]zzz [z]zzz [z]zzz [z]zzz [z]zzz [z]zzz [z]zzz [z]zzz EOM
```

After the above information is output, the following format will be generated to complete the output response:

[O.53108]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD COMPL
```

If the unit number is specified in the input, the following output messages will be generated:

Output message format for an FTU:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD 2 LN MSG:
UNIT [q]q UC a FTMI b c d e FC f g h j k m p q[CCB r s] EOM

The output then continues with up to 4 of the following segment; one for each FTM:

Please note, if any of the odd NPCs has been provisioned with a Digital Signal Processing Platform (DSPP) application (TG193), then the even NPC following it does not exist and dashes will be shown in its place:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNIT qq FTU NPCS [a]aaa-[b]bbb tt 5 LN MSG:
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx EOM

Output message format for a DS3U/HDS3U:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD 2 LN MSG:
UNIT [q]q UC a FLI b c FMT l m MXR d e f g h j k MIU n o p q u v w[CCB r s] EOM

The output message then continues with up to 7 of the following segment; one for each MXR or HMXR:

Please note, if one or more DS2s in an HMXR have been provisioned with E1 NPCs, then the fourth NPC positions in those DS2s do not exist and will be represented by dashes in the output:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNIT qq DS3U NPCS [a]aaa-[b]bbb tt 5 LN MSG:
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx EOM

Output message format for a DSPU:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNIT [q]q UC a DSPI b[CCB r s] EOM

M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNIT [q]q DSPU NPCS [a]aaa-[b]bbb tt 2 LN MSG:
[z]zzz [z]zzz [z]zzz [z]zzz [z]zzz [z]zzz [z]zzz [z]zzz EOM

After the above information is output, the following message will be generated to complete the response:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNIT [q]q COMPL

Hierarchical

If the unit number is not entered, the following output messages will be generated:

The output message starts with:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD g h i j k l m n o p EOM

M hh:mm:ss xy,ww n[vv] UTL QRY EQD 3 LN MSG:
SYNC x x CRO x
TLI x x x x x x x x x x x x x x EOM

For DACS II Non-CEF frames, the next segment describes the CCN hardware:

M hh:mm:ss xy,ww n[vv] UTL QRY EQD TOTAL TSIS tt 5 LN MSG:
11 x 12 x 13 x 14 x 15 x 16 x
21 x 22 x 23 x 24 x 25 x 26 x
31 x 32 x 33 x 34 x 35 x 36 x
41 x 42 x 43 x 44 x 45 x 46 x EOP

M hh:mm:ss xy,ww n[vv] UTL QRY EQD TOTAL TSIS tt 3 LN MSG:
51 x 52 x 53 x 54 x 55 x 56 x
61 x 62 x 63 x 64 x 65 x 66 x EOM

For DACS II CEF frames, the segment describes the ECCN hardware:

M hh:mm:ss xy,ww n[vv] UTL QRY EQD TOTAL ETSIS tt 3 LN MSG:
01 x 02 x 03 x 04 x 05 x 06 x 07 x 08 x
09 x 10 x 11 x 12 x 13 x 14 x 15 x 16 x EOM

The output then continues with segments that contain information about common equipment in the equipped units. If more than 4 units are equipped, the unit equipage output will be divided into multiple segments.

[O.53108]

```
[M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNITS e LN MSG:]
[<data line for common equipment in the first equipped unit>]
[<data line for common equipment in the second equipped unit>]
[<data line for common equipment in the third equipped unit>]
[<data line for common equipment in the fourth equipped unit> EOM]
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNITS e LN MSG:]
[<data line for common equipment in the fifth equipped unit>]
[<data line for common equipment in the sixth equipped unit>]
[<data line for common equipment in the seventh equipped unit>]
[<data line for common equipment in the eighth equipped unit> EOM]
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNITS e LN MSG:]
[<data line for common equipment in the ninth equipped unit>]
[<data line for common equipment in the tenth equipped unit>]
[<data line for common equipment in the eleventh equipped unit>]
[<data line for common equipment in the twelfth equipped unit> EOM]
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNITS e LN MSG:]
[<data line for common equipment in the thirteenth equipped unit>]
[<data line for common equipment in the fourteenth equipped unit>]
[<data line for common equipment in the fifteenth equipped unit>]
[<data line for common equipment in the sixteenth equipped unit> EOM]
```

Data line for a unit equipped as a DS1 FTU:

```
UNIT [q]q UC a FTMI b c d e FC f g h j k m p q[ CCB r s]
```

Data line for a unit equipped as a DS3U/HDS3U:

```
UNIT [q]q UC a FLI b c FMT l m MXR d e f g h j k MIU n o p q u v w[ CCB r s]
```

Data line for a unit equipped as a DSPU:

```
UNIT [q]q UC a DSPI b[ CCB r s]
```

The output message then lists the NPC numbers of equipped NPCs in each FTM/MXR/HMXR/DSPU. Output messages will be generated successively in ascending order by NPC number. If an FTM/MXR/HMXR/DSPU has no NPC equipped, the segment for that FTM/MXR/HMXR/DSPU will not be output.

Output message for equipage of NPCs in a DS1 FTM:

Please note, if any of the odd NPCs has been provisioned with a Digital Signal Processing Platform (DSP) application (TG193), then the even NPC following it does not exist and dashes will be shown in its place:

[O.53108]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD FTU NPCS uvmnp-uxkqr tt 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM
```

Output message for equipage of NPCs in a DS3U MXR/HDS3U HMXR:

Please note, if one or more DS2s in an HMXR have been provisioned with E1 NPCs, then the fourth NPC positions in those DS2s do not exist and will be represented by dashes in the output:

[O.53108]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD DS3U NPCS uvmnp-uxkqr tt 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM
```

Output message for equipage of NPCs in a DSPU:

[O.53108]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD DSPU NPCS uvmnp-uxkqr tt 2 LN MSG:
zzzzz zzzzz zzzzz zzzzz zzzzz zzzzz zzzzz zzzzz EOM
```

After the above information is output, the following format will be generated to complete the output response:

[O.53108]

```
M hh:mm:ss xy,ww n[vv] UTL QRY EQD COMPL
```

If the unit number is specified in the input, the following output messages will be generated:

Output message format for an FTU:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD 2 LN MSG:
UNIT [q]q UC a FTMI b c d e FC f g h j k m p q[CCB r s] EOM

The output then continues with up to 4 of the following segment; one for each FTM:

Please note, if any of the odd NPCs has been provisioned with a Digital Signal Processing Platform (DSPP) application (TG193), then the even NPC following it does not exist and dashes will be shown in its place:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNIT [q]q FTU NPCS uvmnp-uxkqr tt 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM

Output message format for a DS3U/HDS3U:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD 2 LN MSG:
UNIT [q]q UC a FLI b c FMT l m MXR d e f g h j k MIU n o p q u v w[CCB r s] EOM

The output message then continues with up to seven of the following segment; one for each MXR or HMXR:

Please note, if one or more DS2s in an HMXR have been provisioned with E1 NPCs, then the fourth NPC positions in those DS2s do not exist and will be represented by dashes in the output:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNIT [q]q DS3U NPCS uvmnp-uxkqr tt 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM

Output message format for a DSPU:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNIT [q]q UC a DSPI b CCB r s EOM

M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNIT [q]q DSPU NPCS uvmnp-uxkqr tt 2 LN MSG:
ZZZZZ ZZZZZ ZZZZZ ZZZZZ ZZZZZ ZZZZZ ZZZZZ ZZZZZ EOM

After the above information is output, the following message will be generated to complete the response:

[O.53108]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNIT [q]q COMPL

Denial Message

[O.53108.01]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNIT [q]q COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

EQD - Equipped

UNIT - Unit

[q]q - Unit number (1 through 16)

The UNIT option is specified to query that unit. The UNIT field will be null when the command is used for the entire frame. If the UNIT option is specified, only the information related to the equipment in that unit will be generated.

For the equipped query, each entity in the DACS II frame is represented by a single character variable. This variable can have a value of 1 or 0 indicating the following status:

Value	EQD or EQPD
1	equipped
0	unequipped

The DACS II entities and their status fields are as follows:

g - Link 1
h - Link 2
i - Link 3
j - Link 4
k - Link 5
l - Link 6
m - XC0 (cross-connect 0)
n - XC1 (cross-connect 1)
o - CCNI/CCI 0 (cross-connect network interface 0 for non-CEF frame)
 (clock and control interface 0 for CEF frame)
p - CCNI/CCI 1 (cross-connect network interface 1 for non-CEF frame)
 (clock and control interface 1 for CEF frame)

SYNC - Synchronizer

CRO - Clock reference oscillator

TLI - Timing link interface

The TLI entities are reported in the following order:

TLI 1, SSP 0, Side 0
TLI 1, SSP 1, Side 0
TLI 2, SSP 0, Side 0
TLI 2, SSP 1, Side 0
TLI 3, SSP 0, Side 0
TLI 3, SSP 1, Side 0
TLI 4, SSP 0, Side 0
TLI 4, SSP 1, Side 0

TLI 1, SSP 0, Side 1
TLI 1, SSP 1, Side 1
TLI 2, SSP 0, Side 1
TLI 2, SSP 1, Side 1
TLI 3, SSP 0, Side 1
TLI 3, SSP 1, Side 1
TLI 4, SSP 0, Side 1
TLI 4, SSP 1, Side 1

TSIS - Time slot interchangers NonCEF
ETSIS - Expanded time slot interchangers CEF

f - FROM unit (1 through 6)

t - TO Unit (1 through 6)

x - Equipage indication of an entity or of a side 0 entity if duplicated.

x - Equipage indication of a side 1 entity.

UC - Unit controller

FTMI - Facility terminating module interface

FC - Format converter

FLI - Facility line interface

FMT - Formatter or Hybrid Formatter

MXR - Multiplexer or Hybrid Multiplexer

MIU - Multiple interface unit

DSPI - Digital signal processing interface

[a]aaa - The first 3- or 4-digit nonhierarchical NPC number of an FTM/MXR/HMXR/DSPU.

[b]bbb - The last 3- or 4-digit nonhierarchical NPC number of an FTM/MXR/HMXR/DSPU.

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

If NPC numbers are expressed in three digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

[z]zzz - The 3- or 4-digit nonhierarchical DSPU NPC number, the span refers to the odd DSPU circuit pack NPCs, and the total is the number of NPC pairs equipped.

uvmnp - The first hierarchical NPC number of an FTM/MXR/HMXR/DSPU or a hierarchical DSPU NPC number.

uxkqr - The last hierarchical NPC number of an FTM/MXR/HMXR/DSPU

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

MB, SR, and MJ type numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

tt - Total number of equipped NPCs

For FTU Entities:

- a** - Status for UC
- b** - Status for FTMI 1 of specified Unit
- c** - Status for FTMI 2 of specified Unit
- d** - Status for FTMI 3 of specified Unit
- e** - Status for FTMI 4 of specified Unit

- f** - Status for FC 01 of specified Unit
- g** - Status for FC 11 of specified Unit
- h** - Status for FC 02 of specified Unit
- j** - Status for FC 12 of specified Unit
- k** - Status for FC 03 of specified Unit
- m** - Status for FC 13 of specified Unit
- p** - Status for FC 04 of specified Unit
- q** - Status for FC 14 of specified Unit

- CCB** - Cross-connect buffer NonCEF
- r** - Status for CCB 0q in CCN 0 for specified Unit q
- s** - Status for CCB 1q in CCN 1 for specified Unit q

For DS3U/HDS3U Entities:

- a** - Status for UC
- l** - Status for FMT/HFMT 0 of specified DS3U/HDS3U
- m** - Status for FMT/HFMT 1 of specified DS3U/HDS3U
- b** - Status for service FLI of specified DS3U/HDS3U
- c** - Status for protection FLI of specified DS3U/HDS3U
- d** - Status for protection MXR of specified DS3U/HDS3U
- e** - Status for MXR/HMXR 1 of specified DS3U/HDS3U
- f** - Status for MXR/HMXR 2 of specified DS3U/HDS3U
- g** - Status for MXR/HMXR 3 of specified DS3U/HDS3U
- h** - Status for MXR/HMXR 4 of specified DS3U/HDS3U
- j** - Status for MXR/HMXR 5 of specified DS3U/HDS3U
- k** - Status for MXR/HMXR 6 of specified DS3U/HDS3U
- n** - Status for protection MIU of specified DS3 Unit
- o** - Status for MIU 1 of specified DS3 Unit
- p** - Status for MIU 2 of specified DS3 Unit
- q** - Status for MIU 3 of specified DS3 Unit
- u** - Status for MIU 4 of specified DS3 Unit
- v** - Status for MIU 5 of specified DS3 Unit
- w** - Status for MIU 6 of specified DS3 Unit

For DSPU Entities:

- a** - Status for UC
- b** - Status of DSPI for specified unit
- [x]xxx** - The 3- or 4-digit nonhierarchical FTU/DS3U/HDS3U NPC number ([a]aaa through [b]bbb)
- xxxxx** - Hierarchical FTU/DS3U/HDS3U NPC number (uvmnp through uxkqr)

cc - Hexadecimal condition code

cc *Explanation*

02 Subject entity is not equipped

UTL, QRY, EQD, UNITS

UTILITIES, EQUIPAGE STATUS

Explanation Of Command

This message requests a printout of all units that are equipped.

Command

[I.53011]

UTL:FRM xy,SEQ ww:QRY,EQD,UNITS!

Completion Message

[O.53011]

M hh:mm:ss xy,ww n[vv] UTL QRY EQD UNIT 2 LN MSG:
aa bb cc dd ee ff gg hh ii jj kk ll mm nn oo pp COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

EQD - Request equipage status

UNITS - Request information on units

aa - Equipage status of Unit number 01
bb - Equipage status of Unit number 02
cc - Equipage status of Unit number 03
dd - Equipage status of Unit number 04
ee - Equipage status of Unit number 05
ff - Equipage status of Unit number 06
gg - Equipage status of Unit number 07
hh - Equipage status of Unit number 08
ii - Equipage status of Unit number 09
jj - Equipage status of Unit number 10
kk - Equipage status of Unit number 11
ll - Equipage status of Unit number 12
mm - Equipage status of Unit number 13
nn - Equipage status of Unit number 14
oo - Equipage status of Unit number 15
pp - Equipage status of Unit number 16

If the unit is equipped, the unit number will be shown in its corresponding position. If the unit is not equipped, the number "00" will be shown.

UTL,QRY,ERR,SWER,HWER,INT,DATE,TOD,TN

QUERY SOFTWARE/HARDWARE ERROR RECOVERY

Explanation Of Command

This message requests a printout of the contents of the error recovery log file. The log file contains the past history of error recovery events and can be very large. Therefore, the printout can be aborted. Because the printout is of a technical nature, assistance may be necessary for interpretation.

At least one option must be specified in the input command or it will be denied.

Note: Both the USA date format and international date format are supported by this command. The date format is set by the UTL::DATE,FORMAT,INT command and this message must use the same format. The date format shown in the output for this command will match the current setting.

Note: In the 8-character Block number 10 output of the hardware error log file, the first 4 numbers display the unit number while the second four numbers equate to the NPC number. For the hardware error log, the number of NPCs per unit is 170 instead of 160. This is because the DACS II supports a flexible frame configuration. In each DS3 unit, there are 168 NPCs. To obtain the NPC number, convert the hexadecimal number to decimal and add 1 and then subtract 10 from the result for the NPCs in Unit 2, subtract 20 from the result for the NPCs in Unit 3, . . . , subtract 150 from the result for the NPCs in Unit 16. For example, the first NPC in Unit 1 (NPC 1) will be displayed as 0 (not 1) in hexadecimal format, the first NPC in Unit 2 (NPC 161) will be displayed as 170 (not 161) in hexadecimal format, the first NPC in Unit 3 (NPC 321) will be displayed as 340 (not 321) in hexadecimal format, and so on.

Therefore, the output for the hardware log will be:

00000000 thru 000000a7	for NPC 001 thru 16H (1 - 160, 16A - 16H)
000100aa thru 00010151	for NPC 161 thru 32H (161 - 320, 32A - 32H)
00020154 thru 000201fb	for NPC 321 thru 48H (321 - 480, 48A - 48H)
000301fe thru 000302a5	for NPC 481 thru 64H (481 - 640, 64A - 64H)
000402a8 thru 0004034f	for NPC 641 thru 80H (641 - 800, 80A - 80H)
00050352 thru 000503f9	for NPC 801 thru 96H (801 - 960, 96A - 96H)
000603fc thru 000604a3	for NPC 961 thru 112H (961 - 1120, 112A - 112H)
000704a6 thru 0007054d	for NPC 1121 thru 128H (1121 - 1280, 128A - 128H)
00080550 thru 000805f7	for NPC 1281 thru 144H (1281 - 1440, 144A - 144H)
000905fa thru 000906a1	for NPC 1441 thru 160H (1441 - 1600, 160A - 160H)
000a06a4 thru 000a074b	for NPC 1601 thru 176H (1601 - 1760, 176A - 176H)
000b074e thru 000b07f5	for NPC 1761 thru 192H (1761 - 1920, 192A - 192H)
000c07f8 thru 000c089f	for NPC 1921 thru 208H (1921 - 2080, 208A - 208H)
000d08a2 thru 000d0949	for NPC 2081 thru 224H (2081 - 2240, 224A - 224H)
000e094c thru 000e09f3	for NPC 2241 thru 240H (2241 - 2400, 240A - 240H)
000f09f6 thru 000f0a9d	for NPC 2401 thru 256H (2401 - 2560, 256A - 256H)

Command

[I.55011]

UTL:FRM xy,SEQ ww:QRY,ERR,{SWER|HWER}[,{INT mn|[DATE moda[ce]yr,] TOD hrmsnc}}\
[,TN x'dddd][,EVENT x'eeee][,ERCL{HARD|TRANS|APPINT}][,ENTY <entity>]|ALL]!

Completion Message

[O.55011]

M hh:mm:ss xy,ww n[vv] UTL QRY ERR SWER mo/da/yr hr:mn:sc 3 LN MSG:
ENTITY=xxxxxx ERROR=xxxxxx SOURCE=xxxxxx DP=xx
TN=xxxx PID=xxxxxx RC=xxxxxx MID=xxxx PROC=xxxxxx EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ERR SWER TROUBLE SHOOTING ARGS 3 LN MSG:
TSARGSxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
FAUDTIME xxxxxxxx FACyxxxx FATNxxxx ISPExxxx xxxxxxxx EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ERR SWER STACK TRACE ONE 5 LN MSG:
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ERR SWER STACK TRACE TWO 5 LN MSG:
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx {EOM|COMPL}

[O.55012]

M hh:mm:ss xy,ww n[vv] UTL QRY ERR HWER mo/da/yr hr:mn:sc 5 LN MSG:
HOSTxxxx ENTtxxxx ERRCxxxx ERRTxxxx TRANxxxx EVENxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx {EOM|COMPL}

[O.55013]

M hh:mm:ss xy,ww n[vv] UTL QRY ERR SWER BACKGROUND AUDITS 3 LN MSG:
MSGTYP=<1000> SOURCE=<2000> ADD1=<400000> ADD2=xx
DATA=<5000> CHKACT=<6000> CHKCOM=<7000> COMMT0=<8000> {EOM|COMPL}

[O.55014]

M hh:mm:ss xy,ww n[vv] UTL QRY ERR {{SWER|HWER}|ALL} COMPL

Denial Message

[O.55011.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ERR HWER ENTY <entity> cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ALL - Output the entire hardware and software log file.

The ALL keyword will cause the entire log file, both hardware and software log messages, to be output. The user should understand that this keyword may generate a large volume of output. No other optional keywords should be coded together with the ALL keyword.

ERR - Error recovery

Refers to the error recovery log file

SWER - Software error

Query the software error log file.

HWER - Hardware error

Query the hardware error log file.

INT - Time interval

The user may retrieve entries by specifying a past interval of time. This interval may be specified as the last 59 minutes or less or as the interval beginning at a specified date and time of day (see DATE and TOD keywords). If the time but not the optional date is specified, DACS II assumes the present date.

During a system boot the time on the system clock defaults to the time 00:00:00 and the date 12/31/1999 until the clock is initialized. Errors occurring during the boot process consequently are logged as though they occurred in the future when actually they occurred in the past. Because of this behavior a user requesting the errors over one of the intervals mentioned above may experience a large volume of error output listing errors that will (seemingly) occur in the future. These errors actually occurred before the system clock was initialized and should be interpreted as such.

mn - minutes (00 to 59)

DATE - date

moda[ce]yr

mo - Month (01 through 12)

da - Day (01 through 31)

ce - Century (19 or 20)

yr - Year (00 through 99)

TOD - time of day

hrmns - Hours, minutes, seconds
hr-mn-sc

hr - hour (00 through 23)
mn - Minutes (00 through 59)
sc - seconds (00 through 59)

TN - Transaction

X - Hexadecimal

dddd - Transaction number

EVENT - Event

eeee - Event number

ERCL - Error class

This keyword applies only to queries of the hardware error log file (HWER option). It is not applicable to queries of the software error log file (SWER option) and it returns no data for the software case. The hardware log file may be queried for errors of either the hardware or transient error class.

HARD - Hard

Hardware error detected by Error Recovery

TRANS - Transient

Transient error detected by Error Recovery

APPINT - Application interrupt

Hardware error detected by applications

ENTY - Entity (hardware)

This keyword applies only to queries of the hardware error log file (HWER option). It is not applicable to queries of the software error log file (SWER option) and it returns no data for the software case. The hardware log file may be queried for entries related to particular DACS II hardware entities.

entity - Entity type

entity Explanation

BX	Bus extender
CCB	Cross-connect buffer
CCNI	Cross-connect network interface
CCI	Clock and control interface
CI	Communications interface
CPR	C-bit processor
CRO	Clock reference oscillator
DDC	Dual digroup circuit
DISK	Hard disk
DMB	Digital multipoint bridge
DSPI	Digital signal processor interface
EBX	Expanded bus extender
EMTC	Expanded maintenance circuit
ETSI	Expanded time slot interchanger
FC	Format converter
FLI	Facility line interface
FMT	Formatter
FTMI	Facility terminating module interface
LINK	Administrative link
MC	Main controller
MIU	Multiplexer interface unit
MJU	Multipoint junction unit
MP	Main processor
MTC	Maintenance circuit
MXR	Multiplexer
NPC	Network processing circuit
SRM	Subrate multiplexer
SSC	Secondary storage controller
SYNC	Synchronizers (DPLL, TB)
TAPE	Tape drive
TL	Timing link
TLI	Timing link interface
TSI	Time slot interchange
UBX	Unit bus extender
UC	Unit controller

ENTITY - Entity

ERROR - Error

SOURCE - Source

DP - Decision point

PID - Process identification

RC - Return code (of function in which the error occurred)

MID - Mbox identification

PROC - Process

TSARGS - Trouble shooting arguments

FAUDTIME - Frame audit time

FACY - Frame audits cycle number when the error occurred

FATN - Frame audits test number when the error occurred

ISPE - ISPer LAN error count

HOST - Host

xxxx - Error identification

Controller (sub-system) on which the error occurred

xxxx error

0000	UC1
0001	UC2
0002	UC3
0003	UC4
0004	UC5
0005	UC6
0006	UC7
0007	UC8
0008	UC9
0009	UC10
000a	UC11
000b	UC12
000c	UC13
000d	UC14
000e	UC15
000f	UC16
0010	CI
0011	MP

ENTT - Hardware entity for hardware error recovery

xxxx Explanation

0001	Unit UC
0002	UBX
0003	EBX
0004	FTMI
0005	FC
0006	DDC
0007	DSPI
0008	DMB
0009	CCNI
000A	CCB
000B	TSI
000C	SSC
000D	EMTC
000E	SYNC
000F	TLI
0010	Timing Link
0011	DISK
0012	TAPE
0013	MP
0014	CI
0015	LINK
0016	NPC
0017	MC
0018	MJU
0019	SRM
001A	DS3U MXR
001B	DS3U FLI
001C	DS3U FMT
001D	DS3U MIU
001E	PR
001F	ECCN CCI
0020	EBX
0021	CCI
0022	ETSI

ERRC - Error class

xxxx - Error identification

xxxx Error

0001 Hardware Error

0002 Transient Error

0003 Power Failure

0004 Error Sanity Bit Error

0005 CI Link related errors

0006 Sync mode switch

0007 Software error recovery

0008 Error not found

0009 Sync booted message from boot

000A Sync timing link errors

000B Background audits

000C Facility errors

000D Disk log of errors from HARDERR()

000E Error detected from Frame Audits

ERRT - Error type

TRAN - Transaction number (software)

EVEN - Event number (software)

MSGTYP - Message type

ADD1 - Address 1

First address of failed range

ADD2 - Address 2

Second address of failed range

DATA - Data

CHKACT - Actual check

CHKCOM - Computed check

COMMT0 - Communication to (lost)

MEMORY DATA

- Memory data

READY QUEUE

- Ready queue

PAUSE QUEUE

- Pause queue

LOCAL STACK

- Local stack

STACK TRACE

- Stack trace

cc - Hexadecimal condition code

cc *Explanation*

97 Entity can't be addressed in this configuration

UTL,QRY,ESR,CCN

UTILITY QUERY ERROR SOURCE REGISTER

Explanation Of Command

This message requests a printout of the error source register for one side of a cross-connect network (CCN).

Command

[I.55401]

UTL:FRM xy,SEQ ww:QRY,ESR,CCN s!

Completion Message

[O.55401]

**M hh:mm:ss xy,ww n[vv] UTL QRY ESR CCN s 4 LN MSG:
MAIN,CCB abcdef ghijkl
FTMI abcd efgh ijkl mnop qrst uvwx
TSIS <tsi a> <tsi b> <tsi c> <tsi d> <tsi e> <tsi f> COMPL**

Denial Message

[O.55401.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR CCN s COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ESR - Error source register

CCN - Cross-connect network

s - Cross-connect network side (0 or 1)

CCB - Cross-connect buffer

abcdef, ghijkl

- MAIN, CCB error source register information

- a is set to indicate an error has occurred on the synchronizer.
- b is set to indicate a parity error was detected on the address bus.
- c is set to indicate a parity error was detected on the low byte of data.
- d is set to indicate a parity error was detected on the high byte of data.
- e is set to indicate an error was detected on the BSR (Bus Status Register). This error indicates that there was a parity error over the work written in the register.
- f is set to indicate a parity error has occurred on autonomous

Switch Enable Circuit - ghijkl represents CCB 1 through 6.

FTMI - Facility terminating module interface

abcd, efgh, ijkl, mnop,qrst, uvwx

- FTMI error source register information

abcd - FTMI 1 - 4 of Unit 1 (not used)

efgh - FTMI 1 - 4 of Unit 2 (not used)

ijkl - FTMI 1 - 4 of Unit 3 (not used)

mnop - FTMI 1 - 4 of Unit 4 (not used)

qrst - FTMI 1 - 4 of Unit 5 (not used)

uvwx - FTMI 1 - 4 of Unit 6 (not used)

TSI - Time slot interchange

<tsi a>, ..., <tsi f> - TSI error source register information.

Each register is six bits long. A bit set indicates the denoted entity is either out of frame or in frame but under alarm state.

tsi a - Denotes for TSI 1,1; 1,2; 1,3; 1,4; 1,5; 1,6

tsi b - Denotes for TSI 2,1; 2,2; 2,3; 2,4; 2,5; 2,6

tsi c - Denotes for TSI 3,1; 3,2; 3,3; 3,4; 3,5; 3,6

tsi d - Denotes for TSI 4,1; 4,2; 4,3; 4,4; 4,5; 4,6

tsi e - Denotes for TSI 5,1; 5,2; 5,3; 5,4; 5,5; 5,6

tsi f - Denotes for TSI 6,1; 6,2; 6,3; 6,4; 6,5; 6,6

cc - Hexadecimal condition code

cc *Explanation*

04 Subject entity is out of service

UTL,QRY,ESR,ECCN

QUERY ECCN ERROR SOURCE REGISTER

Explanation Of Command

This message requests a printout of the contents of the Expanded Cross-Connect Network Error Source Register.

Command

[I.55411]

UTL:FRM xy,SEQ ww:QRY,ESR,ECCN s!

Completion Message

[O.55411]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR ECCN s 4 LN MSG:

CCI wd02 wd01 wd00

aaaa bbbb cccc dddd

eeee ffff gggg hhhh

iiii jjjj kkkk llll

mmmm nnnn oooo pppp {EOM|COMPL}

[M hh:mm:ss xy,ww n[vv] UTL QRY ESR ECCN s e LN MSG:]

[ETSI sqq wd05 wd04 wd03 wd02 wd01 wd00]

[ETSI sqq wd05 wd04 wd03 wd02 wd01 wd00]

[ETSI sqq wd05 wd04 wd03 wd02 wd01 wd00]

[ETSI sqq wd05 wd04 wd03 wd02 wd01 wd00 EOM]

.
.
.

[M hh:mm:ss xy,ww n[vv] UTL QRY ESR ECCN s e LN MSG:]

[ETSI sqq wd05 wd04 wd03 wd02 wd01 wd00]

[ETSI sqq wd05 wd04 wd03 wd02 wd01 wd00]

[ETSI sqq wd05 wd04 wd03 wd02 wd01 wd00]

[ETSI sqq wd05 wd04 wd03 wd02 wd01 wd00 {EOM|COMPL}]

Denial Message

[O.55411.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR ECCN s COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ESR - Error source register

e - Number of lines in the segment (2 through 5)

ECCN - Expanded cross-connect network

s - ECCN side (0 or 1)

qq - Unit number (01 through 16)

ETSI - Expanded Time Slot Interchanger

The ESR data for a ETSI will be shown only if the ETSI is restored. If no ETSI in the ECCN side is restored, only the ESR data of the CCI will be shown.

CCI - Clock and Control Interface

wd02,

wd01,

wd00 - Error source register data words for the CCI. Each word is a 4-digit hexadecimal number.

wdxx Definition

wd00 CCI System Status Register

wd01 CCI Status Register

wd02 CCI Bus Status Register

Note: wd02 shows the active side; therefore, it is normal to have a non-zero value.

aaaa,

bbbb,

cccc,

dddd - CCI register for ETSI alarm information.

This 16 bit register is shown as four 4-bit binary numbers. Each bit represents one ETSI. The ETSIs are arranged by unit number in descending order from left to right. That is, the left-most bit reports alarm information for the unit 16 ETSI, while the right-most bit reports alarm information for the unit 1 ETSI.

Descending order-->

aaaa bbbb cccc dddd

^

^

|

Unit 16 ETSI **Unit 1 ETSI**

eeee,
ffff,
gggg,
hhhh - CCI register for ETSI equipage information

See the explanation given for aaaa-dddd above.

iiii,
jjjj,
kkkk,
llll - CCI register for ETSI ready timeout information

See the explanation given for aaaa-dddd above.

mmmm,
nnnn,
oooo,
pppp - CCI register for ETSI read high information

See the explanation given for aaaa-dddd above.

sqq - Combined ECCN side and unit number

See the definitions of s and qq above.

wd05,
wd04,
...,
wd00

- Error source register data words for the ETSI

Each word is a 4-digit hexadecimal number representing the contents of the error source register listed in the table below.

<i>wdxx</i>	<i>Definition</i>
wd00	Circuit Pack Summary Register
wd01	Receive Status Register
wd02	Transmit Status Register
wd03	Control RAM Status Register
wd04	Control RAM Port Alarm Register
wd05	Control RAM Data RAM Alarm Register

UTL,QRY,ESR,MP

QUERY ERROR SOURCE REGISTER MAIN PROCESSOR

Explanation Of Command

This message requests a printout of the 40-bit error source register (ESR) for the main processor (MP).

Command

[I.55111]

UTL:FRM xy,SEQ ww:QRY,ESR,MP!

Completion Message

[O.55111]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR MP 2 LN MSG:
aa bb cc dd ee[ff gg hh ii] COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

ESR - Error source register

MP - Main Processor

Variables aa, bb, cc, dd, ee, ff, gg, hh, and ii are two digit hexadecimal numbers representing error source registers. The bits in these registers are numbered as shown below:

hex hh = bbbbbb binary
76543210 Bit numbering

aa - Error Source Bit (ESB) group. (hexadecimal)

aa Function

a0	SYNC 0 power supply ESB
a1	SYNC 1 power supply ESB
a2	CCN/ECCN 0 power supply ESB
a3	CCN/ECCN 1 power supply ESB
a4	Spare
a5	Spare
a6	Spare
a7	Spare

bb - Error Source Bit (ESB) group. (hexadecimal)

bb Function

b0	UC 01 power supply ESB
b1	UC 02 power supply ESB
b2	UC 03 power supply ESB
b3	UC 04 power supply ESB
b4	UC 05 power supply ESB
b5	UC 06 power supply ESB
b6	UC 07 power supply ESB for CEF, Spare for Non-CEF
b7	Spare

cc - Error Source Bit (ESB) group. (hexadecimal)

<i>cc</i>	<i>Function</i>
c0	UC 01 ESB
c1	UC 02 ESB
c2	UC 03 ESB
c3	UC 04 ESB
c4	UC 05 ESB
c5	UC 06 ESB
c6	UC 07 ESB for CEF, Spare for Non-CEF
c7	UC 08 ESB for CEF, Spare for Non-CEF

dd - Error Source Bit (ESB) group. (hexadecimal)

<i>dd</i>	<i>Function</i>
d0	MC CPU ESB
d1	MC CI ESB
d2	MC SSC ESB
d3	Spare
d4	MC power supply 0 ESB
d5	MC power supply 1 ESB
d6	Spare
d7	Spare

ee - Error Source Bit (ESB) group. (hexadecimal)

<i>ee</i>	<i>Function</i>
e0	Parity over Low Data Byte
e1	Parity over High Data Byte
e2	Error from Side 0 Bus Extension
e3	Error from Side 1 Bus Extension
e4	ECCN side 0 circuit not present for CEF, Spare for Non-CEF
e5	ECCN side 1 circuit not present for CEF, Spare for Non-CEF
e6	Write parity error over low byte data for CEF, Spare for Non-CEF
e7	Write parity error over high byte data for CEF, Spare for Non-CEF

The following parameters (ff, gg, hh, ii) apply only to CEF frames:

ff - Error Source Bit (ESB) group. (hexadecimal)

<i>ff</i>	<i>Function</i>
f0	UC 08 power supply ESB
f1	UC 09 power supply ESB
f2	UC 10 power supply ESB
f3	UC 11 power supply ESB
f4	UC 12 power supply ESB
f5	Spare
f6	Spare
f7	Spare

gg - Error Source Bit (ESB) group. (hexadecimal)

<i>gg</i>	<i>Function</i>
g0	UC 13 power supply ESB
g1	UC 14 power supply ESB
g2	UC 15 power supply ESB
g3	UC 16 power supply ESB
g4	Spare
g5	Spare
g6	Spare
g7	Spare

hh - Error Source Bit (ESB) group. (hexadecimal)

<i>hh</i>	<i>Function</i>
h0	UC 09 ESB
h1	UC 10 ESB
h2	UC 11 ESB
h3	UC 12 ESB
h4	Spare
h5	Spare
h6	Spare
h7	Spare

ii - Error Source Bit (ESB) group. (hexadecimal)

<i>ii</i>	<i>Function</i>
i0	UC 13 ESB
i1	UC 14 ESB
i2	UC 15 ESB
i3	UC 16 ESB
i4	Spare
i5	Spare
i6	Spare
i7	Spare

UTL, QRY, ESR, NPC, SIDE

UTILITY QUERY ESR FOR FTU OR SUBRATE NPC

Explanation Of Command

This message requests a print out of the error source register for a particular network processing circuit (NPC) or Subrate circuit pack. Any attempt to input the command for an NPC in a DS3 unit will be denied. Instead, input the command for the error source register for a multiplexer (MXR), a multiplexer interface unit (MIU), or a facility line interface (FLI).

Command

Nonhierarchical

[I.55601]

UTL:FRM xy,SEQ ww:QRY,ESR,NPC [s]abc[,SIDE s]!

Hierarchical

[I.55601]

UTL:FRM xy,SEQ ww:QRY,ESR,NPC uvmnp[,SIDE s]!

Completion Message

Nonhierarchical

[O.55601]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR NPC [s]abc 2 LN MSG:
aa bb cc dd ee ff gg hh ii jj COMPL

Note: The above message applies if the side is not specified.

[O.55602]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR NPC [s]abc SIDE s \
TYPE mnxyz 2 LN MSG:
defghijk lmnopqrs COMPL

Note: The above message applies if the side is specified.

Hierarchical

[O.55601]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR NPC uvmnp 2 LN MSG:
aa bb cc dd ee ff gg hh ii jj COMPL

Note: The above message applies if the side is not specified.

[O.55602]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR NPC uvmnp SIDE s \
TYPE mnxyz 2 LN MSG:
defghijk lmnopqrs COMPL

Note: The above message applies if the side is specified.

Denial Message

Nonhierarchical

[O.55601.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR NPC [s]abc[SIDE s] COND cc DNY

Hierarchical

[O.55601.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR NPC uvmnp[SIDE s] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ESR - Error source register

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

SR and MJ type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001	NPC 161	NPC 321	NPC 481	NPC 641	NPC 801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

SR and MJ type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001	NPC 0161	NPC 0321	NPC 0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

SIDE - Side

s - Side number (0 or 1)

Substrate type circuit packs are duplicated; therefore, the side must be specified in order to request the contents of the error source register. The side must not be specified when the NPC is a facility terminating NPC.

uvmnp - Hierarchical NPC number

- uv** - Unit number
- m** - Module number
- np** - NPC number within the module

The allowable values are presented below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

SR and MJ NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

Note: In the error source register listings below, the bits are each shown set individually (bit value = 1). In actual practice the bits may be set in combination. For example a value of 0C for register dd would be interpreted as follows:

X'0C = 00001100 binary

Bits 2 and 3 are set to one. An examination of the bits for register dd shows that X'0C means RAM diagnostic complete and power up ready.

aa - Communications Interface ESR 1 (Hexadecimal)

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0	1	Channel controller error
1	1	Unassigned
2	1	Chip identification parity error
3	1	Sync error
4	1	Facility processor sanity error
5	1	Hardware error
6	1	Transceiver A error
7	1	Transceiver B error

bb - Not used

cc - Channel Controller ESR (Hexadecimal)

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0	1	Exercise indicator
1	1	Receive data parity error
2	1	Transmit data parity error
3	1	Instruction RAM parity error
4	1	Configuration register parity error
5	1	Processor error
6	1	Sync error
7	1	Loss of clock (8 MHz)

dd - Hardware error data from DDC shared RAM (Hexadecimal)

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0	1	Not used
1	1	Not used
2	1	RAM diagnostic complete
3	1	Power up ready
4	1	Not used
5	1	Not used
6	1	RAM diagnostic failure
7	1	ROM checksum failure

ee - Transceiver A ESR (framer alarms) (Hexadecimal)

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0	1	Device error Remote Frame Alignment
1	1	Device error Remote Multiframe Alignment
2	1	Device error Loss of Multiframe Alignment
3	1	Device error Framing Bit Error
4	1	Not used
5	1	Not used
6	1	Not used
7	1	Not used

ff - Transceiver A ESR (receive sync alarms) (Hexadecimal)

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0	1	STOMP block device error
1	1	ALU block device error
2	1	ALU block device error
3	1	Data link
4	1	Missing receive synchronizer sync
5	1	Signaling RAM parity error
6	1	PCM RAM parity error
7	1	E signaling bit error

gg - Transceiver A ESR (transmitter alarms) (Hexadecimal)

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0	1	Transmit framing bit generator circuit
1	1	Transmitter SLIP
2	1	Internal parity error
3	1	Missing transmit sync
4	1	Misaligned transmit sync
5	1	Transmit SLC®-96 carrier framer device alarm
6	1	Missing SLC 96 carrier Fs superframe sync
7	1	Misaligned SLC 96 carrier Fs superframe sync

hh - Transceiver A ESR (framer alarms) (Hexadecimal)

Values and explanations are the same as ee

ii - Transceiver B ESR (receive sync alarms) (Hexadecimal)

Values and explanations are the same as ff

jj - Transceiver B ESR (transmitter alarms) (Hexadecimal)

Values and explanations are the same as gg

mnxyz - NPC type

mnxyz Explanation

MJ100 Multipoint junction unit
SR100 Subrate multiplexer unit

The meaning of the bits for types MJ100 and SR100 depends upon the type reported in the output message.

TYPE SR100

defghijk

- First 8 bits of Substrate circuit pack error source register

<i>Bit</i>	<i>Value</i>	<i>Fault</i>
d	1	Parallel interface between the DSPU processor and the SR100
e	1	Data interface between the DSPU backplane and the SR100
f	1	Data path internal to the SR100 including the Error Correction Device (ECD)
g	1	Data interface between the DSPU backplane and the SR100, or data path internal to the SR100 including the ECD, or PROM5 device
h	1	Output block of SR100, or bus feeding the output block
i	1	Internal data RAM
j	1	Multiplexer state machine, or bus feeding the output block
k	1	Clock circuitry

lmnopqrs

- Second 8 bits of Substrate circuit pack error source register

<i>Bit</i>	<i>Value</i>	<i>Fault</i>
l	1	Built-in self test on ECD
m-s	0	Unused

TYPE MJ100

defghijk

- First 8 bits of Substrate circuit pack error source register

<i>Bit</i>	<i>Value</i>	<i>Fault</i>
d	1	Parallel interface Device (PID), or parallel control bus
e	1	Data interface between the ETSI and the MJ100
f	1	ECD data input, or ECD
g	1	MJU control memory parity
h	1	Data path to the output block, or output data interface block, or control code state machine, or FTU time slot parity correction PROM
i	1	MJU control signal PROM
j	1	Overwrite state machine, or secondary channel state machine, or ECD control memory
k	1	Clock

l m n o p q r s

- Second 8 bits of Substrate circuit pack error source register

<i>Bit</i>	<i>Value</i>	<i>Fault</i>
l	1	Built-in self test on ECD
m-s	0	Unused

cc - Hexadecimal condition code

cc	<i>Explanation</i>
02	Subject entity is not equipped
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
14	FTMI is out of service
26	NPC type error
37	DSPI out-of-service
3E	DSPI failed
0B	Invalid CEPT NPC
0F	Side specified for non-duplicated NPC
2A	Incorrect pack type in slot
57	SIDE must be specified for substrate NPC

UTL,QRY,ESR,UNIT

UTILITY QUERY ERROR SOURCE REGISTER

Explanation Of Command

This message prints out the contents of the error source register for a facility terminating unit (FTU), DS3 unit (DS3U), or Hybrid DS3 unit (HDS3U)

Command

[I.55501]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q!

Completion Message

[O.55501]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q aa COMPL

Note: The above message applies to an FTU.

[O.55501]

**M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q bbbb cccc dddd \
eeee COMPL**

Note: The above message applies to a DS3 unit.

Denial Message

[O.55501.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ESR - Error source register

UNIT - Unit

[q]q - Unit number (1 through 16)

aa - FTU ESR

aa Explanation

A2 Error from FTMI 1

A4 Error from FTMI 2

A5 Error from FTMI 3

A6 Error from FTMI 4

bbbb - DS3U or HDS3U Interrupt holding register 0.
Hexadecimal digits are numbered 3210 in left to right order.

<i>hex</i> digit	Bit	Value	Definition
0	0	1	Ram Parity Error
0	1	1	Internal Bus Error
0	2	1	Parallel Bus Parity Error
0	3	1	Series Bus Parity Error
1-3	4-15		Unused

cccc - DS3U or HDS3U Interrupt holding register 1
Hexadecimal digits are numbered 3210 in left to right order.

<i>hex</i> digit	Bit	Value	Definition
0	0	1	MXR1 Power Loss Interrupt
0	1	1	MXR2 Power Loss Interrupt
0	2	1	MXR3 Power Loss Interrupt
0	3	1	MXR4 Power Loss Interrupt
1	4	1	MXR5 Power Loss Interrupt
1	5	1	MXR6 Power Loss Interrupt
1	6	1	MXRP Power Loss Interrupt
1	7	1	SFLI Power Loss Interrupt
2	8	1	MIU1 Power Loss Interrupt
2	9	1	MIU2 Power Loss Interrupt
2	10	1	MIU3 Power Loss Interrupt
2	11	1	MIU4 Power Loss Interrupt
3	12	1	MIU5 Power Loss Interrupt
3	13	1	MIU6 Power Loss Interrupt
3	14	1	MIUP Power Loss Interrupt
3	15	1	PFLI Power Loss Interrupt

dddd - DS3U or HDS3U Interrupt holding register 2 (hexadecimal)
Hexadecimal digits are numbered 3210 in left to right order.

<i>hex</i> digit	Bit	Value	Definition
0	0	1	MXR1 Interrupt
0	1	1	MXR2 Interrupt
0	2	1	MXR3 Interrupt
0	3	1	MXR4 Interrupt
1	4	1	MXR5 Interrupt
1	5	1	MXR6 Interrupt
1	6	1	MXRP Interrupt
1	7	1	0FMT Power Loss Interrupt
2	8	1	MIU1 Interrupt
2	9	1	MIU2 Interrupt
2	10	1	MIU3 Interrupt
2	11	1	MIU4 Interrupt
3	12	1	MIU5 Interrupt
3	13	1	MIU6 Interrupt
3	14	1	MIUP Interrupt
3	15	1	1FMT Power Loss Interrupt

eeee - DS3U or HDS3U CI error source register (hexadecimal)
Hexadecimal digits are numbered 3210 in left to right order.

<i>hex</i> digit	Bit	Value	Definition
0	0	1	Link 1 Error
0	1	1	Link 2 Error
0	2	1	Link 3 Error
0	3	1	Link 4 Error
1	4	1	Link 5 Error
1	5	1	Link 6 Error
1	6	1	Link 7 Error
1	7	1	Link 8 Error
2	8	1	CI device ID Error
2	9	1	Address Parity Error
2	10	1	Data Strobe Error
2	11	1	Loss of Timing Error
3	12-15		Not Used

cc - Hexadecimal condition code

cc *Explanation*

- 02** Subject entity is not equipped
- 04** Subject entity is out of service

UTL, QRY, ESR, UNIT, DSPI

QUERY ERROR SOURCE REGISTER

Explanation Of Command

This message prints out the contents of the error source register for the digital signal processing interface (DSPI) in a digital signal processing unit (DSPU).

Command

[I.55531]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,DSPI!

Completion Message

[O.55531]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q DSPI 2 LN MSG:
SIDE 0: p1p2p3p4p5p6p7p8 SIDE 1: p1p2p3p4p5p6p7p8 COMPL

Denial Message

[O.55531.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q DSPI 2 LN MSG:
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ESR - Error source register

UNIT - Unit

[q]q - Unit number (1 through 16)

DSPI - Digital signal processing interface

p1, . . . , p8
- Register data bits

<i>Bit Position</i>	<i>Error Interrupt For DSPU Circuit Packs</i>
p1	1
p2	2
p3	3
p4	4
p5	5
p6	6
p7	7
p8	8

reason - Reason for denial

reason

UNIT [q]q IS NOT EQUIPPED
UNIT [q]q IS OUT-OF-SERVICE
UNIT [q]q IS FAILED

UTL, QRY, ESR, UNIT, FC

QUERY ERROR SOURCE REGISTER

Explanation Of Command

This message prints out the contents of the error source register for a format converter (FC) in a particular unit.

Command

[I.55521]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,FC sb!

Completion Message

[O.55521]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q FC sb 2 LN MSG:
aa bb cc dd ee COMPL

Denial Message

[O.55521.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q FC sb COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ESR - Error source register

UNIT - Unit

[q]q - Unit number (1 through 16)

FC - Format converter

s - Side (0 or 1)

b - Format converter number (1 through 4)

Note: Data bytes aa through gg must be converted from hexadecimal to binary before the tables below can be used to interpret the data byte values. Each hexdigit converts to 4 binary digits. Bits are numbered from right to left starting from 0 as follows; 76543210.

For example if aa = 01 the binary equivalent of this is 0000 0001. Using the table for aa below this indicates that there is an alarm on the Receive formatter.

Bit value	Explanation
0	Indicates NO error or alarm
1	Indicates an error or alarm

aa - Communications interface (CI) error source register 0 (ESR0) (Hexadecimal)

<i>Bit</i>	<i>Explanation</i>
0	Receive formatter summary (look at bytes bb, cc, dd , and ee for details)
1	Transmit formatter summary (look at byte ee for details)
2	Circuit ID error
3	Timing error
4-7	Not used

bb - Receive Formatter (RF) device ESR0 (Hexadecimal)

<i>Bit</i>	<i>Explanation</i>
0	Port 0 alarm
1	Port 1 alarm
2	Port 2 alarm
3	Port 3 alarm
4	Port 4 alarm
5	Port 5 alarm
6	Port 6 alarm
7	Port 7 alarm

cc - RF device ESR1 (Hexadecimal)

<i>Bit</i>	<i>Explanation</i>
8	Port 8 alarm
9	Port 9 alarm
10	Port 10 alarm
11	Port 11 alarm
12	Port 12 alarm
13	Port 13 alarm
14	Port 14 alarm
15	Port 15 alarm

dd - RF device ESR2 (Hexadecimal)

<i>Bit</i>	<i>Explanation</i>
0	Port 17 alarm
1	Port 18 alarm
2	Port 19 alarm
3	Port 20 alarm
4-7	Not used

ee - RF/Transmitter Formatter (TF) device status register (Hexadecimal)

<i>Bit</i>	<i>Explanation</i>
0	Domestic/CEPT mode (Domestic = 0, CEPT = 1)
1	Network data error
2	Frame sync error
3	Clock error
4	Microprocessor bus error
5-7	Not used

cc - Hexadecimal condition code

cc	<i>Explanation</i>
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
13	FTMI is not equipped
14	FTMI is out of service

UTL, QRY, ESR, UNIT, FLI

QUERY ERROR SOURCE REGISTER FACILITY LINE INTERFACE

Explanation Of Command

This message requests a print out of the error source register (ESR) on one facility line interface (FLI) circuit pack.

Command

[I.55801]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,FLI k!

Completion Message

[O.55801]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q FLI k 2 LN MSG:
aa bb ee dd COMPL

Denial Message

[O.55801.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q FLI k COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FLI - Facility line interface

k - The identifier of the FLI:

<i>k</i>	<i>Explanation</i>

S	Service FLI

P	Protection FLI

ESR - Error source register

aa, bb, ee, dd

- The error register of the queried circuit pack

Variables aa, bb, ee, and dd are two-digit hexadecimal numbers representing error source registers. The bits in these registers are numbered as shown below:

76543210 Bit numbering

Bit values have the following meaning:

0	No error

1	Error

aa - Communication Interface (CI) ESR 1

<i>bit</i>	<i>Explanation</i>

0	Summary of facility line interface (FLI) ESR 1

1	Summary of FLI ESR 2

2	Chip identification parity error indicator

3	Sync absence or internal counter error indicator

4-7	Not used (set to zero)

Example:

aa = 05 (= 00000101 binary). At least one bit in the FLI ESR 1 is set, and a chip ID error has been identified.

Note: In practice, the bits may be set in combination.

bb - CI ESR 2

<i>bit</i>	<i>Explanation</i>

0	Address Parity Error

1-7	Not Used

ee - FLI ESR 1

<i>Bit</i>	<i>Value</i>	<i>Explanation</i>
0	1	The LOC alarm for DS-3 # 1 is activated
1	1	The LOC alarm for DS-3 # 2 is activated
2	1	The LOC alarm for DS-3 # 3 is activated
3	1	The LOC alarm for DS-3 # 4 is activated
4	1	The LOC alarm for DS-3 # 5 is activated
5	1	The LOC alarm for DS-3 # 6 is activated
6,7		Not Used

dd - FLI ESR 2

<i>Bit</i>	<i>Value</i>	<i>Explanation</i>
0	1	The LOS alarm for DS-3 # 1 is activated
1	1	The LOS alarm for DS-3 # 2 is activated
2	1	The LOS alarm for DS-3 # 3 is activated
3	1	The LOS alarm for DS-3 # 4 is activated
4	1	The LOS alarm for DS-3 # 5 is activated
5	1	The LOS alarm for DS-3 # 6 is activated
6	1	Lock and Key procedure alarm is activated
7		Not Used

cc - Hexadecimal condition code

cc *Explanation*

10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
B0	FLI is out of service

UTL, QRY, ESR, UNIT, FMT

QUERY ERROR SOURCE REGISTER FORMATTER

Explanation Of Command

This message requests a printout of the error source register (ESR) for one formatter (FMT) circuit pack.

Command

[I.55811]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,FMT s!

Completion Message

[O.55811]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q FMT s 2 LN MSG:
mm c0 c1 t0 t1 t2 t3 t4 r00 r01 r02 r10 r11 r12 r20 r21 r22 \
r30 r31 r32 r40 r41 r42 COMPL

Denial Message

[O.55811.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q FMT s COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FMT - Formatter

s - Formatter side number

s *Side*

0 Side 0

1 Side 1

ESR - Error source register

Variables mm through r42 represent error source registers of the queried circuit pack. Interpretation of the information in these registers requires knowledge of the source code and access to the code.

mm, c0, ...,

r42 - The error register of the queried circuit pack (2-digit hexadecimal format).

mm - Maintenance Register

c0 - CI Error Source Register 0

c1 - CI Error Source Register 1

t0 - Transmit Formatter 0 (TF0) Status Register

t1, t2, t3, t4

- TF1, TF2, TF3, TF4 Status Register

r00, r01, r02

- Receive Formatter 0 (RF0) Error Source Register 0,1,2

r10, r11, r12

- Receive Formatter 1 (RF1) Error Source Register 0,1,2

r20, r21, r22

- Receive Formatter 2 (RF2) Error Source Register 0,1,2

r30, r31, r32

- Receive Formatter 3 (RF3) Error Source Register 0,1,2

r40, r41, r42

- Receive Formatter 4 (RF4) Error Source Register 0,1,2

cc - Hexadecimal condition code

cc *Explanation*

- 10** Unit is not equipped
- 11** UC is out of service
- 12** UC is in service but failed
- B1** FMT is out of service

UTL, QRY, ESR, UNIT, FTMI

QUERY ERROR SOURCE REGISTER FTMI

Explanation Of Command

This message requests a printout of the error source register for a facility terminating module interface in a unit.

Command

[I.55511]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,FTMI d!

Completion Message

[O.55511]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q FTMI d 2 LN MSG:
aa bb cc dd ee ff gg COMPL

Denial Message

[O.55511.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q FTMI d COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

ESR - Error source register

UNIT - Unit

[q]q - Unit number (1 through 16)

FTMI - Facility terminating module interface

d - Facility terminating module interface number (1 through 4)

Note: Data bytes aa through gg must be converted from hexadecimal to binary before the tables below can be used to interpret the data byte values. Each hex digit converts to 4 binary digits. Bits are numbered from right to left starting from 0 as follows; 76543210.

For example if aa = 01 the binary equivalent of this is 0000 0001. Using the table for aa below this indicates that there is an alarm on the Communications interface device C.

Bit value	Explanation
0	Indicates NO error or alarm
1	Indicates an error or alarm

aa - FTMI error status register

<i>Bit</i>	<i>Explanation</i>
0	Error summary bit from Communications interface device C (CIC) (look at bytes bb and ee for details)
1	Error summary bit from CIB (look at bytes bc and ff for details)
2	Error summary bit from CIA (look at bytes dd and gg for details)
3	Bus error alarm
4-7	Not used

bb - Communications interface (CI) device A error source register

<i>Bit</i>	<i>Explanation</i>
0	Chip identification comparison failed
1	Address parity error was detected
2	Data Strobe signal was not presented
3	Loss of timing alarm on the device
4-7	Not used

cc		- CI device B error source register
<i>Bit</i>		<i>Explanation</i>
0		Chip identification comparison failed
1		Address parity error was detected
2		Data Strobe signal was not presented
3		Loss of timing alarm on the device
4-7		Not used
dd		- CI device C error source register
<i>Bit</i>		<i>Explanation</i>
0		Chip identification comparison failed
1		Address parity error was detected
2		Data Strobe signal was not presented
3		Loss of timing alarm on the device
4-7		Not used
ee		- CI device B error source register
<i>Bit</i>		<i>Explanation</i>
0		Error summary bit, Link 1
1		Error summary bit, Link 2
2		Error summary bit, Link 3
3		Error summary bit, Link 4
4		Error summary bit, Link 5
5		Error summary bit, Link 6
6		Error summary bit, Link 7
7		Error summary bit, Link 8
ff		- CI device A error source register
<i>Bit</i>		<i>Explanation</i>
0		Error summary bit, Link 1
1		Error summary bit, Link 2
2		Error summary bit, Link 3
3		Error summary bit, Link 4
4		Error summary bit, Link 5
5		Error summary bit, Link 6
6		Error summary bit, Link 7
7		Error summary bit, Link 8

gg - CI device C error source register

<i>Bit</i>	<i>Explanation</i>
0	Error summary bit, Link 1
1	Error summary bit, Link 2
2	Error summary bit, Link 3
3	Error summary bit, Link 4
4	Error summary bit, Link 5
5	Error summary bit, Link 6
6	Error summary bit, Link 7
7	Error summary bit, Link 8

cc - Hexadecimal condition code

cc	<i>Explanation</i>
02	Subject entity is not equipped
04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service

UTL, QRY, ESR, UNIT, MIU

QUERY ERROR SOURCE REGISTER MULTIPLEXER INTERFACE UNIT

Explanation Of Command

This message requests a printout of the error source register (ESR) for one Multiplexer Interface Unit (MIU) circuit pack.

Command

[I.55831]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,MIU c!

Completion Message

[O.55831]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q MIU c 2 LN MSG:
aa bb COMPL

Denial Message

[O.55831.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q MIU c COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MIU - Multiplexer interface unit

c - The number of the MIU within the unit (1 through 6,P)

ESR - Error source register

aa, bb - The error register of the queried circuit pack. (Hexadecimal format)

aa - EMIU ESR

The two hexadecimal digits of aa or bb may be converted to an eight-bit binary word. The eight bits of this word are interpreted as shown below. Bit numbering is as follows: 76543210 (left to right)

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0	1	EMIU interrupt from Unit Controller
1-2		Not Used
3	1	Reset in progress
4	1	The EMIU was reset
5	1	Facility threshold exception
6	1	ESF data link message response received
7	1	Hardware and firmware error

bb - EMIU error code (set only when bit 7 of the ESR is set)

cc - Hexadecimal condition code

cc *Explanation*

10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
BF	MIU is not equipped
CF	MIU is out of service

UTL, QRY, ESR, UNIT, MXR

QUERY ERROR SOURCE REGISTER MULTIPLEXER

Explanation Of Command

This message requests a printout of the error source register (ESR) for one multiplexer (MXR) or Hybrid MXR (HMXR) circuit pack.

Command

[I.55821]

UTL:FRM xy,SEQ ww:QRY,ESR,UNIT [q]q,MXR c!

Completion Message

[O.55821]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q MXR c 2 LN MSG:
aa bb dd ee ff COMPL

[O.55822]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q HMXR c 2 LN MSG:
gg ii jj kk ll nn oo COMPL

Denial Message

[O.55821.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q MXR c COND cc DNY

[O.55822.01]

M hh:mm:ss xy,ww n[vv] UTL QRY ESR UNIT [q]q HMXR c COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

MXR - Multiplexer

HMXR - Hybrid Multiplexer

c - The number of the MXR or HMXR within the unit ($P, 1 \leq c \leq 6$)

ESR - Error source register

aa, bb, dd, ee, ff, gg, ii, jj, kk, nn, oo

- The error register of the queried circuit pack. (Hexadecimal format)

aa - MXR ESR 1

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0	1	DS3 LOS / OOF detected
1	1	CC device #7 Error
2	1	CC device #6 Error
3	1	CC device #5 Error
4	1	CC device #4 Error
5	1	CC device #3 Error
6	1	CC device #2 Error
7	1	CC device #1 Error

bb - MXR ESR 2

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0	1	Facility Processor detected Hardwared Error
1	1	CC device #14 Error
2	1	CC device #13 Error
3	1	CC device #12 Error
4	1	CC device #11 Error
5	1	CC device #10 Error
6	1	CC device #9 Error
7	1	CC device #8 Error

dd - MXR ESR 3

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0	1	Facility Processor detected Facility Error
1	1	MXR Reset
2	1	PIF Bus Parity Error
3	1	LOC DS3 Clock from the unselected FLI
4	1	LOC DS3 N Rail from the unselected FLI
5	1	LOC DS3 P Rail from the unselected FLI
6	1	45 MHz Clock Out of Lock
7		Not Used

ee - Hardware summary byte 1

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0	1	HSCC error
1	1	Firmware failure
2	1	PIF I/O error
3	1	M13 error
4	1	XCVR error
5	1	Program error
6	1	RAM error
7	1	ROM error

ff - Hardware summary byte 2

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>

	0-5		Not Used
	6	1	Logic Cell Array error
	7	1	Queue overflow
gg	- HMXR ESR 1		
	<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
	0	1	Bus Error
	1	1	T1 CC device #7 Error
	2	1	T1 CC device #6 Error
	3	1	T1 CC device #5 Error
	4	1	T1 CC device #4 Error
	5	1	T1 CC device #3 Error
	6	1	T1 CC device #2 Error
	7	1	T1 CC device #1 Error
ii	- HMXR ESR 2		
	<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
	0	1	Facility Processor detected Hardwared Error
	1	1	T1 CC device #14 Error
	2	1	T1 CC device #13 Error
	3	1	T1 CC device #12 Error
	4	1	T1 CC device #11 Error
	5	1	T1 CC device #10 Error
	6	1	T1 CC device #9 Error
	7	1	T1 CC device #8 Error
jj	- HMXR ESR 3		
	<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
	0	1	Facility Processor detected Facility Error
	1	1	LOC DS3 Clock from the unselected FLI
	2	1	LOC DS3 N Rail from the unselected FLI
	3	1	LOC DS3 P Rail from the unselected FLI
	4	1	Side 1 SY240T Sync Pulse Failure
	5	1	Side 1 Loss of 8.192 MHz System Clock
	6	1	Side 0 SY240T Sync Pulse Failure
	7	1	Side 0 Loss of 8.192 MHz System Clock
kk	- HMXR ESR 4		
	<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
	0	1	M13 Multiplexer Interrupt
	1	1	E1 CC device #7 Error
	2	1	E1 CC device #6 Error
	3	1	E1 CC device #5 Error
	4	1	E1 CC device #4 Error
	5	1	E1 CC device #3 Error
	6	1	E1 CC device #2 Error
	7	1	E1 CC device #1 Error

11 - HMXR ESR 5

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0		Not Used
1	1	E1 CC device #14 Error
2	1	E1 CC device #13 Error
3	1	E1 CC device #12 Error
4	1	E1 CC device #11 Error
5	1	E1 CC device #10 Error
6	1	E1 CC device #9 Error
7	1	E1 CC device #8 Error

nn - Hardware summary byte 1

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0	1	HSCC error
1	1	FPGA Failure
2	1	E1 XCVR error
3	1	M13 error
4	1	T1 XCVR error
5	1	Program error
6	1	RAM error
7	1	ROM error

oo - Hardware summary byte 2

<i>Bit</i>	<i>Value</i>	<i>Bit definition</i>
0-6		Not Used
7	1	HMXR SW error

cc - Hexadecimal condition code

cc	<i>Explanation</i>
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
B2	MXR is out of service
51	The pair MXR is not equipped

UTL, QRY, FPKG

QUERY FEATURE PACKAGE

Explanation Of Command

This message requests a listing of the installed features and the feature package identification code.

Command

[I.51121]

UTL:FRM xy,SEQ ww:QRY,FPKG!

Completion Message

[O.51121]

M hh:mm:ss xy,ww n[vv] UTL QRY FPKG kkttuuvv DACSIgg.pp r \\
e LN MSG:
[BASIC DS1 TERMINATIONS]
[BASIC CEPT TERMINATIONS]
[SUBRATE]
[DIRECT SLC TERMINATION] [{EOM|COMPL}]

[M hh:mm:ss xy,ww n[vv] UTL QRY FPKG kkttuuvv DACSIgg.pp r \\
e LN MSG:]
[DS3 TERMINATIONS]
[ENHANCED CEPT-C-BIT, C-BIT FOLTERING, RPSFI]
[SWITCHED TELCONFERENCING]
[CEF] [{EOM|COMPL}]

[M hh:mm:ss xy,ww n[vv] UTL QRY FPKG kkttuuvv DACSIgg.pp r \\
e LN MSG:]
[ENHANCED DS1 PERFORMANCE MONITORING]
[DS0/DS1 SERVICE ROLL FEATURE]
[SECURITY WARNING MESSAGE]
[NX64KBIT TEST ACCESS] [{EOM|COMPL}]

[M hh:mm:ss xy,ww n[vv] UTL QRY FPKG kkttuuvv DACSIgg.pp r \\
e LN MSG:]
[CLEAR 2MB/S INTERFACE]
[TS0 TO NON-TS0 XCON]
[2MB/S ROLL FEATURE]
[SPARE] [{EOM|COMPL}]

[M hh:mm:ss xy,ww n[vv] UTL QRY FPKG kkttuuvv DACSIgg.pp r \\
e LN MSG:]
[INTERVENTION LEVEL]
[DS3 HYBRID] [COMPL]

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

e - The number of lines in an output segment (2 through 6)

FPKG - Feature Package

Output includes a list of DACS II optional features.

kkttuuvv

- Feature package identification code

00000001	DS1
00000002	CEPT
00000004	Subrate
00000008	Direct SLC® 96 and Series 5 Carrier Interface
00000010	DS3 Terminations
00000020	Enhanced CEPT
	C-bit
	C-bit filtering
	RPSFI
00000040	Switched Teleconferencing
00000080	CEF
00000100	Enhanced DS1 Performance Monitoring
00000200	DS0/DS1 Roll
00000400	Security Warning Message
00000800	Nx64kbit Test Access
00001000	Clear 2MB/s Interface
00002000	TS0 to Non-TS0 Cross-connection
00004000	2MB/S Roll
00008000	SPARE
00010000	TRT/FT Features
	Intervention Level
00020000	DS3 Hybrid

In general a feature package identification code is a combination of several individual feature package numbers. To determine the individual features that make up a feature package it is necessary to decode the feature package identification code. This code is an eight digit hexadecimal number. Each hexadecimal number represents a four-bit binary number. Within this binary number each feature is associated with one particular bit. Consequently to determine the feature list from a feature package identification code it is necessary to convert each hexadecimal digit to its binary equivalent and look up the features in the list above. For example the feature package identification code 0000000F can be converted to the following binary number working from left to right one hex digit at a time.

0000 0000 0000 0000 0000 0000 0000 1111

This number contains eight binary numbers each representing one of the hexadecimal numbers in the feature package identification code 0000000F. The rightmost number of the code contains four features since there are four bits set to one. This would be decoded as follows using the table of features above.

	binary	hex	Feature
	0001	1	DS1
	0010	2	CEPT
	0100	4	Subrate
	1000	8	Direct SLC
Total	1111	F	(DS1 + CEPT + Subrate + SLC)

- gg** - DACS II software release number
- pp** - DACS II software release point number
- r** - DACS II software PDI number

UTL,QRY,FROM

UTILITY QUERY FROM

Explanation Of Command

This command is used to query the FROM side of a one-way cross-connected circuit or a range of similar circuits. For a SLC® carrier denial message relating to terminating digroups, the bank identification number, the operation mode, and the digroup A network processing circuit (NPC) number are reported. The normal response, if the NPC is a SLC NPC currently under protection, will show the protection digroup NPC number.

Command

Nonhierarchical

[I.52051]

UTL:FRM xy,SEQ ww:QRY,FROM [s]abcddd[-eee]!

Hierarchical

[I.52051]

UTL:FRM xy,SEQ ww:QRY,FROM uvmnpddd[-eee]!

Completion Message

Nonhierarchical

[O.52051]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM [s]abcddd TYPE mnxyz[DGP [t]ppp] 2 LN MSG:
[t]ghijjj ppqqq <tc>[CUS][RDC][UTST {TP kk|TG mmm}][TLA T] EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY FROM [s]abceee TYPE mnxyz[DGP [t]ppp] 2 LN MSG:
[t]ghijjj ppqqq <tc>[CUS][RDC][UTST {TP kk|TG mmm}][TLA T] COMPL

[O.52052]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM [s]abcddd TYPE mnxyz 2 LN MSG:
UASGN[<tc> DCC][CUS][UTST {TP kk|TG mmm}][cc] {EOM|COMPL}

[O.52053]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM [s]abcddd TYPE mnxyz NOT OCON {EOM|COMPL}

Hierarchical

[O.52051]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM uvmnpddd TYPE mnxyz [DGP wxkqr] 2 LN MSG:
edhfgjjj ppqqq <tc>[CUS][RDC][UTST {TP kk|TG mmm}][TLA T] EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY FROM uvmnpdee TYPE mnxyz [DGP wxkqr] 2 LN MSG:
edhfgjjj ppqqq <tc>[CUS][RDC][UTST {TP kk|TG mmm}][TLA T] COMPL

[O.52052]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM uvmnpddd TYPE mnxyz 2 LN MSG:
UASGN[<tc>][DCC][CUS][UTST {TP kk|TG mmm}][cc] {EOM|COMPL}

[O.52053]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM uvmnpddd TYPE mnxyz NOT OCON {EOM|COMPL}

Denial Message

Nonhierarchical

[O.52051.01]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM [s]abcddd[-eee][{RT|DL} \
ffff MD g[g] [t]aaa] [UEQD] COND cc DNY

[O.52051.02]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM [s]abcddd[-eee] \
TYPE mnxyz RNGIE DNY

Hierarchical

[O.52051.01]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM uvmnpddd[-eee][{RT|DL} \
ffff MD g[g] uvjkl] [UEQD] COND cc DNY

[O.52051.02]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM uvmnpddd[-eee] \
TYPE mnxyz RNGIE DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit non-hierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit
-

NPC
961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit
-

NPC
961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit
-

NPC
9961-9966

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are listed below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

VI NPC numbers listed by unit, module, and NPC Number
Unit Type VI (Virtual)

Unit	Module	NPC	
99	1	01-02	(DACS II Non-CEF frames)
99	1	01-06	(DACS II CEF frames)

ddd - Starting channel number
eee - Channel number denoting the end of the range.

The valid values are listed below:

Channel numbers
001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers

001-085 (MB NPC)

001-500 (Virtual NPC)

TYPE - Type

mnxyz - FROM termination NPC information

mn - FROM termination NPC type

Valid values are listed below:

mn *Explanation*

DA Dual digroup ANSI NPC

DE Dual digroup NPC

DS SLC® carrier NPC

TA DS3U ANSI NPC

TE DS3U or HDS3U Noninterface unit NPC

TH Hybrid DS3U CEPT NPC

xyz - Options and formats for NPCs

DA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DA-type clear-DS1 NPC.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

DA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a DA NPC with both a valid framing format (D4, ESF, T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the DA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II FTU, the NPC must be provisioned as NPC type **DE9y9**.

Zero Byte Time Slot Interchange (ZBTSI) encoding is not supported by the DA NPC type. If ZBTSI is desired on an NPC in a DACS II FTU, the NPC must be provisioned as a DE NPC type with its **y** option selecting ZBTSI (**DEx3z**).

TA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the TA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II DS3U, the NPC must be provisioned as NPC type TE919.

DE-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4, y=5, and y=6, DMI signalling.

y - Line and signaling format

y *Explanation*

- 0** ZCS - Zero code suppression
- 1*** NZCS - No zero code suppression
- 2*** B8ZS - Bipolar with 8 zero substitution
- 3†** ZBTSI - Zero-bit time-slot interchanger
- 4** ZCS/DMI - Zero code suppression/DMI signaling
- 5** NZCS/DMI - No zero code suppression/DMI signaling
- 6** B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
- 7-9** Not assigned

* Only options 1 and 2 are applicable to DE-type clear-DS1 NPC.

† Only valid with ESF (x = 2 or 3)

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** No channel numbering format, clear-DS1

TE-type xyz fields

x - Multiframe format

x *Explanation*

- 0** Not assigned
- 1** D4
- 2** ESF - Voice
- 3** ESF - Data
- 4** DDST (T1DM - R bit connection via channel 24)
- 5-7** Not assigned
- 8*** Ericsson Cellular format
- 9** No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4 and y=5, DMI signalling.

y - Line and signaling format

y *Explanation*

0 ZCS - Zero code suppression

1* NZCS - No zero code suppression

2 Not assigned

3 Not assigned

4 ZCS/DMI - Zero code suppression/DMI signaling

5 NZCS/DMI - No zero code suppression/DMI signaling

6-9 Not assigned

* Only option 1 is applicable to TE-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

0 D4 channel bank channel numbering

1 D2 channel bank channel numbering

2 D1D channel bank channel numbering

3-8 Not assigned

9 No channel numbering format, clear-DS1

DS-type xyz fields

x - Multiframe format

x *Explanation*

0 Not assigned

1 D4

2 ESF - Voice

3 Not assigned

4 Not assigned

5 Not assigned

6 SLC® 96 carrier Fs

7 SLC 5 carrier ESF with data link

8-9 Not assigned

y - Line and signaling format

y *Explanation*

- 0** Zero code suppression (ZCS)
- 1** No zero code suppression (NZCS)
- 2** Bipolar with 8 zero substitution (B8ZS)
- 3-9** Not assigned

z - Counting sequence format

z *Explanation*

- 0** SLC 96 carrier Mode III D4 counting sequence
- 1** SLC 96 carrier Mode III D1D counting sequence
- 2** SLC 96 carrier Mode I D1D counting sequence
- 3** SLC Series 5 carrier D4 counting sequence
- 4-9** Not assigned

TH-Type xyz field

The provisioning values of *x*, *y*, and *z* for the TH type are shown in the following tables (a 'Y' in a column of the Table indicates that the feature at the top of the column is enabled by the corresponding (*x*, *y* or *z*) provisioning value):

Table 24-11. Provisioning values for *x*

x value	CRC-4 Mode	Automatic CRC-4
0	Y	
8		Y
B		

Table Notes:

1. The "Automatic CRC-4" is also known as CRC-4 Interworking.
2. If the CRC-4 mode is enabled (*x* value 0) the NPC will compute checksums over the transmitted data and transmit the checksum as part of the CRC-4 multiframe pattern in TS0. The NPC will also monitor the incoming CRC-4 multiframe and verify the CRC-4 checksum. If the CRC-4 multiframe cannot be found using the CRC-4 reframe algorithm, then the NPC will declare an alarm.

If the automatic CRC-4 option is selected (x value 8), the NPC will perform all the functions of the CRC-4 mode. However, if the CRC-4 multiframe is lost, the NPC will not declare an alarm or apply consequent actions.

3. x value B does not enable any of the features shown in the Table; this is a valid option.
4. Only x values 0, 8, and B are valid x values, all other x values will be denied.

Table 24-12. Provisioning values for y

y value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

Table Notes:

1. y values 1, 3, 5, 7, A-B and E-F are unassigned (that is, invalid).
2. For y values 0, 2, 4 and 6 Channel Associated Signaling (CAS) is enabled. In this mode the Telephone Channel Numbering system is always used.

If the "Convert TS16" option is selected (y values 0 and 2), the *abcd* bits of TS16 will be converted to '1111' if they are received as '0000'. This is to prevent false framing in the TS16 multiframe. If this option is not selected (y values 4 and 6), a value of '0000' in the *abcd* bits will be transmitted transparently.

If the "AIS in TS16" option is selected (y value 0 and 4), AIS will always be applied to received TS16 signaling channels on detection of RAI (Remote Alarm Indication, Bit 3 of TS0 NFW), RAIS (Remote AIS Indication, Bit 4 of TS0 NFW, if provisioned) or R16 (Remote Alarm Indication received in TS16). If this option is not selected (y values 2 and 6), AIS will not be applied on detection of RAI, RAIS, or R16.

3. For y values 8 and 9 the NPC will be Non Signaling Associated (NSA). In this mode, Telephone Channel Numbering ($y=8$) or Timeslot Channel Numbering ($y=9$) may be selected.
4. The NPC can be set up as a framed clear 2 Mbit/s interface ($y=C$) or as an unframed clear 2 Mbit/s interface ($y=D$). When provisioned as a clear 2 Mbit/s interface, an NPC does not modify the cross-connected data in any way. This means that the

following functions are not performed in the clear 2 Mbit/s mode:

- Outgoing CRC-4 checksum generation (applies to framed clear 2 Mbit/s interfaces with CRC-4 option enabled).
- Remote alarm indications (line format errors are reported locally, but no alarm indicators are sent in TS0 to the remote end).

Table 24-13. Provisioning values for *z*

<i>z</i> value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	166ms	500ms	RAIS	RBER	166ms	500ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
A	Y		Y							Y
B		Y	Y							Y

Table Notes:

1. *z* values 8, 9, C, D, E and F are unassigned (that is, invalid).
2. For *z* values 1, 3, 5, 7 and B the consequent action timing is under firmware (FW) control. For *z* values 0, 2, 4, 6 and A the consequent action timing is under hardware (HW) control.

The G.732 consequent action of inserting the AIS in data channels is applied within 2 ms whether the timing is under HW control or FW control, but when under FW control, the AIS in data channels is overridden by the Insertion Word sourced from the Alternate Message Store (AMS) after detection of the local alarm:

in **500 ms**
if *z* = 1, 3 or 5
in **2496 ms**
if *z* = 7 or B

The Insertion Word pattern can be specified in the cross-connect command; on 2Mbit/s NPCs in a *gateway* **cross-connection** the Insertion Word always defaults to AIS.

The selection of HW or FW control is also used to provision the consequent actions on signaling bits. On detection of loss of frame (LOF) or multiframe alignment (LMA, Loss of Multiframe Alarm) error, the hardware immediately applies a signaling freeze by using the last good frame's signaling information. The signaling freeze remains in effect until two multiframes without errors are received. When HW control is used, the AIS in signaling bits is applied within 2 ms, overriding the signaling freeze. When FW control is used, the trunk conditioning pattern from the AMS overrides the signaling freeze once the 2Mbit/s NPC goes into the alarm state.

3. The Consequent Action timing also selects the time after which the **local** alarms are declared and cleared:^{*}
 - HW Control: **Both** remote and local alarms are declared and cleared in 166 ms.
 - FW Control: Only remote alarms are declared and cleared in 166 ms. The **local** alarms are declared and cleared in 500 ms, **except when z = 7 or B**.
4. On the transmitting NPC, bit 3 in the NFW, the remote alarm indication (RAI), will be processed as specified in ITU-T Recommendation G.704 Section 2.3.2 (**that is, within 2 ms after detecting the failure**) when z = 0, 1, 4, 5, 6, 7, A or B. **However,** for z value 2 the set time is 166 ms and for z value 3 the set time is 500 ms. NFW bit 3 is always set to 0 for non-alarm condition and is set to 1 for alarm conditions.
5. On the transmitting NPC, if bit 4 of the NFW is used as RAIS (Remote AIS) indicator, NFW bit 4 will be set in 166 ms (for z = 4) or 500 ms (for z = 5) after AIS is detected in the received signal. The default idle state for Bit 4 is a '1'. The idle state can be changed to a '0' with the CHG::NPC,TS0 command. The bit is put into the active state by inverting the value of the idle state. Similarly, if NFW bit 4 is in the active state in the received signal, consequent actions are taken 166 ms after detecting this condition.
6. z values 6-7 and A-B enable the Minor Bit Error Rate and Signaling Freeze Delay Time Features.

Common Options (z = 6-7 or A-B)

- [i] Enable BER calculations, and when in the BER state:

DACS takes the alarm state consequent actions: sending a message, and activating appropriate alarm relays and summary LEDs.

When out of the BER state, DACS II retires the alarm state consequent actions: sends a retirement message, and deactivates appropriate alarm relays and summary LEDs.

- [ii] RAI set in 2 ms

^{*} Local alarms are those generated for the events: PWR, PBF, BER, AIS, LMA, and A16. Remote alarms are those generated for the events: RAI, RAIS, RBER, and R16.

[iii] Signaling Freeze Delay Timing, Consequent Action Clear Timing:

z=6 or A hardware timing

z=7 or B firmware timing (SFDT=2496 ms, CACT=624 ms)

[iv] BER alarm level = DMA

Specific Options for z= 6 or 7

[v] RBER alarm level = MI

[vi] NFW bit 4=RBER:

- DACS II sends a remote indicator in bit 4 (RBER) of the time slot 0 Non Frame Word (NFW) upstream to the far end 166 ms after detecting the Minor Bit Error Rate (BER) condition.

DACS II sets the RBER bit to its idle state, on clearing of the BER condition.

- DACS II detects the remote setting of the received bit 4 as an RBER condition and generates an appropriate message. Consequent actions are taken 166 ms after detecting this condition.

DACS II generates an appropriate retirement message when the received bit 4 returns to the idle state.

Specific Options for z= A or B

[vii] RBER unalarmed

[viii] NFW bit 4=disabled

NFW bit 4 is NOT used as RBER, although the local Minor Bit Error Rate (BER) condition is detected and cleared with the alarm state consequent actions.

Additionally:

- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.

The following tables provide a summary of invalid combinations of xyz for the TH type NPC.

Table 24-14. Combinations of x and y Values

Invalid xyz Combinations	Explanation
8Cz	Framed clear 2 Mbit/s (y value C) is valid for all valid x options except the one invoking automatic CRC-4 interworking. The interworking algorithm requires setting of outgoing E-bits, which is not permitted for a clear signal.
0Dz 8Dz	Unframed clear 2 Mbit/s (y value D) is only valid for x value B. This is the only x option which does not require decoding of TSO content.

Table 24-15. Combinations of *y* and *z* Values

Invalid xyz Combinations	Explanation
xC1 xC3 xC5 xC7 xCB xD1 xD3 xD5 xD7 xDB	Clear 2 Mbit/s (<i>y</i> value C or D) cannot be used with Firmware controlled Consequent Action (<i>z</i> values 1, 3, 5, 7 or B).
xD4 xD6	Unframed clear 2 Mbit/s (<i>y</i> value D) cannot be used with <i>z</i> value 4 (NFW Bit 4 used for RAIS) or with <i>z</i> value 6 (NFW Bit 4 used for RBER) because unframed clear signals cannot obtain TS0 framing.

Table Notes:

1. If framed clear 2 Mbit/s (*y* value C) is selected with *z* value 4 (NFW Bit 4 used for RAIS) only the receive side of this function will be enabled. Outgoing RAIS indicators cannot be transmitted during clear signal operation.
2. If framed clear 2Mbit/s (*y* value C) is selected with *z*= value 6 (NFW Bit 4 used for RBER) only the receive side of this function will be enabled. Outgoing RBER indicators cannot be transmitted during clear signal operation.

There are no combinations between valid *x* and *z* values that are invalid.

DGP - SLC carrier digroup P (protection)

[t]ppp - The 3- or 4-digit nonhierarchical SLC carrier digroup P NPC number.
Valid values are identical to those for [s]abc.

[t]ghi - The 3- or 4-digit nonhierarchical TO NPC number.
Valid values are identical to those for [s]abc.

wxkqr - Hierarchical SLC carrier digroup P NPC number
Valid values are identical to those for uvmnp

edhfg - Hierarchical TO NPC number
Valid values are identical to those for uvmnp

jjj, kkk
- TO channel numbers
Valid values are identical to those for ddd.

ppqqq - TO termination NPC information

pp - TO termination NPC type
Valid values are listed below:

pp	<i>Explanation</i>
DA	Dual digroup ANSI NPC
DE	Dual digroup NPC
TA	DS3U ANSI NPC
TE	DS3U or HDS3U Noninterface unit NPC
TH	Hybrid DS3U CEPT NPC
DS	SLC® carrier NPC
MB	Digital multipoint bridge NPC
VI	Virtual NPC
qqq	- See xyz above for definition and values.

tc - Trunk conditioning

Represents the desired cross-connected signaling and insertion word applied when a failure occurs. A trunk conditioning specification consists of a combination of a signaling specification followed by an insertion word specification.

pq is a user specified insertion word. The binary pattern corresponding to the hexadecimal value of pq will be inserted in the downstream direction of a failure on either line.


```

tc
      TC(X'--,X'cd),TRB
      TC(X'--,X'cd),IW X'pq
TC(----,mnop),TRB
TC(----,mnop),IW X'pq
TRSP,TRB
TRSP,MUX
TRSP,IW X'pq
TRSP (DMB to DMB)

```

Note: Because there is no signal from the FROM direction, ijkl is replaced by ---- in the specification TC(ijkl,mnop) and ab is replaced by -- in the specification TC(X'ab,X'cd).

Note: If the channel being connected is an FDL (Facility Data Link), then ddd is 000 and trunk conditioning should be of type TC(----,mnop).

The FDL is not supported by the DS-type NPC.

The following insertion word options are allowed:

<i>Insertion word</i>	<i>Explanation</i>
IW X'pq	The 8-bit pattern corresponding to the hexadecimal value of pq will be inserted in the downstream direction of a failure on either line.
Omitted	Will default to IW X'FF.

RDC - Red circuit

CUS - Customer
Customer-controlled circuit

UTST - Under test
Given termination is under test

TP - Test Port

kk - Test port number (01-96)

TG - Test Group

mmm - Test group number (001-400)

TLA - Terminate and leave active

T - To

TO termination is in the terminate and leave state

DCC - Disconnect code

RT - Remote terminal

DL - Digital carrier line unit (DCLU)

ffff - RT or DL bank identification (0000 through 9999)

MD - Mode

g[g] - RT or DL operation mode

g[g] *Explanation*

1	SLC 96 carrier Mode I
3	SLC 96 carrier Mode III
C	SLC Series 5 carrier FPC

[t]aaa - Nonhierarchical RT or DL digroup A NPC number with the same valid values as [s]abc.

UEQD - Unequipped

uvjkl - Hierarchical RT or DL digroup A NPC number with the same valid values as uvmnp.

NOT - Not

COND - Condition

RNGIE - Range input error

UASGN - Unassigned

cc - Hexadecimal condition code

cc *Explanation*

E3	One way unassigned channel/NPC in QRY, TO
0B	Invalid CEPT NPC
62	Invalid channel number
63	NPC is a DGP
7F	NPC is not added
91	SR NPC was specified - not allowed

cc Explanation

97 Invalid NPC Type

F7 Corresponding NPC for virtual channel is
not provisioned

UTL, QRY, FROM

UTILITY QUERY FROM

Explanation Of Command

This message requests provisioning information for a specific FROM non-channelized network processing circuit of a one-way connection.

Command

Nonhierarchical

[I.52071]

UTL:FRM xy,SEQ ww:QRY, FROM [s]abc!

Hierarchical

[I.52071]

UTL:FRM xy,SEQ ww:QRY, FROM uvmnp!

Completion Message

Nonhierarchical

[O.52071]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM [s]abc TYPE mnxyz \\
2 LN MSG:
[t]ghi mnxyz AIS[CUS][RDC][UTST][TLA T] COMPL

Hierarchical

[O.52071]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM uvmnp TYPE mnxyz \
2 LN MSG:
wxkqr mnxyz AIS[CUS][RDC][UTST][TLA T] COMPL

Denial Message

Nonhierarchical

[O.52071.01]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM [s]abc TYPE mnxyz \
COND cc DNY

Hierarchical

[O.52071.01]

M hh:mm:ss xy,ww n[vv] UTL QRY FROM uvmnp TYPE mnxyz \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

FROM - From

[s]abc - The 3- or 4-digit non-hierarchical non-channelized FROM NPC
The valid values are listed below:

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number of non-channelized FROM NPC

uv - Unit number
m - Module number
np - NPC number within the module

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

[t]ghi - The 3- or 4-digit nonhierarchical number of TO NPC mapped to the
FROM NPC

wxkqr - Hierarchical number of TO NPC mapped to the FROM NPC

TYPE - NPC type

mnxyz - NPC type of TO or FROM NPC

DAxyz - FTU NPC

DExyz - FTU NPC

TAxyz - DS3U NPC

TExyz - DS3U or HDS3U NPC

----- - Unequipped NPC

AIS - Alarm indication signal is the idle code for non-channelized digital signal cross-connection.

CUS - Customer controlled circuit

RDC - Red circuit

UTST - Under test

TLA T - Terminate and leave activate TO
Connection is terminated in the TO direction

cc - Hexadecimal condition code

cc *Explanation*

15 NPC is unequipped

0B Invalid CEPT NPC

62 Invalid channel number

B4 NPC is channelized type

4F NPC is not part of a one-way connection

UTL, QRY, HUBID

UTILITY QUERY HUB IDENTIFIER

Explanation Of Command

This command requests the current setting of the DACS II hub identification code (HUBID).

Command

[I.51501]

UTL:FRM xy,SEQ ww:QRY,HUBID!

Completion Message

[O.51501]

M hh:mm:ss xy,ww n[vv] UTL QRY HUBID O'ab COMPL

Denial Message

[O.51501.01]

**M hh:mm:ss xy,ww n[vv] UTL QRY HUBID 2 LN MSG:
<Reason> DNY**

Autonomous Message

Not applicable.

Explanation Of Parameters

HUBID - HUB Identification Code

O'ab - MJU hub identification code represented in Octal digits (O'00 through O'77)

reason - Reason for denial
Reason

HUBID HAS NOT BEEN SET

UTL, QRY, LIST, MACRO, USER

UTILITY QUERY LIST MACRO

Explanation Of Command

This command lists the contents of individual or public macros. Only the frame administrator can list all macros, whether owned by an individual or by the public.

Command

[I.54131]

UTL:FRM xy,SEQ ww:QRY,LIST,MACRO <macro name>
[,USER <user id>]!

Completion Message

[O.54131]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LIST MACRO <macro name>\
[ USER <user id>] e LN MSG:
  l <first 70 characters of lth component command line text>
    <remaining characters of lth component command line text>
      .
      .
      .
  m <first 70 characters of mth component command line text>
    <remaining characters of mth component command line text> {EOM|COMPL}

M hh:mm:ss xy,ww n[vv] UTL QRY LIST MACRO <macro name>\
[ USER <user id>] e LN MSG:
  n <first 70 characters of nth component command line text>
    <remaining characters of nth component command line text>
      .
      .
      .
  s <first 70 characters of sth component command line text>
    <remaining characters of sth component command line text> COMPL
```

[O.54132]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LIST MACRO <macro name>\
[ USER <user id>] NONE COMPL
```

Denial Message

[O.54131.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LIST MACRO <macro name>\
[ USER <user id>] COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

LIST - List

MACRO - Macro

macro name

- Macro name (seven characters maximum length)

The name of a collection of DACS II commands executed as a group.

A macro name is a string of capitalized alphanumeric characters. There are two type of macros; public and private. A private macros is created by a user in space allocated to the user by the system administrator. Only the user that created it can execute or read (LIST) a private macro. A public macro is created by the system administrator and is executable and readable by all users. A public macro name must start with the letter "P". A private macro name must not start with the letter "P".

USER - User

user id - User identifier (two to eight alphabetic characters)

User login identification

A user can query their own macros but only the frame administrator can use the command to query macros owned by other users. The frame administrator must specify the user id to query other users' macros.

l,
m,
n,
s - Macro command line numbers

NONE - The macro contains no commands

cc - Hexadecimal condition code

cc *Explanation*

62 File is being accessed
64 File doesn't exist/can't be accessed
D0 Command is Frame administrator (DAX) only.
D3 User does not exist
D5 No user is logged in on the link/vc

UTL, QRY, LIST, MAP, USER

UTILITY QUERY LIST MAP

Explanation Of Command

This message lists the user's own login on which link and at what time.

Any user can query his/her own login identification but only the frame administrator can query a login owned by another user.

Command

[I.54101]

UTL:FRM xy,SEQ ww:QRY,LIST,MAP <name>[,USER <user id>]!

Completion Message

[O.54101]

M hh:mm:ss xy,ww n[vv] UTL QRY LIST MAP <name>[USER <user id>] \
STATS ab e LN MSG:
<TCON ... format ...

.
.
.

<TCON ... format ... EOM

M hh:mm:ss xy,ww n[vv] UTL QRY LIST MAP <name>[USER <user id>] \
STATS ab e LN MSG:
<TCON ... format ... >

.
.
.

<TCON ... format ... > COMPL

[O.54102]

M hh:mm:ss xy,ww n[vv] UTL QRY LIST MAP <name>\
[USER <user id>] NONE COMPL

Denial Message

[O.54101.01]

M hh:mm:ss xy,ww n[vv] UTL QRY LIST MAP <name>\
[USER <user id>] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

MAP - Alternate MAP

name - Name of the specified alternate MAP. A MAP name may have up to seven alphanumeric characters. The first character of a MAP name must be an alphabetic character. All alphabetic characters of a MAP name must be capitalized.

USER - User

user id
- User login identification is two to eight alphabetic characters.

STATS - Status

ab - Status field

<i>ab</i>	<i>Explanation</i>

00	Map is valid (can be activated)

01	Map is not valid (contains conflicting circuits and thus cannot be activated)

D0	USER <id> is not your login name and your are not the frame administrator

D3	USER <id> does not exist

D5	The command cannot be entered without logging in

e - Number of lines in the output segment

cc - Hexadecimal condition code

cc *Explanation*

- 62** File is being accessed
- 64** File doesn't exist/can't be accessed
- D0** Command is Frame administrator (DAX) only.
- D3** User does not exist
- D5** No user is logged in on the link/vc

UTL,QRY,LOAD,NPC,TOTAL

UTILITY QUERY, LOAD

Explanation Of Command

This Subrate message requests allocation information on one circuit pack or on all circuit packs in the frame.

Command

Nonhierarchical

[I.52581]

UTL:FRM xy,SEQ ww:QRY,LOAD,{NPC [s]abc|TOTAL}!

Hierarchical

[I.52581]

UTL:FRM xy,SEQ ww:QRY,LOAD,{NPC uvmnp|TOTAL}!

Completion Message

Nonhierarchical

If the NPC is a substrate multiplexer circuit pack:

[O.52581]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LOAD NPC [s]abc TYPE SR100 4 LN MSG:
TOTAL TIME SLOTS: ALLOCATED ttt FREE vvv
ALLOCATED BLOCKS: PEC ppp SEC eee TEST ACCESS SEC aa
                   5CHAN ss 10CHAN qq 20CHAN rr COMPL
```

If the NPC is a multi-junction unit circuit pack:

[O.52582]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LOAD NPC [s]abc TYPE MJ100 4 LN MSG:
TOTAL TIME SLOTS: ALLOCATED ttt FREE vvv
ALLOCATED BLOCKS: PEC ppp SEC eee TEST ACCESS SEC aa
                   RATE24 jjj RATE48 kkk RATE96 lll RATE56 nnn COMPL
```

Hierarchical

If the NPC is a substrate multiplexer circuit pack:

[O.52581]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LOAD NPC uvmnp TYPE SR100 4 LN MSG:
TOTAL TIME SLOTS: ALLOCATED ttt FREE vvv
ALLOCATED BLOCKS: PEC ppp SEC eee TEST ACCESS SEC aa
                   5CHAN ss 10CHAN qq 20CHAN rr COMPL
```

If the NPC is a multijunction unit circuit pack:

[O.52582]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LOAD NPC uvmnp TYPE MJ100 4 LN MSG:
TOTAL TIME SLOTS: ALLOCATED ttt FREE vvv
ALLOCATED BLOCKS: PEC ppp SEC eee TEST ACCESS SEC aa
                   RATE24 jjj RATE48 kkk RATE96 lll RATE56 nnn COMPL
```

Common

If the TOTAL keyword is specified:

[O.52583]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LOAD TOTAL 5 LN MSG:
TOTAL TIME SLOTS: ALLOCATED ttttt FREE vvvvv
ALLOCATED BLOCKS: PEC ppppp SEC eeeee TEST ACCESS SEC aa
                    SRM - 5CHAN ssss 10CHAN qqqq 20CHAN rrrr
                    MJU - RATE24 jjjj RATE48 kkkk RATE96 llll RATE56 nnnn COMPL
```

Denial Message

Nonhierarchical

[O.52581.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LOAD {NPC [s]abc|TOTAL} 2 LN MSG:
<reason> DNY
```

Hierarchical

[O.52581.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LOAD {NPC uvmpn|TOTAL} 2 LN MSG:
<reason> DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

LOAD - Request information concerning resource utilization in substrate circuit packs. Current valid circuit packs are:

SR100 substrate multiplexer
MJ100 multijunction unit

NPC - Network processing circuit

Request resource information for the substrate circuit pack specified.

[s]abc - The 3- or 4-digit nonhierarchical Substrate or Multijunction NPC number

If NPC numbers are expressed in three digits, the valid values are:

SR and MJ type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

SR and MJ type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

uvmnp - Hierarchical NPC number

Valid values are listed below:

SR and MJ NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

TOTAL - Request summarized resource information for all substrate circuit packs.

MJU - Multipoint junction unit

ALLOCATED

- Allocated time slots

ttt - Number of time slots allocated

FREE - Free time slots

vvv - Number of free time slots

PEC - Parity channel error correctors
ppp - Number of parity channel error correctors
SEC - Subrate error correctors
eee - Number of subrate error correctors allocated to cross-connected circuits
aa - Number of subrate error correctors allocated to test access
ss - Number of 5-channel subrate multiplexer channels
qq - Number of 10-channel subrate multiplexer channels
rr - Number of 20-channel subrate multiplexer channels
jjj - Number of 2.4-kb/s Multipoint Junction Unit (MJU) channels
kkk - Number of 4.8-kb/s MJU channels
lll - Number of 9.6-kb/s MJU channels
nnn - Number of 56-kb/s MJU channels
ttttt - Total number of time slots allocated on the frame
vvvvv - Total number of free time slots allocated on the frame
ppppp - Total number of parity channel error correctors on the frame
eeeee - Total number of subrate error correctors allocated to cross-connected circuits on the frame
ssss - Total number of 5-channel subrate multiplexer channels on the frame
qqqq - Total number of 10-channel subrate multiplexer channels on the frame
rrrr - Total number of 20-channel subrate multiplexer channels on the frame
jjjj - Total number of 2.4-kb/s MJU channels on the frame
kkkk - Total number of 4.8-kb/s MJU channels on the frame
llll - Total number of 9.6-kb/s MJU channels on the frame
nnnn - Total number of 56-kb/s MJU channels on the frame

reason - Reason for denial

reason

NO SRM OR MJU TYPE NPC IS EQUIPPED

UNIT qq IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED

NPC [s]abc IS NOT SRM OR MJU TYPE

UTL, QRY, LOG, ALL

QUERY LOG

Explanation Of Command

This command is used to query DACS II for the link, user identifier, and date and time of login of the user issuing the command. The frame administrator uses the **ALL** keyword to list information on all current users.

Output from this command is sent only to the link on which the command was input.

Command

[I.54011]

UTL:FRM xy,SEQ ww:QRY,LOG[,ALL]!

Completion Message

[O.54011]

**M hh:mm:ss xy,ww n[vv] UTL QRY LOG e LN MSG:
LINK j[mm] USER <user id> {DATE mm/dd/yy FORMAT MDY|\
DATE dd/mm/yy FORMAT DMY} TOD hh:mm:ss COMPL**

[O.54011]

M hh:mm:ss xy,ww n[vv] UTL QRY LOG ALL e LN MSG:
LINK j[mm] USER <user id> {DATE mm/dd/yy FORMAT MDY|\
DATE dd/mm/yy FORMAT DMY} TOD hh:mm:ss

.
.
.

LINK j[mm] USER <user id> {DATE mm/dd/yy FORMAT MDY|\
DATE dd/mm/yy FORMAT DMY} TOD hh:mm:ss {EOM|COMPL}

M hh:mm:ss xy,ww n[vv] UTL QRY LOG ALL e LN MSG:
LINK j[mm] USER <user id> {DATE mm/dd/yy FORMAT MDY|\
DATE dd/mm/yy FORMAT DMY} TOD hh:mm:ss

.
.
.

LINK j[mm] USER <user id> {DATE mm/dd/yy FORMAT MDY|\
DATE dd/mm/yy FORMAT DMY} TOD hh:mm:ss COMPL

[O.54012]

M hh:mm:ss xx,yy n[vv] UTL QRY LOG[ALL] NONE COMPL

Denial Message

[O.54011.01]

M hh:mm:ss xy,ww n[vv] UTL QRY LOG[ALL] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

LOG - Login

ALL - All

All user logins. Used only by the frame administrator.

USER - User

user id

- User identifier (two to eight alphabetic characters)

User login identification

LINK - Link

j [mm] - The link number the user is logged onto

j - Administrative link number (5 or 6)

mm - Virtual link number (1 through 16)

DATE - Date

mm/dd/yy,dd/mm/yy

- Date, current

mm Month number (01 through 12)

dd Day number (01 through 31)

yy Year number (00 through 99)

FORMAT - Date format

MDY - Month/Day/Year format

DMY - Day/Month/Year format

TOD - Time of day

hh:mm:ss

- Time of day in hours, minutes, and seconds

hh Hours number (00 through 23)

mm Minutes number (00 through 59)

ss Seconds number (00 through 59)

NONE - No user is logged in to DACS II

cc - Hexadecimal condition code

cc *Explanation*

- D0** Command is Frame administrator (DAX) only.
- D3** User does not exist
- D7** Cannot execute privileged command
- DF** Command and protocol are inconsistent

UTL, QRY, LPBK, NPC

UTILITY QUERY LOOPBACK

Explanation Of Command

This command requests a report indicating which Network Processing Circuits are in the loopback state. The message applies to DA and TA type NPCs or to TE and TH type NPCs on Hybrid DS3Us. If the first NPC in a range of NPCs is a DA or TA type NPC, then only DA and TA type NPCs are reported on. If the first NPC in a range of NPCs is a TE or TH type NPC on a Hybrid DS3U, then only Hybrid DS3U NPC types are reported on.

For DA and TA type NPCs, loopbacks being executed by far-end equipment as well as loopbacks being executed by DACS II are reported. For TE and TH type NPCs on Hybrid DS3Us, local line loopback towards the facility is the only type of loopback that is supported.

Command

Nonhierarchical

[l.53131]

UTL:FRM xy,SEQ ww:QRY,LPBK,NPC [s]abc[-[t]def]!

Hierarchical

[l.53131]

UTL:FRM xy,SEQ ww:QRY,LPBK,NPC uvmnp[-wxkqr]!

Completion Message

Nonhierarchical

Output for DA and TA type NPCs

[O.53133]

M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC [u]ghi-[u]jkl TOT nnn\
[COND cc] 5 LN MSG:
spp spp spp spp spp spp spp [spp spp spp]
spp spp spp spp spp spp spp [spp spp spp]
spp spp spp spp spp spp spp [spp spp spp]
spp spp spp spp spp spp spp [spp spp spp] EOM

...	...	...
...	...	...
...	...	...

M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC [v]mno-[v]pqr TOT nnn\
[COND cc] 5 LN MSG:
spp spp spp spp spp spp spp [spp spp spp]
spp spp spp spp spp spp spp [spp spp spp]
spp spp spp spp spp spp spp [spp spp spp]
spp spp spp spp spp spp spp [spp spp spp] EOM

M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC [s]abc-[t]def\
[COND cc] COMPL

[O.53134]

M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC [s]abc spp COMPL

Output for TE and TH type NPCs on Hybrid DS3Us

[O.53135]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC [u]ghi-[u]jkl TOT nnn\  
[ COND cc] 8 LN MSG:  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq EOM
```

```
...      ...      ...  
...      ...      ...  
...      ...      ...
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC [v]mno-[v]pqr TOT nnn\  
[ COND cc] 8 LN MSG:  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC [s]abc-[t]def\  
[ COND cc] COMPL
```

[O.53136]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC [s]abc opq COMPL
```

Hierarchical

Output for DA and TA type NPCs

[O.53133]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC uvmaa-uvmbb TOT nnn\  
[ COND cc] 5 LN MSG:  
spp spp spp spp spp spp spp [spp spp spp]  
spp spp spp spp spp spp spp [spp spp spp]  
spp spp spp spp spp spp spp [spp spp spp]  
spp spp spp spp spp spp spp [spp spp spp] EOM
```

```
...      ...      ...  
...      ...      ...  
...      ...      ...
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC wxkaa-wxkbb TOT nnn\  
[ COND cc] 5 LN MSG:  
spp spp spp spp spp spp spp [spp spp spp]  
spp spp spp spp spp spp spp [spp spp spp]  
spp spp spp spp spp spp spp [spp spp spp]  
spp spp spp spp spp spp spp [spp spp spp] EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC uvmnp-wxkqr\  
[ COND cc] COMPL
```

[O.53134]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC uvmnp spp COMPL
```

Output for TE and TH type NPCs on Hybrid DS3Us

[O.53135]

```
M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC uvmaa-uvmbb TOT nnn\  
[ COND cc] 8 LN MSG:  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq  
opq opq opq opq EOM
```

```
...      ...      ...  
...      ...      ...  
...      ...      ...
```

M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC wxkaa-wxkbb TOT nnn\
[COND cc] 8 LN MSG:
opq opq opq opq
opq opq opq opq
opq opq opq opq
opq opq opq opq
opq opq opq opq
opq opq opq opq
opq opq opq opq EOM

M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC uvmnp-wxkqr\
[COND cc] COMPL

[O.53136]

M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC uvmnp opq COMPL

Denial Message

Nonhierarchical

[O.53131.01]

M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC [s]abc[-[t]def] \
COND cc DNY

Hierarchical

[O.53131.01]

M hh:mm:ss xy,ww n[vv] UTL QRY LPBK NPC uvmnp[-wxkqr] \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

LPBK - Loopback

NPC - Network processing circuit

If an NPC range is specified in the input command, the following floating window rules apply:

1. Unequipped NPCs within the requested range will be skipped.
2. If the first NPC in the range is a DA or TA type NPC, only those NPC types will be reported on.
3. If the first NPC in the range is a TE or TH type NPC on a Hybrid DS3U, then only those type of NPCs will be reported on.
4. If the first NPC in the range is a PA, PB, or PC type NPC, then only those NPC types will be reported on.

TOT - Total

nnn - Total Number of NPCs in the module that are in the loopback state

COND - Condition

[s]abc - The 3- or 4-digit nonhierarchical NPC number, start of NPC range
[t]def - The 3- or 4-digit nonhierarchical NPC number, end of NPC range

[u]ghi - Lowest numbered NPC in the FTM that contains NPC [s]abc
[v]mno - Lowest numbered NPC in the FTM that contains NPC [t]def

[u]jkl - Highest numbered NPC in the FTM that contains NPC [s]abc
[v]pqr - Highest numbered NPC in the FTM that contains NPC [t]def

FTM is an acronym for Facility Terminating Module. For FTMs in FTUs or IFTUs, each row contains 10 values of output. For FTMs within DS3Us each row contains 7 values. For FTMs within HDS3Us each row contains 4 values.

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number for beginning of NPC range
wxkqr - Hierarchical NPC number for end of NPC range

uvmaa - Lowest numbered NPC in the FTM that contains NPC uvmnp
FTM is an acronym for Facility Terminating Module.
The parameter value for NPC aa is in the first position, first line of the message.

uvmbb - Highest numbered NPC in the FTM that contains NPC uvmnp
The parameter value for NPC bb is just before EOM or COMPL.

wxkaa - Lowest numbered NPC in the FTM that contains NPC wxkqr
The parameter value for NPC aa is in the first position, first line of the message.

wxkbb - Highest numbered NPC in the FTM that contains NPC wxkqr
The parameter value for NPC bb is just before EOM or COMPL.

For FTMs in FTUs or IFTUs, each row contains 10 values of output. For FTMs within DS3Us each row contains 7 values. For FTMs within HDS3Us each row contains 4 values.

uv, wx - Unit number
m, k - Module number
np, qr, aa, bb
- NPC number within the module

The valid values are:

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

The range of NPCs in the denial messages will be given either as module or unit boundaries depending upon the reason for the denial.

spp - Loopback Type

Values of "spp" are presented in NPC order, grouped within messages by Facility Terminating Module (FTM). For FTM's in Facility Terminating Units, each row of output contains 10 values. For FTM's in DS3 Units, each row of output contains 7 values.

s Explanation

- * Loopback enabled
- ' ' Loopback disabled (The "s" character is a "space".)

pp Explanation

- NP Near-end payload loopback active (ANSI - DA/TA type NPCs)
- FP ANSI Far-end payload loopback active
- FL ANSI Far-end line loopback active
- NN No loopback active
- 00 NPC not specified in input range command
- NPC not equipped, or non-ANSI type

opq - Loopback Type

Values of "opq" are presented in NPC order, grouped within messages by DS2s. Since there are 7 DS2s within a Hybrid DS3, seven rows are generated in the output message, one for each DS2. Each DS2 may either carry four DS1 circuits or three E1 circuits. If a DS2 carries E1 circuits, then the fourth position in each row will not show any data. It will show dashes instead.

o Explanation

- D This is an NPC that carries a DS1 circuit.
- E This is an NPC that carries an E1 circuit.
- This is the fourth position of a DS2 carrying E1s.
- This NPC is not equipped or provisioned.
- This NPC is not in input range.

pq Explanation

- FA Line loopback towards facility active with AIS insertion
- FN Line loopback towards facility active without AIS insertion
- NN No loopback active
- 00 NPC not specified in input range command
- NPC not equipped or provisioned.

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped
13 FTMI is not equipped
25 FTMI type error
26 NPC type error
0B Invalid CEPT NPC

UTL, QRY, LPBK, UNIT

UTILITY QUERY HYBRID DS3 LOOPBACK

Explanation Of Command

This message is used to request a report indicating which Hybrid Multiplexer (HMXR) in a Hybrid DS3 Unit (HDS3U) are in the loopback state. Following HDS3U and DS3U convention the HMXR is addressed as an MXR/MIU Functional Group (MMFG).

Command

[I.53181]

UTL:FRM xy,SEQ ww:QRY,LPBK,UNIT [q]q!

Completion Message

[O.53181]

**M hh:mm:ss xy,ww n[vv] UTL QRY LPBK UNIT [q]q\
[COND cc] 2 LN MSG:
dt dt dt dt dt dt dt COMPL**

Note: The first "dt" value refers to the protection hybrid multiplexer. All other "dt" values refer to hybrid multiplexer 1 through 6. The "dt" value for the protection hybrid multiplexer only is valid if a DS3 is being protected. Similarly, a regular hybrid multiplexer shows the values "--", if the DS3 it serves is running on the protection multiplexer.

Denial Message

[O.53181.01]

M hh:mm:ss xy,ww n[vv] UTL QRY LPBK UNIT [q]q COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

LPBK - Loopback

COND - Condition

d - Loopback direction specifier

<i>d</i>	<i>Explanation</i>

E	Equipment loopback (diagnostic local loopback), the outgoing DS3 signal is looped back towards the DACS II equipment.

F	Facility loopback (line local loopback), the incoming DS3 signal is looped back towards the facility.

N	Not in a loopback state

-	MMFG not equipped, out-of-service, or equipped with non-hybrid multiplexer

UTL,QRY,MACRO,ATTR,USER,ALL

QUERY MACRO ATTRIBUTES

Explanation Of Command

This message queries the macro attributes associated with all personally-owned macros and any public macros. The frame administrator can query ALL the macro attributes of any macro, public or private.

For each macro, DACS II lists:

- The macro name
- The user who owns the macro
- The number of parameters in the macro
- The language used
- The amount of space used by the macro.

Command

[I.54211]

UTL:FRM xy,SEQ ww:QRY,MACRO,ATTR[, {USER <user id>|ALL}]!

Completion Message

[O.54211]

```
M hh:mm:ss xy,ww n[vv] UTL QRY MACRO ATTR\  
[ {USER <user id>|ALL}] e LN MSG:  
USER <user id> MACRO <name> PRMTR tt LANG {P|M} SPACE nnn \  
NPCAD {E|X|H}
```

```
.....  
.....  
USER <user id> MACRO <name> PRMTR tt LANG {P|M} SPACE nnn \  
NPCAD {E|X|H} {EOM|COMPL}
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY MACRO ATTR\  
[ {USER <user id>|ALL}] e LN MSG:  
USER <user id> MACRO <name> PRMTR tt LANG {P|M} SPACE nnn \  
NPCAD {E|X|H}
```

```
.....  
USER <user id> MACRO <name> PRMTR tt LANG {P|M} SPACE nnn \  
NPCAD {E|X|H} COMPL
```

[O.54212]

```
M hh:mm:ss xy,ww n[vv] UTL QRY MACRO ATTR\  
[ {USER <user id>|ALL}] NONE COMPL
```

Denial Message

[O.54211.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY MACRO ATTR\  
[ {USER <user id>|ALL}] COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

ATTR - Attributes

user id

- Query the specified user's private and public macro attributes

User login identification is two to eight alphabetic characters.

ALL - Query all private and public macros' attributes (used by the frame administrator only)

MACRO - The keyword used to indicate that the "name" shown is a macro name. A Macro is a collection of DACS II commands that can be executed as a group.

name - The macro name which is a string of uppercase alphanumeric characters from one to seven characters long. The first character must be an alphabetic character.

A macro name start with the character "P" is a public macro. Only the frame administrator is allowed to create a public macro.

LANG - Language

M - Man-Machine Language

P - Program Documentation Standard

PRMTR - Macro parameters

tt - Total number of macro parameters used (01 - 10)

SPACE - Macro space

nnn - Macro space used by the macro in percentage of the user macro space allocation (000 - 100)

NPCAD - NPC addressing scheme

E - 3-digit extended (nonhierarchical) NPC addressing scheme

X - 4-digit extended (nonhierarchical) NPC addressing scheme

H - Hierarchical NPC addressing scheme, i.e., address the NPC by using the unit number, module number, and NPC number within the module.

cc - Hexadecimal condition code

cc *Explanation*

D0 Command is Frame administrator (DAX) only.

D3 User does not exist

D5 No user is logged in on the link/vc

UTL,QRY,MACRO,MAP,SPACE,USER,ALL

UTILITY QUERY MACRO/MAP SPACE

Explanation Of Command

This message requests the amount of space that the user's alternate map or macro requires and how much space is still available.

The frame administrator can query for all user's macro or alternate map space requirements and for the system space requirements and allocation.

In summary, a user can query his/her own alternate map or macro space, but only the frame administrator can use the ALL and SYSTEM options of the command to query space owned by another user.

Command

[I.54221]

UTL:FRM xy,SEQ ww:QRY,{MACRO|MAP},SPACE[, {USER <user id>|ALL|\SYSTEM}]!

Completion Message

[O.54221]

**M hh:mm:ss xy,ww n[vv] UTL QRY {MACRO|MAP} SPACE nnn \
AVAIL xxx
[{USER <user id>|SYSTEM}] COMPL**

[O.54222]

```
M hh:mm:ss  xy,ww n[vv] UTL QRY {MACRO|MAP} SPACE nnn ALL  \
e LN MSG:
USER <user id> AVAIL xxx
USER <user id> AVAIL xxx
      ....      ...
USER <user id> AVAIL xxx  {EOM|COMPL}
```

```
M hh:mm:ss  xy,ww n[vv] UTL QRY {MACRO|MAP} SPACE nnn ALL  \
e LN MSG:
USER <user id> AVAIL xxx
USER <user id> AVAIL xxx
      ....      ...
USER <user id> AVAIL xxx  {EOM|COMPL}
```

```
      ....      ...
      ....      ...
M hh:mm:ss  xy,ww n[vv] UTL QRY {MACRO|MAP} SPACE nnn ALL  \
e LN MSG:
USER <user id> AVAIL xxx
USER <user id> AVAIL xxx
      ....      ...
USER <user id> AVAIL xxx  COMPL
```

Denial Message

[O.54221.01]

```
M hh:mm:ss  xy,ww n[vv] UTL QRY {MACRO|MAP} SPACE\
[ {USER <user id>|ALL|SYSTEM}] COND cc  DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

MAP - Map

MACRO - Macro

USER - User

user id

- query the specified user's macro/map space status.

User login identification is two to eight alphabetic characters.

ALL - query all users' macro/map space status.

SYSTEM - query the system macro/map space status.

nnn - percentage of macro/map space allocated (000 to 100%). If user ID or ALL option is used, nnn is the user macro/map space allocation percentage. If SYSTEM option is used, nnn is the percentage of system macro/map space allocated, and it is always 100 (i.e., 100%).

AVAIL - Percentage of space available.

xxx - percentage of user or system macro/map space still available (000 to 100%)

cc - Hexadecimal condition code

cc *Explanation*

D0 Command is Frame administrator (DAX) only.

D3 User does not exist

D5 No user is logged in on the link/vc

UTL, QRY, MACRO, USER

UTILITY QUERY MACRO

Explanation Of Command

This command is used to query the attributes of a macro including the language, the number of macro parameters, the amount of user macro space used by the macro, the NPC addressing scheme used by the macro, and the total number of macro command lines in the macro.

A user can query his or her own macros but only the frame administrator can query macros owned by another user.

Command

[I.54121]

UTL:FRM xy,SEQ ww:QRY,MACRO <name>[,USER <user id>]!

Completion Message

[O.54121]

M hh:mm:ss xy,ww n[vv] UTL QRY MACRO <name>[USER <user id>] 2 LN MSG:
LANG {M|P} PRMTR jk SPACE sss NPCAD {E|X|H} TOTAL <line total> COMPL

Denial Message

[O.54121.01]

M hh:mm:ss xy,ww n[vv] UTL QRY MACRO <name>[USER <user id>] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

MACRO - Macro

name - The macro name (seven characters maximum length)

The name of a collection of DACS II commands executed as a group.

A macro name is a string of capitalized alphanumeric characters. There are two type of macros; public and private. A private macros is created by a user in space allocated to the user by the system administrator. Only the user that created it can execute or read (LIST) a private macro. A public macro is created by the system administrator and is executable and readable by all users. A public macro name must start with the letter "P". A private macro name must not start with the letter "P".

USER - User

user id

- User identifier (two to eight alphabetic characters)

User login identification

A user can query their own macros but only the frame administrator can use the command to query macros owned by other users. The frame administrator must specify the user id to query other users' macros.

LANG - Language

M - Man-Machine language

P - Program documentation standards

PRMTR - Parameter

jk - Total number of macro parameters used (01 through 10)

SPACE - Space

sss - User macro or map space allocation (000 through 100 percent)

Variable sss represents the space allocated to user macros or maps for the entire DACS II system as a percentage of the system macro space.

TOTAL - Total

line total

- Total number of macro command lines in the macro

NPCAD - NPC addressing scheme

- E** - 3-digit extended (non-hierarchical) NPC addressing scheme
- X** - 4-digit extended (non-hierarchical) NPC addressing scheme
- H** - Hierarchical NPC addressing scheme, that is, address the NPC by using the unit number, module number, and NPC number within the module.
- cc** - Hexadecimal condition code

cc *Explanation*

- 64** File doesn't exist/can't be accessed
- D0** Command is Frame administrator (DAX) only.
- D3** User does not exist
- D5** No user is logged in on the link/vc

UTL, QRY, MAP, ATTR, ALL, USER, MAPNM

UTILITY QUERY MAP

Explanation Of Command

This message requests the following information on the user's alternate map:

- User identifier
- Status of the map
- Amount of space used by the map.

Only the administrator can request information on other users or request ALL alternate maps on the DACS II frame.

Command

[I.54201]

UTL:FRM xy,SEQ ww:QRY,MAP,ATTR[, {ALL|USER <user id>|MAPNM <name>}]!

Note: Only the DACS II frame administrator can use the ALL option.

Completion Message

[O.54201]

M hh:mm:ss xy,ww n[vv] UTL QRY MAP,ATTR[{ALL|USER <user id>|\MAPNM <name>}}] e LN MSG:
USER <user id> MAP <name> STATS bb SPACE nnn

.
.
.

USER <user id> MAP <name> STATS bb SPACE nnn EOM

M hh:mm:ss xy,ww n[vv] UTL QRY MAP,ATTR[{ALL|USER <user id>|\MAPNM <name>}}] e LN MSG:
USER <user id> MAP <name> STATS bb SPACE nnn

.
.
.

USER <user id> MAP <name> STATS bb SPACE nnn COMPL

[O.54202]

M hh:mm:ss xy,ww n[vv] UTL QRY MAP,ATTR[{ALL|USER <user id>|\MAPNM <name>}}] NONE COMPL

Denial Message

[O.54201.01]

M hh:mm:ss xy,ww n[vv] UTL QRY MAP,ATTR[{ALL|USER <user id>|\MAPNM <name>}}] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

MAP - Map

ATTR - Attributes

ALL - All

USER - User

user id

- User identifier

User login identification is two to eight alphabetic characters.

The USER option is available to a regular DACS II user to query his or her own maps. Only the administrator can use the option to request information on other users or ALL alternate maps on the DACS II frame.

MAPNM - Alternate map name

name - The alternate map name which is a string of uppercase alphanumeric characters from one to seven characters long. The first character must be an alphabetic character.

A user can query his or her own maps but only the frame administrator can use the command to query maps owned by other users. To do so, the optional USER field must be entered.

STATS - Status of the alternate map

bb - Map Status

bb Explanation

00 Map is valid (can be activated)

01 Map is not valid (it contains conflicting circuits and therefore cannot be activated)

SPACE - Alternate map space

nnn - Alternate Map space used by the alternate map in percentage of the user alternate map space allocation (000 - 100)

cc - Hexadecimal condition code

cc *Explanation*

64 File doesn't exist/can't be accessed

D0 Command is Frame administrator (DAX) only.

D3 User does not exist

D5 No user is logged in on the link/vc

UTL, QRY, MARK

UTILITY QUERY MARKINGS

Explanation Of Command

This command is used to query a single or a range of network processing circuits (NPCs) in a facility terminating unit, a digital signal processing unit, a DS3 or a HDS3 unit. DSP Application circuit packs provisioned in a facility terminating unit are supported. This command can be aborted before the entire printout has completed.

When specifying a single NPC, the channel and conference or non-channelized circuit with markings (red circuit and/or customer controlled) are listed. The output for a channel or conference with markings is skipped. When the circuit does not contain markings, the output message indicates this with the NONE keyword. A denial message is printed when the NPC is unequipped.

When specifying a range of NPCs, the channel and conference or non-channelized circuit with markings (red circuit and/or customer controlled) are listed for each equipped NPC. The output for an unequipped or unmarked channel and conference or non-channelized NPC is skipped.

For a non-channelized circuit with markings, a one-line output message segment is printed for each NPC marked, but the channel or conference information is not printed.

For a disconnected channel which was previously used in both two-way and/or one-way cross-connections, the CUS marking is retained for the two-way cross-connection and output by default.

Outputs are skipped under the following conditions:

- NPC is unequipped
- Channel or conference point has no **RDC** or **CUS** marking.

Command

Nonhierarchical

[I.52201]

UTL:FRM xy,SEQ ww:QRY,MARK [s]abc[-[t]def]!

Hierarchical

[I.52201]

UTL:FRM xy,SEQ ww:QRY,MARK uvmnp[-wxkqr]!

Completion Message

Nonhierarchical

[O.52201]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK [s]abc TYPE mnxyz [FDL t000ccrrr] xx e LN MSG:
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr EOM

.
.
.

[M hh:mm:ss xy,ww n[vv] UTL QRY MARK [t]jkl TYPE mn9y9 tccrrr EOM]

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY MARK [t]def TYPE mnxyz [FDL t000ccrrr] xx e LN MSG:
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY MARK [s]abc[-[t]def] COMPL

Note: The format above assumes all 24 DS0 channels in each NPC are marked.
Only NPCs with markings are listed.

Hierarchical

[O.52201]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK uvmnp TYPE mnxyz
[FDL t000ccrrr] xx e LN MSG:
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr EOM

.
.
.

[M hh:mm:ss xy,ww n[vv] UTL QRY MARK edhfg TYPE mnxyz
tccrrr EOM]

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY MARK wxkqr TYPE mnxyz [FDL t000ccrrr] xx e LN MSG:
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY MARK uvmnp[-wxkqr] COMPL

Note: The format above assumes all 24 DS0 channels in each NPC are marked.
Only NPCs with markings are listed.

Denial Message

Nonhierarchical

[O.52201.01]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK [s]abc TYPE ----- UEQD DNY

[O.52201.02]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK [s]abc[-[t]def] TYPE mnxyz COND cc DNY

Hierarchical

[O.52201.01]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK uvmnp TYPE ----- UEQD DNY

[O.52201.02]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK uvmnp[-wxkqr] TYPE mnxyz COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

MARK - Mark

One of the following:

RDC - Red circuit

CUS - Customer-controlled circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number denoting beginning of range specification

[t]def - The 3- or 4-digit nonhierarchical NPC number denoting end of range specification

The valid values are listed below:

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

9961-9966

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Hierarchical NPC number denoting beginning of range specification

wxkqr - Hierarchical NPC number denoting end of range specification

uv, wx - Unit number

m, k - Module number

np, qr - NPC number within the module

The valid values are presented below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number

Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

VI NPC numbers listed by unit, module, and NPC Number
Unit Type VI (Virtual)

Unit	Module	NPC	
99	1	01-02	(DACS II Non-CEF frames)
99	1	01-06	(DACS II CEF frames)

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

[t]jkl - The 3- or 4-digit NPC number in range [s]abc-[t]def, of a non-channelized NPC.

edhfg - Hierarchical non-channelized NPC number in range uvmnp-wxkqr

TYPE - Type

mnxyz - NPC type

mnxyz Explanation

DAxyz FTU DS1 ANSI NPC type
DExyz FTU NPC
DSxyz SLC® carrier interface
MB100 Digital Multipoint Bridge
MJ100 Multipoint Junction
TAxyz DS3U DS1 ANSI NPC type
TExyz DS3U or HDS3U NPC
THxyz HDS3U CEPT NPC
SDxyz DSP Application
SR100 Subrate Multiplexer
Vlxyz Virtual circuit

xx - Total number of marked channels in the message segment
(01 through 24)

FDL - Facility data link

t - Cross-connection type

t Explanation

B For broadcast cross-connection
D For disconnection
* For one-way cross-connection

'' Blank for two-way cross-connection,

T A Facility Access Digroup (FAD) or a Test Port (TP) channel

nnn - Channel or conference number

ccc - CUS if customer controlled or --- if not customer controlled

rrr - RDC if red circuit or --- if not red circuit

UEQD - Unequipped

----- - Unknown NPC type

cc - Hexadecimal condition code

cc *Explanation*

0B Invalid CEPT NPC

UTL,QRY,MARK

QUERY CHANNEL MARKS

Explanation Of Command

This command is used to query a network processing circuit for the channel and conference points that are **MARKed** as red or customer controlled circuits.

The command can be entered to request a listing for a group of channels or conference points or for a single channel or conference point. This command can be aborted before the entire printout has completed.

For a disconnected channel which was previously used in both two-way and one-way cross-connections, the CUS marking retained for the two-way cross-connection is output by default.

Outputs are skipped under the following conditions:

- Unequipped NPC
- Channel/conference point has no red circuit or customer controlled marking.

Command

Nonhierarchical

[I.52211]

UTL:FRM xy,SEQ ww:QRY,MARK [s]abcjjj[-kkk]!

Hierarchical

[I.52211]

UTL:FRM xy,SEQ ww:QRY,MARK uvmnpjjj[-kkk]!

Completion Message

Nonhierarchical

Usage: Single channel or conference point

[O.52211]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK [s]abcjjj TYPE mnxyz tjjjccrrr COMPL

[O.52211]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK [s]abc000 TYPE DExyz FDL t000ccrrr COMPL

Usage: Range of channels or conference points

[O.52211]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK [s]abcjjj-kkk TYPE mnxyz xx e LN MSG:
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY MARK [s]abcjjj-kkk TYPE mnxyz xx e LN MSG:
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
tnnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY MARK [s]abcjjj[-kkk] COMPL

Usage: No channel or conference points are marked.

[O.52213]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK [s]abcjjj[-kkk] NONE COMPL

Hierarchical

Usage: Single channel or conference point

[O.52211]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK uvmnpjjj TYPE mnxyz\
tjjjccrrr COMPL

[O.52211]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK uvmnpjjj TYPE DExyz\
FDL tnnccrrr COMPL

Usage: Range of channels or conference points

[O.52211]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK uvmnpjjj-kkk TYPE mnxyz xx e LN MSG:
[tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY MARK uvmnpjjj-kkk TYPE mnxyz xx e LN MSG:
[tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
[tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr]
tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr tnnccrrr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY MARK uvmnpjjj-kkk COMPL

Usage: No channels or conference points are marked.

[O.52213]

M hh:mm:ss xy,ww n[vv] UTL QRY MARK uvmnpjjj[-kkk] NONE COMPL

Denial Message

Nonhierarchical

[O.52211.01]

M hh:mm:ss xy,ww n[vv] QRY MARK [s]abc TYPE ----- UEQD DNY

[O.52211.02]

M hh:mm:ss xy,ww n[vv] QRY MARK [s]abcjjj[-kkk] [{RT|DL} ffff \
MD g[g] [t]aaa] COND cc DNY

Hierarchical

[O.52211.01]

M hh:mm:ss xy,ww n[vv] QRY MARK uvmnp TYPE ----- UEQD DNY

[O.52211.02]

M hh:mm:ss xy,ww n[vv] QRY MARK uvmnpjjj[-kkk] [{RT|DL} ffff \
MD g[g] uvkqr] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

MARK - Mark

Red circuit and customer controlled MARKings

NONE - None

This keyword indicates that no channel or conference point is marked
as a red and/or customer controlled circuit.

[s]abcjjj

- Termination number

[s]abc - The 3- or 4-digit nonhierarchical NPC number

jjj - Channel or conference point number

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

9961-9966

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module
jjj - Channel or conference point number

The valid values follow:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

VI NPC numbers listed by unit, module, and NPC Number
Unit Type VI (Virtual)

Unit	Module	NPC	
99	1	01-02	(DACS II Non-CEF frames)
99	1	01-06	(DACS II CEF frames)

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

kkk - Channel or conference point number

Channel numbers
001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers

001-085 (MB NPC)

001-500 (Virtual NPC)

tnnnccrrr

- Channel or conference information

t - Cross-connection type

t *Explanation*

* One-way cross-connection

B Broadcast cross-connection,
Blank for two-way cross-connection,

D Disconnection

nnn - Channel or conference point number (jjj through kkk)

ccc - Customer controlled marking

ccc *Explanation*

CUS Customer controlled

--- Not customer controlled

rrr - Red circuit marking

rrr *Explanation*

RDC Red circuit

--- Not red circuit

xx - Total number of data fields in the segment (01 through 24)

RT - Remote terminal

SLC® carrier remote terminal

DL - Digital carrier line unit

ffff - SLC carrier RT or DCLU Bank identification number (0000 through 9999)

MD - Mode

g[g] - Mode of operation

g[g] *Explanation*

1	SLC 96 carrier Mode I
3	SLC 96 carrier Mode III
C	SLC Series 5 carrier Feature Package C

[t]aaa - The 3- or 4-digit nonhierarchical SLC carrier digroup A NPC number.

uvkqr - Hierarchical SLC carrier digroup A NPC number.

uv	- Unit number
k	- module number
qr	- NPC number

UEQD - Unequipped

TYPE - Type

mnxyz - NPC type

mnxyz *Explanation*

-----	Unknown NPC type
DAxyz	FTU DS1 ANSI NPC type
DExyz	Enhanced digroup
DSxyz	SLC carrier interface
MBxyz	Multipoint bridge
SDxyz	DSP Application
TAxyz	DS3U DS1 ANSI NPC type
TExyz	DS3U noninterface unit
TIxyz	DS3U interface unit
VIxyz	Virtual circuit

FDL - Facility data link

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

- 01** Invalid range for specified NPC type
- 0B** Invalid CEPT NPC
- 62** Invalid channel number
- 63** NPC is a DGP
- 7F** NPC is not added
- 91** SR NPC was specified - not allowed
- B5** CPR circuit pack specified in the command
- F7** Corresponding NPC for virtual channel is not provisioned
- 70** NPC invalid type

UTL, QRY, MEMSTAT

RETRIEVE MEMORY STATUS

Explanation Of Command

This command identifies the current contents of the system memory devices. A separate line of information is provided for the Main Controller random access memory (RAM), Primary Memory Card (PMEM) and Secondary Memory Card (SMEM). The message response provides the following information for each particular memory device that can be accessed:

1. Software Release of the Executable Program
2. Software Release of the Database
3. Date and Time Stamps of the Database
4. Frame ID and Unique ID
5. Feature Package ID
6. Serial number of the database
7. Serial number of the SunDisk card (PMEM and SMEM only)
8. Service state of the card (PMEM and SMEM) and the service state of the RAM as it corresponds to the state of the MC. If the MC is in-service RAM is in-service, if the MC is in maintenance condition RAM is out-of-service.

In addition information about applications that reside on the memory cards is given as follows:

1. The type of the application in the form SDx, where "x" indicates the type.
2. The generic, issue, and release numbers that identify the version of the application
3. The date when this version of the application was generated.

The output format depends on what the MEMSTAT command finds on each memory card and whether a memory card is in its respective slot as follows:

1. Applications are listed separately in the output of the command. An application section is only created in the output command if applications actually reside on the memory cards.
2. The output for an application does not contain any information about an executable or a database, because it does not apply. The version information identifies the application.
3. If no memory card is in a particular slot, then the output for that slot will generate dashes for the data.
4. If the SMEM slot contains an application card (the PMEM slot should never have an application card), then SMEM is not mentioned in the main section of the output, but is mentioned only in the application section of the output message. In addition, the type field in the output for an application card has an asterisk at its end to identify the card as an application card.

This message may be executed either while the Main Controller is In-Service or in Maintenance Condition.

Command

[I.51001]

UTL : [FRM xy, SEQ ww] : QRY, MEMSTAT !

Completion Message

Normal case with no platform application card in SMEM and no applications residing on PMEM or SMEM, only main section (plus feature package section) is generated, no application section is generated.

[O.51001]

```
M hh:mm:ss xy,ww n[vv] UTL QRY MEMSTAT 5 LN MSG:
DEV  EXCT  DBASE  DATE    TIME    FID  UID
RAM   gg.pp.r dd.rr.v aa/bb/yr hr:mn:sc fg  <uid>
PMEM  gg.pp.r dd.rr.v aa/bb/yr hr:mn:sc fg  <uid>
SMEM  gg.pp.r dd.rr.v aa/bb/yr hr:mn:sc fg  <uid> EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY MEMSTAT 5 LN MSG:
FPKG      DBSN      FCSN      STATE
nnnnnnnn 0000000000 qqqqqqqqqqqqqqqqqqqq <state>
nnnnnnnn 0000000000 qqqqqqqqqqqqqqqqqqqq <state>
nnnnnnnn 0000000000 qqqqqqqqqqqqqqqqqqqq <state> COMPL
```

Normal case with no platform application card in SMEM, but applications residing on PMEM and SMEM. Both a main section and an application section (plus feature package section) are generated.

[O.51001]

```
M hh:mm:ss xy,ww n[vv] UTL QRY MEMSTAT e LN MSG:
DEV  EXCT  DBASE  DATE    TIME    FID  UID
RAM   gg.pp.r dd.rr.v aa/bb/yr hr:mn:sc fg  <uid>
PMEM  gg.pp.r dd.rr.v aa/bb/yr hr:mn:sc fg  <uid>
SMEM  gg.pp.r dd.rr.v aa/bb/yr hr:mn:sc fg  <uid>
DEV  APPLICATION TYPE  DATE    VERSION
PMEM  SDx              aa/bb/yr  gen.iss.rel
      .
      .
[PMEM  SDx              aa/bb/yr  gen.iss.rel]
SMEM  SDx              aa/bb/yr  gen.iss.rel
      .
      .
[SMEM  SDx              aa/bb/yr  gen.iss.rel] EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY MEMSTAT 5 LN MSG:
FPKG      DBSN      FCSN      STATE
nnnnnnnn 0000000000 qqqqqqqqqqqqqqqqqqqq <state>
nnnnnnnn 0000000000 qqqqqqqqqqqqqqqqqqqq <state>
nnnnnnnn 0000000000 qqqqqqqqqqqqqqqqqqqq <state> COMPL
```


Case with no card in SMEM slot and platform applications residing on PMEM, both a main section and an application section (plus feature package section) are generated.

[O.51001]

```

M hh:mm:ss xy,ww n[vv] UTL QRY MEMSTAT e LN MSG:
DEV  EXCT  DBASE  DATE      TIME      FID  UID
RAM   gg.pp.r dd.rr.v aa/bb/yr  hr:mn:sc fg  <uid>
PMEM  gg.pp.r dd.rr.v aa/bb/yr  hr:mn:sc fg  <uid>
SMEM  - - - - - - - - - - - - - - - - - - - - - -
DEV  APPLICATION TYPE  DATE      VERSION
PMEM  SDx              aa/bb/yr  gen.iss.rel
      .
      .
[PMEM  SDx              aa/bb/yr  gen.iss.rel] EOM

M hh:mm:ss xy,ww n[vv] UTL QRY MEMSTAT 5 LN MSG:
FPKG   DBSN   FCSN   STATE
nnnnnnnn 0000000000 qqqqqqqqqqqqqqqqqqqqqqq <state>
nnnnnnnn 0000000000 qqqqqqqqqqqqqqqqqqqqqqq <state>
nnnnnnnn 0000000000 qqqqqqqqqqqqqqqqqqqqqqq <state> COMPL

```

Case with platform application card in SMEM and one application residing on PMEM and SMEM, both a main section and an application section (plus feature package section) are generated.

[O.51001]

```

M hh:mm:ss xy,ww n[vv] UTL QRY MEMSTAT e LN MSG:
DEV  EXCT  DBASE  DATE      TIME      FID  UID
RAM   gg.pp.r dd.rr.v aa/bb/yr  hr:mn:sc fg  <uid>
PMEM  gg.pp.r dd.rr.v aa/bb/yr  hr:mn:sc fg  <uid>
DEV  APPLICATION TYPE  DATE      VERSION
PMEM  SDx              aa/bb/yr  gen.iss.rel
SMEM  SDx*             aa/bb/yr  gen.iss.rel EOM

M hh:mm:ss xy,ww n[vv] UTL QRY MEMSTAT 5 LN MSG:
FPKG   DBSN   FCSN   STATE
nnnnnnnn 0000000000 qqqqqqqqqqqqqqqqqqqqqqq <state>
nnnnnnnn 0000000000 qqqqqqqqqqqqqqqqqqqqqqq <state>
nnnnnnnn 0000000000 qqqqqqqqqqqqqqqqqqqqqqq <state> COMPL

```

Note: The asterisk (*) following the application type "SDx" in the application section of the message indicates that SMEM is an application card and not a regular 40 Mbyte memory card. Application cards are used for distributing applications to the customer.

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

MEMSTAT

- Memory Status

e - number of lines in message

DEV - Device

EXCT - Executables

gg.pp.r

- Software release identifier.

This field identifies the software release of the executable program that is stored in the memory device. The software release ID is a three part number composed of a release number, a point number, and a version number. This field will appear as a set of dashes if no executable program can be found on the memory device. The software release number "gg.pp.r" is composed of:

gg - Software release number

pp - Point release number

r - Version number

DBASE - Database

dd.rr.v

- Database release identifier.

This field identifies the release of executable program that the database stored in the memory device is formatted for. A database is formatted for a particular executable program release; however, it is compatible with not only the shown release but all other executable program releases that have a greater release ID. The release ID is a three part number composed of a release number, a point number and a version number. This field will appear as a set of dashes if no database can be found on the memory device. The database release number "dd.rr.v" is composed of:

dd - Release number
rr - Point release number
v - Version number

DATE - Date

aa/bb/yr

- Date of last update to the database.

This field identifies the date that the database was created or last updated. In the RAM data line, this field shows the current system date. For the PMEM and SMEM data lines, this field shows the date that the most recent database backup to the Flash Card occurred.

The date field will appear as a set of dashes if no database can be found on the memory device. The date may be generated in either the month-day or the day-month format, depending on how the user has provisioned it using command I.51021, UTL::DATE.

aa Month or Day, depending on selected date format.
bb Day or Month, depending on selected date format.
yr Year

TIME - Time

hr:mn:sc

- Time of last update to the database.

This field identifies the time that the database was created or last updated. In the RAM memory data line, this field shows the current system time. In the PMEM and SMEM data lines, this field shows the time of day that the most recent database backup to the Flash Card occurred. This field will appear as a set of dashes if no database can be found on the memory device.

hr - Hour (00 through 23)
mn - Minute (00 through 59)
sc - Second (00 through 59)

FID - Frame ID

fg - Frame identifier of the memory device.

This field displays the two alphanumeric character frame identifier "fg" of the memory device. In the RAM memory line, the frame ID shown is that of the DACS II system. For the flash cards, PMEM and/or SMEM, the frame ID identifies the system that the memory card belongs to. This field will be shown as dashes if no frame ID can be found on the memory device.

UID - Unique ID

<uid> - Unique identifier of the memory device.

This field displays the unique identifier **<uid>**, up to 20 alpha-numeric characters, of the memory device. In the RAM memory line, the unique ID shown is that of the DACS II system. For the flash cards, PMEM and/or SMEM, the unique ID identifies the system that the flash card belongs to. This field will be shown as dashes if no unique ID can be found on the memory device.

APPLICATION TYPE

- Application Type

This field identifies the type of application "SDx" that resides on the application card, where "x" is a hexadecimal number that designates the application as shown in the list;

SD1	X.50/X.57 Subrate application
SD3	Digital Multipoint Bridge application
SD4	DDS Subrate and Multipoint Junction application
SDx	Future application with a specific "x" value

VERSION

- Version

This field identifies the version number of an application. The version number is subdivided into four fields as follows:

gen	Generic number of the application
iss	Issue number of the application
rel	Release number of the application

FPKG - Feature Package ID

nnnnnnnn

- Feature package identifier.

This field displays the eight character hexadecimal identifier of the feature package. In the RAM memory line, the feature package ID shown is that of the DACS II system. For the flash cards, PMEM and/or SMEM, the feature package ID identifies the system that the flash card belongs to. This field will be shown as dashes if no feature package ID can be found on the memory device.

For those customers that operate a non-CEF DACS II frame, such as an SBF or ESBF, the feature package identifier may show an anomaly that is harmless. PCMCIA cards are formatted with the CEF feature bit ("00000080" in hexadecimal) on. However, these PCMCIA cards may be used in a non-CEF frame. The program will automatically turn the CEF bit off in the Main Controller's random access memory (RAM), when it finds that it is not running on a CEF. For this reason, there may be a discrepancy between what the feature package ID is in random access memory and what the feature package ID is on the PCMCIA cards. For example, if the feature package ID is "00003822" in RAM, it may be "0038A2" on the PCMCIA cards.

DBSN - Database Serial Number

0000000000

- Database serial number.

This field displays the ten character numeric identifier of the serial number of the database. In the RAM memory line, the database serial number shown is that of the DACS II system. For the flash cards, PMEM and/or SMEM, the database serial number identifies the system that the flash card belongs to. This field will be shown as dashes if no serial number can be found on the memory device.

This field will be padded with blanks if necessary.

FCSN - Flash Card

qqqqqqqqqqqqqqqqqqqqqq

- Flash card serial number.

This field displays the 20 character alpha-numeric serial number of the flash card. In the RAM memory line, the flash card serial number shown is that of the DACS II system. For the flash cards, PMEM and/or SMEM, the serial number identifies the system that the flash card belongs to. This field will be shown as dashes if no serial number can be found on the memory device.

This field will be padded with blanks if necessary.

STATE - Service State

<state> - Identifies the state of the memory device.

This field displays the service state of the memory device. The valid states are:

state *Explanation*

IS In State

00S Out Of State

UTL, QRY, MSGLOG, RANGE

RETRIEVE MESSAGE LOG RANGE

Explanation Of Command

This message displays the range of the Message Log numbers as well as the total number of messages currently in the Message Log. This information is constantly changing.

Command

[I.57001]

UTL:FRM xy,SEQ ww:QRY,MSGLOG,RANGE!

Completion Message

[O.57001]

M hh:mm:ss xy,ww n[vv] UTL QRY MSGLOG RANGE <a>- total COMPL

Denial Message

[O.57001.01]

M hh:mm:ss xy,ww n[vv] UTL QRY MSGLOG RANGE COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

MSGLOG - Message Log

MSG - RNG

- Message Range /* mml */

RANGE - Message Range

The range of messages stored in the Message Log.

a - Number of first message stored in the Message Log.

b - Number of last message stored in the Message Log.

total - Total number of messages existing in the Message Log

cc - Hexadecimal condition code

cc *Explanation*

02 Subject entity is not equipped

UTL,QRY,NFS,NPC

QUERY NPC NON FRAME-WORD SETTING

Explanation Of Command

This command displays the non Frame-Word Setting (NFS) of the spare international and national bits, that are being cross-connected from a timeslot 0 (TS0) to a non-TS0 timeslot. These bits are bit 1 of the Frame Word (FW) and bits 1-8 of the non Frame Word (NFW). The request can be made for the TS0 on one or a range of Network Processing Circuits (NPCs).

Command

Nonhierarchical

[I.56324]

UTL:FRM xy,SEQ ww:QRY,NFS,NPC [s]abc[-[t]def]!

Hierarchical

[I.56324]

UTL:FRM xy,SEQ ww:QRY,NFS,NPC uvmnp[-wxkqr]!

Completion Message

Nonhierarchical

[O.56324]

M hh:mm:ss xy,ww n[vv] UTL QRY NFS NPC [s]abc abcdefghi COMPL

.
.
.

[M hh:mm:ss xy,ww n[vv] UTL QRY NFS NPC [t]def abcdefghi COMPL]

[M hh:mm:ss xy,ww n[vv] UTL QRY NFS NPC [s]abc-[t]def COMPL]

Hierarchical

[O.56324]

M hh:mm:ss xy,ww n[vv] UTL QRY NFS NPC uvmnp abcdefghi COMPL

.
.
.

[M hh:mm:ss xy,ww n[vv] UTL QRY NFS NPC wxkqr abcdefghi COMPL]

[M hh:mm:ss xy,ww n[vv] UTL QRY NFS NPC uvmnp-wxkqr COMPL]

Denial Message

Nonhierarchical

[O.56324.01]

M hh:mm:ss xy,ww n[vv] UTL QRY NFS NPC [[u]ghi[-[v]jkl]] COND cc DNY

Hierarchical

[O.56324.01]

M hh:mm:ss xy,ww n[vv] UTL QRY NFS NPC [edhfg[-opjst]] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number, start of range

[t]def - The 3- or 4-digit nonhierarchical NPC number, end of range

[u]ghi - The 3- or 4-digit nonhierarchical NPC number ([s]abc through [t]def)

[v]jkl - The 3- or 4-digit nonhierarchical NPC number ([s]abc through [t]def)

Values are listed below:

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number

Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number, start of range

wxkqr - Hierarchical NPC number, end of range

edhfg - Hierarchical NPC number (uvmnp through wxkqr)

opjst - Hierarchical NPC number (uvmnp through wxkqr)

uv, wx, ed, op

- Unit number

m, k, h, j

- Module number

np, qr, fg, st

- NPC number

Values are listed below:

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

NFS - Non-Frame-Word Setting

abcdefghi

- Variables representing the TS0 bits to which NFS is applied

For Clear-2Mbit/s NPCs, dashes ("-----") will be shown in place of NFS bits.

- a: Bit 1 of Frame Word (FW) - International spare bit
- b: Bit 1 of Non Frame Word (NFW) - International spare bit
- c: Bit 2 of NFW
- d: Bit 3 of NFW - Remote Alarm Indicator
- e-f: Bits 4-5 of Non Frame Word, National spare bits
- g: Bit 6 of Non Frame Word, RPSFI bit if provisioned for RPSFI
otherwise National spare bit
- h-i: Bits 7-8 of Non Frame Word, National spare bits.

Variable Value	Action on corresponding TS0 bit:
"0" or "1"	Set TS0 bit to this value
"V"	Received bit is inverted and passed through
"P"	Received bit is passed through unchanged
"-"	Not applicable

cc - Hexadecimal condition code

cc *Explanation*

- 04** Subject entity is out of service
- 10** Unit is not equipped
- 11** UC is out of service
- 13** FTMI is not equipped
- 14** FTMI is out of service
- 15** NPC is unequipped
- 25** FTMI type error
- 26** NPC type error
- 0B** Invalid CEPT NPC
- 46** NPC Failed or Out of Service

UTL, QRY, NPC, ALL, AI, LV, LOCN, MONDAT

QUERY PERFORMANCE MONITORING DATA FOR DA, TA, TH AND PA TYPE NPCS

Explanation Of Command

This message retrieves current and/or historical DS1 performance monitoring data from DA, TA, TH and PA type NPCs. The message response is output in two distinct formats depending on whether the input command is applied to ALL NPCs on the frame or a set of specifically addressed NPCs.

When the command is applied to ALL NPCs, DACS II responds with the current parameter counts of a single specified performance parameter for ALL NPCs. No output level thresholding is performed and all counts, whether they are zero or greater, are output. The output is formatted on a module-by-module basis for Facility Terminating Units, DS3 and Hybrid DS3 Units. If a particular NPC within a module is not a DA, TA TH or PA type NPC, its accumulator count will be printed as a string of dashes. Also for TH type NPCs in a hybrid DS3 unit the fourth NPC which does not exist will be printed as dashes.

When a single NPC or range of NPCS is specifically addressed in the input command, all of the optionally entered user parameters are programmable. DACS II outputs the requested data in a different format, which accommodates the various user options.

This command will handle NPC addressing as follows: If only a single NPC is addressed in the input command, then either a completion or denial response will be generated for the addressed NPC. DACS II will always deny invalid commands to specifically addressed NPCS.

If a range of NPCS is addressed and the feature applies to one or more NPCS within the range, DACS II will perform the command on the NPCS in the range that support the requested feature, but skip the NPCS which do not support the requested feature. DACS II does not output denial responses for a range of NPCS.

Restrictions are placed on the use of the "ALL" options for various keywords to constrain the amount of data that will be output for a single command. In particular,

1. If all parameters are requested, the input command is restricted to specifying a single NPC and a single monitored date and/or historical accumulation interval (monitored time).
2. If all daily accumulation registers are requested, the input command is restricted to specifying a single NPC and a single parameter.
3. If all 15-minute accumulation registers are requested, the input command is restricted to specifying a single NPC and a single parameter.

Command

Nonhierarchical

[I.56091]

```
UTL:FRM xy,SEQ ww:QRY,{NPC [s]abc[-[t]def]|ALL},<parameter>,AI aaaaa \
[,LV llllllllll][,LOCN locn][,MONDAT dddd][,MONTIM tttt]!
```

Hierarchical

[I.56091]

```
UTL:FRM xy,SEQ ww:QRY,{NPC uvmnp[-wxkqr]|ALL},<parameter>,AI aaaaa \
[,LV llllllllll][,LOCN locn][,MONDAT dddd][,MONTIM tttt]!
```

Completion Message

Nonhierarchical

Output message when the ALL keyword is used for NPCs, retrieving the current counter values of a single specified parameter from all DA, TA, and/or TH type NPCs:

Note: The following segment applies to a Facility Terminating Module.

[O.56091]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL NPCS [s]abc-[t]def <parameter> 8 LN MSG:
AI aaaaa[ LOCN locn]
XXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX
XXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX
XXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX
XXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX
XXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX
XXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX
XXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX EOM
```

Note: The following segment applies to a DS3 or Hybrid DS3 Module.

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL NPCS [s]abc-[t]def <parameter> 6 LN MSG:
AI aaaaa[ LOCN locn]
XXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX
XXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX
XXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX
XXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX
XXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX XXXXXXXXXXX EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALL <parameter> AI aaaaa[ LOCN locn] COMPL
```


Output message when the ALL keyword is not used for NPCs.

For DA and TA type NPCs:

[O.56092]

```
M hh:mm:ss xy,ww n[vv] UTL QRY NPCS <parameter> e LN MSG:
AI aaaaa [LV llllllllll ][LOCN locn ][MONDAT dddd ][MONTIM tttt ]
  NPC   PARAM   COUNT   VLDTY MONDAT MONTIM
[s]abc  pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
[v]ghi  pppp  ccccccccc  v    dddd  tttt EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY NPCS <parameter> e LN MSG:
AI aaaaa [LV llllllllll ][LOCN locn ][MONDAT dddd ][MONTIM tttt ]
  NPC   PARAM   COUNT   VLDTY MONDAT MONTIM
[u]jkl  pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
.       pppp  ccccccccc  v    dddd  tttt
[t]def  pppp  ccccccccc  v    dddd  tttt EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY NPCS [s]abc[-[t]def] <parameter> 2 LN MSG:
AI aaaaa [LV llllllllll ][LOCN locn ][MONDAT dddd ][MONTIM tttt ]COMPL
```

Output message when the ALL keyword is not used for NPCs.

For TH type NPCs:

[O.56092]

M hh:mm:ss xy,ww n[vv] UTL QRY NPCS <parameter> e LN MSG:
AI aaaaa [LV llllllllll][MONDAT dddd][MONTIM tttt]

NPC	PARAM	COUNT	MONDAT	MONTIM	THMODE
[s]abc	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
[v]ghi	pppp	cccccccc	dddd	tttt	hhh EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY NPCS <parameter> e LN MSG:
AI aaaaa [LV llllllllll][MONDAT dddd][MONTIM tttt]

NPC	PARAM	COUNT	MONDAT	MONTIM	THMODE
[u]jkl	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
[t]def	pppp	cccccccc	dddd	tttt	hhh EOM

M hh:mm:ss xy,ww n[vv] UTL QRY NPCS [s]abc[-[t]def] <parameter> 2 LN MSG:
AI aaaaa [LV llllllllll][MONDAT dddd][MONTIM tttt] COMPL

Hierarchical

Output message when the ALL keyword is used for NPCs, retrieving the current counter values of a single specified parameter from all DA, TA, and/or TH type NPCs:

Note: The following segment applies to a Facility Terminating Module.

[O.56091]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL NPCS uvmnp-uvmq <parameter> 8 LN MSG:
AI aaaaa[ LOCN locn]
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx EOM
```

.
.
.

Note: The following segment applies to a DS3 or Hybrid DS3 Module.

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL NPCS uvmnp-uvmq <parameter> 6 LN MSG:
AI aaaaa[ LOCN locn]
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx
xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx xxxxxxxx EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY ALL <parameter> AI aaaaa[ LOCN locn] COMPL
```

Output message when the ALL keyword is not used for NPCs.

For DA and TA type NPCs:

[O.56092]

```
M hh:mm:ss xy,ww n[vv] UTL QRY NPCS <parameter> e LN MSG:
AI aaaaa [LV llllllllll ][LOCN locn ][MONDAT dddd ][MONTIM tttt ]
  NPC   PARAM   COUNT   VLDTY MONDAT MONTIM
  uvmp  pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  edhfg  pppp  ccccccccc  v    dddd  tttt EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY NPCS <parameter> e LN MSG:
AI aaaaa [LV llllllllll ][LOCN locn ][MONDAT dddd ][MONTIM tttt ]
  NPC   PARAM   COUNT   VLDTY MONDAT MONTIM
  opjst pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  .     pppp  ccccccccc  v    dddd  tttt
  wxkqr pppp  ccccccccc  v    dddd  tttt EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY NPCS uvmp[-wxkqr] <parameter> 2 LN MSG:
AI aaaaa [LV llllllllll ][LOCN locn ][MONDAT dddd ][MONTIM tttt ]COMPL
```

Output message when the ALL keyword is not used for NPCs.

For TH type NPCs:

[O.56092]

M hh:mm:ss xy,ww n[vv] UTL QRY NPCS <parameter> e LN MSG:
AI aaaaa [LV llllllllll][MONDAT dddd][MONTIM tttt]

NPC	PARAM	COUNT	MONDAT	MONTIM	THMODE
uvmnp	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
edhfg	pppp	cccccccc	dddd	tttt	hhh EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY NPCS <parameter> e LN MSG:
AI aaaaa [LV llllllllll][MONDAT dddd][MONTIM tttt]

NPC	PARAM	COUNT	MONDAT	MONTIM	THMODE
opjst	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
.	pppp	cccccccc	dddd	tttt	hhh
wxkqr	pppp	cccccccc	dddd	tttt	hhh EOM

M hh:mm:ss xy,ww n[vv] UTL QRY NPCS uvmnp[-wxkqr] <parameter> 2 LN MSG:
AI aaaaa [LV llllllllll][MONDAT dddd][MONTIM tttt] COMPL

Denial Message

Nonhierarchical

[O.56091.01]

M hh:mm:ss xy,ww n[vv] UTL QRY {NPC [s]abc[-[t]def]|ALL} <parameter> 2 LN MSG:
AI aaaaa[LV llllllllll][LOCN locn][MONDAT dddd][MONTIM tttt] COND cc DNY

Hierarchical

[O.56091.01]

M hh:mm:ss xy,ww n[vv] UTL QRY {NPC uvmnp[-wxkqr]|ALL} <parameter> 2 LN MSG:
AI aaaaa[LV llllllllll][LOCN locn][MONDAT dddd][MONTIM tttt] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit
NPCS - Network processing circuits

If an NPC range is specified in the input command, the following rules apply:

- Unequipped NPCs within the requested range will be skipped.
- A range across a unit boundary between a FTU and a DS3U(or HDS3U) will be denied.
- A range across a FTU (or IFTU) boundary is allowed, but if the range starts with a DA type NPC then the PA type NPCs will be skipped. Similiarly, a range that starts with a PA type NPC will skip DA type NPCs.

[s]abc - The 3- or 4-digit nonhierarchical NPC number
[v]ghi - The 3- or 4-digit nonhierarchical NPC number
[u]jkl - The 3- or 4-digit nonhierarchical NPC number
[t]def - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number
uvmqr - Hierarchical NPC number
edhfg - Hierarchical NPC number
opjst - Hierarchical NPC number
wxkqr - Hierarchical NPC number

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

e - Number of lines in the message

ALL - All

PARAM - Parameter

parameter

- Parameter name

pppp - Parameter value

For DA and TA type NPCs:

The parameter whose value is requested and/or reported. The parameter ALLPAR is an input parameter only. If ALLPAR is specified, the following restrictions apply to the input command:

- 1) The command must specify only a single NPC; ranges are not allowed.
- 2) The MONTIM input parameter may not have a value of ALL.
- 3) The MONDAT input parameter may not have a value of ALL.
- 4) The optional LV input parameter must not be present in the command; it defaults to a value of 1-Up and parameter counts of zero are not shown.
- 5) The parameters CVL, ESL, and SESL do not apply to TA type NPCs.

parameter	<i>Explanation</i>
CVP	Path Coding Violations
CVL	Line Coding Violations
ESP	Path Errored Seconds
ESL	Line Errored Seconds
SESP	Path Severely Errored Seconds
SESL	Line Severely Errored Seconds
SEFS	Path Severely Errored Framing Seconds
CSSP	Path Controlled Slip Seconds
UASP	Path Unavailable Seconds
ALLPAR	All parameters listed above

For TH type NPCs:

The parameter whose value is requested and/or reported. The parameters ALLPM, ALLE and ALLF are input parameters only. If ALLPM, ALLE, or ALLF is specified on input then the following restrictions apply to the input command:

- 1) The command must specify only a single NPC; ranges, including the ALL option, are not allowed.
- 2) The MONTIM input parameter may not have a value of ALL.
- 3) The MONDAT input parameter may not have a value of ALL.
- 4) The optional LV input parameter must not be present in the command; it defaults to a value of 1-Up and parameter counts of zero are not shown.

parameter	<i>Explanation</i>
CRC	CRC Block Errors
FRER	Framing Errors
OFS	Out of Frame Seconds
ES	Errored Seconds
SES	Severely Errored Seconds
CSS	Controlled Slip Seconds
UAS	Unavailable Seconds
UATC	Unavailable Time Count
MER	Multiframe Errors
ALLPM	All parameters listed above
ALLE	All Near-end parameters listed above
ALLF	All Far-end parameters (marked by *) listed above

LV - Level

llllllllll

- The discriminating level for the requested parameter

If llllllllll is not specified in the input command, it defaults to a value of 1-Up.

If "ALL" is specified in the input command a default value of 0-Up is applied. This provides the current counts (zero included, unfiltered) of the specified parameter for all NPCs on the frame.

Keywords LV and ALL are mutually exclusive.

llllllllll

Explanation

{000000000-134217728}U

Discriminating Level-Up Direction

{000000000-134217728}D

Discriminating Level-Down Direction

Up - Parameters with values equal to or greater than the specified "discriminating level" are reported.

Down - Parameters with values equal to or less than the specified "discriminating level" are reported.

LOCN - Location

locn - The location being performance monitored

If this optional parameter is not present in the input command, it defaults to a value of NEND.

locn *Explanation*

NEND Near-end

FEND Far-end

AI - Accumulation interval

aaaaa - The accumulation time period for the specified parameter

aaaaa *Explanation*

15MIN Parameter count from a 15-minute accumulator

DAILY Parameter count from a daily accumulator

COUNT - Count

cccccccc

- The accumulated value of a monitored parameter (nine digits)

This parameter is meaningless if the VLDTY parameter indicates that data is not available for the interval.

All leading 0's will be output.

CCCCCCCC	<i>Explanation</i>
{000000000-134217728}	Range of parameter counts

VLDTY - Validity

v - Validity indicator

This parameter indicates whether the information for the specified accumulation interval was accumulated over the entire interval or some portion of it.

v	<i>Explanation</i>
A	Adjusted, data was manually initialized
C	Complete, data was accumulated over the entire interval
L	Long, data was accumulated longer than the interval period
P	Partial, data was accumulated over only part of the interval

MONDAT - Monitored Date

dddd - Begin date of performance monitoring period

As an input parameter, this specifies the date of the beginning of the performance monitoring period (specified in the AI parameter) as MMDD, where MM is the month (01-12) and DD is the day (01-31) of the month. If this optional input parameter is not present in the command, it defaults to a value of CURD.

The value ALL is an option only for input commands. If the value ALL is selected, all of the daily accumulation registers are retrieved. If the value ALL is selected, only a single NPC can be specified in the input command. The input command must also select the value of DAILY for the AI parameter, and must not contain the MONTIM parameter.

The following restriction applies to the use of MONDAT in input commands:

This parameter must not appear in input commands
which select AI = 15MIN and MONTIM = ALL.

As an output parameter, this specifies the date of the beginning of the performance monitoring period as MMDD, where MM is the month (01-12) and DD is the day (01-31) of the month.

dddd	<i>Explanation</i>
{01-12}{01-31}	Month of Year/Day of Month Format
ALL	All daily accumulators (historical and current)
CURD	Current Date

MONTIM - Monitored Time

tttt - Begin time of the performance monitoring period

This parameter specifies the beginning time of day of the requested performance monitoring period (specified in the AI parameter) as HHMM, where HH is the hour (00-23) and MM is the minute {00,15,30,45} of the hour. If this optional input parameter is not present in the command, it defaults to a value of CURT.

The value ALL is an option only for input commands. Selecting the value ALL retrieves all 97 (historical and current) 15-minute accumulation registers of the selected NPC for DA or TA type NPCs. Selecting the value ALL retrieves all 17 (current and historical) 15-minute accumulation registers of the selected NPC for TH type NPCs. If the value ALL is selected, only a single NPC can be specified in the input command. The input command must also select the value of 15MIN for the AI parameter. In addition, an input command which specifies parameter = ALLPAR can not also select MONTIM = ALL.

The following restriction applies to the use of MONTIM in input commands:

This parameter must not appear in input commands
which specify daily accumulation intervals (AI = DAILY).

tttt	<i>Explanation</i>
{00-23}{00,15,30,45}	Hour of Day/Minute of Hour
ALL	All 15-minute accumulators
CURT	Current Time

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

04	Subject entity is out of service
11	UC is out of service
12	UC is in service but failed
14	FTMI is out of service
15	NPC is unequipped
1F	FTMI is in service but failed
26	NPC type error
0B	Invalid CEPT NPC
0C	The MONDAT and MONTIM parameters can not both be specified
A0	The selected MXR associated with the NPC is Out-Of-Service
A1	The selected MXR associated with the NPC is In-Service but failed
B7	The associated MXR is In-Service but pested
A1	The parameter specified does not match with the NPC type
0E	Only one parameter is allowed
1B	Historical data can not be specified
1D	Level field is not allowed
1E	Monitored Date field is not allowed
20	Only DAILY for accumulation interval is allowed
21	Only 15MIN for accumulation interval is allowed
22	FTMI is PESTED
23	No PM data available
24	Monitored Time field is not allowed
89	Interval is not valid/not available
9E	MONDAT set to ALL is not allowed
9F	MONTIM set to ALL is not allowed

UTL,QRY,NPC,MAP,USER

UTILITY QUERY NPC MAP

Explanation Of Command

This message lists all network processing circuits (NPCs) added to the alternate map except for the two-point, two-way cross-connect circuits (TCONs).

A user can query their own maps or macros but only the frame administrator can query maps or macros owned by another user.

Command

[I.54111]

UTL:FRM xy,SEQ ww:QRY,NPC,MAP <name>[,USER <user id>]!

Completion Message

Nonhierarchical

[O.54111]

```
M hh:mm:ss xy,ww n[vv] UTL QRY NPC MAP <name>\
[ USER <user id>] e LN MSG:
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
.
.
.
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY NPC MAP <name>\
[ USER <user id>] e LN MSG:
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx
.
.
.
[x]xxx [x]xxx [x]xxx [x]xxx [x]xxx [x]xxx EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY NPC MAP <name>\
[ USER <user id>] COMPL
```

[O.54112]

```
M hh:mm:ss xy,ww n[vv] UTL QRY NPC MAP <name>\
[ USER <user id>] NONE COMPL
```

Hierarchical

[O.54111]

M hh:mm:ss xy,ww n[vv] UTL QRY NPC MAP <name>\
[USER <user id>] e LN MSG:
uvmnp uvmnp uvmnp uvmnp uvmnp uvmnp

.
.
.

uvmnp uvmnp uvmnp uvmnp uvmnp uvmnp EOM

M hh:mm:ss xy,ww n[vv] UTL QRY NPC MAP <name>\
[USER <user id>] e LN MSG:
uvmnp uvmnp uvmnp uvmnp uvmnp uvmnp

.
.
.

uvmnp uvmnp uvmnp uvmnp uvmnp uvmnp EOM

M hh:mm:ss xy,ww n[vv] UTL QRY NPC MAP <name>\
[USER <user id>] COMPL

[O.54112]

M hh:mm:ss xy,ww n[vv] UTL QRY NPC MAP <name>\
[USER <user id>] NONE COMPL

Denial Message

[O.54111.01]

M hh:mm:ss xy,ww n[vv] UTL QRY NPC MAP <name>\
[USER <user id>] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

MAP - Alternate Map

name - The alternate map name which is a string of uppercase alphanumeric characters from one to seven characters long. The first character must be an alphabetic character.

USER - User

user id

- User login identification is two to eight alphabetic characters.

A user can query his or her own maps but only the frame administrator can use the command to query maps owned by other users. To do so, the optional USER field must be entered.

[x]xxx - The 3- or 4-digit nonhierarchical NPC Number

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC Number

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

cc - Hexadecimal condition code

cc *Explanation*

- 62** File is being accessed
- 64** File doesn't exist/can't be accessed
- D0** Command is Frame administrator (DAX) only.
- D3** User does not exist
- D5** No user is logged in on the link/vc

UTL, QRY, NPC, RT, DL

QUERY NETWORK PROCESSING CIRCUIT PARAMETER

Explanation Of Command

This message requests a printout of the values for a specified facility performance parameter for a single network processing circuit (NPC), a range of circuits, or a SLC® carrier remote terminal or Digital Carrier Line Unit.

These values may be cleared at any time by using the UTL, CLR, ALL command. This message requests a printout of the values for a specified facility performance parameter for a single network processing circuit (NPC) or a range of circuits.

These values may be cleared at any time by using the INIT, REG, ALL command. This message also reports on the CEPT BER status of NPCs. The responses generated by this command are determined by the number of NPCs addressed in the command.

- If a single NPC is addressed in the input command then one message, either a completion or denial, will be generated for the addressed NPC. DACS II will always deny invalid commands to specifically addressed NPCs.
- If a range of NPCs is addressed in the input command, no denial response will be generated.

Command

Nonhierarchical

[I.56041]

UTL:FRM xy,SEQ ww:QRY,<parameter>,{NPC [s]abc[-[t]def]}|
RT ffff|DL ffff}!

Hierarchical

[I.56041]

UTL:FRM xy,SEQ ww:QRY,<parameter>,{NPC uvmnp[-wxkqr]|\
RT ffff|DL ffff}!

Completion Message

Nonhierarchical

[O.56041]

M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> \
NPCS [s]jjj[-[t]kkk][RESET] TOT nnnn 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> \
NPCS [s]ooo[-[t]ppp][RESET] TOT nnnn 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM

M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> NPC [s]abc-[t]def COMPL

Note: The above message applies to domestic Facility Terminating Module (FTM) and parameters other than ER and BER.

[O.56041]

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> \
NPCS [s]jjj[-[t]kkk][ RESET] TOT nnnn 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> \
NPCS [s]ooo[-[t]ppp][ RESET] TOT nnnn 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> NPC [s]abc-[t]def COMPL
```

Note: The above message applies to DS3/HDS3 modules (i.e., a MXR/HMXR) and parameter other than ER and BER.

[O.56041]

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> {RT|DL} ffff MD g[g][ RESET] 3 LN MSG:
[DGA [s]aaa] [DGB [s]bbb] [DGC [s]ccc] [DGD [s]ddd] [DGP [s]ppp]
[xxxxx] [xxxxx] [xxxxx] [xxxxx] [xxxxx] COMPL
```

Note: The above message applies to SLC® Carrier Remote Terminal (RT) or Digital Carrier Line Interface (DCLU) and parameter other than ER and BER.

[O.56042]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPCS [s]jjj[-[t]kkk]\
[ RESET] TOT nnnn 5 LN MSG:
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPCS [s]ooo[-[t]ppp]\
[ RESET] TOT nnnn 5 LN MSG:
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX
XX XX XX XX XX XX XX XX XX XX EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPCS [s]abc[-[t]def]\
COMPL
```

Note: The above message applies to domestic Facility Terminating Module (FTM) and either parameter ER or BER.

[O.56042]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPCS [s]jjj[-[t]kkk]\
[ RESET] TOT nnnn 5 LN MSG:
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPCS [s]ooo[-[t]ppp]\
[ RESET] TOT nnnn 5 LN MSG:
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPCS [s]abc[-[t]kkk]\
COMPL
```

Note: The above message applies to DS3/HDS3 modules (i.e., a MXR/HMXR) and either parameter ER or BER.

[O.56042]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} {RT|DL} ffff MD g[g][ RESET] 3 LN MSG:
[DGA [s]aaa] [DGB [s]bbb] [DGC [s]ccc] [DGD [s]ddd] [DGP [s]ppp]
[xx] [xx] [xx] [xx] [xx] COMPL
```

Note: The above message applies to SLC® Carrier Remote Terminal (RT) or Digital Carrier Line Interface (DCLU) and either parameter ER or BER.

[O.56043]

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> \
NPCS [s]jjj[-[t]kkk][ RESET] TOT 0000 COMPL
```

[O.56044]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPCS [s]jjj[-[t]kkk]\
[ RESET] TOT 0000 COMPL
```

Hierarchical

[O.56041]

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> NPCS uvmkl[-uvmqp]\
[ RESET] TOT nnnn 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx \
EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> NPCS wxkfg[-wxkst]\
[ RESET] TOT nnnn 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx \
EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> NPC uvmnp-wxkqr \
COMPL
```

Note: The above message applies to domestic Facility Terminating Module (FTM) and parameter other than ER and BER.

[O.56041]

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> NPCS uvmkl[-uvmqp]\
[ RESET] TOT nnnn 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> NPCS wxkfg[-wxkst]\
[ RESET]
TOT nnnn 5 LN MSG:
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx
xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx xxxxx EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> NPC uvmnp-wxkqr \
COMPL
```

Note: The above message applies to DS3/HDS3 modules (i.e., a MXR/HMXR) and parameter other than ER and BER.

[O.56041]

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> {RT|DL} ffff MD g[g] [ RESET] 3 LN MSG:
[DGA uvmaa]      [DGB uvmbb]      [DGC uvmcc]      [DGD uv added]      [DGP uv added]
[xxxxx]          [xxxxx]          [xxxxx]          [xxxxx]          [xxxxx] COMPL
```

Note: The above message applies to SLC Carrier Remote Terminal (RT) or Digital Carrier Line Interface (DCLU) and parameter other than ER or BER.

[O.56042]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPCS uv added [-uv added] \
[ RESET] TOT nnnn 5 LN MSG:
xx xx xx xx xx  xx xx xx xx xx
xx xx xx xx xx  xx xx xx xx xx
xx xx xx xx xx  xx xx xx xx xx
xx xx xx xx xx  xx xx xx xx xx  EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPCS wxkfg [-wxkst] \
[ RESET] TOT nnnn 5 LN MSG:
xx xx xx xx xx  xx xx xx xx xx
xx xx xx xx xx  xx xx xx xx xx
xx xx xx xx xx  xx xx xx xx xx
xx xx xx xx xx  xx xx xx xx xx  EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPC uv added-wxkqr \
COMPL
```

Note: The above message applies to domestic Facility Terminating Module (FTM) and either parameter ER or BER.

[O.56042]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPCS uvmkl[-unmpq]\
[ RESET] TOT nnnn 5 LN MSG:
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPCS wxkfg[-wxkst]\
[ RESET] TOT nnnn 5 LN MSG:
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX
XX XX XX XX XX XX XX EOM
```

M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPC uvmnp-wxkqr COMPL

Note: The above message applies to DS3/HDS3 modules (i.e., a MXR/HMXR) and either parameter ER or BER.

[O.56042]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} {RT|DL} ffff MD g[g] [ RESET] 3 LN MSG:
[DGA uvmaa] [DGB uvmbb] [DGC uvmcc] [DGD uvmd] [DGP uvmpp]
[xx] [xx] [xx] [xx] [xx] COMPL
```

Note: The above message applies to SLC Carrier Remote Terminal (RT) or Digital Carrier Line Interface (DCLU) and either parameter ER or BER.

[O.56043]

```
M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> NPCS uvmkl[-uvmpp]\
[ RESET] TOT 0000 COMPL
```

[O.56044]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {ER|BER} NPCS uvmkl[-uvmpp]\
[ RESET] TOT 0000 COMPL
```

Denial Message

Nonhierarchical

[O.56041.01]

M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> \
{NPC [s]abc[-[t]def]|RT ffff|DL ffff} COND cc DNY

Hierarchical

[O.56041.01]

M hh:mm:ss xy,ww n[vv] UTL QRY <parameter> \
{NPC uvmp[-wxqr]|RT ffff|DL ffff} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

- [s]abc** - The 3- or 4-digit nonhierarchical NPC number, the first number of a range
- [t]def** - The 3- or 4-digit nonhierarchical NPC number, the last number of a range

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-003 005-007 009-011	NPC 161-163 165-167 169-171	NPC 321-323 325-327 329-331	NPC 481-483 485-487 489-491	NPC 641-643 645-647 649-651	NPC 801-803 805-807 809-811
	.				
	.				
	.				
157-159 16A-16C 16E-16G	317-319 32A-32C 32E-32G	477-479 48A-48C 48E-48G	637-639 64A-64C 64E-64G	797-799 80A-80C 80E-80G	957-959 96A-96C 96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number the first NPC number of a range

wxkqr - Hierarchical NPC number denoting end of an NPC range

uv,wx - Unit number

m,k - Module number

np,qr - NPC number within the module

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

parameter

- Facility performance parameter

For domestic frames, the parameter and its period of measurement are chosen from the list below:

<i>Parameter</i>	<i>Explanation</i>	<i>Period of measurement</i>
BER	Bit Error Rate	Total since "local midnight"
BPV	Bipolar Violation	Total since "local midnight"
COFA	Change Of Frame Alignment	Total since "local midnight"
CRC	Cyclic Redundancy Code	Total since "local midnight"
ER	Error Rate	Previous 24-hour total (same as BER for D4 framing)
ERS	Errored Seconds	Previous 24-hour total
FRER	Framing Error	Total since "local midnight"
OOF	Out Of Frame	Total since "local midnight"
SERS	Severe Errored Seconds	Previous 24-hour total
SLIP Slip count	Previous 24-hour total	
SAFE	Shelf Alarm Far End count	Total since "local midnight"
SANE	Shelf Alarm Near End count	Total since "local midnight"

Note: If the frame contains NPCs that are provisioned with D4 framing only the ER parameter should be used, the BER parameter should not be used.

A message segment will be omitted for:

- Unequipped FTMs
- Equipped FTMs having no NPCs
- Equipped FTMs with NPCs having zero parameter values.
- DS3/HDS3 modules in case of BPV request
- Equipped CEPT FTM with all NPCs being PA type but with a parameter other than BER.

xxxxxx - Parameter count values

Note that dashes ("-") will be output for NPCs that are not equipped or are provisioned with a type inapplicable to the parameter. If an entire FTM is unequipped or all its NPCs are dashes, the segment is skipped.

xx - BER states

For xx representing North American BER states:

<i>xx</i>	<i>Explanation</i>
--	Unequipped NPC
CL	Clear (a facility type NPC without errors)
ER	Error state
MJ	Major state
MN	Minor state

RBER Explanation

1	Inactive
0	Active

[s]jjj - The Lowest 3- or 4-digit nonhierarchical NPC number in the FTM/MXR/HMXR that contains NPC [s]abc

[t]kkk - The Highest 3- or 4-digit nonhierarchical NPC number in the FTM/MXR/HMXR that contains NPC [s]abc

[s]ooo - The Lowest 3- or 4-digit nonhierarchical NPC number in the FTM/MXR/HMXR that contains NPC [t]def

[t]ppp - The Highest 3- or 4-digit nonhierarchical NPC number in the FTM/MXR/HMXR that contains NPC [t]def

- uvmkl** - Lowest hierarchical NPC number in the FTM/MXR/HMXR that contains NPC uvmnp
- uvmqp** - Highest hierarchical NPC number in the FTM/MXR/HMXR that contains NPC uvmnp
- wxkfg** - Lowest hierarchical NPC number in the FTM/MXR/HMXR that contains NPC wxkqr
- wxkst** - Highest hierarchical NPC number in the FTM/MXR/HMXR that contains NPC wxkqr

RESET - Reset. Indicates that one of more autonomous resets have occurred

The parameter value for the first NPC is in the first position (upper left corner); first line of the message. The parameter value for the last NPC is located in the lower right corner.

nnnn - Cumulative count of NPCs returning nonzero states or values. The last nnnn, the one printed out in the message concluding with COMPL gives the total number of NPCs with nonzero states or values over the specified range.

If NPCs are in a single FTM, then only one 5-line message is printed.

DGA - Digroup A
DGB - Digroup B
DGC - Digroup C
DGD - Digroup D
DGP - Digroup P, the protection digroup

[s]aaa - The 3- or 4-digit nonhierarchical digroup A NPC number

[s]bbb

- The 3- or 4-digit nonhierarchical digroup B NPC number

[s]ccc - The 3- or 4-digit nonhierarchical digroup C NPC number

[s]ddd - The 3- or 4-digit nonhierarchical digroup D NPC number

[s]ppp - The 3- or 4-digit nonhierarchical digroup P NPC number

ffff - SLC carrier bank identification number (0000 through 9999)

g[g] - Mode of Operation

[g]g Explanation

1 SLC 96 carrier Mode 1

3 SLC 96 carrier Mode 3

C SLC Series 5 carrier (Feature Package C)

cc - Hexadecimal condition code

cc *Explanation*

04 Subject entity is out of service

10 Unit is not equipped

11 UC is out of service

12 UC is in service but failed

13 FTMI is not equipped

14 FTMI is out of service

15 NPC is unequipped

1F FTMI is in service but failed

24 Unit type error

0B Invalid CEPT NPC

46 NPC Failed or Out of Service

7E Bank id number not found

A0 No SAFE alarm for DGP

0E The specified parameter is not applicable to operation mode of the RT

A1 The parameter specified does not match with the NPC type

UTL, QRY, NPCTG

UTILITY QUERY TEST-ACCESS GROUP NPC

Explanation Of Command

This command is used to request information regarding one or more network processing circuits used for test-access groups (NPCTGs). the following information will be provided for each designated NPCTG:

1. All test-access groups (TGs)
2. TG width
3. The bundle being supported (east or west)
4. the channel assignment on the NPCTG

The TGs are listed in the order of bandwidth assignment.

Command

[I.53091]

UTL:FRM xy,SEQ ww:QRY,NPCTG rrr[-sss]!

Completion Message

Nonhierarchical

[O.53091]

M hh:mm:ss xy,ww n[vv] UTL QRY NPCTG rrr NPC [s]abc p LN MSG:

TG mmm NN {E|W} aa-bb[TG mmm NN {E|W} aa-bb][TG mmm NN {E|W} aa-bb]
[TG mmm NN {E|W} aa-bb[TG mmm NN {E|W} aa-bb][TG mmm NN {E|W} aa-bb]]
[TG mmm NN {E|W} aa-bb[TG mmm NN {E|W} aa-bb][TG mmm NN {E|W} aa-bb]]
..... {EOM|COMPL}

M hh:mm:ss xy,ww n[vv] UTL QRY NPCTG rrr[-sss] UEQD {EOM|COMPL}

M hh:mm:ss xy,ww n[vv] UTL QRY NPCTG rrr NPC [s]abc UASGN {EOM|COMPL}

M hh:mm:ss xy,ww n[vv] UTL QRY NPCTG sss NPC [t]def p LN MSG:

TG mmm NN {E|W} aa-bb[TG mmm NN {E|W} aa-bb][TG mmm NN {E|W} aa-bb]
[TG mmm NN {E|W} aa-bb[TG mmm NN {E|W} aa-bb][TG mmm NN {E|W} aa-bb]]
[TG mmm NN {E|W} aa-bb[TG mmm NN {E|W} aa-bb][TG mmm NN {E|W} aa-bb]]
..... {EOM|COMPL}

Hierarchical

[O.53091]

```
M hh:mm:ss xy,ww n[vv] UTL QRY NPCTG rrr NPC uvmnp p LN MSG:
TG mmm NN {E|W} aa-bb[ TG mmm NN {E|W} aa-bb][ TG mmm NN {E|W} aa-bb]
[TG mmm NN {E|W} aa-bb[ TG mmm NN {E|W} aa-bb][ TG mmm NN {E|W} aa-bb]]
[TG mmm NN {E|W} aa-bb[ TG mmm NN {E|W} aa-bb][ TG mmm NN {E|W} aa-bb]]
..... {EOM|COMPL}
.
.
M hh:mm:ss xy,ww n[vv] UTL QRY NPCTG rrr[-sss] UEQD {EOM|COMPL}
.
.
M hh:mm:ss xy,ww n[vv] UTL QRY NPCTG rrr NPC uvmnp UASGN {EOM|COMPL}
.
.
M hh:mm:ss xy,ww n[vv] UTL QRY NPCTG sss NPC wxkqr p LN MSG:
TG mmm NN {E|W} aa-bb[ TG mmm NN {E|W} aa-bb][ TG mmm NN {E|W} aa-bb]
[TG mmm NN {E|W} aa-bb[ TG mmm NN {E|W} aa-bb][ TG mmm NN {E|W} aa-bb]]
[TG mmm NN {E|W} aa-bb[ TG mmm NN {E|W} aa-bb][ TG mmm NN {E|W} aa-bb]]
..... {EOM|COMPL}
```

Denial Message

[O.53091.01]

M hh:mm:ss xy,ww n[vv] UTL QRY NPCTG rrr[-sss] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TG - Test (access) group

mmm - TG number (001 through 400)

NPCTG - NPC (for) test group

rrr - TG number (001 through 400)

sss - TG number (001 through 400, must be greater than rrr)
Variable sss is used to specify the end of an NPCTG range

[s]abc - 3- or 4-digit non-hierarchical NPC number designated as NPCTG rrr

[t]def - 3- or 4-digit non-hierarchical NPC number designated as NPCTG sss

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number designated as NPCTG rrr

wxkqr - Hierarchical NPC number designated as NPCTG sss

uv, wx - Unit number

m, k - Module number

np, qr - NPC number within the module

The valid values are listed below:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

E - East

East bundle of the TG

W - West

West bundle of the TG

UEQD - Unequipped

UASGN - Unassigned

No TG assigned to this NPCTG

NN - TG width (01 through 24)

aa - Starting channel for the bundle (01 through 24)

bb - Ending channel for the bundle (02 through 24);
for NN = 1, bb is '--'

cc - Hexadecimal condition code

cc *Explanation*

62 None of the designated NPCTG(s) are equipped

UTL, QRY, OPT, TYPE, ALL, NPCS

UTILITY QUERY OPTIONS NPCS

Explanation Of Command

This message requests a printout of the parameter threshold values for NPC types stored in the DACS II threshold data base.

If an NPC type is specified, the output message shows the threshold values for all parameters associated with the designated NPC type. If the ALL keyword is entered, the output message shows the threshold values for the parameters and all NPC types.

Command

[I.53051]

UTL:FRM xy,SEQ ww:QRY,OPT[, {TYPE mn|ALL}],NPCS!

Completion Message

Usage: DE or TE type

[O.53051]

M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE mn NPCS 5 LN MSG:
OPT 01 00255 bbbbbb ccccc ddddd MJ SLIP
OPT 02 00004 bbbbbb ccccc ddddd MN SLIP
OPT 03 00003 bbbbbb ccccc ddddd MJ BER
OPT 04 00006 bbbbbb ccccc ddddd MN BER EOM

M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE DE TRSP NPCS 2 LN MSG:
OPT 03 00004 bbbbbb ccccc ddddd MJ BER EOM

M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE mn NPCS 5 LN MSG:
OPT 05 00864 bbbbbb ccccc ddddd ERS
OPT 06 00225 bbbbbb ccccc ddddd SERS
OPT 07 00511 bbbbbb ccccc ddddd MJ COFA
OPT 08 00017 bbbbbb ccccc ddddd MN COFA {COMPL|EOM}

Usage: DS type

[O.53051]

M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE DS NPCS 5 LN MSG:
OPT 01 00255 bbbbbb ccccc ddddd MJ SLIP
OPT 02 00004 bbbbbb ccccc ddddd MN SLIP
OPT 03 00004 bbbbbb ccccc ddddd MJ BER
OPT 04 00006 bbbbbb ccccc ddddd MN BER EOM

M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE DS NPCS 5 LN MSG:
OPT 05 00864 bbbbbb ccccc ddddd ERS
OPT 06 00225 bbbbbb ccccc ddddd SERS
OPT 07 00511 bbbbbb ccccc ddddd MJ COFA
OPT 08 00017 bbbbbb ccccc ddddd MN COFA EOM

M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE DS NPCS 3 LN MSG:
OPT 09 00000 bbbbbb ccccc ddddd SANE
OPT 10 00000 bbbbbb ccccc ddddd SAFE {EOM|COMPL}

Usage: DA or TA type

[O.53051]

M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE mn NPCS 9 LN MSG:
OPT 41 000132960/000000691 bbbbbbbbbb ccccccccc dddddddddd CVP, DN
OPT 42 00648 bbbbb ccccc ddddd ESP, DN
OPT 43 00100 bbbbb ccccc ddddd SESP, DN
OPT 44 00017 bbbbb ccccc ddddd SEFS, DN
OPT 45 00004 bbbbb ccccc ddddd CSSP, DN
OPT 46 00010 bbbbb ccccc ddddd UASP, DN
OPT 47 000133400 bbbbbbbbbb ccccccccc dddddddddd CVL, DN
OPT 48 00648 bbbbb ccccc ddddd ESL, DN EOM

M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE mn NPCS 9 LN MSG:
OPT 49 00100 bbbbb ccccc ddddd SESL, DN
OPT 50 000132960/000000691 bbbbbbbbbb ccccccccc dddddddddd CVP, DF
OPT 51 00648 bbbbb ccccc ddddd ESP, DF
OPT 52 00100 bbbbb ccccc ddddd SESP, DF
OPT 53 00017 bbbbb ccccc ddddd SEFS, DF
OPT 54 00004 bbbbb ccccc ddddd CSSP, DF
OPT 55 00010 bbbbb ccccc ddddd UASP, DF
OPT 56 00648 bbbbb ccccc ddddd ESL, DF EOM

M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE mn NPCS 9 LN MSG:
OPT 57 0013296/0000072 bbbbbbbb ccccccc dddddddd CVP, QN
OPT 58 00065 bbbbb ccccc ddddd ESP, QN
OPT 59 00010 bbbbb ccccc ddddd SESP, QN
OPT 60 00002 bbbbb ccccc ddddd SEFS, QN
OPT 61 00001 bbbbb ccccc ddddd CSSP, QN
OPT 62 00010 bbbbb ccccc ddddd UASP, QN
OPT 63 0013340 bbbbbbbb ccccccc dddddddd CVL, QN
OPT 64 00065 bbbbb ccccc ddddd ESL, QN EOM

M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE mn NPCS 9 LN MSG:
OPT 65 00010 bbbbb ccccc ddddd SESL, QN
OPT 66 0013296/0000072 bbbbbbbb ccccccc dddddddd CVP, QF
OPT 67 00065 bbbbb ccccc ddddd ESP, QF
OPT 68 00010 bbbbb ccccc ddddd SESP, QF
OPT 69 00002 bbbbb ccccc ddddd SEFS, QF
OPT 70 00001 bbbbb ccccc ddddd CSSP, QF
OPT 71 00010 bbbbb ccccc ddddd UASP, QF
OPT 72 00065 bbbbb ccccc ddddd ESL, QF {COMPL|EOM}

Usage: TH type

[O.53051]

```
M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE mn 8 LN MSG:
OPT 11 000176947 bbbbbbbbbb cccccccc dddddddd CRC, DAILY
OPT 12 000176947 bbbbbbbbbb cccccccc dddddddd FRER, DAILY
OPT 13 000000004 bbbbbbbbbb cccccccc dddddddd OFS, DAILY
OPT 14 000004320 bbbbbbbbbb cccccccc dddddddd ES, DAILY
OPT 15 000000090 bbbbbbbbbb cccccccc dddddddd SES, DAILY
OPT 16 000000004 bbbbbbbbbb cccccccc dddddddd CSS, DAILY
OPT 17 ----- ----- ----- CV, DAILY EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE mn 8 LN MSG:
OPT 18 000000090 bbbbbbbbbb cccccccc dddddddd UAS, DAILY
OPT 19 000000009 bbbbbbbbbb cccccccc dddddddd UATC, DAILY
OPT 20 000004095 bbbbbbbbbb cccccccc dddddddd MER, DAILY
OPT 21 ----- ----- ----- FEBE, DAILY
OPT 22 ----- ----- ----- FES, DAILY
OPT 23 ----- ----- ----- FSES, DAILY
OPT 24 ----- ----- ----- FUAS, DAILY EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE mn 8 LN MSG:
OPT 81 0018432 bbbbbbbb ccccccc ddddddd CRC, 15MIN
OPT 82 0018432 bbbbbbbb ccccccc ddddddd FRER, 15MIN
OPT 83 0000004 bbbbbbbb ccccccc ddddddd OFS, 15MIN
OPT 84 0000300 bbbbbbbb ccccccc ddddddd ES, 15MIN
OPT 85 0000030 bbbbbbbb ccccccc ddddddd SES, 15MIN
OPT 86 0000001 bbbbbbbb ccccccc ddddddd CSS, 15MIN
OPT 87 ----- ----- ----- CV, 15MIN EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY OPT TYPE mn 8 LN MSG:
OPT 88 0000030 bbbbbbbb ccccccc ddddddd UAS, 15MIN
OPT 89 0000003 bbbbbbbb ccccccc ddddddd UATC, 15MIN
OPT 90 0000255 bbbbbbbb ccccccc ddddddd MER, 15MIN
OPT 91 ----- ----- ----- FEBE, 15MIN
OPT 92 ----- ----- ----- FES, 15MIN
OPT 93 ----- ----- ----- FSES, 15MIN
OPT 94 ----- ----- ----- FUAS, 15MIN COMPL
```

Note: Parameters FEBE, FES, FSES and FUAS are not supported for TH type NPCs; but the entries are shown in order to be compatible with the output message for PA type NPCs. For similar reasons the entry for line code violations (CV) is shown, even though line code violations do not apply to TH type NPCs, because line code violations are taken care of at the DS3 level.

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

OPT - Option

In the output messages the first value shown following the keyword OPT is the option number. The value immediately following the option number is the default alarm threshold value. The next three fields show user-programmed values. Any user-programmed values that have not been initialized in the DACS II data base will be shown as "----[----]". Until they are initialized, user-programmable values cannot be used as valid alarm thresholds.

For ANSI NPC types (DA and TA type NPCs), a programmed alarm threshold value of zero for any parameter disables threshold crossing alert messages for that parameter.

For the Major Slip and Minor Slip parameters (OPT 01 and 02, respectively) a programmed threshold value of zero disables the respective threshold crossing alarms.

TYPE - Type

mn - NPC type

<i>mn</i>	<i>Explanation</i>

DA	Facility Terminating Unit (FTU) ANSI NPC type
DE	Facility Terminating Unit (FTU) NPC type
DS	SLC® carrier NPC type
TA	DS3 Unit ANSI DS1 NPC type
TE	DS3 Unit or Hybrid DS3 Unit NPC type
TH	Hybrid DS3 Unit CEPT NPC type

ALL - Indicates all NPC types associated with the features being turned on in the frame

If neither an NPC type nor the ALL keyword are specified, the default NPC type is DE.

If the frame is a Gateway frame the default NPC type is DE.

NPCS - Network processing circuits

SLIP - Slip

BER - Bit Error Rate

ERS - Errored Seconds

SERS - Severely Errored Seconds

COFA - Change of Frame Alignment

SAFE - Shelf Alarm Far End

SANE - Shelf Alarm Near End

MJ - Major

MN - Minor

DE - Facility Terminating Unit (FTU) NPC type

Threshold parameters for ANSI NPC types

CVP - Coding Violations, Path

CVL - Coding Violations, Line

ESP - Errored Seconds, Path

ESL - Errored Seconds, Line

SESP - Severely Errored Seconds, Path

SESL - Severely Errored Seconds, Line

SEFS - Severely Errored Framing Seconds

CSSP - Controlled Slip Seconds, Path

UASP - Unavailable Seconds, Path

D - Daily

Q - 15 minute

N - Near-end

F - Far-end

Threshold parameters for TH type NPCs

DAILY - Daily
CRC - CRC Block Errors
FRER - Framing Errors
OFS - Out of Frame Seconds
ES - Errored Seconds
SES - Severely Errored Seconds
CSS - Controlled Slip Seconds
UAS - Unavailable Seconds
UATC - Unavailable Time Count
MER - Multiframe Errors

15MIN - Fifteen minute
CRC - CRC Block Errors
FRER - Framing Errors
OFS - Out of Frame Seconds
ES - Errored Seconds
SES - Severely Errored Seconds
CSS - Controlled Slip Seconds
UAS - Unavailable Seconds
UATC - Unavailable Time Count
MER - Multiframe Errors

TRSP - Transparent

This keyword indicates that the message contains the BER alarm threshold options for clear-DS1 NPCs. User-defined options with values other than 4, 5 or 6 are shown as '-----'

User-programmed alarm threshold values

bbbbbb[bbbb]
- First
cccccc[cccc]
- Second
dddddd[dddd]
- Third

UTL, QRY, PEST, FAIL, OOS, COMMON

UTILITY QUERY STATUS COMMON EQUIPMENT

Explanation Of Command

This message is used to request reports on one of the following parameters:

PEST Pest states
FAIL Failed components
OOS Out-of-service components

The output message reports the status of the requested parameter on common equipment of the frame.

Command

[I.53105]

UTL:FRM xy,SEQ ww:QRY,{PEST|FAIL|OOS},COMMON!

Completion Message

[O.53105]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} \
g h i j k l m n o p EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} 3 LN MSG:
SYNC x x CRO x
TLI x x x x x x x x x x x x \
x x x x EOM

For DACS II Non-CEF frames, the next segment describes the CCN hardware:

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} TOTAL \
TSIS tt nn 5 LN MSG:
11 x x 12 x x 13 x x 14 x x 15 x x 16 x x
21 x x 22 x x 23 x x 24 x x 25 x x 26 x x
31 x x 32 x x 33 x x 34 x x 35 x x 36 x x
41 x x 42 x x 43 x x 44 x x 45 x x 46 x x EOP

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} TOTAL \
TSIS tt nn 3 LN MSG:
51 x x 52 x x 53 x x 54 x x 55 x x 56 x x
61 x x 62 x x 63 x x 64 x x 65 x x 66 x x EOM

For DACS II CEF frames, the segment describes the ECCN hardware:

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} TOTAL \
ETSIS tt nn 3 LN MSG:
01 x x 02 x x 03 x x 04 x x 05 x x 06 x x \
07 x x 08 x x
09 x x 10 x x 11 x x 12 x x 13 x x 14 x x \
15 x x 16 x x EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} COMMON COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

PEST - Pested

FAIL - Failed

OOS - Out of service

For the PEST, FAIL and OOS indications, each entity in the DACS II frame is represented by a single character variable. This variable can have the value of 1, 0 or "-" indicating the following status:

<i>Value</i>	<i>OOS</i>	<i>FAIL</i>	<i>PEST</i>
1	out of service	failed	pested
0	in service	not failed	unpested
-	not applicable	not applicable	not applicable

A hyphen (-) indicates the parameter is not applicable to the particular entity. For example, an unequipped circuit displays a "-" for its OOS, FAIL and PEST indicators.

The DACS II entities and their status fields are as follows:

g - Link 1
h - Link 2
i - Link 3
j - Link 4
k - Link 5
l - Link 6
m - XC0 (cross-connect 0)
n - XC1 (cross-connect 1)
o - CCNI/CCI 0 (cross-connect network interface 0 for non-CEF frame)
 (clock and control interface 0 for CEF frame)
p - CCNI/CCI 1 (cross-connect network interface 1 for non-CEF frame)
 (clock and control interface 1 for CEF frame)

SYNC - Synchronizer

CRO - Clock reference oscillator

TLI - Timing link interface

x - TLI status, side 0

x - TLI status, side 1

TLI information is listed in the message from left to right, starting with status information for TLI 1, SSP 0, Side 0 in the first position and ending with status information for TLI 4, SSP1, Side 1 in the last position. The entities for which status is reported are listed below in the order they appear in the output message.

The status is represented by the variable x or x. The value of the variable is interpreted as follows.

x Explanation (PEST, FAIL, or OOS will be indicated in message)

0 Unpested, in-service, or not failed

1 Pested, out-of-service, or failed

Side 0

TLI 1, SSP 0

TLI 1, SSP 1

TLI 2, SSP 0

TLI 2, SSP 1

TLI 3, SSP 0

TLI 3, SSP 1

TLI 4, SSP 0

TLI 4, SSP 1

Side 1

TLI 1, SSP 0

TLI 1, SSP 1

TLI 2, SSP 0

TLI 2, SSP 1

TLI 3, SSP 0

TLI 3, SSP 1

TLI 4, SSP 0

TLI 4, SSP 1

TSI - Time slot interchange

f - FROM unit (1 through 6)

t - TO Unit (1 through 6)

ETSI - Expanded time slot interchanger

- x** - Status indication for the entity or for the side 0 entity if duplicated.
- x** - Status indication for side 1 entity.
- tt** - Total number of equipped TSIs/ETSIs.
- nn** - Total number of equipped TSIs/ETSIs having the requested status.

UTL,QRY,PEST,FAIL,OOS,UNIT

UTILITY QUERY STATUS OF ENTITIES/EQUIPMENT

Explanation Of Command

This message requests reports on any one of the following parameters:

PEST	Pested components
FAIL	Failed components
OOS	Out-of-service components

These reports may be generated for the entire DACS II frame or for a particular unit. The UNIT parameter must be specified in the command to query for a particular unit. The UNIT parameter must be omitted to generate a report for the entire frame.

Command

[I.53103]

UTL:FRM xy,SEQ ww:QRY,{PEST|FAIL|OOS}[,UNIT [q]q]!

Completion Message

Nonhierarchical

If the optional unit number is not entered, the following output segments will be generated:

The output starts out with:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} \
g h i j k l m n o p EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} 3 LN MSG:
SYNC x x CRO x
TLI x x x x x x x x y y y y y y y y EOM

For DACS II nonCEF frames, the next segment describes the CCN hardware:

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} TOTAL \
TSIS tt nn 5 LN MSG:
11 x y 12 x y 13 x y 14 x y 15 x y 16 x y
21 x y 22 x y 23 x y 24 x y 25 x y 26 x y
31 x y 32 x y 33 x y 34 x y 35 x y 36 x y
41 x y 42 x y 43 x y 44 x y 45 x y 46 x y EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} TOTAL \
TSIS tt nn 3 LN MSG:
51 x y 52 x y 53 x y 54 x y 55 x y 56 x y
61 x y 62 x y 63 x y 64 x y 65 x y 66 x y EOM

For DACS II CEF frames, the segment describes the ECCN hardware:

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} TOTAL \
ETSIS tt nn 3 LN MSG:
01 x y 02 x y 03 x y 04 x y 05 x y 06 x y 07 x y 08 x y
09 x y 10 x y 11 x y 12 x y 13 x y 14 x y 15 x y 16 x y EOM

The output then continues with information about the common equipment in the units. The data line will only appear for units that are equipped. If more than four units are equipped, the output for the equipage of the units will be divided into multiple segments.

[O.53103]

```
[M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNITS e LN MSG:]
[<data line for the common equipment in the first equipped unit>]
[<data line for the common equipment in the second equipped unit>]
[<data line for the common equipment in the third equipped unit>]
[<data line for the common equipment in the fourth equipped unit> EOM]
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNITS e LN MSG:]
[<data line for the common equipment in the fifth equipped unit>]
[<data line for the common equipment in the sixth equipped unit>]
[<data line for the common equipment in the seventh equipped unit>]
[<data line for the common equipment in the eighth equipped unit> EOM]
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNITS e LN MSG:]
[<data line for the common equipment in the ninth equipped unit>]
[<data line for the common equipment in the tenth equipped unit>]
[<data line for the common equipment in the eleventh equipped unit>]
[<data line for the common equipment in the twelfth equipped unit> EOM]
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNITS e LN MSG:]
[<data line for the common equipment in the thirteenth equipped unit>]
[<data line for the common equipment in the fourteenth equipped unit>]
[<data line for the common equipment in the fifteenth equipped unit>]
[<data line for the common equipment in the sixteenth equipped unit> EOM]
```

Data line for a unit equipped as DS1 FTU:

```
UNIT [q]q UC a FTMI b c d e FC f g h j k m p q[ CCB r s]
```

Data line for a unit equipped as a DS3U or HDS3U:

```
UNIT [q]q UC a FLI b c FMT l m MXR d e f g h j k MIU n o p q u v w \
[CCB r s]
```

Data line for a unit equipped as a DSPU:

```
UNIT [q]q UC a DSPI b[ CCB r s]
```

Then the output message continues with information about individual NPCs. For each FTM/MXR/HMXR/DSPU, one output message will be printed.

Output message for PEST, FAIL, or OOS status of NPCs on an equipped DS1 FTM:

Please note, if any of the odd NPCs has been provisioned with a Digital Signal Processing Platform (DSPP) application (TG193), then the even NPC following it does not exist and a dash will be shown in its place:

[O.53103]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} FTU \
NPCS [a]aaa-[b]bbb tt 5 LN MSG:
x x x x x x x {PEST|FAIL|OOS} nn
x x x x x x x
x x x x x x x
x x x x x x x EOM
```

Output message for PEST, FAIL, or OOS status of NPCs on an equipped DS3 MXR or HMXR:

Please note, if one or more DS2s in an HMXR have been provisioned with E1 NPCs, then the fourth NPC positions in those DS2s do not exist and will be represented by dashes in the output.

[O.53103]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} DS3U \
NPCS [a]aaa-[b]bbb tt 5 LN MSG:
x x x x x x x {PEST|FAIL|OOS} nn
x x x x x x x
x x x x x x x
x x x x x x x EOM
```

Output message for PEST, FAIL, or OOS status of NPCs on an equipped DSP Unit:

[O.53103]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} DSPU \
NPCS [a]aaa-[b]bbb tt 3 LN MSG:
[z]zzz x y [z]zzz x y [z]zzz x y [z]zzz x y
[z]zzz x y [z]zzz x y [z]zzz x y [z]zzz x y \
{PEST|FAIL|OOS} nn EOM
```

Output message for NPCs on an equipped FTM/MXR/HMXR/DSPU with no NPC in PEST, FAIL, or OOS state:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} \
{FTU|DS3U|DSPU} NPCS [a]aaa-[b]bbb tt 2 LN MSG:
{PEST|FAIL|OOS} 00 EOM

After the above information is output, the following message will be generated to complete the response:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} COMPL

If the unit number is specified, the following output segments will be generated:

For entities in an FTU:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} 2 LN MSG:
UNIT [q]q UC a FTMI b c d e FC f g h j k m p q[CCB r s] EOM

The output then continues with up to four of the following segment depending on the FTM equipage:

Please note, if any of the odd NPCs has been provisioned with a Digital Signal Processing Platform (DSPP) application (TG193), then the even NPC following it does not exist and a dash will be shown in its place:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNIT [q]q FTU \
NPCS [a]aaa-[b]bbb tt 5 LN MSG:
x x x x x x x x x x {PEST|FAIL|OOS} nn
x x x x x x x x x x
x x x x x x x x x x
x x x x x x x x x x EOM

For entities in a DS3U or HDS3U:

[O.53103]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} 2 LN MSG:
UNIT [q]q UC a FLI b c FMT l m MXR d e f g h j k MIU n o p q u v w\
[ CCB r s] EOM
```

The output then continues with up to seven of the following segments depending on the MXR or HMXR equipage:

Please note, if one or more DS2s in an HMXR have been provisioned with E1 NPCs, then the fourth NPC positions in those DS2s do not exist and will be represented by dashes in the output.

[O.53103]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNIT [q]q DS3U \
NPCS [a]aaa-[b]bbb tt 5 LN MSG:
x x x x x x x {PEST|FAIL|OOS} nn
x x x x x x x
x x x x x x x
x x x x x x x EOM
```

For entities in a DSPU:

[O.53103]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNIT [q]q UC a \
DSPU b[ CCB r s] EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNIT [q]q \
DSPU NPCS [a]aaa-[b]bbb tt 3 LN MSG:
[z]zzz x y [z]zzz x y [z]zzz x y [z]zzz x y
[z]zzz x y [z]zzz x y [z]zzz x y [z]zzz x y \
{PEST|FAIL|OOS} EOM
```

Output message for NPCs on an equipped FTM/MXR/HMXR/DSPU with no NPC in PEST, FAIL, or OOS state:

[O.53103]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} {FTU|DS3U|DSPU} \
NPCS [a]aaa-[b]bbb tt 2 LN MSG:
{PEST|FAIL|OOS} 00 EOM
```

After the above information is output, the following message will be generated to complete the response:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNIT [q]q COMPL

Hierarchical

If the unit number is not entered, the following output segments will be generated:

The output starts out with:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} \
g h i j k l m n o p EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} 3 LN MSG:
SYNC x x CRO x
TLI x x x x x x x x y y y y y y y y EOM

For DACS II Non-CEF frames, the next segment describes the CCN hardware:

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} TOTAL \
TSIS tt nn 5 LN MSG:
11 x y 12 x y 13 x y 14 x y 15 x y 16 x y
21 x y 22 x y 23 x y 24 x y 25 x y 26 x y
31 x y 32 x y 33 x y 34 x y 35 x y 36 x y
41 x y 42 x y 43 x y 44 x y 45 x y 46 x y EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} TOTAL \
TSIS tt nn 3 LN MSG:
51 x y 52 x y 53 x y 54 x y 55 x y 56 x y
61 x y 62 x y 63 x y 64 x y 65 x y 66 x y EOM

For DACS II CEF frames, the segment describes the ECCN hardware:

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} TOTAL \
ETSIIS tt nn 3 LN MSG:
01 x y 02 x y 03 x y 04 x y 05 x y 06 x y 07 x y 08 x y
09 x y 10 x y 11 x y 12 x y 13 x y 14 x y 15 x y 16 x y EOM

The output then continues with information about the common equipment in the units. The data line will only appear for units that are equipped. If more than four units are equipped, the output for the equipage of the units will be divided into multiple messages.

[O.53103]

```
[M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNITS e LN MSG:]
[<data line for the common equipment in the first equipped unit>]
[<data line for the common equipment in the second equipped unit>]
[<data line for the common equipment in the third equipped unit>]
[<data line for the common equipment in the fourth equipped unit> EOM]
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNITS e LN MSG:]
[<data line for the common equipment in the fifth equipped unit>]
[<data line for the common equipment in the sixth equipped unit>]
[<data line for the common equipment in the seventh equipped unit>]
[<data line for the common equipment in the eighth equipped unit> EOM]
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNITS e LN MSG:]
[<data line for the common equipment in the ninth equipped unit>]
[<data line for the common equipment in the tenth equipped unit>]
[<data line for the common equipment in the eleventh equipped unit>]
[<data line for the common equipment in the twelfth equipped unit> EOM]
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNITS e LN MSG:]
[<data line for the common equipment in the thirteenth equipped unit>]
[<data line for the common equipment in the fourteenth equipped unit>]
[<data line for the common equipment in the fifteenth equipped unit>]
[<data line for the common equipment in the sixteenth equipped unit> EOM]
```

Data line for a unit equipped as DS1 FTU:

```
UNIT [q]q UC a FTMI b c d e FC f g h j k m p q[ CCB r s]
```

Data line for a unit equipped as a DS3U or HDS3U:

```
UNIT [q]q UC a FLI b c FMT l m MXR d e f g h j k \
MIU n o p q u v w[ CCB r s]
```

Data line for a unit equipped as a DSPU:

```
UNIT [q]q UC a DSPI b[ CCB r s]
```

Then the output message continues with information about individual NPCs. For each FTM/MXR/HMXR/DSPU, one output message will be printed.

For PEST, FAIL, or OOS status of NPCs on an equipped DS1 FTM:

Please note, if any of the odd NPCs has been provisioned with a Digital Signal Processing Platform (DSPP) application (TG193), then the even NPC following it does not exist and a dash will be shown in its place:

[O.53103]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} FTU \
NPCS uvmnp-uxkqr tt 5 LN MSG:
x x x x x x x x x x {PEST|FAIL|OOS} nn
x x x x x x x x x x
x x x x x x x x x x
x x x x x x x x x x EOM
```

For PEST, FAIL, or OOS status of NPCs on an equipped DS3 MXR or HMXR:

Please note, if one or more DS2s in an HMXR have been provisioned with E1 NPCs, then the fourth NPC positions in those DS2s do not exist and will be represented by dashes in the output.

[O.53103]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} DS3U \
NPCS uvmnp-uxkqr tt 5 LN MSG:
x x x x x x x x {PEST|FAIL|OOS} nn
x x x x x x x x
x x x x x x x x
x x x x x x x x EOM
```

For PEST, FAIL, or OOS status of NPCs on an equipped DSP unit:

[O.53103]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} DSPU \
NPCS uvmnp-uxkqr tt 3 LN MSG:
uvmnp x y uvmnp x y uvmnp x y uvmnp x y
uvmnp x y uvmnp x y uvmnp x y uvmnp x y {PEST|FAIL|OOS} nn EOM
```

Output message for an equipped FTM/MXR/HMXR/DSPU with no NPC having the PEST, FAIL, or OOS status:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} {FTU|DS3U|DSPU} \
NPCS uvmnp-uxkqr tt 2 LN MSG:
{PEST|FAIL|OOS} 00 EOM

After the above information is output, the following message will be generated to complete the response:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} COMPL

If the unit number is specified, the following output segments will be generated:

For entities in an FTU:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} 2 LN MSG:
UNIT [q]q UC a FTMI b c d e FC f g h j k m p q[CCB r s] EOM

The output then continues with up to four of the following segment for NPCs in an FTM. If an FTM is not equipped, the segment for this FTM will not be output:

Please note, if any of the odd NPCs has been provisioned with a Digital Signal Processing Platform (DSPP) application (TG193), then the even NPC following it does not exist and a dash will be shown in its place:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNIT [q]q FTU \
NPCS uvmnp-uxkqr tt 5 LN MSG:
x x x x x x x x x x {PEST|FAIL|OOS} nn
x x x x x x x x x x
x x x x x x x x x x
x x x x x x x x x x EOM

For entities in a DS3U or HDS3U:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} 2 LN MSG:
UNIT [q]q UC a FLI b c FMT l m MXR d e f g h j k \
MIU n o p q u v w[CCB r s] EOM

The output then continues with up to seven of the following segment for NPCs in a MXR or HMXR. If an MXR or HMXR is not equipped, the segment for this MXR or HMXR will not be output:

Please note, if one or more DS2s in an HMXR have been provisioned with E1 NPCs, then the fourth NPC positions in those DS2s do not exist and will be represented by dashes in the output.

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNIT [q]q \
DS3U NPCS uvmnp-uxkqr tt 5 LN MSG:
x x x x x x x {PEST|FAIL|OOS} nn
x x x x x x x
x x x x x x x
x x x x x x x EOM

For entities in a DSPU:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNIT [q]q UC a \
DSPU b[CCB r s] EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNIT [q]q \
DSPU NPCS uvmnp-uxkqr tt 3 LN MSG:
uvmnp x y uvmnp x y uvmnp x y uvmnp x y
uvmnp x y uvmnp x y uvmnp x y uvmnp x y \
{PEST|FAIL|OOS} nn EOM

Output message for an equipped FTM/MXR/HMXR/DSPU with no NPC having the PEST, FAIL, or OOS status:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} {FTU|DS3U|DSPU} \
NPCS uvmnp-uxkqr tt 2 LN MSG:
{PEST|FAIL|OOS} 00 EOM

After the above information is output, the following message will be generated to complete the response:

[O.53103]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNIT [q]q COMPL

Denial Message

[O.53103.01]

M hh:mm:ss xy,ww n[vv] UTL QRY {PEST|FAIL|OOS} UNIT [q]q COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

The UNIT option must be specified to query a particular unit. The UNIT option must be omitted to query the entire frame. If the UNIT option is specified, only the information related to the equipment in that unit will be generated.

OOS - Out of service

Out of Service Components

FAIL - Failed

Failed Components

PEST - Pested

Pest States

For the OOS, FAIL and PEST indications, each entity in the DACS II frame is represented by a single character variable. This variable can have the value of 1, 0 or "-" indicating the following status:

<i>Value</i>	<i>OOS</i>	<i>FAIL</i>	<i>PEST</i>
1	out of service	failed	pested
0	in service	not failed	unpested
-	not applicable	not applicable	not applicable

A hyphen (-) indicates the parameter is not applicable to the particular entity. For example, an unequipped circuit displays a "-" for its OOS, FAIL and PEST indicators.

The DACS II entities and their status fields are as follows:

- g** - Link 1
- h** - Link 2
- i** - Link 3
- j** - Link 4
- k** - Link 5
- l** - Link 6
- m** - XC0 (cross-connect 0)
- n** - XC1 (cross-connect 1)
- o** - CCNI/CCI 0 (cross-connect network interface 0 for non-CEF frame)
(clock and control interface 0 for CEF frame)
- p** - CCNI/CCI 1 (cross-connect network interface 1 for non-CEF frame)
(clock and control interface 1 for CEF frame)

SYNC - Synchronizer

CRO - Clock reference oscillator

TLI - Timing link interface

The order of the TLI presented in the output is shown below:

TLI 1, SSP 0, Side 0
TLI 1, SSP 1, Side 0
TLI 2, SSP 0, Side 0
TLI 2, SSP 1, Side 0
TLI 3, SSP 0, Side 0
TLI 3, SSP 1, Side 0
TLI 4, SSP 0, Side 0
TLI 4, SSP 1, Side 0

TLI 1, SSP 0, Side 1
TLI 1, SSP 1, Side 1
TLI 2, SSP 0, Side 1
TLI 2, SSP 1, Side 1
TLI 3, SSP 0, Side 1
TLI 3, SSP 1, Side 1
TLI 4, SSP 0, Side 1
TLI 4, SSP 1, Side 1

TSIS - Time slot interchanges NonCEF

f - FROM unit (1 through 6) NonCEF
t - TO Unit (1 through 6) NonCEF

ETSIS - Expanded time slot interchangers

x - Status of the entity or the side 0 entity if the entity is duplicated

y - Status of the side 1 entity

tt - Total number of equipped entities

nn - Total number of entities having the requested status

UC - Unit controller

FTMI - Facility terminating module interface

FC - Format converter

CCB - Cross-connect buffer

For an FTU equipment output, the definition of each character is given below:

- a - status of UC
- b - status of FTMI 1
- c - status of FTMI 2
- d - status of FTMI 3
- e - status of FTMI 4
- f - status of FC 01
- g - status of FC 11
- h - status of FC 02
- j - status of FC 12
- k - status of FC 03
- m - status of FC 13
- p - status of FC 04
- q - status of FC 14
- r - status of side 0 CCB
- s - status of side 1 CCB

- FLI** - Facility line interface
- FMT** - Formatter or Hybrid Formatter
- MXR** - Multiplexer or Hybrid Multiplexer
- MIU** - Multiple interface unit

For a DS3U or HDS3U equipment output, the definition of each character is given below:

- a - status of UC
- b - status of service FLI
- c - status of protection FLI
- d - status of protection MXR or HMXR
- e - status of MXR or HMXR 1
- f - status of MXR or HMXR 2
- g - status of MXR or HMXR 3
- h - status of MXR or HMXR 4
- j - status of MXR or HMXR 5
- k - status of MXR or HMXR 6
- l - status of side 0 FMT or HFMT
- m - status of side 1 FMT or HFMT
- n - status of protection MIU
- o - status of MIU 1
- p - status of MIU 2
- q - status of MIU 3
- u - status of MIU 4
- v - status of MIU 5
- w - status of MIU 6
- r - status of side 0 CCB
- s - status of side 1 CCB

DSPI - Digital signal processing interface

For a DSPU equipment output, the definition of each character is as below:

- a - status of UC
- b - status of DSPI
- r - status of side 0 CCB
- s - status of side 1 CCB
- [a]aaa** - The first 3- or 4-digit nonhierarchical NPC number of an FTM/MXR/HMXR/DSPU.
- [b]bbb** - The last 3- or 4-digit nonhierarchical NPC number of an FTM/MXR/HMXR/DSPU.

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919
 Unit 13	 Unit 14	 Unit 15	 Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
 Unit 5	 Unit 6	 Unit 7	 Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

MB, SR, and MJ type NPC numbers listed by unit number,
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

[z]zzz - The 3- or 4-digit nonhierarchical DSPU NPC number.

uvmnp - The first hierarchical NPC number of an FTM/MXR/HMXR or a hierarchical DSPU NPC number.

uxkqr - The last hierarchical NPC number of an FTM/MXR/HMXR or a hierarchical DSPU NPC number.

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

MB, SR, and MJ type numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

cc - Hexadecimal condition code

cc *Explanation*

02 Subject entity is not equipped

UTL, QRY, PMSCHED, NPC, ALL

QUERY DS1 PERFORMANCE MONITORING REPORT SCHEDULE

Explanation Of Command

This message retrieves information on the user-programmed schedule of autonomous performance monitoring reports, which DACS II will generate for DA and TA type NPCs. The user may retrieve the PM report schedule information for a single, a range or all applicable NPCs on the frame.

This command will handle NPC addressing in the input command as follows:

If only a single NPC is addressed in the input command, and it is of an applicable type, then a completion response will be generated. The choice of completion response depends on if any scheduled report exists for that NPC. If the NPC type is not applicable, DACS II will always deny invalid commands to a specifically addressed NPC.

If a range of NPCs is addressed, and one or more NPCs within the range is of applicable types, DACS II will retrieve the information for each of the NPCs in the range that support this feature, but skip the NPCs which do not support this feature. DACS II provides a variety of line termination types which support different features and can be randomly mixed within the frame. If at least one of the NPCs in the addressed range supports this feature, DACS II will generate a completion response with one output segment containing the information for each applicable NPC in the range; individual denial responses will not be generated for NPCs within the range which do not support the feature. If *none* of the NPCs in the addressed range supports the requested feature, DACS II will generate a range denial response.

If the 'ALL' option is used, and there is one or more PM report schedule(s) on the frame, DACS II will response by echoing all the PM report data as they were entered when the report was scheduled, with the current NI and RT values , and omitting the inhibit information. The output information is necessary for a PM report to be deleted. If there are

no applicable NPC types on the DACS II frame, the response will be a denial.

Command

Nonhierarchical

[I.51151]

UTL:FRM xy, SEQ ww:QRY, PMSCHED, {NPC [s]abc[-[t]def]|ALL}!

Hierarchical

[I.51151]

UTL:FRM xy, SEQ ww:QRY, PMSCHED, {NPC uvmnp[-wxkqr]|ALL}!

Completion Message

Nonhierarchical

Output message when there are no scheduled reports for the addressed NPCs:

[O.51151]

M hh:mm:ss xy, ww n[vv] UTL QRY PMSCHED {NPC [s]abc[-[t]def]|ALL} 000 COMPL

Output message for one or a range of NPCs, and there is at least one schedule to report:

[O.51151]

M hh:mm:ss xy, ww n[vv] UTL QRY PMSCHED NPC [v]ghi RI rrrrr 3 LN MSG:
RD dddd RT cccc NI nn <parameter> LV llllllllll LOCN locn AI aaaaa
TOF ttttt[-ooooo] IM iii[LK p[vv][q[vv]]] EOM

.
.
.

[M hh:mm:ss xy, ww n[vv] UTL QRY PMSCHED NPC [u]jkl RI rrrrr 3 LN MSG:]
[RD dddd RT cccc NI nn <parameter> LV llllllllll LOCN locn AI aaaaa]
[TOF ttttt[-ooooo] IM iii[LK p[vv][q[vv]]] EOM]

M hh:mm:ss xy, ww n[vv] UTL QRY PMSCHED NPC [s]abc[-[t]def] COMPL

Output message for 'ALL' NPCs, and there is at least one schedule to report:

[O.51151]

```
M hh:mm:ss xy,ww n[vv] UTL QRY PMSCHED NPC [v]ghi[-[u]jkl] RI rrrrr 3 LN MSG:
RD dddd RT cccc NI nn <parameter> LV llllllllll LOCN locn AI aaaaa
TOF ttttt[-ooooo][ LK p[vv][ q[vv]]] EOM
```

.
.
.

```
[M hh:mm:ss xy,ww n[vv] UTL QRY PMSCHED NPC [v]ghi[-[u]jkl] RI rrrrr 3 LN MSG:]
[RD dddd RT cccc NI nn <parameter> LV llllllllll LOCN locn AI aaaaa]
[TOF ttttt[-ooooo][ LK p[vv][ q[vv]]] EOM]
```

M hh:mm:ss xy,ww n[vv] UTL QRY PMSCHED ALL COMPL

Hierarchical

Output message when there are no scheduled reports for the addressed NPCs:

[O.51151]

M hh:mm:ss xy,ww n[vv] UTL QRY PMSCHED {NPC uvmnp[-wxkqr]} ALL} 000 COMPL

Output message for one or a range of NPCs, and there is at least one schedule to report:

[O.51151]

```
M hh:mm:ss xy,ww n[vv] UTL QRY PMSCHED NPC edhfg RI rrrrr 3 LN MSG:
RD dddd RT cccc NI nn <parameter> LV llllllllll LOCN locn AI aaaaa
TOF ttttt[-ooooo] IM iii[ LK p[vv][ q[vv]]] EOM
```

.
.
.

```
[M hh:mm:ss xy,ww n[vv] UTL QRY PMSCHED NPC opjst RI rrrrr 3 LN MSG:]
[RD dddd RT cccc NI nn <parameter> LV llllllllll LOCN locn AI aaaaa]
[TOF ttttt[-ooooo] IM iii[ LK p[vv][ q[vv]]] EOM]
```

M hh:mm:ss xy,ww n[vv] UTL QRY PMSCHED NPC uvmnp[-wxkqr] COMPL

Output message for 'ALL' NPCs, and there is at least one schedule to report:

[O.51151]

M hh:mm:ss xy,ww n[vv] UTL QRY PMSCHED NPC edhfg[-opjst] RI rrrrr 3 LN MSG:
RD dddd RT cccc NI nn <parameter> LV llllllllll LOCN locn AI aaaaa
TOF ttttt[-ooooo][LK p[vv][q[vv]]] EOM

.
.
.

[M hh:mm:ss xy,ww n[vv] UTL QRY PMSCHED NPC edhfg[-opjst] RI rrrrr 3 LN MSG:]
[RD dddd RT cccc NI nn <parameter> LV llllllllll LOCN locn AI aaaaa]
[TOF ttttt[-ooooo][LK p[vv][q[vv]]] EOM]

M hh:mm:ss xy,ww n[vv] UTL QRY PMSCHED ALL COMPL

Denial Message

Nonhierarchical

[O.51151.01]

M hh:mm:ss xy,ww n[vv] UTL QRY PMSCHED {NPC [s]abc[-[t]def]|ALL} COND cc DNY

Hierarchical

[O.51151.01]

M hh:mm:ss xy,ww n[vv] UTL QRY PMSCHED {NPC uvmnp[-wxkqr]|ALL} COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical starting NPC number

[t]def - The 3- or 4-digit nonhierarchical ending NPC number

The valid values are:

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical starting NPC number

wxkqr - Hierarchical ending NPC number

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

ALL - All report schedules are queried for all NPCs.
Each scheduled report is displayed with its range of NPCs.

[v]ghi - The 3- or 4-digit nonhierarchical NPC number ([s]abc through [u]jkl)

[u]jkl - The 3- or 4-digit nonhierarchical NPC number ([v]ghi through [t]def)
Or range of NPCs for a scheduled report, if ALL NPCs are queried.

edhfg - Hierarchical NPC number (uvmnp through opjst)

opjst - Hierarchical NPC number (edhfg through wxkqr)
Or range of NPCs for a scheduled report, if ALL NPCs are queried.

RI - Report interval

rrrrr - The interval between performance monitoring reports

<i>rrrrr</i>	<i>Explanation</i>
{0001-1440}M	Report interval in minutes
{0001-0024}H	Report interval in hours
{0001-0007}D	Report interval in days

RD - Report date

dddd - The date for the next performance monitoring report.

<i>dddd</i>	<i>Explanation</i>
{01-12}{01-31}	Month of Year/Day of Month Format

RT - Report time

cccc - The time of day for the next performance monitoring report.

<i>cccc</i>	<i>Explanation</i>
{00-23}{00-59}	Hour of Day/Minute of Hour Format

NI - Number of intervals

nn - The remaining number of intervals over which performance monitoring is to be reported. If this parameter is CT, the performance monitoring schedule will remain in effect until the schedule is canceled using another "Schedule PM Report" command.

<i>nn</i>	<i>Explanation</i>
{01-96}	Finite number of scheduled reports
CT	Continuous reports until cancelled

parameter

- The parameter for which reporting is being scheduled.

<i>parameter</i>	<i>Explanation</i>
CVP	Path Coding Violations
CVL	Line Coding Violations
ESP	Path Errored Seconds
ESL	Line Errored Seconds
SESP	Path Severely Errored Seconds
SESL	Line Severely Errored Seconds
SEFS	Path Severely Errored Framing Seconds
CSS	Path Controlled Slip Seconds
UAS	Path Unavailable Seconds
ALLPAR	All listed parameters

LV - Level

llllllllll

- The discriminating level for the requested parameter.

<i>llllllllll</i>	<i>Explanation</i>
{000000000-134217728}U	Discriminating Level-Up Direction
{000000000-134217728}D	Discriminating Level-Down Direction

Up - Parameters with values equal to or greater than the "discriminating level" specified are reported.

Down - Parameters with values equal to or less than the "discriminating level" specified are reported.

LOCN - Location

locn - The location being performance monitored.

locn Explanation

NEND Near-end

FEND Far-end

AI - Accumulation interval

aaaaa - The accumulation time period for the specified parameter.

aaaaa Explanation

15MIN Parameter count from a 15-minute accumulator

DAILY Parameter count from a daily accumulator

TOF - Time offset

ttttt - The age of the requested data registers(s) at the reporting time, measured backwards in time from the end of last completed accumulation interval to the beginning of the requested interval.

ooooo - If the report interval is an integral number of accumulation intervals, this parameter specifies a range of up to four historical data registers per scheduled report.

tttt,ooooo Explanation

{0-7}{00-23}{00,15,30,45,60} Day/Hour/Minute

If the value 7 is given for day, then Hour and Minute must be zero.

To produce reports that contain historical data of completed accumulation intervals, the scheduled report times (set up with "start time" and "report interval") usually coincide with the end of accumulation intervals, and the time offset must be an integral number of accumulation intervals.

A time offset value of 00000 or any value less than the accumulation interval produces a report that contains data from the current register.

IM - Inhibit Mode

iii - Indicates whether the reporting of performance monitoring data for the facility is currently inhibited or enabled. This information shall be omitted for the 'ALL' case.

iii Explanation

ALW Performance monitoring reporting is allowed

INH Performance monitoring reporting is inhibited

LK - Link

p[vv] - Up to two administrative links to which the scheduled report output will be transmitted. The user may omit these optional parameters, specify a single link, or specify two links which will both receive all output generated by this scheduled report. If these optional parameters are omitted, the scheduled report output will by default be transmitted only to the link that the schedule command was received on.

cc - Hexadecimal condition code

cc *Explanation*

15 NPC is unequipped

26 NPC type error

A1 The parameter specified does not match with the NPC type

0F Frame time is not set

1F Scheduled reporting for this npc is inhibited

UTL, QRY, PSTATE, UNIT

QUERY UNIT PROTECTION STATE

Explanation Of Command

This command reports the maintenance and protection state for the facility line interface (FLI) circuit pack and for the multiplexer multiple-line interface functional group (MMFG) pack in a DS3 unit (DS3U) or a Hybrid DS3 unit (HDS3U). It also indicates whether alarm generation for unprotected DS3 (due to manual commands) is enabled or disabled. The enabling/disabling of alarm generation applies to all DS3Us and HDS3Us in the DACS frame. It is not on a per DS3U or HDS3U basis.

Command

[I.56511]

UTL:FRM xy,SEQ ww:QRY,PSTATE,UNIT [q]q!

Completion Message

[O.56511]

M hh:mm:ss xy,ww n[vv] UTL QRY PSTATE UNIT [q]q FLI 4 LN MSG:

S P
<vvv> <vvv>
<zzzz> <zzzz> EOM

M hh:mm:ss xy,ww n[vv] UTL QRY PSTATE UNIT [q]q MMFG P-6 6 LN MSG:

<xxxx> <xxxx> <xxxx> <xxxx> <xxxx> <xxxx> <xxxx>
<yyyy> <yyyy> <yyyy> <yyyy> <yyyy> <yyyy> <yyyy>
<bbbb> <aaaa> <aaaa> <aaaa> <aaaa> <aaaa> <aaaa>
ccc ccc ccc ccc ccc ccc
DS3UNPROTALM <dd> COMPL

Denial Message

[O.56511.01]

M hh:mm:ss xy,ww n[vv] UTL QRY PSTATE UNIT [q]q COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

PSTATE - Protection state

UNIT - Unit

[q]q - Unit number (1 through 16)

S - Service

P - Protection

FLI - Facility line interface

vvv - FLI maintenance state

vvv Explanation

IS In-service

ISF In-service failed or pested

OOS Out-of-service

zzzz - FLI protection state

zzzz Explanation

SLT Selected (designated to carry service)

USLT Unselected (not designated to carry service)

MMFG - Multiplexer-multiplexer interface unit functional group

xxxx - Multiplexer (MXR) or Hybrid MXR (HMXR) maintenance state

xxxx Explanation

IS In service

ISF In service Failed/Pested

OOS Out of service

UEQD Not equipped (not possible for a protection MXR)

yyyy - Multiplexer interface unit (MIU) or Hybrid MIU (HMIU) maintenance state

yyyy Explanation

IS	In service
ISF	In service failed/pested
OOS	Out of service
UEQD	Not equipped

aaaaa - Service MMFG protection state

aaaaa Explanation

SALW	The service MMFG is selected to carry service, and protection switching is ALLOWED
SINH	The service MMFG is selected to carry service, and AUTOMATIC protection switching is INHIBITED. Manual switching is permitted.
MPALW	The facility on this MMFG is being served by the protection pack as a result of a manual switch command, and automatic switchback is ALLOWED
APALW	The facility on this MMFG is being served by the protection pack as a result of an automatic switch, and automatic switchback is ALLOWED
MPINH	The facility on this MMFG is being served by the protection pack as a result of a manual switch command, and automatic switchback is INHIBITED
APINH	The facility on this MMFG is being served by the protection pack as a result of an automatic switch, and automatic switchback is INHIBITED
-----	The service MXR is not equipped

bbbb - Selection status of the protection MMFG

bbbb Explanation

SLT	Selected (designated to carry service)
USLT	Unselected (not designated to carry service)

ccc - Availability of protection switch in case of failure:

ccc Explanation

AVL	Protection switch available
NVL	Protection switch not available (if the aaaa field is SINH, MPINH or APINH, this field will always be NVL)
---	The MMFG is not selected

COND - Condition

DS3UNPROTALM

- DS3 Unprotected Alarm

dd *Explanation*

ON Enabled.

Alarm will be generated when DS3 service is unprotected due to manual commands.

OFF Disabled.

Alarm will not be generated when DS3 service is unprotected due to manual commands.

cc - Hexadecimal condition code

cc *Explanation*

02 Subject entity is not equipped

UTL, QRY, ROLL, DS0, NPC, ALL, UNIT

UTILITY QUERY ROLL DS0

Explanation Of Command

This command is used to request a report on the roll status of all of the channels in a network processing circuit (NPC). The roll status request may be for a single NPC, a range of NPCs, all NPCs in a unit, or all NPCs in the DACS II frame.

The output message shows the correspondence between the bridge and service legs of the Roll procedure. Original Service and Original Bridged leg refer to the service and bridged leg designations created by the Bridge step of the Roll procedure. New Service and New Bridged leg refer to the service and bridged leg designations created by the Roll step of the Roll procedure.

The output message displays the roll status of each of the 24 channels of an NPC.

The top left position corresponds to channel one of the NPC and the bottom right position corresponds to channel twenty-four of the NPC. All dashes are displayed if there is neither a Service leg nor a Bridged leg associated with a channel.

The display is repeated for each NPC in the range. If there are no rolled channels on an NPC within a range, then no roll status output will be generated for that NPC.

Note: The processing time to query the roll status of a fully equipped frame could exceed 9 minutes.

The specified NPC range can cross a unit boundary and is applicable to facility terminating unit (FTU) and DS3 unit (DS3U) types.

Command

Nonhierarchical

[I.52081]

UTL:FRM xy,SEQ ww:QRY,ROLL,DS0,{NPC [s]abc[-[t]def]|ALL[,UNIT [q]q]}!

Hierarchical

[I.52081]

UTL:FRM xy,SEQ ww:QRY,ROLL,DS0,{NPC uvmpn[-wxkqr]|ALL[,UNIT [q]q]}!

Completion Message

Nonhierarchical

The output message in nonhierarchical PDS form will span one output segment per NPC.

If the 3- or 4-digit nonhierarchical NPC number is used, the output will be six channels per line as shown below:

[O.52081]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS0 NPC [s]abc 5 LN MSG:
rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj
rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj
rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj
rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj EOM
```

.
.
.

```
[M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS0 NPC [t]def 5 LN MSG:
rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj
rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj
rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj
rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj rr[u]ghijjj EOM]
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS0 {NPC [s]abc[-[t]def]|\
ALL[ UNIT [q]q]} COMPL
```


Hierarchical

The output message in hierarchical PDS form will span one output segment per NPC.

If a hierarchical NPC number is used, the output will be six channels per line as shown below:

[O.52081]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS0 NPC uvmnp 5 LN MSG:
rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj
rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj
rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj
rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj EOM
```

.
.
.

```
[M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS0 NPC wxkqr 5 LN MSG:
rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj
rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj
rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj
rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj rrghikljjj EOM]
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS0 {NPC uvmnp[-wxkqr]}|\
ALL[ UNIT [q]q]} COMPL
```

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - 3- or 4-digit nonhierarchical NPC number, the first number of a range or a single NPC number.

[t]def - 3- or 4-digit nonhierarchical NPC number, the last number of a range.

ALL - All
Keyword indicating that all NPCs in the frame are being queried for Roll status.

UNIT - Unit

[q]q - Unit number (1 through 16)

Keyword used to limit query to all NPCs in a Unit.

[u]ghi - The 3- or 4-digit nonhierarchical NPC number of the Service or Bridged channel associated with the queried NPC.

ghikl - Hierarchical NPC number of the Service or Bridged leg associated with the queried NPC

jjj - Channel number of the Service or Bridged leg associated with the queried NPC

rr - The Roll status of a channel interpreted as follows:

rr *Type of Leg*

OS Indicates that channel [u]ghijjj or ghikljjj is the Original Service leg and the corresponding channel is the Original Bridged leg.

NS Indicates that channel [u]ghijjj or ghikljjj is the New Service leg and the corresponding channel is the New Bridged leg.

OB Indicates that channel [u]ghijjj or ghikljjj is the Original Bridged leg and the corresponding channel is the Original Service leg.

NB Indicates that channel [u]ghijjj or ghikljjj is the New Bridged leg and the corresponding channel is the New Service leg.

-- Indicates that the channel is not a Service or Bridged leg

uvmnp - Hierarchical NPC number, the first number of a range or a single NPC number

wxkqr - Hierarchical NPC number, the last number of a range

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

Note: Valid NPC types for DS0 Roll are DExyz (except DE9y9), TExyz (except TE9y9), DAxyz (except DAxy9), and TAxzy (except TAxzy9).

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in hierarchical form, the valid values are:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

UTL, QRY, ROLL, DS1, NPC, ALL, UNIT

UTILITY QUERY ROLL DS1

Explanation Of Command

This command is used to request a report on the roll status of DS1 facilities.

The roll status request may be for a single network processing circuit (NPC), a range of NPCs, all NPCs in a unit, or all NPCs in the DACS II frame. The output message shows the correspondence between the bridge and service facilities of the Roll procedure.

Original Service and Original Bridged facility refer to the service and bridged facility designations created by the Bridge step of the Roll procedure.

New Service and New Bridged facility refer to the service and bridged facility designations created by the Roll step of the Roll procedure.

The output message displays the roll status of each of the NPCs in a Facility Terminating Module (FTM) or DS3.

The top left position corresponds to the first NPC in the FTM or DS3 and the bottom right position corresponds to the last NPC in that FTM or DS3. All dashes are displayed if there is neither a Service facility nor a Bridged facility associated with an NPC.

The display is repeated for each FTM or DS3 in the range.

If the range queried in the input message is a subset of an FTM or DS3, all NPCs of that FTM or DS3 will still be displayed.

If there are no rolled channels in an FTM or DS3, then no roll status output will be generated for that FTM or DS3.

The specified NPC range can cross a unit boundary and is applicable to facility terminating unit (FTU) and DS3 unit (DS3U) types.

If only one NPC is queried, then the output display will be one line with the roll status information for the requested NPC.

Command

Nonhierarchical

[I.52091]

UTL:FRM xy,SEQ ww:QRY,ROLL,DS1,{NPC [s]abc[-[t]def]|ALL[,UNIT [q]q]}!

Hierarchical

[I.52091]

UTL:FRM xy,SEQ ww:QRY,ROLL,DS1,{NPC uvmnp[-wxkqr]|ALL[,UNIT [q]q]}!

Completion Message

Nonhierarchical

The output message in nonhierarchical PDS form will span one output segment per FTM for FTU NPC ranges, one output segment per DS3 for DS3U NPC ranges, and one line for a single FTU or DS3U NPC.

If the 3- or 4-digit nonhierarchical NPC number in an FTU range is used, the output will be ten NPCs per line as shown below:

[O.52091]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS1 FTU NPC [a]aaa-[b]bbb 5 LN MSG:
rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi \
rr[u]ghi rr[u]ghi
rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi \
rr[u]ghi rr[u]ghi
rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi \
rr[u]ghi rr[u]ghi
rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi \
rr[u]ghi rr[u]ghi EOM
```

```

      .
      .
      .

```

**M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS1 {NPC [s]abc-[t]def|\
ALL[UNIT [q]q]} COMPL**

If the 3- or 4-digit nonhierarchical NPC number in a DS3U range is used, the output will be seven NPCs per line as shown below:

[O.52091]

M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS1 DS3U NPC [a]aaa-[b]bbb 5 LN MSG:
 rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi
 rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi
 rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi
 rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi rr[u]ghi EOM

```

      .
      .
      .

```

**M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS1 {NPC [s]abc-[t]def|\
ALL[UNIT [q]q]} COMPL**

If a single 3- or 4-digit nonhierarchical NPC number in an FTU or DS3U is used, the output will be one line as shown below:

[O.52091]

M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS1 {FTU|DS3U} NPC [s]abc rr[u]ghi COMPL

Hierarchical

The output message in hierarchical PDS form will span two output segments per FTM for FTU NPC ranges, one output segment per DS3 for DS3U NPC ranges, and one line for a single FTU or DS3U NPC.

If the hierarchical NPC number in an FTU range is used, each output segment will display five NPCs per line as shown below:

[O.52091]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS1 FTU NPC bcdef-edhfg 5 LN MSG:
rrghikl rrghikl rrghikl rrghikl rrghikl
rrghikl rrghikl rrghikl rrghikl rrghikl
rrghikl rrghikl rrghikl rrghikl rrghikl
rrghikl rrghikl rrghikl rrghikl rrghikl EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS1 FTU NPC fhjrk-stxyz 5 LN MSG:
rrghikl rrghikl rrghikl rrghikl rrghikl
rrghikl rrghikl rrghikl rrghikl rrghikl
rrghikl rrghikl rrghikl rrghikl rrghikl
rrghikl rrghikl rrghikl rrghikl rrghikl EOM
```

```
      .
      .
      .
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS1 {NPC uvmnp-wxkqr|\
ALL[ UNIT [q]q]} COMPL
```

If the hierarchical NPC number in a DS3U range is used, the output segment will display seven NPCs per line as shown below:

[O.52091]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS1 DS3U NPC bcdef-stxyz 5 LN MSG:
rrghikl rrghikl rrghikl rrghikl rrghikl rrghikl rrghikl
rrghikl rrghikl rrghikl rrghikl rrghikl rrghikl rrghikl
rrghikl rrghikl rrghikl rrghikl rrghikl rrghikl rrghikl
rrghikl rrghikl rrghikl rrghikl rrghikl rrghikl rrghikl EOM
```

```
      .
      .
      .
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS1 {NPC uvmnp-wxkqr|\
ALL[ UNIT [q]q]} COMPL
```

If a single 3- or 4-digit hierarchical NPC number in an FTU or DS3U is used, the output will be one line as shown below:

[O.52091]

```
M hh:mm:ss xy,ww n[vv] UTL QRY ROLL DS1 {FTU|DS3U} NPC uvmnp rrghikl COMPL
```

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - 3- or 4-digit nonhierarchical NPC number, the first number of a range or a single NPC number.

[t]def - 3- or 4-digit nonhierarchical NPC number, the last number of a range.

ALL - All
Keyword indicating that all NPCs in the frame are being queried for Roll status.

UNIT - Unit

[q]q - Unit number (1 through 16)
Keyword used to limit query to all NPCs in a Unit.

[q]q - The 1- or 2-digit Unit number

[a]aaa - 3- or 4-digit nonhierarchical NPC number, the first NPC number of an FTM or DS3.

[b]bbb - 3- or 4-digit nonhierarchical NPC number, the last NPC number of an FTM or DS3.

[u]ghi - The 3- or 4-digit nonhierarchical NPC number of the Service or Bridged facility associated with the queried NPC.

ghikl - Hierarchical NPC number of the Service or Bridged facility associated with the queried NPC.

rr - NPC Roll status interpreted as follows:

<i>rr</i>	<i>Type of Facility</i>
OS	Indicates that NPC [u]ghi or ghikl is the Original Service facility and the corresponding NPC is the Original Bridged facility.
NS	Indicates that NPC [u]ghi or ghikl is the New Service facility and the corresponding NPC is the New Bridged facility.
OB	Indicates that NPC [u]ghi or ghikl is the Original Bridged facility and the corresponding NPC is the Original Service facility.
NB	Indicates that NPC [u]ghi or ghikl is the New Bridged facility and the corresponding NPC is the New Service facility.
--	Indicates that the NPC is not a Service or Bridged facility.

bcdef - Hierarchical NPC number, the first NPC number of an FTM or DS3.

edhfg - Hierarchical NPC number, the last NPC number of an FTM output segment.

fhjrk - Hierarchical NPC number, the first NPC number of an FTM output segment.

stxyz - Hierarchical NPC number, the last NPC number of an FTM or DS3.

uvmnp - Hierarchical NPC number, the first NPC number of a range or a single NPC number.

wxkqr - Hierarchical NPC number, the last NPC number of a range.

uv,wx,bc,st,fh,ed
- Unit number
m,k,d,x,j,h
- Module number
np,qr,ef,yz,rk,fg
- NPC number within the module

Note: Valid NPC types for DS1 Roll are DExyz, DAxyz, TExyz and TAxzy.

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in hierarchical form, the valid values are:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

UTL,QRY,RTMAP,DLMAP

UTILITY QUERY, RTMAP, DLMAP

Explanation Of Command

This message shows all connections on a specific remote terminal (RT) or data link (DL) for a digital carrier line unit or shows all cross-connections for all of the RTs or DLs terminated on the frame provided the bank identification option is not present on the input.

On output, the SWMR or SWAR network processing circuit shows only the digroup which is switch protected. Bank identification numbers are listed in ascending order.

Command

[I.52311]

UTL:FRM xy,SEQ ww:QRY,{RTMAP|DLMAP}[ffff]!

Completion Message

Nonhierarchical

[O.52311]

If the 3-digit nonhierarchical NPC numbering scheme is used by the link/user
The following output will be generated:

```
M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff MD g[g] 5 LN MSG:
DGA aaa[ {SWMR|SWAR} DGP ppp] DSxyz ccc-ddd[ {sss|NDL|RTF}]
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff MD g[g] 5 LN MSG:
DGx bbb[ {SWMR|SWAR} DGP ppp] DSxyz ccc-ddd[ {sss|NDL|RTF}]
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff COMPL
```

If the 4-digit nonhierarchical NPC numbering scheme is used by the link/user
The following output will be generated:

```
M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff MD g[g] 6 LN MSG:
DGA aaaa[ {SWMR|SWAR} DGP pppp] DSxyz ccc-ddd[ {sss|NDL|RTF}]
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff MD g[g] 6 LN MSG:
DGx bbbb[ {SWMR|SWAR} DGP pppp] DSxyz ccc-ddd[ {sss|NDL|RTF}]
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff COMPL
```

For each RTMAP/DLMAP, if the 3-digit nonhierarchical NPC number is used by the link/user, the following output will be generated:

[O.52312]

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} kkk {EOM|COMPL}

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff MD g[g] 5 LN MSG:
DGA aaa[{SWMR|SWAR} DGP ppp] DSxyz ccc-ddd[{sss|NDL|RTF}]
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff MD g[g] 5 LN MSG:
DGx bbb[{SWMR|SWAR} DGP ppp] DSxyz ccc-ddd[{sss|NDL|RTF}]
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} hhhh MD g[g] 5 LN MSG:
DGA aaa[{SWMR|SWAR} DGP ppp] DSxyz ccc-ddd[{sss|NDL|RTF}]
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} hhhh MD g[g] 5 LN MSG:
DGx bbb[{SWMR|SWAR} DGP ppp] DSxyz ccc-ddd[{sss|NDL|RTF}]
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr
tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr tghijjrr EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} COMPL

For each RTMAP/DLMAP, if the 4-digit nonhierarchical NPC number is used by the link/user, the following output will be generated:

[O.52312]

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} kkk {EOM|COMPL}

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff MD g[g] 6 LN MSG:
DGA aaaa[{SWMR|SWAR} DGP pppp] DSxyz ccc-ddd[{sss|NDL|RTF}]
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff MD g[g] 6 LN MSG:
DGx bbbb[{SWMR|SWAR} DGP pppp] DSxyz ccc-ddd[{sss|NDL|RTF}]
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} hhhh MD g[g] 6 LN MSG:
DGA aaaa[{SWMR|SWAR} DGP pppp] DSxyz ccc-ddd[{sss|NDL|RTF}]
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} hhhh MD g[g] 6 LN MSG:
DGx bbbb[{SWMR|SWAR} DGP pppp] DSxyz ccc-ddd[{sss|NDL|RTF}]
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr
tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr tsghijjrr EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} COMPL

Hierarchical

[O.52311]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff MD g[g] 6 LN MSG:
DGA uvjaa[ {SWMR|SWAR} DGP uvjpp] DSxyz ccc-ddd[ {sss|NDL|RTF}]
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff MD g[g] 6 LN MSG:
DGx uvkbb[ {SWMR|SWAR} DGP uvjpp] DSxyz ccc-ddd[ {sss|NDL|RTF}]
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff COMPL
```

[O.52312]

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} kkk {EOM|COMPL}

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff MD g[g] 6 LN MSG:
DGA uvjaa[{SWMR|SWAR} DGP uvjpp] DSxyz ccc-ddd[{sss|NDL|RTF}]
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff MD g[g] 6 LN MSG:
DGx uvkbb[{SWMR|SWAR} DGP uvjpp] DSxyz ccc-ddd[{sss|NDL|RTF}]
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} hhhh MD g[g] 6 LN MSG:
DGA wxlaa[{SWMR|SWAR} DGP wxlpp] DSxyz ccc-ddd[{sss|NDL|RTF}]
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr EOM

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} hhhh MD g[g] 6 LN MSG:
DGx wxmbb[{SWMR|SWAR} DGP wxlpp] DSxyz ccc-ddd[{sss|NDL|RTF}]
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr
tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr tuvmnpjjjr EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} COMPL

[O.52313]

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP}[ffff] COMPL

Denial Message

[O.52311.01]

M hh:mm:ss xy,ww n[vv] UTL QRY {RTMAP|DLMAP} ffff COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

RTMAP - Remote terminal (RT) channel map (SLC® carrier)

DLMAP - Digital carrier line unit (DCLU) channel map

ffff - Bank identification number (0000 through 9999)

hhhh - Bank identification number ($ffff \leq hhhh$)

MD - Mode

g[g] - Mode of operation

g[g] Explanation

1	SLC 96 Carrier Mode I
3	SLC 96 Carrier Mode III
C	SLC Series 5 Carrier FPC

DGA - Digroup A of a SLC carrier bank

DGx - Digroup x (x = B, C, or D) of a SLC carrier bank

DGP - Digroup P of a SLC carrier bank

aaa - 3-digit nonhierarchical DGA NPC number

bbb - 3-digit nonhierarchical DGB, DGC, or DGD NPC number

ppp - 3-digit nonhierarchical DGP NPC number

aaaa - 4-digit nonhierarchical DGA NPC number

bbbb - 4-digit nonhierarchical DGB, DGC, or DGD NPC number

pppp - 4-digit nonhierarchical DGP NPC number

If NPC numbers are expressed in three digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

DSxyz - SLC® Carrier Terminating NPC type

DS-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	Not assigned
4	Not assigned
5	Not assigned
6	SLC® 96 carrier Fs
7	SLC 5 carrier ESF with data link
8-9	Not assigned

y - Line and signaling format

y *Explanation*

- 0** Zero code suppression (ZCS)
- 1** No zero code suppression (NZCS)
- 2** Bipolar with 8 zero substitution (B8ZS)
- 3-9** Not assigned

z - Counting sequence format

z *Explanation*

- 0** SLC 96 carrier Mode III D4 counting sequence
- 1** SLC 96 carrier Mode III D1D counting sequence
- 2** SLC 96 carrier Mode I D1D counting sequence
- 3** SLC Series 5 carrier D4 counting sequence
- 4-9** Not assigned

uvjaa - Hierarchical DGA NPC number

wxlaa - Hierarchical DGA NPC number of the last RT or DCLU listed.

uvkbb - Hierarchical DGB, DGC, or DGD NPC number

wxmbb - Hierarchical DGB, DGC, or DGD NPC number of the last RT or, DCLU listed.

uvjpp - Hierarchical DGP NPC number

wxlpp - Hierarchical DGP NPC number of the last RT or DCLU listed.

uv, wx - Unit number

j, k, l, m

- Module number

aa - NPC number

bb - NPC number

pp - NPC number

The valid values are:

DS type NPC numbers listed by unit, module, and NPC Number

Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

SWMR - Switch manually requested

SWAR - Switch automatically requested

Switch refers to a protection switch.

ccc - Beginning channel number
ddd - Ending channel number

<i>ccc-ddd</i>	<i>Digroup</i>	<i>Mode</i>
001-024	DGA	Mode I and C
001-047(odd # only)	DGA	Mode III
025-048	DGB	Mode I and C
049-072	DGC	Mode I and C
049-095(odd # only)	DGC	Mode III
073-096	DGD	Mode I and C

sss - SLC 96 carrier remote terminal power or miscellaneous alarm option

<i>sss</i>	<i>Explanation</i>
PMJ	Power major alarm from the data link
PMN	Power minor alarm from the data link
MMJ	Miscellaneous major alarm from the data link
MMN	Miscellaneous minor alarm from the data link

NDL - No data link

RTF - Retrofit (only applicable to SLC Series 5 carrier FPC RT)

kkk - Total number of SLC carrier RT or DCLU banks

tghijjrr
- Termination with 3-digit nonhierarchical NPC number

t[s]ghijjrr
- Termination with 4-digit nonhierarchical NPC number.

tuvmpjjrr
- Termination with hierarchical NPC number

<i>t</i>	<i>Type of Connection</i>
*	One-way
" "	Two-way (a blank)
B	Broadcast

[s]ghijj

- The mapped 3- or 4-digit nonhierarchical NPC and channel numbers.

[s]ghijj *Explanation*

[0]000000 Unmapped

[-]-SECH- Substrate channel

[s]ghi

- The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-002	161-162	321-322	481-482	641-642	801-802
021-022	181-182	341-342	501-502	661-662	821-822
041-042	201-202	361-362	521-522	681-682	841-842
061-062	221-222	381-382	541-542	701-702	861-862
081-082	241-242	401-402	561-562	721-722	881-882
101-102	261-262	421-422	581-582	741-742	901-902
121-122	281-282	441-442	601-602	761-762	921-922
141-142	301-302	461-462	621-622	781-782	941-942

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0002	0161-0162	0321-0322	0481-0482
0021-0022	0181-0182	0341-0342	0501-0502
0041-0042	0201-0202	0361-0362	0521-0522
0061-0062	0221-0222	0381-0382	0541-0542
0081-0082	0241-0242	0401-0402	0561-0562
0101-0102	0261-0262	0421-0422	0581-0582
0121-0122	0281-0282	0441-0442	0601-0602
0141-0142	0301-0302	0461-0462	0621-0622

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0642	0801-0802	0961-0962	1121-1122
0661-0662	0821-0822	0981-0982	1141-1142
0681-0682	0841-0842	1001-1002	1161-1161
0701-0702	0861-0862	1021-1022	1181-1182
0721-0722	0881-0882	1041-1042	1201-1202
0741-0742	0901-0902	1061-1062	1221-1222
0761-0762	0921-0922	1081-1082	1241-1242
0781-0782	0941-0942	1101-1102	1261-1262

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1282	1441-1442	1601-1602	1761-1762
1301-1302	1461-1462	1621-1622	1781-1782
1321-1322	1481-1482	1641-1642	1801-1802
1341-1342	1501-1502	1661-1662	1821-1822
1361-1362	1521-1522	1681-1682	1841-1842
1381-1382	1541-1542	1701-1702	1861-1862
1401-1402	1561-1562	1721-1722	1881-1882
1421-1422	1581-1582	1741-1742	1901-1902
 Unit 13	 Unit 14	 Unit 15	 Unit 16
NPC	NPC	NPC	NPC
1921-1922	2081-2082	2241-2242	2401-2402
1941-1942	2101-2102	2261-2262	2421-2422
1961-1962	2121-2122	2281-2282	2441-2442
1981-1982	2141-2142	2301-2302	2461-2462
2001-2002	2161-2162	2321-2322	2481-2482
2021-2022	2181-2182	2341-2342	2501-2502
2041-2042	2201-2202	2361-2362	2521-2522
2061-2062	2221-2222	2381-2382	2541-2542

DACS II Non-CEF frames support two virtual NPCs using the three digit NPC numbering scheme. The valid values for Non-CEF frames are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-962

DACS II CEF frames support six virtual NPCs using either a three digit or four digit NPC numbering scheme. If NPC numbers are expressed in three digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

961-966

If NPC numbers are expressed in four digits, the valid values are:

VI type NPC numbers listed by unit number, Unit Type VI (Virtual)

Unit

-

NPC

9961-9966

uvmnpjjj

- Mapped hierarchical NPC and channel numbers.

<i>uvmnpjjj</i>	<i>Explanation</i>
00000000	unmapped
--SECH--	Subrate channel

uv-m-npj

- Mapped hierarchical NPC and channel numbers.

<i>uv-m-npj</i>	<i>Explanation</i>
00-0-00000	unmapped
--SECH--	Subrate channel
---SECH---	Subrate channel

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01-02

VI NPC numbers listed by unit, module, and NPC Number
Unit Type VI (Virtual)

Unit	Module	NPC	
99	1	01-02	(DACS II Non-CEF frames)
99	1	01-06	(DACS II CEF frames)

jjj - Channel number

The valid channel numbers for each NPC type are:

Channel numbers
001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers
001-500 (Virtual NPC)

001-085 (MB NPC)

r - Termination status

r Explanation

T Terminated

blank Not Terminated

cc - Hexadecimal condition code

cc *Explanation*

7E Bank id number not found

UTL, QRY, SCON, CH, TO

UTILITY QUERY

Explanation Of Command

This message requests the far end information for each customer in the connected channel or range of connected channels.

Only one customer will be reported for a DS0A channel. For a DS0B channel, the number of customers reported will be 5, 10, or 20, depending on how the channel was established.

Command

Nonhierarchical

[I.52511]

UTL:FRM xy,SEQ ww:QRY,SCON,CH,TO [s]abcddd[-eee]!

Hierarchical

[I.52511]

UTL:FRM xy,SEQ ww:QRY,SCON,CH,TO uvmnpddd[-eee]!

Completion Message

Nonhierarchical

For a DS0A channel

[O.52511]

M hh:mm:ss xy,ww n[vv] UTL QRY SCON CH [s]abcddd 2 LN MSG:
<far-end> {COMPL|EOM}

For a DS0B 5-customer channel

[O.52511]

M hh:mm:ss xy,ww n[vv] UTL QRY SCON CH [s]abcddd 2 LN MSG:
<far-end> <far-end> <far-end> <far-end> <far-end> {COMPL|EOM}

10-customer channel

[O.52511]

M hh:mm:ss xy,ww n[vv] UTL QRY SCON CH [s]abcddd 3 LN MSG:
<far-end> <far-end> <far-end> <far-end> <far-end>
<far-end> <far-end> <far-end> <far-end> <far-end> {COMPL|EOM}

20-customer channel

[O.52511]

M hh:mm:ss xy,ww n[vv] UTL QRY SCON CH [s]abcddd 5 LN MSG:
<far-end> <far-end> <far-end> <far-end> <far-end>
<far-end> <far-end> <far-end> <far-end> <far-end>
<far-end> <far-end> <far-end> <far-end> <far-end>
<far-end> <far-end> <far-end> <far-end> <far-end> {COMPL|EOM}

Hierarchical

For a DS0A channel

[O.52511]

M hh:mm:ss xy,ww n[vv] UTL QRY SCON CH uvmnpddd 2 LN MSG:
<far-end> {COMPL|EOM}

For a DSOB 5-customer channel

[O.52511]

M hh:mm:ss xy,ww n[vv] UTL QRY SCON CH uvmnpddd 2 LN MSG:
<far-end> <far-end> <far-end> <far-end> <far-end> {COMPL|EOM}

10-customer channel

[O.52511]

M hh:mm:ss xy,ww n[vv] UTL QRY SCON CH uvmnpddd 3 LN MSG:
<far-end> <far-end> <far-end> <far-end> <far-end>
<far-end> <far-end> <far-end> <far-end> <far-end> {COMPL|EOM}

20-customer channel

[O.52511]

M hh:mm:ss xy,ww n[vv] UTL QRY SCON CH uvmnpddd 5 LN MSG:
<far-end> <far-end> <far-end> <far-end> <far-end>
<far-end> <far-end> <far-end> <far-end> <far-end>
<far-end> <far-end> <far-end> <far-end> <far-end>
<far-end> <far-end> <far-end> <far-end> <far-end> {COMPL|EOM}

Denial Message

Nonhierarchical

[O.52511.01]

M hh:mm:ss xy,ww n[vv] UTL QRY SCON CH [s]abcddd[-eee] 2 LN MSG:
<reason> DNY

Hierarchical

[O.52511.01]

M hh:mm:ss xy,ww n[vv] UTL QRY SCON CH uvmnpddd[-eee] 2 LN MSG:
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

CH - Channel

TO - To designation

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical FROM NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The allowable values are presented below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number for NPC specified in input
eee - Channel number for NPC specified in input denoting end of range

The allowable values are presented below:

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

hhh - Channel number (ddd through eee)

far-end

- Far-end data in the form:

far-end	<i>Explanation</i>
[t]ghijjj/ll	Far-end FROM customer
ghijkjjj/ll	Far-end FROM customer
MPT aa	Customer is part of a multipoint circuit where aa is either MA (MASTER) or BR (BRANCH).
UASGN	Customer is unassigned
NOT_EST	Channel is not established
PCH ddd	Parity channel to data channel ddd

reason - Reason for denial

reason

UNIT qq IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED

INVALID CHANNEL NUMBER FOR CHANNEL [s]abcddd
NPC abc IS NOT A VALID NPC NUMBER

[s]abcddd-fff IS AN INVALID RANGE OF CHANNELS

NPC [s]abc IS NOT PART OF AN RT

UTL, QRY, SCON, TO

QUERY SUBRATE CROSS-CONNECT

Explanation Of Command

This Subrate message requests cross-connect circuit information at the customer (subrate circuit) level.

Command

Nonhierarchical

[I.52521]

UTL:FRM xy,SEQ ww:QRY,SCON,TO [s]abcddd[/ff]!

Hierarchical

[I.52521]

UTL:FRM xy,SEQ ww:QRY,SCON,TO uvmnpddd[/ff]!

Completion Message

Nonhierarchical

Usage: For a two-point circuit

[O.52521]

M hh:mm:ss xy,ww n[vv] UTL QRY SCON TO [s]abcddd/ff 2 LN MSG:
FROM [t]ghihhh/ll RATE rr[TLA t][UTST TP kk] COMPL

Usage: For a multipoint circuit

[O.52522]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SCON TO [s]abcddd/ff 5 LN MSG:
MPTM [t]defggg/hh RATE rr
MJU 0001 MA[ MJU tttt,u[ TLA t][ UTST TP kk]
BR1 <br_data>[ TLA t][ UTST TP kk] BR2 <br_data>[ TLA t][ UTST TP kk]
BR3 <br_data>[ TLA t][ UTST TP kk] BR4 <br_data>[ TLA t][ UTST TP kk] \
{EOM|COMPL}
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY SCON TO [s]abcddd/ff 4 LN MSG:
MJU ssss MA MJU tttt,u[ TLA t][ UTST TP kk]
BR1 <br_data>[ TLA t][ UTST TP kk] BR2 <br_data>[ TLA t][ UTST TP kk]
BR3 <br_data>[ TLA t][ UTST TP kk] BR4 <br_data>[ TLA t][ UTST TP kk] \
COMPL
```

Hierarchical

Usage: For a two-point circuit

[O.52521]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SCON TO uvmnpddd/ff 2 LN MSG:
FROM edhfgghh/ll RATE rr[ TLA t][ UTST TP kk] COMPL
```

Usage: For a multipoint circuit

[O.52522]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SCON TO uvmnpddd/ff 5 LN MSG:
MPTM wxkqrggg/hh RATE rr
MJU 0001 MA[ MJU tttt,u[ TLA t][ UTST TP kk]
BR1 <br_data>[ TLA t][ UTST TP kk] BR2 <br_data>[ TLA t][ UTST TP kk]
BR3 <br_data>[ TLA t][ UTST TP kk] BR4 <br_data>[ TLA t][ UTST TP kk] \
{EOM|COMPL}
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY SCON TO uvmnpddd/ff 4 LN MSG:
MJU ssss MA MJU tttt,u[ TLA t][ UTST TP kk]
BR1 <br_data>[ TLA t][ UTST TP kk] BR2 <br_data>[ TLA t][ UTST TP kk]
BR3 <br_data>[ TLA t][ UTST TP kk] BR4 <br_data>[ TLA t][ UTST TP kk] \
COMPL
```

Denial Message

Nonhierarchical

[O.52521.01]

M hh:mm:ss xy,ww n[vv] UTL QRY SCON TO [s]abcddd[/ff] \\
2 LN MSG:
<reason> DNY

Hierarchical

[O.52521.01]

M hh:mm:ss xy,ww n[vv] UTL QRY SCON TO uvmnpddd[/ff] \\
2 LN MSG:
<reason> DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The allowable values are presented below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number for FROM NPC specified in input
hhh - Channel number for TO NPC specified in input

The allowable values are presented below:

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - Customer (substrate circuit) number of FROM NPC
ll - Customer (substrate circuit) number of TO NPC

The allowable values are presented below:

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

[t]ghi - The 3- or 4-digit nonhierarchical NPC number

edhfg - Hierarchical NPC number
wxkqr - Hierarchical NPC number

The above definitions apply to the multipoint circuit master leg
or the FROM side of a two-point circuit. See definition of [s]abc

jjj - Channel number of multipoint circuit master leg or of FROM side of
two-point circuit.

RATE - Rate

rr - Circuit rate (24, 48, 56, 96)

MJU - Multipoint junction unit

TLA - Terminate and leave active

t - Terminate and leave status of the two-point or MJU connection.

The "TO" direction is defined as facing toward the specified facility termination or alternatively as facing toward what is connected to the specified branch or master.

t *Explanation*

F FROM

T TO

B BOTH

UTST - Under test

For a multipoint circuit, the position of the indicator "UTST" in the output message precisely identifies the point in the circuit to which a test port is connected. When specified, the indicator "UTST" implies that the circuit is under test at some point between the TO and FROM terminations.

TP - Test port

kk - Test port number (01 through 96)

MPTM - Multipoint mode

BR1 - Branch 1

BR2 - Branch 2

BR3 - Branch 3

BR4 - Branch 4

[t]def - The 3- or 4-digit nonhierarchical NPC number of the external facility termination of the multipoint master

ggg - The external facility termination channel of the multipoint master

hh - Customer (substrate circuit) number

ssss - MJU number of MJU cascaded from this branch (0002 - 9999)

tttt - MJU number connected to control leg of MJU ssss (0002 - 9999)

u - Branch number of MJU tttt (1 - 4)

br_data

- Branch leg connection data in the form:

br_data	<i>Explanation</i>
[t]ghijjj/ii	External facility termination number
jklnnhhh/ii	External facility termination number
MJU ssss	MJU number of MJU cascaded from this branch
UASGN	Branch is unassigned

The external facility termination number is composed of a hierarchical or nonhierarchical NPC number, channel number, and customer number.

reason

- Reason for denial

reason

UNIT qq IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED

INVALID CHANNEL NUMBER FOR CHANNEL [s]abcd
CHANNEL [s]abcd IS A PARITY CHANNEL
NPC abc IS NOT A VALID NPC NUMBER
CUSTOMER NUMBER MUST BE SPECIFIED FOR DS-0B

CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS-0A
CHANNEL [s]abcd
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS-0B
CHANNEL [s]abcd

CHANNEL [s]abcd/ff IS UNASSIGNED

NPC [s]abc IS NOT PART OF AN RT
CHANNEL [s]abcd IS NOT ESTABLISHED TO SR FEATURE

UTL, QRY, SCR, LINK, USER, LINKS, USERS

QUERY USER|LINK SCREENING OPTION

Explanation Of Command

This command is used to query the user/administrative link for screening options, command category, and the restricted maintenance privilege. These items are set when the user accesses the link.

The frame administrator may query any one or all users and may query the screening options for any one or all administrative links.

This command cannot be used to query users/administrative links provisioned for TABS or Modified Snider protocol since screening options do not apply to them.

The RMON/RMOFF option indicates that the user/administrative link is assigned the privilege or not assigned the privilege of issuing the commands restricted to the frame administrator. Default is RMOFF.

The restricted commands are:

```
I.37301 DLT::FPKG
I.34001 RST::MC:CLR[,ALL];
I.34001 RST::MC:TAPE;
I.34211 RST::DISK[,CLR];
I.34211 RST::[,CLR]|TAPE;
I.58001 UTL::BOOT,FRAME[, {TAPE|CLR}];
I.55701 UTL::BMTR, FROM {RAM|DISK|TAPE}{[, {EXCT|INCL}];
I.51051 UTL::CLR, BMTR;
I.38471 CHG::MSGLOG {ON|OFF}
I.57031 UTL::CLR, MSGLOG[, RSTNUM]
I.38355 CHG::ALMS, {ON|OFF}
I.38451 CHG::INTV, {ON|OFF}
```


Output from this command is sent only to the link on which the command was input.

Also, for the Message Logging feature, the logged messages will be sent to the link on which the command was input and the links with screening option 5.

Command

[I.54001]

UTL:FRM xy,SEQ ww:QRY,SCR,{LINK j[mm[-jnn]]|USER <user id>|\LINKS|USERS}!

Completion Message

For a single link or user

[O.54001]

M hh:mm:ss xy,ww n[vv] UTL QRY SCR {LINK j[mm]}|\USER <user id>} 3 LN MSG:
LANG {P|M} NPCAD {E|X|H} LEV a b c d e f {RMON|RMOFF}
SCR n[GR a b c d e f] {MCON|MCOFF} RLK {A|I} {CONVON|CONVOFF} COMPL

For a range of links or all links or users

[O.54001]

M hh:mm:ss xy,ww n[vv] UTL QRY SCR {LINK j[mm]-p[nn]|LINKS|USERS} 5 LN MSG:
{LINK j[mm]|USER <user id>} LANG {P|M} NPCAD {E|X|H} LEV a b \c d e f {RMON|RMOFF}
SCR n[GR a b c d e f] {MCON|MCOFF} RLK {A|I} {CONVON|CONVOFF}
{LINK h[ii]|USER <user id>} LANG {P|M} NPCAD {E|X|H} LEV a b \c d e f {RMON|RMOFF}
SCR n[GR a b c d e f] {MCON|MCOFF} RLK {A|I} {CONVON|CONVOFF} {EOM|COMPL}

[M hh:mm:ss xy,ww n[vv] UTL QRY SCR {LINK j[mm]-p[nn]|LINKS|USERS} e LN MSG:
[{LINK j[kk]|USER <user id>} LANG {P|M} NPCAD {E|X|H} LEV a \b c d e f {RMON|RMOFF}
SCR n[GR a b c d e f] {MCON|MCOFF} RLK {A|I} {CONVON|CONVOFF}[{EOM|COMPL}]]
{LINK p[nn]|USER <user id>} LANG {P|M} NPCAD {E|X|H} LEV a \b c d e f {RMON|RMOFF}
SCR n[GR a b c d e f] {MCON|MCOFF} RLK {A|I} {CONVON|CONVOFF} {EOM|COMPL}]

For a range of virtual circuits on an X.25 link

[O.54001]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SCR LINK jmm[-jnn] 5 LN MSG:
LINK jmm LANG {P|M} NPCAD {E|X|H} LEV a b c d e f {RMON|RMOFF}
SCR n[ GR a b c d e f] {MCON|MCOFF} RLK {A|I} {CONVON|CONVOFF}
LINK jii LANG {P|M} NPCAD {E|X|H} LEV a b c d e f {RMON|RMOFF}
SCR n[ GR a b c d e f] {MCON|MCOFF} RLK {A|I} {CONVON|CONVOFF} {EOM|COMPL}
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY SCR LINK jmm[-jnn] e LN MSG:
[LINK jkk LANG {P|M} NPCAD {E|X|H} LEV a b c d e f {RMON|RMOFF}
SCR n[ GR a b c d e f] {MCON|MCOFF} RLK {A|I} {CONVON|CONVOFF}[ {EOM|COMPL}]]
LINK jnn LANG {P|M} NPCAD {E|X|H} LEV a b c d e f {RMON|RMOFF}
SCR n[ GR a b c d e f] {MCON|MCOFF} RLK {A|I} {CONVON|CONVOFF} {EOM|COMPL}]
```

For the single link (X.25 virtual circuit) provisioned as a Facility Data Link

[O.54001]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SCR LINK jmm LANG F NPCAD {E|X|H} COMPL
```

For a range of links or all links/users, if a link (X.25 virtual circuit) is provisioned as a Facility Data Link

```
M hh:mm:ss xy,ww n[vv] UTL QRY SCR {LINK j[mm]-p[nn]|LINKS|\
USERS} e LN MSG:
LINK jmm LANG F NPCAD {E|X|H}[ {EOM|COMPL}]
```

Denial Message

[O.54001.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SCR {LINK j[mm][-jnn]| \
USER <user id>|LINKS|USERS} COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

SCR - Screening

n - Screening option number (1 - 5)

<i>n</i>	<i>Explanation</i>
1	Responses to input at the same link.
2	Responses to input at the same link and autonomous messages.
3	Responses to messages input at the same link and some specified sets of action verbs.
4	Responses to messages input at the same link and some specified sets of action verbs including autonomous messages.
5	Responses to input messages on all links and autonomous messages and message log replay if link is in MML and log retrieval is requested

LINK - Link

j [mm] - Administrative link number

j	- Physical link number (1 through 6)
mm	- Virtual circuit number (01 through 16) for j = 5 or 6

Variable j[mm] when used in combination with p[nn] denotes a range of administrative link numbers beginning with j[mm] and ending with p[nn]. In the general case j is the same value as p; that is, there is no link range. A range of links may only be specified by the Frame Administrator and may only be used for synchronous links, not the asynchronous links 1 through 4.

o[uu] - Next administrative link number in command range

g[vv] - Next administrative link number in command range

h[ii] - Next administrative link number in command range

j[kk] - Next administrative link number in command range

r[tt] - Next administrative link number in command range

s[yy] - Next administrative link number in command range

p[nn] - Administrative link number at end of command range

o,g,h,j,r,s,p	Physical link numbers (1 through 6)
uu,vv,ii,kk,tt,yy,nn	Virtual circuit numbers (01 through 16) for o, g, h, j, r, s, or p = 5 or 6

USER - User

user id

- User identifier

The user's login identifier (two to eight alphabetic characters). The frame administrator may use specify any user_id but an individual user is restricted to their own user_id.

LINKS - Links

All administrative links (frame administrator only)

USERS - Users

All users (frame administrator only)

LANG - Language

P - Program Documentation Standards (PDS)

M - HuMan-Machine Language (MML)

F - Facility Data Link (FDL)

This language may only be provisioned for a single virtual circuit on an X.25 link. A virtual circuit provisioned with this language provides a communication path between an Operations Support System and the ESF data link of a DA or TA type (ANSI) Network Processing Circuit. Such a virtual circuit is completely dedicated to this function and does not interact with other DACS II input/output (I/O) messages. Once the X.25 link is set up, provisioning this function only requires the user to specify the language "F" for the virtual circuit; no other I/O parameters apply, except for the NPC addressing (NPCAD) option.

NPCAD - NPC Addressing scheme

E - Extended 3-digit nonhierarchical NPC addressing

X - Extended 4-digit nonhierarchical NPC addressing

H - Hierarchical NPC addressing

LEV - Level

- a** - Execution priority level for circuit provisioning commands
- b** - Execution priority level for equipment provisioning commands
- c** - Execution priority level for maintenance commands
- d** - Execution priority level for test access commands
- e** - Execution priority level for monitoring commands
- f** - Execution priority level for common commands

A table giving the command verbs associated with each of the above command sets is given below.

LEV is used in combination with the command set identifiers a through f to set the execution priority level for each command set. A priority level applies to a user or link as appropriate. Priority levels range from 0 through 3. A list of these levels and their meaning is given below for a. The list for b through f is similar to the a list.

a Explanation

- 0 Commands in the command set assigned this execution priority level cannot be executed.
- 1 Highest execution priority level. Commands in the command set assigned this execution priority level will be executed before commands with priority level 2 or 3.
- 2 Middle execution priority level. Commands in the command set assigned this execution priority level will be executed before commands with priority level 3
- 3 Lowest execution priority level. Commands in the command set assigned this execution priority level will be executed after all priority level 1 and 2 commands have been executed. Level 3 is the default priority level.
- The execution priority level of the command set assigned this execution priority level is not to be changed.

Note: The commands used to login, logoff, cross-connect, stop, and abort always have the highest priority.

A single queue is used for DACS II commands. When multiple commands arrive at the same time, they will be queued for execution according to the priority assigned to their command set. Commands with the same priority will be executed in the order of arrival, that is, first come first served. A timeout feature insures that no command will wait in the queue forever. When the timeout period has expired for a given command that command will be executed regardless of its priority level.

a Circuit Prov.	b Equipment Prov.	c Maint.	d Test Access	e Monitoring	f Common
ACON	COPY	CFR	CTST	AUD	ACT
ALWSW	DGRTH	DGN	STST	UTL	ADD
BCON	DLT	RMV	TTST		ALW
BDIS	GRTH	RST			CHG
CONF					ED
INH SW					EXC
OCNT					INH
OCON					
ODIS					
OPR					
RLS					
SCNT					
SCON					
SDCH					
SDIS					
SECH					
SW					
TCNT					
TCON					
TDIS					
X					

RMON - Restricted maintenance privilege on
RMOFF - Restricted maintenance privilege off (default)

- GR** - Group
- a** - Screening level for circuit provisioning commands
 - b** - Screening level for equipment provisioning commands
 - c** - Screening level for maintenance commands
 - d** - Screening level for test access commands
 - e** - Screening level for monitoring commands
 - f** - Screening level for common commands

A table giving the command verbs associated with each of the above command sets is given in the Explanation of Message section.

The command set identifiers a through f are used to set the group screening level for each command set. Screening levels range from 0 through 1. A list of these levels and their meaning is given below for a. The list for b through f is similar to the a list.

a	Explanation
1	Output messages from other links are allowed,
0	Output messages from other links are not allowed (the screening option for commands LOGIN, LOGOFF, STOP and ABT is not changeable, and it is set to 1).

Note: Group information applies only to screening options 3 or 4; it does not appear for options 1, 2, and 5.

- MCON** - Macro component completion messages screening on
- MCOFF** - Macro component completion messages screening off

RLK - Remove link

A - Allowed

I - Inhibited

A and I are used to assign to a user or link the privilege of removing a link. There is a relationship between the link privilege and the execution priority level. If c (see previous Command Sets table) in the LEV field is set to zero then the command to remove a link cannot be executed hence the remove link privilege is inhibited even if the RLK option is set to A or I.

CONVON

- Mixed Addressing Conversion ON

CONVOFF

- Mixed Addressing Conversion OFF

This mixed addressing conversion feature is only applicable to PDS commands in an environment that uses 4-digit sequential NPC numbers. This conversion feature is useful when a DACS II frame is converted from 3-digit sequential NPC addressing to 4-digit sequential NPC addressing for growth reasons. In that case this conversion feature allows certain Operational Support Systems to use 3-digit NPC numbers, even though the frame has been changed to normally accept only 4-digit NPC numbers.

Assuming sequential NPC number usage, DACS II normally accepts only fixed length NPC numbers in its input commands. This conversion feature transfers the fixed length requirement from NPC number to channel number on a link basis. This allows the DACS II parser to accept 3- or 4-digit NPC numbers assuming that the channel number is interpreted to be of 2-digit fixed length. If a 3-digit NPC number is entered with CONVON in effect, then DACS II will internally expand 3-digit NPC numbers to 4-digit NPC numbers.

For some feature configurations this conversion feature is not available, and the CONVOFF keyword will not appear in the output of this command.

- cc** - Hexadecimal condition code

cc *Explanation*

- D0** Command is Frame administrator (DAX) only.
- D3** User does not exist
- D7** Cannot execute privileged command
- DF** Command and protocol are inconsistent
- E1** Virtual circuit is not specified for X.25 link
- E2** Invalid link number specified

UTL,QRY,SECH,TO

UTILITY QUERY

Explanation Of Command

This message requests data or information on an established channel or range of channels.

Data is printed out for the following types of channels.

- An unestablished channel.
- A DS0B channel capable of multiplexing 5, 10, or 20 Subrate customers.
- A DS0A channel (at any rate) without error correction.
- A Subrate DS0A channel with Subrate dataport error correction.
- A 56 kb/s channel with parity channel error correction.
- A DS0B channel capable of multiplexing 5, 10, or 20 Subrate customers and parity channel error correction.
- A parity channel.

Command

Nonhierarchical

[I.52501]

UTL:FRM xy,SEQ ww:QRY,SECH,TO [s]abcddd[-eee]!

Hierarchical

[I.52501]

UTL:FRM xy,SEQ ww:QRY,SECH,TO uvmnpddd[-eee]!

Completion Message

Nonhierarchical

For a single channel request

[O.52501]

M hh:mm:ss xy,ww n[vv] UTL QRY SECH [s]abcddd 3 LN MSG:
CHAN SECH TYPE ERR CORR
ddd <es_type> <err_cor> COMPL

For a range of channels

[O.52501]

M hh:mm:ss xy,ww n[vv] UTL QRY SECH [s]abcddd-eee e LN MSG:
CHAN SECH TYPE ERR CORR
ddd <es_type> <err_cor>
hhh <es_type> <err_cor>
hhh <es_type> <err_cor> EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY SECH [s]abcddd-eee e LN MSG:
hhh <es_type> <err_cor>
.
.
.
eee <es_type> <err_cor> COMPL

Hierarchical

For a single channel request

[O.52501]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SECH uvmnpddd 3 LN MSG:
CHAN SECH TYPE ERR CORR
ddd <es_type> <err_cor> COMPL
```

For a range of channels

[O.52501]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SECH uvmnpddd-eee e LN MSG:
CHAN SECH TYPE ERR CORR
ddd <es_type> <err_cor>
hhh <es_type> <err_cor>
hhh <es_type> <err_cor> EOM
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY SECH uvmnpddd-eee e LN MSG:
hhh <es_type> <err_cor>
.
.
.
eee <es_type> <err_cor> COMPL
```

Denial Message

Nonhierarchical

[O.52501.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SECH [s]abcddd[-eee] 2 LN MSG:
<reason> DNY
```

Hierarchical

[O.52501.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SECH uvmnpddd[-eee] 2 LN MSG:
<reason> DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3- or 4-digit nonhierarchical NPC number
The allowable values are presented below:

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The allowable values are presented below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number
eee - Channel number denoting end of range specification

The allowable values are presented below:

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

hhh - Channel number (ddd through eee)

es_type

- Establish type

<i>es_type</i>	<i>Explanation</i>
NOT_EST	Channel is not established
DS0A rr	DS0A channel established at rate rr (24, 48, 96, 56)
DS0B nn	DS0B channel established with subrate multiplexer type nn (5, 10, 20)
PCH	Parity channel

err_cor

- Error correction

<i>err_cor</i>	<i>Explanation</i>
SEC	Subrate error correction
PCH ppp	Parity channel error correction with parity channel ppp
DCH ggg	Data channel ggg
---	No error correction

reason

- Reason for denial

reason

UNIT qq NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED

INVALID CHANNEL NUMBER FOR CHANNEL [s]abcddd
NPC [s]abc IS NOT A VALID NPC NUMBER

NPC [s]abc IS NOT PART OF AN RT

[s]abcddd-fff IS AN INVALID RANGE OF CHANNELS

UTL, QRY, SIGST

QUERY TRUNK SIGNALING CONVERSION STATE

Explanation Of Command

This command is used to query the signaling state of a trunk which is using the E1/T1 signaling conversion feature. This feature is implemented on the Digital Signal Processing Platform (DSPP) circuit pack.

The signaling state on any given trunk will change rapidly with respect to time. This command will only take a snapshot of the state of the specified trunk. This snapshot will only be useful if the circuit is stuck in one given state. Thus it will give field personnel a way of tracking down the real problem.

Command

Nonhierarchical

[I.52601]

UTL:[FRM xy,SEQ ww]:QRY,SIGST abcddd

Hierarchical

[I.52601]

UTL:[FRM xy,SEQ ww]:QRY,SIGST uvmnpddd

Completion Message

Nonhierarchical

[O.52601]

M hh:mm:ss xy,ww n[vv] UTL QRY SIGST abcd dd TYPE mnxyz 4 LN MSG:
TRUNK E1-TRN E1-RCV T1-TRN T1-RCV SIG
DIR AB AB A A STATE
tdir ab cd e g <sigst> COMPL

Hierarchical

[O.52601]

M hh:mm:ss xy,ww n[vv] UTL QRY SIGST uv mnpddd TYPE mnxyz 4 LN MSG:
TRUNK E1-TRN E1-RCV T1-TRN T1-RCV SIG
DIR AB AB A A STATE
tdir ab cd e g <sigst> COMPL

Denial Message

Nonhierarchical

[O.52601.01]

M hh:mm:ss xy,ww n[vv] QRY SIGST abcd dd COND cc DNY

Hierarchical

[O.52601.01]

M hh:mm:ss xy,ww n[vv] QRY SIGST uv mnpddd COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SIGST - Signaling state

abcd - E1/T1 trunk termination

abc - NPC number

ddd - Channel number

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

uvmnpddd

- E1/T1 trunk termination

uv - Unit number
m - Module number
np - NPC number within the module
ddd - Channel number

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

Valid values are listed below:

ddd	<i>Explanation</i>
001-024	T1 NPC channel range
001-030	E1 NPC channel range

TYPE - Type

mxyz - NPC Type and provisioning options

tdir - Trunk direction

The direction of the trunk as viewed from this channel. A trunk will have a direction specified in the circuit provisioning command which established the cross-connection. That direction will be either "from T1 to E1" or "from E1 to T1". This represents the direction in which a call is being established on the trunk between two switches. Valid values are listed below:

tdir	<i>Explanation</i>
T1IC	T1 Incoming, Channel belongs to a T1 NPC receiving the call
T1OG	T1 Outgoing, Channel belongs to a T1 NPC originating the call
E1IC	E1 Incoming, Channel belongs to an E1 NPC receiving the call
E1OG	E1 Outgoing, Channel belongs to an E1 NPC originating the call

ab - E1 Transmitting AB signaling bits associated with this channel

cd - E1 Receiving AB signaling bits associated with this channel

e - T1 Transmitting A signaling bit associated with this channel

g - T1 Receiving A signaling bit associated with this channel

Valid values for each bit are zero or one.

sigst - Signaling state value

sigst	<i>Explanation</i>
ANS	Answer
BLK	Blocking
CLB	Clear Backward
CLF1	Clear Forward 1
CLF2	Clear Forward 2
DIL0	Dial 0
DIL1	Dial 1
IDL	Idle
SEI	Seizure
SEA	Seize Acknowledgement

Note: An asterisk (*) may be appended to any of the above states. This means that the current received signaling bit value(s) do not correspond to the current signaling state.

COND - Condition

cc - Hexadecimal condition code

cc	<i>Explanation</i>
04	Subject entity is out of service
11	UC is out of service
12	UC is in service but failed
14	FTMI is out of service
15	NPC is unequipped
1F	FTMI is in service but failed
26	NPC type error
0B	Invalid CEPT NPC
39	Signaling state of the trunk failed for the channel
40	Signaling processing is not activated for the channel
AA	DSPP pack UC Failed or Out of Service
AB	DSPP pack FTMI Failed or Out of Service
AC	DSPP pack NPC Failed or Out of Service

UTL, QRY, SQN

UTILITY QUERY SEQUENCE

Explanation Of Command

This command is used to retrieve the sequence number of the last autonomous message issued by DACS II.

Command

[I.51131]

UTL:FRM xy,SEQ ww:QRY,SQN!

Completion Message

[O.51131]

M hh:mm:ss xy,ww n[vv] UTL QRY SQN nn COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

SQN - Sequence Number

nn - two digit sequence number of the last autonomous message

UTL, QRY, SRHDW, TO

UTILITY QUERY

Explanation Of Command

This Subrate message requests a circuit/hardware trace for the customer's channel.

Command

Nonhierarchical

[I.52531]

UTL:FRM xy,SEQ ww:QRY,SRHDW,TO [s]abcddd[/ff]!

Hierarchical

[I.52531]

UTL:FRM xy,SEQ ww:QRY,SRHDW,TO uvmnpddd[/ff]!

Completion Message

Nonhierarchical

Usage: For a two-point circuit

[O.52531]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SRHDW [s]abcddd/ff 4 LN MSG:
TO [t]ghihhh/ll FROM <from>
TO: <ec> <mux>
FROM: <ec> <mux> COMPL
```

For a multipoint circuit

[O.52532]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SRHDW [s]abcddd/ff 5 LN MSG:
MPTM [t]ghihhh/ll <ec> <mux>
MJU 0001 MA NPC [u]aaa
BR1 <mju_br_data> BR2 <mju_br_data>
BR3 <mju_br_data> BR4 <mju_br_data> {EOM|COMPL}
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY SRHDW [s]abcddd/ff 4 LN MSG:
MJU ssss MA MJU tttt, BRi NPC [u]aaa
BR1 <mju_br_data> BR2 <mju_br_data>
BR3 <mju_br_data> BR4 <mju_br_data> COMPL
```

Hierarchical

Usage: For a two-point circuit

[O.52531]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SRHDW uvmnpddd/ff 4 LN MSG:
TO edfhghhh/ll FROM <from>
TO: <ec> <mux>
FROM: <ec> <mux> COMPL
```


For a multipoint circuit

[O.52532]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SRHDW uvmnpddd/ff  5 LN MSG:
MPTM edfhghhh/ll <ec>  <mux>
MJU 0001 MA NPC wxkqr
BR1 <mju_br_data>  BR2 <mju_br_data>
BR3 <mju_br_data>  BR4 <mju_br_data>      {EOM|COMPL}
```

.
.
.

```
M hh:mm:ss xy,ww n[vv] UTL QRY SRHDW uvmnpddd/ff  4 LN MSG:
MJU ssss MA MJU tttt,BRi NPC wxkqr
BR1 <mju_br_data>  BR2 <mju_br_data>
BR3 <mju_br_data>  BR4 <mju_br_data>      COMPL
```

Denial Message

Nonhierarchical

[O.52531.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SRHDW [s]abcddd[/ff]  2 LN MSG:
<reason>      DNY
```

Hierarchical

[O.52531.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SRHDW uvmnpddd[/ff]  2 LN MSG:
<reason>      DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

SRHDW - Substrate hardware

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The allowable values are presented below:

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel for NPC specified in input

The allowable values are presented below:

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

ff - Customer number

The allowable values are presented below:

01	(DS0A at 2.4, 4.8, 9.6, or 56 kb/s)
01-20	(DS0B at 2.4 kb/s)
01-10	(DS0B at 4.8 kb/s)
01-05	(DS0B at 9.6 kb/s)

[t]ghi - Nonhierarchical NPC number of multipoint circuit master leg or of FROM side of two-point circuit

edfhg - Hierarchical NPC number of multipoint circuit master leg or of FROM side of two-point circuit

hhh - Channel number of multipoint circuit master leg or of FROM side of two-point circuit

ll - Customer number of multipoint circuit master leg or of FROM side of two-point circuit

from - Far-end connection in the form:

from	<i>Explanation</i>
[v]defjjj/ii	Far-end customer
wxkqrjjj/ii	Far-end customer
UASGN	Far-end customer is not assigned

ec - Error corrector NPC number in the form:

ec	<i>Explanation</i>
SEC [w]eee	Subrate error corrector on NPC [w]eee (nonhierarchical)
PEC [w]ppp	Parity channel error corrector on NPC [w]ppp (nonhierarchical)
SEC wxkee	Subrate error corrector on NPC wx-k-ee
PEC uvlpp	Parity channel error corrector on NPC uv-l-pp
---	No error corrector applicable

mux - Subrate multiplexer NPC information in the form:

mux	<i>Explanation</i>
MUX [w]mmm	Subrate multiplexer on NPC [w]mmm (nonhierarchical)
MUX edjmm	Subrate multiplexer on NPC edjmm
---	No subrate multiplexer applicable

[s]abcdddff
- Customer for which trace was requested

[t]ghijjjll
- External facility termination of multipoint master

MJU - Multipoint junction unit

ssss - MJU number (0002 - 9999)

tttt - MJU number providing input to MJU ssss

BR - Branch

i - Branch number of MJU tttt providing signal to MJU ssss

[u]aaa - Nonhierarchical Substrate NPC number

If NPC numbers are expressed in three digits, the valid values are:

SR and MJ type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001	161	321	481	641	801
021	181	341	501	661	821
041	201	361	521	681	841
061	221	381	541	701	861
081	241	401	561	721	881
101	261	421	581	741	901
121	281	441	601	761	921
141	301	461	621	781	941

If NPC numbers are expressed in four digits, the valid values are:

SR and MJ type NPC numbers listed by unit number, Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

wxkqr - Hierarchical Subrate NPC number

wx - Unit number
k - Module number
qr - NPC number

The valid values are presented below:

SR and MJ NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

mju_br_data

- MJU branch leg data in the form:

mju_br_data

[v]rstggg/hh <ec> <mux>

Explanation

External facility termination, error corrector and multiplexer information (see above)

edrstggg/hh <ec> <mux>

External facility termination, error corrector and multiplexer information (see above)

MJU ssss

MJU number to which this branch is internally connected

UASGN

Unassigned branch

br_data

- MJU branch connection data in the form:

[v]jklfff/nn

- External facility termination of branch

jklmnfff/nn

- External facility termination of branch

MJU-ssss

- MJU number of cascaded MJU connected to branch

UASGN - Unassigned branch (ec and mux = "----")

reason - Reason for denial

reason

UNIT qq IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED

INVALID CHANNEL NUMBER FOR CHANNEL [s]abcddd
CHANNEL [s]abcddd IS A PARITY CHANNEL
NPC abc IS NOT A VALID NPC NUMBER
CUSTOMER NUMBER MUST BE SPECIFIED FOR DS0B

NPC [s]abc IS NOT PART OF AN RT
CHANNEL [s]abcddd IS NOT ESTABLISHED TO SR FEATURE

CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0A
CHANNEL [s]abcddd
CUSTOMER NUMBER ff IS OUT OF RANGE FOR DS0B
CHANNEL [s]abcddd

UTL, QRY, SROOF, TO, ALL

UTILITY QUERY

Explanation Of Command

This message requests the framing status of a Subrate multiplexer that is associated with a single DS0B channel or a range of channels or all the DS0B channels in the frame.

The DS0B channels that are reported in the output message must be established and have active cross-connections where multiple channels are listed. Also listed are the carrier group alarm and the failure status of the digroup that is associated with the DS0B channel. This allows the user to determine if the out-of-frame condition is being caused by a failure in a digroup facility or in the equipment.

Command

Nonhierarchical

[I.56501]

UTL:FRM xy,SEQ ww:QRY,SROOF,{TO [s]abcddd[-eee]|ALL}!

Hierarchical

[I.56501]

UTL:FRM xy,SEQ ww:QRY,SROOF,{TO uvmnpddd[-eee]|ALL}!

Completion Message

Nonhierarchical

[O.56501]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SROOF [s]abcddd 3 LN MSG:
CHAN          DS0B STATUS      NPC STATUS
[s]abcddd     <mux_stat>       <npc_stat>    COMPL
```

Note: The above message applies if a single channel was requested.

[O.56501]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SROOF {[s]abcddd-eee|ALL} e LN MSG:
CHAN          DS0B STATUS      NPC STATUS
[[s]abcddd    <dsob_stat>       <npc_stat>]
[[s]abcddd    <dsob_stat>       <npc_stat>]
[s]abcddd     <dsob_stat>       <npc_stat> {EOM|COMPL}
```

.

```
[M hh:mm:ss xy,ww n[vv] UTL QRY SROOF {[s]abcddd-eee|ALL} e LN MSG:]
[[s]abcddd    <dsob_stat>       <npc_stat>]
[[s]abcddd    <dsob_stat>       <npc_stat>]
[[s]abcddd    <dsob_stat>       <npc_stat>]
[[s]abceee    <dsob_stat>       <npc_stat> COMPL]
```

Note: The above message, listing all established cross-connected channels, applies if a channel range or ALL was specified.

Hierarchical

[O.56501]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SROOF uvmnpddd 3 LN MSG:
CHAN          DS0B STATUS      NPC STATUS
uvmnpddd     <mux_stat>       <npc_stat>    COMPL
```

Note: The above message applies if a single channel was requested.

[O.56501]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SROOF {uvmnpddd-eee|ALL} e LN MSG:
CHAN          DS0B STATUS          NPC STATUS
[uvmnpddd     <dsob_stat>          <npc_stat>]
[uvmnpddd     <dsob_stat>          <npc_stat>]
uvmnpddd      <dsob_stat>          <npc_stat> {EOM|COMPL}

      .
      .
      .
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY SROOF {uvmnpddd-eee|ALL} e LN MSG:]
[uvmnpddd     <dsob_stat>          <npc_stat>]
[uvmnpddd     <dsob_stat>          <npc_stat>]
[uvmnpddd     <dsob_stat>          <npc_stat>]
[uvmnppee     <dsob_stat>          <npc_stat> COMPL]
```

Note: The above message, listing all established cross-connected channels, applies if a channel range or ALL was specified.

Common

[O.56502]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SROOF ALL 2 LN MSG:
NO DS0B CHANNELS ARE OUT-OF-FRAME COMPL
```

Denial Message

Nonhierarchical

[O.56501.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY SROOF {[s]abcddd[-eee]|ALL} 2 LN MSG:
<reason> DNY
```

Note: The above message applies when there are no established DS0B channels with active cross-connections that are out-of-frame.

Hierarchical

[O.56501.01]

M hh:mm:ss xy,ww n[vv] UTL QRY SROOF {uvmnpddd[-eee]|ALL} 2 LN MSG:
<reason> DNY

Note: The above message applies when there are no established DS0B channels with active cross-connections that are out-of-frame.

Autonomous Message

Not applicable.

Explanation Of Parameters

SROOF - Subrate out-of-frame

TO - To NPC

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical substrate or multijunction NPC number

uv - Unit number
m - Module number
np - NPC number within the module

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

ddd - Channel number
eee - Channel number indicating end of channel range

001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

The reported DS0B channels must be already established, and where multiple channels are listed, the DS0Bs must have active cross-connections. This utility also lists the CGA and failure status of the digroup associated with the DS0B to enable the user to determine if the OOF condition is being caused by a digroup facility or equipment failure.

ALL - All channels

The ALL keyword cannot be used simultaneously with a single channel or a range of channels.

e - The number of lines in the segment (2 through 5)

mux_stat

- Status of DS0B multiplexer in the form:

<i>mux_stat</i>	<i>Explanation</i>
OOF	Multiplexer is out-of-frame
---	Multiplexer is in-frame

npc_stat

- Status of the facility terminating NPC specified as one or more of the following:

<i>npc_stat</i>	<i>Explanation</i>
OOS	NPC is out-of-service
FAIL	NPC is in the fail state
---	NPC is not failed, out-of-service, or in CGA
CGA <state>	NPC is in one of the following CGA state:

<i>state</i>	<i>Explanation</i>
AIS	Alarm Indication Signal
RED	Received DS-1 framing failure
YEL	Remote DS-1 framing failure
LMA	Loss of multiframe alignment
RMA	Remote multiframe alarm
FFE	Frame format error rate alarm
LFV	Loss of signal/line format
MUL	More than one CGA reported
NA - UC OOS	No access, UC is out-of-service

dsob_stat

- Status of the DS0B channel requested:

<i>dsob_stat</i>	<i>Explanation</i>
OOF	Multiplexer is out-of-frame
NA - SRM FAIL	No access, SRM is failed
NA - SRM PEST	No access, SRM is pested
NA - DSPU OOS	No access, DSPU is out-of-service
NA - DSPU FAIL	No access, DSPU is failed
NA - DSPU PEST	No access, DSPU is pested
NA - DSPI OOS	No access, DSPI is out-of-service
NA - DSPI FAIL	No access, DSPI is failed
NA - DSPI PEST	No access, DSPI is pested
CHANNEL NOT ESTABLISHED AS DS0B	
NO DS0B CHANNELS ARE OUT-OF-FRAME	

reason

- Reason for denial

reason

UNIT [q]q IS NOT EQUIPPED
NPC [s]abc IS NOT EQUIPPED

NPC [s]abc IS NOT PART OF AN RT
CHANNEL [s]abccddd IS NOT ESTABLISHED AS DS0B

[s]abccddd-fff IS AN INVALID RANGE OF CHANNELS

INVALID CHANNEL NUMBER FOR CHANNEL [s]abccddd
NPC abc IS NOT A VALID NPC NUMBER

UNIT [q]q IS OUT-OF-SERVICE
DSPI IN UNIT [q]q IS OUT-OF-SERVICE

UNIT [q]q IS FAILED
DSPI IN UNIT [q]q IS FAILED

UTL, QRY, STATE, ACO

UTILITY QUERY STATE ALARM CUT OFF

Explanation Of Command

This message queries for the active or inactive status of the alarm cutoff.

Command

[I.54340]

UTL:FRM xy,SEQ ww:QRY,STATE,ACO!

Completion Message

[O.54340]

M hh:mm:ss xy ww n[vv] UTL QRY STATE ACO <mode> COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

STATE - State

ACO - Alarm cut off

mode - Alarm mode

Current state of alarm cut off

mode

Explanation

ACTIVE

Alarm cutoff is active

INACT

Alarm cutoff is inactive

UTL, QRY, STATE, NPC

UTILITY QUERY STATE

Explanation Of Command

This command requests the provisioning and status information of a single Network Processing Circuit (NPC) or range of NPCs for one or more Facility Terminating Units (FTU) or DS3 Units (DS3U) or Hybrid DS3 units (HDS3U) or for a single Digital Signal Processing Unit (DSPU).

If the type of NPC specified is either DS1yz or DS6yz SLC carrier, the complete output message will be printed. If any other NPC type is specified, the second segment of the output format will not be printed.

In the output message, the "PREVIOUS SHORT INTERVAL" data should be ignored for the first 15 minutes following the execution of the CHG::SETOP (Message I.38201) or CHG::NPC, OPTS (Message I.38221) command. These CHG commands clear the stored data, which results in a value of zero being printed for the interval count.

Note: If the accumulated count of a parameter reaches or exceeds its programmed threshold, an autonomous alarm message is generated.

If an NPC range is specified in the input command, the following floating window rules apply:

- Unequipped NPCs within the requested range will be skipped.
- If a CEPT gap is within the requested range, the NPCs in the gap will be skipped.
- If an endpoint of the requested range is in a CEPT gap, then the NPCs in the portion of the range which is in the gap will be denied.

Command

Nonhierarchical

[I.56311]

UTL:[FRM xy,SEQ ww]:QRY,STATE,NPC [s]abc[-[t]def]!

Hierarchical

[I.56311]

UTL:[FRM xy,SEQ ww]:QRY,STATE,NPC uvmnp[-wxkqr]!

Completion Message

Nonhierarchical

Note: The first following message segment will be output for each DE and TE NPC. The second following message segment will be output in addition for DS NPCs.

[O.56311]

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [s]abc TYPE mnxyz[ RESET] IW pq 5 LN MSG:
OOS FAIL PEST CGA OOF SLIP BER ERS SERS COFA CRC BPV FRER
  a   b   c   d wwwwww fff      st ccccc bbbbbb yyyyy fffff kkkkk ggggg
THRESHOLDS                mmm nnn p q ttttt sss   ttt uu
OPTIONS                    e   f g h      i   j     k   l {COND cc COMPL|EOM}
```

```
[M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [s]abc TYPE DSxyz[ RESET] IW pq 5 LN MSG:
                SANE   SAFE
                uuuuu  vvvvv
THRESHOLDS      xxxxx  zzzzz
OPTIONS          p      q COND cc COMPL]
```

Note: The following message segment will be output for each MB, SR, and MJ NPC.

[O.56312]

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [s]abc TYPE mnxyz 2 LN MSG:
OOS a a FAIL b b PEST c c COMPL
```

Note: The following message segment will be output for each SD NPC.

[O.56313]

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [s]abc TYPE SDxyz 2 LN MSG:
OOS a FAIL b PEST c COMPL

Hierarchical

Note: The first following message segment will be output for each DE and TE NPC. The second following message segment will be output in addition for DS NPCs.

[O.56311]

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC uvmpn TYPE mnxyz[RESET] IW pq 5 LN MSG:
OOS FAIL PEST CGA OOF SLIP BER ERS SERS COFA CRC BPV FRER
a b c d wwwwww fff st ccccc bbbbbb yyyyy fffff kkkkk ggggg
THRESHOLDS mmm nnn p q ttttt sss ttt uuu
OPTIONS e f g h i j k l {COND cc COMPL|EOM}

[M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC uvmpn TYPE DSxyz[RESET] IW pq 5 LN MSG:
SANE SAFE
uuuuu vvvvv
THRESHOLDS xxxxx zzzzz
OPTIONS p q COND cc COMPL]

Note: The following message segment will be output for each MB, SR, and MJ NPC.

[O.56312]

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC uvmpn TYPE mnxyz 2 LN MSG:
OOS a a FAIL b b PEST c c COMPL

Note: The following message segment will be output for each SD NPC.

[O.56313]

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC uvmpn TYPE SDxyz 2 LN MSG:
OOS a FAIL b PEST c COMPL

Denial Message

Nonhierarchical

[O.56311.01]

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [s]abc UEQD DNY

[O.56311.02]

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [s]abc[-[t]def] COND cc DNY

Hierarchical

[O.56311.01]

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC uvmnp UEQD DNY

[O.56311.02]

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC uvmnp[-wxkqr] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit starting nonhierarchical NPC number

[t]def - The 3- or 4-digit ending nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H

Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

MB type NPC numbers listed by unit number
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001 021 041 061 081 101 121 141	NPC 161 181 201 221 241 261 281 301	NPC 321 341 361 381 401 421 441 461	NPC 481 501 521 541 561 581 601 621	NPC 641 661 681 701 721 741 761 781	NPC 801 821 841 861 881 901 921 941

If NPC numbers are expressed in four digits, the valid values are:

MB type NPC numbers listed by unit number
Unit Type DP (DSPU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001	0161	0321	0481
0021	0181	0341	0501
0041	0201	0361	0521
0061	0221	0381	0541
0081	0241	0401	0561
0101	0261	0421	0581
0121	0281	0441	0601
0141	0301	0461	0621
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641	0801	0961	1121
0661	0821	0981	1141
0681	0841	1001	1161
0701	0861	1021	1181
0721	0881	1041	1201
0741	0901	1061	1221
0761	0921	1081	1241
0781	0941	1101	1261
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281	1441	1601	1761
1301	1461	1621	1781
1321	1481	1641	1801
1341	1501	1661	1821
1361	1521	1681	1841
1381	1541	1701	1861
1401	1561	1721	1881
1421	1581	1741	1901

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921	2081	2241	2401
1941	2101	2261	2421
1961	2121	2281	2441
1981	2141	2301	2461
2001	2161	2321	2481
2021	2181	2341	2501
2041	2201	2361	2521
2061	2221	2381	2541

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Starting hierarchical NPC number
wxkqr - Ending hierarchical NPC number defined for uvmnp

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

DE and DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

MB type NPC numbers listed by unit, module, and NPC Number
Unit Type DP (DSPU)

Unit	Module	NPC
01-16	1-8	01

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

[t]ghi - The 3- or 4-digit nonhierarchical NPC number (**[s]abc** through **[t]def**)

edfgh - Hierarchical NPC number (**uvmnp** through **wxkqr**)

ed - Unit number
f - Module number
gh - NPC number

TYPE - Type

mnxyz - NPC-type identifier

<i>mn</i>	<i>Explanation</i>
DA	Dual digroup ANSI NPC
DE	Dual digroup NPC
DS	SLC® carrier NPC
TA	DS3U ANSI NPC
TE	DS3U or HDS3U Noninterface unit NPC
TH	Hybrid DS3U CEPT NPC
MB	Digital multipoint bridge NPC
MJ	Multipoint junction unit NPC
SR	Subrate multiplexer unit NPC

SD-type xyz fields (Digital Signal Processing Platform (DSPP) Applications)

SD111 X.50/X.57 International subrate application
SD311 Digital Multipoint Bridge application
SD411 North American DDS Subrate and MJU application
SDxyz Possible future applications with specific values for xyz

DE-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4, y=5, and y=6, DMI signalling.

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3†	ZBTSI - Zero-bit time-slot interchanger
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DE-type clear-DS1 NPC.

† Only valid with ESF (x = 2 or 3)

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	No channel numbering format, clear-DS1

DS-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	Not assigned
4	Not assigned
5	Not assigned
6	SLC® 96 carrier Fs
7	SLC 5 carrier ESF with data link
8-9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	Zero code suppression (ZCS)
1	No zero code suppression (NZCS)
2	Bipolar with 8 zero substitution (B8ZS)
3-9	Not assigned

z - Counting sequence format

z	<i>Explanation</i>
0	SLC 96 carrier Mode III D4 counting sequence
1	SLC 96 carrier Mode III D1D counting sequence
2	SLC 96 carrier Mode I D1D counting sequence
3	SLC Series 5 carrier D4 counting sequence
4-9	Not assigned

TE-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4 and y=5, DMI signalling.

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TE-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	No channel numbering format, clear-DS1

TA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the TA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II DS3U, the NPC must be provisioned

as NPC type TE919.

TH-Type xyz field

The provisioning values of *x*, *y*, and *z* for the TH type are shown in the following tables (a 'Y' in a column of the Table indicates that the feature at the top of the column is enabled by the corresponding (*x*, *y* or *z*) provisioning value):

Table 24-16. Provisioning values for *x*

x value	CRC-4 Mode	Automatic CRC-4
0	Y	
8		Y
B		

Table Notes:

1. The "Automatic CRC-4" is also known as CRC-4 Interworking.
2. If the CRC-4 mode is enabled (*x* value 0) the NPC will compute checksums over the transmitted data and transmit the checksum as part of the CRC-4 multiframe pattern in TS0. The NPC will also monitor the incoming CRC-4 multiframe and verify the CRC-4 checksum. If the CRC-4 multiframe cannot be found using the CRC-4 reframe algorithm, then the NPC will declare an alarm.

If the automatic CRC-4 option is selected (*x* value 8), the NPC will perform all the functions of the CRC-4 mode. However, if the CRC-4 multiframe is lost, the NPC will not declare an alarm or apply consequent actions.
3. *x* value B does not enable any of the features shown in the Table; this is a valid option.
4. Only *x* values 0, 8, and B are valid *x* values, all other *x* values will be denied.

Table 24-17. Provisioning values for y

y value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

Table Notes:

- y values 1, 3, 5, 7, A-B and E-F are unassigned (that is, invalid).
- For y values 0, 2, 4 and 6 Channel Associated Signaling (CAS) is enabled. In this mode the Telephone Channel Numbering system is always used.

If the "Convert TS16" option is selected (y values 0 and 2), the *abcd* bits of TS16 will be converted to '1111' if they are received as '0000'. This is to prevent false framing in the TS16 multiframe. If this option is not selected (y values 4 and 6), a value of '0000' in the *abcd* bits will be transmitted transparently.

If the "AIS in TS16" option is selected (y value 0 and 4), AIS will always be applied to received TS16 signaling channels on detection of RAI (Remote Alarm Indication, Bit 3 of TS0 NFW), RAIS (Remote AIS Indication, Bit 4 of TS0 NFW, if provisioned) or R16 (Remote Alarm Indication received in TS16). If this option is not selected (y values 2 and 6), AIS will not be applied on detection of RAI, RAIS, or R16.

- For y values 8 and 9 the NPC will be Non Signaling Associated (NSA). In this mode, Telephone Channel Numbering ($y=8$) or Timeslot Channel Numbering ($y=9$) may be selected.
- The NPC can be set up as a framed clear 2 Mbit/s interface ($y=C$) or as an unframed clear 2 Mbit/s interface ($y=D$). When provisioned as a clear 2 Mbit/s interface, an NPC does not modify the cross-connected data in any way. This means that the following functions are not performed in the clear 2 Mbit/s mode:
 - Outgoing CRC-4 checksum generation (applies to framed clear 2 Mbit/s interfaces with CRC-4 option enabled).
 - Remote alarm indications (line format errors are reported locally, but no alarm indicators are sent in TS0 to the remote end).

Table 24-18. Provisioning values for z

z value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	166ms	500ms	RAIS	RBER	166ms	500ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
A	Y		Y							Y
B		Y	Y							Y

Table Notes:

1. z values 8, 9, C, D, E and F are unassigned (that is, invalid).
2. For z values 1, 3, 5, 7 and B the consequent action timing is under firmware (FW) control. For z values 0, 2, 4, 6 and A the consequent action timing is under hardware (HW) control.

The G.732 consequent action of inserting the AIS in data channels is applied within 2 ms whether the timing is under HW control or FW control, but when under FW control, the AIS in data channels is overridden by the Insertion Word sourced from the Alternate Message Store (AMS) after detection of the local alarm:

in **500 ms**
if z = 1, 3 or 5
in **2496 ms**
if z = 7 or B

The Insertion Word pattern can be specified in the cross-connect command; on 2Mbit/s NPCs in a *gateway* **cross-connection** the Insertion Word always defaults to AIS.

The selection of HW or FW control is also used to provision the consequent actions on signaling bits. On detection of loss of frame (LOF) or multiframe alignment (LMA, Loss of Multiframe Alarm) error, the hardware immediately applies a signaling freeze by using the last good frame's signaling information. The signaling freeze remains in effect until two multiframes without errors are received. When HW control is used, the AIS in signaling bits is applied within 2 ms, overriding the signaling freeze. When FW control is used, the trunk conditioning pattern from the AMS overrides the signaling freeze once the 2Mbit/s NPC goes into the alarm state.

3. The Consequent Action timing also selects the time after which the **local** alarms are declared and cleared:*
- HW Control: **Both** remote and local alarms are declared and cleared in 166 ms.
- FW Control: Only remote alarms are declared and cleared in 166 ms. The **local** alarms are declared and cleared in 500 ms, **except when z = 7 or B**.
4. On the transmitting NPC, bit 3 in the NFW, the remote alarm indication (RAI), will be processed as specified in ITU-T Recommendation G.704 Section 2.3.2 (**that is, within 2 ms after detecting the failure**) when z = 0, 1, 4, 5, 6, 7, A or B. **However,** for z value 2 the set time is 166 ms and for z value 3 the set time is 500 ms. NFW bit 3 is always set to 0 for non-alarm condition and is set to 1 for alarm conditions.
5. On the transmitting NPC, if bit 4 of the NFW is used as RAIS (Remote AIS) indicator, NFW bit 4 will be set in 166 ms (for z = 4) or 500 ms (for z = 5) after AIS is detected in the received signal. The default idle state for Bit 4 is a '1'. The idle state can be changed to a '0' with the CHG::NPC,TS0 command. The bit is put into the active state by inverting the value of the idle state. Similarly, if NFW bit 4 is in the active state in the received signal, consequent actions are taken 166 ms after detecting this condition.
6. z values 6-7 and A-B enable the Minor Bit Error Rate and Signaling Freeze Delay Time Features.

Common Options (z = 6-7 or A-B)

- [i] Enable BER calculations, and when in the BER state:

DACS takes the alarm state consequent actions: sending a message, and activating appropriate alarm relays and summary LEDs.

When out of the BER state, DACS II retires the alarm state consequent actions: sends a retirement message, and deactivates appropriate alarm relays and summary LEDs.

- [ii] RAI set in 2 ms

- [iii] Signaling Freeze Delay Timing, Consequent Action Clear Timing:

z=6 or A hardware timing

z=7 or B firmware timing (SFDT=2496 ms, CACT=624 ms)

- [iv] BER alarm level = DMA

Specific Options for z= 6 or 7

- [v] RBER alarm level = MI

* Local alarms are those generated for the events: PWR, PBF, BER, AIS, LMA, and A16. Remote alarms are those generated for the events: RAI, RAIS, RBER, and R16.

[vi] NFW bit 4=RBER:

- DACS II sends a remote indicator in bit 4 (RBER) of the time slot 0 Non Frame Word (NFW) upstream to the far end 166 ms after detecting the Minor Bit Error Rate (BER) condition.

DACS II sets the RBER bit to its idle state, on clearing of the BER condition.

- DACS II detects the remote setting of the received bit 4 as an RBER condition and generates an appropriate message. Consequent actions are taken 166 ms after detecting this condition.

DACS II generates an appropriate retirement message when the received bit 4 returns to the idle state.

Specific Options for z= A or B

[vii] RBER unalarmed

[viii] NFW bit 4=disabled

NFW bit 4 is NOT used as RBER, although the local Minor Bit Error Rate (BER) condition is detected and cleared with the alarm state consequent actions.

Additionally:

- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.

The following tables provide a summary of invalid combinations of xyz for the TH type NPC.

Table 24-19. Combinations of x and y Values

Invalid xyz Combinations	Explanation
8Cz	Framed clear 2 Mbit/s (y value C) is valid for all valid x options except the one invoking automatic CRC-4 interworking. The interworking algorithm requires setting of outgoing E-bits, which is not permitted for a clear signal.
0Dz 8Dz	Unframed clear 2 Mbit/s (y value D) is only valid for x value B. This is the only x option which does not require decoding of TSO content.

Table 24-20. Combinations of *y* and *z* Values

Invalid xyz Combinations	Explanation
xC1 xC3 xC5 xC7 xCB xD1 xD3 xD5 xD7 xDB	Clear 2 Mbit/s (<i>y</i> value C or D) cannot be used with Firmware controlled Consequent Action (<i>z</i> values 1, 3, 5, 7 or B).
xD4 xD6	Unframed clear 2 Mbit/s (<i>y</i> value D) cannot be used with <i>z</i> value 4 (NFW Bit 4 used for RAIS) or with <i>z</i> value 6 (NFW Bit 4 used for RBER) because unframed clear signals cannot obtain TS0 framing.

Table Notes:

1. If framed clear 2 Mbit/s (*y* value C) is selected with *z* value 4 (NFW Bit 4 used for RAIS) only the receive side of this function will be enabled. Outgoing RAIS indicators cannot be transmitted during clear signal operation.
2. If framed clear 2 Mbit/s (*y* value C) is selected with *z* = value 6 (NFW Bit 4 used for RBER) only the receive side of this function will be enabled. Outgoing RBER indicators cannot be transmitted during clear signal operation.

There are no combinations between valid *x* and *z* values that are invalid.

MB-type xyz fields

x - Fixed at 1
y - Fixed at 0
z - Fixed at 0

SR- and MJ-type xyz fields

x - Fixed at 1
y - Fixed at 0
z - Fixed at 0

RESET - Indicates that one or more autonomous resets have occurred.

IW - Insertion word

pq - Insertion word value (Hexadecimal)

Also referred to as the Disconnect Code (DCC) or idle code. This value is inserted in the transmit direction on unassigned channels. DCC is not applicable to clear-DS1 NPCs, and is not printed. Some common disconnect codes are:

pq	<i>Explanation</i>
7F	Unassigned Channel code (UAC), the default value
18	Unassigned Multiplex Code (UMC), should only be used with type DE4yz, for a T1DM formatted facility.
FF	Per channel all ones code, needed for not connected channels in SLC [®] carrier and CPI applications.

OOS - Out-of-Service

a - Out of Service flag, applies to FTU NPCs and DSP NPCs on Side 0

a - Out of Service flag, applies to DSP NPCs on Side 1

<i>a, a</i>	<i>Explanation</i>
1	Out-of-service
0	Not Out-of-service

FAIL - Fail

b - Failed flag, applies to FTU NPCs and DSP NPCs on Side 0

b - Failed flag, applies to DSP NPCs on Side 1

<i>b, b</i>	<i>Explanation</i>
1	Failed
0	Not failed

PEST - Pest

- c** - Pested flag, applies to FTU NPCs and DSP NPCs on Side 0
- c** - Pested flag, applies to DSP NPCs on Side 1

c, c Explanation

- 1** Pested
- 0** Not pested

CGA - Carrier group alarm

- d** - Carrier Group Alarm flag

d Explanation

- 0** No CGA
- A** Alarm Indication Signal (AIS) CGA (non-alarmed)
- B** Both Yellow and Red CGA (SLC Series 5 NPCs only)
- L** LMA - Local Multiframe Alarm
- M** RMA - Remote Multiframe Alarm
- R** Red CGA
- Y** Yellow CGA

Note: The facility monitoring parameters accumulated by the NPC are described below. If the queried NPC cannot be accessed for some reason, for example because the Facility Terminating Module is not equipped or the FTMI or Unit Controller is out of service, then the NPC's parameter count fields are printed as a string of dashes to indicate that the counts are not available. The parameter thresholds and options are still correctly output in this case.

In addition, some parameters are not applicable to all NPCs. Certain parameters may or may not be collected based on NPC type, whether the NPC is equipped in a Facility Terminating Unit (DE type NPC) or a DS3U or a HDS3U (TE type NPC) and whether the NPC carries a Clear or Channelized facility. In the cases where specific parameters do not apply to the queried NPC, the respective parameter count fields, threshold values and threshold options are all displayed as a string of dashes.

00F - Out-of-Frame

www - Out-of-Frame count

SLIP - Slip

fff - Slip count

mmm - Slip major alarm threshold (0 through 255)

The value zero indicates that Slip major threshold crossing alarms are disabled.

e - Slip major alarm option selection (0 through 3)

nnn - Slip minor alarm threshold (0 through 255)

A value of 000 indicates that the Slip minor threshold crossing alarms are disabled. The Slip minor alarm threshold can not be set to zero unless the Slip major alarm threshold is first set to zero. When the slip minor and major thresholds are not disabled, the major threshold must be greater than the minor threshold.

f - Slip minor alarm option selection (0 through 3)

BER - Bit error rate

st - BER alarm status

st	<i>Explanation</i>

CL	BER alarm cleared

ER	Error Rate

MJ	Major Bit Error Rate

MN	Minor Bit Error Rate

p - BER major alarm threshold, (1E-p, p can range from 3 through 6*)

q - BER minor alarm threshold, (1E-q, q can range from 3 through 6*)

Note: * p can range to 7 on T1DM and Fe framing

q ranges from 4 for TG80B or TG186 circuit pack provisioned as clear-DS1

g - BER major alarm option selection (0 through 3)

h - BER minor alarm option selection (0 through 3)

Note: Major thresholds may not be equal to minor thresholds.

ERS - Errored Seconds

cccc - ERS count

tttt - ERS threshold

i - ERS option selection (0 through 3)

SERS - Severely Errored Seconds

bbbb - SERS count

sss - SERS threshold (1 through 255)

j - SERS option selection (0 through 3)

COFA - Change of frame alignment

yyyy - COFA count

ttt - COFA major alarm threshold (1 through 511)

k - COFA major alarm option selection (0 through 3)

uuu - COFA minor alarm threshold (1 through 255)

l - COFA minor alarm option selection (0 through 3)

Note: Major thresholds may not be equal to minor thresholds.

BPV - Bipolar violation

kkkk - BPV count

Note: This field will be filled with ----- for a TE type NPC.

SANE - Shelf alarm near end

uuuuu - SANE count

xxxxx - SANE threshold (1 through 65535)

p - SANE alarm option selection (0 through 3)

SAFE - Shelf alarm far end

Note: The SAFE parameter is not applicable for the Digroup P (DGP) of SLC 96 RTs. Therefore, dashes ("-") are used in the SAFE count (vvvvv), threshold (zzzzz), and option (q) fields for NPCs provisioned as SLC 96 DGPs.

vvvvv - SAFE count

zzzzz - SAFE threshold (1 through 65535)

q - SAFE alarm option selection (0 through 3)

ab - Spare international bits S_i

If the NPC is not provisioned for the CRC multiframe format, bits **a** and **b** shall represent the S_i bits in the Frame Word (FW) and the Non Frame Word (NFW), respectively.

If the NPC is provisioned for the CRC multiframe format, **a** and **b** shall represent the S_i bits in frames 13 and 15 of the CRC multiframe in the NFW, respectively.

c - Remote Alarm Indication

de - Two spare national bits S_4 through S_5 in the NFW.

f - RPSFI (Remote Power Supply Failure Indicator) bit in the NFW if provisioned for RPSFI otherwise spare national bit.

gh - Two spare national bits S_7 through S_8 in the NFW

Valid values for a through h are described below:

Bit

value Explanation

0 Transmitted bit set to binary "0"

1 Transmitted bit set to binary "1"

P Pass-through: the received bit will be cross-connected unchanged.

ab - Spare international bits S_i

If the NPC is not provisioned for the CRC multiframe format, bits **a** and **b** shall represent the S_i bits in the Frame Word (FW) and the Non Frame Word (NFW), respectively.

If the NPC is provisioned for the CRC multiframe format, **a** and **b** shall represent the S_i bits in frames 13 and 15 of the CRC multiframe in the NFW, respectively.

c - Remote Alarm Indication

de - Two spare national bits S_4 through S_5 in the NFW.

f - RPSFI (Remote Power Supply Failure Indicator) bit in the NFW if provisioned for RPSFI otherwise spare national bit.

gh - Two spare national bits S_7 through S_8 in the NFW

Valid values for bits **a** through **h** are described below:

<i>Bit value</i>	<i>Explanation</i>
0	Do not monitor and therefore do not send a message if this bit changes state
1	Monitor and therefore send a message if this bit changes state
0	NPC is not in TSOM buffer overflow condition
1	NPC is in TSOM buffer overflow condition

cc - Hexadecimal condition code

cc	<i>Explanation</i>
00	No conditions
04	Subject entity is out of service
11	UC is out of service
12	UC is in service but failed
14	FTMI is out of service
1F	FTMI is in service but failed
0B	Invalid CEPT NPC
46	NPC Failed or Out of Service
AE	MXR is failed
AF	MIU is failed
B1	FMT is out of service
B2	MXR is out of service
CF	MIU is out of service

UTL,QRY,STATE,NPC

UTILITY QUERY NPC STATE

Explanation Of Command

This command requests the provisioning and status information of a single Network Processing Circuit (NPC) or range of NPCs. The output format shown in this message applies to DA and TA type NPCs in one or more Facility Terminating Unit(s) (FTU) or DS3 Units (DS3U), it also applies to TH type NPCs in a Hybrid DS3U.

If an NPC range is specified in the input command, the following floating window rules apply:

- Unequipped NPCs within the requested range will be skipped.
- For gateway frames, if a CEPT gap is within the requested range, the NPCs in the gap will be skipped.
- For gateway frames, if an endpoint of the requested range is in a CEPT gap, then the NPCs in the portion of the range which is in the gap will be denied.

NOTE: Similar information for other NPC types are given by message 56311.

Command

Nonhierarchical

[I.56314]

UTL:FRM xy,SEQ ww:QRY,STATE,NPC [s]abc[-[t]def]!

Hierarchical

[I.56314]

UTL:FRM xy,SEQ ww:QRY,STATE,NPC uvmnp[-wxqr]!

Completion Message

Nonhierarchical

For DA and TA type NPCs:

[O.56314]

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [t]ghi TYPE mnxyz[IW pq] 3 LN MSG:
OOS FAIL PEST CGA LOS NE-STATUS FE-STATUS
q r s t u furyatlo fumcablo EOM

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [t]ghi TYPE mnxyz[IW pq] 5 LN MSG:
DAILY NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
COUNTS aaaaaaaaa bbbbbb ccccc dddd eeeee fffff gggggggg hhhh iiii
THRESHOLDS aaaaaaaaa bbbbbb ccccc dddd eeeee fffff gggggggg hhhh iiii
OPTIONS a b c d e f g h i EOM

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [t]ghi TYPE mnxyz[IW pq] 5 LN MSG:
DAILY FE CVP ESP SESP SEFS CSSP UASP ESL
COUNTS jjjjjjjj kkkkk llll mmmm nnnn ooooo ppppp
THRESHOLDS jjjjjjjj kkkkk llll mmmm nnnn ooooo ppppp
OPTIONS j k l m n o p EOM

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [t]ghi TYPE mnxyz[IW pq] 5 LN MSG:
15MIN NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
COUNTS aaaaaaa bbb ccc ddd eee fff ggggggg hhh iiii
THRESHOLDS aaaaaaa bbb ccc ddd eee fff ggggggg hhh iiii
OPTIONS a b c d e f g h i EOM

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [t]ghi TYPE mnxyz[IW pq] 5 LN MSG:
15MIN FE CVP ESP SESP SEFS CSSP UASP ESL
COUNTS jjjjjjj kkk lll mmm nnn ooo ppp
THRESHOLDS jjjjjjj kkk lll mmm nnn ooo ppp
OPTIONS j k l m n o p COND kk COMPL

For TH type NPCs:

[O.56314]

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [t]ghi TYPE mnxyz[ IW pqr] 5 LN MSG:
OOS FAIL PEST CRCST FEPM SYNSRC CAS LPBK THMOD AISPROV ERB
q r s u v w x df z ttt ccc
PBA LOS LOF AIS EER RAI LMA LCMA BER A16 RAIS RBER RMA SFI PFWOOF FLCMA
p y y y y y y y y y y y y y y y
PBA RPSFI
p y EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [t]ghi TYPE mnxyz[ IW pqr] 5 LN MSG:
DAILY CRC FRER OFS ES SES CSS CV
COUNTS aaaaaaa bbbbbbbb ccccc dddd eeee ffff gggggggg
THRESHOLDS aaaaaaa bbbbbbbb ccccc dddd eeee ffff gggggggg
OPTIONS a b c d e f g EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [t]ghi TYPE mnxyz[ IW pqr] 5 LN MSG:
DAILY UAS UATC MER FEBE FES FSES FUAS
COUNTS hhhh iii jjjj kkkkkkk llll mmmm nnnn
THRESHOLDS hhhh iii jjjj kkkkkkk llll mmmm nnnn
OPTIONS h i j k l m n EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [t]ghi TYPE mnxyz[ IW pqr] 5 LN MSG:
15MIN CRC FRER OFS ES SES CSS CV
COUNTS aaaaaa bbbbbbb ccc ddd eee fff ggggggg
THRESHOLDS aaaaaa bbbbbbb ccc ddd eee fff ggggggg
OPTIONS a b c d e f g EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [t]ghi TYPE mnxyz[ IW pqr] 5 LN MSG:
15MIN UAS UATC MER FEBE FES FSES FUAS
COUNTS hhh ii jjj kkkkkk lll mmm nnn
THRESHOLDS hhh ii jjj kkkkkk lll mmm nnn
OPTIONS h i j k l m n EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [t]ghi TYPE mnxyz[ IW pqr] 2 LN MSG:
TS0 abcdefgh TS0M abcdefgh TS0MBOFL v COND kk COMPL
```

Note that parameters CV, FEBE, FES, FSES and FUAS are not applicable for the TH type NPCs.

Hierarchical

For DA and TA type NPCs:

[O.56314]

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC edhfg TYPE mnxyz[IW pq] 3 LN MSG:
OOS FAIL PEST CGA LOS NE-STATUS FE-STATUS
q r s t u furyatlo fumcablo EOM

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC edhfg TYPE mnxyz[IW pq] 5 LN MSG:
DAILY NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
COUNTS aaaaaaaaaa bbbbbb ccccc dddd eeeee fffff gggggggg hhhh iiiii
THRESHOLDS aaaaaaaaaa bbbbbb ccccc dddd eeeee fffff gggggggg hhhh iiiii
OPTIONS a b c d e f g h i EOM

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC edhfg TYPE mnxyz[IW pq] 5 LN MSG:
DAILY FE CVP ESP SESP SEFS CSSP UASP ESL
COUNTS jjjjjjjj kkkkk llll mmmm nnnn ooooo ppppp
THRESHOLDS jjjjjjjj kkkkk llll mmmm nnnn ooooo ppppp
OPTIONS j k l m n o p EOM

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC edhfg TYPE mnxyz[IW pq] 5 LN MSG:
15MIN NE CVP ESP SESP SEFS CSSP UASP CVL ESL SESL
COUNTS aaaaaaa bbb ccc ddd eee fff ggggggg hhh iii
THRESHOLDS aaaaaaa bbb ccc ddd eee fff ggggggg hhh iii
OPTIONS a b c d e f g h i EOM

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC edhfg TYPE mnxyz[IW pq] 5 LN MSG:
15MIN FE CVP ESP SESP SEFS CSSP UASP ESL
COUNTS jjjjjjj kkk lll mmm nnn ooo ppp
THRESHOLDS jjjjjjj kkk lll mmm nnn ooo ppp
OPTIONS j k l m n o p COND kk COMPL

For TH type NPCs:

[O.56314]

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC edhfg TYPE mnxyz[ IW pqr] 5 LN MSG:
OOS FAIL PEST CRCST FEPM SYNSRC CAS LPBK THMOD AISPROV ERB
q r s u v w x df z ttt ccc
PBA LOS LOF AIS EER RAI LMA LCMA BER A16 RAIS RBER RMA SFI PFWOOF FLCMA
p y y y y y y y y y y y y y y y
PBA RPSFI
p y EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC edhfg TYPE mnxyz[ IW pqr] 5 LN MSG:
DAILY CRC FRER OFS ES SES CSS CV
COUNTS aaaaaaaa bbbbbbbbb ccccc dddd eeee ffff gggggggg
THRESHOLDS aaaaaaaa bbbbbbbbb ccccc dddd eeee ffff gggggggg
OPTIONS a b c d e f g EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC edhfg TYPE mnxyz[ IW pqr] 5 LN MSG:
DAILY UAS UATC MER FEBE FES FSES FUAS
COUNTS hhhh iii jjjj kkkkkkk llll mmmm nnnn
THRESHOLDS hhhh iii jjjj kkkkkkk llll mmmm nnnn
OPTIONS h i j k l m n EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC edhfg TYPE mnxyz[ IW pqr] 5 LN MSG:
15MIN CRC FRER OFS ES SES CSS CV
COUNTS aaaaaa bbbbbbb ccc ddd eee fff gggggg
THRESHOLDS aaaaaa bbbbbbb ccc ddd eee fff gggggg
OPTIONS a b c d e f g EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC edhfg TYPE mnxyz IW pqr 5 LN MSG:
15MIN UAS UATC MER FEBE FES FSES FUAS
COUNTS hhh ii jjj kkkkkk lll mmm nnn
THRESHOLDS hhh ii jjj kkkkkk lll mmm nnn
OPTIONS h i j k l m n EOM
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC edhfg TYPE mnxyz[ IW pqr] 2 LN MSG:
TS0 abcdefgh TS0M abcdefgh TS0MBOFL v COND kk COMPL
```

Note that parameters CV, FEBE, FES, FSES and FUAS are not applicable for the TH type NPCs.

Denial Message

Nonhierarchical

[O.56314.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC [t]ghi COND cc DNY
```

Hierarchical

[O.56314.01]

M hh:mm:ss xy,ww n[vv] UTL QRY STATE NPC edhfg COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network Processing Circuit

[s]abc - The first 3- or 4-digit nonhierarchical NPC Number of a range
[t]def - The last 3- or 4-digit nonhierarchical NPC Number of a range
[t]ghi - A 3- or 4-digit nonhierarchical NPC number ([s]abc through [t]def)

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - The first hierarchical NPC number of a range
wxkqr - The last hierarchical NPC number of a range
edhfg - A 3- or 4-digit hierarchical NPC number (uvmnp through wxkqr)

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

mnxyz - NPC type

DAxyz - FTU ANSI NPC
TAxyz - DS3U ANSI NPC

DA-type xyz fields

x - Multiframe format for the digroup

x	Explanation
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y Explanation

- 0** ZCS - Zero code suppression
- 1*** NZCS - No zero code suppression
- 2*** B8ZS - Bipolar with 8 zero substitution
- 3** Not assigned
- 4** ZCS/DMI - Zero code suppression/DMI signaling
- 5** NZCS/DMI - No zero code suppression/DMI signaling
- 6** B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
- 7-9** Not assigned

* Only options 1 and 2 are applicable to DA-type clear-DS1 NPC.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z Explanation

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** Unchannelized Framed Clear DS1 Cross-connection

DA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a DA NPC with both a valid framing format (D4, ESF, T1DM) using the x field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the z field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the DA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II FTU, the NPC must be provisioned as NPC type **DE9y9**.

Zero Byte Time Slot Interchange (ZBTSI) encoding is not supported by the DA NPC type. If ZBTSI is desired on an NPC in a DACS II FTU, the NPC must be provisioned as a DE NPC type with its y option selecting ZBTSI (**DEx3z**).

TA-type xyz fields

x - Multiframe format for the digroup

x	Explanation
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	Explanation
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	Explanation
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the TA NPC type. If an unframed Clear DS1

cross-connection is desired on an NPC in a DACS II DS3U, the NPC must be provisioned as NPC type TE919.

IW - Insertion Word

pq - Hexadecimal value of the DCC (disconnect code)

This value is inserted in the transmit direction on unassigned channels. DCC is not applicable to Clear-DS1 NPCs, and is not printed. Although any 2-digit hexadecimal code may be specified, the following are commonly used codes:

<i>pq</i>	<i>Explanation</i>
7F	UAC (Unassigned Channel code), the default value.
18	UMC (Unassigned Multiplex Code), should only be used with types DA4yz and TA4yz, for a T1DM formatted facility.

OOS - Out-of-Service

q - Out-of-service indicator

<i>q</i>	<i>Explanation</i>
1	NPC is out-of-service
0	NPC is not out-of-service

FAIL - Failed

r - Failed indicator

<i>r</i>	<i>Explanation</i>
1	NPC is failed
0	NPC is not failed

PEST - Pested

s - Pested indicator

<i>s</i>	<i>Explanation</i>
1	NPC is pested
0	NPC is not pested

CGA - Carrier group alarm

t - Carrier group alarm indicator

<i>t</i>	<i>Explanation</i>
A	Alarm Indication Signal (AIS) CGA
L	LMA - Local Multiframe Alarm
M	RMA - Remote Multiframe Alarm
O	No CGA
R	Red CGA
Y	Yellow CGA

LOS - Loss of signal
u - Loss of signal indicator

<i>u</i>	<i>Explanation</i>
1	LOS alarm
0	No LOS alarm
-	Not applicable

Note: The LOS alarm indicator is displayed as a dash for ANSI NPCs which are equipped in a DS3 Unit (TA type NPCs) because the LOS alarm does not apply to them. TA type NPCs cannot monitor DS1 line failures (LOS) because the line signal is at the DS3 rate.

NE-STATUS

- Near-end Circuit Status

furyatlo

- The bits in the near-end byte identify the following alarm/status conditions:

<i>Field</i>	<i>Explanation</i>
f	f = 1, if u or r or y or a or t or l or o = 1
u	u = 1, if an unavailable signal status exists
r	r = 1, if a Red-CGA exists
y	y = 1, if a Yellow-CGA exists
a	a = 1, if an AIS-CGA exists
t	t = 0, (unused)
l	l = 1, if a payload loopback or test signal is active
o	o = 0, (unused)

FE-STATUS

- Far-end Circuit Status

fumcablo

- The bits in the far-end byte identify the following alarm/status conditions:

<i>Field</i>	<i>Explanation</i>
f	f = 1, if u or m or c or a or b or l or o = 1
u	u = 1, if a far-end unavailable signal status exists
m	m = 1, if no ANSI PRMs or RAI has been received for 4.5 seconds
c	c = 1, if loopback retention code is being received
a	a = 1, if a far-end AIS-CGA or Red-CGA exists
b	b = 1, if loopback retention code is being transmitted
l	l = 1, if a far-end payload loopback is active
o	o = 0, (unused)

<i>Parameter</i>	<i>Explanation</i>
CVP	Path Coding Violations
CVL	Line Coding Violations
ESP	Path Errored Seconds
ESL	Line Errored Seconds
SESP	Path Severely Errored Seconds
SESL	Line Severely Errored Seconds
SEFS	Severely Errored Framing Seconds
CSSP	Path Controlled Slip Seconds
UASP	Path Unavailable Seconds

Note: If the queried NPC cannot be accessed for some reason, for example because the Facility Terminating Module is not equipped or the FTMI or Unit Controller is out of service, then the NPC's parameter count fields are printed as a string of dashes to indicate that the counts are not available. The parameter thresholds and options will still be correctly output.

In addition, certain parameters do not apply to ANSI NPCs depending on whether the NPC is equipped in a Facility Terminating Unit (DA type NPCs) or a DS3 Unit (TA type NPCs) and whether the NPC is using ESF framing or not. In the cases where specific parameters do not apply to the queried NPC, the respective parameter count fields, threshold values and threshold options are all displayed as a string of dashes. Specifically:

For Channelized and Clear-DS1 DA type NPCs with ESF framing, all of the Near-end and Far-end parameters are valid.

For Channelized and Clear-DS1 DA type NPCs with D4 or T1DM framing, all of the Near-end parameters are valid, but the only valid Far-end parameter is Unavailable Seconds.

For Channelized and Clear-DS1 TA type NPCs with ESF framing, all of the Near-end Path parameters are valid, but the Near-End Line parameters are invalid. All of the Far-end parameters are valid.

For Channelized and Clear-DS1 TA type NPCs with D4 or T1DM framing, the Near-end Path parameters are valid, but the Near-End Line parameters are invalid. The only valid Far-end parameter is Unavailable Seconds.

CVP (Path Coding Violations)

aaaaaaa[aa]

- CVP NE 15 Minute/Daily interval count

jjjjjjj[jj]

- CVP FE 15 Minute/Daily interval count

aaaaaaa[aa]

- CVP NE 15 Minute/Daily interval threshold

jjjjjjj[jj]

- CVP FE 15 Minute/Daily interval threshold

a - CVP NE 15 Minute/Daily interval threshold option (0 to 3)

j - CVP FE 15 Minute/Daily interval threshold option (0 to 3)

ESP (Path Errored Seconds)

bbb[bb]

- ESP NE 15 Minute/Daily interval count

kkk[kk]

- ESP FE 15 Minute/Daily interval count

bbb[bb]

- ESP NE 15 Minute/Daily interval threshold

kkk[kk]

- ESP FE 15 Minute/Daily interval threshold

b - ESP NE 15 Minute/Daily interval threshold option (0 to 3)

k - ESP FE 15 Minute/Daily interval threshold option (0 to 3)

SESP (Path Severely Errored Seconds)

ccc[cc]

- SESP NE 15 Minute/Daily interval count

lll[ll]

- SESP FE 15 Minute/Daily interval count

ccc[cc]

- SESP NE 15 Minute/Daily interval threshold

lll[ll]

- SESP FE 15 Minute/Daily interval threshold

c - SESP NE 15 Minute/Daily interval threshold option (0 to 3)

l - SESP FE 15 Minute/Daily interval threshold option (0 to 3)

SEFS (Severely Errored Framing Seconds)

ddd[dd]
- SEFS NE 15 Minute/Daily interval count
mmm[mm]
- SEFS FE 15 Minute/Daily interval count
ddd[dd]
- SEFS NE 15 Minute/Daily interval threshold
mmm[mm]
- SEFS FE 15 Minute/Daily interval threshold
d - SEFS NE 15 Minute/Daily interval threshold option (0 to 3)
m - SEFS FE 15 Minute/Daily interval threshold option (0 to 3)

CSSP (Path Controlled Slip Seconds)

eee[ee]
- CSSP NE 15 Minute/Daily interval count
nnn[nn]
- CSSP FE 15 Minute/Daily interval count
eee[ee]
- CSSP NE 15 Minute/Daily interval threshold
nnn[nn]
- CSSP FE 15 Minute/Daily interval threshold
e - CSSP NE 15 Minute/Daily interval threshold option (0 to 3)
n - CSSP FE 15 Minute/Daily interval threshold option (0 to 3)

UASP (Path Unavailable Seconds)

fff[ff]
- UASP NE 15 Minute/Daily interval count
ooo[oo]
- UASP FE 15 Minute/Daily interval count
fff[ff]
- UASP NE 15 Minute/Daily interval threshold
ooo[oo]
- UASP FE 15 Minute/Daily interval threshold
f - UASP NE 15 Minute/Daily interval threshold option (0 to 3)
o - UASP FE 15 Minute/Daily interval threshold option (0 to 3)

CVL (Line Coding Violations)

ggggggg[gg]
- CVL NE 15 Minute/Daily interval count
ggggggg[gg]
- CVL NE 15 Minute/Daily interval threshold
g - CVL NE 15 Minute/Daily interval threshold option (0 to 3)

ESL (Line Errored Seconds)

hhh[hh]

- ESL NE 15 Minute/Daily interval count

ppp[pp]

- ESL FE 15 Minute/Daily interval count

hhh[hh]

- ESL NE 15 Minute/Daily interval threshold

ppp[pp]

- ESL FE 15 Minute/Daily interval threshold

h

- ESL NE 15 Minute/Daily interval threshold option (0 to 3)

p

- ESL FE 15 Minute/Daily interval threshold option (0 to 3)

SESL (Line Severely Errored Seconds)

iii[ii]

- SESL NE 15 Minute/Daily interval count

iii[ii]

- SESL NE 15 Minute/Daily interval threshold

i

- SESL NE 15 Minute/Daily interval threshold option (0 to 3)

For TH type NPCs:

NPC - Network Processing Circuit

If an NPC range is specified in the input command, unequipped NPCs within the requested range will be skipped.

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - The first hierarchical NPC number of a range.

wxkqr - The last hierarchical NPC number of a range.

edhfg - A 3- or 4-digit hierarchical NPC number, where
(uvmnp ≤ edhfg ≤ wxkqr)

uv, wx - Unit number

m, k - Module number

np, qr - NPC number within the module

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

mnxyz - NPC type

THxyz - HDS3U CEPT NPC type

TH-Type xyz field

The provisioning values of x, y, and z for the TH type are shown in the following tables (a 'Y' in a column of the Table indicates that the feature at the top of the column is enabled by the corresponding (x, y or z) provisioning value):

Table 24-21. Provisioning values for x

x value	CRC-4 Mode	Automatic CRC-4
0	Y	
8		Y
B		

Table Notes:

1. The "Automatic CRC-4" is also known as CRC-4 Interworking.
2. If the CRC-4 mode is enabled (x value 0) the NPC will compute checksums over the transmitted data and transmit the checksum as part of the CRC-4 multiframe pattern in TS0. The NPC will also monitor the incoming CRC-4 multiframe and verify the CRC-4 checksum. If the CRC-4 multiframe cannot be found using the CRC-4 reframe algorithm, then the NPC will declare an alarm.

If the automatic CRC-4 option is selected (x value 8), the NPC will perform all the functions of the CRC-4 mode. However, if the CRC-4 multiframe is lost, the NPC will not declare an alarm or apply consequent actions.

3. x value B does not enable any of the features shown in the Table; this is a valid option.
4. Only x values 0, 8, and B are valid x values, all other x values will be denied.

Table 24-22. Provisioning values for y

y value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

Table Notes:

1. y values 1, 3, 5, 7, A-B and E-F are unassigned (that is, invalid).
2. For y values 0, 2, 4 and 6 Channel Associated Signaling (CAS) is enabled. In this mode the Telephone Channel Numbering system is always used.

If the "Convert TS16" option is selected (y values 0 and 2), the *abcd* bits of TS16 will be converted to '1111' if they are received as '0000'. This is to prevent false framing in the TS16 multiframe. If this option is not selected (y values 4 and 6), a value of '0000' in the *abcd* bits will be transmitted transparently.

If the "AIS in TS16" option is selected (y value 0 and 4), AIS will always be applied to received TS16 signaling channels on detection of RAI (Remote Alarm Indication, Bit 3 of TS0 NFW), RAIS (Remote AIS Indication, Bit 4 of TS0 NFW, if provisioned) or R16 (Remote Alarm Indication received in TS16). If this option is not selected (y values 2 and 6), AIS will not be applied on detection of RAI, RAIS, or R16.

3. For y values 8 and 9 the NPC will be Non Signaling Associated (NSA). In this mode, Telephone Channel Numbering ($y=8$) or Timeslot Channel Numbering ($y=9$) may be selected.
4. The NPC can be set up as a framed clear 2 Mbit/s interface ($y=C$) or as an unframed clear 2 Mbit/s interface ($y=D$). When provisioned as a clear 2 Mbit/s interface, an NPC does not modify the cross-connected data in any way. This means that the following functions are not performed in the clear 2 Mbit/s mode:
 - Outgoing CRC-4 checksum generation (applies to framed clear 2 Mbit/s interfaces with CRC-4 option enabled).
 - Remote alarm indications (line format errors are reported locally, but no alarm indicators are sent in TS0 to the remote end).

Table 24-23. Provisioning values for z

z value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	166ms	500ms	RAIS	RBER	166ms	500ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
A	Y		Y							Y
B		Y	Y							Y

Table Notes:

1. z values 8, 9, C, D, E and F are unassigned (that is, invalid).
2. For z values 1, 3, 5, 7 and B the consequent action timing is under firmware (FW) control. For z values 0, 2, 4, 6 and A the consequent action timing is under hardware (HW) control.

The G.732 consequent action of inserting the AIS in data channels is applied within 2 ms whether the timing is under HW control or FW control, but when under FW control, the AIS in data channels is overridden by the Insertion Word sourced from the Alternate Message Store (AMS) after detection of the local alarm:

in **500 ms**
if z = 1, 3 or 5
in **2496 ms**
if z = 7 or B

The Insertion Word pattern can be specified in the cross-connect command; on 2Mbit/s NPCs in a *gateway* **cross-connection** the Insertion Word always defaults to AIS.

The selection of HW or FW control is also used to provision the consequent actions on signaling bits. On detection of loss of frame (LOF) or multiframe alignment (LMA, Loss of Multiframe Alarm) error, the hardware immediately applies a signaling freeze by using the last good frame's signaling information. The signaling freeze remains in effect until two multiframes without errors are received. When HW control is used, the AIS in signaling bits is applied within 2 ms, overriding the signaling freeze. When FW control is used, the trunk conditioning pattern from the AMS overrides the signaling freeze once the 2Mbit/s NPC goes into the alarm state.

3. The Consequent Action timing also selects the time after which the **local** alarms are declared and cleared:*
- HW Control: **Both** remote and local alarms are declared and cleared in 166 ms.
- FW Control: Only remote alarms are declared and cleared in 166 ms. The **local** alarms are declared and cleared in 500 ms, **except when z = 7 or B.**
4. On the transmitting NPC, bit 3 in the NFW, the remote alarm indication (RAI), will be processed as specified in ITU-T Recommendation G.704 Section 2.3.2 (**that is, within 2 ms after detecting the failure**) when z = 0, 1, 4, 5, 6, 7, A or B. **However,** for z value 2 the set time is 166 ms and for z value 3 the set time is 500 ms. NFW bit 3 is always set to 0 for non-alarm condition and is set to 1 for alarm conditions.
5. On the transmitting NPC, if bit 4 of the NFW is used as RAIS (Remote AIS) indicator, NFW bit 4 will be set in 166 ms (for z = 4) or 500 ms (for z = 5) after AIS is detected in the received signal. The default idle state for Bit 4 is a '1'. The idle state can be changed to a '0' with the CHG::NPC,TS0 command. The bit is put into the active state by inverting the value of the idle state. Similarly, if NFW bit 4 is in the active state in the received signal, consequent actions are taken 166 ms after detecting this condition.
6. z values 6-7 and A-B enable the Minor Bit Error Rate and Signaling Freeze Delay Time Features.

Common Options (z = 6-7 or A-B)

- [i] Enable BER calculations, and when in the BER state:

DACS takes the alarm state consequent actions: sending a message, and activating appropriate alarm relays and summary LEDs.

When out of the BER state, DACS II retires the alarm state consequent actions: sends a retirement message, and deactivates appropriate alarm relays and summary LEDs.

- [ii] RAI set in 2 ms

- [iii] Signaling Freeze Delay Timing, Consequent Action Clear Timing:

z=6 or A hardware timing

z=7 or B firmware timing (SFDT=2496 ms, CACT=624 ms)

- [iv] BER alarm level = DMA

Specific Options for z= 6 or 7

- [v] RBER alarm level = MI

* Local alarms are those generated for the events: PWR, PBF, BER, AIS, LMA, and A16. Remote alarms are those generated for the events: RAI, RAIS, RBER, and R16.

[vi] NFW bit 4=RBBER:

- DACS II sends a remote indicator in bit 4 (RBBER) of the time slot 0 Non Frame Word (NFW) upstream to the far end 166 ms after detecting the Minor Bit Error Rate (BER) condition.

DACS II sets the RBBER bit to its idle state, on clearing of the BER condition.

DACS II detects the remote setting of the received bit 4 as an RBBER condition and generates an appropriate message. Consequent actions are taken 166 ms after detecting this condition.

DACS II generates an appropriate retirement message when the received bit 4 returns to the idle state.

Specific Options for z= A or B

[vii] RBBER unalarmed

[viii] NFW bit 4=disabled

NFW bit 4 is NOT used as RBBER, although the local Minor Bit Error Rate (BER) condition is detected and cleared with the alarm state consequent actions.

Additionally:

- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.

The following tables provide a summary of invalid combinations of xyz for the TH type NPC.

Table 24-24. Combinations of x and y Values

Invalid xyz Combinations	Explanation
8Cz	Framed clear 2 Mbit/s (y value C) is valid for all valid x options except the one invoking automatic CRC-4 interworking. The interworking algorithm requires setting of outgoing E-bits, which is not permitted for a clear signal.
0Dz 8Dz	Unframed clear 2 Mbit/s (y value D) is only valid for x value B. This is the only x option which does not require decoding of TS0 content.

Table 24-25. Combinations of y and z Values

Invalid xyz Combinations	Explanation
xC1 xC3 xC5 xC7 xCB xD1 xD3 xD5 xD7 xDB	Clear 2 Mbit/s (y value C or D) cannot be used with Firmware controlled Consequent Action (z values 1, 3, 5, 7 or B).
xD4 xD6	Unframed clear 2 Mbit/s (y value D) cannot be used with z value 4 (NFW Bit 4 used for RAIS) or with z value 6 (NFW Bit 4 used for RBER) because unframed clear signals cannot obtain TS0 framing.

Table Notes:

1. If framed clear 2 Mbit/s (y value C) is selected with z value 4 (NFW Bit 4 used for RAIS) only the receive side of this function will be enabled. Outgoing RAIS indicators cannot be transmitted during

clear signal operation.

2. If framed clear 2Mbit/s (y value C) is selected with z = value 6 (NFW Bit 4 used for RBER) only the receive side of this function will be enabled. Outgoing RBER indicators cannot be transmitted during clear signal operation.

There are no combinations between valid x and z values that are invalid.

For TH type NPCs:

IW - Insertion Word

pq - Hexadecimal value of the DCC (disconnect code).

This value is inserted in the transmit direction on unassigned channels. DCC is not applicable to Clear-2Mbit NPCs, and is not printed. Although any 2-digit hexadecimal code may be specified, the following are the default codes:

pq *Explanation*

D5 Unassigned Channel code (UAC), the default value for

r - Transmitted signaling information

r *Explanation*

D Unassigned Channel code (UAC), the default value for CEPT

OOS - Out-of-Service

q - Out-of-service indicator

q *Explanation*

1 NPC is out-of-service

0 NPC is not out-of-service

FAIL - Failed

r - Failed indicator

r *Explanation*

1 NPC is failed

0 NPC is not failed

PEST - Pested
s - Pested indicator

s *Explanation*

1 NPC is pested

0 NPC is not pested

CRCST - CRC Multiframe Status for NPCs with the automatic CRC mode
u - CRC Multiframe status flag

u *Explanation*

1 CRC Multiframe active

0 CRC Multiframe inactive

- Not applicable, i.e., automatic CRC mode not provisioned

FEPM - Far End Performance Monitoring
v - Far End Performance Monitoring provisioning flag

v *Explanation*

1 FEPM provisioned

0 FEPM not provisioned

SYNSRC - Synchronization source
w - SYNC source provisioning flag

w *Explanation*

1 NPC used as SYNC source

0 NPC not used as SYNC source

- Not applicable, i.e., the NPC cannot be SYNC source

CAS - Channel Associated Signaling
x - CAS provisioning flag

x *Explanation*

1 NPC with CAS

0 NPC with NSA

- Not applicable, i.e., NPC is non-channelized

LPBK - Loopback status

d - Loopback direction flag

t - Loopback NPC state flag

d Explanation

F Facility loopback

E Equipment loopback

- Not applicable, i.e., no loopback

t Explanation

A AIS downstream/upstream with performance monitoring off

B AIS downstream/upstream with performance monitoring on

C Pass-through with performance monitoring off

T Pass-through with performance monitoring on

- Not applicable, i.e., no loopback

THMOD - Thresholding Mode

z - Thresholding mode flag

z Explanation

1 Thresholding is inhibited

0 Thresholding is allowed

AISPROV

- AIS provisioning

ttt - Provisioned AIS alarm level

The AIS PBA alarm is not provisioned for unframed clear (unchannelized) 2.048Mbit/s PAXDz type NPCs. Therefore, disregard the value of "ttt" for these NPCs, since the AIS alarm with the "ttt" alarm level will not be detected.

ttt Explanation

PMC Prompt maintenance alarm - critical

PMA Prompt maintenance alarm - major

DMA Deferred maintenance alarm - minor

MI Maintenance information

ERB - Errored block

ee - Percentage of errored blocks (1% through 91%, default is 81%)

The number of errored blocks, expressed as a percentage, used to declare a severely errored second (SES) or far-end SES (FSES).

PBA - Primary block alarm

p - PBA flag

<i>p</i>	<i>Explanation</i>

1	PBA

0	No PBA

The PBA flag indicates the presence of one or more of the failure conditions output in the same data line.

LOS - Loss of Signal

LOF - Loss of Frame

AIS - Alarm Indication Signal received in all 32 time slots.

EER - Excessive Error Rate

RAI - Remote Alarm Indication received in bit 3 of NFW of TS0.

LMA - Loss of Multiframe Alignment in CAS time slot 16.

LCMA - Loss of CRC4 Multiframe Alignment

BER - Bit Error Rate detected in received signal.

A16 - AIS received in CAS time slot 16.

RAIS - Remote AIS detected in bit 4 of NFW of TS0.

RBER - Remote Bit Error Rate detected in bit 4 of NFW of TS0.

RMA - Remote Multiframe Alarm received in bit 6 of frame 0 of TS16.

SFI - Synchronization Failure Indication in bit 5 of NFW of TS0.

PFW00F - Pseudo Frame Word Out-Of-Frame for TS0 to non-TS0 cross-connect.

FLCMA - Far-end loss of CRC-4 Multiframe Alignment.

RPSFI - Remote Power Supply Failure Indicator

y - failure flag

<i>y</i>	<i>Explanation</i>
1	The failure condition exists
0	The failure condition does not exist
-	The detection of the failure condition is not provisioned

Note: The facility monitoring parameters accumulated by the NPC are described below. If the queried NPC cannot be accessed for some reason, for example because the Unit Controller is out of service, then the NPC's parameter count fields are printed as a string of dashes to indicate that the counts are not available. The parameter thresholds and options are still correctly output in this case.

In addition, some parameters are not applicable to all NPCs. Certain parameters may or may not be collected based on NPC type and whether the NPC carries a Clear or Channelized facility. In the cases where specific parameters do not apply to the queried NPC, the respective parameter count fields, threshold values and threshold options are all displayed as a string of dashes.

TH NPC performance monitoring parameters:

CRC	- CRC Block Errors
FRER	- Framing Errors
OFS	- Out of Frame Seconds
ES	- Errored Seconds
SES	- Severely Errored Seconds
CSS	- Controlled Slip Seconds
CV	- Coding Violations
UAS	- Unavailable Seconds
UATC	- Unavailable Time Count
MER	- Multiframe Errors
FEBE	- Far End Block Errors
FES	- Far End Errored Seconds
FSES	- Far End Severely Errored Seconds
FUAS	- Far End Unavailable Seconds

Note that parameters FEBE, FES, FSES and FUAS are not applicable for the TH type NPCs.

aaaaaaaa

- Daily CRC block error current counts.

bbbbbbbb

- Daily framing error current counts.

cccc - Daily out of frame seconds current counts.

dddd - Daily errored second current counts.

eeee - Daily severely errored second current counts.

ffff - Daily controlled slip second current counts.

gggggggg

- Daily coding violation current counts.

hhhh - Daily unavailable second current counts.

iiii - Daily unavailable time count current counts.

jjjj - Daily multiframe alignment error current counts.

kkkkkk

- Daily far-end block error current counts.

llll - Daily far-end errored second current counts.

mmmm - Daily far-end severely errored second threshold value.

nnnn - Daily far-end unavailable second current counts.

aaaaaaaa

- Daily CRC block error threshold value.

bbbbbbbb

- Daily framing error threshold value.

cccc - Daily out of frame seconds threshold value.

dddd - Daily errored second threshold value.

eeee - Daily severely errored second threshold value.

ffff - Daily controlled slip second threshold value.

gggggggg

- Daily coding violation threshold value.

hhhh - Daily unavailable second threshold value.

iiii - Daily unavailable time count threshold value.

jjjj - Daily multiframe alignment error threshold value.

kkkkkk

- Daily far-end block error threshold value.

llll - Daily far-end errored second threshold value.

mmmm - Daily far-end severely errored second threshold value.

nnnn - Daily far-end unavailable second threshold value.

- a** - Daily CRC block error threshold selection,
- b** - Daily framing error threshold selection,
- c** - Daily out of frame seconds threshold selection,
- d** - Daily errored second threshold selection,
- e** - Daily severely errored second threshold selection,
- f** - Daily controlled slip second threshold selection,
- g** - Daily coding violation threshold selection,
- h** - Daily unavailable second threshold selection,
- i** - Daily unavailable time count threshold selection,
- j** - Daily multiframe alignment error threshold selection,
- k** - Daily far-end path block error selection,
- l** - Daily far-end path second threshold selection,
- m** - Daily far-end severely errored second threshold selection,
- n** - Daily far-end unavailable second threshold selection,

aaaaaa

- 15-minute CRC block error current counts.

bbbbbbb

- 15-minute framing error current counts.

ccc

- 15-minute out of frame seconds current counts.

ddd

- 15-minute errored second current counts.

eee

- 15-minute severely errored second current counts.

fff

- 15-minute controlled slip second current counts.

ggggggg

- 15-minute coding violation current counts.

hhh

- 15-minute unavailable second current counts.

ii

- 15-minute unavailable time count current counts.

jjj

- 15-minute multiframe alignment error current counts.

kkkkkk

- 15-minute far-end block error current counts.

lll

- 15-minute far-end errored second current counts.

mmm

- 15-minute far-end severely errored second current counts.

nnn

- 15-minute far-end unavailable second current counts.

aaaaaa	- 15-minute CRC block error threshold value.
bbbbbbb	- 15-minute framing error threshold value.
ccc	- 15-minute out of frame seconds threshold value.
ddd	- 15-minute errored second threshold value.
eee	- 15-minute severely errored second threshold value.
fff	- 15-minute controlled slip second threshold value.
ggggggg	- 15-minute coding violation threshold value.
hhh	- 15-minute unavailable second threshold value.
ii	- 15-minute unavailable time count threshold value.
jjj	- 15-minute multiframe alignment error threshold value.
kkkkkk	- 15-minute far-end block error threshold value.
lll	- 15-minute far-end errored second threshold value.
mmm	- 15-minute far-end severely errored second threshold value.
nnn	- 15-minute far-end unavailable second threshold value.
a	- 15-minute CRC block error threshold selection,
b	- 15-minute framing error threshold selection,
c	- 15-minute out of frame seconds threshold selection,
d	- 15-minute errored second threshold selection,
e	- 15-minute severely errored second threshold selection,
f	- 15-minute controlled slip second threshold selection,
g	- 15-minute coding violation threshold selection,
h	- 15-minute unavailable second threshold selection,
i	- 15-minute unavailable time count threshold selection,
j	- 15-minute multiframe alignment error threshold selection,
k	- 15-minute far-end path block error selection,
l	- 15-minute far-end path second threshold selection,
m	- 15-minute far-end severely errored second threshold selection,
n	- 15-minute far-end unavailable second threshold selection,

For TH type NPCs:

Depending on which interface functions are enabled by the provisioning values of xyz, some parameters may not be applicable. In this case the threshold value, the parameter count (if present in the message) and the selection value will appear as dashes ("-"). In the table below "N/A" indicates that a parameter is not applicable for the given value of x or y.

Also, if the selection value m=c has been chosen for a parameter, the threshold value and the parameter count (if present in the message) will appear as dashes.

Parameter	CRC-4 Mode Disabled (x=B)	CAS Disabled (y=8,9,C,D)	Unframed Clear 2Mbit/s (y=D)
CRC	N/A		N/A
FRER			N/A
OFS			N/A
ES			N/A
SES			N/A
CSS			
UAS			N/A
UATC			N/A
MER		N/A	N/A

TS0 - Time Slot 0

Note that the TS0 output data field will be populated with dashes ("-") if the NPC is provisioned as a non-channelized NPC, that is, clear 2Mbit/s NPC.

abcdefgh

- Spare bits in TS0

Note: A bit provisioned for pass-through may be cross-connected to a bit from another TS0.

The values displayed for 'abcdefgh' are those that the NPC is provisioned to transmit. The actually transmitted values may be different, depending on alarm states (see UTL::QRY,TS0,NPC).

TS0M - Time slot 0 bits monitored by NPC

The TS0 output data field will be populated with dashes ("-") if the NPC is provisioned as a non-channelized NPC, i.e., clear 2Mbit/s NPC.

abcdefgh

- Spare bits in TS0M

TS0MBOFL

- TS0M buffer overflow

v

- TS0M buffer overflow condition indicator

COND

- Condition

kk

- Hexadecimal completion condition code

cc

- Hexadecimal denial condition code

cc - Hexadecimal condition code

cc Explanation

00	No conditions
04	Subject entity is out of service
11	UC is out of service
12	UC is in service but failed
14	FTMI is out of service
0B	Invalid CEPT NPC
46	NPC Failed or Out of Service
AE	MXR is failed
AF	MIU is failed
B1	FMT is out of service
B2	MXR is out of service
CF	MIU is out of service

UTL,QRY,STATE,SCDG,NPC,RT,DL,ALL

UTILITY QUERY SCDG

Explanation Of Command

This message requests a printout of the list of SLC[®] carrier digroups (DCLU) terminated on this frame. Additionally, if the STATE option is used on the input message, the system reports the status of the digroup(s) with regard to protection switching, line loopback, and the outstanding alarm states.

For Message O.52322, the appearance order for the RTs and DLs (for digital carrier line unit) is such that the RT with the smallest identification number appears first, followed by the DL that has the same identification number.

If a DL is found without the same identification number, then the RT with the next smallest identification number appears next, and so on.

If an RT (DL) is not terminated on this frame, then the output message only includes the first line of the message with the SLC carrier or DCLU digroup value set to zero.

For Message O.52321 and if the NPC number is entered, the RT or DL id number and the operation mode number are shown in the first output line.

The power/miscellaneous (sss) option shows a SLC 96 carrier RT if it is specified in the ADD::RT command.

The retrofit (RTF) option shows a retrofit SLC carrier RT with FPC.

Command

Nonhierarchical

[I.52321]

UTL:FRM xy, SEQ ww:QRY[, STATE], SCDG, {NPC [s]abc|RT ffff|\
DL ffff|ALL}!

Hierarchical

[I.52321]

UTL:FRM xy, SEQ ww:QRY[, STATE], SCDG, {NPC uvmnp|RT ffff|\
DL ffff|ALL}!

Completion Message

Nonhierarchical

[O.52321]

M hh:mm:ss xy, ww n[vv] UTL QRY[STATE] SCDG {NPC [s]abc|RT ffff|\
DL ffff} [{RT|DL} gggg MD g[g]] [{sss|NDL|RTF}] e LN MSG:

	[DGA [t]aaa]	[DGB [t]bbb]	[DGC [t]ccc]	[DGD [t]ddd]	[DGP [t]ppp]
[PLSW	xxxx	xxxx	xxxx	xxxx	----
[LLB	xxxx	xxxx	xxxx	xxxx	xxxx]
[ALST	xxxx	xxxx	xxxx	xxxx	xxxx] COMPL

[O.52322]

M hh:mm:ss xy, ww n[vv] UTL QRY[STATE] SCDG llll ALL {EOM|COMPL}

M hh:mm:ss xy, ww n[vv] UTL QRY[STATE] SCDG mmm {RT|DL} ffff MD \
g[g]] [{sss|NDL|RTF}] e LN MSG:

	[DGA [t]aaa]	[DGB [t]bbb]	[DGC [t]ccc]	[DGD [t]ddd]	[DGP [t]ppp]
[PLSW	xxxx	xxxx	xxxx	xxxx	----
[LLB	xxxx	xxxx	xxxx	xxxx	xxxx]
[ALST	xxxx	xxxx	xxxx	xxxx	xxxx] {EOM COMPL}
.	.	.	.	.	.
.	.	.	.	.	.
.	.	.	.	.	.

M hh:mm:ss xy, ww n[vv] UTL QRY[STATE] SCDG mmm {RT|DL} hhhh MD \
g[g]] [{sss|NDL|RTF}] e LN MSG:

	[DGA [t]aaa]	[DGB [t]bbb]	[DGC [t]ccc]	[DGD [t]ddd]	[DGP [t]ppp]
[PLSW	xxxx	xxxx	xxxx	xxxx	----
[LLB	xxxx	xxxx	xxxx	xxxx	xxxx]
[ALST	xxxx	xxxx	xxxx	xxxx	xxxx] {EOM COMPL}

Hierarchical

[O.52321]

```
M hh:mm:ss xy,ww n[vv] UTL QRY[ STATE] SCDG {NPC uvmnp|RT ffff|DL ffff}\
[ {RT|DL} gggg MD g[g]] [ {sss|NDL|RTF}] e LN MSG:
      [DGA uvjaa]   [DGB uvkbb]   [DGC uvlcc]   [DGD uvmd]   [DGP uvjpp]
[PLSW      xxxx      xxxx      xxxx      xxxx      ----]
[LLB       xxxx      xxxx      xxxx      xxxx      xxxx]
[ALST      xxxx      xxxx      xxxx      xxxx      xxxx] COMPL
```

[O.52322]

```
M hh:mm:ss xy,ww n[vv] UTL QRY[ STATE] SCDG llll ALL {EOM|COMPL}

M hh:mm:ss xy,ww n[vv] UTL QRY[ STATE] SCDG mmm {RT|DL} ffff MD g[g]\
[ {sss|NDL|RTF}] e LN MSG:
      [DGA uvjaa]   [DGB uvkbb]   [DGC uvlcc]   [DGD uvmd]   [DGP uvjpp]
[PLSW      xxxx      xxxx      xxxx      xxxx      ----]
[LLB       xxxx      xxxx      xxxx      xxxx      xxxx]
[ALST      xxxx      xxxx      xxxx      xxxx      xxxx] {EOM|COMPL}
      .              .              .              .
      .              .              .              .
      .              .              .              .
```

```
M hh:mm:ss xy,ww n[vv] UTL QRY[ STATE] SCDG mmm {RT|DL} hhhh MD g[g]\
[ {sss|NDL|RTF}] e LN MSG:
      [DGA uvjaa]   [DGB uvkbb]   [DGC uvlcc]   [DGD uvmd]   [DGP uvjpp]
[PLSW      xxxx      xxxx      xxxx      xxxx      ----]
[LLB       xxxx      xxxx      xxxx      xxxx      xxxx]
[ALST      xxxx      xxxx      xxxx      xxxx      xxxx] {EOM|COMPL}
```

Denial Message

Nonhierarchical

[O.52321.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY[ STATE] SCDG NPC [s]abc[ {RT|DL} hhhh] \
[ UNIT [q]q] COND cc DNY
```

[O.52321.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY[ STATE] SCDG {RT|DL} ffff[ UNIT [q]q] \
COND cc DNY
```

[O.52321.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY[ STATE] SCDG ALL {RT|DL} hhhh UNIT [q]q \
COND cc DNY
```

Hierarchical

[O.52321.01]

M hh:mm:ss xy,ww n[vv] UTL QRY[STATE] SCDG NPC uvmp[{RT|DL hhhh}\
[UNIT [q]q] COND cc DNY

[O.52321.01]

M hh:mm:ss xy,ww n[vv] UTL QRY[STATE] SCDG {RT|DL} hhhh[UNIT [q]q] \
COND cc DNY

[O.52321.01]

M hh:mm:ss xy,ww n[vv] UTL QRY[STATE] SCDG ALL {RT|DL} hhhh UNIT [q]q \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SCDG - SLC® carrier digroup

STATE - State
Status of protection switching, line loopback, and alarms

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical DS-type NPC number belonging to
FTU (Unit type FT)
The valid values are listed below:

If NPC numbers are expressed in three digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DS type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

uvmnp - Hierarchical DS-type NPC number

uv - Unit number
m - Module number
np - NPC number

Valid values are listed below:

DS type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

RT - Remote terminal

DL - Digital carrier line unit (DCLU)

ffff - Bank identification number (0000 through 9999)

ALL - All
All SLC carrier RTs or DLs on this frame

e - Number of lines in output message

gggg, hhhh
- Bank identification number used in the output message when the NPC number or ALL option was specified in the input message. These bank identification numbers have the same values as ffff.

MD - Mode

g[g] - Mode of operation
Mode of operation for the RT/DL SLC carrier bank

<i>g[g]</i>	<i>Explanation</i>

1	SLC carrier 96 Mode I
3	SLC carrier 96 Mode III
C	SLC carrier, Series 5 FPC

llll - Total number of SLC carrier and DCLU digroups terminated on this frame

mmm - Total number of digroups terminated for this bank

sss - PWR/MISC alarm option

<i>sss</i>	<i>Explanation</i>

PMJ	The PWR/MISC alarm from the data link is a power major alarm
PMN	The PWR/MISC alarm from the data link is a power minor alarm
MMJ	The PWR/MISC alarm from the data link is a miscellaneous major
MMN	The PWR/MISC alarm from the data link is a miscellaneous minor

RTF - Retrofit

DGA - Digroup A of a SLC carrier bank
DGB - Digroup B of a SLC carrier bank
DGC - Digroup C of a SLC carrier bank
DGD - Digroup D of a SLC carrier bank
DGP - Digroup P of a SLC carrier bank

[t]aaa - The 3- or 4-digit Nonhierarchical DGA NPC number
[t]bbb - The 3- or 4-digit Nonhierarchical DGB NPC number
[t]ccc - The 3- or 4-digit Nonhierarchical DGC NPC number
[t]ddd - The 3- or 4-digit Nonhierarchical DGD NPC number
[t]ppp - The 3- or 4-digit Nonhierarchical DGP NPC number

uvjaa,wxjaa
- Hierarchical DGA NPC number

uvkbb,wxkbb
- Hierarchical DGB NPC number

uvlcc,wxlcc
- Hierarchical DGC NPC number

uvmdd,wxmdd
- Hierarchical DGD NPC number

uvjpp,wxjpp
- Hierarchical DGP NPC number

uv,wx - Unit number

j,k,l,m
- Module number (j=k=l=m for SLC carrier Series 5 FPC RT)

aa - NPC number

bb - NPC number

cc - NPC number

dd - NPC number

pp - NPC number

NDL - No data link

PLSW - Protection line switch (status)

xxxx Explanation

SWMR Manually requested PLSW is performing

SWPR Manually requested PLSW is pending

SWAR Automatically requested PLSW is performing

INHIB Protection line switch for the digroup is inhibited

NORM Protection line switch status is normal

LLB - Line loopback (status)

xxxx Explanation

FRTA LLB request from RT is active
FRTI LLB request from RT is inhibited
TRTA LLB request to RT is active
TRTI LLB request to RT is inhibited
LBPR LLB request to RT is pending
INHB LLB request from and to RT is inhibited
NORM The LLB is not active nor inhibited

ALST - Alarm status

xxxx Explanation

MNNE Minor alarm, location near end
MJNE Major alarm, location near end
MNFE Minor alarm, location far end
MJFE Major alarm, location far end
MNCL Minor alarm, location carrier line
MJCL Major alarm, location carrier line
---- No alarm is active

UNIT - Unit

[q]q - Unit number (1 through 16)

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped
11 UC is out of service
12 UC is in service but failed
13 FTMI is not equipped
15 NPC is unequipped
0B Invalid CEPT NPC
6A NPC type is not DS type
7E Bank id number not found
7F NPC is not added

UTL,QRY,STATE,SYNC

UTILITY QUERY

Explanation Of Command

This message requests the state of the synchronizer.

Command

[I.56301]

UTL:FRM xy,SEQ ww:QRY,STATE,SYNC!

Completion Message

[O.56301]

M hh:mm:ss xy,ww n UTL QRY STATE SYNC 4 LN MSG:
CFR <arch> STRATUM <stratum> MODE <pllop0>,<pllop1> \
SOURCE <source0>,<source1>
IN SERVICE DPLL a b TB c d SOURCE e f
ACTIVE LINK gh ij PLL TIMING ERROR k l COMPL

Denial Message

[O.56301.01]

M hh:mm:ss xy,ww n UTL QRY STATE SYNC COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer

CFR - Configure

arch - {MASTER | SLAVED}

STRATUM

- Stratum

stratum

- {STR2 | STR3 | CEPT TOLL | CEPT LOCAL}

MODE - Mode

pllop0 - {HOLDOVER | FAST | NORMAL} for side 0

pllop1 - {HOLDOVER | FAST | NORMAL} for side 1

SOURCE - Source

source0

- {HOLDOVER | TLI | MATE | CRO} for side 0

source1

- {HOLDOVER | TLI | MATE | CRO} for side 1

DPLL - Digital phase-locked loop

a - Digital Phase-Locked Loop, side 0

b - Digital Phase-Locked Loop, side 1

a

b *Explanation*

0 Out of service

1 In service

TB - Time base

c - Time Base, side 0

d - Time Base, side 1

c

d *Explanation*

0 Out of service

1 In service

SOURCE - Timing source

e - Timing Source status, side 0

f - Timing Source status, side 1

e

f *Explanation*

0 No SSP on side 1 is in service

1 At least one SSP on side 1 is in service

gh,

ij - Active SSP number

These variables will be output as "--" if no active SSP is present for
SYNC 0 and SYNC 1, respectively

g, i - Timing link interface number of active SSP

h, j - Synchronizer synchronization port (SSP) number

PLL - Phase locked loop

k - Phase-locked loop timing error, side 0

l - Phase-locked loop timing error, side 1

k

l *Explanation*

0 No errors

1 PLL error exists

cc - Hexadecimal condition code

cc *Explanation*

16 SYNC TB is not equipped

UTL, QRY, STATE, UNIT, DS3

QUERY STATE UNIT DS3

Explanation Of Command

This command requests the alarm status, facility parameter threshold, enabled/disabled status of alarm generation for unprotected DS3 or Hybrid DS3 due to manual commands, and protection switching status of a single or a range of DS3 or a Hybrid DS3 facilities within a DS3 or a Hybrid DS3 unit. For Hybrid DS3 facilities the Remote Alarm Indication (RAI) carried by the X-bits in the DS3 facility are also reported.

Either a completion or denial output message is generated for each DS3 or Hybrid DS3 facility.

Command

[I.56361]

UTL:FRM xy,SEQ ww:QRY,STATE,UNIT [q]q,DS3 c[-d]!

Completion Message

[O.56361]

M hh:mm:ss xy,ww n[vv] UTL QRY STATE UNIT [q]q DS3 c TYPE mnxyz 4 LN MSG:
PSTATE OOS FAIL PEST OOF LOS HBER [RAI] AIS IDLE BERM BERT LBO
aaaaa-ccc z b p d e f [r] y i m t <l>
DU o DS3UNPROTALM aaa[COND cc] COMPL

Denial Message

[O.56361.01]

M hh:mm:ss xy,ww n[vv] UTL QRY STATE UNIT [q]q DS3 c UEQD DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

DS3 - DS3 facility

c, d - The number of the DS3 facility within the unit (1 through 6)

mnxyz - The DS3 format processed by the MXR:

mn - DS3 type

mn *Explanation*

MX The original R4.0 DS3 facility type supported by the Multiplexer (MXR) circuit pack (KCR-1).

EX The enhanced R6.0 DS3 facility type supported by the Enhanced Multiplexer (EMXR) circuit pack (KCR-5).

HX The hybrid facility type supported by the Hybrid Multiplexer (HMXR) circuit pack (KCR-8).

If the unit is a regular DS3U of unit type DT100, then the default is the MX type for backward compatibility.

If the unit is a Hybrid DS3U of unit type HT100, then the default is HX.

Allowed xyz values

Type Explanation

MX100 KCR-1 circuit pack with M13 framing

MX200 KCR-1 circuit pack with C-bit parity framing

EX100 KCR-5 circuit pack with M13 framing

EX200 KCR-5 circuit pack with C-bit parity framing

HX110 KCR-8 Hybrid circuit pack with M13 framing

ANSI interpretation of X-bit values.

HX100 KCR-8 Hybrid circuit pack with M13 framing

Reverse ANSI interpretation of X-bit values.

Type HX110 and HX100 set the X-bits (carried by the DS3 signal) in the transmit direction and interpret the value of the X-bits in the receive direction for the purpose of obtaining a Remote Alarm Indication (RAI) for the DS3 signal. Type HX110 interprets X-bit values (there are two X-bits) of "1" as normal, while values of "0" indicate an RAI. Type HX100 interprets X-bit values of "0" as normal and X-bit values of "1" as RAI.

PSTATE - Protection state

aaaaa - Protection state of the service MMFG where aaaaa can be:

SALW	The Service MMFG is selected to carry service, and protection switching is ALLOWED
SINH	The Service MMFG is selected to carry service, and protection switching is INHIBITED
MPALW	The facility is being served by the Protection pack as a result of a manual switch command, and automatic switchback is ALLOWED
APALW	the facility is being served by the Protection pack as a result of an automatic switch, and automatic switchback is ALLOWED
MPINH	The facility is being served by the Protection pack as a result of a manual switch command, and automatic switchback is INHIBITED
APINH	The facility is being served by the Protection pack as a result of an automatic switch, and automatic switchback is INHIBITED

ccc - Availability of protection switch in case of failure:

AVL = Protection Switch available

NVL = Protection Switch not available (if the aaaaa field is SINH, MPINH or APINH, this field will always be NVL)

OOS - Out-of-service

z - "Selected" MMFG in service status:

- 1** - the MMFG is in service
- 0** - the MMFG is out-of-service

FAIL - Failed

b - "Selected" MMFG failure status:

- 1** - the MMFG is failing
- 0** - the MMFG is not failing

PEST - Pested

p - "Selected" MMFG pest status:

- 1** - the MMFG is pested
- 0** - the MMFG is not pested

If this field is 1, the OOF, LOS, High BER and AIS field will be filled with a hyphen (-)

00F - Out of frame

- d** - Out-of-frame status for the facility:
- 1** - Out-of-Frame alarm for the facility is active
 - 0** - Out-of-Frame alarm for the facility is idle
 - - The facility is pested or OOS, or UC OOS or failed.

LOS - Loss of signal

- e** - Loss-of-signal status for the facility:
- 1** - Loss-of-signal alarm for the facility is active
 - 0** - Loss-of-signal alarm for the facility is idle
 - - The facility is pested or OOS, or UC OOS or failed.

HBER - High bit error rate

- f** - High-bit-error-rate status for the facility:
- 1** - High-bit-error-rate alarm for the facility is active
 - 0** - High-bit-error-rate alarm for the facility is idle
 - - The facility is pested or OOS, or UC OOS or failed.

RAI Remote Alarm Indication

- r** Status of RAI alarm
- 0** - No RAI alarm
 - 1** - RAI alarm active
 - - The facility is pested, or OOS, or UC OOS or failed, or DS3 in LOS, OOF or HBER

AIS - Alarm indication signal

- y** - Alarm indication signal status for the facility:
- 1** - Alarm indication signal alarm for the facility is active
 - 0** - Alarm indication signal alarm for the facility is idle
 - - The facility is pested or OOS, or UC OOS or failed.

IDLE - Idle signal

- i** - Idle signal status for the facility:
- 1** - Idle signal alarm for the facility is active
 - 0** - Idle signal alarm for the facility is idle
 - - The facility is pested or OOS, or UC OOS or failed.

BERM - Bit error rate method

- m** - The BER calculation method
- B** = Bipolar violations
 - P** = DS3 Parity Errors
 - C** = Both Bipolar violations and DS3 Parity Errors, support by HMXR only

BERT - Bit error rate threshold

t - The BER threshold:
 3 - Corresponding to threshold of 1E-3
 6 - Corresponding to threshold of 1E-6

LBO - Line buildout

<|> - The LBO setting:
 ON - The line buildout is turned on.
 OFF - The line buildout is turned off.

a - The number of the DS3 within the range of c and d

DU DS3 Unprotected Alarm

o Status of alarm indicating unprotected DS3 due to manual commands
 0 - No alarm
 1 - Alarm is active to indicate unprotected DS3 service

DS3UNPROTALM Unprotected Alarm

The enabling/disabling setting to generate an alarm for unprotected DS3 service due to manual commands.

aaa The setting to generate alarm for unprotected DS3 service

ON - Alarm generation is enabled.
 OFF - Alarm generation is disabled.

cc - Hexadecimal condition code

cc **Explanation**

00 No conditions
11 UC is out of service
12 UC is in service but failed
B2 MXR is out of service

UTL, QRY, STR, LINK

QUERY LINK STATUS AND PROTOCOL

Explanation Of Command

This message queries the status and protocol parameters of an administrative link, including all virtual circuits of a X.25 link.

Command

[I.55113]

UTL:FRM xy,SEQ ww:QRY,STR,LINK j[mm][-jnn]!

Completion Message

[O.55113]

**M hh:mm:ss xy,ww n[vv] UTL QRY STR LINK j PTCOL S 2 LN MSG:
STATUS bb e k q x m s hh COMPL**

Note: The above message applies to the Snider protocol.

[O.55113]

**M hh:mm:ss xy,ww n[vv] UTL QRY STR LINK j PTCOL X 4 LN MSG:
STATUS bb - k - - m xxxx hh
LNKL b eee ggg aa {A|B}
PKTL iii nn v ppss gghh COMPL**

Note: The above message applies to the X.25 protocol when virtual circuit is not specified.

[O.55113]

M hh:mm:ss xy,ww n[vv] UTL QRY STR LINK jmm PTCOL X 4 LN MSG:
STATUS bb - k - - m s hh
LNKL b eee ggg aa {A|B}
PKTL c ddd iii jjj kkk lll mmm nn p q r v ppss gghh COMPL

Note: The above message applies to the X.25 protocol when a single virtual circuit is specified.

[O.55113]

M hh:mm:ss xy,ww n[vv] UTL QRY STR LINK jmm PTCOL X 4 LN MSG:
STATUS bb - k - - m s hh
LNKL b eee ggg aa {A|B}
PKTL c ddd iii jjj kkk lll mmm nn p q r v ppss gghh {EOM|COMPL}

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY STR LINK jnn PTCOL X 4 LN MSG:
STATUS bb - k - - m s hh
LNKL b eee ggg aa {A|B}
PKTL c ddd iii jjj kkk lll mmm nn p q r v ppss gghh COMPL

Note: The above message applies to the X.25 protocol when a range of virtual circuits is specified.

[O.55113]

M hh:mm:ss xy,ww n[vv] UTL QRY STR LINK j PTCOL M 2 LN MSG:
STATUS bb - k - - m s hh COMPL

Note: The above message applies to the Modified Snider protocol.

[O.55113]

M hh:mm:ss xy,ww n[vv] UTL QRY STR LINK j PTCOL T e LN MSG:
STATUS bb - k - - m s hh [COMPL]
[APPL {ASCS|ASCD} aa ttt [COMPL]]
[APPL PM aa ttt [COMPL]]

Note: The above message applies to the TABS protocol.

Denial Message

[O.55113.01]

M hh:mm:ss xy,ww n[vv] UTL QRY STR LINK j[mm][-jnn] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

STR - Status register

LINK - Link

j [mm] - Administrative link number

j nn - Administrative link number

j - Physical link number (1 through 6)

mm - First virtual circuit (VC) number of the VC range mm-nn
(01 through 16, j must be 5 or 6)

nn - Last virtual circuit (VC) number of the VC range mm-nn
(01 through 16, j must be 5 or 6)

PTCOL - Protocol

S - Snider

X - X.25

M - Modified Snider

T - TABS

e - Number of lines in the message (2, 3, or 4)

STATUS - Status

bb - Baud rate. For the physical link j alarm class.

bb *Baud rate*

03 300 b/s

06 600 b/s

12 1200 b/s (default for CIU link)

24 2400 b/s

48 4800 b/s

96 9600 b/s

00 X.25 links

Note: X.25 links are set up to receive external timing only.

e - Backspace character echo

e *Explanation*

0 Backspace is echoed (default)

1 Backspace is not echoed

k - Failure of the X.25 link

k *Explanation*

1 Minor alarm (default)

2 Major alarm

q - ENQ/ACK Protocol Enable/Disable Control

q *ENQ/ACK Protocol State*

0 Disabled

1 Enabled (default)

x - XON/XOFF Protocol Enable/Disable Control

x *XON/XOFF Protocol State*

0 Disabled (default)

1 Enabled

m - Mode

m *Status*

0 Idle

1 Input message in progress

2 Output message in progress

s - Status

This status applies to the following protocols:

Snider

Modified Snider

X.25 (Single or Range of Virtual Circuits)

TABS

s *Explanation*

0 In service

1 Out-of-service (OOS)

This status applies to the X.25 protocol. A four-digit hexadecimal number will be output in the protocol field whenever a specific VC number is not entered. Each digit represents four bits and each bit is associated with a particular VC. The four hexadecimal digits therefore represent 16 VCs. The bits are assigned to VCs from right to left in increasing order of VC number. That is, bit 1 represents VC 1 and bit 16 represents virtual circuit 16. See below where VC16 marks the position of the bit representing virtual circuit 16 and VC01 similarly marks the position of the bit representing VC 1.

The interpretation of the value of a particular bit is given in the explanation of variable s above. Some specific examples of the output are interpreted below.

hh	Explanation
03	Link hardware in service
04	Link hardware out of service
05	Link hardware pested for autonomous restoral

- LNKL** - Link Layer
- b** - Maximum number of outstanding I frames (1 through 7). Default is 7
- eee** - Acknowledgment timer (2 through 20 seconds). Default is 3 seconds
- ggg** - Disconnect (or Idle channel) timer (4 through 120 seconds). Default is 26 seconds
- aa** - Maximum number of frame transmissions (2 through 16) (including original transmission). Default is 7
- A** - Data link layer frame address A
- B** - Data link layer frame address B
- PKTL** - Packet layer
- c** - Window size (1 through 7). Default is 2
- ddd** - Packet size P (ddd) can be 128, 256, or 512 octets. Default is 128 octets
- iii** - Restart request response timer (10 through 180 seconds). Default is 180 seconds
- jjj** - Reset request response timer (10 through 180 seconds). Default is 180 seconds
- kkk** - Disconnect (or Idle channel) timer (10 through 180 seconds). Default is 180 seconds
- lll** - Data packet acknowledgement timer (10 through 200 seconds). Default is 200 seconds
- mmm** - Interrupt response timer (10 through 180 seconds). Default is 180 seconds
- nn** - Restart request retransmission counter (1 through 10). Default is 1
- p** - Reset request retransmission counter (1 through 3). Default is 1
- q** - Clear request retransmission counter (1 through 10). Default is 1
- r** - Data packet retransmission counter (0 through 3). Default is 0

ppss - Virtual circuit range

pp - Range of permanent virtual circuits (PVCs).

ss - Range of switched virtual circuits (SVCs).

The sum of the number of PVCs and SVCs must be equal to 16.

Table 1 shows the default values for these fields.

Table 1 and Table 2 show the acceptable values for these fields, allowing for an LCN numbering scheme of 00-255.

TABLE 1

"pp"	"ss"	Number of PVCs	Number of SVCs	Starting LCN for first PVC Channel	Starting LCN for first SVC Channel
00	16	00	16	--	01
01	15	01	15	01	02
02	14	02	14	01	03
03	13	03	13	01	04
04	12	04	12	01	05
05	11	05	11	01	06
06	10	06	10	01	07
07	09	07	09	01	08
08	08	08	08	01	09
09	07	09	07	01	10
10	06	10	06	01	11
11	05	11	05	01	12
12	04	12	04	01	13
13	03	13	03	01	14
14	02	14	02	01	15
15	01	15	01	01	16
16	00	16	00	01	--

TABLE 2

"pp"	"ss"	Number of PVCs	Number of SVCs	Starting LCN for first PVC Channel	Starting LCN for first SVC Channel
$0 \leq nn \leq 48$					
20	nn	00	16	--	nn
21	nn	01	15	nn	nn+1
22	nn	02	14	nn	nn+2
23	nn	03	13	nn	nn+3
24	nn	04	12	nn	nn+4
25	nn	05	11	nn	nn+5
26	nn	06	10	nn	nn+6
27	nn	07	09	nn	nn+7
28	nn	08	08	nn	nn+8
29	nn	09	07	nn	nn+9
30	nn	10	06	nn	nn+10
31	nn	11	05	nn	nn+11
32	nn	12	04	nn	nn+12
33	nn	13	03	nn	nn+13
34	nn	14	02	nn	nn+14
35	nn	15	01	nn	nn+15
36	nn	16	00	nn	--
40	nn	00	16	--	nn+64
41	nn	01	15	nn+64	nn+65
42	nn	02	14	nn+64	nn+66
43	nn	03	13	nn+64	nn+67
44	nn	04	12	nn+64	nn+68
45	nn	05	11	nn+64	nn+69
46	nn	06	10	nn+64	nn+70
47	nn	07	09	nn+64	nn+71
48	nn	08	08	nn+64	nn+72
49	nn	09	07	nn+64	nn+73
50	nn	10	06	nn+64	nn+74
51	nn	11	05	nn+64	nn+75
52	nn	12	04	nn+64	nn+76
53	nn	13	03	nn+64	nn+77
54	nn	14	02	nn+64	nn+78
55	nn	15	01	nn+64	nn+79
56	nn	16	00	nn+64	--

TABLE 2 (continued)

"pp"	"ss"	Number of PVCs	Number of SVCs	Starting LCN for first PVC Channel	Starting LCN for first SVC Channel
$0 \leq nn \leq 48$					
60	nn	00	16	--	nn+128
61	nn	01	15	nn+128	nn+129
62	nn	02	14	nn+128	nn+130
63	nn	03	13	nn+128	nn+131
64	nn	04	12	nn+128	nn+132
65	nn	05	11	nn+128	nn+133
66	nn	06	10	nn+128	nn+134
67	nn	07	09	nn+128	nn+135
68	nn	08	08	nn+128	nn+136
69	nn	09	07	nn+128	nn+137
70	nn	10	06	nn+128	nn+138
71	nn	11	05	nn+128	nn+139
72	nn	12	04	nn+128	nn+140
73	nn	13	03	nn+128	nn+141
74	nn	14	02	nn+128	nn+142
75	nn	15	01	nn+128	nn+143
76	nn	16	00	nn+128	--
80	nn	00	16	--	nn+192
81	nn	01	15	nn+192	nn+193
82	nn	02	14	nn+192	nn+194
83	nn	03	13	nn+192	nn+195
84	nn	04	12	nn+192	nn+196
85	nn	05	11	nn+192	nn+197
86	nn	06	10	nn+192	nn+198
87	nn	07	09	nn+192	nn+199
88	nn	08	08	nn+192	nn+200
89	nn	09	07	nn+192	nn+201
90	nn	10	06	nn+192	nn+202
91	nn	11	05	nn+192	nn+203
92	nn	12	04	nn+192	nn+204
93	nn	13	03	nn+192	nn+205
94	nn	14	02	nn+192	nn+206
95	nn	15	01	nn+192	nn+207
96	nn	16	00	nn+192	--

gghh - Virtual circuit group number

gg - Group number of all PVCs

hh - Group number for all SVCs (00 through 15)

APPL - Application layer

ASCS - Alarm surveillance and control, summary

ASCD - Alarm surveillance and control, detailed

PM - Performance monitoring

aa - Layer 2 address

ttt - Polling time

DBIT - D-bit

v - X.25 d-bit setting

v *Explanation*

0 Off (unset) (acknowledgement done from local DTE). Default

1 On (set) (acknowledgement done from remote DTE)

DBIT is valid only on a per link basis and will be denied on an individual virtual circuit.

COND - Condition

cc - Hexadecimal condition code

cc *Explanation*

E1 Virtual circuit is not specified for X.25 link

E2 Invalid link number specified

UTL,QRY,STR,SYNC

UTILITY QUERY, SYNCHRONIZER

Explanation Of Command

This message requests a printout on the 12-byte status register and configuration of a synchronizer.

Command

[I.55201]

UTL:FRM xy,SEQ ww:QRY,STR,SYNC a!

Completion Message

[O.55201]

M hh:mm:ss xy,ww n[vv] UTL QRY STR SYNC a 3 LN MSG:
<byte01> <byte02> <byte03> <byte04> <byte05> <byte06>
<byte07> <byte08> <byte09> <byte10> <byte11> <byte12> COMPL

Denial Message

[O.55201.01]

M hh:mm:ss xy,ww n[vv] UTL QRY STR SYNC a COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

STR - Status register

SYNC - Synchronizer

a - Synchronizer number (0 or 1)

byte01,

...,

byte12 - Status register data bytes

Each data byte contains eight bits. These bits are labeled, in the order they appear in the output, as abcdefgh. These bits are set for the following conditions:

byte01

- a** - Unused by craft
- b** - Sync core hardware fault
- c** - Mate sync is bad or declared out of service
- d** - Time base is bad or missing
- e** - TLI 1 in service without errors
- f** - TLI 2 in service without errors
- g** - TLI 3 in service without errors
- h** - TLI 4 in service without errors

byte02

- a** - Timing Extractor Timing link 1 is in service and good
- b** - Timing Extractor Timing link 2 is in service and good
- c** - Timing Extractor Timing link 3 is in service and good
- d** - Timing Extractor Timing link 4 is in service and good
- e** - Timing Extractor Timing link 5 is in service and good
- f** - Timing Extractor Timing link 6 is in service and good
- g** - Timing Extractor Timing link 7 is in service and good
- h** - Timing Extractor Timing link 8 is in service and good

byte03

- a** - Sync has been reset and awaits configuration
- b** - Hardware error on DPLL pack. See byte06 and byte07
- c** - Time base has an error, see byte09
- d** - PLL symmetry error, see byte08
- e** - Problem with cross-couple timing. See byte10 and byte11
- f** - Problem with CRO timing. See byte12
- g** - Unused bit
- h** - Unused bit

byte04 - Sync configuration data

ab - Sync architecture:

<i>ab</i>	<i>Explanation</i>
00	Sync is slave in master-slave system
01	Sync is master in master-slave system

cde - Operational stratum

<i>cde</i>	<i>Explanation</i>
000	Domestic stratum 3
001	CEPT local exchange
010	CEPT toll exchange
011	Domestic stratum 2

fg - PLL locking mode

<i>fg</i>	<i>Explanation</i>
00	Normal
01	Fast
10	Holdover

h - Unused by craft

- byte05** - Sync configuration data
- ab** - Source of timing to which Sync is presently locking
- | <i>ab</i> | <i>Explanation</i> |
|-----------|----------------------------------|
| 00 | Holdover (Not locking) |
| 01 | Timing link(s) |
| 10 | Cross couple |
| 11 | CRO (Clock Reference Oscillator) |
- cde** - Active Link: Which timing link the Sync is locking to (This field is meaningful only if byte04 ab = 00 and byte05 ab = 01)
- | <i>cde</i> | <i>Explanation</i> |
|------------|--------------------|
| 000 | TLI 1, Link 0 |
| 001 | TLI 1, Link 1 |
| 010 | TLI 2, Link 0 |
| 011 | TLI 2, Link 1 |
| 100 | TLI 3, Link 0 |
| 101 | TLI 3, Link 1 |
| 110 | TLI 4, Link 0 |
| 111 | TLI 4, Link 1 |
- f** - Unused by craft
- g** - Unused by craft
- h** - Unused by craft
- byte06** - DPLL Hardware status. If any bit equals 1, a DPLL hardware failure is indicated
- a** - ROM error
- b** - RAM error
- c** - Phase/Frequency latch error
- d** - Loss of energy on 2.048 MHz output of frequency synthesizer
- e** - Loss of energy on 2.048 MHz output of phase shifter
- f** - Loss of energy on generated sync pulse
- g** - Loss of energy on time base strobe signal
- h** - Unused by craft
- byte07** - DPLL Hardware status. If any bit equals 1, a DPLL hardware failure is indicated
- a** - Interrupt controller error
- b** - Interrupt holding register error
- c** - UART error
- d** - Control data readable output latch error
- e-h** - Unused bits

- byte08** - PLL status
- a** - PLL end of range indicator
 - b** - PLL excessive range error
 - c** - PLL real time violation
 - d** - Fast start timeout
 - e-h** - Unused bits
- byte09** - Time base status
- a** - Loss of energy for time base signal
 - b** - Time base I/O error
 - c** - Time base oscillator has drifted beyond its specified accuracy limit. (This condition is monitored only when the sync is the master timing source)
 - d** - Time base oven is cold. It must warm up for accurate holdover
 - e** - Unused bit
 - fgh** - Stratum of oscillator:
- | <i>fgh</i> | <i>Explanation</i> |
|------------|---------------------------|
| 000 | TBS3, Domestic stratum 3 |
| 001 | TBCL, CEPT local exchange |
| 010 | TBCT, CEPT toll exchange |
| 011 | TBS2, Domestic stratum 2 |
- byte10** - Cross Couple Status
- a** - Mate sync declared out-of-service by MC
 - b** - Mate sync hardware error
 - c** - Loss of energy on the 1 ms cross couple interrupt flag
 - d** - Loss of energy on the 30 ms cross couple interrupt flag
 - e** - Cross couple fast lock not working
 - f** - Sync's time base drifting with respect to CRO in master mode
 - g** - Cross couple timing problem
 - h** - Cross couple timing problem - mate sync's timing suspected
- byte11** - Cross couple status
- a** - Sync clocks not aligned, cross couple network may alarm
 - b-h** - Unused bits

byte12 - CRO status

The following bits are important only when the sync is a master timing source:

- a** - Timing from CRO bad or declared out of service by MC
- b** - CRO declared out of service by the MC
- c** - Loss of energy on the CRO input signal flag
- d** - In master mode, CRO drifting with respect to sync time bases
- e-h** - Unused bits

cc - Hexadecimal condition code

cc *Explanation*

- 02** Subject entity is not equipped
- 04** Subject entity is out of service
- 05** Subject entity is pested
- 16** SYNC TB is not equipped
- 17** SYNC is out of service
- C8** Sync pack denied command

UTL, QRY, STR, SYNC, TLI

UTILITY QUERY, TIMING LINK INTERFACE

Explanation Of Command

This message requests a printout of the 3-byte status register of a timing link interface (TLI) for a specific synchronizer.

Command

[I.55311]

UTL:FRM xy,SEQ ww:QRY,STR,SYNC a,TLI m!

Completion Message

[O.55311]

M hh:mm:ss xy,ww n[vv] UTL QRY STR SYNC a TLI m <byte01> \
<byte02> <byte03> COMPL

Denial Message

[O.55311.01]

M hh:mm:ss xy,ww n[vv] UTL QRY STR SYNC a TLI m COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

STR - Status register

SYNC - Synchronizer

a - Synchronizer number (0 or 1)

TLI - Timing link interface

m - Timing link interface number (1 through 4)

byte01,

...,

byte03 - Status register data bytes

Each data byte contains eight bits: abcdefgh. These bits are set for the following conditions:

byte01 - Overall TLI type and configuration

abcd TLI type

0000 TXB1, 1.544 Mb/s DS1 Extractor

0001 TXB2, 2.048 Mb/s Primary Block (120 OHM) Extractor

0010 TXCC, Composite Clock Extractor

0011 TXUC, High Level Unipolar Clock Extractor

0100 TXRF, Basic System Reference Frequency and
CEPT 2.048 MHz Sine (75 OHM) Extractor

0101 TDCC, 64 kb/s Composite Clock Distributor

0110 TDS2, 2.048 MHz Sine Distributor

0111 TXCP, CEPT 2.048 MHz Sine (120 Ohm) Extractor

e - TLI is grown

f - TLI out-of-service

g - TLI hardware error

h - Unused bit

byte02 - TLI phase detector and timing monitor circuitry status

- a** - Hardware energy detector on the time base strobe signal has failed
- b** - Loss of timebase strobe signal coming from the DPLL
- c** - Hardware energy detector on the CRO signal has failed
- d** - Loss of reference clock signal coming from the CRO

Note: Bits c and d have meaning only for TDCC and TDS2 TLIs and when the SYNC is a master timing source.

For TXB1 or TXB2 TLIs:

- e** - Framer chip on side 0 has failed
- f** - Framer chip on side 1 has failed

For TXCC TLIs:

- e** - Out-of-lock detector on side 0 has failed
- f** - Out-of-lock detector on side 1 has failed

Note: Bits e and f have meaning only for TE TLIs

byte03 - Hardware status and diagnostic results for Timing Distributor (TD) type TLI only

cc - Hexadecimal condition code

cc *Explanation*

- 05** Subject entity is pested
- 16** SYNC TB is not equipped
- 17** SYNC is out of service
- A5** (Timing Distributor) TLI is not equipped
- C8** Sync pack denied command

UTL,QRY,STR,SYNC,TLI,SSP

UTILITY QUERY SSP

Explanation Of Command

This message requests a printout of the 5-byte status register for a select synchronizer port (SSP). The port is located on a timing link interface (TLI) circuit pack of a synchronizer.

Command

[I.55321]

UTL:FRM xy,SEQ ww:QRY,STR,SYNC a,TLI m,SSP b!

Completion Message

Nonhierarchical

[O.55321]

M hh:mm:ss xy,ww n[vv] UTL QRY STR SYNC a TLI m SSP b \
[NPC abc] 2 LN MSG:
<byte1> <byte2> <byte3> <byte4> <byte5> COMPL

Hierarchical

[O.55321]

M hh:mm:ss xy,ww n[vv] UTL QRY STR SYNC a TLI m SSP b \
[NPC uvmnp] 2 LN MSG
<byte1> <byte2> <byte3> <byte4> <byte5> COMPL

Denial Message

[O.55321.01]

M hh:mm:ss xy,ww n[vv] UTL QRY STR SYNC a TLI m SSP b \\
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

STR - Status register

SYNC - Synchronizer

a - Synchronizer number (0 or 1)

TLI - Timing link interface

m - Timing link interface number (1 through 4)

SSP - Synchronization Sync Port

b - Synchronization Sync Port number (0 or 1)

NPC - Network processing circuit

abc - Nonhierarchical NPC number

uvmnp - Hierarchical NPC number

uv - Unit number

m - Module number

np - NPC number within the module

byte1, ... byte5

- Status register data bytes

Each data byte contains eight bits: abcdefgh. These bits are set for the following conditions:

byte1 - Overall status and configuration

- a** - Timing link is grown
- b** - Timing link out-of-service
- c** - Timing link out-of-service; Timing signal from the link has serious enough errors that it will not be accepted as a source of reference clock
- d** - TE TLI hardware problem; link will not be accepted as a source of reference clock
- e-h** - Undefined

byte2 - Timing link priority field. This field ranges from a value of 1 (highest) to 8 (lowest) for master/slave synchronization networks and affects the choice of a link as the active timing source.

byte3 - Characteristics of the timing source

abc - Framing format (TXB1 or TXB2 TE TLIs only)

- For TXB1 TE TLIs:

- 000 D4
- 001 ESF
- 010 DDS

- For TXB2 TE TLIs:

- 000 CCS
- 001 ERSM
- 010 CAS0
- 011 CAS1

de - Line format (TXB1 or TXB2 TE TLIs only)

- For TXB1 TE TLIs:

- 00 Bipolar
- 01 B8ZS

- For TXB2 TE TLIs:

- 00 AMI
- 01 HDB3

fgh - Frequency (TXUC TLIs only)

- 000 512 kHz
- 001 1.000 MHz
- 010 1.544 MHz
- 011 2.048 MHz
- 100 5.000 MHz

byte4 - Timing and line error information on the reference signal

- a** - (TXB1, TXB2, or TXCC TE TLIs only) Carrier failure alarm/loss of signal flag
- b** - Timing signal loss of energy
- c** - (TXUC TE TLIs only) Autobaud failure flag: the frequency of the incoming unipolar clock is not one of the possible frequencies specified in <byte3, ghi>
- d** - Not used
- e** - Excessive jitter flag
- f** - Phase step flag
- g-h** - Not used

byte5 - Timing and line error information on the reference signal
(TXB1 and TXB2 only)

- a** - Out of frame flag
- b** - Major framing error rate flag
- c** - Minor framing error rate flag
- d-h** - Not used

cc - Hexadecimal condition code

cc *Explanation*

- 05** Subject entity is pested
- 16** SYNC TB is not equipped
- 17** SYNC is out of service
- A2** SSP number is illegal
- A5** (Timing Distributor) TLI is not equipped
- C8** Sync pack denied command

UTL, QRY, STR, XC

UTILITY QUERY, STATUS REGISTER

Explanation Of Command

This message requests a printout of a status register for side 0 or side 1 of a cross-connect network.

Command

[I.55191]

UTL:FRM xy,SEQ ww:QRY,STR,XC a!

Completion Message

[O.55191]

M hh:mm:ss xy,ww n[vv] UTL QRY STR XC a pq rs COMPL

Denial Message

[O.55191.01]

M hh:mm:ss xy,ww n[vv] UTL QRY STR XC a DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

- STR** - Status register
- XC** - Cross-connect network
- a** - Cross-connect network side (0 through 1).
- pq** - Cross connect status register byte 1 (hexadecimal, all bits = 0)
- rs** - Cross connect status register byte 0 (hexadecimal)

<i>rs</i>	<i>Explanation</i>
01	In service
05	Active, in service
08	Pested
09	Pested and in service
0A	Pested and Failed
0D	Pested, active and in service

UTL, QRY, SYNC, TYPE

UTILITY QUERY, SYNCHRONIZER

Explanation Of Command

This message is used to request information on the provisioning of the synchronizer unit.

Command

[I.53001]

UTL:FRM xy,SEQ ww:QRY,SYNC,TYPE!

Completion Message

[O.53001]

M hh:mm:ss xy,ww n[vv] QRY SYNC TYPE 5 LN MSG:
TB TYPE mnxyz mnxyz
TLI TYPE pqxyz rsxyz pqxyz rsxyz pqxyz rsxyz pqxyz rsxyz
SRC VALUE p p p p p p p p
SOURCE NPC <xxx> <xxx> <xxx> <xxx> <xxx> <xxx> <xxx> <xxx> COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

SYNC - Synchronizer

TYPE - Type
Request for provisioning information

TB - Time base

mnxyz - SYNC time base type

mnxyz Explanation

----- Not equipped

TB0yz Domestic Stratum 3

TB3yz Domestic Stratum 2

TLI - Timing link interface

pqxyz - TLI type provisioned on synchronizer synchronization port (SSP) 0

rsxyz - TLI type provisioned on SSP 1

pqxyz

rsxyz Explanation

----- Not equipped

TCxyz 64 kb/s composite clock timing extractor

TD1yz 64 kb/s composite clock timing distributor

TD2yz Sinusoidal 2.048 MHz timing distributor

TExyz DS1 timing extractor

(xyz should be same as for DExyz NPCs)

TUxyz Unipolar clock timing extractor

TRxyz Basic system reference frequency timing extractor

For CRO applications in MASTER mode, TLI 3 is equipped with a Time Base circuit pack. In this case, "pqxyz" = "mnxyz", showing the Time Base type in the TLI 3 and TLI 4 positions.

SRC - Source

p - Source for priority for the given TLI/SSP

p Explanation

- Not equipped.

1-8 1 is the HIGHEST priority, 8 is the LOWEST priority

VALUE - Value

SOURCE - Source

NPC - Network processing circuit

cc - Hexadecimal condition code

cc *Explanation*

00 No conditions

UTL, QRY, TGS

UTILITY QUERY TEST-ACCESS GROUP

Explanation Of Command

This message is used to get a listing of one or a range of Nx64Kbit/s test-access groups (TGS). To retrieve a listing of ALL test-access groups specify the maximum range (1-400).

Command

[I.53081]

UTL:FRM xy,SEQ ww:QRY,TGS mmm[-nnn]!

Completion Message

Nonhierarchical

[O.53081]

M hh:mm:ss xy,ww n[vv] UTL QRY TGS mmm[-nnn] p LN MSG:
TG mmm, rrr, [s]abceee, sss, [t]defwww, NN, <mode>
TG mmm, rrr, [s]abceee, sss, [t]defwww, NN, <mode>
TG mmm, rrr, [s]abceee, sss, [t]defwww, NN, <mode>
TG nnn, rrr, [s]abceee, sss, [t]defwww, NN, <mode> {EOM|COMPL}

or

M hh:mm:ss xy,ww n[vv] UTL QRY TGS mmm[-kkk] UEQD {EOM|COMPL}

Hierarchical

[O.53081]

M hh:mm:ss xy,ww n[vv] UTL QRY TGS mmm[-nnn] p LN MSG:
TG mmm, rrr, uvmnpjee, sss, wxkqrwww, NN, <mode>
TG mmm, rrr, uvmnpjee, sss, wxkqrwww, NN, <mode>
TG mmm, rrr, uvmnpjee, sss, wxkqrwww, NN, <mode>
TG nnn, rrr, uvmnpjee, sss, wxkqrwww, NN, <mode> {EOM|COMPL}

or

M hh:mm:ss xy,ww n[vv] UTL QRY TGS mmm[-kkk] UEQD {EOM|COMPL}

Denial Message

[O.53081.01]

M hh:mm:ss xy,ww n[vv] UTL QRY TGS mmm[-nnn] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TG - Test-access group

mmm - Test-access group number (001 through 400)

nnn - Test-access group number specifying the end of a TG range (002 through 400)

NPCTG - NPC (for) test group

rrr - NPCTG number supporting the east bundle (001 through 400)

sss - NPCTG number supporting the west bundle, may be same as rrr

[s]abc - 3- or 4-digit non-hierarchical NPC number designated as NPCTG rrr

[t]def - 3- or 4-digit non-hierarchical NPC number designated as NPCTG sss

If NPC numbers are expressed in three digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmp - Hierarchical NPC number designated as NPCTG rrr
wxkqr - Hierarchical NPC number designated as NPCTG sss

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

The valid values are listed below:

DE type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

eee - Starting channel for east bundle

www - Starting channel for west bundle

mode - Test access mode

mode Explanation

MON	Monitor
SPL	Split
HUB	Hub
LPD	Looped
IDLE	Idle
SPLNOY	Split with yellow alarm transmission disabled

UEQD - Unequipped

NN - TG width (01 through 24)

cc - Hexadecimal condition code

cc *Explanation*

63 None of the designated TG(s) are equipped

UTL, QRY, TO

QUERY DESTINATION CROSS-CONNECT

Explanation Of Command

This command requests circuit provisioning information associated with the specified To-direction termination(s). The output messages generated depend upon:

- Whether or not the termination is assigned,
- Whether or not the termination is a test port termination,
- The type of network processing circuit for this termination,
- The far-end to which the termination is mapped (if any).

For this utility command, DACS II terminations can be divided into two categories:

- Multipoint termination, which is a multipoint circuit on a real digital multipoint bridge (DMB) in the digital signaling processing unit (DSPU), or in virtual network processing circuits.
- All other terminations.

If the network processing circuit (NPC) number specified in the command is the number of a remote terminal (DL) digroup currently under protection by the protection digroup (DGP), the execution of the command will be completed and DGP with its associated NPC number appears on the output message.

For a SLC® carrier denial message, the following appears on output: the bank identification number, operation mode, and digroup A NPC number for that remote terminal.

Command

Nonhierarchical

[I.52041]

UTL:[FRM xy,SEQ ww]:QRY,TO [s]abcddd[-eee]!

Hierarchical

[I.52041]

UTL:[FRM xy,SEQ ww]:QRY,TO uvmnpddd[-eee]!

Completion Message

Nonhierarchical

[O.52041]

M hh:mm:ss xy,ww n[vv] UTL QRY TO [s]abckkk TYPE mnxyz\
[DGP [t]mno] e LN MSG:
[<nonhierarchical_PDS_data_line>]
[<nonhierarchical_PDS_data_line>]
[<nonhierarchical_PDS_data_line>]
<nonhierarchical_PDS_data_line> {EOM|COMPL}

.
.
.

[M hh:mm:ss xy,ww n[vv] UTL QRY TO [s]abclll TYPE mnxyz\
[DGP [t]mno] e LN MSG:
[<nonhierarchical_PDS_data_line>]
[<nonhierarchical_PDS_data_line>]
[<nonhierarchical_PDS_data_line>]
<nonhierarchical_PDS_data_line> COMPL]

nonhierarchical_PDS_data_line may take on the following forms:

Format 1 Data Line: For One-Way, Two-Way, and Broadcast Cross-Connections

```
[t]defiii ppqqq <tc>
[AIS][ CUS][ RDC][ {UTST {TP kk|TG mmm}|ROLL}][ {ONEWAY|BCAST}]\
[ TLA s]
```

Format 2 Data Line: For DMB to non-DMB Cross-Connections

```
[t]defiii ppqqq fmd,tmd snn,smm nn ee <tc>
[CUS][ RDC][ {UTST TP kk|ROLL}][ ONEWAY][ NTR r][ TLA s]
```

Format 2a Data Line: For VI to non-VI Cross-Connections

```
[t]defiii ppqqq fmd,tmd <tc>
[CUS][ RDC][ {UTST TP kk|ROLL}][ ONEWAY][ TLA s]
```

Format 3 Data Line: For DMB to DMB Cross-Connections

```
[t]defiii ppqqq fmd,tmd snn,smm vv ww spp,sqq tt uu <tc>
[CUS][ RDC][ UTST TP kk][ NTR r][ TLA s]
```

Format 4 Data Line: Test Access to a Cross-Connection or Unmapped Termination

```
{TP kk|TG mmm} <tsm> l[vv] <tc> p [s]ghijjj q [t]jklenn
[CUS][ RDC][ {ONEWAY|BCAST}][ NTR r][ TLA s]
```

Format 5 Data Line: For Subrate Cross-Connections

```
[ - ]-SECH- TRSP MUX
```

Format 6 Data Line: For Subrate Cross-Connections involving test access

```
TP kk <tsm> l[vv] <accpoint>[ TLA s]
```

Format 7 Data Line: For TS0 to non-TS0 Cross-Connections

Not applicable.

Format 8 Data Line: For E1 or T1 to SDxyz Cross-Connections

[t]defiii ppqqq [{UTST {TP kk|TG mmm}|ROLL}]

Note: Formats 1 through 4 data lines are output as either one or two lines. The second line is output only if any of its optional fields are present.

[O.52042]

M hh:mm:ss xy,ww n[vv] UTL QRY TO [s]abchhh TYPE mnxyz 2 LN MSG:
UASGN[<tc> DCC][CUS][UTST {TP kk|TG mmm}][cc] {EOM|COMPL}

Hierarchical

[O.52041]

M hh:mm:ss xy,ww n[vv] UTL QRY TO uvmnpkkk TYPE mnxyz\
[DGP feigh] e LN MSG:
[<hierarchical_PDS_data_line>]
[<hierarchical_PDS_data_line>]
[<hierarchical_PDS_data_line>]
<hierarchical_PDS_data_line> {EOM|COMPL}

.
.
.

[M hh:mm:ss xy,ww n[vv] UTL QRY TO uvmnplll TYPE mnxyz\
[DGP feigh] e LN MSG:
[<hierarchical_PDS_data_line>]
[<hierarchical_PDS_data_line>]
[<hierarchical_PDS_data_line>]
<hierarchical_PDS_data_line> COMPL]

hierarchical_PDS_data_line may take on the following forms:

Format 1 Data Line: For One-Way, Two-Way, and Broadcast Cross-Connections

wxkqriii ppqqq <tc>
[AIS][CUS][RDC][{UTST {TP kk|TG mmm}|ROLL}][{ONEWAY|BCAST}]\
[TLA s]

Format 2 Data Line: For DMB to non-DMB Cross-Connections

```
wxkqriii ppqqq fmd,tmd snn,smm nn ee <tc>  
[CUS][ RDC][ {UTST TP kk|ROLL}][ ONEWAY][ NTR r][ TLA s]
```

Format 2a Data Line: For VI to non-VI Cross-Connections

```
wxkqriii ppqqq fmd,tmd <tc>  
[CUS][ RDC][ {UTST TP kk|ROLL}][ ONEWAY][ TLA s]
```

Format 3 Data Line: For DMB to DMB Cross-Connections

```
wxkqriii ppqqq fmd,tmd snn,smm vv ww spp,sqq tt uu <tc>  
[CUS][ RDC][ UTST TP kk][ NTR r][ TLA s]
```

Format 4 Data Line: Test Access to a Cross-Connection or Unmapped Termination

```
{TP kk|TG mmm} <tsm> l[vv] <tc> p edhfgjjj q opjstnnn  
[CUS][ RDC][ {ONEWAY|BCAST}][ NTR r][ TLA s]
```

Format 5 Data Line: For Subrate Cross-Connections

```
--SECH-- TRSP MUX
```

Format 6 Data Line: For Subrate Cross-Connections involving test access

```
TP kk <tsm> l[vv] <accpoint>[ TLA s]
```

Format 7 Data Line: For TS0 to non-TS0 Cross-Connections

Not applicable.

Format 8 Data Line: For E1 or T1 to SDxyz Cross-Connections

```
wxkqriii ppqqq [{UTST {TP kk|TG mmm}|ROLL}]
```

Note: Formats 1 through 4 data lines are output as either one or two lines. The second line is output only if any of its optional fields are present.

[O.52042]

M hh:mm:ss xy,ww n[vv] UTL QRY TO uvmnp hhh TYPE mnxyz 2 LN MSG:
UASGN[<tc> DCC][CUS][UTST {TP kk|TG mmm}][cc] {EOM|COMPL}

Denial Message

Nonhierarchical

[O.52041.01]

M hh:mm:ss xy,ww n[vv] UTL QRY TO [s]abcd dd[-eee] \
TYPE ----- UEQD DNY

[O.52041.02]

M hh:mm:ss xy,ww n[vv] UTL QRY TO [s]abcd dd[-eee] \
TYPE mnxyz RNGIE DNY

[O.52041.03]

M hh:mm:ss xy,ww n[vv] UTL QRY TO [s]abcd dd[-eee]\
[{RT|DL} ffff MD g[g] [t]hij] COND cc DNY

Hierarchical

[O.52041.01]

M hh:mm:ss xy,ww n[vv] UTL QRY TO uvmnp ddd[-eee] \
TYPE ----- UEQD DNY

[O.52041.02]

M hh:mm:ss xy,ww n[vv] UTL QRY TO uvmnp ddd[-eee] \
TYPE mnxyz RNGIE DNY

[O.52041.03]

M hh:mm:ss xy,ww n[vv] UTL QRY TO uvmnp ddd[-eee]\
[{RT|DL} ffff MD g[g] hhijj] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

T0 - To

[s]abc - The 3- or 4-digit nonhierarchical NPC number

If NPC numbers are expressed in three digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE, DS and DA type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-031	161-191	321-351	481-511	641-671	801-831
041-071	201-231	361-391	521-551	681-711	841-871
081-111	241-271	401-431	561-591	721-751	881-911
121-151	281-311	441-471	601-631	761-791	921-951

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within an **International module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0031	0161-0191	0321-0351	0481-0511
0041-0071	0201-0231	0361-0391	0521-0551
0081-0111	0241-0271	0401-0431	0561-0591
0121-0151	0281-0311	0441-0471	0601-0631
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0671	0801-0831	0961-0991	1121-1151
0681-0711	0841-0871	1001-1031	1161-1191
0721-0751	0881-0911	1041-1071	1201-1231
0761-0791	0921-0951	1081-1111	1241-1271
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1311	1441-1471	1601-1631	1761-1791
1321-1351	1481-1511	1641-1671	1801-1831
1361-1391	1521-1551	1681-1711	1841-1871
1401-1431	1561-1591	1721-1751	1881-1911

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1951	2081-2111	2241-2271	2401-2431
1961-1991	2121-2151	2281-2311	2441-2471
2001-2031	2161-2191	2321-2351	2481-2511
2041-2071	2201-2231	2361-2391	2521-2551

If NPC numbers are expressed in three digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-039	161-199	321-359	481-519	641-679	801-839
041-079	201-239	361-399	521-559	681-719	841-879
081-119	241-279	401-439	561-599	721-759	881-919
121-159	281-319	441-479	601-639	761-799	921-959

If NPC numbers are expressed in four digits, the valid values are:

SD type NPC numbers listed by unit number, within a **North American module** in Unit Type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0039	0161-0199	0321-0359	0481-0519
0041-0079	0201-0239	0361-0399	0521-0559
0081-0119	0241-0279	0401-0439	0561-0599
0121-0159	0281-0319	0441-0479	0601-0639
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0679	0801-0839	0961-0999	1121-1159
0681-0719	0841-0879	1001-1039	1161-1199
0721-0759	0881-0919	1041-1079	1201-1239
0761-0799	0921-0959	1081-1119	1241-1279

Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1319	1441-1479	1601-1639	1761-1799
1321-1359	1481-1519	1641-1679	1801-1839
1361-1399	1521-1559	1681-1719	1841-1879
1401-1439	1561-1599	1721-1759	1881-1919
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1959	2081-2119	2241-2279	2401-2439
1961-1999	2121-2159	2281-2319	2441-2479
2001-2039	2161-2199	2321-2359	2481-2519
2041-2079	2201-2239	2361-2399	2521-2559

uvmnp - Hierarchical NPC number

uv - Unit number
m - Module number
np - NPC number within the module

The values are listed below:

DE, DS, and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

SD type NPC numbers listed by unit, module, and NPC Number for **North American modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-39

SD type NPC numbers listed by unit, module, and NPC Number for **International modules** in Unit type FT (FTU/IFTU/IFTU2). Only odd NPC numbers are valid for SD type NPCs. The even numbered NPCs immediately following an odd SD type NPC are not available for any other NPC type.

Unit	Module	NPC
01-16	1-4	01-31

ddd - Beginning range channel or conference number
eee - End range channel or conference number
kkk - Mid-range channel or conference number
lll - Mid-range channel or conference number
hhh - Typical midrange channel or conference number

Valid values are given below

Channel numbers
001 through 024

001-047	Odd only (SLC 96® Carrier, Mode 3, DGA)
049-095	Odd only (SLC 96 Carrier, Mode 3, DGC)
001-024	Odd and Even (SLC 96 Carrier, Mode 1, DGA)
025-048	Odd and Even (SLC 96 Carrier, Mode 1, DGB)
049-072	Odd and Even (SLC 96 Carrier, Mode 1, DGC)
073-096	Odd and Even (SLC 96 Carrier, Mode 1, DGD)
001-024	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGA)
025-048	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGB)
049-072	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGC)
073-096	Odd and Even (SLC Series 5 Carrier, Feature Package C, DGD)

Conference numbers
001-500 (Virtual NPC)

001-085 (MB NPC)

UASGN - Unassigned

DCC - Disconnect code

tc - Trunk conditioning

Represents the desired cross-connected signaling and insertion word applied when a failure occurs. A trunk conditioning specification consists of a combination of a signaling specification followed by an insertion word (IW) specification.

Valid values are listed below:

tc	<i>signaling modes</i>
TC(ijkl,mnop) TRB	2-way 4-state
TC(ijkl,mnop) IW pq	2-way 4-state
TC(----,mnop) TRB	1-way 4-state
TC(----,mnop) IW pq	1-way 4-state
TC(ab,cd) TRB	2-way 16-state
TC(ab,cd) IW pq	2-way 16-state
TC(--,cd) TRB	1-way 16-state
TC(--,cd) IW pq	1-way 16-state
TRSP IW pq	
TRSP TRB	
TRSP	

TRB - Trouble

MUX - Multiplexer out of sync

TRSP - Transparent

RT - Remote terminal

DL - Data link

ffff - SLC® remote terminal (RT) or digital carrier line unit (DCLU) bank identification number (0000 through 9999)

MD - Mode

g[g] - Mode of operation of the RT or DCLU

<i>g[g]</i>	<i>Explanation</i>
1	SLC 96 Carrier Mode 1
3	SLC 96 Carrier Mode 3
C	SLC Series 5 Carrier Feature Package C (FPC)

AIS - Alarm indication signal

DS1 range cross-connection with AIS specifications

accpoint

- Access point under test

<i>accpoint</i>	<i>Explanation</i>

[s]abchhh	The multiplexed DS0B signal.

[s]abchhh/ee	The DS0A signal or customer ee data stream only for a DS0B signal.

MPTM **[s]abchhh/ee MJU nnnn [BRi]**

The multipoint master of the circuit **[s]abchhh/ee** and the leg of MJU nnnn which is under test.

If only "MJU nnnn" is specified, the control leg of MJU nnnn is under test. If "BRi" is specified, branch i of MJU nnnn is under test.

nnnn (0000 through 9999)

i (1 through 4)

DGP - Digroup P (protection digroup, SLC carrier bank)

[t]mno - The 3- or 4-digit DGP nonhierarchical NPC number

[t]hij - The 3- or 4-digit DGA (digroup A) nonhierarchical NPC number

feigh - DGP hierarchical NPC number

hhijj - DGA (digroup A) hierarchical NPC number

[t]defiii

- Nonhierarchical FROM termination

[t]def - The 3- or 4-digit nonhierarchical NPC number

Valid values are identical to those for **[s]abc**

iii - Channel number

Valid values are identical to those for **ddd**

ppqqq - NPC type of the FROM termination

To interpret values of **ppqqq** see the table following **mnxyz** below.

Note: If **ppqqq** = MB100 or VI100, then FROM is a multipoint termination and TO is not.

TYPE - Type

mnxyz - NPC Type

mn *Explanation*

DA	FTU ANSI NPC type
DE	Enhanced digroup NPC
DS	SLC® terminating digroup NPC
MB	Digital multipoint bridge NPC
SD	Digital Signal Processing Application NPC on TG193 pack
TA	DS3U ANSI NPC type
TE	DS3U and HDS3U enhanced NPC
TH	Hybrid DS3U E1 NPC
VI	Virtual NPC

xyz - Multiframe, line and signaling, and channel numbering formats

DA-type xyz fields

x - Multiframe format for the digroup

x *Explanation*

0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y *Explanation*

0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DA-type clear-DS1 NPC.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

DA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a DA NPC with both a valid framing format (D4, ESF, T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the DA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II FTU, the NPC must be provisioned as NPC type **DE9y9**.

Zero Byte Time Slot Interchange (ZBTSI) encoding is not supported by the DA NPC type. If ZBTSI is desired on an NPC in a DACS II FTU, the NPC must be provisioned as a DE NPC type with its **y** option selecting ZBTSI (**DEx3z**).

DE-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4, y=5, and y=6, DMI signalling.

y - Line and signaling format

y *Explanation*

- 0** ZCS - Zero code suppression
- 1*** NZCS - No zero code suppression
- 2*** B8ZS - Bipolar with 8 zero substitution
- 3†** ZBTSI - Zero-bit time-slot interchanger
- 4** ZCS/DMI - Zero code suppression/DMI signaling
- 5** NZCS/DMI - No zero code suppression/DMI signaling
- 6** B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
- 7-9** Not assigned

* Only options 1 and 2 are applicable to DE-type clear-DS1 NPC.

† Only valid with ESF (x = 2 or 3)

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** No channel numbering format, clear-DS1

DS-type xyz fields

x - Multiframe format

x *Explanation*

- 0** Not assigned
- 1** D4
- 2** ESF - Voice
- 3** Not assigned
- 4** Not assigned
- 5** Not assigned
- 6** SLC® 96 carrier Fs
- 7** SLC 5 carrier ESF with data link
- 8-9** Not assigned

y - Line and signaling format

y *Explanation*

- 0** Zero code suppression (ZCS)
- 1** No zero code suppression (NZCS)
- 2** Bipolar with 8 zero substitution (B8ZS)
- 3-9** Not assigned

z - Counting sequence format

z *Explanation*

- 0** SLC 96 carrier Mode III D4 counting sequence
- 1** SLC 96 carrier Mode III D1D counting sequence
- 2** SLC 96 carrier Mode I D1D counting sequence
- 3** SLC Series 5 carrier D4 counting sequence
- 4-9** Not assigned

MB-type xyz fields

x - Fixed at 1

y - Fixed at 0

z - Fixed at 0

TA-type xyz fields

x - Multiframe format for the digroup

x *Explanation*

- 0** Not assigned
- 1** D4
- 2** ESF - Voice
- 3** ESF - Data
- 4** DDST (T1DM - R bit connection via channel 24)
- 5-7** Not assigned
- 8** Ericsson Cellular format
- 9** Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the TA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II DS3U, the NPC must be provisioned as NPC type TE919.

TE-type xyz fields

x - Multiframe format

x *Explanation*

- 0** Not assigned
- 1** D4
- 2** ESF - Voice
- 3** ESF - Data
- 4** DDST (T1DM - R bit connection via channel 24)
- 5-7** Not assigned
- 8*** Ericsson Cellular format
- 9** No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4 and y=5, DMI signalling.

y - Line and signaling format

y *Explanation*

- 0** ZCS - Zero code suppression
- 1*** NZCS - No zero code suppression
- 2** Not assigned
- 3** Not assigned
- 4** ZCS/DMI - Zero code suppression/DMI signaling
- 5** NZCS/DMI - No zero code suppression/DMI signaling
- 6-9** Not assigned

* Only option 1 is applicable to TE-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** No channel numbering format, clear-DS1

VI-type xyz fields

x - Fixed at 1
y - Fixed at 0
z - Fixed at 0

SD-type xyz fields (Digital Signal Processing Platform (DSPP) Applications)

SD111 X.50/X.57 International subrate application
SD311 Digital Multipoint Bridge application
SD411 North American DDS Subrate and MJU application
SDxyz Possible future applications with specific values for xyz

e - Number of lines in the message segment

SECH - Subrate establish channel

CUS - Customer
The circuit is a customer controlled circuit

RDC - Red circuit
The circuit is a red circuit

UTST - Under test
The circuit is under test

ONEWAY - One-way
The circuit is a one-way connection

BCAST - Broadcast
The circuit is a broadcast-type connection

ROLL - Roll
Bridged leg from Roll procedure

TLA - Terminate and leave active

s - Terminate and leave state

s *state*

F FROM terminated

T TO terminated

B BOTH terminated

fmd - FROM multipoint circuit mode of the connection

tmd - TO multipoint circuit mode of the connection

For DMB circuits, there are four possible values for fmd and tmd:

fmd,

tmd *Explanation*

SYM For legs of a symmetrical multipoint circuit (must be a DMB channel)

BRD For nonbackbone (tributary) legs of a broadcast multipoint circuit (must be a DMB channel)

BBL For the backbone leg of a broadcast multipoint circuit (must be a DMB channel)

LEG For the end that does not terminate on the multipoint circuit (must be an FTU/DS3U channel)

For virtual NPC circuits, there are three possible values for fmd and tmd:

fmd,

tmd *Explanation*

BRD For nonbackbone legs of a broadcast multipoint circuit (must be a virtual NPC channel)

BBL For the backbone leg of a broadcast multipoint circuit (must be a virtual NPC channel)

LEG For the end that does not terminate on the multipoint circuit (must be FTU/DS3U channels)

- snn** - Incoming gain adjust parameters for the DMB NPC
smm - Outgoing gain adjust parameters for the DMB NPC

- s** - Sign (+ or -)
nn - Incoming gain adjust value (-90 through +88)
mm - Outgoing gain adjust value (-90 through +88)

These are the parameters requested for the TO termination. Values are given in steps of two and the units are tenths of a db.

For type VI100 NPCs snn and smm will be output as "---"

The special value --- (three dashes) can be used for either snn or smm (but not both) when no change is to be made to that parameter. This feature allows changing only one of the two parameters if desired. Also, if the cross-connection was provisioned with the NTR (no transmit) option, the gain adjustment in the direction for which transmission is shut off MUST be ---.

- nn** - Noise guard setting (in dB) for the FROM/TO NPC

The following default values apply:

For Symmetrical bridges	Default: nn = -18 db
For Polling circuits	Default: nn = 0 db

Valid values are listed below:

nn
00 db
06 db
12 db
18 db
-- (For VI100 NPCs)

- ee** - Echo suppression setting (in dB) for the FROM/TO NPC

The following default values apply:

For Symmetrical bridges	Default: ee = -18 db
For Polling circuits	Default: ee = 0 db

Valid values are listed below:

ee
00 db
06 db
12 db
18 db
-- (For VI100 NPCs)

spp - Incoming gain adjust parameters for the TO DMB NPC
sqq - Outgoing gain adjust parameters for the FROM DMB NPC

See snn and smm above for explanation and values.

vv - Noise guard setting (in dB) for the FROM DMB NPC
tt - Noise guard setting (in dB) for the TO DMB NPC

See nn above for default values.

vv, tt

00 db

06 db

12 db

18 db

ww - Echo suppression setting (in dB) for the FROM DMB NPC
uu - Echo suppression setting (in dB) for the TO DMB NPC

See ee above for default values.

ww, uu

00 db

06 db

12 db

18 db

NTR - No transmit

r - Direction which has no transmission

r *Explanation*

F FROM

T TO

TP - Test port

kk - Test port number (01 through 96)

TG - Test (access) group

mmm - Test group number (001 through 400)

t sm - Test mode

Values are listed below:

<i>t sm</i>	<i>Mode</i>
HUB	Hubbed
LPD	Looped
MON	Monitor
SPL	Split
TPR	Test Port Released
TGR	Test Group Released
SPLNOY	Split with yellow alarm transmission disabled

l - Link used to access this test port (0 if mode is released)

vv - Virtual circuit number of an X.25 link used to access this test port
(01 through 16)

p - Channel assignment

Valid values are listed below:

<i>p</i>	<i>Explanation</i>
F	FROM side of circuit under test
H	HIGH channel of hubbed test port (only for HUB test mode)

q - Channel assignment

Valid values are listed below:

<i>q</i>	<i>Explanation</i>
T	TO side of circuit under test
L	LOW channel of hubbed Test Port (only for HUB test mode)

[s]ghijj

- Nonhierarchical FROM, HIGH, or DSPP NPC number

If test access is made to a digital signal processing platform (used for signaling conversion between an E1 and a T1 NPC) then [s]ghijj is the SP100 NPC.

[t]jklenn

- Nonhierarchical TO, LOW, E1, or T1 NPC number

If test access is made to a digital signal processing platform (used for signaling conversion between an E1 and a T1 NPC) then [t]jklenn is the E1 or T1 NPC.

edhfg - Hierarchical FROM/HIGH

opjst - Hierarchical TO/LOW

ed, op - Unit number

h, j - Module number

fg, st - NPC number within module

Valid values are identical to those for uvmnp

[s]ghi, [t]jhk

- The 3- or 4-digit nonhierarchical NPC number

Valid values are identical to those for [s]abc.

jjj, nnn

- Channel or time slot number

Valid values are identical to those for ddd above.

UEQD - Unequipped

RNGIE - Range input error

COND - Condition

cc - Hexadecimal condition code

cc Explanation

15	NPC is unequipped
E3	One way unassigned channel/NPC in QRY,TO
0B	Invalid CEPT NPC
62	Invalid channel number
63	NPC is a DGP
7F	NPC is not added
91	SR NPC was specified - not allowed
F7	Corresponding NPC for virtual channel is not provisioned
B4	NPC is channelized type

UTL, QRY, TO

NON-CANNELIZED UTILITY QUERY TO

Explanation Of Command

This command requests provisioning information for a specific TO non-channelized network processing circuit.

Command

Nonhierarchical

[I.52061]

UTL:FRM xy,SEQ ww:QRY,TO [s]abc!

Hierarchical

[I.52061]

UTL:FRM xy,SEQ ww:QRY,TO uvmnp!

Completion Message

Nonhierarchical

[O.52061]

M hh:mm:ss xy,ww n[vv] UTL QRY TO [s]abc TYPE mnxyz 2 LN MSG:
[[t]ghi mnxyz][AIS][CUS][RDC][{UTST jj|ROLL}]\
[{ONEWAY|BCAST|UASGN[kk]}][TLA s] COMPL

Usage: If the NPC is involved in test access,

[O.52061]

M hh:mm:ss xy,ww n[vv] UTL QRY TO [s]abc TYPE mnxyz 2 LN MSG:
[t]ghi [u]klm FAD <tmode> <link number> COMPL

Hierarchical

[O.52061]

M hh:mm:ss xy,ww n[vv] UTL QRY TO uvmnp TYPE mnxyz 2 LN MSG:
[wxkqr mnxyz][AIS][CUS][RDC][{UTST jj|ROLL}]\
[{ONEWAY|BCAST|UASGN[kk]}][TLA s] COMPL

Usage: If the NPC is involved in test access,

[O.52061]

M hh:mm:ss xy,ww n[vv] UTL QRY TO uvmnp TYPE mnxyz 2 LN MSG:
wxkqr ghijk FAD <tmode> <link number> COMPL

Denial Message

Nonhierarchical

[O.52061.01]

M hh:mm:ss xy,ww n[vv] UTL QRY TO [s]abc TYPE mnxyz COND cc DNY

Hierarchical

[O.52061.01]

M hh:mm:ss xy,ww n[vv] UTL QRY TO uvmnp TYPE mnxyz COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TO - points to the TO NPC number

[s]abc - The 3- or 4-digit nonhierarchical NPC number of TO non-channelized NPC.

The valid values are listed below:

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0160	0161-0320	0321-0480	0481-0640
016A-016H	032A-032H	048A-048H	064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0800	0801-0960	0961-1120	1121-1280
080A-080H	096A-096H	112A-112H	128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1440	1441-1600	1601-1760	1761-1920
144A-144H	160A-160H	176A-176H	192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical NPC number of TO non-channelized NPC

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are:

DE and DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

TE NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

[t]ghi - The 3- or 4-digit nonhierarchical number of FROM NPC mapped to TO NPC,
or FROM NPC in the test access connection (--- for unassigned NPC)

[u]klm - The 3- or 4-digit nonhierarchical number of TO NPC in the test
access connection

----- or ----- for unassigned NPC

wxkqr - Hierarchical number of FROM NPC mapped to TO NPC

ghijk - FROM NPC in the test access connection.

mnxyz - NPC type of TO or FROM NPCs

mn	Explanation

DA	Dual digroup ANSI NPC
DE	Dual digroup NPC

TA	DS3U ANSI NPC
TE	DS3U or HDS3U Noninterface unit NPC

TH	Hybrid DS3U CEPT NPC

-- - Unequipped or unassigned NPC

DA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DA-type clear-DS1 NPC.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

DA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a DA NPC with both a valid framing format (D4, ESF, T1DM) using the **x** field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the **z** field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no path performance monitoring is not supported by the DA NPC type. If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II FTU, the NPC must be provisioned as NPC type **DE9y9**.

Zero Byte Time Slot Interchange (ZBTSI) encoding is not supported by the DA NPC type. If ZBTSI is desired on an NPC in a DACS II FTU, the NPC must be provisioned as a DE NPC type with its **y** option selecting ZBTSI (**DEx3z**).

DE-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4, y=5, and y=6, DMI signalling.

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2*	B8ZS - Bipolar with 8 zero substitution
3†	ZBTSI - Zero-bit time-slot interchanger
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6	B8ZS/DMI - Bipolar with 8 zero substitution/DMI signaling
7-9	Not assigned

* Only options 1 and 2 are applicable to DE-type clear-DS1 NPC.

† Only valid with ESF (x = 2 or 3)

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z *Explanation*

- 0** D4 channel bank channel numbering
- 1** D2 channel bank channel numbering
- 2** D1D channel bank channel numbering
- 3-8** Not assigned
- 9** No channel numbering format, clear-DS1

TH-Type xyz field

The provisioning values of *x*, *y*, and *z* for the TH type are shown in the following tables (a 'Y' in a column of the Table indicates that the feature at the top of the column is enabled by the corresponding (*x*, *y* or *z*) provisioning value):

Table 24-26. Provisioning values for *x*

x value	CRC-4 Mode	Automatic CRC-4
0	Y	
8		Y
B		

Table Notes:

1. The "Automatic CRC-4" is also known as CRC-4 Interworking.
2. If the CRC-4 mode is enabled (*x* value 0) the NPC will compute checksums over the transmitted data and transmit the checksum as part of the CRC-4 multiframe pattern in TS0. The NPC will also monitor the incoming CRC-4 multiframe and verify the CRC-4 checksum. If the CRC-4 multiframe cannot be found using the CRC-4 reframe algorithm, then the NPC will declare an alarm.

If the automatic CRC-4 option is selected (*x* value 8), the NPC will perform all the functions of the CRC-4 mode. However, if the CRC-4 multiframe is lost, the NPC will not declare an alarm or apply consequent actions.
3. *x* value B does not enable any of the features shown in the Table; this is a valid option.
4. Only *x* values 0, 8, and B are valid *x* values, all other *x* values will be denied.

Table 24-27. Provisioning values for *y*

<i>y</i> value	CAS Mode	NSA Mode	Telephone Numbering	Timeslot Numbering	Convert CTS 16	AIS in CTS 16	Framed Clear	Unframed Clear
0	Y		Y		Y	Y		
2	Y		Y		Y			
4	Y		Y			Y		
6	Y		Y					
8		Y	Y					
9		Y		Y				
C							Y	
D								Y

Table Notes:

1. *y* values 1, 3, 5, 7, A-B and E-F are unassigned (that is, invalid).
2. For *y* values 0, 2, 4 and 6 Channel Associated Signaling (CAS) is enabled. In this mode the Telephone Channel Numbering system is always used.

If the "Convert TS16" option is selected (*y* values 0 and 2), the *abcd* bits of TS16 will be converted to '1111' if they are received as '0000'. This is to prevent false framing in the TS16 multiframe. If this option is not selected (*y* values 4 and 6), a value of '0000' in the *abcd* bits will be transmitted transparently.

If the "AIS in TS16" option is selected (*y* value 0 and 4), AIS will always be applied to received TS16 signaling channels on detection of RAI (Remote Alarm Indication, Bit 3 of TS0 NFW), RAIS (Remote AIS Indication, Bit 4 of TS0 NFW, if provisioned) or R16 (Remote Alarm Indication received in TS16). If this option is not selected (*y* values 2 and 6), AIS will not be applied on detection of RAI, RAIS, or R16.

3. For *y* values 8 and 9 the NPC will be Non Signaling Associated (NSA). In this mode, Telephone Channel Numbering (*y*=8) or Timeslot Channel Numbering (*y*=9) may be selected.
4. The NPC can be set up as a framed clear 2 Mbit/s interface (*y*=C) or as an unframed clear 2 Mbit/s interface (*y*=D). When provisioned as a clear 2 Mbit/s interface, an NPC does not modify the cross-connected data in any way. This means that the following functions are not performed in the clear 2 Mbit/s mode:
 - Outgoing CRC-4 checksum generation (applies to framed clear 2 Mbit/s interfaces with CRC-4 option enabled).
 - Remote alarm indications (line format errors are reported locally, but no alarm indicators are sent in TS0 to the remote end).

Table 24-28. Provisioning values for z

z value	C.A. Timing		RAI Set Time			NFW Bit 4 Use		RAIS Set Time		MBER Enabled
	HW	FW	2ms	166ms	500ms	RAIS	RBER	166ms	500ms	
0	Y		Y							
1		Y	Y							
2	Y			Y						
3		Y			Y					
4	Y		Y			Y		Y		
5		Y	Y			Y			Y	
6	Y		Y				Y			Y
7		Y	Y				Y			Y
A	Y		Y							Y
B		Y	Y							Y

Table Notes:

1. z values 8, 9, C, D, E and F are unassigned (that is, invalid).
2. For z values 1, 3, 5, 7 and B the consequent action timing is under firmware (FW) control. For z values 0, 2, 4, 6 and A the consequent action timing is under hardware (HW) control.

The G.732 consequent action of inserting the AIS in data channels is applied within 2 ms whether the timing is under HW control or FW control, but when under FW control, the AIS in data channels is overridden by the Insertion Word sourced from the Alternate Message Store (AMS) after detection of the local alarm:

in **500 ms**
if z = 1, 3 or 5
in **2496 ms**
if z = 7 or B

The Insertion Word pattern can be specified in the cross-connect command; on 2Mbit/s NPCs in a *gateway* **cross-connection** the Insertion Word always defaults to AIS.

The selection of HW or FW control is also used to provision the consequent actions on signaling bits. On detection of loss of frame (LOF) or multiframe alignment (LMA, Loss of Multiframe Alarm) error, the hardware immediately applies a signaling freeze by using the last good frame's signaling information. The signaling freeze remains in effect until two multiframes without errors are received. When HW control is used, the AIS in signaling bits is applied within 2 ms, overriding the signaling freeze. When FW control is used, the trunk conditioning pattern from the AMS overrides the signaling freeze once the 2Mbit/s NPC goes into the alarm state.

3. The Consequent Action timing also selects the time after which the **local** alarms are declared and cleared:*
- HW Control: **Both** remote and local alarms are declared and cleared in 166 ms.
- FW Control: Only remote alarms are declared and cleared in 166 ms. The **local** alarms are declared and cleared in 500 ms, **except when z = 7 or B**.
4. On the transmitting NPC, bit 3 in the NFW, the remote alarm indication (RAI), will be processed as specified in ITU-T Recommendation G.704 Section 2.3.2 (**that is, within 2 ms after detecting the failure**) when z = 0, 1, 4, 5, 6, 7, A or B. **However**, for z value 2 the set time is 166 ms and for z value 3 the set time is 500 ms. NFW bit 3 is always set to 0 for non-alarm condition and is set to 1 for alarm conditions.
5. On the transmitting NPC, if bit 4 of the NFW is used as RAIS (Remote AIS) indicator, NFW bit 4 will be set in 166 ms (for z = 4) or 500 ms (for z = 5) after AIS is detected in the received signal. The default idle state for Bit 4 is a '1'. The idle state can be changed to a '0' with the CHG::NPC,TS0 command. The bit is put into the active state by inverting the value of the idle state. Similarly, if NFW bit 4 is in the active state in the received signal, consequent actions are taken 166 ms after detecting this condition.
6. z values 6-7 and A-B enable the Minor Bit Error Rate and Signaling Freeze Delay Time Features.

Common Options (z = 6-7 or A-B)

- [i] Enable BER calculations, and when in the BER state:

DACS takes the alarm state consequent actions: sending a message, and activating appropriate alarm relays and summary LEDs.

When out of the BER state, DACS II retires the alarm state consequent actions: sends a retirement message, and deactivates appropriate alarm relays and summary LEDs.

- [ii] RAI set in 2 ms

- [iii] Signaling Freeze Delay Timing, Consequent Action Clear Timing:

z=6 or A hardware timing

z=7 or B firmware timing (SFDT=2496 ms, CACT=624 ms)

- [iv] BER alarm level = DMA

Specific Options for z= 6 or 7

- [v] RBER alarm level = MI

* Local alarms are those generated for the events: PWR, PBF, BER, AIS, LMA, and A16. Remote alarms are those generated for the events: RAI, RAIS, RBER, and R16.

[vi] NFW bit 4=RBER:

- DACS II sends a remote indicator in bit 4 (RBER) of the time slot 0 Non Frame Word (NFW) upstream to the far end 166 ms after detecting the Minor Bit Error Rate (BER) condition.

DACS II sets the RBER bit to its idle state, on clearing of the BER condition.

- DACS II detects the remote setting of the received bit 4 as an RBER condition and generates an appropriate message. Consequent actions are taken 166 ms after detecting this condition.

DACS II generates an appropriate retirement message when the received bit 4 returns to the idle state.

Specific Options for z= A or B

[vii] RBER unalarmed

[viii] NFW bit 4=disabled

NFW bit 4 is NOT used as RBER, although the local Minor Bit Error Rate (BER) condition is detected and cleared with the alarm state consequent actions.

Additionally:

- For telephone channel numbering, channels 16 to 30 occupy time slots 17 to 31.
- For time slot channel numbering, channels 16 to 30 occupy time slots 16 to 30.

The following tables provide a summary of invalid combinations of xyz for the TH type NPC.

Table 24-29. Combinations of x and y Values

Invalid xyz Combinations	Explanation
8Cz	Framed clear 2 Mbit/s (y value C) is valid for all valid x options except the one invoking automatic CRC-4 interworking. The interworking algorithm requires setting of outgoing E-bits, which is not permitted for a clear signal.
0Dz 8Dz	Unframed clear 2 Mbit/s (y value D) is only valid for x value B. This is the only x option which does not require decoding of TSO content.

Table 24-30. Combinations of *y* and *z* Values

Invalid xyz Combinations	Explanation
xC1 xC3 xC5 xC7 xCB xD1 xD3 xD5 xD7 xDB	Clear 2 Mbit/s (<i>y</i> value C or D) cannot be used with Firmware controlled Consequent Action (<i>z</i> values 1, 3, 5, 7 or B).
xD4 xD6	Unframed clear 2 Mbit/s (<i>y</i> value D) cannot be used with <i>z</i> value 4 (NFW Bit 4 used for RAIS) or with <i>z</i> value 6 (NFW Bit 4 used for RBER) because unframed clear signals cannot obtain TS0 framing.

Table Notes:

1. If framed clear 2 Mbit/s (*y* value C) is selected with *z* value 4 (NFW Bit 4 used for RAIS) only the receive side of this function will be enabled. Outgoing RAIS indicators cannot be transmitted during clear signal operation.
2. If framed clear 2 Mbit/s (*y* value C) is selected with *z* = value 6 (NFW Bit 4 used for RBER) only the receive side of this function will be enabled. Outgoing RBER indicators cannot be transmitted during clear signal operation.

There are no combinations between valid *x* and *z* values that are invalid.

TA-type xyz fields

x - Multiframe format for the digroup

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8	Ericsson Cellular format
9	Not assigned

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TA-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDST framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	Unchannelized Framed Clear DS1 Cross-connection

TA type NPCs provide Clear DS1 performance monitoring capability. This feature is enabled by provisioning a TA NPC with both a valid framing format (D4,ESF,T1DM) using the x field and at the same time, specifying an unchannelized Clear DS1 cross-connection using the z field.

The DACS II Release 4.0 unframed Clear DS1 cross-connection which provides no

path performance monitoring is not supported by the TA NPC type.
If an unframed Clear DS1 cross-connection is desired on an NPC in a DACS II DS3U,
the NPC must be provisioned as NPC type TE919.

TE-type xyz fields

x - Multiframe format

x	<i>Explanation</i>
0	Not assigned
1	D4
2	ESF - Voice
3	ESF - Data
4	DDST (T1DM - R bit connection via channel 24)
5-7	Not assigned
8*	Ericsson Cellular format
9	No framing format, transparent (TRSP), clear-DS1

* Ericsson Cellular format is not compatible with y=4 and y=5, DMI signalling.

y - Line and signaling format

y	<i>Explanation</i>
0	ZCS - Zero code suppression
1*	NZCS - No zero code suppression
2	Not assigned
3	Not assigned
4	ZCS/DMI - Zero code suppression/DMI signaling
5	NZCS/DMI - No zero code suppression/DMI signaling
6-9	Not assigned

* Only option 1 is applicable to TE-type clear-DS1 NPCs.

Note: DMI signaling cannot be specified in the y field if the x field is 4 (DDS framing).

z - Channel numbering format

z	<i>Explanation</i>
0	D4 channel bank channel numbering
1	D2 channel bank channel numbering
2	D1D channel bank channel numbering
3-8	Not assigned
9	No channel numbering format, clear-DS1

AIS - Alarm indication signal
The idle code for non-channelized cross-connection

CUS - Customer-controlled circuit

RDC - Red circuit

UTST - Circuit is under test

jj - is the FAD NPC number.
If MONEF is in use and there are two FADS, then
jj reports the lower FAD NPC number.

tmode - Test access mode

FAD - Facility access digroup

TERM - Termination

F - From termination
T - To termination
B - Both terminations

ONEWAY - One-way connection

BCAST - Circuit is part of a broadcast connection

UASGN - Unassigned

TLA s - Connection is terminated in direction s (F-From, T-To, B-Both)

ROLL - Bridged facility from Roll procedure

kk - Hexadecimal completion condition code

kk Explanation

E3 One way circuit. This means that although the receive side of the NPC is unassigned, the transmit side of the NPC is one-way connected. Thus, this NPC cannot be subsequently two-way connected.

E4 Broadcast circuit. This means that although the receive side of the NPC is unassigned, the NPC is the backbone leg of a NTR type broadcast circuit. Thus, this NPC cannot be subsequently cross-connected, either one-way or two-way.

cc - Hexadecimal condition code

cc *Explanation*

15 NPC is unequipped

0B Invalid CEPT NPC

B4 NPC is channelized type

E4 Broadcast unassigned channel/NPC in QRY,TO

UTL, QRY, TOD, CFA

RETRIEVE PERFORMANCE MONITORING REPORT SCHEDULE

Explanation Of Command

This command is used to query the scheduled time for the daily report of facility performance parameter threshold alarms (FAC) and carrier failure alarms (CFA). This command is used to query the scheduled time for the daily report of primary rate performance parameter threshold alarms (PRIM) and carrier failure alarms (CFA). On a frame with the GATEWAY feature enabled, the normal output response message format includes both the North American and International parameters.

Command

[I.51071]

UTL:FRM xy,SEQ ww:QRY,TOD,CFA!

Completion Message

[O.51071]

M hh:mm:ss xy,ww n[vv] QRY TOD FAC abcdef MDNT hrmsc COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

TOD - Time of day

CFA - Carrier Failure Alarm

Used to request the time of day for the daily CFA and FAC/PRIM report for non-PA and non-ANSI type NPCs.

FAC - Facility

Facility performance alarm report keyword.

abcdef - Facility performance alarm enable (hexadecimal)

The 4-bits in each of the hexadecimal digits correspond to a particular facility parameter. To enable alarm reports for a given facility parameter, set the appropriate bit of abcdef to 1. A bit set to 0 will disable the alarm report. Bit numbering is given below.

<i>bit</i>	
<i>value</i>	<i>meaning</i>
0	disabled
1	enabled

<i>hex digit</i>	<i>bit</i>	<i>parameter</i>
f	0	CGA (Carrier Group Alarm)
	1	OOE (Out of Frame)
	2	SLIP
	3	BER (Bit Error Rate)
e	4	ERS (Errored Seconds)
	5	SERS (Severely Errored Seconds)
	6	COFA (Change of Frame Alignment)
	7	CRC (Cyclic Redundancy Checksum)
d	8	BPV (Bipolar Violations)
	9	FRER (Frame Errors)
	10	Not Used
	11	Not Used
c	12	Not Used
	13	Not Used
	14	Not Used
	15	Not Used
b	16	SANE (Shelf Alarm Near End)
	17	SAFE (Shelf Alarm Far End)
	18	DS3 ALM (DS3 Alarm)
	19	Not Used
a	20	Not assigned
	21	Not assigned
	22	Not assigned
	23	Not assigned

MDNT - Midnight

The MDNT will be shown in the output when the CFA option is entered.

hrmns - Time of the scheduled performance parameter report

UTL,QRY,TPS

UTILITY QUERY, TEST PORTS

Explanation Of Command

This command reports the network processing circuits (NPCs) used for test ports, their designation, and the test modes of each equipped test port. The report includes the DSO test port and non-channelized test NPCs.

Not listed are any test ports that are unequipped with numbers less than that of the highest equipped test port **within** a network processing circuit for test ports (NPCTP) since in each NPC they must be grown in numerical order starting with the lowest numbered test port within each NPCTP (01, 13, 25, etc.).

All non-channelized test NPCs or Facility Access Digroups (FADs) will be listed together in one or more segments. Each FAD number is the same as the NPC number, and is given with its test mode.

Even though test ports that are established to a Digital Signal Processing Platform (DSPP) application (such as the DDS Subrate and MJU application, the X.50 International subrate application, or the DMB application) are put into monitor or split mode within the application, this command will always display a Test Port as a split connection as long as it is connected to an application.

Command

[I.53061]

UTL:FRM xy,SEQ ww:QRY,TPS!

Completion Message

Nonhierarchical

[O.53061]

M hh:mm:ss xy,ww n[vv] UTL QRY TPS kk e LN MSG:
NPCTP n NPC [s]abc <md01> <md02> ... <md12>
NPCTP n NPC [s]abc <md13> <md14> ... <md24>
NPCTP n NPC [s]abc <md25> <md26> ... <md36>
NPCTP n NPC [s]abc <md37> <md38> ... <md48> <EOM|COMPL>

M hh:mm:ss xy,ww n[vv] UTL QRY TPS kk e LN MSG:
NPCTP n NPC [s]abc <md49> <md50> ... <md60>
NPCTP n NPC [s]abc <md61> <md62> ... <md72>
NPCTP n NPC [s]abc <md73> <md74> ... <md84>
NPCTP n NPC [s]abc <md85> <md86> ... <md96> <EOM|COMPL>

[O.53061]

M hh:mm:ss xy,ww n[vv] UTL QRY FAD kk e LN MSG:
[s]abc,<tmode> [s]abc,<tmode> [s]abc,<tmode> [s]abc,<tmode>
[s]abc,<tmode> [s]abc,<tmode> [s]abc,<tmode> [s]abc,<tmode>
[s]abc,<tmode> [s]abc,<tmode> [s]abc,<tmode> [s]abc,<tmode>
[s]abc,<tmode> [s]abc,<tmode> EOM
.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY FAD kk e LN MSG:
[s]abc,<tmode> [s]abc,<tmode> [s]abc,<tmode> [s]abc,<tmode>
[s]abc,<tmode> [s]abc,<tmode> [s]abc,<tmode> [s]abc,<tmode>
[s]abc,<tmode> [s]abc,<tmode> [s]abc,<tmode> [s]abc,<tmode>
[s]abc,<tmode> [s]abc,<tmode> EOM

M hh:mm:ss xy,ww n[vv] UTL QRY TPS COMPL

[O.53062]

M hh:mm:ss xy,ww n[vv] UTL QRY TPS 00 NPC [0]000 COMPL

Hierarchical

[O.53061]

M hh:mm:ss xy,ww n[vv] UTL QRY TPS kk p LN MSG:
NPCTP n NPC uvmnp <md01> <md02> ... <md12>
NPCTP n NPC uvmnp <md13> <md14> ... <md24>
NPCTP n NPC uvmnp <md25> <md26> ... <md36>
NPCTP n NPC uvmnp <md37> <md38> ... <md48> <EOM|COMPL>

M hh:mm:ss xy,ww n[vv] UTL QRY TPS kk p LN MSG:
NPCTP n NPC uvmnp <md49> <md50> ... <md60>
NPCTP n NPC uvmnp <md61> <md62> ... <md72>
NPCTP n NPC uvmnp <md73> <md74> ... <md84>
NPCTP n NPC uvmnp <md85> <md86> ... <md96> <EOM|COMPL>

[O.53061]

M hh:mm:ss xy,ww n[vv] UTL QRY FAD kk p LN MSG:
uvmnp,<tmode> uvmnp,<tmode> uvmnp,<tmode> uvmnp,<tmode>
uvmnp,<tmode> uvmnp,<tmode> uvmnp,<tmode> uvmnp,<tmode>
uvmnp,<tmode> uvmnp,<tmode> uvmnp,<tmode> uvmnp,<tmode>
uvmnp,<tmode> EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY FAD kk p LN MSG:
uvmnp,<tmode> uvmnp,<tmode> uvmnp,<tmode> uvmnp,<tmode>
uvmnp,<tmode> uvmnp,<tmode> uvmnp,<tmode> uvmnp,<tmode>
uvmnp,<tmode> uvmnp,<tmode> uvmnp,<tmode> uvmnp,<tmode>
uvmnp,<tmode> EOM

M hh:mm:ss xy,ww n[vv] UTL QRY TPS COMPL

[O.53062]

M hh:mm:ss xy,ww n[vv] UTL QRY TPS 00 NPC 00000 COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

TPS - Test ports

kk - Total number of test ports equipped or total number of equipped non-channelized test NPCs in segment

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number of test NPC

The valid values are:

If NPC numbers are expressed in three digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920

Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE and TA type NPC numbers listed by unit number, Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical NPC number of test NPC

uv - Unit number
m - Module number
np - NPC number within the module

The valid values are:

DE and DA type NPC numbers listed by unit, module, and NPC Number
 Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE and TA NPC numbers listed by unit, module, and NPC Number
 Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

NPCTP - NPC for test ports

FAD - Facility access digroup
 Non-channelized test NPC

n - 64Kbit/s NPCTP number (1 through 8)

md01-md96
 - Mode of 64Kbit/s Test Port number nn (01 through 96)

mdnn Definition

TPR	Test Port Released
MON	Monitor
SPL	Split
HUB	Hubbed
LPD	Looped
---	Not equipped

tmode - Test mode of non-channelized test NPC

<i>tmode</i>	<i>Definition</i>
MONE	Monitor E (FROM)
MONF	Monitor F (TO)
MONEF	Monitor E and F
SPLTA	Split A
SPLTB	Split B
SPLTAB	Split A and B
SPLTE	Split E
SPLTF	Split F
SPLTEF	Split E and F
LOOPE	Loop E
LOOPF	Loop F
LPBKT	Loopback Test
HUB	Hub

e - Number of lines in message (2 through 5)

UTL, QRY, TS0, NPC

QUERY NPC TIME SLOT ZERO

Explanation Of Command

This message prints out the status of the provisioned transmit or of the actual received spare International, National, and Remote Alarm Indication (A) Bits in time slot 0 of a specified network processing circuit (NPC) or range of NPCs. If an NPC range was specified in the input command, the following floating window rules apply:

- Unequipped NPCs within the requested range will be skipped.
- If a CEPT gap is within the requested range, the NPCs in the gap will be skipped.
- If an endpoint of the requested range is in a CEPT gap, then the NPCs in the portion of the range which is in the gap will be denied.

Command

Nonhierarchical

[I.56321]

UTL:FRM xy,SEQ ww:QRY,TS0 s,NPC [s]abc[-[t]def]!

Hierarchical

[I.56321]

UTL:FRM xy,SEQ ww:QRY,TS0 s,NPC uvmnp[-wxkqr]!

Completion Message

Nonhierarchical

[O.56321]

M hh:mm:ss xy,ww n[vv] UTL QRY TS0 s NPC [s]abc abcdefgh COMPL

.
.
.

[M hh:mm:ss xy,ww n[vv] UTL QRY TS0 s NPC [t]def abcdefgh COMPL]

[M hh:mm:ss xy,ww n[vv] UTL QRY TS0 s NPC [s]abc-[t]def COMPL]

Hierarchical

[O.56321]

M hh:mm:ss xy,ww n[vv] UTL QRY TS0 s NPC uvmnp abcdefgh COMPL

.
.
.

[M hh:mm:ss xy,ww n[vv] UTL QRY TS0 s NPC wxkqr abcdefgh COMPL]

[M hh:mm:ss xy,ww n[vv] UTL QRY TS0 s NPC uvmnp-wxkqr COMPL]

Denial Message

Nonhierarchical

[O.56321.01]

M hh:mm:ss xy,ww n[vv] UTL QRY TS0 s NPC [t]ghi COND cc DNY

Hierarchical

[O.56321.01]

M hh:mm:ss xy,ww n[vv] UTL QRY TS0 s NPC edhfg COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - Nonhierarchical NPC number
Values are listed below:

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

[t]def - Nonhierarchical NPC number

Values are identical to those for [s]abc.

uvmnp - Hierarchical NPC number

wxkqr - Hierarchical NPC number

TH NPC numbers listed by unit, module, and NPC Number
Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

uv, wx - Unit number
m, k - Module number
np, qr - NPC number

TS0 - Time slot 0

s - Direction of transmission for time slot 0 bits

<i>s</i>	<i>Explanation</i>
T	Provisioned time slot 0 values
R	Received time slot 0 values

[t]ghi - The 3- or 4-digit nonhierarchical NPC number (abc through def)

[t]jkl - The 3- or 4-digit nonhierarchical NPC number (abc through def)

edhfg - Hierarchical NPC number (uvmnp through wxkqr)

opjst - Hierarchical NPC number (uvmnp through wxkqr)

ed, op - Unit number (uv through wx)
h, j - Module number (m through k)
fg, st - NPC number (np through qr)

abcdefgh

- Eight individual variables.

These represent the provisioned or received state of the time slot 0 bits.

For Clear-2Mbit/s NPCs, dashes ("-----") will be shown in place of TS0 bits.

cc - Hexadecimal condition code

cc *Explanation*

04	Subject entity is out of service
10	Unit is not equipped
11	UC is out of service
13	FTMI is not equipped
14	FTMI is out of service
15	NPC is unequipped
25	FTMI type error
26	NPC type error
0B	Invalid CEPT NPC

cc *Explanation*

46 NPC Failed or Out of Service

UTL, QRY, TS0M, NPC

QUERY TIME SLOT ZERO MONITOR

Explanation Of Command

This message checks whether the received spare national and international bits in time slot 0 are provisioned for monitoring. This information may be requested for a single network processing circuit (NPC) or a range of circuits. If an NPC range was specified in the input command, the following floating window rules apply:

- Unequipped NPCs within the requested range will be skipped.
- If a CEPT gap is within the requested range, the NPCs in the gap will be skipped.
- If an endpoint of the requested range is in a CEPT gap, then the NPCs in the portion of the range which is in the gap will be denied.

Command

Nonhierarchical

[I.56323]

UTL:FRM xy,SEQ ww:QRY,TS0M,NPC [s]abc[-[t]def]!

Hierarchical

[I.56323]

UTL:FRM xy,SEQ ww:QRY,TS0M,NPC uvmnp[-wxkqr]!

Completion Message

Nonhierarchical

[O.56323]

M hh:mm:ss xy,ww n[vv] UTL QRY TS0M NPC [s]abc abcdefgh TS0MBOFL v \
COMPL

.
.
.

[M hh:mm:ss xy,ww n[vv] UTL QRY TS0M NPC [t]def abcdefgh TS0MBOFL v \
COMPL]

[M hh:mm:ss xy,ww n[vv] UTL QRY TS0M NPC [s]abc-[t]def COMPL]

Hierarchical

[O.56323]

M hh:mm:ss xy,ww n[vv] UTL QRY TS0M NPC uvmnp abcdefgh TS0MBOFL v \
COMPL

.
.
.

[M hh:mm:ss xy,ww n[vv] UTL QRY TS0M NPC wxkqr abcdefgh TS0MBOFL v \
COMPL]

[M hh:mm:ss xy,ww n[vv] UTL QRY TS0M NPC uvmnp-wxkqr COMPL]

Denial Message

Nonhierarchical

[O.56323.01]

M hh:mm:ss xy,ww n[vv] UTL QRY TS0M NPC [v]ghi[-[u]jkl] COND cc DNY

Hierarchical

[O.56323.01]

M hh:mm:ss xy,ww n[vv] UTL QRY TS0M NPC edhfg[-opjst] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

[s]abc - The 3 or 4 digit nonhierarchical starting NPC number

[t]def - The 3 or 4 digit nonhierarchical ending NPC number

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical starting NPC number
wxkqr - Hierarchical ending NPC number

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

The values are listed below:

TH NPC numbers listed by unit, module, and NPC Number
 Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

[v]ghi - The 3- or 4-digit nonhierarchical NPC number ([s]abc through [u]jkl)

[u]jkl - The 3- or 4-digit nonhierarchical NPC number ([v]ghi through [t]def)

edhfg - Hierarchical NPC number (uvmnp through opjst)

opjst - Hierarchical NPC number (edhfg through wxkqr)

ed, op - Unit number (uv through wx)

h, j - Module number

fg, st - NPC number

TS0M - Time slot 0 monitor

abcdefgh
 - Time slot 0 monitor bits

TS0MBOFL

- Time slot 0 monitor buffer overflow keyword

v - TS0M condition indicator

cc - Hexadecimal condition code

cc *Explanation*

10 Unit is not equipped

15 NPC is unequipped

0B Invalid CEPT NPC

F1 Parameter only valid with PA, PB, or PC type NPCs

UTL, QRY, TSIG, NPC

QUERY ANSI NPC TEST SIGNAL

Explanation Of Command

This message queries whether a single or range of Network Processing Circuits (NPCs) are transmitting Payload or ESF data link test signals. Only ANSI (DA/TA-type) NPCs provide this capability.

The response is formatted on a module by module basis. The response indicates whether or not any Payload and/or Data Link Test Signals are currently active for each NPC in the addressed range. An NPC may have both a Payload and a Data Link Test Signal active simultaneously.

Command

Nonhierarchical

[I.53161]

UTL:FRM xy,SEQ ww:QRY,TSIG,NPC [s]abc[-[t]def]!

Hierarchical

[I.53161]

UTL:FRM xy,SEQ ww:QRY,TSIG,NPC uvmnp[-wxkqr]!

Completion Message

Nonhierarchical

[O.53161]

M hh:mm:ss xy,ww n[vv] UTL QRY TSIG NPC [u]ghi-[u]jkl TOT nnn\
[COND cc] 5 LN MSG:
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd]
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd]
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd]
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd] EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY TSIG NPC [v]mno-[v]pqr TOT nnn\
[COND cc] 5 LN MSG:
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd]
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd]
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd]
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd] EOM

M hh:mm:ss xy,ww n[vv] UTL QRY TSIG NPC [s]abc-[t]def[COND cc] COMPL

[O.53162]

M hh:mm:ss xy,ww n[vv] UTL QRY TSIG NPC [s]abc pp/dd COMPL

Hierarchical

[O.53161]

M hh:mm:ss xy,ww n[vv] UTL QRY TSIG NPC uvmaa-uvmbb TOT nnn\
[COND cc] 5 LN MSG:
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd]
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd]
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd]
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd] EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY TSIG NPC wxkaa-wxkbb TOT nnn\
[COND cc] 5 LN MSG:
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd]
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd]
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd]
pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd pp/dd [pp/dd pp/dd pp/dd] EOM

M hh:mm:ss xy,ww n[vv] UTL QRY TSIG NPC uvmnp-wxkqr[COND cc] COMPL

[O.53162]

M hh:mm:ss xy,ww n[vv] UTL QRY TSIG NPC uvmnp pp/dd COMPL

Denial Message

Nonhierarchical

[O.53161.01]

M hh:mm:ss xy,ww n[vv] UTL QRY TSIG NPC [s]abc[-[t]def] \
COND cc DNY

Hierarchical

[O.53161.01]

M hh:mm:ss xy,ww n[vv] UTL QRY TSIG NPC uvmnp[-wxkqr] \
COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TSIG - Test signal

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical NPC number, start of NPC range
[t]def - The 3- or 4-digit nonhierarchical NPC number, end of NPC range

[u]ghi - Lowest numbered NPC in the FTM that contains NPC [s]abc
[v]mno - Lowest numbered NPC in the FTM that contains NPC [t]def

[u]jkl - Highest numbered NPC in the FTM that contains NPC [s]abc
[v]pqr - Highest numbered NPC in the FTM that contains NPC [t]def

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

uvmnp - Hierarchical NPC number for beginning of NPC range
wxkqr - Hierarchical NPC number for end of NPC range

uv, wx - Unit number
m, k - Module number
np, qr - NPC number within the module

The valid values are:

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit	Module	NPC
01-16	1-4	01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit	Module	NPC
01-16	1-6	01-28

The range of NPCs in the denial messages will be given either as module or unit boundaries depending upon the reason for the denial.

uvmaa - Lowest numbered NPC in the FTM that contains NPC uvmnp

The parameter value for NPC aa is in the first position, first line of the message.

uvmbb - Highest numbered NPC in the FTM that contains NPC uvmnp

The parameter value for NPC bb is just before EOM.

wxkaa - Lowest numbered NPC in the FTM that contains NPC wxkqr

wxkbb - Highest numbered NPC in the FTM that contains NPC wxkqr

pp/dd - ANSI Payload/Data Link Test Signal Types

Values of "pp/dd" are presented in NPC order, grouped within messages by Facility Terminating Module (FTM). For FTM's in Facility Terminating Units, each row of output contains 10 values. For FTM's in DS3 Units, each row of output contains 7 values.

pp Explanation

YL	Yellow Test Signal in D4/T1DM framing mode
HD	High Density Test Signal
LD	Low Density Test Signal
QR	Quasi-Random Test Signal
NN	No Payload Test Signal active
00	NPC not specified in input range command
--	NPC not equipped, not in service, or not ANSI (DA,TA) type

dd Explanation

YL	Yellow Test Signal in ESF framing mode
LR	Loopback Retention Signal
NN	No Data Link Test Signal active
00	NPC not specified in input range command
--	NPC not equipped, not in service, or not ANSI (DA,TA) type

TOT - Total

nnn - Total Number of NPCs in the module that are in the loopback state

COND - Condition

cc - Hexadecimal condition code

cc Explanation

10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
14	FTMI is out of service
1F	FTMI is in service but failed
26	NPC type error
A0	The selected MXR associated with the NPC is Out-Of-Service
A1	The selected MXR associated with the NPC is In-Service but failed

UTL,QRY,UNIT,DS3,ALLDS3,AI,LV,MONDAT

QUERY PERFORMANCE MONITORING DATA FOR HYBRID DS3S

Explanation Of Command

This command retrieves current and/or recent historical performance monitoring data for Hybrid DS3 facilities provisioned on KCR8 circuit packs. This command is denied for DS3 facilities provisioned on KCR1 or KCR5 circuit packs. The command response is output in two distinct formats depending on whether the input command is applied to All Hybrid DS3 facilities on the frame or a set of specifically addressed Hybrid DS3 facilities.

When the command is applied to All Hybrid DS3 facilities, DACS II responds with the current parameter counts of a single specified performance parameter for all Hybrid DS3 facilities. All counts, whether they are zero or greater, are output. The output is formatted on a unit-by-unit basis for all Hybrid DS3 facilities. If a particular Hybrid DS3 facility is not in-service, then its accumulator count will be printed as a string of dashes.

When a single Hybrid DS3 facility or range of Hybrid DS3 facilities is specifically addressed in the input command, then with some restrictions, all of the optionally entered user parameters are programmable. DACS II outputs the requested data in a different format, which accommodates the various user options.

Restrictions are placed on the use of the "ALL" options for various keywords to constrain the amount of data that will be output for a single command. In particular,

1. If all parameters are requested, the input command is restricted to specifying a single Hybrid DS3 facility and the current daily or the current 15-minute accumulation interval for all parameters.
2. If all daily accumulation registers are requested, the input command is restricted to specifying a single Hybrid DS3 facility and a single parameter.
3. If all 15-minute accumulation registers are requested, the input command is restricted to specifying a single Hybrid DS3 facility and a single parameter.

The following table summarizes the allowed combinations of input specifications.

DS3	<parameter>	AI	LV	MONDAT	MONTIM
ALLDS3	single	DAILY	not allowed defaults 0-Up	not allowed default CURD	not allowed
ALLDS3	single	15MIN	not allowed defaults 0-Up	not allowed	not allowed default CURT
single Unit and DS3	ALLPAR	DAILY	not allowed defaults 0-Up	ALL not allowed HIST allowed CURD allowed	not allowed
single Unit and DS3	ALLPAR	15MIN	not allowed defaults 0-Up	not allowed	ALL not allowed HIST allowed CURT allowed
single Unit and DS3	single	DAILY	any legal value unless MONDAT=ALL	ALL allowed HIST allowed CURD allowed	not allowed
single Unit and DS3	single	15MIN	any legal value unless MONTIM=ALL	not allowed	ALL allowed HIST allowed CURT allowed
single Unit and range of DS3s	single	DAILY	any legal value	ALL not allowed HIST allowed CURD allowed	not allowed
single Unit and range of DS3s	single	15MIN	any legal value	not allowed	All not allowed HIST allowed CURT allowed

The user should be aware that some counts may not be valid if the following occurs:

1. A start-up or reset occurred during the measurement interval. This affects all counts currently being accumulated.
2. A protection switch occurred for a particular DS3 facility. This affects the current counts for the particular DS3.
3. A DS3 loopback was activated. This affects the current counts for the particular DS3.
4. The time-of-day was changed by user command. This affects all counts currently being accumulated.

Command

[I.56111]

UTL:FRM xy,SEQ ww:QRY,{UNIT [q]q,DS3 c[-d]|ALLDS3},<parameter>,\
AI aaaaa[,LV llllllllll][,MONDAT dddd][,MONTIM tttt]!

Completion Message

Output message when the ALLDS3 keyword is used for DS3s, retrieving the current counter values of a single specified parameter for all Hybrid DS3s:

(The counter values for DS3s that are not provisioned or are provisioned on KCR1 or KCR5 circuit packs are shown as dashes)

[O.56111]

M hh:mm:ss xy,ww n[vv] UTL QRY ALLDS3 UNIT [q]q DS3 c-d \
<parameter> AI aaaaa 2 LN MSG:
cccccccc cccccccc cccccccc cccccccc cccccccc cccccccc EOM

.
.
.

M hh:mm:ss xy,ww n[vv] UTL QRY ALLDS3 UNIT [q]q DS3 c-d \
<parameter> AI aaaaa 2 LN MSG:
cccccccc cccccccc cccccccc cccccccc cccccccc cccccccc EOM

M hh:mm:ss xy,ww n[vv] UTL QRY ALLDS3 <parameter> AI aaaaa COMPL

Output message when the ALLDS3 keyword is not used for DS3s:

(Output lines for DS3s that are not provisioned or are provisioned on KCR1 or KCR5 circuit packs will not be generated):

[O.56112]

Message segment for an individual UNIT when the AI keyword has been set to DAILY:

M hh:mm:ss xy,ww n[vv] UTL QRY UNIT [q]q DS3S <parameter> e LN MSG:
AI DAILY [LV llllllllll][MONDAT dddd]
DS3 PARAM COUNT MONDAT
c ppppp cccccccc dddd
. ppppp cccccccc dddd
. ppppp cccccccc dddd
. ppppp cccccccc dddd
. ppppp cccccccc dddd
. ppppp cccccccc dddd
d ppppp cccccccc dddd EOM

Message segment for an individual UNIT when the AI keyword has been set to 15MIN:

```
M hh:mm:ss xy,ww n[vv] UTL QRY UNIT [q]q DS3S <parameter> e LN MSG:
AI 15MIN [LV llllllllll ][MONTIM tttt ]
  DS3  PARAM  COUNT  MONTIM
  c    ppppp  cccccccc tttt
  .    ppppp  cccccccc tttt
  .    ppppp  cccccccc tttt
  .    ppppp  cccccccc tttt
  .    ppppp  cccccccc tttt
  d    ppppp  cccccccc tttt EOM
```

Message segment completing the command output for an individual UNIT:

```
M hh:mm:ss xy,ww n[vv] UTL QRY UNIT [q]q DS3S c[-d] <parameter> 2 LN MSG:
AI aaaaa [LV llllllllll ][MONDAT dddd ][MONTIM tttt ]COMPL
```

Denial Message

[O.56111.01]

```
M hh:mm:ss xy,ww n[vv] UTL QRY {UNIT [q]q DS3 c[-d]|ALLDS3} <parameter> 2 LN MSG:
AI aaaaa[ LV llllllllll ][ MONDAT dddd][ MONTIM tttt] COND cc DNY
```

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Peripheral unit housing the DS3s

[q]q - Number of unit ranging between 1 and 16

DS3 - Hybrid DS3 circuit

c - The DS3 facility in the unit or the first DS3 of a range of DS3s in the unit.

d - The last DS3 facility of a range of DS3s in the unit.

e - Number of lines in the message

ALLDS3 - All Hybrid DS3 facilities that are in service are selected

PARAM - Parameter

<parameter> - Name of parameter in the input

ppppp - Name of parameter in the output

The parameter names and their meaning are listed as follows:

<i>Parameter</i>	<i>Explanation</i>
CVL	Code Violation for the DS3 Line
ESL	Errored Seconds for the DS3 Line
SESL	Severely Errored Seconds for the DS3 Line
CVP	Code Violation for the DS3 Path
FMP	F- or M-bit errors for the DS3 Path
ESP	Errored Seconds for the DS3 Path
SESP	Severely Errored Seconds for the DS3 Path
FSESP	Far End Severely Errored Seconds for the DS3 Path
UASP	Unavailable Seconds for the DS3 Path
ALLPAR	Input only, causes a report on all parameters

The following is a more detailed description for each parameter:

The **CVL** parameter keeps a count of Bipolar Violations (BPV) and Excessive Zero (EXC) counts. This count may get quite large. If one assumes an error rate of 1 bit per thousand, then a daily count may get as large as 100 million.

The **ESL** parameter counts the number of seconds that have one or more BPVs, one or more EXZs, or one or more LOS defect. This parameter is limited to the number of seconds in the measurement interval, which is 900 in 15 minutes and 86,400 in 24 hours.

The **SESL** parameter counts the number of seconds that have more than 44 BPVs and EXZs, or one or more LOS defects. This parameter is limited to the number of seconds in the measurement interval.

The **CVP** parameter keeps a count of P-bit parity errors. This count may get quite large. If one assumes an error rate of 1 bit per thousand, then a daily count may get as large as 100 million.

The **FMP** parameters keeps a count of F- and M-bit errors. This count may get quite large. If one assumes an error rate of 1 bit per thousand, then a daily count may get as large as 100 million.

The **ESP** parameter counts the number of seconds containing one or more F- and/or M-bit errors, one or more OOF (Out-of-Frame) defects, or one or more AIS defects. This parameter is limited to the number of seconds in the measurement interval.

The **SESP** parameters counts the number of seconds containing more than 44 F- and M-bit errors, one or more OOF defects, or one or more AIS defects. This parameter is limited to the number of seconds in the measurement interval.

The **FSESP** parameter counts the number of seconds that have a Remote Alarm Indication (RAI), i.e., the X-bits transmitted from the Far-End indicate RAI. This parameter is not counted if the DS3 facility has an LOS or OOF defect. This parameter is limited to the number of seconds in the measurement interval.

The **UASP** parameter counts the number of seconds that the DS3 facility is unavailable. The DS3 is declared unavailable, if the DS3 path experiences 10 consecutive seconds of SESP. The DS3 is also declared unavailable, if the DS3 line experiences 10 consecutive seconds of SESL. This parameter is limited to the number of seconds in the measurement interval.

None of the other parameters accumulate counts if the Hybrid DS3 facility is unavailable.

ALLPAR is an input parameter only. If ALLPAR is specified, all the individual parameter values are reported on. The following restrictions apply if ALLPAR is specified in the input command:

- 1) The command must specify only a single Hybrid DS3 facility; ranges are not allowed.
- 2) The MONTIM input parameter may not have a value of ALL.
- 3) The MONDAT input parameter may not have a value of ALL.
- 4) The optional LV input parameter must not be present in the command; it defaults to a value of 1-Up and parameter counts of zero are not shown.

LV - Level

11111111

- The discriminating level for the requested parameter

If **11111111** is not specified in the input command, it defaults to a value of 1-Up.

If "ALLDS3" is specified in the input command, selecting all Hybrid DS3 facilities, a default value of 0-Up is applied. This provides the current counts (zero included) of the specified parameter for all DS3s on the frame.

Keywords LV and ALLDS3 are mutually exclusive.

111111111	<i>Explanation</i>
{000000000-134217728}U	Discriminating Level-Up Direction
{000000000-134217728}D	Discriminating Level-Down Direction

Up - Parameters with values equal to or greater than the specified "discriminating level" are reported.

Down - Parameters with values equal to or less than the specified "discriminating level" are reported.

Before deciding on a discrimination level, the user should consult the possible ranges for an individual parameter, which are noted above.

AI - Accumulation interval

aaaaa - The accumulation time period for the specified parameter

aaaaa *Explanation*

15MIN Parameter count from a 15-minute accumulator

DAILY Parameter count from a daily accumulator

COUNT - Count

cccccccc

- The accumulated value of a monitored parameter (nine digits)

This parameter will be shown as dashes, if the DS3 is not provisioned or has been provisioned on a KCR1 or KCR5 circuit pack.

All leading 0's will be output.

Range of counts for the CVL, CVP, and FMP parameters.

cccccccc	<i>Explanation</i>
{000000000-134217728}	Range of parameters counts

Range of DAILY counts for ESL, SESL, ESP, SESP, FSESP, and UASP.

cccccccc *Explanation*

{000000000-000086400} Range of parameter counts

Range of 15MIN counts for ESL, SESL, ESP, SESP, FSESP, and UASP.

cccccccc *Explanation*

{000000000-000000900} Range of parameter counts

MONDAT - Monitored Date

dddd - Begin date of performance monitoring period

This parameter is only allowed if the AI parameter has been specified as DAILY.

The following are the values for MONDAT:

dddd *Explanation*

HIST Previous 24-hour accumulators

CURD Current 24-hour accumulators (default)

ALL All daily accumulators (input only)

As an input parameter, this specifies the date of the beginning of the performance monitoring period as MMDD, where MM is the month (01-12) and DD is the day (01-31) of the month.

If MONDAT is a legal option and not present in the command, then it defaults to a value of CURD.

The MONDAT value ALL is an option only for input commands. If the value ALL is selected, all of the daily accumulation registers are retrieved. If MONDAT = ALL is selected, only a single Hybrid DS3 facility can be specified in the input command.

MONTIM - Monitored Time

tttt - Begin time of the performance monitoring period

This parameter is only allowed if the AI parameter has been specified as 15MIN.

The following are the values for MONTIM:

tttt *Explanation*

HIST Previous 15-minute accumulators

CURT Current 15-minute accumulators (default)

ALL All 15-minute accumulators (input only)

This parameter specifies the beginning time of day of the requested performance monitoring period as HHMM, where HH is the hour (00-23) and MM is the minute {00,15,30,45} of the hour. If MONTIM is a legal option and not present in the command, it defaults to a value of CURT.

The MONTIM value ALL is an option only for input commands. Selecting the value ALL retrieves all 16 (historical and current) 15-minute accumulation registers for the selected Hybrid DS3s. If MONTIM = ALL is selected, only a single Hybrid DS3 can be specified in the input command.

cc - Hexadecimal condition code

cc *Explanation*

- 04** Subject entity is out of service
- 11** UC is out of service
- 12** UC is in service but failed
- 0C** The MONDAT and MONTIM parameters can not both be specified
- B7** The associated MXR is In-Service but pested
- 0E** Only one parameter is allowed
- 1B** Historical data can not be specified
- 1D** Level field is not allowed
- 1E** Monitored Date field is not allowed
- 20** Only DAILY for accumulation interval is allowed
- 21** Only 15MIN for accumulation interval is allowed
- 23** No PM data available
- 24** Monitored Time field is not allowed
- 89** Interval is not valid/not available
- 9E** MONDAT set to ALL is not allowed
- 9F** MONTIM set to ALL is not allowed

UTL, QRY, UNIT, FTMI, EQL

UTILITY QUERY EQUALIZATION, IMPEDANCE

Explanation Of Command

This message requests the equalization values for a facility terminating module interface (FTMI) in a facility terminating unit (FTU).

Command

[I.53071]

UTL:FRM xy,SEQ ww:QRY,UNIT [q]q,FTMI b[,EQL]!

Completion Message

[O.53071]

M hh:mm:ss xy,ww n[vv] UTL QRY UNIT [q]q FTMI b EQL l r COMPL

Denial Message

[O.53071.01]

M hh:mm:ss xy,ww n[vv] UTL QRY UNIT [q]q FTMI b EQL COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

UNIT - Unit

[q]q - Unit number (1 through 16)

FTMI - Facility terminating module interface

b - FTMI number (1 through 4)

EQL - Equalization

l - Left half shelf equalization value (first 10 Dual Digroup Circuits)

r - Right half shelf equalization value (second 10 Dual Digroup Circuits)

Enter a dash for an equalization value if that value is not to be changed.

Equalization option values for 255AS/24 gauge cable

<i>l</i>	<i>Explanation</i>
1	000 to 100 feet
2	100 to 200 feet
3	200 to 300 feet
4	300 to 400 feet
5	400 to 500 feet
-	Do not change equalization

Equalization option values for 600 series/22 gauge cable

<i>l</i>	<i>Explanation</i>
1	000 to 050 feet
2	051 to 267 feet
3	268 to 400 feet
4	401 to 533 feet
5	534 to 655 feet
-	Do not change equalization

Equalization option values for 1249/26 gauge cable

<i>l</i>	<i>Explanation</i>
<i>r</i>	
1	000 to 090 feet
2	090 to 180 feet
3	180 to 270 feet
4	270 to 360 feet
5	360 to 450 feet
-	Do not change equalization

cc - Hexadecimal condition code

cc	<i>Explanation</i>
02	Subject entity is not equipped
10	Unit is not equipped

UTL, QRY, WHO

UTILITY QUERY WHO

Explanation Of Command

This message requests a display of the unique frame identifier (UFI) of the DACS frame, the software version identifier, and the feature package identification code.

Command

[I.51041]

UTL:FRM xy,SEQ ww:QRY,WHO!

Completion Message

[O.51041]

M hh:mm:ss xy,ww n[vv] UTL QRY WHO <uid> 2 LN MSG:
RELEASE DACSIgg POINT pp VERSION r FPKG kkttuuvv COMPL

Denial Message

Not applicable.

Autonomous Message

Not applicable.

Explanation Of Parameters

WHO - Who

With reference to the frame "Who are you?"

uid - Unique (frame) identifier (1 to 20 alphanumeric characters)

The uid is initialized by GRTH::FRAME.

If the uid is not initialized, no characters will appear.

VERSN - Version

DACSII - DACS II

gg - DACS II software release number

pp - DACS II software release point number

r - Version number of the release point

FPKG - Feature package

kkttuuvv

- Feature package identifier

00000001	DS1
00000002	CEPT
00000004	Subrate
00000008	Direct SLC® 96 and Series 5 Carrier Interface
00000010	DS3 Terminations
00000020	Enhanced CEPT
	C-bit
	C-bit filtering
	RPSFI
00000040	Switched Teleconferencing
00000080	CEF
00000100	Enhanced DS1 Performance Monitoring
00000200	DS0/DS1 Roll
00000400	Security Warning Message
00000800	Nx64kbit Test Access
00001000	Clear 2MB/s Interface
00002000	TS0 to Non-TS0 Cross-connection
00004000	2MB/S Roll
00008000	SPARE
00010000	TRT/FT Features
	Intervention Level
00020000	DS3 Hybrid

In general a feature package identification code is a combination of several individual feature package numbers. To determine the individual features that make up a feature package it is necessary to decode the feature package identification code. This code is an eight digit hexadecimal number. Each hexadecimal number represents a four-bit binary number. Within this binary number each feature is associated with one particular bit. Consequently to determine the feature list from a feature package identification code it is necessary to convert each hexadecimal digit to its binary equivalent and look up the features in the list above. For example the feature package identification code 0000000F can be converted to the following binary number working from left to right one hex digit at a time.

0000 0000 0000 0000 0000 0000 0000 1111

This number contains eight binary numbers each representing one of the hexadecimal numbers in the feature package identification code 0000000F. The rightmost number of the code contains four features since there are four bits set to one. This would be decoded as follows using the table of features above.

	binary	hex	Feature
	0001	1	DS1
	0010	2	CEPT
	0100	4	Subrate
	1000	8	Direct SLC
Total	1111	F	(DS1 + CEPT + Subrate + SLC)

UTL, QRY, XCSB, UNIT

QUERY CROSS-CONNECT STATUS BUS

Explanation Of Command

This command requests a check of the side switch consistency between the hardware entities and the data base. Depending on the result of the cross-connect consistency check, DACS II will respond with different outputs as specified in the following sections.

If the entities of a unit are either all consistent or all inconsistent with the data base, a single line output will be generated. The field "DB s", which indicates the active side recorded in the data base (DB), will always be shown, while the keyword "UM" (Unmatch) will be shown only if all entities of the unit are inconsistent with the data base.

Note: For an FTU, if some but not all of its DDCs are consistent with the data base, four output message segments will be generated. Each segment will report the side status for NPCs in one Facility Terminating Module (FTM). If all NPCs in an FTM have the same status, the segment for the FTM will have only one line; otherwise, it will be a five-line segment.

When this command is entered, the side selection configuration register on each dual digroup circuit of the facility terminating units and each multiplexer or hybrid multiplexer of the DS3 units or Hybrid DS3 units is compared with the information stored in the data base. In addition, the configuration register on each cross-connect network interface or clock and control interface (CCNI/CCI) is also checked against the status of the data base.

This command can be entered to request the status of the whole frame or of a particular unit. If the status of the whole frame is requested, DACS II will output the result for each unit in ascending order from units 01 through 16. Unequipped units or digital signal processing units will not be checked and reported. If the unit number is specified on input, it must be an FTU or DS3U or HDS3U ; otherwise, the command will be denied.

After the unit-related results are reported, DACS II will output the result for the CCNI/CCI.

If all DDCs/MXR/HMXRs of an FTU/DS3U/HDS3U are marked pass, DACS II will generate the completion output (O.55181) showing the active side indicated in the data base, that is, showing "DB s". If all of them are marked fail, the "UM" keyword will also be shown to indicate that the side selected by the entities does not match the side recorded in the data base.

For a DS3U/HDS3U, if all its MXRs/HMXRs do not have the same marking, output message O.55182 will be generated. This message will give the MXR/HMXR number of the MXR(s)/HMXR(s) marked fail. MXR(s)/HMXR(s) that is (are) pested, out-of-service, or marked pass will show a dash (-) in place of the MXR/HMXR number.

For an FTU, if all its DDCs do not have the same marking, output message O.55183 will be generated. This message will give the NPC number of the NPC(s) marked fail. NPCs that are pested, out-of-service, or marked pass will show dashes (---) in place of the NPC number. Since the two NPCs of a DDC will always have the same status, the two NPC numbers will either both be shown or both be represented by dashes. For the CCNIs/CCIs, if the side status for one or both packs does not agree with the data base, the key word "UM" will be output in the output message O.55184. A pack that has failed is identified by its side number whereas a pack that has passed is identified by a dash "-".

The execution of this command and the output of messages in response to its execution can be aborted by use of the ABT command.

Command

[I.55181]

UTL:FRM xy,SEQ ww:QRY,XCSB[,UNIT [q]q]!

Completion Message

Nonhierarchical

[O.55183]

```
M hh:mm:ss xy,ww n[vv] UTL QRY XCSB UNIT [q]q UM BD s NPCS [s]abc-[t]def 5 LN MSG:
[s]ghi-[t]jkl [s]ghi-[t]jkl [s]ghi-[t]jkl [s]ghi-[t]jkl [s]ghi-[t]jkl
[s]ghi-[t]jkl [s]ghi-[t]jkl [s]ghi-[t]jkl [s]ghi-[t]jkl [s]ghi-[t]jkl
[s]ghi-[t]jkl [s]ghi-[t]jkl [s]ghi-[t]jkl [s]ghi-[t]jkl [s]ghi-[t]jkl
[s]ghi-[t]jkl [s]ghi-[t]jkl [s]ghi-[t]jkl [s]ghi-[t]jkl [s]ghi-[t]jkl {EOM|COMPL}
```

[O.55183]

```
M hh:mm:ss xy,ww n[vv] UTL QRY XCSB UNIT [q]q[ UM] DB s \
NPCS [s]abc-[t]def COND kk {EOM|COMPL}
```

Hierarchical

[O.55183]

M hh:mm:ss xy,ww n[vv] UTL QRY XCSB UNIT [q]q UM DB s NPCS uvmnp-uvmqr 5 LN MSG:
uvmhi-uvmkl uvmhi-uvmkl uvmhi-uvmkl uvmhi-uvmkl uvmhi-uvmkl
uvmhi-uvmkl uvmhi-uvmkl uvmhi-uvmkl uvmhi-uvmkl uvmhi-uvmkl
uvmhi-uvmkl uvmhi-uvmkl uvmhi-uvmkl uvmhi-uvmkl uvmhi-uvmkl
uvmhi-uvmkl uvmhi-uvmkl uvmhi-uvmkl uvmhi-uvmkl uvmhi-uvmkl {EOM|COMPL}

[O.55183]

M hh:mm:ss xy,ww n[vv] UTL QRY XCSB UNIT [q]q[UM] DB s \
NPCS uvmnp-uvmqr COND kk {EOM|COMPL}

Common

[O.55181]

M hh:mm:ss xy,ww n[vv] UTL QRY XCSB UNIT [q]q[UM] DB s ALL COND kk COMPL

Note: For a DS3U/HDS3U, if some but not all of its MXRs/HMXRs are consistent with the database, the MXR/HMXR number will be shown for the ones that are inconsistent.

[O.55182]

M hh:mm:ss xy,ww n[vv] UTL QRY XCSB UNIT [q]q UM DS s MXR a b c d e f g COMPL

[O.55184]

M hh:mm:ss xy,ww n[vv] UTL QRY XCSB {CCNI|CCI} h j[UM] DB s COMPL

Denial Message

[O.55181.01]

M hh:mm:ss xy,ww n[vv] UTL QRY XCSB[UNIT [q]q] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

XCSB - Cross-Connect Status Bus

UNIT - Unit

[q]q - Unit number (1 through 16)

[s]abc - The 3- or 4-digit nonhierarchical FTU NPC number of the first NPC in an FTM

[t]def - The 3- or 4-digit nonhierarchical FTU NPC number of the last NPC in an FTM

[s]ghi - The 3- or 4-digit nonhierarchical odd FTU NPC number
([s]abc through [t]def)

[t]jkl - The 3- or 4-digit nonhierarchical even FTU NPC number
([t]jkl = [s]ghi + 1)

The valid values are:

If NPC numbers are expressed in three digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960

If NPC numbers are expressed in four digits, the valid values are:

DE and DS type NPC numbers listed by unit number,
Unit Type FT (IFTU2/IFTU/FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280

Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160 16A-16H	NPC 161-320 32A-32H	NPC 321-480 48A-48H	NPC 481-640 64A-64H	NPC 641-800 80A-80H	NPC 801-960 96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TE type NPC numbers listed by unit number, Unit Type DT (DS3U) or HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H

Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-2080	2081-2240	2241-2400	2401-2560
208A-208H	224A-224H	240A-240H	256A-256H

If NPC numbers are expressed in three digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-003	161-163	321-323	481-483	641-643	801-803
005-007	165-167	325-327	485-487	645-647	805-807
009-011	169-171	329-331	489-491	649-651	809-811
	.				
	.				
	.				
157-159	317-319	477-479	637-639	797-799	957-959
16A-16C	32A-32C	48A-48C	64A-64C	80A-80C	96A-96C
16E-16G	32E-32G	48E-48G	64E-64G	80E-80G	96E-96G

If NPC numbers are expressed in four digits, the valid values are:

TH type NPC numbers listed by unit number
Unit Type HT (HDS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC	NPC	NPC	NPC
0001-0003	0161-0163	0321-0323	0481-0483
0005-0007	0165-0167	0325-0327	0485-0487
0009-0011	0169-0171	0329-0331	0489-0491
	.		
	.		
	.		
0157-0159	0317-0319	0477-0479	0637-0639
016A-016C	032A-032C	048A-048C	064A-064C
016E-016G	032E-032G	048E-048G	064E-064G

Unit 5	Unit 6	Unit 7	Unit 8
NPC	NPC	NPC	NPC
0641-0643	0801-0803	0961-0963	1121-1123
0645-0647	0805-0807	0965-0967	1125-1127
0649-0651	0809-0811	0969-0971	1129-1131
	.		
	.		
	.		
0797-0799	0957-0959	1117-1119	1277-1279
080A-080C	096A-096C	112A-112C	128A-128C
080E-080G	096E-096G	112E-112G	128E-128G
Unit 9	Unit 10	Unit 11	Unit 12
NPC	NPC	NPC	NPC
1281-1283	1441-1443	1601-1603	1761-1763
1285-1287	1445-1447	1605-1607	1765-1767
1289-1291	1449-1451	1609-1611	1769-1771
	.		
	.		
	.		
1437-1439	1597-1599	1757-1759	1917-1919
144A-144C	160A-160C	176A-176C	192A-192C
144E-144G	160E-160G	176E-176G	192E-192G
Unit 13	Unit 14	Unit 15	Unit 16
NPC	NPC	NPC	NPC
1921-1923	2081-2083	2241-2243	2401-2403
1925-1927	2085-2087	2245-2247	2405-2407
1929-1931	2089-2091	2249-2251	2409-2411
	.		
	.		
	.		
2077-2079	2237-2239	2397-2399	2557-2559
208A-208C	224A-224C	240A-240C	256A-256C
208E-208G	224E-224G	240E-240G	256E-256G

uvmnp - Hierarchical FTU NPC number of the first NPC in an FTM
uvmqr - Hierarchical FTU NPC number of the last NPC in an FTM
uvmhi - Hierarchical odd FTU NPC number (uvmnp through uvmkl)
uvmkl - Hierarchical even FTU NPC number (uvmkl = uvmhi + 1)

uv - Unit number
m - Module number
np, qr, hi, kl
 - NPC number

The valid values are:

DE and DS type NPC numbers listed by unit, module, and NPC Number
 Unit Type FT (IFTU2/IFTU/FTU)

Unit	Module	NPC
01-16	1-4	01-40

TE NPC numbers listed by unit, module, and NPC Number
 Unit Type DT (DS3U) or HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

TH NPC numbers listed by unit, module, and NPC Number
 Unit Type HT (HDS3U)

Unit	Module	NPC
01-16	1-6	01-28

Note that the valid TH NPC numbers are: 01-03, 05-07, 09-11, 13-15, 17-19, 21-23, 25-27.

UM - Unmatched

This keyword indicates there are entities selecting a side different from the side recorded in the database.

DB - Database

s - Cross-connect side (0 or 1)

MXR - Multiplexer or Hybrid Multiplexer

a,

....

g - Multiplexer/Hybrid Multiplexer status

The assignment of MXRs/HMXRs to variables a through g is shown below.

a b c d e f g	Variable
P 1 2 3 4 5 6	MXR/HMXR identification

The MXR/HMXR identification appears if the MXR/HMXR has failed.
 The appearance of a dash (-) in place of a MXR/HMXR identification indicates that the particular MXR/HMXR passed.

CCNI - Cross-connect network interface (NonCEF)

CCI - Clock and control interface (CEF)

h - CCNI/CCI 0 status

j - CCNI/CCI 1 status

The assignment of CCNIs/CCIs to variables h and j is shown below.

h j	Variable
0 1	CCNI/CCI identification

The CCNI/CCI identification appears if the CCI has failed. The appearance of a dash in place of a CCNI/CCI identification indicates that the particular CCNI/CCI passed.

kk - Completion condition code (hexadecimal)

To interpret values of kk use the table of cc values below.

cc - Hexadecimal condition code

cc	<i>Explanation</i>

00	No conditions
05	Subject entity is pested
10	Unit is not equipped
11	UC is out of service
12	UC is in service but failed
13	FTMI is not equipped
14	FTMI is out of service
1F	FTMI is in service but failed
24	Unit type error

UTL,RCY,COND,IN,PROGRESS

UTILITY QUERY, ERROR RECOVERY

Explanation Of Command

This message reports that an autonomous error recovery action has been taken to an entity. An in-progress message will be output every 20 seconds until the action is completed or denied.

Command

Not applicable.

Completion Message

Not applicable.

Denial Message

Not applicable.

Autonomous Message

[O.55021]

I hh:mm:ss xy,ww UTL RCY <entity> <action> COND cc COMPL

[O.55022]

I hh:mm:ss xy,ww UTL RCY IN PROGRESS

[O.55021.01]

I hh:mm:ss xy,ww UTL RCY <entity> <action> COND cc DNY

Explanation Of Parameters

RCY - Internal recovery error

entity - DACS II entity involved

<i>entity</i>	<i>Explanation</i>
MC	Action on Main Controller
MP	Action on Main Processor
CI	Action on Communication Interface
DISK	Action on DISK unit
TAPE	Action on TAPE unit
UNIT [q]q	Action on specific unit (1 through 16)
FRAME	Frame wide action

action - Action that the error recovery takes to the entity

<i>action</i>	<i>Explanation</i>
REMOVE	Remove processor from service
HWBOOT	Hardware boot (boot of processor with existing data base)
WMBOOT	Warm boot (boot of processor with disk data base)
CDBOOT	Cold boot (boot of processor programs and data base)
MCOND	Put frame into maintenance condition

cc - Hexadecimal condition code

cc Explanation

00	No conditions
04	Subject entity is out of service
0B	BOOT on subject entity failed
46	Failed to boot CONF file
47	Failed to boot DB
48	Failed to boot journal--recurrence indicates database corruption
49	Failed to boot unit
4C	Failed to boot CI
51	General boot failure (vanilla flavor)
18	DSPI not equipped, not in service, or failed
4D	MP database not consistent with Configuration file
52	Database is empty
3F	G4 to G4.1 retrofit failed
92	Can't mount or unmount PMEM
FA	SSC software out of date
2B	Database corrupt

UTL,RCY,PASSWD

UTILITY, RECOVERY,PASSWORD

Explanation Of Command

This command is used to recover the frame administrator password with the password recovery card. Upon successful completion of this command, DACS II will have copied the original frame administrator's password from the password recovery card to the data base in the RAM. To ensure proper security, the administrator should immediately change his or her password using message I.38301. See Operations and Maintenance manual for procedures.

Command

[I.51081]

UTL:FRM xy,SEQ ww:RCY,PASSWD!

Completion Message

[O.51081]

M hh:mm:ss xy,ww n[vv] UTL RCY PASSWD COMPL

Denial Message

[O.51081.01]

M hh:mm:ss xy,ww n[vv] UTL RCY PASSWD COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

RCY - Recovery

PASSWD - Password

cc - Hexadecimal condition code

cc *Explanation*

64 File doesn't exist/can't be accessed

8D DB PMEM error OP-CL-RD-WR-SK

DD Password recovery card is not READ-only

91 Can't mount or unmount password recovery card

UTL,SCHED,PMREPT,NPC,RI,ST,NI,LV,LOCN

SCHEDULE DS1 PERFORMANCE MONITORING REPORT

Explanation Of Command

This command schedules or cancels previously scheduled reporting of DS1 performance monitoring data. This command results in periodic reporting of performance monitoring data with the REPT::PM message. Periodic performance monitoring reporting can be suspended with the INH::PMREPT command. However, performance data continues to accumulate and can be retrieved by using the UTL::QRY,<parameter> command. The inhibit command (INH::PMREPT) retains the current schedule and reporting can be resumed with the ALW::PMREPT command.

The scheduling of a PM report will be denied if it is identical to an already existing schedule. Two schedules are said to be identical if all fields match, with the exception of the NUMBER OF INTERVAL and the START TIME fields.

This command will handle NPC addressing in the input command as follows: If only a single NPC is addressed in the input command, then either a completion START TIME fields. always deny invalid commands to specifically addressed NPCs.

If a range of NPCs are addressed and the feature applies to one or more NPCs within the range, DACS II will perform the command on the NPCs in the range that support the requested feature, but skip the NPCs which do not support the requested feature. DACS II provides a variety of line termination types which support different features and can be randomly mixed within the frame. If at least one of the NPCs in the addressed range supports the requested feature, DACS II will generate a completion response for the overall addressed range; individual denial responses will not be generated for NPCs within the range which do not support the feature. If *none* of the NPCs in the addressed range support the requested feature, DACS II will generate a range denial response.

Command

Nonhierarchical

[I.51141]

UTL:FRM xy,SEQ ww:SCHED,PMREPT,NPC [s]abc[-[t]def],RI rrrrr,ST ssss,NI nn,\
<parameter>,LV llllllllll,LOCN locn,AI aaaaa,TOF ttttt[-ooooo]\
[,LK p[vv][q[vv]]]!

Hierarchical

[I.51141]

UTL:FRM xy,SEQ ww:SCHED,PMREPT,NPC uvmnp[-wxkqr],RI rrrrr,ST ssss,NI nn,\
<parameter>,LV llllllllll,LOCN locn,AI aaaaa,TOF ttttt[-ooooo]\
[,LK p[vv][q[vv]]]!

Completion Message

Nonhierarchical

[O.51141]

M hh:mm:ss xy,ww n[vv] UTL SCHED PMREPT NPC [s]abc[-[t]def] 3 LN MSG:
RI rrrrr ST ssss NI nn <parameter> LV llllllllll LOCN locn AI aaaaa
TOF ttttt[-ooooo][LK p[vv][q[vv]]] COMPL

Hierarchical

[O.51141]

M hh:mm:ss xy,ww n[vv] UTL SCHED PMREPT NPC uvmnp[-wxkqr] 3 LN MSG:
RI rrrrr ST ssss NI nn <parameter> LV llllllllll LOCN locn AI aaaaa
TOF ttttt[-ooooo][LK p[vv][q[vv]]] COMPL

Denial Message

Nonhierarchical

[O.51141.01]

M hh:mm:ss xy,ww n[vv] UTL SCHED PMREPT NPC [s]abc[-[t]def] 3 LN MSG:
RI rrrrr ST ssss NI nn <parameter> LV llllllllll LOCN locn AI aaaaa
TOF ttttt[-ooooo][LK p[vv][q[vv]]] COND cc DNY

Hierarchical

[O.51141.01]

M hh:mm:ss xy,ww n[vv] UTL SCHED PMREPT NPC uvmnp[-wxkqr] 3 LN MSG:
RI rrrrr ST ssss NI nn <parameter> LV llllllllll LOCN locn AI aaaaa
TOF ttttt[-ooooo][LK p[vv][q[vv]]] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

NPC - Network processing circuit

[s]abc - The 3- or 4-digit nonhierarchical starting NPC number

[t]def - The 3- or 4-digit nonhierarchical ending NPC number

The valid values are:

If NPC numbers are expressed in three digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC	NPC	NPC	NPC	NPC	NPC
001-160	161-320	321-480	481-640	641-800	801-960

If NPC numbers are expressed in four digits, the valid values are:

DA type NPC numbers listed by unit number, Unit Type FT (FTU)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160	NPC 0161-0320	NPC 0321-0480	NPC 0481-0640
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800	NPC 0801-0960	NPC 0961-1120	NPC 1121-1280
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440	NPC 1441-1600	NPC 1601-1760	NPC 1761-1920
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080	NPC 2081-2240	NPC 2241-2400	NPC 2401-2560

If NPC numbers are expressed in three digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4	Unit 5	Unit 6
NPC 001-160	NPC 161-320	NPC 321-480	NPC 481-640	NPC 641-800	NPC 801-960
16A-16H	32A-32H	48A-48H	64A-64H	80A-80H	96A-96H

If NPC numbers are expressed in four digits, the valid values are:

TA type NPC numbers listed by unit number
Unit Type DT (DS3U)

Unit 1	Unit 2	Unit 3	Unit 4
NPC 0001-0160 016A-016H	NPC 0161-0320 032A-032H	NPC 0321-0480 048A-048H	NPC 0481-0640 064A-064H
Unit 5	Unit 6	Unit 7	Unit 8
NPC 0641-0800 080A-080H	NPC 0801-0960 096A-096H	NPC 0961-1120 112A-112H	NPC 1121-1280 128A-128H
Unit 9	Unit 10	Unit 11	Unit 12
NPC 1281-1440 144A-144H	NPC 1441-1600 160A-160H	NPC 1601-1760 176A-176H	NPC 1761-1920 192A-192H
Unit 13	Unit 14	Unit 15	Unit 16
NPC 1921-2080 208A-208H	NPC 2081-2240 224A-224H	NPC 2241-2400 240A-240H	NPC 2401-2560 256A-256H

uvmnp - Hierarchical starting NPC number
wxkqr - Hierarchical ending NPC number

DA type NPC numbers listed by unit, module, and NPC Number
Unit Type FT (FTU)

Unit Module NPC
01-16 1-4 01-40

TA NPC numbers listed by unit, module, and NPC Number
Unit Type DT (DS3U)

Unit Module NPC
01-16 1-6 01-28

RI - Report interval

rrrrr - The interval between performance monitoring reports

<i>rrrrr</i>	<i>Explanation</i>
{0001-1440}M	Report interval in minutes
{0001-0024}H	Report interval in hours
{0001-0007}D	Report interval in days

ST - Start time

ssss - The starting time for the performance monitoring reporting schedule.
If the value entered for the starting time is less than (previous to)
the current time of day on the DACS II clock, the performance monitoring
reports will be scheduled to begin "tomorrow".

<i>ssss</i>	<i>Explanation</i>
{00-23}{00-59}	Hour of day/Minute of Hour Format
CURT	Current time of day

NI - Number of intervals

nn - The number of intervals over which performance monitoring is reported.
If this parameter is CT, the performance monitoring schedule remains
in effect until the schedule is canceled. A value of zero cancels any
performance monitor reporting that was previously scheduled.

<i>nn</i>	<i>Explanation</i>
00	Cancel a previously scheduled report
{01-96}	Finite number of scheduled reports
CT	Continuous reports until canceled

parameter

- The parameter for which reporting is being scheduled.

<i>parameter</i>	<i>Explanation</i>
CVP	Path Coding Violations
CVL	Line Coding Violations
ESP	Path Errored Seconds
ESL	Line Errored Seconds
SESP	Path Severely Errored Seconds
SESL	Line Severely Errored Seconds
SEFS	Path Severely Errored Framing Seconds
CSSP	Path Controlled Slip Seconds
UASP	Path Unavailable Seconds
ALLPAR	All listed parameters

Note that all listed parameters are valid near-end parameters. All listed parameters except line coding violations (CVL) and line severely errored seconds (SESL) are valid far-end parameters.

LV - Level

|||||||

- The discriminating level for the requested parameter. This parameter is used to restrict reported output to include only values which are above/below a defined level.

<i> </i>	<i>Explanation</i>
{000000000-134217728}U	Discriminating Level-Up Direction
{000000000-134217728}D	Discriminating Level-Down Direction

Up - Parameters with values equal to or greater than the "discriminating level" specified are reported.

Down - Parameters with values equal to or less than the "discriminating level" specified are reported.

LOCN - Location

locn - The location being performance monitored.

<i>locn</i>	<i>Explanation</i>
NEND	Near-end
FEND	Far-end

AI - Accumulation interval

aaaaa - The accumulation time period for the specified parameter.

aaaaa Explanation

15MIN Parameter count from a 15-minute accumulator

DAILY Parameter count from a daily accumulator

TOF - Time offset

ttttt - The age of the requested data registers(s) at the reporting time, measured backwards in time from the end of last completed accumulation interval to the beginning of the requested interval.

ooooo - If the report interval is an integral number of accumulation intervals, this parameter may be entered as a range to specify up to four historical data registers.

tttt,ooooo Explanation

{0-7}{00-23}{00,15,30,45,60} Day/Hour/Minute

If the value 7 is given for day, then Hour and Minute must be zero.

To produce reports that contain historical data of completed accumulation intervals, the scheduled report times (set up with "start time" and "report interval") usually coincide with the end of accumulation intervals, and the time offset must be an integral number of accumulation intervals.

A time offset value of 00000 or any value less than the accumulation interval produces a report that contains data from the current register.

The following examples illustrate the use of time offset.

Given start time = 1205
report interval = 0001H
number of intervals = 03
accumulation interval = 15MIN
time offset = 00015-00060

The first report is generated at 12:05. Each hourly report contains the four most recent 15 minute totals of the monitored parameter. The most recent accumulation interval contains data for the period beginning 15 minutes before (time offset = 00015) the most recently completed accumulation period (12 noon). That is, the accumulation interval had a beginning time of 11:45 am, and covered between 11:45 AM and 12 noon. The range of time offsets also provides 15 minute totals from the three previous quarter hours in the report. There will be a total of three reports, one hour apart. The last report will occur at 2:05.

As a second example:

Given start time = 0015
report interval = 0015M
number of intervals = 96
accumulation interval = DAILY
time offset = 00000

The first report is generated fifteen minutes after midnight. Since the time offset is 00000, the contents of the current daily accumulator are contained in the report. The data in the first report is the total accumulation over the first 15 minutes of the day. The second report is generated 15 minutes later at 12:30 AM. The second report contains the accumulation total over the first 30 minutes of the day. Subsequent reports provide the daily accumulation total, sampled every 15 minutes throughout the day. A total of 96 reports will be generated, the last one occurring at midnight.

LK - Link

p[vv] - Up to two administrative links to which the scheduled report output will be transmitted. These parameters take the form of a physical administrative link number followed by a virtual circuit number, if applicable. The user may omit these optional parameters, specify a single link, or specify two links which will both receive all output generated by this scheduled report. If these optional parameters are omitted, the scheduled report output will by default be transmitted only to the link that the schedule command was received on. At the time of report, no PM report shall be sent to a link if it is out of service, or has screening option 1 and the schedule command was not received on that link.

cc - Hexadecimal condition code

cc *Explanation*

- 15** NPC is unequipped
- 26** NPC type error
- A1** The parameter specified does not match with the NPC type
- 0F** Frame time is not set
- 12** First and Last NPCs are outside unit boundary
- 13** First and Last NPCs are outside a module boundary
- 14** OFFSET range is invalid
- 16** Only up to 4 historical data registers are allowed
- 17** Command did not execute for any entity specified in the command
- 18** Exceeded limit of reports with accum. interval of 15 min. or less
- 19** Exceeded maximum limit of PM reports
- 1A** Report already exists
- 28** Scheduling report could not be found
- 88** Report interval is not an integral number of accumulation interval

UTL,TOD,CFA,FAC,X,PRIM,MONDAT

SET DAILY FACILITY ALARM REPORTING TIME

Explanation Of Command

This command is used for the following purposes:

- To set the DACS II System clock
- To set the time for the daily facility alarms report.
- To set the parameters to be reported in the daily facility alarms report.

SETTING THE DACS II SYSTEM CLOCK

To set the DACS II System clock specify only the time to which the clock is to be set (TOD).

SETTING THE TIME FOR THE DAILY FACILITY ALARMS REPORT

The facility alarms report is output daily at the default time of midnight. To output the report at a different time the user must redefine midnight. This redefined midnight is sometimes referred to as "local midnight". The "local midnight" is set by jointly specifying the time of day and the parameters to be reported. Once a "local midnight" has been set the facility alarms report will be output daily at the new "midnight".

A "local midnight" can be set for a gateway frame by specifying

TOD hrminsc and either CFA or FAC X'abcdef

OR

TOD hrminsc and either CFA or PRIM X'ghij.

SETTING THE PARAMETERS TO BE REPORTED

The parameters are set by use of the FAC keyword using the appropriate value of abcdef from the tables below.

Gateway offices require using either both or neither of the FAC and PRIM keywords since the domestic and international sides of the machine must be treated separately.

There are six common parameters. When any of the common parameters are selected, they should be enabled in both **abcdef** and **ghij**. These common parameters are listed below.

CGA or PBA
SLIP or CSS
ERS or ES
SERS or SES
CRC
FRER

Note: There are two sets of ghij values; one for NPCs provisioned as PA/TH type NPCs and the other for NPCs provisioned as PB or PC type NPCs.

To disable all reports specify zeros for each digit in the variable abcdef.

The CGA alarms report defaults to midnight if this command is not used to alter the report time or parameters.

Command

[I.51011]

UTL:FRM xy,SEQ ww:[TOD hrmnsc][,{CFA|FAC X'abcdef|PRIM X'ghij|MONDAT}]!

Completion Message

[O.51011]

M hh:mm:ss xy,ww n[vv] UTL[TOD[MDNT] hrmnsc] \
[{CFA|FAC abcdef|PRIM ghij|MONDAT}] COMPL

Denial Message

[O.51011.01]

M hh:mm:ss xy,ww n[vv] UTL[TOD[MDNT] hrmsnc \
[{CFA|FAC abcdef|PRIM ghij|MONDAT}] COND cc DNY

Autonomous Message

Not applicable.

Explanation Of Parameters

TOD - Time of day

hrmsnc - Time specification

hr - hours (00 through 23)

mn - minutes (00 through 59)

sc - seconds (00 through 59)

When the time of day is used with the MONDAT keyword mn and sc are restricted to certain values listed in the explanation of MONDAT.

MONDAT - Daily Monitor Starting Time

When the MONDAT keyword is entered, "hrmsnc" is used to specify the starting time for the daily accumulation interval for PA/TH type NPCs. In this case, "mn" is limited to 00, 15, 30 or 45, and "sc" is limited to 00. The default daily monitor starting time is midnight. At the daily monitor starting time DACS II will report the facility alarms and the counts for all selected daily parameters for the daily interval just ended and clear all current counts and threshold crossing alarms to start a new daily interval. The report time specified with the MONDAT keyword is not applicable to other NPC types. Likewise, the midnight report time entered without the MONDAT keyword is not applicable to PA/TH type NPCs.

MDNT - Midnight

This keyword is output to indicate that midnight, the default time to output facility alarm reports, has been reset to be the time indicated by TOD hrmsnc.

Note: If the MONDAT keyword is entered, the MDNT keyword will not be output.

CFA - Carrier failure alarm

This keyword, when specified with the time of day field, indicates that the daily facility report time rather than the system time of day is being reprogrammed. The daily facility report will be output at the specified time, which defaults to midnight. See below the complete description of facility monitoring alarms that may be included in the daily facility report.

FAC - Facility

Request that the reporting of alarms specified by abcdef be enabled. This will cause only a subset of the daily facility report to be output.

abcdef - Facility performance alarm reports enable (hexadecimal)

This variable represents a six-digit hexadecimal number. Each hexadecimal digit represents 4 bits and each bit corresponds to a particular facility parameter. To enable alarm reports for a facility parameter the bit corresponding to that parameter is set to 1 using the tables below. To disable the alarm report the bit is set to 0.

Note: In a gateway office the FAC parameter cannot be used alone but must be used with the international parameter PRIM.

The following tables should be used to set or interpret the hexadecimal values of digit identifiers a through f.

a - Digit identifier (Unassigned)

b - Digit identifier

b *Facility parameter alarm report enabled*

F DS3 ALM, SAFE, SANE
E DS3 ALM, SAFE
D DS3 ALM, SANE
C DS3 ALM
B SAFE, SANE
A SAFE
9 SANE
8 Not assigned
7 DS3 ALM, SAFE, SANE
6 DS3 ALM, SAFE
5 DS3 ALM, SANE
4 DS3 ALM
3 SAFE, SANE
2 SAFE
1 SANE
0 DS3 ALM, SAFE, SANE alarm reports disabled

DS3 ALM - DS3 or Hybrid DS3 alarm
SAFE - Shelf alarm far end
SANE - Shelf alarm near end

c - Digit identifier (Unassigned)

d - Digit identifier

d *Facility parameter alarm report enabled*

F FRER, BPV

E FRER

D BPV

C Not assigned

B FRER, BPV

A FRER

9 BPV

8 Not assigned

7 FRER, BPV

6 FRER

5 BPV

4 Not assigned

3 FRER, BPV

2 FRER

1 BPV

0 FRER, BPV alarm reports disabled

FRER - Frame errors

BPV - Bipolar violations

e - Digit identifier

e *Facility parameter alarm report enabled*

F CRC, COFA, SERS, ERS

E CRC, COFA, SERS

D CRC, COFA, ERS

C CRC, COFA

B CRC, SERS, ERS

A CRC, SERS

9 CRC, ERS

8 CRC

7 COFA, SERS, ERS

6 COFA, SERS

5 COFA, ERS

4 COFA

3 SERS, ERS

2 SERS

1 ERS

0 CRC, COFA, SERS, ERS alarm reports disabled

CRC - Cyclic redundancy code

COFA - Change of frame alignment

SERS - Severely errored seconds

ERS - Errored seconds

f - Digit identifier

f *Facility parameter alarm report enabled*

F BER, SLIP, OOF, CGA, LOS
E BER, SLIP, OOF
D BER, SLIP, CGA, LOS
C BER, SLIP
B BER, OOF, CGA, LOS
A BER, OOF
9 BER, CGA, LOS
8 BER
7 SLIP, OOF, CGA, LOS
6 SLIP, OOF
5 SLIP, CGA, LOS
4 SLIP
3 OOF, CGA, LOS
2 OOF
1 CGA, LOS
0 BER, SLIP, OOF, CGA, LOS alarm reports disabled

BER - Bit error rate
 SLIP - Slip
 OOF - Out of frame
 CGA - Carrier group alarm
 LOS - Loss of signal

Some examples of the available choices for X'abcdef are shown below:

X'00000A BER and OOF alarm reporting enabled
 X'000000 alarm reports disabled for all parameters
 X'000001 CGA and LOS alarm reporting enabled
 X'0C0511 DS3, BPV, ERS, CGA, and LOS alarm reporting enabled

PRIM - Primary

Request that reporting of alarms specified by ghij be enabled. This will cause only a subset of the daily facility report to be output.

ghij - Primary Alarm or Parameter-count reports enable (hexadecimal)

This variable is a four-digit hexadecimal number. To enable alarm or parameter-count reports for a particular facility parameter, set the appropriate bit of ghij to 1. A bit set to 0 will disable the alarm report for the particular parameter.

There are two sets of parameters for ghij.

1. PATH NPC parameters
2. PB or PC NPC parameters

Note: In a gateway office the PRIM parameter cannot be used alone but must be used with the domestic parameter FAC.

PA/TH NPC parameters

The following tables should be used to set or interpret the hexadecimal values of digit identifiers g through j.

g - Digit identifier

g *Facility parameter alarm report enabled*

F FEBE, FES, FSES, FUAS

E FEBE, FES, FSES

D FEBE, FES, FUAS

C FEBE, FES

B FEBE, FSES, FUAS

A FEBE, FSES

9 FEBE, FUAS

8 FEBE

7 FES, FSES, FUAS

6 FES, FSES

5 FES, FUAS

4 FES

3 FSES, FUAS

2 FSES

1 FUAS

0 FEBE, FES, FSES, FUAS alarm reports disabled

FEBE - Far end block error

FES - Far end errored seconds

FSES - Far end severley errored seconds

FUAS - Far end unavailable seconds

Note that parameters FEBE, FES, FSES and FUAS are not applicable for the TH type NPCs.

h - Digit identifier

h *Facility parameter alarm report enabled*

F UATC, BER, FRER, MER

E UATC, BER, FRER

D UATC, BER, MER

C UATC, BER

B UATC, FRER, MER

A UATC, FRER

9 UATC, MER

8 UATC

7 BER, FRER, MER

6 BER, FRER

5 BER, MER

4 BER

3 FRER, MER

2 FRER

1 MER

0 UATC, BER, FRER, MER alarm reports disabled

UATC - Unavailable time count

BER - Minor bit error rate; for NPCs with MBER feature

FRER - Framing errors

MER - Multiframe errors

i - Digit identifier

i *Facility parameter alarm report enabled*

F CRC, CV, SES, ES

E CRC, CV, SES

D CRC, CV, ES

C CRC, CV

B CRC, SES, ES

A CRC, SES

9 CRC, ES

8 CRC

7 CV, SES, ES

6 CV, SES

5 CV, ES

4 CV

3 SES, ES

2 SES

1 ES

0 CV, SES, ES alarm reports disabled

CRC - CRC4 check block errors

CV - Degraded minutes

SES - Severely errored seconds

ES - Errored seconds

j	- Digit identifier
j	<i>Facility parameter alarm report enabled</i>
F	UAS, CSS, OFS, PBA
E	UAS, CSS, OFS
D	UAS, CSS, PBA
C	UAS, CSS
B	UAS, OFS, PBA
A	UAS, OFS
9	UAS, PBA
8	UAS
7	CSS, OFS, PBA
6	CSS, OFS
5	CSS, PBA
4	CSS
3	OFS, PBA
2	OFS
1	PBA
0	UAS, CSS, OFS, PBA alarm reports disabled
	UAS - Unavailable seconds
	CSS - Controlled slip seconds
	OFS - Out-of-frame seconds
	PBA - Primary block alarms; default

Note: Enter 0 for an unassigned digit identifier

PB or PC NPC parameters

The following tables should be used to set or interpret the hexadecimal values of digit identifiers g through j.

- g** - Digit identifier (unassigned)
 - h** - Digit identifier
 - h** *Facility parameter alarm report enabled*
 - F** BER, FRER, MER
 - E** BER, FRER
 - D** BER, MER
 - C** BER
 - B** FRER, MER
 - A** FRER
 - 9** MER
 - 8** unassigned
 - 7** BER, FRER, MER
 - 6** BER, FRER
 - 5** BER, MER
 - 4** BER
 - 3** FRER, MER
 - 2** FRER
 - 1** MER
 - 0** BER, FRER, MER alarm reports disabled
- BER - Bit error rate
FRER - Frame errors
MER - Multiframe alignment errors

- i** - Digit identifier
- i** *Facility parameter alarm report enabled*
 - F** CRC, DM, SERS, ERS
 - E** CRC, DM, SERS
 - D** CRC, DM, ERS
 - C** CRC, DM
 - B** CRC, SERS, ERS
 - A** CRC, SERS
 - 9** CRC, ERS
 - 8** CRC
 - 7** DM, SERS, ERS
 - 6** DM, SERS
 - 5** DM, ERS
 - 4** DM
 - 3** SERS, ERS
 - 2** SERS
 - 1** ERS
 - 0** CRC, DM, SERS, ERS alarm reports disabled
- CRC - Cyclic redundancy code
DM - Degraded minutes
SERS - Severely errored seconds
ERS - Errored seconds

j - Digit identifier

j *Facility parameter alarm report enabled*

F US, SLIP, LOFA, PBA

E US, SLIP, LOFA

D US, SLIP, PBA

C US, SLIP

B US, LOFA, PBA

A US, LOFA

9 US, PBA

8 US

7 SLIP, LOFA, PBA

6 SLIP, LOFA

5 SLIP, PBA

4 SLIP

3 LOFA, PBA

2 LOFA

1 PBA

0 US, SLIP, LOFA, PBA alarm reports disabled

US - Unavailable seconds

SLIP - Slip

LOFA - Loss of frame alignment

PBA - Primary block alarms

cc - Hexadecimal condition code

cc *Explanation*

E0 Bad FAC value entered

04 MONDAT keyword is invalid for this feature

48 Bad PRIM X'efgh values

4A PRIM keyword is invalid for this feature

4B The common bit(s) is(are) not set in both FAC & PRIM

4C Both FAC and PRIM values(keywords) are required

D5 Boot in progress, can't service request

Glossary

Glossary

A

AAC

ACCULINK Access Controller

ABT

Abort

ACO

Alarm Cutoff

Active

For duplicated entities, the entity is providing service rather than operating in hot standby.

AI

Alarm Interface

AIS

Alarm Indication Signal (also known as all 1s signal)

Alarm Delay

The alarm delay (in seconds) for software-detected alarm conditions. Initial value is 20 seconds.

Alarm Indication Signal (AIS)

A signal transmitted downstream to indicate that network transmission line failures were detected upstream.

All Ones Signal

Another name for DS1 Alarm Indication Signal (AIS). It is defined to contain all ones in the terminal-to-terminal mode.

ALM

Alarm

Alphanumeric Characters

Letters and digits.

Alternate Mark Inversion (AMI)

A DS1 line code in which alternate one bits are positive and negative, but zero substitution is not used.

AMI

Alternate Mark Inversion

ANSI

American National Standards Institute

AS&C

Alarm Surveillance and Control

ASCII Character

Letters, digits, and symbols used in the American Standard Code for Information Interchange.

ATAG

Autonomous Message Tag

ATP

All Tests Passed

Attribute

Alarm indication level: major, minor, or no alarm.

AUD

Audit

Autolock

When the system autolocks an entity, it switches to protection and forbids return to the working entity even if the trouble clears. This is usually caused by multiple protection switches on that entity in a short time period.

Autolock Number of Switches

This parameter is the number of times that the system restores an entity to service (after intermittent failures) in a given autolock switching interval before the entity is autolocked.

Autolock Release Time

The number of hours between times when the system automatically releases autolock.

Autolock Switching Interval

An interval in minutes (see Autolock Number of Switches).

Autonomous

Done automatically by the system without any manual intervention from the user.

Autoprovisioned

Put in the provisioned state automatically by the system.

B

B3Zs

Bipolar with 3-zero substitution, a DS3 line code.

B8ZS

Bipolar Eight Zero Substitution

Baud Rate

Transmission data rate (bits per second) on an administrative link.

BBL

Backbone Leg

BC

Bus Controller

BCON

Broadcast Cross-Connect

BDIS

Broadcast Disconnect

BER

Bit Error Rate

BER Metric

Specifies the metric for calculating bit error rate at a DS3 interface port. Options are bipolar variations (BPV) or parity (PTY). (Initial value is BPV).

Bipolar Violation

A violation of the alternating +1, -1 pattern in a 3-level code.

Bit Error Rate Threshold

3 stands for 0.001, 6 stands for 0.000001.

Blue Code

Same as AIS

BMTR

Back-up Memory Transfer

Boot

To transfer contents of a Memory Card into the system's working memory and system hardware. The contents of a Memory Card can include both system software and database.

BOS

Bit Oriented Signaling

BPV

Bipolar Violation

BRD

Broadcast Leg

Broadcast

Form a bridge connection.

BSRF

Basic Synchronization Reference Facility

BT

Bus Terminator

BX

Bus Extender

Byte

Usually refers to a group of eight consecutive binary digits, but sometimes used for bit groups of other sizes.

C**CAS**

Channel Associated Signaling

CATP

Conditional All Tests Passed

CBIT

A DS3 line code in which parity checks on blocks of data are used to detect bits in error.

CCB

Cross-Connect Buffer

CCI

Clock and Control Interface

CCIS

Common Channel Interoffice Signaling

CCITT

International Telephone and Telegraph Consultative Committee

CCN

Cross-Connect Network

CCNI

Cross-Connect Network Interface

CEF

Capacity Expansion Frame

CFA
Carrier Failure Alarm

CFR
Synchronizer Configuration

CGA
Carrier Group Alarm

CHG
Change

CI
Communications Interface

CIU
Craft Interface Unit

Clear (CL)
An alarm condition no longer exists.

CLF
Carrier Line Failure

CMAP
Channel Map

COFA
Change-Of-Frame-Alignment

Condition
The type of alarm indication.

CP
Circuit Pack

CPR
C-Bit Processor

CPU
Central Processing Unit

CRC
Cyclic Redundancy Checking

CRO
Clock Reference Oscillator

Cross-Connect
A piece of hardware used to interconnect line-terminating equipment, multiplexers, and other equipment.

Cross-Connection
An interconnection between two specified NPC channels.

Crosstalk
A signal induced into one transmission line from another transmission line.

CRT

Cathode Ray Tube

CSS

Controlled Slip Seconds

CTAG

Correlation Tag

Current Value

In the dialog mode, it indicates that the current value of a parameter is used by the system unless you direct otherwise.

CV

Coding Violations

D**DACS**

Digital Access and Cross-Connect System

Database

A record of the system configuration and status. It contains cross-connections, status of entities and transmission lines, performance monitoring threshold values and collected data.

DATS

Digital Access Test Set

DC

Digroup Circuit or Direct Current

DCC

Disconnect Code

DCLU

Digital Carrier Line Unit

DDC

Dual Digroup Circuit

DDS

Digital Data System

Default

A value the system automatically uses for a parameter if you do not specify a value.

Delimiter

A colon, comma, or space used to separate two parameters in a command or message.

Demultiplexer

A device used with a multiplexed signal for recovering signals contained within it and restoring the distinct individual channels of these signals.

DFB

Dual Fuse Board

Diagnose

Test an entity.

DIF

DACS Interface Module

DL

Data Link

DLC

Digital Loop Carrier

DM

Dual Multiplexer

DMA

Deferred Maintenance Alarm

DMAP

Digroup Map

DMB

Digital Multipoint Bridge

DMI

Digital Multiplex Interface

DMM

Digital Multimeter

DOTS

Digital Office Timing Supply

DPC

Dual Primary Circuit

DPLL

Digital-Phase Locked Loop

Driven

A driven port is being monitored, and a good signal is expected.

DS0

Digital Signal Level 0 (64-kb/s)

DS1

Digital Signal Level 1 (1.544-Mb/s)

DS1 Data Rate

The DS1 Data Rate is calculated as follows:

$DS1 = (24 \text{ Channels} \times 8 \text{ bit/sample} + 1 \text{ frame bit}) \times 8000 \text{ samples/sec}$

$DS1 = 193 \times 8000 = 1.544 \text{ Mb/s}$

DS1 Port

A DS1 port in either a DS1 interface module or a DS3 interface module.

DS3

Digital Signal Level 3

DS3U

DS3 Unit

DSP

Digital Signal Processor

DSPC

Digital Signal Processor Circuit

DSPI

Digital Signal Processor Interface

DSPU

Digital Signal Processor Unit

DSU

Data Service Unit

DSX

Digital Signal Cross-Connect

DTAC

Digital Test Access Connector

Duplex Entity

A pair of entities in which one is active and the other is in hot standby (clock generators).

Duplicated Entity

A pair of entities in which one is active and the other is in hot standby (for example, the Synchronizer Cross-Connect (SXC) circuit packs).

E**E1 Data Rate**

The E1 Data Rate is calculated as follows:

$E1 = (32 \text{ Channels} \times 8 \text{ bit/sample}) \times 8000 \text{ samples/sec}$

$E1 = 256 \times 8000 = 2.048 \text{ Mb/s}$

**NOTE:**

With this data rate, 30 channels carry traffic and two channels are reserved; one channel contains framing information and the other channel contains signaling information.

E2A

Type of Alarm Telemetry

EBX

Expanded Bus Extender

ECCN

Expanded Cross-Connect Network

Echo

Display of keystrokes entered from a terminal (passwords are not echoed).

ECI

Enhanced Communications Interface

EDDC

Enhanced Dual Digroup Circuit

EDPC

Enhanced Dual Primary Circuit

EER

Excessive Error Rate

EFC

Extended Frame Controller

EIA

Electronic Industries Association

EID

Entity Identification

EMC

Electromagnetic Compatibility

EMIU

Expanded Multiple Interface Unit

EMTC

Expanded Maintenance Circuit

Enter

Provision an entity by a command, not automatically by the system.

Entity

A specific piece of hardware (such as the Main Controller (MC) or Network Processing Circuit (NPC)) that has been assigned a name and is recognized by the system.

Entity Identifier

The name used by the system to refer to an entity.

Equalizer

A circuit adjustment used to maintain signal strength between desired limits.

Equipped

The entity is entered in the system database via a user provisioning command.

ER
Error Rate

ERS
Errored Seconds

ES
Errored Seconds

ESD
Electrostatic Discharge

ESF
Extended Superframe

ESR
Error Source Register

ESR1
Error Source Register 1

ESR2
Error Source Register 2

ETSI
European Telecommunication Standardization Institute

F

FAL
Fuse Alarm Lamp

FAS
Frame Alignment Signal

FC
Format Converter

FDL
Facility Data Link

Fe
Extended Superframe Format

FEBE
Far-End Block Error

FELP
Far End Loopback

FES
Far-End Errored Seconds

FLI

Facility-Line Interface

FMAC

Facility Maintenance and Administration Center

FMT

Formatter

Forced

A traffic-carrying entity (either service or protection) has been deliberately locked into a service providing state by manual command despite being bad.

FPA

Feature Package A

FPB

Feature Package B

FPC

Feature Package C

FRADT

Frame Audit

FRER

Framing Bit Error

Fs

Fx Framing Format

FSES

Far-End Severely Errored Seconds

FTM

Facility Terminating Module

FTU

Facility Terminating Unit

FUAS

Far-End Unavailable Seconds"

FW

Framing Word

G**Grooming**

Rearrangement of DS1 signals in DS3 signals.

H

HDB3

High Density Bipolar 3 Zero Substitution

Header

The first line of a message.

Header Date

Specifies the current date as YYMMDD, where YY is the last two digits of the year, MM is the month, and DD is the day of the month.

Header Time

Specifies the current time of day as HHMMSS, where HH is the hour (00 to 23), MM is the minutes, and SS is the seconds.

HECI

High-Speed Enhanced Communications Interface

Hierarchy

An orderly ranking or sequence of elements, such as that of menus presented at a terminal.

Hit

A disruption of service that lasts for less than 1 second. See Outage.

Hot Standby

An entity ready for fast, automatic placement into operation to replace an active entity.

HUBID

Hub Identifier

I

ICLD

Idled

Idle

An output port is idle if it is not cross-connected to an input port.

Idle Channel

A channel on an NPC that has not been cross-connected.

IFTU

Integrated Facility Terminating Unit

In Service

The entity is performing normal service functions, either active or standby.

ISX

Integral Shelf Cross-Connect

ITU-TSS

International Telecommunication Union-Telecommunication Standardization Sector

J**Jitter**

Short term variations in the phase of a digital signal.

K**kb/s**

Kilobit Per Second

kHz

Kilohertz

L**LAN**

Local Area Network

LBO

Line Build-Out

LED

Light-Emitting Diode

LFA

Loss of Frame Alignment

LILB

Line Interface Loopback

Link ID

The location and type of a user interface link.

LLB

Line Loopback

LMA

Loss of Multiframe Alignment

Location

The specific entity involved.

Loopback

A circuit arrangement that causes a received signal to be returned to its source.

LOS

Loss of Signal

M**M13**

A standard format used for DS3 signals

Maintenance

The entity has been locked into a non-service providing state by a manual command.

Maintenance Condition (MCOND)

MCOND is a condition in which the Main Controller (MC) is isolated from system hardware in order for the user to perform memory transfer operations. Placing the MC in MCOND is non-service affecting. When the MC is in the MCOND service state, the system software and database are not transferred to the Memory Cards. The Maintenance Condition enables the user to transfer database and/or system software among the Memory Cards and the MC's Random Access Memory (RAM) in a controlled manner via user commands. The MCOND service state is also used to perform system software upgrades.

Mapped

Cross-Connected

Mapped

Cross-connected.

Mb

Megabit

Mb/s

Megabit Per Second

MBER

Minor Bit Error Rate

MC

Main Controller

MCOND

Maintenance Condition

MCP

Main Controller Peripheral

MEMA

Memory Card Slot A

MEMB

Memory Card Slot B

Memory Location

Specifies the equipment, DS1 interface port, or DS3 MUX port location associated with a memory type.

MER

Multiframe Error

MI

Maintenance Information

MIU

Multipoint Interface Unit

MJU

Multipoint Junction Unit

MMFG

Multiplexer-MIU Function Group

MML

HuMan-Machine Language

MP

Main Processor

MPDIS

Multipoint Disconnect

MPM

Multipoint Mode

MTC

Maintenance Circuit

MXR

Multiplexer

N

NA

No Acknowledgement

NDL

No Data Link

NEBS

Network Equipment Building Systems

Network Element

A DACS II ISX system is a network element.

Network Element

A DACS II frame is a network element.

NFW

Not Framing Word

NG

No Good

NOBBL

No Backbone Leg

Notification Code

The notification code for alarm and status conditions, which include: MJ - major alarm; MN - minor alarm.

Notification Code

The notification code for alarm and status condition which include: MJ - major alarm; MN - minor alarm; NA - no alarm (status only); or CL - cleared alarm.

NPC

Network Processing Circuit

NPCTG

Network Processing Circuit Test Group

NPCTP

Network Processing Circuit Test Port

NSA

Nonsignaling Associated

NZCS

No Zero Code Suppression

O

OA&M

Operation, Administration and Maintenance

OCNT

One-Way Cross-Connect, Terminated

ODIS

One-Way Disconnect

OFS

Out-Of-Frame Seconds

One-Way Cross-Connect**OOS**

Out-of-service

OS

Operations System

Out Of Service (OOS)

The entity is not providing its normal service function (removed from service) either because of a system problem or because it has been removed from service manually.

Out-of-Service (OOS)

The entity is not providing its normal service function (removed from service or protected) either because of a system problem or because it has been removed from service manually.

Outage

A disruption of service that lasts for more than one second. See Hit.

P**Parity Check**

To determine whether a block of digital data has been corrupted in transmission, you can use an even-parity format in which an extra bit is added to the block at the transmitter if necessary so that the block always contains an even number of one bits. A parity-checking circuit at the receiving end can determine whether an error has occurred in transmission. An odd-parity format can also be used for the same purpose.

Parity Check

To determine whether a block of digital data has been corrupted in transmission, you can use an even- or odd-parity format in which an extra bit is added to the block at the transmitter if necessary so that the block always contains an even number of one bits. A parity-checking circuit at the receiving end can determine whether an error has occurred in transmission.

PBA

Primary Block Alarm

PBC

Primary Block Circuit

PBF

Primary Block Failure

PBX

Private Branch Exchange

PCM

Pulse Code Modulation

PCMCIA

Personal Computer Memory Card International Association

PDS

Program Documentation Standards (Language)

PF

Printout Follows

PFW

Pseudo-Frame Word

PLL

Phase-Locked Loop

PMA

Prompt Maintenance Alarm

PNI

Packet Network Interface

POTS

Plain Old Telephone Service

Primary Line

The second line in an output message.

Program

The software that directs the operation of the main controller and other frame elements.

Protocol

Detailed format and procedure used for transmitting data.

Protocol

Detailed format and procedures used for transmitting digital data.

Protocol Type

Indicates the protocol supported on the interface link.

Provisioned

The entity has been configured by the user and entered into the system database and is ready to be restored to service.

Provisioned

The entity is ready to perform its intended function"

PU

Power Unit

Pulse Code Modulation (PCM)

The process by which analog signals are sampled, quantized, and coded into a digital bit stream.

Pulse Code Modulation (PCM)

The process by which analog signals are sampled, quantized, and coded into a digital bit stream.

PVC

Permanent Virtual Circuit

R**R16**

Remote Alarm Indication in TS16

RAI

Remote Alarm Indication

RAIS

Remote Alarm Indication Signal

RAM

Random Access Memory

RBER

Remote Bit Error Rate

RDC

Red Circuit

REER

Remote Bit Error

Released

If an input port, it is not under test access; if an output port, it is not cross-connected to an input port under test access.

Released

If an input port, not under test access; if an output port, not cross-connected to an input port under test access.

RL

Retry later

RMS-D

Remote Measurement System - Digital

RMS-I

Remote Measurement System - International

Rollover

Operation used when the transmission facility between the system and an upstream system is to be replaced.

RT

Remote Terminal

RTS

Remote Test System

RTS-5A

Remote Test System 5a

S**SAP**

Status and Alarm Panel

SARTS

Switched Access Remote Test System

SCC

Subrate Cross-Connect

SCCSAI Switching Control Center System Asynchronous Interface**SECH**

Subrate Establish Command

SERS

Severely Errored Seconds

SID

Source Identifier

SNIDER

Protocol (message format) used on administrative links.

SNIDER

Protocol (message format) used on asynchronous administrative links.

Software ID

Gives the software version information for a system: g - is a one-digit number giving the software release; i - is a two-digit number giving the issue; r - is a one-digit number giving the point release.

Software ID

The software version information for the system.

SPU

Synchronizer Power Unit

SRM

Subrate Multiplexer

SSC

Secondary Storage Controller

SSP

Select Synchronization Port

Standby

Entity is one of a duplicated pair, but not providing service. It is ready to be used to replace a similar entity either by protection or by duplex switching.

Standby

The entity is in service, but is not providing service functions. It is ready to be used to replace a similar entity either by protection or by duplex switching.

Index

A

ABT, 6-2
ACO, ACTIVE, 6-5
ACON, OLD, NEW, INCL, 6-7
ACT, MAP, CLR, INCL, 6-13
ADD, LINK, APPL, ASCS, ASCD, PM, L2AD, POLL, 6-22
ADD, LINK, K, T1, T3, N2, A, B, 6-24
ADD, LINK, PTCOL, S, X, T, M, BAUD, ALM, BS, ENQ, 6-26
ADD, LINK, W, P, T20, T22, T23, T25, T26, R20, 6-31
ADD, NPC, 6-38
ADD, RT, DL, MD, DGA, DGB, DGC, DGD, DGP, NDL, 6-44
ADD, USER, LINK, INCL, ALL, LANG, M, P, F, 6-51
ADD, USER, NEW, PASSWD, 6-59
ALM, IDLD, AI, NPC, 6-62
ALM, IDLD, NPC, 6-66
ALM, IDLD, UNIT, DS3, 6-70, 1
ALM, MJ, MN, INFO, NPC, 6-72
ALM, MN, IDLD, DS3UNPROTALM, DS3U, 6-77
ALM, PMC, PMA, DMA, MI, CCN, OOS, 6-79
ALM, PMC, PMA, DMA, MI, ECCN, OOS, 6-81
ALM, PMC, PMA, DMA, MI, SMEM, 6-83
ALM, RESET, DATE, TOD, FORMAT, MDY, DMY, PMC, 6-85
ALM, UNIT, DS3, 6-87, 1
ALW, PMREPT, NPC, ALL, 6-89
ALWSW, UNIT, MMFG, TOPRTN, TOSRVC, 6-94
APPEND, END, 6-96
APPL, RESET, IN, PROGRESS, 6-98, 1
AR01, MISC, ALM, CGA, LOS, 6-100
AR01, MISC, ALM, IDLD, CGA, LOS, 6-107
AUD, PARAMS, 6-114
AUD, QRY, BER, ALL, FTU, NPCS, TOT, EOM, DS3U, 6-116
AUD, QRY, BER, ALL, NPCS, TOT, 6-130
AUD, QRY, CFA, CGA, LOS, 6-132, 6-146, 6-158

B

BADVERB, BAD, SYNTAX, STOPPED, 7-2
BADVERB, CMD, INERR, STOPPED, 7-4
BCON, FROM, TO, NTR, LPD, CONV, CUS, INCL, RDC, 7-7
BCON, FROM, TO, RDC, CUS, INCL, NTR, LPD, CONV, 7-20
BCON, FROM, TOX, NTR, LPD, CONV, CUS, INCL, 7-30, 1
BCON, FROM, TOX, RDC, CUS, INCL, NTR, LPD, 7-44

BDIS, FROM, TO, CONV, OOS, DCC, INCL, 7-54, 1
BDIS, FROM, TO, OOS, INCL, CONV, 7-64
BDIS, FROM, TOX, CONV, OOS, DCC, INCL, 7-74, 1
BDIS, FROM, TOX, OOS, INCL, CONV, 7-84
BOOT, FAILED, BAD, DEVICE, 7-93
BOOT, FROM, PMEM, FAILED, ATTEMPTING, TO, 7-95
BOOT, FROM, PMEM, SMEM, 7-97
BX2, STF, ATP, 7-99

C

CFR, FRAME, 8-2
CFR, SYNC, FPLL, 8-4
CFR, SYNC, MASTER, SLAVED, 8-6
CFR, SYNC, STRATUM, STR2, STR3, 8-8
CFR, XC, INCL, 8-10
CHG, DS1ALMDS3, ON, OFF, 8-12
CHG, DS3ALMDLY, 8-15, 1
CHG, DS3UNPROTALM, ON, OFF, 8-17
CHG, ECLOC, TYPE, MJU, SRM, 8-19
CHG, FROM, TO, NOT, TLA, TLR, F, T, B, A, INCL, 8-21
CHG, FROM, TO, NOT, TLA, TLR, F, T, B, L, G, A, 8-31
CHG, FROM, TO, TLP, NG, ES, INCL, 8-44
CHG, HUBID, O, 8-57
CHG, MACRO, MAP, SPACE, 8-59
CHG, MSGLOG, ON, OFF, 8-61
CHG, NPC, ALMOPT, PLOPT, AIS, INFO, MJ, MN, PL, 8-63
CHG, NPC, NFS, 8-76, 1
CHG, NPC, OPTS, 8-83
CHG, NPC, RT, DL, TYPE, OPTS, 8-118
CHG, NPC, TS0, 8-141, 1
CHG, NPC, TS0M, 8-147, 1
CHG, NPC, TYPE, IW, X, 8-153
CHG, NPC, TYPE, IW, X, INCL, 8-166, 8-176
CHG, PASSWD, OLD, NEW, 8-185
CHG, RT, DL, TO, 8-188
CHG, RT, DL, ZCS, B8ZS, 8-190
CHG, RT, RTF, SWMN, 8-193
CHG, SCON, OLD, NEW, 8-197
CHG, SCON, OLD, NEW, MPTM, 8-206
CHG, SECH, OLD, NEW, PCH, DCC, 8-216
CHG, SETOP, TYPE, ALL, NPCOP, 8-225
CHG, SWCH, TOX, INCL, 8-239, 8-248
CHG, SYNC, TLI, SSP, TYPE, SRC, 8-257
CHG, TLA, TLR, TO, 8-262
CHG, TLA, TLR, TO, MJU, 8-271
CHG, TYPE, OPTS, 8-281
CHG, UNIT, CONN, 8-306
CHG, UNIT, DS3, BERM, BERT, LBO, TYPE, 8-309, 1
CHG, UNIT, FTMI, EQL, 8-313

CHG,USER,LINK,INCL,SCR,GR,MCON,MCOFF, 8-316
CI,ECI,RESET, 8-320
CI,ECI,STARTUP,STF,ATP, 8-322
CMD,MC,OOS,MCOND,INSERVICE,MPDBASE, 8-324
COPY,NPC,TO, 8-326
CTST,FAD,AIS,INCL, 8-353
CTST,FAD,EMODE,FMODE,INCL, 8-361
CTST,FAD,FROM,TO,AIS,INCL, 8-368
CTST,HUB,FAD,TO,INCL, 8-377
CTST,LPBKT,FAD,INCL, 8-383
CTST,TNR,ALL,OOS, 8-388
CTST,TNR,FAD,OOS, 8-390

DGRTH,TG, 10-37
DGRTH,TP, 10-39
DGRTH,UNIT, 10-41
DGRTH,UNIT,FTMI, 10-47
DGRTH,UNIT,MIU, 10-49
DGRTH,UNIT,MXR, 10-51, 1
DLT,FPKG, 10-54
DLT,MACRO,MAP,USER, 10-58
DLT,NPC, 10-60
DLT,RT,DL,DGA,DGB,DGC,DGD,DGP, 10-67
DLT,USER, 10-72
DSPC, 10-74, 1

D

DDIS,FROM,TO, 9-2, 1
DELETE,END, 9-7
DGN,CCB,CFT,X, 9-9
DGN,CCI,CFT,X, 9-16
DGN,CCNI,CFT,X, 9-20
DGN,CI,CFT,X, 9-26
DGN,ETSI,CFT,X, 9-30
DGN,ETSI,ECCN,ALL, 9-34
DGN,IN,PROGRESS, 9-37
DGN,LINK,CFT,X, 9-39
DGN,MC,CFT,X, 9-42
DGN,MP,CFT,X, 9-46
DGN,NPC, 9-49
DGN,NPC,SIDE,CFT,X, 9-55
DGN,PMEM,SMEM,CFT,X,EXCT,DBASE,VERIFY, 9-77
DGN,SYNC, 9-82
DGN,SYNC,TLI,CRO, 9-85
DGN,SYNC,TLI,SSP, 9-88
DGN,TSI,CFT,X, 9-91
DGN,TSIS,CCN,ALL, 9-99
DGN,TSIS,CCN,UNIT,CONN, 9-102
DGN,UNIT,DSPI,CFT,X, 9-105
DGN,UNIT,FC,CFT,X, 9-108
DGN,UNIT,FLI,CFT,X, 9-113
DGN,UNIT,FMT,CFT,X, 9-117
DGN,UNIT,FTMI,CFT,X, 9-123
DGN,UNIT,MIU,CFT,X, 9-126
DGN,UNIT,MXR,DEV,CFT,X, 9-129
DGN,UNIT,UC,CFT,X, 9-135
DGRTH,NPC, 10-2
DGRTH,NPC,NPCTG,TGR, 10-18
DGRTH,NPC,NPCTP,TPR, 10-26
DGRTH,SYNC,TB, 10-31
DGRTH,SYNC,TLI,SSP, 10-33

E

EBX,STARTUP,STF,ATP, 11-2
ED,CRET,MAP,PIC, 11-4
ED,MACRO,MAP, 11-11
EMTC,STARTUP,STF,ATP, 11-17
END,LOG, 11-19
END,LOG,ABORTED, 11-21
ERR,CMD,ABT,TN,STOPPED, 11-23
ERR,ESR,ANALYSIS,REPORT,EVENT, 11-25
ERR,ESR,CCB,TN,EVENT,COND, 11-28
ERR,ESR,CCI,TN,EVENT,COND, 11-30
ERR,ESR,CCNI,TN,EVENT,COND, 11-33
ERR,ESR,ETSI,TN,EVENT,COND, 11-40
ERR,ESR,MC,MP,CI,TN, 11-43
ERR,ESR,MC,MP,TN,EVENT,COND,CI,BX,EBX, 11-45
ERR,ESR,NPC,SIDE,TN,EVENT,COND, 11-49
ERR,ESR,NPC,TN,EVENT,COND, 11-57
ERR,ESR,SYNC,TLI,SSP,TN,EVENT,COND, 11-62
ERR,ESR,SYNC,TLI,TN,EVENT,COND, 11-67
ERR,ESR,SYNC,TN,EVENT,COND, 11-71
ERR,ESR,TSI,TN,EVENT,COND, 11-76
ERR,ESR,UNIT,DSPI,TN,EVENT,COND, 11-80
ERR,ESR,UNIT,FC,TN,EVENT,COND, 11-83
ERR,ESR,UNIT,FLI,TN,EVENT,COND, 11-86
ERR,ESR,UNIT,FMT,TN,EVENT,COND, 11-89
ERR,ESR,UNIT,FTMI,TN,EVENT,COND, 11-93
ERR,ESR,UNIT,HFMT,TN,EVENT,COND, 11-96
ERR,ESR,UNIT,HMXR,DEV,TN,EVENT,COND, 11-100
ERR,ESR,UNIT,MIU,TN,EVENT,COND, 11-105
ERR,ESR,UNIT,MXR,DEV,TN,EVENT,COND, 11-108
ERR,ESR,UNIT,UC,UBX,TN,EVENT,COND, 11-113
ERR,HARDWARE,TN,COND,EVENT,ACTION, 11-116
ERR,LINK,TN,STATUS, 11-120
ERR,MSG,TO,LOG,DISCARDED, 11-123
ERR,PMEM,SMEM,TN,EVENT,COND, 11-125

ERR,PWR,PMC,PMA,DMA,MI,TN, 11-127
ERR,SOFTWARE,MC,ERROR,MID,TN,RC,ACTION, 11-130
ERR,SYNC,MODE,FAST,HOLDOVER,NORMAL, 11-134
ERR,SYNC,TLI,SSP,NPC,TN,ALM,LOS,LEN, 11-139
ERR,SYNC,TLI,SSP,TN,ALM,LOS,LEN,EXJ, 11-144
EXC,MACRO, 11-149

F

FRADTS,BMCMP, 12-2
FRADTS,DGN,DEV, 12-4
FRADTS,FRCMP, 12-8
FRADTS,MC,DGN, 12-108

G

GRTH,FRAME,CHAR,UID, 13-2
GRTH,NPC,NPCTG, 13-5
GRTH,NPC,NPCTP, 13-12
GRTH,NPC,TYPE, 13-17
GRTH,NPC,TYPE,CBTIMER, 13-24
GRTH,NPC,TYPE,OPTS,IW,X, 13-31
GRTH,NPC,TYPE,OPTS,IW,X,INCL,AIS,INFO, 13-40,
13-62
GRTH,SYNC,TB,TYPE, 13-75
GRTH,SYNC,TLI,TYPE, 13-77
GRTH,SYNC,TLI,TYPE,SSP,SRC, 13-79
GRTH,TG,NPCTG, 13-83
GRTH,TP, 13-86
GRTH,UNIT,FTMI,EQL, 13-90
GRTH,UNIT,MIU,TYPE, 13-93
GRTH,UNIT,MXR,TYPE,BERM,BERT,LBO, 13-95, 1
GRTH,UNIT,TYPE,CONN, 13-99

I

IN,PROGRESS, 14-2
INH,PMREPT,NPC,ALL, 14-4
INH,SW,UNIT,MMFG,TOPRTN,TOSRVC, 14-9
INSTALL, 14-11, 1
INVALID,SFW,ID,BLOCK,COND, 14-19

L

LINE, 15-2
LIST,END, 15-4
LOGIN,USER,PASSWD, 15-7
LOGOFF,USER,LINK,INCL, 15-10

M

MC,MCOND, 16-2
MC,RESET,RELEASE,ISSUE,FPKG,COND, 16-4
MOVE,FROM,END,TO, 16-8
MP,STARTUP,STF,ATP, 16-10
MTC,STF,ATP, 16-12

O

OCNT,FROM,TO,MPM,CUS,INCL,RDC, 17-2
OCNT,FROM,TO,RDC,CUS,INCL,PRIOUT, 17-15, 17-28
OCON,FROM,TO,MPM,CUS,INCL,RDC, 17-37
OCON,FROM,TO,RDC,CUS,INCL,PRIOUT, 17-51, 17-63
ODIS,FROM,TO,INCL,OOS,DCC,PRIOUT, 17-72
ODIS,FROM,TO,OOS,INCL,PRIOUT, 17-81
OPR,LPBK,NPC,LOCN, 17-90
OPR,LPBK,UNIT,MMFG, 17-100
OPR,TSIG,NPC, 17-103
OVERLOAD,MP,CI,UNIT,UC,TN,PROCESSOR, 17-108

R

REPT,PM,NPC,PARAM,COUNT,VLDTY,LOCN,AI, 18-2
RESET,DATE,TOD,FORMAT,MDY,DMY, 18-9
RESET,STOPPED, 18-11
RLS,LPBK,NPC,LOCN, 18-13
RLS,TSIG,NPC, 18-22
RMV,CCB, 18-27
RMV,CCI, 18-29
RMV,CCNI, 18-32
RMV,ETSI, 18-34
RMV,ETSI,ECCN,ALL, 18-36
RMV,LINK, 18-38
RMV,MC, 18-40

RMV,NPC,SIDE,INCL, 18-42
RMV,RT,DL, 18-72
RMV,SMEM,PMEM, 18-75
RMV,SYNC, 18-78
RMV,SYNC,TLI,CRO, 18-80
RMV,SYNC,TLI,PMC,PMA,DMA,MI,COND, 18-82
RMV,SYNC,TLI,SSP, 18-84
RMV,TSI, 18-87
RMV,TSIS,CCN,ALL, 18-89
RMV,TSIS,CCN,UNIT,CONN, 18-92
RMV,UNIT,FC, 18-95
RMV,UNIT,FLI, 18-98
RMV,UNIT,FMT, 18-100
RMV,UNIT,FTMI,DSPI, 18-102
RMV,UNIT,MIU,INCL, 18-105
RMV,UNIT,MMFG,FRC,INCL, 18-107
RMV,UNIT,UC, 18-111
RPT,T,NPC,LOCN,AI,COUNT,THLEV,ALM, 18-113
RST,CCB, 19-2
RST,CCI, 19-4
RST,CCNI, 19-6
RST,ETSI, 19-8
RST,ETSI,ECCN,ALL, 19-10
RST,LINK, 19-13
RST,MC,MCOND,NOJRNL,FRC,CLR,ALL, 19-15
RST,NPC,SIDE, 19-21
RST,NPC,TSOM, 19-48
RST,PMEM,SMEM,CLR,FRC,BKGRND, 19-53
RST,RT,DL, 19-59
RST,SYNC, 19-62
RST,SYNC,TLI,CRO, 19-64
RST,SYNC,TLI,SSP, 19-66
RST,TSI, 19-68
RST,TSIS,CCN,ALL, 19-70
RST,TSIS,CCN,UNIT,CONN, 19-73
RST,UNIT,FC, 19-76
RST,UNIT,FLI, 19-78
RST,UNIT,FMT, 19-80
RST,UNIT,FTMI,DSPI, 19-82
RST,UNIT,MIU,INCL, 19-84
RST,UNIT,MMFG,INCL, 19-87
RST,UNIT,UC, 19-91
RTRV,ALM,T3,DS3ALM, 1

S

SAVE, 20-2
SC,ALM,CGA,DLF,INH,MRV,MSW,PSW,RT,DL, 20-4
SC,ALM,COMP,RT,INDX,LBRV,AB,CD,P,ALP, 20-8
SC,ALM,DPLX,SYNC,CCB,CCNI,CCI,TSI,ETSI, 20-10
SC,ALM,MC,UC,FTMI,DSPI,NE, 20-15
SC,ALM,RT,DL,FE, 20-17
SCNT,RATE,MPTM,MJU,MA, 21-2
SCNT,RATE,TPT,FROM,TO, 21-11, 21-19
SCON,RATE,MPTM,MJU,MA, 21-28
SCON,RATE,TPT,FROM,TO, 21-40, 21-49
SDCH,TO,PCH,DCC, 21-58
SDIS,RATE,MPTM,MJU, 21-65
SDIS,RATE,MPTM,MJU,ALL, 21-77
SDIS,RATE,TPT,FROM,TO, 21-89, 21-97
SECH,TO,DS0A,DS0B,SEC,PCH, 21-105
SECH,TO,RATE,DP,PCH, 21-115
START,LOG, 22-2
STOP,MACRO,LINK, 22-4
STST,MON,TO,MJU,TP, 22-6
STST,MON,TO,TP, 22-16
STST,SPL,TO,MJU,TP, 22-26
STST,SPL,TO,TP, 22-36
STST,TLA,TLR,TP, 22-46
STST,TPR,ALL,LINKS, 22-56
STST,TPR,TP, 22-58
SW,BCAST,OLD,NEW,INCL, 22-66, 22-73
SW,DISC,OOS, 22-80, 22-86
SW,NPC,RT,PSW,USW,ALW,INH,FRC,INCL, 22-92
SW,ROLL,OLD,NEW,INCL,FRC,OOS, 22-97
SW,ROLL,OLD,NEW,INCL,FRC,OOS,TWAY, 22-104
SW,UNIT,FLI,TOPRTN, 22-110
SW,UNIT,FLI,TOSRVC, 22-112
SW,UNIT,MMFG,TOPRTN,FRC, 22-114
SW,UNIT,MMFG,TOSRVC, 22-118

T

TABS, 23-2
TABS,IN,PROGRESS, 23-4
TCNT,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT, 23-6
TCNT,FROM,TO,MPM,NTR,RDC,CUS,INCL, 23-19
TCNT,FROM,TO,PFW,NFW, 23-36
TCNT,FROM,TO,RDC,CUS,INCL,PRIOUT, 23-43
TCON,FROM,TO,AIS,CUS,INCL,RDC,PRIOUT, 23-52

TCON, FROM, TO, MPM, NTR, RDC, CUS, INCL, 23-65
TCON, FROM, TO, PFW, NFW, 23-82, 1
TCON, FROM, TO, RDC, CUS, INCL, PRIOUT, 23-89, 1
TDIS, FROM, TO, INCL, OOS, DCC, 23-98
TDIS, FROM, TO, INCL, OOS, DCC, PRIOUT, 23-113
TDIS, FROM, TO, OOS, INCL, PRIOUT, 23-123
TS0MBOFL, 23-132
TTST, HUB, TO, TG, 23-136
TTST, HUB, TO, TP, 23-145
TTST, LPD, TG, 23-152
TTST, LPD, TP, 23-154
TTST, MON, TG, 23-158
TTST, MON, TO, TG, 23-167
TTST, MON, TO, TP, 23-177, 1
TTST, RT, DGA, DGB, DGC, DGD, DGP, LLB, TO, 23-190
TTST, SPL, TG, NOYLW, 23-193
TTST, SPL, TP, 23-202
TTST, TGR, TG, OOS, 23-210
TTST, TLA, NOT, TP, 23-221
TTST, TLA, TG, 23-232
TTST, TLR, NOT, TP, 23-240
TTST, TLR, TG, 23-250
TTST, TPR, ALL, OOS, 23-258
TTST, TPR, TP, OOS, FRC, 23-260, 1

U

UTL, ACO, 24-2
UTL, BMTR, FROM, TO, EXCT, INCL, UPGRD, 24-4, 1
UTL, BOOT, FRAME, CLR, 24-10
UTL, CLR, ALL, 24-12
UTL, CLR, ERR, HWER, SWER, 24-14
UTL, CLR, MSGLOG, RSTNUM, 24-16
UTL, CLR, NPC, ALL, AI, LOCN, MONDAT, MONTIM, 24-18
UTL, CLR, NPC, PARAMS, 24-30
UTL, CLR, NPC, RT, DL, 24-35
UTL, CLR, PWR, 24-43
UTL, CLR, UNIT, DS3, ALLDS3, AI, MONDAT, 24-45, 1
UTL, DATE, FORMAT, INT, 24-51
UTL, INIT, ALM, 24-54
UTL, LOC, 24-56
UTL, QRY, ALL, 24-69
UTL, QRY, ALL, COMMON, 24-80
UTL, QRY, ALL, UNIT, 24-86
UTL, QRY, ALM, DS3, 24-113, 1
UTL, QRY, ALMOPT, NPC, AIS, 24-118
UTL, QRY, ALMS, 24-132, 1
UTL, QRY, ALMS, DBASE, 24-169
UTL, QRY, ALMS, RT, DL, 24-178
UTL, QRY, APPL, NPC, ALL, 24-181, 1
UTL, QRY, BCAST, ALL, 24-187, 1
UTL, QRY, BCAST, FROM, 24-195, 24-205, 1
UTL, QRY, CMAP, 24-214, 1
UTL, QRY, CNFGR, 24-252
UTL, QRY, CS, NPC, 24-255
UTL, QRY, DATE, 24-260
UTL, QRY, DMAP, 24-262, 1
UTL, QRY, DS3, BERMT, UNIT, 24-298
UTL, QRY, DS3, LBO, 24-300
UTL, QRY, ECLOC, 24-302
UTL, QRY, EQD, COMMON, 24-304
UTL, QRY, EQD, CONN, 24-308
UTL, QRY, EQD, ETSIS, 24-310
UTL, QRY, EQD, MIUS, 24-312
UTL, QRY, EQD, MXRS, 24-314
UTL, QRY, EQD, NPC, TOTAL, UNIT, 24-317
UTL, QRY, EQD, TSIS, 24-335
UTL, QRY, EQD, UNIT, 24-337
UTL, QRY, EQD, UNITS, 24-361
UTL, QRY, ERR, SWER, HWER, INT, DATE, TOD, TN, 24-363
UTL, QRY, ESR, CCN, 24-373
UTL, QRY, ESR, ECCN, 24-376
UTL, QRY, ESR, MP, 24-380
UTL, QRY, ESR, NPC, SIDE, 24-385
UTL, QRY, ESR, UNIT, 24-395
UTL, QRY, ESR, UNIT, DSPI, 24-399
UTL, QRY, ESR, UNIT, FC, 24-401
UTL, QRY, ESR, UNIT, FLI, 24-404
UTL, QRY, ESR, UNIT, FMT, 24-407
UTL, QRY, ESR, UNIT, FTMI, 24-410
UTL, QRY, ESR, UNIT, MIU, 24-414
UTL, QRY, ESR, UNIT, MXR, 24-416
UTL, QRY, FPKG, 24-421
UTL, QRY, FROM, 24-425, 24-452
UTL, QRY, HUBID, 24-460
UTL, QRY, LIST, MACRO, USER, 24-462
UTL, QRY, LIST, MAP, USER, 24-465
UTL, QRY, LOAD, NPC, TOTAL, 24-468
UTL, QRY, LOG, ALL, 24-475
UTL, QRY, LPBK, NPC, 24-479
UTL, QRY, LPBK, UNIT, 24-493
UTL, QRY, MACRO, ATTR, USER, ALL, 24-495
UTL, QRY, MACRO, MAP, SPACE, USER, ALL, 24-499
UTL, QRY, MACRO, USER, 24-502
UTL, QRY, MAP, ATTR, ALL, USER, MAPNM, 24-505
UTL, QRY, MARK, 24-508, 24-524
UTL, QRY, MEMSTAT, 24-542, 1
UTL, QRY, MSGLOG, RANGE, 24-550
UTL, QRY, NFS, NPC, 24-552, 1
UTL, QRY, NPC, ALL, AI, LV, LOCN, MONDAT, 24-558

UTL, QRY, NPC, MAP, USER, 24-578
UTL, QRY, NPC, RT, DL, 24-587
UTL, QRY, NPCTG, 24-603
UTL, QRY, OPT, TYPE, ALL, NPC, 24-611
UTL, QRY, PEST, FAIL, OOS, COMMON, 24-618
UTL, QRY, PEST, FAIL, OOS, UNIT, 24-623
UTL, QRY, PMSCHED, NPC, ALL, 24-649
UTL, QRY, PSTATE, UNIT, 24-659
UTL, QRY, ROLL, DS0, NPC, ALL, UNIT, 24-663
UTL, QRY, ROLL, DS1, NPC, ALL, UNIT, 24-670
UTL, QRY, RTMAP, DLMAP, 24-678
UTL, QRY, SCON, CH, TO, 24-697
UTL, QRY, SCON, TO, 24-704
UTL, QRY, SCR, LINK, USER, LINKS, USERS, 24-712
UTL, QRY, SECH, TO, 24-721
UTL, QRY, SIGST, 24-728
UTL, QRY, SQN, 24-733
UTL, QRY, SRHDW, TO, 24-735
UTL, QRY, SROOF, TO, ALL, 24-746
UTL, QRY, STATE, ACO, 24-754
UTL, QRY, STATE, NPC, 24-756, 24-785
UTL, QRY, STATE, SCDG, NPC, RT, DL, ALL, 24-819
UTL, QRY, STATE, SYNC, 24-827
UTL, QRY, STATE, UNIT, DS3, 24-830, 1
UTL, QRY, STR, LINK, 24-835
UTL, QRY, STR, SYNC, 24-845
UTL, QRY, STR, SYNC, TLI, 24-851
UTL, QRY, STR, SYNC, TLI, SSP, 24-854
UTL, QRY, STR, XC, 24-858
UTL, QRY, SYNC, TYPE, 24-860
UTL, QRY, TGS, 24-863
UTL, QRY, TO, 24-870, 24-900, 1
UTL, QRY, TOD, CFA, 24-920
UTL, QRY, TPS, 24-923
UTL, QRY, TS0, NPC, 24-930, 1
UTL, QRY, TS0M, NPC, 24-936
UTL, QRY, TSIG, NPC, 24-941
UTL, QRY, UNIT, DS3, ALLDS3, AI, LV, MONDAT, 24-948, 1
UTL, QRY, UNIT, FTMI, EQL, 24-957
UTL, QRY, WHO, 24-960
UTL, QRY, XCSB, UNIT, 24-963
UTL, RCY, COND, IN, PROGRESS, 24-972
UTL, RCY, PASSWD, 24-975
UTL, SCHED, PMREPT, NPC, RI, ST, NI, LV, LOCN, 24-977
UTL, TOD, CFA, FAC, X, PRIM, MONDAT, 24-987, 1