

SERVICE
2515B AND 2515BM TELEPHONE SETS

1. GENERAL

1.01 Reissued to:

- Add D6AL or D6AP mounting cord and 623D6 jack, Fig. 2
- Show 2515B telephone set MD, Fig. 1.

PLEASE NOTE:

FOREMAN 02.....
 FOREMAN 03.....
 FOREMAN 04.....
 FOREMAN 05.....
 FOREMAN 06.....
 FOREMAN 07.....
 FOREMAN 08.....
 FOREMAN 09.....
 FOREMAN 10.....
 DESTROY.....


TABLE A
POLARITY GUARD CONNECTIONS
[819040528 (P-90D052) GUARD ASSEMBLY]

LEAD	COLOR	REMOVE FROM			CONNECT TO	
		NET.	NET.	POLARITY GUARD		
Dial	BK	RR		T		
Line Switch	BR	C		S		
Polarity Guard	G		RR			
	W		C			

Note: For use when specified by local instructions for end-to-end signaling installation.


NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

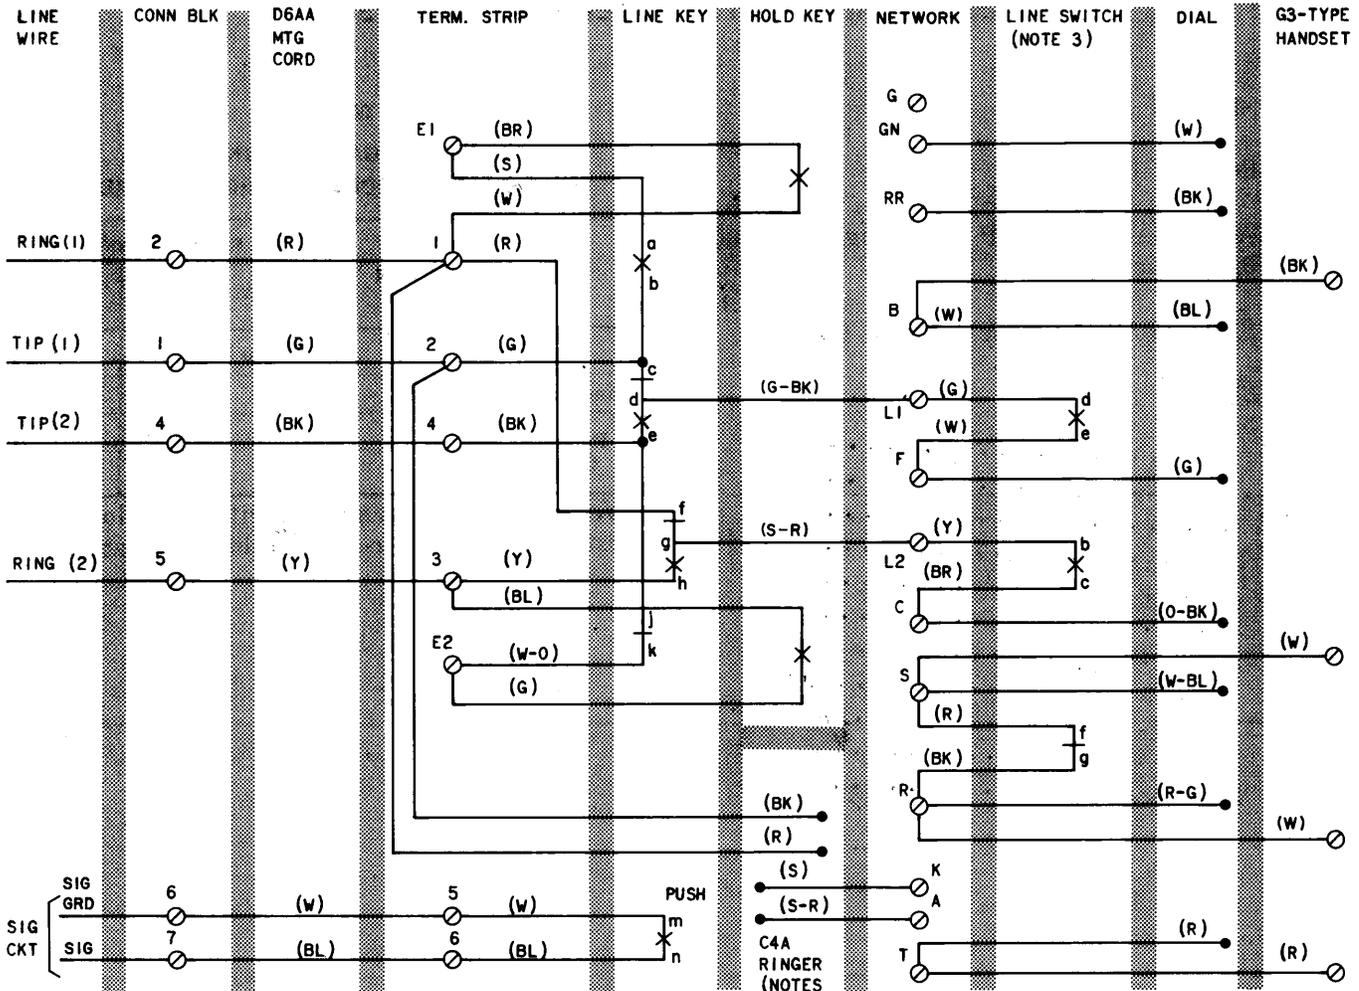

- NOTES:
1. SETS ARE FACTORY WIRED TO PROVIDE BRIDGED RINGING SERVICE. RINGER CONNECTIONS PROVIDE FOR RINGING ON LINE 1. FOR RINGING ON LINE 2, CONNECT (R) AND (BK) RINGER LEADS TO TERMINALS 3 AND 4 RESPECTIVELY.
 2. TO SILENCE RINGER FOR ALL CLASSES OF SERVICE, REFER TO APPROPRIATE RINGER SECTION IN DIVISION 501.
 3. LINE SWITCH SEQUENCE, HANDSET REMOVED:
 bc - MAKES
 de - MAKES
 fg - BREAKS

Fig. 1—2515B (MD) Telephone Set Connections, 2-Line Pickup, Hold, and Signaling (Factory Wired)

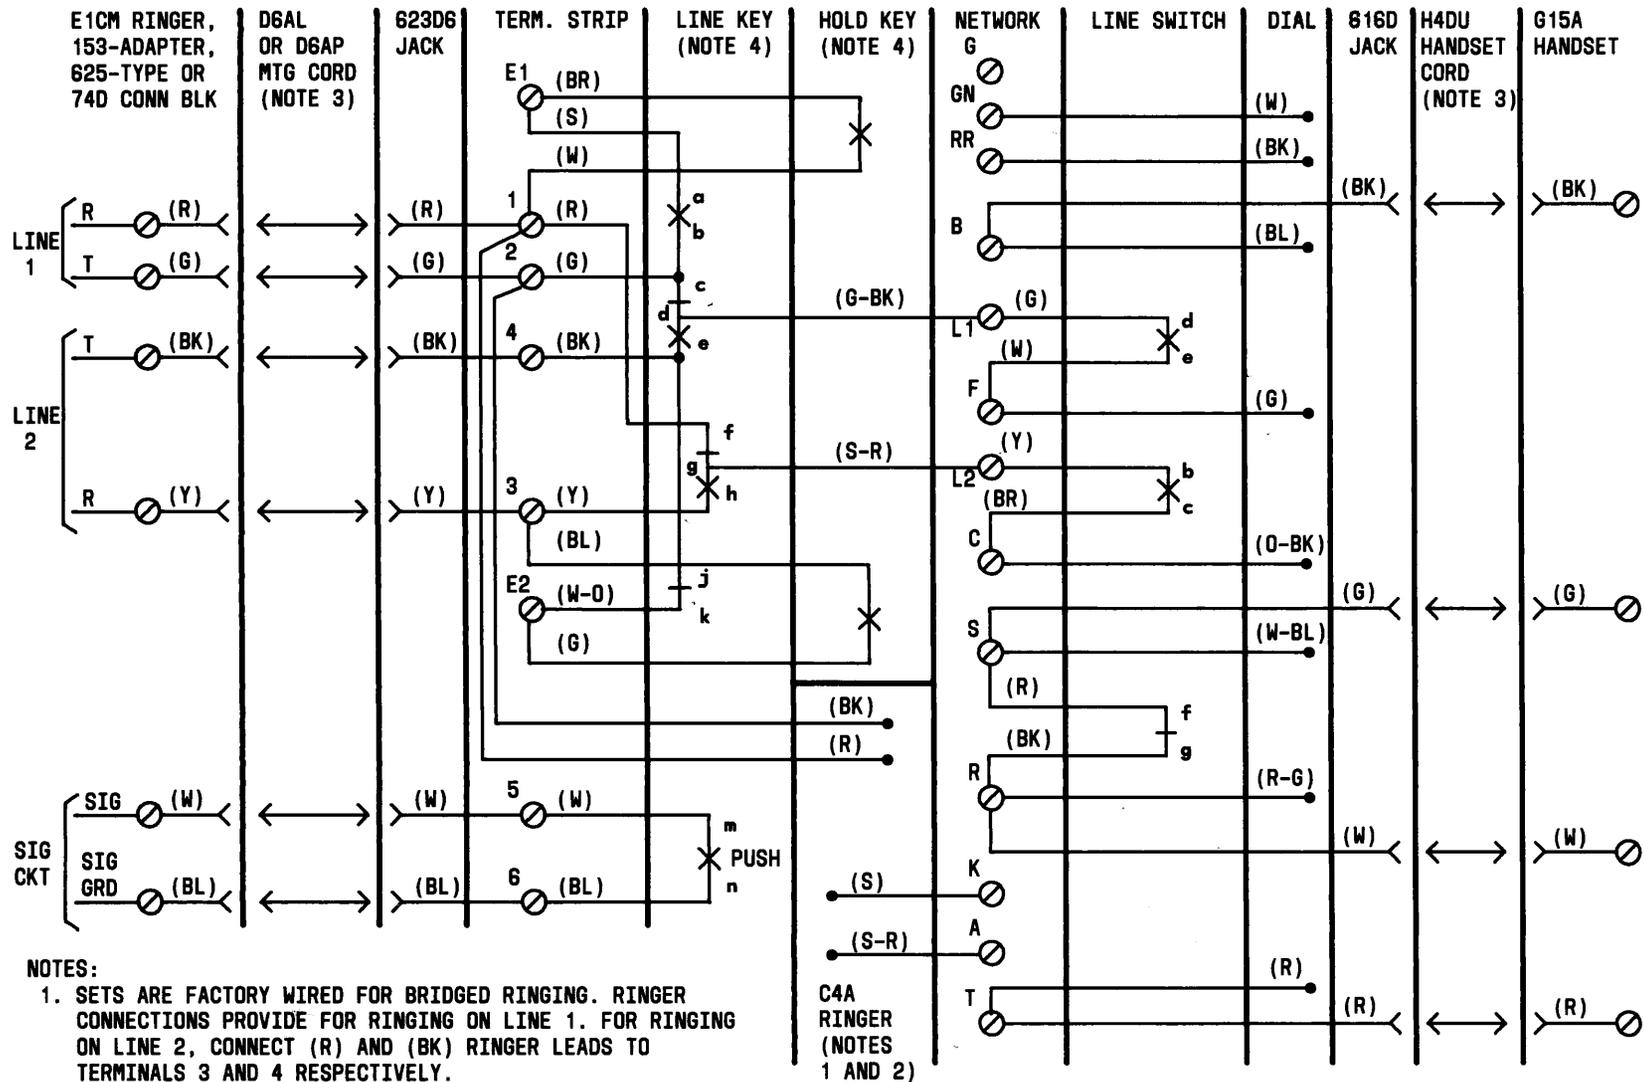

NOTES:

1. SETS ARE FACTORY WIRED FOR BRIDGED RINGING. RINGER CONNECTIONS PROVIDE FOR RINGING ON LINE 1. FOR RINGING ON LINE 2, CONNECT (R) AND (BK) RINGER LEADS TO TERMINALS 3 AND 4 RESPECTIVELY.
2. TO SILENCE RINGER FOR ALL CLASSES OF SERVICE REFER TO APPROPRIATE RINGER SECTION IN DIVISION 501.
3. MUST BE ORDERED SEPARATELY.

4. SUBSCRIBER INSTRUCTION BOOKLET SIG-2430 SHIPPED LOOSE WITH SET SHOULD BE EXPLAINED AND LEFT WITH CUSTOMER FOR PROPER OPERATION OF LINE AND HOLD KEY.

Fig. 2—2515BM Telephone Set Connections, 2-Line Pickup, Hold, and Signaling (Factory Wired)