



NORTEL

Nortel Communication Server 1000

Converging the Data Network with VoIP Fundamentals

Release: 6.0
Document Revision: 03.13

www.nortel.com

NN43001-260

Nortel Communication Server 1000
Release: 6.0
Publication: NN43001-260
Document release date: 25 March 2010

Copyright © 2003-2010 Nortel Networks. All Rights Reserved.

While the information in this document is believed to be accurate and reliable, except as otherwise expressly agreed to in writing NORTEL PROVIDES THIS DOCUMENT "AS IS" WITHOUT WARRANTY OR CONDITION OF ANY KIND, EITHER EXPRESS OR IMPLIED. The information and/or products described in this document are subject to change without notice.

Nortel, Nortel Networks, the Nortel logo, and the Globemark are trademarks of Nortel Networks.

All other trademarks are the property of their respective owners.

Contents

New in this Release **9**

Navigation 9

Features 9

 SIP Line Service 9

 Zone-based dialing plan 9

 Meridian Customer Defined Network Alternate Routing and Vacant Number
 Routing 10

Other changes 10

 Revision history 10

How to get help **13**

Getting help from the Nortel Web site 13

Getting help over the telephone from a Nortel Solutions Center 13

Getting help from a specialist by using an Express Routing Code 14

Getting help through a Nortel distributor or reseller 14

Introduction **15**

Subject 15

 Note on legacy products and releases 15

Applicable systems 15

 System migration 16

Intended audience 16

Conventions 16

Related information 16

Overview **19**

Network convergence 19

Quality of Service 21

Network Bandwidth Management 21

 Adaptive Network Bandwidth Management 23

 Tandem Bandwidth Management 24

 Network Wide Virtual Office 24

Abbreviated Dialing 24

Zones 24

SIP Line Service 25

Redundancy operation	25
Supported codecs	25
Codec selection	26
Codec payload sizes considerations	26
Zone Based Dialing plan	26
New prompts and changed overlays	26
Meridian Customer Defined Network Alternate Routing and Vacant Number Routing	27
Alternative call routing for network Bandwidth Management	29
Quality of Service versus Bandwidth Management	29
Security	29
Secure Transport Enhancements	29
UNISTim Security with DTLS	30
Network design and implementation	30
Network performance measurement and monitoring	31
Available tools	32

Planning and engineering

33

Quality of Service	34
QoS mechanism	34
The QoS process	38
WAN QoS mechanisms	41
Layer 2 (Ethernet) QoS	47
Layer 3 QoS	50
Layer 4 (TCP/IP) classification	57
Policy management	58
Codec selection	58
Protocols in use	59
Security and QoS	60
IP network best practices	60
Fallback to PSTN	61
Best IP network engineering practices for IP Telephony	62
Considerations for using IP Trunk to achieve QoS fallback to PSTN	62
Alternate circuit-switched routing	63
Bandwidth Management	70
VoIP Bandwidth Management zones	70
Nodal Bandwidth Management	74
VPNI and Zone numbers	74
Relationship between zones and subnets	76
Adaptive Network Bandwidth Management	76
VoIP network voice engineering considerations	82
Tandem Bandwidth Management	87
Codec negotiation	88
Bandwidth Management parameters	94

Zones	95
Zone-based digit manipulation	98
CLID composition	99
CLID verification	100
Vacant Number Routing	100
Time of Day	101
MG 1000B IP Phone calls to a local PSTN	101
Emergency Services	101
LAN/WAN bandwidth requirements	102
Dialing plan	107
Zone parameters	110
Abbreviated dialing	110
Bandwidth and data network switch efficiency	112
Network design assessment	112
Network modeling	112
Link speeds	118
Link types	119
Link utilization assessment	120
Traffic flows in the network	122
Service level agreements	124
Network planning	124
Network Performance Measurement	125
Performance criteria	125
Network availability	129
Media Security	129
Set QoS expectations	131
G.729AB codec	132
G.711 codec	133
G.723 codec	134
Bandwidth	135
Delay	148
Jitter	157
Packet loss	161
Network delay and packet loss evaluation example	164
Estimate voice quality	165
LAN design	171
CS 1000 Release 6.0 configurations	171
Server LAN design	179
Redundant LAN design	196
Zone Based Dialing plan	201
Feature dependencies and restrictions	202
Overlay 10, 11	202
Overlay 12	202
Overlay 15	202

Overlay 20	203
Overlay 21	203
Overlay 22	203
Overlay 43	203
Overlay 81	203
Overlay 83	203
Overlay 117	203
Feature impact on planning and engineering tasks	203
Vacant Number Routing feature	204
Dialing plan	204
On:net dialing plan options	205
Off:net dialing plan	205
Routing	206
SIP/H.323 zones	206
Distributed Media Gateway 1000E	207
DHCP configuration	208
IP Phones	208
Configuring the DHCP server to support full DHCP mode	209
The VoIP network operation	217
Telephony Manager	218
Element Manager	218
Network monitoring	219
Set VoIP QoS objectives	220
Intranet QoS monitoring	220
ITG Operational Measurements	221
OM report description	222
User feedback	222
QoS monitoring and reporting tools	223
Network Diagnostic Utilities	223
Ping and traceroute	224
IP Networking statistics	224
Ethernet statistics	224
/RUDP statistics	224
Real:Time Transport Protocol statistics	224
DHCP	225
Voice quality monitoring	231
IP Phones voice quality monitoring	232
Voice quality alarms	233
Configure voice quality metric thresholds	234
Configure voice quality sampling (polling)	234
Configure and print zone alarm notification levels	234
Network Management	236

Configuration	239
Communications Server 1000 configuration for network requirements	240
Small configuration	240
Quality of Service	240
Bandwidth Management	241
Configuration rules	242
Bandwidth Management configuration	242
Maintenance commands	243
Configuring a Bandwidth Management zone	245
Configuring Dialing Plan	247
Configuring the dialing plan using Communication Server 1000 Element Manager	260
Testing PSTN access using an SRG or MG 1000B IP Phone	262
Troubleshooting	263
Zone Based Dialing	263
Overlay 15	263
Configuring numbering zone and numbering zone based parameters	264
Meridian Customer Defined Network Alternate Routing and Vacant Number Routing	266
Meridian Customer Defined Network Alternate Routing configuration	266
Vacant Number Routing configuration	266
Codec configuration	266
G.729 VAD negotiation via SIP	266
Configuring codecs	267
Adaptive Network Bandwidth Management configuration	271
Configuration rules	271
Advanced configuration notes	272
Provisioning for Tandem Bandwidth Management	272
Bandwidth Management support for Network Wide Virtual Office	277
Operating parameters	278
Feature Packaging	278
Feature Implementation	278
Feature Interactions	280
Alternative call routing for Network Bandwidth Management	281
Dialing plan	282
Operating parameters	283
Feature interactions	284
Feature packaging	285
ALTPrefix	286
Alternative Call Routing for Network Bandwidth Management scenarios	286
Feature implementation using Command Line Interface	296
Zone configuration	297
Zone Basic Property and Bandwidth Management	297

Adaptive Network Bandwidth Management and CAC	299
Alternate Routing for Calls between IP stations	305
Branch Office Dialing Plan and Access Codes	306
Branch Office Time Difference and Daylight Saving Time Property	307
The MG 1000B zone configuration	309
Abbreviated dialing	316
Print branch office zone information	320
Enable/disable branch office zone features	321
View status of branch office zone at main office Call Server	321
Change/print Proactive Voice Quality notification levels	322
Print PVQ statistics	322
Diagnostics	322
Maintenance	327
SIP Line service	335

Subnet mask conversion	337
Subnet mask conversion from CIDR to dotted decimal format	337

Port number tables	339
Ephemeral ports	340
Linux considerations	340
Co-resident (Linux) Call Server port numbers	359
SIP Lines Gateway Port Numbers	370
Unified Communications Manager Port Numbers	385

DHCP supplemental information	401
Introduction to DHCP	402
IP acquisition sequence	405
IP Phone support for DHCP	409

Setup and configuration of DHCP servers	415
Install a Windows NT 4 or Windows 2000 server	415
Configure a Windows NT 4 server with DHCP	415
Configure a Windows 2000 server with DHCP	418
Install ISC DHCP Server	423
Configure ISC DHCP Server	423
Install and configure a Solaris 2 server	426

Change CS 1000 IP addresses	429
------------------------------------	------------

New in this Release

The following sections detail what's new in *Converging the Data Network with VoIP Fundamentals* (NN43001-260) for Nortel Communication Server 1000 Release 6.0.

Navigation

- [“Features” \(page 9\)](#)
- [“Other changes” \(page 10\)](#)

Features

See the following sections for information about feature changes:

- [“SIP Line Service” \(page 9\)](#)
- [“Zone-based dialing plan” \(page 9\)](#)
- [“Meridian Customer Defined Network Alternate Routing and Vacant Number Routing” \(page 10\)](#)

SIP Line Service

SIP Line Service fully integrates SIP end points in Communication Server 1000 and extends telephony features to SIP clients.

Zone-based dialing plan

The primary objective of this feature is to replace traditional nodal PBX networks with a one or more high capacity soft switches and branch gateways for PSTN access.

You can also deploy the Zone Based Dialing (ZBD) plan to setup private networks in multiple locations.

The migration is transparent to users, that is, the private and public (E.164) dial plans and features are retained.

Meridian Customer Defined Network Alternate Routing and Vacant Number Routing

This feature development combines both the Vacant Number Routing (VNR) and Meridian ALternate (MALT) Routing functionality for calls routed over Internet Protocol (IP), to give more benefit to the customer to route the call to a proper destination and provide appropriate vacant number treatment. This feature also provides flexibility to the user to configure predefined cause values to perform MALT through Element Manager (EM).

Other changes

See the following section for information about changes that are not feature related:

Revision history

March 2010

Standard 03.13. This document is up-issued for changes in technical content.

February 2010

Standard 03.12. This document is up-issued for changes in technical content. [“Change CS 1000 IP addresses” \(page 429\)](#) is revised to include formatting changes.

January 2010

Standard 03.11. This document is up-issued to support Nortel Communication Server 1000 Release 6.0.

January 2010

Standard 03.10. This document is up-issued to support Nortel Communication Server 1000 Release 6.0.

June 2009

Standard 03.09. This document is up-issued to support Nortel Communication Server 1000 Release 6.0.

June 2009

Standard 03.08. This document is up-issued to support Nortel Communication Server 1000 Release 6.0.

May 2009

Standard 03.07. This document is up-issued to support Nortel Communication Server 1000 Release 6.0.

May 2009

Standard 03.06. This document is up-issued to support Nortel Communication Server 1000 Release 6.0.

July 2008 Standard 02.04. This document is up-issued to address a CR.

July 2008 Standard 02.03. This document is up-issued to consolidate Network Bandwidth Management content for Communication Server 1000 Release 5.5. A screen capture for the Edit window in Element Manager was also updated to address a CR.

February 2008 Standard 02.02. This document is up-issued for changes in technical content. References to non-supported systems are removed and updated screen captures are added for release 5.5.

December 2007 Standard 02.01. This document is up-issued to support Nortel Communication Server 1000 Release 5.5. References to non-supported systems are removed and updated screen captures are added for release 5.5.

January 2008 Standard 01.05. This document is up-issued for changes in technical content, including new images and revised port number tables.

November 2007 Standard 1.04. This document is up-issued to reflect changes in the QoS alarms that are listed in [Table 46 "Voice quality threshold alarm notification levels" \(page 235\)](#).

September 2007 Standard 01.03. This document is up-issued to add Media Gateway Controller (MGC) technical content and to remove references to systems not supported in release 5.0.

June 2007 Standard 01.02. This document is up-issued to reflect changes in technical content for CR Q01669176. A note regarding Secure Real-Time Transport Protocol (SRTP) bandwidth considerations is added to the section.

May 2007 Standard 01.01. This document is issued to support Nortel Communication Server 1000 Release 5.0. This document is renamed Converging the Data Network with VoIP Fundamentals (NN43001:260) and contains information previously contained in the following legacy document, now retired: Converging the Data Network with VoIP (553:3001:160).

November 2006 Standard 6.00. This document is up:issued for CR Q01456113, adding explanations and examples of graphical and text XAS configuration strings.

July 2006 Standard 5.00. This document is up:issued for changes in technical content.

March 2006 Standard 4.00. This document is up:issued for CR Q0128628, clarifying Network Diagnostic Utilities CLI commands.

August 2005 Standard 3.00. This document is up:issued to support Communication Server 1000 Release 4.5.

September 2004 Standard 2.00. This document is up:issued for Communication Server 1000 Release 4.0.

October 2003 Standard 1.00. This document is a new NTP for Succession 3.0. It was created to support a restructuring of the Documentation Library. This document contains information previously contained in the following legacy document, now retired: Data Networking Guidelines (553:3023:103).

How to get help

This chapter explains how to get help for Nortel products and services.

Getting help from the Nortel Web site

The best way to get technical support for Nortel products is from the Nortel Technical Support Web site: www.nortel.com/support

This site provides quick access to software, documentation, bulletins, and tools to address issues with Nortel products. From this site, you can:

- download software, documentation, and product bulletins
- search the Technical Support Web site and the Nortel Knowledge Base for answers to technical issues
- sign up for automatic notification of new software and documentation for Nortel equipment
- open and manage technical support cases

Getting help over the telephone from a Nortel Solutions Center

If you do not find the information you require on the Nortel Technical Support Web site, and you have a Nortel support contract, you can also get help over the telephone from a Nortel Solutions Center.

In North America, call 1:800:4NORTEL (1:800:466:7835).

Outside North America, go to the following Web site to obtain the telephone number for your region:

www.nortel.com/callus

Getting help from a specialist by using an Express Routing Code

To access some Nortel Technical Solutions Centers, you can use an Express Routing Code (ERC) to quickly route your call to a specialist in your Nortel product or service. To locate the ERC for your product or service, go to:

www.nortel.com/erc

Getting help through a Nortel distributor or reseller

If you purchased a service contract for your Nortel product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller.

Introduction

This document contains the following topics:

Navigation

- “Overview” (page 19)
- “Planning and engineering” (page 33)
- “Configuration” (page 239)
- “Subnet mask conversion” (page 337)
- “Port number tables” (page 339)
- “DHCP supplemental information” (page 401)
- “Setup and configuration of DHCP servers” (page 415)

Subject

This document describes the elements and processes necessary to build a converged multimedia network with Nortel Communications Server 1000.

Note on legacy products and releases

This NTP contains information about systems, components, and features that are compatible with Nortel Communication Server 1000 Release 6.0 (or later) software. For more information about legacy products and releases, click the **Technical Documentation** link under **Support & Training** on the Nortel home page:

www.nortel.com

Applicable systems

This document applies to the following systems:

- Communication Server 1000M Single Group (CS 1000M SG)
- Communication Server 1000M Multi Group (CS 1000M MG)
- Communication Server 1000E (CS 1000E)

- Meridian 1 PBX 61C
- Meridian 1 PBX 81C

System migration

When particular Meridian 1 systems are upgraded to run Communication Server 1000 Release 6.0 software and configured to include a Signaling Server, they become Communication Server 1000 systems. [Table 1 "Meridian 1 systems to CS 1000 systems" \(page 16\)](#) lists each Meridian 1 system that supports an upgrade path to a Communication Server 1000 system.

Table 1
Meridian 1 systems to CS 1000 systems

This Meridian 1 system	Maps to Communication Server 1000 system
Meridian 1 PBX 11C Chassis	Communication Server 1000E
Meridian 1 PBX 11C Cabinet	Communication Server 1000E
Meridian 1 PBX 61C	Communication Server 1000M Single Group
Meridian 1 PBX 81C	Communication Server 1000M Multi Group

For more information, see *Communication Server 1000M and Meridian 1 Large System Upgrades Overview* (NN43021-458), *Communication Server 1000E Upgrades* (NN43041-458), and *Communication Server 1000E Upgrade — Hardware Upgrade Procedures* (NN43041:464).

Intended audience

This document is intended for individuals responsible for administering Communication Server 1000 and Meridian 1 systems.

Conventions

Terminology

Terminology

In this document, the following systems are referred to generically as *system*:

- Communication Server 1000E (CS 1000E)
- Communication Server 1000M (CS 1000M)
- Meridian 1

Unless specifically stated otherwise, the term Element Manager refers to the Communication Server 1000 Element Manager.

Related information

This section lists information sources that are relevant to this document.

Technical documents

This document references the following technical documents:

- *Features and Services Fundamentals* (NN43001:106)
- *Unified Communications Management Common Services Fundamentals* (NN43001:116)
- *IP Peer Networking Installation and Commissioning* (NN43001:313)
- *Linux Platform Base and Applications Installation and Commissioning* (NN43001:315)
- *Hospitality Features Fundamentals* (NN43001:553)

Online

To access Nortel documentation online, click the **Technical Documentation** link under **Support & Training** on the Nortel home page:

www.nortel.com

CD:ROM

To obtain Nortel documentation on CD:ROM, contact your Nortel customer representative.

Overview

This chapter provides a brief technical description of all the components associated with converging the data and voice network.

Navigation

- [“Network convergence” \(page 19\)](#)
- [“Quality of Service” \(page 21\)](#)
- [“Network Bandwidth Management” \(page 21\)](#)
- [“Abbreviated Dialing” \(page 24\)](#)
- [“Zones” \(page 24\)](#)
- [“SIP Line Service” \(page 25\)](#)
- [“Zone Based Dialing plan” \(page 26\)](#)
- [“Meridian Customer Defined Network Alternate Routing and Vacant Number Routing ” \(page 27\)](#)
- [“Alternative call routing for network Bandwidth Management” \(page 29\)](#)
- [“Quality of Service versus Bandwidth Management” \(page 29\)](#)
- [“Security” \(page 29\)](#)
- [“Network design and implementation” \(page 30\)](#)
- [“Network performance measurement and monitoring” \(page 31\)](#)
- [“Available tools” \(page 32\)](#)

Network convergence

Network convergence transports all services over the same network structure. Previously, different types of applications used separate dedicated networks, such as voice, video, and data. Today, you can merge many of these applications into a single network to reduce operating costs and to increase ease of operation.

A traditional enterprise can have the following network types:

- private Time Division Multiplexing (TDM)-based voice network
- IP network to the Internet
- Integrated Services Digital Network (ISDN) for video conferencing
- Systems Network Architecture (SNA) an IBM computer network architecture
- multiprotocol network, including varied protocol types, such as Internetwork Packet Exchange (IPX)

Many enterprises use converged networks to achieve cost and operational efficiency. A converged network mixes different types of traffic, each with various requirements, that creates difficulties that you must address. When applications have dedicated networks, Quality of Service (QoS) technology plays a small role. Dedicated network traffic is similar in behavior, and the networks are fine-tuned to achieve the required application behavior.

For example, the expectation for interactive voice is low packet loss and a minimal, fixed amount of delay. Data is sent in a steady stream, with samples transmitted at fixed time intervals. This performance is obtained on a circuit-switched network. A best-effort data network includes varying amounts of packet loss and variable delay usually caused by network congestion. A packet-based data network usually has the opposite requirements of a voice application.

Implementing QoS mechanisms can address the issue described above.

Voice applications

Voice applications originate on Public Switched Telephone Networks (PSTNs) and use circuit switching in the form of Time Division Multiplexing (TDM).

TDM is engineered with very specific, predetermined behaviors to support real-time voice conversations. On a TDM network, bandwidth is guaranteed available for any voice call; therefore voice traffic experiences a low, fixed amount of delay with essentially no loss.

IP networks do not guarantee available bandwidth for voice calls unless QoS mechanisms are used to restrict delay and data loss to maintain acceptable user quality.

If a voice application is sent over a best:effort IP network, the following can occur:

- Voice packets experience variable, unpredictable amounts of delay.
- Voice packets drop when the network becomes congested.
- The network can reorder voice packets if the packets arrive out of sequence.

You can apply QoS techniques to properly:engineered networks to support VoIP with acceptable, consistent, and predictable voice quality.

Quality of Service

IP networks are inherently best:effort networks. They treat all packets in the same manner. A best:effort network has no specified parameters. It does not guarantee how fast data transmits over a network, and has no assurances that the data is delivered.

Quality of Service (QoS) mechanisms guarantee that the network treats certain packets in a specified manner.

QoS mechanisms refer to packet tagging mechanisms and network architecture decisions on the TCP/IP network to expedite packet forwarding and delivery.

QoS is especially important for low:speed links, where the usual amount of available bandwidth is only several hundred kbit/s. For example, data traffic could easily use all of the bandwidth available on a link, thereby causing voice quality problems. QoS mechanisms can guarantee that network bandwidth remains available for voice traffic.

End:to:end QoS is required for IP Telephony applications to achieve good voice quality and is achieved by ensuring that the different parts of the network apply consistent treatment to the telephony packets.

Many of the available QoS mechanisms are described in [“QoS mechanism” \(page 34\)](#).

Network Bandwidth Management

Communication Server 1000 supports Network Bandwidth Management on a network:wide basis, so that voice quality can be managed between multiple Call Servers.

With the Network Bandwidth Management feature, you can configure bandwidth zones on a network basis, so that codec selection and bandwidth allocation software can identify whether Internet Telephones or gateways are physically collocated (in the same bandwidth zone) even though controlled by different Call Servers.

Adaptive Network Bandwidth Management is an enhancement of Bandwidth Management in which Quality of Service (QoS) metrics automatically lower available bandwidth.

Bandwidth management provides a means of controlling the amount of Voice over IP (VoIP) traffic in an IP network. Call Servers in the network keep track of the various amounts of VoIP traffic and provide treatment to VoIP calls. Treatment may consist of blocking new calls (Call Admission Control) or rerouting them if the required bandwidth is not available. For example, when a caller attempts to make a VoIP call and the network reaches bandwidth limit, the system blocks or reroutes the call.

Bandwidth Management also allows for a particular codec to be selected depending on the type of call — a local call within the Local Area Network (LAN) or a remote call across a Wide Area Network (WAN).

Bandwidth Management is considered a QoS mechanism because it provides a means of guaranteeing that VoIP traffic does not use more network bandwidth than available.

Bandwidth Management Zones simplify VoIP network voice engineering. Bandwidth Management Zones allow an administrator to simply enter the amount of bandwidth available for voice on the IP network, instead of detailed voice CCS calculations across a particular link.


For example, if you use a CCS:type approach to VoIP network voice engineering, an administrator must calculate the maximum CCS expected between sites A to B, A to C, and B to C, and subsequently engineer the network to support the required call volume.

Alternatively, through the use of Bandwidth Management Zones, an administrator can enter the amount of bandwidth available for voice on the IP network into the Call Server. The amount of bandwidth is ensured using other QoS mechanisms, such as priority and the type of voice codec used. The Call Server ensures that the VoIP call volume entering or leaving a zone does not exceed the IP network available bandwidth. This enables users to avoid quality degradation because of insufficient bandwidth for active connections.

Call admission control applies to a single distributed system with centralized call control, or multiple systems, such as a main site with numerous branch offices connected with VoIP.

The following figure shows an example of Bandwidth Management.

Figure 1
Bandwidth management example

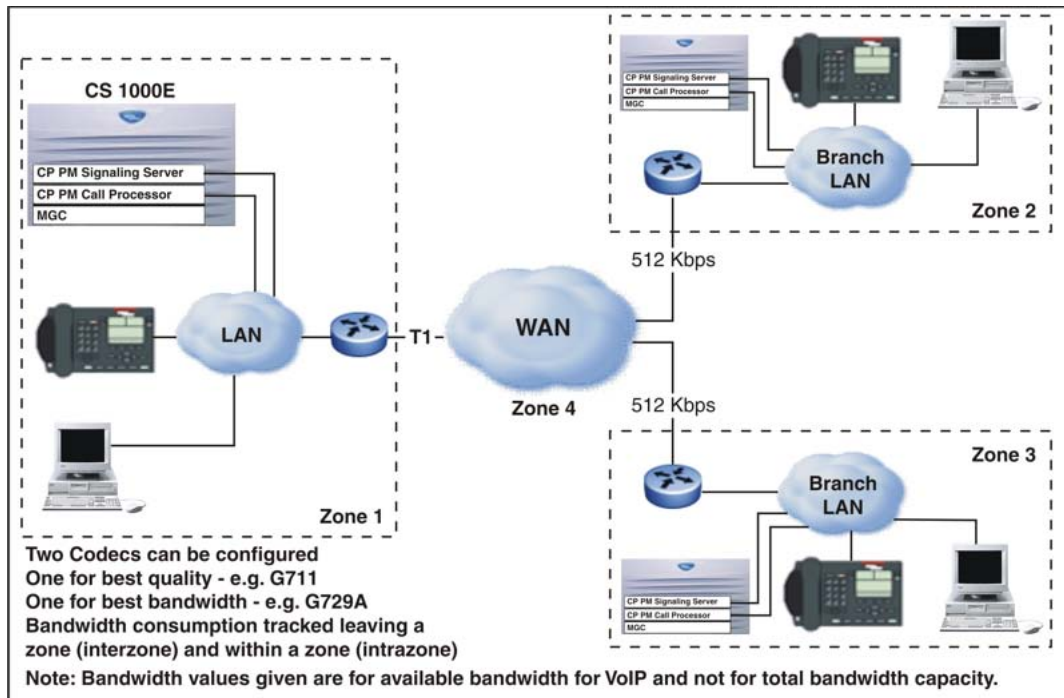

ATTENTION

After all bandwidth is used, the system blocks and reroutes additional calls. Keep this in mind when you design and implement Network Bandwidth Management.

Adaptive Network Bandwidth Management

Adaptive Network Bandwidth Management applies only to Interzone traffic. Adaptive Bandwidth Management builds on Bandwidth Management but adds the following functionalities:

- Adaptive Bandwidth Management automatically changes the bandwidth limit depending on the Quality of Service (QoS) in the network.
- Bandwidth limit automatically adjusts on a zone-to-zone basis. If there are QoS problems reported between a Call Server in Zone 3 and another in Zone 5, then the bandwidth limit reduces for calls between Zone 3 and Zone 5.

For more information about configuring Adaptive Network Bandwidth Management, see [“Adaptive Network Bandwidth Management configuration” \(page 271\)](#).

Tandem Bandwidth Management

For the main office to correctly monitor all the bandwidth used to and from a branch office the call must tandem through the main office. When calls tandem through the main office, only the signaling is tandemed, the actual voice bandwidth travels directly between the source and destination. For more information about provisioning for Tandem Bandwidth Management, see [“Provisioning for Tandem Bandwidth Management ” \(page 272\)](#).

Network Wide Virtual Office

Bandwidth Management support for Network Wide Virtual Office allows for the correct bandwidth calculation for IP users who are using the Virtual Office feature to login to their home IP Phones from different Call Servers within the network. Two fields are used to achieve this—Configured Zone and Current Zone.

The same Virtual Private Network Identifier (VPNI) to all Call Servers in a network is assigned, so you can identify the entire network by one VPNI number. You can assign the same Bandwidth zone number to different Call Servers and an INTRAZONE policy between them.

The Network Wide Virtual Office feature does not interfere with the existing functionality of the Bandwidth Management feature, because it supports previous bandwidth configuration rules. This feature extends the meaning of the Virtual Private Network Identifier (VPNI). In previous releases, VPNI was used to identify one customer system that consisted of a Main Office (MO) switch and a branch office (BO) switch. Now a VPNI number identifies the whole customer network that includes all MO and BO switches. For more information about Bandwidth Management support for Network Wide Virtual Office, see [“Bandwidth Management support for Network Wide Virtual Office” \(page 277\)](#).

Abbreviated Dialing

With Abbreviated Dialing, IP Phone users in the same geographic location, either the main office or the branch office, can call one another using a DN shorter than the configured DN. For more information about configuring Abbreviated Dialing, see [“Abbreviated dialing” \(page 316\)](#).

Zones

A zone is a collection of IP Phones that:

- share similar IP bandwidth restrictions
- exist geographically close to one another

- exist in the same time zone
- exist in the same PSTN dialing plan

Dialing plans treat all telephones in the same zone identically. You assign each IP Phone to a zone during configuration. For more information about configuring Zones, see [“Zone configuration” \(page 297\)](#).

ATTENTION

This document uses the term "zone" to refer to a Bandwidth Management Zone (not a Gatekeeper Zone).

SIP Line Service

The SIP Line feature comprises three major software components: Call Server (CS), SIP Line Gateway (SLG), and SMS. Software changes on Communication Server 1000 are bundled within the SIP Line Package (417) and reside on the same hardware platform as supported in Release 5.5 in addition to Linux COTS and CP PM Call Server.

ATTENTION

You must upgrade Communication Server 1000 to Release 6.0 software to enable and configure SIP Line Service.

No upgrade is required for the SLG Service in Communication Server 1000 6.0.

For more information on upgrading to Communication Server 6.0, see *Communication Server 1000E : Software Upgrades* (NN43041:458).

Redundancy operation

For redundancy, you can configure a leader and follower for a SIP Line Gateway (SLG) node with both servers sharing the same node IP. However, clients on the same node can be registered on only the current node master. No load sharing occurs between the two SLG nodes.

Supported codecs

Codec negotiation and selection follow the same operation as SIP Gateway. No new codecs are added.

In summary, support exists for the following codecs:

- G.711 u:law/a:law
- G.729A/AB
- G.723.1
- T.38 for FAX

By default, G.711 requires support at both ends of a call. The default payload sizes for G.711 and G.729 are both 20 milliseconds (ms). Any other unrecognized codec (including video) are forwarded to the far end through the SDP transparency feature. The SDP transparency feature enables multiple media descriptions and sends the associated codec attribute information to the destination.

Codec selection

The SLG always sends the originating node codec list in order of preference, and the terminating node selects one common codec based on preference. This means that the receiver of an offer always performs the codec selection, and it selects one common codec based on the best bandwidth selection mechanism.

Codec payload sizes considerations

If the SDP has no packet time (ptime), the default payload size is used: 20 ms for G.711 and G.729, and 30 ms for G.723.1.

If you configure a specific payload size different from the default payload size, the offer includes a ptime. Only one ptime can exist for each codec in this version of SDP.

Zone Based Dialing plan

Switching to a ZBD requires development on dial plans, numbering plans and routing features to make sure that the migration is transparent to the enterprise network users and that the same dial plan and business grade telephony features are used.

New prompts and changed overlays

Numbering zone and zone based flexible dial plan concepts are introduced to provide ZBD functionality.

Numbering zones are assigned to all sets and attendant, and they contain zone specific information such as site prefix, country code, access prefixes (for international, national, subscriber calls).

Zone based Flexible Dialing Plan (ZFDP) is introduced to reduce complexity of configuration.

The following prompts are introduced:

- Overlay 10, 11 — New prompt NUMZONE is introduced to assign a numbering zone to a phone (analog, TDM, IP).
- Overlay 12 — New prompt NUMZONE is introduced to assign a numbering zone to an attendant.

- Overlay 15 — New prompt ZBD is introduced to enable or disable the ZBD feature.
— New prompt DIALPLAN is introduced to show DN/CLID for private and public on-net dial plans.
- Overlay 20 — New prompt NUMZONE is introduced to display a numbering zone configured for a set (analog, TDM, IP) or attendant.
- Overlay 21 — New prompt ZBD is introduced to display the value of ZBD option.
New prompt DIALPLAN is introduced to show configured value in customer data block.
- Overlay 22 — ZBD package is printed.
- Overlay 43 — ZBD databases are dumped into /u/db/ during EDD.
— ZBD databases are restored from /u/db/ during database restore.
- Overlay 81 — New prompt NZON is introduced to print a list or count of telephones with selected numbering zone.
- Overlay 83 — New prompt NUMZONE is introduced to print a list of units with configured numbering zone.
- Overlay 117 — New commands are introduced to configure numbering zones, parameters for numbering zones (prefix, DAPC, CC, NPA, and ACx) , and a zone:dialing plan.

Meridian Customer Defined Network Alternate Routing and Vacant Number Routing

Vacant Number Routing (VNR) is a default route used for routing untranslatable, invalid, and unassigned dialed numbers (DNs). When the call is routed by VNR to the IP network, the user has the flexibility to perform Meridian Customer Defined Network Alternate Routing (MALT) on the Call Server for an additional 10 causes other than the existing six. Configure these additional MALT causes within Element Manager (EM). If the call is determined to be a VNR call, which is tried at least once to route over an IP route, then vacant number treatment is provided to the call. Thus, this feature development combines both the VNR and MALT functionality for calls routed over IP, to give more benefit to the customer, by routing a call to the proper destination and providing appropriate vacant number treatment. For more information about configuring VNR and MALT, see *IP Peer Networking Installation and Commissioning* (NN43001-313). For more information about Element Manager, see *Element Manager: System Administration* (NN43001-632).

Calls to the IP network need the ability to reroute to another alternate, while maintaining the ability to receive vacant number treatment when the called destination is an unassigned number. There are two parts of this feature:

1. **MALT on calls routed to the IP domain**

This feature deals with VNR calls at the CS1K, routed over H.323/SIP. If the call fails to route to the destination the call gets disconnected with a cause which matches one of the original MALT cause codes, or disconnects with an indication to use MCDN Alternate Routing. If MALT exhausts all routes in the VNR route list block then the treatment corresponding to the disconnect cause is provided.

With the default MALT handling, there are six causes, which perform MALT at the Communication Server 1000:

- 3 : No route to destination
- 27 : Destination is out of service
- 34 : No circuit or channel available
- 38 : Network out of service
- 41 : Temporary failure
- 42 : Switching equipment congestion

2. **Configurable MALT causes for different vendors**

A configurable option is provided in EM for the different vendors in order to configure causes to accomplish MALT at the Communication Server 1000. Element Manager provides the following causes to be configured to perform MALT:

- 01 – unassigned number
- 20 – subscriber absent
- 47 – Resources unavailable
- 51: Call rejected; blocked by MBG
- 52: Outgoing call barred
- 53: Outgoing call barred in closed user group
- 54: Incoming call barred
- 55: Incoming call barred in closed user group
- 63: service or option not available
- 127: Interworking unspecified

If a call disconnects prior to establishing a clear message, using one of the causes listed previously, and the causes are configured on the Signaling Server to perform MALT, then a new IP IE is built with an indication `use MALT` with the cause. This IE is sent to CS with the in

the received clearing message. The CS would trigger MALT for the cause.

For more information about system messages for VNR and MALT, see *Software Input Output Reference - System Messages* (NN43001-712)

Alternative call routing for network Bandwidth Management

Alternative Call Routing for Network Bandwidth Management allows a station:to:station call (a call that does not use a trunk) between a branch office and main office to overflow to traditional routes. Overflow can occur if there is insufficient interzone bandwidth available to carry the call or if the Quality of Service (QoS) has degraded to unacceptable levels. This feature also applies to station:to:station calls from one branch office to another branch office, provided both stations are registered to the same main office. For more information about Alternative Call Routing, see [“Alternative call routing for Network Bandwidth Management” \(page 281\)](#).

Quality of Service versus Bandwidth Management

One approach to network engineering states that Quality of Service (QoS) is not needed; simply increasing bandwidth provides enough QoS for all applications. This theory also states that implementing QoS is complicated and adding bandwidth is easy. However, due to the bursty nature of IP network traffic, even very large amounts of bandwidth may not be enough to prevent congestion during a burst of traffic at a particular instance in time.

If all networks had infinite bandwidth available, so that network congestion never occurred, QoS technology would not be needed. While having adequate bandwidth provisioned on the network is very important, over provisioning may not be very realistic; therefore, QoS mechanisms are needed. For more information about QoS mechanisms, see [“QoS mechanism” \(page 34\)](#).

Security

For more information about CS1000E and CS1000M system security, see *Security Management Fundamentals* (NN43001:604).

Secure Transport Enhancements

This feature enhances the security of the File Transfer Protocol (FTP) infrastructure in Communication Server 1000.

SSH File Transport Protocol

SSH File Transport Protocol (SFTP) is a network protocol that provides confidentiality and integrity to the data (such as files or commands) transmitted between an SFTP client and a server. In addition, SFTP allows a client and a server to authenticate each other. In this feature, password is used by an SFTP server to authenticate an SFTP client.

UNISTim Security with DTLS

UNISTim Security with DTLS provides signaling encryption for UNISTim IP Phones based on the industry standard DTLS protocol (RFC 4347).

Network design and implementation

ATTENTION

Before a Communication Server 1000 system can be installed, a network assessment must be performed and the network must be VoIP:ready. For more information, see [“Configuration” \(page 239\)](#).


If the minimum VoIP network requirements are not met, the system does not operate properly.

Many considerations are important when you create and maintain a converged network. It is important to gain a detailed understanding of the design of the existing data network before you implement a Voice over Internet Protocol (VoIP) network.

To create a VoIP:grade network, certain QoS standards for various basic network elements must be met. Several QoS parameters can be configured, measured, and monitored to determine if the desired service levels are provided and obtained. The mechanisms needed to design a robust, redundant QoS:managed VoIP network are described in this document.

The following figure contains a logical view of the steps necessary to assess a network for Voice over Internet Protocol (VoIP) readiness. Use this network assessment flow chart as a guideline for the network engineering process.

Figure 2
Network assessment flow chart

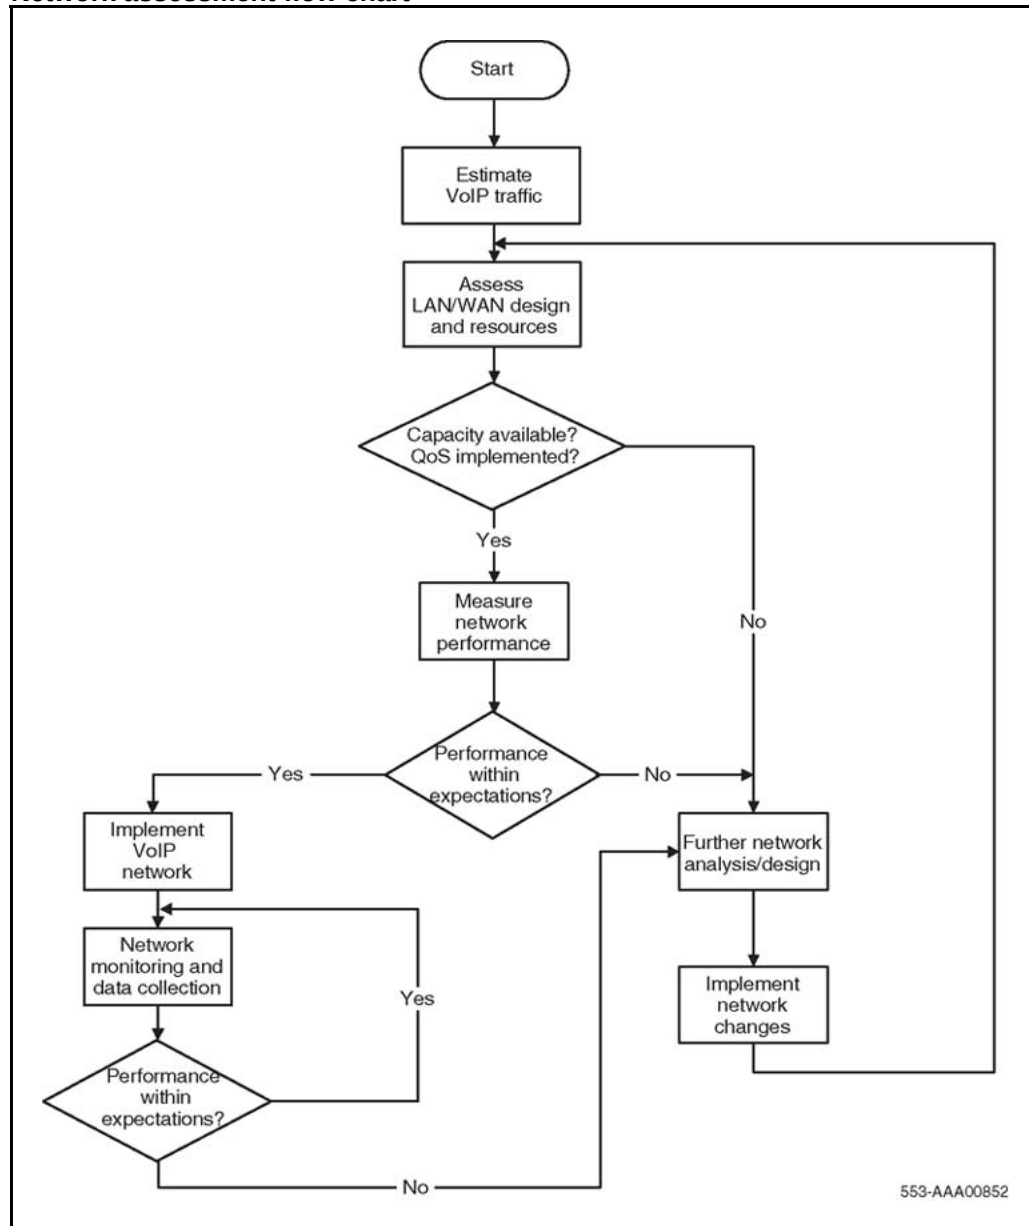

Network performance measurement and monitoring

TCP/IP was originally designed to reliably send a packet to its destination. Little consideration was given to the length of time it took to get there. Today, IP networks transport data from many different application types. Many of these applications require minimal delay. Delay is the length of time needed for information to travel through a network. Significant delay can adversely affect end:user quality; and in some cases, the application does not function at all.

Networks now carry many different types of traffic. Each traffic type has unique requirements for the following QoS parameters:

- network availability
- bandwidth
- delay
- jitter
- packet loss

These QoS parameters apply to any IP (Internet Protocol) network that carries VoIP traffic, including LANs, campus-wide networks, and WANs. These QoS parameters can be measured and monitored to determine if they meet desired service levels. Each of these elements are discussed in detail in [“Network Performance Measurement” \(page 125\)](#). For more information about the ongoing monitoring, management, and measurement of the network, see [“The VoIP network operation” \(page 217\)](#).

Available tools

ATTENTION

Tools are available for almost every aspect of converged network engineering. Nortel strongly recommends the use of appropriate tools when performing network engineering.

Some of the available tools include:

- Multiprotocol network design assessment software. These tools can analyze a network, highlight potential problems, and propose possible solutions.
- SNMP-based network management systems for network design assessment and monitoring.
- Graphical device configuration managers for almost all network switches can integrate into SNMP network management systems.
- Policy managers for implementing end-to-end QoS policies.
- Network performance measurement tools for monitoring network jitter, delay, and packet loss.

All of these tools can be operated from a central location on the network. Use the tools to simplify network engineering and operations, ultimately resulting in lower costs and higher quality services.

Nortel offers professional Network Architecture and Design services. For more information, contact a Nortel sales representative.

Planning and engineering

This chapter contains information about topics to consider before you implement a converged voice and data network.

Navigation

- [“Quality of Service” \(page 34\)](#)
- [“IP network best practices” \(page 60\)](#)
- [“Bandwidth Management” \(page 70\)](#)
- [“Bandwidth Management parameters” \(page 94\)](#)
- [“Abbreviated dialing” \(page 110\)](#)
- [“Bandwidth and data network switch efficiency” \(page 112\)](#)
- [“Network design assessment” \(page 112\)](#)
- [“Network planning” \(page 124\)](#)
- [“Network Performance Measurement” \(page 125\)](#)
- [“LAN design” \(page 171\)](#)
- [“Zone Based Dialing plan” \(page 201\)](#)
- [“Vacant Number Routing feature” \(page 204\)](#)
- [“Dialing plan” \(page 204\)](#)
- [“Distributed Media Gateway 1000E” \(page 207\)](#)
- [“DHCP configuration” \(page 208\)](#)
- [“The VoIP network operation” \(page 217\)](#)

Quality of Service

To ensure consistent voice quality, Quality of Service (QoS) must be supported on the platforms that transport Voice over Internet Protocol (VoIP). Consider the following list to provide QoS:

- Bandwidth Management
- packet classification
- DiffServ
- fragmentation
- traffic shaping
- queueing mechanisms provided by the platform

If appropriate QoS mechanisms are not supported by the platform, an upgrade can be required.

QoS mechanism

An IP network must be properly engineered and provisioned to achieve high voice quality performance. The network administrator should implement QoS policies network-wide, so voice packets receive consistent and proper treatment as they travel the network.

IP networks that treat all packets the same are called best-effort networks. In such a network, traffic can experience different amounts of delay, jitter, and loss at any given time. This can produce the following problems:

- speech breakup
- speech clipping
- pops and clicks
- echo

A best-effort network does not guarantee bandwidth at any given time.

The best way to guarantee bandwidth for voice applications is to use QoS mechanisms in the intranet when the intranet is carrying mixed traffic types.

QoS mechanisms ensure bandwidth is 100% available at most times, and maintain consistent, acceptable levels of loss, delay, and jitter, even under heavy traffic loads.

QoS mechanisms are extremely important to ensure satisfactory voice quality. If QoS mechanisms are not used, there is no guarantee that the bandwidth required for voice traffic is available. For example, a data file downloaded from the intranet could use most of the WAN bandwidth

unless voice traffic has been configured to have higher priority. If the data file download uses most of the available bandwidth, it causes voice packet loss and; therefore, poor voice quality.

Apply QoS mechanisms to the following VoIP media and signaling paths:

- TLAN connections
- VoIP traffic between IP Phones
- VoIP traffic between IP Phones and Voice Gateway Media Cards on the TLAN subnet

ATTENTION

Nortel strongly recommends that you implement suitable QoS mechanisms on any IP network that carries VoIP traffic.

Traffic mix

Before you implement QoS mechanisms, assess the traffic mix of the network. QoS mechanisms depend on the process and ability to distinguish traffic by class to provide differentiated services.

If an intranet delivers only VoIP traffic, and all traffic flows are of equal priority, you do not need to consider QoS mechanisms. This network would only have one class of traffic.

In most corporate environments, the intranet primarily supports data services. When you plan to offer voice services over the intranet, assess the following:

- Are there existing QoS mechanisms? What are they? VoIP traffic should take advantage of established mechanisms, if possible.
- What is the traffic mix? If the volume of VoIP traffic is small compared to data traffic on the intranet, then IP QoS mechanisms are sufficient. If VoIP traffic is significant, data services might be impacted when those mechanisms are biased toward VoIP traffic.

TCP traffic behavior

The majority of corporate intranet traffic is TCP-based. Unlike UDP, which has no flow control, TCP uses a sliding window flow control mechanism. Under this scheme, TCP increases its window size, increasing throughput, until congestion occurs. Congestion is detected by packet losses, and when that happens throughput quickly throttles down, and the whole cycle repeats. When multiple TCP sessions flow over few bottleneck links in the intranet, the flow control algorithm can cause TCP sessions in the network to throttle at the same time, resulting in a periodic and synchronized

surge and ebb in traffic flows. WAN links appear to be congested at one period of time and then are followed by a period of under:utilization. Two consequences are:


- WAN link inefficiency.
- VoIP traffic streams are unfairly affected.

The solution to this problem is Weighted Random Early Detection queueing (WRED) as described on ["Weighted Random Early Detection" \(page 39\)](#) .

QoS problem locations

[Figure 3 "Potential uplink problem areas" \(page 37\)](#) identifies typical network congestion areas. Voice traffic competes for limited bandwidth on the uplinks. These uplinks are shown in [Figure 3 "Potential uplink problem areas" \(page 37\)](#). Congestion at these points causes the majority of all packet loss, delay, and jitter. QoS mechanisms can alleviate this congestion by using multiple queues with different priorities.

Figure 3
Potential uplink problem areas

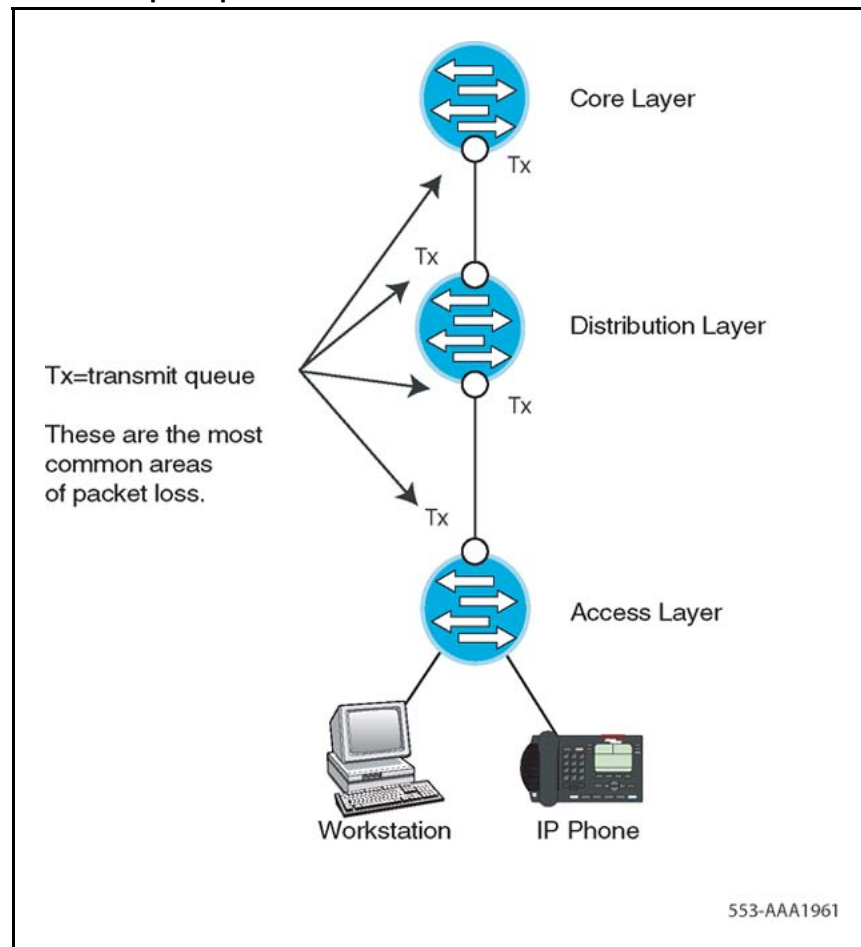

Campus networks

In most cases, campus Ethernet networks require less sophisticated QoS mechanisms than low-bandwidth WAN connections, because the available bandwidth is much greater. This results in significantly lower queueing and network delay. However, network congestion on an Ethernet network (even for short periods of time) and bursty TCP-based Internet traffic can cause significant voice quality problems if QoS is not applied.

QoS mechanisms, such as 802.1Q, VLANs, and Layer 2 Port prioritization (802.1p), can be used for VoIP traffic over Ethernet networks. If the Layer 2 (Ethernet) switches also support Layer 3 (IP) capabilities, then QoS mechanisms such as DiffServ and IP Address prioritization can also be used. For example, the Business Policy Switch (BPS) is a Layer 2 switch that can recognize, filter, monitor, and remark 802.1p and DiffServ markings, based on implemented policy.

Wide area networks

A wide area network (WAN) is a geographically dispersed telecommunications network. For example, a WAN can extend across many cities or countries.

WANs require more sophisticated QoS mechanisms, such as fragmentation and interleaving.

For more information, see [“WAN QoS mechanisms” \(page 41\)](#).

The QoS process

Packet handling on a QoS-enabled network consists of three stages:

1. Classification
2. Marking
3. Queueing, also known as Forwarding

To implement QoS on an IP network, all packets entering the IP network must be classified and marked. The packets are then placed into transmission queues of a certain priority.

Packets in high-priority queues are transmitted before packets in best-effort lower priority queues. VoIP packets no longer have to compete with best-effort data packets for IP network resources. Typical QoS implementations protect call quality by minimizing loss, delay, and jitter. Bandwidth cannot be assured without the use of some type of reservation protocol, such as Resource Reservation Setup Protocol (RSVP).

Classification

Software on the following hardware elements can classify and mark VoIP packets:

- Signaling Server – classifies packets as signaling packets.
- Voice Gateway Media Card – classifies packets as voice or signaling packets.
- IP Phones – classifies packets as voice or signaling packets.

ATTENTION

To classify Signaling Server and Voice Gateway Media Card packets at Layer 2 (802.1p), Layer 3 (DiffServ) or both, implement QoS mechanisms on the Signaling Server and Voice Gateway Media Card and the Layer 2 switch ports to which they are attached. IP Phones with firmware 1.31 (or later) can classify voice and signaling packets at Layer 2 (802.1p), Layer 3 (DiffServ), or both.

Classification can be implemented on Layer 2 or Layer 3 switches. See the switch documentation for information about configuring classification.

Policy management also provides other methods to classify and mark packets, based on identifiers, such as the originating IP address of the packet. For more information about Policy Management, see [“Policy management” \(page 58\)](#).

Packets can also be premarked with default 802.1p and DiffServ CodePoint (DSCP) values. Configure the Layer 2, Layer 3, or Policy switches to trust that these packets are marked correctly.

Marking

When powered:up, Nortel IP Phones contact the Terminal Proxy Server (TPS) that controls them. The TPS then instructs the IP Phones to mark all packets with a default configurable (through Communication Server 1000 Manager) DSCP and/or 802.1Q/802.1p tag. The tag is also configurable using Communication Server 1000 Element Manager. The control packets are marked for each of the following.

- Signaling Server
- Voice Gateway Media Cards
- Network Routing Service

Queueing

Queueing delay is a major contributor to delay, especially on highly used and low:bandwidth WAN links (see [“Queueing delay” \(page 152\)](#)). Routers that are QoS:aware and that support priority queueing can help reduce the queueing delay of voice packets when these packets are treated with preference over other packets.

Weighted Random Early Detection The global synchronization situation described in [“TCP traffic behavior” \(page 35\)](#) can be countered using a buffer management scheme that discards packets randomly as the queue starts to exceed a threshold. Weighted Random Early Detection (WRED), an implementation of this strategy, also inspects the DiffServ bits in the IP header when considering which packets to drop during buffer build up. In an intranet environment where TCP traffic dominates real:time traffic, WRED can be used to maximize the packet dropping from long:lived TCP sessions and minimize the voice packet dropping. Check the configuration guidelines with the router vendor for performance ramifications when you enable WRED. If global synchronization is to be countered effectively, implement WRED at core and edge routers.

Packet prioritization and schedulers for VoIP All VoIP packets must be given a priority higher than the priority of non voice packets to minimize delay, jitter (delay variation), and packet loss that adversely affect voice quality.

All voice packets must be placed in the highest:priority queue using a strict:priority scheduler, or a scheduler that can be configured to behave as a strict:priority scheduler. Some switches only permit network:controlled traffic in the highest:priority queue, which leaves the second highest:priority queue for the remaining user traffic.

ATTENTION

Nortel strongly recommends that you place voice traffic in a queue separate from other traffic types. However, if there are few queues available in the Layer 2 or Layer 3 switch, then voice traffic can be combined with other high:priority network:controlled traffic. Because the queueing delay is small for Ethernet network interfaces, this should have very little impact on voice quality.

Most Layer 2 switches use a strict:priority scheduler that schedules all packets in a higher:priority queue before it services any packets in a lower priority queue.

All VoIP packets must be queued in a router or switch using a strict priority scheduler. This ensures that VoIP packets receive priority treatment over all other packets. Because a strict priority scheduler can starve the servicing of all other traffic queues, a threshold must be set to limit the maximum amount of bandwidth that the VoIP traffic can consume. This threshold is also called rate limiting.

ATTENTION

Nortel strongly recommends that you use a strict priority scheduler for VoIP.

The Business Policy Switch (BPS) places the voice packets in the highest:priority queue using a strict:priority scheduler in its 4:queue system, when QoS is enabled on an interface.

Other vendors often refer to priority queueing when they describe techniques for strict:priority scheduling.

Some Layer 3 switches and routers support priority and weighted schedulers. Voice packets must be placed in a queue that uses a strict:priority scheduler, or in a queue that uses a weighted scheduler configured to behave like a strict:priority scheduler.

The Passport 8600 uses a weighted scheduler, with its highest:priority user queue configured by default to behave like a strict:priority scheduler. The queue is configured with all Packet Transmit Opportunities (PTOs) enabled. This is equivalent to a weight of 100% (high priority). Voice packets with DSCPs marked with EF (Expedited forwarding) and CS5 (Class Selector 5) are placed in this queue by default when QoS is enabled on an interface.

Nortel does not recommend other weighted schedulers, such as Weighted Round Robin (WRR) or Weighted Fair queueing (WFQ). If the router or switch does not support a priority scheduler and only supports a weighted scheduler, the queue weight for VoIP traffic should be configured to 100%. If a 100% weight cannot be configured due to a product limitation, consider replacing the product because it can cause unpredictable voice quality.

WAN QoS mechanisms

There are many things to consider when using routers with low:bandwidth WANs and low bandwidth access network connections such as T1, xDSL, or Packet Cable.

This section specifically discusses WAN connections, but the techniques and recommendations described also apply to low:bandwidth access network connections.

Bandwidth demand

VoIP can use an existing WAN data network to save on interoffice toll calls. However, offices often connect over low:bandwidth WAN connections, so special considerations must be made when you add VoIP over a bandwidth:limited connection.

When VoIP calls are active, routers configured with QoS (which prioritizes voice traffic over data traffic) reduce the data traffic throughput by the amount of bandwidth used for the VoIP call. This reduces the data traffic throughput to a possibly unacceptable level. Adding VoIP to the existing WAN data network might require an increase in the WAN bandwidth.

VoIP bandwidth depends on the following:

- type of codec used
- Voice Activity Detection (VAD), if used; also known as Silence Suppression
- packetization rate (voice sample size)
- IP/UDP/RTP encapsulations
- RTP Header Compression, if used
- Layer 2 (link layer) protocol overhead for the specific link the voice traffic is traversing. Depending on the link protocol used and the options invoked, the link protocol adds the following to each VoIP packet:
 - 5 to 6 octets (FR)
 - 7 to 8 octets (PPP)
 - 18/22/26/30/38/42 octets (802.3 LAN – with or without 802.1Q/802.1p 8:octet preamble and 12:octet interframe gap)

The extra octets create an additional overhead of 2 kbit/s (5:octet FR) to 16.8 kbit/s (42:octet 802.3 LAN) for each VoIP call.

ATM has its own overhead requirements. Due to the fixed cell size of 53 octets, the additional overhead varies widely, depending on the codec and packetization rate used.

Bandwidth example A company has two sites connected by a leased-line WAN connection (PPP) operating at 128 kbit/s. Due to the potential use of 20% of link capacity for zero-bit stuffing, a safe assumption for link capacity is 102 kbit/s. For design purposes, assume a maximum use of 70% (in this example, 90 kbit/s).

The 70% bandwidth is sufficient for the current data requirements. The company believes that it only needs 70:80 kbit/s most of the time, with occasional traffic peaks up to the full capacity. The company wants to support up to 4 simultaneous voice calls over the IP WAN network between the sites.

With 4 simultaneously active calls, the company requires 108.8 kbit/s (using a G.729 codec, 20 ms voice sample, and PPP overhead/frame) of the available 90 kbit/s of the 128 kbit/s link.

This requirement exceeds the carrying capacity of the link and completely starves that data traffic. The solution is to upgrade the WAN connection bandwidth. A 256 kbit/s link is the minimum speed to provide 109 kbit/s for four G.729 VoIP calls, 80 kbit/s for data, and 20% availability for zero-bit stuffing.

Fragmentation and interleaving

To minimize voice delay and jitter in mixed voice/data IP networks, fragment large packets before they traverse limited-bandwidth (<1 Mbit/s) connections. There are several different protocols that can be used to fragment packets.

For Frame Relay connections, the FRF.12 standard can be used to fragment packets. ATM provides fragmentation because all packets are fragmented into 53:byte ATM cells. Both of these fragmentation techniques are acceptable.

Two types of fragmentation are more universal and not limited to a specific link:layer technology, such as ATM or Frame Relay. These methods are PPP fragmentation and IP fragmentation.

See the router documentation for information about configuring PPP and IP fragmentation.

Layer 2 fragmentation (ATM, FRF.12, PPP) is preferred over Layer 3 fragmentation, as Layer 2 fragmentation universally affects all higher:layer protocols. Layer 3 fragmentation is less desirable for the following two reasons:

1. Layer 3 fragmentation applies only to the specific protocol used. For example, the Internet Protocol Maximum Transmission Unit, in bytes, affects only IP traffic. It has no effect on IPX or other protocols.
2. Some applications do not function because they set the Do not Fragment bit, which prevents application packets from transmitting.

PPP fragmentation and interleaving Many routers support PPP fragmentation, which splits large packets into multiple smaller packets and encapsulates them into PPP frames before they are queued and transmitted. PPP fragmentation lets higher:priority VoIP packets to be transmitted ahead of the lower:priority data packet fragments that have already been queued. The voice packets and data fragments are interleaved, so the maximum delay a voice packet experiences is one fragment time (ideally ≤ 10 ms), rather than one large packet time.

For example, a small voice packet enters a router, followed by a large data packet, which is followed by a second voice packet. The first voice packet is transmitted as the first frame on the link. Next, the first data fragment is transmitted, followed by the second voice packet, then the second data fragment. If no more packets enter the router then the remaining data fragments will continue to be transmitted until the entire data packet has been sent.

Interleaving is a result of voice packets having a higher priority than data packets. A data fragment can be transmitted first; however, when a high:priority voice packet arrives, the voice packet is sent before the rest of the data packet.

IP fragmentation All routers support IP fragmentation, which configures all IP packets to a size determined by the MTU (Maximum Transmission Unit). Most routers use a default maximum packet size of 1500 bytes (the largest packet allowed on Ethernet LANs), which can take a long time to transmit over a low:bandwidth connection.

ATTENTION

When you determine the fragment size for a packet, ensure that the fragment size is not smaller than the voice packet. Fragment only large data packets, not the voice packets.

For example, when you send using a 64 kbit/s link, a 1500-byte data packet takes 188 ms to transmit. If the WAN connection is Frame Relay (FR), this same queueing delay is added again when the packet is queued at the far: end FR switch on the other side of the connection. To achieve high voice quality, the desirable end: to: end delay for a voice packet is less than 150 ms. In this example, the data packet uses up almost the entire delay budget for the voice traffic before the first voice packet transmits. Jitter of 188 ms is created, which exceeds the normal jitter buffer settings of 2 to 3 voice sample sizes (40 to 90 ms). In this case, at least one packet (usually many packets) arrive too late for use.

If you use bandwidth: limited connections (<1 Mbit/s) without Layer 2 (ATM, FRF.12, or PPP) fragmentation, the router must be configured to transmit smaller packets by adjusting the MTU size for the IP packets. Ideally, the MTU size is adjusted to achieve an optimum delay of 10 ms or less over the different connection speeds. Therefore, a higher bandwidth connection has a larger MTU size than a lower bandwidth connection.

ATTENTION

When IP fragmentation is used, the packets remain fragmented from source to destination. This can result in reduced data performance as the larger data packets fragment into multiple, smaller fragments that use more bandwidth

The following table provides the recommended maximum MTU sizes for different connection speeds when you use IP fragmentation. These choices result in a maximum delay of 8 ms.

Table values also apply to Layer 2 fragmentation techniques.

Table 2**Recommended MTU sizes for various connection speeds**

	Connection Rate (in kbit/s)				
	56	64	128	256	512
Maximum MTU size (in bytes)	56	64	128	256	512

ATTENTION

Nortel strongly recommends that you use PPP for packet fragmentation. Use IP fragmentation only if the router does not support a Layer 2 fragmentation protocol, such as PPP or FRF.12.


Packet reordering In some cases, there can be multiple paths for a VoIP packet when it travels from source to destination. If all VoIP packets do not take the same path, packets can arrive out: of: order. This can cause voice quality issues, even though packet reordering often has little or no adverse affect on data traffic quality due to the design of the data protocols.

For example, if two locations connect using two Frame Relay Permanent Virtual Circuits (PVCs), ensure that all voice traffic for a specific call travels on the same PVC. The routers can be configured to direct voice packets from the same source/destination IP address to traverse the same PVC. You can also configure the router to send all voice traffic over only one PVC.

Traffic shaping

In a Frame Relay environment, a typical design could have many low-speed links that terminate at Media Gateway 1000B (MG 1000B) locations with a single high-speed link into a hub location as illustrated in the following diagram.

Figure 4
Traffic shaping

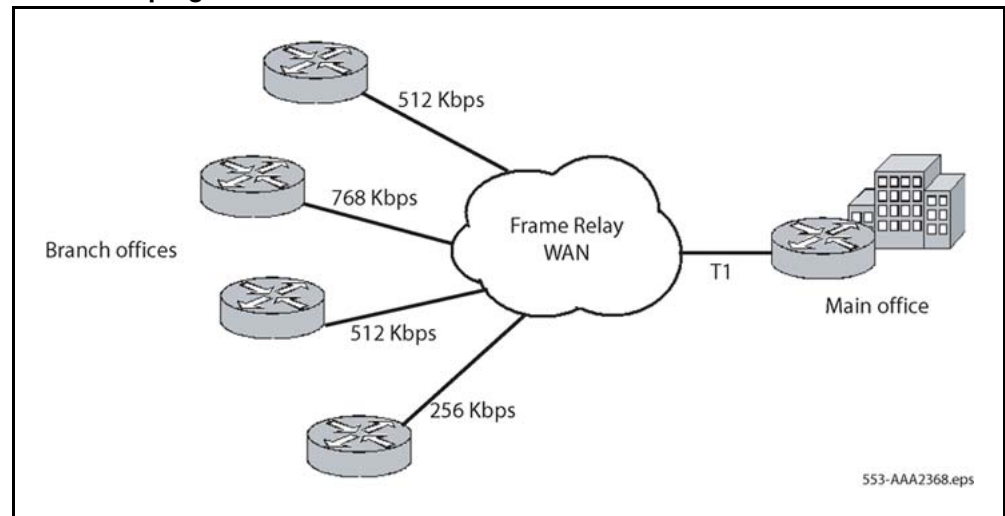

In this example, the MG 1000B sites with a low speed link can be overrun by traffic from the central site that has a larger bandwidth connection, or the main office site could be overrun with traffic from all of the MG 1000B sites. Without traffic shaping, the network can randomly drop packets. The resulting packet loss degrades voice quality.

Traffic shaping prevents voice quality degradation by determining which packets to drop due to congestion and which packets receive priority.

Traffic shaping works by queueing excess traffic to lower the amount of bandwidth across a Frame Relay WAN to limit traffic to a predetermined level. This is known as the Committed Information Rate (CIR). CIR is negotiated with the service provider.

If data is offered too fast and the Committed Burst (Bc) rate plus the Excess Burst (Be) rate exceeds the CIR over a certain Time Interval (Tc), the Frame Relay network can mark packets as Discard Eligible. This cannot be tolerated when running real-time applications, such as voice.

When you run traditional data applications over Frame Relay, the network allows bursting over a certain Time Interval (Tc). If the data burst exceeds the contract during the Tc, the Frame Relay network starts sending Layer 2 (L2) feedback in the form of Forward Explicit Congestion Notifications (FECN) and Backward Explicit Congestion Notifications (BECN). This L2 feedback informs the Data Terminal Equipment (DTE) devices (routers) that congestion exists in the upstream or downstream direction. Upon receiving this feedback, the DTE should throttle back to the Bc or a fraction of the Bc. It is also possible for the DTE to completely shutdown until the feedback indication abates for a period of time.

While this is considered a benefit for data applications, the resulting packet loss is detrimental to quality.

RTP header compression

IP Real-Time Transport Protocol (RTP) header compression can be used to compress 40-byte (IP, UDP, RTP) VoIP packet headers to a size of 2 to 4 bytes.

This results in significant bandwidth savings across low-bandwidth WAN links. Note current WAN platform CPU levels before you implement RTP header compression, because it is CPU intensive.

PPP QoS

It is important that QoS mechanisms are used over low-bandwidth links that carry both voice and data traffic.

If you implement QoS mechanisms over a PPP WAN link, it may involve the use of the following:

- priority queueing (possibly mapped from the Diffserv CodePoint (DSCP))
- RTP header compression
- fragmentation and interleaving

Frame Relay QoS

Nortel recommends that you use separate Permanent Virtual Circuits (PVCs) for voice and data whenever possible. Ensure voice PVCs strictly conform to the CIR. Do not allow bursting or shaping. You can use partially meshed PVCs, depending on traffic patterns.

If voice and data traffic share the same PVC, it can be necessary to use priority queueing with traffic shaping to ensure that voice packets are not discarded or queued for a long period time. On low bandwidth links (<1 Mbit/s), fragmentation and interleaving (FRF.12) may have to be used.

ATM QoS

Two methods exist to ensure VoIP QoS on ATM links:

- separate voice and data PVCs
- priority queueing on a shared voice and data PVC

Nortel recommends that you use separate voice and data PVCs. The available bandwidth for a particular ATM PVC is usually guaranteed by a service provider. If traffic through the PVC is restricted to VoIP traffic only, then no other QoS mechanisms in the ATM network must be used. Voice traffic can be mapped into the voice:only PVC according to the source IP address or Diffserv CodePoint. VoIP Bandwidth Management on the Call Server can then be used to ensure that the VoIP traffic volume does not exceed the amount of bandwidth available in the voice:only PVC.

If a shared voice and data PVC is used, then priority queueing must be configured across the ATM network to guarantee that voice traffic has priority over data traffic.

Layer 2 (Ethernet) QoS

At Layer 2, VoIP packets can be classified by the following fields in the Ethernet header:

- source/destination MAC address
- 802.1Q
 - VLAN ID
 - 802.1p user priority bits

MAC address


All MAC addresses are unique and should not be changed.

Packets can be classified by the MAC address. Packets from a Nortel IP Phone can be recognized because each Nortel IP Phone has a unique set of MAC addresses. When the Layer 2 switch recognizes the IP Phone packet MAC address, it marks the packets with the appropriate 802.1p value. The Layer 2 switch then places the packets in the correct switch queue. The correct queue is determined by the QoS policy implemented by the network administrator.

IEEE 802.1Q

The IEEE 802.1Q standard extends the Ethernet frame format by adding four bytes to the Ethernet packet header. See the following figure.

Figure 5
Ethernet 802.1Q extensions

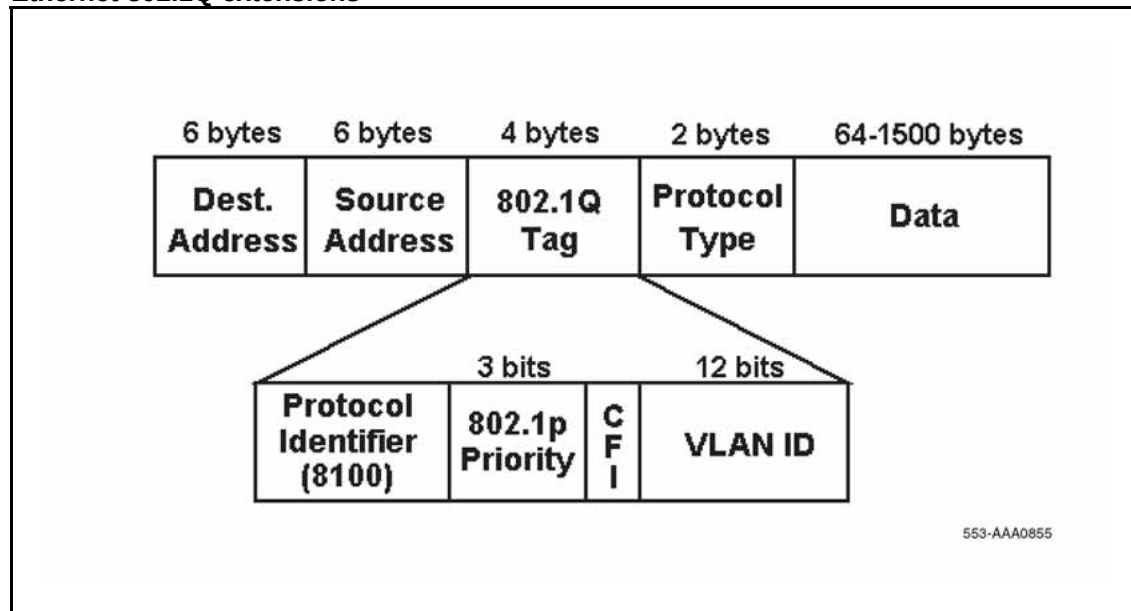

The 802.1Q extensions contain two important fields – the 802.1p field and the VLAN ID field. [Table 3 "IEEE 802.1Q field definitions" \(page 48\)](#) lists the 802.1Q field names and definitions.

Table 3
IEEE 802.1Q field definitions

802.1Q field	Description
Tag protocol identifier	Always set to 8100h for Ethernet frames (802.3 tag format)
3:bit priority field (802.1p)	Value from 0:7 that represents user priority levels (7 is the highest)
Canonical field	Always set to 0 (zero)
12:bit 802.1Q VLAN ID	VLAN identification number

VLAN ID A VLAN logically groups network devices into a single broadcast domain. Each VLAN has its own IP subnet. This ensures that devices on separate VLANs cannot communicate with each other unless their traffic is routed. The routing enables traffic separation and isolation by creating separate broadcast domains.

VLANs provide a popular method of supporting QoS, using a Layer 2 (Ethernet) switching structure.

ATTENTION

The routers must be compatible. Routers must support VLANs on their physical ports.

VLANs include advantages when applied to voice traffic on an IP network. VLANs enable packets with similar QoS requirements to be grouped together to receive the same QoS treatment.

After routing into a specific VLAN, configure the router interface to tag the incoming Layer 2 Ethernet frames with the correct VLAN ID and priority.

VLANs provide a useful way to separate and prioritize the IP telephony packets for Layer 2 switches. A telephony VLAN can be created so that all IP telephony devices are members. This enables the Layer 2 switch to prioritize all telephony traffic, so that it receives consistent QoS treatment.

ATTENTION

A VLAN can only provide QoS on Layer 2 switches that support the 802.1Q (VLAN) standard. After the packets leave the Layer 2 switch, and encounter routers or WAN switches, DiffServ should be used to provide end-to-end QoS. Nortel IP Phones also mark the DSCP, so after voice packets encounter routers, the routers can be configured to prioritize the packets based on their DSCP value.

IP Phones 200x support IEEE 802.1Q using firmware version 1.39 or later. The default Ethernet Class of Service (CoS) is 0; this is the same as the 802.1Q priority bits.

The IP Phones 200x firmware tags the Ethernet frames with both the telephone VLAN ID and the 802.1p priority specified in Element Manager. Nortel recommends that you assign the 802.1p priority to 6.

The Nortel IP Softphone 2050 client support of IEEE 802.1Q priority depends on the underlying operating system and hardware.

802.1p user priority bits The 802.1p field has three bits that provide eight Classes of Service (CoS). 802.1p-capable Layer 2 and Layer 3 switches use these CoS to prioritize packets, and then place them in different queues to provide service differentiation. For more information about configuring, see [Procedure 2 “Configuring QoS in Element Manager” \(page 240\)](#).

802.1p configuration Use [Procedure 2 “Configuring QoS in Element Manager” \(page 240\)](#) to configure the 802.1p priority bits in Element Manager.

For more information about Element Manager, see *Element Manager System Reference — Administration* (NN43001-632).

Port prioritization

You can configure a Layer 2 switch port to prioritize all packets that enter it, for example, in cases where IP Phones connect to a Layer 2 switch port not shared with other devices.

3:port switch port prioritization IP Phones have an optional external 3:port Layer 2 switch module that is inserted into the bottom of the phone.

The IP phones have a built-in 3:port switch. The internal port is used by the IP phone. The two external ports provide connection to the network and another device (such as a PC).

The 3:port Layer 2 switch enables a PC and an IP Phone to share a single Ethernet connection. All packets entering the port connected to the IP Phone are given a higher priority than packets entering the port connected to the PC to ensure that all voice packets are sent ahead of any data packets. This has little effect on the data packets because the IP Phone packets are small and use little bandwidth.

This approach has limitations. For example, if a network user connects a PC to the IP Phone Ethernet port, the user can unfavorably take advantage of network resources. This situation can be prevented by ensuring that all packets that enter the port are also prioritized through MAC or VLAN ID classification to determine that they are from an IP Phone.

ATTENTION

Nortel strongly recommends that, for stationary IP telephony devices, such as VoIP gateways, use port prioritization on the Ethernet switch port that connects to the device.

Layer 3 QoS

DiffServ is the recommended Layer 3 QoS mechanism. Layer 3 IP devices (routers and Layer 3 switches) can classify IP Phone packets by using the following fields in the IP packet header:

- source/destination IP address
- DiffServ CodePoint (DSCP)
(the 6 Most Significant Bits (MSB) in the 8:bit DiffServ field)

ATTENTION

The values entered in the fields must be coordinated across the entire IP data network. Do not change the fields arbitrarily.

IP address classification

A Nortel IP Phone obtains an IP address in one of two ways:

- DHCP is used to automatically obtain the IP address.
- the IP address is permanently assigned through the keypad.

To make it easier to prioritize packets by IP addresses, a pool of IP addresses can be set aside exclusively for IP Phones. The Layer 3 switch/router can then prioritize the packets based on this range of IP addresses by marking the voice packets from those designated IP addresses with the recommended DSCP.


This method does not differentiate between voice media and signaling packets. Only a single DSCP is used for both. However, if additional filters are applied to sort the different packet types, the voice media and signaling packets can be marked with different DSCPs.

DiffServ for VoIP

DiffServ-based QoS at Layer 3 provides end-to-end QoS. By using DSCP, DiffServ enables service assignment to network traffic on a per-hop basis.

Figure 6 "DiffServ-based QoS architecture" (page 51) shows the architecture of DiffServ-based QoS.


Figure 6
DiffServ-based QoS architecture

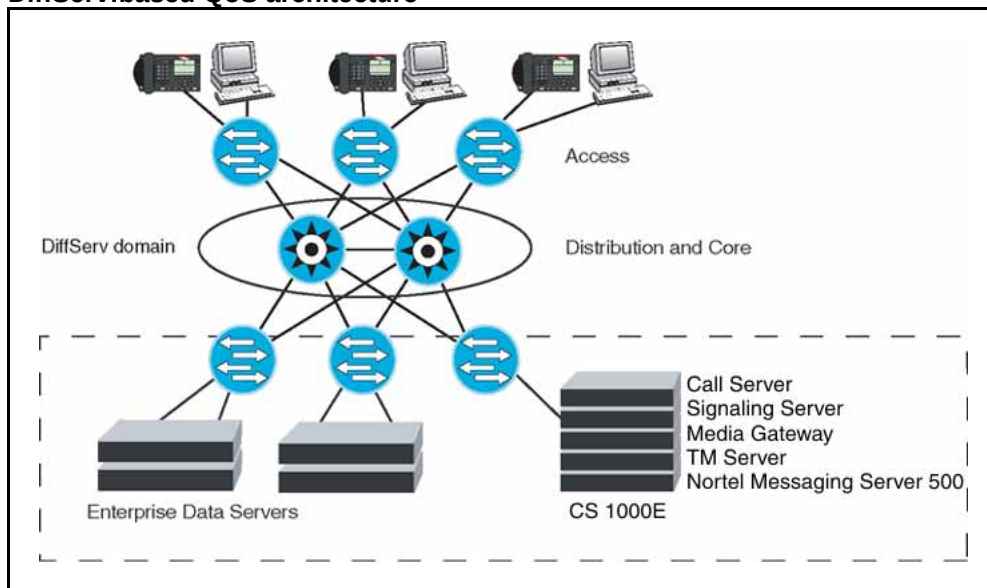

The DiffServ CodePoint (DSCP) is a 6-bit value contained in the second byte of the IPv4 header. See [Figure 7 "IPv4 header showing DSCP location" \(page 52\)](#). The DSCP determines the DiffServ Per Hop Behavior (PHB) treatment that the router/Layer 3 switch provides to the IP packets.

The DSCP is contained in the 8-bit DiffServ Field (DS Field), formerly known as the Type of Service (ToS) Field. Some routers use the ToS terminology instead of the DiffServ terminology. However, in either case, the six most significant bits in this field are the DSCP value. See [Figure 7 "IPv4 header showing DSCP location" \(page 52\)](#).

Figure 7
IPv4 header showing DSCP location

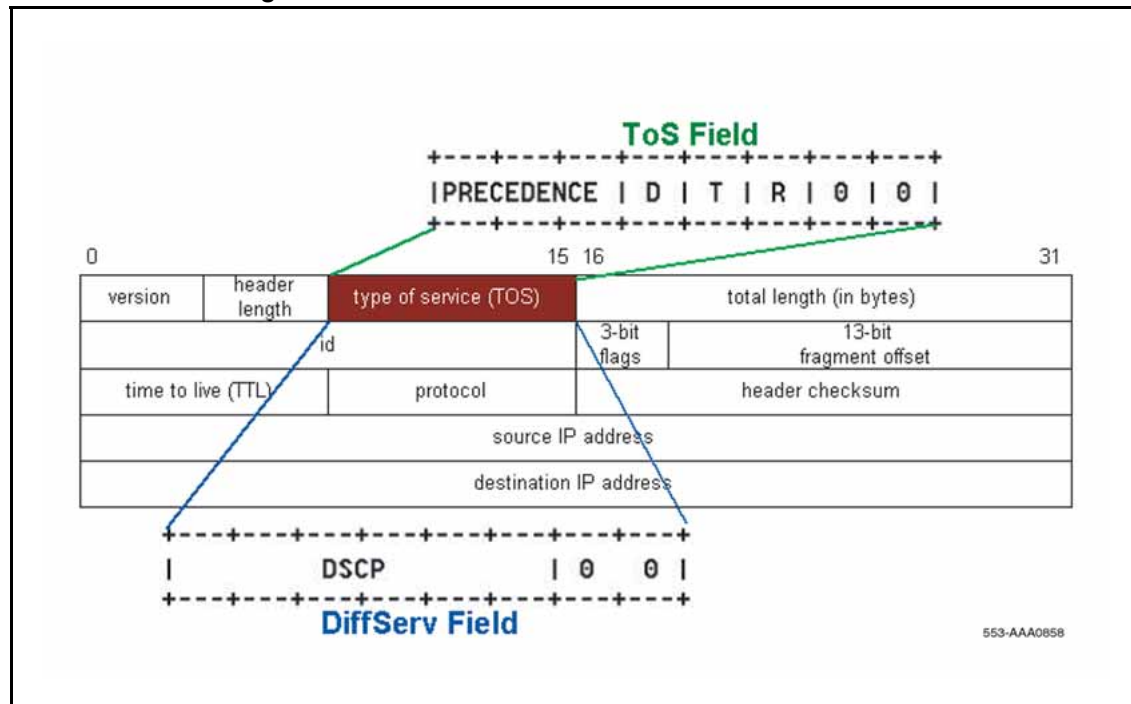

You can see the 8-bit value, rather than the 6-bit value, if you use a network analyzer to look at the DiffServ byte.

Trust configuration

DiffServ edge routers and switch interfaces can be configured to trust or distrust a previously marked DSCP or 802.1p tagged packet. Voice packets that enter untrusted interfaces are remarked to a DSCP/802.1p value of 0 (best effort), unless filters are set up to classify the packets and mark them with the DSCP or 802.1p value specified by the network administrator. If the router and switch interfaces are configured as trusted interfaces, then the packets are not remarked and the premarked voice packets are prioritized based on their DSCP and 802.1p values.

A router can use the DSCP to queue premarked IP Phone packets if they arrive from a trusted source.

For example, a Layer 3 switch can have Ethernet ports assigned only to IP Phones. These ports can be configured to trust that the IP Phones marked the packets correctly.

Voice signaling and media DSCPs

Over a high:bandwidth, low:latency Ethernet LAN connection, voice media packets and signaling packets can be placed in the same queue in the Layer 2 or Layer 3 switch. In this case, it is not necessary to differentiate between voice media packets and voice signaling packets.

However, when the voice packets use a low:bandwidth (less than 1 Mbit/s) connection, considerable queueing delay can occur. This queueing delay, when coupled with the arrival of different:sized voice packets (signaling and media), creates an unacceptable amount of voice jitter, which in turn results in poor voice quality.

To minimize voice jitter over low bandwidth connections, the voice media and voice signaling packets must be separated into different queues. By marking the voice media and voice signaling packets with a different DSCP, the packets can be classified and separated into different queues by the router connected to the low:bandwidth connection.

ATTENTION

It is important to categorize signaling packets so they are not discarded by the network. The IP Phone contains a watchdog timer that resets the IP Phone if signaling packets are not seen within a certain amount of time. Lost signaling packets can also cause the IP Phones to reset.

Setting DSCP values

If a best:effort network is currently in place, and VoIP is being added, the simplest approach is to create the network QoS with only three priority levels:

1. VoIP voice media traffic
2. VoIP signaling traffic
3. best:effort IP data traffic

Routers connected to low:bandwidth interfaces must separate voice media and voice signaling packets to minimize jitter introduced by the signaling packets to the voice media packets. Jitter occurs if the packets are placed in the same queue instead of separate queues.

IP packets are prioritized based on the DSCP in the distribution layer, core layer, and WAN.

DiffServ is supported on the Signaling Server, Voice Gateway Media Cards, and the IP Phones.

Table 4 "Recommended DiffServ classes" (page 54) shows the recommended DiffServ traffic classes for various applications.

Table 4
Recommended DiffServ classes

Traffic type	DiffServ class	DSCP (binary)	DSCP (decimal)
Voice media	Expedited Forwarding	101110	46
Voice signaling	Class Selector 5	101000	40
Data traffic	Default	000000	0


ATTENTION

If you use Sniffer, the values in a sniffer capture are 8:bit values. The EF DSCP can appear as 184 decimal. The CS5 DSCP can appear as 160 decimal.

The Nortel standard DSCP for signaling is decimal 40. The Nortel standard DSCP for voice is decimal 46, based on six bits of an 8:bit field. Two bits are unused. The DSCP is configured in Element Manager.

Mapping DSCP to 802.1Q Some switches, such as the Passport 8600 and Business Policy Switch, can map the DSCP to and from an 802.1p tag. See the following figure.

Figure 8
Mapping DSCP to 802.1p

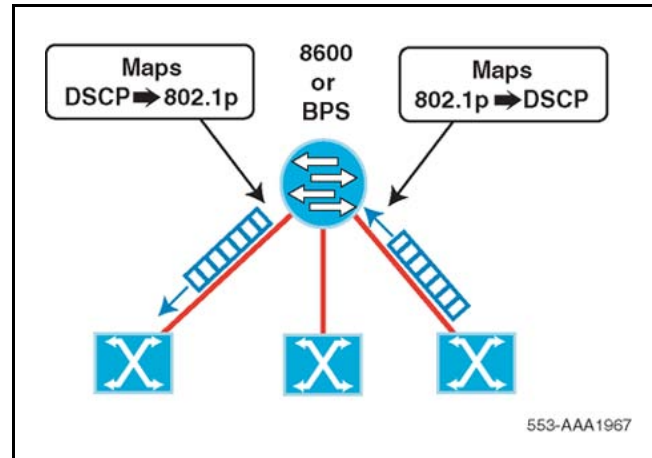

This extends the IP QoS to Layer 2 QoS for the downstream Layer 2 switches that are not IP:aware. The Passport 8600 has a mapping table for DSCP to 802.1p. The Passport 8600 can map packets marked with EF and CS5 DSCPs to 802.1p user priority 110'. The downstream Layer 2 switch should be configured to place this 802.1p tag of 110 into its highest:priority queue.

If a network administrator configured a different 802.1p tag for IP Phone packets, then packets tagged with this value should be placed in the highest:priority queue of the Layer 2 switch. The network administrator must also ensure consistency in mapping the EF and CS5 marked packets to this 802.1p tag.

Example Using Telephony Manager (TM), a network administrator can configure the IP Phone 2004 controlled by a Voice Gateway Media Card to mark the voice media packets with the EF DSCP, and the voice signaling packets with the CS5 DSCP.

The Passport 8600 routing switch trusts the premarked packets that enter ports configured as core ports. The Passport 8600 places these packets into the highest:priority queue by default. The scheduler for this queue is preconfigured with a Packet Transmit Opportunity (PTO) or queue weight of 100%.

This configuration provides the necessary behavior required for IP Phone packets to achieve the required QoS.

TM and Element Manager QoS configuration

You can configure QoS using TM or Element Manager.

- Meridian 1 systems equipped with IP Trunk and IP Line must use TM.
- Communication Server 1000 systems must use Element Manager.

Adhering to Nortel standards, the DSCP bits for VoIP control packets are set to CS5, a decimal value of 40. The voice packets are set to the EF decimal value of 46. By default, the Passport 8600 and BPS place the voice and control packets into the same queue.

For slower links (<1 Mbit/s), the control and voice packets marked with different DSCP values should be separated into different queues; otherwise, the voice packets experience significant queueing delays.

[Figure 9 "Voice Gateway Media Card DSCP configuration using TM" \(page 56\)](#) shows DSCP configuration using TM.

Figure 9
Voice Gateway Media Card DSCP configuration using TM

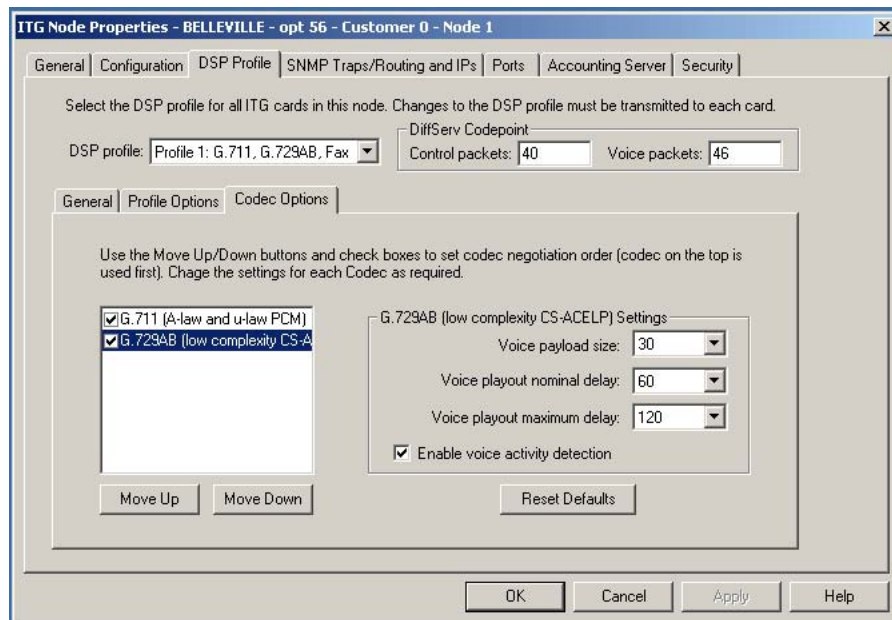


Figure 10 "Voice Gateway Media Card DSCP configuration using Element Manager" (page 57) shows DSCP configuration using Element Manager.

Figure 10
Voice Gateway Media Card DSCP configuration using Element Manager

For more information about configuring DiffServ values in Element Manager, see *IP Peer Networking Installation and Commissioning* (NN43001-313).

Layer 4 (TCP/IP) classification

All Layer 4 IP devices can classify IP Phone packets by using the following fields in the packet header:

- source/destination TCP/UDP port number
- protocol ID

Port number classification

UDP port numbers that use IP Phone RTP packets are dynamically assigned, which makes it difficult to classify packets by port number. However, if a specific range of port numbers is assigned to IP Phones, then the router recognizes that the packet came from a port number assigned to IP Phones and prioritizes the packet as a voice packet.

There is a disadvantage to using the previous method of prioritization. Another application can use the same port number range, causing its packets to be mistaken for voice packets and allowing packets to be assigned an incorrect QoS behavior and prioritization.

Protocol ID classification

Many multimedia applications (for example, real-time fax and video, and voice) use the Real-Time Transport Protocol (RTP); therefore, prioritizing packets according to the protocol used does not provide accurate results.

Communication Server 1000 and Meridian 1 ports

For more information, see [“Port number tables” \(page 339\)](#).

Policy management

You can prioritize traffic through policy management, which Nortel supports through ENMS Policy Services software.

ENMS Policy Services

ENMS Policy Services (OPS) is network:management software that the network administrator can use to prioritize and manage different types of network traffic. OPS 2.0 is designed to manage policies on the BPS and Business Communication Server (BCM). To manage BayRS, Accelar, and Passport devices, OPS 1.1.1 must be installed.

For more information about configuration examples, see [“DHCP supplemental information” \(page 401\)](#).

Codec selection

To ensure optimal voice quality, minimize the number of compression and decompression stages use a G.711 codec wherever bandwidth permits.

The Call Server considers BQ codec as G.711 and BB as either G.729 or G.723 (assuming that both parties support it).

Each codec has specific parameters that must be configured, such as packetization delay and voice activity detect. These parameters are configured on the Signaling Server using Element Manager. For more information, see [“Element Manager” \(page 218\)](#).

Ensure the voice codec images on all sites match by using the same software version at each site. Use the same codecs, packetization, and jitter buffer settings on each system.

There is a potential to degrade the voice quality if codecs are cascaded. This can occur when there are multiple compression and decompression stages on a voice call. The more IP links used in a call, the more delay is added, and the greater the impact on voice quality.

The following applications and devices can impact voice quality if you use a compression codec, such as G.729A:

- Voice mail, such as Nortel CallPilot, introduces another stage of compression and decompression.
- Conferences can double the number of IP links.
- IP Trunks can add additional stages of compression and decompression.

ATTENTION

Nortel recommends that all cards in a system have the same image. If multiple codec images are used in an VoIP network, the calls default to the G.711 group when the originating and destination codecs differ.

If there are multiple nodes on a system and the same codec is selected on more than one node, ensure that each node has the same voice payload size configured for the codec.

For more information about codecs, see *Signaling Server IP Line Applications Fundamentals* (NN43001-125).

Protocols in use

When you assess the network for VoIP readiness, observe the distribution of protocols in the network, specifically on the WAN. Tools available for this task include Network Management Systems (NMS), which can poll devices through SNMP probes, remote monitoring (RMON) probes, or both, and analyze the results.

Routing protocols

It is important to note the routing protocols used within the network, as they can affect network availability.

LAN protocols

Routing protocols in the LAN must be considered when implementing VoIP.

WAN protocols

Routing protocols in the WAN can be very important when you consider how VoIP calls are routed and how quickly fail:over occurs. When you plan a VoIP network, be aware of the situations that trigger a routing table update with respect to the routing protocol. This helps when you predict what path a VoIP flow might take during a failure in the network.

Convergence

Convergence is the point where all internetworking devices have a common understanding of the routing topology. The time it takes a network to reconverge after a link failure must be considered, as the process might take several minutes depending on the network size and routing protocol in use.

Mixing protocols

VoIP performance can be impacted if a network is using multiple protocols on any particular segment.

For example, even with fragmentation implemented, if there are protocols in use other than IP, those protocols can maintain larger frame sizes. This can introduce additional delay to the VoIP traffic.

It is important to be aware that certain applications that run over IP can set the frames with the may fragment bit to 1, which prevents fragmentation. As part of the overall assessment process, the network analysis on the LAN can determine if applications include this bit setting.

Security and QoS

The following security features must be considered.

- firewalls
- Network Address Translation (NAT).
- Secure Virtual Private Network (VPN) access through Secure Internet Protocol (IPSec) encryption.

Routers might use NAT and IPSec for remote network users who connect to the network through the public Internet. A firewall connection could also exist. The network designer must consider the security policy in force and determine if the ports required for VoIP can go through the firewall.

For more information about security management, see *Security Management* (NN43001-604).

IP network best practices

This section describes IP network engineering best practices.

Fallback to PSTN

It is possible to automatically fall back to PSTN, if calls cannot be completed due to loss of connectivity between sites over the IP network. This is achieved using the standard Meridian Customer Defined Network (MCDN) Alternate Routing feature when:

- the IP network is down
- the destination IP Peer endpoint is not responding
- the destination IP Peer endpoint responds that there are no available IP Peer trunk resources
- the destination IP Peer endpoint is not registered with the Networking Routing Service (NRS)
- there are address translation errors
- all Virtual Trunks are busy at the originating sites
- all bandwidth configured for a bandwidth zone has been allocated
- Quality of Service (QoS) metrics cause a reduction in available bandwidth

Fallback to PSTN can be configured by programming an alternate route entry after the virtual IP trunk route entry in RLB in LD 86 and entering RRA at the SBOC prompt for the virtual IP trunk entry. For the configuration of RLB in LD 86, see *Software Input Output Reference — Administration (NN43001-611)* ().

Fallback to PSTN for IP Peer Networking refers to the use of the MCDN Alternate Routing feature to step back to an alternate switched:circuit trunk route to the destination that the call first attempted to reach by the IP Peer virtual IP trunk route.

The alternate switched:circuit trunk route can include any of the following:

- a direct ISDN PRI tie trunk route
- a Virtual Private Voice Network tie trunk route using a common carrier voice network
- a PSTN trunk route

ATTENTION

If fallback to PSTN uses PSTN trunks as the alternate route, then the appropriate ESN digit manipulation features must be implemented to convert the dialed number from on:net to off:net, or from private to public E.164 format.

If fallback to PSTN uses PSTN trunks as the alternate route, Nortel recommends that you configure both the original and alternate trunk routes as en bloc:capable or overlap:capable.

A similar feature, Alternative Call Routing for Network Bandwidth Management is available to provide alternate routing between a branch office (or Survivable Remote Gateway [SRG]) and a main office. For more information, see [“Alternative call routing for network Bandwidth Management” \(page 29\)](#).

Best IP network engineering practices for IP Telephony

In general, the best IP network engineering practices for IP telephony remove the requirement for QoS fallback to PSTN. Best practices include

- the implementation of network QoS features such as DiffServ and 802.1Q to give priority to real-time voice traffic
- the fragmentation of large data frames to limit the maximum frame size on low speed WAN links and limiting the quantity of voice traffic that is transmitted over low speed links

When QoS fallback to PSTN is required for specific network locations (in an IP Peer network) because WAN links have not been engineered according to best practices, IP Trunk 3.0 (or later) can be used to achieve QoS fallback to PSTN between those locations and an IP Peer node located on the IP network backbone. An IP Trunk 3.0 (or later) node must be configured in the same Communication Server 1000 system with the IP Peer node.

Considerations for using IP Trunk to achieve QoS fallback to PSTN

If you use IP Trunk 3.0 (or later) nodes to provide QoS fallback to PSTN in an IP Peer network, you must consider specific engineering and network management trade-offs:

- QoS fallback to PSTN only works between symmetrically-configured pairs of IP Trunk nodes. QoS fallback to PSTN does not work between an IP Trunk node and an IP Peer node. Each IP Trunk node in a symmetrically-configured pair must have QoS fallback to PSTN enabled for the opposite destination node.
- A pair of symmetrically-configured IP Trunk nodes must each have a local Dialing Plan entry in the IP Trunk node that points to these opposite IP Trunk nodes. The Gatekeeper cannot be used for IP Trunk destinations symmetrically configured to enable QoS fallback to PSTN.
- An IP Trunk node configured in a Communication Server 1000 system with an IP Peer node does not support the Direct Media Path feature of IP Peer Networking. All IP Trunk calls that originate or terminate at a network location that requires QoS fallback to PSTN must have a tandem media path connection through the Communication Server 1000 IP Peer node. The tandem media path can occasionally cause voice quality degradation due to multiple transcoding and higher end-to-end latency of the voice conversation.


For more information, see *IP Trunk Fundamentals (NN43001-563)* () and *Basic Network Feature Fundamentals (NN43001-579)* ().

Alternate circuit:switched routing

The following scenario describes alternate circuit:switched routing when there is an IP network outage.


An IP network outage occurs at Site B.

Figure 11
IP network outage at Site B

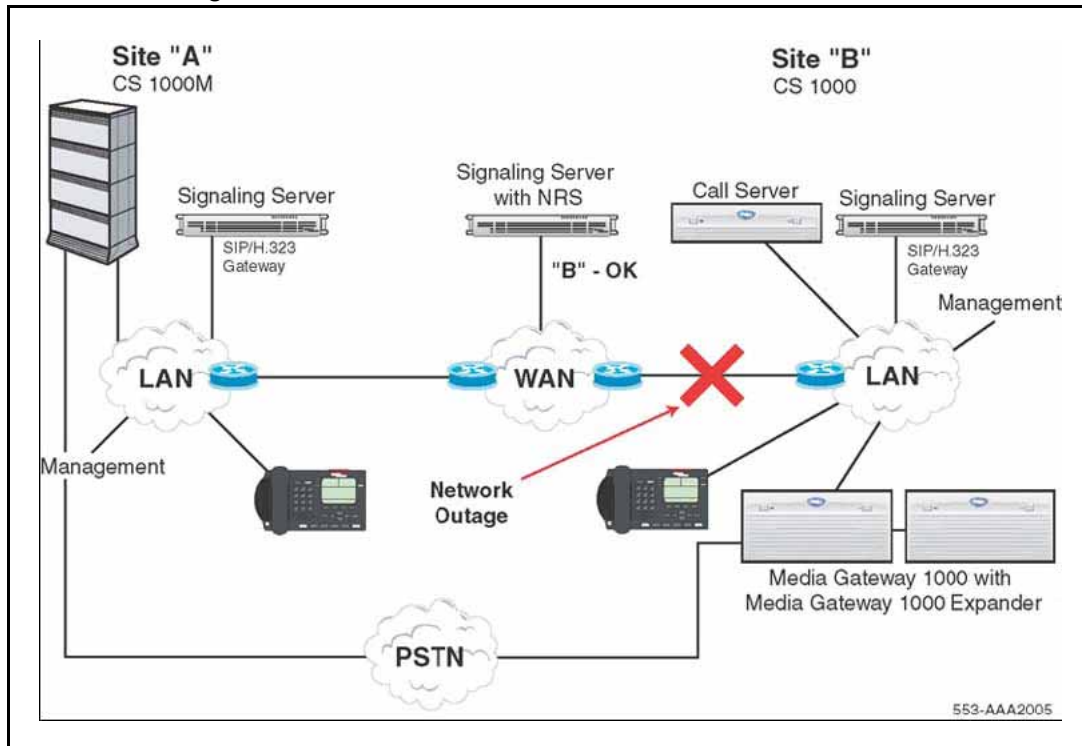


The registration of Site B times out at the NRS; the status updates.

Figure 12
Registration at Site B times out

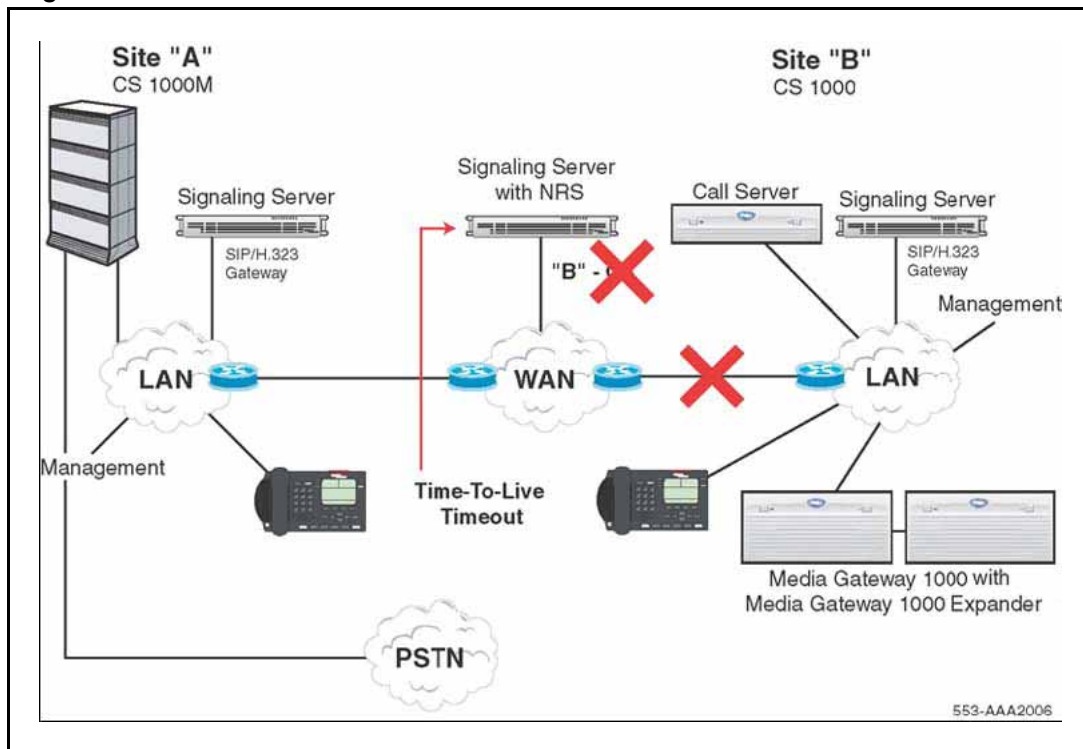

User A on Call Server A dials the DN of User B on Call Server B. Call Server A collects the dialed digits through the Terminal Proxy Server (TPS) on the Signaling Server.


Figure 13
User A dials User B

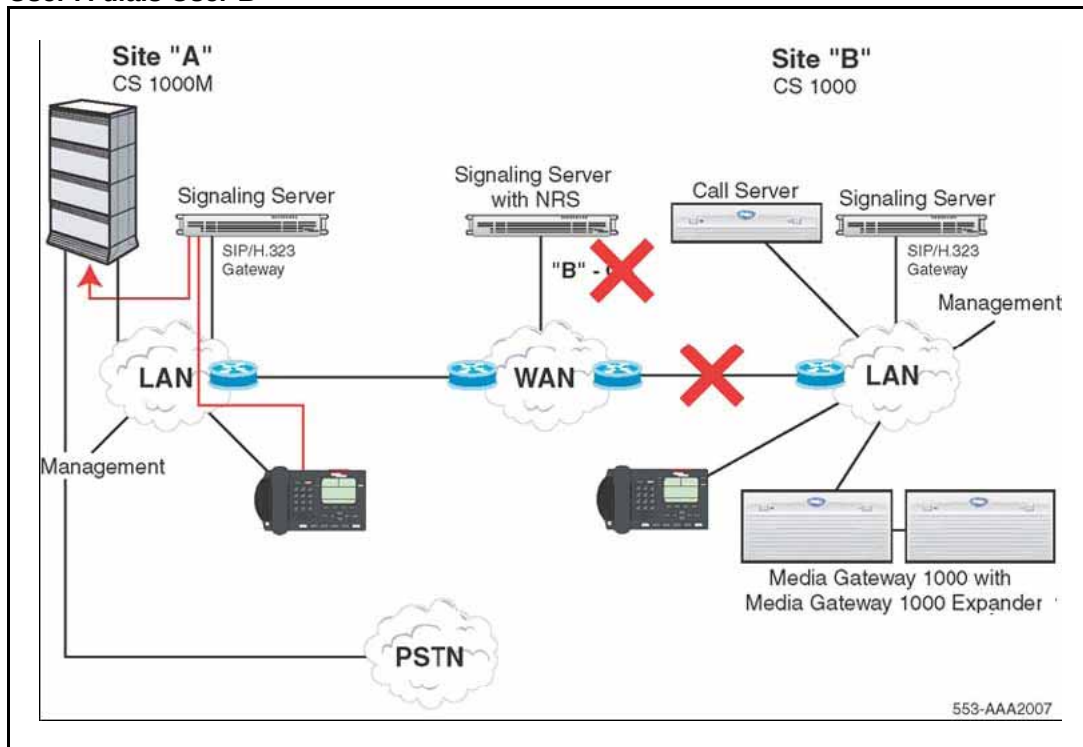

Call Server A determines that the DN is at another site. Call Server A selects the codec list, allocates bandwidth, and routes the call to the IP network, using a virtual trunk and the SIP/H.323 Gateway.


To select the virtual trunk to use for routing, Call Server A examines the number dialed and uses various trunk routing and signaling features (for example, ESN and MCDN).

Figure 14
Call Server A routes the call to the IP network

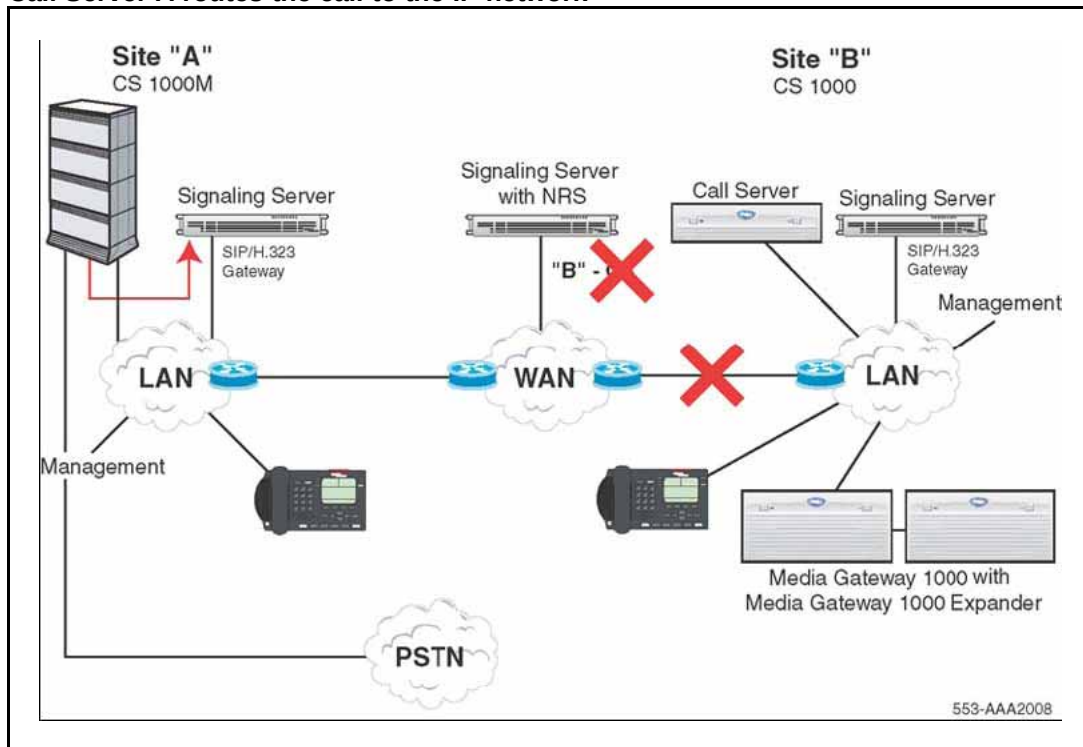


SIP/H.323 Gateway A asks the NRS to search for a dialed DN in the database (for example, within the appropriate CDP domain). The NRS replies that no SIP/H.323 Gateways are available for the dialed number.

Figure 15
No SIP/H.323 Gateways are available for the dialed DN

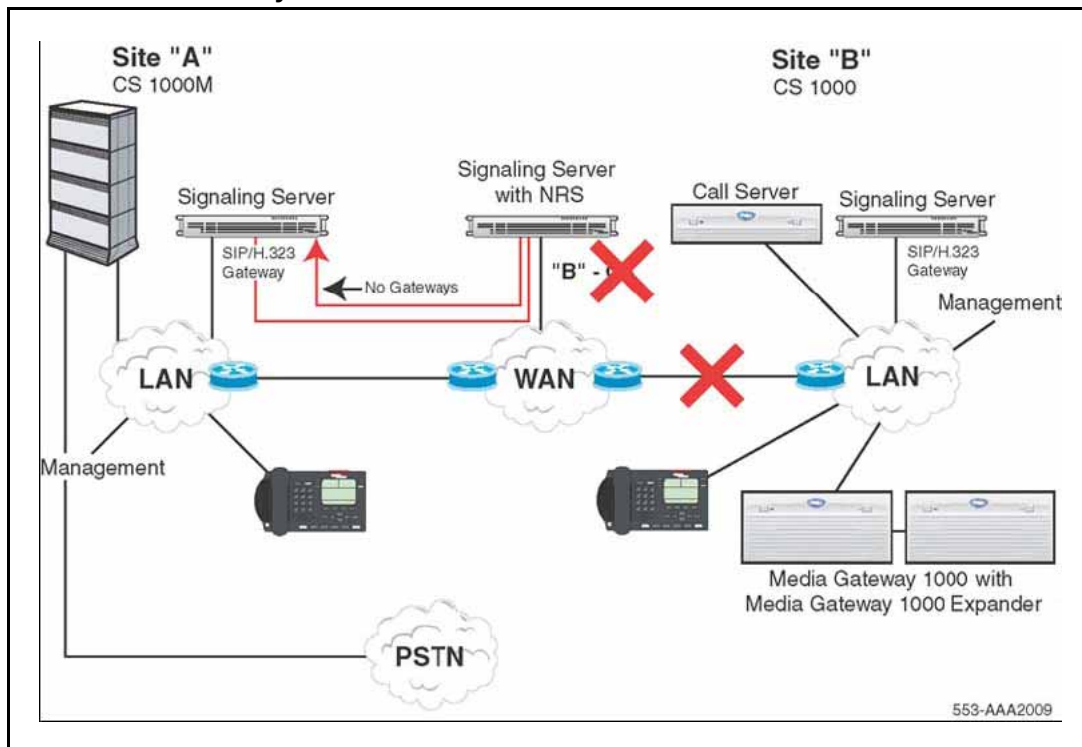


SIP/H.323 Gateway A replies to Call Server A with a message that all IP trunks are busy for the dialed DN.

Figure 16
SIP/H.323 Gateway A replies to Call Server A

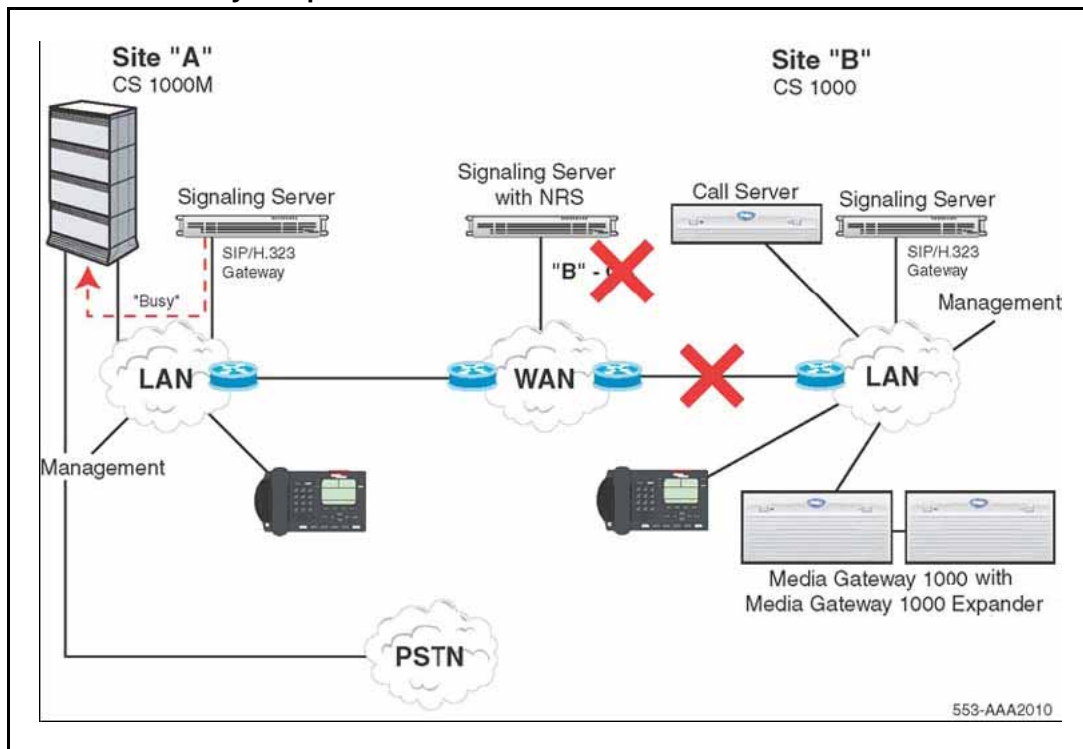


Call Server A chooses the next route in the Route List Data Block. The next route is a local PSTN trunk route. Call Server A allocates a Voice Gateway Media Card and PRI channel. Digit manipulation is applied to the route using the local PSTN. A successful call is made.

Figure 17
Call Server A chooses the next route in the Route List Data Block

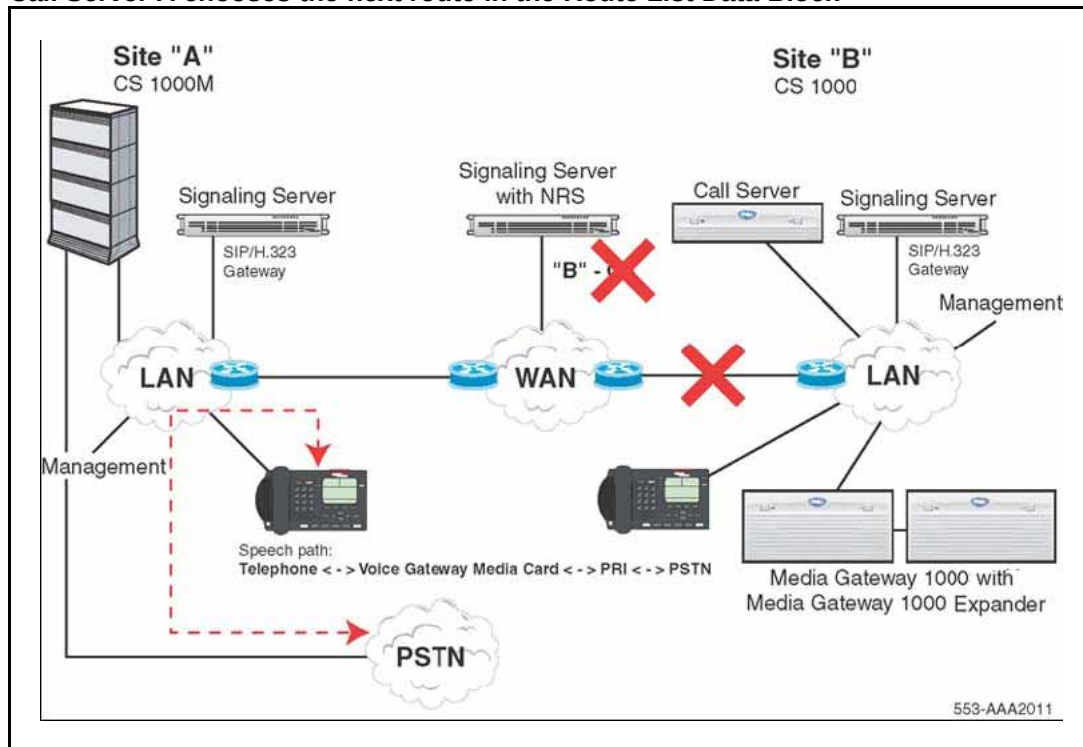

The call is routed across PSTN and enables the users to talk to each other. The call is terminated over PSTN to Site B.

Figure 18
Call is terminated over PSTN

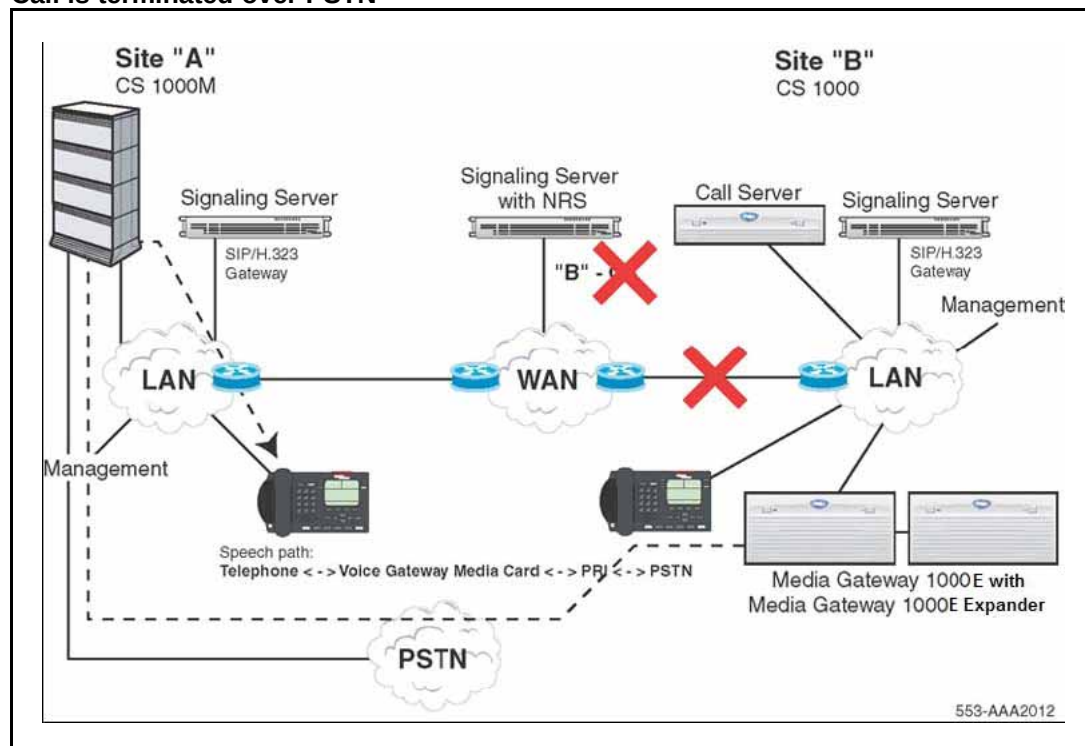

Bandwidth Management

This section describes how the Bandwidth Management feature works, and is useful when considering how to engineer a network of Call Servers.

VoIP Bandwidth Management zones

Bandwidth Management zones divide IP Phones and Voice Gateway Media Cards into logical groups (zones) to determine codec selection and Bandwidth Management. Zones are configured after the QoS:managed IP network has been designed.

As calls are made, the Call Server software chooses a codec to be used for the call based on the zone configuration (interzone or intrazone). The software also tracks bandwidth usage within each zone and between zones. When making an interzone call, the codec is selected according to interzone policy. This policy is a configurable value and can be configured to BQ or BB.

Each IP Phone and Voice Gateway Media Card port is assigned a zone number in which it resides. Place all IP Phones and Voice Gateway Media Cards at a site in the same zone (for example, set up IP Phones and Voice Gateway Media Cards at the same branch office in the same Media Gateway 1000B [MG 1000B] zone).

Virtual Trunk routes also allow configuration of a zone. A single Call Server considers calls sent from a Virtual Trunk as terminated on that Virtual Trunk. Therefore, Virtual Trunks should not be in the same zones as any IP Phones or Voice Gateway Media Cards.

Place all virtual trunk routes in the same zone for all main office and MG 1000B systems. Virtual trunk zones are not for Bandwidth Management except when they connect to a third:party gateway. Configure virtual trunk intrazone and interzone policy to Best Quality (BQ) and intrazone and interzone bandwidth to the maximum value of 1 Gbit/s (1 000 000 kbit/s). Bandwidth is already managed within the IP Phone zone.

Bandwidth management zones can be network-wide but this is dependent on your VPNI setting and zone number. If the VPNI setting and zone number match on the originating system and terminating system the call servers will treat the call as INTRAZONE, even though its traversing between those two systems. The following table captures the different cases of VPNI settings and zone numbering.

Originating VPNI	Originating Zone	Terminating VPNI	Terminating Zone	Choose policy
1	100	1	100	INTRAZONE
1	100	1	150	INTERZONE
1	100	5	100	INTERZONE
1	100	5	200	INTERZONE

MG 1000B zones should be configured on the MG 1000B and main office systems. The MG 1000B zones only contain equipment located at that branch office. The information configured for the zone should be identical in both the main and MG 1000B configuration. Main office Zone information does not have to be entered into all MG 1000Bs.

Zone properties are defined in LD 117. A maximum of 256 zones can be configured. The systems use the zones for Bandwidth Management. New calls are blocked when the bandwidth limit is reached.

Each Zone includes the following parameters:

- IntraZoneBandwidth which is defined as the total bandwidth available for intrazone calls
- IntraZoneStrategy which is defined as the preferred policy for the choice of codec for intrazone calls (preserve best quality or best bandwidth)
- InterZoneBandwidth which is defined as the total bandwidth available for interzone calls

- InterZoneStrategy which is defined as the preferred strategy for the choice of codec for interzone calls
- ZoneIntent which determines whether the Zone is part of the main office, a branch office (Media Gateway 1000B [MG 1000B]), or a Virtual Trunk.
- ZoneResourceType which is either shared or private. Resources in private zones are accessible to users in the same Zone. This allows resources, such as DSPs, to be reserved for users in the private Zone.

For more information about Bandwidth Management Zone commands, see [Table 48 "LD 117 – Configure Bandwidth Management zone" \(page 246\)](#).

The intrazone and interzone bandwidth is entered in kbit/s (for example, 2.7 Mbit/s equals 2700 kbit/s). Each bandwidth zone must have the intrazone and interzone bandwidth values entered.

Zone 0 operates as a default zone when there are no IP voice zones configured in LD 117. Zone 0 can then be configured as a default zone for ITG Physical TNs (IPTN) in LD 14 and for virtual line in LD 11. However, if additional zones are required by an IP Phone or IPTN, zone 0 must be configured first

ATTENTION

When you move an IP Phone, the system administrator checks and changes, if necessary, the zone assignment of the telephone in LD 11. See *Software Input Output Reference — Administration (NN43001-611)* ().



CAUTION

Zone 0 must be configured in LD 117 before other zones are configured or all calls associated with Zone 0 are blocked.

Do not configure endpoints in bandwidth Zone 0 if you plan to use Network Bandwidth Management. Configure Zone 0, but do not use it. Ensure that no endpoints (for example, IP Phones, VGWs, or virtual trunks) exist in Zone 0.

**CAUTION**

It is possible that the Bandwidth Management zone is already provisioned for IP Phones, Virtual Trunks, and/or VGW for your network even though they do not exist in LD 117. This can occur when upgrading from a release prior to version 4.5 to a new release greater than version 4.5. New installations of Communication Server 1000 release 4.5 can catch and prevent the above scenario as the Bandwidth Management feature is enhanced. It is still mandatory to configure all zones (once only) that are used for upgrades to release 4.5 and higher. Release 4.5 and higher upgrades convert the old database to a new release database but do not create non-existent zones. If the zones are not configured, using non-existent zones in call processing can result in blocked calls.

Relationship between zones and WLAN sets

The existing Communication Server 1000 software bandwidth management mechanism, using bandwidth zones, applies to the handsets in the same manner as it does for IP Phones.

For more information see, *WLAN IP Telephony Installation and Commissioning* (NN43001:504)

Interzone versus Intrazone

For Bandwidth Management, a network of Call Servers is divided into zones, typically one Zone for each Call Server. Calls between zones are interzone calls and calls within a Zone are intrazone calls. Typically, intrazone calls travel over LANs on which bandwidth is widely available. Conversely, interzone calls travel over WANs on which bandwidth can be limited and expensive. Distinguish between intrazone and interzone VoIP calls for increased control over VoIP traffic.

The following call scenarios describe how each call type works.

Intrazone call An intrazone call works as follows:

- An intrazone call is made between two endpoints on the same Call Server.
- The intrazone treatment is consulted to determine whether it is Best Bandwidth or Best Quality.
- Based on the intrazone treatment, the correct codec is selected.
- The intrazone bandwidth table is also consulted to determine if there is enough intrazone bandwidth to support the call. If there is not enough bandwidth, the call is blocked.

Interzone call An interzone call works as follows:

- An interzone call is made between two Call Servers.
- An interzone call is made between an endpoint in one Zone to another endpoint in a different Zone. The Zone of the endpoints are compared to the Virtual Trunk Zone as the two zones are different, the call is an interzone call.
- The interzone treatment is consulted to determine whether it is Best Bandwidth or Best Quality.
- Based on the interzone treatment, the correct codec list is selected for the call setup. For more information about codec selection, see [“Codec selection” \(page 58\)](#).
- The interzone bandwidth table and the virtual trunk bandwidth limit are also consulted to determine if there is enough intrazone bandwidth to support the call. If there is not enough bandwidth, the call is blocked, or alternate treatment is provided.

Nodal Bandwidth Management

Bandwidth Management is controlled independently on each Call Server in the network. Each Call Server acts independently of other Call Servers in the network when calculating bandwidth used, and when blocking or rerouting calls. Often referred to as nodal Bandwidth Management, each node, or Call Server, independently controls the Bandwidth Management. Therefore, the parameters used in configuring Bandwidth Management must be configured on each Call Server.

The Bandwidth Management at the branch office is controlled by the associated main office. For the main office to keep track of the bandwidth going to and from the branch office, calls must tandem through the main office Call Server. The signaling for the call goes through the main office, but the media path is not direct between endpoints.

VPNI and Zone numbers

Network Bandwidth Zone

For Network Bandwidth Management to work correctly in a Communication Server 1000 network, each Call Server must be configured with a unique Network Bandwidth Zone. You can choose from 255 (1 to 255) Zone numbers in a Communication Server 1000 Call Server. To allow the network to expand beyond the 255 zones, the Virtual Private Network Identifier (VPNI) is combined with the Zone number to form a unique Network Bandwidth Zone. The Communication Server 1000 system allows up to 16 383 VPNI, which result in a total of 4 152 165 unique Network Bandwidth Zones. A Call Server typically has one VPNI and one Zone number for IP Phones and IP gateways. For example, Call Server A is provisioned with VPNI 53 and Zone 21. Each IP Phone has two zone

properties—configured zone and current zone. Configured zone is the zone chosen by the administrator and current zone identifies who the zone IP Phone currently belongs to based on the VO login. For more information, see [“Bandwidth Management support for Network Wide Virtual Office” \(page 277\)](#).

ATTENTION

Zone 0 is not supported by most of the Network Bandwidth Management features.

VPNI and Zone numbering rules

If bandwidth zone numbers are duplicated on different call servers with the same VPNI then the calls will receive INTRAZONE call treatment. If you need to ensure INTERZONE call treatment then you need ensure bandwidth zone numbers are not duplicated.

Branch office Call Servers associated with a main office must have the same VPNI number as the main office for correct operation of the Network Bandwidth Management feature.

For a branch office associated with a main office, the branch office Zone number must be different than the main office Zone number. For example, MO VPNI=22, MO Zone=33, BO VPNI=22, BO Zone=34. The branch office Zone number is provisioned at both the branch office and the main office; configured in LD 117 on the main office and MG 1000B.

The VPNI is also used to identify a customer network. For example, the same VPNI is required for Bandwidth Management support for the Network Wide Virtual Office and Alternative Call Routing features, and Geographic Redundancy.

The provisioned Zone number is also used for other features in the Communication Server 1000 network. For more information, see *Emergency Services Access Fundamentals (NN43001-613)* ().

Disabling Bandwidth Management

Bandwidth Management may be disabled by provisioning the VPNI to 0 in LD 15. The local Bandwidth Management feature will continue the codec calculation process and call blocking, therefore; you must configure the Bandwidth zones with the maximum available bandwidth.

Provision the Intrazone bandwidth limit and Interzone bandwidth to the maximum (1 Gbit/s or 1 000 000 kbit/s) in LD 117. By default, the Virtual Trunk is configured with the maximum bandwidth limit.

Nortel recommends that you do not mix enabled and disabled Bandwidth Management zones in the network.

Relationship between zones and subnets

IP Phones and Voice Gateway Media Cards gateway ports are assigned to zones based on the Bandwidth Management requirements of the particular installation. Devices in different subnets must traverse a router to communicate and can reside on different ends of a WAN facility. When IP Phones and gateway ports are in different subnets, the network facilities between them must be examined to see if it warrants placing the separated devices in different zones.

It is not necessary to always assign different zones. For instance, there can be different subnets within a LAN interconnected by routers with sufficient bandwidth. The IP Phones, and gateway channels spread across them, could all reside in a single zone. However, if there is a WAN facility with limited bandwidth exists between two subnets, the devices on the opposite ends should be placed in different zones so the bandwidth across the WAN can be managed.

For remote users, such as telecommuters, Bandwidth Management is not normally a consideration because only one IP Phone is present at the remote location. It can be convenient to allocate zones for users with similar connection speeds. In that case, set both the interzone and intrazone codec to Best Bandwidth.

Adaptive Network Bandwidth Management

The Adaptive Network Bandwidth Management feature enhances the performance of VoIP networks based on real-time interaction. It provides the means to automatically adjust bandwidth limits and take corrective action in response to QoS feedback. The dynamic bandwidth adjustment maintains a high level of voice quality during network degradation.

The Adaptive Network Bandwidth Management feature dynamically adapts to QoS in the network and reduces the bandwidth available for interzone calls if QoS degrades. Typically, each Call Server in the network has a Zone assigned to it. The Call Server keeps track of the bandwidth being used between its own Zone and zones that belong to other Call Servers. If the QoS degrades between the Call Server Zone and a particular Zone that belongs to another Call Server, the available bandwidth reduces automatically between those two zones. When the QoS between the two zones improves, then the bandwidth limit returns to normal.

When an IP Phone encounters degradation of the network, it informs the Call Server through various QoS alarms (packet loss, jitter, delay; and, for phase 2 IP Phones, R value). Depending upon the rate of the incoming alarms and the value of the alarms, the Call Server reduces the available bandwidth to make new calls. The Call Server lowers, limits, or both the number of new calls allowed, based on the available bandwidth to prevent excessive calls on a network with limited bandwidth (resulting in poor voice

quality). After the adjusted (lowered) bandwidth reaches its full capacity, new calls are either routed to an alternate route (if available), using Network Alternate Routing Service (NARS) or the Alternative Routing for the Network Bandwidth Management feature, or new calls are blocked. The Call Server continues to monitor the network throughout the network degradation period. When the degradation is removed or the performance of the network improves, the allowable bandwidth returns to provisioned levels and the Call Server gradually starts to allow new calls.

Essentially, Adaptive Network Bandwidth Management provides a fallback to PSTN on QoS degradation for new calls. As a result, bandwidth is managed and quality measured between all zones across the entire network, and corrective action taken when necessary. Due to the real-time interaction with the network, less maintenance is required for the network as the system reacts automatically to network conditions.

With Adaptive Network Bandwidth Management, it is not necessary to provision bandwidth parameters between every Zone in the network. Rather, the Call Server automatically learns of new zones in the network and applies Adaptive Network Bandwidth Management to these new zones as required. As new Call Servers are added to the network, it is not necessary to reprovision all the other Call Servers on the network. Conversely, when Call Servers are removed from the network, the remaining Call Servers age out the old Call Server information and provide only up to date bandwidth information.

The Adaptive Network Bandwidth Management feature operates between all IP Peer Communication Server 1000 systems, including the Media Gateway 1000B and Survivable Remote Gateway 50.

Call scenario


A call is requested from a telephone in VPNI 1/Zone 2 on Call Server A to a telephone in VPNI 3/Zone 3 on Call Server B. Both zones have Adaptive Network Bandwidth Management enabled.

1. Call Server A contacts the Network Redirect Server to obtain the address of Call Server B.
2. Call Server A sends a call setup message to Call Server B, identifying the calling telephone's VPNI and Zone.
3. Call Server B determines if there is sufficient bandwidth for the call, and sends back the VPNI and Zone of the called telephone.

4. Call Server A checks its bandwidth table to determine if there is sufficient bandwidth available for the call from Call Server A to Call Server B.
5. If Call Server A determines there is enough bandwidth available, the call is established; otherwise, alternate treatment is provided (block or reroute the call).

Both Call Server A and Call Server B must consult their own bandwidth tables to determine if there is enough bandwidth for the call to proceed.

Figure 19
Call Progress with Adaptive Network Bandwidth Management

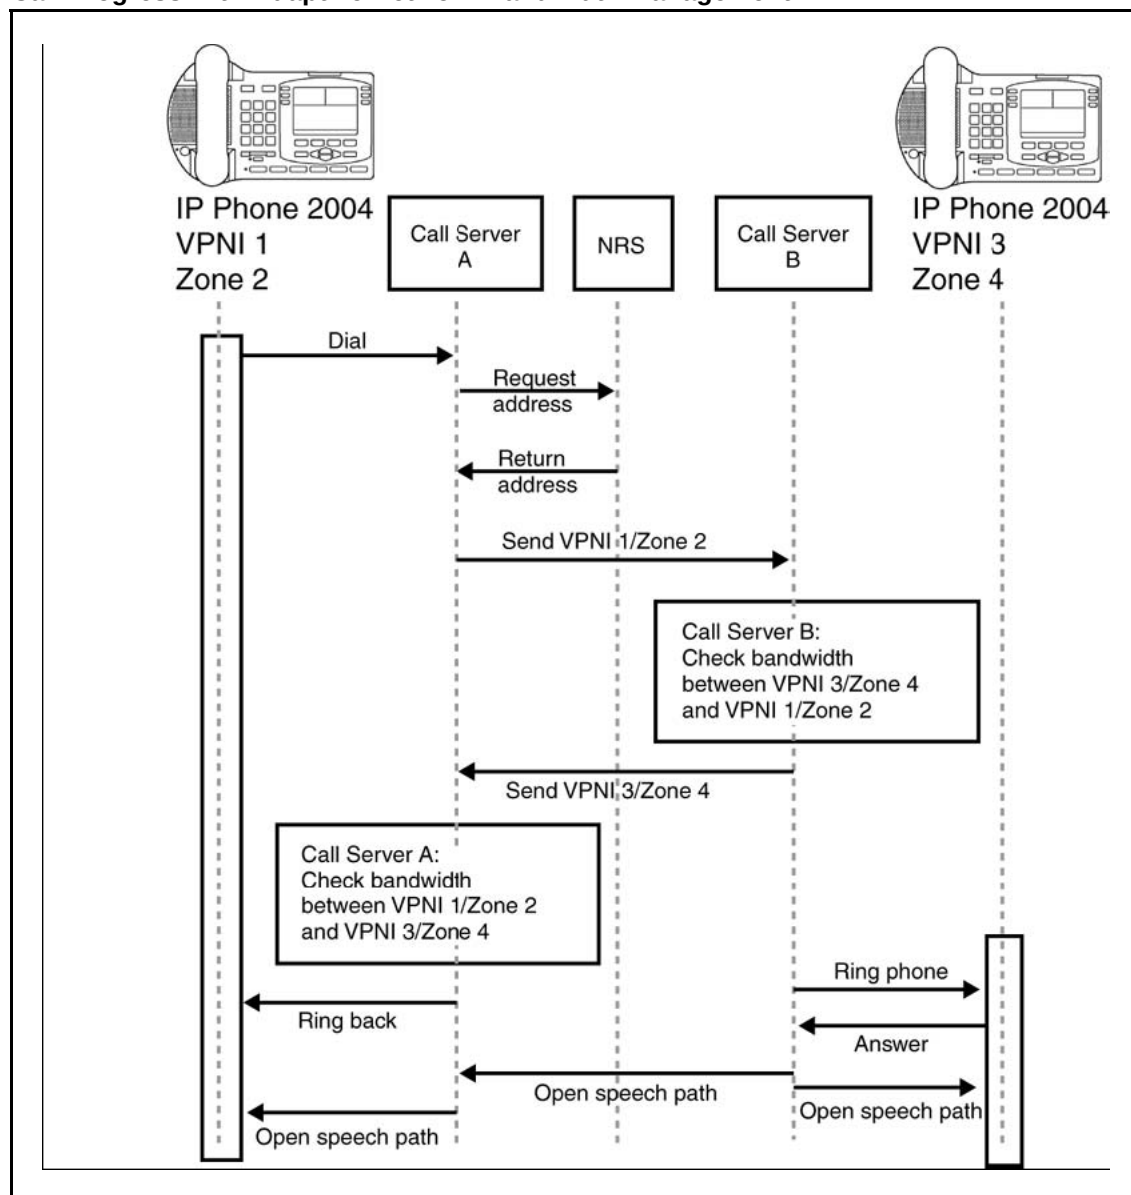

Zone Bandwidth Management and Adaptive Network Bandwidth Management


Using Element Manager or the command line interface (CLI), previously configured zones (except Zone 0) can have the Adaptive Network Bandwidth Management feature turned on or off. After turned on, alarm threshold levels and the QoS coefficients can be adjusted from the default values. Adaptive Network Bandwidth Management cannot be enabled for Zone 0.

When Adaptive Network Bandwidth Management is enabled for a particular Zone on the Call Server, the Zone appears in the Zone table. The Zone table can be displayed using Element Manager or LD 117. When a call is made from the configured Zone to another Zone, the bandwidth used appears in the Zone table.

When a call is made from a Zone with Adaptive Network Bandwidth Management enabled to a third-party gateway with no Zone, the Zone of the Virtual Trunk (VTRK) is used and appears in the Zone table.

Figure 20 "Adaptive Network Bandwidth Management graph" (page 79) depicts an example of bandwidth changes.

Figure 20
Adaptive Network Bandwidth Management graph

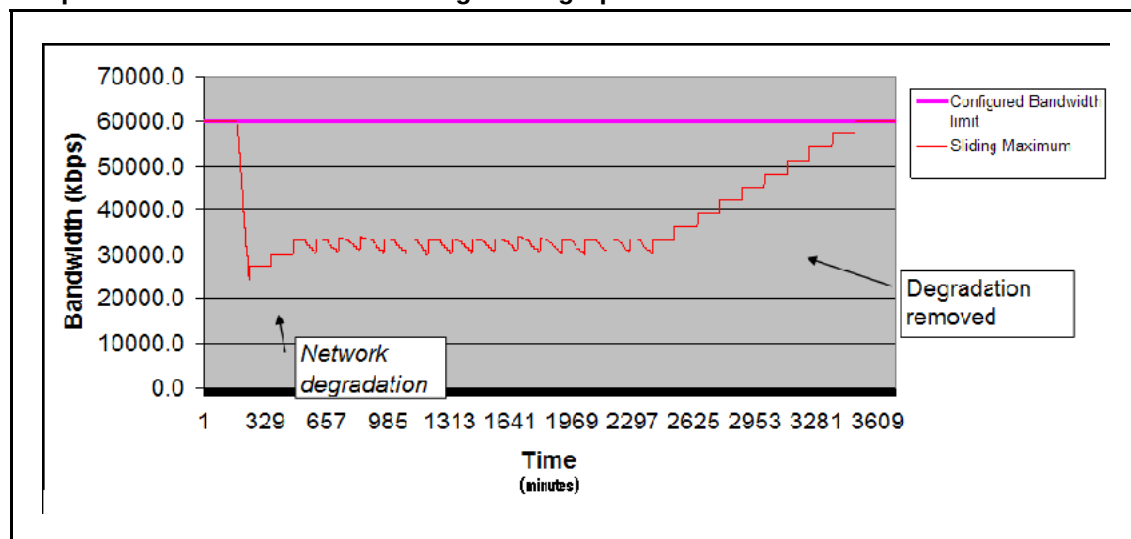

When a Call Server receives a QoS alarm, the two zones that originated the alarm are determined. Using this information, the Call Server reduces the bandwidth limit between the two zones. This Zone-to:Zone bandwidth limit (in effect at any particular time) is known as the Sliding Maximum Bandwidth Limit and is a percentage of the Configured Interzone bandwidth limit. The Sliding Maximum value is displayed using the prt

interzone command. The QoS Factor % value is also displayed as the percentage of the Sliding Maximum versus the configured allowable bandwidth. The Call Server checks the Network Bandwidth Zone management tables for the originating and terminating zones of the new call to determine the available bandwidth for the call.

For more information about alarms, see *Software Input Output Reference — System Messages (NN43001-712)* () .

When feedback indicates a significant QoS change in a Zone, the Call Server reduces the available bandwidth (Sliding Maximum Bandwidth Limit) in the Zone until the QoS reaches a satisfactory level. After satisfactory QoS is reached, the bandwidth is slowly raised until either the full bandwidth is available or until QoS degrades again. Bandwidth changes can be configured to be gradual (to reduce rapid swings and variations) or rapid.

Multiple Appearance Directory Numbers (MADN) can exist on different zones. Calls to an MADN are handled the same as other IP Phone calls, and are subject to the same bandwidth limitations.

SNMP alarms monitor the system. When the bandwidth limit between zones is reduced below configured levels, an alarm is raised. A Warning alarm and an Unacceptable alarm, each corresponding to a drop below a configured threshold, are used. When the bandwidth returns to normal, the alarm is cleared. If the bandwidth limit reaches zero, an additional Unacceptable alarm is raised. These alarms allow the system administrator to monitor the system and take corrective action when required.

Adaptive Network Bandwidth Management configuration parameters

Packet Loss (pl), Jitter (j) and Delay (d) measurements, along with the R factor (r) in IP Phone 200x Phase II telephones, are used to calculate the QoS level for the zones. The coefficients for these QoS measurements — Packet Loss (Cpl), jitter (Cj), delay (Cd), and the R factor (Cr) — can be configured and are used to calculate the rate of bandwidth change. Increasing the coefficients from their default values causes the Sliding Maximum to decrease faster in response to the specific QoS alarm.

The QoS coefficient (CQoS) can be varied from its default value. Increasing this value causes the Sliding Maximum to change more rapidly in response to QoS alarms. Making this value too large will result in loss of overall bandwidth. The following tables illustrate the effect of the default and a high CQoS coefficient.

Figure 21
Effect of the default CQoS coefficient


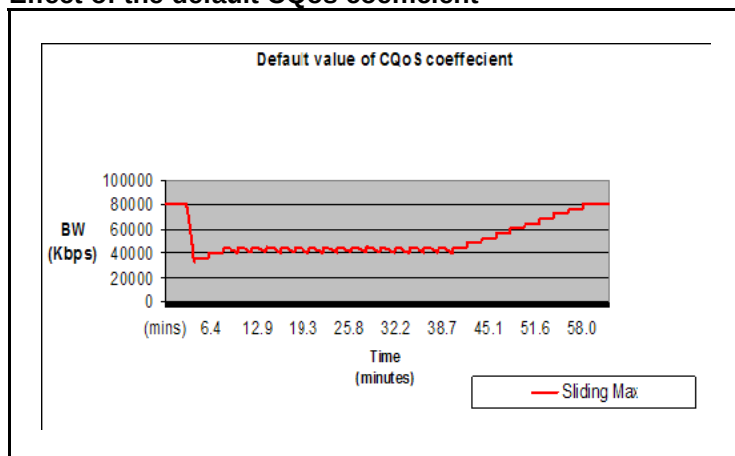


Figure 22
Effect of a high CQoS coefficient

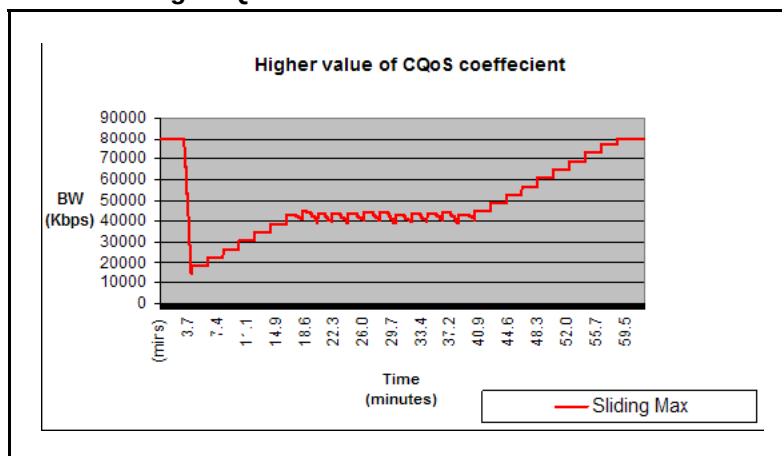

Other configurable coefficients used in the calculation are the QoS Coefficient (CQoS), QoS Response Time Increase (ZQRT), and QoS Response Time Interval (ZQRTI). The coefficients CQoS, Cr, Cd, Cpl, and Cj control the rate of bandwidth decrease, while ZQRT and ZQRTI control the rate of bandwidth increase.

The Call Admission Control Validity Time Interval (CACVT) is used to control the length of time that records from a Call Server are saved in the Bandwidth Management table. If no calls occur between two Call Servers within the configured time, the Call Server is removed from the table. For example, if Call Server A has Call Server B in the table, and no call is placed between A and B for the CACVT time, then Call Server A removes all Call Server B records in the table.

Feature interactions Virtual Office IP Phones are not subject to bandwidth limitations. They may not have the correct zone information configured. They can also be controlled by a Call Server that is not

responsible for the particular zone. Thus, Bandwidth Management is not possible for these phones.

Feature packaging

The Adaptive Network Bandwidth Management feature requires the following packages.

- QoS Enhanced Reporting (PVQM) package 401
- Call Admission Control (CAC) package 407

ATTENTION

Package 401, QoS Enhanced Reporting (PVQM), is required if the R value from the Phase II IP Phones is reported and used to calculate the QoS level for the zones.

VoIP network voice engineering considerations

It may be necessary to calculate CCS between zones to determine if the network can support the required call volume.

For more information, see the following:

- [“Network Bandwidth Management” \(page 21\)](#)
- *Communication Server 1000M and Meridian 1 Large System Planning and Engineering (NN43021-220) ()*

Determine interzone and intrazone bandwidth values

The Call Server uses the values shown in [Table 5 "Bandwidth estimates used by Call Admission Control" \(page 83\)](#) when calculating the bandwidth each call uses in a zone. The Call Server uses the values in the TLAN Bandwidth columns and subtracts the value from the available zone bandwidth to determine if a zone has sufficient bandwidth for the call.

ATTENTION

Do not change, load, or transfer codec lists onto a node during active call processing. Complete changes to codec lists during scheduled maintenance windows when the system is idle.

Call Admission Control (CAC) mechanisms on the Call Server assume average bandwidth utilization for Voice Activity Detection (VAD) codecs.

Table 5
Bandwidth estimates used by Call Admission Control

				TLAN Bandwidth (half:duplex, payload/RTP/UDP/IP/ Ethernet)		Base WAN Bandwidth (full:duplex, payload/RTP/UDP/IP)	
CODEC type	Packet duration (ms)	Voice payload (bytes)	VAD	Peak bandwidth (kbit/s)	Average bandwidth (kbit/s)	Peak bandwidth (kbit/s)	Average bandwidth (kbit/s)
G.711 (64 kbit/s)	10	80	Off	252.80	252.80	96.00	96.00
	20	160	Off	190.40	190.40	80.00	80.00
	30	240	Off	169.60	169.60	74.67	74.67
G.729A (8 kbit/s)	10	10	Off	140.80	140.80	40.00	40.00
	20	20	Off	78.40	78.40	24.00	24.00
	30	30	Off	57.60	57.60	18.67	18.67
	40	40	Off	47.20	47.20	16.00	16.00
	50	50	Off	40.96	40.96	14.40	14.40
G.729AB (8 kbit/s)	10	10	On	140.80	84.48	40.00	24.00
	20	20	On	78.40	47.04	24.00	14.40
	30	30	On	57.60	34.56	18.67	11.20
	40	40	On	47.20	28.32	16.00	9.60
	50	50	On	40.96	24.58	14.40	8.64
G.723.1 (6.3 kbit/s)	30	24	Off	54.40	54.40	17.07	17.07
G.723.1 (5.3 kbit/s)	30	24	Off	54.40	54.40	17.07	17.07

ATTENTION

Secure Real:Time Transport Protocol (SRTP) adds 10 extra bytes per media packet. This is not significant in the calculation of bandwidth.

The TLAN Bandwidth values contain the total IP and Ethernet packet overhead of 78 bytes, including the 8:byte preamble and minimum 12:byte inter:packet gap. Ensure to include the TLAN Bandwidth values in your bandwidth calculations to give a true indication of the bandwidth used. The Call Server assumes that all calls are made over a half:duplex Ethernet network.

The Call Server is unaware of the particulars of the WAN facility and always uses the values shown in the TLAN Bandwidth columns.

The columns labeled Base WAN Bandwidth provide the data for the payload plus IP overhead without the Ethernet interface overhead. This data provides the basis for any WAN bandwidth calculations. The overhead associated with the particular WAN facility (for example, Frame Relay) is added to the base value to determine the total bandwidth used. The values shown are for a half:duplex link, so if the WAN facility is half:duplex, the values should be doubled. This should be considered when entering the intrazone and interzone bandwidth values for a zone in LD 117.

The IP/UDP/RTP header size is 40 bytes.

Calculate the bandwidth amount

Calculate the bandwidth amount to enter into the bandwidth zone table as described below.

Calculating the bandwidth amount for the bandwidth zone table

Step	Action
1	Determine the number of calls that the network can support for the chosen codec.
2	Multiply the half:duplex Ethernet bandwidth by the value determined in step 1 .
3	Enter the value determined in step 2 in the Call Server bandwidth zone table.
--End--	

Ensure that the efficiency of the network transporting VoIP is taken into account when you enter the amount of zone bandwidth available. For more information, see the efficiency example in [“Bandwidth and data network switch efficiency”](#) (page 112).

Determine intrazone bandwidth

Use the following steps to determine intrazone bandwidth.

ATTENTION

Determination of intrazone bandwidth is not normally required as a large amount of bandwidth is normally available within a local network, so an arbitrarily large value can be entered for the interzone available bandwidth.

If required, interzone bandwidth is calculated using the same procedure as for intrazone bandwidth.

Determining intrazone bandwidth

Step	Action
1	Determine the VoIP codec and packet duration to use for interzone calls.
2	Determine the network duplex, Layer 2 protocol, and Layer 2 protocol header size between zones.
3	Determine the total available bandwidth for voice on the data network.
4	Calculate the per:call bandwidth to use for the codec (from step 1) over the Layer 2 network (from step 2). Per:call bandwidth for a particular Layer 2 network: $(1000 / \text{Packet Duration [ms]}) \times (\text{Voice payload Bytes}) + \text{IP / UDP / RTP Size (Bytes)} + \text{Layer two Protocol Header Size [Bytes]} \times 8$ Alternatively, see “VoIP Bandwidth Demand Calculator” (page 140) .
5	Calculate the number of calls the network can handle, by dividing the total bandwidth available for voice over the Layer 2 network (from step 3) by the real per:call bandwidth use for the codec (from step 4).
6	Determine the half:duplex Ethernet bandwidth for one call for the codec (from step 1) to use. See Table 5 "Bandwidth estimates used by Call Admission Control" (page 83).
7	Calculate the bandwidth value to enter into the Call Server Bandwidth Management zone, by multiplying the half:duplex Ethernet bandwidth (from step 6) by the number of calls the network can handle.
--End--	

Determine interzone bandwidth The following example is based on Bandwidth Management of G.729A interzone traffic over a 512 kbit/s Frame Relay network.

Example of determining interzone bandwidth calculation

Step	Action
1	Codec = G.729A, 20ms.
2	Network type = Full duplex Frame Relay with 6:byte header.
3	Total bandwidth available = 512 kbit/s * 0.9 = 460.8 kbit/s . 0.9 is an estimate of the efficiency of a random Frame Relay router. The actual efficiency may vary. See calculating data network switch efficiency in "Bandwidth and data network switch efficiency" (page 112) .
4	G.729A per:call bandwidth on a full duplex frame relay network = $(1000 / 20) * (20 + 40 + 6) * 8 = 26400 \text{ bps} = 26.4 \text{ kbit/s}$.
5	Total calls possible = 460.8 kbit/s / 26.4 kbit/s = 17 calls.
6	G.729A half:duplex Ethernet per:call bandwidth = 78.4 kbit/s.
7	Call Server bandwidth value = 78.4 kbit/s * 17 calls = 1333 kbit/s. Enter 1333 kbit/s in the Call Server.
--End--	

ATTENTION

The use of IP Call Recording doubles the bandwidth requirements of the call. For remote users connecting to the IP Call Recorder server through a WAN connection, the impact of the bandwidth usage to the QoS should be considered. In this case, the IP Call Recorder server must provide the QoS parameters when instructing the IP Phone to echo the voice data. For more information about the Feature Interactions for IP Call Recording, see *Automatic Call Distribution Fundamentals (NN43001-551)* ().

Viewing bandwidth statistics

Use the prt intrazone and prt interzone commands in LD 117 to display the bandwidth statistics in the Call Server. For more information about these commands, see *Software Input Output — Maintenance (NN43001-711)* (). For examples on the output of these commands, see [Figure 23 "Sample output for prt intrazone command" \(page 87\)](#) and [Figure 24 "Sample output for prt interzone command" \(page 87\)](#).

Figure 23
Sample output for prt intrazone command

```
=> prt intrazone
```

Zone	State	Type	Strategy	MO/ BMG/ VTRK	Bandwidth kbps	Usage kbps	Peak %
2	ENL	SHARED	BQ	MO	10000	190	3
44	ENL	SHARED	BQ	BMG	10000	0	1

Number of Zones configured = 2

Figure 24
Sample output for prt interzone command

```
=> prt interzone
```

Near end Zone	VPNI	Far end Zone	VPNI	State	Type	Strategy	MO/ BMG/ VTRK	QoS Factor	Bandwidth Configured kbps	Sliding max kbps	Usage kbps	Peak %	Calls Cph	Alarm Aph
2				ENL	SHARED	BB	MO		10000		78	1		
2	1	33	1	ENL	SHARED	BB	MO	100	10000		78	1	1	0
33				ENL	SHARED	BB	BMG		10000		78	1		
33	1	2	1	ENL	SHARED	BB	BMG	100	10000		78	1	1	0

Number of Zones configured = 1

Note: The Far end and VPNI fields are displayed only when Adaptive Bandwidth Management is enabled in LD 117.

Tandem Bandwidth Management

Bandwidth utilization for the branch office is tracked at the main office and can be displayed in LD 117 using the prt interzone command. To provide the correct bandwidth utilization to the main office Call Server, when a branch office is calling another node in the network, the calls must be tandemmed through the main office Call Server in both the inbound and outbound direction.

If you enter the main office Gateway endpoint identifier in the Tandem Endpoint field for each branch office gateway configured on the NRS, it tandemms only in the outbound direction from each branch office (from branch office to main office).

To tandem calls through the main office in the inbound direction (from main office to branch office), use the dialing plan capabilities of the Communication Server 1000 to first route the call to the main office. The main office appends a prefix to the dialed number and the number is routed to the branch office.

Tandem all branch office calls through the main office, so the main office can monitor the bandwidth used at each branch office.

The Tandem Bandwidth Management feature applies to the branch office and the Adaptive Bandwidth Management feature. Specifically, the feature applies to calls made to and from the branch office from either telephones registered locally at the branch office (digital, analog [500/2500:type] telephones, and IP Phones) or trunks at the branch office to another node in the network. The feature does not apply when you use branch office IP Phones registered with the main office (for example, Normal Mode).

Codec negotiation

Codec refers to the voice coding and compression algorithm used by DSPs. Each codec has different QoS and compression properties.

IP Peer Networking supports the per:call selection of codec standards, based on the type of call (interzone or intrazone). IP Peer Networking supports the following codecs with supported payload sizes (the default value is in bold).

Table 6
Supported codecs

Codec	Payload size
G.711 A/mu:law	10 millisecond (ms), 20 ms , and 30 ms
G.729 A	10 ms, 20 ms , 30 ms, 40 ms, and 50 ms
G.723.1	30 ms , although it can limit the number of DSP channels available
T.38 for fax	Supported for fax calls on gateway channels
G.711 Clear Channel	Supported on the MC32S and DSP d/bs (Mindspeed) and not on the MC32 cards

The G.XXX series of codecs are standards defined by the International Telecommunications Union (ITU).

By default, the G.711 codec must be supported at both ends of a call. Codec configuration is performed for each node and is independent of the signaling gateway (SIP or H.323) that is used on the node. T.38 is the preferred codec type for fax calls over virtual trunks. However, the G.711 Clear Channel codec is used if the far-end does not support the T.38 codec.

If a Communication Server 1000E system is used, the same payload sizes for the same codec type should be configured on all Internet Protocol Media Gateway (IPMG) cabinets in a system; otherwise, Time Division Multiplexing (TDM) to TDM calls between IPMG cabinets are not successful.

If more than one codec is configured, the minimum payload size among the configured codecs is used for the SIP Trunk Gateway codec negotiation.

For more information about the codecs that are supported for IP phones, see *IP Phones Fundamentals (NN43001-368)* () and *Signaling Server IP Line Applications Fundamentals (NN43001-125)*. ().

ATTENTION

Nortel recommends that you configure the same payload size for all codecs in the same node. The payload size on the Communication Server 1000 system must be set to 30 ms to work with the SRG.

Ensure common codecs across the network, especially in tandem calls across different protocols, for example, H.323 tandem to SIP or SIP to H.323. The Session Description Protocol (SDP) transparency helps in this case; however, when you tandem through different trunks over different protocols, codecs must match.

SIP example

If a G.711 20 ms codec and G.729 30 ms codec are configured, then codec negotiation uses the minimum payload size of 20 ms. That is, the G.711 20 ms codec and the G.729 20 ms codec are used. Instead, Nortel recommends that both G.711 and G.729 codecs be configured as 20 ms.

When a G.729 30 ms codec is configured, the G.729 10ms/20ms/30ms codecs are supported.

IP Peer Networking performs codec negotiation by providing a list of codecs that the devices can support. Use Communication Server 1000 Element Manager to configure the list of codec capabilities.

The codec preference sequence sent over SIP/H.323 depends on the bandwidth policy selected for the Virtual Trunk zone and the involved telephones. For Best Quality, the list is sorted from best to worst voice quality. For Best Bandwidth, the list is sorted from best to worst bandwidth usage.

The G.711 codec delivers toll quality audio at 64 kbit/s. The G.711 codec is optimal for speech quality, as it has the smallest delay and is resilient to channel errors. However, the G.711 codec uses the largest bandwidth.

The G.729A codec provides near toll quality voice at a low delay. The G.729A codec and G.729AB codecs use compression at 8 kbit/s.

The G.723.1 codec provides the greatest compression compared to the previously described codecs.

Payload default values need to be changed if the customer wants to communicate with a third:party gateway that does not support the above default payload sizes. Otherwise, IP Peer calls to or from the third:party gateway are not successful.

If the payload sizes are set higher than the default values (for example, to support a third:party gateway), then the local IP calls are affected by higher latency because the codec configuration applies to both IP Peer calls and local IP (IP Line) calls.

If a Communication Server 1000E system is used, the same payload sizes for the same codec type should be configured on all IPMG cabinets in a system. Otherwise, TDM to TDM calls between IPMG cabinets are not successful.

G.711 A:law and mu:law interworking

In case the far end uses a different Pulse Code Modulation (PCM) encoding law for its G.711 codec, systems configured as G.711 A:law also include G.711 mu:law on their codec preferences list. Systems configured as G.711 mu:law include G.711 A:law as their last choice. Therefore, encoding law conversion is performed between systems with different laws.

Bandwidth Management and codecs

Bandwidth Management defines the codecs to use for intrazone calls and interzone calls.

Administrators use Bandwidth management to define codec preferences for IP Phone to IP Phone calls controlled by the same Communication Server 1000 system within the same zone (intrazone calls). Administrators use different codec preferences for calls between an IP Phone on the Communication Server 1000 system to a Virtual Trunk (potentially an IP Phone on another Communication Server 1000 system) or calls to IP Phones in another zone (interzone calls).

For example, you may prefer high quality speech (G.711) over high bandwidth within one system, and lower quality speech (G.729AB) over lower bandwidth to a Virtual Trunk. Such a mechanism can be useful when a system is on the same LAN as the IP Phones it controls, but the other systems are on a different LAN (connected through a WAN).

Usage of bandwidth zones for Virtual Trunks are different than IP Phone bandwidth usage. For Virtual Trunks, a zone number is assigned in the Route Data Block (LD 16). The zone number determines codec selection for interzone and intrazone calls (Best Quality).

Bandwidth usage for Virtual Trunks is accumulated in its zone to block calls that exceed the bandwidth availability in a specific zone. However, the amount of bandwidth required to complete a given call is not known until both call endpoints negotiate which codec to use. The bandwidth used to calculate the usage of a Virtual Trunk call is determined by the preferred codec of the device that connects to the Virtual Trunk. If the device is an IP Phone, the bandwidth calculations use the preferred codec of the IP Phone, based on the codec policy defined for the zones involved (Best Quality). The bandwidth calculations use the preferred codec of the Voice Gateway Media Card for connections between a circuit-switched device (for example, a PRI trunk) and a Virtual Trunk.

Codec selection

For every Virtual Trunk call, a codec must be selected before the media path can be opened. When a call is set up or modified (that is, media redirection), one of two processes occurs:

- The terminating node selects a common codec and sends the selected codec to the originating node.
- The codec selection occurs on both nodes.

Each node has two codec lists: its own list and the far end list. To select the same codec on both nodes, it is essential to use the same codec selection algorithm on both nodes. Before the codec selection occurs, the following conditions are met:

- Each codec list contains more than one payload size for a given codec type (depending on the codec configuration).
- Each codec list is sorted by order of preference (the first codec in the near end list is the near end most preferred codec, the first codec in the far end list is the far end preferred codec).

Codec selection algorithms

When the codec lists meet the above conditions, one of the following codec selection algorithms selects the codec to be used:

- H.323 Master/Slave algorithm
- SIP Offer/Answer model
- Best Bandwidth codec selection algorithm

If a SIP trunk call is between a Communication Server 1000 system and other third:party gateway/SIP clients (for example, MCS 5100), then the codec selection does not guarantee that the same codec is selected for a call from endpoint A to endpoint B and for a call from endpoint B to endpoint A. This different codec selection makes it difficult for Bandwidth Management. However, calls between two Communication Server 1000 systems have the same codec selection decision, regardless of who originated the call.

In the case of a Virtual Trunk call between Nortel and third:party equipment, the H.323 Master/Slave algorithm is used.

The codec selection algorithm proposed by the H.323 standard involves a Master/Slave negotiation initiate each time two nodes exchange their capabilities. The Master/Slave information decides that one node is Master and the other node is Slave. The outcome of the Master/Slave negotiation is not known in advance; it is a random result. One node could be Master and then Slave (or vice versa) during the same call.

Algorithm details The H.323 Master/Slave algorithm operates in the following manner:

- The Master node uses its own codec list as the preferred one and finds a common codec in the far end's list. In other words, the Master gets the first codec in its list (for example, C1), checks in the far end's list if it is a common codec; if it is, C1 is the selected codec. Otherwise, it gets the second codec in its list and verifies it against the far end, and so on.
- The Slave node uses the far end's list as the preferred one and finds in its own list the common codec.

Issues caused by the H.323 Master/Slave algorithm The issues caused by the Master/Slave algorithm are due to the random nature of the Master/Slave information. You cannot predetermine the codec used during a Virtual Trunk call.

The following are the issues associated with the H.323 Master/Slave algorithm:

- After an on:hold and off:hold scenario (which triggers Master/Slave negotiation), the codec used for the restored call might be different than the one used before on:hold, because the Master/Slave information can change.
- When using Fast Start codec selection, a call from Telephone 1 (node 1) to Telephone 2 (node 2) can use a different codec than a

call from Telephone 2 (node 2) to Telephone 1 (node 1), because the terminating end is always Master.

- For tandem calls, the Master/Slave information is not relevant. The Master/Slave information is designed for use between two nodes only, not between three or more nodes as it makes the codec selection for tandem calls more complex and inefficient.

To solve the previous issues, use another codec selection algorithm, not based on the unpredictable Master/Slave information. Because any change to the Master/Slave algorithm implies a change to the H.323 standard, the new codec algorithm is used for Virtual Trunk calls between Nortel equipment.

SIP Offer/Answer model

The SIP codec negotiation is based on the Offer/Answer model with Session Description Protocol (SDP).

The following three cases of codec negotiation are supported:

- The calling user agent sends an SDP offer with its codec list in the invite message with a sendrecv attribute. In this case, the called user agent selects one codec and sends the selected codec in an SDP answer. The SDP answer is included in the 200 OK message (response to the INVITE) with the sendrecv attribute as the preferred method of operation.
- The calling user agent sends an SDP offer with its codec list in the invite message with a sendrecv attribute. The called user agent returns more than one codec in the SDP answer. In the case that many codecs are included in the response, the calling user agent picks the first compatible codec from the called user agent list, and sends a new SDP offer with a single codec to lock it in.
- If the SDP of the calling user agent is not present in the INVITE message, then the called user agent sends its codec list in an SDP offer in the 200 OK message, with the sendrecv attribute. The calling user agent selects one codec and sends it in an SDP answer inside the ACK message, with a sendrecv attribute.

For more information, see RFC 3264 An Offer/Answer Model with the Session Description Protocol (SDP).

Best Bandwidth codec selection algorithm

The Best Bandwidth codec selection algorithm solves the issues caused by the H.323 Master/Slave algorithm. The Best Bandwidth algorithm selects one common codec based on two codec lists. Every time the selection is done with the same two lists, the selected codec matches.

The Best Bandwidth codec decision is based on the codec type only, it does not consider the fact that some codecs, while generally using less bandwidth, can consume more bandwidth than others at certain payload sizes.

Best Bandwidth is also applicable to SIP.

Algorithm details The selected codec is the type considered as the best bandwidth codec type. To determine if one codec type has better bandwidth than another, see the rule as summarized in [Table 7 "Best Bandwidth algorithm : codec type"](#) (page 94).

Table 7
Best Bandwidth algorithm : codec type

	G.711 A law	G.711 mu:law	G.729 A	G. 729 AB	G. 723.1
G.711 A:law	G.711 A:law	G.711 mu:law	G.729 A	G. 729 AB	G. 723.1
G.711 mu:law	G.711 mu:law	G.711 mu:law	G.729 A	G. 729 AB	G. 723.1
G.729 A	G.729 A	G.729 A	G.729 A	G. 729 AB	G.729 A
G. 729 AB	G. 729 AB	G. 729 AB	G. 729 AB	G. 729 AB	G. 729 AB
G. 723.1	G. 723.1	G. 723.1	G.729 A	G. 729 AB	G. 723.1
The SRG 50 does not support G.723 codec.					

Feature interaction The SRG operates with Communication Server 1000 similar to MG 1000B, but with a limitation on codec selection policy. Calls between branch IP Phones and branch analog phones are based on the interzone policy rather than the intrazone policy defined in the Communication Server 1000 main office. The zone table is updated based on the intrazone policy.

The net result of this limitation is that calls between branch IP Phone users and the branch PSTN, or between the IP Phones and branch analog phones, always use a Best Bandwidth codec. However, the calls are accounted for as Best Quality. This may impact the perception of call quality in this scenario, but it will not result in early call blocking. There is no impact to codec selection or bandwidth usage tracking for calls that require WAN bandwidth.

The SRG 50 does not support the G.723 codec.

Bandwidth Management parameters

The following information describes Bandwidth Management parameters.

Zones

Bandwidth Management zones are configured for each endpoint on a Call Server. The Network Bandwidth zone number determines if a call is an intrazone call or an interzone call. After that is determined, the proper codec and bandwidth limit is applied to the call.

All of the endpoints on one Call Server are configured with a zone number to identify them as belonging to a unique geographic location in the network. In addition, Virtual Trunks are configured with a zone number that is different from the endpoint zone numbers in the Call Server.

An IP Peer network is divided into different Bandwidth Management zones. Each IP Phone, Virtual Trunk, or Voice Gateway DSP channel is assigned to a Bandwidth Management zone. All IP Phones, Virtual Trunks, or Voice Gateway DSP channels in a Bandwidth Management zone.

- share the same IP Bandwidth Management policies
- are geographically near each other
- are all in the same time zone
- are all in the same PSTN dialing plan

A Bandwidth Management zone is assigned to each Virtual Trunk and Voice Gateway DS Channel in LD 14. Voice Gateway DS Channel zone must be the same channel zone as the Route zone this channel belongs to. Channel zone is automatically populated by the Route zone and cannot be manually configured in LD 14. This zone enables the trunk to send a setup message, with a codec list selected according to the Best Bandwidth (BB) or Best Quality (BQ) criteria for that zone.

For dialing plan purposes, all telephones in the same zone are treated identically. Each IP Phone is assigned to a zone during configuration. The branch office feature enables IP Phones located in more than one geographic location to have dialing plan behaviors localized to the telephone location, rather than the Call Server location.

IP Phones at a branch office are configured within a unique zone. In the main office Call Server, IP Phones at the branch office are assigned to a branch office zone to define the numbering plan for local, long:distance (optional), and emergency services calls. Zone configuration modifies the dialed digits so a local, long:distance (optional), or emergency services call can be sent to a NRS as a long:distance call. Zone configuration data enables the main office Call Server to modify the dialed digits for these types of calls initiated from an MG 1000B telephone. The NRS then provides the endpoint information to route the call to the branch office.

Different zone numbers are assigned to different MG 1000B systems.

Codec selection occurs as described in “[Codec selection](#)” (page 91).

Zone Assignments

Nortel recommends the following when assigning bandwidth zones based on geographic location:

- Each location is assigned with a unique bandwidth zone
- IP and VGW resources that are local to the same location, are configured in a same bandwidth zone
- Virtual trunk resources are configured in a separate bandwidth zone
- Use the same zone number for Virtual trunk resources for all Call servers within the same network (for example, Main Office and or Branch Office configuration or MG 1000B groups or call servers within one LAN). The reason for this is because the Virtual Trunk zone is not factored into the decision of the Call server whether the call is treated as a INTRAZONE or INTERZONE.
- Both intra: and interzone Virtual Trunks should be configured with Best Quality (BQ) codec and with maximum available bandwidth, such as 1 000 000 kbit/s.

The following table shows an example of a system with geographic redundancy that is distributed among three locations. Zone table is configured once at Location 1 and then the database is to be distributed among the systems automatically by Geographic Redundancy.

Table 8
Single system in a network – Communication Server 1000E system with Survivable Media Gateway

Location 1: (Primary Communication Server 1000E with High Availability Redundant System)	Zone = 1	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BB (Best Bandwidth)
Location 2: (Secondary 1 MG 1000E system)	Zone = 2	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BB (Best Bandwidth)
Location 3: (Secondary 2 MG 1000E system)	Zone = 3	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BB (Best Bandwidth)
	VTRK Zone = 10	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BQ (Best Quality)

The following table shows an example of main office and Branch Office system in the network that are distributed among three locations.

Table 9

Single system in a network – Communication Server 1000E main office system with MG 1000B and SRG

Location 1: (Main Office CS1000E system)	Zone = 1	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BB (Best Bandwidth)
Location 2: (Branch Office MG 1000B system)	Zone = 2	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BB (Best Bandwidth)
Location 3: (Branch Office SRG system)	Zone = 3	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BB (Best Bandwidth)
	VTRK Zone = 10	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BQ (Best Quality)

The following table shows an example of systems with geographic redundancy, and main and Branch Office systems in the network that are distributed among six locations. Zone table is configured once at Location 1 and then database is to be distributed among the Systems by Geographic Redundancy means automatically.

Table 10

Multiple systems in a network

Location 1: (Primary Communication Server 1000E with High Availability Redundant System)	Zone = 1	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BB (Best Bandwidth)
Location 2: (Secondary 1 MG 1000B system)	Zone = 2	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BB (Best Bandwidth)
Location 3: (Secondary 2 MG 1000B system)	Zone = 3	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BB (Best Bandwidth)

Location 4: (Main Office Communication Server 1000E system)	Zone = 4	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BB (Best Bandwidth)
Location 5: (Branch Office MG 1000B system)	Zone = 5	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BB (Best Quality)
Location 6: (Branch Office SRG system)	Zone = 6	Intra BW = 1000000 Intra BW Strategy = BQ (Best Quality) Inter BW = 1000000 Inter BW Strategy = BB (Best Bandwidth)

Zone:based digit manipulation

For branch office users or SRG users in Normal Mode, it may be desirable to provide routing that is different from that provided to main office users. For example, it may be desirable to route certain calls directly to the MG 1000B PSTN trunk or SRG PSTN trunk, rather than receive the same routing as nonbranch users in the main office.

To achieve the different routing, the Zone Access Code Behavior (ZACB) and Zone Digit Prefix (ZDP) properties of the branch office zone are used to add digits to the digits dialed by the branch office user. The resulting digit string is then used to route the call. A branch user and a main user call can be routed differently, even though the dialed digits were the same.

For example, if 1 87654321 is dialed, where 1 is the Access Code, then:

- for a main office user, the call is routed based on the dialed digits.
- for a branch office or SRG user, the digits undergo zone:based digit manipulation (such as inserting 101), and the call is routed based on the new manipulated digit string (in this example, 1 101 87654321).

By performing this zone:based digit manipulation, calls from main office users and branch office or SRG users undergo different routing. Some applications include:

- routing all branch office or SRG user calls to the MG 1000B or SRG PSTN trunk
- routing branch office or SRG user local calls to the MG 1000B PSTN trunk
- routing all branch office or SRG user calls to the main office PSTN trunk
- routing branch office or SRG user long:distance calls to the main office PSTN trunk

Special considerations apply when a single Access Code is used for both on:net and off:net calls, especially with UDP. Normally, the routing of on:net and off:net calls differs. The Call Server ESN Special Number provisioning and Gatekeeper Numbering Plan Entry provisioning should be used to provide this different routing.

Use standard procedures when you do not share a single Access Code (you use one Access Code exclusively for UDP on:net dialing). For more information, see *Dialing Plans Reference (NN43001-283)* ().

For a given branch office, there can be more than one zone defined at the main office so different branch office or SRG users may receive different routing treatments.

The combination of zone:based digit manipulation and Communication Server 1000 routing capabilities can be used to achieve many other routing outcomes for branch office or SRG user calls.

CLID composition

Digital manipulation is commonly used for digit insertion, deletion, and for call type conversion before out:pulsing the digits to the Virtual Trunk.

The IP Special Number (ISPN) parameter in the ESN data block ensures the Calling Line ID (CLID) is formed correctly when a call:type (CLTP) is converted from its original type (such as International, National, or SPN) to CDP/UDP/SPN format. Conversion to CDP/UDP/SPN format ensures that the call:type stays in the Private/Special Number domain.

The ISPN parameter is configured in LD 86. By default, it is set to NO.

If ISPN is NO, the CLID is formed based on the CTYP parameter of the DMI data block, and INST digits are inserted.

If ISPN is YES, the CLID is formed based on the call:type before digit manipulation. INST digits are inserted, and the CLID is considered an IP Special Number. The call:type before digit manipulation is determined as follows:

- If the call:type before digit manipulation is SPN (Special Number), it is converted to a value corresponding to the CLTP parameter in the Special Number Translations data block, as shown in Table 11.

Table 11

Mapping between from CTYP parameter in SPN block to call:type before digit manipulation

CLTP parameter	Call:type before digit manipulation
LOCL	Local PSTN

Table 11
Mapping between from CTYP parameter in SPN block to call:type before digit manipulation (cont'd.)

CLTP parameter	Call:type before digit manipulation
NATL	National PSTN
INTL	International PSTN

- If the call:type before digit manipulation is not SPN (Special Number), it is not changed.

CLID verification

Use the CLIDVER prompt in LD 20 to verify that the CLID has been properly composed and configured. This command simulates a call, without actually making the call, and generates a report of the properties of the call.

Vacant Number Routing

Vacant Number Routing (VNR) is mandatory in a branch office. If a vacant number is dialed, the number is not treated as invalid, and the call is routed to the Gatekeeper. The Gatekeeper tries to determine where the terminal is located. If the terminal is located, the call is routed to the terminating location. If the terminal cannot be located, each of the alternate routes are tried, in the configured sequence. If all alternate routes fail, the call is blocked.

VNR enables a branch office to route calls through the NRS, or other alternate routes with minimal configuration. Instead of changing the numbering trees and steering codes at each location, all the routing information resides at one central location.

At the branch office, VNR is normally routed first to the Virtual Trunk. VNR also enables Data Manipulation Index (DMI) numbers for all trunk types so alternate routes can be configured.

If a vacant number is dialed, the number is not treated as invalid, and the call is routed to the NRS. The NRS tries to determine where the terminal is located. If the terminal is located, the call is routed to the terminating location. If the terminal cannot be located, each of the alternate routes are tried, in the configured sequence. If all alternate routes fail, the call is blocked.

Time of Day

The idle clock on the telephone display must be localized to the correct time for the geographic location of the IP Phone (the Call Server updates this information on the telephone). The date and time display on the IP Phone is determined by the Call Server to which the telephone connects.

The branch office feature allows branch offices to reside in regions with a different time zone than the main office. The time zone of the branch office is configured with the branch office zone at the main office. The time zone adjusts the main office time for display at the branch office. Idle MG 1000B telephones display the correct time of the branch office, rather than that of the main office.

MG 1000B IP Phone calls to a local PSTN

When an MG 1000B IP Phone in Normal Mode dials a local PSTN number, the call is processed by the main office Call Server. The dialed digits are modified according to the dialing plan information configured in the zone for the MG 1000B IP Phone.

The call is configured to be routed over the Virtual Trunk to the branch office. The MG 1000B call server then tandems the call to the local PSTN.

This implementation can optionally be implemented for long:distance calls over PSTN trunks.

ATTENTION

If you are using one Access Code for both local and long:distance calls, and that Access Code is associated with a branch office zone, all calls (local and long:distance) are routed through that branch office.

Emergency Services

Support for access to emergency services by Branch Users in Normal Mode is configured at the main office.

The key difference between the main office user and the branch user is the route selected for the emergency call. An emergency call must be handed off to the PSTN over a trunk at the central office that is geographically closest to the caller—normally an emergency trunk in the main office, and in each of the branch offices. An emergency call that originates from an IP Phone must route from the main office Call Server to the SRG or MG 1000B CP PM so that the call can be sent on the SRG or MG 1000B PSTN Trunks.

In Normal Mode, an IP Phone must have a Virtual Trunk available and configured between the main office and branch office to complete an emergency services call.

ATTENTION

Do not route ESA calls to a node that has no direct ESA trunks.

Special Number (SPN) for emergency services

Use a Special Number (SPN) for access to emergency services to use the digit manipulation capabilities configured for the MG 1000B zone as follows:

- If the branch user is in Normal Mode, the user dials the Access Code for the local PSTN and the normal DN for emergency services. If the main office and branch office use the same DN to access emergency services, a conflict occurs in the NRS. The conflict is resolved by using the Zone Dialing Plan (ZDP) configured in the branch office. The digits specified by the ZDP are prefixed to the dialed digits, and the call is then sent to the NRS as an SPN. In the NRS, the SPNs have their own separate numbering plan. The call is routed to the MG 1000B Call Server and sent out to the MG 1000B PSTN.
- If the Branch User is in Local Mode (or an analog [500/2500:type] or digital telephone at the MG 1000B), the user dials the Access Code for the local PSTN and the normal DN for emergency services access. This selects the appropriate trunk for local PSTN access.

For more information about Emergency Services, see *Branch Office Installation and Commissioning (NN43001-314)*. ()

LAN/WAN bandwidth requirements

The LAN/WAN bandwidth requirement between the main office and branch office consists of two components—one for the media path and the other for signaling and background tasks.

The LAN/WAN bandwidth requirement for the media path depends on the following factors:

- traffic pattern at the branch office
- chosen packetization delay
- Voice Activity Detect
- codec
- Link type

Signaling and background tasks that use LAN/WAN bandwidth include:

- NRS polling
- NRS database synchronization
- Endpoint registration requests to NRS

- Lamp Audit
- IP Phone Keep Alive messages
- Call signaling to and from IP Phones

The maximum bandwidth required for the above tasks is approximately 13 kbit/s. This is insignificant when compared to the bandwidth requirement for the expected voice traffic.

When you determine the LAN/WAN bandwidth requirement for a branch office, expected voice traffic should be the major factor. For more information about network performance measurement, see [“Network Performance Measurement” \(page 125\)](#).

The data rate for a LAN is the total bit rate. The total subnet traffic is measured in Erlangs. An Erlang is a telecommunications traffic measurement unit used to describe the total traffic volume of one hour. Network designers use these measurements to track network traffic patterns. For more information about traffic information, see *Communication Server 1000M and Meridian 1 Large System Planning and Engineering (NN43021-220)* () and *Branch Office Installation and Commissioning (NN43001-314)* ().

Calculation tables

Table 12
Full Duplex Ethernet bandwidth for one channel (one Erlang)

codec	Payload	Full Duplex Ethernet
G.711	10 ms	126 kbit/s
G.711	20 ms	95 kbit/s
G.711	30 ms	85 kbit/s
G.729A	10 ms	70 kbit/s
G.729A	20 ms	39 kbit/s
G.729A	30 ms	29 kbit/s

Table 13
Traffic capacity at P.01, P.005, and P.001 GOS

Device	P.01	P.005	P.001
MC (32:port)	794 CCS	744 CCS	655 CCS
T1 (24 ports)	550 CCS	511 CCS	441 CCS
E1 (30 ports)	732 CCS	685 CCS	600 CCS

Table 14
LAN/WAN bandwidth for one channel (one Erlang)

codec	Payload	LAN/WAN
G.711	10 ms	48 kbit/s
G.711	20 ms	40 kbit/s
G.711	30 ms	37 kbit/s
G.729A	10 ms	20 kbit/s
G.729A	20 ms	12 kbit/s
G.729A	30 ms	9 kbit/s

Calculating TLAN subnet bandwidth for IP Phone traffic Incremental bandwidth required on the TLAN subnet to carry given voice traffic.

Calculate the data rate:

Total traffic in Erlangs x 95 kbit/s

22 x 95 kbit/s = 2090 kbit/s = 2.09 Mbit/s

One Erlang of TDM 64 kbit/s channel becomes 95 kbit/s packets after G.711 codec transcoding, which adds overhead. See [Table 14 "LAN/WAN bandwidth for one channel \(one Erlang\)" \(page 104\)](#) if another type of codec is used.

Requirement: TLAN subnet bandwidth 2.02 Mbit/s.

Calculating MG 1000B with Virtual Trunk LAN/WAN

Step	Action
<i>Assuming G.711/30 ms for the LAN/WAN, the traffic distribution is as follows:</i>	
1	Calculate the MC traffic: MC traffic = 180 CCS One MC is needed (794 CCS capacity).
2	Calculate the Virtual Trunk traffic: IPPT traffic = 72 CCS An equivalent of a 24:port channel (capacity 550 CCS from Table 13 "Traffic capacity at P.01, P.005, and P.001 GOS" (page 103)) is sufficient to handle the Virtual Trunk traffic.
3	Calculate the incremental LAN/WAN bandwidth:

- LAN/WAN traffic = IT traffic to MOR + Analog traffic to IPPT
= 252 + 72
= 324 CCS
- LAN/WAN bandwidth = $324/36 \times 37$ kbit/s (from [Table 14 "LAN/WAN bandwidth for one channel \(one Erlang\)" \(page 104\)](#) for G.711 codec with 30 ms payload)
= 333 kbit/s
See [Table 14 "LAN/WAN bandwidth for one channel \(one Erlang\)" \(page 104\)](#) for other codecs or payload sizes.

--End--

Branch office conference engineering

With no local conference Two parties at a branch office use IP Phones to call each other, and then add a third party from the same branch office. The conference calls use a LAN/WAN to reach the conference bridge at the main office. See [Table 14 "LAN/WAN bandwidth for one channel \(one Erlang\)" \(page 104\)](#) for bandwidth requirements if the codec, payload, or both differ from the assumptions in the following branch office conference scenarios.

The calculated conference LAN/WAN bandwidth is added to the normal LAN/WAN requirement between the branch office and the main office for Internet Telephony Gateway (ITG) trunks or Virtual Trunks.

Calculating unspecified conference traffic

Step	Action
<i>When you lack specific information about conference traffic, use the following standard ratio of conference traffic to general traffic. In Nortel PBX engineering, a network group of 32 loops is comprised of 28 traffic loops, 2 Conference loops, and 2 TDS loops. Using the ratio of 2:28, the conference traffic is about 7% (rounded up from 6.7%) of total traffic. Use the default value of 7% in place of specific information about conference traffic.</i>	
1	Calculate conference traffic: branch office total traffic (TCCS) = # of IP Phones x CCS for each telephone Conference traffic (TCON) = TCCS x 0.07 CCS = TCCS x 0.07/36 Erlangs
2	Calculate LAN/WAN bandwidth: For a G.729A/30 ms codec: LAN/WAN kbit/s = TCON (erlangs) x 9 kbit/s

For a G.711/30 ms codec:
 $\text{LAN/WAN kbit/s} = \text{TCON (erlangs)} \times 37 \text{ kbit/s}$

--End--

Calculating known conference traffic

Step	Action
------	--------

When a branch office is known or expected to make a significant number of conference calls, traffic statistics should be collected or estimated. Use the statistics to calculate LAN/WAN bandwidth requirements.

- | | |
|---|---|
| 1 | Calculate conference traffic:
Cc = conference calls/busy hour (a 6: or 3:way conference call is counted as 6 or 3 calls, respectively)
Ht = Average talk time (holding time) of conference in seconds (if you have no data, use 900 seconds as a default)
$\text{TCON} = (3 \times \# \text{ 3:way conference calls} + 6 \times \# \text{ 6:way conference calls} + \dots) \times \text{Ht}/100$
CCS = Total Cc x Ht/3600 erlangs |
| 2 | Calculate LAN/WAN bandwidth:
For a G.729A/30 ms codec:
$\text{LAN/WAN kbit/s} = \text{TCON (erlangs)} \times 9 \text{ kbit/s}$
For a G.711/30 ms codec:
$\text{LAN/WAN kbit/s} = \text{TCON (erlangs)} \times 37 \text{ kbit/s}$ |

Use other bandwidth data from [Table 14 "LAN/WAN bandwidth for one channel \(one Erlang\)" \(page 104\)](#) if the codec and payload differ from those listed above.

--End--

With local conference Integrated Conference Bridge card When a branch office conference is provided locally, there is no need to route conference traffic to the main office for service. A local conference generates no LAN/WAN traffic and does not require a LAN/WAN bandwidth calculation.

The engineering requirement for Multimedia Processing Units (MPU), such as CallPilot, depends on traffic type (for example, voice, fax, and speech:recognition) and service type (for example, Enterprise networking, network message service). The MPU requirement calculations, which require several traffic tables to cover various Grade of Service practices, do not impact LAN/WAN calculation directly and are not included in this document.

To leave a voice message for a user in a branch office, route the incoming call to the main office. Similarly, when a user retrieves the voice mail message, the connection takes place over the LAN/WAN to the main office. To leave or retrieve a message, the connection requires LAN/WAN bandwidth.

Calculating branch office traffic and LAN/WAN bandwidth without local messaging (CallPilot) capability

Step	Action
<i>The following are default values of parameters to estimate CallPilot traffic. Specific traffic information about a site should be used if known.</i>	
1	Calculate Messaging traffic: Average hold time of a voice message: 40 seconds $\text{Voice Messaging Traffic (VMT)} = \text{Voice Messaging Calls} \times 40/100 \text{ CCS} = \text{Voice Messaging Calls} \times 40/3600 \text{ erlangs}$ If you have no information about messaging calls (leaving or retrieving a message), use the following approximation: $\text{VMT} = 10\% \times \text{Total MG 1000B traffic in CCS} = 10\% \times \text{Total MG 1000B CCS traffic}/36 \text{ (Erlangs)}$
2	Calculate LAN/WAN bandwidth: For a G.729A/30 ms codec: $\text{LAN/WAN kbit/s} = \text{VMT (erlangs)} \times 9 \text{ kbit/s}$ For a G.711/30 ms codec: $\text{LAN/WAN kbit/s} = \text{VMT (erlangs)} \times 37 \text{ kbit/s}$
--End--	

Dialing plan

The following information describes the preparation and process necessary to configure a dialing plan for PSTN access to SRG users in normal mode.

Prerequisites to configure the dialing plan

Perform the following tasks before you configure the dialing plan for PSTN access to branch office or SRG users in Normal Mode.

- At the main office, configure the Virtual Trunk to enable calls that originate on MG 1000B or SRG IP Phones in Normal Mode to reach the branch office. For more details, see *IP Peer Networking Installation and Commissioning (NN43001-313)* ().
- At the main office, configure trunks for access to the PSTN.
- At the branch office, configure the Virtual Trunk to enable calls that originate on MG 1000B or SRG IP Phones in Normal Mode to reach the branch office. For more details, see *IP Peer Networking Installation and Commissioning () (NN43001:313)*.

- At the branch office, configure trunks for access to the PSTN.
- At the main office, configure the branch office zone properties in LD 117, excluding the ZACB and ZDP properties.
- At the main office, configure routing for PSTN access.
- At the branch office, configure routing to enable calls made from TDM or IP Phones in Local Mode to access the PSTN.
- At the branch office, configure Vacant Number Routing (VNR).
- Configure IP Phones with the same zone number at both the main office and the branch office. Nortel also recommends that the Prime DNs be the same at both the main and the branch offices. If different DNs are configured, the dial:in numbers change when the branch office is in Local Mode.
- Assign unique individual DNs as Branch User Identities (BUID) to Automatic Call Distribution (ACD) telephones.

Configuration

Perform the following tasks to configure the dialing plan for MG 1000B PSTN access:

- At the main office:
 - Configure the ZACB property for the branch office zone.
 - Configure the ZDP property for the branch office zone.
 - Configure the Route List Index.
 - Configure the ESN Special Number and Digit Manipulation.
- Configure the NRS:
 - Access NRS Manager.
 - Select an endpoint.
 - Configure the Numbering Plan Entry for the branch office.
- At the branch office:
 - Configure the Route List Index.
 - Configure ESN.

For more information about configuring the dialing plan, see [“Configuring Dialing Plan” \(page 247\)](#).

Branch office dialing plan

As IP Phone users can be located at a branch office equipped with an MG 1000B Core, the routing of calls to the local gateway is important (especially when toll charges apply to calls made from the central Call

Server that controls the telephone). The administrator can configure digit manipulation through zone attributes for IP Phones to select a main office or branch office that provides PSTN access local to the destination of the call.

Calls from the PSTN to users within the network can be routed with the various ESN numbering plan configurations or the VNR feature. This routing enables small sites, such as a branch office, to require minimal configuration to route calls through other Call Servers or through the NRS.

To access local PSTN resources, outgoing calls can be routed using ESN as well as zone parameters that enable digit insertion. The zone parameters force calls made by a Branch User to be routed to the desired local PSTN facilities.

ATTENTION

Outgoing calls can include local and, optionally, long distance calls.

Nortel recommends that the Branch User ID (BUID) be the same at the branch office as the DN at the main office. A BUID has a maximum of 15 digits. Under the recommended Coordinated Dialing Plan (CDP), the BUID can be an extension (for example, 4567). Under the Uniform Dialing Plan (UDP), the BUID is the main office DN of the user, the Location Code (LOC), plus the Access Code (for example, 6 343:5555).

The SRG supports only one dialing plan option at a time. CDP and UDP dialing plan options cannot be configured at the same time in the same system.

For more information about branch office features that support the various PSTN interfaces, see *Electronic Switched Network Reference — Signaling and Transmission (NN43001-280)* (). For more information about CDP, see *Dialing Plans Reference (NN43001-283)* (). For more information about other Numbering Plan options, see *Communication Server 1000E Overview (NN43041-110)* ().

Abbreviated Dialing

The Abbreviated Dialing feature is implemented with a pretranslation group assigned to every telephone. All IP Phones in the same Bandwidth Management zone use the same pretranslation group. TDM telephones, which share the same dialing plan with IP Phones in a Bandwidth Management zone, also use the same pretranslation group. You can accomplish the pretranslation group assignment using the TM 3.1 global change functionality.

Virtual Office Login always requires that the full DN be entered. Users cannot use the abbreviated DN for the Virtual Login to an IP Phone.

The called telephone display always shows the full-length DN of the calling party.

Nortel recommends the following configuration of Abbreviated Dialing in the main office and branch offices.

- The numbering plan at both the main office and branch office must have six or seven digits, including IP Phones in Local Mode.
- All MG 1000B IP Phones are in a different Bandwidth Management zone than the main office IP Phones.
- Each Bandwidth Management zone has a unique pretranslation group number assigned to it.
- Calling Line Identification (CLID) of calls going to the public network (E.164/PSTN) are converted to the shorter DN by removing the digits added during pretranslation.
- Additional digits can still be added to the outgoing calling party number (the shortened DN) using CLID capabilities.

ATTENTION

When you design the numbering plan, make sure that there is no conflict between the long DN and the leading digits of the short DN so no pretranslation is invoked when a long DN is dialed.

For example, assume a long DN of 3623674 and a short DN of 3216. If the leading digit 3 in the short DN is configured to be translated to 3623, the short DN is then translated to 3623623674.

Zone parameters

Zone parameters must be configured at both the main office Call Server and MG 1000B Call Server. The main office procedure is similar to an IP Peer Network configuration.

Abbreviated dialing

With the Abbreviated Dialing feature, users in the same geographic location (the Main Office or the Branch Office) can call one another with a DN shorter than the configured DN.

This feature is implemented with a pre:translation group assigned to every telephone. All IP Phones in the same bandwidth management zone use the same pre:translation group. TDM telephones, which share the same dialing plan with IP Phones in a bandwidth management zone, also use the same pre:translation group. The pre:translation group assignment is more easily and quickly done using the TM 3.1 global change functionality. The following table provides sample values to explain the functionality of Abbreviated Dialing.

Table 15
Sample values for Abbreviated Dialing

	Main Office	Branch Office
Location code	70	71
DN	70300	713000

Abbreviated dialing works as follows:

- An IP Phone or TDM telephone in the main office can call another telephone in the main office by dialing only the last four digits of the called party's DN (for example, 3000 to reach 703000).
- An MG 1000B IP Phone, in Normal or Local Mode, or a TDM telephone in the Branch Office can call another telephone in the Branch Office by dialing only the last four digits of the called party's DN (for example, 3000 to reach 713000).
- An IP Phone or TDM telephone in the main office can call a telephone in the Branch Office by dialing all six digits of the called party's DN (for example, 713000).
- An MG 1000B IP Phone, in Normal or Local Mode, or a TDM telephone in the Branch Office can call a telephone in the main office by dialing all six digits of the called party's DN (for example, 703000).
- An incoming call to a main office telephone has a four:digit DN, such as 3000. The main office location code (in this example, 70) is added to the front of the DN, and the call terminates as indicated by the full:length DN (in this case, 703000).
- An incoming call to an MG 1000B telephone has a four:digit DN, such as 3000. The Branch Office location code (in this example, 71) is added to the front of the DN, and the call terminates as indicated by the full:length DN, in this case 713000. In Local Mode, the call is terminated locally. In Normal Mode, the call is routed to the main office using VNR.
- Calling Line Identification (CLID) on outgoing PSTN calls from the main office or the Branch Office are modified from four to six digits. Additional digits can be added using the capabilities of CLID.
- The calling party display always shows the full:length DN of the originating party.
- The display on the calling telephone shows the called DN as dialed. After the call is established or modified, the display changes in accordance with existing features.

Bandwidth and data network switch efficiency

Note the maximum packets per second forwarding rates of the platforms. The rate determines the switch efficiency and the actual throughput the platform is capable of supporting.

Example

For 64:byte packets and a 10:Mbit/s link, the maximum forwarding rate is 14 880 packets per second.

Bandwidth throughput is: $(64 \text{ B} / P) * (8 \text{ b} / B) * (14,880 \text{ P} / S) = 7.62 \text{ Mbit/s}$

A similar calculation is required for the WAN switches used.

Note: Efficiency of an Ethernet switch is taken from the Performance Specifications section of the Ethernet switch manual.

Network design assessment

Ensure you fully understand the design of an existing data network before you implement a VoIP network. This section describes key issues to consider when you create a new converged voice and data network.

For example, assess the network for such things as:

- the distribution of protocols in the network
- the level of QoS on the network
- the link speeds, link types, and link utilization
- the traffic flows in the network

Some of the tools used to assess the VoIP network are described (see [“Available traffic tools” \(page 123\)](#)), as well as examples of logical connection diagrams for small, medium, and large campus networks (see [Figure 25 “Campus network reference model” \(page 114\)](#)).



WARNING

Before a Communication Server 1000 system can be installed, a network assessment must be performed and the network must be VoIP:ready.

If the minimum VoIP network requirements are not met, the system does not operate properly.

Network modeling

Network analysis can be difficult or time:consuming if the intranet and the CS 1000 system installation are large. Commercial network modeling tools can analyze "what:if" scenarios predicting the effect of topology, routing,

and bandwidth changes to the network. These modeling tools work with an existing network management system to load current configuration, traffic, and policies into the modeling tool. Network modeling tools can help to analyze and test the recommendations given in this document to predict how delay and error characteristics impact the network.

Physical and logical network diagrams

To determine VoIP readiness, diagrams of both the data and voice infrastructure (physical and logical) are required. These diagrams are valuable when determining the platforms deployed in the network as well as the logical design, such as the IP addressing architecture, link speeds, and connectivity.

Note: Network diagrams are typically created using SNMP Network Management Systems (NMS). NMS provides graphical views from physical connections between LANs and WANs to the logical connections of a Virtual LAN (VLAN).

From a voice perspective, the numbering plan and Call Detail Record (CDR) help to determine calling patterns in a multisite environment.

Knowledge of routing of circuit-switched trunking facilities helps to determine utilization and bandwidth requirements for a VoIP deployment.

Sample IP network model

The Communication Server 1000 and Meridian 1 systems are VoIP servers suited for typical campus network designs.

In most cases, the system is connected logically to the server layer, as the server layer is engineered for high:availability and security.

For more information about security management, see *Security Management (NN43001-604)* ().

A large amount of available bandwidth at the server level, though not required by the Call Server, helps to ensure satisfactory VoIP QoS.

Nortel recommends QoS mechanisms for all layers to ensure that voice traffic obtains a level of service greater than the level of service for the best:effort data traffic.

Physical connectivity, VLANs, and subnets for the core server components are configured at the server layer, following existing server layer design and conforming to the core server configuration requirements.

Alternately, if campus:distributed Media Gateway systems are used, they are connected at the distribution layer. The core IP network can be configured with multiple VLANs and subnets to meet the core server configuration requirements.

The following are planned based on the access and distribution layers configuration:

- VLANs
- subnets
- QoS mechanisms for the IP Phones, such as DiffServ and 802.1Q

Typical network topology Figure 25 "Campus network reference model" (page 114) provides a reference model for a campus network.

Figure 25
Campus network reference model

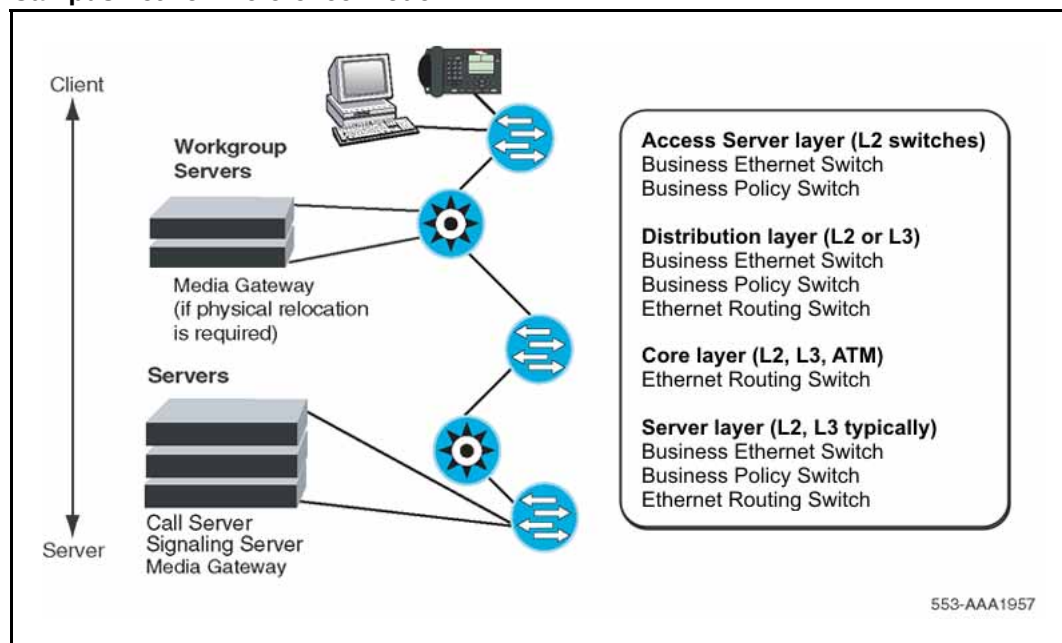


Figure 26 "Small campus network example" (page 115), Figure 27 "Midsize campus network example" (page 115), and Figure 28 "Large campus network example" (page 116) show examples of logical connection diagrams for small, medium, and large campus networks. Other network designs can be used. The actual design implemented depends on many factors, including physical locations, size, and scalability.

Figure 26
Small campus network example

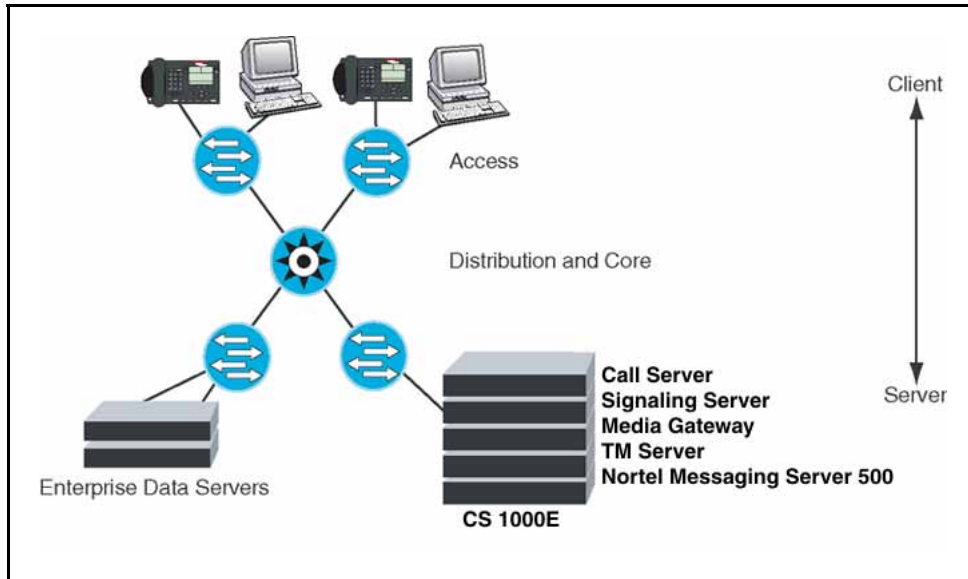


Figure 27
Midsized campus network example


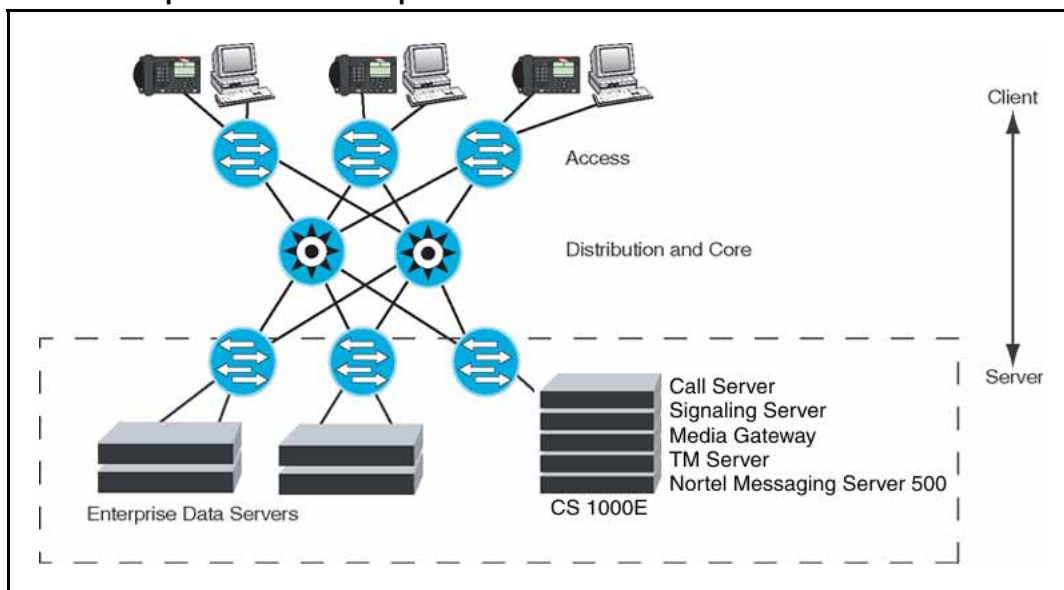


Figure 28
Large campus network example

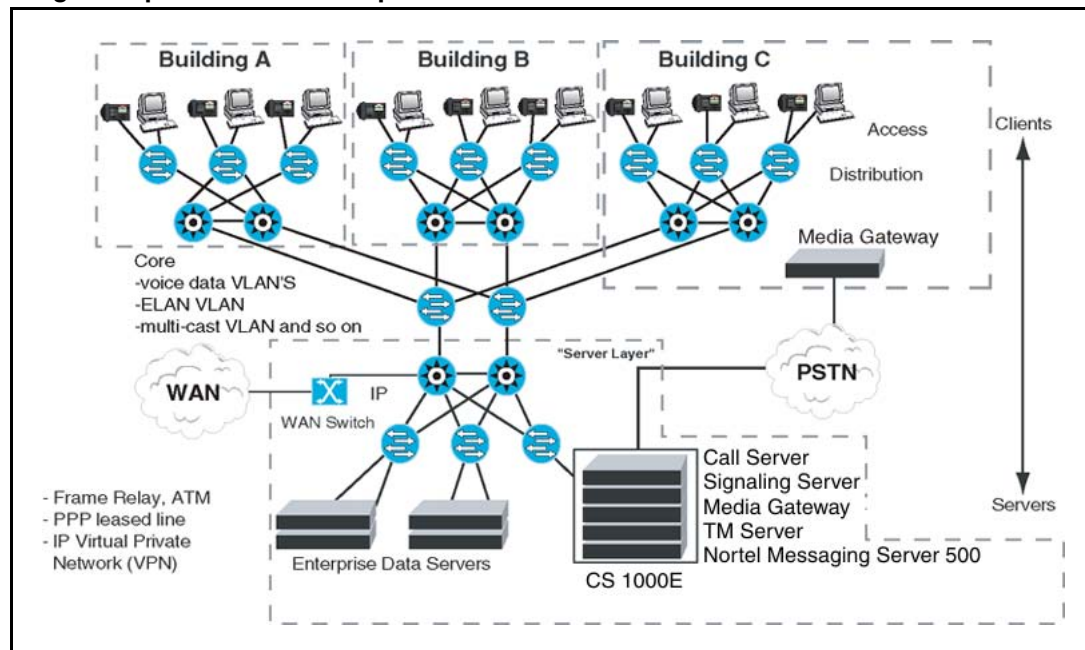

ATTENTION

Nortel strongly recommends that a network be designed to accommodate a larger VoIP deployment than what you install. Ensure that network administrators monitor network data traffic on a regular basis.

Contact a Nortel sales representative if help is needed to choose a suitable Network Modeling solution.

After you determine the network topology, evaluate the LAN and WAN platforms installed in the network.

If shared media is on the LAN, install Layer 2 switching as a minimum requirement. If there is a Layer 2 switched edge with a Layer 3 core, assess the bandwidth of the network.

The elements of a LAN/Campus network usually consist of the following:

- 100 Mbit/s bandwidth to the desktop
- high:performance closet switching
- devices such as the Business Policy Switch (BPS) connected to the core network
- multigigabit riser connections
- devices such as the Passport 8600 in the core

These campus networks require only the simplest QoS mechanisms. These types of devices can take advantage of DiffServ from end-to-end.

If VoIP traffic travels on the WAN, high bandwidth can be achieved with networks connected through high-speed point-to-point Digital Signal Level 3 (DS3) links or through ATM/SONET services of Optical Carrier 3 (OC:3) and higher. All optical networks with gigabit Ethernet also provide high-bandwidth transport.

Campus platforms Document the platforms used in the campus and the following information for each switch:

- vendor
- switch model number
- hardware versions
- software versions

Typically, campus networks should be designed with high-bandwidth edge switches with multi-gigabit Ethernet connections to a switched Layer 3 IP network.

Riser access links and Layer 3 capacity are critical areas. If the desktop switching platform provides 24 connections at 100 Mbit/s and has only four 100 Mbit/s links, a significant bottleneck can occur at the riser. Serialization and queueing delays can become an issue that requires the application of QoS mechanisms, such as 802.1Q/802.1p and/or DiffServ.

Nortel recommends migrating 100 Mbit/s riser links to Gigabit Ethernet.

ATTENTION

All VoIP servers and IP Phones must be connected to Layer 2 switches.

Shared-media hubs are not supported. Shared-media hubs are low bandwidth devices and do not support QoS mechanisms.

Application requirements

Table 16 "Common application performance parameters" (page 118) lists the various QoS performance parameters required by some common applications. If these parameters are mixed over a common-use IP network and QoS technologies are not used, the traffic can experience unpredictable behavior.

Table 16
Common application performance parameters

Application	Relative bandwidth demand	Sensitivity to		
		Delay	Jitter	Packet Loss
VoIP	Low	High	High	High
Video Conferencing	High	High	High	Med
Streaming Video on Demand	High	Med	Med	Med
Streaming Audio	Low	Med	Med	Med
Web browsing (eBusiness)	Med	Med	Low	High
E:mail	Low	Low	Low	High
File Transfer	Med	Low	Low	High

Link speeds

Link speeds in a WAN environment are usually low compared to a LAN. When you consider VoIP in a WAN environment, link speeds under 1 Mbit/s result in the serialization delay of VoIP packets, which can impair deployment. When small VoIP packets travel over a network that typically include packet sizes up to 1500 bytes, these larger packets introduce variable delay (jitter) in the network. This impacts voice quality.

To address delay on a WAN, implement the following:

- protocol prioritization
- traffic shaping (for Frame Relay)
- DiffServ
- fragmentation and interleaving (larger packet sizes incur higher serialization delays and introduce jitter into the VoIP stream)

Other vendor devices include alternative mechanisms..

If link speed and packet size are considered, the serialization delay introduced can be predicted. For more information, see [“Serialization delay” \(page 150\)](#) .

ATTENTION

Nortel strongly recommends that you begin with an MTU size of 232 bytes for links under 1 Mbit/s, and adjust upwards as needed.

Some applications do not perform well with an adjusted MTU, so caution must be used when utilizing MTU.

Link types

Identify and document the link types used in the network. A number of different link types are available in the network and each can have an impact on VoIP.

A typical campus network can have 100 Mbit/s of bandwidth going to the desk, with multi:gigabit riser links. Because bandwidth is plentiful, peak link utilization is the most important issue. If link utilization is averaged, it may not be accurate. A minimum of Layer 2 switching is required, with no shared media.

Point:to:Point links (PPP)

Point:to:Point (PPP) links are direct point:to:point links, and give the network operator maximum control over QoS. PPP links provide dedicated bandwidth and flexible termination points.

Frame Relay

Frame Relay (FR) networks provide flexibility when the requirements include a full meshed topology. The FR networks have a lower overall cost, with respect to meshed designs.

Frame Relay networks are based on a shared:access model, where Data Link Connection Identifier (DLCI) numbers are used to define Permanent Virtual Circuits (PVCs) in the network.

QoS in a Frame Relay network is achieved by specifying a Committed Information Rate (CIR) and using separate PVC's. CIR is the level of data traffic (in bits) that the carrier agrees to handle, averaged over a period of time.

The CIR on the voice traffic PVC must be set for the total peak traffic, because any traffic that exceeds the CIR is marked Discard Eligible (DE) and can be dropped by the carrier. This is not an acceptable condition for VoIP traffic, as real:time data carrying packetized voice cannot be retransmitted.

Ensure you understand the design of the carrier network, how much traffic is currently being transported, and if any type of Service Level Agreement (SLA), other than CIR, is offered.

The WAN:access platform in the network can help ensure that VoIP traffic does not exceed the CIR on the PVC. Protocol prioritization, traffic shaping, and fragmentation can insure that the VoIP traffic is transmitted first and does not exceed the CIR on the PVC.

Asynchronous Transfer Mode

Asynchronous Transfer Mode (ATM) can provide a Constant Bit Rate (CBR) service, by dedicating a channel with a fixed bandwidth based on the applications needs.

Using ATM as a transport for VoIP adds overhead associated with ATM. A G.711 codec with 20 millisecond (ms) voice payload, when the associated TCP, UDP, and RTP header information is added, can become a 200-byte frame.

Using ATM for transport requires that you segment the frame to fit into multiple cells. This adds an additional 10 to 15 percent of overhead. The G.729 codec significantly reduces the frame size to 60 bytes, so codec selection is crucial for the WAN.

Virtual Private Network

A Virtual Private Network (VPN) uses the public telecommunication infrastructure, such as the Internet, to provide remote offices or individual users with secure access to their organization's network. Encryption and other security mechanisms are used to ensure that only authorized users can access the network and that the data cannot be intercepted.

For more information about security management, see *Security Management (NN43001-604)* ().

Link utilization assessment

To support VoIP over WAN links, it is important to assess link utilization. There are several ways to gather statistical information on a WAN link. Tools, such as an existing network management system, should have the ability to poll routers through SNMP and collect the statistics over a period of time about use of a given WAN link.

Other methods of assessment include the use of imbedded Remote Monitoring (RMON) and external RMON probes installed to gather statistical information, including link utilization.

Over low-bandwidth connections, the amount of VoIP traffic should be limited to a percentage of the bandwidth of the connection. Use the limit to minimize the maximum queueing delay that the VoIP traffic experiences over low-bandwidth connections.

When you use distributed or survivable media gateways, ensure you monitor and reengineer the link utilization on a regular basis. For information about estimating ELAN traffic, see the following documents:

- *Communication Server 1000M and Meridian 1 Small System Planning and Engineering (NN43011-220)* ()
- *Communication Server 1000M and Meridian 1 Large System Planning and Engineering (NN43021-220)* ()
- *Communication Server 1000E Planning and Engineering (NN43041-220)* ()

For more information about Bandwidth Management of VoIP calls, see [“VoIP Bandwidth Management zones” \(page 70\)](#).

Assess link use

WAN links are the highest repeating expenses in the network and they often cause capacity problems. Unlike LAN bandwidth, which is virtually free and easily implemented, WAN links take time to finance, provision, and upgrade, especially inter:LATA (Local Access and Transport Area) and international links. For these reasons, it is important to determine the state of WAN links in the intranet before you install the network.

ATTENTION

The use of QoS mechanisms that prioritize voice over data traffic effectively increases the amount of bandwidth available to voice traffic.

Perform the following steps to assess the link utilization.

Assessing link utilization

Step	Action
1	Obtain a current topology map and link utilization report of the intranet.
2	Visually inspect the topology map to reveal which WAN links are likely to deliver IP Line traffic, alternately, use the Traceroute tool (see “Network performance measurement tools” (page 128)).
3	Determine the current utilization of the WAN links and note the reporting window that appears in the link utilization report. For example, link use can be averaged over a week, a day, or an hour.
4	Obtain the busy period (peak hour) use of the link.
5	As WAN links are full:duplex and data services exhibit asymmetric traffic behavior, obtain the utilization of the link representing traffic flowing in the heavier direction.

- 6 Assess how much spare capacity is available.
Enterprise intranets are subject to capacity planning policies that ensure capacity usage remains below a predetermined level.
For example, a planning policy states that the use of a 56 kbit/s link during the peak hour must not exceed 50%; for a T1 link, the threshold is higher, perhaps 80%. The carrying capacity of the 56 kbit/s link is 28 kbit/s, and for the T1 link is 1.2288 Mbit/s. In some organizations, the thresholds can be lower than that used in this example; in the event of link failures, there needs to be spare capacity for traffic to be rerouted.
- 7 Obtain the QoS parameters (in addition to the physical link capacity), especially the Committed Information Rate (CIR) for Frame Relay and Maximum Cell Rate (MCR) for ATM.
Some WAN links can be provisioned on top of Layer 2 services, such as Frame Relay and ATM; the router-to-router link is actually a virtual circuit, which is subject to a physical capacity and a logical capacity limit.
- 8 The difference between the current capacity, and its allowable limit, is the available VoIP capacity.
For example, a T1 link used at 48% during the peak hour, with a planning limit of 80%, has an available capacity of about 492 kbit/s.

--End--

Traffic flows in the network

Identify traffic flows in the network by using an existing Network Management System (NMS) or another passive tool, such as a packet sniffer. These tools identify protocol distribution in the network and traffic flow between devices. RMON probes and devices with embedded RMON capability can also help the network designer determine where traffic flows occur.

Assess traffic flows over a period of time (a week or longer depending on the complexity of the network). Observe the peak times of the day, the week, and the month to determine the highest periods of use.

After traffic flows are identified, determine bandwidth requirements using tools such as a VoIP bandwidth calculator. Ask your Nortel representative for the VoIP bandwidth calculator spreadsheet. For more information, see [“VoIP Bandwidth Demand Calculator” \(page 140\)](#).

Available traffic tools

There are many tools available to assess network traffic, such as:

- Traceroute
- Call Detail Record
- Traffic study
- Network Diagnostic Utilities (see [“Network Diagnostic Utilities” \(page 223\).](#))

Traceroute Traceroute uses the IP TTL (time:to:live) field to determine router hops to a specific IP address. A router must not forward an IP packet with a TTL field of 0 or 1. The router must instead throw away the packet and return to the originating IP address an ICMP time exceeded message. Traceroute uses the message by sending an IP datagram with a TTL of 1 to the specified destination host.

The first router to handle the datagram sends back a time exceeded message. This identifies the first router on the route. Traceroute then sends out a datagram with a TTL of 2, which causes the second router on the route to return a time exceeded message (and so on) until all hops have been identified. The traceroute IP datagram has a UDP Port number unlikely to be in use at the destination (usually > 30 000), which causes the destination to return a port unreachable ICMP packet, thereby identifying the destination host.

Traceroute can be used to measure roundtrip times to all hops along a route, thereby identifying bottlenecks in the network.

Call Detail Record Obtain a Call Detail Record (CDR) to locate the VoIP traffic flows in the network. The CDR can help identify the network routes that VoIP will use.

The peak values for time of day, day of week, and day of month must be considered to ensure consistent voice quality.

For more information, see *Call Detail Recording Fundamentals (NN43001-550)* ().

Traffic study Traffic is a measurement of specific resource activity level. LD 02 has been reserved to schedule and select the traffic study options.

A network traffic study provides information, such as:

- the amount of call traffic on each choice in each route list
- the number of calls going out on expensive routes in each route list
- queueing activity (off:hook queueing and call:back queueing) and the length of time users queue on average

For more information about traffic studies, see the following resources:

- *Traffic Measurement Formats and Output Reference (NN43001-750)* ()
- LD 02 in *Software Input Output Reference — Administration (NN43001-611)* ()

Service level agreements

As part of a service level agreement, the service provider should guarantee a certain amount of bandwidth.

Whether a home user on a cable or DSL connection, or a large network customer using Frame Relay, the service provider must guarantee bandwidth for VoIP.

Guaranteed bandwidth in Frame Relay, for example, is known as Committed Information Rate (CIR). The guaranteed bandwidth must be sufficient to accommodate all of the network traffic. Ensure that the CIR rate contracted is received when you lease a connection.

Exercise caution if service level agreements are not available.

Network planning

Perform the following actions before you configure Bandwidth Management in a Communication Server 1000 network:

- Main Office and Branch Office need to have the same VPNI setting to ensure correct bandwidth management control by the Main Office. Another reason to have the same VPNI setting across call servers is to support bandwidth management for Network Wide Virtual Office (NWVO). Also, two systems within the same LAN would require the same VPNI setting to ensure INTRAZONE call treatment.
- Choose unique Bandwidth zone numbers for all Call Servers in the network to use when configuring the endpoints (telephones and gateways) on the Call Server.
- Choose the same zone number for Virtual trunk resources for all Call servers within the same network (for example, Main Office and Branch Office configuration or MG 1000B groups or call servers within one LAN).

- Choose the codecs to enable on each Call Server.
- Identify the interzone codec strategy (BB or BQ) for each zone in the network.
- Identify the intrazone codec strategy (BB or BQ) for each zone in the network.
- Calculate the bandwidth available for intrazone calls for each zone in the network.
- Calculate the available bandwidth for interzone calls for each zone in the network.
- Calculate the available bandwidth for intrazone calls.

**CAUTION****Service Interruption**

If the network is planned so IP Phones use a different route to the main office than the MG 1000B Terminal Proxy Server (TPS), a fault condition can occur. When the MG 1000B TPS can ping the main office but the IP Phone cannot ping the main office due to a network outage, an IP Phone registration can force the telephone into a cycle of registering locally, being redirected to the main office, rebooting and then registering locally again. When this cycle occurs, further diagnose the network outage.

Network Performance Measurement

This section describes the criteria required to achieve excellent voice quality.

Performance criteria

To achieve excellence in voice quality you need the following elements:

- a properly engineered network
- good network equipment and redundancy
- adequate bandwidth for peak usage
- use of QoS mechanisms
- ongoing monitoring and maintenance

If the previous elements are not present, VoIP performance suffers.

The network should also meet the following specifications:

- **End-to-end packet delay:** Packet delay is the point-to-point, one-way delay between the time a packet is sent to the time it is received at the remote end. It is comprised of delays at the Voice Gateway Media Card, Internet Telephone, and the IP network. To minimize delays, the

IP Telephony node and Internet Telephony must be located to minimize the number of hops to the network backbone or WAN.

ATTENTION

Nortel recommends an end-to-end delay of ≤ 50 ms on the IP network to ensure good voice quality. The 50 ms does not include the built-in delay of the Voice Gateway Media Card and IP Phone.

- **End-to-end packet loss:** Packet loss is the percentage of packets sent that do not arrive at their destination. Transmission equipment problems, packet delay, and network congestion cause packet loss. In voice conversation, packet loss appears as gaps in the conversation. Sporadic loss of a few packets can be more tolerable than infrequent loss of a large number of packets clustered together.

ATTENTION

For high-quality voice transmission, the long-term average packet loss between the IP Phones and the Voice Gateway Media Card TLAN network interface must be $< 1\%$, and the short-term packet loss must not exceed 5% in any 10-second interval.

ATTENTION

Nortel strongly recommends that you use the G.711 codec with the following configuration:

- end-to-end delay less than 150 ms one way (network delay + packetization delay + jitter buffer delay < 150)
- packet loss less than 0.5% (approaching 0%)
- maximum jitter buffer setting for IP Phone as low as possible (maximum 100 ms)

Packet loss on the ELAN network interface can cause

- communication problems between the Call Server and the Voice Gateway Media Cards
- lost SNMP alarms
- incorrect status information on the TM console
- other signaling-related problems

ATTENTION

Because the ELAN network is a Layer 2 Switched LAN, the packet loss must be zero. If packet loss is experienced, its source must be investigated and eliminated. For reliable signaling communication on the ELAN network interface, the packet loss must be $< 1\%$.

Proactive Voice Quality management

Proactive Voice Quality management (PVQ) allows the user to monitor the voice quality of Voice over Internet Protocol (VoIP) calls on an ongoing basis and detect specific problems when they occur. Alarms and traffic reports are used to implement this.

Four metrics on voice quality are collected on every call: packet loss, latency, jitter, and R:value. The metrics are analyzed to determine if an alarm should be generated. The metrics are also aggregated and reported, along with other information, in Traffic Report 16.

The R:level metric is calculated only for those IP Phones equipped with a firmware version of 2.0 or higher.

A PVQ alarm is generated whenever a metric exceeds a given threshold. The thresholds are user:defined in LD 117 at a Call Server and propagate throughout the system. Listed in order of increasing severity, the threshold levels include: good, warning, and unacceptable.

The following types of PVQ alarms exist:

- Alarms generated on a per:zone basis (zone:based) — generated if the aggregate metrics for a particular zone, such as a branch office, exceeds a warning or unacceptable threshold. These alarms are generated by the Call Server.
- Alarms generated on a per:call basis — each call is monitored and an alarm generated if any metric meets or exceeds a warning or unacceptable threshold. These alarms are generated by the Signaling Server.

The user can set a Notification Level to control when and how often an alarm is generated. This capability is useful when many alarms are generated, but most are minor and relate to potential system capacity issues rather than voice quality. It is also useful when a user wants to monitor a particular area of a network, such as a branch office. Notification levels are defined in LD 117.

Network performance measurement tools

Ping and traceroute are standard IP tools that are usually included with a network host TCP/IP stack. QoS measurement tools and packages are commonly available that include delay monitoring tools, which include features like timestamping, plotting, and computation of standard deviation. For information about network performance measurement tools, see

- [“QoS monitoring and reporting tools” \(page 223\)](#)
- [“Proactive Voice Quality management” \(page 127\)](#)
- *IP Phones Fundamentals* (NN43001-368)

The following measuring tools are based on the Internet Control Messaging Protocol (ICMP):

- Ping — sends ICMP echo requests
- Traceroute — sends packets to unequipped port numbers and processes to create ICMP destination unavailable messages

Both ping and traceroute are basic measuring tools that can be used to assess the IP Line network and are standard utilities that come with most commercial operating systems. Ping is used to measure the round:trip delay of a packet and the percentage of packet loss. Traceroute breaks down delay segments of a source:destination pair and any hops in:between to accumulate measurements.

There are several third:party applications that perform data collection similar to ping and traceroute, but also analyze data and plot performance charts. The use of ping and traceroute to collect data for manual analysis is labor intensive; however, they provide information as useful as the more sophisticated applications.

The following network performance evaluation overview assumes that the ping program is available on a PC, or a network management tool is available to collect delay and loss data and to access the LAN that connects to the router to the intranet.

Evaluating network performance

Step	Action
1	Use ping or an equivalent tool to collect round:trip delay (in ms) and loss (in%) data.
2	Divide the delay (determined in step 1) by 2 to approximate one:way delay and add 93 ms to adjust for ITG processing and buffering time.

- 3 Use a QoS chart, or [Table 31 "QoS levels" \(page 168\)](#), to predict the QoS categories: Excellent, Good, Fair or Poor.
- 4 If a customer wants to manage the QoS in a more detailed fashion, rebalance the values of delay compared to loss by adjusting system parameters, such as preferred codec, payload size, and routing algorithm, to move the resulting QoS among different categories.
- 5 If the QoS objective is met, repeat the process periodically to make sure the required QoS is maintained.

--End--

Network availability

Network availability has the most significant effect on QoS. If the network is unavailable, even for brief periods of time, the user or application can achieve unpredictable or undesirable performance levels.

Network availability is dependent on the availability of a survivable, redundant network. A redundant network should include the following elements to ensure survivability:

- redundant devices, such as
 - interfaces
 - processor cards
 - power supplies in routers and switches
- resilient networking protocols
- multiple physical connections, such as copper or fiber
- backup power sources

Media Security

Media Security enables two endpoints capable of Secure Real:Time Transport Protocol (SRTP) connections to engage in secure media exchanges. For calls that pass over IP systems only, Media Security can provide end-to-end encryption of the call if both endpoints can support SRTP connections. If you configure Media Security to use the Media Security Always CoS, it blocks any calls that cannot be encrypted.

When you assess the reliability of the network, be aware that the Media Security feature, if configured to use the Media Security Always CoS, can block a call if any of the following conditions is valid:

- One of the telephones in the call is an IP Phone registered on the same Call Server as the other endpoint, but does not support Media Security.
- One of the telephones in the call is a nonIP phone on the same Call Server as the other endpoint, but a Voice Gateway TN resource that supports SRTP is not available.
- One of the telephones in the call is configured to use the Media Security Always CoS, and the trunk is an H.323 trunk or a SIP trunk configured to use the Media Security Never CoS.
- One of the telephones in the call is configured to use the Media Security Always CoS, and the far end is an IP Phone, media gateway, or media server that does not support Media Security or is incompatible with the SRTP key exchange protocol used by Communication Server 1000 SIP Virtual Trunk (VTRK) Gateway.

You can use the Traffic Reports available in LD 2 to determine the cause of a call failure if you suspect Media Security is blocking calls, as shown in [Table 17 "Traffic reports for blocked calls " \(page 130\)](#).

Table 17
Traffic reports for blocked calls

Counter	Meaning	Description
cfnp	Calls failed due to near end policy.	A high value for this counter indicates that call attempts are being made between Media Security Always (MSAW) and Media Security Never (MSNV) types of devices.
cfnr	Calls failed due to near end resources.	This counter indicates the number of calls that fail because secure Digital Signal Processors (DSP) are not available.

For more information about Traffic Reports in LD 2, see *Traffic Measurement Formats and Output Reference (NN43001-750)* (). If you suspect calls are being blocked because of Media Security policy restrictions imposed by your system security administrator, contact the security administrator responsible for Media Security configuration policies on your system.


For more information about Media Security, including further recommendations about configuration, see *Security Management (NN43001-604)* ().

Set QoS expectations

The users of corporate voice and data services expect these services to meet some perceived Quality of Service (QoS) that influences network design. The goal is to design and allocate enough resources in the network to meet the needs of the users. QoS metrics or parameters are what quantifies the needs of the user of the service.

In the context of a Meridian 1 and CS 1000M system, [Figure 29 "QoS parameters" \(page 131\)](#) shows the relationship between users and services.

Figure 29
QoS parameters

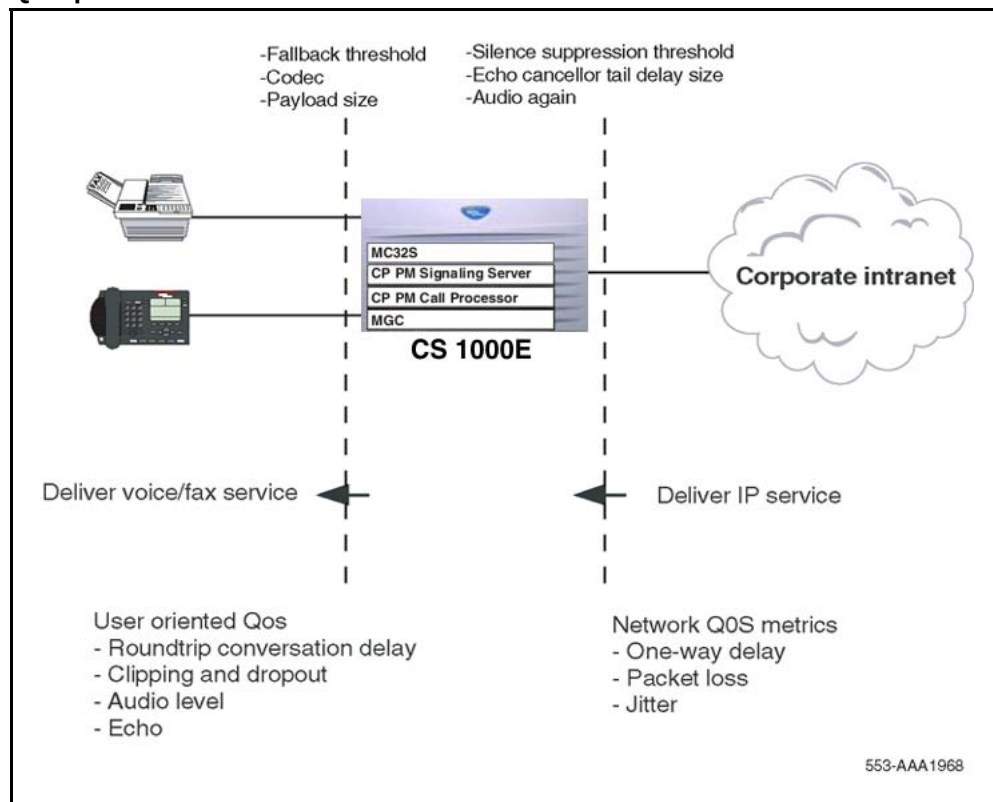

In [Figure 29 "QoS parameters" \(page 131\)](#), consider the following two interfaces:

- The Meridian 1, including the IP Trunk 3.0 (or later) nodes, interfaces with the end users. Voice services offered by the Meridian 1 must meet user-oriented QoS objectives.
- The IP Trunk 3.0 (or later) nodes interface with the intranet. The service provided by the intranet is best-effort delivery of IP packets, not guarantee QoS for real-time voice transport. IP Trunk 3.0 (or later) translates the QoS objectives set by the end-users into IP-oriented

QoS objectives. The guidelines call these objectives *intranet QoS objectives*.

The QoS level is a user-oriented QoS metric that takes one of four settings – Excellent, Good, Fair, or Poor – that indicate the quality of voice service. IP Trunk 3.0 (or later) periodically calculates the prevailing QoS level per site pair, based on measurement of the following:

- one:way delay
- packet loss
- codec

ATTENTION

Nortel strongly recommends that G.711 codec be used over high:bandwidth connections, and used any time that call quality is high priority. Where call quality is high priority, sufficient bandwidth must be provided for the VoIP application. The Best Quality (BQ) codec is usually chosen and configured as G.711 within the zone configuration (intrazone).

Use the G.729 codec to compress voice traffic over low:bandwidth connections when bandwidth considerations take precedence over call quality. The Best Bandwidth (BB) codec is usually chosen and set to G.729A or G.729AB between zones (interzone).

Codec details are then configured on the Signaling Server through TM or Communication Server 1000 Element Manager.

Figure 30 "QoS levels with G.729A/AB codec" (page 133), Figure 31 "QoS level with G.711 codec" (page 134), and Figure 32 "QoS level with G.723 codec" (page 135) are derived from the ITU:T G.107 Transmission Rating Model. These diagrams show the operating regions in terms of one:way delay and packet loss for each codec. Note that among the codecs, G.711 A:law/G.711 mu:law delivers the best quality for a given intranet QoS, followed by G.729AB, G.723.1 6.4 kbit/s, and G.723.1 5.3 kbit/s. These graphs determine the delay and error budget for the underlying intranet so it delivers a required quality of voice service.

Fax is more susceptible to packet loss than is the human ear, in that quality starts to degrade when packet loss exceeds 4%. Nortel recommends that fax services be supported with IP Trunk 3.0 (or later) that operates at the Excellent or Good QoS level. Avoid offering fax services between two sites that can guarantee no better than a Fair or Poor QoS level.


G.729AB codec

The G.729 uses less bandwidth than the G.711. If minimizing bandwidth demand is a priority, and the customer is willing to accept lesser voice quality, a G.729AB codec can be used.

Extreme care must be taken in the network design if using the G.729AB codec. The G.729AB codec has the same requirements as the G.711 codec.

Figure 30 "QoS levels with G.729A/AB codec" (page 133) shows the QoS levels with a G.729A/AB codec.

Figure 30
QoS levels with G.729A/AB codec

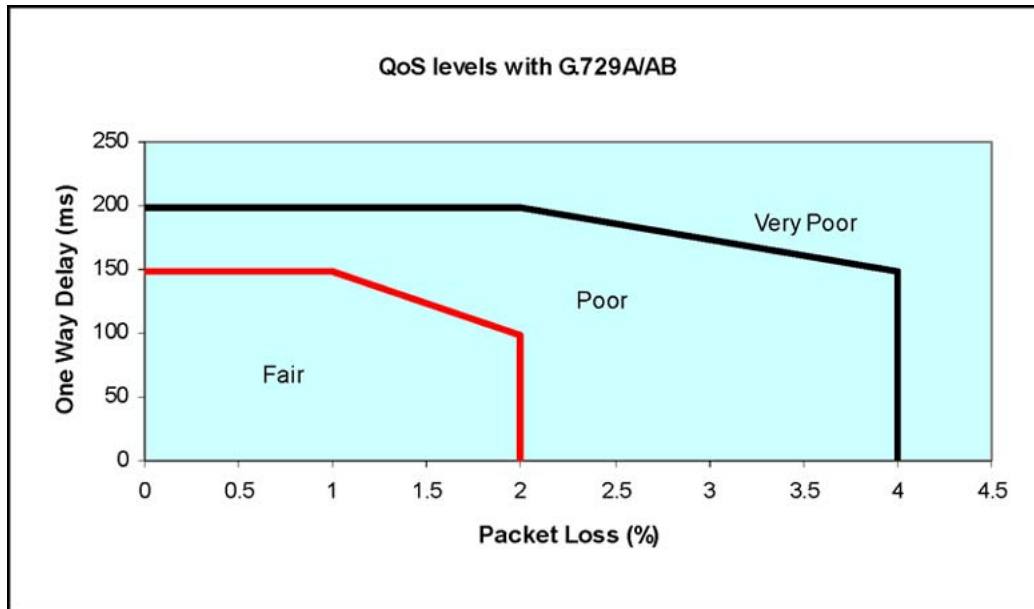


G.711 codec

Nortel recommends that you use the G.711 codec.

Figure 31 "QoS level with G.711 codec" (page 134) shows the QoS levels with a G.711 codec.


Figure 31
QoS level with G.711 codec

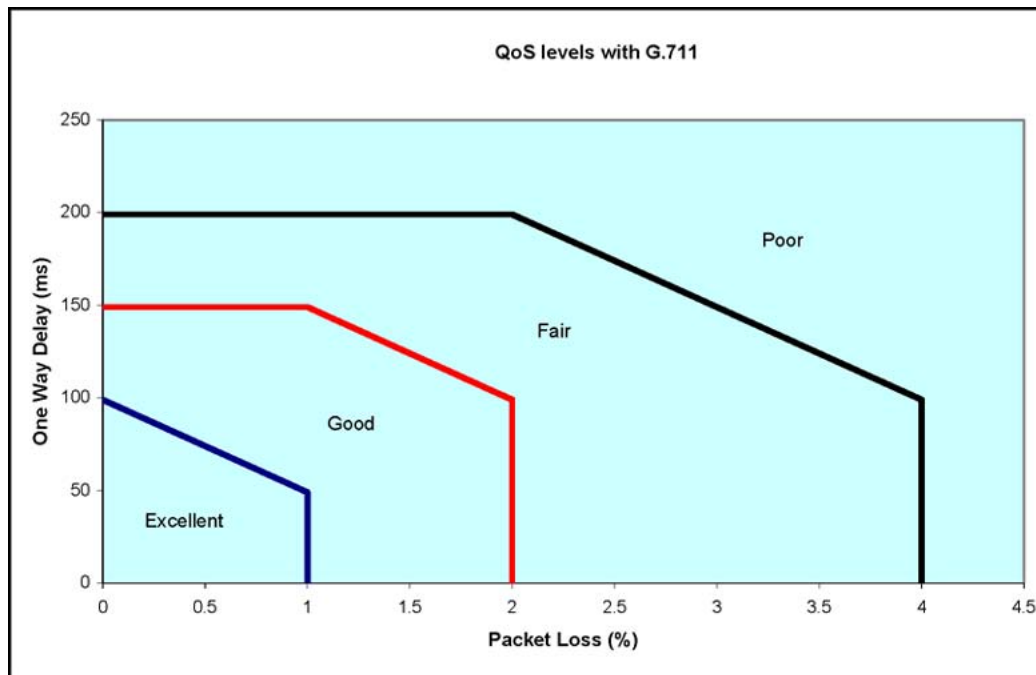

G.723 codec

Figure 32 "QoS level with G.723 codec" (page 135) shows the QoS levels with a G.723 codec.

Figure 32
QoS level with G.723 codec

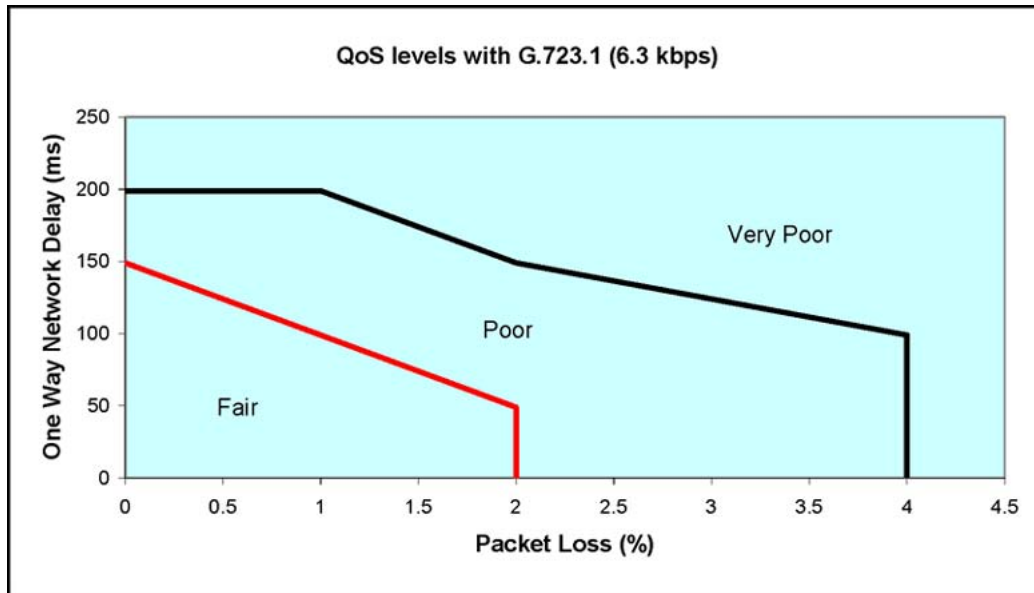

Bandwidth

Bandwidth is the most significant parameter that affects QoS. There are two types of bandwidth:

- Available Bandwidth
- Guaranteed Bandwidth

ATTENTION

The use of QoS mechanisms that prioritize voice over data traffic effectively increases the amount of available bandwidth to voice traffic.

Available Bandwidth

Many network operators oversubscribe the bandwidth on their network to maximize the return on their network infrastructure or leased bandwidth.

Oversubscribing bandwidth means that the bandwidth a user subscribes to is not always available. All users compete for Available Bandwidth. The amount of bandwidth available to a user depends on the amount of traffic from other network users at any given time.

Guaranteed Bandwidth

Some network operators offer a service that guarantees a minimum bandwidth and burst bandwidth in the Service Level Agreement (SLA). This service is more expensive than the Available Bandwidth service. The

network operator must ensure that the Guaranteed Bandwidth subscribers get preferential treatment (QoS bandwidth guarantee) over the Available Bandwidth subscribers.

This can be accomplished in several ways. Sometimes, the network operator separates the subscribers by different physical or logical networks, such as Virtual Local Area Networks (VLANs) or Virtual Circuits.

In other cases, the Guaranteed Bandwidth traffic shares the same infrastructure as the Available Bandwidth traffic. This is often seen where network connections are expensive, or where the bandwidth is leased from other service providers. When both types of subscribers share the same infrastructure, the network must prioritize Guaranteed Bandwidth traffic over Available Bandwidth traffic. This ensures that when network traffic is heavy, the Guaranteed Bandwidth subscriber SLA is met.

Queueing

Over:engineering network bandwidth does not necessarily solve voice quality problems, as IP network traffic is inherently bursty in nature. At any time, a burst of packets can enter a switch. If the number of packets received in that instant is greater than the capacity of the queue for the transmitting port, then packets are lost. This situation is particularly serious on slow connections.

If a queue is busy (though not necessarily full), voice packet traffic can back up and jitter can occur if voice packets are not prioritized. Network QoS mechanisms are based on assigning different priorities to multiple queues. A voice queue is assigned a higher priority. If a specific queue is assigned only to voice traffic, then there is less chance that voice packets are discarded because the queue is too full. Network delay is reduced, as voice packets are transmitted first to minimize delay, jitter, and loss. Perceived voice quality is greatly improved.

Calculating per:call bandwidth

Calculating VoIP traffic requirements You must forecast the hundreds of call seconds for each hour (CCS) of traffic that the CS 1000 and Meridian 1 systems process through the IP Line network. CCS traffic generated by an IP Phone is similar to that of a digital telephone. The procedures in this section calculate the bandwidth required to support given amounts of traffic.

- determine the CCS/CCS rating of IP Phone

For more information, see *Communication Server 1000M and Meridian 1 Large System Planning and Engineering (NN43021-220)* ().

- determine the number of IP Phones

- determine the number of subnets/servers accessed by the IP Phones
Base all traffic data on busy hour requirements.
- calculate total LAN bandwidth requirement
- calculate WAN bandwidth requirement for each subnet or server/router
- consider the impact of incremental IP Line traffic on routers and LAN resources in the intranet. LAN segments can become saturated, and routers can experience high CPU use. Consider rerouting scenarios in a case where a link is down.

Calculating LAN traffic To calculate the total LAN requirement, total all sources of traffic destined for the Internet Telephony network using the same LAN.

Use the following procedures to calculate LAN traffic:

Calculating LAN traffic

Step	Action
1	Add the following items to calculate the total subnet traffic (in Erlangs): • number of IP Phones x (CCS ÷ CCS rating) • number of voice gateways on the Voice Gateway Media Card • number of WAN connections
	ATTENTION Each source of traffic has a different CCS rating. Calculate the subnet traffic for each source of traffic and add the amounts for the total.
2	Use the number of Erlangs to calculate the equivalent number of lines by using the calculator at the following Web site: www.erlang.com/calculator/erlb Assume a blocking factor of 1% (0.010).
3	Find the LAN bandwidth usage (kbit/s) in based on the codec used for the traffic source.
4	Calculate the bandwidth of a subnet using the following calculation: Subnet bandwidth = Total number of lines × LAN bandwidth usage
5	Repeat Step 1 to Step 4 for each subnet.

- 6 Calculate the total LAN traffic by adding the total bandwidth for each subnet calculation.

--End--

LAN engineering example The following example calculates LAN bandwidth assuming half-duplex links.

Using G.729AB 30 ms, LAN bandwidth usage is 57.6 kbit/s.

The formula is:

Number of Erlangs = Number of IP Phones $\times$ (CCS $\div$ 36)

Calculating LAN bandwidth example

Step	Action
1	Subnet A: 28 Internet Telephones, average 6 CCS $\div$ IP Phone Subnet A total Erlangs = $28 \times 6 \div 36 = 4.66$ Subnet A bandwidth = $4.66 \times 57.6 \text{ kbit/s} = 268.4 \text{ kbit/s}$
2	Subnet B: 72 IP Phones, average 5 CCS $\div$ Internet Telephone Subnet B total Erlangs = $72 \times 5 \div 36 = 10$ Subnet B bandwidth = $10 \times 57.6 = 576 \text{ kbit/s}$
3	Subnet C: 12 IP Phones, average 6 CCS $\div$ IP Phone Subnet C total Erlangs = $12 \times 6 \div 36 = 2$ Subnet C bandwidth = $2 \times 57.6 = 115.2 \text{ kbit/s}$
4	Calculate the LAN Bandwidth by finding the sum of all subnet bandwidths: LAN Bandwidth = $268.4 + 576 + 115.2 = 959.6 \text{ kbit/s}$
--End--	

WAN traffic calculations For data rate requirements for the intranet route, calculation is based on duplex channels. The data rate for a WAN is the duplex data rate. For example, 128 kbit/s on the LAN is equal to a 64 kbit/s duplex channel on the WAN. Use the following procedure to calculate data rate requirements for the intranet route. The effects of Real-time Transport Protocol (RTP) header compression by the router are not considered in these calculations but must be included where applicable.

Use the following steps to calculate WAN traffic.

Calculating WAN traffic

Step	Action
1	Calculate the total subnet traffic using the following formula: Total subnet traffic = Number of IP Phones x CCS/Internet Telephone.
2	Convert to Erlangs: Total CCS / 36 (on the half:duplex LAN)
3	Find WAN bandwidth usage (kbit/s) from the WAN Base Bandwidth columns.
4	Calculate bandwidth for each subnet = Total Erlangs x WAN bandwidth usage.
5	Multiply bandwidth of each subnet by 1.3 to adjust for traffic peaking.
6	Repeat the procedure for each subnet.
7	Adjust WAN bandwidth to account for WAN overhead depending on the WAN technology used: • ATM (AAL1): multiply subnet bandwidth x 1.20 (9 bytes overhead/44 bytes payload) • ATM (AAL5): multiply subnet bandwidth x 1.13 (6 bytes overhead/47 bytes payload) • Frame Relay: multiply subnet bandwidth x 1.20 (6 bytes overhead/30 bytes payload – variable payload up to 4096 bytes)

ATTENTION

Each WAN link must be engineered to be no more than 80% of its total bandwidth if the bandwidth is 1536 kbit/s or higher (T1 rate). If the rate is lower, up to 50% loading on the WAN is recommended.

--End--

WAN engineering example The following is an example of calculating the WAN bandwidth.

Calculating LAN bandwidth example

Step	Action
1	Subnet A: 36 IP Phones, average 6 CCS/Internet Telephone

- Total Erlangs = $36 \times 6/36 = 6$
 - For G.729AB 50 ms, WAN bandwidth usage is 14.4 kbit/s.
 - Subnet A WAN bandwidth = $14.4 \times 6 = 86.4$ kbit/s
 - Subnet A WAN bandwidth with 30% peaking
= 86.4×1.3
= 112.32 kbit/s
- 2 Subnet B: 72 IP Phones, average 5 CCS/IP Phone
- Total Erlangs = $72 \times 5/36 = 10$
 - Subnet B WAN bandwidth = $14.4 \times 10 = 144$ kbit/s
 - Subnet B WAN bandwidth with 30% peaking
= 144×1.3
= 187.2 kbit/s
- 3 Subnet C: 12 IP Phones, average 6 CCS/IP Phone
- Total Erlangs = $12 \times 6/36 = 2$
 - Subnet C WAN bandwidth = $14.43 \times 2 = 28.8$ kbit/s
 - Subnet C WAN bandwidth with 30% peaking
= 28.8×1.3
= 37.44 kbit/s
- 4 If the WAN is known to be an ATM network (AAL1), the estimated bandwidth requirements are:
- Subnet A WAN bandwidth with ATM overhead
= 112.32×1.2
= 134.78 kbit/s.
 - Subnet B WAN bandwidth with ATM overhead
= 187.2×1.2
= 224.64 kbit/s
 - Subnet C WAN bandwidth with ATM overhead
= 37.44×1.2
= 44.93 kbit/s

ATTENTION

Bandwidth values can vary slightly depending on the transport type.

--End--

VoIP Bandwidth Demand Calculator The VoIP Bandwidth Demand Calculator is a Microsoft Excel-based tool that quickly determines the bandwidth requirements for a given link.

The VoIP Bandwidth Demand Calculator uses the following variables:

- number of trunks
- packetization interval
- codec (G.711, G.729, and G.723)
- link type (Frame Relay, PPP, ATM, Ethernet)
- link speed

Ask a Nortel representative for the VoIP Bandwidth Demand Calculator spreadsheet. Use the parameters in the spreadsheet and the bandwidth calculator to determine the bandwidth requirement for each client.

Silence Suppression engineering considerations

Silence Suppression/Voice Activity Detection (VAD) results in average bandwidth savings over time, not immediately. For normal conversations, Silence Suppression creates a 40% savings in average bandwidth used. For example, a single G.729AB voice packet will still consume 30 kbit/s of bandwidth, but the average bandwidth used for the entire call would be approximately 23 kbit/s.

Calculate the average bandwidth using the formula:

Codec bandwidth from [Table 5 "Bandwidth estimates used by Call Admission Control" \(page 83\)](#) x 0.6

When voice services with multichannel requirements are extensively used in an VoIP network, such as Conference, Music:on:hold, and Message Broadcasting, additional voice traffic peaks to the IP network generated due to the simultaneous voice:traffic bursts on multiple channels on the same links.

Estimate network loading caused by VoIP traffic

An efficient VoIP network design requires an understanding of traffic and the underlying network that carries the traffic. To determine the network requirements of the specific system, the technician must perform the following steps.

Before bandwidth estimation can begin, obtain the following network data:

- A network topology and routing diagram.
- A list of the sites where the Communication Server 1000 Release 5.5 nodes are to be installed.
- List the sites with VoIP traffic, and the codec and frame duration (payload) to be used.

- Obtain the offered traffic in CCS for each site pair; if available, separate voice traffic from fax traffic (fax traffic sent and received).
- In a network with multiple time zones, use the same real-time busy hour varying actual clock hours at each site that yields the highest overall network traffic. Traffic to a route is the sum of voice traffic plus the larger of one-way fax traffic either sent or received.

Determining network requirements

Step	Action
1	Estimate the amount of traffic processed by the Meridian 1 or Communication Server 1000 system through the IP Line network. <i>See Communication Server 1000M and Meridian 1: Large System Planning and Engineering (NN43021:220) ().</i>
2	Assess if the existing corporate intranet can adequately support voice services. <i>See "Configuration" (page 239).</i>
3	Organize the IP Line network into zones that represent different topographical areas of the network that are separated according to bandwidth considerations.
4	Ensure that appropriate QoS measures are implemented across the network to prioritize voice packets over data traffic.
--End--	

Example: multinode engineering [Table 18 "Example: Traffic flow in a 4:node Communication Server 1000 network" \(page 142\)](#) summarizes traffic flow of a 4:node Communication Server 1000 network.

Table 18
Example: Traffic flow in a 4:node Communication Server 1000 network

Destination Pair	Traffic in CCS
Santa Clara/Richardson	60
Santa Clara/Ottawa	45
Santa Clara/Tokyo	15
Richardson/Ottawa	35
Richardson/Tokyo	20
Ottawa/Tokyo	18

The codec selection is on a per-call basis. During call setup negotiation, only the type of codec available at both destinations is selected. When no agreeable codec is available at both ends, the default codec G.711 is used.

For this example, assume that the preferred codec to handle VoIP calls in this network is G.729AB.

[Table 19 "Example: Incremental WAN bandwidth requirement" \(page 143\)](#) summarizes the WAN traffic in kbit/s for each route. The recommended incremental bandwidth requirement is included in the column adjusted for 30% traffic peaking in busy hour. This assumes no correlation and no synchronization of voice bursts in different simultaneous calls. This assumes some statistical model of granularity and distribution of voice message bursts due to Silence Suppression.

Table 19
Example: Incremental WAN bandwidth requirement

Destination Pair	CCS on WAN	WAN traffic in kbit/s	Peaked WAN traffic (x1.3) in kbit/s
Santa Clara/Richardson	60	18.7	24.3
Santa Clara/Ottawa	45	14.0	18.2
Santa Clara/Tokyo	15	4.7	6.1
Richardson/Ottawa	35	10.9	14.2
Richardson/Tokyo	20	6.2	8.1
Ottawa/Tokyo	18	5.6	7.3

The Santa Clara/Richardson information is calculated as follows:

- The total traffic on this route is 60 CCS. To use the preferred codec of G.729AB with a 30 ms payload, the bandwidth on the WAN is 11.2 kbit/s.
- WAN traffic is calculated by: $(60/36)*11.2 = 18.7$ kbit/s.
- Increasing this number by 30% gives a peak traffic rate of 24.3 kbit/s. This is the incremental bandwidth required between Santa Clara and Richardson to carry the 60 CCS voice traffic during the busy hour.

Assume that 20 CCS of the 60 CCS between Santa Clara and Richardson is fax traffic. Of the 20 CCS, 14 CCS is from Santa Clara to Richardson, and 6 CCS is from Richardson to Santa Clara. What is the WAN data rate required between those two locations?

- Traffic between the two sites can be broken down to 54 CCS from Santa Clara to Richardson, and 46 CCS from Richardson to Santa Clara, with the voice traffic 40 CCS (60 – 20) being the two:way traffic.
- The bandwidth requirement calculation would be:
$$(40/36)*11.2 + (14/36)*33.6 = 25.51 \text{ kbit/s}$$


Where 14 CCS is the larger of two fax traffic parcels (14 CCS versus 6 CCS).
- After adjusting for peaking, the incremental data rate on the WAN for this route is 33.2 kbit/s.
- If you compare this number with 24.3 kbit/s when all 60 CCS is voice traffic, it appears that the reduction in CCS due to one:way fax traffic (20 CCS versus 14 CCS) does not compensate for the higher bandwidth requirement of a fax compared to a voice call (33.7 kbit/s versus 11.2 kbit/s).

At this point, you have enough information to load the VoIP traffic on the intranet.

After you have made a prediction on the amount of traffic on a specific link, R4:R5 is required. The R4:R5 link support the Santa Clara/Richardson, Santa Clara/Tokyo, and the Ottawa/Tokyo traffic flows; the other VoIP traffic flows do not route over R4:R5. For more information, see *Communication Server 1000M and Meridian 1 Large System Planning and Engineering (NN43021-220)* () and traceroute measurements. The summation of the three flows yields 93 CCS or 24 kbit/s as the incremental traffic that R4:R5 must support.

Total the traffic flow for every site pair to calculate the load at each endpoint. The following diagram shows the load on an individual link.

Figure 33
Network load with VoIP traffic

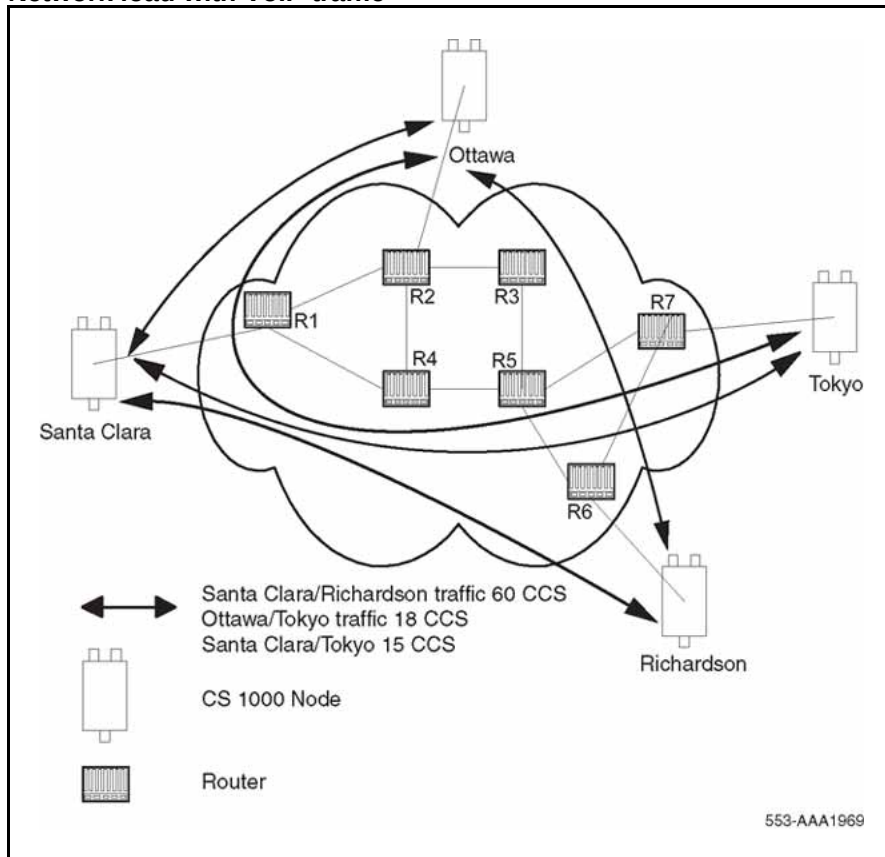

Route Link Traffic estimation

Routing information for all source:destination pairs must be recorded as part of the network assessment. This is done using the traceroute tool. An example of the output is shown below.

```
Richardson3% traceroute santa_clara_itg4
traceroute to santa_clara_itg4 (10.3.2.7), 30 hops max, 32
byte packets
  r6 (10.8.0.1) 1 ms  1 ms  1 ms
  r5 (10.18.0.2) 42 ms 44 ms 38 ms
  r4 (10.28.0.3) 78 ms 70 ms 81 ms
  r1 (10.3.0.1) 92 ms 90 ms 101 ms
 santa_clara_itg4 (10.3.2.7) 94 ms 97 ms 95 ms
```

The traceroute program is used to check if routing in the intranet is symmetric for each source:destination pair. Use the `-g` loose source routing option as shown in the following command example:

```
Richardson3% traceroute -g santa_clara_itg4 richardson3
```

A trace route command (rTraceRoute) is available at the Signaling Server command line interface (CLI). This command traces a route from a remote IP Phone to another endpoint in the IP network.

The traceroute tool identifies the intranet links that transmit VoIP traffic. For example, if traceroute of four site pairs yield the results shown in [Table 20 "Traceroute identification of intranet links" \(page 146\)](#), then the load of VoIP traffic per link can be computed as shown in [Table 21 "Route link traffic estimation" \(page 146\)](#).

Table 20
Traceroute identification of intranet links

Site pair	Intranet route
Santa Clara/Richardson	R1:R4:R5:R6
Santa Clara/Ottawa	R1:R2
Santa Clara/Tokyo	R1:R4:R5:R7
Richardson/Ottawa	R2:R3:R5:R6

Table 21
Route link traffic estimation

Links	Traffic from
R1:R4	Santa Clara/Richardson +Santa Clara/Tokyo + Ottawa/Tokyo
R4:R5	Santa Clara/Richardson +Santa Clara/Tokyo + Ottawa/Tokyo
R5:R6	Santa Clara/Richardson +Richardson/Ottawa
R1:R2	Santa Clara/Ottawa + Tokyo/Ottawa
R5:R7	Santa Clara/Tokyo + Ottawa/Tokyo
R2:R3	Richardson/Ottawa
R3:R5	Richardson/Ottawa

Link capacity

For each link, [Table 22 "Computation of link capacity as compared to ITG load" \(page 147\)](#) compares the available link capacity to the additional IP Trunk 3.0 (or later) load. For example, on link R4:R5, there is enough available capacity (492 kbit/s) to accommodate the additional 24 kbit/s of VoIP traffic.

Table 22
Computation of link capacity as compared to ITG load

Link		Utilization (%)		Avai lable capacity (kbit/s)	Incremental IP Trunk 3.0 (or later) load		Sufficient capacity?
End points	Capacity (kbit/s)	Thresh old	Used		Site pair	Traffic (kbit/s)	
R1:R2	1536	80	75	76.8	Santa Clara/Ottawa + Ottawa/Tokyo	21.2	Yes
R1:R4	1536	80	50	460.8	Santa Clara/Tokyo + Santa Clara/ Richardson + Ottawa / Tokyo	31.4	Yes
R4:R5	1536	80	48	492	Santa Clara/Richard son + Ottawa/ Tokyo + Santa Clara/Tokyo	31.4	Yes

Some network management systems have network planning modules that compute network flows in the manner previously described. These modules provide detailed and accurate analysis, as they consider actual node, link, and routing information. The modules also help assess network resilience by conducting link and node failure analysis. By simulating failures and reloading network and recomputed routes, the modules indicate where the network is out of capacity during failures.

Insufficient link capacity

If there is not enough link capacity, implement one or more of the following options:

- Use the G.723 codec series. Compared to the default G.729AB codec with 30 ms payload, the G.723 codecs use 9% to 14% less bandwidth.
- Upgrade the bandwidth.

Other intranet resource considerations

Bottlenecks caused by nonWAN resources are not frequent. For a complete assessment, consider the impact of incremental VoIP traffic on routers and LAN resources in the intranet. Perhaps the VoIP traffic is traversing LAN segments that are saturated, or traversing routers whose CPU utilization is high.

Delay

Delay is defined as the amount of time required for application data to reach its intended destination. Delay causes significant Quality of Experience (QoE) issues with voice and video applications. Other applications, such as Fax transmissions, with excessive delay causes the application to time out and fail.

Some applications can compensate for specified amounts of delay, but after that amount is exceeded, QoS is compromised. VoIP and gateways also provide delay compensation by using local buffering.

Delay can be fixed or variable. Variable delay is also known as jitter.

Some contributions to fixed (baseline) delay are as follows:

- Application:based delay, such as:
 - voice codec processing
 - jitter buffer delay
- Serialization delay — Delay of the voice packet at each hop of the physical network, which depends on link speed (a fixed, constant value for each link).
- Propagation delay — Delay caused by the finite speed at which electronic signals can travel through a transmission medium.

In VoIP, end-to-end delay on a call is the total time elapsed from speaking into an transmitter at one end to hearing the reconstructed sound on a receiver at the other end. Delay has a significant impact on the quality of a voice call. Most listeners can detect delay greater than 100 ms. Delay becomes annoying at the following levels:

- for G.711 codec, 250 ms
- for G.729AB codec, 150 ms

Figure 34 "Sources of packet delay" (page 149) shows the sources of packet delay.

Figure 34
Sources of packet delay

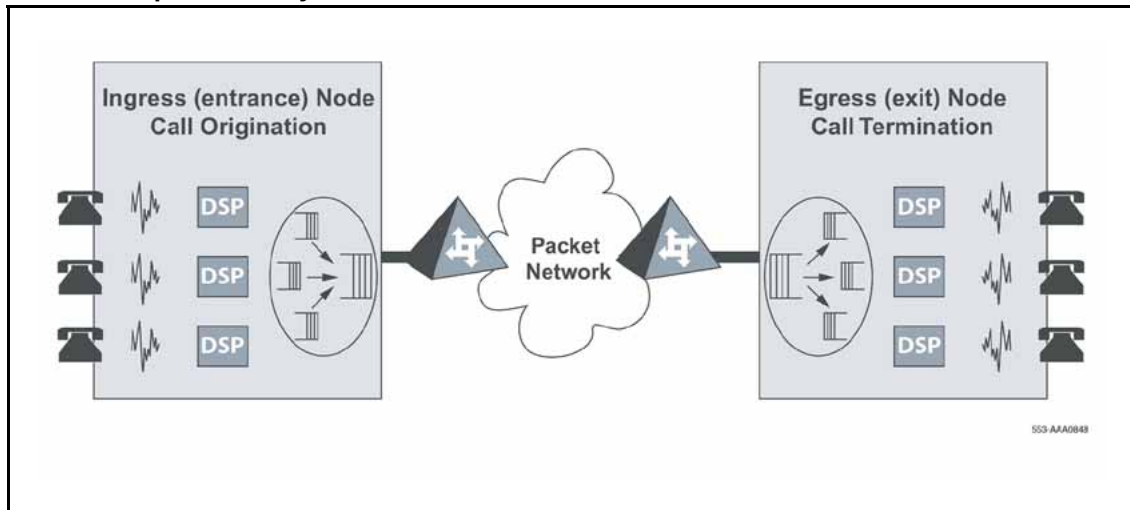


Table 23 "Delay characteristics of voice traffic" (page 149) lists the network elements where delay occurs, and the type of that delay.

Table 23
Delay characteristics of voice traffic

Packet action	Network element	Delay type
Entrance (ingress) node audio processing	Voice codec algorithmic processing	fixed delay
	Voice payload packetization	fixed delay
Entrance (ingress) node packet queueing	Packet contention for network port	variable delay
Data network transmission	LAN and WAN link speeds	fixed delay (per network segment type)
	Propagation over the network	fixed delay (per transmission distance)
	Packet contention at network nodes	variable delay
Exit (egress) node packet queueing	Packet contention for network port	variable delay
	Packet jitter buffer	fixed delay
Exit (egress) node audio processing	Voice decoder processing	fixed delay

ATTENTION

The previous table does not account for enhanced applications, such as packet encryption, tunnelling, and Virtual Private Networks (VPN), which add delay due to the buffering of the extra payload, additional Digital Signal Processing (DSP), and repacketization. These contribute to extra delay and should be included in a delay analysis.

Effects of delay on voice quality

The overall delay budget for a voice call from the time one party speaks, to the time the voice is heard by the listener, should not exceed 150 ms for good quality voice over land line connections; although 250 ms is often tolerated for G.711 calls, if there is no packet loss the amount of delay is often longer, but unavoidable, for satellite and other types of wireless connections.

Studies show that as the 150:ms delay budget is exceeded, users perceive the delay as poor voice quality, especially for the compressed codecs. Every time a VoIP packet passes through a device or network connection, delay is introduced. A significant amount of delay is introduced over low:bandwidth connections.

Components of delay

End:to:end delay is caused by many components, such as:

- Propagation delay
- Serialization delay
- queueing delay
- Routing and hop count
- IP Trunk 3.0 (or later) system delay

Propagation delay Propagation delay is affected by the mileage and medium of links traversed. Within an average:size country, one:way propagation delay over terrestrial lines is under 18 ms; within the U.S., the propagation delay from coast:to:coast is under 40 ms. To estimate the propagation delay of long:haul and transoceanic circuits, use the rule:of:thumb of 1 ms per 100 terrestrial miles.

If a circuit goes through a satellite system, estimate each hop between earth stations to contribute 260 ms to the propagation delay.

Serialization delay Serialization delay is the time it takes to transmit the voice packet one bit at a time over a WAN link. The serialization delay depends on the voice packet size and the link bandwidth, and is calculated using the following formula:

$$8 * (\text{IP packet size in bytes}) / (\text{link bandwidth in kbit/s})$$

Table 24 "Serialization delay characteristics (in ms) for different packet sizes and link speeds" (page 151) shows the serialization delay (in ms) for different packet sizes and link speeds.

Table 24
Serialization delay characteristics (in ms) for different packet sizes and link speeds

Link speed in Kbit/s	Packet size									
	40 bytes	80 bytes	88 bytes	136 bytes	184 bytes	232 bytes	280 bytes	520 bytes	1 KB	1.48 KB
56	5.7	11.4	12.5	19.4	26.	33.1	40.0	74.2	146.2	211.4
64	5.0	10.0	11.0	17.0	23.0	29.0	35.0	65.0	128.0	185.0
128	2.5	5.0	5.5	8.5	11.5	14.5	17.5	32.5	64.0	92.5
256	1.2	2.5	2.7	4.2	5.7	7.2	8.7	16.2	32.0	46.2
384	0.8	1.6	1.8	2.8	3.8	4.8	5.8	10.8	21.3	30.8
1000	0.3	0.6	0.7	1.0	1.4	1.8	2.2	4.1	8.1	11.8
1540	0.2	0.4	0.4	0.7	0.9	1.2	1.4	2.7	5.3	7.6
2048	0.1	0.3	0.5	0.71	0.9	1.09	2.0	4.0	4.0	5.7
10000	0.03	0.06	0.07	0.1	0.1	0.18	0.2	0.4	0.8	1.1
100000	0.003	0.006	0.007	0.01	0.015	0.019	0.022	0.04	0.08	0.1
150000	0.002	0.004	0.005	0.007	0.01	0.012	0.013	0.028	0.05	0.079

Table 25 "Serialization delay" (page 151) shows the serialization delay for voice packets on a 64 kbit/s and 128 kbit/s link. The serialization delay on higher speed links are considered negligible.

Table 25
Serialization delay

Codec	Frame duration	Serialization delay over 64 kbit/s link (ms)	Serialization delay over 128 kbit/s link (ms)
G.711A/ G.711U	10 ms	14.00	0.88
	20 ms	24.00	1.50
	30 ms	34.00	2.13
G.729A/ G.729AB	10 ms	5.25	0.33
	20 ms	6.50	0.41
	30 ms	7.75	0.48

Table 25
Serialization delay (cont'd.)

Codec	Frame duration	Serialization delay over 64 kbit/s link (ms)	Serialization delay over 128 kbit/s link (ms)
G.723.1 5.3 kbit/s	30 ms	6.50	0.41
G.723.1 6.3 kbit/s	30 ms	7.00	0.44


Queueing delay Queueing delay is the time it takes for a packet to wait in transmission queue of the link before it is serialized. On a link where packets are processed in first:come:first:serve order, the average queueing time in ms is estimated using the following formula:

$$p \cdot p \cdot (\text{average intranet packet in bytes}) / (1:p) / (\text{link speed in kbit/s})$$

where p is the link utilization level.

The average size of intranet packets carried over WAN links is between 250 and 500 bytes. The following figure shows the average queueing delay of the network based on a 300:byte average packet size.

Figure 35
Queueing delay of various links

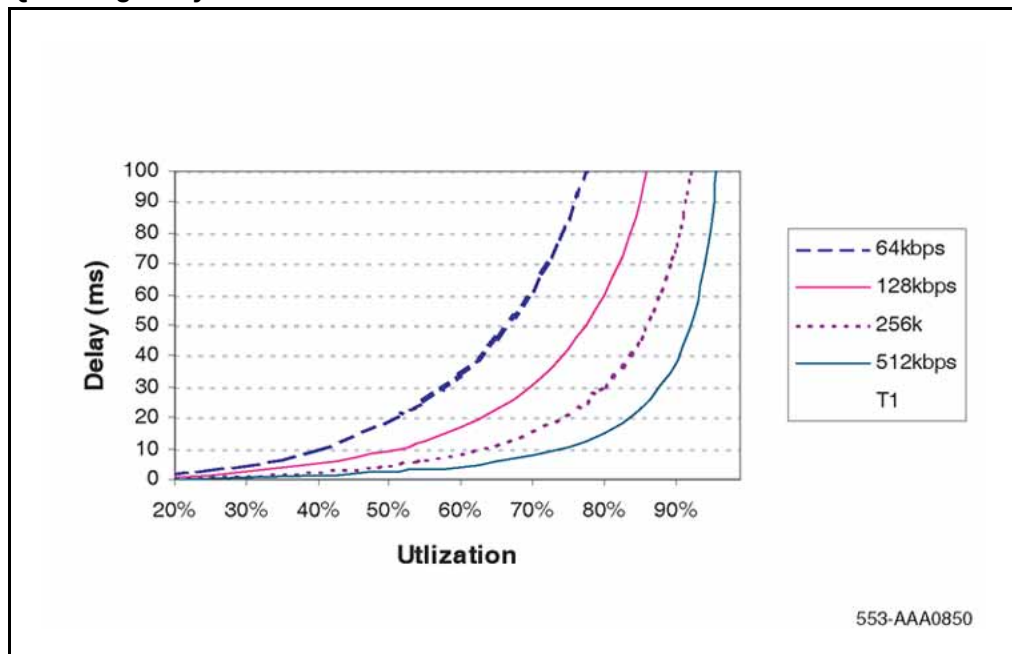

The previous figure shows queueing delays can be significant for links with bandwidth under 512 kbit/s. Higher speed links can tolerate much higher utilization levels.

Routing and hop count Each site pair takes different routes over the intranet. The route taken determines the number and type of delay components that add to end:to:end delay. Sound routing in the network depends on correct network design at many levels, such as the architecture, topology, routing configuration, link, and speed.

VoIP system delay Together, the transmitting and receiving IP Trunk 3.0 (or later) nodes contribute a processing delay of about 33 ms to the end:to:end delay. This is the amount of time required for the encoder to analyze and packetize speech, and is required by the decoder to reconstruct and depacketize the voice packets.

There is a second component of delay that occurs on the receiving IP Trunk 3.0 (or later) node. For every call that terminates on the receiver, there is a jitter buffer which serves as a holding queue for voice packets arriving at the destination ITG. The purpose of the jitter buffer is to smooth out the effects of delay variation, so that a steady stream of voice packets can be reproduced at the destination. The default jitter buffer delay for voice is 60 ms.

Other delay components Other delay components, considered minor, are as follows:

- Router (transit) processing delay
The time it takes to forward a packet from one link to another on the router. In a healthy network, router processing delay is a few milliseconds.
- LAN segment delay
The transmission and processing delay of packets through a healthy LAN subnet takes one or two milliseconds.

Measuring end:to:end network delay

End:to:end delay and error characteristics of the intranet must be measured so the technician can set realistic voice quality expectations for intranet voice services.

The basic tool used in IP networks to measure end:to:end network delay is the ping program. Ping takes a delay sample by sending an ICMP packet from the host of the ping program to a destination server, and waits for the packet to make a round trip.

Some implementations of ping support the :v option for setting the TOS. CS 1000 allows the 8-bit DiffServ/TOS field to be set to any value specified by the IP network administrator for QoS management purposes. For example, a decimal value of 36 entered in TM is interpreted as TOS Precedence = Priority and Reliability = High. If the :v option is not used, and if ping measurements are made on an intranet that uses prioritization based on the TOS field, the round trip time (rtt) measured is higher than the actual delay of voice packets. See [“Queueing” \(page 136\)](#).

ATTENTION

Ensure that the DiffServ bytes are configured to their intended operational values before taking measurements.

CS 1000 also has a utility called remote ping (rPing) so an IP Phone can ping an IP address. The rPing command can be run from the Signaling Server OAM command line interface (CLI). See [“Network Diagnostic Utilities” \(page 223\)](#).

To ensure the delay sample results are representative of the IPLine_Node1:

1. Attach the ping host to a healthy LAN segment.
2. Attach the LAN segment to the router intended to support the IP Telephony node.
3. Choose a destination host by following the same critical guidelines as for the source host.

The size of the ping packets can be any number; the default is 60 bytes.

Sample ping output:

```
IPLine_Node1% ping :s subnetA 60
PING subnetA (10.3.2.7): 60 data bytes
68 bytes from (10.3.2.7): icmp_seq=0 ttl=225 time=97ms
68 bytes from (10.3.2.7): icmp_seq=0 ttl=225 time=100ms
68 bytes from (10.3.2.7): icmp_seq=0 ttl=225 time=102ms
68 bytes from (10.3.2.7): icmp_seq=0 ttl=225 time=97ms
68 bytes from (10.3.2.7): icmp_seq=0 ttl=225 time=95ms
68 bytes from (10.3.2.7): icmp_seq=0 ttl=225 time=94ms
68 bytes from (10.3.2.7): icmp_seq=0 ttl=225 time=112ms
68 bytes from (10.3.2.7): icmp_seq=0 ttl=225 time=97ms
^? :: IPLine_Node1 ping Statistics ::
8 packets transmitted, 8 packets received, 0% packet loss
round:trip (ms) min/avg/max = 94/96/112
```

Ping results can vary.

ATTENTION

The round:trip time (rtt) is indicated by the time field.

Assessment of sample ping output The rtt from the PING output varies as you can only obtain a delay characteristic of the intranet from repeated rtt sampling. To obtain a delay distribution, the ping tool can be embedded in a script that controls the frequency of the ping probes and timestamps and stores the samples in a raw data file. The file can then be analyzed later using a spreadsheet or another application. The technician can also check if the intranet network management software includes delay measurement modules that can obtain a delay distribution for a specific route.

Delay characteristics vary depending on the site pair and the time:of:day. The site pair is defined as the measurement between the host IP Line and the remote subnet (for example, IP Line to subnet A in [Figure 28 "Large campus network example" \(page 116\)](#)). The assessment of the intranet must include taking delay measurements for each IP Line site pair. If there is a significant variation of traffic on the intranet, include ping samples during the intranet peak hour. For a complete assessment of delay characteristics of the intranet, obtain ping measurements over a period of at least one week.

Adjusting ping statistics

Ping statistics measure the intranet prior to CS 1000 installation, the measurement does not take into consideration the expected load created by CS 1000users.

One:way and round:trip Ping statistics are based on round:trip measurements, while QoS metrics in the Transmission Rating model are one:way. Halve the delay and packet error ping statistics to ensure the comparison is valid.

Adjustment due to IP Line processing Ping statistics are measured from ping host to ping host. Transmission Rating QoS metrics are from end user to end user, and include components outside the intranet. The ping statistic for delay needs to be further modified by adding 93ms to account for the processing and jitter buffer delay of the nodes.

There is no need to adjust error rates.

If the intranet measurement barely meets the round:trip QoS objectives, the technician must be aware of the possibility that one:way QoS is not being met in one of the directions of flow. This can apply even if the flow is on a symmetric route due to asymmetric behavior of data processing services.

Other measurement considerations

If the intranet capacity is tight and the VoIP traffic significant, consider making intranet measurements under load. Load can be applied using traffic generator tools. The amount of load should match the IP Trunk:offered traffic estimated in [“Prerequisites” \(page 141\)](#).

Reducing delays

Link delay is the time it takes for a voice packet to be queued on the transmission buffer of a link until it is received at the next hop router. Link delay can be reduced by:

- Upgrading link capacity — to reduce the serialization delay of the packet, and also reduce link utilization and queueing delay. Before you upgrade a link, the technician must check both routers connected to the link and ensure compliance with router configuration guidelines.
- Implementing QoS mechanisms

To determine the links to upgrade, list all intranet links that support the IP Line traffic. This can be derived from the traceroute output for each site pair. Use the intranet link utilization report and note the links used most often and the slowest links. Estimate the link delay of suspect links using the traceroute results.

Example A 256 kbit/s link from router1 to router2 has a high utilization. The following traceroute output traverses this link:

```
IPLine_Node1% traceroute SubnetA
traceroute to SubnetA (10.3.2.7), 30 hops max, 32 byte
packets
  router1 (10.8.0.1) 1 ms 1 ms 1 ms
  router2 (10.18.0.2) 42 ms 44 ms 38 ms
  router3 (10.28.0.3) 78 ms 70 ms 81 ms
  router4 (10.3.0.1) 92 ms 90 ms 101 ms
  SubnetA (10.3.2.7) 94 ms 97 ms 95 ms
```

The average rtt time on the example link is 40 ms. The one:way link delay is 20 ms, of which the circuit transmission and serialization delay are just a few milliseconds. Most of the link delay is due to queueing.

Reducing hop count

Consider the current network topology and whether a more efficient design which reduces hop count can be implemented. Reducing hops reduces fixed and variable IP packet delay, improves VoIP QoS and can also simplify end:to:end QoS engineering for packet delay, jitter, and packet loss.

Recording routes

The traceroute tool records routing information for all source:destination pairs as part of the network assessment. An example of traceroute output is shown below:

```
ipline_node1% traceroute subnetA
traceroute to subnetA 10.3.2.7, 30 hops max, 32 byte packets
 1  r6 (10.8.0.1) 1 ms  1 ms  1 ms
 2  r5 (10.18.0.2) 42 ms 44 ms 38 ms
 3  r4 (10.28.0.3) 78 ms 70 ms 81 ms
 4  r1 (10.3.0.1) 92 ms 90 ms 101 ms
 5  subnetA (10.3.2.7) 94 ms 97 ms 95 ms
```

Traceroute is also used to verify whether routing in the intranet is symmetric for each source:destination pair. This is done using the **:g** loose source routing option, for example:

```
ipline_node1% traceroute :g subnetA ipline_node1
```

For information about the rTraceRoute command, see [“Network Diagnostic Utilities” \(page 223\)](#).

Routing issues

Unnecessary delay can be introduced by routing irregularities. A routing implementation can overlook a substantially better route. A high:delay variation can be caused by routing instability, incorrectly configured routing, inappropriate load splitting, or frequent changes to the intranet. Severe asymmetrical routing results in one site perceiving a poorer QoS than another.

The traceroute program can be used to uncover routing anomalies. Then routing implementation and policies can be audited and corrected.

Jitter

Jitter (also known as variable delay) is the variation in the amount of time it takes for consecutive packets to travel from sender to receiver. There is a fixed baseline delay (the absolute fastest time for a voice packet to pass through the network), and a variation in packet flow. The variation in the delay is jitter.

The primary cause of jitter (variable delay) is contention (competition for network access), also known as queueing delay. Variable delays are affected by the amount of network traffic.

Jitter has a pronounced effect on real:time, delay:sensitive applications, such as video and voice. These applications need to receive packets at a constant rate, with a fixed delay between consecutive packets. If the

arrival rate varies, jitter occurs and application performance degrades. Minimal jitter might be acceptable, but if jitter increases, the application could become unusable.

Some settings on devices such as VoIP gateways and IP Phones can compensate for a finite (specified) amount of jitter.

If an adaptive jitter buffer is used, delay is kept to a minimum during periods of low jitter. The adaptive buffer can adjust to high levels of jitter, within a limited range, during periods of high traffic volume. If the network becomes congested, jitter and packet loss can become undefined, and real-time interactive applications can become unusable.

Voice applications require the voice packets to be fed to the decoder at a constant rate. If the next voice packet does not arrive in time to take its turn to be decoded, the packet is considered lost. Packet Loss Concealment (PLC) attempts to smooth over the lost voice packet. PLC replays the previous voice packet until the next voice packet arrives. A PLC algorithm can repair losses of 40:60 ms. Longer gaps in the signal must be muted. If jitter is high, whole groups of packets can be late or lost, and output can contain muted segments.

All networks have some jitter, due to differences in delay at each network node, as packets are queued. If jitter is contained within specified limits, QoS can be maintained.

In VoIP, jitter is the total amount of variable delay encountered during the end-to-end processing of voice packets.

Jitter buffers are used on the receive-side of a call to smooth out small variations in the packet time of arrival. This allows data to be unpacked and sent to the decoder as a constant stream. As all buffering increases end-to-end delay, jitter buffer length (duration) must be kept to a minimum. If a network has been engineered to have minimal jitter, the jitter buffer can be very small.

The following factors contribute to the total variation in delay:

- packet contention during node queueing
- network conditions, such as routing and transmission queueing
- router and switch (statistical multiplexer) performance under load
- link speed
- voice and data packet size
- exit (egress) queue buffer size

Queueing delay occurs at the exit port of every device on the network.

Call Admission Control (CAC) performs packet admission and blocking functions. Voice packets are admitted to the network when the network can adequately support them. The packets are denied admission when the network cannot support them as defined in the Service Level Agreement.

When voice and data packets share a low-speed WAN connection (< 1 Mbit/s), the larger data packets introduce queueing delay to the smaller voice packets waiting to queue onto the WAN connection. Therefore, the smaller voice packets do not arrive at the same fixed time interval as they are transmitted from their source. The arrival time of the voice packets varies because interjected data packets of varying sizes introduce a varying amount of jitter (queueing delay).

Jitter buffers

When voice and data packets share a high-speed connection (> 1 Mbit/s), the jitter introduced by the WAN connection becomes insignificant. The jitter in high-speed networks is affected by the buffer size of a router and the load/congestion in the router. Jitter buffers are designed to smooth out irregular packet arrival by collecting incoming packets and holding them in a buffer long enough to allow the slowest packets to arrive. The packets are then played in the correct sequence. Jitter buffers solve the late and lost packet problem, but add to total end-to-end delay.

Late packets

Packets that arrive outside the window allowed by the jitter buffer are discarded by IP Line. To determine which ping samples to ignore, calculate the average one-way delay based on all the samples.

To calculate late packets, double the value of the nominal jitter buffer setting. For example, assume:

- the average one-way delay is 50 ms
- the jitter buffer is set to a nominal (or average) value of 40 ms
- the maximum value is $2 \times 40 + 50 = 130$ ms

Therefore, any packet with a one-way delay of greater than 130 ms is late, and must be added to the total number of packets lost.

Adjusting jitter buffer size

The jitter buffer parameters directly affect end-to-end delay. Lowering the voice playout settings decreases one-way delay, but there is less waiting time for voice packets that arrive late.

The jitter buffer setting is configured on the voice gateway channels of the Voice Gateway Media Card, and are sent out to IP Phones. The jitter buffer size is set when you configure the DSP Profiles:

- in the IP Telephony application
- in the selected codec in Element Manager

The jitter buffer is statically configured and is the same for all devices in the network. The jitter buffer size range is 0:200 ms. The default jitter buffer value is 50 ms. However, the jitter buffer setting that is used on the Voice Gateway Media Card is a multiple of the codec frame size. The setting is automatically adjusted to be greater than or equal to the jitter buffer value set in the DSP Profile tab. As each call is set up, the jitter buffer for each device is set to the nearest whole number increment of the selected codec frame size.

For example, if the jitter buffer is configured as the default 50 ms in the DSP Profiles, but a 20 ms codec is used, the jitter buffer is set to 60 ms, which is the nearest whole number increment.

$$50 \text{ ms} / 20 \text{ ms} = 2.5$$

2.5 rounded up to the nearest whole number increment is 3

$$3 \times 20 \text{ ms} = 60 \text{ ms}$$

If the jitter buffer is configured as zero, the depth of the jitter buffer is set to the smallest value the device can support. In practice, the optimum depth of the jitter queue is different for each call. For telephones on a local LAN connection, a short jitter queue is desirable to minimize delay. For telephones several router hops away, a longer jitter queue is required.

Lowering the jitter buffer size decreases the one:way delay of voice packets. If the setting for the jitter buffer size is too small, packets are discarded unnecessarily. Discarded packets result in poor speech quality and can be heard as clicks or choppy speech.

If the technician decides to discard packets to downsize the jitter buffer, the technician must do the following:

- Check the delay variation statistics.
Obtain the one:way delay distributions that originate from all source IP Line sites.
- Compute the standard deviation of one:way delay for every flow.
Some traffic sources with few hop counts yield small delay variations, but it is the flows that produce great delay variations that should be used to determine whether it is acceptable to resize the jitter buffer.
- Compute the standard deviation (s) of one:way delay for that flow.

Do not set the jitter buffer size smaller than 2 seconds.

The IP Phone firmware must also be configured for jitter buffers. However, instead of specifying the jitter buffer size in ms, it is configured with the number of frames to be held in the jitter buffer, such as 1, 2, or 3.

ATTENTION

To achieve maximum voice quality, Nortel strongly recommends that IP Phone firmware be configured with a jitter buffer size of 3; however, a well-engineered network can function with a jitter buffer size of 2, which increases perceived voice quality.

Jitter measurement tools

After a CS 1000 system has been installed, the average jitter experienced by IP Phones or media cards may be monitored on a per-call basis by using the RTPTraceShow command from the signaling server CLI. The CS 1000 system can also be configured to transmit SNMP alarms an average jitter level is exceeded.

Packet loss

Packet loss is the number of packets lost during transmission. It is usually measured as a percentage of the total packets exchanged.

Physical medium loss

Loss can occur due to errors created by the physical medium used to transmit the data.

Most land line connections have very low loss, measured in Bit Error Rate (BER). Wireless connections, such as satellite, mobile, or fixed wireless networks have a high BER. The BER can vary due to the following:

- radio frequency interference
- cell hand-off during roaming calls
- weather conditions, such as fog and rain
- physical obstacles, such as trees, buildings, and mountains

Wireless technology usually transmits redundant information, as packets are often dropped during transmission due to the physical medium.

Congestion loss

Congestion loss consists of true loss (buffer overflow at router queues) and late packets. Loss also occurs when congested network nodes drop packets. The majority of packet loss is caused by congestion.

VoIP uses User Datagram Protocol (UDP). UDP is a connectionless protocol which, unlike TCP, cannot retransmit lost packets. A packet is sent from the source to the destination with no means to determine if that packet was received or not.

If a network becomes congested to the point that packets are lost, voice quality is degraded. Traffic is discarded if the transmit queue of an uplink has less available bandwidth than the total amount of bandwidth trying to use that link. This situation is also known as a bottleneck.

Congestion can lead to packet loss. Mechanisms to avoid network congestion can be used. One such mechanism is called Random Early Discard (RED), which deliberately drops packets after the network traffic reaches a specified threshold. The dropped packets cause TCP to reduce its window size and send fewer packets, thus reducing network traffic. RED provides congestion control only for applications or protocols that have the TCP-like ability to reduce network traffic.

UDP packets dropped in a network cannot be retransmitted. Flow rates are not adjusted by devices that communicate through UDP.

Without discard priorities, you must separate packets into different queues in a network node to provide different levels of service. This is expensive to implement, as only a limited number of hardware queues (usually eight or fewer) are available on networking devices. Though some devices have software-based queues, their increased use reduces network node performance.

With discard priorities, although packets are placed in the same queue, they are divided into virtual subqueues, determined by their assigned discard priority. For example, if a product supports three discard priorities, the product queue provides three subqueues and; therefore, three QoS levels.

Packets are usually lost due to a router dropping packets when links are congested.

Individual packets that are delayed much more than the baseline delay (variable delay) are referred to as jitter. Excess jitter causes packet loss that can result in choppy or unintelligible speech.

Packet loss occurs

- during network congestion
- as a result of misconfigured LAN settings

- as a result of misconfigured clock settings
- if bit errors in the network

ATTENTION

To achieve maximum voice quality, Nortel strongly recommends that packet loss = 0%.

Packet Loss Concealment (PLC) is used to minimize the noticeable effects of packet loss.

Measuring end-to-end packet loss

After a CS 1000 installation, check RTPTraceShow and PVQM SNMP alarms.

The ping program also reports whether the ICMP packet successfully completed its round trip. Use the same ping host setup to measure end-to-end error, and in making delay measurements, use the same packet size parameter.

Multiple ping samples must be used when sampling for error rate. Packet loss rate (PLR) is the error rate statistic collected by multiple ping samples. To be statistically significant, at least 300 samples must be used. Obtaining an error distribution requires that you run ping over a long period of time.

Packet Loss Concealment

The term codec stands for coder/decoder. A codec executes a compression algorithm (a specialized computer program) that reduces the number of bytes required to encode digital data. This reduces packet size and bandwidth requirements. As well, smaller packets are less likely to be lost.

Codecs designed for packet networks, such as G.729, have built-in Packet Loss Concealment (PLC). PLC minimizes the impact of lost packets on an audio signal, by mixing in synthesized speech derived from previous packets.

When a speech codec operates in normal mode, a receiver decodes packets and sends the output to an audio port. A PLC algorithm saves a copy of the recent audio output, which is used to create a signal to replace the missing speech if lost data is encountered. How this information is used depends on the PLC algorithm. Some simple algorithms smooth over gaps in the signal to remove clicks. Other algorithms replay an earlier packet to fill in the gap. More sophisticated algorithms tweak the replacement signal to make it sound natural. The best algorithms can

repair a 20 to 40 ms gap with little audible distortion. The PLC operates constantly, generating speech to replace the next packet in the event it is lost. The use of a PLC adds a small fixed delay to the call baseline delay.

PLC is necessary to achieve acceptable IP speech quality.

Reducing packet loss

Packet loss in intranets is generally related to congestion in the network. Bottlenecks in links occur with high packet loss due to packets dropped because they arrive faster than the link can transmit them. The task of upgrading highly utilized links can remove the source of packet loss on a particular flow. An effort to reduce hop count gives fewer opportunities for routers and links to drop packets.

Other causes of packet loss, not related to queueing delay, are as follows:

- Poor link quality — the underlying circuit could have transmission problems, high line error rates, and be subject to frequent outages. The circuit might possibly be provisioned on top of other services, such as X.25, Frame Relay, or ATM. Check with the service provider for information.
- Overloaded CPU — this is a commonly monitored statistic collected by network management systems. If a router is overloaded, it constantly performs processing-intensive tasks, which impede the router from forwarding packets. Determine the CPU utilization threshold and check if a suspect router conforms to it. The router may need to be reconfigured or upgraded.
- Saturation — routers can be overworked when configured with too many high capacity and high traffic links. Ensure that routers are dimensioned according to vendor guidelines.
- LAN saturation — packets may be dropped on under engineered or faulty LAN segments.
- Jitter buffer too small — packets that arrive at the destination, but too late to be placed in the jitter buffer, should be considered lost packets.
- Frame slips — ensure that clocks are synchronized correctly.

Network delay and packet loss evaluation example

From ping data, calculate the average one-way delay (halved from ping output and adding 93 ms IP Trunk 3.0 (or later) processing delay) and standard deviation for latency. Perform a similar calculation for packet loss without adjustment.

Add a standard deviation to the mean of both delay and loss for planning purposes. A customer might want to know whether traffic fluctuation in their intranet reduces the user QoS.

Table 26 "Sample measurement results for G.729A codec" (page 165) provides a sample measurement of network delay and packet loss for the G.729A codec between various nodes.

Table 26
Sample measurement results for G.729A codec

Destination pair	Measured one:way delay (ms)		Measured packet loss (%)		Expected QoS level (See Table 31 "QoS levels" (page 168))	
	Mean	Mean+s	Mean	Mean+s	Mean	Mean+s
Santa Clara/ Richardson	171	179	1.5	2.1	Excellent	Good
Santa Clara/ Ottawa	120	132	1.3	1.6	Excellent	Excellent
Santa Clara/ Tokyo	190	210	2.1	2.3	Good	Good
Richardson/ Ottawa	220	235	2.4	2.7	Good	Good

As an example, the delay and loss pair of traffic from Santa Clara to Richardson (171 ms and 1.5%) will meet the excellent criterion, but their counterpart with standard deviation (179 ms and 2.1%) can achieve only good QoS.

In contrast, the site pair Santa Clara/Ottawa has both QoS levels of mean and mean+s falling in the excellent region. The customer has more confidence that during peak traffic period, the excellent service level is likely to be upheld (better than 84% chance under the assumption of Normal distribution).

Estimate voice quality

The perceived quality of a telephone call depends on many factors, such as codec characteristics, end-to-end delay, packet loss, and the perception of the individual listener.

The E:Model Transmission Planning Tool produces a quantifiable measure of voice quality based on relevant factors. For more information about the E:Model and its application, see the ITU-T recommendations E.107 and E.108.

A simplified version of the E:Model is applied to provide an estimate of the voice quality that the user can expect, based on various configuration choices and network performance metrics.

The simplified E:Model is as follows:

$$R = 94 - lc - ld - lp$$

where

lc = (see [Table 27 "Impairment factors of codecs" \(page 166\)](#))

ld = delay impairment (see [Table 28 "Impairment factors due to network delay" \(page 167\)](#))

lp = packet loss impairment (see [Table 29 "Impairment factors due to packet loss" \(page 167\)](#))

ATTENTION

This model takes into account some characteristics of the IP Phone and; therefore, the impairment factors are not identical to those shown in the ITU:T standards.

See [Table 30 "R value translation" \(page 167\)](#) for the translation of R values into user satisfaction levels.

Table 27
Impairment factors of codecs

Codec	Codec impairment (lc) (ms frames)
G.711	0
G.711 a:law	8
G.711 mu:law	0
G.723.1	4
G.729A G.729AB	18
G.729A/AB	11 : 20 or 30
G.729A/AB	16 : 40 or 50
G.723.1 (5.3 kbit/s)	19
G.723.1 (6.3 kbit/s)	15

Table 28
Impairment factors due to network delay

Network delay* (ms)	Delay impairment (ld)
0 : 49	0
50 : 99	5
100 : 149	10
150 : 199	15
200 : 249	20
250 : 299	25
* Network delay is the average one:way network delay plus packetization and jitter buffer delay.	

Table 29
Impairment factors due to packet loss

Packet loss (%)	Packet Lose Impairment (lp)
0	0
1	4
2	8
4	15
8	25

Table 30
R value translation

R Value (lower limit)	MOS	User Satisfaction
90	4.5	Very satisfied
80	4.0	Satisfied
70	3.5	Some users dissatisfied
60	3.0	Many users dissatisfied
50	2.5	Nearly all users dissatisfied
0	1	Not recommended

Use [Table 31 "QoS levels" \(page 168\)](#) to estimate the voice quality level based on performance measurements of the intranet. To limit the size of this table, the packet loss and one:way delay values are tabulated in increments of 1% and 10 ms, respectively. The techniques used to determine and apply the information in this table are proprietary to Nortel.

Table 31
QoS levels

Network delay (ms)	Packet loss (%)	Voice quality level		
		G.711 20	G.729A/AB 30	G.723.1 (6.3 kbit/s) 30
0 – 49	0	excellent	good	fair
	49	1	excellent	fair
	49	2	good	fair
	49	4	fair	poor
	49	8	poor	not recommended
50 – 99	0	excellent	fair	fair
	99	1	good	fair
	99	2	good	poor
	99	4	fair	poor
99	8	poor	not recommended	not recommended
100 – 149	0	good	fair	fair
	149	1	good	poor
	149	2	fair	poor
	149	4	fair	not recommended
	149	8	poor	not recommended
150 – 199	0	fair	poor	poor
	199	1	fair	good
	199	2	fair	fair
	199	4	poor	not recommended
	199	8	not recommended	not recommended
200 – 249	0	poor	not recommended	not recommended
	249	1	poor	not recommended
249	2	poor	not recommended	not recommended
249	4	not recommended	not recommended	not recommended
249	8	not recommended	not recommended	not recommended
250 – 299	0	poor	not recommended	not recommended
	299	1	poor	not recommended
	299	2	poor	not recommended

Note: The QoS levels are equivalent to the following MOS values:
excellent = 4.5, good = 4, fair = 3, poor = 2, and not recommended = less than 2.

Table 31
QoS levels (cont'd.)

Network delay (ms)	Packet loss (%)	Voice quality level		
		G.711 20	G.729A/AB 30	G.723.1 (6.3 kbit/s) 30
299	4	not recommended	not recommended	not recommended
299	8	not recommended	not recommended	not recommended
Note: The QoS levels are equivalent to the following MOS values: excellent = 4.5, good = 4, fair = 3, poor = 2, and not recommended = less than 2.				

Sample scenarios

The following examples provide sample scenarios.

Scenario 1 A local LAN has the following characteristics:

- G.711 codec
- 20 ms network delay
- 0.5% packet loss

To calculate $R = 94 : I_c : I_d : I_p$, use [Table 27 "Impairment factors of codecs" \(page 166\)](#), [Table 28 "Impairment factors due to network delay" \(page 167\)](#), and [Table 29 "Impairment factors due to packet loss" \(page 167\)](#):

- G.711 codec: $I_c = 0$
- 20 ms network delay: $I_d = 0$
- 0.5% packet loss: $I_p = 2$

Then:

$$R = 94 : 0 : 0 : 2$$

$$R = 92$$

Use the values in [Table 31 "QoS levels" \(page 168\)](#), a value of 92 means the users are very satisfied.

Scenario 2 A campus network has the following characteristics:

- G.711 codec
- 50 ms delay
- 1.0% packet loss

To calculate $R = 94 : I_c : I_d : I_p$, use [Table 27 "Impairment factors of codecs" \(page 166\)](#), [Table 28 "Impairment factors due to network delay" \(page 167\)](#), and [Table 29 "Impairment factors due to packet loss" \(page 167\)](#):

- G.711 codec: $I_c = 0$
- 20 ms network delay: $I_d = 5$
- 0.5% packet loss: $I_p = 4$

Then:

$$R = 94 : 0 : 5 : 4$$
$$R = 85$$

Use the values in [Table 31 "QoS levels" \(page 168\)](#), a value of 85 means that the users are satisfied.

Scenario 3 A WAN has the following characteristics:

- G.729 codec
- 30 ms network delay
- 2% packet loss

To calculate $R = 94 : I_c : I_d : I_p$, use [Table 27 "Impairment factors of codecs" \(page 166\)](#), [Table 28 "Impairment factors due to network delay" \(page 167\)](#), and [Table 29 "Impairment factors due to packet loss" \(page 167\)](#):

- G.711 codec: $I_c = 11$
- 20 ms network delay: $I_d = 5$
- 0.5% packet loss: $I_p = 8$

Then:

$$R = 94 : 11 : 5 : 8$$
$$R = 70$$

Use the values in [Table 31 "QoS levels" \(page 168\)](#), a value of 70 means some users are dissatisfied.

Expected voice quality evaluation

At the end of measurement and analysis, there should be a good indication if the corporate intranet in its present state can deliver adequate voice and fax services. Looking at the Expected QoS level column in [Table 26 "Sample measurement results for G.729A codec" \(page 165\)](#), the QoS level for each site pair can be gauged.

In order to offer voice and fax services over the intranet, keep the network within Good or Excellent QoS level at the Mean+s operating region. Fax services should not be offered on routes that have only Fair or Poor QoS levels.

If the expected QoS levels on some or all routes fall short of Good, evaluate the options and costs to upgrade the intranet. Estimate the reduction in one-way delay that must be achieved to raise the QoS level. You can raise QoS levels through a link upgrade, topology change, or an implementation of QoS in the network.

A decision can be made to keep costs down and accept a temporary Fair QoS level for a selected route. In this case, having made a calculated trade-off in quality, carefully monitor the QoS level, reset expectations with the end users, and be receptive to user feedback.

ATTENTION

Nortel strongly recommends a minimum R:value of 70.

LAN design

This section describes the requirements to create and maintain a robust, redundant server network.

CS 1000 Release 6.0 configurations

A CS 1000 Release 6.0 system has 3 basic configurations designed to meet varying network requirements:


- The “Normal” configuration suitable to larger installations which deploy multiple ELAN subnets or multiple CS 1000 systems within the same UCM Security Domain.
- The “Small” configuration suitable for single system installations with a single ELAN subnet interconnecting all of the CS 1000 dependent elements.
- The “Managed Services” configuration which is suited to installations where complete isolation between the ELAN or “Signaling and Management Network” and the various “Enterprise Networks” is required.

Normal configuration

The Normal configuration, shown in [Figure 36 "Normal configuration" \(page 172\)](#), is similar to existing CS 1000 installations where all TLAN subnets are routed to a single Enterprise Network. In CS1000 Release 6.0, this configuration requires that the ELAN or Intra-System Signaling and Management Network be routed to/from the Enterprise Network. A firewall is recommended between the networks to protect the intra-system

signaling on the ELAN. The TLAN subnets should be separate from other subnets in the enterprise network and it is recommended that these subnets be isolated from the enterprise network using firewalls.

Figure 36
Normal configuration

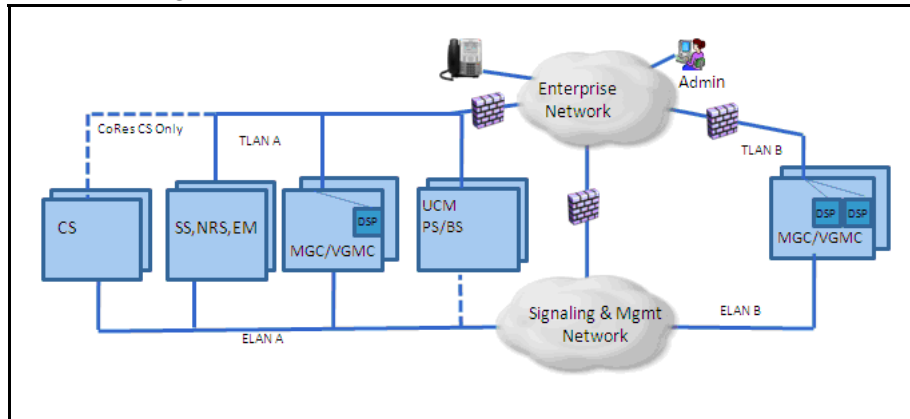

When installing a CS 1000 system in the Normal configuration, all members of the system are registered with the UCM security domain using the TLAN IP address (or FQDN) of the UCM Primary Security server. The FQDN of each member is associated with the TLAN IP address of the member. Installation steps as currently documented in the NTP documents is followed.

On CS 1000 systems which deploy more than one ELAN subnet, static routes must be created on the CS 1000 elements to ensure that the data traffic between CS 1000 elements and between the CS 1000 elements and external systems or elements is routed properly via the correct network. The required routing is shown in “[Configuration of Static IP Routes](#) ” (page 176).


Small configuration

The Small configuration (see [Figure 37 "Small configuration" \(page 173\)](#)) is intended for small systems where there is a single Call Server with a single ELAN subnet linking all of the CS 1000 elements, including the UCM Primary Security Server. No routing is required between the ELAN subnet and the TLAN / Enterprise Network. The characteristics of systems using this configuration are:

- UCM Security Domain consists of a single Call Server system (can be High Availability)
- Single ELAN subnet, no routing required
- No SNMP Management required (only available via ELAN)

Management access is via the Enterprise Network (TLAN). A VxWorks call server deployed in this configuration must use the EM Virtual Terminal application for network access to the command line.

Figure 37
Small configuration

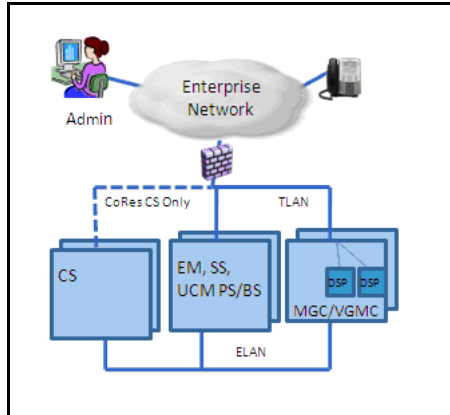

When installing a CS 1000 in Small configuration (see [Figure 37 "Small configuration" \(page 173\)](#)), the Linux elements register to the UCM Security Domain using the TLAN IP (or FQDN) of the UCM Primary Security Server. VxWorks elements such as Media Cards or Media Gateway Controllers or VxWorks Call Servers register to the UCM Security Domain using the ELAN IP address of the UCM Primary Security Server. The LD 117 **REGISTER UCMSECURITY SYSTEM** command can be used to register the Call Server and dependent MGCs and Media Cards to the UCM Security Domain, however, when prompted for the IP address of the UCM Primary Security Server, its ELAN IP address must be specified which may be different than the default value that is displayed (Linux Co-Resident case).

In the Small configuration, there is only a single ELAN subnet and therefore no additional static routes are required for correct routing.


Managed Services configuration

The Managed Services configuration is intended for networks where there are multiple isolated customer networks or where the higher security of complete isolation of the Enterprise Network (TLANs) from the Signaling and Management Network (ELANs) is required. In this configuration all management, including access to UCM is available only via the Signaling and Management Network (ELANs). Management access from the enterprise network(s) requires VPN access to the Signaling and Management Network.

In the Managed Services configuration, as shown in [Figure 38 "Managed services configuration" \(page 174\)](#), the management interfaces on the UCM primary, backup and Linux member servers will be referenced using

the FQDNs as in the other configurations; however in this configuration the FQDNs will be assigned to the ELAN IP addresses of the primary, backup and Linux member servers.

Figure 38
Managed services configuration

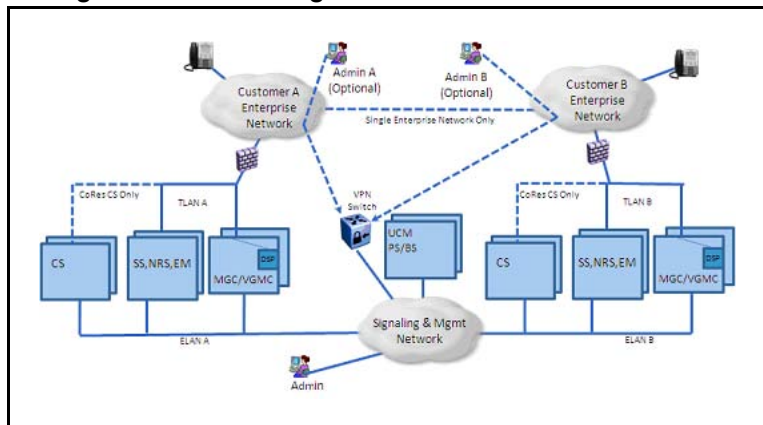

The characteristics of systems using the Managed Services configuration are:

- Complete isolation between Signaling and Management Network (ELANs) and Enterprise Network (TLANs)
- May have multiple ELANs making up the Signaling & Management Network
- May have multiple TLANs in a Customer Enterprise network
- May have multiple, isolated Customer Enterprise Networks typically with one or more telephony nodes or CS 1000 systems
- Primary management access is via the isolated Signaling and Management Network or via VPN access from the Enterprise Network(s)
- SNMP Management access requires direct or VPN access to the Signaling and Management Network (ELANs)

When installing Linux members of a CS 1000 System in the Managed Services configuration, complete the following procedure.

Procedure 1
Installing Linux members in the Managed Services configuration

Step	Action
1	Install Nortel Linux Base using the normal procedure on UCM primary, backup or Linux member servers

- 2 In the DNS server, if using, assign FQDNs to be associated with the IP addresses assigned to the ELAN interfaces on the UCM Primary, backup or Linux member servers. If not using a DNS server, these assignments should be added to the “hosts” file on any systems that are accessing these elements. This may need to be done in advance of Step 1 to ensure sufficient DNS propagation time.
- 3 Prior to performing the security setup of the newly installed UCM Primary, backup or Linux member servers, execute the command `opt/nortel/base/bin/fqdnreassign` from the CLI of the Linux Element using the root account. This will associate the FQDN entered during installation with the ELAN IP address instead of the default TLAN IP address.
- 4 Restart the server.
- 5 Configure the required static routes on the server. See [“Configuration of Static IP Routes ” \(page 176\)](#).
- 6 Perform the security configuration, specifying the FQDN (or ELAN IP) of the UCM Primary Server. This will map to the IP address of the UCM Primary on the Signaling & Management Network (ELAN).

--End--

To ensure that the data traffic between CS 1000 elements and between the CS 1000 elements and external systems or elements is routed properly via the Signaling & Management Network, static routes must be created on the CS 1000 elements. The required routing is shown in [“Configuration of Static IP Routes ” \(page 176\)](#).

Hybrid Managed Services configuration


The Hybrid Managed Services configuration is intended for networks that contain a mixture of systems in the Normal configuration and systems in the Managed Services configuration. For systems that are on the Normal side, either complete call server systems or individual IP telephony nodes, are configured similar to the Normal configuration. On the Normal side there must be only one Customer Enterprise Network and this network must have routing configured between it and the Signaling and Management network. The systems on the Managed Services side, either complete call server systems or individual IP telephony nodes, are configured similar to the Managed Services Configuration where there are one or more isolated customer networks and there is no routing configured between these Customer Networks and the Signaling & Management network. The UCM Primary and Backup Servers must be installed with their FQDN on either Signaling & Management network or on the Normal

side customer network and can be co-resident with other applications on the appropriate side. See [Figure 39 "Hybrid Managed Services configuration" \(page 176\)](#).

In this configuration all management, including access to the UCM Primary Server, is accessible from either the Normal side customer network A or via the Signaling and Management Network. Management access from the Managed Services side customer networks requires VPN access to the Signaling and Management Network.

In the Hybrid Managed Services Configuration, the management interfaces on the UCM primary, backup and Linux member servers will be referenced using the FQDNs as in the other configurations; however in this configuration the FQDNs will be assigned to the ELAN IP addresses of the Linux member servers on the Managed Services side. See [Figure 39 "Hybrid Managed Services configuration" \(page 176\)](#).

Figure 39
Hybrid Managed Services configuration

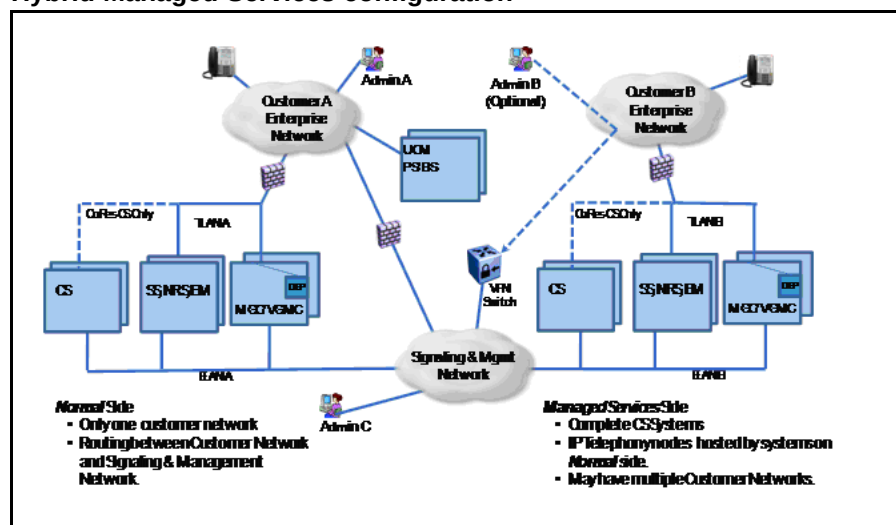

When installing the Hybrid Managed Services Configuration, the UCM Primary, Backup and Linux Member servers on the Normal side are installed as in the Normal Configuration and Linux Member servers on the Managed Services side are installed following the procedures for the Managed Services Configuration. All VxWorks based elements including MGCs, VGMCs and any VxWorks based Call Servers are registered to the FQDN of the UCM Primary Server (or the IP address corresponding to the FQDN).

Configuration of Static IP Routes

To ensure the signaling and management data traffic flows over the correct networks, static IP routes must be added to the various CS 1000 elements. The required routing is shown in [Table 32 "Static IP Route Configuration"](#)

(page 177). In all cases, routes are not required when the destination is on the same ELAN subnet as the member. In many situations, use of network routes, such as to each other ELAN subnet or possibly to the entire range of ELAN subnets can be used to reduce the number and maintenance of the manual routes, however this depends upon the particular IP address ranges assigned to the ELAN subnets.

- All routes are created to direct the traffic to the ELAN gateway.
- Unless specified, the IP address associated with the FQDN of the element is used.
- Asymmetrical routing (e.g. request/response via different networks) may be blocked by some firewalls. Appropriate routing as indicated must be configured to avoid these conditions.
- Correct use of ISSS to secure management and signaling traffic requires this traffic to be on the designated networks and may not function properly without the appropriate routing configuration.

Table 32
Static IP Route Configuration

Element Type For Linux elements, this is based on UCM role (primary, backup, member) and deployment manager packages	Configuration	Destination(s)	Comments
UCM Primary, UCM Backup	Normal		Default TLAN route is used
	Managed Services	ELAN addresses of all members of the security domain (CS, EM, SS, VGMC, MGC, UCM Primary/Backup)	Network routes are recommended. Default route is via TLAN
HA CS (VxWorks) (Created using LD 117 commands)	Normal	All (0.0.0.0/0)	Only a single network interface therefore default route can be used, but must be configured.
	Managed Services	All (0.0.0.0/0)	

Co-Res CS (Linux)	Normal	ELAN addresses of MGCs, VGMCs, GR CSs, EM, SSs, SIPLs, TM, CallPilot, and Contact Center.	If using the AML Link splitting feature on a co-resident SS, routing to applications using this interface may not be required. Default route is via TLAN.
	Managed Services	UCM Primary, UCM Backup, management stations, and ELAN addresses of MGCs, VGMCs, GR CSs, EM, SSs, SIPLs, TM, CallPilot, Contact Center, VPN Switch subnet, 3rd Party Systems.	
EM (Created using Linux Base Manager)	Normal	ELAN addresses of Call Server and dependent elements (CS, MGC, VGMC, SS and SIPL)	Default route is via TLAN.
	Managed Services	UCM Primary, UCM Backup, management stations and ELAN addresses of Call Server & dependent elements (CS, MGC, VGMC, SS and SIPL), VPN Switch subnet.	
Signaling Server, SIPL (Created using Linux Base Manager)	Normal	ELAN address of EM. ELAN address of Feigns in same IP telephony node.	Default route is via TLAN.
	Managed Services	FQDN address of UCM Primary & UCM backup. ELAN address of EM. ELAN address of VGMCs in same IP telephony node.	
MGC (Created using Element Manager)	Normal	ELAN address of EM	Default route is via TLAN.
	Managed Services	FQDN address of UCM Backup.	
VGMC (Created using Element Manager)	Normal	ELAN address of EM	Default route is via TLAN.
	Managed Services	FQDN address of UCM Backup.	


Server LAN design

The system servers and gateways can require up to four separate subnetworks. To differentiate the subnets and the corresponding network interface on each device, they are named:

- ELAN subnet
- TLAN subnet
- Nortel Server subnet
- Client subnet

Figure 40 "Example: Enterprise IP Network " (page 179) shows the logical elements of basic system connectivity in a CS 1000 network.

Figure 40
Example: Enterprise IP Network

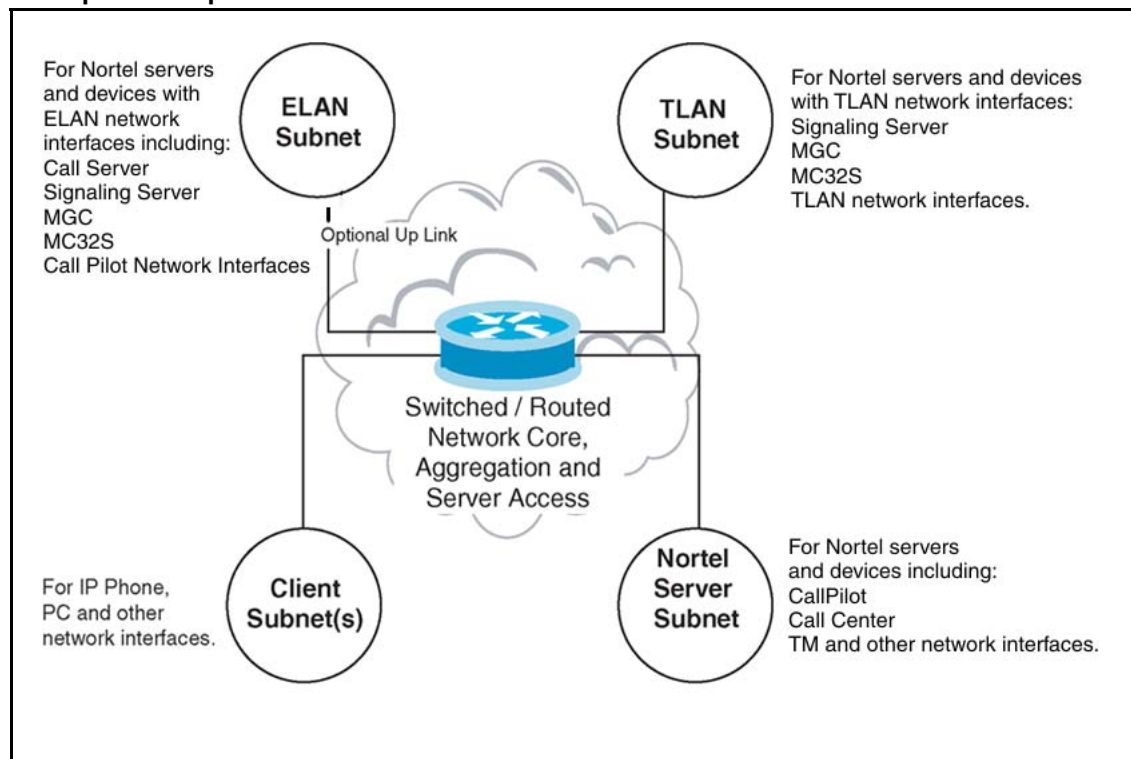


Every device, with the exception of the Call Server, has an ELAN and a TLAN network interface. VoIP Desktop Clients on a QoS:managed IP network are usually separate subnets from the ELAN, TLAN, and Nortel server subnets.

Server subnets

Figure 41 "Layer 2 Ethernet connection model" (page 180) shows the Ethernet connection model in a CS 1000 network.

Figure 41
Layer 2 Ethernet connection model

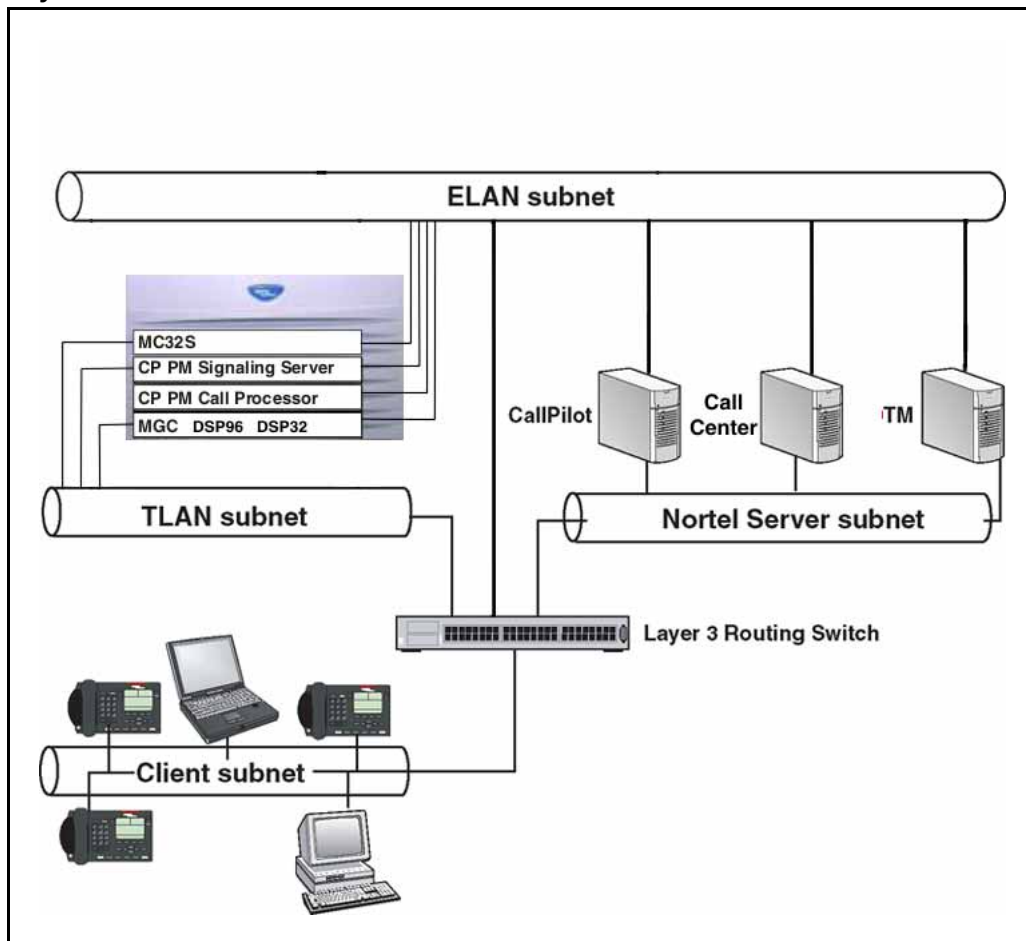

ELAN subnet The ELAN subnet is an isolated 10BaseT subnet required for management traffic and intrasystem signaling traffic between the system Call Server and devices that require Call Server processing (for example, the Signaling Server, Media Gateway Cards, SSC cards, Voice Gateway Media Cards, CallPilot, and Symposium).

The ELAN subnet must create an isolated broadcast domain. Use of a Virtual LAN or a physically separate Layer 2 switch is acceptable as it reduces the risk of network outage due to broadcast storms or other extraneous network traffic.

Only Nortel servers with an ELAN network interface can connect to the ELAN subnet; do not connect other PCs or client. For example, connect the ELAN network interface from other applications, such as CallPilot and Symposium Call Center Server, to the ELAN subnet.

Configure Windows-based servers with an ELAN network interface, and a second network interface that connects to another subnet (for example, SCCS, CallPilot, and TM servers). Do not transmit extraneous traffic, such as broadcasts or multicasts, onto the ELAN subnet.

Nortel recommends that you use a Layer 2 switch with broadcast and multicast rate limiting for the ELAN subnet to improve the robustness of all servers. Implement rate limiting for an isolated ELAN subnet, even if the Layer 2 switch is not connected to the rest of the network.

For information about designing a Communication Server 1000 server network for maximum redundancy, see [“Redundant LAN design” \(page 196\)](#).

The ELAN subnet also carries system management traffic. An uplink from the ELAN subnet to the Enterprise IP network becomes necessary if you use TM or SNMP to manage a network of Communication Server 1000 or Meridian 1 systems. If you plan to connect the ELAN subnet to the Enterprise IP network, a Layer 3 switch or router capable of packet filtering must be used to separate the ELAN subnet from the Enterprise IP network. The Layer 3 switch must be configured to prevent random broadcast, multicast traffic from entering the ELAN subnet. The Layer 3 switch must also be configured with a packet filter to prevent unauthorized traffic from entering the ELAN subnet. If the ELAN subnet is connected to the Enterprise IP network without a packet-filtering Layer 3 switch or router, the call-handling ability of the system may be adversely affected.

In the case of a single Communication Server 1000 system, the TM server can connect to the ELAN subnet, which removes the need for the uplink from the ELAN subnet to the rest of the Enterprise IP network. For information about connecting the TM server to the IP network, see *Telephony Manager 3.1 Installation and Commissioning (NN43050-300)* ().

TLAN subnet The TLAN subnet is a 100BaseT full-duplex LAN that connects all Voice Gateway Media Cards and Signaling Servers within an IP telephony node. An IP telephony node is defined as a logical grouping of Voice Gateway Media Cards and Signaling Servers.

A device in a single IP telephony node cannot be a member of more than one subnet/VLAN. However, a subnet can have more than one IP telephony node as a member.

ATTENTION

Nortel strongly recommends that you use a Layer 2 switch with broadcast and multicast rate limiting for the TLAN subnet.

Nortel further recommends that customers configure the TLAN subnet to carry only Communication Server 1000:specific traffic, and be separated from the rest of the Enterprise IP network by a Layer 3 switch. Deploy the IP Phones on the client side of the Enterprise IP network.

Optionally, the TLAN subnet can be configured as a restricted:access subnet using a packet filtering device (for example, a firewall) to restrict traffic, based on source IP address or TCP/UDP port numbers, allowed to enter the TLAN subnet.

Nortel recommends that you use port prioritization for all TLAN connections. For detailed information on port prioritization, see [“QoS mechanism” \(page 34\)](#).

Nortel Server subnet The Nortel Server subnet is the least specialized of the four subnets described in this section. Nortel recommends that the Nortel Server subnet be used to connect the CLAN network interfaces on the CallPilot, Symposium, and TM servers as well as any other Nortel servers or applications associated with these systems.

ATTENTION

Nortel strongly recommends that the Nortel Server subnet be separated from the rest of the Enterprise IP network by a Layer 3 switch.

Optionally, you can connect the CLAN network interfaces of the CallPilot, Symposium, and TM server to the dedicated Nortel Server subnet, or to any non:dedicated subnet (for example, shared with other servers) in the customer's Enterprise IP network.

ATTENTION

Nortel strongly recommends the you use a Layer 2 switch for the Nortel server subnet.

The TLAN subnet and the Nortel Server subnet can be the same subnet.

Communication Server 1000 Ethernet connections [Figure 42 "MG 1000B detailed core system connections" \(page 183\)](#) through [Figure 44 "CS 1000M MGwith dual CP PII or CP PIV Call Server cards" \(page 184\)](#) shows Communication Server 1000 server and gateway network connectivity at Layer 1 and Layer 2.

The following figures show redundant Layer 2 switches that use virtual LANs to group the ELAN and TLAN subnets. For more information about Layer 2 and Layer 3 switch redundancy, see [“Redundant LAN design”](#)

Figure 42
MG 1000B detailed core system connections

Branch Office MG 1000B

MC32S
MC32S
CP PM Signaling Server
CP PM Call Processor
MGC DSP96 DSP32

Primary Layer 2 Switch

E	T	E	T	E	T	E	T	U
E	T	E	T	E	T	E	T	U

Secondary Layer 2 Switch

E	T	E	T	E	T	E	T	U
E	T	E	T	E	T	E	T	U

CS 1000E SA Call Server

MC32S
CP PM Signaling Server
CP PM Call Processor
MGC DSP96

WAN

Switch Port Legend

- E = Switch port Based ELAN Virtual LAN
- T = Switch port Based TLAN Virtual LAN
- U = Up-link to IP network

Call Server - Core 0

MC32S
CP PM Signaling Server
CP PM Call Processor
MGC DSP32 DSP96

Call Server - Core 1

MC32S
CP PM Signaling Server
CP PM Call Processor
MGC DSP32 DSP96

MG 1000E

IPE Card
MC32S
MGC DSP32


MG 1000E

IPE Card
MC32S
MGC DSP96

Switch Port Legend

- E = Switch port Based ELAN Virtual LAN
- T = Switch port Based TLAN Virtual LAN
- H = HSP

Figure 44
CS 1000M MGwith dual CP PII or CP PIV Call Server cards

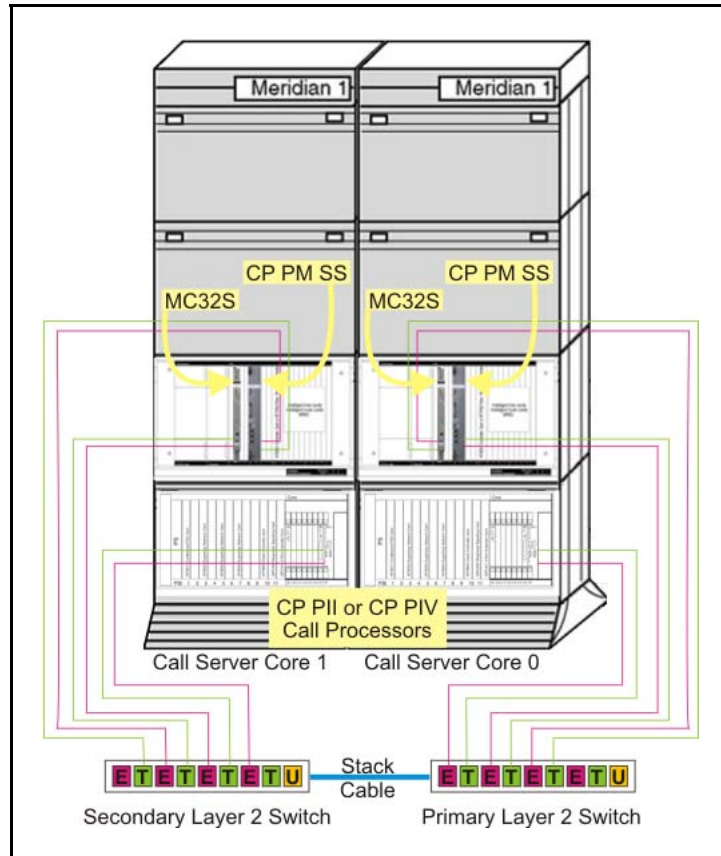

Ethernet requirements

Careful consideration must be given to the Layer 2 infrastructure that the system is connected to. This section describes issues that must be considered when you design the server LAN that connects a system to the IP network.

General Layer 2 considerations Passive Ethernet hubs are not supported. Use Layer 2 Ethernet switches for both the ELAN and TLAN subnets. Ideally, managed switches should be used.

The general requirements are as follows:

- no foreign broadcasts from other subnets
- no BootP relay agent requirement (only on the ELAN subnets router interface)

- the TLAN Ethernet cable between the ITG:P Line Card and the Layer 2 switch must be 50 meters or less
- disable the Spanning Tree protocol or enable port fast on the Layer 2 switch network interfaces connected to the ELAN and TLAN ports of the Meridian 1 and CS 1000M components.

Communication Server 1000 network interfaces The devices in the system have different network interface names depending on whether the devices are on the TLAN or ELAN subnets. [Table 33 "Network Interface Card Names" \(page 185\)](#) shows the network interface card names for the Voice Gateway Media Cards (Media Card 32:port card and ITG:P 24:port card), the Signaling Server, Small System Controller (SSC), and Call Processor Pentium (CPP).

Table 33
Network Interface Card Names

Device type	TLAN/ELAN network interface	Network interface name	Configuration	Speed and duplex
Media Card	ELAN network interface	ixpMac1	autonegotiate	10BaseT Half Duplex
	TLAN network interface	ixpMac0	autonegotiate	100BaseT Full Duplex
ITG:P Line Card	ELAN network interface	InIsa0	autonegotiate	10BaseT Half Duplex
	TLAN network interface	InPci1	autonegotiate	100BaseT Full Duplex
Signaling Server	ELAN network interface	fei0	autonegotiate	100BaseT Full Duplex
	TLAN network interface	fei1	autonegotiate	100BaseT Full Duplex
SSC	ELAN network interface	qu0	autonegotiate	10BaseT Half Duplex
	TLAN network interface	not applicable		
	IPDB network interface 1	ipDB0	autonegotiate	100BaseT Full Duplex
	IPDB network interface 3	ipDB2	autonegotiate	100BaseT Full Duplex
	IPDB network interface 2	ipDB1	autonegotiate	100BaseT Full Duplex

Table 33
Network Interface Card Names (cont'd.)

Device type	TLAN/ELAN network interface	Network interface name	Configuration	Speed and duplex
	IPDB network interface 4	ipDB3	autonegotiate	100BaseT Full Duplex
CP3	ELAN network interface	ln0	autonegotiate	10Base T Half Duplex
CP4	ELAN network interface	ln0	autonegotiate	10BaseT Half Duplex
CP P2	ELAN network interface	fei0	autonegotiate	100BaseT Full Duplex
	TLAN network interface	not applicable		
	HSP (high:speed pipe for redundant CPUs)	fei1	Hard coded	100BaseT Full Duplex
CP P4	ELAN network interface	gei0	autonegotiate	10/100/1000 BaseT Full Duplex
	HSP (high:speed pipe for redundant CPUs)	gei1	autonegotiate	10/100/1000 BaseT Full Duplex
CP PM CS	ELAN network interface	fei0	autonegotiate	10/100 BT Full Duplex
	HSP (high:speed pipe for redundant CPUs)	gei1	autonegotiate	10/100/1000 BT Full Duplex
CP PM SS	ELAN network interface	fei0	autonegotiate	10/100 BT Full Duplex
	TLAN network interface	fei1	autonegotiate	10/100 BT Full Duplex
MGC	ELAN network interface	eln0	autonegotiate	100BaseT Full Duplex
	TLAN network interface	eth0	autonegotiate	100BaseT Full Duplex

Broadcast and Multicast rate limiting Rate limit all broadcast traffic in the ELAN and TLAN Layer 2 or Layer 3 switch to 150 broadcast packets per second (pps). Rate limit all multicast traffic in the ELAN and TLAN Layer 2 or Layer 3 switch to 150 broadcast pps. In some Layer 2 and

Layer 3 switches it may be possible, and is recommended, to disable transmission of multicast packets entirely.

Apply the broadcast and multicast rate limiting at egress from the switch ports, or optionally configure all switch ports to rate limit ingress broadcast and multicast traffic. Rate limiting is in addition to the guidelines in [“Guidelines to configure a routable ELAN subnet” \(page 196\)](#).

Network interface half: and full:duplex operation The ELAN network interface on the Voice Gateway Media Card operates at half:duplex and is limited to 10BaseT operation due to filtering on the CS 1000M Cabinet and CS 1000M Chassis back planes.

The TLAN network interface on Voice Gateway Media Card operates at half: or full:duplex and can run at 10BaseT or 100BaseT.

Nortel recommends that any Layer 2 or Layer 3 switch ports connected to the ELAN or TLAN network interfaces be set to auto:sense/autonegotiate for correct operation. Although full:duplex is preferred, it is not required. For example, for the IP Line application, half:duplex has ample bandwidth for a Voice Gateway Media Card with 24 busy channels, VAD disabled, and G.711 codec with 10 ms voice range.

Mismatches can occur if devices are hard configured for speed and duplex mode. Every device and port must be correctly configured to avoid duplex mismatch problems indicated by lost packets and CRC errors. The Voice Gateway Media Card cannot be hard coded for 100BaseT/full:duplex operation, so the TLAN network interface operates in autonegotiate mode. Duplex mismatches and lost packets occur if the TLAN network interface is not configured properly.

Spanning Tree options on Layer 2 switches Nortel recommends that you disable the Spanning Tree option on the Layer 2 switch ports that connect to the TLAN and ELAN network interfaces on the CS 1000M system.

This option is enabled by default on most Layer 2 switches. If the option is left enabled, the subsequent Spanning Tree discovery algorithm initiated when a device connected to a port is reset, rebooted, or repowered, can interfere with the Master Election Process in the Communication Server 1000E system device. In most cases the Master Election Process recovers after a slight delay. However, Nortel recommends that the Spanning Tree option on these ports be disabled or the Port Fast option enabled.

Use the following to avoid system interruption.

Duplex mismatch Duplex mismatches can occur in the LAN environment when one side is set to autonegotiate and the other is hard:configured. The autonegotiate side adapts to the fixed:side settings, including speed. For duplex operations, the autonegotiate side sets itself to half:duplex mode. If the forced side is full:duplex, a duplex mismatch occurs.

To hard configure all devices for speed/duplex, ensure every device and port is correctly configured to avoid duplex mismatch problems.

**WARNING**

Configure the Layer 2 or Layer 3 switch ports as autonegotiate.

If one side is manually configured and the other side is configured as autonegotiate, the following situation occurs:

The autonegotiate side sets itself to the speed of the manually configured side, but always sets itself to half:duplex. If the manually:configured side is full:duplex, then a duplex mismatch occurs and voice quality is unsatisfactory.

ATTENTION

Nortel strongly recommends that all Layer 2 ELAN and TLAN switch ports be set to autonegotiate.

I/O filter connector The other TLAN network interface operation problem arises from the standard I/O filter connector in IPE modules on Meridian 1 Large Systems and CS 1000M Large Systems.

Use the following guidelines to avoid system interruption that stems from the standard I/O filter connector in IPE modules:

- Ensure that the standard IPE module I/O filter is replaced with the provided Voice Gateway Media Card/ITG:specific filter connector that removes filtering from pairs 23 and 24.
- Do not install the Voice Gateway Media Card/ITG:specific filter connector on top of the standard IPE module I/O filter connector.
- Replace the IPE module backplane I/O ribbon cable assemblies with those that have interchangeable I/O filter connectors.
- The CAT:5 Ethernet cable from the TLAN network interface to the Layer 2 switch port must meet the UTP Category 5 termination and impedance uniformity standards.
- The CAT:5 Ethernet cable from the TLAN network interface of the ITG Pentium card to the Layer 2 switch port must not exceed 50 meters in length.

The TLAN network interface can autonegotiate to 100BaseT full:duplex. For the TLAN network interface to operate correctly at 100BaseT full:duplex speeds, do the following:

- Install the Voice Gateway Media Card/ITG:specific filter connector correctly by replacing the standard IPE Module I/O filter connector.
- Order new IPE Module Backplane I/O ribbon cable assemblies that have interchangeable I/O filter connectors, if it becomes necessary to use one of the IPE Modules with molded:on I/O filter connectors.
- Ensure that the UTP cabling is CAT:5 compliant.
- Always keep the CAT:5 Ethernet cable from the TLAN network interface to the Layer 2 switch port less than 50 meters for the ITG:Pentium 24:port trunk card.
- As an interim measure, connect to each ITG:Pentium 24:port trunk card and log on to the ITG shell. In the shell, use the commands `tlanDuplexSet` and `tlanSpeedSet` to set the TLAN network interface to operate at half:duplex 10BaseT.

IP address requirements

This section describes IP address requirements for each node, card, and IP Phone.

A node is a group of ITG:P Line Cards and Media Cards in a Meridian 1 or Communication Server 1000 system. Each card in a node has two IP addresses: one for the TLAN network interface and one for the Meridian 1 or Communication Server 1000 ELAN network interface. Each node has one Node IP address on the TLAN subnet dynamically assigned to the connection server on the node Master. The IP Phone uses the Node IP address during the registration process.

All Communication Server 1000 ELAN network interface IP addresses must be on the same subnet as the system Call Server ELAN network interface IP address.

To configure a node, the following IP addresses must be assigned:

- One IP address for each TLAN network interface of every Voice Gateway Media Card and Signaling Server.
- One IP address for each ELAN network interface of every Voice Gateway Media Card and Signaling Server.

- One TLAN Node IP address. This alias IP address appears dynamically on the TLAN network interface of one card in the node, the Leader or node Master. This address is shared among all the cards.
- On Communication Server 1000 systems, one IP address for the Signaling Server ELAN network interface and Signaling Server TLAN network interface.

In addition to the IP addresses, the following network information must be provided:

- ELAN network interface subnet mask
- ELAN network interface default gateway IP address
- TLAN network interface subnet mask
- TLAN network interface default gateway IP address

Note: Use separate ELAN and TLAN subnets with the Voice Gateway Media card. The user interface provides an option to use the same subnets, but you must use different subnets.

The default setting of separate ELAN and TLAN subnets protects the subnet from extraneous network traffic, including broadcast and multicast storms. It may also protect the Call Server from unauthorized access from the Enterprise network.

ATTENTION

Nortel strongly recommends that you use separate dedicated ELAN and TLAN virtual LANs and subnet. They must be separated by a router/Layer 3 switch.

You must use a single ELAN and TLAN subnet, see [“ELAN and TLAN network interfaces on a single subnet” \(page 194\)](#) .

SS TLAN Configuration requirements This section describes the single server TLAN configuration requirements.

- If single SS is supposed to have 900 and more sets registered, its TLAN subnet mask should be checked first.
- If the TLAN subnet mask is 9 or less bits there are no limitations or special requirements.
- If the TLAN configuration is 10 and more bits subnet mask (10 bits subnet mask is 255.255.252.0) the IP sets IP addresses and subnet mask settings should be checked.

The maximal number of IP sets configured in the same subnet as SS TLAN is 900. If more sets are required they should be configured in different subnet or VLAN configuration can be used to avoid this limitation.

In this case the VLANs should be configured similar way:

- SS TLAN and only 900 sets IP addresses or MACs can be in the same VLAN.
- All other IP sets should be in different VLAN.

These instructions are needed to avoid ARP table overload on the SS since only 968 ARP entries can be added to ARP table.

Note: All these limitations are only applicable for the SS which runs on VxWorks, not Linux.

CP PM Call Server IP address requirements The CP PM Call Server IP address is the IP address of the CP PM Call Server on the ELAN subnet. The CP PM Call Server requires one IP address for the ELAN network interface and a second IP address for the high speed pipe, when used in a High Availability configuration. The CP PM Call Server ELAN network interface IP address must correspond to the Active ELNK IP address configured in LD 117.

The Alternate Call Server ELAN network interface IP address must be in the same ELAN subnet as the Primary Call Server ELAN network interface IP address.

MGC IP address requirements The MGC card requires

- one ELAN IP address when there are no daughter boards
- one ELAN IP address and two TLAN IP addresses when there is one daughter board
- one ELAN IP address and three TLAN IP addresses when there are two daughter boards

Signaling Server IP address requirements The Signaling Server requires:

- one IP address for the Signaling Server's ELAN network interface
- one IP address for the Signaling Server's TLAN network interface

The IP addresses are configured in the Signaling Server Install Tool menu. Follower Signaling Servers are configured using Communication Server 1000 Element Manager running on the Leader Signaling Server. For more information about the Signaling Server, see *Signaling Server IP Line Applications Fundamentals*(NN43001-125)..

Network Routing Service IP address requirements The Network Routing Server (NRS) software can be run on a Signaling Server in

standalone mode with no other applications, or it can run in coresident mode with other applications such as the Line TPS.

For a standalone NRS, only the TLAN network interface is required. A node IP address and a TLAN network interface IP address must be configured on the standalone NRS. Use of the ELAN network interface is not required. When asked to enter an ELAN IP address, assign a private IP address, for example, 10.10.0.1 with mask 255.255.255.0. Do not configure a Call Server IP address.

For a coresident NRS, the Signaling Server IP address requirements apply:

- one IP address for the Signaling Server ELAN network interface
- one IP address for the Signaling Server TLAN network interface

The NRS IP address is the TLAN network interface IP address of the Signaling Server.

The ELAN and TLAN network interface IP addresses, and the NRS IP addresses, are configured from the Signaling Server Install Tool menu. Follower Signaling Servers are configured using Element Manager running on the Leader Signaling Server.

Voice Gateway Media Card IP address requirements Provide an IP address for both the ELAN and TLAN network interfaces. All cards must be connected to the same ELAN subnet, which is also the same subnet to which the system's Call Server is connected. All cards in a node must be connected to the same TLAN subnet.

The ELAN network interface MAC address corresponds to the Management MAC address, which is assigned during manufacturing and cannot be changed. Locate the faceplate sticker on the Voice Gateway Media Card. The ELAN/Management MAC address is the MOTHERBOARD Ethernet address.

The Voice Gateway Media Card IP addresses are configured using Element Manager or TM.

Use separate subnets for the IP Telephony node. Each Voice Gateway Media Card configuration requires a

- Management (ELAN network interface) IP address
- Voice (TLAN network interface) IP address
- Management MAC address
- Voice LAN gateway IP address

The following ELAN and TLAN subnet restrictions apply:

- The Leader 0 and Leader 1 cards must coreside on a single TLAN subnet with the Node IP Address.
- Follower cards must reside on the same TLAN subnets.
- All devices must coreside on the same ELAN subnet as their respective Call Server and node Leader.

For dual subnet configuration, make sure the TLAN and ELAN subnets do not overlap.

Example 1–Invalid configuration The following configuration is not valid, as the TLAN and ELAN subnets overlap.

ELAN network interface:

IP address	10.0.0.136
Subnet mask	255.255.255.128
Default Gateway IP address	10.0.0.129

TLAN network interface:

Node IP address	10.0.0.56
IP address	10.0.0.57
Subnet mask	255.255.255.0
Default Gateway IP address	10.0.0.1

The range of IP addresses in the ELAN subnet – 10.0.0.129 to 10.0.0.255 – overlaps the range of IP addresses in the TLAN subnet – 10.0.0.1 to 10.0.0.255. This contravenes the IP addressing practices, as it is equally valid to route the IP packets over either interface. The resulting behavior from such a setup is undetermined.

The overlapping IP address scheme must be corrected.

Example 2–Valid configuration The following configuration is valid, as the ELAN and TLAN subnets do not overlap.

The IP addresses can be split as follows.

ELAN network interface:

IP address	10.0.0.136
Subnet mask	255.255.255.128
Default Gateway IP address	10.0.0.129

TLAN network interface:

Node IP address	10.0.0.56
IP address	10.0.0.57
Subnet =mMask	255.255.255.128
Default Gateway IP address	10.0.0.1

The TLAN subnet has a range of addresses from 10.0.0.1 to 10.0.0.127. The ELAN subnet is a separate subnet, with a range of addresses from 10.0.0.129 to 10.0.0.255. This configuration results in a smaller TLAN subnet, but it meets the requirement that subnets do not overlap.

There are a number of factors to consider when determining if the TLAN and ELAN subnets will use private (internal) IP addresses or public IP addresses.

Private IP addresses Private, or internal, IP addresses are IP addresses that are not routed over the Internet. They can be routed directly between separate intranets, provided that there are no duplicated subnets in the private IP addresses. Private IP addresses can be used to set up the TLAN and ELAN subnets, so that scarce public IP addresses are used efficiently.

Three blocks of IP addresses have been reserved for private intranets:

- 10.0.0.0 to 10.255.255.255
- 172.16.0.0 to 172.31.255.255
- 192.168.0.0 to 192.168.255.255

Some routers and firewalls provide a Network Address Translation (NAT) function that allows the customer to map a registered globally:unique public IP address to a private IP address without renumbering an existing private IP address autonomous domain. NAT allows private IP addresses to be accessed selectively over the Internet.

Public IP addresses Public IP addresses can be used for the TLAN and ELAN subnets, but consume limited resources.

This has the same result as the private IP address solution, but the ELAN subnet is accessible from the IP network without NAT.

ELAN and TLAN network interfaces on a single subnet IP Trunk 3.0 (or later) supports the use of a single network interface (for example, the ELAN network interface).

Single:subnet configuration implies the configuration and use of just one network interface, namely the ELAN network interface, over which all voice and management traffic is routed. Single:subnet configuration can also mean configuring both the TLAN and ELAN network interfaces in the same subnet. Neither configuration is supported. The ELAN and TLAN network interfaces must be assigned IP addresses in different subnets.

Separate or dual subnet configuration implies configuration of both the TLAN and ELAN network interfaces. All management and intrasystem signaling traffic is routed out the ELAN network interface, while all telephony traffic is routed out the TLAN network interface.

ATTENTION

Nortel recommends that you use separate subnets, the Network Activity LEDs provide useful status information regarding the state of the ELAN and TLAN network interfaces. When you use an ITG:Pentium 24:port trunk card in a single:subnet configuration, all traffic uses the ELAN network interface. This eliminates the use of the TLAN network interface.

Although not recommended, the single:subnet configuration of voice and management could be used in the following situations:

- The combined voice and management traffic on the ELAN subnet is so low that there is no impact on packetized voice QoS performance.
- The customer is willing to tolerate occasional voice quality impairments caused by excessive management traffic.

Multiple nodes on the same ELAN and TLAN subnets There are several configurations where it is acceptable to put multiple nodes on the same dedicated ELAN and TLAN subnets (separate subnets):

- Several nodes that belong to the same customer and related to the same Communication Server 1000 Call Server can be configured to route calls with different codecs, depending on the digits dialed, or the Network Class of Service (NCOS) of the originating telephone. It can also be configured to limit the maximum number of IP Trunk calls to a particular destination node. The traffic engineering considerations on the TLAN subnet determine how many different nodes can be configured on the same LAN segment.
- Layer 2 (10BaseT or 100Base:TX) switching equipment or ATM infrastructure can support a Virtual LAN (VLAN) segment distributed across a campus or large corporate network. In this case, some or all of the ITG destination nodes can be on the same subnet.
- In test labs, training centers, and trade shows, it is common for destination nodes to be located on the same ELAN and TLAN subnets.

Do not place other IP devices, except those designated as acceptable by Nortel, on the ELAN or TLAN subnets.

Guidelines to configure a routable ELAN subnet

Use the following guidelines when you configure a routable ELAN subnet on the Enterprise IP network.

1. External multicasts must not be transmitted on the ELAN subnet. Generally, multicast forwarding is disabled by default on a gateway router. Ensure that no multicast routing protocols are enabled on the ELAN subnet gateway router. Do not configure or allow the ELAN or TLAN subnet gateway router (the Layer 3 switch) to forward multicast traffic to the ELAN subnet.
2. External broadcasts must not be forwarded to the ELAN subnet. Ensure that the Layer 3 switch is configured so that it does not forward broadcast traffic from elsewhere on the network to the ELAN subnet. This includes disabling any features on the Layer 3 switch which forward broadcast packets to a subnet when the received packets destination IP address is the subnet broadcast IP address. This can also include disabling other broadcast:forwarding mechanisms, such as UDP broadcast forwarding, DHCP forwarding, or NetBIOS forwarding.
3. An ELAN subnet gateway router must be capable of Packet Filtering in order to prevent unauthorized traffic from entering the ELAN subnet. Management traffic is sent from management systems to the Communication Server 1000 system. Management traffic includes FTP, Telnet, HTTP, SNMP, DBA, and rlogin servers. For the control and management of TCP and UDP port numbers for each component connected to the ELAN subnet, see ["Port number tables" \(page 339\)](#). Configure the packet filter to forward any traffic with the source IP address equal to management system IP address and a management service destination TCP or UDP port. The packet filter should then drop all other traffic.


Redundant LAN design

A redundant network has one or more backup systems or elements available to processing and transmit in case of system or element failure.

Single physical location

To begin planning for redundancy, classify equipment into primary and secondary group, as shown in [Figure 45 "Primary and secondary equipment groups" \(page 197\)](#).

Figure 45
Primary and secondary equipment groups

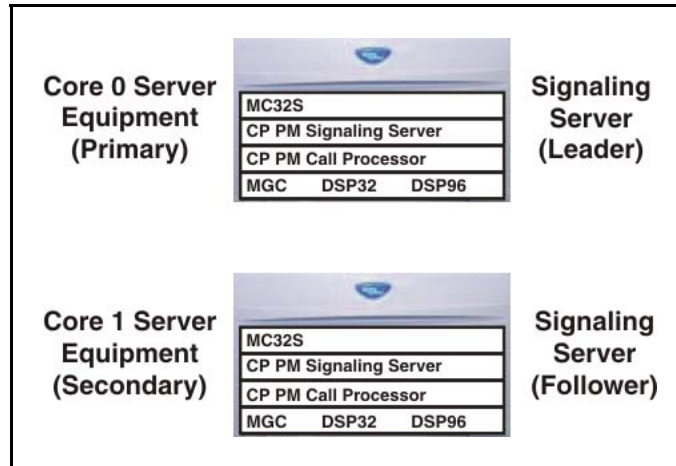

To implement a redundant core network, follow these recommendations:

- Connect ELAN and TLAN network interfaces for the primary core components (Call Server, Leader Signaling Server, and media cards) to the primary Layer 2 switch.
- Connect ELAN and TLAN network interfaces for the secondary core components (Alternate Call Server, Follower Signaling Server, and media cards) to the secondary Layer 2 switch.
- Provide backup power for all essential components and networking devices.
- Use data equipment that supports port-based Virtual LANs (VLANs) and prioritization (IEEE 802.1Q standard).
- Install load-sharing connections or install backup connections, using the OSPF or Spanning Tree Protocol (STP), to multiple Layer 3 switches. OSPF is the preferred protocol in this case.



WARNING

Spanning Tree Protocol convergence can cause Layer 2 switch ports to be disabled for up to 60 seconds. This can affect the entire system.

- If you use a highly-available chassis-based system (for example, Passport 8100), designate one card as the primary Layer 2 switch and another card as the secondary Layer 2 switch. Group the ELAN and TLAN subnets with port-based VLANs.

Use of a single highly-available Nortel Passport 8600 switch can provide a five nines network.

Figure 46 "Redundant core network: no VLAN on Layer 2 switch infrastructure" (page 198) through to Figure 48 "MG 1000E redundancy details" (page 199) show a network architecture that divides the core components into primary and secondary devices. Each device is connected to its corresponding Layer 2 switch. Both the ELAN and TLAN network interfaces are connected to the respective Layer 2 switch. VLANs can be used to reduce the number of switches required to obtain a redundant core network.

Figure 46 "Redundant core network: no VLAN on Layer 2 switch infrastructure" (page 198) show a redundant core network that does not use VLANs on the Layer 2 switch infrastructure.

ATTENTION

The primary and secondary TLAN network interfaces must be in the same subnet and broadcast domain.

The primary and secondary ELAN network interfaces must be in the same subnet and broadcast domain

Figure 46

Redundant core network: no VLAN on Layer 2 switch infrastructure


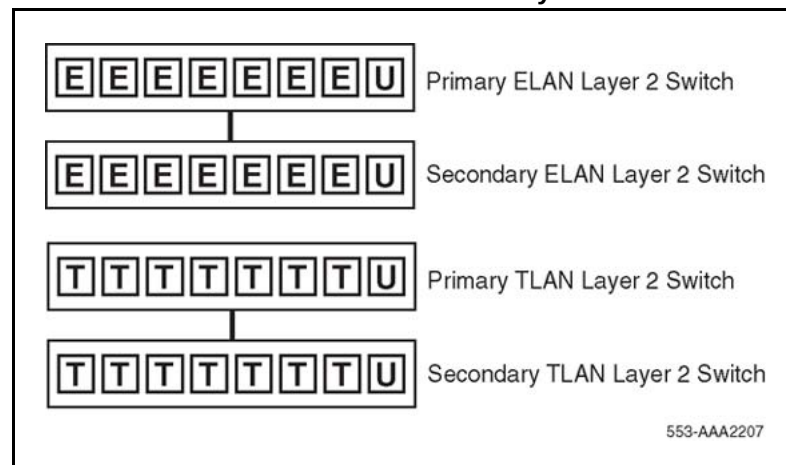


Figure 47 "Redundant core network: VLANs on the Layer 2 switch infrastructure" (page 198) is an example of a redundant core network that does use VLANs on the Layer 2 switch infrastructure.

Figure 47

Redundant core network: VLANs on the Layer 2 switch infrastructure

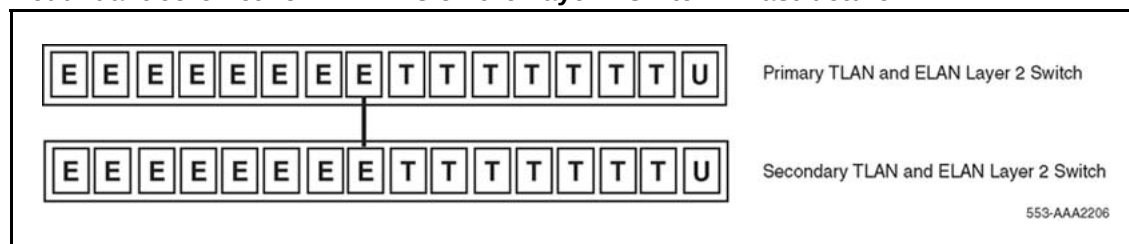

ATTENTION


You can use VLANs to avoid the use of two Layer 2 switches.

Figure 48 "MG 1000E redundancy details" (page 199) shows MG 1000E redundancy details. To obtain maximum redundancy:

- Connect alternate connecting media cards to primary and secondary Layer 2 switches.
- Connect the primary MG 1000E IPDB network interface to the primary Layer 2 switch.
- Connect the secondary IPDB network interface to the secondary Layer 2 switch.

Note: It is possible to locate an MG 1000E ELAN on a different Layer 3 subnet to that of the Call Server provided that network parameters are included.

Figure 48
MG 1000E redundancy details

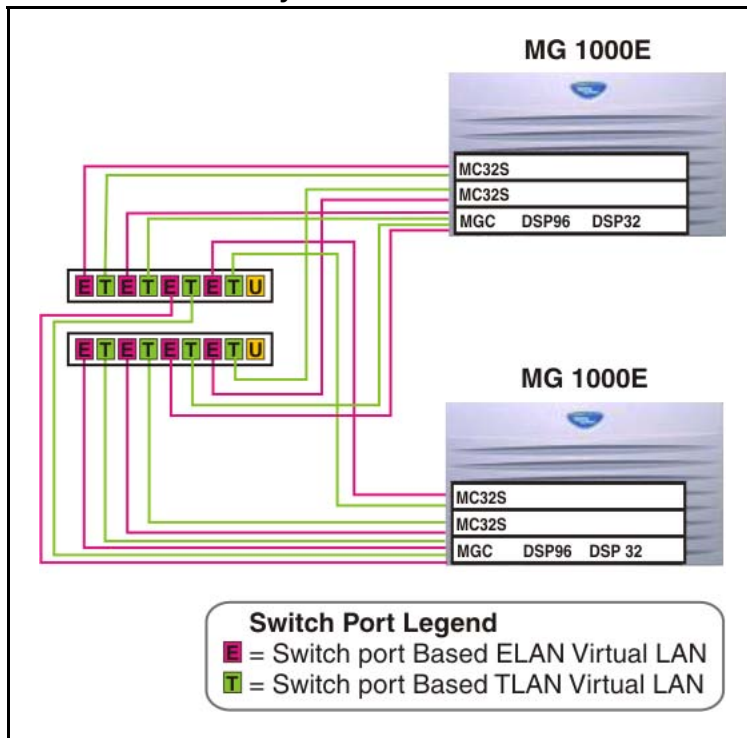

Communication Server 1000E Campus redundancy

Figure 49 "Campus redundancy : Layer 2 switch configuration" (page 200) and Figure 50 "Campus redundancy : Side 0 with VLANs" (page 201) show campus redundancy for a Communication Server 1000E system. If you plan to use campus redundancy, follow these recommendations:

- To implement the campus redundant Layer 2 switch configuration, Virtual LANs are required on the Layer 2 switches.
- The Layer 2 switch ports that connect the HSP network interfaces must be in a completely isolated VLAN.
- Group the two gigabit fiber optic links using a multilink trunk protocol.

Enable Spanning Tree Protocol Fast Port on all switch ports and the multilink trunk, or disable Spanning Tree Protocol on all switch ports.

Figure 49
Campus redundancy : Layer 2 switch configuration


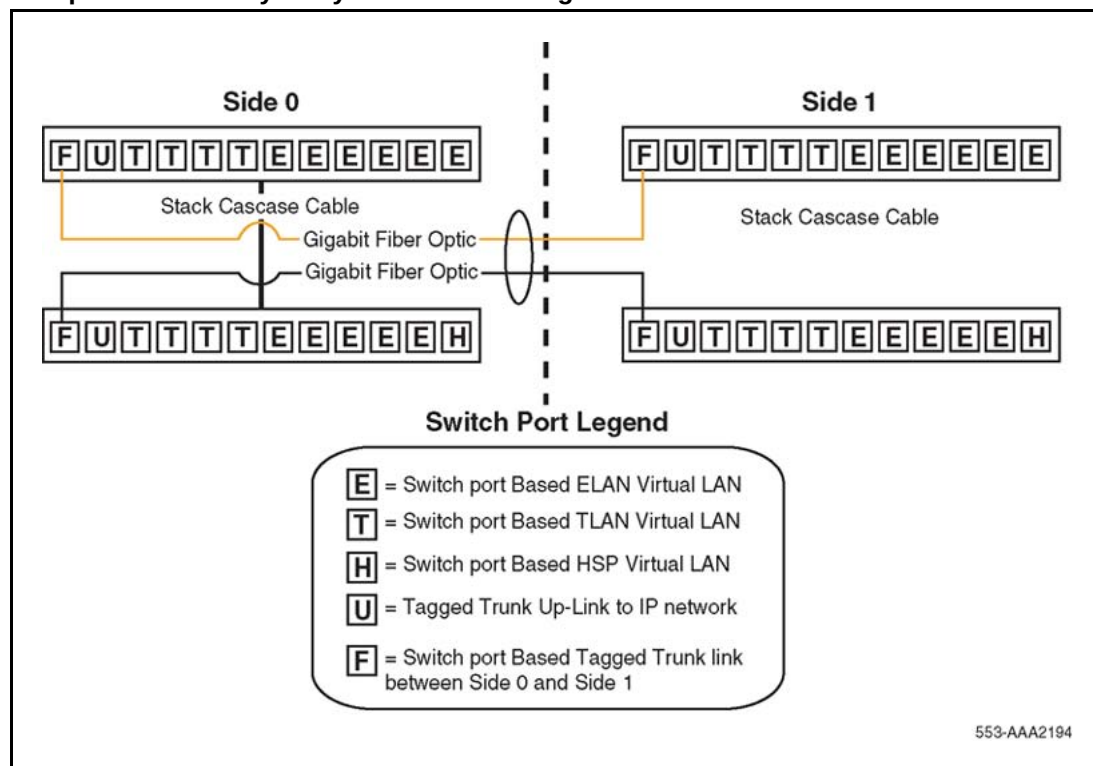


Figure 50
Campus redundancy : Side 0 with VLANs

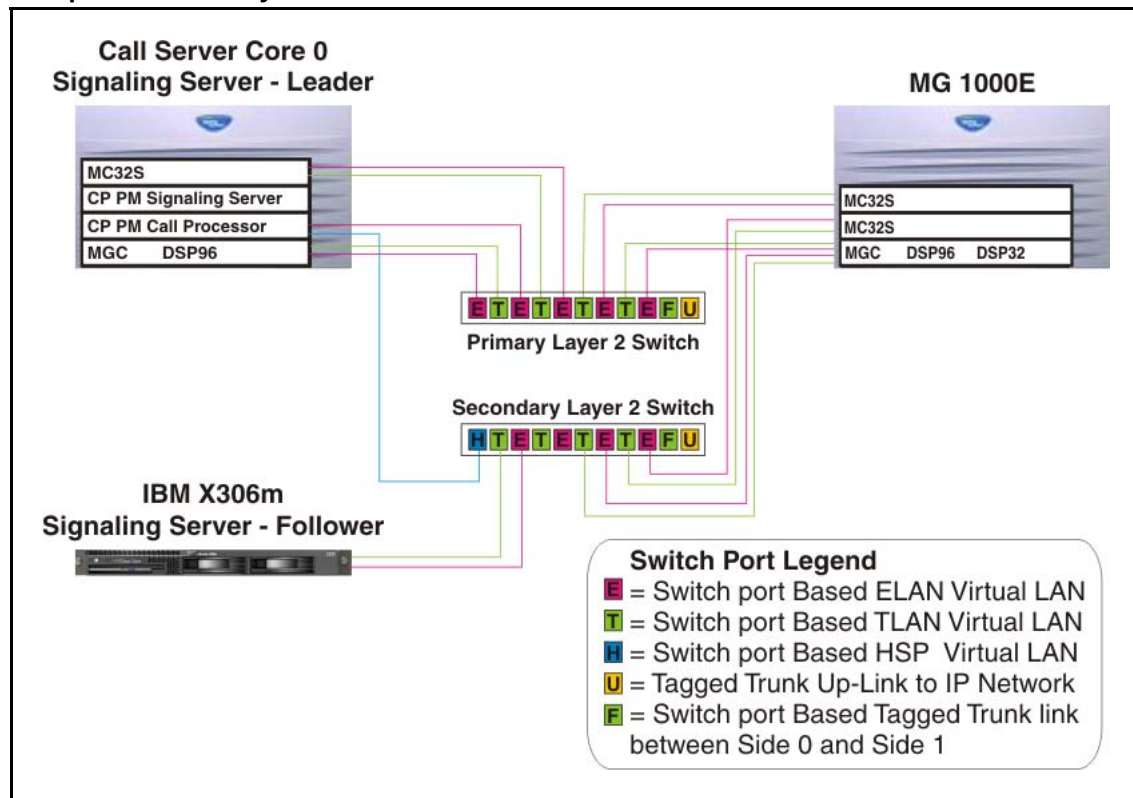

ATTENTION

In [Figure 50 "Campus redundancy : Side 0 with VLANs" \(page 201\)](#), Side 0 and Side 1 are considered to be identical.

For detailed information about campus redundancy, see *System Redundancy Fundamentals (NN43001-507)* ().

Zone Based Dialing plan

The following components interact with this feature:

- CLID
- Features which depend on CLID
- DAPC
- Keymap download
- LNR
- ISDN (new ZBD IE)
- OCS
- Tone Table
- Call Pilot

- Call Park
- Remote Call Forward
- BSF
- GR
- Pre:translation
- EM
- VNR
- Call Forward
- Call Transfer
- Conference
- PD/Corp directory
- ESA

Feature dependencies and restrictions

The new Zone Based Dialing plan (ZBD) IE is created to send the ZBD specific data inside of ISDN messages.

Use the zone based AC1/AC2/INTC/NATC parameters instead of the configuration in the route and customer data block for the zone:based Dial Access Prefix on CLID (DAPC) feature. Therefore, for incoming inter:site calls, access prefixes from numbering zone parameters are received and inserted to the beginning of CLID; DAPC is enabled per set basis (CLS DAPA), for example, for international call AC1+INTC is inserted.

You must configure 7:digit DN for a ZBD feature key and you can set the site prefix from 2 to 4 digits.

The 7:digit DN is sent to TPS. Use the 7:digit DN to generate a user ID that implements features such as PD/RL/CL. The site prefix is cut off on the TPS side before sending it to the set in the UNISTIM message.

Overlay 10, 11

Overlays 10 and 11 are modified to store numbering zones for sets (IP, TDM, analog, UEXT, PCA) in protected unit blocks.

Overlay 12

Overlays 12 is modified to store numbering zones for an attendant in a protected unit block.

Overlay 15

The new prompts, ZBD and DIALPLAN, are added to LD 15.

The ZBD prompt enables or disables the ZBD feature. It has a yes or no value. :

Use the DIALPLAN prompt for DN/CLID processing. It includes PUB and PRV values. If the DIALPLAN prompt is set to PUB, then the appropriate E164 CLID is displayed on a terminating set. If it is set to PRV then a 7:digit DN/CLID is displayed.

Overlay 20

Overlay 20 is modified to print out numbering zones for a set.

Overlay 21

Overlay 21 is modified to print out the status of the ZBD feature, enabled or not. Also, the configured value for DIALPLAN is displayed in the ZBD prompt group.

Overlay 22

Overlay 22 is modified to print out the status of the ZBD package.

Overlay 43

ZBD databases are dumped into /u/db/ during EDD and are also backed up to the secondary device. ZBD databases are restored to /u/db/ during database restore.

Overlay 81

Overlay 81 is modified to print out information and count configured sets for specified numbering zones.

Overlay 83

Overlay 83 is modified to print out numbering zone for configured sets.

Overlay 117

This overlay is modified to add the following commands:

- configure/change/delete/print numbering zones
- configure/change/delete/print numbering zone parameters
- configure/change/delete/print ZFDP and ZDID entries
- change designator for numbering zones

Feature impact on planning and engineering tasks

You must reconfigure sets to 7:digit DN, which consist of site prefix and short DN.

You must configure the network to guarantee an 80 millisecond (ms) round trip delay requirement for signaling between Communication Server 1000 and SMG.

Vacant Number Routing feature

Enhancements are performed for a VNR call over IP because IP accessible users are typically a subset of the total set of users. If a VNR call over IP is rejected due to a specific cause, for example Cause x. If Cause x is one of the MCDN Alternate Routing (MALT) configurable causes provided in Element Manager (EM) and the user has selected Cause x to perform MALT, alternate routing is performed for the call at the Call Server. The feature impacts the treatment provided to the VNR call. The treatment is based on the previous and current rejection cause. The best treatment is provided so that the user gets the correct reason of rejection for the VNR call. MALT is performed for the existing six causes, and for any of the added ten provisional causes if the call clears from the IP network with a Do MALT indication."

This feature is an enhancement on the existing VNR feature thus you must enable the VNR feature package for the feature to work properly. For more information about VNR enhancements, see *IP Peer Networking Installation and Commissioning* (NN43001-313).

Dialing plan

When a number is dialed, the Call Server determines whether the called number is internal or external to the branch office. If internal, the system terminates the call on the appropriate terminal. If external, the system routes the call in one of two ways:

- Uniform Dialing Plan (UDP) or Coordinated Dialing Plan (CDP) routes the call to the proper trunk group.
- Vacant Number Routing (VNR) routes the call to a Virtual Trunk.

After the call is sent over the IP network, the call is routed to the MG 1000B Core, which uses the Network Routing Service (NRS) to route the call. In a SIP network, the Redirect Server translates the address from a telephone number to a SIP URI, and authorizes the call. In an H.323 network, the H.323 Gatekeeper translates the address from a telephone number to an IP address, and authorizes the call.

Specific dialing plan configuration is required for IP Phones to properly select a main office or branch office that provides access to the PSTN for the originating IP Phone. A common configuration might be:

- Branch Users select the MG 1000B PSTN for local calls.
- Main office users select the main office PSTN for local calls.
- All users select either the main office or MG 1000B PSTN for long:distance calls to minimize toll charges.

However, this configuration represents only one way that the dialing plan could be configured. PSTN calls can be routed according to the point of origin (main office or branch office) and/or the desired destination, and can select trunks at the main office, branch office, or other branch offices as required. Therefore, the user can route calls to gateways that minimize long:distance costs, minimize bandwidth usage, or meet other criteria.

On:net dialing plan options

Depending upon customer dialing preferences and configuration management requirements, many on:net dialing plans are available:

- Coordinated Dialing Plan (CDP) — each location is allocated one or more Steering Codes that are unique within a CDP domain.
- Uniform Dialing Plan (UDP) — each location is assigned a Location Code (LOC). Each telephone has a unique Directory Number (DN).
- Group Dialing Plan (GDP) — each group has an LOC that has to be dialed from outside the group as a prefix to the group CDP. Members in the group may dial only the CDP number. Effectively, GDP is a combination of CDP and UDP.
- Transferable Directory Numbers (TNDN) — each user is given a unique DN, that does not change even if it moves to a different Call Server. The NRS keeps track of each TNDN in the network so that it knows to which endpoint (Call Server or MG 1000B Core) to return when asked to resolve a TNDN address.

For more information, see *Dialing Plans Reference (NN43001-283)* ().

Nortel recommends that customers use Coordinated Dialing Plan (CDP) between the main office and its branch offices since it enables all users, at the main office or Branch Office, to call each other using just an extension number. CDP enables consistent dialing between the main office and MG 1000B IP Phones and devices. For more information about on:net configuration examples, see *Branch Office Installation and Commissioning (NN43001-314)* ().

Off:net dialing plan

When dialing to the PSTN, the Call Server determines that the call destination is off:net by analyzing the digits that must be pre:configured at major Call Servers in the network.

If routed over a Virtual Trunk, a request is sent to the NRS to determine the location of public E.164 numbers. The NRS is configured with a list of potential alternate routes that can be used to reach a certain dialed number. Each route is configured with a unique route cost to determine the least:cost route.

The NRS replies with the address information for E.164 numbers and provides a list of alternative SIP or H.323 endpoints, sorted by cost. If a terminating endpoint resource is busy when a call attempt is made, the originating endpoint tries the next alternative. If no alternative is available over the IP network, the originating endpoint steps to the next entry on its route list, which could be a TIE or PSTN alternate route. For more information about off:net configuration examples, see *Signaling Server IP Line Applications Fundamentals (NN43001-125)*. ()

Routing

The following describes routing of Branch Office calls.

Branch user call to an MG 1000B PSTN

The Branch User telephone is registered at the main office. The Branch User telephones are physically located at the Branch Office, so routing of local PSTN calls back to the Branch Office is essential, even if they are registered with the main office.

Branch Office behavior of the Branch User telephones at the main office is configured by setting Branch Office zone characteristics through LD 117 at the main office

Routing incoming calls from an MG 1000B PSTN to an MG 1000B telephone (DID call)

If the DN is valid and can terminate, call termination at the Branch Office is treated differently for IP Phones and non:IP Phones, as follows:

- IP Phones — if the telephone is registered to the MG 1000B CP PM (Local Mode), the call is terminated locally. If the telephone is not registered to the MG 1000B CP PM (Normal Mode), the call is routed through a Virtual Trunk to the main office.
- Non:IP Phones — all are terminated locally (within the Branch Office).

If the DN is not valid, the number is considered vacant by the MG 1000B CP PM, and VNR is used to route the call to the NRS for resolution.

SIP/H.323 zones

In a SIP/H.323 network, each NRS controls one SIP/H.323 zone. Each zone can consist of many SIP/H.323 endpoints. If a call terminates beyond the call originator zone, the Redirect Server or H.323 Gatekeeper of the called party zone provides the endpoint information to set up the connection.

You can divide a system into several zones. You can also divide a customer within a system into different zones. It is more common to assign one zone to one system and one customer.

Distributed Media Gateway 1000E

A Media Gateway 1000E (MG 1000E) can be physically distributed within an Enterprise IP network. The gateway can be configured in a different subnet than the Call Server providing the following criteria are met:

- The Signaling Servers remain in the same ELAN subnet as the Call Server.
- Distributed Media Gateway 1000E does not support Media Card MC32.
- The TPS must be disabled for Media Cards (MC32S) in a different subnet.
- Packet loss on the Enterprise IP network must be less than 0.5% (0% packet loss is recommended).
- Round:trip delay between Call Server and MG 1000E must be less than 80 ms.
- Use of a QoS mechanism is highly recommended and assists in meeting packet loss and latency requirements.

Each ELAN subnet must be configured in a separate node and a call server can be configured to use multiple nodes. A node is a collection of signaling servers, media cards, or a combination of both. A node can be composed of a single media card or a single signaling server. A node must have one Leader; the rest of the node is configured as followers. Each subnet can have more than one node, but nodes cannot span subnets. The Leader uses the Bootstrap Protocol (BOOTP) to supply IP addresses to the followers in its node.

A media card or server configured as a follower, must be in the same ELAN broadcast domain as the Leader. If the follower is not in the same ELAN broadcast domain as the Leader, it must be configured in a different node. If the follower is the only member of the node, it must be configured as the Leader.

A follower broadcasts a BOOTP request over the ELAN to obtain available IP addresses. A Leader that has configured the MAC address of the follower in its BOOTP tables responds to the BOOTP request from the follower with the IP addresses. The follower stores the IP addresses and uses them to boot. The follower does not boot if the BOOTP request fails. If the BOOTP request fails and the follower has previously made contact with a Leader, it boots using the stored IP addresses from the last successful response.

The MGC and SSC, which control the cabinet that contains a media card, do not use BOOTP so they do not have the same restrictions as the media card. The SSC and MGC are not part of a node and cannot be used as a Leader.

DHCP configuration

This section provides general guidelines on how to configure a host with a Dynamic Host Configuration Protocol (DHCP) server to support Nortel IP Phones 200x and the IP Softphone 2050.

If you are not familiar with DHCP, Nortel recommends that you read Request for Comments (RFC) 2131 Dynamic Host Configuration Protocol, RFC 1533 DHCP Options and BOOTP Vendor Extensions, and the Help manual for the DHCP server on the host.

For a general overview about DHCP server technology, see [“DHCP supplemental information” \(page 401\)](#)

IP Phones

IP Phones 200x and the IP Softphone 2050 are VoIP telephones that function as a telephone to the Meridian 1 and Communication Server 1000 systems. The IP Phone encodes voice as binary data and packetizes the data for transmission over an IP network to the Voice Gateway Media Card or to another IP Phone.

The Nortel IP Phone can act as a DHCP client in one of two modes:

- partial DHCP mode
- full DHCP mode

All the configuration parameters for the IP Phone can be entered manually. Each IP Phone requires network configuration parameters, Connect Server parameters, IP Telephony node ID, and Virtual TN. If there are a number of IP Phones to configure, manual configuration is time-consuming and prone to error. Using full or partial DHCP to automatically configure the IP Phones is more efficient and flexible and ensures that you use current information.

Partial DHCP mode

When the IP Phone is configured to operate in partial DHCP mode, the DHCP server needs no special configuration to support IP Phones. The IP Phone receives the following network configuration parameters from the DHCP server:

- IP address configuration for the IP Phone
- subnet mask for the IP Phone IP address
- default gateway for the IP Phone LAN segment

ATTENTION

In partial DHCP mode, the Connect Server parameters, (node ID and Virtual TN) must be entered manually.

Full DHCP mode

In full DHCP mode, the DHCP server requires special configuration. The IP Phone obtains network configuration parameters and Connect Server configuration parameters from specially:configured DHCP servers.

The following parameters are provided for the primary and secondary Connect Servers:

- Connect Server IP address — for IP Line 4.5, the Connect Server IP address is the IP Telephony node IP address.
- port number = 4100
- command value = 1; identifies the request to the Connect Server as originating from an IP Phone
- retry count = 10 (typically)

ATTENTION

The IP Telephony node ID and Virtual TN must always be configured manually even in full DHCP mode.

802.1Q configuration of IP Phones

802.1Q VLAN support is configured using the display interface of the IP Phones during the initial configuration procedure of the IP Phone.

For 802.1Q configuration procedures of the IP Phones, see *IP Phones Fundamentals (NN43001-368)* ().

Configuring the DHCP server to support full DHCP mode

The DHCP capability of the IP Phone enables the telephone to receive network configuration parameters and specific Connect Server parameters. This section describes the IP Phone unique class identifier and requested network configuration and Connect Server parameters for automatic configuration.

IP Phone class identifier

The IP Phone is designed with a unique class identifier that the DHCP server can use to identify the telephone. All Nortel IP Phones use the same text string: Nortel:i2004:A. The ASCII string is sent inside the Class Identifier option of the IP Phone DHCP messages.

The DHCP server also includes the text string in its responses to the IP Phone DHCP client to notify the IP Phone that the server is IP Phone-aware, and that it is safe to accept the server offer. The string appears in the beginning of a list of specific Voice Gateway Media Card information that the IP Phone DHCP client requests.

When the DHCP server is configured to recognize the IP Phone as a special class, the DHCP server can treat the IP Phone differently than other DHCP clients. DHCP host configuration parameters can then be grouped by class to supply only information relevant to the IP Phone DHCP client, such as the Connect Server parameters. The administrator can also design the network according to the client class; if necessary, making maintenance easier.

Depending on the capabilities and limitations of the DHCP server used, and the design of the network, some advanced functions are not available.

Requested network configuration parameters

Using full DHCP mode, an IP Phone-aware DHCP server can automatically configure Nortel IP Phones by requesting a list of Connect Server configuration parameters. The IP Phone uses DHCP to request and receive the information.

IP Phones that operate in partial DHCP mode can receive an IP address from any DHCP server. In full DHCP mode, the server must be configured to respond to the request for the vendor-specific encapsulated options.

[Table 34 "IP Phone network configuration parameters" \(page 210\)](#) lists the network configuration parameters requested by the IP Phone in the Parameter Request List option (Option Code 55) in the DHCPDISCOVER and DHCPREQUEST messages. The DHCPOFFER and the DHCPACK reply messages from the DHCP server must contain the options in [Table 34 "IP Phone network configuration parameters" \(page 210\)](#).

Table 34
IP Phone network configuration parameters

Parameters requested by IP Phone (Option Code 55)	DHCP server response: Option Code
Subnet mask — the client IP subnet mask	1
Router/gateways — the IP address of the client's default gateway (not required in DHCPOFFER in IP Phone Firmware 1.25 and later for compatibility with Novell DHCP server)	3
Lease time — implementation varies according to DHCP server	51
Renewal time — implementation varies according to DHCP server	58

Table 34
IP Phone network configuration parameters (cont'd.)

Parameters requested by IP Phone (Option Code 55)	DHCP server response: Option Code
Rebinding interval — implementation varies according to DHCP server	59
IP Line site:specific or vendor:specific encapsulated/ site options.	43, 128, 144, 157, 191, 251

The first five parameters in [Table 34 "IP Phone network configuration parameters" \(page 210\)](#) are standard DHCP options and have predefined option codes. The last parameter is for Voice Gateway Media Card information, which does not have a standard DHCP option. The server administrator must define a vendor:encapsulated and/or site:specific option to transport this information to the IP Phone.

This nonstandard information includes the unique string that identifies the IP Phone and the Connect Server parameters for the primary and secondary servers. The IP Phone must receive the Connect Server parameters to connect to the IP Telephony node.

The administrator must use one of the site:specific or vendor:encapsulated option codes to implement the Voice Gateway Media Card information. This user:defined option can then be sent as it is, or encapsulated in a Vendor Encapsulated option with Option Code 43. The method used depends on the DHCP server capabilities and the options are already in use by other vendors.

The IP Phone rejects any DHCPOFFER and DHCPACK messages that do not contain the following options:

- a router option — IP Phone requires a default gateway (router)
- a subnet mask option
- a vendor:specific or site:specific option

ATTENTION

The vendor:specific Option Code is 43. A Windows NT DHCP Server (up to SR4) supports only 16 octets of data for the vendor:specific option, which is insufficient to support the minimum length of the IP Phone:specific string. If you use a Windows NT DHCP Server, select the Site Specific option to accommodate the IP Phone:specific string.

The site:specific options are all DHCP options between 128 (0x80) and 254 (0xFE). These options are reserved for site:specific use by the DHCP RFCs.

Format for IP Phone DHCP Class Identifier option

All Nortel IP Phones fill in the Class ID option of the DHCPDISCOVER and DHCPREQUEST messages with the null:terminated, ASCII:encoded string Nortel:i2004:A, where A identifies the version number of the information format of the IP Phone.

The Class Identifier Nortel:i2004:A must be unique in the DHCP server domain.

Format for IP Phone DHCP encapsulated Vendor Specific Option

The Nortel:specific, encapsulated Vendor Specific Option for IP Phones 200x and the IP Softphone 2050 must be encapsulated in a DHCP vendor:specific option (see RFC 1533) and returned by the DHCP server as part of each DHCPOFFER and DHCPACK message for the IP Phone to accept these messages as valid. The IP Phone extracts the relevant information from this option and uses it to configure the Connect Server IP address, the port number (4100), a command value (1), and the retry count for the primary and secondary Connect Servers.

Either this encapsulated Vendor Specific Option or a similarly encoded site:specific option must be sent. The DHCP server must be configured to send one or the other but not both. The choice of using the vendor:specific or the site:specific option is provided to enable Windows NT DHCP servers to support the IP Phone. Windows NT servers do not properly implement the Vendor Specific Option; and, as a result, Windows NT implementations must use the Site Specific version.

The format of the encapsulated Vendor Specific option is Type, Length, and Data.

Type (1 octet): There are five types:

- 0x80 (Site Specific option 128)
- 0x90 (Site Specific option 144)
- 0x9d (Site Specific option 157)
- 0xbf (Site Specific option 191)
- 0xfb (Site Specific option 251)

The choice of five types enables the IP Phone to work one or more values already in use by a different vendor. Select one value for the Type byte.

Length (1 octet) The Length value is variable. Count only the number of octets in the data field (see the following section).

Data (variable number of octets) The Data field contains an ASCII:encoded character string as follows:

Nortel:i20xx:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp,aaa,rrr.

This string can be NULL:terminated, although the NULL is not required for parsing.

The parameters for the data field are described in [Table 35 "Data field parameters" \(page 213\)](#) and in the list following the table.

Table 35
Data field parameters

Parameter	Description
Nortel:i2004:A	Uniquely identifies the Nortel option, and is a response from a server that can provide the correct configuration information to the IP Phones 200x and the IP Softphone 2050.
iii.jjj.kkk.Ill:ppppp	Identifies IP address and port number for the server (ASCII:encoded decimal)
aaa	Identifies action for server (ASCII encoded decimal, range 0–255)
rrr	Identifies the retry count for server (ASCII encoded decimal, range 0–255)
comma (,)	ASCII "," separates fields.
colon (:)	ASCII ":" separates the IP address of the bootstrap server node IP address from the Transport Layer port number.
semicolon (;)	ASCII ";" separates the Primary from Secondary bootstrap server information. The bootstrap server is the Active Leader of the IP Telephony node.
period (.)	ASCII "." signals end of structure.

- "aaa" and "rrr" are ASCII encoded decimal numbers with a range of 0 – 255. They identify the Action Code and Retry Count, respectively, for the associated TPS server. They are stored as one octet (0x00 – 0xFF) in the IP Phone. These fields must be no more than three digits long.
- Two Connect Servers and an optional external application server (XAS) can be specified in the DHCP string:
 - The first Connect Server is always considered primary.
 - The second Connect Server is always considered secondary.
 - An optional XAS can be appended to the Connect Servers.

- The string enables the configuration of information for two Connect Servers. One Connect Server exists for each IP node. In the typical system configuration of a single IP node, only the primary Connect Server is required. In this case, the primary Connect Server string must end with a period (.) instead of a semicolon (;). For example:

Nortel:i2004:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr.

If the secondary Connect Server portion of the string is specified, then the string information is typically the same as the primary Connect Server information. For example:

Nortel:i2004:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp,aaa,rrr.

When the Enhanced Redundancy for IP Line Nodes feature is used, two different Connect Server strings can be configured, separated with a semi:colon (;). This enables the telephone to register to two different nodes. For more information about the Enhanced Redundancy for IP Line Nodes feature, see *Signaling Server IP Line Applications Fundamentals (NN43001-125)* ().

- Action code values include:
 - 0 — reserved
 - 1 — UNISlim Hello (currently this type is the only valid choice)
 - 2 to 254 — reserved
 - 255 — reserved
- The ASCII:encoded decimal numbers iii.jjj.kkk.Ill represent the IP address of the server. They do not need to be three digits long because the (.) and (:) delimiters guarantee parsing. For example, 001, 01, and 1 would be parsed correctly and interpreted as value 0x01 internal to the IP Phone. These fields must be no longer than three digits.
- The port number in ASCII:encoded decimal is ppppp.. It does not need to be five digits long as the colon (:) and comma (,) delimiters guarantee parsing. For example, 05001, 5001, 1, and 00001 would be parsed correctly and accepted as correct. The valid range is 0 to 65535 (stored internally in the IP Phone as hexadecimal in a range of 0 to 0xFFFF). This field must be no longer than five digits.
- In all cases, the ASCII:encoded numbers are treated as decimal values and all leading zeros are ignored. Specifically, a leading zero does not change the interpretation of the value to be OCTAL:encoded. For example, 0021, 021, and 21 are all parsed and interpreted as decimal 21.
- When you use the Full DHCP option on the IP Phone 2004, the IP address of an XAS can be provided. To do this, append the XAS IP address and port to the Nortel DHCP option currently used to specify

the first and second server IP address, ports, and retry and action codes. For Graphical XAS, the action code (aaa) and retry count (rrr) must be appended. For Text XAS, it is not necessary to append these values.

The format of the exchange application server's IP address and port is:

iii.jjj.kkk.Ill:ppppp,aaa,rrr

The XAS port action code (aaa) byte values are:

— 1=Graphical XAS

— 0=Text XAS

The port field is processed if Graphical XAS is selected, but ignored for Text XAS (the fixed text port is used). XAS always uses port 5000.

Note: If the XAS port action code (aaa) byte value is 0 (Text XAS), then the port action code and retry count fields are not required. If the XAS port action code (aaa) byte value is 1 (Graphical XAS), then the port action code and retry count fields are not optional and must be included in the configuration string.

For example, the format of the option used to specify Connect Server 1, Connect Server 2, and the exchange application server (XAS), where the XAS port action code (aaa) byte value is 1 (Graphical XAS) is:

Nortel:i20xx:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp,aaa,rrr.

If the XAS port action code (aaa) byte value is 0 (Text XAS), the format of the option used to specify Connect Server 1, Connect Server 2, and the exchange application server (XAS) is:

Nortel:i20xx:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp

Configuration string examples [Table 36 "Configuration string for one Connect Server" \(page 216\)](#) to [Table 41 "Configuration string for two Connect Servers and an XAS \(Graphical\)" \(page 217\)](#) shows configuration strings with one or more Connect Servers and exchange application servers. The following conventions are used:

- The Nortel Class Identifier is separated from the servers by a comma (,).
- The servers are separated by semicolons (;).
- The IP address and port numbers are separated by a colon (:).
- The string is terminated with a period (.).

Table 36
Configuration string for one Connect Server

Nortel:i2004:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr.	
Nortel Class Identifier Field	Primary Connect Server
Nortel:i2004:A	iii.jjj.kkk.Ill:ppppp,aaa,rrr

Table 37
Configuration string for two Connect Servers

Nortel:i2004:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp,aaa,rrr.		
Nortel Class Identifier Field	Primary Connect Server	Secondary Connect Server
Nortel:i2004:A	iii.jjj.kkk.Ill:ppppp,aaa,rrr	iii.jjj.kkk.Ill:ppppp,aaa,rrr

Table 38
Configuration string for one Connect Server and an XAS (Text)

Nortel:i2004:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp			
Nortel Class Identifier Field	Primary Connect Server	Placeholder Secondary Connect Server	XAS
Nortel:i2004:A	iii.jjj.kkk.Ill:ppppp,aaa,rrr	iii.jjj.kkk.Ill:ppppp,aaa,rrr	iii.jjj.kkk.Ill:ppppp
Three IP addresses must be specified when using one Connect Server and XAS. If only two IP addresses are specified, the IP Phone assumes the second IP address is for the second Connect Server and does not recognize the XAS. Therefore, a placeholder IP address must be inserted for the second Connect Server in this situation. The placeholder IP address ensures that the XAS IP address appears as the third address in the string (where the IP Phone expects to find it). Nortel recommends simply repeating the IP address of the first Connect Server for the second Connect Server, to create the placeholder IP address.			

Table 39
Configuration string for one Connect Server and an XAS (Graphical)

Nortel:i2004:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp,aaa,rrr.			
Nortel Class Identifier Field	Primary Connect Server	Placeholder Secondary Connect Server	XAS
Nortel:i2004:A	iii.jjj.kkk.Ill:ppppp,aaa,rrr	iii.jjj.kkk.Ill:ppppp,aaa,rrr	iii.jjj.kkk.Ill:ppppp,aaa,rrr
Three IP addresses must be specified when using one Connect Server and XAS. If only two IP addresses are specified, the IP Phone assumes the second IP address is for the second Connect Server and does not recognize the XAS. Therefore, a placeholder IP address must be inserted for the second Connect Server in this situation. The placeholder IP address ensures that the XAS IP address appears as the third address in the string (where the IP Phone expects to find it). Nortel recommends that you repeat the IP address of the first Connect Server for the second Connect Server, to create the placeholder IP address.			

Table 40**Configuration string for two Connect Servers and an XAS (Text)**

Nortel:i2004:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp			
Nortel Class Identifier Field	Primary Connect Server	Secondary Connect Server	XAS
Nortel:i2004:A	iii.jjj.kkk.Ill:ppppp,a aa,rrr	iii.jjj.kkk.Ill:ppppp,a aa,rrr	iii.jjj.kkk.Ill:ppppp

Table 41**Configuration string for two Connect Servers and an XAS (Graphical)**

Nortel:i2004:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp,aaa,rrr.			
Nortel Class Identifier Field	Primary Connect Server	Secondary Connect Server	XAS
Nortel:i2004:A	iii.jjj.kkk.Ill:ppppp,a aa,rrr	iii.jjj.kkk.Ill:ppppp,a aa,rrr	iii.jjj.kkk.Ill:ppppp,a aa,rrr

Format for IP Phone DHCP Site Specific option

This section describes the Nortel:specific, Site Specific option for the IP Phones 200x, and the IP Softphone 2050. This option uses the reserved for Site Specific use DHCP options (128 to 254) (see RFC 1541 and RFC 1533), and must be returned by the DHCP server as part of each DHCPOFFER and DHCPACK message for the IP Phone to accept these messages as valid.

The IP Phone retrieves the relevant information and uses it to configure the IP address for the primary TPS and optional secondary TPS. Either this site:specific option must be present or a similarly encoded Vendor Specific option must be sent. That is, configure the DHCP server to send one or the other but not both. The choice of using either Vendor Specific or site:specific options enables Windows NT DHCP servers to be used with the IP Phone. Windows NT servers do not properly implement the vendor:specific option and as a result, Windows NT implementations must use the Site Specific version.

The format of the option is Type, Length, and Data. The format is the same as that of the encapsulated vendor:specific option (see [“Format for IP Phone DHCP encapsulated Vendor Specific Option”](#) (page 212)).

The VoIP network operation

The system can be managed using Communication Server 1000 Element Manager.

Telephony Manager

The TM is an integrated suite of system management tools. Compatible with a standard PC, the TM provides a single point of access and control to manage systems.

TM uses IP technology to target the following:

- single point of connectivity to the system and related devices
- data collection for traffic and billing records
- collection, processing, distribution, and notification of alarms and events
- data propagation
- performance measurement tools (Traffic Analysis package, and Real:Time Conferencing Protocol (RTCP) statistics from the Terminal Proxy Server (TPS) and Voice Gateway Media Cards)
- Web:based management applications, including security

For more information about security management, see *Security Management (NN43001-604)* ().

TM can be integrated with the suite of ENMS management tools to provide comprehensive management of the voice and data network.

For more information about TM, see *Telephony Manager 3.1 Installation and Commissioning (NN43050-300)* () or *Telephony Manager 3.1 System Administration (NN43050-601)* ().

Element Manager

Element Manager is a simple and user:friendly Web:based interface that supports a broad range of system management tasks, that include:

- configuration and maintenance of IP Peer and IP telephony features
- configuration and maintenance of traditional routes and trunks
- configuration and maintenance of numbering plans
- configuration of Call Server data blocks (such as configuration data, customer data, Common Equipment data, and D:channels)
- maintenance commands, system status inquiries, and backup and restore functions
- software download, patch download, and patch activation

Element Manager has many features to help administrators manage systems with greater efficiency. Examples are as follows:

- Web pages provide a single access point to parameters traditionally available through multiple overlays.
- Parameters are presented in logical groups to increase ease of use and access speed.
- The hide or show information option enables administrators to see information that relates directly to the task at hand.
- Full-text descriptions of parameters and acronyms help administrators reduce configuration errors.
- Configuration screens offer preselected defaults, lists, check boxes, and range values to simplify response selection.

The Element Manager Web server resides on the Signaling Server and can be accessed directly through a Web browser.

For more information about Element Manager, see *Element Manager System Reference – Administration* (NN43001:632).

Network monitoring

The network design process continues after implementation of the VoIP network and commissioning of voice services over the network. If you make network changes to VoIP traffic, general intranet traffic patterns, network policies, network topology, user expectations, and networking technology can render a design obsolete or noncompliant with QoS objectives. Review the design periodically against prevailing and trended network conditions and traffic patterns, at least once every two to three weeks initially, and then on a quarterly basis.

It is assumed that the customer's organization already has processes in place to monitor, analyze, and redesign both the Meridian Customer Defined Network (MCDN) and the corporate intranet, so that both networks continue to conform to internal QoS standards. When operating VoIP services, the customer organization must incorporate additional monitoring and planning processes, such as:

- Collect, analyze, and trend VoIP traffic patterns.
- Monitor and trend one-way delay and packet loss.
- Monitor Operational Measurements.
- Perform changes in VoIP network and intranet when planning thresholds are reached.

By implementing these new processes, the VoIP network can be managed to meet desired QoS objectives.

Set VoIP QoS objectives

State the design objective of the VoIP network to set the standard for evaluating compliance to meet user needs. When the VoIP network is first installed, the design objective expectations have been set based on the work done, see [“Evaluating network performance” \(page 128\)](#).

Initially, set the QoS objective so that for each destination pair, the mean+s of one:way delay and packet loss is below the threshold value to maintain calls between those two sites at the required QoS level. The graphs in [Figure 30 “QoS levels with G.729A/AB codec” \(page 133\)](#) and [Figure 31 “QoS level with G.711 codec” \(page 134\)](#) help determine what threshold levels are appropriate.

[Table 42 “VoIP QoS objectives” \(page 220\)](#) describes examples of VoIP QoS objectives.

Table 42
VoIP QoS objectives

Site Pair	IP Trunk 3.0 (or later) QoS objective	Fallback threshold setting
Santa Clara/ Richardson	Mean (one:way delay) + s (one:way delay) < 120 ms Mean (packet loss) + s (packet loss) < 0.3%	Excellent
Santa Clara/ Ottawa	Mean (one:way delay) + s (one:way delay) < 120 ms Mean (packet loss) + s (packet loss) < 1.1%	Excellent

In subsequent design cycles, review and refine the QoS objective based on data collected from intranet QoS monitoring.

After you decide on a set of QoS objectives, determine the planning threshold based on them. These thresholds are used to trigger network implementation decisions when the prevailing QoS is within range of the targeted values. This gives time for implementation processes to follow through. Set the planning thresholds 5% to 15% below the QoS objectives, depending on the implementation lag time.

Intranet QoS monitoring

To monitor one:way delay and packet loss statistics, install a delay and route monitoring tool, such as ping and Traceroute, on the TLAN of each IP Trunk 3.0 (or later) site. Each delay monitoring tool runs continuously, injecting probe packets to each ITG site every minute. The amount of load generated by the tool is not considered significant. At the end of the month, the hours with the highest one:way delay are noted; for those hours, the packet loss and standard deviation statistics can be computed.

At the end of the month, analyze the QoS information for each site, [Table 43 “QoS monitoring” \(page 221\)](#) provides a sample.

Table 43
QoS monitoring

Site pair	One:way delay Mean+s (ms)		Packet loss Mean+s (%)		QoS		
	Last period	Current period	Last period	Current period	Last period	Current period	Object:ive
Santa Clara/ Richardson	135	166	1	2	Excellent	Good	Excellent
Santa Clara/ Ottawa	210	155	3	1	Good	Excellent	Excellent

Declines in QoS can be observed through the comparison of QoS between the last period and current period. If a route does not meet the QoS objective, take immediate action to improve route performance.

For information about how to obtain other specialized delay and route monitoring tool, see [“Network performance measurement tools”](#) (page 128).

ITG Operational Measurements

The Voice Gateway Media Card collects Operational Measurements (OM) from the IP Phones and DSP channels and saves the information to a log file every 60 minutes. The Operational Measurements include:

- IP Phone Registration Attempted Count
- IP Phone Registration Confirmed Count
- IP Phone Unregistration Count
- IP Phone Audio Stream Set Up Count
- IP Phone Average Jitter (ms)
- IP Phone Maximum Jitter (ms)
- IP Phone Packets Lost/Late (%)
- IP Phone Total Voice Time (minutes and seconds)
- Gateway Channel Audio Stream Set Up Count
- Gateway Channel Average Jitter (ms)
- Gateway Channel Maximum Jitter (ms)
- Gateway Channel Packets Lost/Late (%)
- Gateway Channel Total Voice Time (minutes and seconds)

OM report description

The OM log file is a comma-separated (.csv) file stored on the TM server. Use TM to run a report, or schedule a regular report. A new file is created for each month of the year in which OM data is collected. It can be read directly, or imported to a spreadsheet application for post-processing and report generation. Collect these OM reports and store them for analysis. At the end of each month, identify the hours with the highest packet lost/late statistics and generate standard deviation statistics. Compare the data to target network QoS objectives.

Declining QoS can be observed by comparing QoS between periods. A consistently inferior measurement of QoS compared to the objective triggers an alarm. The customer must take steps to strengthen the performance of the route. The card creates a new log file each day and files automatically delete after seven days.

User feedback

Qualitative feedback from users helps to confirm if the theoretical QoS settings match what end users perceive. The feedback can come from a Help Desk facility and must include information, such as time of day, origination and destination points, and a description of service degradation.

The fallback threshold algorithm requires a fixed IP Trunk 3.0 (or later) system delay of 93 ms, which is based on default IP Trunk 3.0 (or later) settings and its delay monitoring probe packets. The fallback mechanism does not adjust when IP Trunk 3.0 (or later) parameters are modified from their default values. Users can perceive a lower quality of service than the QoS levels at the fallback thresholds in the following situations:

- Delay variation in the intranet is significant. If the standard deviation of one-way delay is comparable with the voice playout maximum delay, it means that there is a population of packets that arrive too late to be used by the IP Trunk 3.0 (or later) node in the playout process.
- The jitter buffer is increased. In this case, the actual one-way delay is greater than that estimated by the delay probe.
- The codec is G.711A or G.711U. The voice packets formed by these codecs are larger (120 to 280 bytes) than the delay probe packets (60 bytes), which results in a greater delay experienced per hop. If there are low-bandwidth links in the path, the one-way delay is noticeably higher in average and variation.

QoS monitoring and reporting tools

Use QoS monitoring and reporting tools in the post:installation, day:to:day activities of maintaining an acceptable QoS level for the VoIP network. Passive tools are used to monitor and report on real:time VoIP traffic metrics gathered from network devices that already collect and gather RMON information.

To adequately assess the data network on an ongoing basis, other intrusive tools are used to generate synthetic VoIP traffic. The intrusive tools are similar to those used to perform presales network assessments.

Nortel recommends that customers use a mechanism that provides notification of QoS policy breaches through e:mail, alarm, or page. The ability of these tools to generate timely reports on QoS is also important. The QoS data is copied from holding registers into a Management Information Base (MIB) at each recording interval; therefore, the customer must periodically secure the data before it is refreshed at the next interval.

Available tools

Some examples of QoS monitoring and reporting tools include:

- NetIQ Chariot
- RMON
- MultiRouter Traffic graphing tool
- SNMP NMS traffic reports

For more detailed information about specific QoS assessment, monitoring and reporting tools available, contact your Nortel sales representative.

Network Diagnostic Utilities

Network diagnostic utilities are accessible on IP Phones to isolate voice quality problems. The diagnostic utilities can be run from the menu:driven interface of the IP Phone itself. For details about running the diagnostic utilities on the IP Phone, see *IP Phones Fundamentals (NN43001-368)* ().

The diagnostic utilities are available at the OAM prompt of the Signaling Server command line interface (CLI). [Table 44 "Network diagnostic CLI commands" \(page 225\)](#) describes the network diagnostic CLI commands, and indicates if they are available in Element Manager.

Ping and traceroute

The system administrator can execute a ping or traceroute command from a specific endpoint with any arbitrary destination, typically another endpoint or Signaling Server. The CLI commands are:

- **rPing** — requests the IP Phone to ping a specified IP address.
- **rPingStop** — requests the IP Phone to stop pinging a specified IP address.
- **rTraceRoute** — requests the IP Phone to trace route a specified IP address.
- **rTraceRouteStop** — requests the IP Phone to stop tracing the route a specified IP address.

IP Networking statistics

The system administrator can view information about the packets sent, packets received, broadcast packets received, multicast packets received, incoming packets discarded, and outgoing packets discarded. Use the CLI command **eStatShow** to display Ethernet statistics for a specified IP Phone.

Ethernet statistics

The system administrator can view Ethernet statistics (for example, number of collisions, VLAN ID, speed, and duplex) for the IP Phone on a particular endpoint. The exact statistics depend on what is available from the IP Phone for the specific endpoint.

/RUDP statistics

The system administrator can view RUDP statistics (for example, number of messages sent, received, retries, resets, and uptime) for the IP Phones. Use the CLI command **RUDPStatShow** to display RUDP statistics.

Real:Time Transport Protocol statistics

The system administrator can view RTP/RTCP QoS metrics (for example, packet loss, jitter, and R:value) while a call is in progress. The CLI commands are:

- **RTPTraceShow** — displays RTP/RTCP statistics for an IP endpoint (tcid if the endpoint is a Voice Gateway Media Card). This command can be active across all calls, and can show statistics for multiple intervals.
- **RTPTraceStop** — requests issuing IP endpoint to stop RTPTraceShow.
- **RTPStatShow** — displays RTP/RTCP statistics.

DHCP

The system administrator can view DHCP settings (for example, IP address, S1, S2, and S4 addresses) for each IP Phone. Use the CLI command **isetInfoShow** to display standard DHCP configuration information, firmware version, hardware identification, and server information of an IP Phone.

Table 44
Network diagnostic CLI commands

Command	Description	Available in Element Manager
rPing <TN IP> <dest><count>	Request IP Phone to ping an IP address, where: <TN IP> = TN or IP address of set issuing Ping <dest> = destination IP address <count> = number of successful ping responses the pinging set should receive. If this count is not specified, it is fixed to 4. Example: oam> rping 47.11.215.153, 47.11.216.218, 5 56 bytes packets received from IP 47.11.216.218. 5 packets transmitted, 5 packets received, 0 packets lost minimum round trip time in ms: 0.1ms average round trip time in ms: 0.2 ms maximum round trip time in ms: 0.4ms	Yes
rPingStop <TN IP>	Request for IP Phone to stop ping.	No
rTraceRoute <TN IP> <dest><count>	Request that specifies IP Phone to trace the route of a destination IP address. Where: <TN IP> = TN or IP address of set issuing rTraceRoute <dest> = the destination IP address <count> = maximum number of hops Example: oam> rTraceRoute 47.11.215.153, 47.11.174.10, 6	Yes

Table 44
Network diagnostic CLI commands (cont'd.)

Command	Description	Available in Element Manager
	<pre> 1 :: 47.11.181.3 1.079ms 0.768ms 0.744ms 2 :: 47.11.174.10 2.681ms 2.654ms 2.690ms 3 :: * * * 4 :: * * * 5 :: * * * 6 :: last packet </pre>	
rTraceRouteStop <TN IP>	Request for IP Phone to stop route trace.	No
RUDPStatShow <TN IP> [, <clear>]	Display information received from an IP endpoint. Displayed information includes number of messages sent, number of messages received, and number of retries. If specified, the statistics are cleared before display. Where: <TN IP> = TN or IP address of an IP Phone <clear> = Clear counts of messages sent, messages received, and number of retries, where: 0 = Does not clear the statistics (default) 1 = Clears the statistics and displays zero counts Example : do not clear statistics: <pre> oam> RUDPStatShow 47.11.215.153 Messages sent: 309 Messages received: 321 Number of retries: 10 Uptime of current TPS registration: 2 hour 24 minutes 35 seconds Example : clear statistics: oam> RUDPStatShow 47.11.215.153, 1 Messages sent: 0 Messages received: 0 Number of retries: 0 Uptime of current TPS registration: 2 hour 24 minutes 35 seconds </pre>	No

Table 44
Network diagnostic CLI commands (cont'd.)

Command	Description	Available in Element Manager
eStatShow <TN IP> [, <clear>]	Display Ethernet information received from an IP endpoint. If specified, statistics are cleared before they are displayed. Displayed information includes: • interface speed and duplex mode • autonegotiate protocol received/not received • VLAN ID and priority • packet collisions (peg count) • CRC errors (peg count) • framing errors (peg count) Where: <TN IP> = TN or IP address of an IP endpoint. <clear> = Clears counts of packet collisions, CRC errors, and framing errors, where: 0 = Does not clear the statistics (default) 1 = Clears the statistics and displays zero counts. Example : do not clear statistics: <pre>oam> eStatShow 47.11.215.153 100 base T full duplex Auto negotiate protocol received VLAN ID: 88 Priority: 1 Packet collisions: 100 CRC errors: 30 Framing Errors:1</pre> Example : clear statistics: <pre>oam> eStatShow 47.11.215.153, 1 100 base T full duplex Auto negotiate protocol received VLAN ID: 88 Priority: 1 Packet collisions: 0 CRC errors: 0 Framing Errors: 0</pre>	No

Table 44
Network diagnostic CLI commands (cont'd.)

Command	Description	Available in Element Manager
isetInfoShow <TN IP>	Display standard DHCP configuration information, set firmware version, hardware identification, and server information of an IP Phone. Where: <TN IP> = TN or IP address of the IP Phone. Example: <pre>oam> isetInfoShow 47.11.215.153 FW Version: 0602B50 HWID: 18006038DD1ADB6600 MAC: 006038DD1ADB VLAN ID: 124 Priority: 6 Set IP: 47.103.225.125 Subnet Mask: 255.255.255.0 Set Gateway: 47.103.225.1 LTPS IP: 47.103.247.224 Node IP: 47.103.247.224 Node ID: 4420 S1 Node IP: 47.103.247.229 Port: 4100 Action: 1 S2 Node IP: 47.103.247.229 Port: 4100 Action: 1 S5 Node IP: 47.103.247.229 Port: 4100 XAS: Net6</pre>	Yes
RTPStatShow <TN IP>	Display QoS polling information. Where: <TN IP> = TN or IP address of the IP Phone. Example: The output lines in this example are truncated to fit in the available space; each line of output is actually prefixed by the following: RTPStatShow Report (RTCP:XR) from Set (164.164.8.20) <pre>oam> RTPStatShow 164.164.8.20</pre>	Yes

Table 44
Network diagnostic CLI commands (cont'd.)

Command	Description	Available in Element Manager
	Far End IP address: 164.164.8.21 Far End Port: 5200 Local Packet Sent: 2978 Local Packet Received: 2535 Local Packet Received out of order: 0 Local Pkt Loss: 14% Local Average Jitter: 0ms Local Latency: 9ms Local Listening R: 63 Vocoder Type: 0 Local Avg Net Loss Rate: 14.79% Local Avg Discard Rate: 0.00% Local Avg Burst Density: 17.11% Local Avg Burst Length: 2070ms Local Gap Density: 10.34% Local Gap Length: 1080ms Local Avg End System Delay: 15ms Local Avg Noise Level: 0dBm Local Avg Signal Power: 0dBm Local Round Trip Time Avg: 19ms Local Round Trip Time Avg High: 19ms Remote Listening R: 0 Remote Avg Net Loss Rate: 0% Remote Avg Discard Rate: 0% Remote Avg Burst Density: 0% Remote Avg Burst Length: 0ms Remote Gap Density: 0% Remote Gap Length: 0ms Remote Avg End System Delay: 0ms Remote Avg Noise Level: 0dBm Remote Avg Signal Power: 0dBm Remote Round Trip Time Avg: 0ms Remote Round Trip Time Avg High: 0ms Remote Packet Loss: 0% Remote Average Jitter: 0ms Remote Latency: 0ms	

Table 44
Network diagnostic CLI commands (cont'd.)

Command	Description	Available in Element Manager
RTPTraceShow <TN IP> [, <polling period>]	Display RTP/RTCP statistics for an IP endpoint. This command can be active across all calls. Where: • <TN IP> = TN or IP address of the endpoint (tcid if the endpoint is a Voice Gateway Media Card) • <polling period> = Number of polling periods to be displayed. If not specified, default is 10 polling periods. Example: The output lines in this example are truncated to fit in the available space; each line of output is actually prefixed by the following: RTPTraceShow Report from Set (164.164.8.20) <pre> oam> RTPTraceShow 164.164.8.20 Far End IP address: 164.164.8.21 Far End Port: 5200 Far End IP address: 164.164.8.21 Far End Port: 5200 Local Packet Sent: 2978 Local Packet Received: 2535 Local Packet Received out of order: 0 Local Pkt Loss: 14% Local Average Jitter: 0ms Local Latency: 9ms Local Listening R: 63 Vocoder Type: 0 Local Avg Net Loss Rate: 14.79% Local Avg Discard Rate: 0.00% Local Avg Burst Density: 17.11% Local Avg Burst Length: 2070ms Local Gap Density: 10.34% Local Gap Length: 1080ms Local Avg End System Delay: 15ms Local Avg Noise Level: 0dBm Local Avg Signal Power: 0dBm Local Round Trip Time Avg: 19ms Local Round Trip Time Avg High: 19ms Remote Listening R: 0 Remote Avg Net Loss Rate: 0% Remote Avg Discard Rate: 0% </pre>	No

Table 44
Network diagnostic CLI commands (cont'd.)

Command	Description	Available in Element Manager
	Remote Avg Burst Density: 0% Remote Avg Burst Length: 0ms Remote Gap Density: 0% Remote Gap Length: 0ms Remote Avg End System Delay: 0ms Remote Avg Noise Level: 0dBm Remote Avg Signal Power: 0dBm Remote Round Trip Time Avg: 0ms Remote Round Trip Time Avg High: 0ms Remote Packet Loss: 0% Remote Average Jitter: 0ms Remote Latency: 0ms	
RTPTraceStop	Request issuing IP endpoint to stop RTPTraceShow.	No

For information about network diagnostic utilities, see *IP Phones Fundamentals (NN43001-368)* () and *Signaling Server IP Line Applications Fundamentals (NN43001-125)*. .

Voice quality monitoring

The PVQM feature monitors voice quality by measuring the following:

- Latency : length of time for information to travel through the network, in seconds
- Jitter : variability in latency, in seconds
- Packet Loss : number of packets lost during transmission, in percentage
- R:Value : measurement of listening R:Value using ITU E:Model. R:Value maps to Mean Opinion Score (MOS).

The sampled metrics are compared to user:configured thresholds to determine system performance. When sampled metrics exceed configured thresholds, statistics are generated on the system.

For details about configuring metric thresholds, see [“Configure voice quality metric thresholds” \(page 234\)](#).

Statistics for each metric are collected on the Signaling Server or Voice Gateway Media Card to create a traffic report. The traffic report classifies metric threshold violation peg counts as Warning or Unacceptable.


Each summarized traffic report is added to the IP Phone zone Traffic Report 16 (TFS016), which in turn summarizes voice quality over the reporting period on a zone:by:zone basis. IP Phone zone Traffic Report 16 (TFS016) provides the system administrator with an overall view of voice quality on the system. For information about IP Phone zone Traffic Report 16 (TFS016), see *Traffic Measurement Formats and Output Reference* (NN43001-750) ().

An SNMP alarm is generated when a voice quality metric threshold exceeds Warning or Unacceptable status. For details about controlling the number of SNMP alarms generated, see [“Configure and print zone alarm notification levels”](#) (page 234).

IP Phones voice quality monitoring

The following diagram shows voice quality monitoring for IP Phones within the VoIP system.

Figure 51
IP Phones voice quality monitoring

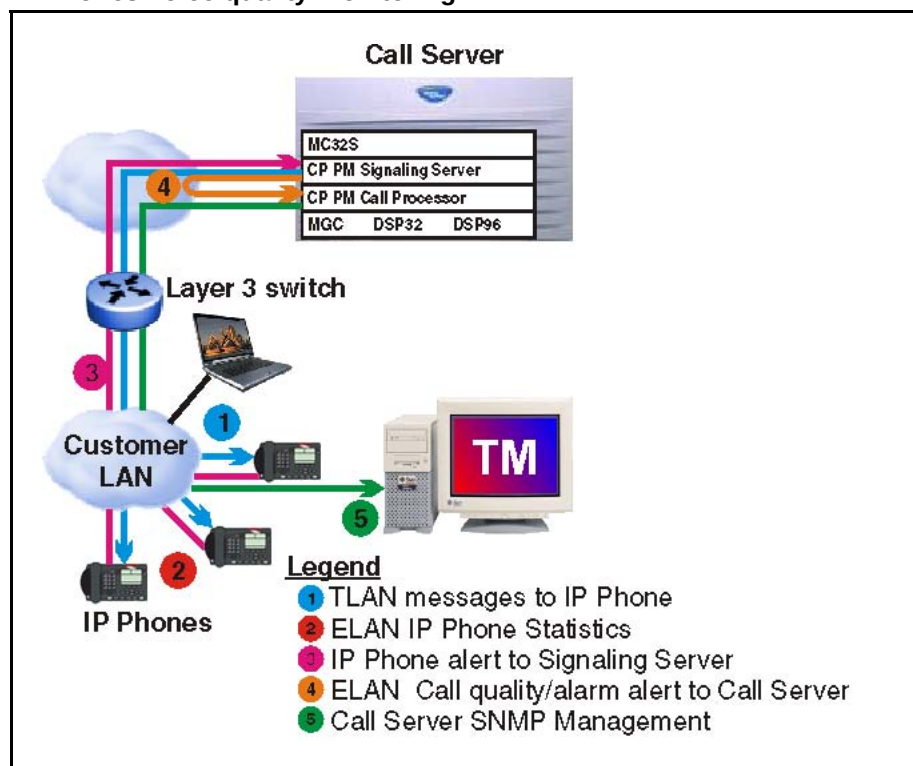

The following actions occur when you monitor voice quality for IP Phones:

1. The Signaling Server sends preset threshold values to the IP Phone.
2. Statistics are collected and compared on the IP Phone.

3. When a threshold is exceeded, the IP Phone sends an alert to the Signaling Server or Voice Gateway Media Card, which generates an initial SNMP alarm.

For voice quality metric alarms that reach the Unacceptable level, the path (tracer) of the voice media is written to the log file on the Signaling Server or Voice Gateway Media Card for diagnostic purposes.

4. Call quality information and alarm alert is forwarded to the Call Server.
5. The Call Server generates a second SNMP alarm.

Voice quality alarms

Table 45 "Call Server alarms : Call:by:call" (page 233) identifies metrics, threshold levels, alarming severity, and QoS alarms.

Table 45
Call Server alarms : Call:by:call

Metric	Threshold level	Severity	Alarms
Call Server alarms : Call:by:call			
Latency, Jitter, Packet Loss, R:Value	Warning	Info	QoS0001 : QoS0005 (excluding QoS0004)
Latency, Jitter, Packet Loss, R:Value	Unacceptable	Minor	QoS0007 : QoS0010
Call Server alarms : Aggregated by zone			
Latency, Jitter, Packet Loss, R:Value	Warning	Minor	QoS0012 : QoS0015
Latency, Jitter, Packet Loss, R:Value	Unacceptable	Critical	QoS0017 : QoS0020
Signaling Server (LTPS) alarms			
Latency, Jitter, Packet Loss, R:Value	Warning	Warning	QoS0022, QoS0024, QoS0026, QoS0028
Latency, Jitter, Packet Loss, R:Value	Unacceptable	Minor	QoS0030, QoS0032, QoS0034, QoS0036
Latency, Jitter, Packet Loss, R:Value	Clear	Clear	QoS0023, QoS0027, QoS0029, QoS0031, QoS0033, QoS0035, QoS0037

For information about QoS alarms, see *Software Input Output Reference — System Messages (NN43001-712)* ().

Configure voice quality metric thresholds

The system administrator can configure and print voice quality metric thresholds on a per:call or zone basis. Use the following commands in LD 117:

- **CHG CQWTH** — Change voice quality Warning thresholds on a per call basis.
- **CHG CQUTH** — Change voice quality Unacceptable thresholds on a per call basis.
- **CHG ZQWTH** — Change voice quality Warning thresholds on a zone basis.
- **CHG ZQUTH** — Change voice quality Unacceptable thresholds on a zone basis.
- **PRT QSTHS** — Display all voice quality thresholds.
- **PRT AQoS** — Display QoS records for zones.
- **PRT ZQoS** — Display QoS records for zones.

For detailed information about the previous commands, see *Software Input Output — Maintenance (NN43001-711)*. ()

Configure voice quality sampling (polling)

Use the **CHG SQoS** command in LD 117 to configure the sampling (polling) period, zone:alarm:rate collection window, and the minimum number of samples to collect during the window.

For detailed information about the previous commands, see *Software Input Output — Maintenance (NN43001-711)* ().

Configure and print zone alarm notification levels

Systems that process a large number of calls potentially generate a significant number of SNMP alarms. Controlling the number of alarms by configuring zone alarm notification levels helps isolate voice quality problems and reduce network traffic.

Voice quality threshold alarms are examined for their severity relative to the alarm notification level settings. If the voice quality threshold alarm severity exceeds the configured notification level, it generates an SNMP alarm; otherwise, the alarm is suppressed.

Voice quality threshold alarm notification levels can be set on a zone:by:zone basis so that some bandwidth zones can be monitored for all alarms and other zones will report only serious voice quality problems. Alarm notification levels are defined in [Table 46 "Voice quality threshold alarm notification levels" \(page 235\)](#).

Table 46
Voice quality threshold alarm notification levels

Level	Description	Alarms
0	All voice quality alarms are suppressed	None
1	Allow zone:based Unacceptable alarms	QoS0017, QoS0018, QoS0019, QoS0020
2	Allow all of the above PLUS zone:based Warning alarms	All of the above PLUS, QoS0012, QoS0013, QoS0014, QoS0015
3	Allow all of the above PLUS per:call Unacceptable alarms	All of the above PLUS, QoS0007, QoS0008, QoS0009, QoS0010, QoS0030, QoS0031, QoS0032, QoS0033, QoS0034, QoS0035, QoS0036, QoS0037
4	Allow all of the above PLUS per:call Warning alarms	All of the above PLUS, QoS0001, QoS0002, QoS0003, QoS0005, QoS0018, QoS0019, QoS0022, QoS0023, QoS0024, QoS0025, QoS0026, QoS0027, QoS0028, QoS0029

QoS0036 and QoS0037 are not currently reported.

The system administrator controls the number of alarms generated by the system using the **CHG ZQNL** alarm notification level configuration commands. The system administrator can print alarm notification levels using the **PRT ZQNL** command. Both commands are in LD 117.

For detailed information about these commands, see *Software Input Output — Maintenance (NN43001-711)* ().

Heterogeneous environments

In an environment with a mixture of Nortel equipment and third:party equipment, voice:quality monitoring, detection, and alarming is performed only on IP endpoints that have voice quality monitoring capabilities.

For information on IP endpoints and their voice quality capabilities in the system, see [Table 47 "IP endpoint and voice quality capabilities" \(page 236\)](#).

Table 47
IP endpoint and voice quality capabilities

Endpoint type	Voice quality monitoring operation
IP Phones without PVQM package 401	Detects jitter, packet loss, and latency (when the far end is RTCP:compliant) threshold violations. Threshold violations are detected asynchronously by the IP Phone.
IP Phones with PVQM package 401	Detects jitter, packet loss, and latency (when the far end is RTCP:compliant) and R:Value threshold violations. Threshold violations are detected asynchronously by the IP Phone.
IP Softphone 2050	Detects jitter, packet loss, and latency (when the far end is RTCP:compliant) threshold violations. Threshold violations are detected by polling.
Communication Server 1000 and Meridian 1 systems with Voice Gateway Media Cards running IP Line 4.0 (and later)	Detects jitter and packet loss threshold violations. Threshold violations are detected by polling.
Third:party Gateway	Not supported

Network Management

SNMP Network Management Systems

Simple Network Management Protocol (SNMP):based Network Management Systems (NMS) monitor Real:Time networks from end:to:end. NMS ensures that problems on a network running Real:Time traffic are solved quickly to maintain high:quality service.

SNMP NMS software can be configured to perform the following actions:

- map the network
- monitor network operation through polling of network devices
- centralize alarm management through SNMP traps
- notify network administrators of problems

The CS 1000 system can integrate into an NMS to provide a complete view of the converged voice and data network. Problems can be isolated quickly when looking at the entire network.

SNMP Agent support is provided in TM. This allows alarms sent from devices to forward to the NMS.

Nortel also provides a complete line of Enterprise Network management software with the Enterprise Network Management Solutions product line. An SNMP interface is available in the traffic reporting system so that TM, or any third:party system, can have a standards:based interface into the system traffic reports. For more information, see *Communication Server 1000 Fault Management — SNMP (NN43001-719)*.

TM and Network Management System

TM can be combined with Enterprise Network Management System (ENMS) Release 9.01, and later to provide an integrated data, voice, and video network, as part of a Unified Networking system. The result is integrated LAN, WAN, and voice network management.

ENMS is an Enterprise:level network management solution, that provides fault, performance, configuration, and security management for Nortel internetworking devices. ENMS enables network administrators to monitor and manage the network through a single view, and access any ENMS server in the network from one client installation. It provides system:level management instead of managing one device at a time. ENMS provides graphical views from physical connections between the LANs and WANs to the logical connections of a VLAN.

For more information about security management, see *Security Management (NN43001-604)* ()

TM server activity can be monitored through ENMS.

TM Alarm Manager receives Simple Network Management Protocol (SNMP) traps from managed elements. Through Alarm Notification, TM sends filtered traps to ENMS.

Policy Management

Policy Management simplifies network QoS configuration by managing network QoS policies from a central location.

Details, such as Layer 2, Layer 3, Layer 4, and trust configurations can be implemented for the entire network from a central location. A variety of policy managers are usually available from the network equipment vendor.

The Common Open Policy Services (COPS) protocol is used to transmit standard policies to the network devices.

For more details on Nortel ENMS Policy Services, contact your Nortel representative.

CS 1000 network inventory and configuration

Record the current CS 1000 design and log all additions, moves, and changes that occur in the CS 1000 network. The following information must be recorded:

- CS 1000 site information
 - location
 - dialing plan
 - IP addressing
- Provisioning of CS 1000 nodes
 - number of cards and ports
- CS 1000 node and card parameters
 - fallback threshold level
 - codec image
 - voice and fax payload
 - voice and fax playout delay
 - audio gain, echo canceller tail delay size, Silence Suppression threshold
 - software version

Configuration

This chapter contains information about configuring a converged data and voice network.

Navigation

- [“Quality of Service” \(page 240\)](#)
- [“Bandwidth Management” \(page 241\)](#)
- [“Configuring Dialing Plan” \(page 247\)](#)
- [“Zone Based Dialing” \(page 263\)](#)
- [“Meridian Customer Defined Network Alternate Routing and Vacant Number Routing ” \(page 266\)](#)
- [“Codec configuration” \(page 266\)](#)
- [“Adaptive Network Bandwidth Management configuration” \(page 271\)](#)
- [“Provisioning for Tandem Bandwidth Management ” \(page 272\)](#)
- [“Bandwidth Management support for Network Wide Virtual Office” \(page 277\)](#)
- [“Alternative call routing for Network Bandwidth Management” \(page 281\)](#)
- [“Zone configuration” \(page 297\)](#)
- [“SIP Line service” \(page 335\)](#)

Communications Server 1000 configuration for network requirements

You can configure Communication Server 1000, in Release 6.0, to meet varying network requirements, with the following three basic configurations:

- A Small configuration, which is suitable for single system installations and a single ELAN subnet interconnecting all of the Communication Server 1000 dependent elements.
- A Normal configuration, which is suitable for larger installations and deploys multiple ELAN subnets or multiple Communication Server 1000 systems within the same UCM Security Domain.
- A Managed Services configuration, which is suitable for installations where complete isolation between the ELAN or Signaling and Management Network, and the various Enterprise Networks are required.

Small configuration

The Small configuration is intended for small systems which consist of a single Call Server with a single ELAN subnet linking all of the Communication Server 1000 elements, including the UCM Primary Security Server. Routing is not required between the ELAN subnet and the TLAN/Enterprise Network. The characteristics of systems using this configuration are:

Quality of Service

Procedure 2 Configuring QoS in Element Manager

Step	Action
1	In the Element Manager navigation tree, click IP Telephony, Nodes: Servers, Media Cards, Configuration . The Node Configuration window appears.
2	In the Node Configuration window, click Edit next to the node to configure. The Edit window appears.

Figure 52
QoS in Element Manager

- 3 Click **QoS**.
- 4 From the Input Value section, the following values must be set:
Select Diffserv Codepoint(DSCP) Control packets= 40 : Class Selector 5 (CS5). The range is 0 to 63. This configures the priority of the signaling messaging.
Select Diffserv Codepoint(DSCP) Voice packets = 46 : Control DSCP : Expedited Forwarding (EF). The range is 0 to 63. The Differentiated Service (DiffServ) CodePoint (DSCP) determines the priorities of the management and voice packets in the IP Line network. The values are stored in IP telephony CONFIG.INI file. The values used in the IP packets are respectively 160 (40*4) and 184 (46*4).
Click **Enable 802.1Q support** check box.
Enter **802.1Q Bits value (802.1p)** (Range 0 to 7).
- 5 Enter the IP Phone priority in the **802.1Q Bits value (802.1p)** text box.
- 6 Click **Save and Transfer**.

--End--

Bandwidth Management

The following sections describe how to configure Bandwidth Management in a Communication Server 1000 network.

Configuration rules

The following list contains the configuration rules for Bandwidth Management.

- Each Call Server in the network must be configured with a unique VPNI, with the exception that branch office (MG 1000B and SRG) Call Servers must be configured with the same VPNI as that of the main office Call Server with which they register.
- Different networks usually use different VPNI numbers
- Nortel recommends that all endpoints on a Call Server (IP Phones and Voice Gateway Media Cards) be configured with the same zone number.
- Virtual Trunks must be configured with a different zone number than the endpoints.

Bandwidth Management configuration

Perform the following steps to configure Bandwidth Management on the Call Server.

Configuring Bandwidth Management

Step	Action
1	Define a VPNI number in LD 15.
2	Configure the Bandwidth Management parameters for each zone on the Call Server using either Element Manager or LD 117. For more information about Adaptive Network Bandwidth Management configuration parameters and Configuration using LD 117, see “Adaptive Network Bandwidth Management configuration” (page 271).
3	Configure Call Server zones to use for endpoints (telephone and gateways). For more information about zones, see “Zones” (page 24). • Intrazone Preferred Strategy = Best Quality (BQ) • Intrazone Bandwidth = default (1 000 000 kbit/s) • Interzone Preferred Strategy = Best Bandwidth (BB) • Interzone Bandwidth = maximum bandwidth usage allowed between peer Call Servers
4	Configure Call Server zones to use for Virtual Trunks. • Intrazone Mandatory Strategy = Best Quality (BQ) • Intrazone Bandwidth = default (1000000)

- Interzone Mandatory Strategy = Best Quality (BQ)
- Interzone Bandwidth = default (1000000)

5 Configure the IP Phone, DSP, and Virtual Trunk data with the corresponding zone numbers.

For example, an IP Phone 2004 telephone in zone 8

```
LD 11
REQ NEW
TYPE 2004P1, 2004P2
. . .
ZONE 8
```

--End--

For more information regarding Media Gateway channel zone configuration, see *Communication Server 1000E Installation and Commissioning* (N43041:310). For more information on configuring trunk zones, see *IP Peer Networking Installation and Commissioning* (NN43001:313).

Maintenance commands

Maintenance commands can be run in Element Manager or LD 117. The prt intrazone and prt interzone commands are available in Element Manager from the Zones page.

Printing intrazone and interzone statistics for a zone

Step	Action
1	In the Element Manager navigation tree, select IP Networks, Zones . The Zones window appears.
2	Click Maintenance Commands for Zones (LD 117) . The Maintenance Commands for Zones pane opens, which lists the configured zones.

Figure 53
Configured Zones list

Managing: 192.167.102.3
 System > IP Network > Zones > Maintenance Commands for Zones

Maintenance Commands for Zones

Action Print Intrazone Statistics per Local Zone (PRT INTRAZONE)

Zone # Print Intrazone Statistics per Local Zone (PRT INTRAZONE)

Print Bandwidth Property (PRT ZBW)

Print Description (PRT ZDES)

Print Dialing Plan and Access Codes (PRT ZDP)

Print Time Change Property (PRT ZTP)

Show Branch Office Behaviour (STAT ZBR)

Show Status (STAT ZONE)

Zone #	sage(Kbps)	Peak(%)
0	0	0
1	0	0
2	0	0
3	0	0
4	0	0
5	0	0

Number of Zones configured = 6

3

Perform one of the following:

- To display intrazone statistics:
 - a. Select **Print Interzone Statistics (PRT INTERZONE)** from the **Action** list.
 - b. Select a zone from the **Zone Number** list, by doing of the following:
 - Select **ALL** to print statistics for all zones.
 - Select a specific zone number to display statistics for a specific zone.
- To display interzone statistics:
 - Select **Print Intrazone Statistics per Local Zone (PRT INTRAZONE)** from the Action list.
 - Select a specific zone number to display statistics for a specific zone.

4

Click **Submit**.

The Maintenance Commands for Zones pane appears, which displays the statistics for the specified zone or zones. A blank field indicates the statistic is either not available or not applicable to that zone.

Figure 54
Interzone statistics example

Managing: 192.167.102.3
System » IP Network » Zones » Maintenance Commands for Zones

Maintenance Commands for Zones

Action:

Zone Number:

Zone Number	State	Resource Type	Intrazone Strategy	Zone Intent	Bandwidth(Kbps)	Usage(Kbps)	Peak(%)
0	ENABLED	SHARED	BQ	MO	1000000	0	0
1	ENABLED	SHARED	BQ	MO	1000000	0	0
2	ENABLED	SHARED	BQ	VTRK	1000000	0	0
3	ENABLED	SHARED	BQ	MO	1000000	0	0
4	ENABLED	SHARED	BQ	MO	1000000	0	0
5	ENABLED	SHARED	BQ	MO	1000000	0	0

Number of Zones configured = 6

Figure 55
Intrazone statistics example

Managing: 192.167.102.3
System » IP Network » Zones » Maintenance Commands for Zones

Maintenance Commands for Zones

Action:

Near End Zone Number: Near VPNI:

Far End Zone Number: Far VPNI:

Near End Zone Number	Far End Zone Number	State	Resource Type	Strategy	Zone Intent	QoS Factor (%)	Bandwidth (Kbps)	Sliding Maximum (Kbps)	Usage (Kbps)	Peak (%)	Average (Cph)	Alarms (Aph)
0		ENABLED	SHARED	BQ	MO		1000000		0	0		
1		ENABLED	SHARED	BQ	MO		1000000		0	0		
2		ENABLED	SHARED	BQ	VTRK		1000000		0	0		
3		ENABLED	SHARED	BQ	MO		1000000		0	0		
4		ENABLED	SHARED	BQ	MO		1000000		0	0		
5		ENABLED	SHARED	BQ	MO		1000000		0	0		

--End--

Configuring a Bandwidth Management zone

You can configure a new Bandwidth Management zone using LD 117 and the NEW ZONE command. An existing zone can be modified using the CHG ZONE command.

Table 48
LD 117 – Configure Bandwidth Management zone

Command	Description
NEW CHG ZONE <zoneNumber> [<intraZoneBandwidth> <intraZoneStrategy> interZoneBandwidth> <interZoneStrategy> <zoneIntent> <zoneResourceType>]	Configure a new zone (NEW) or change (CHG) an existing zone, where: • zoneNumber = 0:255 • intraZoneBandwidth = Available intrazone bandwidth (Kbit/s); Nortel recommends this value be set to the maximum value. • intraZoneStrategy = BQ (Best Quality) or BB (Best Bandwidth); Nortel recommends this value be set to BQ. • interZoneBandwidth = — For Call Server zone = Maximum bandwidth usage (in Kbit/s) allowed between peer Call Servers — For Virtual Trunk zones = 1000000 (Kbit/s) • interZoneStrategy = BQ (Best Quality) or BB (Best Bandwidth); Nortel recommends this value be set to BB to conserve interzone bandwidth. • zoneIntent = type of zone, where: — MO = Main Office (Call Server) zone — BMG = Branch Media Gateway (for branch office zones) — VTRK = Virtual Trunk zone • zoneResourceType = resource intrazone preferred strategy, where: — shared = shared DSP channels (default) — private = private DSP channels For more information about Private/Shared Zone configuration, see <i>Signaling Server IP Line Applications Fundamentals (NN43001-125)</i> In Communication Server 1000 Release 5.5, the zones that were described with BMG designator stay with BMG one, all the other zones are provided with MO designator. It is possible to update ZoneIntent using CHG ZONE command.
OUT ZONE <zoneNumber>	Remove a zone.
DIS ZONE <zoneNumber>	Disable a zone. When a zone is disabled, no new calls are established inside, from, or toward this zone.
ENL ZONE <zoneNumber>	Enable a zone.

ATTENTION

Do not use the PRT ZONE command. It has been replaced by the PRT INTRAZONE and PRT INTERZONE commands.

Table 49
LD 117 – Print zone statistics

Command	Description
PRT INTRAZONE <zone>	Print intrazone statistics for the identified zones, where: • zone = ALL or 0:255 The following output appears: • Zone • Type = PRIVATE/SHARED • Strategy = BB/BQ • zoneIntent = MO/VTRK/BMG • Bandwidth = number of Kbit/s • Usage = number of Kbit/s • Peak = %
PRT INTERZONE <nearZone> <nearVPN> <farZone> <farVPN>	Print interzone statistics for the specific VPNI zone; where: • nearZone = ALL or 0:255 The following output appears: • Zone number = 0:255 • Zone VPNI = 1:16283 • Type= PRIVATE/SHARED • Strategy = BB/BQ • ZoneIntent = MO/VTRK

Configuring Dialing Plan

Use the following procedures to configure the dialing plan for the main and branch offices and the NRS database. See [“Prerequisites to configure the dialing plan” \(page 107\)](#) before proceeding with configuration.

Configuring the main office

Step	Action
1	Configure the ZACB property for the branch office zone.

Table 50

LD 117 – Define the Zone Access Code for the branch office zone

Command	Description
CHG ZACB <zone> [ALL] [<AC1 AC2> <AC1 AC2>]	Define the Access Codes used to modify local or long:distance calls in the branch office to force all branch office calls to be routed to the MG 1000B PSTN.

The ZACB and ZDP properties are used to configure the digit manipulation behavior of the branch office zone.

The ZACB property specifies which calls undergo digit manipulation. The attribute can be configured in the following ways.

- **CHG ZACB <zone>**
In this configuration, dialing AC1 or AC2 does not trigger digit manipulation. SRG user calls are treated exactly the same as those for main office users.
- **CHG ACB <zone> ALL**
In this configuration, calls dialed with AC1 and calls dialed with AC2 undergo zone:based digit manipulation. All SRG user calls can then be routed to the SRG PSTN.
For example, assume that AC1 = 1, AC2 = 2, and ZDP = 101. If an SRG user dials 1 87654321, ZDP is inserted in the dialed digits to form a digit string of 1 101 87654321. If an SRG user dials 2 87654321, ZDP is inserted in the dialed digits to form a digit string of 2 101 87654321.
- **CHG ZACB <zone> AC1 AC2**
In this configuration, only calls dialed with AC1 undergo zone:based digit manipulation. All SRG user calls dialed with AC1 can then be routed to the SRG PSTN.
For example, assume that AC1 = 1, AC2 = 2, and ZDP = 101. If an SRG user dials 1 87654321, ZDP is inserted in the dialed digits to form a digit string of 2 101 87654321. If an SRG user dials 2 87654321, zone:based digit manipulation does not occur and the digit string remains unchanged.
- **CHG ZACB <zone> AC2 AC2**
In this configuration, only calls dialed with AC2 undergo zone:based digit manipulation. All SRG user calls dialed with AC2 can then be routed to the SRG PSTN.
For example, assume that AC1 = 1, AC2 = 2, and ZDP = 101. If an SRG user dials 1 87654321, zone:based digit manipulation does not occur and the digit string remains unchanged. If an SRG user dials 2 87654321, ZDP is inserted in the dialed digits to form a digit string of 2 101 87654321.

As part of the ZACB configuration, you can also change the dialed Access Code, so if you dial AC2 it can be changed to AC1, or vice versa. This provides more flexibility in the main office NARS configurations. Normally, you do not need to change the Access Code.

The Access Code dialed by the user is used internally by the Call Server. It is not sent as part of the outpulsed digits (to the NRS or to the trunks).

If a specified Access Code is used for both local and long:distance dialing, then both types of calls will receive the specified routing.

- 2 Configure the ZDP property for the branch office zone in the main office.

Table 51

LD 117 – Define the Zone Digit Prefix property digit manipulation

Command	Description
CHG ZDP <zone> <DialingCode1> <DialingCode2> <DialingCode3>	Define the dialing plan for the branch office zone, where DialingCode1, DialingCode2, and DialingCode3 are inserted into the dialed digits between the Access Code and the remainder of the dialed number.

The ZDP and ZACB properties are used to configure the digit manipulation behavior of the branch office zone.

The ZDP property is inserted between the Access Code specified in the ZACB command and the dialed digits. This zone:based digit manipulation allows the main office Call Server and the network NRS to distinguish the SRG user calls from the main office user calls, and route them accordingly. The digit manipulation occurs before any digit processing in the main office Call Server or NRS.

ATTENTION

If DialingCode1, DialingCode2, or DialingCode3 are already present in the dialed digits, then they will not be reinserted.

Nortel recommends that the ZDP attribute for each branch office zone be set to a unique non:dialable number within the dialing plan (for example 1019 or 999). This unique non:dialable number can then be used, when configuring the main office ESN Special Number and the NRS (H.323 Gatekeeper/SIP Redirect Server), to route the calls to the branch office for connection to the local PSTN.

For example, assume AC1 = 1, AC2 = 2, ZACB = AC1 AC1, and ZDP = 101.

If a branch office user dials 1 87654321, zone digit manipulation occurs because AC1 was dialed and ZACB = AC1 AC1. ZDP

is inserted in the dialed digits to form a digit string of 1 101 87654321. The call is routed differently than with the digits 1 87654321. ESN configuration at the main office Call Server (step 4) routes the call to the NRS because it recognizes 101 87654321 after the Access Code rather than 87654321. The Access Code (1) is not included in the digit string that is sent to the NRS. The NRS recognizes 101 at the front of the digit string and routes the call to the destination SRG. At the branch office, the ESN Special Number is configured to remove 101 from the digit string and route the call based on the digits 87654321.

If a branch office user dials 1 87654321, zone digit manipulation occurs because AC1 was dialed and ZACB = AC1 AC1. ZDP is inserted in the dialed digits to form a digit string of 1 101 87654321. The call is routed differently than with the digits 1 87654321. ESN configuration at the main office Call Server routes the call to the NRS because it recognizes 101 87654321 after the Access Code rather than 87654321. The Access Code (1) is not included in the digit string that is sent to the NRS. The NRS recognizes 101 at the front of the digit string and routes the call to the destination SRG. At the branch office, the ESN Special Number is configured to remove 101 from the digit string and route the call based on the digits 87654321.

If a branch office user dials 2 87654321, zone:based digit manipulation does not occur because AC2 was dialed and ZACB = AC1 AC1. The digit string remains unchanged 2 101 87654321. The main office routes the call using ESN configuration and the dialed digits.

3 Configure the Route List Index at the main office.

After configuring zone:based digit manipulation, a specialized route for the call must be configured. To select a trunk to route calls, a Route List Index (RLI) must be configured in the Route List Block (RLB). The RLI uses the route number for the Virtual Trunk to route calls to the NRS. A Digit Manipulation Index (DMI) is associated with the RLI to allow manipulation of the digits to be outpulsed. For this application, at the main office, the DMI is used to update the call type of the off:net calls to the Special Number (SPN) to make sure the number stays in the Private/Special Number domain.

4 Configure the DMI in LD 86 with the DGT feature.

Table 52

LD 86 – Configure the Digit Manipulation Index at the main office

Prompt	Response	Description
REQ	NEW	Add new data.
CUST	xx	Customer number as defined in LD 15.
FEAT	DGT	Digit manipulation data block

Prompt	Response	Description
DMI	1:999	Digit Manipulation Index numbers The maximum number of Digit Manipulation tables is defined at the MXDM prompt in LD 86.
DEL	(0)::19	Number of leading digits to be deleted, usually 0 at the main office.
INST	x...x	Insert. Up to 31 leading digits can the main office. Default is none.
ISPN	(YES) NO	IP Special Number For off:net calls For on:net calls
CTYP	SPN LOC	Call type to be used by the call. This call type must be recognized by the NRS and far:end switch. This is critical for correct CLID behavior. If ISPN=NO, the CLID is based on this field. If ISPN=YES, the CLID is based on the call type before digit manipulation. For off:net calls (ISPN=YES) For on:net calls (ISPN=NO)

5 Configure the RLI in LD 86 with the RLB feature.

Table 53
LD 86 – Configure the Route List Index

Prompt	Response	Description
REQ	NEW	Add new data.
CUST	xx	Customer number as defined in LD 15.
FEAT	RLB	Route List data block
RLI	0:127 0:255 0:999	Route List Index to be accessed CDP and BARS NARS FNP
ENTR	0:63 X	Entry number for NARS/BARS Route List Precede with x to remove
LTER	NO	Local Termination entry
ROUT	0:511 0:127	Route number of the Virtual Trunk as provisioned in LD 16. Range for Large Systems Range for MG 1000B
...		
DMI	1:999	Digit Manipulation Index number as defined in LD 86, FEAT = DGT

For example, assume that the Virtual Trunk is on route 10, and the Customer number is 0:

```
>LD 86
REQ NEW
CUST 0
FEAT DGT
DMI 10
DEL
INST
ISPN YES
CTYP NATL
REQ NEW
CUST 0
FEAT RLB
RLI 10
ENTR 0
LTER NO
ROUT 10
...
DMI
...
```

6 Configure ESN Special Number and Digit Manipulation.

Table 54

LD 90 – Configure ESN Special Number and Digit Manipulation

Prompt	Response	Description
REQ	NEW	Add new data.
CUST	xx	Customer number as defined in LD 15.
FEAT	NET	Network translation tables
TRAN	AC1 AC2	Translator Access Code 1 (NARS/BARS) Access Code 2 (NARS)
TYPE	SPN	Special code translation data block
SPN	x...x	Special Number translation Enter the SPN digits in groups of 3 or 4 digits, separated by a space (for example, xxxx xxx xxxx). The SPN can be up to 19 digits long. The maximum number of groups allowed is 5.
FLEN	(0):24	Flexible Length The number of digits the system expects to receive before accessing a trunk and outpulsing these digits.
...		

Prompt	Response	Description
: RLI	0:999	Route List Index configured in LD 86
: CLTP	LOCL NATL INTL	Type of call that is defined by the special number. Local PSTN National PSTN International PSTN

--End--

After configuring the zone:based digit manipulation and specialized route, the route must be associated with the ESN Special Number. The main office ESN Special Number configuration is based on new digits inserted by zone:based digit manipulation. The digits are processed based on the Access Code, AC1 or AC2, that was dialed.

For off:net calls the following should be considered.

- If all calls that have undergone zone:based digit manipulation are to be routed by the NRS, one SPN must be provisioned for each call type to route calls to the NRS based on the ZDP.
- If some calls are to be routed by the NRS, and others by the main office Call Server, multiple SPN should be provisioned to route calls based on the ZDP value and one or more dialed digits. Each SPN can then use a different RLI if required.

For example, assume ZDP = 101. It is possible to provision multiple SPN (1011, 1012, 1013, 1014, 1015, 1016, 1017, 1018, 1019, and 1010) to route calls based on the ZDP value plus the first dialed digit. However, it may not be necessary to provision all SPN combinations. For example, if calls dialed with a first digit of 3 after the Access Code are invalid, then SPN 1013 does not need to be provisioned.

- Be careful when choosing how many dialed digits to include in the SPN. If one of the dialed digits is included in the SPN (that is, ZDP + one dialed digit), a maximum of ten SPN must be configured for each branch office. Similarly if two dialed digits are included in the SPN (ZDP + two dialed digits), a maximum of 100 SPN must be configured for each branch office. For each additional dialed digit included in the SPN, the maximum number of SPN that must be provisioned for each branch office is increased by a factor of ten.

If a single Access Code that undergoes zone:based digit manipulation is used for both on:net and off:net calls, then separate DMI and SPN must be provisioned to correctly route these calls. The SPN must correctly identify

the routing to be used, and its CLTP field must set the call type correctly. A DMI, associated with this SPN, is used to make sure the number stays in the Private/Special Number domain.

ESN Special Numbers are configured in LD 90. Respond to the prompts as follows.

- TRAN — Enter the Access Code.
- TYPE — Enter SPN for this configuration, as the ZDP value configured in step 3 is usually a unique non:dialable number.
- SPN — Enter the ZDP value plus enough digits to distinguish the type of number, such as national, international, or local. There must be enough SPN entries to route all valid dialed numbers (see the example in this section).
- FLEN — Enter the number of digits that are expected for the call type.
- RLI — Enter the RLI configured in LD 86 in step b. The RLI routes the call to the NRS with the correct type of number.
- CLTP — Enter the type of call defined by this Special Number: local (LOCL), national (NATL), or international (INTL).
- For example, assume the following:

AC1 = 1, ZACB = AC1 AC1, and ZDP = 101

Customer number = 0

Long:distance calls start with 1, have 11 digits, and use RLI = 10 and DMI = 10.

Local calls start with 5 or 6, are seven digits long, and use RLI = 30 and DMI = 30.

ATTENTION

RLI and DMI values do not have to be the same, but for clarity, it may be useful to set them the same.

```
>LD 90
REQ NEW
CUST 0
FEAT NET
TRAN AC1
TYPE SPN
SPN 1011
FLEN 14 (11 digits for long:distance + 3 digits for ZDP)
...
RLI 10
CLTP NATL
```

```
...
SPN 1015
FLEN 10 (7 digits for long:distance + 3 digits for ZDP)
...
RLI 30
CLTP LOCL
...
SPN 1016
FLEN 10 (7 digits for long:distance + 3 digits for ZDP)
RLI 30
CLTP LOCL
...
```

After configuring main office routing to the NRS, the NRS database must be provisioned to identify the desired endpoint for the calls. This procedure configures the NRS database with the inserted digits specified by the zone:based digit manipulation configuration.


Instead of configuring the NRS database, you can configure a route in the main office to directly route the call.

Configuring the NRS database

Step	Action
1	In NRS, click the Configuration tab.
2	Click set Standby DB view to work in the standby (inactive) database.
3	Select Routing entries from the navigation side of the Network Routing Service window.

The **Routing Entries** window appears.

Figure 56
NRS Routing Entries window

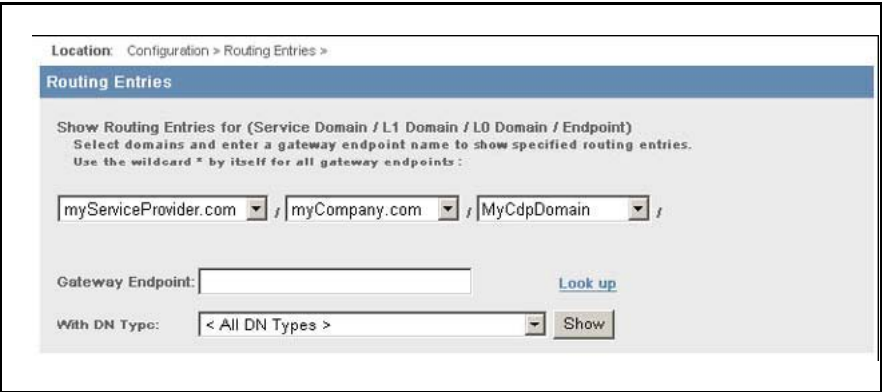

4	Choose the appropriate Service Domain, L1 Domain, and L0 Domain from the corresponding drop:down menus.
---	---

- 5 Click on **Look up** to open a window with a lookup path for gateway endpoints.
- 6 Click **Search** to display a list of gateway endpoints and click on the endpoint at the branch office.

Figure 57
NRS Look up path for gateway endpoints

#	ID [Click to select]	Support Protocol(s)	Description	# of routing entries	# of default routes
1	srgGWsite1	RAS H.323	This is a Gatew . .	2	0
2	srgGWsite2	RAS H.323	This is a SRG G . .	0	0

A list of routing entries corresponding to that endpoint appears.

Figure 58
NRS Routing Entries window for selected endpoint

#	DN Prefix	DN Type	Route Cost	SIP URI Phone Context
1	6	E.164 international	2	+
2	7	E.164 international	5	+

- 7 Click **Add** in the **Routing Entries** window to add a routing entry. The Add Routing Entry window appears.

Figure 59
Add Routing Entry

Location: Configuration > Routing Entries > Add Routing Entry >

Add Routing Entry (myServiceProvider.com / myCompany.com / myCdpDomain / sipGWsite1)

DN type: E 164 international

DN prefix:

Route cost (1 -255):

Save

8 Configure the numbering plan entries for the branch office. This is usually set to the unique non:dialable number that identifies the branch office, as configured in the ZDP property of the branch office zone in LD 117 at the main office.

The type of number configured in the NRS should be set to match the type of number as configured in the main office.

If some calls are to be routed differently from others, it is possible to provision the multiple Numbering Plan Entries in the NRS to achieve this.

For example, if ZDP = 101, it is possible to provision multiple Numbering Plan Entries (101, 1011, and so on) to route calls based on the ZDP value or the ZDP value plus some of the dialed digits.

Unlike on the Call Server, if the ZDP plus additional digits are used to identify routing it is not necessary to provision all of the combinations. For example, if calls with digit strings starting with 1011 are to be routed differently from those starting with 101x (where x is a digit other than 1), then only 101 and 1011 need to be provisioned as numbering plan entries on the NRS.

--End--

Configuring the branch office

Step	Action
1	Configure the Route List Index at the branch office. After the call arrives at the branch office, a route must be provisioned to handle the call. In order to be able to select a trunk to route calls, a Route List Index (RLI) must be configured in the Route List Block (RLB). The RLI uses the route number for PSTN trunk to route calls to the PSTN. A Digit Manipulation Index (DMI) can be associated with the RLI to allow manipulation of the digits to be outpulsed. For this application, the DMI is used to remove the ZDP digits that were inserted in the dialed digits

at the main office. The DMI is also used to convert the call type back correctly according to the incoming SPN pattern.

- 2 Configure the DMI in LD 86 with the DGT feature.

Table 55

LD 86 – Configure the Digit Manipulation Index at the branch office

Prompt	Response	Description
REQ	NEW	Add new data.
CUST	xx	Customer number as defined in LD 15
FEAT	DGT	Digit manipulation data block
DMI	1:999	Digit Manipulation index numbers
DEL	(0):19	Number of leading digits to be deleted. This would normally be configured to remove the unique non:dialable number that identifies the branch office, configured in the ZDP property of the branch office zone in LD 117 at the main office.
ISPN	NO	IP Special Number
INST	x...x INTL NPA NXX LOC SPN	Insert. UP to 32 leading digits can be inserted. Call type used by the call. The far: end switch must recognize this call type. International National UDP Local PSTN Special Number

- 3 Configure the RLI in LD 86 with the RLB feature.

Table 56

LD 86 – Configure Route List Index

Prompt	Response	Description
REQ	NEW	Add new data.
CUST	xx	Customer number as defined in LD 15.
FEAT	RLB	Route List data block
RLI	0:127 0:255 0:999	Route List Index to be accessed CDP and BARS NARS FNP
ENTR	0:63 X	Entry number for NARS/BARS Route List Precede with x to remove
LTER	NO	Local Termination entry

Prompt	Response	Description
ROUT	0:511 0:127	Route number of the Virtual Trunk as provisioned in LD 16. Range for Large Systems Range for MG 1000B
...		
DMI	1:999	Digit Manipulation Index number as defined in LD 86, FEAT = DGT

For example, assume that the PSTN trunk is on route 18 and the Customer number = 0.

```
>LD 86
REQ NEW
CUST 0
FEAT DGT
DMI 18
DEL 3 (Set to remove ZDP added in the main office)
INST
CTYP LOC (Set according to associated SPN pattern)
REQ NEW
CUST 0
FEAT RLB
RLI 18
ENTR 0
LTER NO
ROUT 18
...
DMI 18
...
```

4 Configure ESN Special Number and Digit Manipulation.

Table 57
LD 90 – Configure ESN Special Number and Digit Manipulation

Prompt	Response	Description
REQ	NEW	Add new data.
CUST	xx	Customer number as defined in LD 15.
FEAT	NET	Network translation tables
TRAN	AC1	Translator – Access Code 1 (NARS/BARS) Because the call is incoming to the branch office, AC1 is triggered if INAC = YES in the Route Data Block for the Virtual Trunk in LD 16 and the INTL call type is associated with AC1 in NET_DATA of the Customer Data Block in LD 15.
TYPE	SPN	Special code translation data block

Prompt	Response	Description
	x...x	Special Number translation Enter the SPN digits in groups of 3 or 4 digits, separated by a space (for example, xxxx xxx xxxx). The SPN can be up to 19 digits long. The maximum number of groups allowed is 5.
: FLEN	(0):24	Flexible Length The number of digits the system expects to receive before accessing a trunk and outpulsing these digits.
...		
: RLI	0:999	Route List Index configured in LD 86

After configuring the specialized route for calls that have been routed to the branch office by the NRS, the route must be associated with the ESN Special Number.

The branch office receives the manipulated number as an incoming call, indicating that the ZDP value added at the main office is at the beginning of the number. The branch office ESN configuration must ensure that the extra digits (the ZDP value) are deleted by using a proper DMI. The call then terminates at the PSTN connection.

ATTENTION

The DMI configured in LD 86 in step 1 is used to remove the digits that were inserted in the dialed number at the main office.

For example, assume ZDP at the main office = 101, Customer number = 0, and the RLI for the PSTN trunk = 18.

```
LD > 90
REQ NEW
CUST 0
FEAT NET
TRAN AC1
TYPE SPN
SPN 1011
FLEN 0
...
RLI 18
```

--End--


Configuring the dialing plan using Communication Server 1000 Element Manager

In Element Manager, configure the branch office-specific zone dialing plan and access codes.

Configuring the branch office dialing plan and access codes

Step	Action
1	In the Element Manager navigation tree, select IP Network, Zones . The Zones window appears.

Figure 60
Zones window

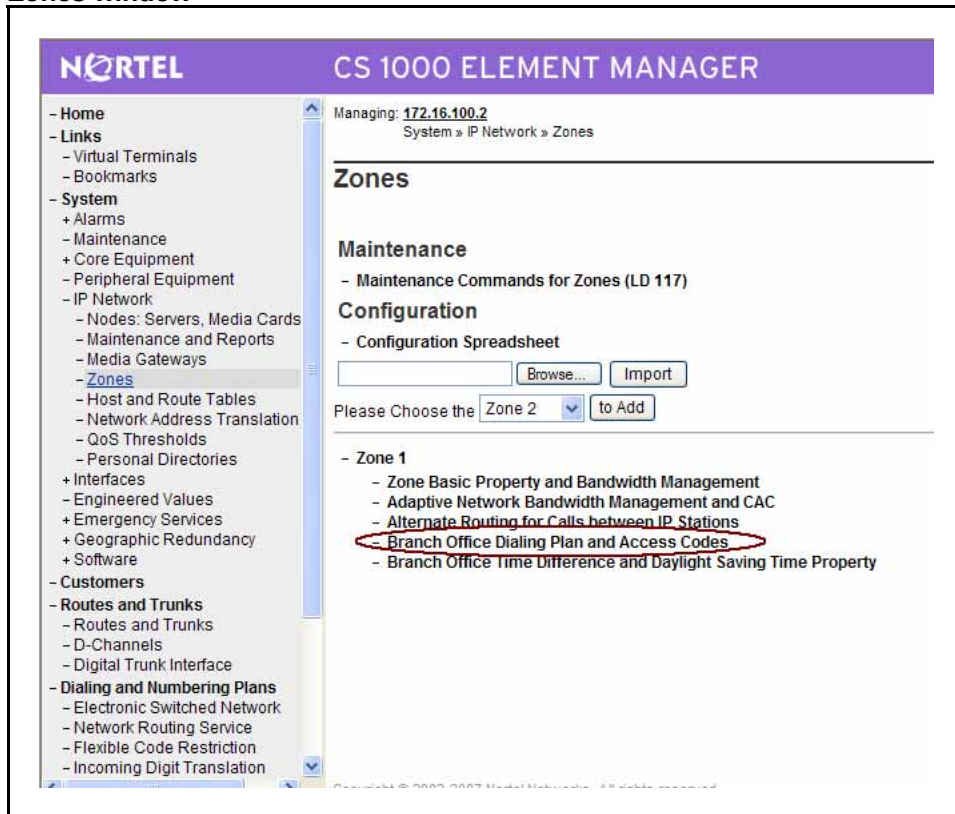

2	In the Zones window in Element Manager, select the Branch Office Dialing Plan and Access Codes option, and enter the necessary information.
---	---

Figure 61
Zone dialing Plan and Access Codes

--End--

Testing PSTN access using an SRG or MG 1000B IP Phone

Use the following procedure to test that PSTN access is working correctly.

Testing PSTN access using an SRG or MG 1000B IP Phone

Step	Action
1	From an SRG or MG 1000BIP Phone in Local Mode: - a Make a local PSTN call. - b Make a long:distance call. The calls must be routed according to the branch office ESN configuration.
2	From an SRG or MG 1000B IP Phone in Normal Mode: - a Make a local PSTN call. - b Make a long:distance call. The calls must be routed according to the main office ESN configuration.

--End--

Troubleshooting

For calls that tandem over the Virtual Trunk to the branch office and go out to the PSTN trunks in the branch office, the following configuration problems can occur:

- The call receives overflow tones. Use LD 96 to view the digits sent to the Virtual Trunk (ENL MSGO {dch#}).
- If the digits look correct at the main office, the NRS might not be properly configured. If the NRS rejects the call, a diagnostic message is displayed on the Signaling Server console.
- If the call makes it to the correct branch office (check that it is not going to the wrong node if the NRS is configured incorrectly) the branch office is probably rejecting it because it does not know the digit string. Use LD 96 to view the digits (ENL MSGI {dch#}).

For more information about troubleshooting, see *Branch Office Installation and Commissioning (NN43001-314)* ().

Zone Based Dialing

To configure zone based parameters, the Zone Based Dialing plan option is activated using LD 15. After it is set to **YES**, the DIALPLAN prompt is shown to select public or private on:net dial plan.

Overlay 15

A new prompt, DIALPLAN, is added to LD 15. If it set to **PUB**, then appropriate E.164 CLID is displayed on a terminating set.

Table 58
New prompts for Overlay 15

Prompt	Response	Comment
REQ:	CHG	Change the existing data block
TYPE:	FTR_DATA	Customer features and options
...		
VO_CUR_ZONE_TD	(NO) YES	
ZBD	(NO) YES	ZBD option
: DIAL_PLAN	PUB or PRV	Type of dialing plan for DN and CLID displaying

Configure the numbering zones for sets in LD 10, 11, and 12.

ATTENTION

You can only assign numbering zones to a set when it is configured in Overlay 117.

In following examples, assume that two sites exist; Belleville with Direct Inward Dialing (DID) numbers, 1 613 967 4xxx and Amsterdam, 31 20 630 3xxx.

Configuring numbering zone and numbering zone based parameters

The following configuration tasks are for Overlay 117.

Table 59
Configuration tasks for Overlay 117

Configuration task	Command	Input parameters	Output
Add numbering zone	NEW NUMZONE	(numbering zone number : mandatory) (parameters list – optional)	none
Change numbering zone parameters	CHG NUMZONE	(numbering zone number : mandatory) (parameters list – mandatory)	none
Remove numbering zone	OUT NUMZONE	(numbering zone number : mandatory)	none
Printout numbering zone parameters	PRT NUMZONE	(numbering zone number – optional) (range : optional)	none

The following table displays a sample numbering zone printout.

Table 60
Sample printout for the PRT NUMZONE command with sample values

Zone	PREF	CC	NPA	AC1	AC2	NATC	INTC	DAC	TTBL	FLAGS
0:1023	00:9999	0:9999	0:9999	0:99	0:99	0:999 9	0:9999	(0):1	(0):3 2	(0x0):0xff

The following header descriptions, describe each of the header entries in Table 64, Sample...:

- PREF: site prefix
- CC: country code
- NPA: area code, used for dialing through ZFDP
- AC1: trunk access code 1
- AC2: trunk access code 2
- NATC: national dial code
- INTC: international dial code
- DAC: the flag to delete an NPA from CLID for a local subscriber call. It also show you dial NPA for a NXX/REG2 call. If DAC is 0 then AC + NPA + NXX + DN should be dialed. If DAC is 1 then AC + NXX + DN should be dialed.

- TTBL: tone table
- FLAGS: zone:specific ZBD flags (you do not need to use it for the current time; it will be used for future enhancements)

In cases where ZBD zone parameters are not provided, the defaults (hard coded) values are assigned.

In cases where a zones' number is not provided, the full list of ZBD zones are printed out.

Modify a prefix for zone:based pretranslation using the following command and syntax: **CHG ZPARAM** [numbering zone number] **PREF** [Prefix].

Add a numbering zone designator using the following command and syntax: **CHG NZDES** [numbering zone] [designator]. The designator parameter consists of a maximum of ninety:six characters.

ATTENTION

NUMZONE 0 always exists in the system. It cannot be deleted.

You cannot configure two different numbering zones with the same PREF.

The following is an example of a LD 117 configuration.

```
NEW NUMZONE 1
NEW NUMZONE 2

CHG ZPARAM 1
PREF 301
CHG ZPARAM 1
AC1 9
CHG ZPARAM 1
INTC 011
CHG ZPARAM 1
NATC 1
CHG ZPARAM 1
CC 1
CHG ZPARAM 1
NPA 613
CHG NZDES 1 "Belleville site" CHG ZPARAM 1
PREF 302
CHG ZPARAM 2
AC1 0
CHG ZPARAM 2
INTC 00
CHG ZPARAM 2
NATC 0
```

```
CHG ZPARAM 2
CC 31
CHG ZPARAM 2
NPA 20
CHG NZDES 2 "Amsterdam site"
```

Meridian Customer Defined Network Alternate Routing and Vacant Number Routing

Existing configurations for Meridian Customer Defined Network Alternate Routing (MALT) and Vacant Number Routing (VNR) are required for the feature to work properly.

Meridian Customer Defined Network Alternate Routing configuration

MALT is performed based on SBOC configurations done in the RLB for VNR RLI. If you configure SBOC to RRA, then Rerouting is accomplished in the current node for all the MALT cause values. If you configure SBOC to RRO, then rerouting is accomplished at the originating node. If you configure SBOC to NRR, then MALT is not to be. Configure the MALT prompt with the number of alternate routes that are tried for the respective RLI. Configure SBOC on the last entry as a value other than RRA/RRO; make it NRR (no reroute).

Vacant Number Routing configuration

VNR must be configured to yes in LD 15. NET_DATA and the RLI selected for VNR calls are given. The prerequisite for configuring VNR, FNP, must be set to yes. For more information on VNR configuration, see *IP Peer Networking Installation and Commissioning* (NN43001-313).

Codec configuration

The following sections describes how to configure codecs and in Communication Server 1000.

G.729 VAD negotiation via SIP

When configuring the G.729 codec, the setting Voice Activity Detection (VAD), impacts largely on bandwidth usage.

Use G.729 Annex B for VAD. When SIP negotiations for media capability occur, a device explicitly states Annex B capability, or it implies VAD support by not stating support.

If you configure the IP Peer configuration as Communication Server 1000 G.729 VAD = No, and configure the other Nortel or Third Party SIP device as G.729 VAD = Yes (or do not state Annex B capability in the SIP messaging), a speech path issue could occur. To correct this, configure the Communication Server 1000 G.729 VAD = Yes.


Configuring codecs

Perform the following steps to configure codecs.

Procedure 3 Configuring codecs

Step	Action
1	In the Element Manager navigation tree, select System, IP Network, Nodes: Servers, Media Cards . The IP Telephony Nodes page appears.
2	In the IP Telephony Nodes page, click Edit for the appropriate node.

Figure 62
IP Telephony Nodes

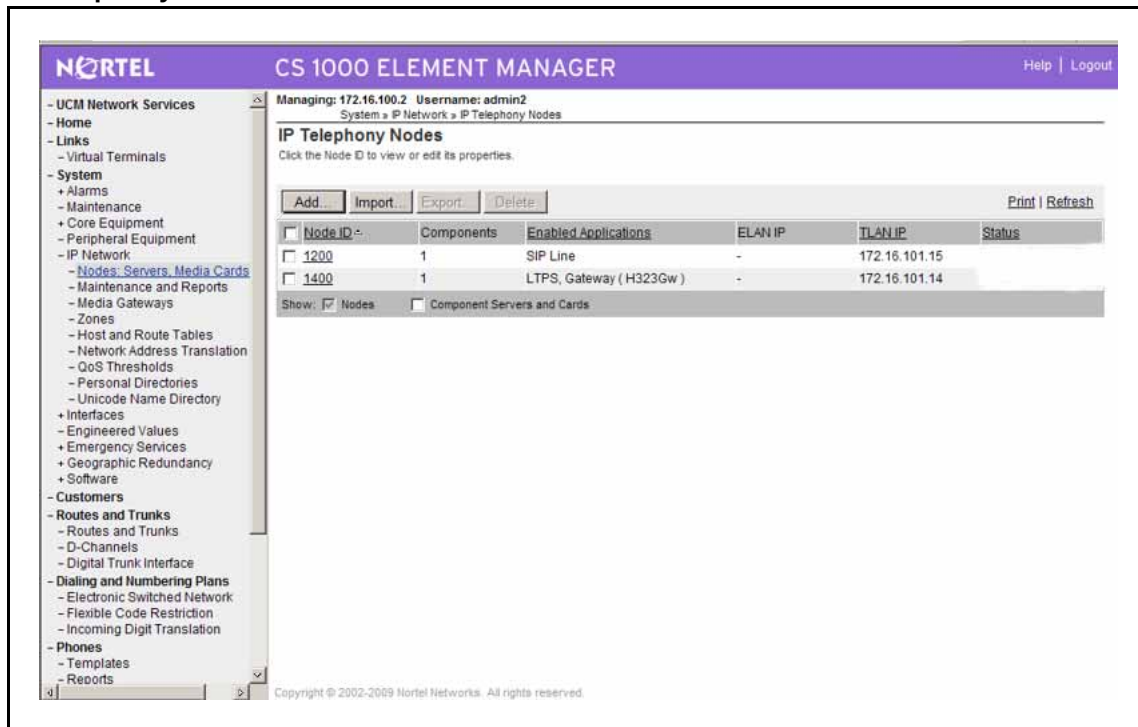

The **Edit** window appears.

Figure 63
Edit window

NORTEL CS 1000 ELEMENT MANAGER Help | Logout

Managing: **172.16.100.2**
 System » IP Network » Node Configuration » IP Telephony: Node ID 1100 » Edit

Edit

Save and Transfer Cancel

- IP Telephony Node

Node ID **1100**

Telephony LAN (TLAN) Node IP address

Embedded LAN (ELAN) gateway IP address

Embedded LAN (ELAN) subnet mask

Voice LAN (TLAN) subnet mask

+ VGW and IP phone codec profile

+ QoS

+ LAN configuration

+ SNTP

+ Virtual Trunk Network Health Monitor configuration

+ H323 GW Settings

+ Firmware

+ SIP GW Settings

+ SIP URI Map

+ SIP CD Services

+ SIP CTI Services

+ Microsoft Unified Messaging

+ Cards

+ Signaling Servers

Save and Transfer Cancel

* Mandatory fields of current configuration

Copyright © 2002-2007 Nortel Networks. All rights reserved.

http://www.nortelnetworks.com/ Local intranet 100%

3 Click **VGW and IP phone codec profile** to open the parameter list.

This area also includes a list of codecs.

Figure 64
VGW and IP Phone codec profile

- VGW and IP phone codec profile

Enable Echo canceller ☒

Echo canceller tail delay

Voice activity detection threshold Range: -20 to +10

Idle noise level Range: -327 to +327

DTMF Tone detection ☒

Enable V.21 FAX tone detection ☒

FAX maximum rate (bps)

FAX playout nominal delay Range: 0 to 300

FAX no activity timeout Range: 10 to 32000

FAX packet size

Codec: G711	Select ☒
Codec: G729A	Select ☒
Codec: G723.1	Select ☐
Codec: T38 FAX	Select ☒

- 4 To configure a codec, select the **Select** check box to the right of the codec name.

The G.711 and T38 FAX codecs are automatically selected.

Figure 65
Example of a selected codec G.729A

- Codec: G729A

Codec: G711	Select ☒
Codec: G729A	Select ☒
Codec: G723.1	Select ☐
Codec: T38 FAX	Select ☒

- 5 Configure the values for **Voice payload size** (ms/frame), **Voice playout (jitter buffer) nominal delay**, and **Voice playout (jitter buffer) maximum delay**.

Figure 66
Example of G.729A settings

- Codec: G729A

Codec Name: G729A

Voice payload size (ms/frame)

Voice playout (jitter buffer) nominal delay

Modifications may cause changes to maximal delay settings

Voice playout (jitter buffer) maximum delay

VAD ☐

- 6 Repeat for each codec that requires configuration.
- 7 Click **Save and Transfer**.

The system saves the changes and transfers the node configuration files to all elements in the node (Signaling Servers, Call Server, and Voice Gateway Media Cards).

A warning dialog box opens asking if you want to save and transfer the configuration changes.

Figure 67
Save and Transfer dialog box



8 Click **OK**.

The following series of windows appear.

- Transfer Progress window
- Transfer Failure Report window (if applicable)
- Transfer/Status window.

The Transfer successful to all elements in the node windows appears.

9 Click **OK**.

The Transfer/Status window appears.

10 Select one of the following:

- **Select All**
- **Unselect All**
- **Transfer to Selected Elements**

OR

11 Click **Cancel** to return to the Node Configuration window.

The Node Configuration window reappears.

ATTENTION

The Transfer/Status window is used to send the node configuration files to all IP Telephony components in the node. The following occurs if there is a error:

- If any element within the Node fails to transfer either BOOTP or CONFIG files, the Transfer/Status button is highlighted in red.
- If the transfer status of the node elements is unavailable, the Transfer/Status button is highlighted in yellow .

--End--

Adaptive Network Bandwidth Management configuration

This section contains information on configuration rules and advanced notes for Adaptive Network Bandwidth Management. For information on configuring Adaptive Network Bandwidth Management, see [“Configuring Adaptive Network Bandwidth Management and CAC” \(page 299\)](#)

Configuration rules

The following list contains the configuration rules for Adaptive Network Bandwidth Management.

- Adaptive Bandwidth Management only applies to INTERZONE calls (not INTRAZONE calls).
- All branch offices (MG 1000B or SRG) associated with a particular main office must have the same VPNI as the main office Call Server.
- All IP Phones (other than the IP Softphone 2050) and DSP endpoints on a Call Server must be configured for the same zone.
- The IP Softphone 2050 used remotely must be configured for zone 0.
- Branch office systems (MG 1000B or SRG) should tandem all calls through the main office Call Server to allow bandwidth monitoring and control. The media path is direct between the branch office and any point in the network.
- Trunk Route Optimization (TRO) must be disabled between the main office Call Server and the MG 1000B Core or SRG. The media path is direct between the branch office and any point in the network.
- Adaptive Network Bandwidth Management parameters are configured on the main office only and must not be configured at the branch offices.

Advanced configuration notes

The following information describes advanced configuration for Adaptive Network Bandwidth Management.

- The default values for Cpl, Cj, Cd, Cr, and CQos can be increased to increase the response time for Sliding Maximum changes. However, increasing the default values can cause the Sliding Maximum to temporarily decrease to a lower value than necessary, resulting in the needless blocking of interzone calls.
- Increasing the value of ZQRT will increase the speed at which the Sliding Maximum increases. The same effect can be achieved by decreasing ZQRTI. However, changing these values can cause the sliding maximum to oscillate until the network degradation is removed.
- To change the notification level (ZQNL) of the Call Server so it can react to the QoS alarms, use LD 117 to change this level. For more information about alarm notification levels, see [“Configure and print zone alarm notification levels” \(page 234\)](#).

Element Manager configuration


Element Manager can be used to enable and configure the feature.

A zone must exist before it can be configured for Adaptive Network Bandwidth Management. For more information about configuring Adaptive Network Bandwidth Management and how to create and configure basic properties of the zone, see [“Adaptive Network Bandwidth Management and CAC” \(page 299\)](#).

Provisioning for Tandem Bandwidth Management


The following steps summarize how to provision for Tandem Bandwidth Management.

Figure 68
Network configuration provisioning example

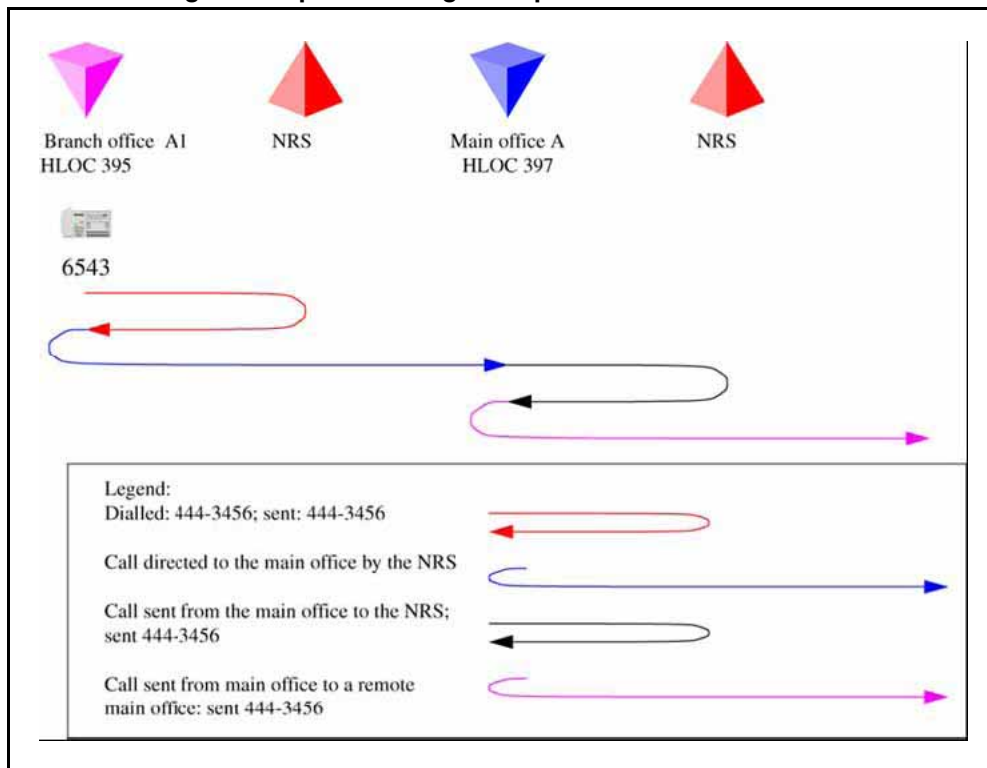

Step	Action
1	Enter the main office Gateway endpoint identifier in the Tandem Endpoint field for each branch office gateway configured on the NRS. This provides tandeming for outbound calls from a branch office through its main office.

Figure 69
Tandem endpoint configuration in Element Manager

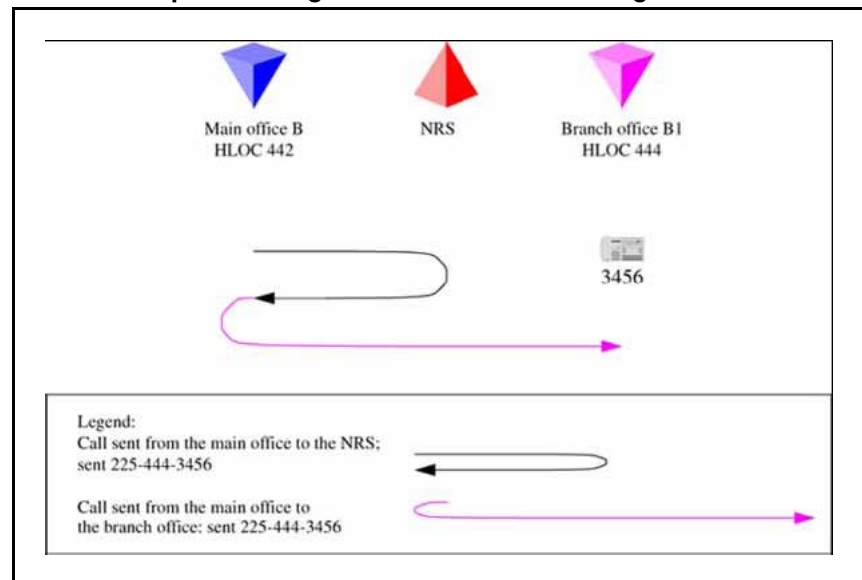

- 2 Plan the gateway routing prefixes, if not already done. At least one prefix is needed for each branch office. Any branch office that has a prefix for ESN 911 calls does not require another.
 These prefixes are SPN (Special Number) entries when using ESN 911.
- 3 Provision the NRS to send all calls to an LOC without a gateway routing prefix to the main office of that LOC or to the main office which provides service for the branch office using the LOC.
 In the example, the NRS is provisioned with 841 (for main office B) and 842 (for main office A).
- 4 Provision the NRS to send all calls to a LOC with a gateway routing prefix to the branch office directly.
 Using the gateway routing prefix and the Type of Number of SPN, the entries can be differentiated from the normal LOCs easily.
 In the example, the NRS is provisioned with 741:841 at branch office B and 742:842 for branch office A.
- 5 Provision the main office with the DGT table DMIs to insert the prefixes and set the Type of Number correctly.
- 6 Create RLB RLI entries to use these DMIs for the VTRK routes. One RLI per branch office is the minimum requirement. Note that calls from remote systems typically have the HLOC prefix.

Table 61
Main office B DMI and RLI provisioning (for calls in branch office B)

Create a DMI	Create an RLI
LD 86	LD 86
REQ new	REQ new
CUST 0	CUST 0
FEAT dgt	FEAT flb
DMI 50	RLI 50
DEL 0	ENTR 0
ISPN no	LTER no
INST 741841	ROUT 71
CTYP loc	DMI 50

- 7 Provision the main office with CDP DSCs (mapped by the RLI into Location Codes) sufficient to uniquely identify all of its branch offices (using extended location codes, if required)
- Use the RLI index defined for each branch office as the RLI value of the LOC definition. This is the route to the branch office.

Table 62
Main office B LOC provisioning for LOC 741 841

Create a CDP mapped to the LOC:

LD 87
 REQ new
 CUST 0
 FEAT CDP
 TYPE DSC
 DSC 4030
 FLEN 4
 RLI 50

Create a CDP mapped to the LOC:

LD 87

- 8 Provision the main office and branch office with a home location code (HLOC) or multiple codes to terminate all calls that should terminate on this system.

Table 63
Main office and branch office HLOC provisioning : Main office B and branch office B

Create a DMI	Create an HLOC
LD 86	LD 90

Create a DMI	Create an HLOC
REQ new	REQ new
CUST 0	CUST 0
FEAT dgt	FEAT net
DMI 61	TRAN ac1
DEL 3	TYPE hloc
ISPN no	HLOC 841
	DMI 61

- 9 Provision the main office to send all other LOCs to the IP network without prefixes. These are going to a remote main office.

Table 64

Main office B LOC provisioning for LOC to remote main office system : main office A is LOC 842

Create an RLI	Create a LOC
LD 86	LD 90
REQ new	REQ new
CUST 0	CUST 0
FEAT rlb	FEAT net
RLI 51	TRAN ac1
ENTR 0	TYPE loc
LTER no	LOC 842
ROUT 75	FLEN 7
	RLI 71

- 10 Provision the branch office with a terminating RLI with a DMI to delete the LOC prefixes.

Table 65

Branch office terminating RLI provisioning

Create a DMI	Create an HLOC
LD 86	LD 90
REQ new	REQ new
CUST 0	CUST 0
FEAT dgt	FEAT net
DMI 61	TRAN ac1
DEL 6	TYPE hloc

Create a DMI	Create an HLOC
ISPN no	HLOC 741
	DMI 61

--End--

Bandwidth Management support for Network Wide Virtual Office

A Current Zone field is introduced for the IP phones to distinguish between the Bandwidth zone number configured for the IP phone and the current nonconfigurable zone number, but is changed dynamically by Virtual Office feature operation. The Current Zone field is used in the bandwidth calculation routines instead of the Configured Zone field to have correct bandwidth calculation in case of Network Wide Virtual Office call scenarios.

The administrator can check the value of the Current Zone for IP phones that use the LD 20, PRT command. This value is not configurable so no changes are made in LD 11.

Prerequisites

The following configuration is used:

- Bandwidth zones are allocated on a Network-wide basis.
- All zones in the network are configured on all the Call Servers.
- All Call Servers within the network have the identical copy of the zone table and each individual zone policy.
- Main Office and Branch Office need to have the same VPNI setting to ensure correct bandwidth management control by the Main Office. Also, they must have the same VPNI setting across call servers so as to support bandwidth management for Network Wide Virtual Office (NWVO). Two systems within the same LAN requires the same VPNI setting to ensure INTRAZONE call treatment.
- Call Servers that belong to different networks have different VPNI numbers. Each network has its own individual VPNI numbers.
- Divide a network into several VPNI's if it consists of more than 255 locations. Use a zone number between 1 to 255 because zone 0 does not support Alternative Call Routing and Adaptive Bandwidth Management.
- The identical copy of the zone table within the network should be configured manually unless a synchronization mechanism is introduced.

Operating parameters

The following list describes the operating parameters to support a Network Wide Virtual Office.

- Only IP Phones with the IP Client cookies feature enabled are supported
- The correct Bandwidth Management calculation for a Virtual Office (VO) IP Phone is possible only within the home customer network (when all the systems are configured with the same VPNI number).
- The maximum number of Bandwidth Zones that can be configured on the Call Servers within the home customer network is limited to 255 (1 to 255).
- Interaction with previous releases is not supported. Therefore, the correct bandwidth calculation is not provided if a remote VO login is performed from a Communication Server 1000 with a software release that is earlier than Communication Server 1000 Release 5.0. In this case, the earlier release bandwidth calculation method is used.
- If two or more Call Servers have the same VPNI and Bandwidth zone configured, the usage in this zone can not be synchronized between these Call Servers.
- The feature supports only one customer. If more than one customer is configured, the customer with the lowest customer number is supported.

Feature Packaging

The Bandwidth Management support for Network Wide Virtual Office feature requires the following two packages on the system:

- Virtual Office (VO) package 382
- Virtual Office Enhancement (VOE) package 387

Feature Implementation

Use the following tables to implement this feature.

Table 66
LD 15 – Define VPNI number in Customer Data Block

Prompt	Response	Description
REQ	new/chg	Add new or change existing data.
TYPE	NET_DATA	Networking.
:VPNI	1:16283	Virtual private network identifier.

Table 67
LD 117 – Define Zone data

Command	Description
NEW ZONE <zoneNumber> <intraZoneBandwidth> <intraZoneStrategy> <interZoneBandwidth> <interZoneStrategy> <zoneIntent> <zoneResourceType>	Define a new Zone with parameters. All parameters must be entered: • zoneNumber from 0:255. • intraZoneBandwidth from 0:0.1 Mbit/s. • intraZoneStrategy is the intrazone preferred strategy where BQ is Best Quality and BB is Best Bandwidth. • interZoneBandwidth from 0:0.1 Mbit/s. • InterZoneStrategy is the interzone preferred strategy where BQ is Best Quality and BB is Best Bandwidth. • zoneIntent is the type of zone, where MO is Main Office zone, BMG is Branch Media Gateway zone, and VTRK is Virtual Trunk zone. • zoneResourceType is resource Intrazone preferred strategy, where shared is shared DSP channels and private is private DSP channels.

Table 68
LD 11 – Configure IP Phones

Prompt	Response	Description
REQ	new/chg	New or change request.
TYPE	a...a	Telephone type. Type question mark (?) for a list of possible responses.
TN	l s c u c u	Terminal number for Large System and Communication Server 1000E system, where l = loop, s = shelf, c = card, u = unit. Terminal number for Small System and Media Gateway 1000B, where c = card and u = unit.
CUST	xx	Customer number, as defined in LD 15.
BUID	<user_id>	Dialable DN, Main Office User ID. Enter X to delete.
MOTN	l s c u	Main Office TN for Large System and Communication Server 1000E system, where l = loop, s = shelf, c = card, and u = unit. Main Office TN for Small System and Media Gateway 1000B 1000T, where c = card and u = unit.

Prompt	Response	Description
ZONE	<number>	Zone Number which Nortel Networks IP Phone set belongs.
CLS	VOLA VOUA	Virtual Office Logon Allowed (VOLA) and Virtual Office User Allowed (VOUA) Allow/deny Virtual Office operation from this TN. Allow/deny Virtual Office login to this TN using other phone (destination of Virtual Office login).

In the following two tables, use LD 15 to choose zone (current or configured) for Zone:based digit manipulation.

Table 69

LD 15 – Zone:based digit manipulation (choose zone for current or configured)

Prompt	Response	Description
REQ	chg	Change existing data block.
TYPE	FTR_DATA	Features and options.
CUST	xx	Customer number.
VO_CUR_ZONE_ZDM	YES/NO (default)	Disable or enable using Current zone for Zone:based digit manipulation.

Table 70

LD 15 – Time and Date (choose zone for current or configured – default value)

Prompt	Response	Description
REQ	chg	Change existing data block.
TYPE	FTR_DATA	Features and options.
CUST	xx	Customer number.
VO_CUR_ZONE_ZDM	YES/NO (default)	Disable or enable using Current zone for Zone:based digit manipulation.

Feature Interactions

The following feature interactions exist.

Zone:based Digit Manipulation

The Customer Data Block (CDB) prompt is used to configure the Zone (Current or Configured) for the Zone:based Digit Manipulation feature. It allows Virtual Office (VO) users to use either local PSTN connections of the CS were they are physically located (Current Zone), or remote PSTN connections to the CS were their VO TNs are configured (Configured Zone) depending on customer preferences

Time and Date

A new prompt is added to the CDB to configure the Zone (Current or Configured) to be used for the Time and Date feature. It allows the VO user to have the local time and date on the display of the IP set used for VO login to home theCS.

Off:Hook Alarm Security

The Off:Hook Alarm Security feature uses information about the Current Zone field rather than the Configured Zone field for operation.


Alternative call routing for Network Bandwidth Management

When a user dials a station:to:station call between two different zones (the calling and called telephones are not located in the same geographic area) and the bandwidth limit has been reached, the Alternative Call Routing feature is invoked.

There are many choices of alternate routes for overflow calls. Network administrators who do not want calls to be blocked, but have a limited amount of bandwidth available, overflow calls to conventional trunks (Public Switched Telephone Network [PSTN] or TIE/Meridian Customer Defined Network [MCDN]). This feature allows calls to be routed by overflowing them, trading off the capital cost of WAN bandwidth against the incremental cost of overflowed calls.

When there is insufficient bandwidth for a station:to:station call, the Alternative Call Routing for Network Bandwidth Management feature uses a trunk for a call that would not normally use a trunk. The following network diagram illustrates an example of a dialed call that experiences low bandwidth or unacceptable QoS conditions and is routed to an alternate MCDN route.

Figure 70
Example of Alternative Call Routing

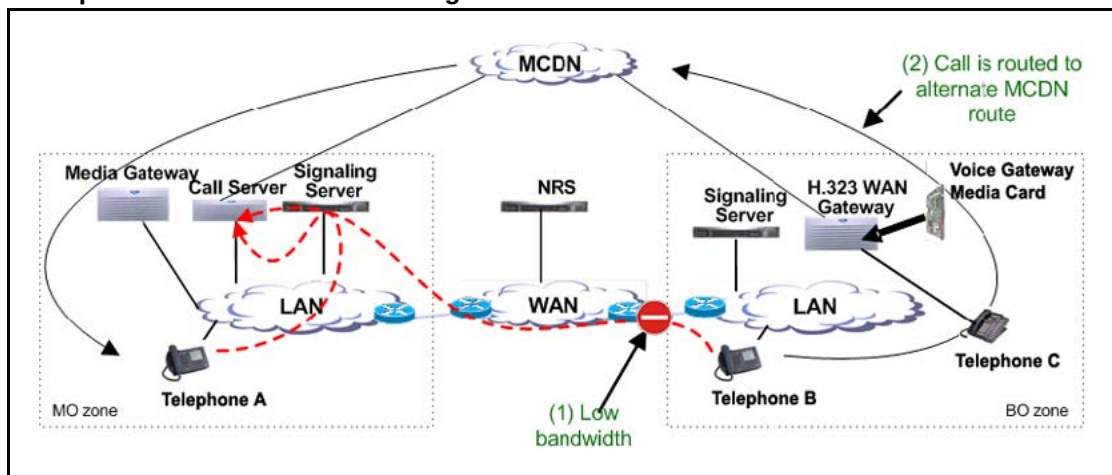

Nortel recommends that Alternative Call Routing be used with Direct Inward Dial (DID) numbers, to allow calls that are rerouted over the PSTN to ring the intended telephone directly. It is possible to use this feature without DID such that when the call gets rerouted over the PSTN it reaches an attendant console or a specific telephone.

Prior to the introduction of the Alternative Call Routing for Network Bandwidth Management feature, there was no alternate routing mechanism for the following station:to:station calls:

- branch office calls to or from the main office
- branch office calls to or from another branch office controlled by the same main office

This feature enables alternate routing to occur for branch office users registered to the main office, when they place interzone and station:to:station calls to the main office stations or branch office stations.

The Alternative Call Routing for the Network Bandwidth Management feature can be triggered by operation of either of the following features:

- Network Bandwidth Management
- Adaptive Network Bandwidth Management

The Alternative Call Routing for the Network Bandwidth Management feature can be configured to operate in one of the following ways:

- Bandwidth insufficiency: Alternately routes station:to:station IP network calls that encounter lack of bandwidth or poor QoS in the originating or terminating zone as the calls are being established
- All Calls: Alternately routes station:to:station IP network calls, regardless of available bandwidth

Configure Bandwidth insufficiency or All Calls as one of the modes of operation on a zone basis.

Dialing plan

There are many ways that calls are dialed in a network. A station:to:station call is dialed using the following.

- Directory Number (DN)
- Coordinated Dialing Plan DN (starting with a Local Steering Code or Distant Steering Code)

- Uniform Dialing Plan DN (starting with a Location Code or Home Location Code)
- Transferable DN (TNDN) or Group Dialing Plan DN

Main offices and branch offices must be able to translate the calls, after the ALTPrefix is inserted, using CDP or VNR. Take into account the format of the calls with an ALTPrefix inserted prior to the rest of the digits.

Before deciding whether to program the steering codes as Distant Steering Codes (DSC) or Trunk Steering Codes (TSC), take into account that the system counts the digits in calls that start with a DSC.

Without Flexible Numbering Plan (FNP), DSC calls must have the same number of digits as specified in LD 86 ESN (the NCDP prompt). With FNP, fewer digits are acceptable, if the FLEN prompt is programmed correctly.

The maximum length of a CDP DN is seven digits (if DNXP is not equipped), and ten digits, if DNXP is equipped. For more information, see *Dialing Plans Reference* () (NN43001:283).

Calls preceded by the ALTPrefix can be handled by the Vacant Number Routing (VNR) feature. Use Flexible Numbering Plan (FNP) software for this type of routing.

Operating parameters

This section describes the operating parameters to support Alternative Call Routing.

Applies to all Communication Server 1000 systems.

Applies to station:to:station, interzone calls. The call can be between IP Phones or a TDM telephone at the main office and an IP Phone at the branch office.

Configurable for main office and branch office zones, not virtual trunk zones.

The operation of the Alternative Call Routing for the Network Bandwidth Management feature depends on the proper configuration of the Network Bandwidth Management feature. If Network Bandwidth Management encounters insufficient bandwidth for an interzone call, the Alternative Call Routing for Network Bandwidth Management feature attempts to reroute the call through the PSTN or TIE/MCDN route, if Alternative Call Routing is configured for the originating zone. It is possible to configure this feature to reroute all calls to MCDN or PSTN routes and still maintain the main office:branch office architecture.

Configure the Voice Gateway Bandwidth zone and the IP Phone Bandwidth zone with the same number on each Call Server.

For alternately routed calls that originate at the branch office, the network administrator must decide whether to program the main office to use conventional PSTN or TIE/MCDN routes that physically terminate at the branch office or to use conventional trunks at the main office. Outpulsed digits on the PSTN trunks must be in the format required by the Central Office serving the chosen system. For example, if the two systems are served by the same Central Office, PSTN calls can use the trunks at the main office. However, if the two systems are located at a great distance from each other, it may make sense to program the main office to use trunks at the branch office for alternately routed calls.

If there is a location with multiple NXX codes for DID users, it is possible to translate and outpulse calls properly as long as each NXX has a unique DN range. NonDID users can be reached through the attendant console, by deleting the ALTPrefix and the DN dialed and inserting the digits in the Listed Directory Number (LDN).

When calls are rerouted to use the PSTN instead of the station:to:station IP network, there may be a loss of feature functionality normally available for station:to:station calls. Features that are not available over the PSTN are not available to the user.

This feature does not apply to virtual trunk calls. Virtual Trunk calls already have this feature and can be alternately routed using traditional methods (such as NARS), which are outside the scope of this feature.

Alternative Call Routing for Network Bandwidth Management does not apply to users who are registered in local mode to the branch office.

Calls that are in an ACD queue cannot be alternately routed by this feature. These calls remain in the ACD queue until an ACD agent and sufficient bandwidth are available.

Music on Hold is not affected by this feature.

A QoS0038 message prints when insufficient bandwidth is detected between two zones. A QoS0039 message prints when the Alternative Call Routing for Network Bandwidth Management feature is invoked.

If a user at a branch office attempts to make a conference call, Alternative Call Routing for Network Bandwidth Management is not invoked.

Feature interactions

The following feature interactions exist.

Call Redirections

The Alternative Call Routing for the Network Bandwidth Management feature works with Call Transfer, Call Forward All Calls, and Conference. Redirection operates as if the user dialed the ALTPrefix manually.

Multiple Appearance Directory Number

The Alternative Call Routing for the Network Bandwidth Management feature works with Call Transfer, Call Forward All Calls, and Conference. Redirection operates as if the user dialed the ALTPrefix manually.

Network Bandwidth Management

The Alternative Call Routing for the Network Bandwidth Management feature does not detect insufficient bandwidth. It reacts to insufficient bandwidth detected by the Network Bandwidth Management and Adaptive Network Bandwidth Management features.

Network Class of Service

The calling telephone must have an Network Class of Service (NCOS) assigned that allows the call to use the alternate route.

Network Routing Service (NRS)

Both the main office and branch office must be registered on the Nortel NRS for tandem routing to work for main office to branch office tandeming.

Trunk Route Optimization (TRO)

Disable Trunk Route Optimization between the branch office (or SRG) and the main office to allow the tandeming required for the feature to work.

Virtual Office

It is not possible to determine the real Bandwidth Zone of a telephone logged in as a Virtual Office telephone.

Automatic redirection of IP trunk calls

For the Communication Server 1000 Release 5.5 Alternate Routing for Network Bandwidth Management feature, the SRG does not support an automatic redirection of IP trunk calls through the PSTN when such calls are blocked by the Communication Server 1000 due to bandwidth availability.

Feature packaging

The Alternative Call Routing for Network Bandwidth Management feature requires the software package Coordinated Dialing Plan (CDP) package 59 and the optional package Flexible Numbering Plan (FNP) package 160.

ALTPrefix

When the Alternative Call Routing for Network Bandwidth Management feature is invoked, the dialed number is modified with a prefix (called the ALTPrefix) inserted at the beginning of the digit string. The ALTPrefix can have a maximum of 7 digits.

The system handles the call with the ALTPrefix inserted as if the user had dialed the digits.

The ALTPrefix applies to the zone in which the call originates. There is one ALTPrefix for each zone that requires alternate routing.

All Call Servers must be able to translate the ALTPrefixes for all zones that require Alternative Call Routing for Network Bandwidth Management.

Alternative Call Routing for Network Bandwidth Management scenarios

The following section describes how Alternative Call Routing works.

Call from branch office telephone in Normal Mode

The following examples present the steps that occur in Alternative Call Routing scenarios from a branch office telephone in normal mode.

1. The interzone station:to:station call is attempted. There is insufficient bandwidth available to make the call.
2. The main office inserts the ALTPrefix associated with the originator's zone (the branch office in this case) before the dialed digits.
3. The main office uses Coordinated Dialing Plan (CDP) or Vacant Number Routing (VNR) to route the call to a virtual trunk.
4. A request is made to the NRS to determine the endpoint. The NRS returns the branch office address as the endpoint.
5. The call is routed on the virtual trunk to the branch office.
6. The branch office treats the ALTPrefix as a steering code. The branch office determines the Route List Index (RLI) and uses a Digit Manipulation Index (DMI) to change the dialed number into a PSTN/MCDN formatted number.
7. The call is routed over the PSTN/MCDN trunks to the telephone at the main office or other branch office.

Prerequisites for a call between a Branch Office and a main office telephone

At the main office, configure the following:

- Use one of the dialing plan software packages to process the call, such as CDP or NARS.
- Provision an ALTPrefix for the BO2 zone.
- Provision the ALTPrefix as a Steering Code at the main office. Build a Route List Index (RLI) so these calls go to the virtual trunk or configure the Vacant Number Routing feature to do the same.


At the branch office:

Provision the ALTPrefix as a steering code. Build a Route List Index and DMI associated with this steering code that alternately routes these calls to the PSTN with the correct digits.

At the NRS:

Create a CDP entry for the ALTPrefix in the branch office gateway.

Figure 71
Call from a branch office telephone in normal mode to a main office telephone

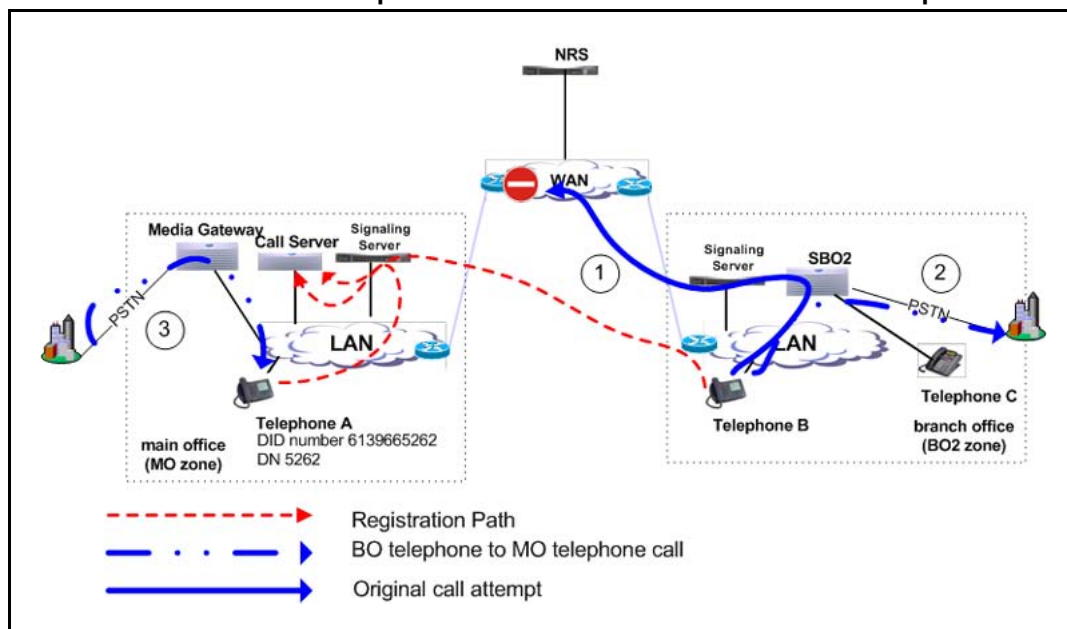

1. The user for Telephone B in the BO2 zone dials Telephone A in the MO zone (DN 5262). See action labeled 1 in the previous diagram.
2. The main office Call Server determines there is insufficient bandwidth between the two zones.

3. The Call Server inserts the ALTPrefix configured for the BO2 zone prior to the telephone number of Telephone A, dialed by the user.
For example, if the ALTPrefix assigned is 222, the dialed number becomes 2225262.
4. The call is routed to the virtual trunk by CDP or VNR. The virtual trunk sends a request to the NRS for address resolution. The digit string sent to the NRS contains the ALTPrefix. The NRS returns the IP address of the Branch Office endpoint to the virtual trunk.
5. The virtual trunk places the call to the Branch Office.
6. The Branch Office receives the call and recognizes the first part of the number as a Steering Code. The call is steered to an RLI. The DMI manipulates the number into a PSTN number and the Branch Office outputs the digits to the Central Office (CO) serving the Branch Office. (This may be the same CO as the one serving the main office.) If the alternate route has MCDN trunks in the BO2 zone, the call is outputted on one of these trunks, after the Branch Office uses Digit Manipulation. See action labeled 2 in [Figure 71 "Call from a branch office telephone in normal mode to a main office telephone" \(page 287\)](#).


For example, The digit string 2225 is programmed as a Distant Steering Code (DSC) at the Branch Office. Calls starting with this DSC are handled by an RLI with PSTN trunks as an entry. If the Public format number for the destination telephone is a DID number, then the Digit Manipulation Index associated with the PSTN route must:

- delete 3 digits (remove the ALTPrefix 222)
- insert 1613966 (to compose the DID number of the destination telephone, which is 15063486020)

This example is illustrated in [Figure 72 "Digits dialed and outputted between Branch Office and main office" \(page 289\)](#).

7. The call comes into Telephone A from the PSTN or MCDN trunks in the main office zone. See action labeled 3 in [Figure 71 "Call from a branch office telephone in normal mode to a main office telephone" \(page 287\)](#).

Figure 72
Digits dialed and outpulsed between Branch Office and main office

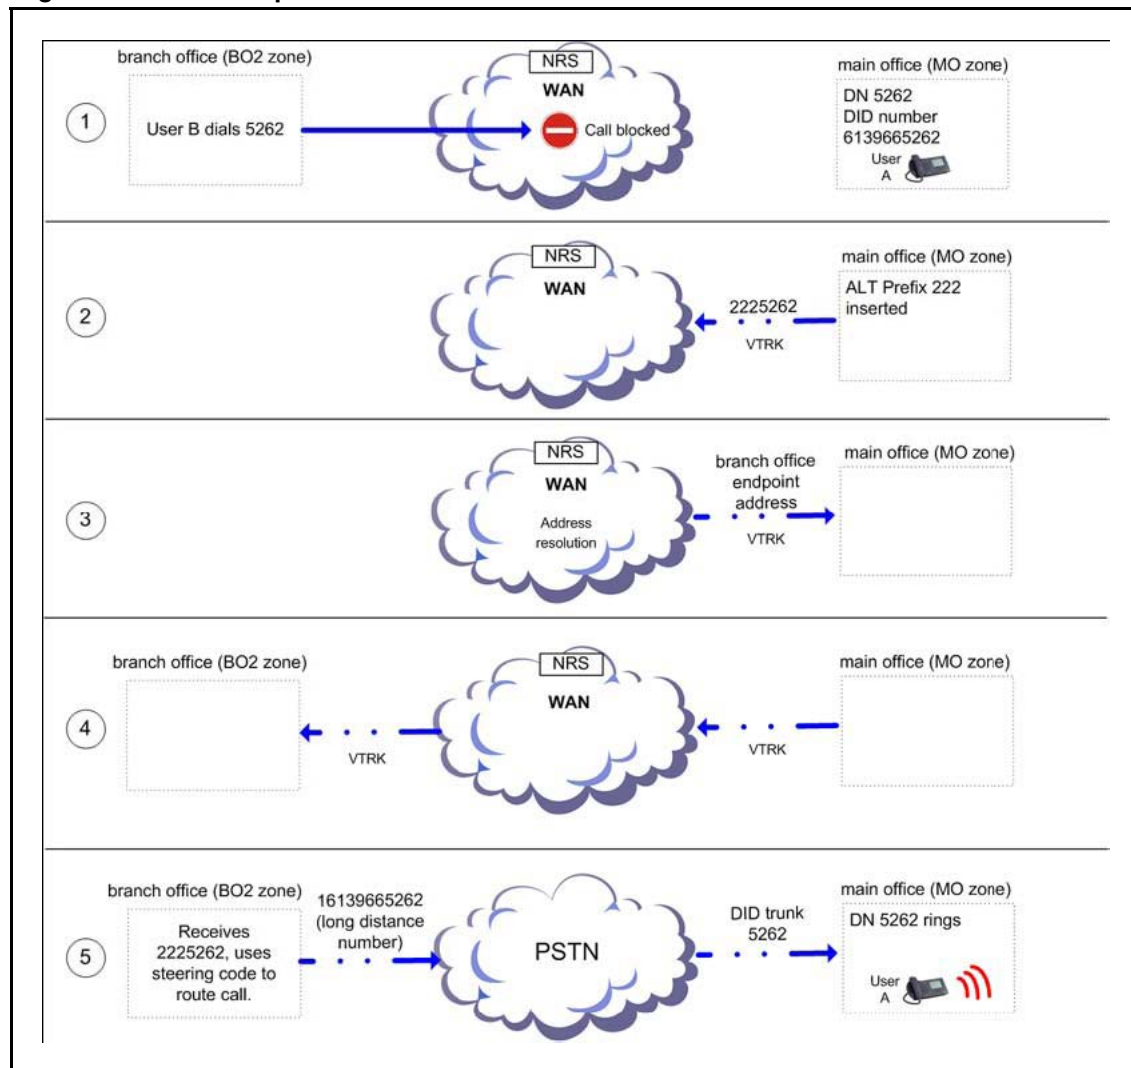

Call from main office to Branch Office telephone

The following examples present the steps that occur in Alternative Call Routing scenarios from the main office telephone to a branch office telephone.

1. The interzone station:to:station call is attempted. There is insufficient bandwidth available to make the call.
2. The main office inserts the ALTPrefix associated with the originator's zone (the main office in this case) before the dialed digits.
3. The main office uses CDP and recognizes the ALTPrefix as a steering code.

4. The main office determines the RLI and uses a DMI to change the dialed number into a PSTN/MCDN formatted number.
5. The call is routed over the PSTN/MCDN to the telephone at the branch office.

With the ALTPrefix digits inserted, the resulting number must be one that CDP or VNR software can process as a steering code.

The main office manipulates the digits in the call into a number appropriate for routing from the SRG on PSTN/MCDN trunks.

The steering code allows the call to be translated and referenced to a RLI from which the system chooses the alternate route. The digit manipulation capability of CDP allows digits (such as the ALTPrefix) to be deleted, and it can also insert digits so the resulting number is appropriate for the alternate route choice selected (PSTN or MCDN). For example, you can manipulate the digits for PSTN routes so that DID destinations are dialable.

Prerequisites for a call between a main office and a Branch Office telephone At the main office configuring the following:

- Use one of the dialing plan software packages to process the call, such as CDP or NARS.
- Provision an ALTPrefix for the BO2 zone.
- Provision the ALTPrefix as a Steering Code. Build a Route List Index (RLI) so these calls go to the virtual trunk or configure the Vacant Number Routing feature to do the same.
- Provision the ALTPrefix as a Steering Code. Build a Route List Index (RLI) and Digit Manipulation Index (DMI) associated with this steering code that can alternately route calls to the PSTN.
- Configure a DMI to output the correct digits to the Branch Office telephone. See


At the Branch Office:

No provisioning required.

At the NRS:


No provisioning required.

Figure 73
Call from a main to a branch office telephone

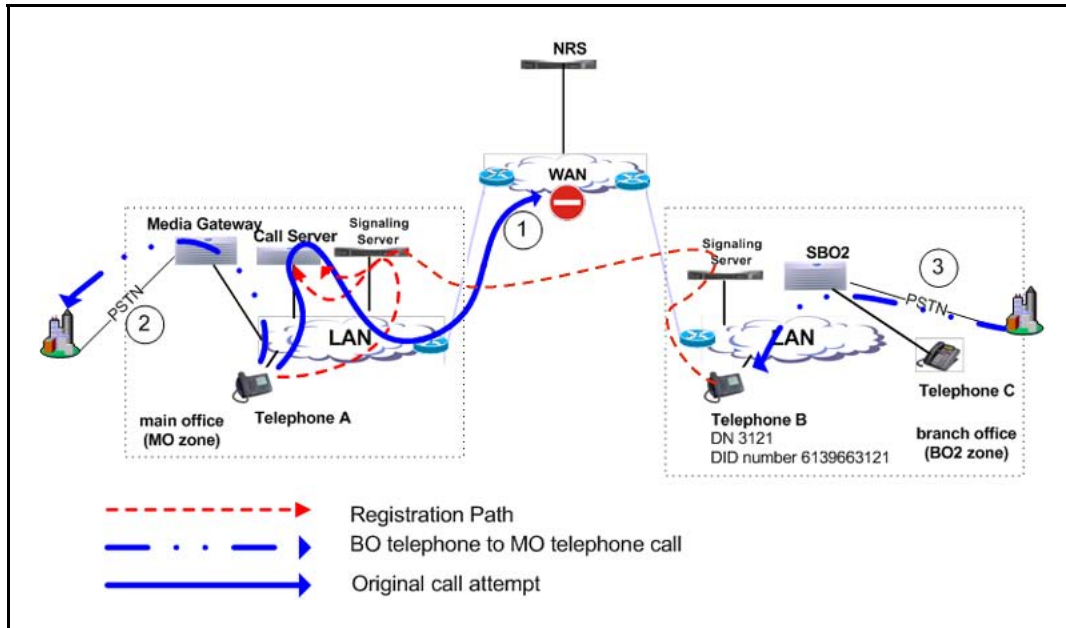

1. The user of Telephone A in the main office zone dials the user of Telephone B in the Branch Office zone (DN 3121). See action labeled 1 in the previous diagram.
2. The main office Call Server determines there is sufficient bandwidth between the two zones.
3. The Call Server inserts the ALTPrefix configured for the main office zone before the DN of Telephone B. For example, if the ALTPrefix assigned is 777, the dialed number becomes 7773121.
4. The call is routed by CDP or VNR to the outgoing route using an RLI. For example, 7773 is a steering code, translated to go to an RLI where there is one entry, a PSTN trunk route.
5. The main office manipulates the digit and the call is routed to the PSTN in the main office zone. See action labeled 2 in the previous diagram. For example, Use DMI to delete and insert digits on the PSTN trunk route.
 - delete three digits (remove the ALTPrefix 777)
 - insert 966 (to compose the DID number of the destination telephone which is 96663121, a local call.)
6. The call is routed through the PSTN and arrives at the Branch Office. The call is treated as an intrazone zone call and is carried through the PSTN trunk, terminating at IP Phone B in the BO2 zone See action labeled 3 in the previous diagram.

Figure 74
Digits dialed and outpulsed between main and Branch Office

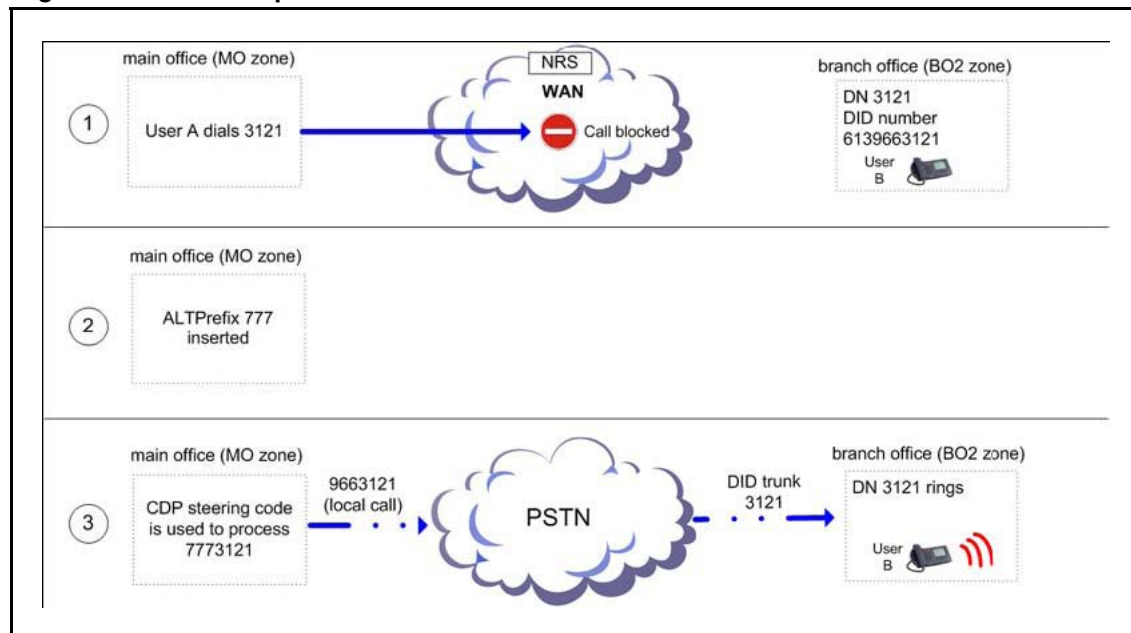

1. User A in the MO zone dials User B in the BO2 zone.
2. The Call Servers inserts the ALTPrefix (777).
3. The call comes into User B from the PSTN in the BO2 zone.

Call between two Branch Office telephones

The following examples present the steps that occur in Alternative Call Routing scenarios between two Branch Office telephones.

Prerequisites for a call between two Branch Office telephone

At the main office:

- Use one of the dialing plan software packages to process the call, such as CDP or NARS.
- Provision an ALTPrefix for the BO2 zone.
- Provision the ALTPrefix as a Steering Code at the main Route List Index (RLI) so these calls go to the virtual trunk the Vacant Number Routing feature to do the same.

At the Branch Office:


Provision the ALTPrefix as a steering code. Build a Route List Index and DMI associated with this steering code that alternately routes these calls to the PSTN.

At the NRS:

Create a CDP entry for the ALTPrefix in the Branch Office gateway.

The following figure depicts an alternately routed call between two Branch Office telephone with three systems (a main office and two Branch Offices).

Figure 75
Call between Branch Office telephones

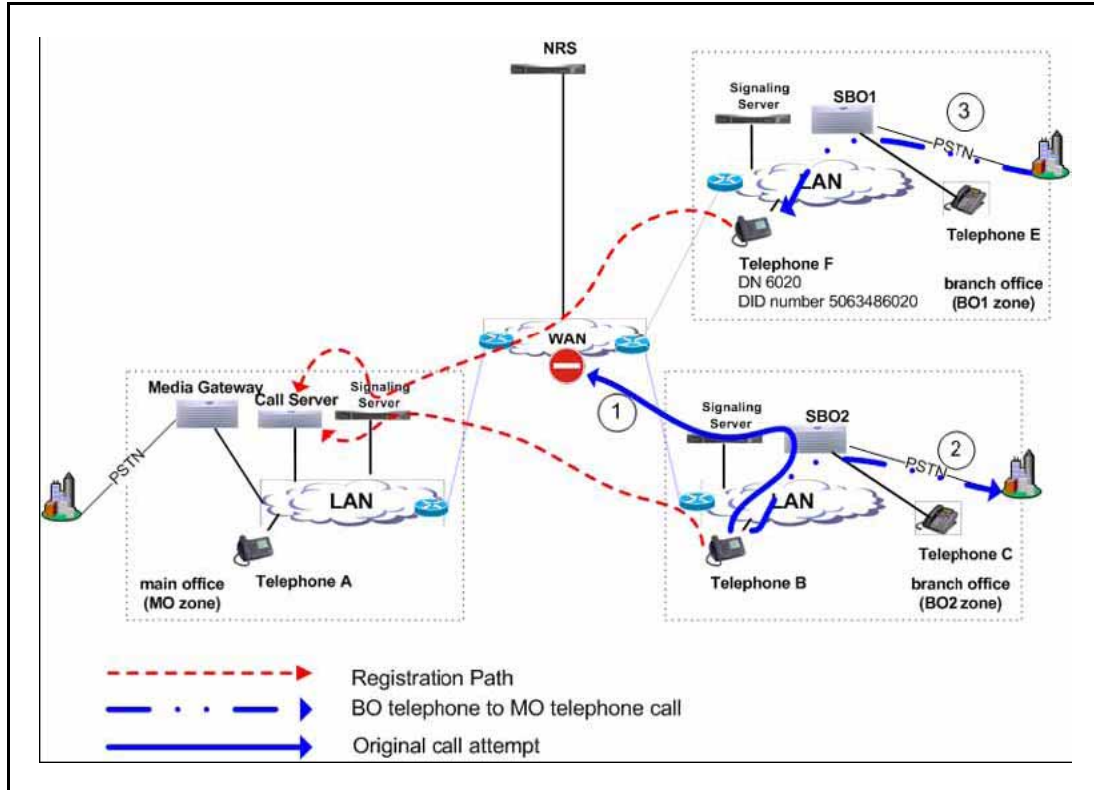

1. The user of Telephone B in the Branch Office 2 (BO2) zone dials user of Telephone F in the Branch Office 1 (BO1) zone (DN 6020). See action labeled 1 in the previous diagram.
2. The main office Call Server determines there is insufficient bandwidth between the BO2 and BO1 zones.
3. The Call Server inserts the ALTPrefix configured for the BO2 zone before the DN of Telephone F, dialed by the user. For example, if the ALTPrefix assigned is 222, the dialed number becomes 2226020.
4. The call is routed to the virtual trunk by CDP or VNR. The virtual trunk sends a request to the NRS for address resolution. The digit string sent to the NRS contains the ALTPrefix. The NRS returns the IP address of the Branch Office endpoint to the virtual trunk.


5. The virtual trunk places the call to the Branch Office.

The Branch Office receives the call and recognizes the first part of the number as a Steering Code. The call is steered to an RLI. The DMI manipulates the number into a PSTN number and the Branch Office outpulses the digits to the Central Office (CO) serving the Branch Office. (This may be the same CO as the one serving the main office.) If the alternate route has MCDN trunks in the BO2 zone, the call is outpulsed on one of these trunks, after the Branch Office uses Digit Manipulation. See action labeled 2 in the previous diagram. For example, the digit string 2226 is programmed as a Distant Steering Code (DSC) at the Branch Office. Calls starting with this DSC are handled by an RLI with PSTN trunks as an entry. If the Public format number for the destination telephone is a DID number, then the Digit Manipulation Index associated with the PSTN route must:

- delete 3 digits (remove the ALTPrefix 222)
- insert 1506348 (to compose the DID number of the destination telephone, which is 15063486020)

6. The call comes into Telephone F from the PSTN in the BO1 zone. See action labeled 3 in [Figure 75 "Call between Branch Office telephones" \(page 293\)](#).

Figure 76
Digits dialed and outpulsed between two Branch offices

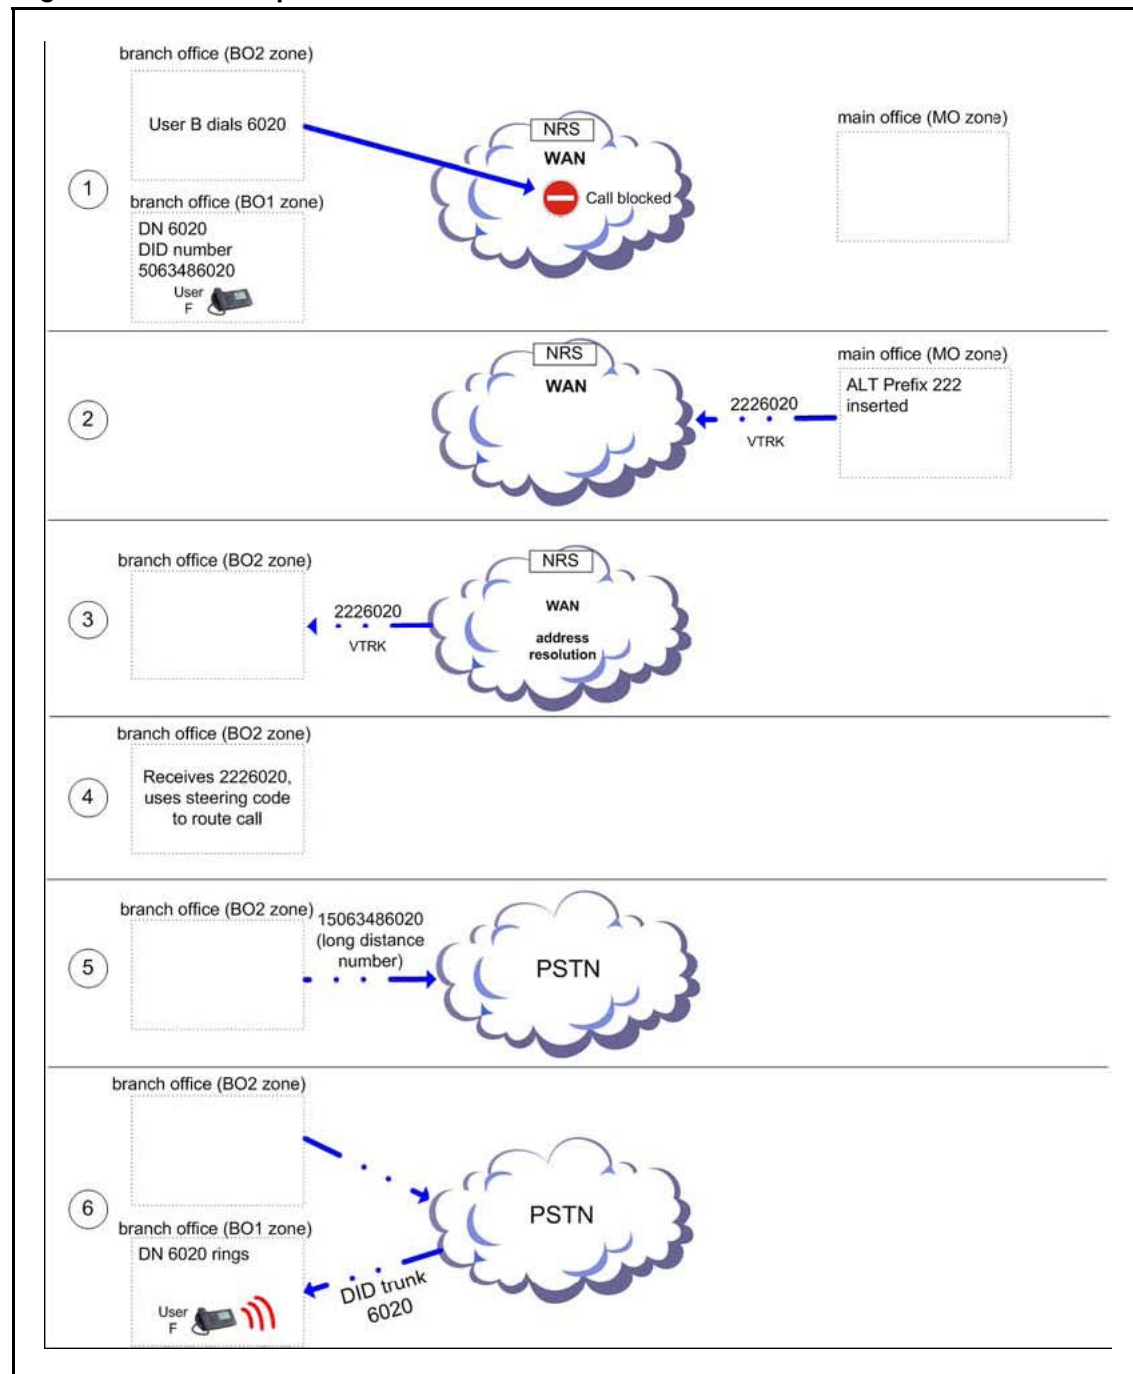

Alternative Call Routing used in All Calls mode

The examples depicted in [Figure 71 "Call from a branch office telephone in normal mode to a main office telephone" \(page 287\)](#) and [Figure 75 "Call between Branch Office telephones" \(page 293\)](#) also applies to the operation of the All Calls mode feature when it is active all the time regardless of the available bandwidth.

The configuration and provisioning for the All Calls mode is exactly the same as the regular Alternative Call Routing for the Network Bandwidth Management feature except that the Alternate Routing for All Calls option is selected in LD 117 or Element Manager.

Feature implementation using Command Line Interface

Use LD 117 for Alternative Call Routing.

Table 71**LD 117 – Enable Alternative Call Routing for a particular zone**

Command	Description
ENL ZALT <zone>	Enable Alternative Call routing for Network Bandwidth Management
<zone>	Input zone number (1:255). Configure the Branch Office zone using LD 117 at the main office.

Table 72**LD 117 – Configure Alternate Prefix number for a particular zone and the All Calls option**

Command	Description
CHG ZALT <zone> <ALTPrefix> [<re:route all calls>]	Change ALTPrefix number for zone
<zone>	Input zone number (1:255). Configure the Branch Office zone using LD 117 at the main office.
<ALTPrefix>	A digit string, of up to 7 digits, added to the start of the dialed number, if the call will not be routed through the WAN (due to lack of bandwidth, poor QoS, or feature is configured for all calls).
[<re:route all calls>]	Allow or Deny Alternative Call Routing for all calls, where: • (NO) = deny • YES = allow

Table 73

LD 117 – Print Alternate Prefix number for a particular zone

Command	Description
PRT ZALT <zone>	Print the ALTPrefix assigned to a particular zone and if the feature operates for all calls from that zone.
<zone>	Input zone number (1 :255). If you do not input a zone number, the system prints the information for all configured zones.

Table 74

Sample printout

#	ZALT	Alternate Prefix	All Calls	Alarms Suppression Time
10	ENL	100	YES	50
11	ENL	101	YES	0
12	DIS	102	NO	1000

For information on Feature Implementation using Element Manager, see [“Alternate Routing for Calls between IP stations” \(page 305\)](#).

Zone configuration

Use Element Manager to configure zone properties:

The following properties can be configured.

- [“Zone Basic Property and Bandwidth Management” \(page 297\)](#)
- [“Adaptive Network Bandwidth Management and CAC” \(page 299\)](#)
- [“Alternate Routing for Calls between IP stations” \(page 305\)](#)
- [“Branch Office Dialing Plan and Access Codes” \(page 306\)](#)
- [“Branch Office Time Difference and Daylight Saving Time Property” \(page 307\)](#)
- [“Emergency Service Information” \(page 309\)](#)

Zone Basic Property and Bandwidth Management

Use Element Manager to configure the branch office specific Zone properties using the Zone configuration screen required at the branch office. It is an alternative to Zone configuration using LD 117. The following procedure uses Zone 0 as an example.

Configuring branch office specific Zone properties

Step	Action
1	In the Element Manager navigation tree, click System, IP Network, Zones, Zone 0, Zone Basic Property and Bandwidth Management. The Zone Basic Property and Bandwidth Management window appears.

Figure 77
Zone Basic Property and Bandwidth Management

Input Description	Input Value
Zone Number (ZONE):	0
Intrazone Bandwidth (INTRA_BW):	1000000
Intrazone Strategy (INTRA_STGY):	Best Quality (BQ)
Interzone Bandwidth (INTER_BW):	1000000
Interzone Strategy (INTER_STGY):	Best Quality (BQ)
Resource Type (RES_TYPE):	Shared (SHARED)
Zone Intent (ZBRN):	M/O (MO)
Description (ZDES):	

Submit Refresh Delete Cancel

- 2 In the **Input Value** section, configure the following values:
- **Zone Number (ZONE):** 1
 - **Intrazone Bandwidth (INTRA_BW):** 10000
 - **Intrazone Strategy (INTRA_STGY):** Best Quality (BQ)
 - **Interzone Bandwidth (INTER_BW):** 10000
 - **Interzone Strategy (INTER_STGY):** Best Quality (BQ)
 - **Resource Type (RES_TYPE):** Shared (SHARED)
 - **Zone Intent (ZBRN):** MO (MO)
 - **Description (ZDES):**

At the branch office, (ZBRN) for branch office support must be cleared. This parameter is only applicable to the corresponding zone at the main office.

3 Click **Submit**.

--End--

Adaptive Network Bandwidth Management and CAC

For information on configuration rules and advanced configuration notes for Adaptive Network Bandwidth Management and CAC, see [“Adaptive Network Bandwidth Management configuration”](#) (page 271)

Configuring Adaptive Network Bandwidth Management and CAC



WARNING

Do not configure Adaptive Network Bandwidth Management for Zone 0 or Virtual Trunk zones.

Step	Action
1	In the Element Manager navigation pane, click System, IP Network, Zones, Zone 1, Adaptive Network Bandwidth Management and CAC. The Adaptive Network Bandwidth Management and CAC window appears.

Figure 78
Adaptive Network Bandwidth Management and CAC

The screenshot shows the 'CS 1000 ELEMENT MANAGER' interface. The breadcrumb trail is: Managing: [Navigation System Name \(192.167.102.3\)](#) » System » IP Network » [Zones](#) » Zone 1 » Adaptive Network Bandwidth Management and CAC. The main title is 'Adaptive Network Bandwidth Management and CAC'. Below this is a table with two columns: 'Input Description' and 'Input Value'.

Input Description	Input Value
Zone Number (ZONE):	1
Enable Call Admission Control Feature (STATE):	☐
QoS Response Time Increase (ZQRT):	10 (1 - 100 %)
QoS Response Time Interval (ZQRTI):	5 (1 - 120 min)
Warning Alarm Threshold (ZQWAT):	85 (1 - 99 %)
Unacceptable Alarm Threshold (ZQUAT):	75 (1 - 99 %)
R Alarm Coefficient (CR):	50 (1 - 100)
Packet Loss Alarm Coefficient (CPL):	50 (1 - 100)
Delay Alarm Coefficient (CD):	50 (1 - 100)
Jitter Alarm Coefficient (CJ):	50 (1 - 100)
Coefficient for QoS (CQoS):	50 (1 - 100)
Record Validity Time Interval (CACVT):	48 (1 - 255 hours)

At the bottom of the form are three buttons: 'Submit', 'Refresh', and 'Cancel'.

- 2 Enable the **Call Admission Control Feature (STATE)** by selecting the check box. The other parameters can be adjusted as required.
- 3 In the **Input Value** section, configure the following parameters:
 - **QoS Response Time Increase (ZQRT)**
 - **QoS Response Time Interval (ZQRTI)**
 - **Warning Alarm Threshold (ZQWAT)**
 - **Unacceptable Alarm Threshold (ZQUAT)**
 - **R Alarm Coefficient (CR)**
 - **Packet Loss Alarm Coefficient (CPL)**
 - **Delay Alarm Coefficient (CD)**
 - **Jitter Alarm Coefficient (CJ)**
 - **Coefficient of QoS (CQoS)**
 - **Recent Validity Time Interval (CACVT)**
- 4 Tandem the outbound branch office calls by configuring the NRS.

- 5 Tandem the inbound branch office calls by creating a dialing plan which routes all calls destined for the branch office through the main office.
- 6 Click **Submit**.

--End--

The following table shows the fields in the Adaptive Network Bandwidth Management and CAC window, the field definitions, and the LD 117 command equivalent.

Table 75
Adaptive Network Bandwidth Management and CAC fields

Field title	Field definition	LD 117 equivalent
Enable Call Admission Control Feature (STATE)	Control the CAC feature for the Zone • Enable (select check box) • disable (clear the check box)	ENL ZCAC DIS ZCAC
QoS Response Time Increase (ZQRT)	Bandwidth limit increment, as a percentage of the QoS factor for the Zone	CHG ZQRT
QoS Response Time Interval (ZQRTI)	Time (in minutes) between bandwidth limit increments	CHG ZQRTI
Warning Alarm Threshold (ZQWAT)	A QoS value, which is lower than this value, but higher than the Critical (Unacceptable) Alarm Threshold, triggers a Major Alarm.	CHG ZQWAT
Unacceptable Alarm Threshold (ZQUAT)	A QoS value, which is lower than this value, triggers an Unacceptable (Critical) Alarm.	CHG ZQUAT
R Alarm Coefficient (CR)	The R (CR) coefficient is used to calculate the QoS value for the Zone.	CHG CR
Packet Loss Alarm Coefficient (CPL)	The Packet Loss (Cpl) coefficient is used to calculate the QoS value for the Zone.	CHG CPL
Delay Alarm Coefficient (CD)	The Delay (CD) coefficient is used to calculate the QoS value for the Zone.	CHG CD
Jitter Alarm Coefficient (CJ)	The Jitter (CJ) coefficient is used to calculate the QoS value for the Zone.	CHG CJ

Field title	Field definition	LD 117 equivalent
Coefficient of QoS (CQoS)	The Coefficient of QoS (CQoS) is used to calculate the overall QoS value for the Zone.	CHG CQOS
Recent Validity Time Interval (CACVT)	Amount of time (in hours) for zone:to:zone record validity. After this interval expires, records for unused zones are purged from the tables.	CHG CACVT

Command line interface configuration

You can also configure the Adaptive Network Bandwidth Management feature using LD 117.

Table 76
LD 117 – Configure Adaptive Network Bandwidth Management

Command	Description
CHG CACVT <Zone> <Interval>	Configure the zone:to:zone record validity time interval, where: - Zone = 1:255 - Interval = 1:(48):255
CHG CD <Zone> <Cd>	Change the Cd coefficient in the formula that determines how quickly an alarm reduces the Sliding Maximum bandwidth for the identified zone, where: - Zone = 1:255 - Cd = Cd coefficient = 1:(50):100
CHG CPL <Zone> <Cpl>	Change the Cpl coefficient in the formula that determines how quickly an alarm reduces the Sliding Maximum bandwidth for the identified zone, where: - Zone = 1:255 - Cpl = Cpl coefficient = 1:(50):100
CHG CJ <Zone> <Jitter>	Change the Cj coefficient in the formula that determines how quickly an alarm reduces the Sliding Maximum bandwidth for the identified zone, where: - Zone = 1:255 - Jitter = Jitter coefficient = 1:(50):100
CHG CQOS <Zone> <QoS>	Change the QoS coefficient in the formula that determines how quickly an alarm reduces the Sliding Maximum bandwidth for the identified zone, where: - Zone = 1:255 - QoS = QoS coefficient = 1:(50):100

Command	Description
CHG CR <Zone> <Cr>	Change the Cr coefficient in the formula that determines how quickly an alarm reduces the Sliding Maximum bandwidth for the identified zone, where: • Zone = 1:255 • Cr = Cr coefficient = 1:(50):100
CHG ZONE <zoneNumber> <intraZoneBandwidth> <intraZoneStrategy> <interZoneBandwidth> <interZoneStrategy> [<zoneIntent> <zoneResourceType>]	Change the parameters of an existing zone, where: • zoneNumber = 1:255 • intraZoneBandwidth = 1000000 (Mbit/s) • intraZoneStrategy = intrazone preferred strategy (BQ for Best Quality or BB for Best Bandwidth) • interZoneBandwidth = 100000 (Mbit/s) • interZoneStrategy = intrazone preferred strategy (BQ for Best Quality or BB for Best Bandwidth) • zoneIntent = type of zone, where: — MO = Main office zone — BMG = Branch Media Gateway (branch office) zone — VTRK = Virtual Trunk zone • zoneResourceType = resource intrazone preferred strategy — shared DSP channels (default) = shared — private DSP channels = private
CHG ZQRT <Zone> <Incr>	Change ZQRT, which is Response time increase by percentage. It is used to determine the increase to the Sliding Maximum for the identified zone, where: • Zone = 1:255 • Incr = increase value in percentage = 1:(10):100
CHG ZQRTI <Zone> <Interval>	Change the QoS Response Time Interval while alarms are not coming, to increase the Sliding Maximum for the identified zone, where: • Zone = 1:255 • Interval = interval in minutes = 1:(5):120
CHG ZQUAT <Zone> <Thres>	Change the QoS Unacceptable Alarm Threshold value for the identified zone, where: • Zone = 1:255 • Thres = threshold value = 1:(75):99 ATTENTION When the zone:to:zone QoS value drops below the threshold value, the alarm is presented. This value must be below the value of ZQWAT.

Command	Description
CHG ZQWAT <Zone> <Thres>	Change the QoS Warning Alarm Threshold value for the identified zone, where: • Zone = 1:255 • Thres = threshold value = 1:(85):99 ATTENTION When the zone:to:zone QoS value drops below the threshold value, the alarm is presented. The value for ZQWAT must be higher than the value of ZQUAT.
CHG ZQNL <Zonenumber> <level>	Change the Notification Level for the specified zone, where: • Zone = 1:255 • Level = 0:(2):4, where: — Level 0 = All voice quality alarms are suppressed. — Level 1 = All zone:based Unacceptable alarms. — Level 2 = Allow all level 1 alarms PLUS zone:based Warning alarms. — Level 3 = Allow all level 1 and 2 alarms PLUS per:call Unacceptable alarms. — Level 4 = Allow all level 1, 2, and 3 alarms PLUS per:call Warning alarms
NEW ZONE <zoneNumber> [<intraZoneBandwidth> <intraZoneStrategy> <interZoneBandwidth> <interZoneStrategy> <zoneIntent> <zoneResourceType>]	• zoneNumber = 1:255 • intraZoneBandwidth = 1000000 (Mbit/s) • intraZoneStrategy = BQ (Best Quality) or BB (Best Bandwidth) • interZoneBandwidth = 1000000 (Mbit/s) • interZoneStrategy = intrazone preferred strategy (BQ=Best Quality) or BB (Best Bandwidth) • zoneIntent = type of zone, where: — MO = Main office zone — BMG = Branch Media Gateway (branch office) zone — VTRK = Virtual Trunk zone • zoneResourceType = resource intrazone preferred strategy — shared DSP channels (default) = shared — private DSP channels = private

Command	Description
DIS ZCAC <Zone>	Disables the Call Admission Control (CAC) feature for the specified zone, where Zone = 1:255. ATTENTION Disables the feature on a zone:by:zone basis.
ENL ZCAC <Zone>	Enables the Call Admission Control (CAC) feature for the specified zone, where Zone = 1:255. ATTENTION Enables the feature on a zone:by:zone basis.


Alternate Routing for Calls between IP stations

Use the following procedures for configuring Alternate Routing for Calls between IP stations.

Configuring Alternate Routing for Calls between IP stations

Step	Action
1	In the Element Manager navigation tree, click System, IP Network, Zones .

Figure 79
Element Manager to access Zones

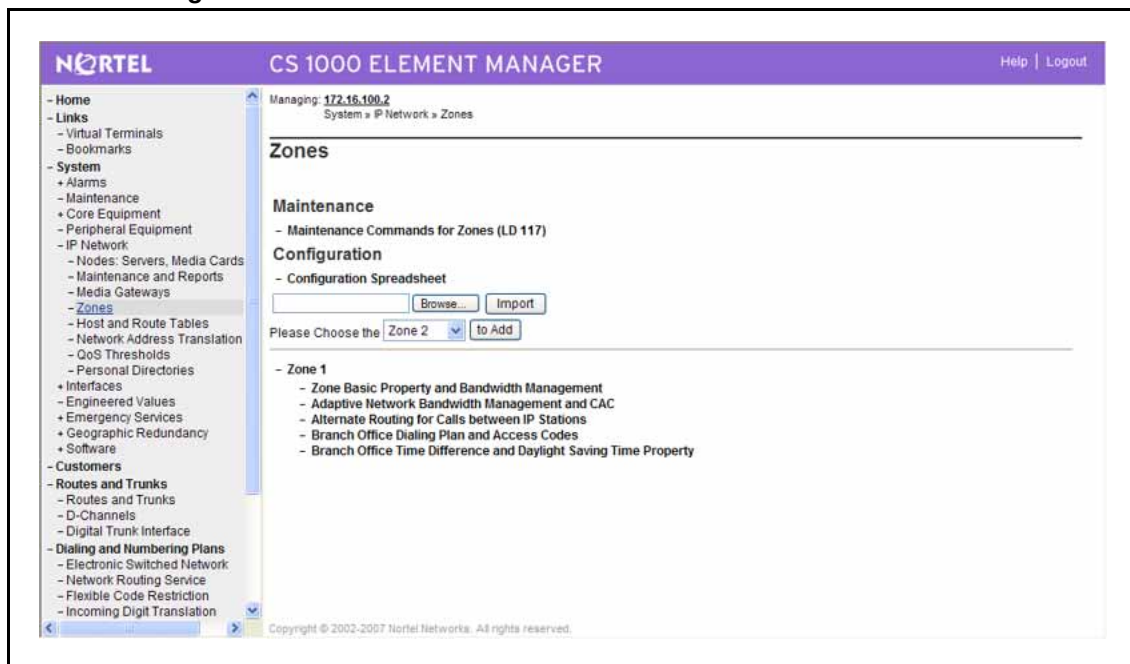

The Zones window appears.

2	In the Configuration section, click the Zone you are programming and click the plus sign to expand the choices under it.
---	---

- 3 Click **Alternate Routing for Calls between IP Stations**.
The Alternate Routing for Calls between IP Stations window appears and displays the configuration parameters for the Zone you selected in the previous step.

Figure 80
Alternate Routing for Calls between IP Stations

- 4 Select the **Enable Alternate Routing feature (ENL_ZALT)** check box to enable the Alternative Call Routing for Network Bandwidth Management feature.
- 5 In **Alternate Routing Prefix Digits (ALTPrefix)**, enter a maximum of 7 digits.
- 6 Select the **Re:route for All Calls (ALL_CALLS)** check box to enable the feature for all calls.
- 7 Click **Submit** to enter the data.

--End--

Branch Office Dialing Plan and Access Codes

Use the following procedures for configuring Branch Office Dialing Plan and Access Codes.

Configuring Branch Office Dialing Plan and Access Codes

Step	Action
1	In the Element Manager navigation tree, click System, IP Network, Zones, Zone 0, Branch Office Dialing Plan and Access Codes . The Zone Dialing Plan and Access Codes window appears.

Figure 81
Zone Dialing Plan and Access Codes

2 In the **Input Value** section, the following values must be configured:

- **Zone Number (ZONE)**
- **Prefix (ACB_DC1)**
- **Country Code/Trunk Code (ACB_DC2)**
- **Destination Network Code (ACB_DC3)**
- **Dialed Access Code (ACB_LOC_AC)**
- **New Access Code (ACB_LD_AC)**

3 Click **Submit**.

--End--

Branch Office Time Difference and Daylight Saving Time Property

Use the following procedures for configuring Branch Office Time Differences and Daylight Saving Time properties.

Configuring Branch Office Time Difference and Daylight Saving Time properties

Step	Action
1	In the Element Manager navigation tree, click System, IP Network, Zones, Zone 0, Branch Office Time Difference and Daylight Saving Time Property .

The Time Difference and Daylight Saving Time window appears.

Figure 82
Time Difference and Daylight Saving Time

CS 1000 ELEMENT MANAGER Help | Logout

Managing: 192.167.102.3
System » IP Network » Zones » Zone 0 » Time Difference and Daylight Saving Time

Time Difference and Daylight Saving Time

Time Difference Property

Input Description	Input Value
Time Difference (TIME_DIFF):	0

Daylight Saving Time Property

Input Description	Input Value
Zone Number (ZONE):	0
Use Daylight Saving Time (USE_DST):	☐
Active Status of Daylight Saving Time (DST_ACT):	No
Start Month (START_MON):	January
Start Week (START_WEEK):	1
Start Day (START_DAY):	Sunday
Start Hour (START_HOUR):	1
End Month (END_MON):	January
End Week (END_WEEK):	1
End Day (END_DAY):	Sunday
End Hour (END_HOUR):	1

Submit Refresh Cancel

2 In the **Input Value** section, the following values must be configured:

- **Zone Number (ZONE)**
- **Use Daylight Saving Time (USE_DST)**
- **Active Status of Daylight Saving Time (DST_ACT)**
- **Start Month (START_MON)**
- **Start Week (START_WEEK)**
- **Start Day (START_DAY)**
- **Start Hour (START_HOUR)**
- **End Month (END_MON)**
- **End Week (END_WEEK)**
- **End Day (END_DAY)**
- **End Hour (END_HOUR)**

- 3 Click **Submit**.

--End--

Emergency Service Information

Use the following procedures for configuring Emergency Service Information.

Configuring Emergency Service Information

- | Step | Action |
|------|---|
| 1 | <p>In the navigation pane, click IP Telephony, Zone 0, Zone Emergency Service Information.</p> <p>The Zone Emergency Service Information window appears.</p> <p>Figure 83
Zone Emergency Service Information</p> |

- 2 In the **Input Value** section, the following values must be configured:
- **Zone Number (ZONE)**
 - **Route number (ESN_ROUT)**
 - **ESA Access Code (ESA_AC)**
- 3 Click **Submit**.

--End--

The MG 1000B zone configuration

Zone parameters must be configured at both the main office Call Server and MG 1000B CP PM. The procedure for configuration on the MG 1000B CP PM is similar to an IP Peer Network configuration, with the additional Branch office:specific configuration outlined in this section.

Zones are defined in LD 117 and applied to IP Phones in LD 11.

Time adjustments for zones are configured in LD 117 and defined relative to the time set in LD 2.

For more information about configuring MG 1000B at the main office, see *Branch Office Installation and Commissioning (NN43001-314)* ().



CAUTION

Before and after an upgrade, perform a datadump (using LD 43 EDD or Element Manager) on the CP PM or MGC to back up the existing data.

Configuring the MG 1000B zone for the Branch office

Step	Action
1	Set the current date and time. See <i>Software Input Output Reference — Administration (NN43001-611)</i> ().

Table 77

LD 2 – Define system time and date

Command	Description
STAD dd mm yyyy hh mm ss	Set the time and date: STAD DAY MONTH YEAR HOUR MINUTE SECOND Note: You must have a level 2 password to set the time and date.

- 2 Configure the Home Location Code (HLOC) and Virtual Private Network Identifier (VPNI).

Table 78

LD 15 – Configure Customer Data Home Location Code and Virtual Private Network Identifier.

Prompt	Response	Description
REQ	new/chg	Add new data or change existing data.
TYPE	NET	ISDN and ESN Networking options
	0:99	Range for Large System and Communication Server 1000E system
	0:31	Range for Small System and Media Gateway 1000B
...		
CLID	YES	Allow Calling Line Identification Option
: ENTRY	XX	CLID entry to be configured

Prompt	Response	Description
:: HLOC	100:9999999	Home location code (ESN) (3:7 digits)
ISDN	YES	Integrated Services Digital Network
: VPNI	(0):16383	Virtual Private Network Identifier for Bandwidth Management Feature 0 or X = disables feature 1:16383 = enables feature <cr> = no change

3 Configure Vacant Number Routing (VNR).

VNR must be configured at the branch office. When a Branch User is in Normal Mode, a call to that user arriving at the branch office is routed to the main office. VNR at the branch office and the NRS configuration identifies the main office as the endpoint for that user.

VNR is routed through the Virtual Trunk and enables the NRS to centralize Numbering Plan definitions. To configure VNR, you must configure a Route List Index (RLI) with the Digit Manipulation Index (DMI) in LD 86 set to 0 (no digit manipulation required) on the Virtual Trunk route.

Table 79
LD 15 – Configure Vacant Number Routing.

Prompt	Response	Description
REQ	NEW CHG	Add new data, or change existing data
TYPE	NET	Configure networking
VNR	YES	Vacant Number Routing
: RLI	0:999	Route List Index as defined in LD 86
: FLEN	1:(16)	Flexible length of digits expected
: CDPL	1:(10)	Flexible length of VNR CDP
: UDPL	1:(19)	Flexible length of VNR LOC

4 Configure the zone properties for IP telephony Bandwidth Management using LD 117 or Element Manager. At the branch office, this zone is used only for Bandwidth Management purposes. It does not have any associated time zone or dialing plan properties.

ATTENTION

The branch office zone number and zone Bandwidth Management parameters at the main office must match the corresponding branch office zone number and zone Bandwidth Management parameters at the branch office.

**WARNING**

Zone 0, the default zone, must not be configured as a branch office zone. Network Bandwidth Management does not support Zone 0. If Zone 0 is configured as a branch office zone, the Network Bandwidth Management feature will not be activated.

Table 80
LD 117 – Define zone properties for branch office

Command	Description
NEW ZONE <xxx> <intraZoneBandwidth> <intraZoneStrategy> <interZoneBandwidth> <interZoneStrategy> <zoneResourceType>	Create a new zone with the following parameters: • xxx = 1:255 zone number • intraZoneBandwidth = Intrazone available bandwidth 0:1 000 000 kbit/s (see Note 1) • intraZoneStrategy = Intrazone preferred strategy (BQ for Best Quality) • interZoneBandwidth = Interzone available bandwidth 0:1 000 000 kbit/s (see Note 1) • interZoneStrategy = Interzone preferred strategy (BQ for Best Quality or BB for Best Bandwidth) • zoneResourceType = zone resource type (shared or private), where — shared = Current default zone type. The IP Phones configured in shared zones use DSP resources configured in shared zones. If all of the shared zone gateway channels are used, the caller receives an overflow tone and the call is blocked. The order of channel selection for the gateway channels is: a channel from the same zone as the IP Phone is configured, and then any available channel from the shared zone channels — private = New zone type introduced by IPL 3.0. DSP channels configured in a private zone are only used by IP Phones that have also been configured for that private zone. If more DSP resources are required by these IP Phones than what are available in the zone, DSPs from other zones are used. However, IP Phones configured in shared zones cannot use the private zones channels. The order of selection for the gateway channels is: a channel from the same private zone as the IP Phone is configured, and then any available channel from the pool of shared zones channels

Command	Description
For more information about Private/Shared Zone configuration, see <i>Signaling Server IP Line Applications Fundamentals (NN43001-125)</i> .	
Note 1: If the Network Bandwidth Management feature is going to be used, parameters <code>intraZoneBandwidth</code> and <code>interZoneBandwidth</code> must be set to the maximum configurable value. See "Bandwidth Management" (page 70) .	

- 5 Configure the parameters for IP Phone passwords and modifications.
- For more information about IP Phone installers password, see *Branch Office Installation and Commissioning (NN43001-314)* ().

--End--

Configuring ESN, MG 1000B or SRG zones



WARNING

Before and after an upgrade, perform a datadump (using LD 43 EDD or through Element Manager) on the Call Server to back up the existing data.

Step	Action
1	Configure the Home Location Code (HLOC), and the Virtual Private Network Identifier (VPNI).

Table 81

LD 15 – Configure Customer Data Home Location Code and Virtual Private Network Identifier.

Prompt	Response	Description
REQ	chg	Change existing data.
TYPE	NET	ISDN and ESN Networking options
CUST		Customer number
	0:99	Range for Large System and Communication Server 1000E system
	0:31	Range for Small System and Media Gateway 1000B
...	—	—
CLID	YES	Allow Calling Line Identification Option
: ENTRY	XX	CLID entry to be configured
: : HLOC	100:9999999	Home location code (ESN) (3:7 digits)

Prompt	Response	Description
ISDN	YES	Integrated Services Digital Network
: VPNI	(0):16383	Virtual Private Network Identifier for Bandwidth Management Feature 0 or X = disables feature 1:16383 = enables feature <cr> = no change

2

Configure the branch office zone.

Configure the zone properties for IP telephony Bandwidth Management. Use LD 117 or Element Manager.

The branch office zone number and zone Bandwidth Management parameters at the main office must match the corresponding branch office zone number and zone Bandwidth Management parameters at the branch office.

Table 82**LD 117 – Define zone properties for branch office**

Command	Description
NEW ZONE <xxx> <intraZoneBandwidth> <intraZoneStrategy> <interZoneBandwidth> <interZoneStrategy> <zoneResourceType>	Create a new zone with the following parameters: • xxx = 0:255 zone number • intraZoneBandwidth = Intrazone available bandwidth 0:1 000 000 kbit/s See Note 1. • intraZoneStrategy = Intrazone preferred strategy (BQ for Best Quality or BB for Best Bandwidth) • interZoneBandwidth = Interzone available bandwidth 0:1 000 000 kbit/s See Note 1. • interZoneStrategy = Interzone preferred strategy (BQ for Best Quality or BB for Best Bandwidth) • zoneResourceType = zone resource type (shared or private), where — shared = Current default zone type. The IP Phones configured in shared zones use DSP resources configured in shared zones. If all of the shared zones' gateway channels are used, the caller receives an overflow tone and the call is blocked. The order of channel selection for the gateway channels is: a channel from the same zone as the IP Phone is configured, and then any available channel from the shared zone channels — private = New zone type introduced by IPL 3.0. DSP channels configured in a private zone are only used by IP Phones which have also been configured for that private zone. If more DSP resources are required by

Command	Description
	these IP Phones than what are available in the zone, DSPs from other zones are used. However, IP Phones configured in shared zones cannot use the private zone channels. The order of selection for the gateway channels is: a channel from the same private zone as the IP Phone is configured, and then any available channel from the pool of shared zone channels For more information about Private/Shared Zone configuration, see <i>Signaling Server IP Line Applications Fundamentals</i> (NN43001-125)
Note 1: If the Network Bandwidth Management feature is going to be used, parameters <code>intraZoneBandwidth</code> and <code>interZoneBandwidth</code> must be set to the maximum configurable value. See "Bandwidth Management" (page 70).	

**WARNING**

Zone 0, the default zone, must not be configured as a branch office zone. Network Bandwidth Management does not support Zone 0. If Zone 0 is configured as a branch office zone, the Network Bandwidth Management feature will not be activated.

- 3 Define the zone parameters at the branch office. Use LD 117 or Element Manager.

Table 83**LD 117 – Define zone parameters for the branch office.**

Command	Description
CHG ZBRN <Zone> <yes no>	Define a zone as a branch office zone.
CHG ZDST <Zone> <yes no> <StartMonth> <StartWeek> <StartDay> <StartHour> <EndMonth> <EndWeek> <EndDay> <EndHour>	If the branch office observes Daylight Savings Time (DST), these parameters specify the start and end of DST. During DST, the clock automatically advances one hour forward.
CHG ZTDF <Zone> <TimeDifferencefromMainOffice>	Specified in minutes, the time difference between the main office and branch office when both are not in DST.
CHG ZDES <Zone> <ZoneDescription>	A name to render data display more meaningful.

- 4 Enable the features for the branch office zone in LD 117.

Table 84
LD 117—Enable features for MG 1000B zone.

Command	Description
ENL ZBR <Zone> ALL	Enables features for the branch office <zone>.

--End--

Abbreviated dialing

Abbreviated Dialing must be configured at the main office and at the branch office.

The main office and branch office must have the same configuration. The DNSs, zones, and Pretranslation Groups must be exactly the same in both offices.

Use the following procedures to configure Abbreviated dialing:

- [“Configuring the Speed Call List ” \(page 316\)](#)
- [“Configuring Pretranslation Groups” \(page 317\)](#)
- [“Assigning Pretranslation Groups to the telephones” \(page 318\)](#)
- [“Configuring Incoming DID Digit Conversion \(IDC\)” \(page 319\)](#)

The Pretranslation Group number does not need to be the same as the number of the zone to which it is assigned. However, it does make configuration more intuitive if the two values are the same.

Configuring the Speed Call List

Step	Action
1	In LD 18, configure the Speed Call List (SCL) for each main office zone.

Table 85
LD 18—Configure Speed Call Lists (SCL) for each zone

Prompt	Response	Description
REQ	NEW	Add new data
TYPE	SCL	Speed Call List
LSNO	4:(16):31	Maximum number of DNSs allowed for Speed Call Lists
DNSZ	0:(256):1000	Maximum number of DNSs in Speed Call List
WRT	(YES) NO	Data is correct and can be updated in the data store
STOR	0:999 yyy...y	Entry number and the digits stored with it

Prompt	Response	Description
WRT	(YES) NO	Data is correct and can be updated in the data store
The STOR and WRT prompts are repeated in sequence for each number in the SCL.		

2 Repeat to configure the SCL for each branch office zone.

3 In LD 18, configure the default SCL.

Table 86

LD 18—Configure default Speed Call List

Prompt	Response	Description
REQ	NEW	Add new data
TYPE	SCL	Speed Call List
LSNO	0	Default SCL
DNSZ	4:(16):31	Maximum number of DNs allowed for Speed Call Lists
SIZE	0:(256):1000	Maximum number of DNs in Speed Call List
WRT	(YES) NO	Data is correct and can be updated in the data store
STOR	<cr>	Accept default
WRT	(YES) NO	Data is correct and can be updated in the data store.

--End--

Configuring Pretranslation Groups

Step	Action
1	In LD 18, configure the Pretranslation Group for each main office zone.
ATTENTION While not required, Nortel recommends that the Pretranslation Group number (XLAT) be the same as the number of the zone to which it is assigned.	

Table 87

LD 18—Configure Pretranslation Group for each zone

Prompt	Response	Description
REQ	NEW	Add new data.
TYPE	PRE	Pretranslation Group
XLAT	1:8191	Group number. Correlates Pretranslation Group to Speed Call List.
: PRE	1:8190	Pretranslation Speed Call List Number. Corresponds to LSNO defined in LD 18, TYPE=SCL

- 2 Repeat previous step to configure the Pretranslation Group for each branch office zone.
- 3 In LD 18, configure the default Pretranslation Group at the main office.

Table 88
LD 18—Configure default Pretranslation Group

Prompt	Response	Description
REQ	NEW	Add new data.
TYPE	PRE	Pretranslation Group
XLAT	0	Default Zone number
: PRE	0	Default Pretranslation Speed Call List Number

- 4 In LD 15, activate the Pretranslation feature.

Table 89
LD 15—Activate Pretranslation feature

Prompt	Response	Description
REQ	CHG	Change existing data
TYPE	FTR	Features and options
...		
PREO	1	Activate Pretranslation feature
...		

--End--

Assigning Pretranslation Groups to the telephones

Step	Action
1	In LD 11, assign the Pretranslation Group to IP Phones and TDM telephones.

ATTENTION

The Pretranslation Group must be assigned to all IP Phones and TDM telephones. This procedure describes how to configure a single telephone, and it must be repeated for each telephone in the group. The global change utility in TM 3.1 can be used to configure all TDM telephones in the group at one time. For details, see *Telephony Manager 3.1 System Administration* () (NN43050:601).

Table 90
LD 11—Pretranslation Group to telephones

Prompt	Response	Description
REQ	CHG	Change existing data.

Prompt	Response	Description
TYPE	a...a	Terminal type.
		Type question mark (?) for a list of possible responses.
...		
XLST	(0):254	Pretranslation Group associated with the group.
...		

2 Repeat previous step for each telephone in the group.

--End--

Configuring Incoming DID Digit Conversion (IDC)

Step	Action
------	--------

1	In LD 15, configure Flexible Code Restriction for IDC.
---	--

Table 91

LD 15—Flexible Code Restriction for Incoming DID Digit Conversion

Prompt	Response	Description
REQ	FCR	Flexible Code Restriction
...		
NFCR	YES	Enable new Flexible Code Restriction.
...		
IDCA	YES	Incoming DID Digit Conversion allowed.
: DCMX	1:255	Maximum number of IDC conversion tables.
...		

2 In LD 49, configure IDC.

Table 92

LD 49—Incoming DID Digit Conversion (IDC)

Prompt	Response	Description
REQ	NEW	Add new data.
TYPE	IDC	Incoming Digit Conversion
DCNO	0:254	Digit Conversion tree number (IDC tree number).

Prompt	Response	Description
...		
IDGT <0:9999>	0:9999 0:9999	Incoming Digits (DN or range of DNs to be converted). The external DN to be converted is output and the users enter the internal DN. For example, to convert the external DN 3440 to 510, enter: Prompt: Response IDGT: 3440 3440: 510

3 In LD 49, configure Flexible Code Restriction to allow all codes.

Table 93

LD 49—Flexible Code Restriction

Prompt	Response	Description
REQ	new	Add new data.
TYPE	FCR	Flexible Code Restriction
CRNO	(0):254	Code Restriction tree number
INIT	Allow	Allow all codes.
...		

4 In LD 16, configure the Route Data Block to enable IDC on this route.

Table 94

LD 16—Route Data Block

Prompt	Response	Description
REQ	chg	Change existing data
TYPE	RDB	Route Data Block
...		
IDC	YES	Incoming DID Digit Conversion on this route.
: DCNO	(0):254	Day IDC tree number
: NDNO	0:254	Night IDC tree number
...		

--End--

Print branch office zone information

LD 117 contains commands to view branch office zones at the main office Call Server.

Table 95
Print zone information

Command	Description
PRT ZACB <Zone>	Print a table of branch office zone dialing plan entries.
PRT ZBW <Zone>	Print a table of zone bandwidth utilization.
PRT ZDES <DESMatchString>	Print a table of the zone description entries.
PRT ZDP <Zone>	Print a table of branch office zone dialing plan entries.
PRT ZDST <Zone>	Print a table of branch office zone time adjustment properties entries.
PRT ZESA <Zone>	Print a table of branch office zone Emergency Services Access parameters.
PRT ZONE ALL	Print zone information for all zones.
PRT ZONE 0:255	Print zone information for a specific zone.
PRT ZTDF <Zone>	Print a table of branch office zone time adjustment properties entries.
PRT ZTP [<Zone>]	Print a table of branch office zone time adjustment properties entries.

Enable/disable branch office zone features

LD 117 contains commands to enable and disable features for the branch office zones.

Table 96
LD 117—Enable/Disable branch office zone features

Command	Description
ENL ZBR [<Zone>] [ALL] [LOC] [ESA] [TIM]	Enable features for the branch office zone. If no specific features are specified, ALL is assumed.
DIS ZBR [<Zone>] [ALL] [LOC] [ESA] [TIM]	Disable features of the branch office zone. If no specific features are specified, ALL is assumed.



CAUTION

When a zone is created, its default state is enabled.

Zone 0 must be configured in LD 117 first before other zones are configured or all calls associated with Zone 0 are blocked.

View status of branch office zone at main office Call Server

LD 117 contains commands to review the status of the main office Call Server.

Table 97
LD 117—Display zone status

Command	Description
STAT ZONE [<Zone>]	Display zone status table
STAT ZBR [<Zone>]	Display status of branch office zones.

Change/print Proactive Voice Quality notification levels

The Proactive Voice Quality (PVQ) notification level can be changed on a zone:by:zone basis so that a particular zone, such as a branch office zone, is monitored more closely than others. LD 117 contains commands for changing and viewing the notification level for a zone.

ATTENTION

The notification level for a branch office zone must be configured the same at both the main office and the branch office.

Table 98
LD 117—Change/print PVQ notification levels

Command	Description
CHG ZQNL ALL <Level>	Change the notification level for all zones.
CHG ZQNL <Zone> <Level>	Change the notification level for the specified zone.
PRT ZQNL ALL	Print a table of the notification level for all zones.
PRT ZQNL <Zone>	Print a table of the notification level for the specified zone.

Print PVQ statistics

LD 117 contains a command to print PVQ statistics for the branch office zone.

Table 99
LD 117—PVQ statistics

Command	Description
PRT ZQOS <zone>	Print the PVQ statistics for the branch office zone.

Diagnostics

Use the following tables to obtain the status of a particular zone.

Command line interface diagnostics

LD 117 contains commands to obtain the status of a particular zone.

Table 100
LD 117—Obtain status for a particular zone

Command	Description
STAT ZALT <zone>	Display Alternative Call Routing Status, where: zone=bandwidth zone
If you do not enter a value in the zone field, the status of all configured zones is displayed.	

The screen output for all configured zones appears as follows:

```
#                Alternate Routing Status
10              ENL
11              DIS
12              DIS
```

Table 101
LD 117—Obtain status for a branch office zone

Command	Description
STAT ZBR <zone>	Display the status of specified branch office zone, where: zone=bandwidth zone
If you do not enter a value in the zone field, the status of all configured zones is displayed.	

Table 102
Sample output for all branch office zones

```
#                State                Flags                Des
10              ENL                  TIM                  BVW
11              DIS                  LOC ALT            TOR
12              DIS                  ESA ALT
```

"Des" entries are codes you assign to each branch office for your own records.

Element Manager diagnostics

Print zone Alternative Call Routing information The print capability allows the following parameters to be viewed for each zone:


- enable/disable status of the Alternative Call Routing for Network Bandwidth Management feature
- ALTPrefix digits
- enable/disable the status of the All Calls option

Printing zone ALTPrefix

Step	Action
1	In the navigation tree, click System, Maintenance .

The Maintenance window appears.

Figure 84
System Maintenance

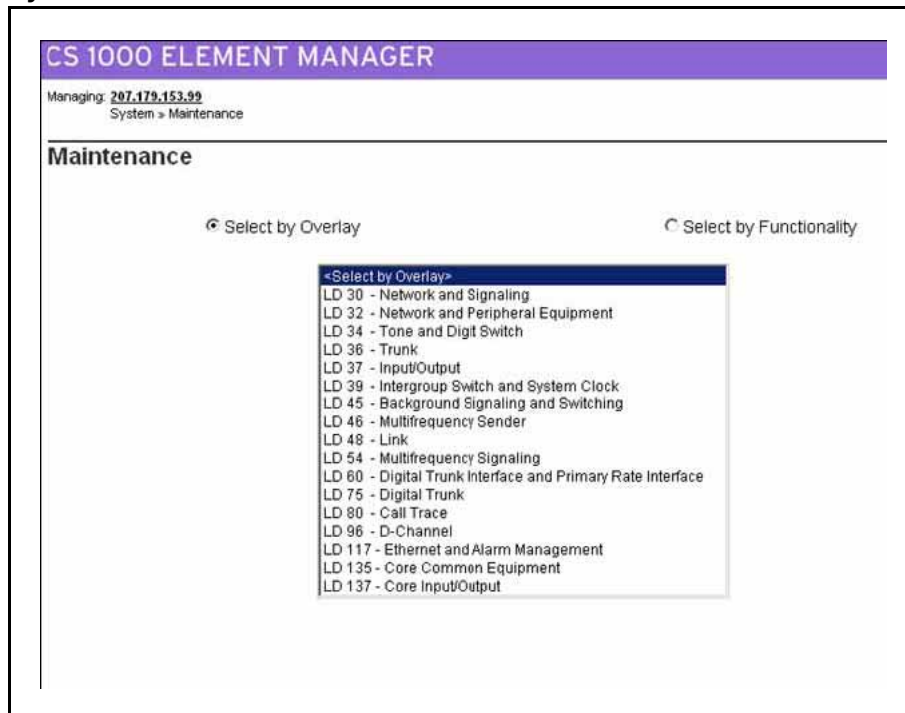


2

Select the **Select by Functionality** option button.

The Select by Functionality window appears.

Figure 85
Select by Functionality

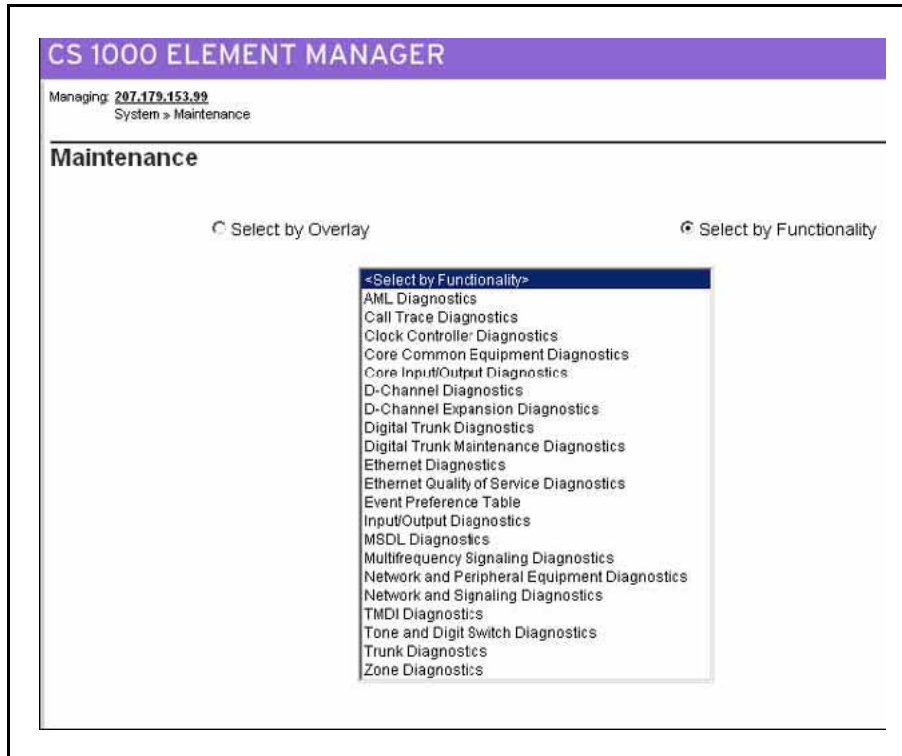


3 Click **Zone diagnostics**.

The Maintenance Commands for Zones window appears.


You can also access this page from **IP Network, Zones** and click on **Maintenance Commands for Zones (LD 117)**.

Figure 86
Maintenance Commands for Zones

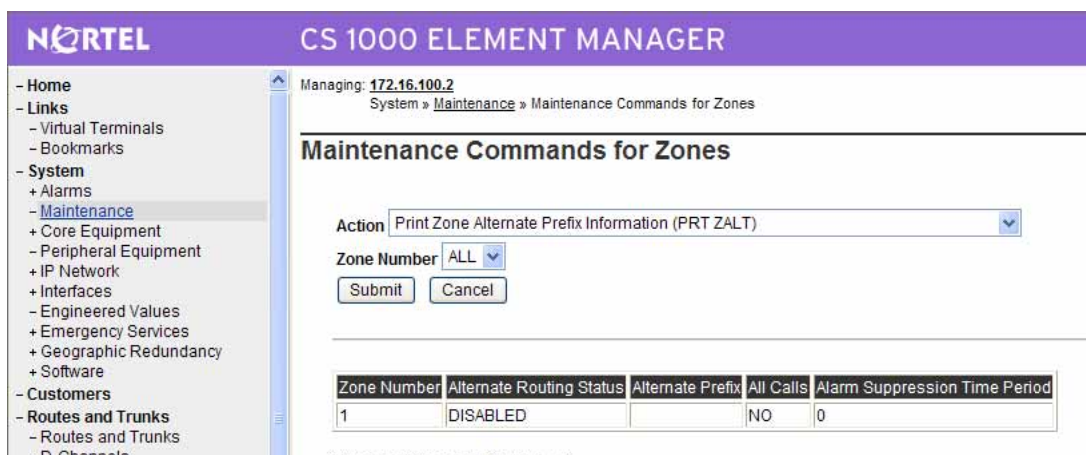

- 4 In the **Action** list, select **Print Zone Alternate Prefix Information (PRT ZALT)**.

Figure 87
Maintenance Commands for Zones Action list

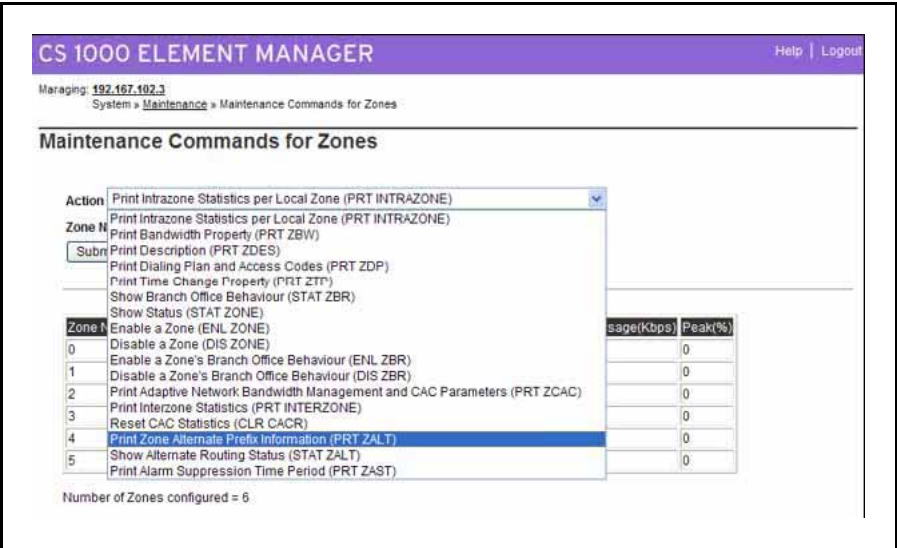

- 5 In the **Zone Number** list, select **ALL** or a specific zone number.
- 6 Click **Submit**.

The Maintenance Commands for Zones window appears, that displays the statistics for the specified zone or zones. A blank field indicates that the statistic is either not available or not applicable to that zone.

--End--

Show status of Alternative Call Routing The Show Status functionality displays the enable/disable status of Alternative Call Routing for the Network Bandwidth Management feature. The configured zones and the status of the feature for each zone can be listed.

Showing the status of Alternative Call Routing

Step	Action
1	In the navigation tree, click System, Maintenance . The Maintenance window appears. See Figure 84 "System Maintenance" (page 324) .
2	Click Select by Functionality . The Select by Functionality window appears. See Figure 85 "Select by Functionality" (page 325) .

- 3 Click **Zone diagnostics**.
The Maintenance Commands for Zones window appears. See [Figure 88 "Show Alternate Routing Status \(STAT ZALT\)" \(page 327\)](#).
- 4 From the **Actions** list, select **Show Alternate Routing Status (STAT ZALT)**.
See [Figure 88 "Show Alternate Routing Status \(STAT ZALT\)" \(page 327\)](#).

Figure 88
Show Alternate Routing Status (STAT ZALT)

CS 1000 ELEMENT MANAGER Help | Logout

Managing: 192.167.102.3
System » Maintenance » Maintenance Commands for Zones

Maintenance Commands for Zones

Action: Show Alternate Routing Status (STAT ZALT)

Zone Number: ALL

Submit Cancel

Zone Number	Alternate Routing Status
0	DISABLED
1	DISABLED
2	DISABLED

Number of Zones configured = 3

- 5 In the **Zone Number** list, select **ALL**.
- 6 Click **Submit** to enter the data.
The window updates with the data associated with that zone. See [Figure 88 "Show Alternate Routing Status \(STAT ZALT\)" \(page 327\)](#) for a typical example of the results.

--End--

Maintenance

The features in this section can be maintained using Element Manager or LD 117.

Adaptive Network Bandwidth Management for CAC

The CAC parameters, intrazone, and interzone statistics for one of more zones are available in Element Manager from the Zones window.

Displaying CAC parameters for one or more zones

- | Step | Action |
|------|---|
| 1 | In Element Manager navigation tree, select System, IP Network, Zones .
The Zones window appears. |
| 2 | Click Maintenance Commands for Zones (LD 117) .
The Maintenance Commands for Zones pane appears and lists all the configured zones and the intrazone statistics by default. |
| 3 | In the Action list, select Print Adaptive Network Bandwidth Management and CAC Parameters (PRT ZCAC) .
Figure 89
Zone action list |

Managing: 102.167.102.3
System » IP Network » Zones » Maintenance Commands for Zones

Maintenance Commands for Zones

Action: Print Intrazone Statistics per Local Zone (PRT INTRAZONE) ▼

Zone #: 0

Submit

Zone #	Action	Average(Kbps)	Peak(%)
0	Print Intrazone Statistics per Local Zone (PRT INTRAZONE)	0	0
1	Print Bandwidth Property (PRT ZBW)	0	0
2	Print Description (PRT ZDES)	0	0
3	Print Dialing Plan and Access Codes (PRT ZDP)	0	0
4	Print Time Change Property (PRT ZTP)	0	0
5	Show Branch Office Behaviour (STAT ZBR)	0	0
6	Show Status (STAT ZONE)	0	0
7	Enable a Zone (ENL ZONE)	0	0
8	Disable a Zone (DIS ZONE)	0	0
9	Enable a Zone's Branch Office Behaviour (ENL ZBR)	0	0
10	Disable a Zone's Branch Office Behaviour (DIS ZBR)	0	0
11	Print Adaptive Network Bandwidth Management and CAC Parameters (PRT ZCAC)	0	0
12	Print Interzone Statistics (PRT INTERZONE)	0	0
13	Reset CAC Statistics (CLR CACR)	0	0
14	Print Zone Alternate Prefix Information (PRT ZALT)	0	0
15	Show Alternate Routing Status (STAT ZALT)	0	0
16	Print Alarm Suppression Time Period (PRT ZAST)	0	0

Number of Zones configured = 6

- 4 In the **Zone Number** list, select **ALL** or a specific zone number to display statistics for a specific zone.
- 5 Click **Submit**.
The Maintenance Commands for Zones window appears, which displays the statistics for the specified zone or zones. A blank field indicates that the statistic is not available or not applicable to that zone.

Figure 90
Element Manager CAC parameters

Maintenance Commands for Zones

Action Print Adaptive Network Bandwidth Management and CAC Parameters (PRT ZCAC)

Zone Number ALL

Zone Number	State	Response Time		Alarm Threshold(%)		Coefficient for QoS	Alarm Coefficient				Record Validity Time (hours)
		Increase (%)	Interval (min)	Warning	Unacceptable		R	Packet Loss	Delay	Jitter	
1	DISABLED	10	5	85	75	50	50	50	50	50	48

Number of Zones configured = 9

--End--

Table 103
LD 117—Display Adaptive Network Bandwidth Management information

Command	Description
CLR CACR <Near Zone> <Near VPNI> <Far Zone> <Far VPNI>	Clear zone:to:zone record for near (VPNI:Zone) or far (VPNI:Zone) zones, where: - Near Zone = 1:255 - Near VPNI = 1:16383 - Far Zone = 1:255 - Far VPNI = 1:16383
PRT INTRAZONE <zone>	Print intrazone statistics for the identified zones, where zone = ALL or 1:255 The output of this command displays the following information: - Zone - State = ENL/DIS - Type = PRIVATE/SHARED - Strategy = BB/BQ - MO/BMG/VTRK = ZoneIntent - Bandwidth = kbit/s - Usage = kbit/s - Peak = %

Command	Description
PRT INTERZONE <near Zone> <nearVPNI> <farZone> <farVPNI>	Print interzone statistics for the specific VPNI zone; where: • nearZone = ALL or 1:255 • nearVPNI = 1:16383 • farZone = 1:255 • farVPNI = 1:16383 The output of this command displays the following information: • Near end Zone • Near end VPNI • Far end Zone • Far end VPNI • State = ENL/DIS • Type = PRIVATE/SHARED • Strategy = BB/BQ • MO/BMG/VTRK = Zone Intent • QoS factor = % • Bandwidth configured = Kbps • Sliding max = Kbps • Usage = Kbps • Peak = % • Call = Cph • Alarm = Aph The report rows are grouped as: • First row = summary bandwidth usage per near zone • Next rows = bandwidth usage for near (VPNI: Zone) and far (VPNI : Zone) zones
PRT ZCAC <zone>	Print CAC parameters for the specified zone, or for all zones, where zone = ALL or 1:255 The output of this command displays the following information: • Local ZONE = 1:255 • State = ENL/DIS • CR = 1:100 • CPL = 1:100 • CD = 1:100

Command	Description
	• CJ = 1:100 • CQOS = 1:100 • ZQRT = 1:100 • ZQRTI = 10:120 • ZQUAT = 1:99 • ZQWAT = 1:99 • CACVT = 1:255

Command line interface maintenance To view sample output for PRT commands, see [Figure 23 "Sample output for prt intrazone command" \(page 87\)](#) and [Figure 24 "Sample output for prt interzone command" \(page 87\)](#).

Alternative Call Routing for Network Bandwidth Management

Table 104

LD 117—Enable and disable Alternative Call Routing for a zone

Command	Description
ENL ZALT <zone>	Enable Alternative Call Routing for Bandwidth Management for the zone specified, where: Input zone number (1:255). Configure the branch office zone using LD 117 at the main office.
DIS ZALT <zone>	Disable Alternative Call Routing for Bandwidth Management for the zone specified.
ENL ZBR <zone> [ALL] [LOC][ESA][TIM][ALT]	Enable features for the branch office zone. If you do not input features, then all are enabled.
DIS ZBR [ALL] [LOC][ESA][TIM][ALT]	Disable features for the branch office zone. If you do not input features, then all are disabled.
The system responds with ok, if operation is successful.	

Table 105

LD 117—Configure Alternate Prefix number for a particular zone and the All Calls option

Command	Description
CHG ZALT <zone> <ALTPrefix> [<reroute all calls>]	Change ALTPrefix number for zone.
<zone>	Input zone number 1:255 Configure the branch office zone using LD 117 at the main office.

Command	Description
<ALTPrefix>	A digit string, of up to 7 digits, added to the start of the dialed number, if the call will not be routed through the WAN (due to lack of bandwidth, poor QoS, or feature is configured for all calls).
[<rereoute all calls>]	Allow or Deny Alternative Call Routing for all calls, where: • (NO) = deny • YES = allow

Table 106
LD 117—Print Alternate Prefix number for a particular zone

Command	Description
PRT ZALT <zone>	Print the ALTPrefix assigned to a particular zone and if the feature operates for all calls from that zone, where:
<zone>	Input zone number 1:255 If you do not input a zone number, the system prints the information for all configured zones.

Table 107
Sample Print Alternate Prefix number output

#	ZALT	Alternate Prefix	All Calls	Alarms Suppression Time
10	ENL	100	YES	50
11	ENL	101	YES	0
12	DIS	102	NO	1000

Table 108
LD 117—Change and Print Zone Alarm Suppression Time Interval

Command	Description
CHG ZAST <zone> <Alarm Suppression Interval>	Change Suppression Time Interval for QoS alarms related to Alternative Call Routing for Network Bandwidth Management feature for zone specified. Time Interval is measured in seconds from the time the last alarm was printed. Default is 0. Range is 0 : 3600 seconds.
PRT ZAST <zone>	Print Suppression Time Interval for QoS alarms related to Alternative Call Routing for the Network Bandwidth Management feature for zone specified. No entry for zone number results in printout for all zones.

Table 109
Sample Change and Print Zone Alarm Suppression Time Interval output

#	Alarms Suppression Time
10	50
11	0
12	1000

Where # is the column header for zone number.

Element Manager maintenance

Enable zone Branch Office behavior You can configure the Alternative Call Routing for the Network Bandwidth Management feature while you configure the zone Branch Office behavior.

Enabling a zone Branch Office behavior

Step	Action
1	In the Element Manager navigation tree, select System, Maintenance . The Maintenance pane appears. See Figure 84 "System Maintenance" (page 324) .
2	Click Select by Functionality . The Select by Functionality window appears. See Figure 85 "Select by Functionality" (page 325) .
3	Click Zone diagnostics . The Maintenance Commands for Zones window appears.
4	From the Action list, select Enable a Zone's Branch Office Behavior (ENL ZBR) .

Figure 91
Enable zone Branch Office behavior

CS 1000 ELEMENT MANAGER Help | Logout

Managing: 192.167.102.3
 System » Maintenance » Maintenance Commands for Zones

Maintenance Commands for Zones

Action: Enable a Zone's Branch Office Behaviour (ENL ZBR)

Zone Number: 0

Submit Cancel

Zone Branch Office Options (ZBR_OPT):

☐ Local Dialing Access ☐ Time Adjustment ☐ Alternate Routing for Branch

Zone Number	Alternate Routing Status
0	DISABLED
1	DISABLED
2	DISABLED

Number of Zones configured = 3

- 5 From the **Zone Number** list, select the zone number you want to configure.
 - 6 Select the **Alternate Routing for Branch** check box to enable the feature.
 - 7 Click **Submit**.
- The window updates with new configuration data for the zone you specified.

--End--

Suppress Alarms

Use the following procedure to suppress alarms QoS0038 and QoS0039 for a configurable amount of time (0 : 3600 seconds).

Suppressing Alternate Call Routing for alarms

Step	Action
1	Click System, IP Network, Zones
2	Select the Zone you are programming by clicking the plus sign to expand the choices under it.
3	Click Alternate Routing for Calls between IP Stations .

- 4 In the **Alarm Suppression Time Period (ZAST)** box, enter the desired time period.

Figure 92
Alarm Suppression Time Period (ZAST)

CS 1000 ELEMENT MANAGER Help | Logout

Managing: [192.167.102.3](#)
System » IP Network » [Zones](#) » Zone 0 » Alternate Routing for Calls between IP Stations

Alternate Routing for Calls between IP Stations

Input Description	Input Value
Zone Number (ZONE):	0
Enable Alternate Routing Feature (ENL_ZALT):	☐
Alternate Routing Prefix Digits (ALT_PREFIX):	(0 - 9999999)
Re-route for All Calls (ALL_CALLS):	☐
Alarm Suppression Time Period (ZAST):	0 (0 - 3600 Sec)

Note: Alternate Routing (ALT) in combination with Adaptive Network Bandwidth Management (CAC) allows for maintaining QoS by rerouting interzone calls through alternate paths. Independently, Alternate Routing (ALT) is based on bandwidth exhaustion.

- 5 Click **Submit** to enter the data.

--End--


SIP Line service

Use Element Manager (EM) and BCC applications running inside the Communication Server 1000 Unified Common Manager (UCM) to configure and enable SIP Line Service for Communication Server 1000.

The SIP Line service package, 417, must be installed in order to enable SIP Line service on Communication Server 1000. The SIP Line service is enabled at the customer level.

A new SIP Line Service link exists on the customer page inside EM. Package 417 must be installed to activate the link. The following figure, [Figure 93 "Customer edit page for SIP Line service" \(page 336\)](#) shows the Edit page for SIP Line Service in EM.

Figure 93
Customer edit page for SIP Line service

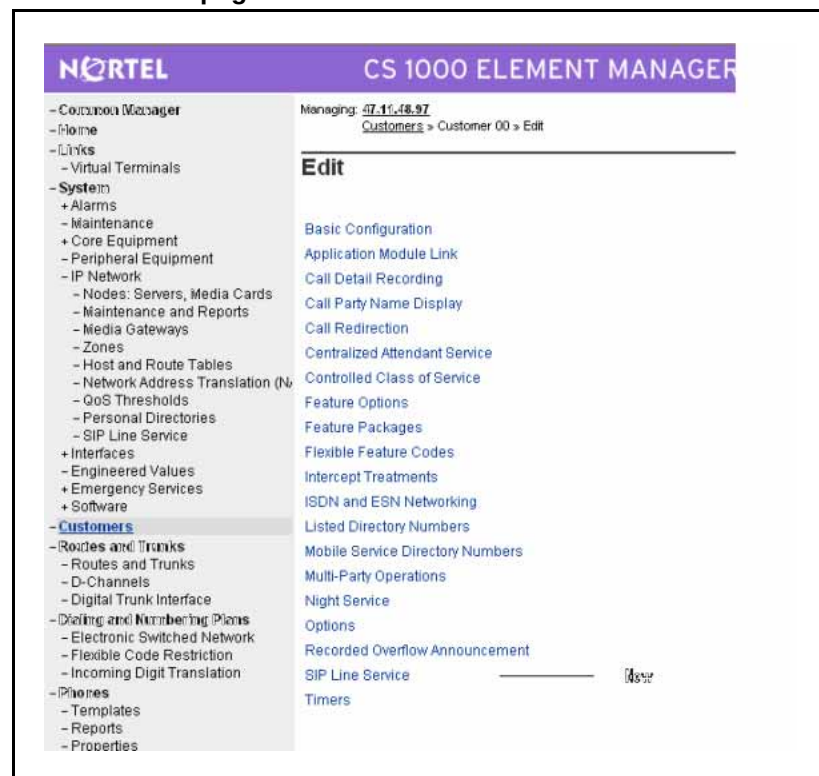

Appendix

Subnet mask conversion

Subnet mask conversion from CIDR to dotted decimal format

Subnet masks are expressed in Classless InterDomain Routing (CIDR) format, appended to the IP address, such as 10.1.1.1/20. The subnet mask must be converted from CIDR format to dotted decimal format to configure IP addresses.

The CIDR format expresses the subnet mask as the number of bits counted from the most significant bit of the first IP address field. A complete IP address consists of 32 bits. A typical CIDR format subnet mask is in the range from /9 to /30. Each decimal number field in the dotted decimal format has a value from 0 to 255, where decimal 255 represents binary 1111 1111.

Follow the steps in the following procedure to convert a subnet mask from CIDR format to dotted decimal format.

Converting a subnet mask from CIDR format to dotted decimal format

Step	Action
1	Divide the CIDR format value by 8. The result is a quotient (a zero or a positive number) and a remainder between 0 and 7.
2	The quotient designates the number of dotted decimal fields containing 255. In the example above, the subnet mask in CIDR format is /20. Twenty divided by eight equals a quotient of two, with a remainder of four. Therefore, the first two fields of the subnet mask in dotted decimal format are 255.255.
3	Use Table 110 "CIDR format remainders" (page 338) to obtain the dotted decimal value for the field following the last field that contains 255.

In the example of /20, the remainder is four. In [Table 110 "CIDR format remainders" \(page 338\)](#), a remainder of four equals a binary value of 1111 0000 and the dotted decimal value of the next field is 240. Therefore the first three fields of the subnet mask are 255.255.240.

- 4 The last field in the dotted decimal format has a value of 0. Therefore, the complete subnet mask in dotted decimal format is 255.255.240.0.

--End--

Table 110
CIDR format remainders

Remainder of CIDR format value divided by eight	Binary value	Dotted decimal value
0	0000 0000	0
1	1000 0000	128
2	1100 0000	192
3	1110 0000	224
4	1111 0000	240
5	1111 1000	248
6	1111 1100	252
7	1111 1110	254

Appendix

Port number tables

All ports specified in the following tables are Listen ports and specify the destination IP address and port number. The tables do not specify the source IP address or port.

The Task column specifies the software task listening on the specified port.

Navigation

This appendix contains port number tables for all Meridian 1 and CS 1000M VoIP products.

- [“Ephemeral ports” \(page 340\)](#)
- [“VXWorks Call Server port numbers” \(page 340\)](#)
- [“Voice Gateway Media Card port numbers” \(page 345\)](#)
- [“Media Gateway Controller port numbers” \(page 353\)](#)
- [“Co-resident \(Linux\) Call Server port numbers” \(page 359\)](#)
- [“Signaling Server port numbers” \(page 364\)](#)
- [“SIP Lines Gateway Port Numbers” \(page 370\)](#)
- [“Element Manager Port Numbers” \(page 375\)](#)
- [“Network Routing Service Port Numbers” \(page 380\)](#)
- [“Unified Communications Manager Port Numbers” \(page 385\)](#)
- [“Telephony Manager port numbers” \(page 389\)](#)
- [“IP Phone port numbers” \(page 391\)](#)
- [“Remote Office port numbers” \(page 392\)](#)
- [“CallPilot port numbers” \(page 392\)](#)
- [“Application Gateway \(AG\) 1000 port numbers” \(page 395\)](#)
- [“Contact Center 6.0 port numbers” \(page 396\)](#)
- [“TLAN subnet stateless packet filtering” \(page 396\)](#)

[“TLAN subnet stateful packet filtering” \(page 397\)](#)

[“ELAN subnet packet filtering” \(page 399\)](#)

Ephemeral ports

Ephemeral ports are short lived ports that are dynamically assigned. Typically ephemeral ports are assigned on the client side of a TCP or UDP interaction. With FTP, ephemeral ports are also assigned on the server side as part of the protocol.

The most effective method to manage ephemeral ports in a firewall is through the use of connection tracking. These features examine the application protocol (e.g. FTP, RPC) to open the required firewall ports temporarily. Connection tracking for TCP, FTP is commonly available. UDP connection tracking is available in some firewalls. RPC connection tracking is no longer required with CS 1000 release 6.0 as fixed server ports are used.

When connection tracking is not used in firewalls for TCP, RPC or FTP protocols it is necessary to open all the ports in the ephemeral port ranges.

Linux considerations

There can be various applications deployed and provisioned on a Linux server. Therefore, for any given Linux server, you must consider both the deployed applications (e.g. Call Server, Signaling Server, etc) and the provisioned applications (e.g. on the Signaling Server - VTRK, LTPS, etc). when determining the set of ports required.

VXWorks Call Server port numbers

where

MGMT = Management

SC = System Control

Table 111
VXWorks Call Server port numbers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source Element	Description	Comments	M = Mandatory, always open. D = Default, included in AR Default rules file n/a = not

							controlled by AR.
SC	ESP (p rotocol number 50)		ELAN	Any CS1K element	IPsec, ESP - Encap ulating Security Payload	Required if ISSS is used.	
MGMT	TCP	20	ELAN	MGC, VGMC, SS, TM, GR CS, mate CS, backup servers, manag ement stations	FTP data port	Not Req'd if TCP connection tracking used.	
MGMT	TCP	21	ELAN	MGC, VGMC, SS, TM, GR CS, mate CS, backup servers, manag ement stations	FTP Con trol Port	Internal and ext ernal file transfers	
MGMT	TCP	22	ELAN	UCM, ma nagement stations	SSH	Secure Interactive logon, file transfers	
SC	TCP	111	ELAN		Sunrpc-p ortmappe r	Open but not used. Can be blocked in Firewall.	
MGMT	TCP	513	ELAN	SS, Man agement stations	rlogin	Remote Login	

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source Element	Description	Comments	M = Mandatory, always open. D = Default, included in AR Default rules file n/a = not controlled by AR.
SC	TCP	600-1023	ELAN	MGC, VGMC, SS, TM, GR CS, mate CS, backup servers, management stations	Ephemeral ports for FTP data transfers & RLOGIN	Typically handled using TCP and FTP connection tracking in the firewalls	
SC	TCP	1024-5000	ELAN	UCM, MGC, VGMC, SS, TM, GR CS, mate CS, backup servers, management stations	Ephemeral ports for TCP	Typically handled using TCP connection tracking in the firewalls	
SC	TCP	5007	ELAN		High Availability Communication Manager	Open but not used. Can be blocked in Firewall.	
SC	TCP	6666	ELAN	UCM	Config Process	Used for SNMP and NTP configuration propagation.	
SC	TCP	8888	ELAN	Contact Center, Call Pilot, MLS, SS	AML	3rd Party Call Control	

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source Element	Description	Comments	M = Mandatory, always open. D = Default, included in AR Default rules file n/a = not controlled by AR.
SC	TCP	15000	ELAN	MGC, VGMC, SS	pbxLink		
SC	TCP	15081	ELAN	EM	Xmsg Server	For CS 1000 Element Manager	
SC	TCP	32781	ELAN	MGC	Signaling for Sets & IPE cards on MGC		
SC	TCP	32784	ELAN	MGC	IPMG TTY		
SC	TCP	32788	ELAN	MGC	RPC MAIN / RPC GW	preassigned RPC port.	
SC	TCP	32789	ELAN	MGC	RPC IN STALL / RPC GW INSTALL	preassigned RPC port.	
SC	UDP	69	ELAN	SS (TPS), VGMC (TPS)	tFTPd	Tone and Cadence File Transfers	
SC	UDP	111	ELAN	MGC	Sunrpc-portmapper	RPC Service for MGC	
SC	UDP	123	ELAN	External NTP Server	NTP	Time Synchronization. Source port 500.	

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source Element	Description	Comments	M = Mandatory, always open. D = Default, included in AR Default rules file n/a = not controlled by AR.
MGMT	UDP	161	ELAN	Management Systems, TM	SNMP query		
SC	UDP	500	ELAN	Any CS1K element	IPsec IKE	Required if ISSS is used. Source port 500	
SC	UDP	600-1023	ELAN	MGC	Ephemeral UDP ports for Sun RPC portmapper requests		
MGMT	UDP	1929	ELAN	TM	DBA CD R/TRF	Used by TM	
MGMT	UDP	2058-2185	ELAN	TM	DBA Data	Used by TM	
SC	UDP	5018	ELAN	HA CS mate ELAN	High Availability Communications	HA Call server only.	
SC	UDP	15000	ELAN	MGC, VGMC, GR CS, HS CS Mate	rudp HB	source port 15000	
SC	UDP	15010	ELAN	SS, MGC, VGMC, inactive CS	AFS	source port 15010	

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source Element	Description	Comments	M = Mandatory, always open. D = Default, included in AR Default rules file n/a = not controlled by AR.
SC	UDP	15011	ELAN	SS, MGC, VGMC, inactive CS	AFS	source port 15011	
SC	UDP	31500-31504	ELAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication	
SC	UDP	32779	ELAN	MGC	IPMG HeartBeat	source port 32779	
SC	UDP	32780	ELAN	MGC	IPMG HeartBeat Monitor	source port 32779	
SC	TCP	5007	HSP	HA CS mate HSP	High Availability Communication Manager	HA Call server only.	
SC	UDP	5010	HSP	HA CS mate HSP	used for exchanging time and date information	HA Call Server Only	
SC	UDP	5020	HSP	HA CS mate HSP	HSP stop and copy	HA Call Server Only	

Voice Gateway Media Card port numbers

where

MGMT = Management

SC = System Control

Table 112
Voice Gateway Media Card port numbers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments	M = Mandatory, always open. D = Default, included in AR Default rules file n/a = not controlled by AR.
SC	ESP (protocol number 50)		ELAN	CS, EM, VGMCs	IPsec, ESP - Encapsulating Security Payload	Required if ISSS is used.	n/a
MGMT	TCP	20	ELAN	EM, management systems, etc	FTP data port	Not Req'd if TCP connection tracking used.	D
MGMT	TCP	21	ELAN	EM, management systems, etc	FTP Control Port	File Transfers	D
MGMT	TCP	22	ELAN	UCM, EM, SS, CS, management stations	SSH	Secure Interactive logon, file transfers	M
MGMT	TCP	23	ELAN	EM, management systems, etc	Telnet	Interactive login	D
SC	TCP	111	ELAN		sunrpc-port mapper	Open but not used. Can be blocked in Firewall.	M
MGMT	TCP	513	ELAN	ECM, SS(EM), SS, CS, management stations	RLOGIN	Remote Login	D

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments	M = Mandatory, always open. D = Default, included in AR Default rules file n/a = not controlled by AR.
SC	TCP	600-1023	ELAN	CS, EM, Management Stations	Ephemeral ports for FTP data transfers & RLOGIN	Typically handled using TCP and FTP connection tracking in the firewalls	M
SC	TCP	1024-5000	ELAN	UCM, SS (EM), TM, CS, alternate CS, management stations	Ephemeral ports	Typically handled using FTP & TCP connection tracking in the firewalls	M
SC	TCP	6666	ELAN	CS, UCM	Config Process	Used for SNMP and NTP configuration propagation.	D
SC	TCP	15080	ELAN	EM	xmsg	Required for EM	M
SC	TCP	32788	ELAN		RPC MAIN / RPC GW	preassigned RPC port	M
SC	UDP	68	ELAN	SS(TPS)	Replies from bootp server	Initial configuration	M
SC	UDP	111	ELAN		Sunrpc-port mapper	Remote Procedure Calls	M
MGMT	UDP	161	ELAN	TM, Management Systems	SNMP query	Required for SNMP Management	D

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments	M = Mandatory, always open. D = Default, included in AR Default rules file n/a = not controlled by AR.
MGMT	UDP	162	ELAN		SNMP Trap Receiver	Open but not used. Can be blocked in Firewall.	
SC	UDP	500	ELAN	Any CS1K element	IPsec IKE	Required if ISSS is used. Source port 500	D
	UDP	514	ELAN		Syslog	Open on 32 port VGMC but not used. Can be blocked in Firewall.	
SC	UDP	600-1023	ELAN	CS	Ephemeral UDP ports for Sun RPC portmapper requests	Typically handled using TCP, RPC and FTP connection tracking in the firewalls	M
SC	UDP	15000	ELAN	CS (active, inactive, alternatives)	RUDP Heartbeat	source port 15000	M
SC	UDP	15001	ELAN	CS (active, inactive, alternates)	CS State Change broadcasts	source port 15000	M
SC	UDP	15010	ELAN	CS	AFS	source port 15010	M
SC	UDP	15011	ELAN	CS	AFS	source port 15011	M

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments	M = Mandatory, always open. D = Default, included in AR Default rules file n/a = not controlled by AR.
	UDP	17185	ELAN		proprietary	Open but not used. Can be blocked in Firewall.	
SC	UDP	31500-31504	ELAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication	D
SC	UDP	32780	ELAN	CS	HeartBeat Monitor		M
SC	ESP (protocol number 50)		TLAN		IPsec, ESP - Encapsulating Security Payload	Required if ISSS is used.	n/a
MGMT	TCP	20	TLAN	EM, Management Stations	FTP data port	Not Req'd if TCP connection tracking used.	
MGMT	TCP	21	TLAN	Management Stations, SS	FTP Control Port		
MGMT	TCP	22	TLAN	Management Stations, SS	SSH	Secure Interactive logon, file transfers	
MGMT	TCP	23	TLAN	Management Stations, SS	Telnet	Interactive login	D

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments	M = Mandatory, always open. D = Default, included in AR Default rules file n/a = not controlled by AR.
SC	TCP	111	TLAN		Sunrpc-port mapper	Open but not used. Can be blocked in Firewall.	D
MGMT	TCP	513	TLAN	ECM, SS(EM), SS, CS, management stations	RLOGIN	Remote Login	
	TCP	1024-5000	TLAN	UCM, EM, Management Stations	Ephemeral ports for FTP and TCP	Typically handled using FTP & TCP connection tracking in the firewalls	M
SC	TCP	6666	TLAN		Config Process	Open but not used. Can be blocked in Firewall.	D
SC	TCP	32788	TLAN		RPC MAIN / RPC GW	preassigned RPC port. Open but not used. Can be blocked in Firewall.	
	UDP	68	TLAN		bootp	Open but not used. Can be blocked in Firewall.	

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments	M = Mandatory, always open. D = Default, included in AR Default rules file n/a = not controlled by AR.
SC	UDP	111	TLAN		Sunrpc-port mapper	Open but not used. Can be blocked in Firewall.	D
MGMT	UDP	162	TLAN		SNMP Trap Receiver	Open but not used. Can be blocked in Firewall.	
SC	UDP	500	TLAN	Any ISSS Target, source port 500	IPSec IKE	Required if ISSS is used	
	UDP	514	TLAN		Syslog	Open on 32 port VGMC by not used. Can be blocked in Firewall.	
SC	UDP	15001	TLAN		CS State Change broadcasts	Open but not used. May be blocked in firewall.	M
SC	UDP	15010	TLAN	CS	AFS	Open but not used. May be blocked in firewall. source port 15010	M

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments	M = Mandatory, always open. D = Default, included in AR Default rules file n/a = not controlled by AR.
SC	UDP	15011	TLAN	CS	AFS	Open but not used. May be blocked in firewall. source port 15011	M
	UDP	17185	TLAN		proprietary	Open but not used. Can be blocked in Firewall.	
SC	UDP	31500-31504	TLAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication	D
VoIP Media	UDP (RTP, SRTP)	5200-5246	TLAN	IP phones, MGCs, VGMCs, voice GWs	RTP, SRTP	even numbers-ITGP	n/a
VoIP Media	UDP (RTP, SRTP)	5200-5262	TLAN	IP phones, MGCs, VGMCs, voice GWs	RTP, SRTP	even numbers-Media Card	n/a
VoIP Media	UDP(RTCP)	5201-5247	TLAN	IP phones, MGCs, VGMCs, voice GWs	RTCP	odd numbers-ITGP	n/a
VoIP Media	UDP(RTCP)	5201-5263	TLAN	IP phones, MGCs, VGMCs, voice GWs	RTCP	odd numbers-Media Card	n/a

Media Gateway Controller port numbers

where

MGMT = Management

MEDIA = Voice media streams

SC = System Control

Table 113
Media Gateway Controller port numbers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments	AR Rules (D = Default, M = Mandatory)
SC	ESP (protocol number 50)		ELAN	Any CS1K element	IPsec, ESP - Encapsulating Security Payload	Required if ISSS is used.	n/a
MGMT	TCP	20	ELAN	EM, management stations	FTP data port	Not Req'd if TCP connection tracking used.	D
MGMT	TCP	21	ELAN	EM, management stations	FTP Control Port	File Transfers	D
MGMT	TCP	22	ELAN	UCM, EM, SS, CS, management stations	SSH	Secure Interactive logon, file transfers	M
MGMT	TCP	23	ELAN	UCM, EM, SS, CS, management stations	TELNET	Interactive login	D
SC	TCP	111	ELAN		Sunrpc-portmapper	Open but not used. Can be blocked in Firewall.	M
SC	TCP	600-1023	ELAN	CS, EM, Management Stations	Ephemeral ports for FTP data transfers & RLOGIN	Typically handled using TCP and FTP connection tracking in the firewalls	M

Task	L4 proto col (TCP/ UDP)	Port numb er or range	Interface	Source	Description	Comments	AR Rules (D = Def ault, M = Mandatory)
SC	TCP	1024-5 000	ELAN	SS (EM), TM, CS, alternate CS, man agement stations	Ephemeral ports	Typically handled using TCP connection tracking in the firewall s	M
	TCP	2010	ELAN	CS	CEMUX (PRI/BRI D-Channels)		
SC	TCP	6666	ELAN	CS, UCM	Config Proce ss	Used for SNMP and NTP config uration pro pagation.	D
MGM T	TCP	15080	ELAN	EM	XMSG	Used by Element Manager	M
SC	TCP	32782	ELAN	CS	CEMUX (PRI/BRI D-Channels)		M
SC	TCP	32783	ELAN	CS	CEMUX (PRI/BRI D-Channels)		
SC	TCP	32786	ELAN	CS	IPMG DB Sync		D
SC	TCP	32788	ELAN	CS	RPC MAIN / RPC GW	preassigne d RPC port.	M
SC	TCP	32789	ELAN	CS	RPC INSTA LL/ RPC GW INSTALL	preassigne d RPC port. Applicable for Co-res and VxWor ks	M
SC	UDP	111	ELAN	CS (active and any alternates)	Sunrpc-portm apper	Remote Procedure Calls	M
MGM T	UDP	161	ELAN	TM, Man agement Systems	SNMP query	SNMP Man agement	D

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments	AR Rules (D = Default, M = Mandatory)
MGMT	UDP	162	ELAN		SNMP Trap Receiver	Open but not used. Can be blocked in Firewall.	D
SC	UDP	500	ELAN	Any CS1K element	IPsec IKE	Required if ISSS is used. Source port 500.	D
SC	UDP	600-1023	ELAN	CS	Ephemeral UDP ports for Sun RPC portmapper requests	Typically handled using TCP, RPC and FTP connection tracking in the firewalls	M
SC	UDP	15000	ELAN	CS (active, inactive, alternates)	rudp HB	source port 15000	M
SC	UDP	15001	ELAN	CS (active, inactive, alternates)	CS State Change broadcasts	source port 15000	
SC	UDP	15010	ELAN	CS	AFS	source port 15010	M
SC	UDP	15011	ELAN	CS	AFS	source port 15011	M
	UDP	17185	ELAN		proprietary	Open but not used. Can be blocked in Firewall.	
SC	UDP	31500-31504	ELAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication	
SC	UDP	32779	ELAN	CS	IPMG Heartbeat	source port 32779	M
SC	UDP	32780	ELAN	CS	IPMG Heartbeat Monitor	source port 32779	M

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments	AR Rules (D = Default, M = Mandatory)
SC	ESP (protocol number 50)		TLAN	Any CS1K element	IPsec, ESP - Encapsulating Security Payload	Required if ISSS is used.	n/a
MGMT	TCP	20	TLAN	EM, management stations	FTP data port	Not Req'd if TCP connection tracking used.	
MGMT	TCP	21	TLAN	EM, management stations	FTP Control Port	File Transfers	
MGMT	TCP	22	TLAN	UCM, EM, SS, CS, management stations	SSH	Secure Interactive logon, file transfers	
MGMT	TCP	23	TLAN	Management Stations	TELNET	Remote Login	D
SC	TCP	111	TLAN		Sunrpc-portmapper	Open but not used. Can be blocked in Firewall.	
MGMT	TCP	513	TLAN	UCM, EM, SS, CS, management stations	RLOGIN	Remote Login	D
SC	TCP	600-1023	TLAN	Management Stations	Ephemeral ports for FTP data transfers & RLOGIN	Typically handled using TCP and FTP connection tracking in the firewalls	M
SC	TCP	1024-5000	TLAN	Management Stations	Ephemeral ports	Typically handled using TCP connection tracking in the firewalls	M

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments	AR Rules (D = Default, M = Mandatory)
SC	TCP	6666	TLAN		Config Process	Open but not used. Can be blocked in Firewall.	D
SC	TCP	32786	TLAN		IPMG DB Sync	Open but not used. Can be blocked in Firewall.	
SC	TCP	32788	TLAN		RPC MAIN / RPC GW	preassigned RPC port. Open but not used. Can be blocked in Firewall.	
SC	TCP	32789	TLAN		RPC INSTALL / RPC GW INSTALL	preassigned RPC port. Open but not used. Can be blocked in Firewall.	
SC	UDP	111	TLAN		Sunrpc-portmapper	Open but not used. Can be blocked in Firewall.	
MGMT	UDP	162	TLAN		SNMP Trap Receiver	Open but not used. Can be blocked in Firewall.	
SC	UDP	500	TLAN	Any CS1K element	IPsec IKE	Required if ISSS is used. Source port 500.	D

Task	L4 proto col (TCP/ UDP)	Port numb er or range	Interface	Source	Description	Comments	AR Rules (D = Def ault, M = Mandatory)
SC	UDP	15001	TLAN		CS State Change broadcasts	Open but not used. May be blocked in firewall.	
SC	UDP	15010	TLAN		AFS	Open but not used. May be blocked in firewall. source port 15010	M
SC	UDP	15011	TLAN		AFS	Open but not used. May be blocked in firewall.	M
	UDP	17185	TLAN		proprietary	Open but not used. Can be blocked in Firewall.	
SC	UDP	31500- 31504	TLAN	UCM, Prim ary, UCM Backup	Radius Rep lies (source port 1812)	Central Aut hentication	D
SC	UDP	32779	TLAN		IPMG HeartB eat	Open but not used. Can be blocked in Firewall.	
SC	UDP	32780	TLAN		IPMG HeartB eat Monitor	Open but not used. Can be blocked in Firewall.	
Media	UDP (RT P, SRTP)	5392- 5583 (DB1) 5200- 5391 (DB2)	TLAN of DSP Daughte rboards	IP phones, MGCs, VGMCS, voice GWs	RTCP, RTP (Odd numbers are for RTCP and even numbers are for RTP)	Voice Media	n/a

Co-resident (Linux) Call Server port numbers

where

BASE = Linux Base

CS = Coresident Call Server

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	ESP (protocol number 50)		ELAN	Any CS1K element	IPsec, ESP - Encapsulating Security Payload	Required if ISSS is used.
Base	ICMP		ELAN	UCM, SS, CS		
Base	TCP	20	ELAN	MGC, VGM C, SS, TM, GR CS, mate CS, backup servers, management stations	FTP data port	Not Req'd if TCP connection tracking used.
Base	TCP	21	ELAN	MGC, VGM C, SS, TM, GR CS, mate CS, backup servers, management stations	FTP Ctrl Port	Insecure File Transfers
Base	TCP	22	ELAN	UCM, management stations, EM	SSH	Secure Interactive logon, file transfers
Base	TCP	23	ELAN	Management Systems, UCM, MGC, VGMC, CS	TELNET	Interactive logon
Base	TCP	80	ELAN	Management Stations	http	Web Interface
CS	TCP	111	ELAN		Sunrpc-port mapper	Open but not used. Can be blocked in Firewall.
Base	TCP	443	ELAN	Management Systems	https	Secure Web Interface
Base	TCP	513	ELAN	SS, Management stations	rlogin	Remote Login

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
SS	TCP	705	Loopback	Internal	SS-Subagent	Loopback Interface Only, can be blocked on ELAN/TLAN by firewall.
Base	TCP	2000	ELAN	Management Stations	Gryphon	Web Interface
Base	TCP	3306	ELAN	Internal	MySQL	Local Database Access
Base	TCP	6666	ELAN	CS, SS, VGMC, MGC, UCM	Config Process	Used for SNMP and NTP configuration propagation.
CS	TCP	8888	ELAN	Contact Center, Call Pilot, MLS, SS	AML	3rd Party Call Control
CS	TCP	15000	ELAN	MGC, VGMC, SS	pbxLink	
CS	TCP	15081	ELAN	EM	Xmsg Server	For CS 1000 Element Manager
Base	TCP	15086	ELAN		Gryphon	pcap Control
Base	TCP	25100-25200	ELAN	Management Stations, MGC, VGMC, SS, Backup Servers	FTP Data Ports	Typically handled using FTP connection tracking in the firewalls
CS	TCP	32781	ELAN	MGC	IPMG SSD	
CS	TCP	32784	ELAN	MGC	IPMG TTY	
CS	TCP	32788	ELAN	MGC	RPC MAIN / RPC GW	preassigned RPC port.
CS	TCP	32789	ELAN	MGC	RPC INSTALL/ RPC GW INSTALL	preassigned RPC port.

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	TCP	33700-61000	ELAN	UCM, SS, MGC, VG MC, TM, Management Stations, Contact Center, CallPilot	Ephemeral ports	Typically handled using TCP and FTP connection tracking in the firewalls
Base	UDP	53	TLAN	SS	DNS	
CS	UDP	111	ELAN	MGC	Sunrpc-port mapper	RPC Service for MGC
Base	UDP	123	ELAN	External NTP Server	NTP	Time Synchronization. Source port 500.
Base	UDP	161	ELAN	Management Systems, TM	SNMP query	
Base	UDP	500	ELAN	Any CS1K element	IPsec IKE	Required if ISSS is used. Source port 500
Base	UDP	514	ELAN	Linux Elements	Syslog	
CS	UDP	1929	ELAN	TM	DBA CDR/TRF	Used by TM
CS	UDP	2058-2185	ELAN	TM	DBA Data	Used by TM
CS	UDP	15000	ELAN	CS	RUDP PBXlink from CS	
Base	UDP	15010	ELAN	SS, MGC, VGMC, inactive CS	AFS	Source Port 15010
Base	UDP	15011	ELAN	SS, MGC, VGMC, inactive CS	AFS	Source Port 15011
CS	UDP	31500-31504	ELAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication
CS	UDP	32779	ELAN	MGC	IPMG Heart Beat	source port 32779, 32780

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
CS	UDP	32780	ELAN	MGC	IPMG HeartBeat Monitor	source port 32779
Base	UDP	33434-33524	ELAN	ANY	Traceroute	
Base	UDP	33600-33699	ELAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication
Base	ESP (protocol number 50)		TLAN	Any CS1K element	IPsec, ESP - Encapsulating Security Payload	Required if ISSS is used.
Base	ICMP		TLAN	UCM, SS, CS		
Base	TCP	20	TLAN	backup servers, management stations	FTP data port	Not Req'd if TCP connection tracking used.
Base	TCP	21	TLAN	backup servers, management stations	FTP Ctrl Port	Insecure File Transfers
Base	TCP	22	TLAN	UCM, management stations	SSH	Secure Interactive logon, file transfers
Base	TCP	23	TLAN	UCM, management stations	TELNET	Interactive logon
Base	TCP	80	TLAN	Management Stations	http	Web Interface
Base	TCP	443	TLAN	Management Stations	https	Secure Web Interface
Base	TCP	513	TLAN	Remote Management Systems	rlogin	Interactive logon (when rlogin is enabled)
Base	TCP	705	Loopback	Internal	SS-Subagent	Loopback Interface Only, can be blocked on ELAN/TLAN by firewall.

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	TCP	2000	TLAN	Management Stations	Gryphon	Web Interface
Base	TCP	3306	TLAN	Internal	MySQL	Local Database Access
Base	TCP	6666	TLAN	CS, SS, VGMC, MGC, UCM	Config Process	Typically uses ELAN only
Base	TCP	15086	TLAN		Gryphon	pcap Control
Base	TCP	25100-25200	TLAN	backup servers, management stations	FTP Data Ports	Typically handled using FTP connection tracking in the firewalls
Base	UDP	31500-31504	TLAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication
Base	TCP	33700-61000	TLAN	UCM, Management Stations, Backup Servers	Ephemeral ports	Typically handled using TCP and FTP connection tracking in the firewalls
Base	UDP	53	TLAN	SS	DNS	
Base	UDP	123	TLAN	External NTP Server	NTP, source port 123	Time Synchronization
Base	UDP	161	TLAN	TM, SNMP Management Systems	SNMP query	It is recommended to use ELAN
Base	UDP	500	TLAN	Any CS1K element	IPsec IKE	Required if ISSS is used. Source port 500
Base	UDP	514	TLAN	Linux Elements	Syslog	
Base	UDP	15010	TLAN	SS, MGC, VGMC, CS	AFS	

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	UDP	15011	TLAN	SS, MGC, VGMC, CS	AFS	
Base	UDP	33600-33699	TLAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication

Signaling Server port numbers

Note: Various combinations of the following Linux applications can be configured in co-resident configurations. The resulting port usage for a "co-resident" server is the superset of the ports for the constituent elements.

where

BASE = Linux Base

VTRK = IP Virtual Trunks

TPS = UNISTim Terminal Proxy Server

Table 114
Signaling Server port numbers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	ESP (protocol number 50)		ELAN	Any CS1K element	IPsec, ESP - Encapsulating Security Payload	Required if ISSS is used.
Base	ICMP		ELAN	UCM, SS, CS		
Base	TCP	20	ELAN	UCM, VGM Cs, EM, management stations	FTP data port	Not Req'd if TCP connection tracking used.
Base	TCP	21	ELAN	UCM, VGM Cs, EM, management stations	FTP Ctrl Port	Insecure File Transfers
Base	TCP	22	ELAN	Management Stations, UCM	SSH	Secure Interactive logon

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	TCP	23	ELAN	Management Stations, UCM	TELNET	Interactive logon
Base	TCP	80	ELAN	UCM, management stations	http	Web Interface
Base	TCP	443	ELAN	Management Stations	https	Secure Web Interface
Base	TCP	705	ELAN	Internal	SS-Subagent	Loopback Interface Only
Base	TCP	2000	ELAN	Management Stations	Gryphon	Web Interface
Base	TCP	3306	ELAN	Internal	MySQL	Local Database Access
Base	TCP	6666	ELAN	CS	Config Process	Used for SNMP and NTP configuration propagation.
Base	TCP	15080	ELAN	EM	xmsg server	Used by Element Manager
Base	TCP	15086	ELAN		Gryphon	PCAP Control
Base	TCP	25100-25200	ELAN	VGMC, CS, SS, Management Stations	FTP Data Ports	Typically handled using FTP connection tracking in the firewalls
Base	TCP	33700-61000	ELAN	ANY	Ephemeral ports	Typically handled using TCP and FTP connection tracking in the firewalls
Base	UDP	53	ELAN		DNS	
Base	UDP	67	ELAN	VGMC	bootp server	VGMC boot
Base	UDP	123	ELAN	External NTP Server	NTP, source port 123	Time Synchronization
Base	UDP	161	ELAN	TM, SNMP Management Systems	SNMP query	

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	UDP	500	ELAN	Any CS1K element	IPsec IKE	Required if ISSS is used. Source port 500.
Base	UDP	514	ELAN	Linux Elements	Syslog	
Base	UDP	15000	ELAN	CS (active, inactive)	RUDP	source port 15000
Base	UDP	15001	ELAN	CS	CS State Change broadcasts	source port 15000
Base	UDP	15002	ELAN	Internal	RUDP from CS in CoRes Mode	source port 15000
Base	UDP	15010	ELAN		AFS	Open but not used. Can be blocked in Firewall.
Base	UDP	15011	ELAN		AFS	Open but not used. Can be blocked in Firewall.
TPS	UDP	16540	ELAN	Other SS(tps) in same node.	TPS -> TPS, communications for Load Balancing	Primarily uses TLAN
TPS (ncs)	UDP	16501	ELAN	Other SS(tps), NRS in network.	Network Connect Server for Network Virtual Office	Primarily uses TLAN
Base	UDP	33434-33524	ELAN	ANY	Traceroute	
Base	UDP	33600-33699	ELAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication
Base	ESP (protocol number 50)		TLAN	Any CS1K element	IPsec, ESP - Encapsulating Security Payload	Required if ISSS is used.
Base	ICMP		TLAN	UCM, SS, CS	Health Checks, etc	

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
	TCP	20	TLAN	UCM, VGM Cs, EM, management stations	FTP data port	Not Req'd if TCP connection tracking used.
Base	TCP	21	TLAN	UCM, VGM Cs, EM, management stations	FTP Ctrl Port	Insecure File Transfers
Base	TCP	22	TLAN	Management Stations, UCM	SSH	Secure Interactive logon
Base	TCP	23	TLAN	Management Stations, UCM	TELNET	Interactive logon
Base	TCP	80	TLAN, TLAN-nodeIP	UCM, management stations	http	Web Interface
Base	TCP	443	TLAN, TLAN-nodeIP	Management Stations	https	Secure Web Interface
Base	TCP	705	TLAN	Internal	SS-Subagent	Loopback Interface Only
VTRK	TCP	1718	TLAN (nodeIP)		H.323	Not Used.
VTRK	TCP	1719	TLAN (nodeIP)	SS(vtrk), NRS (gk), other H.323 devices	H.323/H.245	H.323 Vtrk signaling between GW's.
VTRK	TCP	1720	TLAN (nodeIP)	SS(vtrk), other H.323 devices	H.323/H.245	H.323 Vtrk signaling between GW's.
Base	TCP	2000	TLAN, TLAN (nodeIP)	Management Stations	Gryphon	
Base	TCP	3306	TLAN	Internal	MySQL	Local Database Access
VTRK	TCP	5060	TLAN (nodeIP)	SS(vtrk), NRS, other SIP devices	SIP	SIP Signaling

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
VTRK	TCP	5061	TLAN (nodelP)	SS(vtrk), NRS, other SIP devices	SIP/TLS	Secure SIP (TLS) Signaling
Base	TCP	6666	TLAN	CS	Config Process	Used for SNMP and NTP configuration propagation.
VTRK (amlfe)	TCP	8888	TLAN	Contact Center, Call Pilot, MLS	AML	3rd Party Call Control
Base	TCP	15086	TLAN		Gryphon	pcap Control
Base	TCP	15080	TLAN	EM	xmsg server	Used by Element Manager
Base	TCP	25100-25200	TLAN	Management Stations, UCM	FTP Data Ports	Typically handled using FTP connection tracking in the firewalls
Base	TCP	33700-61000	TLAN	UCM, management stations, EM, NRS, SS(GK), SS(vtrk), Other SIP or H.323 GW	Ephemeral ports	Typically handled using TCP & FTP connection tracking in the firewalls
VTRK	TCP	40000-42400	TLAN (nodelP)	SS (vtrk), other H.323 devices	H.245 Signaling	
Base	UDP	53	TLAN		DNS	
TPS	UDP	69	TLAN	IP Phones	tftp	Firmware Download for IP Phones (Req'd for Phase 1 phones)
Base	UDP	123	TLAN	External NTP Server	NTP, source port 123	Time Synchronization
Base	UDP	161	TLAN	TM, SNMP Management Systems	SNMP query	It is recommended to use ELAN

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	UDP	500	TLAN	Any ISSS Target	IPsec IKE, source port 500	Required if ISSS is used.
Base	UDP	514	TLAN	Linux Elements	Syslog	
VTRK	UDP	1718	TLAN (nodeIP)		H.323	Not Used.
VTRK	UDP	1719	TLAN (nodeIP)	SS(vtrk), NRS (gk), other H.323 devices	H.323	RAS Signaling between VTRK and NRS (gk)
VTRK	UDP	1720	TLAN (nodeIP)	SS(vtrk), other H.323 devices	H.323	H.323 Vtrk signaling between GW's.
TPS (csv)	UDP	4100	TLAN (nodeIP)	UNISTIM IP Phones	UNISTim	Connection Server
TPS (csv)	UDP	4101	TLAN (nodeIP)	UNISTIM IP Phones	UNISTim / DTLS	Connection Server (secure)
VTRK	UDP	5060	TLAN (nodeIP)	SS(vtrk), NRS (sps)	SIP (source port 5060)	SIP Signaling
TPS	UDP	5100	TLAN	IP Phones	UNISTim	Terminal Proxy Server
TPS	UDP	5101	TLAN	IP Phones	UNISTim / DTLS	Terminal Proxy Server (secure)
TPS	UDP	5105	TLAN	Phase 2 and later IP Phones	UFTP	Firmware Download UNISTM IP Phones
TPS	UDP	7300	TLAN	IP Phones	UNISTim	TPS Load Balancing
TPS	UDP	7301	TLAN	IP Phones	UNISTim / DTLS	TPS Load Balancing (secure)
TPS	UDP	10000	TLAN	IP Phones	Echo Server	NAT Discovery
Base	UDP	15010	TLAN		AFS	Open but not used. Can be blocked in Firewall.

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	UDP	15011	TLAN		AFS	Open but not used. Can be blocked in Firewall.
TPS (ncs)	UDP	16501	TLAN	Other SS(tps), NRS in network.	Network Connect Server	Network Virtual Office
TPS (ncs)	UDP	16502	TLAN	NRS (ncs) <-> TPS (ncs)	Network Connect Server	NCS - CS2100
TPS	UDP	16540	TLAN	Other SS (tps) in same node.	TPS -> TPS (TPS)	TPS to TPS communications for Load Balancing
Base	UDP	16550	TLAN	Other SS in node	SS <-> SS	Leader/Follower Election
Base	UDP	33434-33524	ELAN	ANY	Traceroute	
Base	UDP	33600-33699	TLAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication

SIP Lines Gateway Port Numbers

Note: Various combinations of the following Linux applications can be configured in co-resident configurations. The resulting port usage for a "co-resident" server is the superset of the ports for the constituent elements.

where

Base = Linux Base

SIPL = SIP Lines

Table 115
SIP Lines Gateway Port Numbers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	ESP (protocol number 50)		ELAN	Any CS1K element	IPsec, ESP - Encapsulating Security Payload	Required if ISSS is used.
Base	ICMP		ELAN	UCM, SS, CS		
Base	TCP	20	ELAN	UCM, EM, management stations	FTP data port	Not Req'd if TCP connection tracking used.
Base	TCP	21	ELAN	UCM, EM, management stations	FTP Ctrl Port	Insecure File Transfers
Base	TCP	22	ELAN	Management Stations, UCM	SSH	Secure Interactive logon
Base	TCP	23	ELAN	Management Stations, UCM	TELNET	Interactive logon
Base	TCP	80	ELAN	UCM, management stations	http	Web Interface
Base	TCP	443	ELAN	Management Stations	https	Secure Web Interface
Base	TCP	705	ELAN	Internal	SS-Subagent	Loopback Interface Only
Base	TCP	2000	ELAN	Management Stations	Gryphon	Web Interface
Base	TCP	3306	ELAN	Internal	MySQL	Local Database Access
Base	TCP	6666	ELAN	CS	Config Process	Used for SNMP and NTP configuration propagation.
Base	UDP	15010	ELAN		AFS	Open but not used. Can be blocked in Firewall.
Base	UDP	15011	ELAN		AFS	Open but not used. Can be blocked in Firewall.
Base	TCP	15080	ELAN	EM	xmsg server	Used by Element Manager

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	TCP	15086	ELAN		Gryphon	PCAP Control
Base	TCP	25100-25200	ELAN	CS, SS, Management Stations	FTP Data Ports	Typically handled using FTP connection tracking in the firewalls
Base	TCP	33700-61000	ELAN	CS, SS, EM, UCM, Management Stations	Ephemeral ports	Typically handled using TCP and FTP connection tracking in the firewalls
Base	UDP	53	ELAN		DNS	
Base	UDP	67	ELAN		bootp server	Open but not used. Can be blocked in Firewall.
Base	UDP	123	ELAN	External NTP Server	NTP, source port 123	Time Synchronization
Base	UDP	161	ELAN	TM, SNMP Management Systems	SNMP query	
Base	UDP	500	ELAN	Any CS1K element	IPsec IKE	Required if ISSS is used. Source port 500.
Base	UDP	514	ELAN	Linux Elements	Syslog	
Base	UDP	15000	ELAN	CS (active, inactive, alternatives)	RUDP	source port 15000
Base	UDP	15001	ELAN	CS (active, inactive, alternates)	CS State Change broadcasts	source port 15000
Base	UDP	15002	ELAN	Internal	RUDP from CS in CoRes Mode	source port 15000
Base	UDP	15010	ELAN		AFS	Open but not used. Can be blocked in Firewall.

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	UDP	15011	ELAN		AFS	Open but not used. Can be blocked in Firewall.
Base	UDP	33434-33524	ELAN	ANY	Traceroute	
Base	UDP	33600-33699	ELAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication
Base	ESP (protocol number 50)		TLAN	Any CS1K element	IPsec, ESP - Encapsulating Security Payload	Required if ISSS is used.
Base	ICMP		TLAN	UCM, SS, CS	Health Checks, etc	
Base	TCP	20	TLAN	UCM, EM, management stations	FTP data port	Not Req'd if TCP connection tracking used.
Base	TCP	21	TLAN	UCM, EM, management stations	FTP Ctrl Port	Insecure File Transfers
Base	TCP	22	TLAN	Management Stations, UCM	SSH	Secure Interactive logon
Base	TCP	23	TLAN	Management Stations, UCM	TELNET	Interactive logon
Base	TCP	80	TLAN	UCM, management stations	http	Web Interface
Base	TCP	443	TLAN	Management Stations	https	Secure Web Interface
Base	TCP	705	TLAN	Internal	SS-Subagent	Loopback Interface Only
Base	TCP	2000	TLAN	Management Stations	Gryphon	
Base	TCP	3306	TLAN	Internal	MySQL	Local Database Access
SIPL	TCP	5070	TLAN	SIP Phones	SIP	SIP Signaling with SIP Phones.

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
SIPL	TCP	5071	TLAN	SIP Phones	SIP/TLS	Secure SIP Signaling with SIP Phones.
Base	TCP	6666	TLAN	CS	Config Process	Used for SNMP and NTP configuration propagation.
Base	TCP	15086	TLAN		Gryphon	pcap Control
Base	TCP	15080	TLAN	EM	xmsg server	Used by Element Manager
Base	TCP	25100-25200	TLAN	Management Stations, UCM, EM	FTP Data Ports	Typically handled using FTP connection tracking in the firewalls
Base	TCP	33700-61000	TLAN	UCM, management stations, EM, SIP Phones	Ephemeral ports	Typically handled using TCP & FTP connection tracking in the firewalls
Base	UDP	53	TLAN		DNS	
Base	UDP	123	TLAN	External NTP Server	NTP, source port 123	Time Synchronization
Base	UDP	161	TLAN	TM, SNMP Management Systems	SNMP query	It is recommended to use ELAN
Base	UDP	500	TLAN	Any ISSS Target	IPsec IKE, source port 500	Required if ISSS is used.
Base	UDP	514	TLAN	Linux Elements	Syslog	
SIPL	UDP	5070	TLAN	SIP Phones	SIP	SIP Signaling with SIP Phones.
Base	UDP	15010	TLAN		AFS	Open but not used. Can be blocked in Firewall.

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	UDP	15011	TLAN		AFS	Open but not used. Can be blocked in Firewall.
Base	UDP	16550	TLAN	Other SS in node	SS <-> SS	Leader/Follower Election
Base	UDP	33434-33524	ELAN	ANY	Traceroute	
Base	UDP	33600-33699	TLAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication

Element Manager Port Numbers

Note: Various combinations of the following Linux applications can be configured in co-resident configurations. The resulting port usage for a "co-resident" server is the superset of the ports for the constituent elements.

where

BASE = Linux Base

EM = Element Manager

Table 116
Element Manager Port Numbers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	ESP (protocol number 50)		ELAN	Any CS1K element	IPsec, ESP - Encapsulating Security Payload	Required if ISSS is used.
Base	ICMP		ELAN	UCM, SS, CS		
Base	TCP	20	ELAN	UCM, VG MCs, EM, management stations	FTP data port	Not Req'd if TCP connection tracking used.

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	TCP	21	ELAN	UCM, VG MCs, EM, management stations	FTP Ctrl Port	Insecure File Transfers
Base	TCP	22	ELAN	Management Stations, UCM	SSH	Secure Interactive logon
Base	TCP	23	ELAN	Management Stations, UCM	TELNET	Interactive logon
Base	TCP	80	ELAN	UCM, management stations	http	Web Interface
Base	TCP	443	ELAN	Management Stations	https	Secure Web Interface
Base	TCP	705	ELAN	Internal	SS-Subagent	Loopback Interface Only
Base	TCP	2000	ELAN	Management Stations	Gryphon	Web Interface
Base	TCP	3306	ELAN	Internal	MySQL	Local Database Access
EM	TCP	4789	ELAN	Management Stations	EM Virtual Terminal Java app to EM	
Base	TCP	6666	ELAN	CS	Config Processes	Used for SNMP and NTP configuration propagation.
Base	TCP	15086	ELAN		Gryphon	PCAP Control
Base	TCP	25100-25200	ELAN	VGMC, CS, SS, Management Stations	FTP Data Ports	Typically handled using FTP connection tracking in the firewalls

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	TCP	33700-61000	ELAN	ANY	Ephemeral ports	Typically handled using TCP and FTP connection tracking in the firewalls
Base	UDP	53	ELAN		DNS	
Base	UDP	67	ELAN	VGMC	bootp server	VGMC boot
Base	UDP	123	ELAN	External NTP Server	NTP, source port 123	Time Synchronization
Base	UDP	161	ELAN	TM, SNMP Management Systems	SNMP query	
EM	UDP	162	ELAN	CS	SNMP Traps	BCC
Base	UDP	500	ELAN	Any CS1K element	IPsec IKE	Required if ISSS is used. Source port 500.
Base	UDP	514	ELAN	Linux Elements	Syslog	
Base	UDP	15010	ELAN		AFS	Open but not used. Can be blocked in Firewall.
Base	UDP	15011	ELAN		AFS	Open but not used. Can be blocked in Firewall.
Base	UDP	33434-33524	ELAN	ANY	Traceroute	
Base	UDP	33600-33699	ELAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication
Base	ESP (protocol number 50)		TLAN	Any CS1K element	IPsec, ESP - Encapsulating Security Payload	Required if ISSS is used.

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	ICMP		TLAN	UCM, SS, CS	Health Checks , etc	
	TCP	20	TLAN	UCM, VG MCs, EM, management stations	FTP data port	Not Req'd if TCP connection tracking used.
Base	TCP	21	TLAN	UCM, VG MCs, EM, management stations	FTP Ctrl Port	Insecure File Transfers
Base	TCP	22	TLAN	Management Stations, UCM	SSH	Secure Interactive logon
Base	TCP	23	TLAN	Management Stations, UCM	TELNET	Interactive logon
Base	TCP	80	TLAN, TLAN-nodeIP	UCM, management stations	http	Web Interface
Base	TCP	443	TLAN, TLAN-nodeIP	Management Stations	https	Secure Web Interface
Base	TCP	705	TLAN	Internal	SS-Subagent	Loopback Interface Only
Base	TCP	2000	TLAN, TLAN (nodeIP)	Management Stations	Gryphon	
Base	TCP	3306	TLAN	Internal	MySQL	Local Database Access
EM	TCP	4789	TLAN	Management Stations	EM Virtual Terminal Java app to EM	
Base	TCP	6666	TLAN	CS	Config Processes	Used for SNMP and NTP configuration propagation.
Base	TCP	15086	TLAN		Gryphon	pcap Control

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	TCP	25100-25200	TLAN	Management Stations, UCM	FTP Data Ports	Typically handled using FTP connection tracking in the firewalls
Base	TCP	33700-61000	TLAN	UCM, management stations, EM, NRS, SS(GK), SS(vtrk), Other SIP or H.323 GW	Ephemeral ports	Typically handled using TCP & FTP connection tracking in the firewalls
Base	UDP	53	TLAN		DNS	
Base	UDP	123	TLAN	External NTP Server	NTP, source port 123	Time Synchronization
Base	UDP	161	TLAN	TM, SNMP Management Systems	SNMP query	It is recommended to use ELAN
EM	UDP	162	TLAN		SNMP Traps	Open but not used. Can be blocked in Firewall.
Base	UDP	500	TLAN	Any ISSS Target	IPsec IKE, source port 500	Required if ISSS is used.
Base	UDP	514	TLAN	Linux Elements	Syslog	
Base	UDP	15010	TLAN		AFS	Open but not used. Can be blocked in Firewall.

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	UDP	15011	TLAN		AFS	Open but not used. Can be blocked in Firewall.
Base	UDP	33600-33699	TLAN	UCM	Radius	Central Authentication. (source port 1812)

Network Routing Service Port Numbers

Note: Various combinations of the following Linux applications can be configured in co-resident configurations. The resulting port usage for a "co-resident" server is the superset of the ports for the constituent elements.

where

BASE = Linux Base

NRS (GK) = H.323 Gatekeeper

NRS (SIP) = SIP Proxy Server or SIP Redirect Server

NRS (NCS) = Network Connect Server

Table 117
Network Routing Service Port Numbers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	ICMP		ELAN	UCM, NRS, SS	Health Check between NRS primary/backup, etc	
Base	TCP	20	ELAN	Management Stations, UCM, NRS, 4.x/5.x failsafe NRS	FTP data port	Not Req'd if TCP connection tracking used.
Base	TCP	21	ELAN	Management Stations	FTP Ctrl Port	Insecure File Transfers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	TCP	22	ELAN	Management Stations, UCM, NRS	SSH / sFTP	Secure Interactive logon & File Transfers
Base	TCP	23	ELAN	Management Stations, UCM	TELNET	Insecure Interactive logon
Base	TCP	80	ELAN	Management Stations	http	Web Interface
Base	TCP	443	ELAN	Management Stations	https	Web Interface
Base	TCP	2000	ELAN	Management Stations	Gryphon	Web Interface
Base	TCP	3306	ELAN	NRS <-> NRS	MySQL	Database Access, typically uses TLAN
NRS (sip)	TCP	5060	ELAN	SS(vtrk), NRS, other SIP devices	SIP	SIP Signaling
NRS (sip)	TCP	5061	ELAN	SS(vtrk), NRS, other SIP devices	SIP/TLS	Secure SIP (TLS) Signaling
Base	TCP	6666	ELAN	UCM	Config Processes	Used for SNMP and NTP configuration propagation.
Base	TCP	15086	ELAN		Gryphon	pcap Control
Base	TCP	25100-25200	ELAN	4.x/5.x Failsafe NRS, Management Stations	FTP Data Ports	Typically handled using FTP connection tracking in the firewalls
Base	TCP	33700-61000	ELAN	Backup Servers, NRS, Failsafe NRS, etc	Ephemeral ports	Typically handled using TCP and FTP connection tracking in the firewalls

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	UDP	53	ELAN		DNS	
Base	UDP	123	ELAN	External NTP Server	NTP, source port 123	Time Synchronization
Base	UDP	161	ELAN	TM, SNMP Management Systems	SNMP query	
Base	UDP	514	ELAN	Linux Elements	Syslog	
NRS (gk)	UDP	1719	ELAN	SS (vtrk), NRS (gk)	H.323 - RAS Signaling between Vtrk GW and GK/NRS	Typically not used on ELAN.
NRS (sip)	UDP	5060	ELAN	SS(vtrk), NRS, other SIP devices	SIP	SIP Signaling
Base	UDP	15010	ELAN		AFS	Open but not used. Can be blocked in Firewall.
Base	UDP	15011	ELAN		AFS	Open but not used. Can be blocked in Firewall.
NRS (ncs)	UDP	16500	ELAN	SS(tps)	Network Connect Server for Network Virtual Office	Primarily uses TLAN
NRS (ncs)	UDP	16501	ELAN	SS(tps)	Network Connect Server for Network Virtual Office	Primarily uses TLAN
Base	UDP	33434-33524	ELAN	ANY	Traceroute	
Base	UDP	33600-33699	ELAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	ICMP		TLAN	UCM, NRS, SS	Health Check between NRS primary/backup, etc	
	TCP	20	TLAN	Management Stations, UCM, NRS, 4.x/5.x failsafe NRS	FTP data port	Not Req'd if TCP connection tracking used.
Base	TCP	21	TLAN	Management Stations	FTP Ctrl Port	Insecure File Transfers
Base	TCP	22	TLAN	Management Stations, UCM, NRS	SSH / sFTP	Secure Interactive logon & File Transfers
Base	TCP	23	TLAN	Remote Management Systems	TELNET	Insecure Interactive logon
Base	TCP	80	TLAN	Management Stations	http	Web Interface
Base	TCP	443	TLAN	Management Stations	https	Web Interface
Base	TCP	2000	TLAN	Management Stations	Gryphon	Web Interface
Base	TCP	3306	TLAN	Mate NRS	MySQL	Remote Data Sync
NRS (sip)	TCP	5060	TLAN	SS(vtrk), NRS, other SIP devices	SIP	SIP Signaling
NRS (sip)	TCP	5061	TLAN	SS(vtrk), NRS, other SIP devices	SIP/TLS	Secure SIP (TLS) Signaling
Base	TCP	6666	TLAN	UCM	Config Processes	Used for SNMP and NTP configuration propagation.
Base	TCP	15086	TLAN		Gryphon	pcap Control

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	TCP	25100-25200	TLAN	4.x/5.x Failsafe NRS, Management Stations	FTP Data Ports	Typically handled using FTP connection tracking in the firewalls
Base	TCP	33700-61000	TLAN	Backup Servers, NRS, Failsafe NRS, etc	Ephemeral ports	Typically handled using TCP & FTP connection tracking in the firewalls
Base	UDP	53	TLAN		DNS	
Base	UDP	123	TLAN	External NTP Server	NTP, source port 123	Time Synchronization
Base	UDP	161	TLAN	TM, SNMP Management Systems	SNMP query	It is recommended to use ELAN
Base	UDP	514	TLAN	Linux Elements	Syslog	
NRS (gk)	UDP	1719	TLAN	SS(vtrk), NRS (gk), other H.323 devices	H.323	RAS Signaling between VTRK and NRS (gk)
NRS (sip)	UDP	5060	TLAN	SS(vtrk), NRS, other SIP devices	SIP (source port 5060)	SIP Signaling
Base	UDP	15010	TLAN		AFS	Open but not used. Can be blocked in Firewall.
Base	UDP	15011	TLAN		AFS	Open but not used. Can be blocked in Firewall.
NRS (ncs)	UDP	16500	TLAN	SS(tps)	Network Connect Server for Network Virtual Office	

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
NRS (ncs)	UDP	16501	TLAN	SS(tps)	Network Connect Server for Network Virtual Office	
Base	UDP	33434-33524	TLAN	ANY	Traceroute	
Base	UDP	33600-33699	TLAN	UCM, Primary, UCM Backup	Radius Replies (source port 1812)	Central Authentication

Unified Communications Manager Port Numbers

Note: Various combinations of the following Linux applications can be configured in co-resident configurations. The resulting port usage for a "co-resident" server is the superset of the ports for the constituent elements.

where

BASE = Linux Base

UCM = Unified Communications Manager

Table 118
Unified Communications Manager Port Numbers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	ICMP		ELAN	UCM, SS, CS		
	TCP	20	ELAN	Management Stations, UCM, SRG, MGC, VGMC, CS, SS, TM	Ephemeral source FTP data port when using "active" mode.	Not Req'd if TCP connection tracking used.
Base	TCP	21	ELAN	Management Stations, UCM, SRG, MGC, VGMC, CS, SS, TM	FTP Ctrl Link	File Transfers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	TCP	22	ELAN	Management Stations, UCM, SS, MGC, VGMC, CS	SSH	Secure Interactive logon
Base	TCP	23	ELAN	Management Stations, UCM, MGC, VGMC, CS	TELNET	Insecure Interactive logon
Base	TCP	80	ELAN	Management Stations	http	Web Interface
Base	TCP	443	ELAN	Management Stations	https	Web Interface
Base	TCP	705	ELAN	Internal	SS-Subagent	Loopback Interface Only
Base	TCP	2000	ELAN	Management Stations	Gryphon	Web Interface
Base	TCP	3306	ELAN	Internal	MySQL	Local Database Access
Base	TCP	6666	ELAN	CS, SS, VGMC, MGC, UCM	Config Process	Used for SNMP and NTP configuration propagation.
UCM	TCP	8193	ELAN	UCM Members (not VxWorks)	jboss-jms	FQDN is used
Base	TCP	15086	ELAN		Gryphon	pcap Control
Base	TCP	25100-25200	ELAN	ANY	FTP Data Ports	Typically handled using FTP connection tracking in the firewalls
UCM	TCP	31000	ELAN	UCM Members (not VxWorks)	clustered JNDI Stub Download	FQDN is used
UCM	TCP	31001	ELAN	UCM Members (not VxWorks)	clustered JNDI RMI queries	FQDN is used
UCM	TCP	31002	ELAN	UCM Primary, Backup		FQDN is used

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	TCP	32768-61000	ELAN	ANY	Ephemeral ports	Typically handled using TCP and FTP connection tracking in the firewalls
UCM	TCP	45566 - 45568	ELAN	UCM Primary, Backup	JGroup protocol	FQDN is used
Base	UDP	53	ELAN		DNS	
Base	UDP	67	ELAN	VGMC	bootp server	VGMC boot
Base	UDP	123	ELAN	Any	NTP, source port 123	Time Synchronization
Base	UDP	161	ELAN	TM, SNMP Management Systems	SNMP query	
Base	UDP	514	ELAN	Linux Elements	Syslog	
UCM	UDP	1812	ELAN		RADIUS	
Base	UDP	15010	ELAN		AFS	
Base	UDP	15011	ELAN		AFS	
Base	UDP	33434-33524	ELAN	ANY	Traceroute	
Base	UDP	33600-33699	ELAN	UCM	Radius	Central Authentication. (source port 1812)
Base	ESP (protocol number 50)		TLAN		IPSEC, ESP - Encapsulated payload	Not Used.
Base	ICMP		TLAN			
	TCP	20	TLAN	Management Systems, UCM, SRG, MGC, VGMC, CS, SS, TM	Ephemeral source FTP data port when using "active" mode.	Not Req'd if TCP connection tracking used.
Base	TCP	21	TLAN	Management Systems, UCM, SRG	FTP Ctrl Link	File Transfers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
Base	TCP	22	TLAN	Management Systems, UCM	SSH	Secure Interactive logon
Base	TCP	23	TLAN	Remote Management Systems	TELNET	Insecure Interactive logon
Base	TCP	80	TLAN, TLAN-nodeIP	Management Stations	http	Web Interface
Base	TCP	443	TLAN, TLAN-nodeIP	Management Stations, UCM members (not VxWorks)	https	Web Interface
	TCP	636	TLAN	UCM Primary, Backup	LDAPS protocol for LDAP replication	requires X.509 client certificate for mutual authentication, uses FQDN
Base	TCP	705	TLAN	Internal	SS-Subagent	Loopback Interface Only
Base	TCP	2000	TLAN	Management Stations	Gryphon	Web Interface
Base	TCP	3306	TLAN	Internal	MySQL	Local Database Access
Base	TCP	6666	TLAN	CS, SS, VGMC, MGC, UCM	Config Process	Used for SNMP and NTP configuration propagation.
UCM	TCP	8193	TLAN	UCM Primary, Backup, Members (not VxWorks)	jboss-jms	FQDN is used
Base	TCP	15086	TLAN		Gryphon	pcap Control
Base	TCP	25100-25200	TLAN	ANY	FTP Data Ports	Typically handled using FTP connection tracking in the firewalls

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Source	Description	Comments
UCM	TCP	31000	TLAN	UCM Primary, Backup	clustered JNDI Stub Download	FQDN is used
UCM	TCP	31001	TLAN	UCM Primary, Backup	clustered JNDI RMI queries	FQDN is used
UCM	TCP	31002	TLAN	UCM Primary, Backup		FQDN is used
Base	TCP	32768-61000	TLAN	ANY	Ephemeral ports	Typically handled using TCP & FTP connection tracking in the firewalls
UCM	TCP	45566 - 45568	TLAN	UCM Primary, Backup	JGroup protocol	FQDN is used
Base	UDP	53	TLAN		DNS	
Base	UDP	123	TLAN	Any	NTP, source port 123	Time Synchronization
Base	UDP	161	TLAN	TM, SNMP Management Systems	SNMP query	It is recommended to use ELAN
Base	UDP	514	TLAN	Linux Elements	Syslog	
UCM	UDP	1812	TLAN	UCM Members	RADIUS	
Base	UDP	15010	TLAN		AFS	
Base	UDP	15011	TLAN		AFS	
Base	UDP	33600-33699	TLAN	UCM	Radius	Central Authentication. (source port 1812)

Telephony Manager port numbers

where

MGMT = Management

Table 119
Telephony Manager (TM) port numbers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Description	Comments
	TCP	20		FTP: Corporate directory and DBA	Microsoft default port
	TCP	21		FTP: Corporate directory and DBA	Microsoft default port
	TCP	21		FTP: TM 3.0	Microsoft default port
	TCP	25		SMTP: Alarm notification	Microsoft default port
MGMT	TCP	80	any	HTTP Web CS, Desktop Services, Web telecom billing system	Microsoft default port
MGMT	TCP	135	any	Login	RPC, SCM used by DCOM
	UDP	135		Login	RPC, SCM used by DCOM
MGMT	TCP	139	any	NetBEUI: Windows client file sharing	Microsoft default port
	UDP	161		SNMP: Alarm management and maintenance	Microsoft default port
MGMT	UDP	162	any	SNMP: Alarm traps (LD117) and maintenance window	Microsoft default port
	TCP	389		CND synchronization	Microsoft default port
	TCP	513		Rlogin: Session Connect, System Terminal, Station Admin, CPND, list manager, and ESN.	Using netstat
	TCP	636		CND synchronization	Microsoft default port (CND SSL)
MGMT	TCP	1583	any	Btrieve	Station Admin

Table 119
Telephony Manager (TM) port numbers (cont'd.)

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Description	Comments
MGMT	UDP	1929:2057	any	DBA note: 1 port per session	Session ports
	UDP	2058:2185		Data ports	
MGMT	TCP	3351	any	Btrieve	Station Admin
MGMT	TCP	5099	any	RMI: TM 3.0 DECT	Using netstat command
MGMT	TCP	4789 : 5045 (based on default port of 4789)	any	Virtual System Terminal: Note : VT uses 1 port per session. Start with 4789	The base port can be changed from 4789
	TCP	8080		HTTP: Web station	Apache Tomcat Web server

IP Phone port numbers

Table 120
IP Phone 200x, I20xx, and 11xx port numbers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Description	Comments
	UDP	4100	Ethernet	UNISlim	is the TPS
	UDP	variable	Ethernet	RTP	specified by the TPS
	UDP	5000	Ethernet	Net 6	
	UDP	5200	Ethernet	RTP	src from phone
	UDP	5201	Ethernet	RTCP	src from phone

Remote Office port numbers

Table 121
Remote Office port numbers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Description	Comments
Remote Office	TCP	12800	TLAN	signaling	
Remote Office	UDP/RTP	20480, 20482	TLAN	RTP	voice

CallPilot port numbers

Table 122
CallPilot port numbers

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Description	Comments
	TCP	20		FTP	
	TCP	21	CLAN/ ELAN	FTP	
	TCP	25	CLAN/ ELAN	SMTP	
	TCP	80	CLAN/ ELAN	HTTP	WWW
	TCP	135	CLAN/ ELAN	RTP/DCOM	Location Service
	UDP	135	CLAN/ ELAN	RTP/DCOM	Location Service
	TCP	137	CLAN/ ELAN	NETBIOS	Name Service
	UDP	137	CLAN/ ELAN	NETBIOS	Name Service
	TCP	138	CLAN/ ELAN	NETBIOS	Datagram Service
	TCP	139	CLAN/ ELAN	NETBIOS	Session Service
	TCP	143	CLAN/ ELAN	IMAP2	
	UDP	161	CLAN/ ELAN	SNMP	(if enabled)
	UDP	162	CLAN/ ELAN	SNMP trap	(if enabled)

Table 122
CallPilot port numbers (cont'd.)

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Description	Comments
	TCP	389	CLAN/ ELAN	LDAP	
	TCP	443	CLAN/ ELAN	HTTP	over SSL
	TCP	465	CLAN/ ELAN	SSMTP	(Secure SMTP)
	TCP	636	CLAN/ ELAN	LDAP	over SSL
	TCP	993		IMAP	over SSL
	TCP	1025	CLAN/ ELAN	MSDTC	
	TCP	1026	CLAN/ ELAN	MSDTC	
	TCP	1027	CLAN/ ELAN	Microsoft Distribute COM Services	
	TCP	1028	CLAN/ ELAN	Microsoft Distribute COM Services	
	TCP	1029	CLAN/ ELAN	Dialogic CTMS	
	TCP	1030	CLAN/ ELAN	Dialogic CTMS	
	TCP	1031	CLAN/ ELAN	Dialogic CTMS	
	TCP	1032	CLAN/ ELAN	Dialogic CTMS	
	TCP	1036	CLAN/ ELAN	CallPilot Middleware Maintenance Service Provider	
	TCP	1037	CLAN/ ELAN	CallPilot Call Channel Resource	
	TCP	1038	CLAN/ ELAN	CallPilot Multimedia Resource	
	TCP	1039	CLAN/ ELAN	CallPilot MCE Notification Service	

Table 122
CallPilot port numbers (cont'd.)

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Description	Comments
	TCP	1040	CLAN/ ELAN	CallPilot MCE Notification Service	
	TCP	1041	CLAN/ ELAN	CallPilot MCE Notification Service	established connection to local ports 2019
	TCP	1042	CLAN/ ELAN	CallPilot MTA	established connection to local ports 2019
	TCP	1045	CLAN/ ELAN	CallPilot Access Protocol	established connection to local ports 2019
	TCP	1046	CLAN/ ELAN	CallPilot SLEE	established connection to local ports 2019
	TCP	1047	CLAN/ ELAN	IIS	
	TCP	1048	CLAN/ ELAN	IIS	
	TCP	1095	CLAN/ ELAN	CallPilot Blue Call Router	
	TCP	1096	CLAN/ ELAN	CallPilot Blue Call Router	established connection to local ports 2019
	TCP	1148	CLAN/ ELAN	TAPI	established connection to port 8888 on the switch
	TCP	1499		ODBC for reporter database	
	TCP	2019	CLAN/ ELAN	Dialogic CTMS	established connection to local ports 1041, 1042, 1045, 1046, 1096

Table 122
CallPilot port numbers (cont'd.)

Task	L4 protocol (TCP/UDP)	Port number or range	Interface	Description	Comments
	TCP	2020	CLAN/ ELAN	Dialogic CTMS	
	TCP	5631	CLAN/ ELAN	pcAnywhere data	
	UDP	5000		Call Pilot AOS DCOM (RPC)*5	
	TCP	5000		Call Pilot AOS DCOM (RPC)*5	
	TCP	5631		pcAnywhere data	if installed
	UDP	5632	CLAN/ ELAN	pcAnywhere data	if installed
	TCP	7934	CLAN/ ELAN	IIS	
	TCP	8000	CLAN/ ELAN	Dialogic CTMS	
	TCP	10008	CLAN/ ELAN	CallPilot Access Protocol	
	TCP	38037	CLAN/ ELAN	msgsys Intel CBA:Message System	
	TCP	56325	CLAN/ ELAN	CallPilot SLEE	

Application Gateway (AG) 1000 port numbers

Table 123
AG 1000 port numbers

Application Protocol	L4 protocol (TCP/UDP)	Port number or range	Description	Comments
Telnet	TCP	23	Connection to Signaling Server to obtain DN	Voice mail applications
SMTP	TCP	25	Connection to SNMP server for message forwarding	Visual voice mail
HTTP	TCP	80	HTTP service port	General
HTTP	TCP	80	Broadcast Server push port	Broadcast server
IMAP	TCP	143	Connection to IMAP	Visual voice mail

Table 123
AG 1000 port numbers (cont'd.)

Application Protocol	L4 protocol (TCP/UDP)	Port number or range	Description	Comments
SNMP	TCP	161	SNMP service port	
LDAP	TCP	389	Connection to LDAP server	Voice mail applications
LDAP	TCP	389	Message forwarding	Visual voice mail
HTTPS	TCP	443	Smart agent service port	Smart agent
Syslog	UDP	514	Syslog service port	
Proprietary	TCP	5000	RUDP/UNISTim port for signaling with phones	Voice office applications
HTTP	TCP	8080	Outbound connection to a proxy server	
HTTPS	TCP	9001	AG admin tool service port	General
Proprietary	TCP	9005	Design studio configuration port	General
HTTP	TCP	9998	Broadcast Server push port	
Proprietary	TCP	44443	GXAS service port	IP phone 2007
RTP	TCP	50004	RTP traffic for Broadcast Server	
RTCP	UDP	50005	RTCP receive port for monitoring RTP traffic statistics	Voice office applications
HTTP	TCP	9014, 9025	AG cluster communications port	General
RTP	UDP	20480:20511	RTP receive ports for visual voice mail	Visual voice mail and zone paging
Proprietary	TCP	configurable	Connection to property management system	Guest service

Contact Center 6.0 port numbers

For Contact Center 6.0 port numbers, see Symposium documentation.

TLAN subnet stateless packet filtering

[Table 124 "TLAN subnet : Stateless packet filtering configuration"](#) (page 397) describes a stateless packet filtering configuration. The primary intent of this configuration is to secure management access to the Communication Server 1000 system using the TLAN subnet.

The table rules are for the TLAN subnet only. IP Phones are assumed to be deployed on client subnets throughout the IP network. All other TCP and UDP ports that run on the TLAN network interfaces are for system control traffic, which should not be sent through the packet filter. Optionally, drop all management traffic into the TLAN subnet.

Table 124
TLAN subnet : Stateless packet filtering configuration

Rule #	Task App/ Interface	Source IP address	Source TCP/ UDP port	Dest. IP address	Protocol type	Dest. TCP/ UDP port	Action	Description
System Management								
1	System MGMT	MGMT	ignore	TLAN subnet	any	any	Forward	Allow MGMT System
2	System MGMT	any	ignore	TLAN subnet	TCP	21	Drop	FTP
3	System MGMT	any	ignore	TLAN subnet	TCP	23	Drop	Telnet
4	System MGMT	any	ignore	TLAN subnet	TCP	80	Drop	HTTP Element Management
5	System MGMT	any	ignore	TLAN subnet	TCP	111	Drop	RPC
6	System MGMT	any	ignore	TLAN subnet	UDP	162	Drop	SNMP
7	System MGMT	any	ignore	TLAN subnet	TCP	513	Drop	rlogin
Firewall								
8	Default Rule	any	ignore	TLAN subnet	UDP	any	Forward	Default Action

TLAN subnet stateful packet filtering

[Table 125 "TLAN subnet : stateful packet filtering" \(page 398\)](#) describes rules for a stateful firewall only; they do not apply to a non-stateful firewall. IP Phones are assumed to be deployed on client subnets throughout the IP network. All other TCP and UDP ports running on the TLAN network interfaces are for system control traffic, which should not be sent through the packet filter. Optionally, drop all management traffic into the TLAN subnet.

Table 125
TLAN subnet : stateful packet filtering

Rule #	Task App/ Interface	Source IP add.	Source TCP/ UDP port	Dest. IP add.	Protocol type	Dest. TCP/ UDP port	Action	Description
System Management								
1	System MGMT	MGMT	ignore	TLAN subnet	TCP	21	Forward	FTP
2	System MGMT	MGMT	ignore	TLAN subnet	TCP	22	Forward	SSH
3	System MGMT	MGMT	ignore	TLAN subnet	TCP	23	Forward	Telnet
4	System MGMT	MGMT	ignore	TLAN subnet	TCP	80	Forward	Element Manager
5	System MGMT	MGMT	ignore	TLAN subnet	TCP	513	Forward	rlogin
6	System MGMT	MGMT	ignore	TLAN subnet	UDP	162	Forward	SNMP
VoIP Signaling								
7	SigSvr / Gatekpr	any	ignore	TLAN subnet	TCP	1720	Forward	H.323 Signaling
8	SIP	any	ignore	TLAN subnet	TCP	5060	Forward	SIP Signaling (configurable)
9	Firmware Download	any	ignore	TLAN subnet	UDP	69	Forward	TFTP
10	H.323	any	ignore	TLAN subnet	UDP	1718	Forward	H.323 Signaling
11	H.323	any	ignore	TLAN subnet	UDP	1719	Forward	H.323 Signaling
12	TPS	any	ignore	TLAN subnet	UDP	4100	Forward	IP Phone 200 x signaling
13	SIP	any	ignore	TLAN subnet	UDP	5060	Forward	SIP Signaling (configurable)
14	TPS	any	ignore	TLAN subnet	UDP	5100	Forward	IP Phone 200x signaling (configurable)
15	Firmware Download	any	ignore	TLAN subnet	UDP	5105	Forward	UNiStim FTP
16	TPS	any	ignore	TLAN subnet	UDP	7300	Forward	IP Phone 200x signaling

Table 125
TLAN subnet : stateful packet filtering (cont'd.)

Rule #	Task App/ Interface	Source IP add.	Source TCP/ UDP port	Dest. IP add.	Protocol type	Dest. TCP/ UDP port	Action	Description
17	Virtual Office	any	ignore	TLAN subnet	UDP	16500	Forward	Virtual Office signaling Network connect server configurable
18	Virtual Office	any	ignore	TLAN subnet	UDP	16501	Forward	Virtual Office Signaling
19	SIP GW SPS	any	ignore	TLAN subnet	TCP	5061	Forward	SIP Signaling
VoIP Media								
20	SMC	any	ignore	TLAN subnet	UDP	5200: 5263	Forward	RTP/RTCP voice media
Firewall								
21	Firewall	any	ignore	TLAN subnet	ignore	any	Drop	Default Action

ELAN subnet packet filtering

Table 126 "ELAN subnet : packet filtering" (page 399) describes a packet filtering configuration suitable for a routable ELAN subnet. These filters are effective for stateless and stateful packet filters.

Table 126
ELAN subnet : packet filtering

Rule #	Task (App./ Interface)	Source IP add.	Source TCP/ UDP port	Dest. IP add.	Protocol type	Dest. TCP/ UDP port	Action	Description
System Management								
1	System MGMT	MGMT	ignore	ELAN subnet	TCP	21	Forward	FTP
2	System MGMT	MGMT	ignore	TLAN subnet	TCP	22	Forward	SSH
3	System Magma	MGMT	ignore	ELAN subnet	TCP	23	Forward	Telnet
4	System Magma	MGMT	ignore	ELAN subnet	TCP	80	Forward	HTTP Element Management

Table 126
ELAN subnet : packet filtering (cont'd.)

Rule #	Task (App./ Interface)	Source IP add.	Source TCP/ UDP port	Dest. IP add.	Protocol type	Dest. TCP/ UDP port	Action	Description
5	System Magma	MGMT	ignore	ELAN subnet	TCP	513	Forward	rlogin
6	System Magma	MGMT	ignore	ELAN subnet	UDP	162	Forward	SNMP query
7	System Magma	MGMT	ignore	ELAN subnet	UDP	1929:2185	Forward	DBA for TM
System Signaling								
8	System Signaling	CC6	ignore	Call Server	TCP	8888	Forward	CC6 AML Link
Note: Rule "8" (page 400) applies only to a system with a Contact Center 6 system using a single network interface to the Nortel server subnet.								
Firewall								
9	Firewall	any	Ignore	ELAN subnet	ignore	any	Drop	Default action

Appendix

DHCP supplemental information

To understand how the IP Phones 200x and the IP Softphone 2050 acquire the needed network configuration parameters automatically, this chapter briefly describes the Dynamic Host Configuration Protocol (DHCP).

Read this section if you are unfamiliar with DHCP. Topics are helpful for the configuration and future maintenance of the DHCP server and ensure correct implementation with IP Phones.

DHCP is an extension of BootP. Like BootP, it operates on the client:server model. However, DHCP has more message types than BootP. DHCP enables the dynamic allocation of IP addresses to different clients. It can be used to configure clients by supplying the network configuration parameters, such as gateway or router IP addresses.

DHCP also includes a lease system that controls the duration an IP address is leased to a client. The client can request a specific lease length, or the administrator can determine the maximum lease length. A lease can range from 1 minute to 99 years. When the lease is up or released by the client, the DHCP server automatically retrieves it and reassigns it to other clients, if necessary. This is an efficient and accurate way to configure clients quickly and saves the administrator from an otherwise repetitive task. IP addresses can be shared among clients that do not require permanent IP addresses.

Navigation

- [“Introduction to DHCP” \(page 402\)](#)
- [“DHCP messages” \(page 402\)](#)
- [“DHCP message format” \(page 402\)](#)
- [“DHCP message exchange” \(page 403\)](#)
- [“DHCP options” \(page 404\)](#)
- [“Vendor Specific/Encapsulated option” \(page 404\)](#)

- ["Site Specific option" \(page 404\)](#)
- ["IP acquisition sequence" \(page 405\)](#)
- ["Case 1" \(page 405\)](#)
- ["Case 2" \(page 406\)](#)
- ["Case 3" \(page 407\)](#)
- ["Multiple DHCPOFFER messages" \(page 408\)](#)
- ["IP Phone support for DHCP" \(page 409\)](#)
- ["Full DHCP" \(page 409\)](#)
- ["Partial DHCP" \(page 413\)](#)
- ["DHCP Auto Discovery" \(page 413\)s](#)

Introduction to DHCP

DHCP messages

There are seven different DHCP messages. Each message relays certain information between the client and server. See [Table 127 "DHCP message types" \(page 402\)](#).


Table 127
DHCP message types

DHCP Message Types	Description
DHCPDISCOVER	Initiates a client request to all servers.
DHCPOFFER	Offer from server following client request.
DHCPREQUEST	Requests a particular server for services.
DHCPACK	Notifies client that requested parameters can be met.
DHCPNAK	Notifies client that requested parameters cannot be met.
DHCPDECLINE	Notifies server that the offer is unsatisfactory and will not be accepted.
DHCPRELEASE	Notifies server that IP address is no longer needed.

DHCP message format

The DHCP message format shown in [Figure 94 "DHCP message format" \(page 403\)](#) is common to all DHCP messages. Each message consists of 15 fields: 14 fixed-length fields and one variable length field. The fixed-length fields must be the specified number of bytes, as indicated in the brackets. If there is not enough data, or there is no data at all, zeros are used to fill in the extra spaces.

Figure 94
DHCP message format

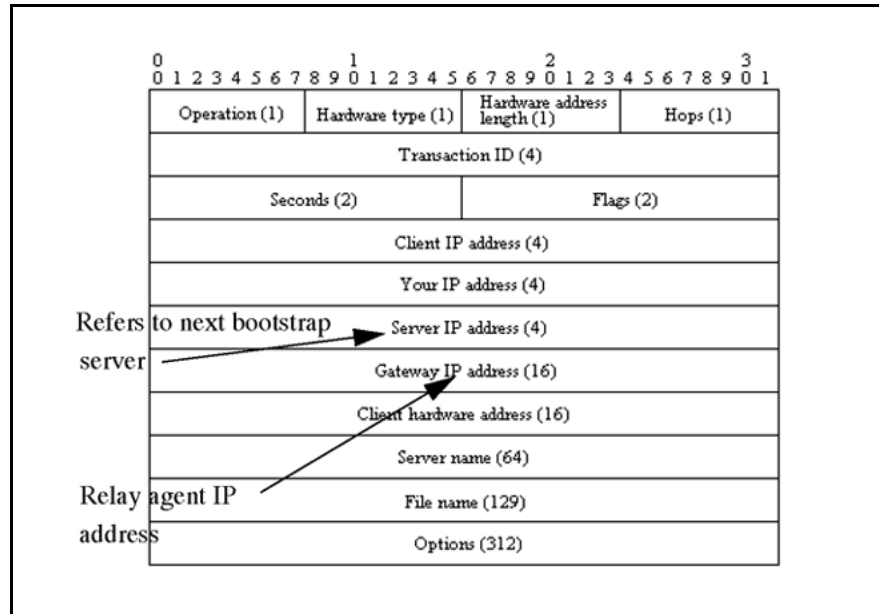

The Options field is the only field with a variable length. It is optional, but very important, as it transports additional network configuration parameters. The DHCP options are the actual subfields used in a project.

DHCP message exchange

For a client to receive services from a DHCP server, an exchange of DHCP messages between the client and server must take place. The sequence and types of DHCP message exchanged can differ, but the mechanism of acquiring and supplying information remains the same.

Usually the client initiates the exchange with a DHCP message broadcast. Using a broadcast enables the client to send messages to all servers on the network without having an associated IP address. The broadcast is local to the LAN, unless a DHCP relay agent is present to forward the packet.

At this point, the client has no information about the server or the IP address it is going to receive (unless it is requesting a renewal), so the fields in the DHCP message are empty. However, the client knows its own MAC address and includes it in the Client hardware address field. The client can also have a list of parameters it would like to acquire and can request them from the DHCP server by including the Parameter Request List option (Option Code 55) in the DHCPDISCOVER message.

When the DHCP server sees the broadcast, it responds by broadcasting its own DHCP message. The server, as it knows more about the network, can fill in most of the information in the message. For example, information

such as the server IP address and gateway IP address are included in their respective fields. As the client does not have an IP address yet, the server uses the client MAC address to uniquely identify it. When the client sees the broadcast, it matches its MAC address against the one in the message.

DHCP options

DHCP options are the subfields of the Options field. They carry additional network configuration information requested by the client, such as the IP address lease length and the subnet mask.

Each DHCP option has an associated option code and a format for carrying data. Usually the format is as follows:

Option code Length Data

There are two categories of DHCP options: standard and non:standard. The standard options are predefined by the industry. The non:standard options are user defined to fit the needs of a particular vendor or site.

There are a total of 255 DHCP option codes, where option codes 0 and 255 are reserved, 1 to 77 are predefined, 1 to 254 can be used for Vendor Specific Options, and 128 to 254 are designated for Site Specific Options. This arrangement enables future expansion and is used as a guideline for choosing option codes.

Vendor Specific/Encapsulated option

The Vendor Specific DHCP options are vendor:defined options for carrying vendor:related information. It is possible to override predefined standard options; however, doing so can cause conflict when used with components that follow the industry standard.

A useful option is the standard Vendor Encapsulated option – code 43. It is used to encapsulate other DHCP options as suboptions. For example, the IP Phone 2004 requires Vendor Specific Voice Gateway Media Card information. The vendor, Nortel, decides to carry this information in one of several Site Specific options and then encapsulate it into option 43. As the information is specific to a Nortel product, it is vendor:specific. After encapsulation, the information appears as one or more suboptions inside option 43, which the IP Phone decodes.

Site Specific option

Another way to transport the Voice Gateway Media Card information is through Site Specific options. These are unused DHCP options that have not been predefined to carry standard information. Unlike the Vendor Specific options, the information transported is site specific and option codes 128 to 254 are used for encoding.

For Nortel IP Phones, the Voice Gateway Media Card information involves the location of the Voice Gateway Media Card in the network. This varies for different sites and can be implemented in a Site Specific option. If the Vendor Encapsulation option is used, the information is first encoded in a Site Specific option. Nortel has provided a list of five possible Site Specific option codes to implement the Voice Gateway Media Card information. Only one of the five codes must be configured to carry the information, but the choice is available to offset the possibility that the option code chosen has been used for other purposes.


IP acquisition sequence

This section focuses on the mechanics and sequence of the DHCP message exchange as the IP Phone uses DHCP for IP acquisition. Although the IP Phone requests many network configuration parameters as well as an IP address, the following cases focus on the concept of how instead of what information is acquired. The IP Phone is used as the sample client, but the situations apply to other DHCP clients as well.

Case 1

Case 1 is a typical situation where an IP Phone 2004 requests services from a DHCP server, shown in the following figure.

Figure 95
IP acquisition phase: Case 1

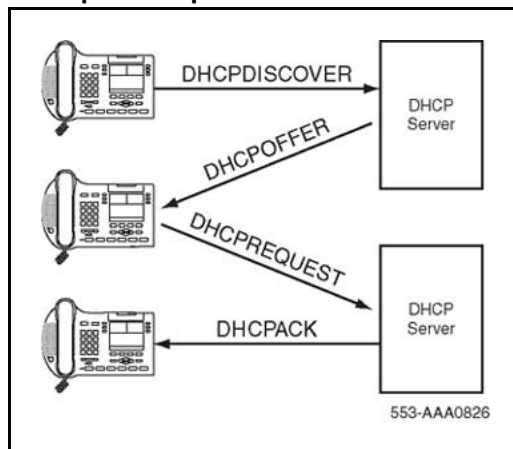

1. The IP Phone initiates the sequence by broadcasting a DHCPDISCOVER message.
2. A DHCP server on the network sees the broadcast, reads the message, and records the MAC address of the client.
3. The DHCP server checks its own IP address pools for an available IP address and broadcasts a DHCPOFFER message if one is available. Usually the server ensures the IP address is free using ARP or ping.


4. The IP Phone sees the broadcast and after matching its MAC address with the offer, reads the rest of the message to find out what else is being offered.
5. If the offer is acceptable, the IP Phone sends out a DHCPREQUEST message with the DHCP server IP address in the Server IP address field.
6. The DHCP server matches the IP address in the Server IP address field against its own, to find out to whom the packet belongs.
7. If the IP addresses match and there is no problem supplying the requested information, the DHCP server assigns the IP address to the client by sending a DHCPACK message.
8. If the final offer is not rejected, the IP acquisition sequence is complete.

Case 2

The IP acquisition is unsuccessful if either the server or the client decides not to participate, as follows:

- If the DHCP server cannot supply the requested information, it sends a DHCPNAK message and no IP address is assigned to the client. This can happen if the requested IP address has already been assigned to a different client. See [Figure 96 "IP acquisition sequence: Case 2" \(page 407\)](#).
- If the client decides to reject the final offer (after the server sends a DHCPACK message), the client sends a DHCPDECLINE message to the server, to tell the server the offer is rejected. The client must restart the IP acquisition by sending another DHCPDISCOVER message in search of another offer.

Figure 96
IP acquisition sequence: Case 2

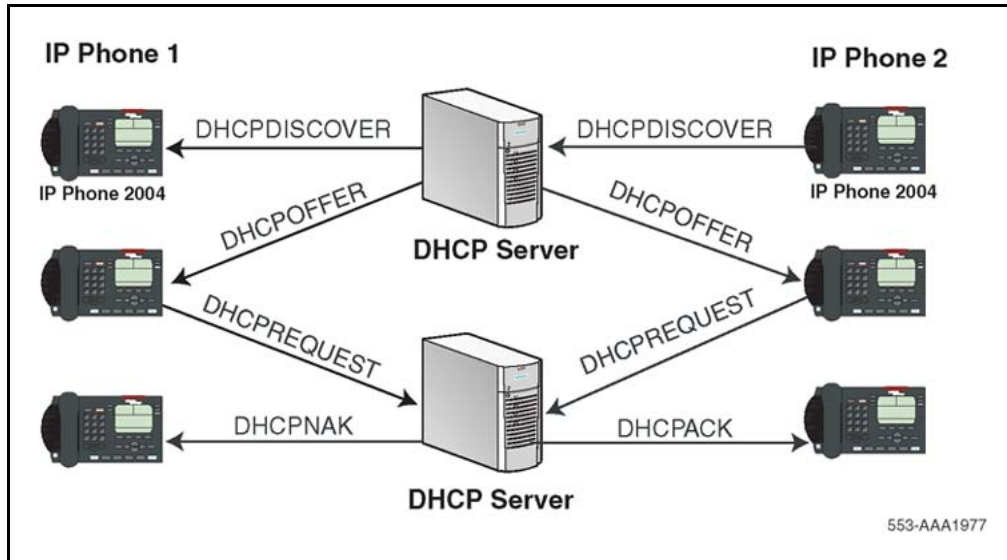


Case 3

When a client is finished with a particular IP address, it sends a DHCPRELEASE message to the server which reclaims the IP address. If the client requires the same IP address again, it can initiate the process as follows:

1. The IP Phone broadcasts a DHCPREQUEST to a particular DHCP server by including the server IP address in the Server IP Address field of the message. As it knows the IP address it wants, it requests it in the DHCP message.
2. The DHCP server sends a DHCPACK message if all the parameters requested are met.

Case 1 is similar to Case 3, except the first two messages have been eliminated. This reduces the amount of traffic produced on the network. See [Figure 97 "IP acquisition sequence: Case 3" \(page 408\)](#).

Figure 97
IP acquisition sequence: Case 3

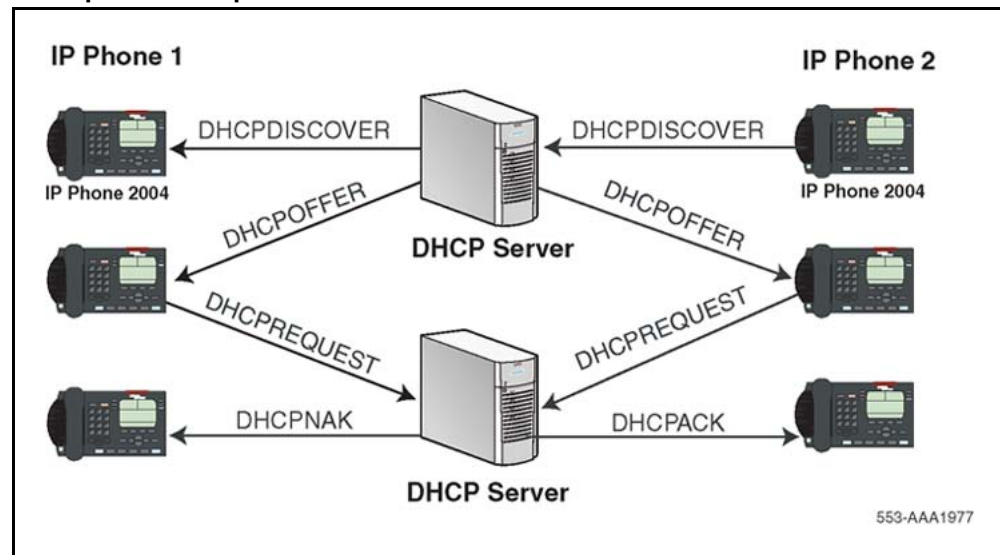

Multiple DHCPOFFER messages

In some networks, if more than one DHCP server is present, a client can receive multiple DHCPOFFER messages. Under these situations, the IP acquisition sequence depends on the client. The client can wait for multiple offers, or accept the first offer it receives. If it accepts multiple offers, it compares them before choosing one with the most fitting configuration parameters. When a decision is made, the message exchange is the same as if there is only one DHCP server and proceeds as in the previous cases. The servers that were not chosen to provide the service do not participate in the exchange.

For example, the IP Phone 2004 responds only to DHCPOFFER messages that have the same unique string identifier, (Nortel:i2004:A), as the IP Phone 2004. This string must appear in the beginning of the list of Voice Gateway Media Card parameters. Without this string, the IP Phone 2004 does not accept the DHCPOFFER, even if all parameters requested and Voice Gateway Media Card information are present. If no valid DHCPOFFER messages are sent, the IP Phone 2004 keeps broadcasting in search of a valid offer.

With multiple DHCP servers on the same network, a problem can occur if any two of the servers have overlapping IP address ranges and no redundancy. DHCP redundancy is a property of DHCP servers. Redundancy enables different DHCP servers to serve the same IP address ranges simultaneously. Administrators must be aware that not all DHCP servers have this capability.

IP Phone support for DHCP

This section covers the three uses of DHCP (Full, Partial, and VLAN Auto Discovery) by IP Phones 2002, 2004, and 2007.

An IP Phone 2004:aware DHCP server is needed only for the Full DHCP and VLAN Auto discovery. An IP Phone can obtain its IP address and subnet mask using Partial DHCP. The IP Phone 2004 aware part returns the Node IP and registration port number. In the case of the DHCP Auto Discovery, it returns the VLAN IDs. Separate DHCP vendor:specific entries are needed for the Full DHCP data and the VLAN Auto Discovery data. When using VLAN Auto Discovery, both Full DHCP and VLAN Auto Discovery must be configured. Full DHCP and Auto VLAN are implemented as separate functions in the IP Phone firmware. However, in practice, Full DHCP and Auto VLAN are frequently used together.

Full DHCP

DHCP support in the IP Phone requires sending a Class Identifier option with the value (Nortel:i2004:A) in each DHCP DHCPOFFER and DHCPACK message. Additionally, the telephone checks for either a Vendor Specific option message with a specific, unique to Nortel IP Phone 2004, encapsulated sub:type, or a Site Specific DHCP option.

In either case, an IP Phone 2004:specific option must be returned by the IP Phone 2004 aware DHCP server in all Offer and Acknowledgement (ACK) messages. The IP Phone uses this option's data to configure the information required to connect to the TPS.

The DHCP response is parsed to extract the IP Phone IP address, subnet mask, and gateway IP address. The Vendor Specific field is then parsed to extract the Server 1 (minimum) and optional Server 2. By default, Server 1 is always assumed to be the primary server after a DHCP session.

For the IP Phone to accept Offers/Acks, the messages must contain all of the following:

- A router option (requires a default router to function)
- A subnet mask option
- A Vendor Specific or Site Specific option as specified below.
 - Initial DHCP implementation required only the Vendor Specific encapsulated suboption. In interoperations testing with Windows NT (up to Service Release 4), it was discovered that Windows NT does not properly adhere to RFC 1541. As a result this option is not possible. The implementation was changed to add support for either Vendor Specific suboptions or Site Specific options. This

new extension has been tested and verified to work with Windows NT.

- The site:specific options are all DHCP options between 128 (0x80) and 254 (0xFE). These options are reserved for Site Specific use by the DHCP RFCs.

Format for IP Phone 2004 Terminal DHCP Class Identifier Field

All IP Phones (IP Phones 2x and IP Softphone 2050) fill in the Class ID field of the DHCP Discovery and Request messages with the following:

Nortel:i2004:A

Where:

- ASCII encoded, NULL (0x00) terminated
- unique to IP Phone 2004
- :A is the unique identifier for this version

Format for IP Phone 2004 Terminal DHCP Encapsulated Vendor Specific Field

This suboption must be encapsulated in a DHCP Vendor Specific Option (see RFC 1541 and RFC 1533) and returned by the DHCP server as part of each DHCP OFFER and ACK message for the IP Phone to accept these messages as valid.

The IP Phone parses this option data and uses it to configure the information required to connect to the TPS.

Note 1: Either this encapsulated suboption must be present, or a similarly encoded site:specific option must be sent. See [“Format of the Encapsulated Vendor Specific Sub:option field” \(page 410\)](#). Configure the DHCP server to send one or the other but not both.

Note 2: The choice of using either Vendor Specific or Site Specific options is provided to enable Windows NT DHCP servers to be used with the IP Phone. Windows NT servers do not properly implement the Vendor Specific Option and as a result, Windows NT implementations must use the Site Specific version.

Format of the Encapsulated Vendor Specific Sub:option field

The format of the Encapsulated Vendor Specific Suboption field is as follows:

- **Type (1 octet):** 5 choices are provided (0x80, 0x90, 0x9d, 0xbf, 0xfb [128, 144, 157, 191, 251]), which allow the IP Phone to operate when

one or more value is already in use by a different vendor. Select only one TYPE byte.

- **Length (1 octet):** variable—depends on message content.
- **Data (length octets):** ASCII based with the following format:
Nortel:i2004 :A,iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:pppp,aaa,rrr.

The components in this string are described in [Table 128](#)
"Encapsulated Vendor Specific Sub:option field" (page 411).

Table 128
Encapsulated Vendor Specific Sub:option field

Parameter	Description
Nortel:i2004:A	Uniquely identifies this as the Nortel option Signifies this version of this specification
iii.jjj.kkk.Ill:ppppp	Identifies the IP address:port for server (ASCII encoded decimal)
aaa	Identifies the Action for server (ASCII encoded decimal, range 0–255)
rrr	Identifies the retry count for server (ASCII encoded decimal, range 0 – 255). This string can be NULL terminated although the NULL is not required for parsing.
ASCII symbols	The comma (,) is used to separate fields The semicolon (;) is used to separate Primary from Secondary server information The period (.) is used to signal the end of the structure

[Table 129 "Nortel option string" \(page 411\)](#) shows the pieces of the Nortel option string. The Nortel designator Nortel:i2004:A is separated from the Connector Server strings using a comma. The Connect Servers are separated using a semicolon.

Table 129
Nortel option string

Nortel:i2004:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:pppp,aaa,rrr.					
Nortel Class Identifier Field	comma	Primary Connect Server	semicolon	Secondary Connect Server	period
Nortel:i2004:A	,	iii.jjj.kkk.Ill:ppppp,aaa,rrr	;	iii.jjj.kkk.Ill:ppppp,aaa,rrr	.

Note 1: aaa and rrr are ASCII encoded decimal numbers with a range of 0 to 255. They identify the Action Code and Retry Count, respectively, for the associated TPS server. Internally to IP Phone 2004 they are stored as 1 octet (0x00 to 0xFF). Note that these fields must be no more than 3 digits long.

Note 2: The string enables the configuration of information for two Connect Servers. One Connect Server exists for each IP node. In the typical system configuration of a single IP node, only the primary Connect Server is required. In this case, the primary Connect Server string must be ended with a period (.) instead of a semicolon (;). For example, Nortel:i2004:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr.If the secondary Connect Server portion of the string is specified, then the string information is typically the same as the primary Connect Server information. For example: Nortel:i2004:A,iii.jjj.kkk.Ill:ppppp,aaa,rrr;iii.jjj.kkk.Ill:ppppp,aaa,rrr.When the Enhanced Redundancy for IP Line Nodes feature is used, two different Connect Server strings can be configured, separated with a semicolon (;). This enables the telephone to register to two different nodes. For more information about the Enhanced Redundancy for IP Line Node feature, see *Signaling Server IP Line Applications Fundamentals (NN43001-125)* ().

Note 3: Action code values (0 to 255):
1—UNISlim Hello (currently only this type is a valid choice)
all other values (0, 2 to 255)—reserved

Note 4: iii,jjj,kkk,III are ASCII:encoded, decimal numbers representing the IP address of the server. They do not need to be 3 digits long as the period (.) and colon (:) delimiters guarantee parsing. For example, 001, 01, and 1 would all be parsed correctly and interpreted as value 0x01 internal to the IP Phone 2004. Note that these fields must be no more than three digits long each.

Note 5: ppppp is the port number in ASCII encoded decimal. The port number must be set to 4100.

Note 6: In all cases, the ASCII encoded numbers are treated as decimal values and all leading zeros are ignored. More specifically, a leading zero does not change the interpretation of the value to be OCTAL encoded. For example, 0021, 021, and 21 are all parsed and interpreted as decimal 21.

Format for IP Phone 2004 Terminal DHCP Site Specific option

This option uses the reserved for Site Specific use DHCP options (number 128 to 254, see RFC 1541 and RFC 1533) and must be returned by the DHCP server as part of each DHCP OFFER and ACK message for the IP Phone to accept these messages as valid.

The IP Phone pulls the relevant information out of this option and uses it to configure the IP address and so on for the primary and (optionally) secondary TPSs.

Note 1: Either this Site Specific option must be present or a similarly encoded vendor:specific option must be sent (as previously described). For example, configure the DHCP server to send one or the other but not both.

Note 2: The choice of using either Vendor Specific or Site Specific options is provided to enable Windows NT DHCP servers to be used with the IP Phone. Windows NT servers do not properly implement the Vendor Specific Option and as a result, Windows NT implementations must use the Site Specific version.

Format of the DHCP Site Specific field

The format of the DHCP Site Specific field is the same as the format of the Encapsulated Vendor Specific Suboption field. See [“Format of the Encapsulated Vendor Specific Sub:option field” \(page 410\)](#).

Partial DHCP

Partial DHCP is the default DHCP response from a DHCP server that has not been configured to provide the Vendor Specific information. Using Partial DHCP, an IP Phone can obtain its IP address, subnet mask, and gateway IP address. The remainder of the configuration information is manually entered at the IP Phone.

DHCP Auto Discovery

DHCP Auto Discovery must be used only if the telephone and PC are:

- connected to the same Layer 2 switch port through a three:port switch
- on separate subnets

The DHCP server can be configured to supply the VLAN information to the IP Phones. The server uses the Site Specific option in the DHCP offer message to convey the VLAN information to the IP Phone.

Configuring a DHCP Server for VLAN Discovery is optional. This configuration is done in addition to that for Full DHCP configuration and it is required only when configuring the VLAN Auto Discovery.

This method is based on the assumption that the default VLAN is the data VLAN and the tagged VLAN is the voice VLAN. Enter the voice VLAN information into the data VLAN and subnet's DHCP server. Enter the standard IP Phone configuration string into the voice VLAN and subnet DHCP server pool.

The following definition describes the IP Phone 2004:specific, Site Specific option. This option uses the reserved for Site Specific use DHCP options (DHCP option values 128 to 254) and must be returned by the DHCP server as part of each DHCPOFFER and DHCPACK message for the IP Phone to accept these messages as valid. The IP Phone extracts the relevant information and uses the information to configure itself.

Format of the field

The format of the field is: Type, Length, Data.

Type (1 octet):

There are five choices:

- 0x80 (128)
- 0x90 (144)
- 0x9d (157)
- 0xbf (191)
- 0xfb (251)

Providing a choice of five types enables the IP Phones to operate if a value is already in use by a different vendor. Select only one Type byte.

Length (1 octet):

This is variable; it depends on message content.

Data (length octets):

ASCII based format: VLAN:A:XXX+YYY+ZZZ.

where:

- VLAN– A: – uniquely identifies this as the Nortel DHCP VLAN discovery. Additionally, the –A signifies this version of this spec. Future enhancements could use –B for example.
- ASCII plus (+) or comma (,) is used to separate fields.
- ASCII period (.) is used to signal the end of the structure.
- XXX, YYY and ZZZ are ASCII encoded decimal numbers with a range of 0 to 4095. The number is used to identify the VLAN IDs. There are a maximum of 10 VLAN IDs can be configured in the current version. The strings none or NONE means no VLAN (default VLAN).

The DHCP OFFER message carrying VLAN information is sent from the DHCP server without a VLAN tag. However, the switch port adds a VLAN tag to the packet. The packet is untagged at the port of the IP Phone.

Appendix

Setup and configuration of DHCP servers

Navigation

- [“Install a Windows NT 4 or Windows 2000 server” \(page 415\)](#)
- [“Configure a Windows NT 4 server with DHCP” \(page 415\)](#)
- [“Configure a Windows 2000 server with DHCP” \(page 418\)](#)
- [“Install ISC DHCP Server” \(page 423\)](#)
- [“Configure ISC DHCP Server” \(page 423\)](#)
- [“Install and configure a Solaris 2 server” \(page 426\)](#)

Install a Windows NT 4 or Windows 2000 server

To set up the Windows NT 4 or Windows 2000 server, follow the instructions provided in the installation booklet. After completion, install the latest Service Pack and make sure the DHCP Manager is included.

ATTENTION

If you install a Windows NT 4 server with Service Pack 4 or later, follow the installation instructions included with the server hardware.

Configure a Windows NT 4 server with DHCP

Configure a Windows NT 4 server with DHCP services using the DHCP Manager provided. Follow the steps in [“Launching the DHCP Manager In Windows NT 4” \(page 415\)](#) to launch the DHCP Manager.

Launching the DHCP Manager In Windows NT 4

Step	Action
------	--------

- | | |
|---|--|
| 1 | Click the Windows Start button. |
|---|--|


- 2 Select **Programs, Administrative tools (Common), DHCP Manager**.

The DHCP Manager window appears.

- 3 Double-click **Local Machines** in the left pane.


The Create Scope : (Local) window appears.

Figure 98
Define a new scope

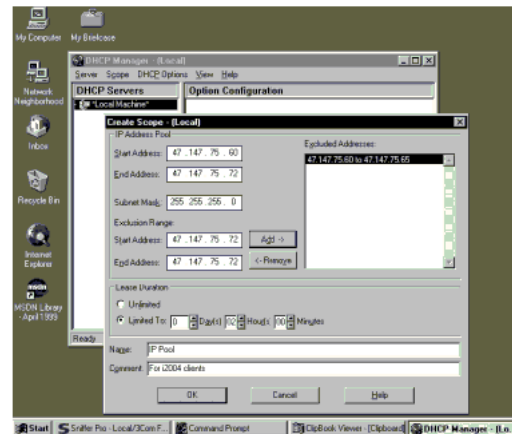


- 4 Create and fill in the information.
- 5 Click **OK** when finished.
- 6 In the **DHCP Manager : (Local)** window, highlight the scope that serves the IP Phones clients.
- 7 From the **DHCP Options** menu, select **Default Values**.
The DHCP Options : Default Values window appears.
- 8 Click the **New** button. See [Figure 99 "Define the Nortel:specific option" \(page 417\)](#).
The Change Option Type window appears.

Figure 99
Define the Nortel-specific option

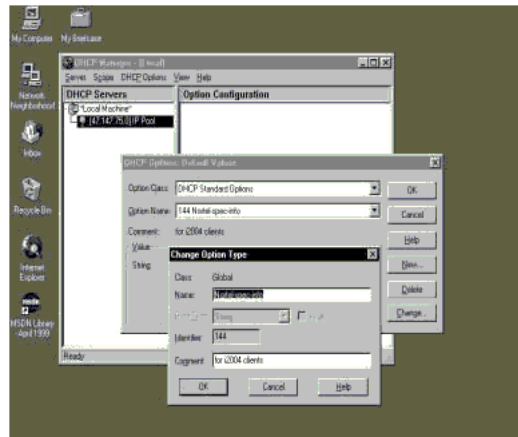

- 9 Fill in the information and click **OK** when finished.
- 10 Click **OK** again.
- 11 From the **DHCP Manager : (Local)** window, highlight the scope to which you want to add the DHCP options.
- 12 From the **DHCP Options** menu, select **Scope**.
The DHCP Options Scope window appears.
- 13 Choose standard DHCP options from the left panel and click **Add** to add them to the right panel.


Figure 100
Add standard DHCP options to scope

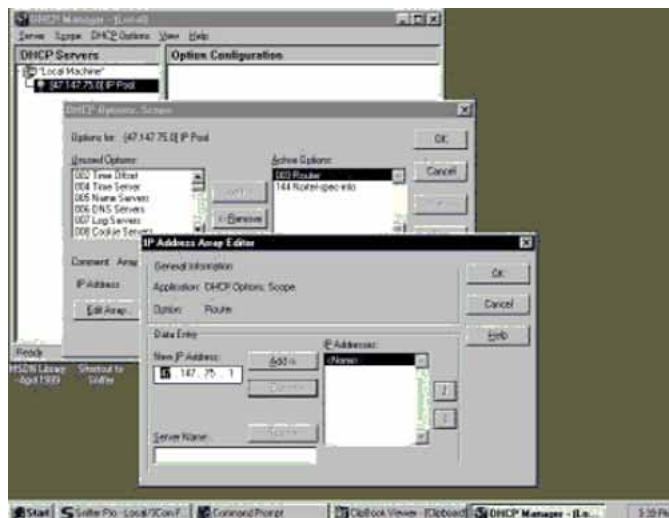

- 14 Click **Edit Array**.

- The IP Address Array Editor window appears.
- 15 Edit the default value and then click **OK**.
 - 16 Click **OK** again.
 - 17 From the **DHCP Manager : (Local)** window, highlight the scope that needs to be activated.
 - 18 From the **DHCP Options** menu, select **Scope**.
The DHCP Options Scope window appears.
 - 19 Click **Activate**.
The light bulb next to the scope should turn yellow. See [Figure 101 "Activate the scope" \(page 418\)](#) on [Figure 101 "Activate the scope" \(page 418\)](#).

Figure 101
Activate the scope

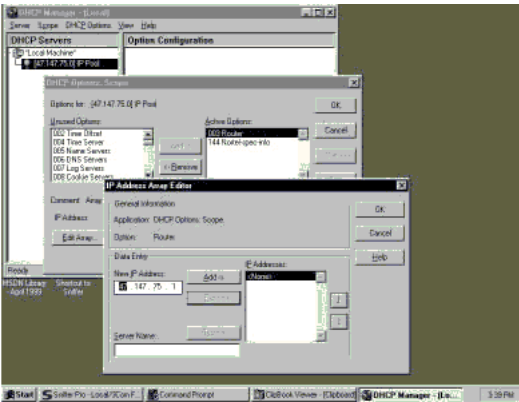

If DHCP Auto Discovery needs to be configured, see [“DHCP Auto Discovery” \(page 413\)](#).

--End--


Configure a Windows 2000 server with DHCP

Configure a Windows 2000 server with DHCP services using the DHCP Manager.

Launching the DHCP Manager in Windows 2000

Step	Action
1	Click the Windows Start button.
2	Select Programs, Administrative Tools, DHCP . The administrative console window appears. See Figure 102 "Windows 2000 administration console" (page 419) .


Figure 102
Windows 2000 administration console

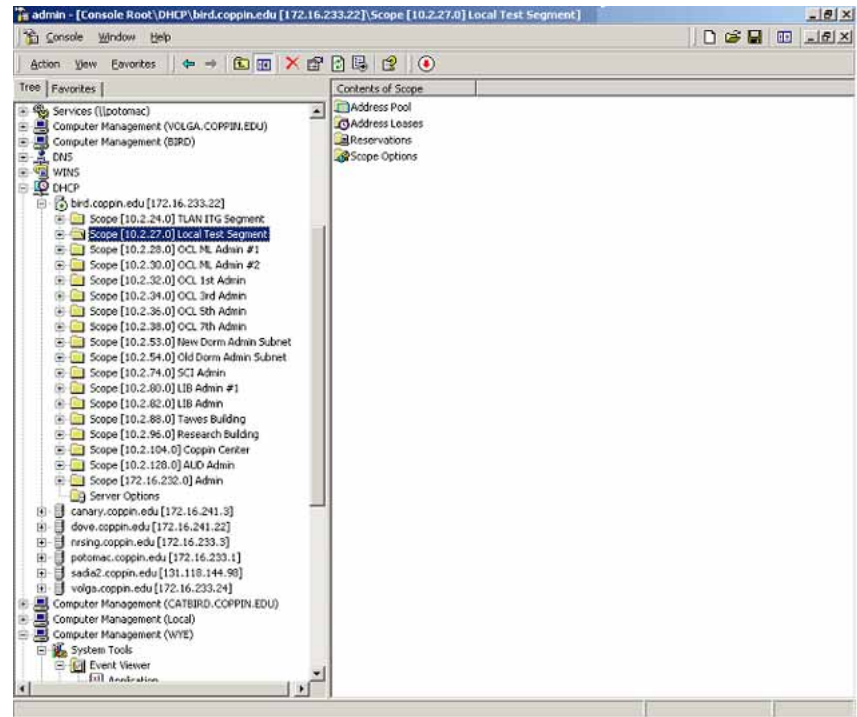

- 3 Highlight DHCP and expand the DHCP option (if it is not already expanded).
- 4 Highlight the server and right-click to display the shortcut menu.
- 5 Select **Set Predefined Options** from the menu.

Do not go into the Vendor Specific settings. The Predefined Options and Values window appears.


Figure 103
Predefined Options and Values

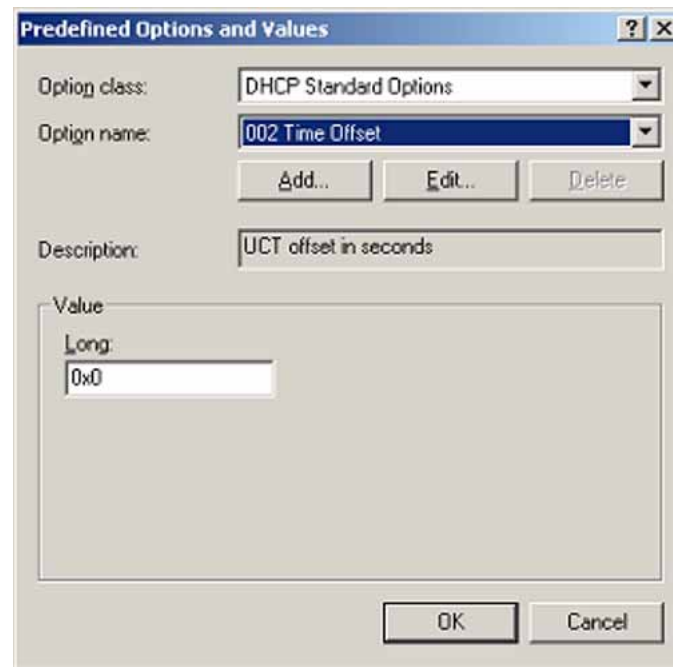

- 6 Click **Add**.

The Change Option Type window appears.

Figure 104
Change Options Type

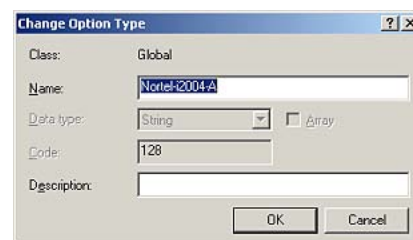

- 7 In the Name box, enter the desired **Name**.


For this example, the name of **Nortel:i2004:A** is entered. See [Figure 104 "Change Options Type" \(page 420\)](#).

- 8 From the Code box, select Code 128.

- 9 Click **OK** to close the window.

The Predefined Options and Values window appears with the string 128 Nortel:i2004:A entered in the Option name field.

Figure 105
Predefined Options and Values with data entered

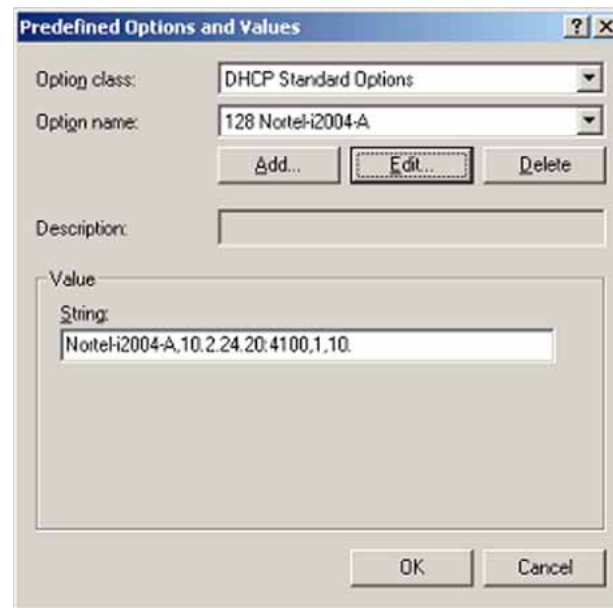

- 10** In the **Value** area, enter the following string in the **String** field:
Nortel:i2004:A,x.x.x.x:4100,1,10; using the following guidelines:


- The string is case-sensitive.
- Place a period at the end of the string.
- Commas are used as separators.
- Spaces are not allowed.
- x.x.x.x is the IP address of the IP Telephony node.
- If it is a BCM, replace the 4100 value with 7000.

- 11** Click **OK**.

- 12** Click the scope **(Scope [x.x.x.x] name)** to expand, and then click **Scope Options**.


The Scope Options window appears.

Figure 106
Scope and Scope Options

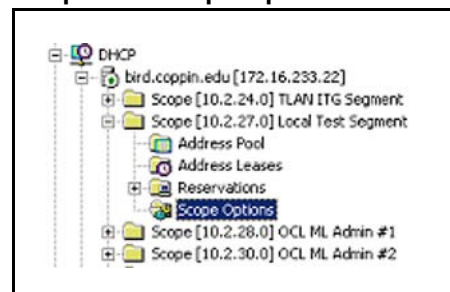


- 13 On the **General** tab, scroll to the bottom of the list and select the **128 Nortel:i2004:A** check box.

Figure 107
Scope Options

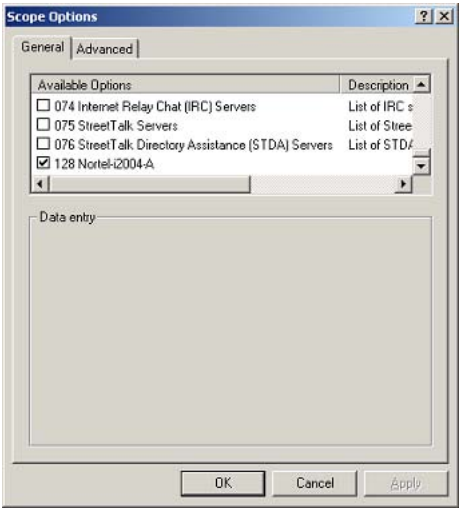

- 14 Click **OK**.
- The Option Name and Value appear in the right pane of the administrative console window.

Figure 108
Options Name and Value in administrative console

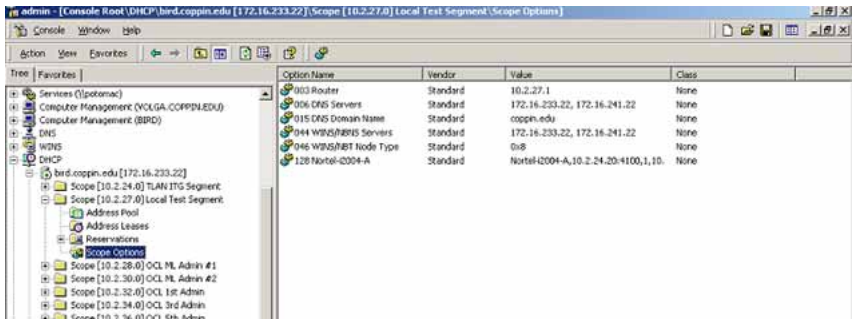

If DHCP Auto Discovery needs to be configured, see [“DHCP Auto Discovery”](#) (page 413).

--End--

Install ISC DHCP Server

To set up the ISC DHCP server, read the README file and follow the instructions about how to compile, make, and build the server. After setup is complete, configure the server by following the description in [“Configure ISC DHCP Server”](#) (page 423).



CAUTION

Although, Windows NT 4 has the Vendor Encapsulation Option (option code 43), do not use it to encode the Voice Gateway Media Card information needed by the IP Phones. Windows NT 4 enables only 16 bytes of data to be encapsulated, which is not enough to encode all the information needed.

Windows NT 4 DHCP server transmits any user:defined option associated within a scope, if the client requests it. It cannot distinguish among different types of clients; therefore, it cannot make decisions based on this information. It is impossible to create a client specific IP address pool/scope.

Configure ISC DHCP Server

To configure the ISC DHCP server, a text-based configuration process is used. Configuration is done by adding definitions and declarations in the dhcpd.conf file located at /etc/. Various man files are provided that contain information about how to configure the server, configure the lease system, use options and conditions, and run the server. Obtain the dhcpd.conf.man5 file in the server directory and read it carefully. It provides explanations about relevant topics, as well as the location of other man files to read for additional information.

Configure ISC DHCP to work with the IP Phones

There is a particular format for encoding the Voice Gateway Media Card information. In addition to the configuration statements provided, other network and subnet declarations must also be included in the configuration file.

Read the man files and use [“Example 1: Configuration file”](#) (page 425) to configure the ISC DHCP server to work with the IP Phones. Also, a copy of the configuration file used for this project is provided at the end of this section.

Configuring the ISC DHCP server

Step	Action
1	Configure the server to identify a client correctly as an IP Phone 2001, IP Phone 2002, IP Phone 2004, or IP Phone 2007. Using a match statement with a conditional if enclosed inside a class declaration, as follows:

```
class "i2004:clients"{  
  
    match if option vendor:class:identifier =  
    4e:6f:72:74:65:6c:2d:69:32:30:30:34:2d:41:00;}  
}
```

The Hex string represents the text string Nortel:i2004:A. If the vendor:class:identifier obtained from the client DHCPDISCOVER message matches this Hex:encoded string, then the server adds this client to the i2004:clients class. After a client is classified as a member of a class, it must follow the rules of the class.

- 2 Declare a pool of IP addresses exclusively for the members of the i2004:clients class. The pool declaration is used to group a range of IP addresses together with options and parameters that apply only to the pool.
- 3 Restrict access to the pool using the allow or deny statement to include or exclude the members of a particular class.

For example, the following configuration code enables only members of i2004:clients to use this IP address pool:

```
pool{  
    allow members of "i2004:clients";  
    range 47.147.75.60 47.147.75.65;  
    option routers 47.147.75.1;  
  
    # Nortel special string  
    option vendor:encapsulated:options  
    80:3d:4e:6f:72:41; }  
}
```

Note: If a client is not a member of this class, it is not assigned an IP address from this pool, even if there are no other available IP addresses.

- 4 There are two methods to encode the necessary information for the IP Phone 2004 client using the vendor:encapsulated:options option (as in the previous example) to encode the information as a sub option or define a Site Specific option to carry the necessary information. To define a Site Specific option:

Give a declaration in the form of the name of the option, the option code, and the type of data it carries outside any pool or network declarations. For example, option Nortel:specific:info code 144 = string;

OR

replace the vendor:encapsulated option inside the pool statement with the definition, option Nortel:specific:info = "Nortel É";

The DHCPOFFER message from the ISC server must include the Voice Gateway Media Card information if the client is an IP Phone 2001, IP Phone 2002, IP Phone 2004, or IP Phone 2007.

If DHCP Auto Discovery needs to be configured, see “[DHCP Auto Discovery](#)” (page 413).

--End--

Example 1: Configuration file

The following format must be used for encoding the Voice Gateway Media Card information. In addition to the configuration statements provided, other network and subnet declarations must also be included in the configuration file. As mentioned in the beginning of this section, read the man files and use the following example as a guideline:

```
# File name: dhcpd.conf
# Location: /etc/
# Description: Configuration file for ISC dhcpd server
# Author: Cecilia Mok
# Date: September 24, 1999
# Global option definitions common for all supported
# networks...
default:lease:time 300;
max:lease:time 7200;
option subnet:mask 255.255.255.0;
option broadcast:address 255.255.255.255;
# Defining Nortel:specific option for IP Phone 2004 client
option my:vendor:specific:info code 144 = string;
# Declaring a class for IP Phones type 2002, 2004, and 2007
# clients.
# Add new clients to the class if their Class Identifier
# match the special IP Phone 2004 ID string.
class "i2004:clients"
{
    match if option vendor:class:identifier =
4e:6f:72:74:65:6c:2d:69:32:30:30:34:2d:41:00;
}
# Declaring another class for PC clients
class "pc:clients"
{}
# Declaring a shared network
# This is to accommodate two different subnets on the same
# physical network; see dhcpd.conf.man5 for more details
```

```
shared:network "myNetwork"
{
    # Declaring subnet for current server
    subnet 47.147.77.0 netmask 255.255.255.0
    {}
    # Declaring subnet for DHCP clients
    subnet 47.147.75.0 netmask 255.255.255.0
    {
        # Pool addresses for i2004 clients
        pool
        {
            allow members of "i2004:clients";
            range 47.147.75.60 47.147.75.65;
        }
        option routers 47.147.75.1;
        # Nortel special string
        option Nortel:specific:info = "NortelÉ";
    }
    default:lease:time 180;
    max:lease:time 300;
}
```

Before you start the server, create a blank `dhcpd.leases` file in the `/etc/` directory, which is the same location as the `dhcpd.conf` file. To start the server, go to `/var/usr/sbin/` and type:

```
./dhcpd
```

To run in debug mode, type:

```
./dhcpd -d -f
```

Install and configure a Solaris 2 server

Install a Solaris 2 Server

To set up the Solaris 2 server, consult the accompanying manual and online documentation.

Configure a Solaris 2 server

Follow the steps in [“Configuring a Solaris 2 server” \(page 426\)](#) to configure Solaris 2 with DHCP.

Configuring a Solaris 2 server

Step	Action
1	Read the following man pages: • <code>dhcpconfig</code> • <code>dhcptab</code> • <code>in.dhcpd</code>

There are also directions at the end of each page that refer to other sources that are helpful.

- 2 Collect information about the network, such as subnet mask and router/Media Gateway and DNS server IP addresses as specified and ensure this information is current.
- 3 Log on as `root` and invoke the interface by typing `dhcpcconfig` at the prompt.

A list of questions is presented and the administrator must supply answers that are then used to configure the DHCP server.

Note 1: Solaris 2 uses a text-based interface for configuring DHCP services.

Note 2: If DHCP Auto Discovery needs to be configured, see [“DHCP Auto Discovery” \(page 413\)](#).

--End--

Configuring Solaris 2 to work with IP Phones

Step	Action
1	Perform one of the following: Create a symbol definition for defining a Site Specific option by typing the following in the <code>dhcptab</code> configuration table located at <code>/etc/default/dhcp</code>: <pre>NI2004 s Site,128,ASCII,1,0</pre> OR Use the <code>dhtadm</code> configuration table management utility by typing the following command at the prompt: <pre>dhtadm :A :s NI2004 -d 'Site,128,ASCII,1,0'</pre> Where: NI2004:symbol name s:identify definition as symbol Site:Site Specific option 128:option code ASCII:data type 1:granularity 0:no maximum size of granularity, that is, infinite
2	Create a Client Identifier macro by performing one of the following: • enter the following:

```
Nortel:i2004:A      m:NI2004="NortelÉ":
```

- Use the dhtadm command:

```
dhtadm  :A  :m  Nortel:i2004:A  :d  ' :NI2004="No  
rtelÉ":'
```

- 3 Invoke the DHCP services on the Solaris server by entering the following command at the prompt:

```
in.dhcpd,
```

Specify `-d` and/or `-v` options for debug mode. See man page `in.dhcpd` for more details.

--End--

An example of the tables used in this project is as follows:

DhcptabTable

```
Locale          m  :UTCoffst=18000:
nbvws286        m
:Include=Locale:LeaseTim=150:LeaseNeg:DNSdmain=ca.nortel.com:/
                        DNSserv=47.108.128.216 47.211.192.8 47.80.12.69:
47.147.75.0      m  :NISdmain=bvwlab:NISservs=47.147.64.91:
47.147.64.0      m
:Broadcast=47.147.79.255:Subnet=255.255.240.0:MTU=1500:/
Router=47.147.64.1:NISdmain=bvwlab:NISservs=47.147.64.91:
#
NI2004          s   Site,128,ASCII,1,0
Nortel:i2004:A m:
NI2004="Nortel:i2004:A,47.147.75.31:4100,1,5;47.147.77.143:4100,1,5.":
```

Network Table

```
01006038760290 00 47.147.65.198 47.147.74.36 944600968
nbvws286
0100C04F662B6F 00 47.147.65.199 47.147.74.36 944600959 nbvws286
```

Appendix

Change CS 1000 IP addresses

This section contains the recommended sequence and tasks you need to change all the IP addresses on a CS 1000 system and associated applications.

Follow these steps to change the IP addresses of a CS 1000 system:

Procedure 4

Changing IP addresses of CS 1000

Step	Action
1	Create an inventory list of the following network components: • Record the IP address and network masks for NRS. • Record the IP address for devices that currently use the NRS to route calls • For Call Servers, create an inventory of all devices and include IP address and network masks information for the following: — IP Phones — Media Gateway Controllers (MGC) — MC32S and MC32 media cards • For applications, create an inventory of all applications connected to the Call Servers. Include the IP address and network mask for the following: — CallPilot — Contact Center applications — Recorded Announcement (RAN) trunk interface — Application gateways
2	Document the new IP addresses of all devices.
3	Change the security domain IP addresses.

For information about changing the security domain, see *Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).

Note: If you change the IP address of a VxWorks-based device (Call Server, MGC, Media Card), you must configure the device as part of the security domain to update the new IP address and public key-IP address mapping.

- 4 Register Linux base elements under the new IP address if you use the same Fully Qualified Domain Name (FQDN). Registration must take place after you reboot the Linux server.

Note: Check the DNS server and the `/etc/hosts` file on the Linux servers to ensure the new FQDN-to-IP address mapping is accurate.

If the FQDN of the Linux server changes, you must log on to the Linux server locally and configure the Linux server as part of the security domain. Security configuration ensures all elements published from the member server are in sync with the new FQDN. For information about local logon to a Linux server, see *Linux Platform Base and Applications Installation and Commissioning* (NN43001-315). For information about security configuration, see *Unified Communications Management Common Services Fundamentals* (NN43001-116).

- 5 If a Domain Name Service (DNS) server is used to resolve FQDNs in the security domain and the member server's FQDN changes, ensure you update the DNS server to use the member server's new FQDN. If DNS is not used and you are using a CS 1000 Linux base server, UCM's internal DNS server is used.

Note: For non-CS 1000 products, ensure the primary server has an entry for the new member FQDN in the local `/etc/hosts` file or the `C:\WINDOWS\system32\drivers\etc\hosts` file.

- 6 You can change the IP address of the NRS server; for more information about changing the NRS server's IP address, see *Linux Platform Base and Applications Installation and Commissioning* (NN43001-315).

Note: The Signaling Servers (virtual trunk gateways) do not attempt to register to the NRS until both the Call Server IP address and Signaling Server IP addresses have been changed. (VTRK will not attempt to register to the NRS until the PBX link is up).

- 7 Devices that register to an NRS server must change the NRS IP address on the device. The devices attempt to register with the new IP address of NRS.

- 8 You can change IP Phone IP addresses. For more information about changing IP Phone IP addresses, see *IP Phones Fundamentals* (NN43001-368).

Note: The IP Phones attempt to register to the Signaling Server, but the Signaling Server (TPS) ignores them until the Signaling Server is registered to the Call Server (the PBX link is up).

- 9 To change the IP address of a Media Gateway Controller (MGC), perform the following tasks:

- Change the IP address configuration of MGCs that are registered to the Call Server.
- Change the MGC TLAN IP address, mask, or gateway using Element Manager.
- Change the MGC ELAN IP address, mask, or gateway and the Call Server IP address using Element Manager.

The MGC retrieves the new configurations from the Call Server and reboots with the new configurations.

The MGC registers to the Call Server when the Call Server is configured with the new MGC ELAN IP address.

If the MGC ELAN IP address was changed, you must also change the MGC ELAN IP address in LD 97 on the Call Server for the configured superloop.

Note: If the MGC is not registered to the Call Server prior to [step 4](#), you must use MGCSETUP to change the ELAN and Call Server IP addresses in LDB1.

- 10 You can change the Call Server IP address. For more information about changing the Call Server IP address, see *Communication Server 1000E Installation and Commissioning* (NN43041-310).
- Validate the IP address configuration of the MGCs that have registered to the Call Server.
- 11 You can change the Signaling Server IP address. For more information about changing the Signaling Server IP address, see *Signaling Server IP Line Applications Fundamentals* (NN43001-125).
- Validate the IP Phone registration.
 - Validate the Signaling Servers that have registered to the NRS.

- 12** Use the inventory list from [Step 1](#) to validate all devices that have registered to the NRS.

Note: If a device does not register properly and loses connection to the CS 1000E:

- ***Use a direct serial port connection and print the IP addresses and network masks of the device.***
- ***Validate the expected destination device's IP address and network mask with the inventory list from step 1.***

- 13** Change the applications' IP Addresses and validate that they have registered to the Call Server.

--End--

Terminology

ATM

Asynchronous Transfer Mode, a network technology based on transferring data in cells or packets of a fixed size. The cell used with ATM is relatively small compared to units used with older technologies. The small, constant cell size allows ATM equipment to transmit video, audio, and computer data over the same network, and assure that no single type of data hogs the line.

Current implementations of ATM support data transfer rates of from 25 to 622 Mbit/s (megabits per second). This compares to a maximum of 100 Mbit/s for Ethernet, the current technology used for most LANs.

ATM creates a fixed channel, or route, between two points whenever data transfer begins. This differs from TCP/IP, in which messages are divided into packets and each packet can take a different route from source to destination. This difference makes it easier to track and bill data usage across an ATM network, but it makes it less adaptable to sudden surges in network traffic.

When you purchase ATM service, there generally is a choice of four different types:

- Constant Bit Rate (CBR) specifies a fixed bit rate so that data is sent at a constant rate. This is analogous to a leased line.
- Variable Bit Rate (VBR) provides a specified throughput capacity but data is not sent evenly. This is a popular choice for voice and video conferencing data.
- Unspecified Bit Rate (UBR) does not guarantee any throughput levels. This is used for applications, such as file transfer, that can tolerate delays.
- Available Bit Rate (ABR) provides a guaranteed minimum capacity but allows data to burst at higher capacities when the network is free.

CBR

Constant Bit Rate. See **ATM**.

CIR

Committed Information Rate. A Frame relay term. CIR is the level of data traffic in bits that a carrier agrees to handle – not at all times, but averaged over a period of time.

Client

The client part of a client:server architecture. Typically, a client is an application that runs on a personal computer or workstation and relies on a server to perform some operations. For example, an e:mail client is an application that enables a user to send and receive e:mail.

COPS:PR

Common Open Policy Service (COPS) is an IETF standard (RFC 2748). It provides a standard protocol for exchange of policy information between network servers, and network clients such as routers and switches. COPS Usage for Policy Provisioning (COPS:PR) is a provisioning layer designed to facilitate the implementation of new policies, as defined by Policy Information Bases (PIBs).

Network administrators can quickly deploy new services and configurations across a network, using the COPS:PR layer, to dynamically update network devices with new policies. It provides the necessary services to propagate DiffServ policy information across the network.

DiffServ

Differentiated Services. DiffServ specifies, on a per:packet basis, how IP traffic is handled. The handling is specified based on the packet's DiffServ CodePoint (DSCP). A method for adding Quality of Service (QoS) to IP networks from the IETF, DiffServ is the preferred Layer 3 QoS mechanism.

Operating at Layer 3 only, Diffserv uses the IP Type Of Service (TOS) field as the Diffserv byte (DS byte).

DiffServ domain

A network segment that is DiffServ:aware.

DiffServ edge

Where the DiffServ domain begins. Defined in the DiffServ Architecture RFC 2475.

DiffServ Edge Node

The first Layer 3:aware device that a packet encounters.

DSCP

DiffServ CodePoint. Six bits in an IP packet header that specify how a packet is to be handled on an IP network.

DSP

Digital Signal Processing, which refers to the manipulation of analog information, such as sound or photographs that has been converted into a digital form. DSP also implies the use of a data compression technique.

When used as a noun, DSP stands for Digital Signal Processor, a special type of coprocessor designed to perform the mathematics involved in DSP. Most DSPs are programmable, which means that they can be used to manipulate different types of information, including sound, images, and video.

Full:duplex

Transmission in both directions at the same time can occur on the bandwidth. The full bandwidth of the link is available in either direction.

Gateway

In networking, a combination of hardware and software that links two different types of networks. Gateways between e:mail systems, for example, allow users on different e:mail systems to exchange messages.

H.323

A standard approved by the International Telecommunication Union (ITU) that defines how audiovisual conferencing data is transmitted across networks. In theory, H.323 should enable users to participate in the same conference even though they are using different video conferencing applications. Although most video conferencing vendors have announced that their products will conform to H.323, it's too early to say whether such adherence will actually result in interoperability.

Half:duplex

Packets are transmitted in only one direction at a time. The send and receive bandwidth is shared. Packet collisions can occur on half:duplex links.

IEEE 802 standards

Institute of Electrical and Electronics Engineers, pronounced I:triple:E. Founded in 1884 as the AIEE, the IEEE was formed in 1963 when AIEE merged with IRE. IEEE is an organization composed of engineers, scientists, and students. The IEEE is best known for developing standards for the computer and electronics industry. In particular, the IEEE 802 standards for local:area networks are widely followed.

802 standards. A set of network standards developed by the IEEE. They include:

- IEEE 802.1: Standards related to network management.
- IEEE 802.2: General standard for the data link layer in the OSI Reference Model. The IEEE divides this layer into two sublayers – the logical link control (LLC) layer and the media access control (MAC) layer. The MAC layer varies for different network types and is defined by standards IEEE 802.3 through IEEE 802.5.
- IEEE 802.3: Defines the MAC layer for bus networks that use CSMA/CD. This is the basis of the Ethernet standard.
- IEEE 802.4: Defines the MAC layer for bus networks that use a token:passing mechanism (token bus networks).
- IEEE 802.5: Defines the MAC layer for token:ring networks.
- IEEE 802.6: Standard for Metropolitan Area Networks (MANs).

IEEE 802.1: network management. Refers to the broad subject of managing computer networks. There exists a wide variety of software and hardware products that help network system administrators manage a network. Network management covers a wide area, including:

- Security: ensuring that the network is protected from unauthorized users.
- Performance: eliminating bottlenecks in the network.
- Reliability: making sure the network is available to users and responds to hardware and software malfunctions.

IEEE 802.1p. The Class of Service bits within an IEEE 802.1Q VLAN tag.

IEEE 802.1Q. The IEEE specification that refers to Virtual Local Area Networks (VLANs). It includes Class of Service and VLAN ID.

IEEE 802.2: MAC Layer. The Media Access Control Layer is one of two sublayers that make up the Data Link Layer of the OSI model. The MAC layer is responsible for moving data packets to and from one Network Interface Card (NIC) to another across a shared channel.

See a breakdown of the seven OSI layers in the Quick Reference section of Webopedia.

The MAC sublayer uses MAC protocols to ensure that signals sent from different stations across the same channel do not collide.

Different protocols are used for different shared networks, such as Ethernet, Token Ring, and Token Bus.

IP

Internet Protocol. Specifies the format of packets, also called datagrams, and the addressing scheme. Most networks combine IP with a higher-level protocol called Transport Control Protocol (TCP), which establishes a virtual connection between a destination and a source.

IP by itself is like the postal system. It allows you to address a package and drop it in the system, but there is no direct link between you and the recipient. TCP/IP, on the other hand, establishes a connection between two hosts so that they can send messages back and forth for a period of time.

The current version of IP is IPv4. A new version, called IPv6 or IPng, is under development.

IPSec

A group of IP security measures. It defines privacy, integrity, authentication, security key management, and tunnelling methods. A secure version of IP, IPSec enables a secure VPN over the Internet, providing optional authentication and encryption at the packet level.

Layer 2 switching

Packets are forwarded based on the destination's MAC address. The switch automatically determines which switch port must be used to send the packet, based on the destination MAC address. The MAC address location is determined from incoming packets from that MAC address received on that port.

Layer 3 switching

Packet traffic is grouped based on source and destination addresses. The first packet in a flow is routed by a software-based algorithm. Subsequent packets with the same source and destination addresses are switched based on the destination's MAC address (hardware mechanism). This is similar to multi-layer routing and routers with hardware assist.

MIB

Management Information Base. A database of network performance information stored on a Network Agent. It contains characteristics and parameters about network devices such as NICs, hubs, switches, and routers. This information is accessed by software like SNMP.

MID

Message Identifier.

MUA

Mail User Agent. The mail program used by an end-user computer to create and read e-mail messages.

NAT

Network Address Translation. It is defined as an Internet standard that lets a LAN use both internal and external IP addresses. This protects an internal IP address from being accessed from outside. NAT translates the internal IP addresses to unique IP addresses before sending out packets. NAT is practical when only a few users in a domain need to communicate outside of the domain at the same time.

Object Identifier

Also known as OID. An object is identified as a numeric value that represents some aspect of a managed device. An Object Identifier (OID) is a sequence of numbers, separated by periods, which uniquely defines the object within an MIB.

OID

See **Object Identifier**.

Policy

A set of rules that define how certain network traffic should be treated. The rules consist of classification, marking, and queueing specifications.

Proxy Server

A server that sits between a client application, such as a Web browser, and a real server. It intercepts all requests to the real server to see if it can fulfill the requests itself. If not, it forwards the request to the real server.

Proxy servers have two main purposes:

- **Improve Performance.** Proxy servers can dramatically improve performance for groups of users because it saves the results of all requests for a certain amount of time. Consider the case where both user X and user Y access the Web through a proxy server. First user X requests a specific Web page, (Page 1). Sometime later, user Y requests the same page. Instead of forwarding the request to the Web server where Page 1 resides, which can be a time-consuming operation, the proxy server simply returns the Page 1 that it already fetched for user X. As the proxy server is often on the same network as the user, this is a much faster operation. Real proxy servers support hundreds or thousands of users. The major online services such as CompuServe and America Online, for example, employ an array of proxy servers.
- **Filter Requests.** Proxy servers can also be used to filter requests. For example, a company might use a proxy server to prevent its employees from accessing a specific set of Web sites.

PSTN

Public Switched Telephone Network, which refers to the international telephone system based on copper wires that carry analog voice data. This is in contrast to telephone networks based on digital technologies, such as ISDN and FDDI.

Telephone service carried by the PSTN is often called plain old telephone service (POTS).

PVC

Permanent Virtual Circuit. All transmitted data between two points follows a predetermined path.

QoS

Quality of Service. A networking term that specifies a guaranteed throughput level. One of the biggest advantages of ATM over competing technologies, such as Frame Relay and Fast Ethernet, is that it supports QoS levels. This allows ATM providers to guarantee to their customers that end-to-end delay does not exceed a specified level.

RMON

Remote Monitoring specification. It is a set of SNMP-based MIBs (Management Information Bases) that define the monitoring, instrumenting, and diagnosis of LANs. It occurs at OSI Layer 2 (DLL). RMON:2 monitors above Layer 2, and can see across segments and through routers.

routing

The process of selecting the correct path for packets transmitted between IP networks by using software-based algorithms. Each packet is processed by the algorithm to determine its destination.

RTP

Real-time Transport Protocol. An IETF standard that supports transport of real-time data, such as voice and video, over packet switched networks. It does not provide QoS control.

Server

A computer or device on a network that manages network resources. For example, a file server is a computer and storage device dedicated to storing files. Any user on the network can store files on the server. A print server is a computer that manages one or more printers, and a network server is a computer that manages network traffic. A database server is a computer system that processes database queries.

Servers are often dedicated, meaning that they perform no other tasks besides their server tasks. On multiprocessing operating systems, a single computer can execute several programs at once. A server in this case could refer to the program that is managing resources rather than the entire computer.

Shared:media hub

A central connecting device in a network that joins communication lines together in a star configuration. Packets received on a shared:media hub are transmitted out of all other ports on the hub. This means all links must be half-duplex.

SNMP

Simple Network Management Protocol. A set of protocols for managing complex networks. The first versions of SNMP were developed in the early 1980s. SNMP works by sending messages, called Protocol Data Units (PDUs), to different parts of a network. SNMP-compliant devices, called agents, store data about themselves in Management Information Bases (MIBs) and return this data to the SNMP requesters.

SNMP 1 reports only whether a device is functioning properly. The industry has attempted to define a new set of protocols called SNMP 2 that would provide additional information, but the standardization efforts have not been successful. Instead, network managers have turned to a related technology called RMON that provides more detailed information about network usage.

Subnet

Subnetwork. A segment of an IP network. Packets must be routed in and out of a subnet.

TDM

Time Division Multiplexing, a type of multiplexing that combines data streams by assigning each stream a different time slot in a set. TDM repeatedly transmits a fixed sequence of time slots over a single transmission channel.

Within T:Carrier systems, such as T:1 and T:3, TDM combines Pulse Code Modulated (PCM) streams created for each conversation or data stream.

UDP

User Datagram Protocol. Part of the TCP/IP protocol suite. It allows for the exchange of datagrams without acknowledgement or guarantee of delivery. UDP is at Layer 4 of the OSI model.

VLAN

Virtual logical area network. A logical grouping of network devices, located on different physical LAN segments, into a single domain. This allows the devices to interwork as though they were on the same segment.

WAN

Wide area network. A computer network that spans a relatively large geographical area. Typically, a WAN consists of two or more local area networks (LANs).

Computers connected to a wide area network are often connected through public networks, such as the telephone system. They can also be connected through leased lines or satellites. The largest WAN in existence is the Internet.

Nortel Communication Server 1000

Converging the Data Network with VoIP Fundamentals

Release: 6.0

Publication: NN43001-260

Document revision: 03.13

Document release date: 25 March 2010

Copyright © 2003-2010 Nortel Networks. All Rights Reserved.

While the information in this document is believed to be accurate and reliable, except as otherwise expressly agreed to in writing NORTEL PROVIDES THIS DOCUMENT "AS IS" WITHOUT WARRANTY OR CONDITION OF ANY KIND, EITHER EXPRESS OR IMPLIED. The information and/or products described in this document are subject to change without notice.

Nortel, Nortel Networks, the Nortel logo, and the Globemark are trademarks of Nortel Networks.

All other trademarks are the property of their respective owners.

To provide feedback or to report a problem in this document, go to www.nortel.com/documentfeedback.

www.nortel.com

