

BELL SYSTEM PRACTICES
Teletypewriter and Manual
Telegraph Station and P.B.X.
Installation and Maintenance

SECTION P30.751
Issue 2, March, 1937
AT&T Co. Standard

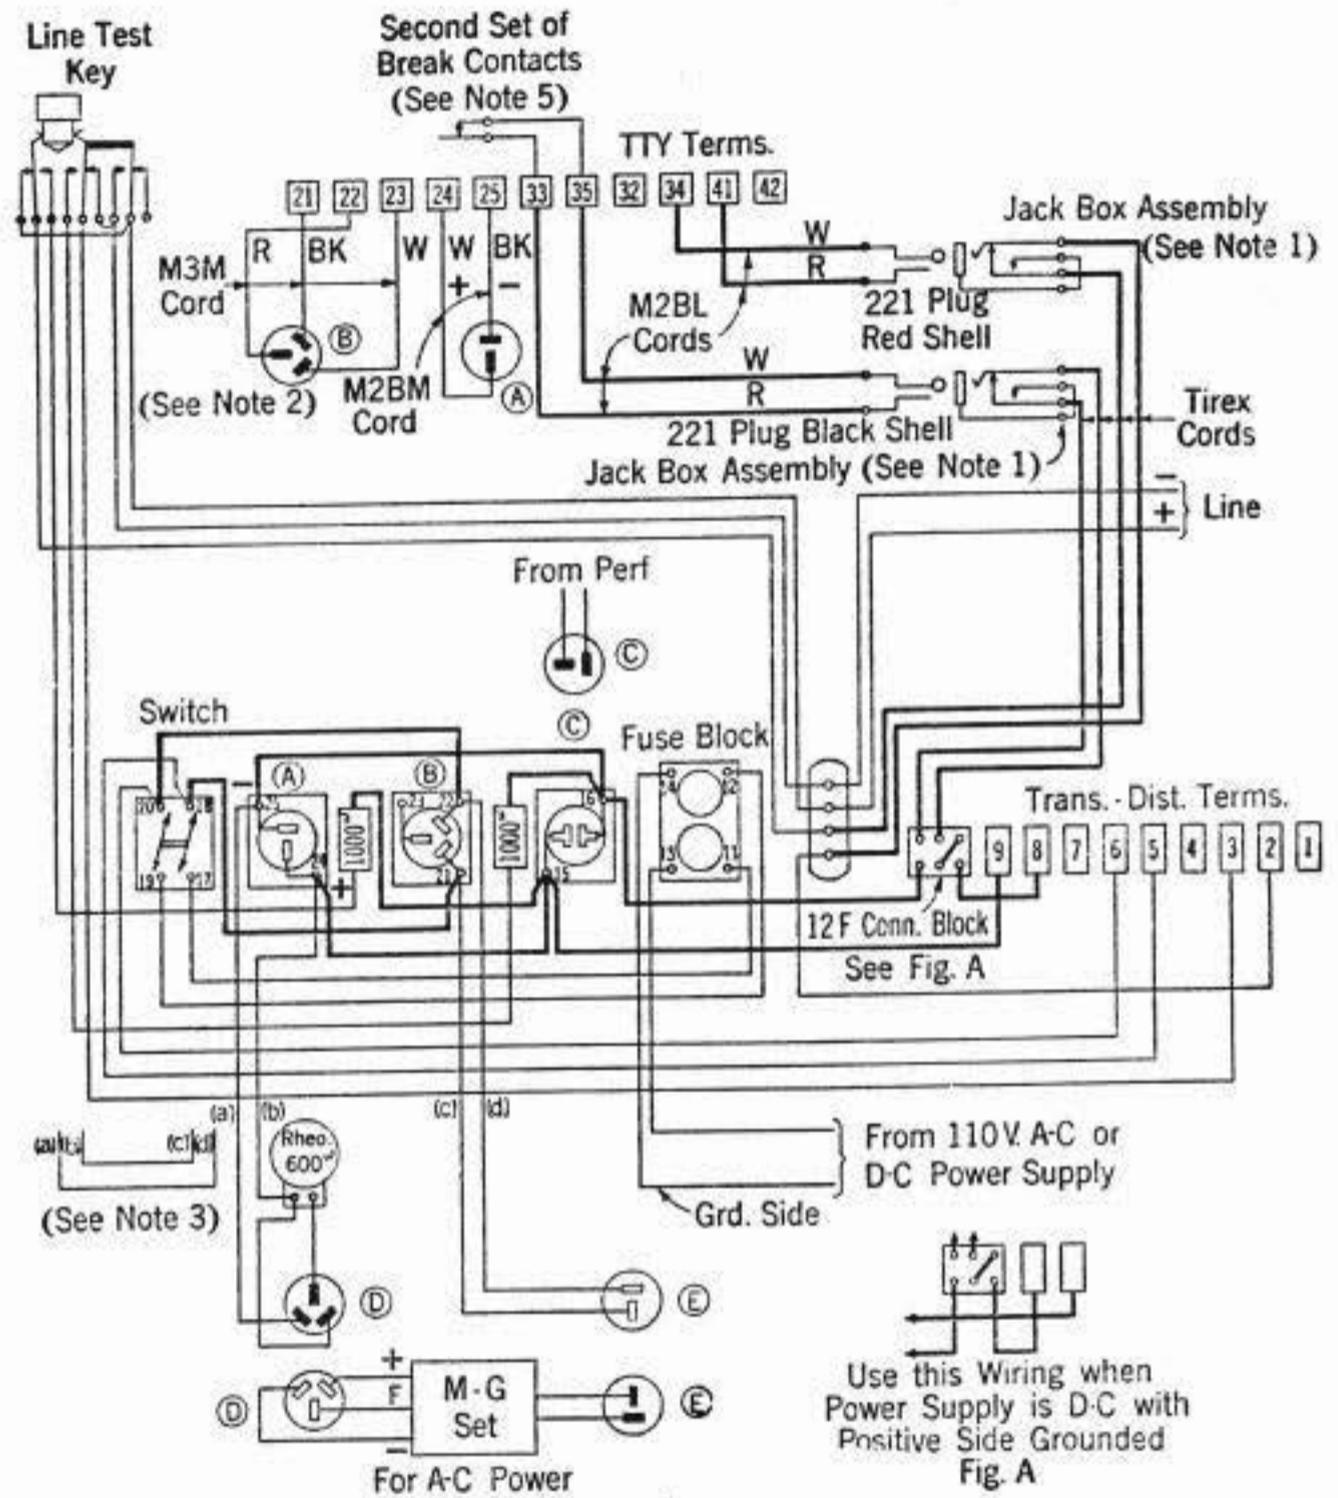


Fig. 1

14 Type Perf.-Dist. Set with Typing Unit Arranged to Stop Transmitter Distributor on a "Break" and with Typing Unit Interchangeable on Regular 14-B Table or Customer's Table.
For Notes see Page 2

Notes

1. Provide a 211C jack mtg. equipped with two 303A jacks. They may be mounted in an outlet box 3-1/2 inches deep as used in the 15N table "Outlet box and cover per dwg. ED70065-01, Group 1 and Group 11." Mount outlet box on under side of 77916 printer mounting plate, with flat side of box next the plate. Provide a 12F connecting block and mount it adjacent to present connecting block. The strap is provided so that it may be removed if desired and the control circuit extended to other apparatus.
2. When power supply is D-C use connection plan PM2.01 or PM2.03.
3. When power supply is D-C omit MG set and connect as indicated to provide proper polarity at outlet (A). See Fig. A when power supply is D-C with positive side grounded.
4. Heavy lines indicate wiring changed as compared with wiring as furnished.
5. Provide second set of break contacts, mount with existing set and wire to terminals 33 and 35 as shown.
7. Where potential ground is required it will be necessary to modify the connections and bond the framework of the various units as may be required by local regulations.
8. The circuit in Fig. 1 has been changed as compared to Issue 1 to avoid exposed potentials on the BLACK plug and on the sleeves of the jacks.