

Quick Install Guide



SharePort™ Go II Wireless N300 Portable Router and Charger

DIR-508L


Thank you for purchasing the DIR-508L Portable Router and Charger. Follow the easy steps in this guide to properly set up your router.

Package Contents

- DIR-508L Portable Router
- 4000 mAh Li-ion battery
- Power Adapter
- Quick Install Guide

If any of the above items are missing, please contact your reseller.


Product Overview

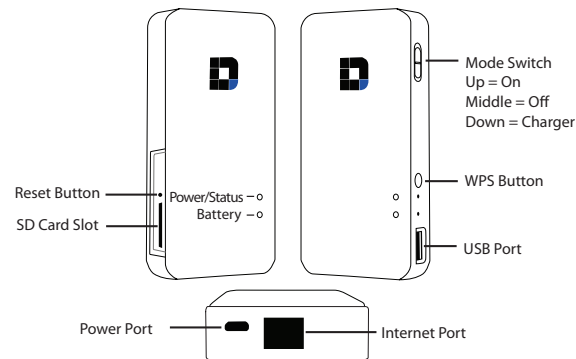

LED	Color	Status	Description
Power/Status LED	Green	Solid	The device is connected to the Internet and properly working.
		Blinking	The device is processing WPS.
	Orange	Solid	Device is powering up.
		Blinking	Cannot connect to the Internet or receive an IP address from the uplink side. This may also indicate that the device is in recovery mode.
	Red	Solid	The device is defective.
Battery LED	Off		Device is turned off or in charging mode.
	Green	Solid	Battery is at 80% or higher capacity.
		Orange	Battery is between 15% and 80% capacity.
		Red	Battery is lower than 15% capacity.
	Blinking		Battery is malfunctioning.
	Off		Charging completed. (adapter plugged) Out of battery.

Charge and Connect


- 1 Make sure the DIR-508L is charged* or plugged in before using.

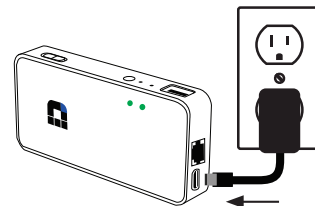

- 2 Slide the mode switch up to **On**. Allow one minute for the device to boot up.




- 3 From your device's wireless utility, connect to the DIR-508L. The default network name (SSID) is **DIR508L** with no password.

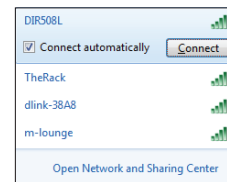


* Actual usable capacity may vary depending on charging conditions.

- 4 Open a web browser (e.g., Internet Explorer, Firefox, Chrome, or Safari) and go to <http://dlinkrouter.local/> (or <http://192.168.0.1>).

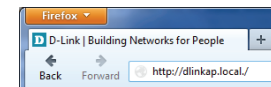

- 5 At the login screen, click or press the **Log in** button (no password).

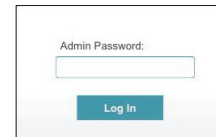

- 6 Click or press the **!** icon to select a wireless network (HotSpot Mode). You may instead connect an Ethernet cable from an Internet source such as a broadband modem to the Internet port (see note below).




Note: If you are connecting directly to a broadband modem and are using either PPPoE or a static IP connection, click or press **Settings > Internet Profiles** and create a new profile with your Internet connection type. A dynamic connection (e.g., Cable) will connect automatically without configuration.

Please refer to the user manual available at <http://www.dlink.com/DIR-508L> for more information.

7

If you are not using an Ethernet connection, a list of available wireless networks will appear. Highlight the network and click or press **Select**. If the network you are connecting to is secure, you will be prompted to enter the password.

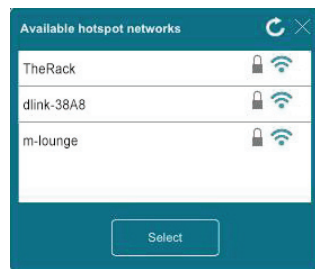

8

Once you connect, the Home page will display a green check mark. Your device is now connected to the Internet.



You may now connect other wireless devices to your DIR-508L and share the Internet connection. You can also share files by connecting a USB thumb drive to the router.

Troubleshooting

How do I connect my wireless devices to the DIR-508L router?

1. Open your wireless network utility that displays available wireless networks.
2. Select the Wi-Fi Network name (**DIR508L** by default) and connect.


You can also connect using WPS:

1. Press the WPS button on the DIR-508L for one second.
2. Within one minute press the WPS button on your wireless device.
3. Allow up to two minutes to connect.

Note: Some devices may require you to log in to a utility to start the WPS process. Refer to the user manual of the device you want to connect to the router if you do not know how to start the WPS process.

How do I change the wireless settings on the DIR-508L router?

1. Open a web browser (e.g., Internet Explorer, Chrome, Firefox, or Safari) and go to <http://dlinkrouter.local>. (or **192.168.0.1**).
2. At the login screen, click or press the **Log in** button (no password by default).
3. Click or press DIR-508L or click or press **Settings > Wi-Fi Settings**.
4. Enter a new wireless name and password. Click or press **Advanced Settings** for more options.

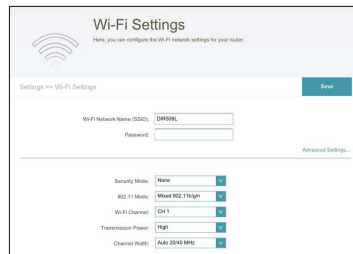


5. Click or press **Save**.

Note: If you have changed the Wi-Fi Network name, the device you are currently using to connect to the DIR-508L will drop. You will need to open your wireless utility and connect to the DIR-508L using the new network name.

What if I forgot my router password?

1. If you forgot your router password or want to reset the DIR-508L back to the default settings, press and hold the reset button using a paper clip and release after five seconds.

Warning: This process will erase all your settings.

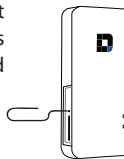

Documentation available at <http://www.dlink.com/DIR-508L>.

Technical Support

Having trouble installing your new product? D-Link's website contains the latest user documentation and software updates for D-Link products.

United States

Phone: (877) 453-5465

Internet: <http://support.dlink.com>

Canada

Internet: <http://support.dlink.ca>

Copyright © 2013 D-Link Corporation/D-Link Systems, Inc. All rights reserved. D-Link and the D-Link logo are registered trademarks of D-Link Corporation or its subsidiaries in the United States and other countries. iPhone, iPad, and iPod touch are registered trademarks of Apple Inc. Android is a trademark of Google, Inc. Other trademarks are the property of their respective owners. Maximum wireless signal rate derived from IEEE Standard 802.11n and 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range. Product specifications, size and shape are subject to change without notice, and actual product appearance may differ from that depicted on the packaging. Visit www.dlink.com for more details.

GPL Code Statement

This D-Link product includes software code developed by third parties, including software code subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL"). As applicable, the terms of the GPL and LGPL, and information on obtaining access to the GPL code and LGPL code used in this product, are available to you at:

<http://tsd.dlink.com.tw/GPL.asp>

The GPL code and LGPL code used in this product is distributed WITHOUT ANY WARRANTY and is subject to the copyrights of one or more authors. For details, see the GPL code and the LGPL code for this product and the terms of the GPL and LGPL.

Written Offer for GPL and LGPL Source Code

Where such specific license terms entitle you to the source code of such software, D-Link will provide upon written request via email and/or traditional paper mail the applicable GPL and LGPL source code files via CD-ROM for a nominal cost to cover shipping and media charges as allowed under the GPL and LGPL.

Please direct all inquiries to:

Email:

GPLCODE@dlink.com

Snail Mail:

Attn: GPLSOURCE REQUEST

D-Link Systems, Inc.

17595 Mt. Herrmann Street, Fountain Valley, CA 92708

GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright (C) 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

View the full GPL Code Statement at <http://www.gnu.org/licenses/gpl.html>

Version 1.0 | July 25, 2013 11500Y20NX00301A1

D-Link®