

DNS-321

PnP-X driver

Uninstallation Guide


D-Link[®]
Building Networks for People



RECYCLABLE


Step 1

1. Double click *Network Explorer* on your desktop screen.
2. Find the DNS-321 device where you want to uninstall the PnP-X driver.
3. Select it and right click your mouse button.
4. Select **Uninstall**.

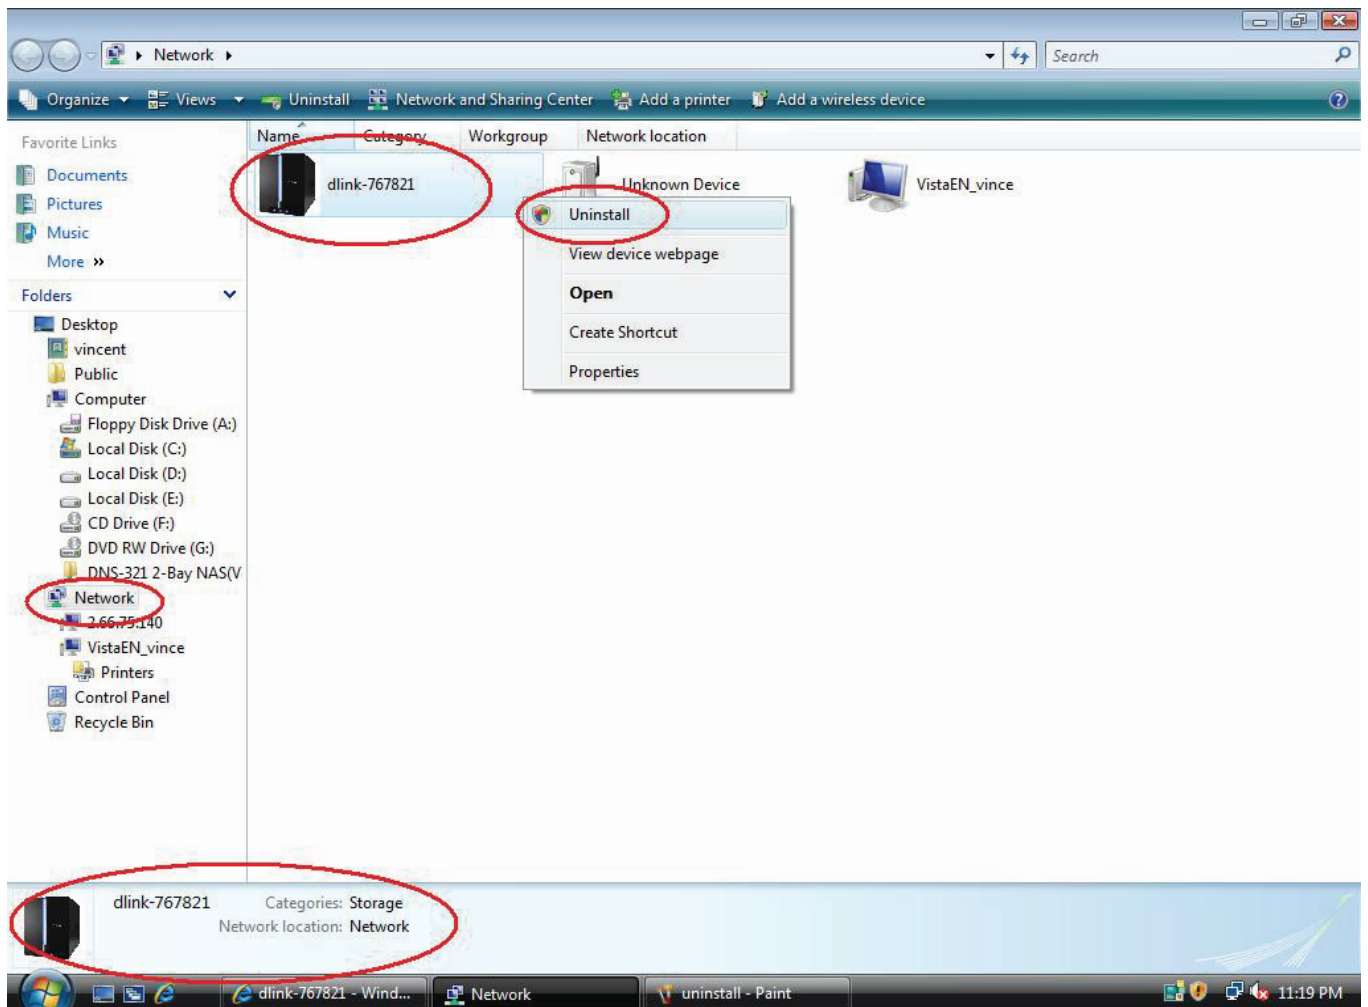


Step 2

1. Double click *My Computer*.
2. Find the virtual folder marked *DNS-321 2-Bay NAS(Volume_1)*.
3. Select it and right click your mouse button.
4. Select **Delete**.

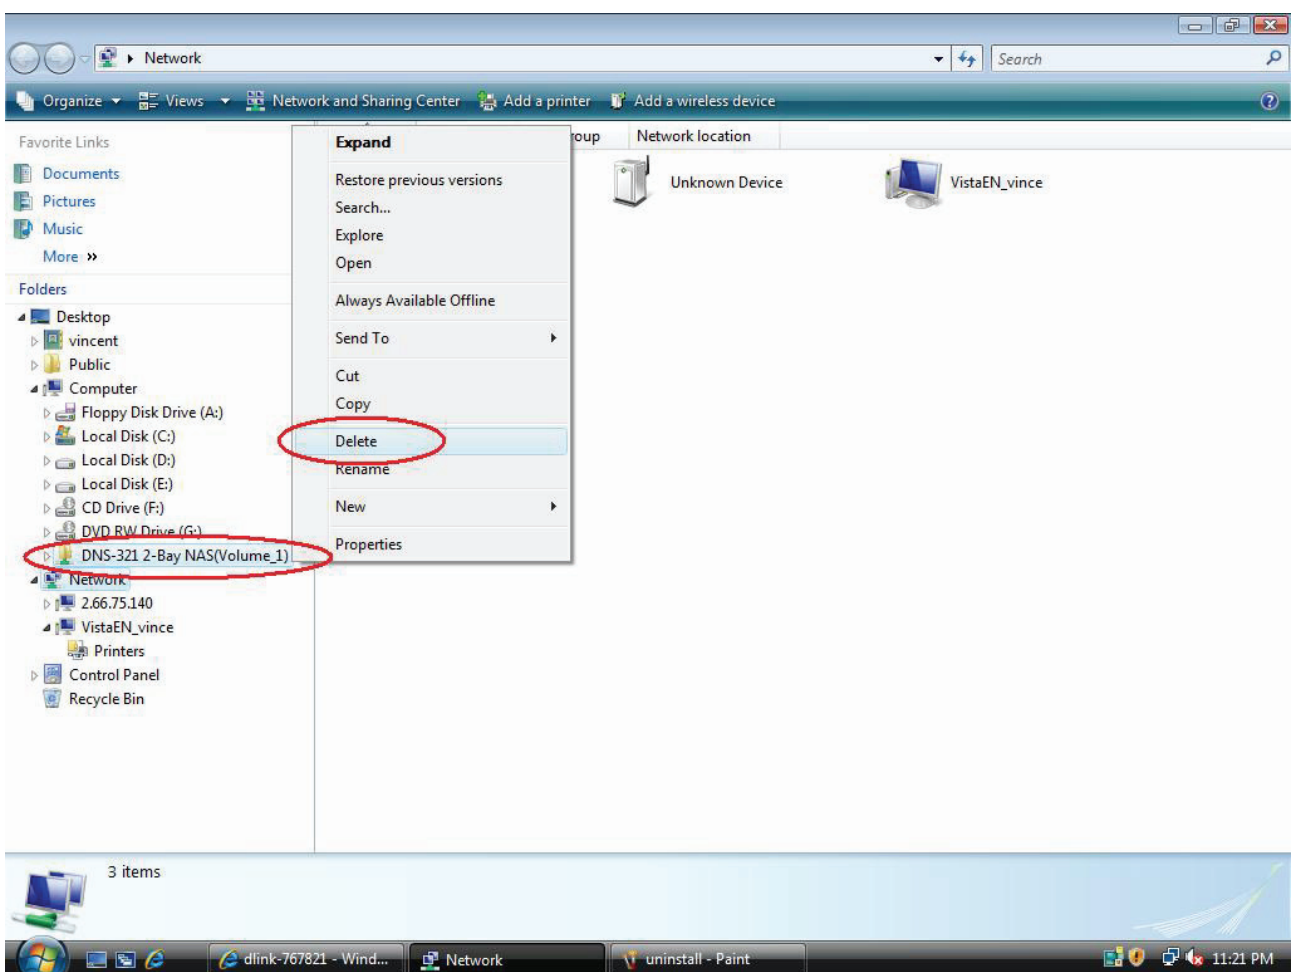


Step 3

1. Click the *Start* menu, and then the *Run* button and enter **REGEDIT** in the dialog box.
2. Go to *HKEY_CLASSES_ROOT/NetworkExplorerPlugins*.
3. Find the *urn:www-dlink-com:device:NAS-DNS321:1* folder.
4. Select it and right click your mouse button.
5. Select **Delete**.

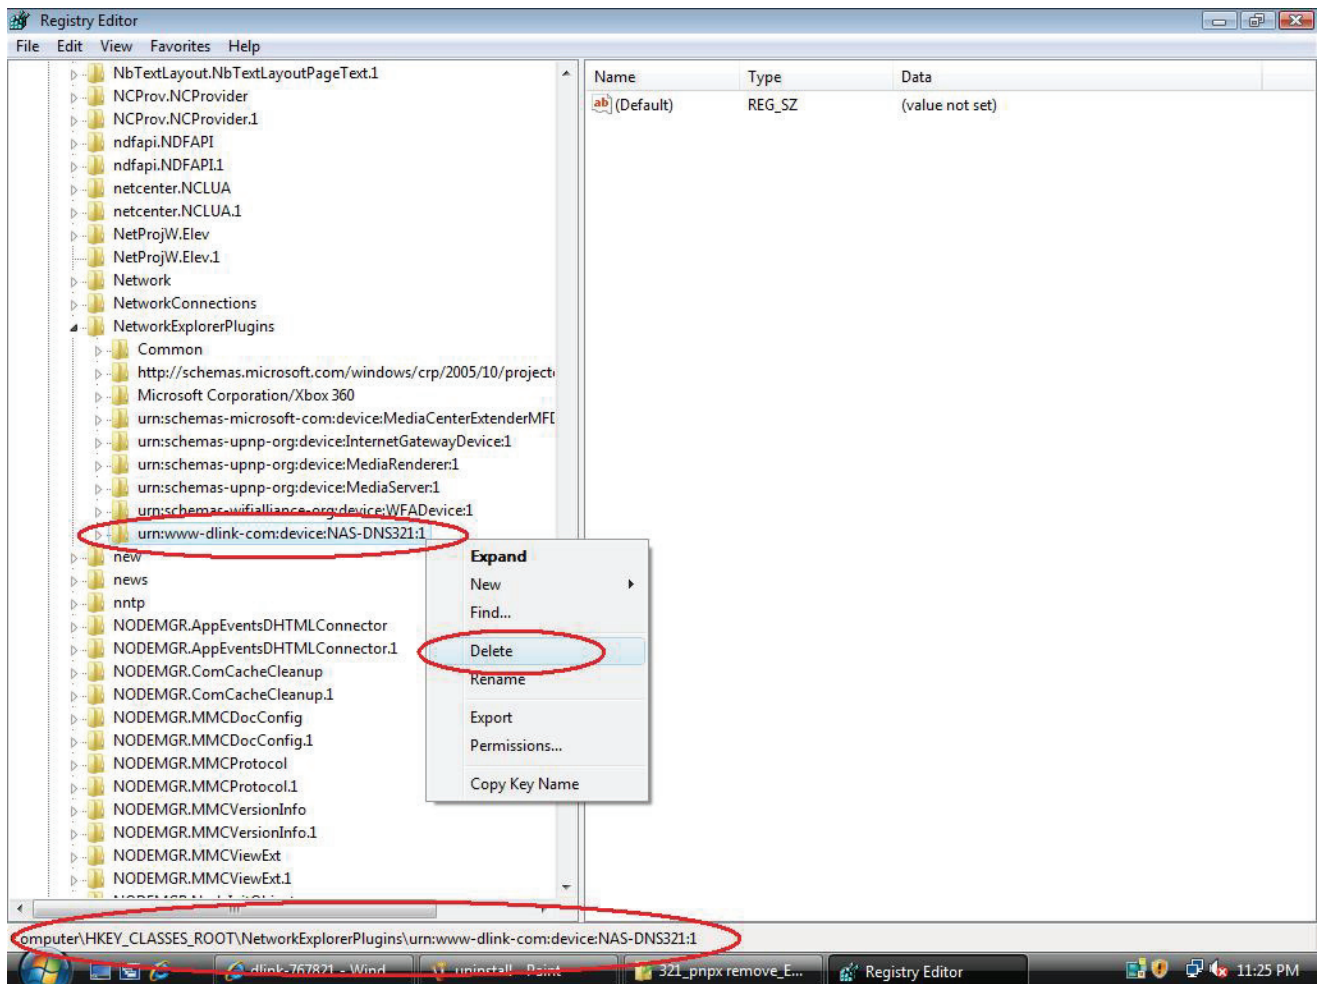


Step 4

1. Double click on *My Computer*.
2. Go to *C:\Windows\System32*.
3. Find the *dns321nascoins.dll* file.
4. Select it and right click your mouse button.
5. Select **Uninstall**.

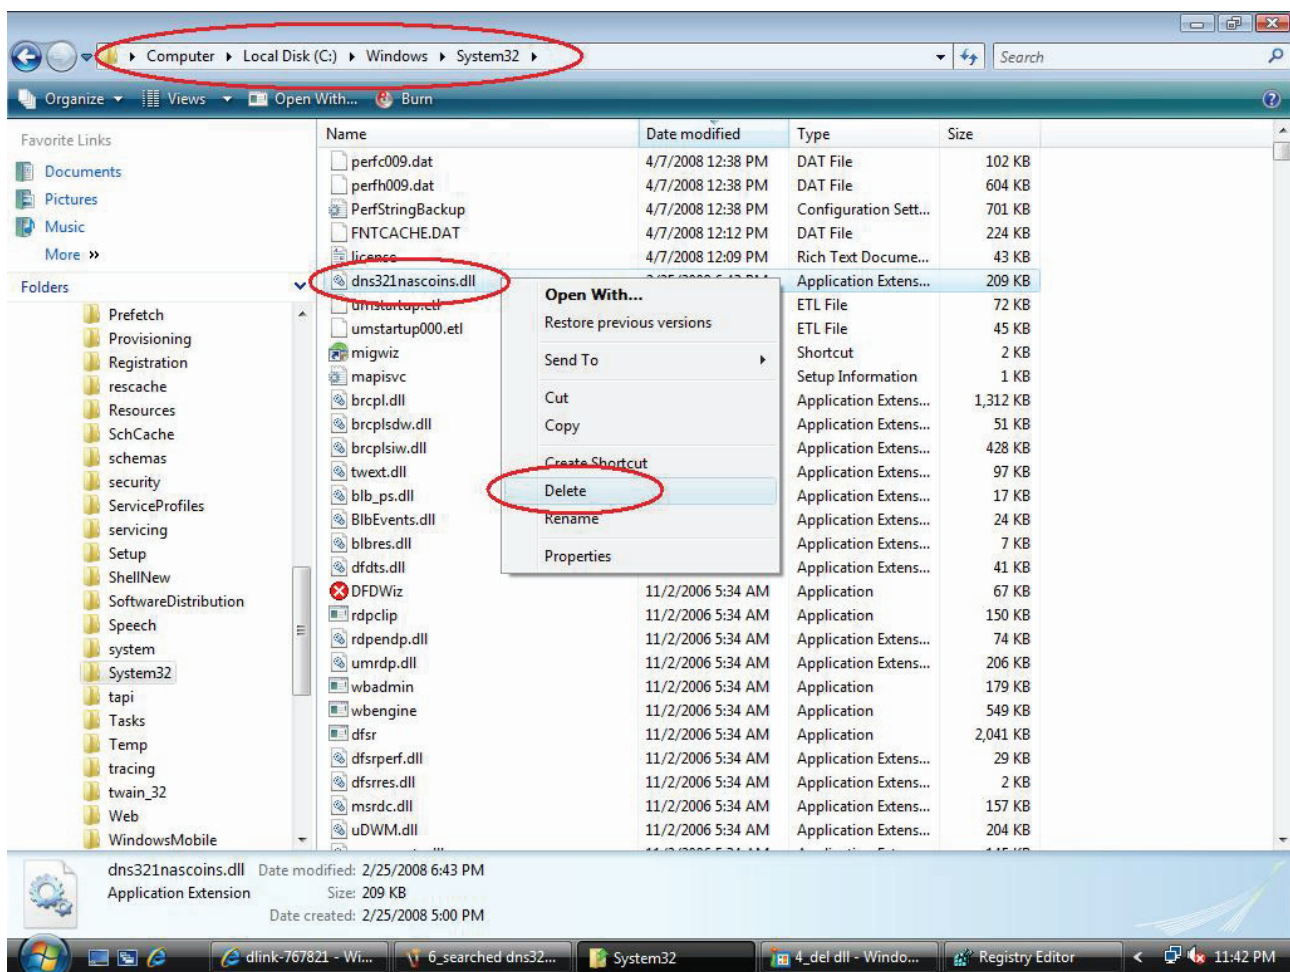


Step 5

1. Find your *C:\\Windows\\inf* directory.
2. Select it and right click your mouse button.
3. Select **Search**.

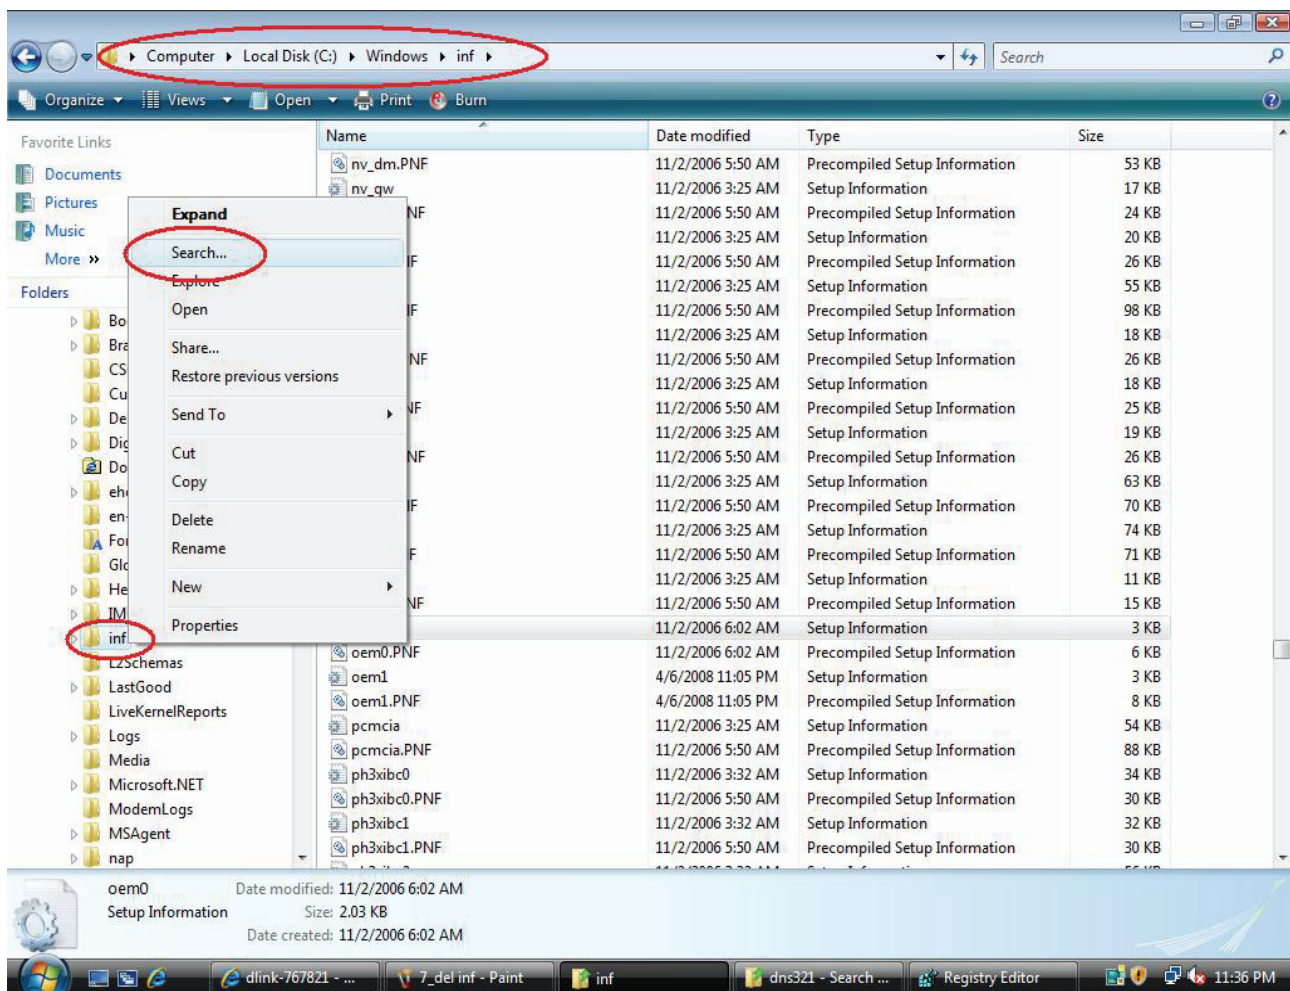


Step 6

1. After Step 5 is finished, a search utility will pop up.
2. Enter **dns321** in the search prompt.
3. If you receive a **No items match your search** message, then click on *Search in File Contents*.

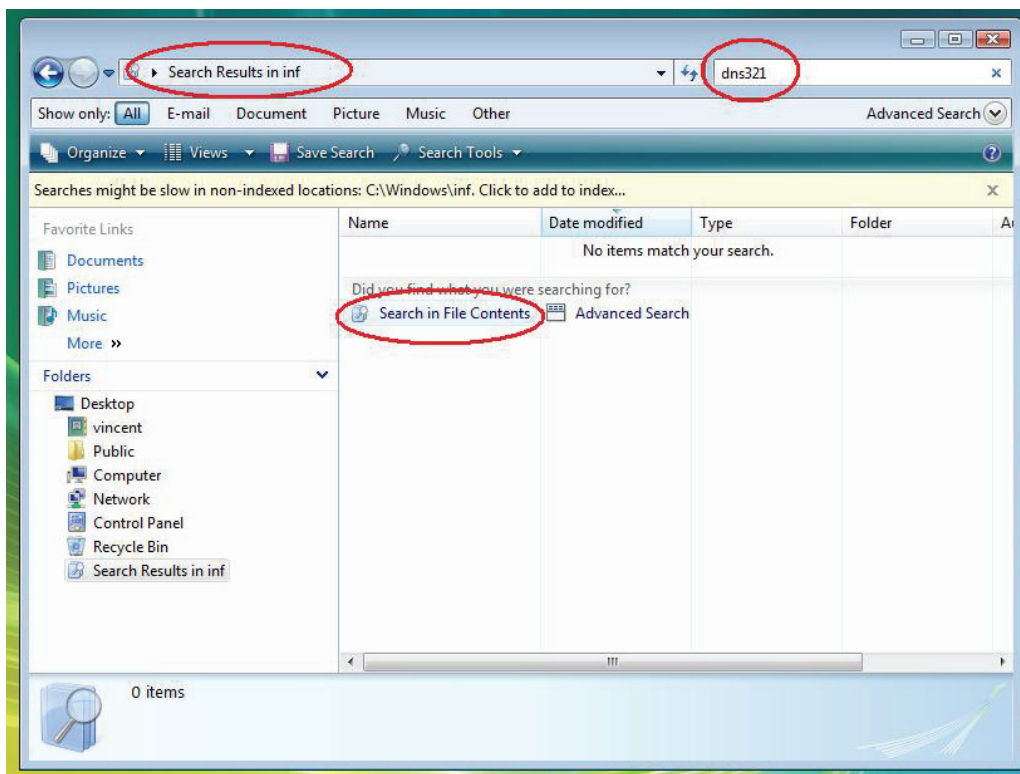

Step 7

1. The search result will be searched *oem#*.
(For example: oem1)

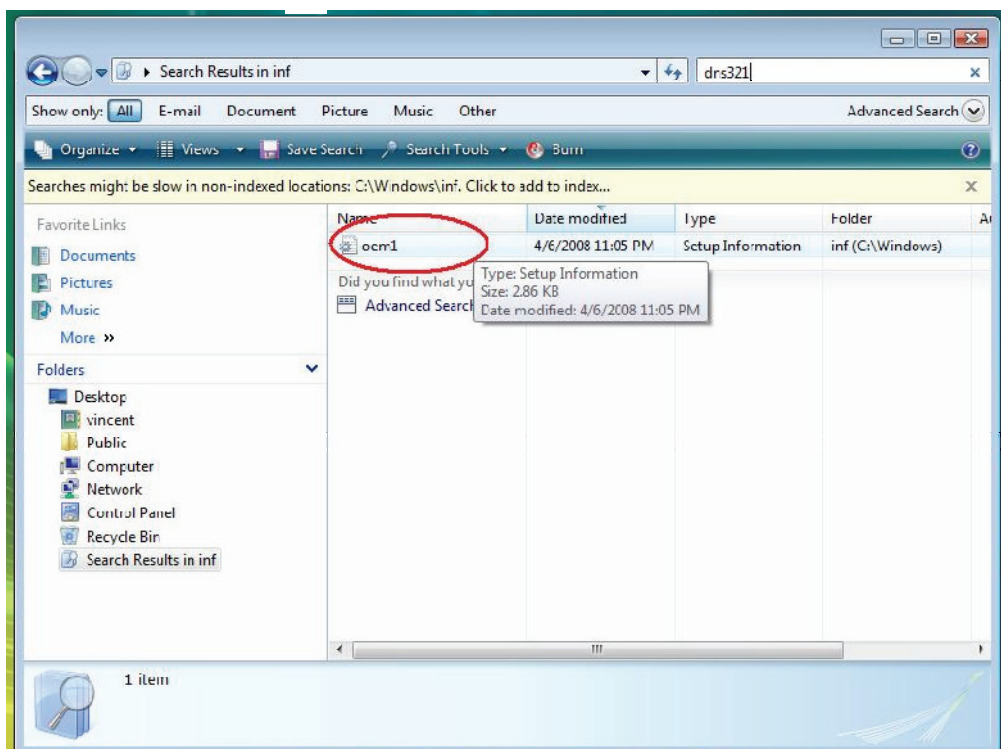

Step 8

1. Go to your *C:\Windows\inf* directory.
2. Delete *oem#.inf* and *oem#.PNF*.
(For example: *oem1.inf* and *oem1.PNF*)

