






Quick Install Guide

PowerLine AV 4-Port Switch Starter Kit



Thank you for purchasing the PowerLine AV 4-Port Switch Starter Kit . Follow the easy steps in this guide to properly set up your Powerline network. Please verify that all the package contents listed below are available.

Package Contents

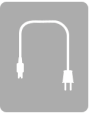-  One PowerLine Adapter
-  One PowerLine AV 4 - Port Switch
-  Two Ethernet Cables
-  CD-ROM
-  Power Cord

If any of the above items are missing, please contact your reseller.
Note: For hardware overview, please refer to the user manual.

DHP-347AV

Recommendations

- For optimal results, use in a regular wall outlet without other products plugged into the same outlet. Connecting this product to a power strip or a surge protector may adversely affect the performance of this product.
- Avoid using the PowerLine AV 4-Port Switch in an electrical outlet that is located near an appliance that uses a lot of power, such as a washer or dryer or refrigerator.

Ethernet Port Traffic Priority (QoS) For DHP-346AV

When connecting devices to your ethernet ports, be aware of the Quality of Service (QoS) priorities assigned to each port.

- Port 1 and 2** (yellow) - Both have medium priority and are best for networking data devices, such as printers.
- Port 3** (purple) - Has a high priority. You can connect devices such as game consoles to this port.
- Port 4** (light green) - Has the highest priority and gives uninterrupted service to the connected devices such as media players or Internet TV.

Hardware Installation

Steps 1

Plug the PowerLine AV Network Adapter (DHP-306AV) into an AC Wall outlet. Connect the included Ethernet cable to the network cable connector located on the PowerLine AV Network Adapter and attach the other end of the Ethernet cable to the network devices (e.g. Router).

Step 2

Connect the supplied power cord into the power receptor located on the back of the PowerLine AV 4-Port Switch.

Note: Power source is confirmed when the green LED Power Indicator on both the PowerLine AV 4-Port Switch and the PowerLine AV Network Adapter are illuminated.

Step 3


Connect the included Ethernet cable to the network cable connector located on the PowerLine AV 4-Port Switch and attach the other end of the Ethernet cable to the game console, media player, Internet TV or NAS Storage.

Note: Network Connectivity is confirmed when the PowerLine and Ethernet LED indicators on both the PowerLine AV 4-Port Switch and the PowerLine AV Network Adapter are illuminated.


Step 4 (Optional)

To secure the PowerLine network from unauthorized users, press the security button on the PowerLine AV Network Adapter (DHP-306AV) for 3 seconds. Then, press the security button on the PowerLine AV 4 - Port Switch (DHP-346) for 3 seconds. This must be done within two minutes after pressing the security button on the first device.

Note: If you set security on your other adapters and you have plugged in your new D-Link PowerLine AV 4-Port Switch and your new D-Link PowerLine AV Network Adapter, press the security button located on back of the PowerLine AV 4-port Switch and the security button on the PowerLine AV Network Adapter for 3 seconds. Then, press the security button on any other adapter in your existing network for 3 seconds. Both buttons must be pressed within 2 minutes.

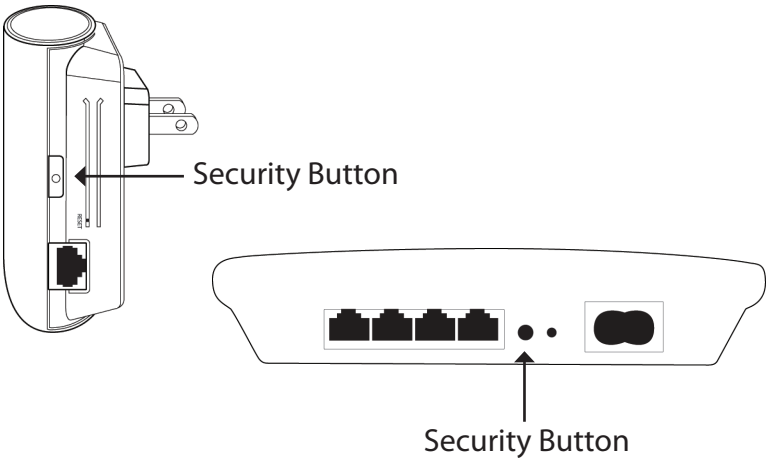

Your Network Setup

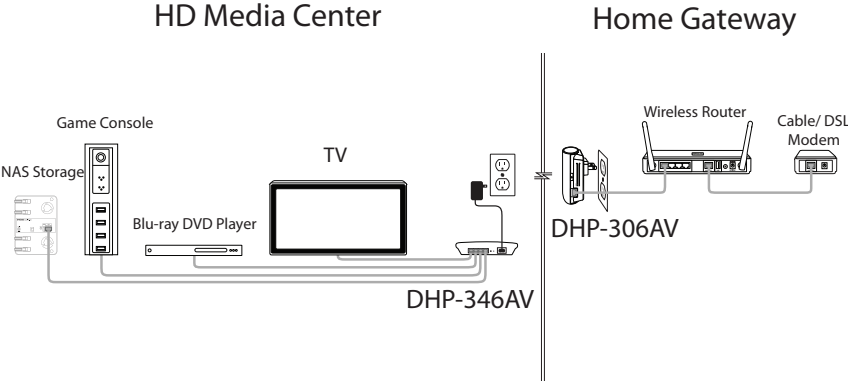

Note: A minimum of two D-Link PowerLine AV devices are required to create a PowerLine Network.

Technical Support

Having trouble installing your new product? D-Link's website contains the latest user documentation and software updates for D-Link products. U.S. and Canadian customers can contact D-Link Technical Support through our website or by phone.

United States

Telephone: (877) 453-5465
Internet: <http://support.dlink.com>

Canada

Telephone: (800) 361-5265
Internet: <http://support.dlink.ca>

Copyright ©2010 D-Link Corporation/D-Link Systems, Inc. All rights reserved. D-Link and the D-Link logo are registered trademarks of D-Link Corporation or its subsidiaries in the United States and other countries. Other trademarks are the property of their respective owners. Product specifications, size and shape are subject to change without notice, and actual product appearance may differ from that depicted on the packaging. Visit www.dlink.com for more details.