



2017 Honda Accord Headlight Replacement

How to replace your 2017 Honda Accord's headlight.

Written By: Dennis Kravtsov



INTRODUCTION

This guide will show you how to replace the headlight of a 2017 Honda Accord. Prior knowledge of how to use a ratchet wrench and basic car maintenance is required.

TOOLS:


- 1 4" socket wrench (1)
- 10mm Socket (1)
- 1/4" Ratchet Extension (1)
6"
- Clip Remover (1)

Step 1 — Headlight



- Pull the Hood Latch lever inside the car, located under the steering wheel.
- Lift the hood while pressing up on the lever under the front of the hood.

Step 2

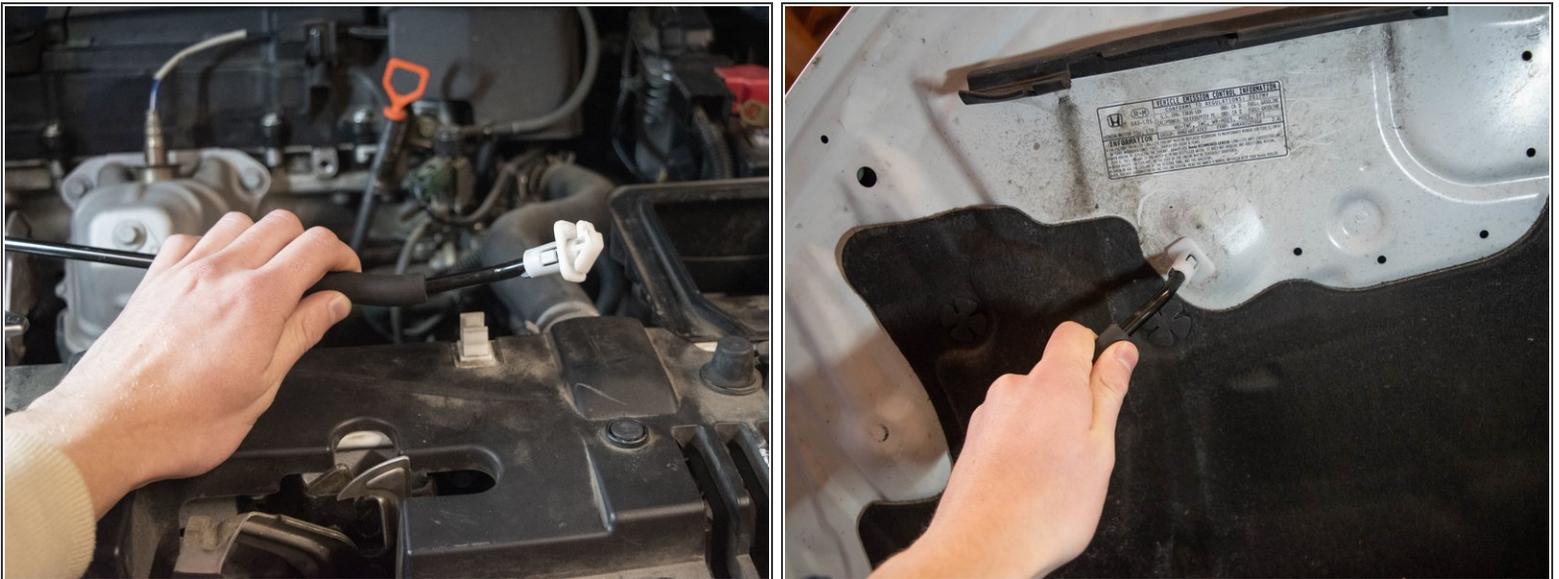

- Lift up the hood prop rod and insert it into the hole on the underside of the hood.

Step 3



- Use a 1/4" ratcheting wrench and a 10mm socket to loosen the bolt on the negative terminal head.
- Lift the terminal up off of the battery and place it to the side.

Step 4



- Use the clip remover tool to pry the clip up to remove it.

Step 5



- Use a 1/4" ratcheting wrench and a 10mm socket to remove the three bolts.

Step 6




- Use a 1/4" ratcheting wrench, a 6" extension and a 10mm socket to remove the last bolt.

Step 7



- Gently pull the headlight out.

Step 8

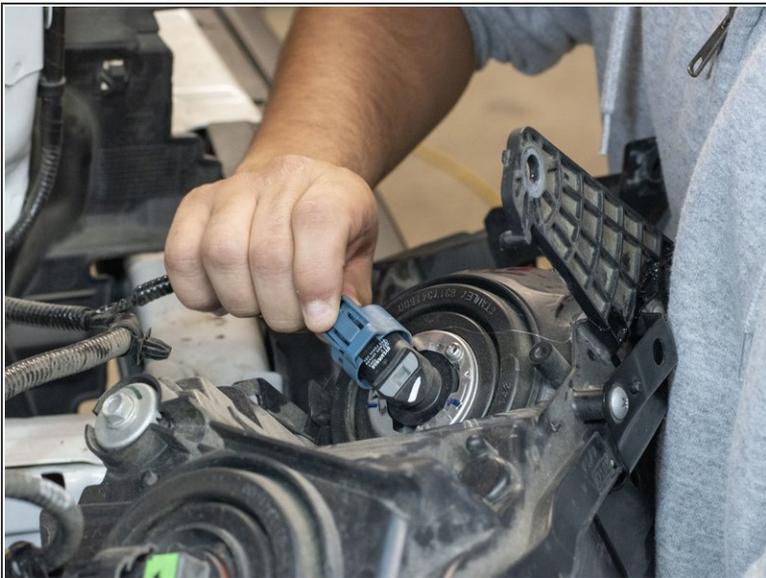

- Press the tab on the connector and pull. Do this for all 4 connectors.

To reassemble your device, follow these instructions in reverse order.