




# ASUS Chromebook C300MA-DH01 Battery Replacement

In this guide we will give you step by step instructions on how to replace your battery in an ASUS Chromebook C300MA-DH01

Written By: amer khalil

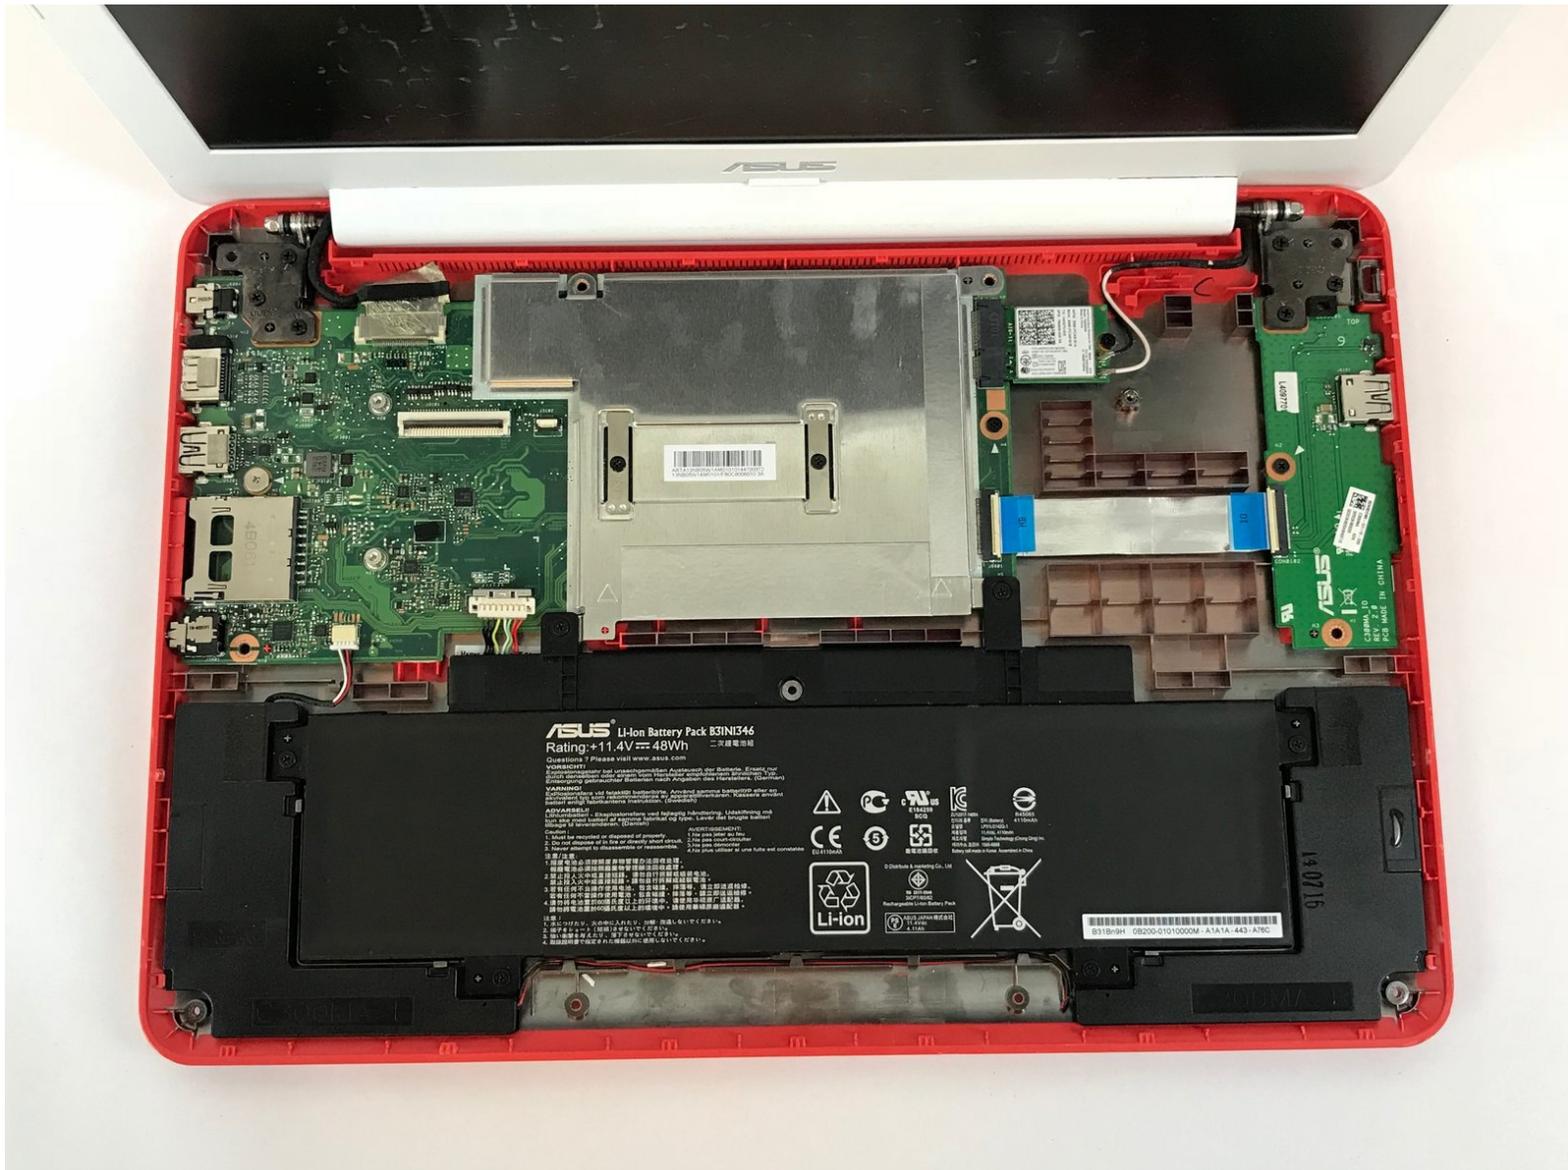

This document was generated on 2019-10-07 12:45:24 AM (MST).

---

## INTRODUCTION

This guide will help you replace the battery in your device. Before starting, remember to completely disconnect your device from any power sources and ensure your device is turned off. Always use caution when working with electronic components.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [JIS #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Flip the Chromebook over so the bottom of the device is facing up.

## Step 2




- Using the JIS-J0 Screwdriver, remove the following screws from the bottom
  - (5) Five 6mm screws
  - (6) Six 8mm screws

### Step 3



- Gently wedge the spudger in between the bottom of the device and the keyboard, and carefully pry the cover open. Then, carefully lift up on keyboard.

### Step 4

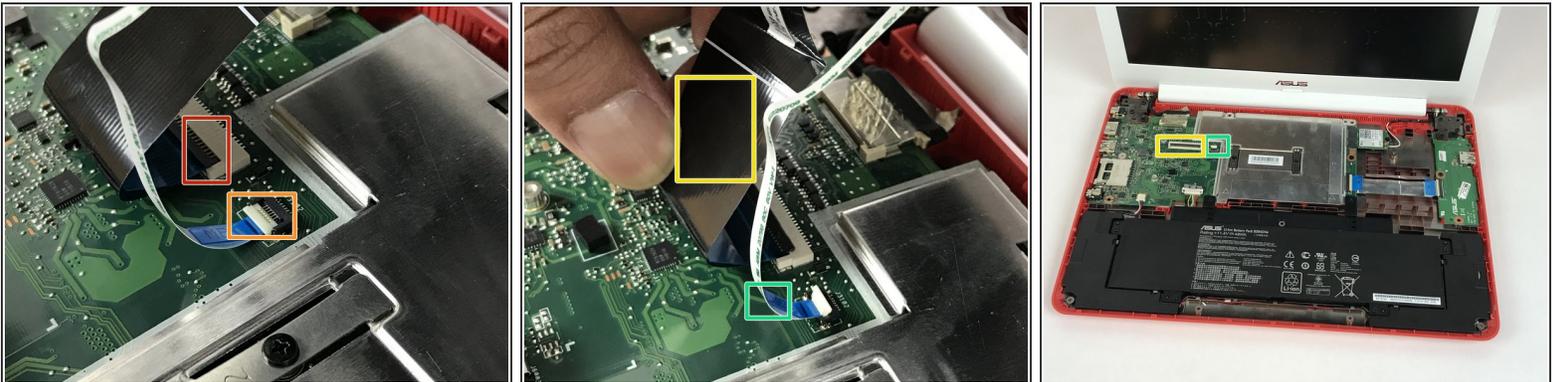


**i** Gently detach connecting cables:

- Carefully flip up the large black tab.
- Carefully flip up small white tab.
- Remove the corresponding black cable.
- Remove the corresponding white cable.


**i** The keyboard will be fully detached at this point.

## Step 5

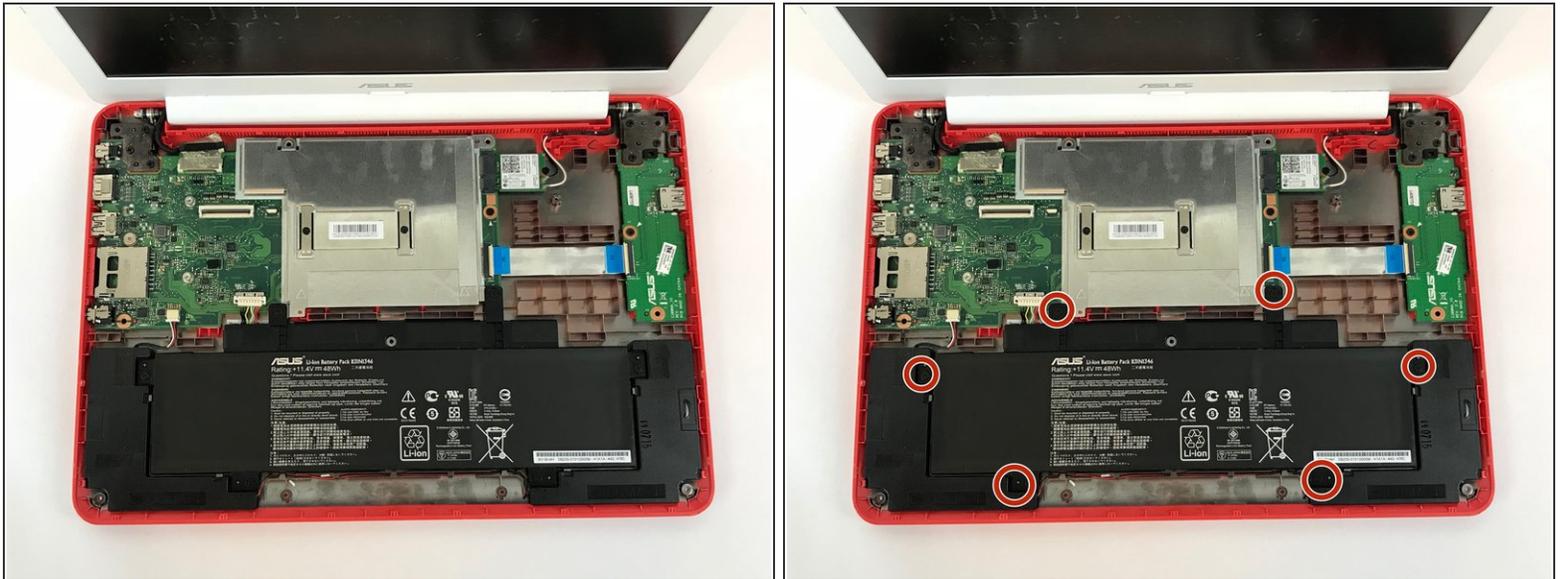

- Using the JIS-J0 Screwdriver, remove the (6) six 6 mm screws from the battery.

## Step 6

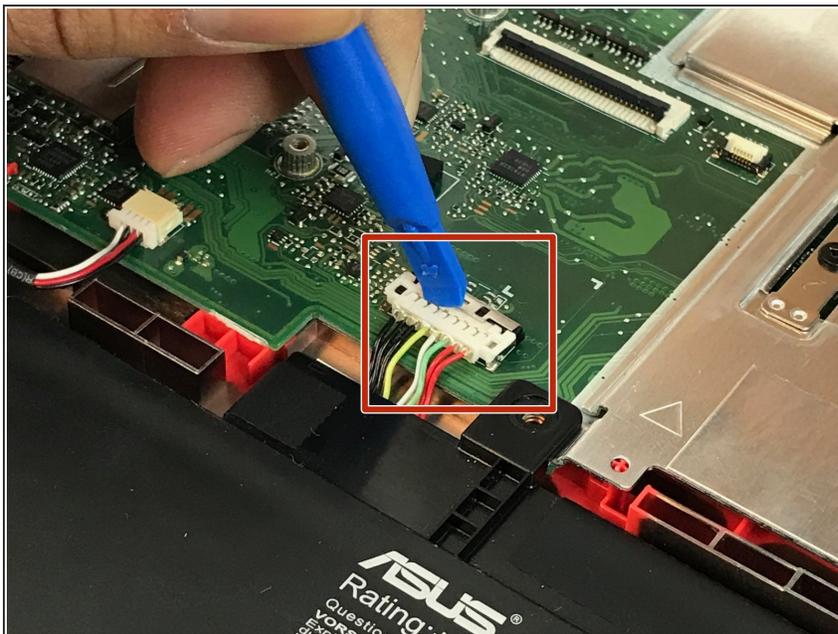

- Using the plastic opening tool, gently push the connector tab away from the battery to detach the cable.
- ⓘ The battery will be fully detached at this point. Carefully lift it out of the device.

To reassemble your device, follow these instructions in reverse order.