




ASUS F550 Keyboard Replacement

How to replace the keyboard on the ASUS F550

Written By: Ryan

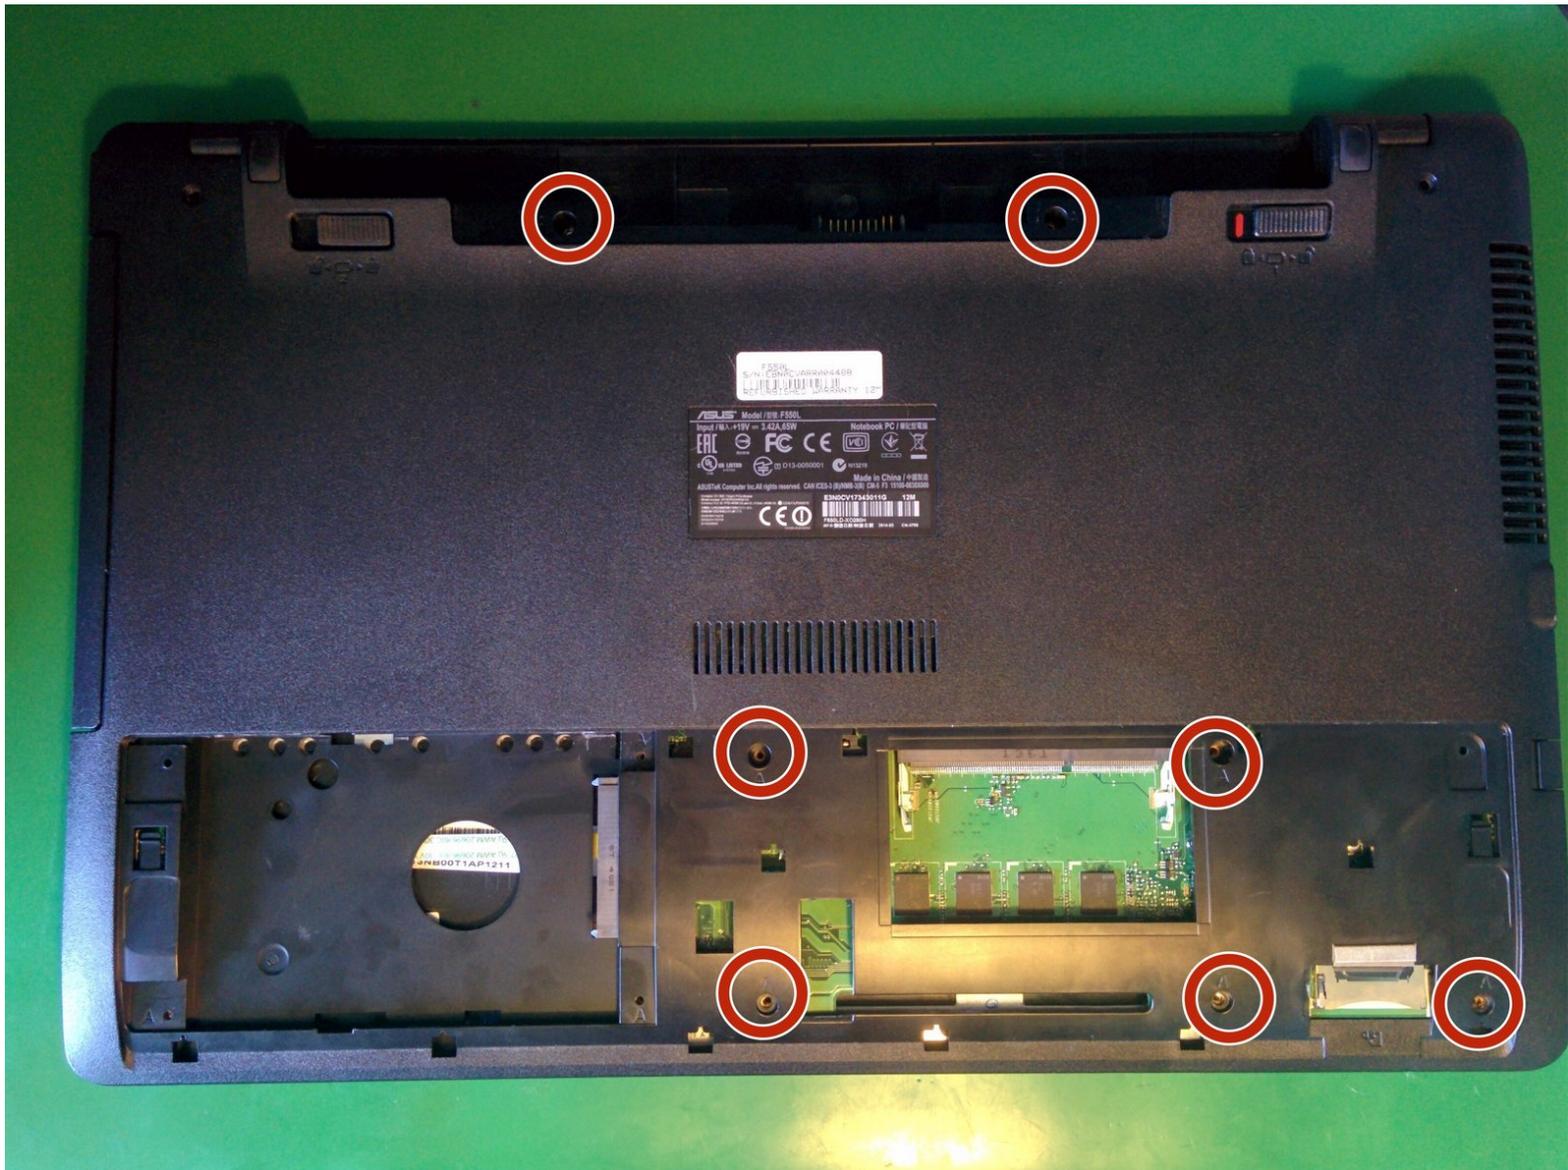

 **TOOLS:**

- [Phillips #0 Screwdriver \(1\)](#)

 **PARTS:**


- [PCIe wireless LAN module \(1\)](#)

Step 1 — ASUS F550 HDD/Ram Cover Removal




- Remove the battery, using release clips.
- ⓘ Ensure device has no residual power by attempting boot once battery is removed.
- Remove either 2 (or 4 for a full teardown) 12mm phillips screws, then removing the bottom cover to gain access to the HDD and RAM.
- Remove HDD and RAM cover

Step 2 — Keyboard

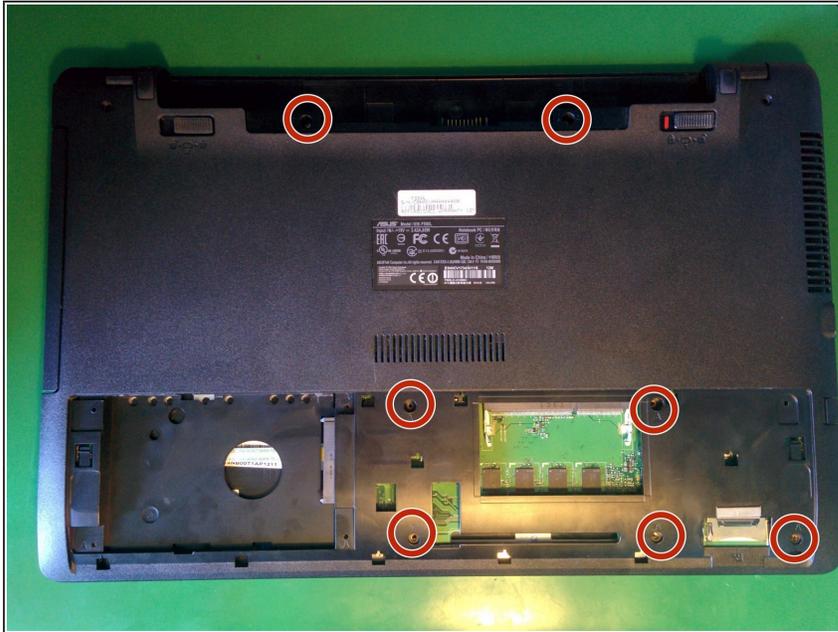

- Remove 7 5mm Phillips screws

Step 3

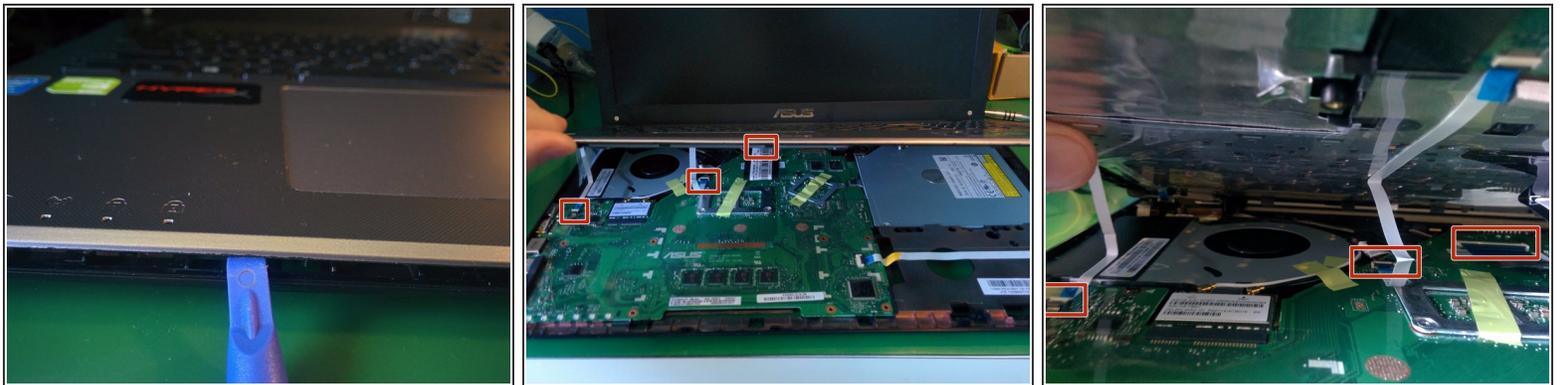

- Flip laptop and open lid. Separate the keyboard plate from the main housing, using a plastic prying tool. Being careful not to damage the LED indicators or other peripherals.
- Disconnect the LED, trackpad, and keyboard ribbon cables.
- The keyboard can now be removed

To reassemble your device, follow these instructions in reverse order.