



# ASUS GL752VW-DH74 Screen Replacement

The following guide demonstrates removing the battery and screen.

Written By: Maxwell Seibert



## INTRODUCTION

This guide demonstrates the removal of the Asus GL752VW-DH74 display. Make sure that the laptop is unplugged before utilizing this guide.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Metal Spudger Set](#) (1)

### PARTS:

- [Asus GL752VW-DH74 Screen](#) (1)
-

## Step 1 — Battery



- Remove the 3 small screws located underneath the disk drive.

## Step 2




- Unscrew the 8 remaining .8 cm phillips head screws on the back of the device (circled in red).

### Step 3




- Use the opening tool to pry the back of the laptop case from the top

### Step 4

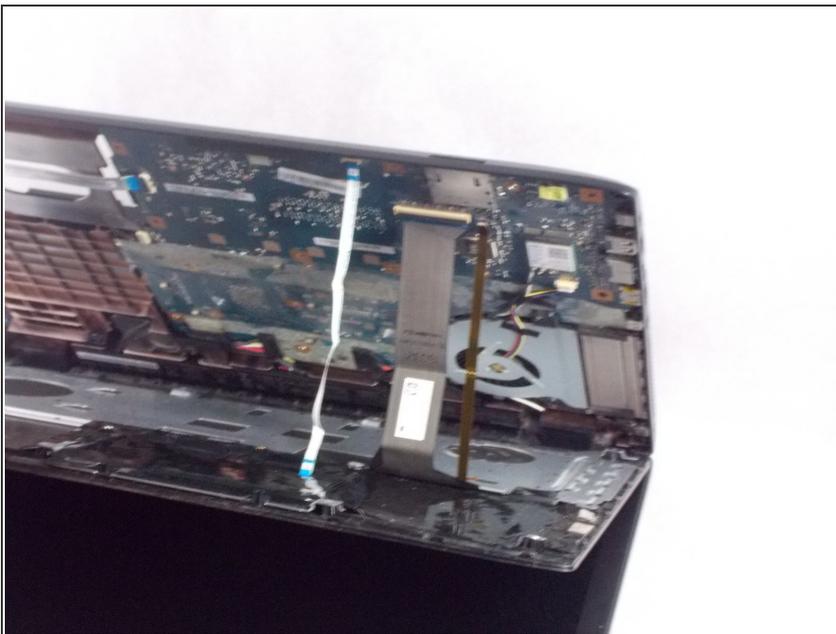


- Disconnect the 3 cables connecting the motherboard to the keyboard.

## Step 5

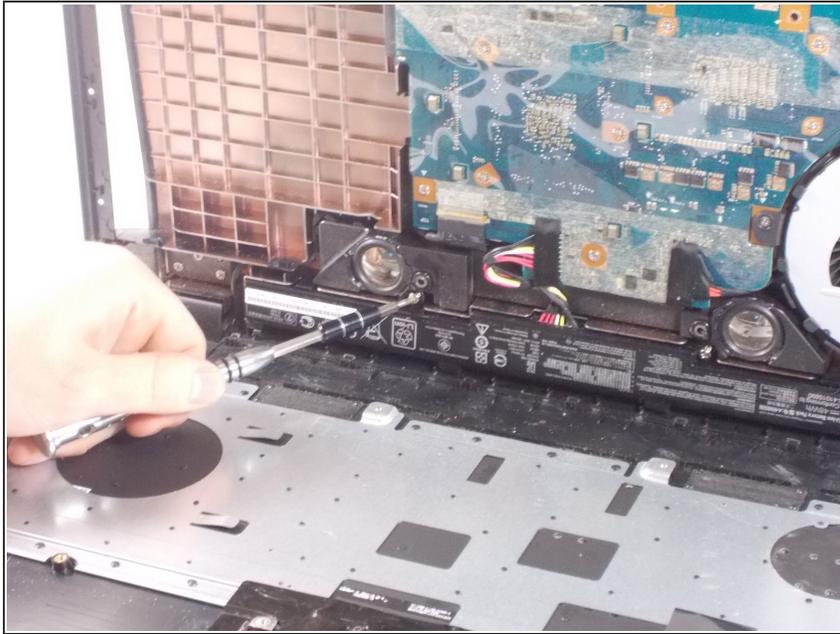


- Unscrew the two 8mm screws attached to the battery

## Step 6

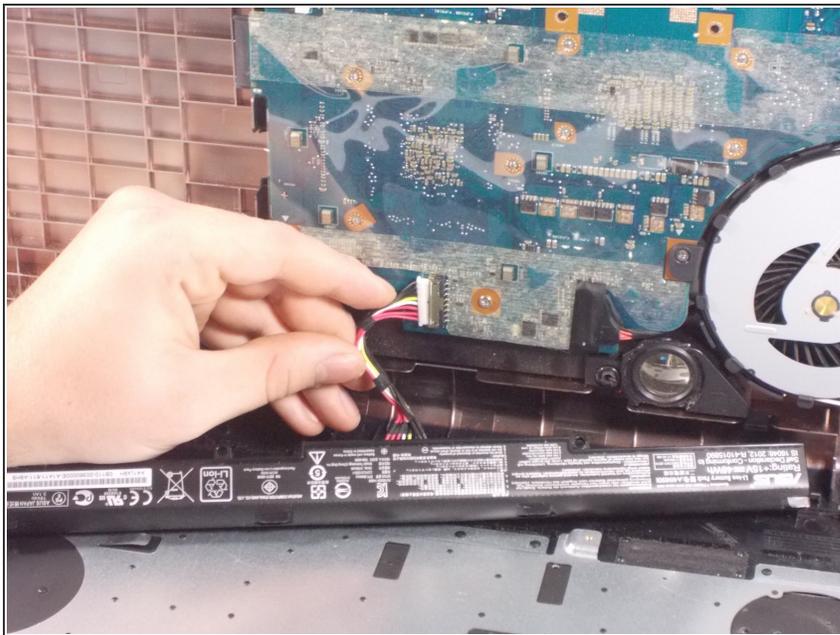


- Disconnect the bundled cable connector and remove the battery.

## Step 7 — Screen

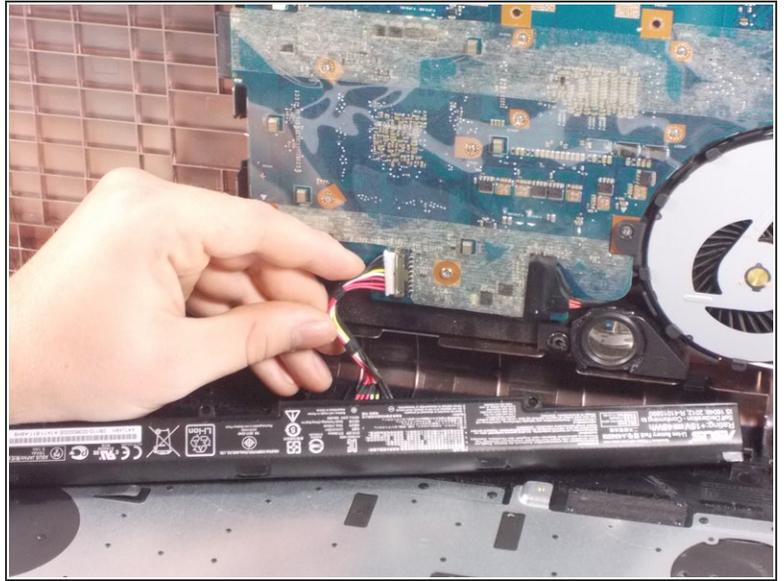

- Follow the Battery Replacement Guide and remove the battery.

## Step 8

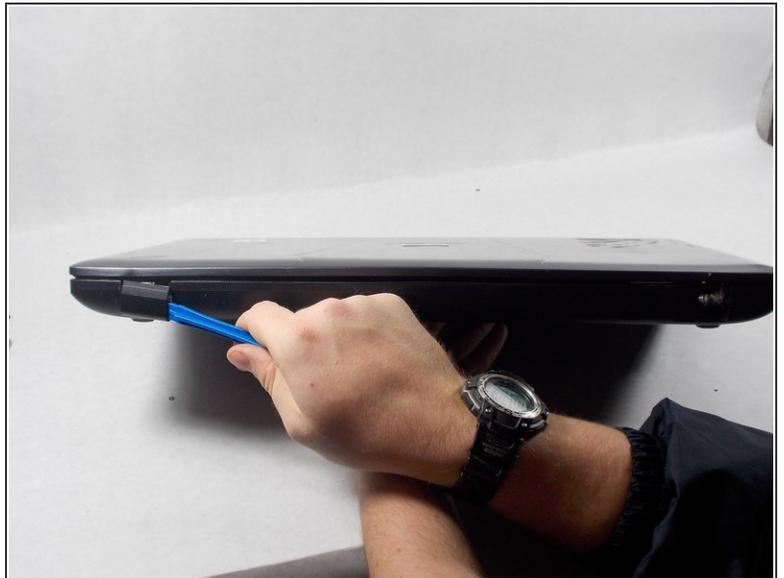

- Unhinge the two hinge covers on the back with a unhooking tool.
- ⓘ This is done to ensure the plastic hinge covers are not damaged.

## Step 9




- Remove the two tape covers and screws on the screen bezel.

## Step 10




- Use the metal spudger tool to pop out the screen bezel from all four sides.

## Step 11

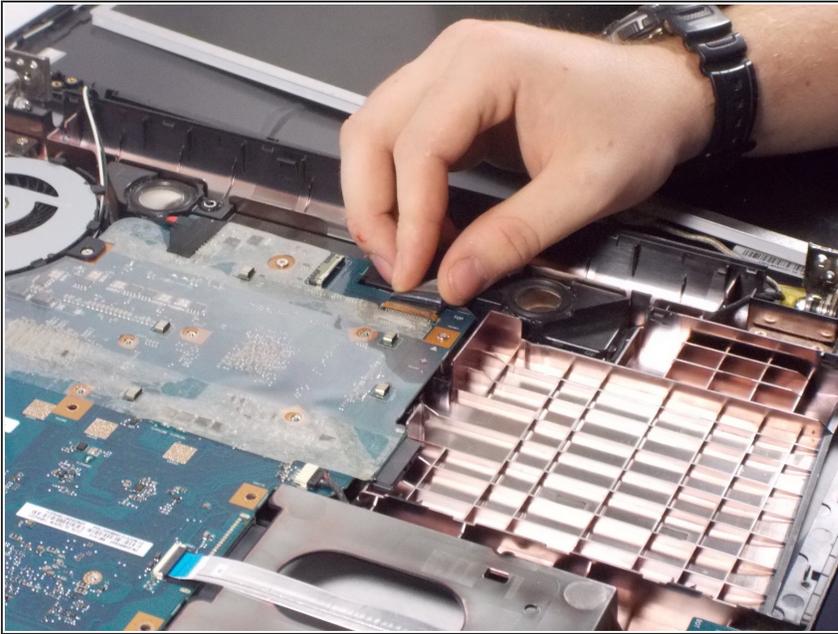

- Remove the SATA cable attached to the screen.

## Step 12

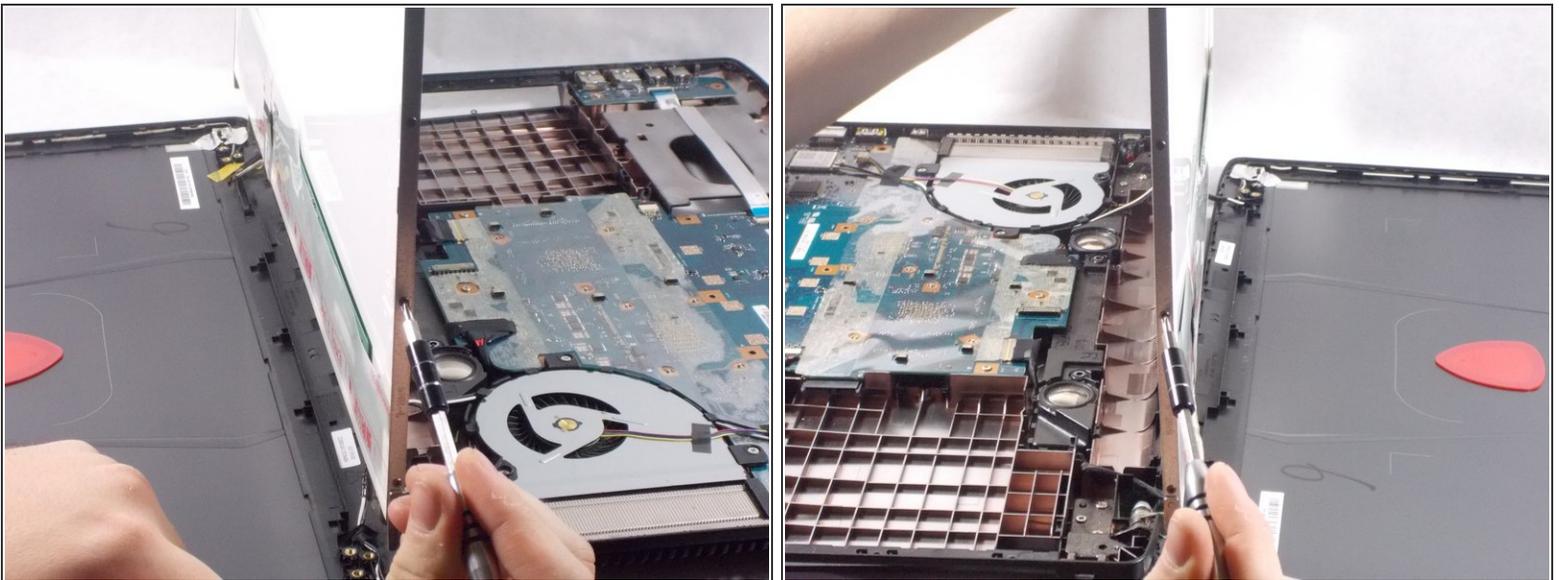

- Unscrew the following screws and remove the screen from the casing.

To reassemble your device, follow these instructions in reverse order.