




# Acer Aspire 5100 Fan Replacement

Replace a broken fan for an Acer Aspire 5100 laptop.

Written By: Brad Rollinson

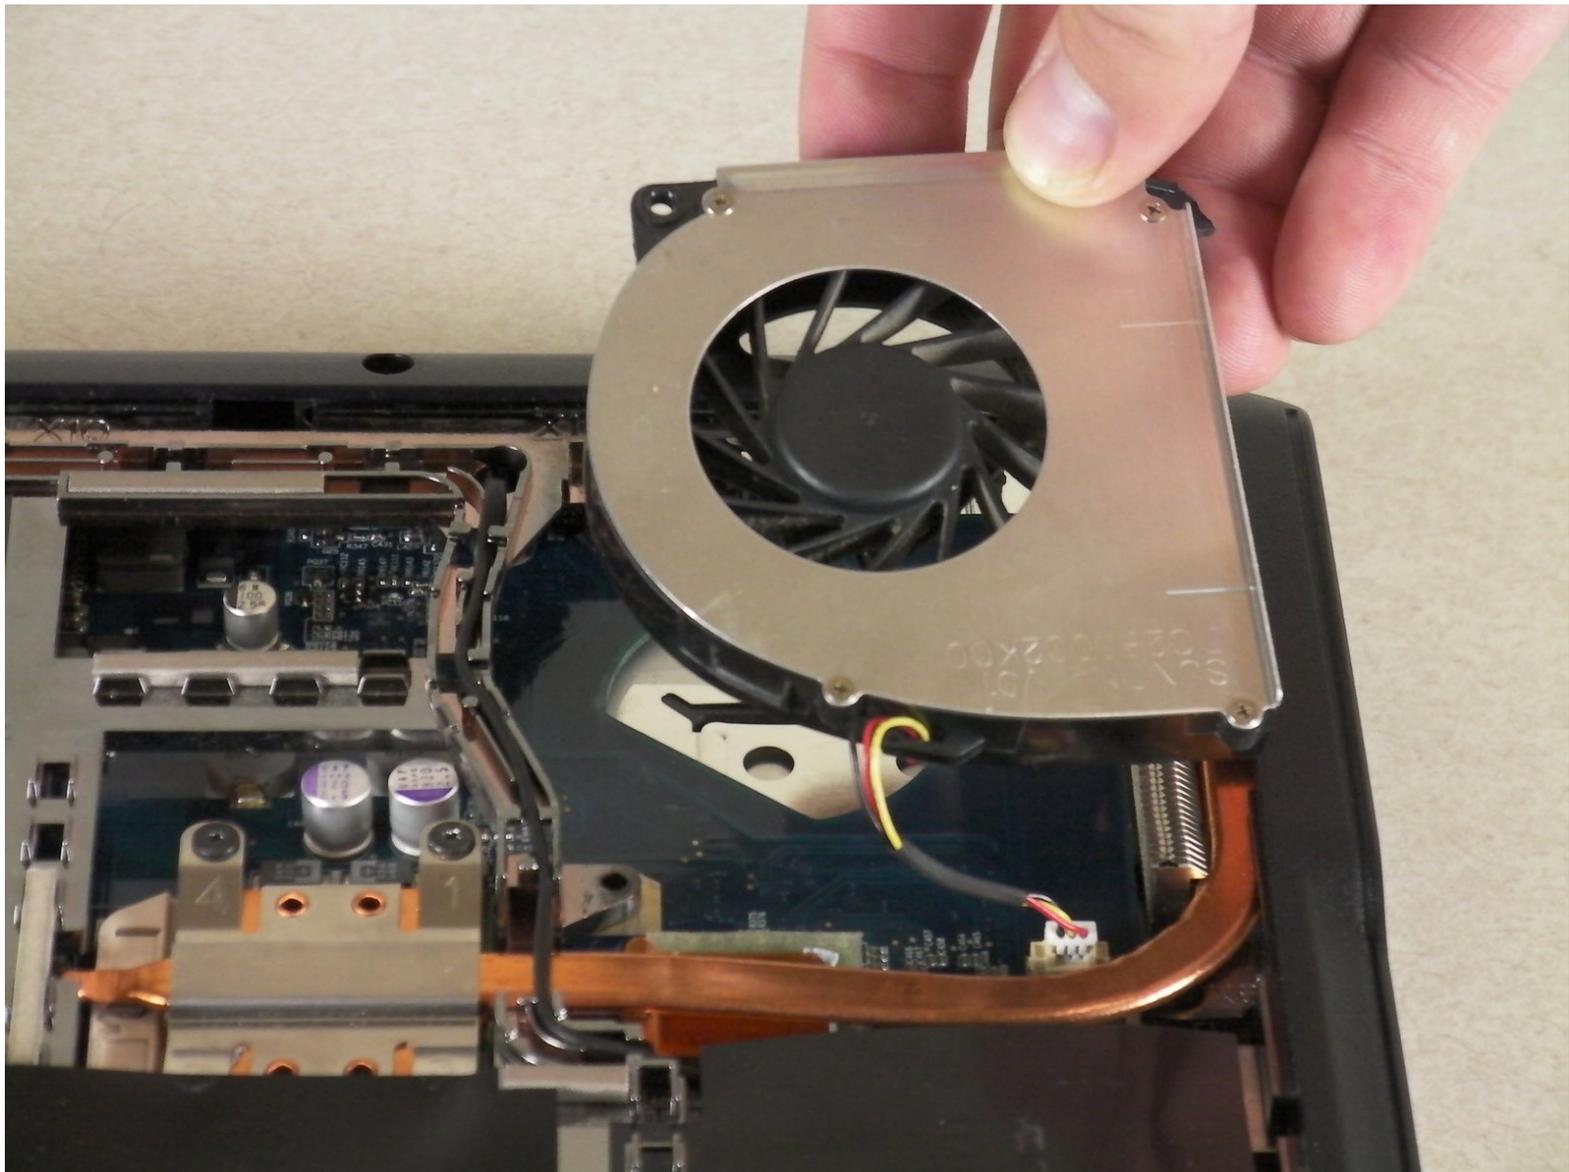

# INTRODUCTION

## Acer Aspire 5100 Fan Replacement



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)



### PARTS:


- [Acer Aspire Replacement Fan](#) (1)

## Step 1 — Fan



- Flip over the laptop
- Although the battery is missing in this photo, it is not necessary to remove.
- Locate the largest removable panel on the back and remove the four screws connecting it.

## Step 2

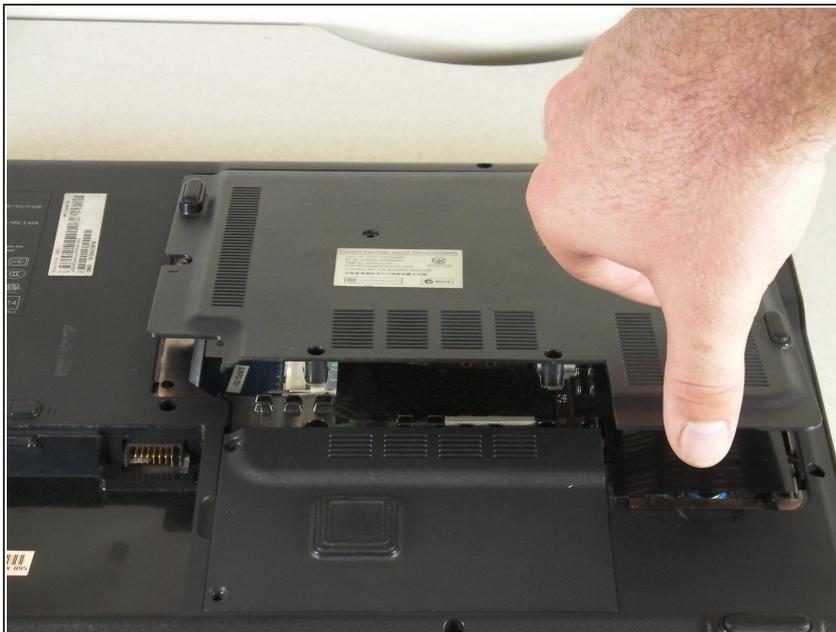


- Lift up and remove the panel.

### Step 3



- Locate the fan and remove the two screws connecting it.

### Step 4

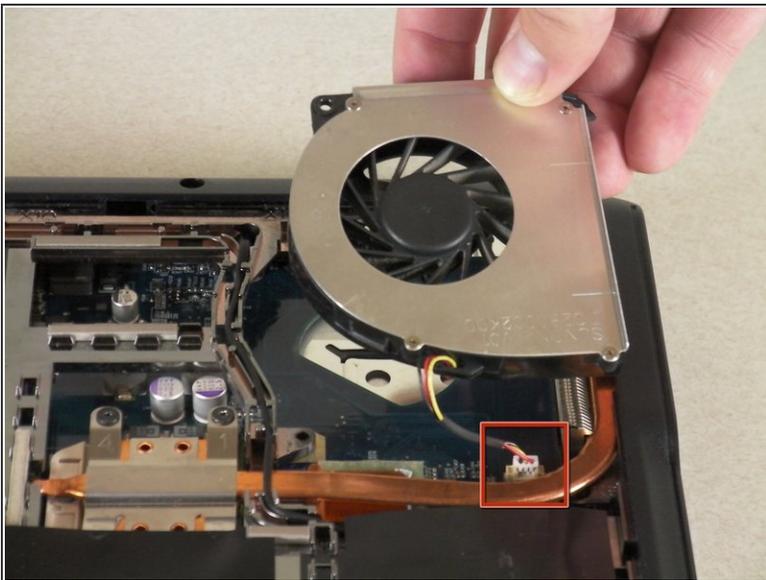

- Lift out the fan and detach the cable that connects the fan to the motherboard.
- ⚠ The fan can break easily. Be careful when removing.
- When detaching the cable, do not pull on the cable itself. Instead, use a small spudger to detach it at the white section that connects it to the motherboard.

To reassemble your device, follow these instructions in reverse order.