




Acer Aspire E5-511p-C6US Keyboard Replacement

Guide to replace keyboard

Written By: Aaron

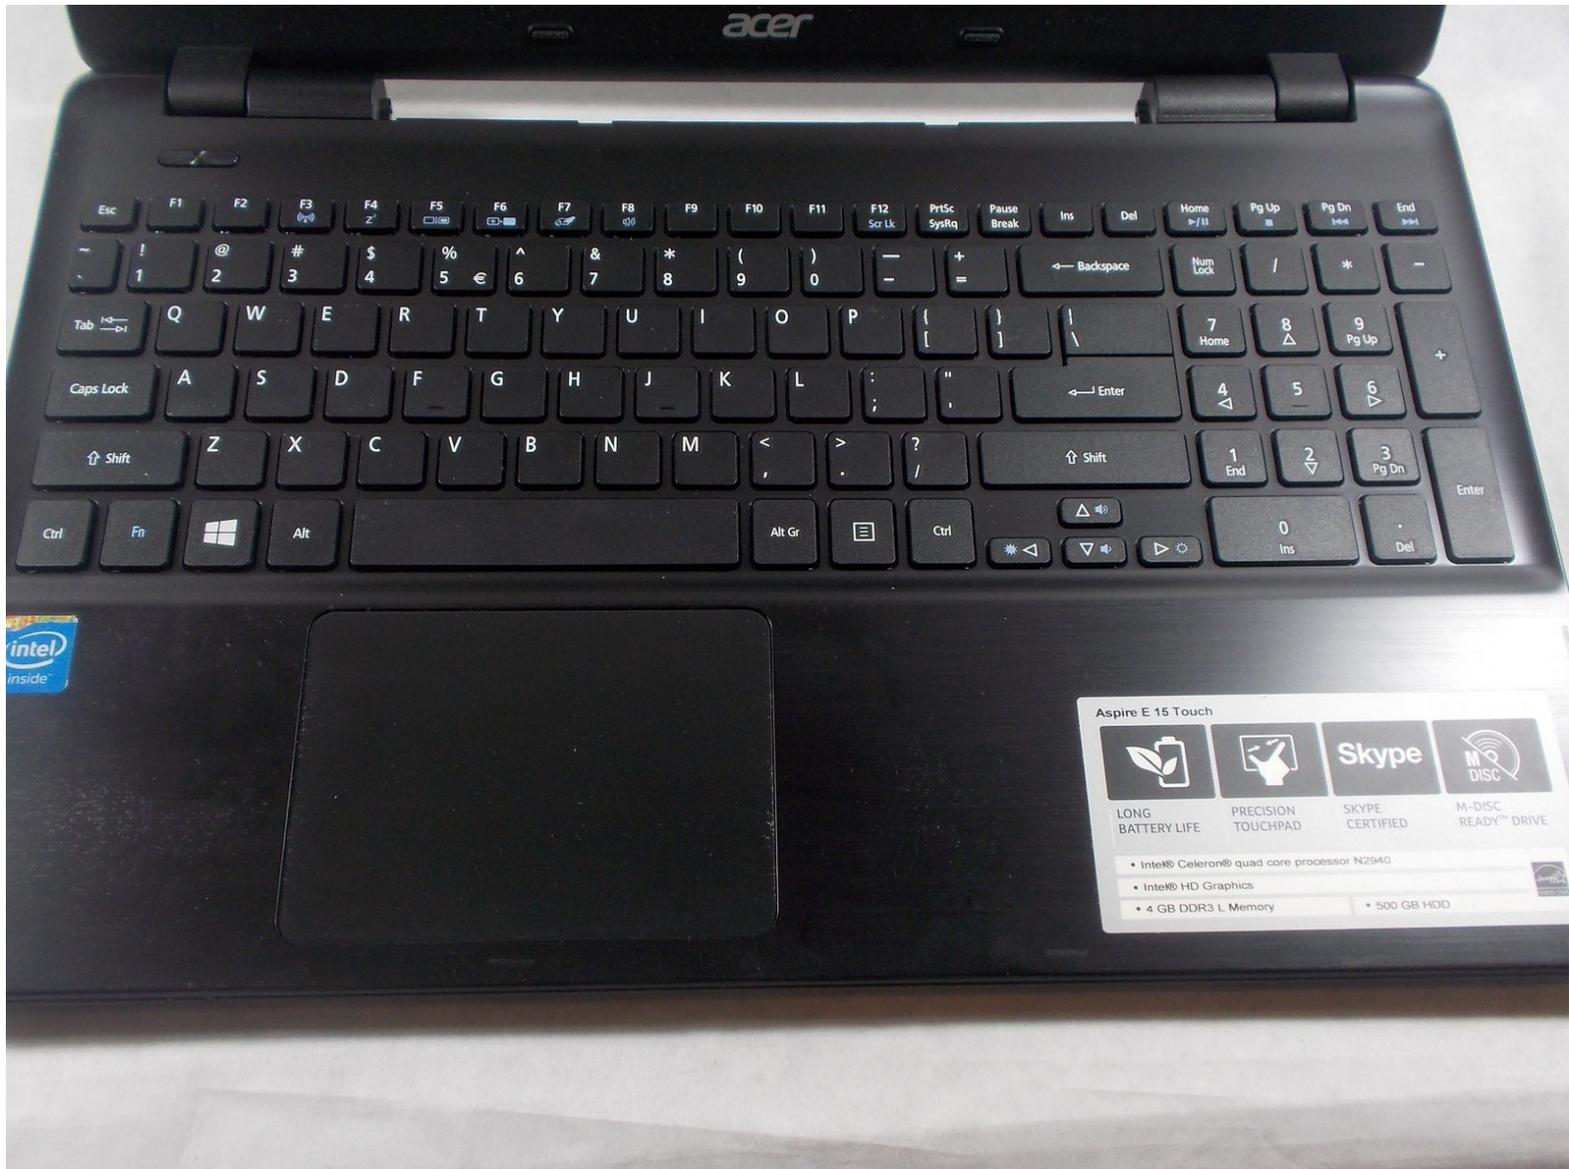

 **TOOLS:**

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery




- On the back of the laptop, there is a sliding lock. Push the slider and the battery will unlock

Step 2



- Pull battery to remove.

Step 3 — Optical Drive

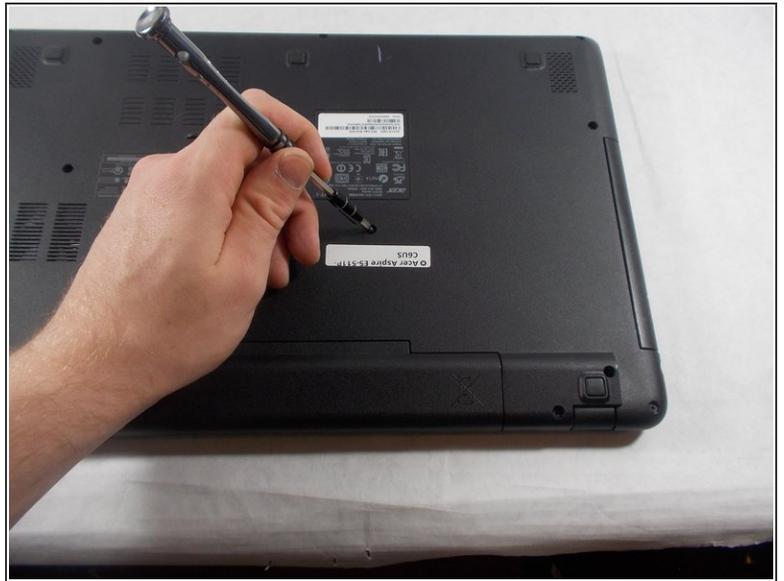

- Remove the 1 screw just above the battery with a Phillips #1 screwdriver.

Step 4



- Pull the Optical Drive out

Step 5 — Keyboard




- Remove the 17 Phillips #1 screws remaining on the back side of the laptop

Step 6



- Flip over the laptop, Using the spudger separate the body of the keyboard from the base of the laptop.

Step 7

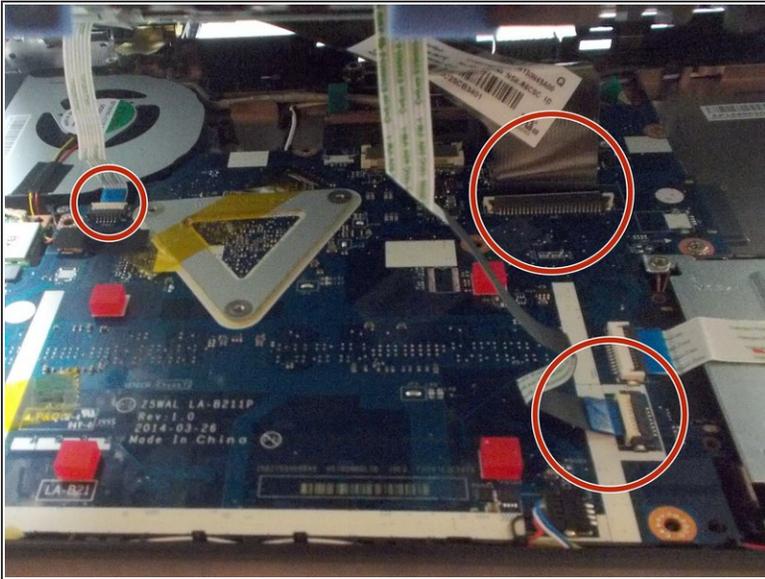

- Carefully lift the keyboard and disconnect the 3 ribbon style connectors from the computers boards.

To reassemble your device, follow these instructions in reverse order.