



# Acer Aspire E5-571-58CG Power Jack Replacement

How to replace a Acer Aspire E5-571-58CG power jack.

Written By: Aliana Johnson



---

## INTRODUCTION

A faulty power jack may be causing your laptop to not charge properly, and it may need to be replaced. This guide will help you through this process.

---

### TOOLS:

- [Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [JIS #00 Screwdriver](#) (1)
-

## Step 1 — Battery



 Make sure the laptop is powered off.

- Flip the laptop over and locate the battery release switch.
- Insert the pointed end of the spudger into the battery release switch.
- Push the battery release switch to the right.

## Step 2




- While the battery release switch is pushed to the right, carefully slide the battery out of its socket.

### Step 3 — Power Jack




- Remove the top panel of the laptop with the plastic opening tool.

### Step 4

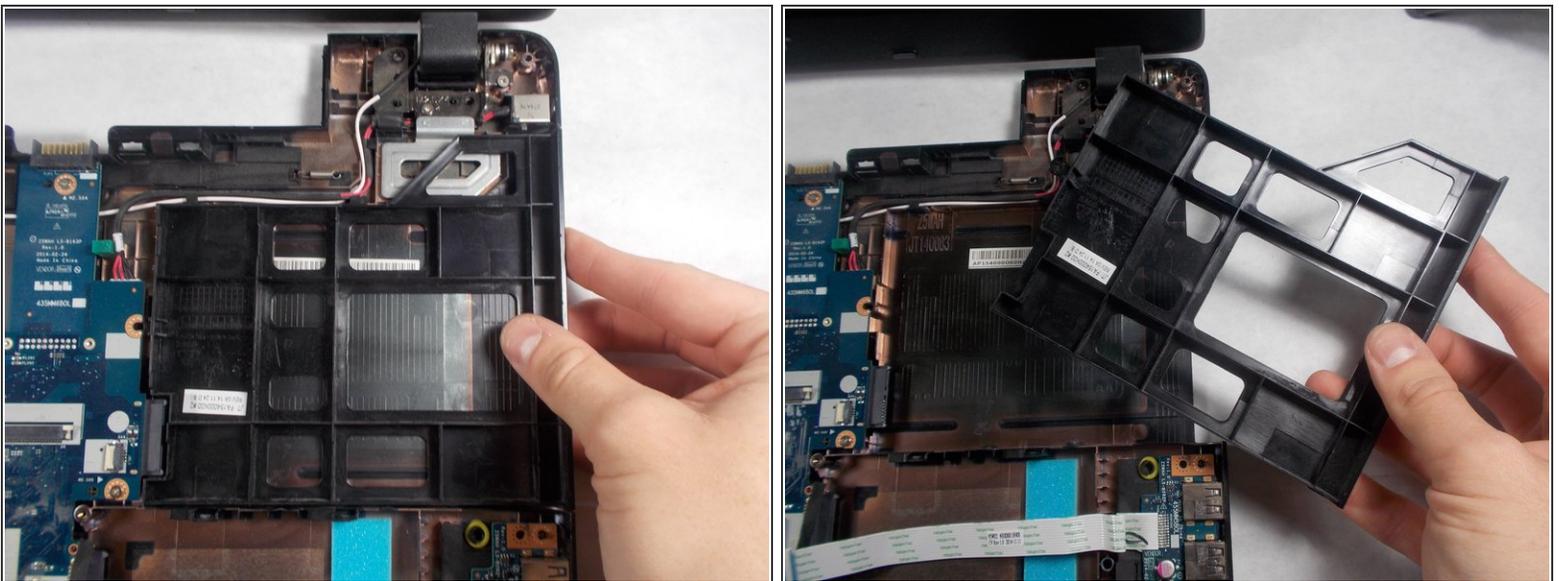


- Remove the plastic safeguard from the CD drive slot.

## Step 5

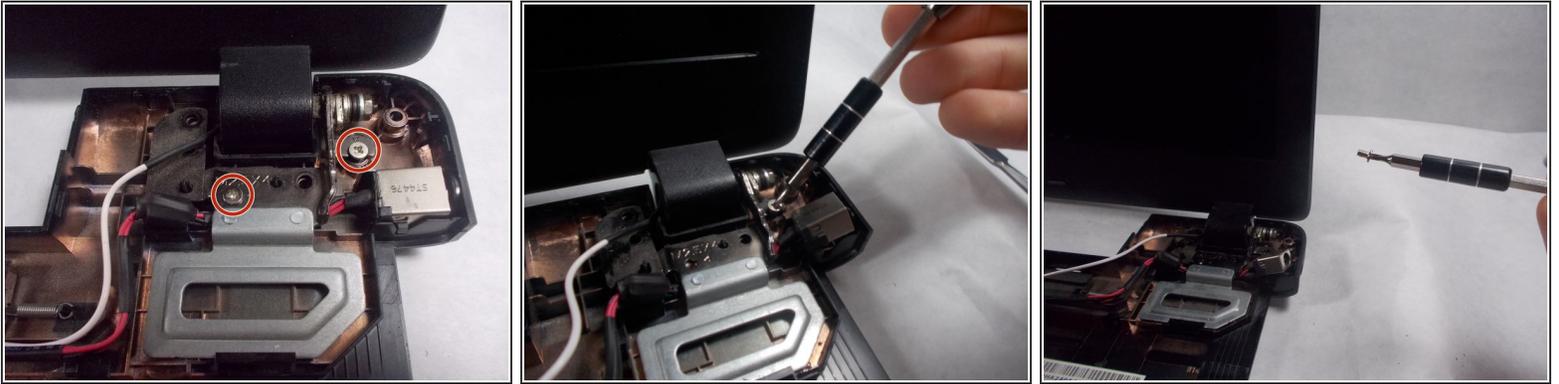

- Remove the marked screws with the JIS #00 screwdriver.

## Step 6

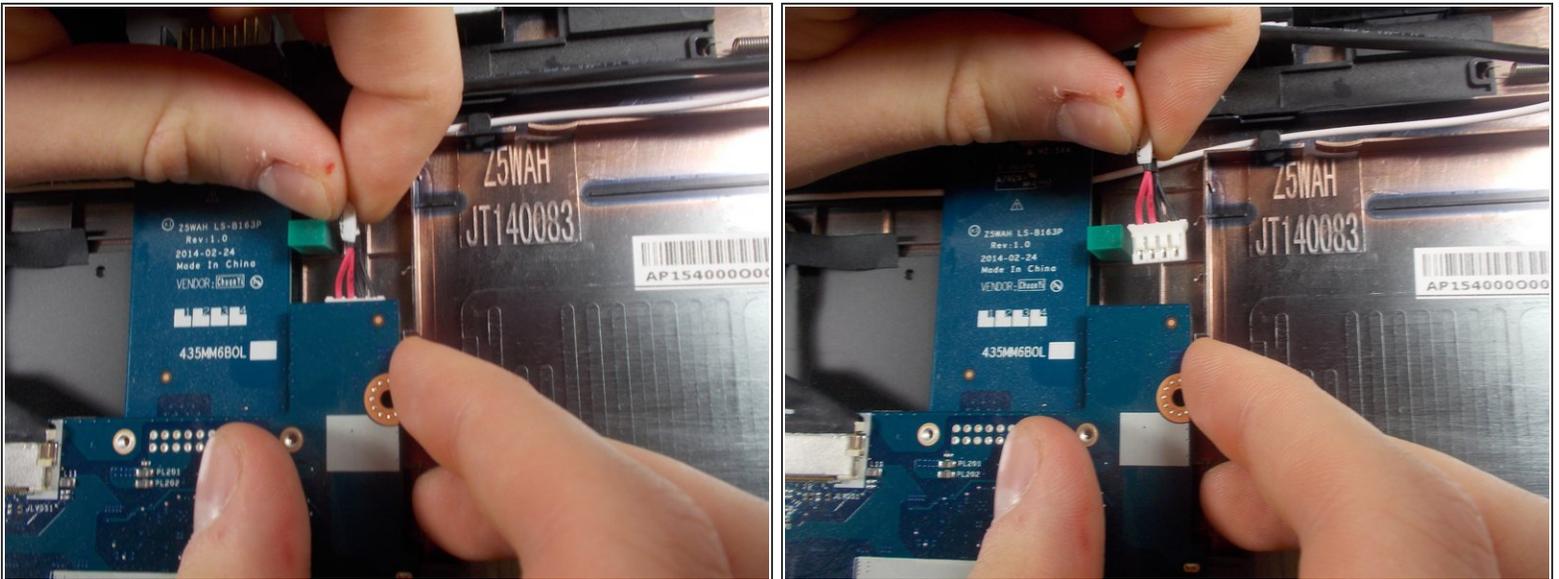


- Disconnect the opposite end of the power jack from the motherboard by carefully pulling the wire.

## Step 7



- Lift the bottom right side of the screen to move the metal plate covering the power jack.

## Step 8

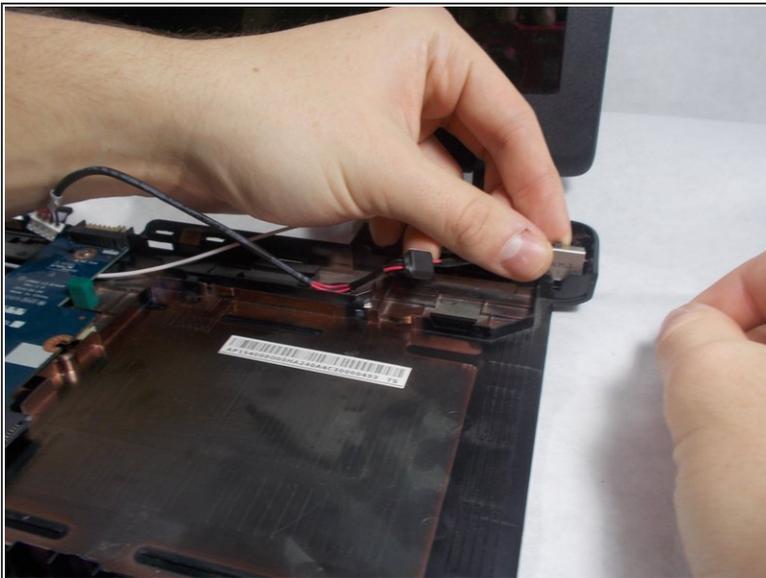

- Carefully lift the power jack out of the laptop.

To reassemble your device, follow these instructions in reverse order.