




Acer Aspire M5-583P-9688 RAM Replacement

This guide shows how to replace the RAM in the Acer Aspire M5-583P-9688 laptop

Written By: Collin Steel

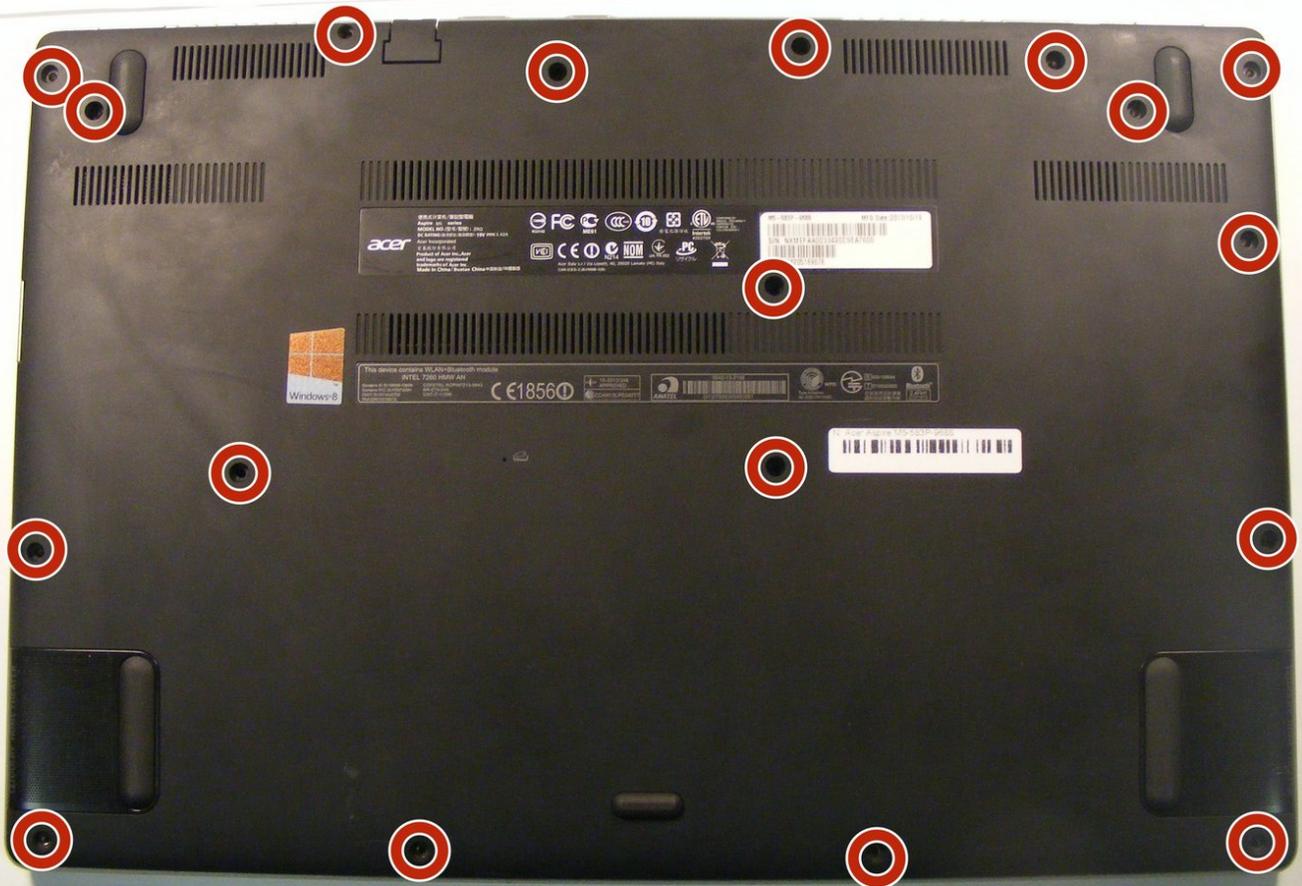

INTRODUCTION

In this guide you will learn how to replace the RAM in an Acer Aspire M5-583P-9688 laptop.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:

- [Crucial 4GB DDR3L-1600 SODIMM](#) (1)
RAM

Step 1 — RAM





- Remove all 18 marked screws (2.12 mm) using a Phillips #1 screwdriver.

Step 2



- Use the spudger to slowly work your way around the perimeter starting at the marked location to pop the bottom cover off.

Step 3

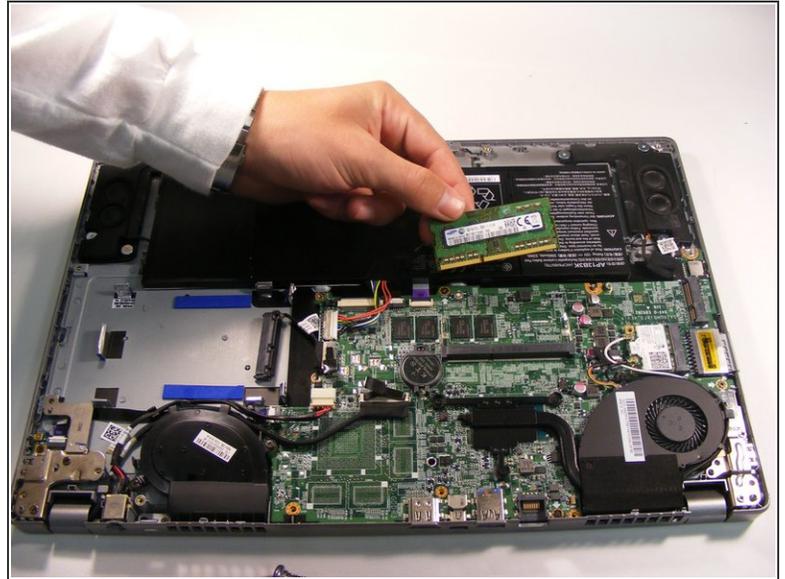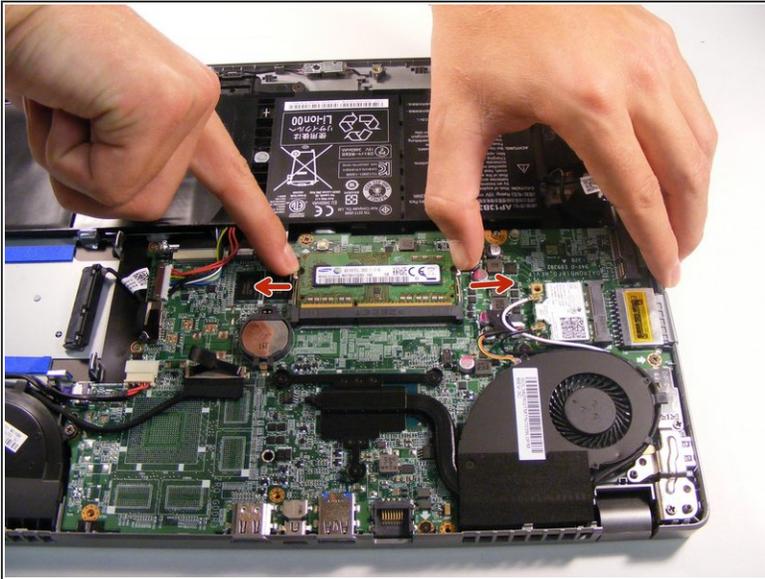

- Pull back the brackets holding the RAM in place and remove the RAM.

⚠ Be careful when pulling the brackets away from the RAM. Don't pull on them too much so they don't break.

To reassemble your device, follow these instructions in reverse order.