



# Acer Aspire R11 R3-131T-C1Z5 Battery Replacement

This guide will navigate you to the battery and show step-by-step how to remove the battery from the laptop.

Written By: Davyd Goff



This document was generated on 2019-09-22 06:38:37 PM (MST).

---

## INTRODUCTION


Here is a guide that will help you remove the dead battery from the laptop and replace it with a new one. Tools you will need to are a PH0 sized Phillips screwdriver, an anti-static wrist strap and a metal spudger.

---

### TOOLS:

- [64 Bit Driver Kit](#) (1)
  - [Metal Spudger](#) (1)
  - [Anti-Static Wrist Strap](#) (1)
-

## Step 1 — Battery

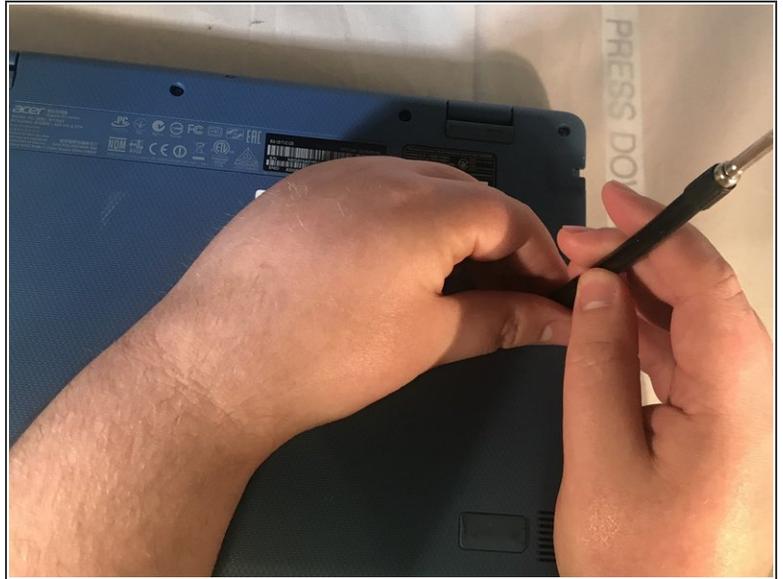

- Flip the laptop on to its front, so that the back is facing up
- Unscrew the twelve 19.05 mm PH#0 screws.

## Step 2




- At the left front corner of the laptop, under the intel sticker, press the sharp end of a metal spudger between the keyboard and the back cover to pry it apart.

## Step 3



- Connect the clip of an anti-static wrist strap to any piece of metal on the computer.
- ⚠ It is important to ground yourself to avoid static.

## Step 4

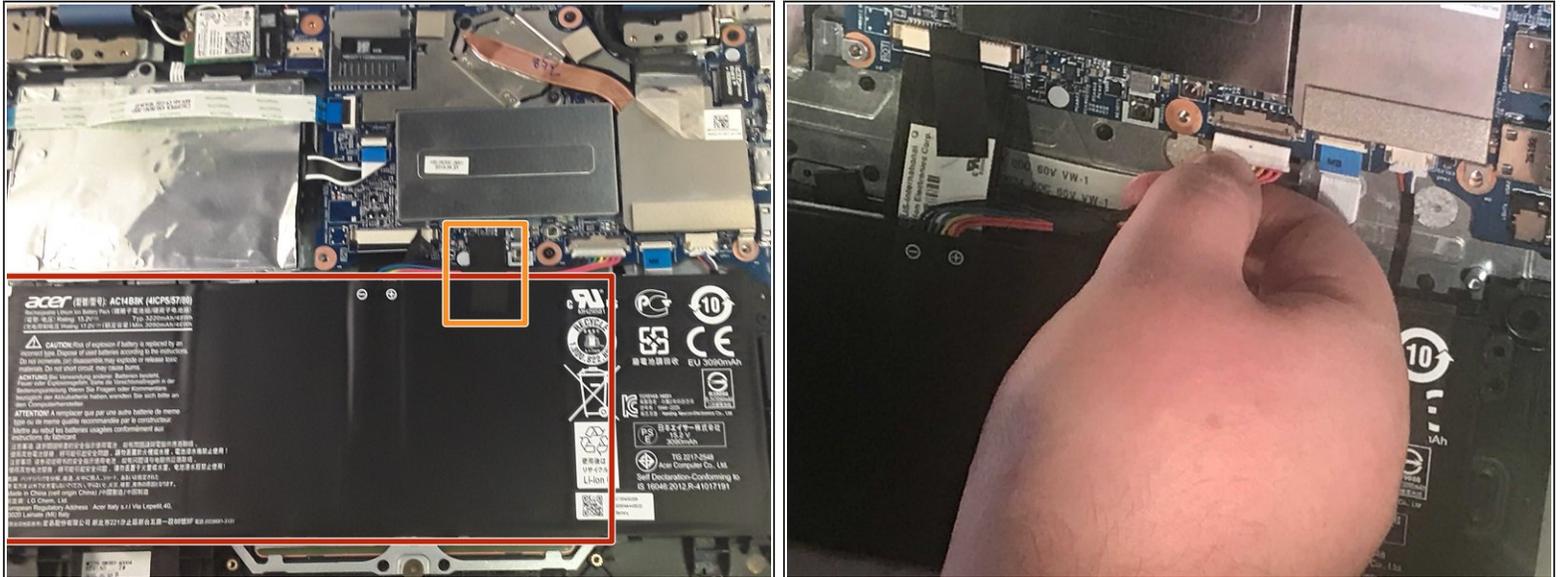

- Locate the large black rectangle at the bottom . This is your battery.
- ⚠ If you see that your battery is oozing or bulging, step away from the device.
- Remove the black electric tape that is on the rainbow colored cable at the top of the battery.
- Gently pull on the cable to disconnect.

## Step 5



- Remove the two 12.7 mm PH#0 screws. One of these screws is located on the top of the left side of the battery and the other is located in the top of the right side of the battery.
- Remove the battery

To reassemble your device, follow these instructions in reverse order.