




# Acer Aspire R11 R3-131T-C1Z5 Hard drive Replacement

This guide will show you how to replace the Hard Drive.

Written By: Jacqueline Englehardt

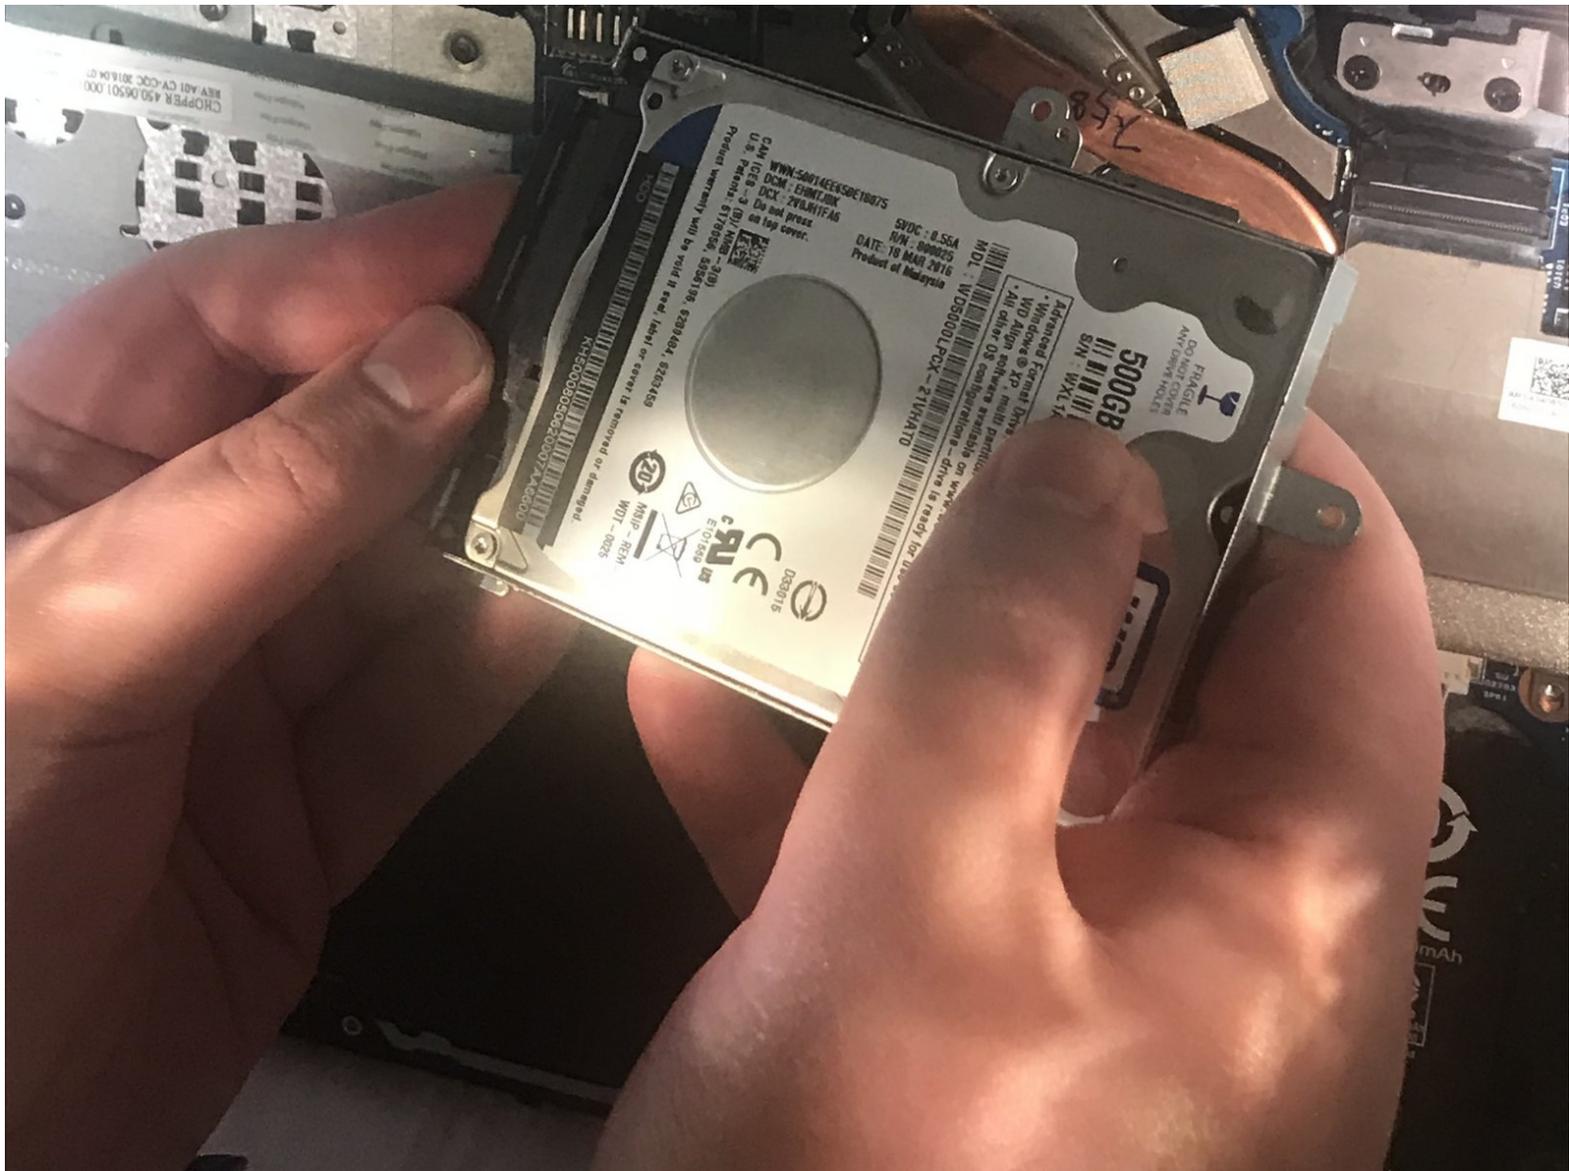

## INTRODUCTION

Here is the guide to help you locate the Hard Drive to begin the replacement. Tools you will need to remove the screws is a PH0 sized Phillips screwdriver, anti-static wrist strap, and a metal spudger.


### TOOLS:

- [64 Bit Driver Kit](#) (1)
- [Metal Spudger](#) (1)
- [Anti-Static Wrist Strap](#) (1)

### PARTS:

- [1 TB SSD / Upgrade Bundle](#) (1)
- [250 GB SSD / Upgrade Bundle](#) (1)
- [500 GB SSD / Upgrade Bundle](#) (1)
- [2 TB SSD / Upgrade Bundle](#) (1)

## Step 1 — Hard drive

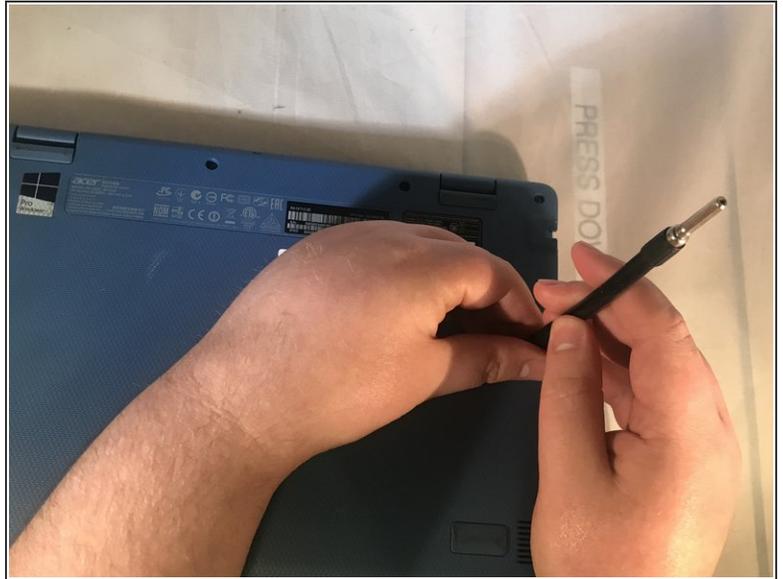

- Flip the laptop over on its front, so that the back is facing up.
- Unscrew the twelve 19.05 mm PH#0 screws.

## Step 2





- At the left front corner of the laptop, under the intel sticker, press the sharp end of a metal spudger between the keyboard and the back cover to pry it apart.

⚠ It is important to ground yourself to avoid static.

- Put on an anti-static wrist strap and connect the metal clip at the other end to any piece of metal you can identify on the laptop.


## Step 3

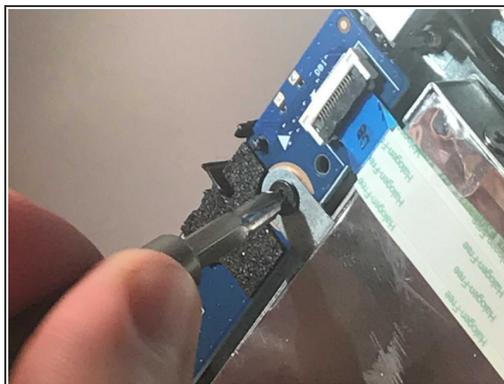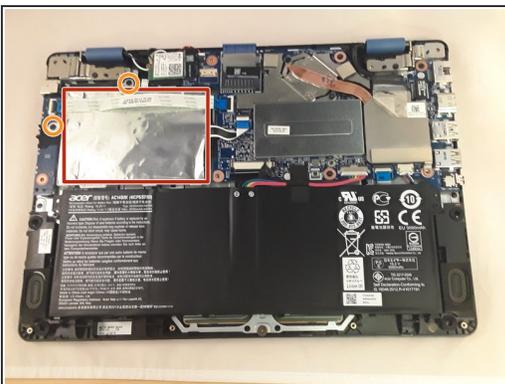

- Locate the big silver aluminum square on the left side of the back of the laptop. This is the hard drive to the computer.
- Remove the two 12.7 mm PH#0 screws.

This document was generated on 2020-01-24 12:07:01 PM (MST).

## Step 4

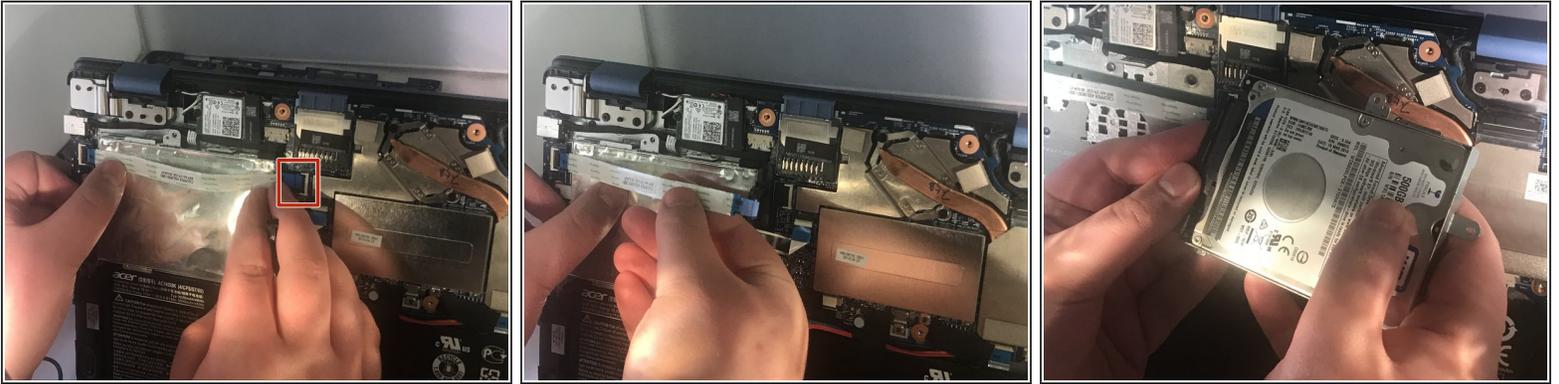

- Lift and disconnect right flap of the white ribbon that runs across the hard Drive.
- Detach the cable that is located right where you disconnected the ribbon.
- Remove the Hard Drive

To reassemble your device, follow these instructions in reverse order.