




Acer Aspire S3-391-6046 Keyboard Replacement

How to replace a Acer Aspire S3-391-6046 keyboard.

Written By: Brian Jimenez

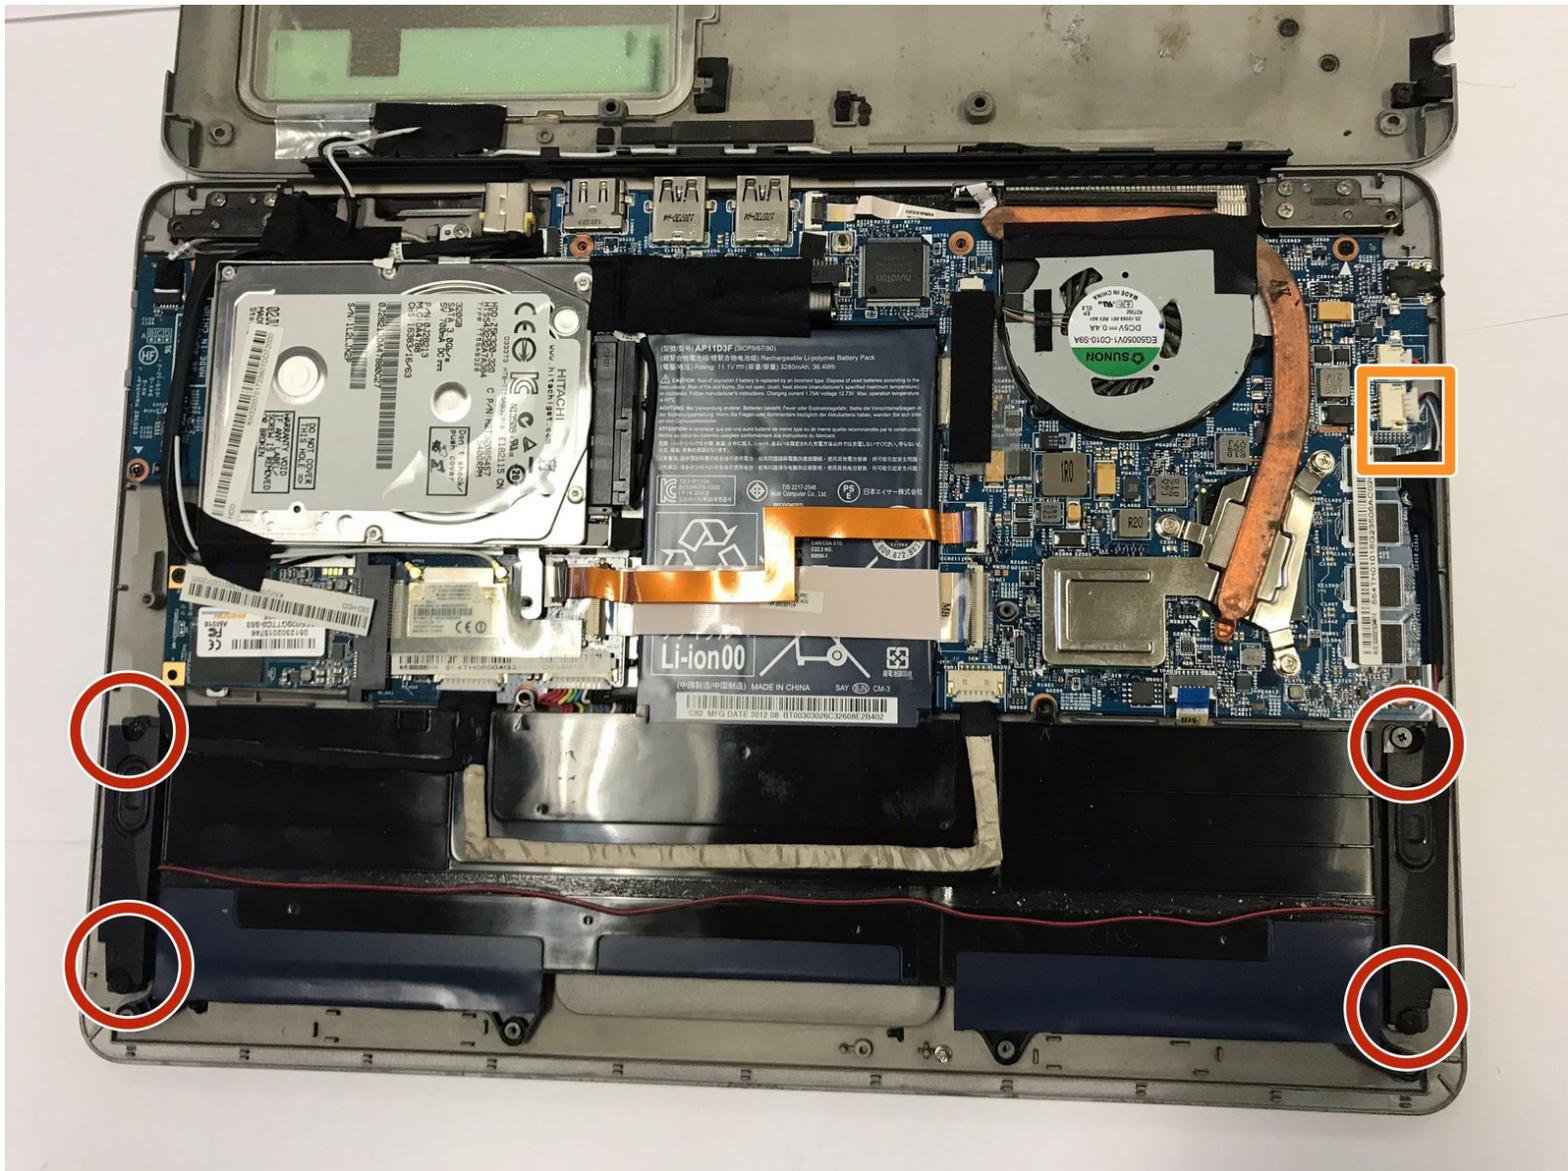

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Place laptop upside down.

Step 2






- Remove the twelve 5mm screws with a Phillips #1 screwdriver.

Step 3




- Lift cover upwards away from you.

Step 4 — Keyboard

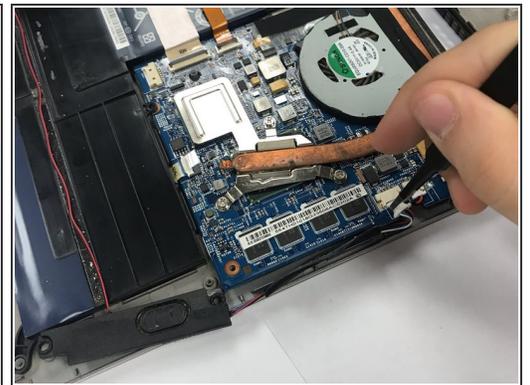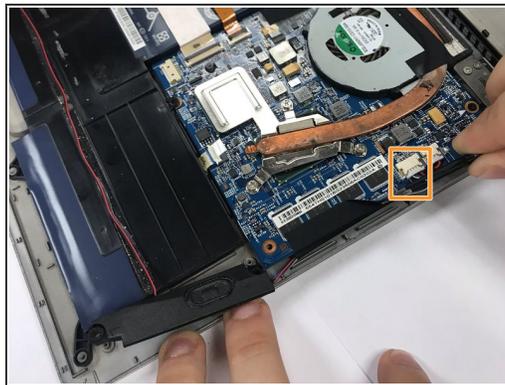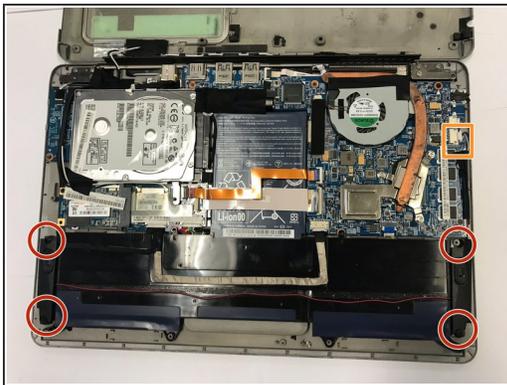




- Remove the four Phillips #0 screws that are connected to the left and right speakers.
- Carefully disconnect the wires that connect the speaker to the rest of the computer.

Step 5

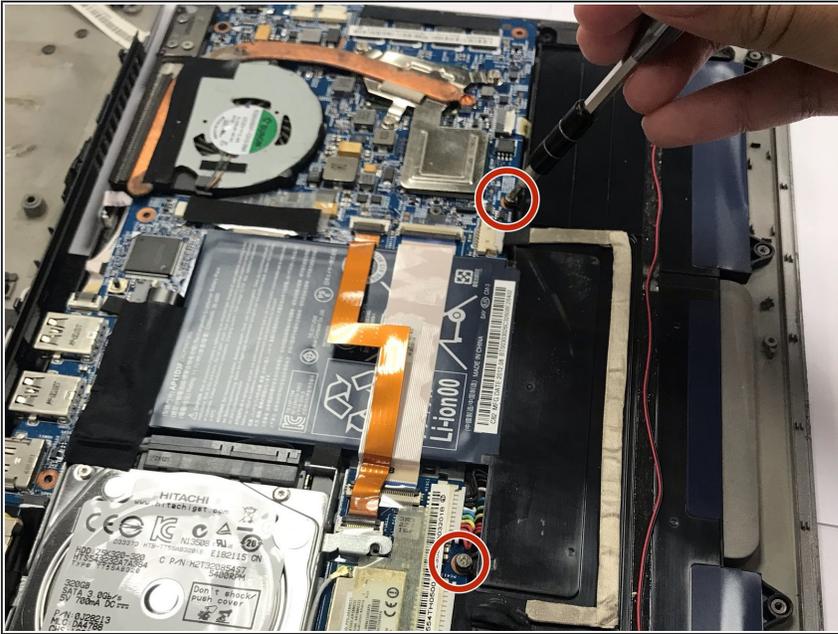


- Remove two Phillips #0 screws that are beside the ends of the gray wire.

Step 6

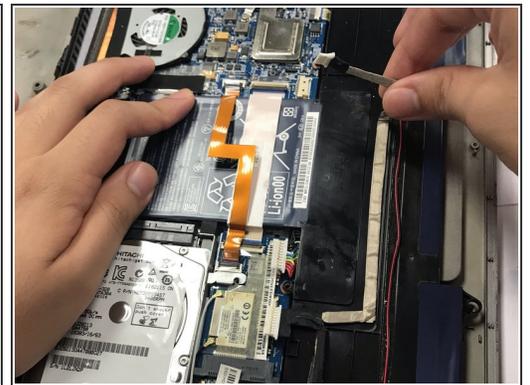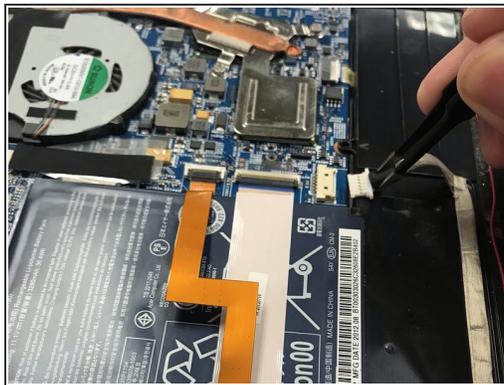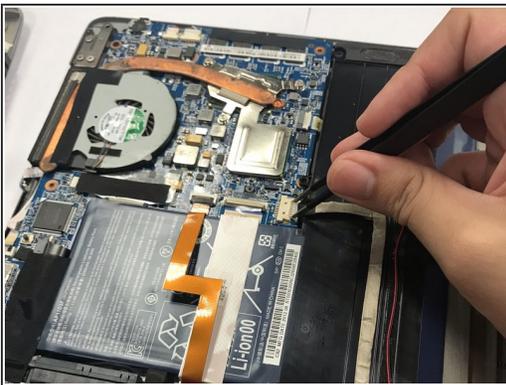


- Remove the gray wire slowly with tweezers.
- Carefully peel wire off.

Step 7

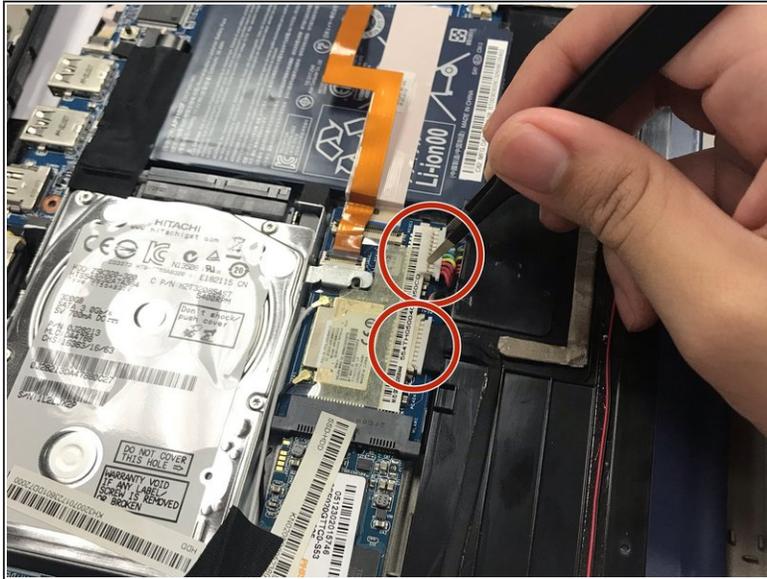


- Slowly remove the two wires that are to the left of the battery with tweezers in an upward pulling motion.

Step 8

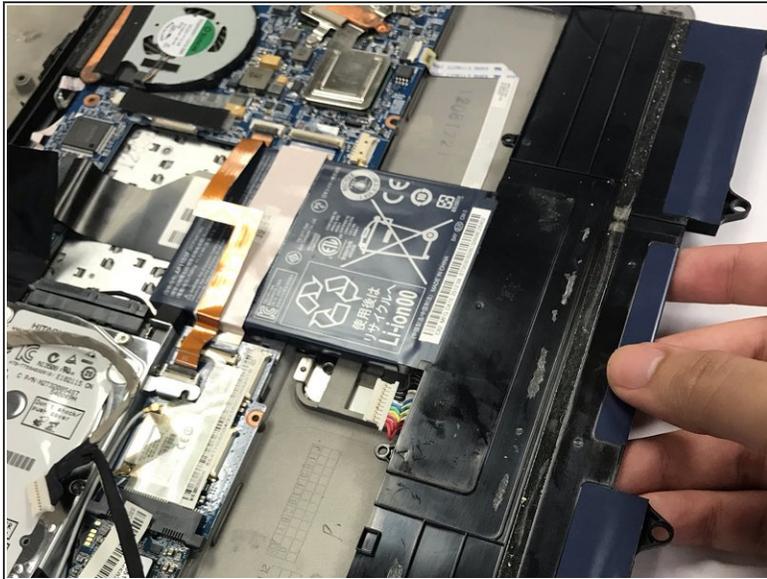



- Completely remove the battery out of its position.

Step 9

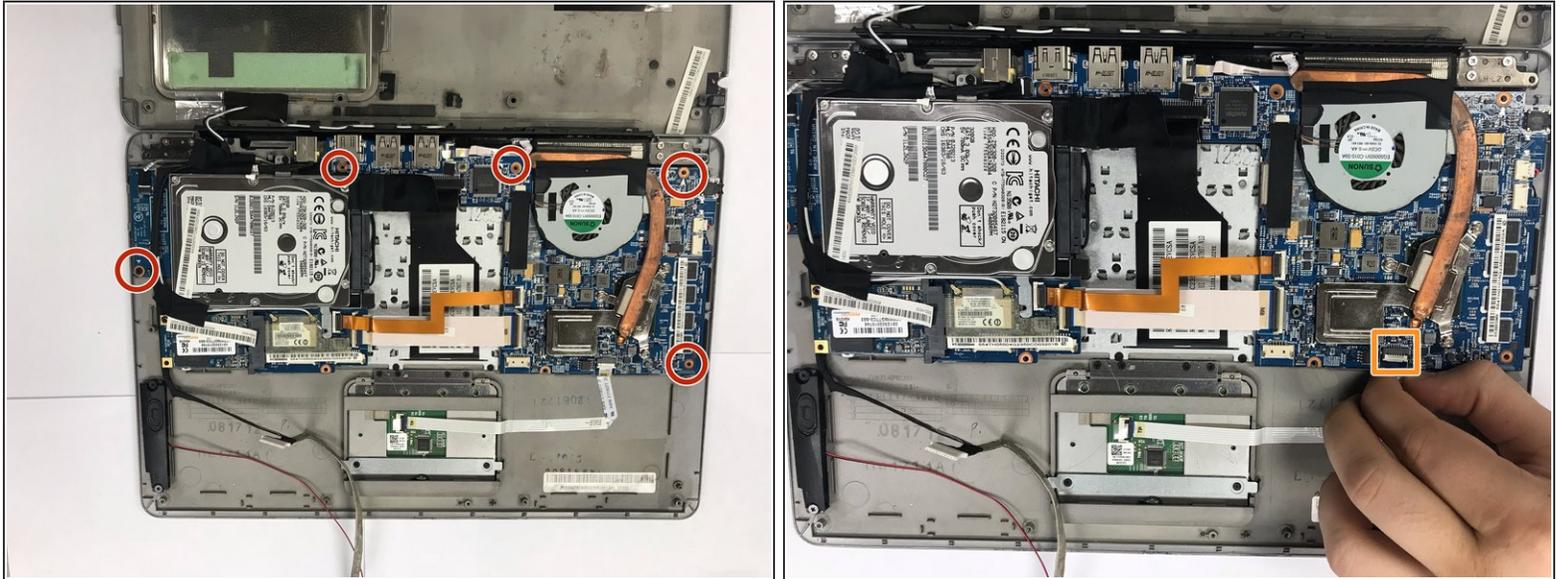

- Remove the five Phillips #0 screws that are on the border of the laptop.
- Disconnect the white wire that is below the fan.

Step 10

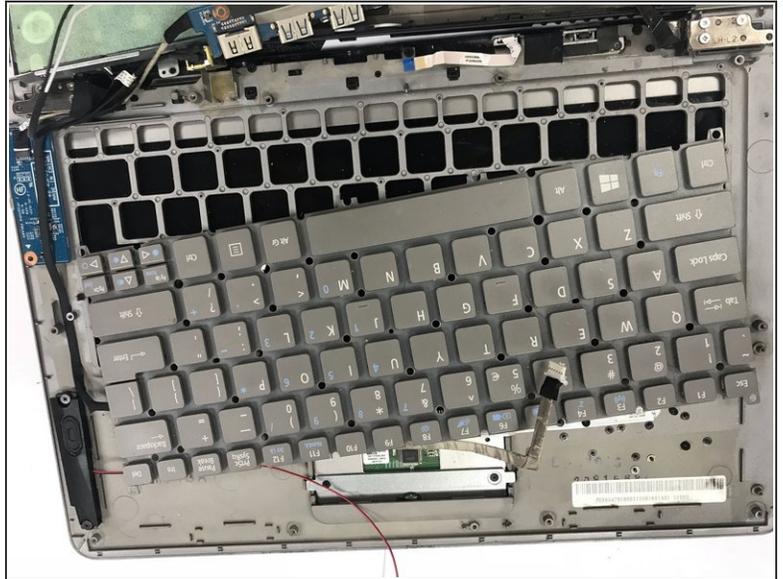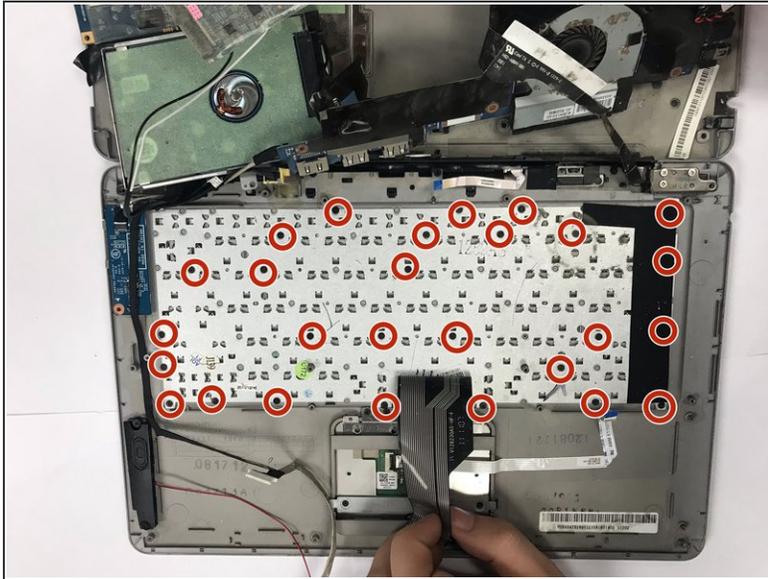

- Flip all of the circuits upwards.
- Remove all Phillips #0 screws.
- Remove the keyboard.

To reassemble your device, follow these instructions in reverse order.