


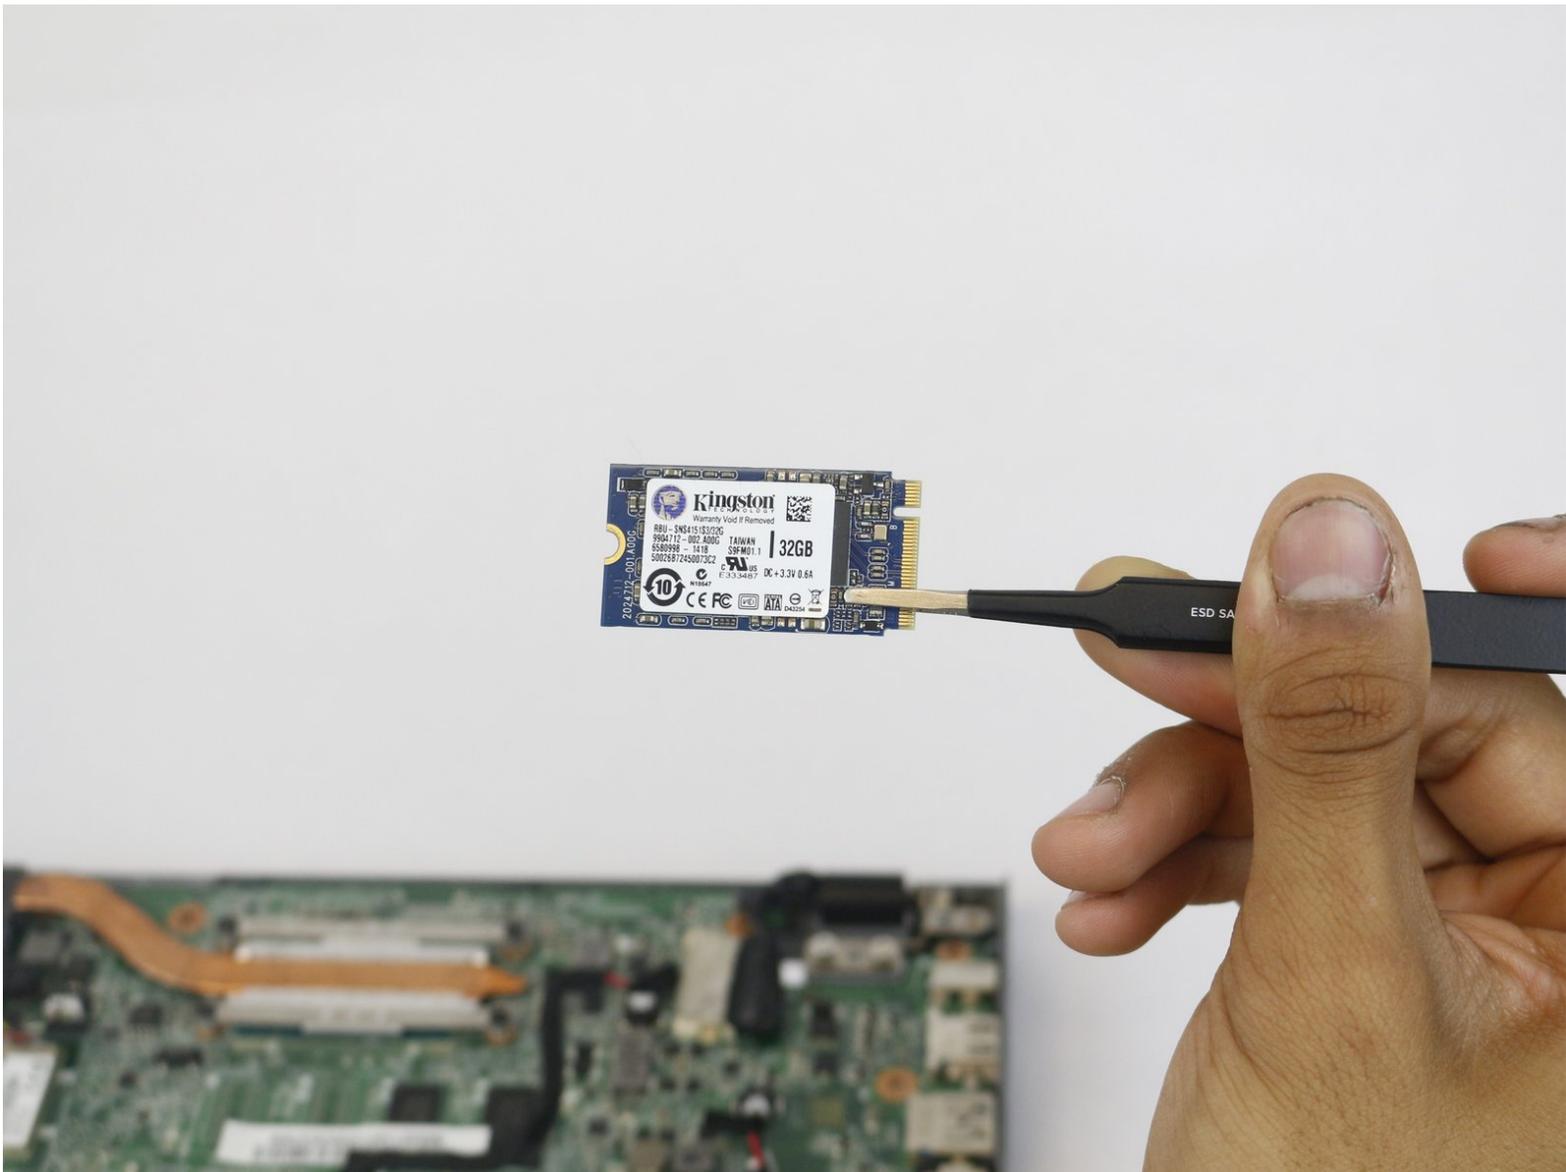

Acer Chromebook C720-2420 Memory Replacement

Use this guide to locate, remove, or replace the memory card off your Acer Chromebook C720-2420.

Written By: Jessica Beckford



This document was generated on 2019-09-22 09:37:45 PM (MST).

INTRODUCTION

This guide will provide you with the most practical way to remove the memory card off your C720-2420 Chromebook with a couple of steps.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

PARTS:

- [Acer C720P Chromebook Bottom Cover](#) (1)
- [Acer Chromebook C740/C720/C720P SSD Drive](#) (1)

Step 1 — Back Cover Replacement



i Place your Chromebook upside down.

- Utilizing the precision magnetized Phillips #0 screwdriver, remove all thirteen 6.5 mm Phillips screws that secure the back cover.


! Before doing anything, make sure your Acer Chromebook is completely turned off.

Step 2




- Use the plastic opening tool to carefully remove the bottom.

Step 3 — Memory

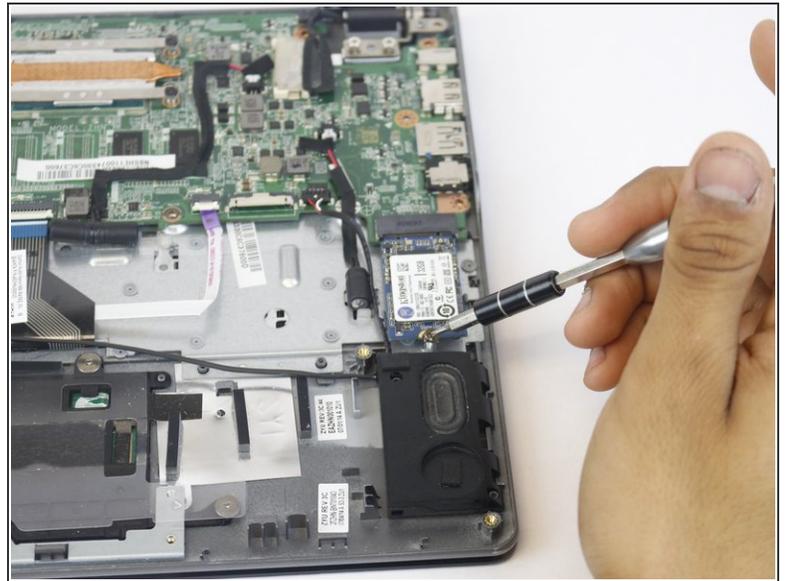

- Remove the 3.6 mm Phillips screw that secures the SSD in place.

Step 4

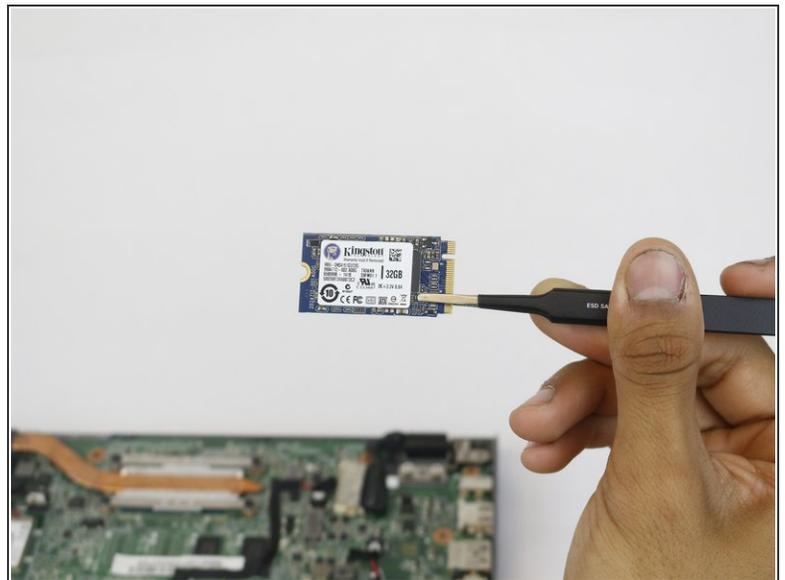

- Pull out the SSD.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-22 09:37:45 PM (MST).