



# Acer Chromebook Spin 15 CP315-1H-P1K8

## Back Cover Replacement

How to replace the back cover of an Acer Chromebook Spin 15 CP315-1H-P1K8 laptop.

Written By: Kristen Gismondi



---

## INTRODUCTION

If your Acer Chromebook Spin 15 CP315-1H-P1K8 back cover has scratches or is broken, this guide will help you to replace the back cover of the laptop. This guide will also help you to access the inner parts of the laptop. Please make sure to switch off the laptop before working on the back cover replacement.

This guide does not acquire any special skill. Get ready with a screwdriver and a iFixit opening tool when working through the guide.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Back Cover



**!** Make sure the device is fully powered off.

- Flip the computer over so that the back is facing up.
- Remove the twelve 6mm Phillips #1 screws from the bottom of the laptop.

## Step 2



- Use the iFixit opening tools as wedges to pry the back of the laptop off.

**!** Go slow, making sure not to snap the plastic. With enough of a gap made, you can use your hand to finish taking off the back.

To reassemble your device, follow these instructions in reverse order.