



Acer Iconia B1-711 Loudspeaker Replacement

Acer Iconia B1-711 Loudspeaker Replacement

Written By: ZFix



INTRODUCTION

[Please SUBSCRIBE to my channel ツ](#)

[video: <http://youtu.be/8-djJ2aXa60>]

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Cover



- Switch-off the tablet.
 - Remove any SIM and/or Memory Card.
 - Start opening near to the Volume Up/Down buttons. It's more well to use a plastic opening tool to avoid damaging the cover.
- ⚠ When lifting the cover, be careful not to tear the Loudspeaker cable at the bottom right side.
- Disconnect the Loudspeaker cable from the Logic board.

Step 2



 Before doing anything, disconnect the battery.

 [Please SUBSCRIBE to my channel ツ](#)

Step 3 — Loudspeaker



- The loudspeaker is stuck on the Rear Cover with a double side tape.
- With a sharp tool remove it.
- [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.