



Acer Iconia Tab 8 A1-860 Speaker Replacement

This guide will assist you in removing the speakers from your Acer Iconia A1-860 tablet.

Written By: Michael Buchanan



INTRODUCTION

If your device no longer plays sound, this guide shows you how to fix the problem.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Rear Case



- Insert the plastic opening tool into the seam between the back case and the display.
- Work the plastic opening tool around the seam until the rear case separates from the display.

Step 2




- Separate the rear case and place the tablet face side down.

Step 3 — Battery





- Using a spudger, work the tool under the battery connector located above the battery on the left side, and lift it free.

Step 4

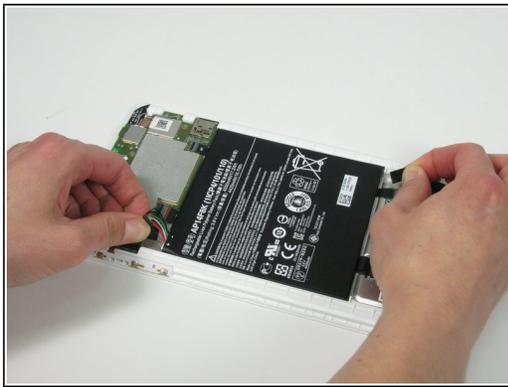


- Pull firmly on the black tabs, located at the top left and bottom right of the battery.
- ⓘ The clear adhesive strips attached to the tabs are quite stretchy. Don't give up; keep pulling the tabs until the battery releases. The strips will not be reusable.
- Remove the battery.

Step 5 — Speaker

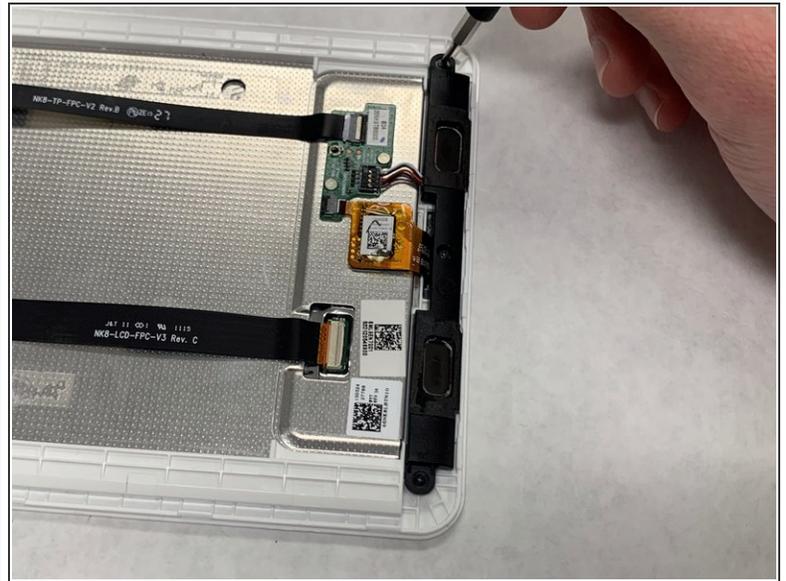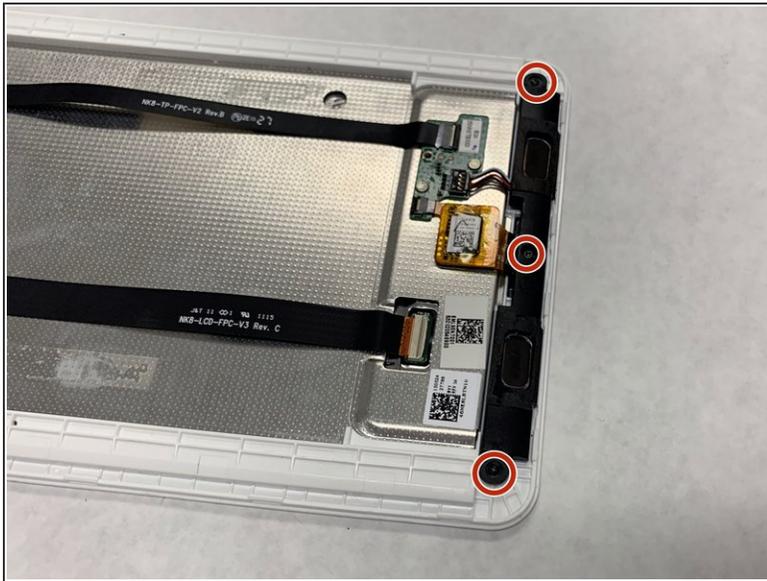

- Use a Phillips #000 screwdriver to remove the three 3 mm screws.

Step 6

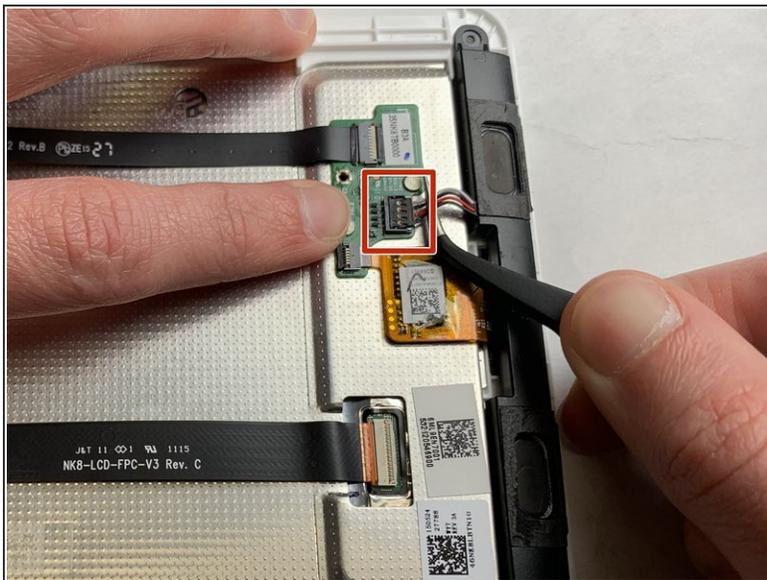

- Use tweezers to gently lift off the connector and wires attached to the speakers.
- Remove the speakers from the device.

To reassemble your device, follow these instructions in reverse order.