




Acer Spin 3 SP315-51-757C Battery Replacement

How to replace an Acer Spin 3 SP315-51-757C battery.

Written By: Skyler Ognibene

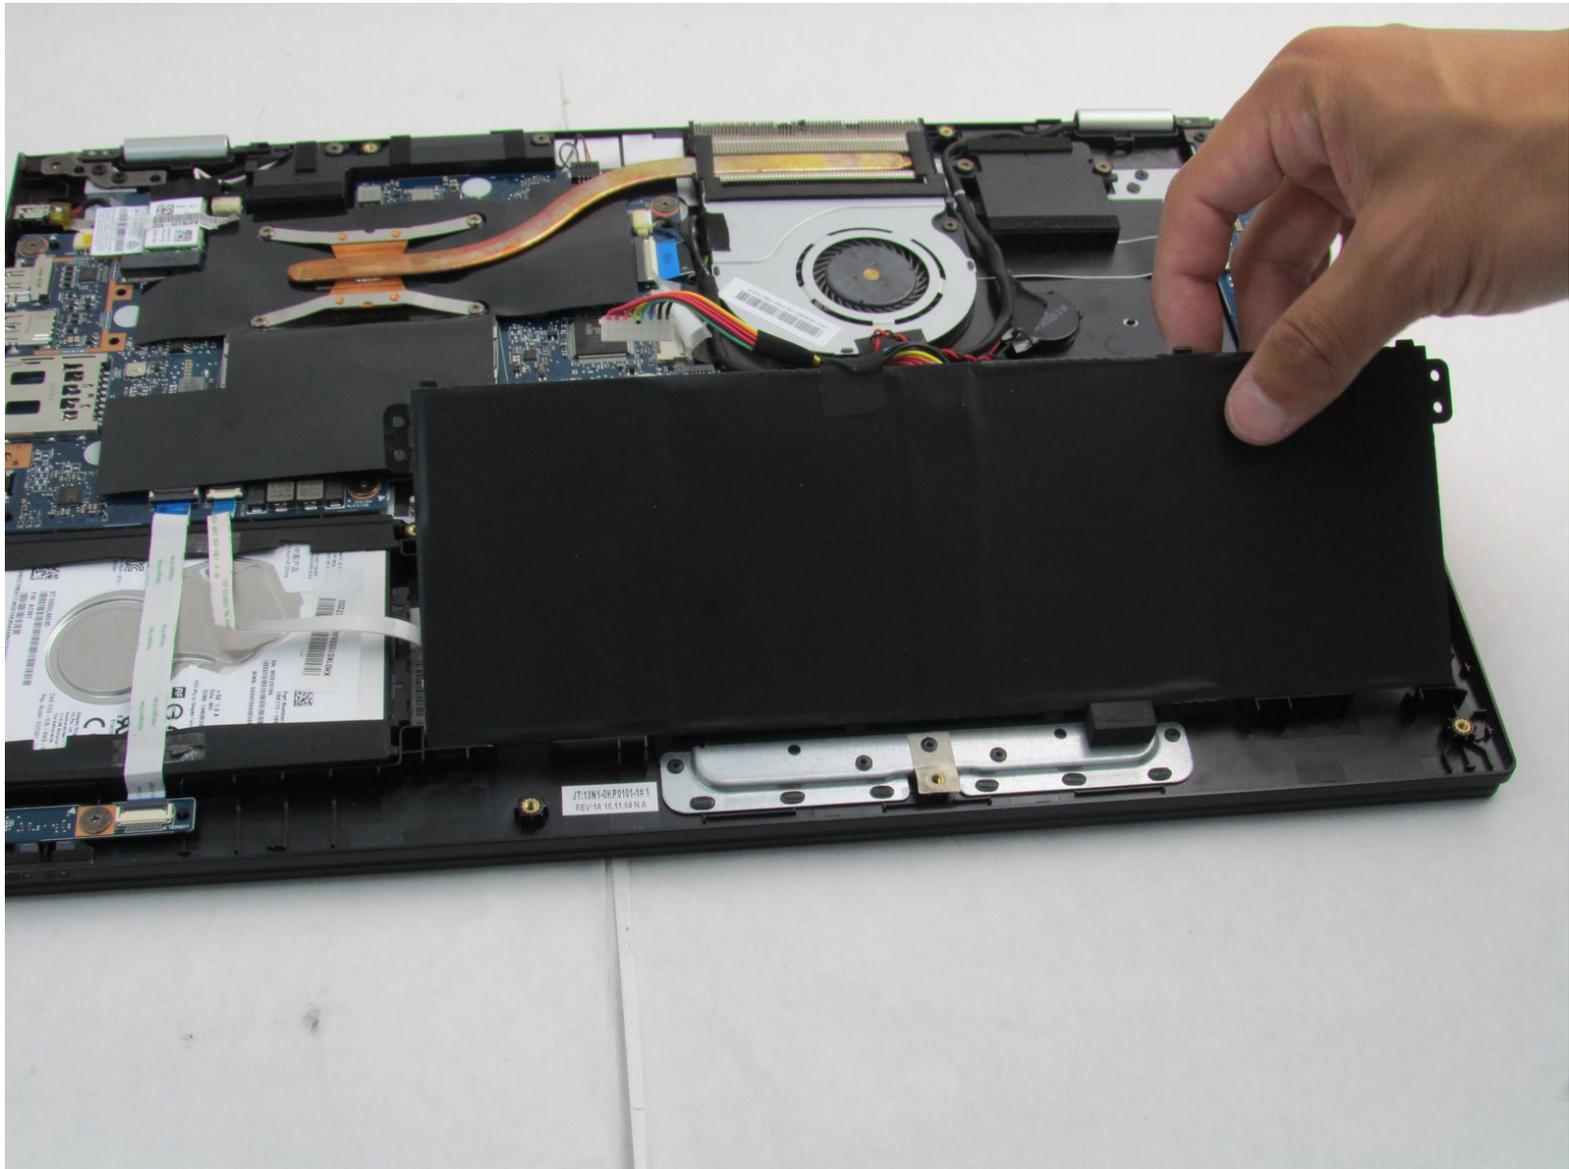


INTRODUCTION

If you notice your Acer Spin 3 SP315-51-757C running out of battery faster than usual, or your laptop cannot operate without being plugged in, your laptop battery may need to be replaced. The battery can be removed by taking out a couple screws and unplugging the battery's cable from the motherboard.

TOOLS:


- [iFixit Opening Picks set of 6](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Panel

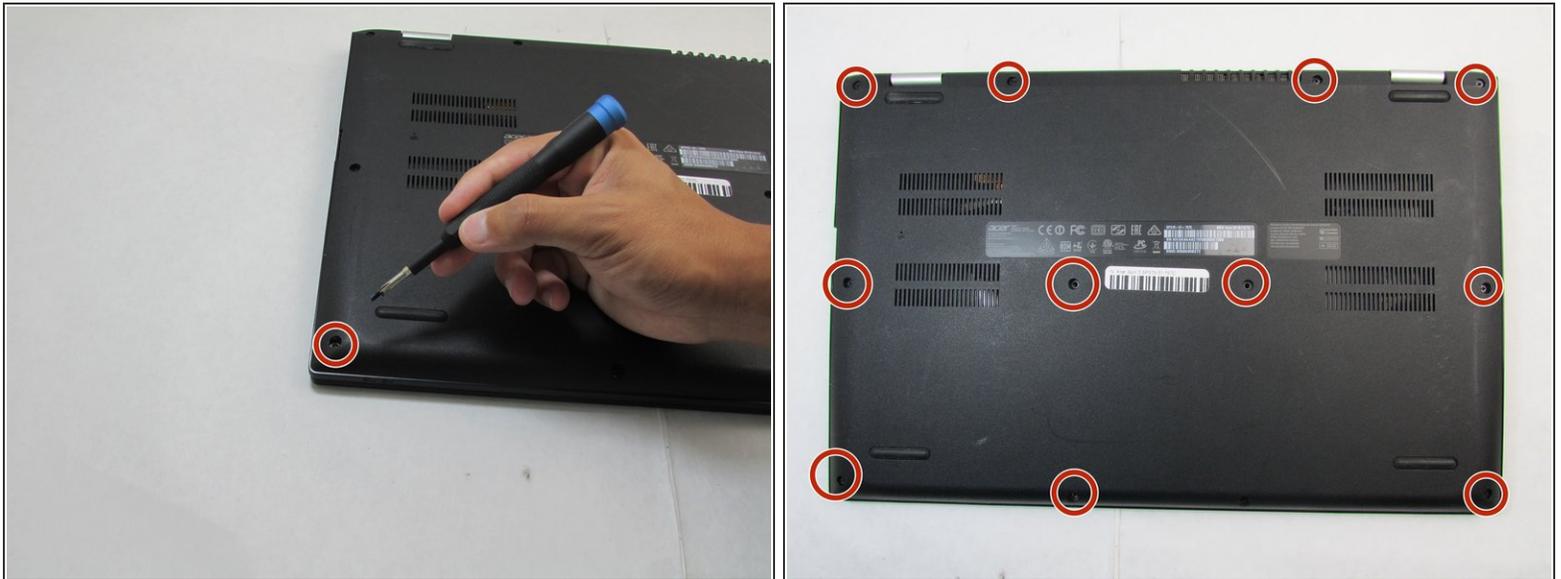

- Remove eleven Phillips #0 screws from the back panel.

Step 2

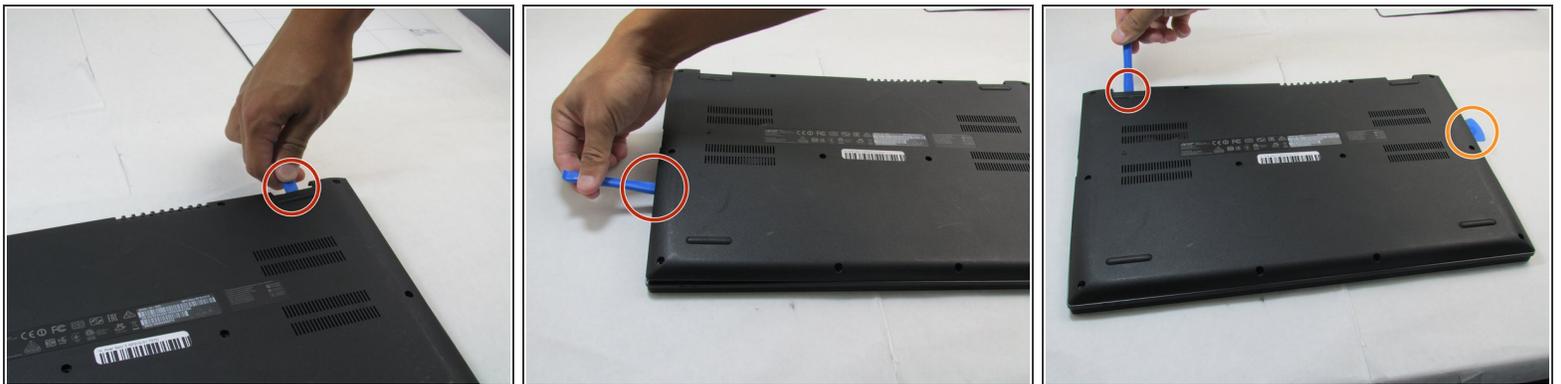


- Using an opening tool, pry open the back panel, starting at the silver screen hinges.
- ⓘ You may need to apply more force than usual. If you don't find any success at the hinges, you can try to start at another area that looks easier to open.
- ⓘ You can also use some plastic opening picks to help hold parts of the panel open while you work on other sides.

Step 3




- Lift the back panel off of the laptop.

Step 4 — Battery

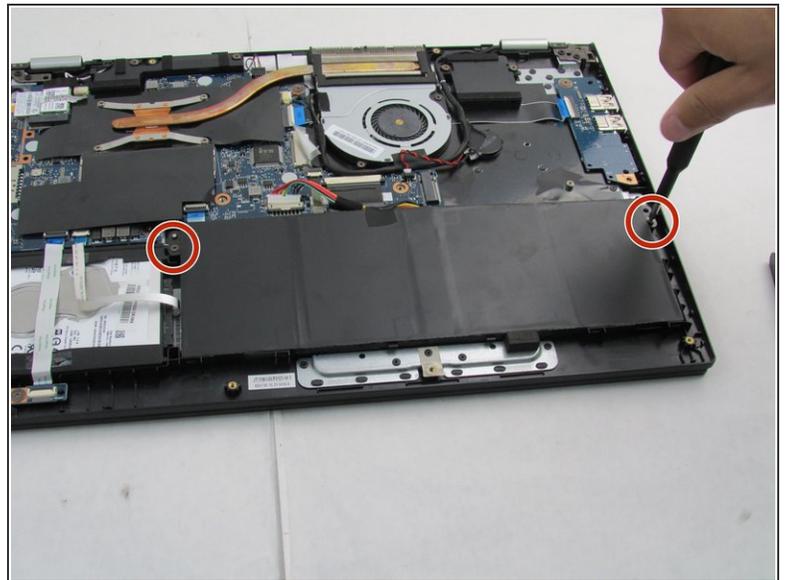


- Remove the two Phillips #0 screws holding the battery inside the laptop case.

Step 5

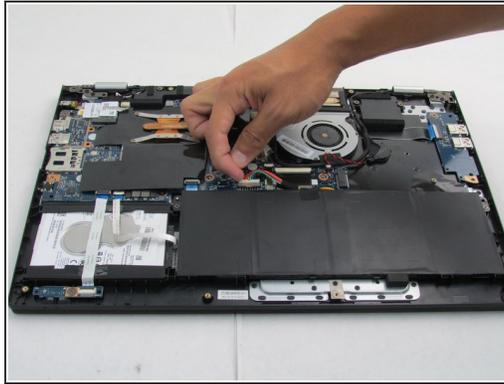

- Using either your hands or a pair of tweezers, carefully pull the battery's cable out of its motherboard port.

Step 6

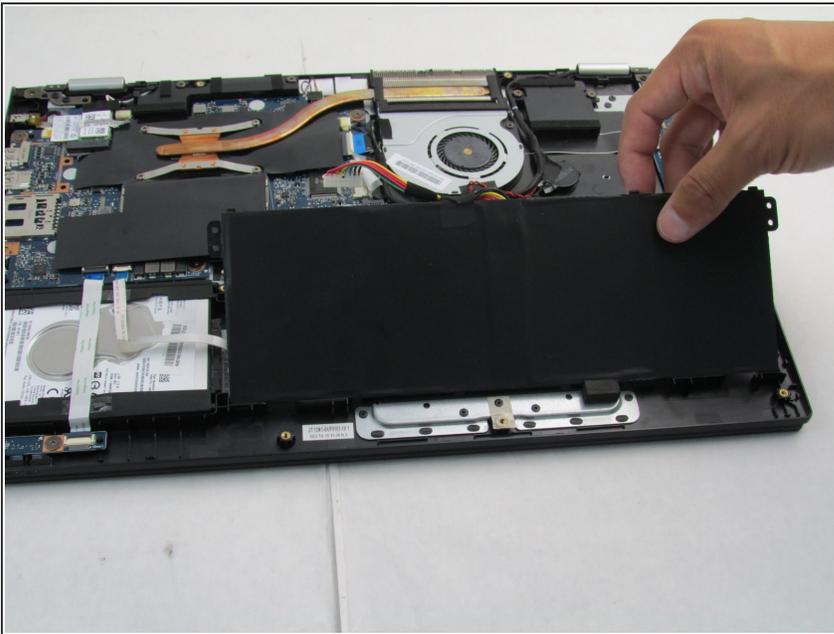

- Using your hands, lift up on the battery from its slot, and carefully slide it away from you before fully lifting it out of the case.

To reassemble your device, follow these instructions in reverse order.