



# Alcatel Pop 4 Plus Speaker Replacement

This guide will show you how to replace the speaker the Alcatel Pop 4 Plus.

Written By: Maalik Poleon



## INTRODUCTION

This guide will show you how to replace your Alcatel Pop 4 Plus speaker. This guide involves removing the back cover and the secondary cover where the speaker is located. Then you just pop it out and put in the new speaker.

---

### TOOLS:

- [Spudger](#) (1)
- [Phillips #000 Screwdriver](#) (1)

### PARTS:

- [Alcatel POP 4 Plus Speaker](#) (1)

## Step 1 — Battery




- Remove the back cover by sliding your fingernail in the groove around the edge of the phone and prying it off.

## Step 2



- Remove seventeen 3mm Phillips #000 screws from the mid-frame.

## Step 3

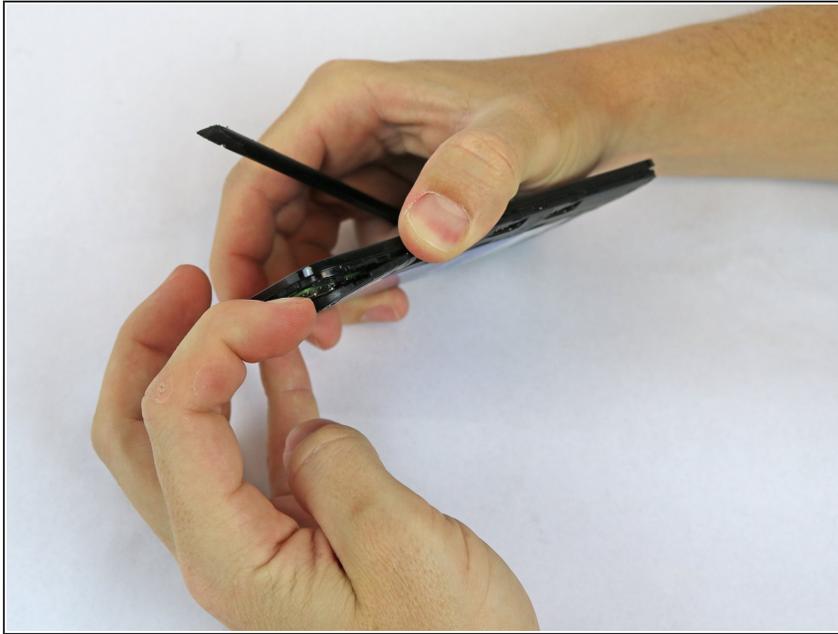


- Use the flat end of the spudger, or your fingernail, to pry off the mid-frame.

## Step 4



- Use the flat end of the spudger to disconnect the battery from the motherboard.
- Use the flat end of the spudger tool to pry out the battery.

## Step 5 — Speaker

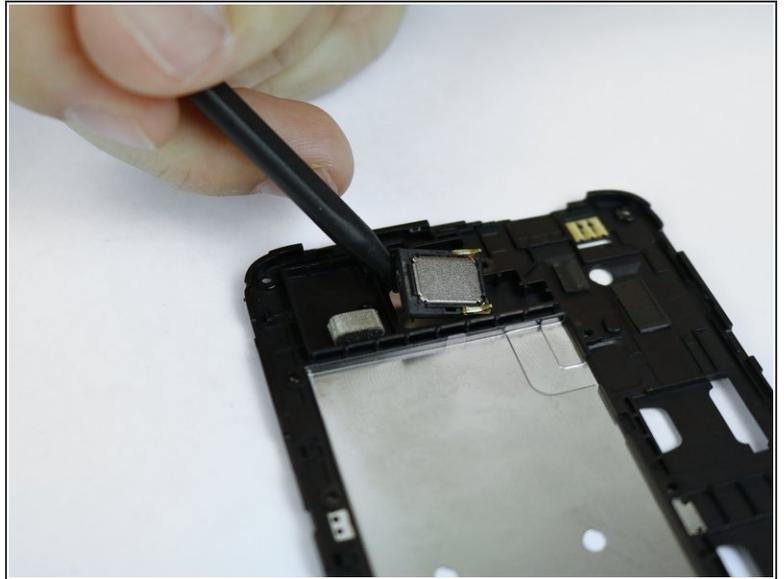

- Use a spudger to pry the speaker from the mid-frame.

To reassemble your device, follow these instructions in reverse order.