



Alienware 17 R2 Battery Replacement

This guide will show you how to replace your faulty battery.

Written By: Luis Garcia




INTRODUCTION

This guide will show you how to replace your faulty battery.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

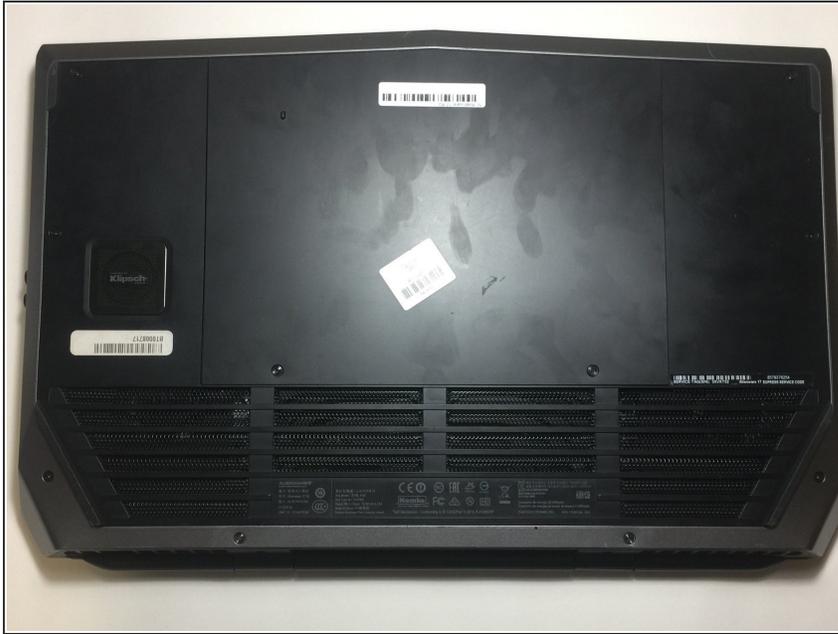


- Unplug your laptop from power adapter
- Put your laptop face down on a hard surface

Step 2

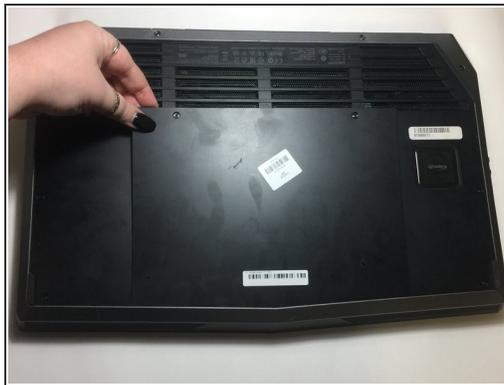


- Remove the screws on the access door
- Pull access door up and slide off

Step 3

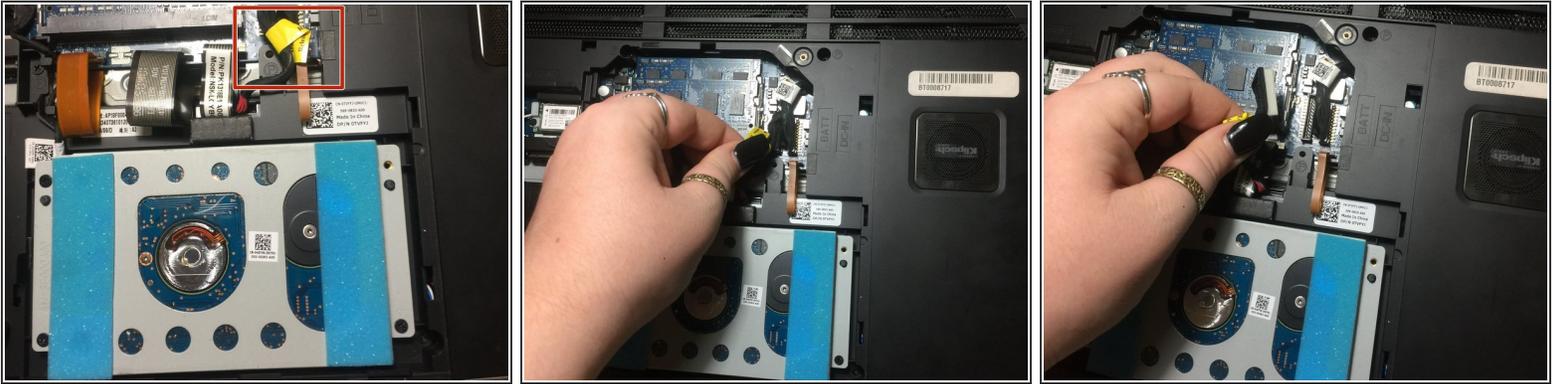

- Look for the black wire with the yellow tag
- Carefully unplug the black cord with the yellow tag
 - This will successfully disconnect the battery

Step 4

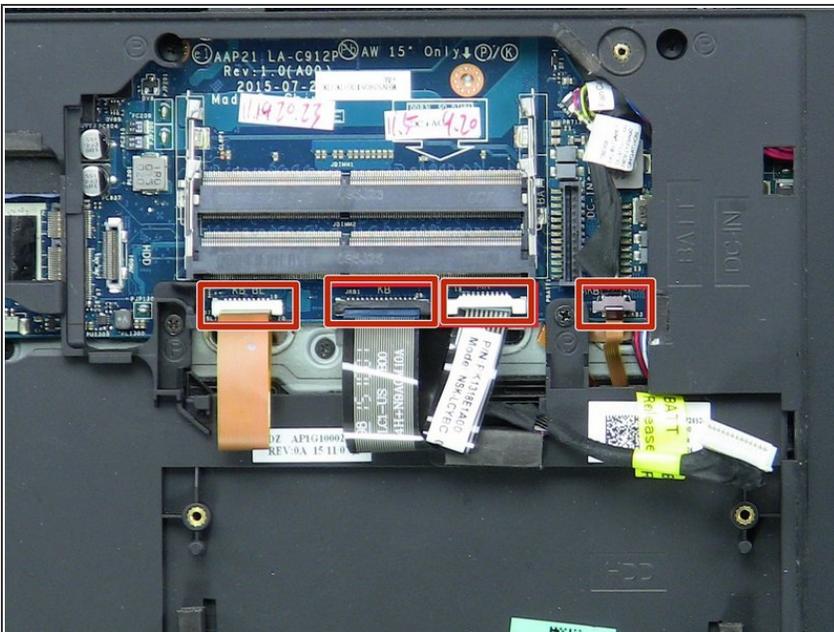

- Disconnect the four cables from the motherboard

Step 5




- Unscrew the palm-rest screws
 - Eight 2.5mm x 8mm
 - Six 2.5mm x 10mm
 - Two 2.5mm x 18mm

Step 6





- Separate the palm-rest from the laptop
- Disconnect the power cord from the laptop to the palm-rest
- Remove palm-rest

Step 7

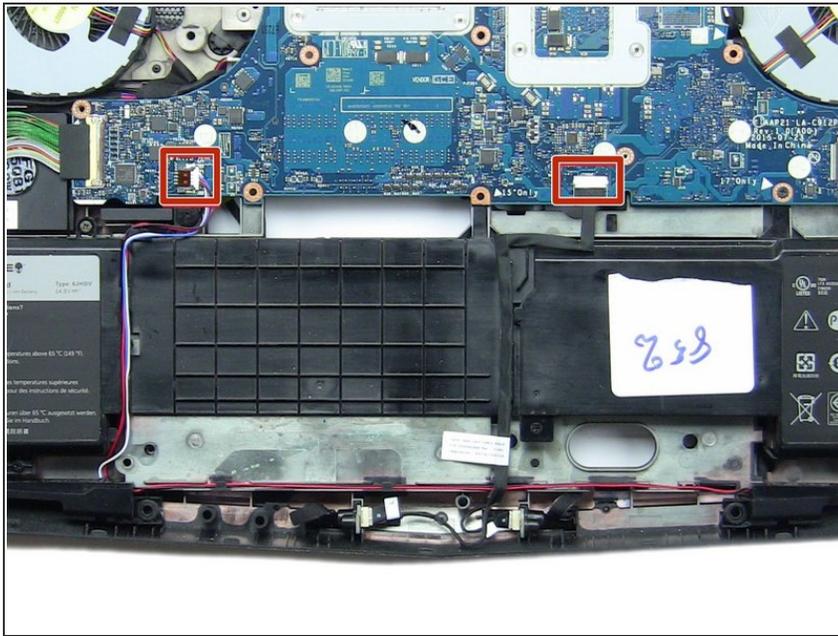

- Unplug the cables from the laptop

Step 8

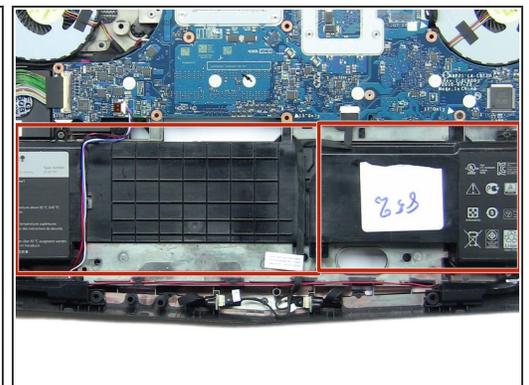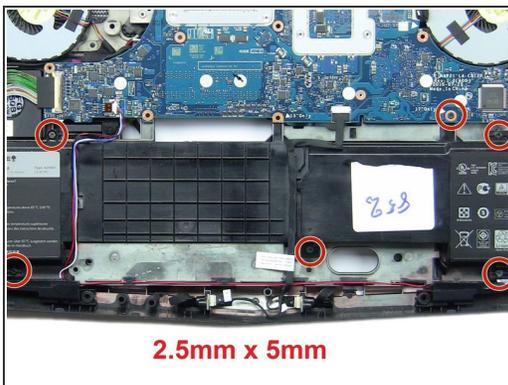

- Remove the six 2.5mm x 5mm screws that connect the battery to the laptop
- Gently lift up and remove battery

To reassemble your device, follow these instructions in reverse order.