




Asus Chromebook C101P Speakers Replacement

How to replace speakers in the Asus Chromebook C101P.

Written By: Bryan Acosta

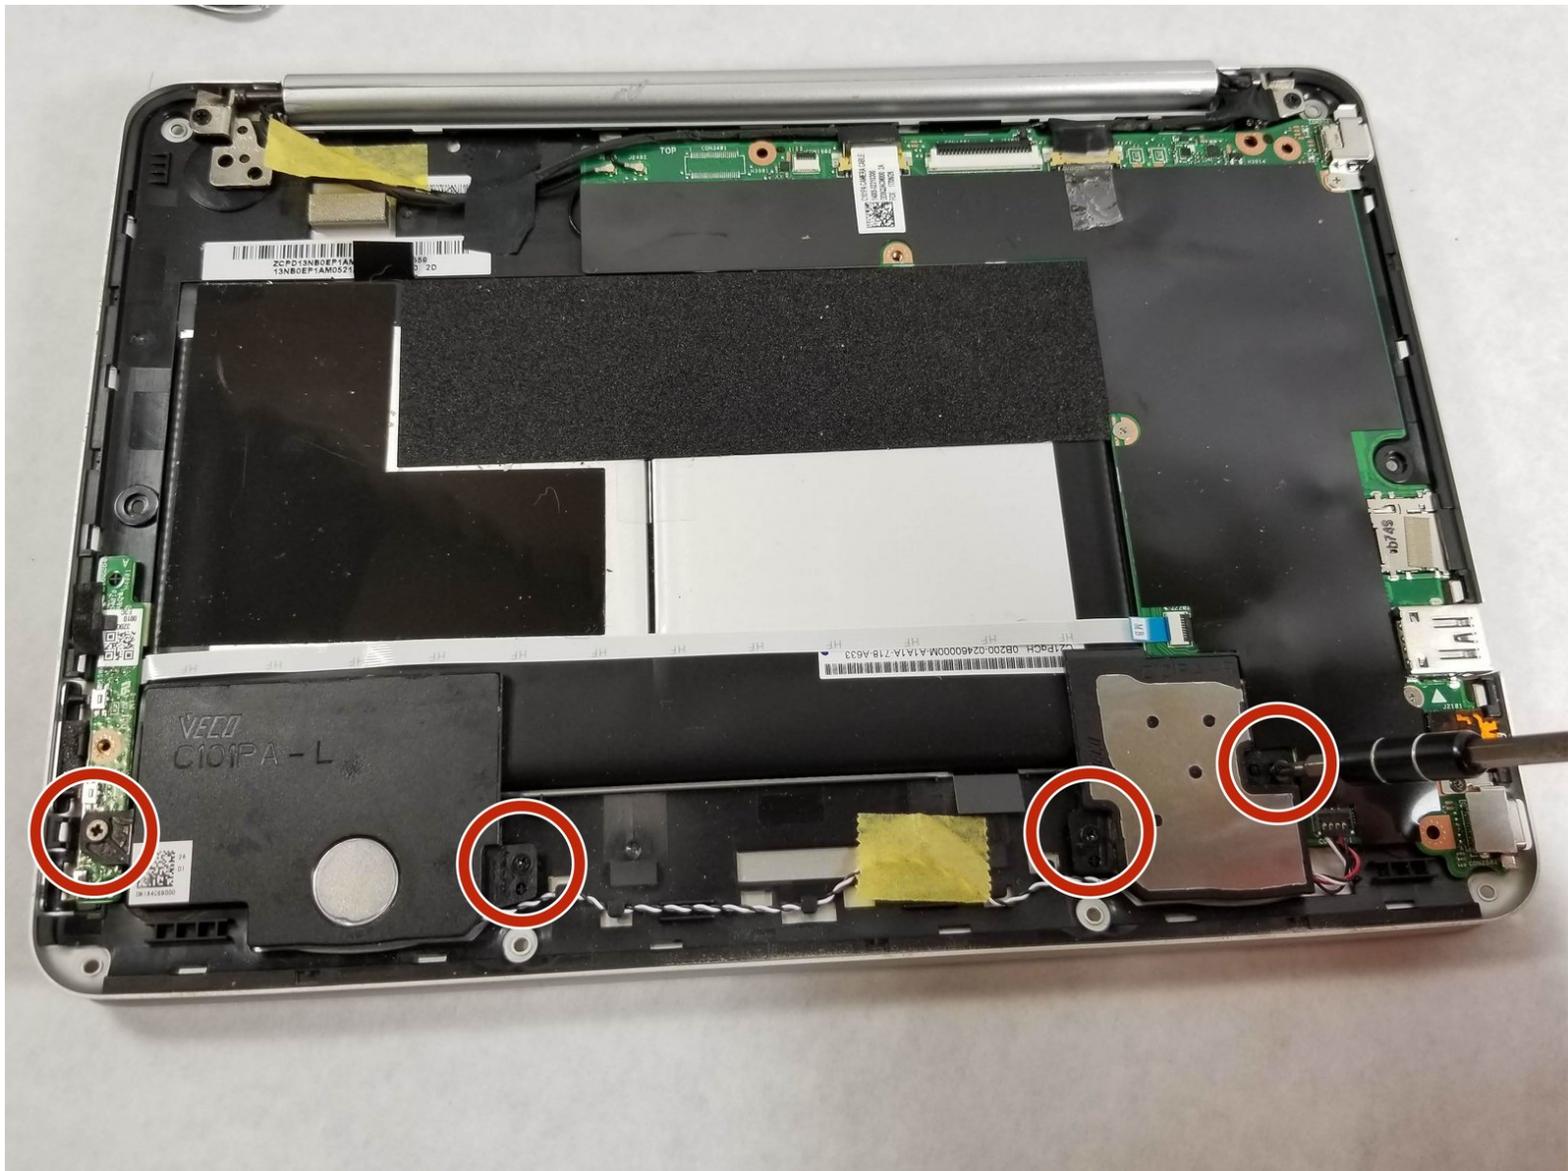


INTRODUCTION

With the Asus Chromebook C101P, you might need to replace your speakers if you have audio issues and nothing seems to fix it. Luckily, these speakers are very easy to replace, since they are out in the open and not tucked behind places like the motherboard. **It is important** that you unplug and shut your Chromebook off before attempting this replacement in order to prevent electrocuting yourself.

TOOLS:


- [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Keyboard

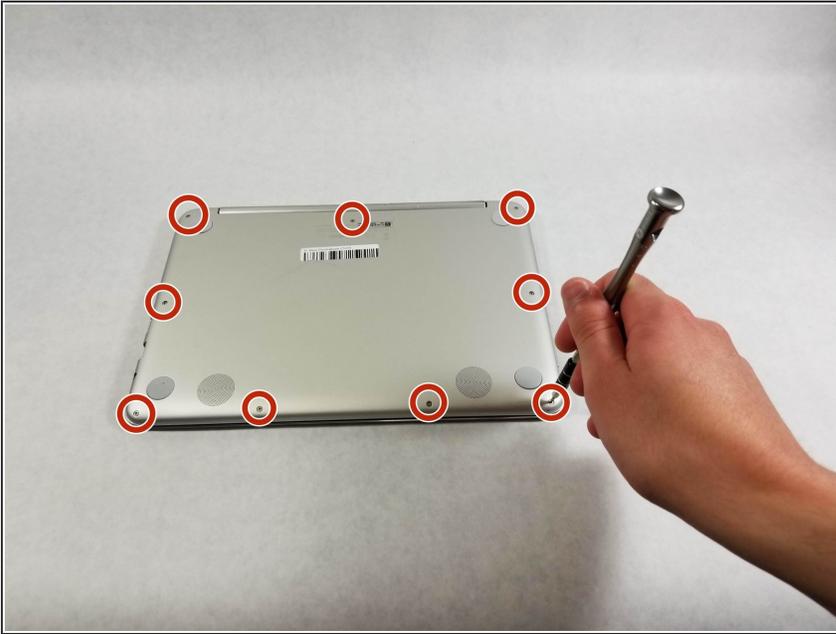

- Flip the Chromebook so that the bottom is facing up.
- Remove the eight T5 Torx screws.

Step 2

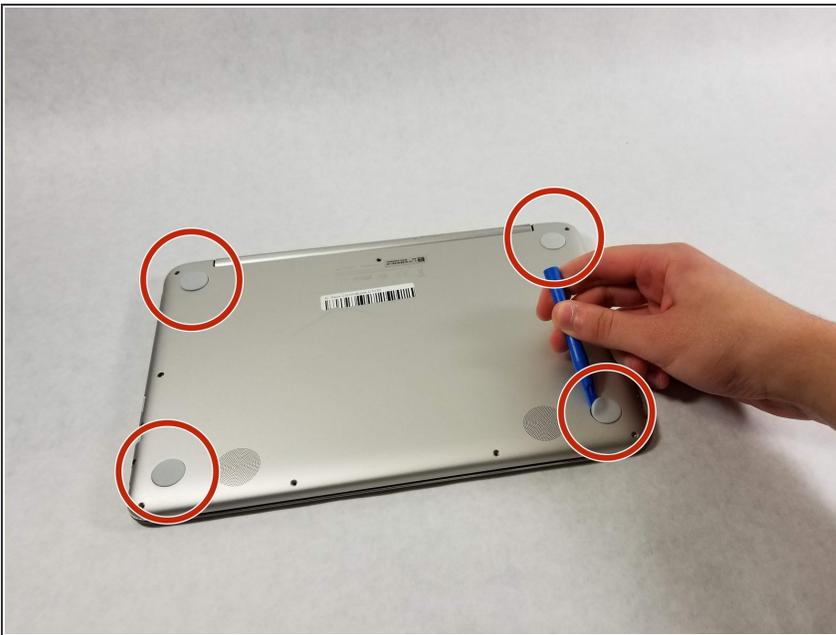


- Remove the four rubber grips on the bottom side of the Chromebook using an opening tool.

Step 3




- Remove the four black screws where the rubber grips were.

Step 4

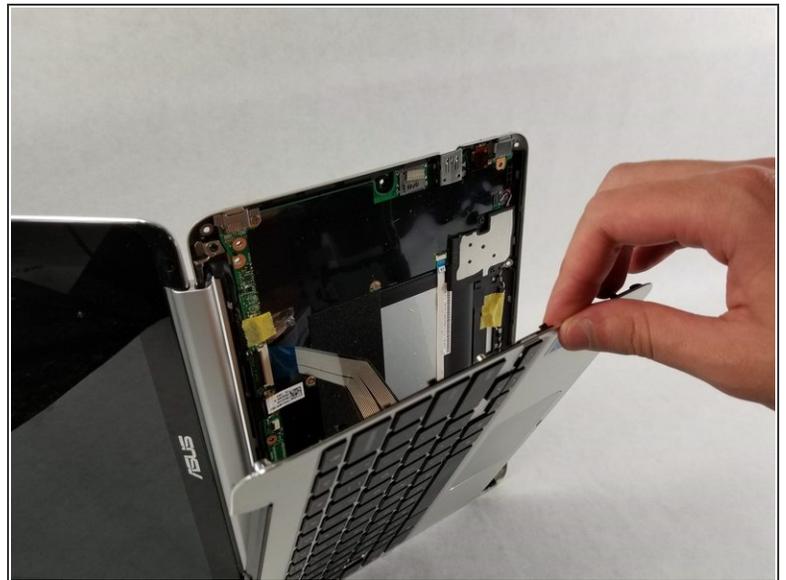


- Reorient the Chromebook so the right side is facing upwards.
- Wedge an opening tool or spudger between the keyboard (upper case) and the lower case of the bottom portion of the Chromebook.

Step 5

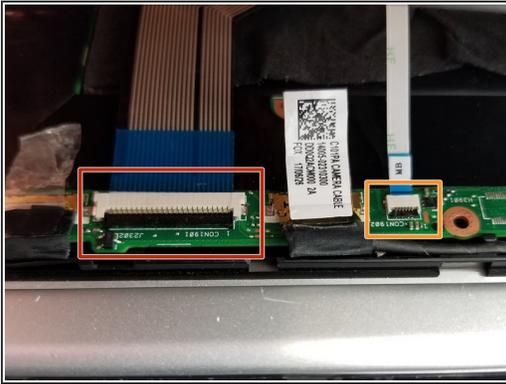


- Pull back the black lever on the base of the cable. While pulling back, take your tweezers and pull back on the large ribbon cable.
- Pull back the black lever on the base of the cable. While pulling back, take your tweezers and pull back on the small ribbon cable.
- Separate the keyboard from the rest of the laptop.

Step 6 — Speakers

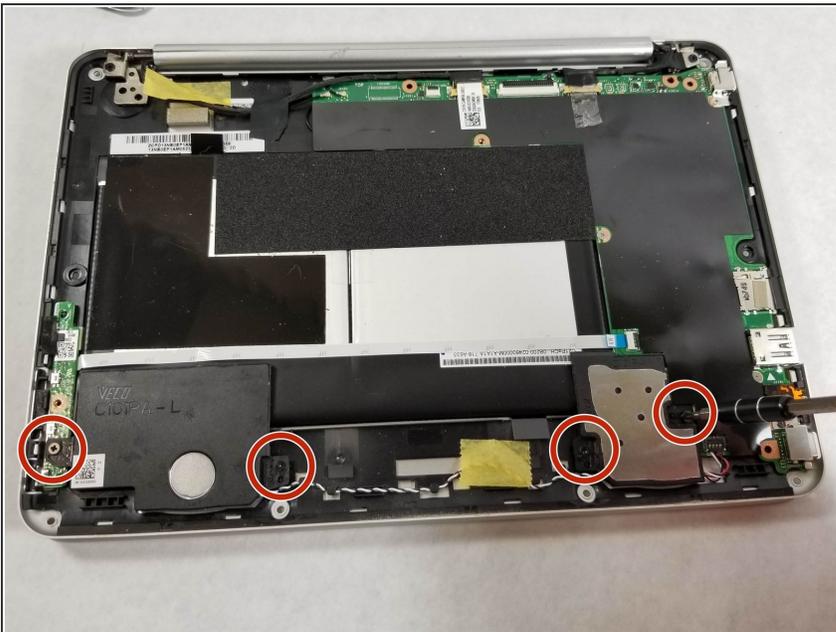



- Remove the four Phillips #0 screws from the speakers.

Step 7

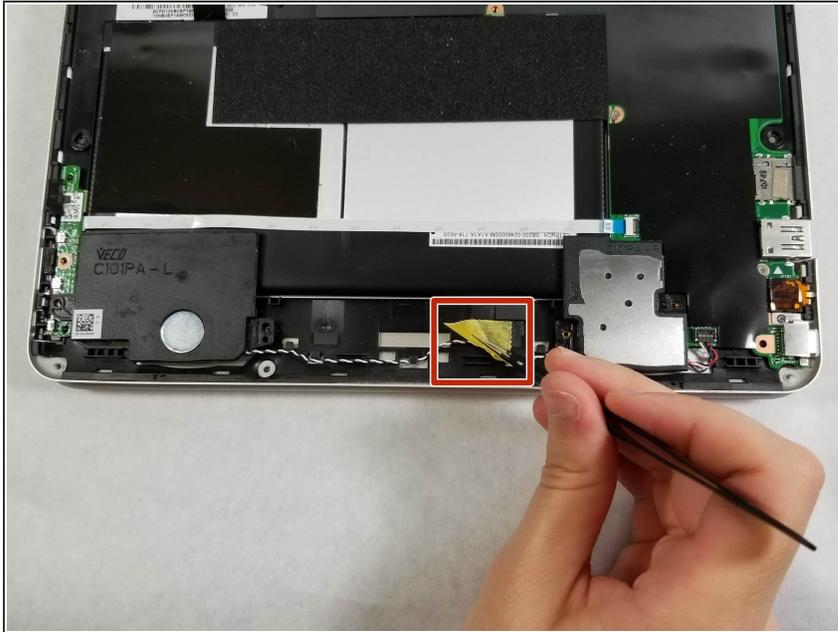

- Remove the yellow speaker tape using tweezers.

Step 8

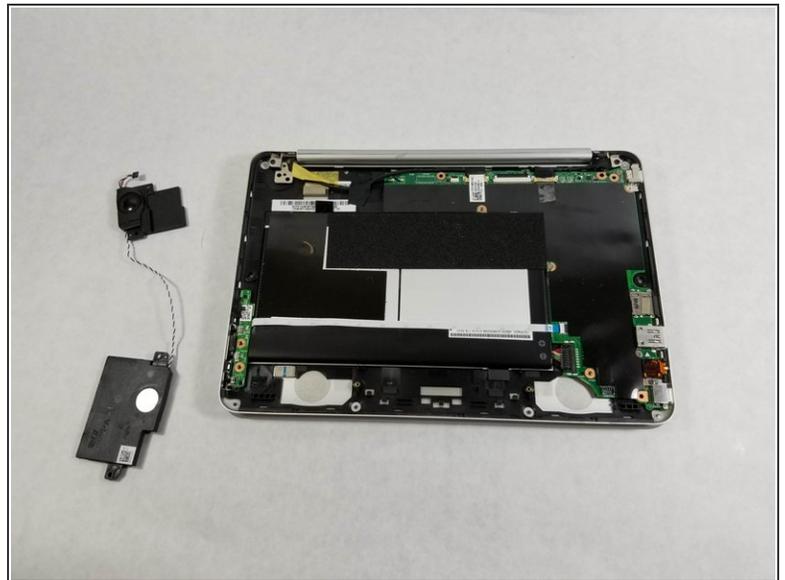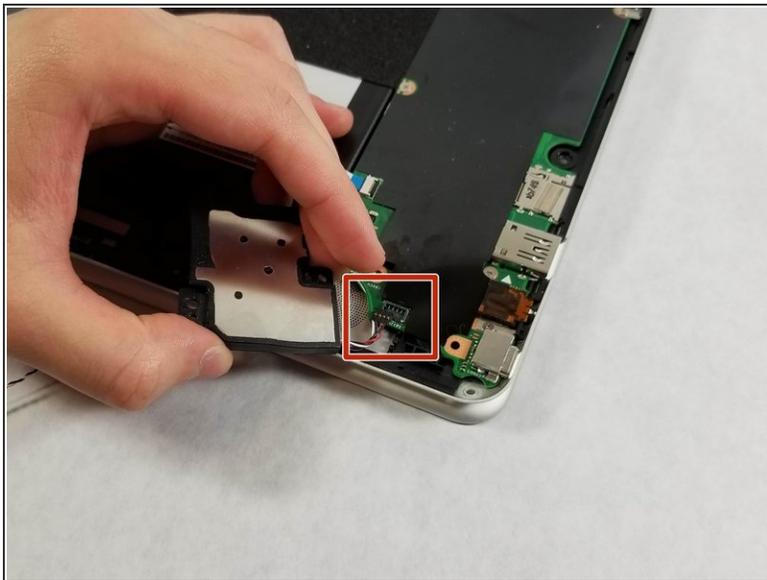

- Detach the right speaker using tweezers.
- ⓘ The right speaker has its own set of cables connecting to the motherboard. Simply tug on the cables.

To reassemble your device, follow these instructions in reverse order.