



# Asus Chromebook C300MA-DB01 Screen Replacement

This guide will serve to show the user how to remove and replace the screen of there device.

Written By: wyatt boyatt



## INTRODUCTION

If you are encountering issues with your display this guide can be very useful. The removal of the casing from the screen can be difficult be sure to gently use the opening tool around the whole perimeter and not in one location.



### TOOLS:

- [iFixit Opening Tools](#) (1)
- [64 Bit Driver Kit](#) (1)



### PARTS:


- [Asus Chromebook C300MA DB01 Screen](#) (1)

## Step 1 — Screen




- Use plastic opening tool to remove the frame around the screen. It is recommended to start in the upper corners.

## Step 2

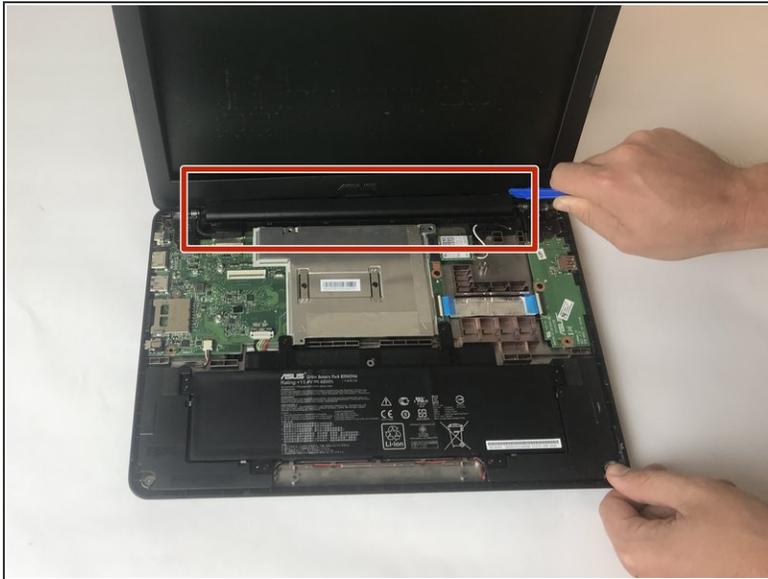

- Use plastic opening tool to remove plastic hinge casing located between the screen and keyboard.

### Step 3

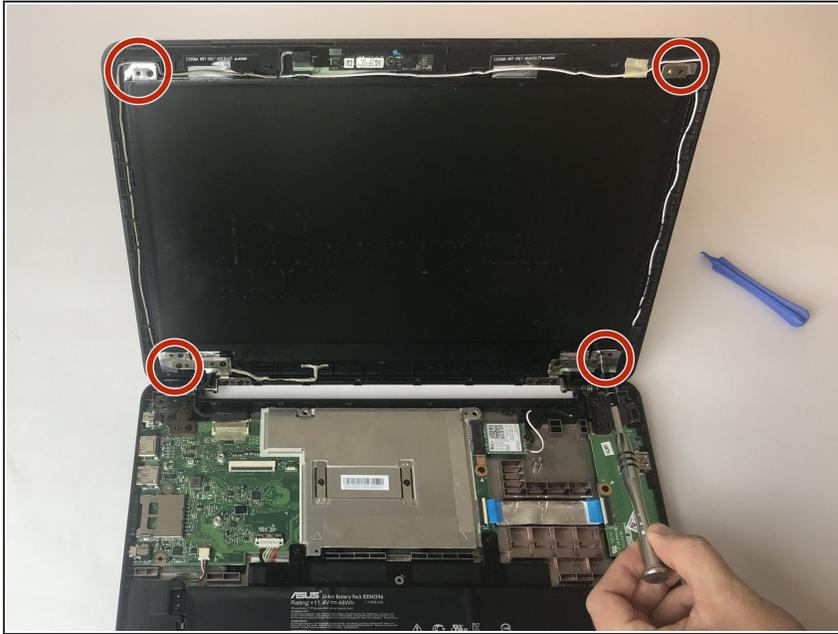

- Use 64 bitdriver to remove 4 6.0 mm Phillips screws from screen the screws that need to be removed are located in the corners of the screen.

### Step 4



- Use plastic prying tool to detach the wire that connects the screen to the lower non-display half of the laptop.

## Step 5



- Lift and remove screen from the laptop.

To reassemble your device, follow these instructions in reverse order.