




# Asus G501JW-BHI7N12 Device Page Wifi Card Replacement

A guide to replacing the Wifi card for the Asus G501JW-BHI7N12.

Written By: Dustin Annis

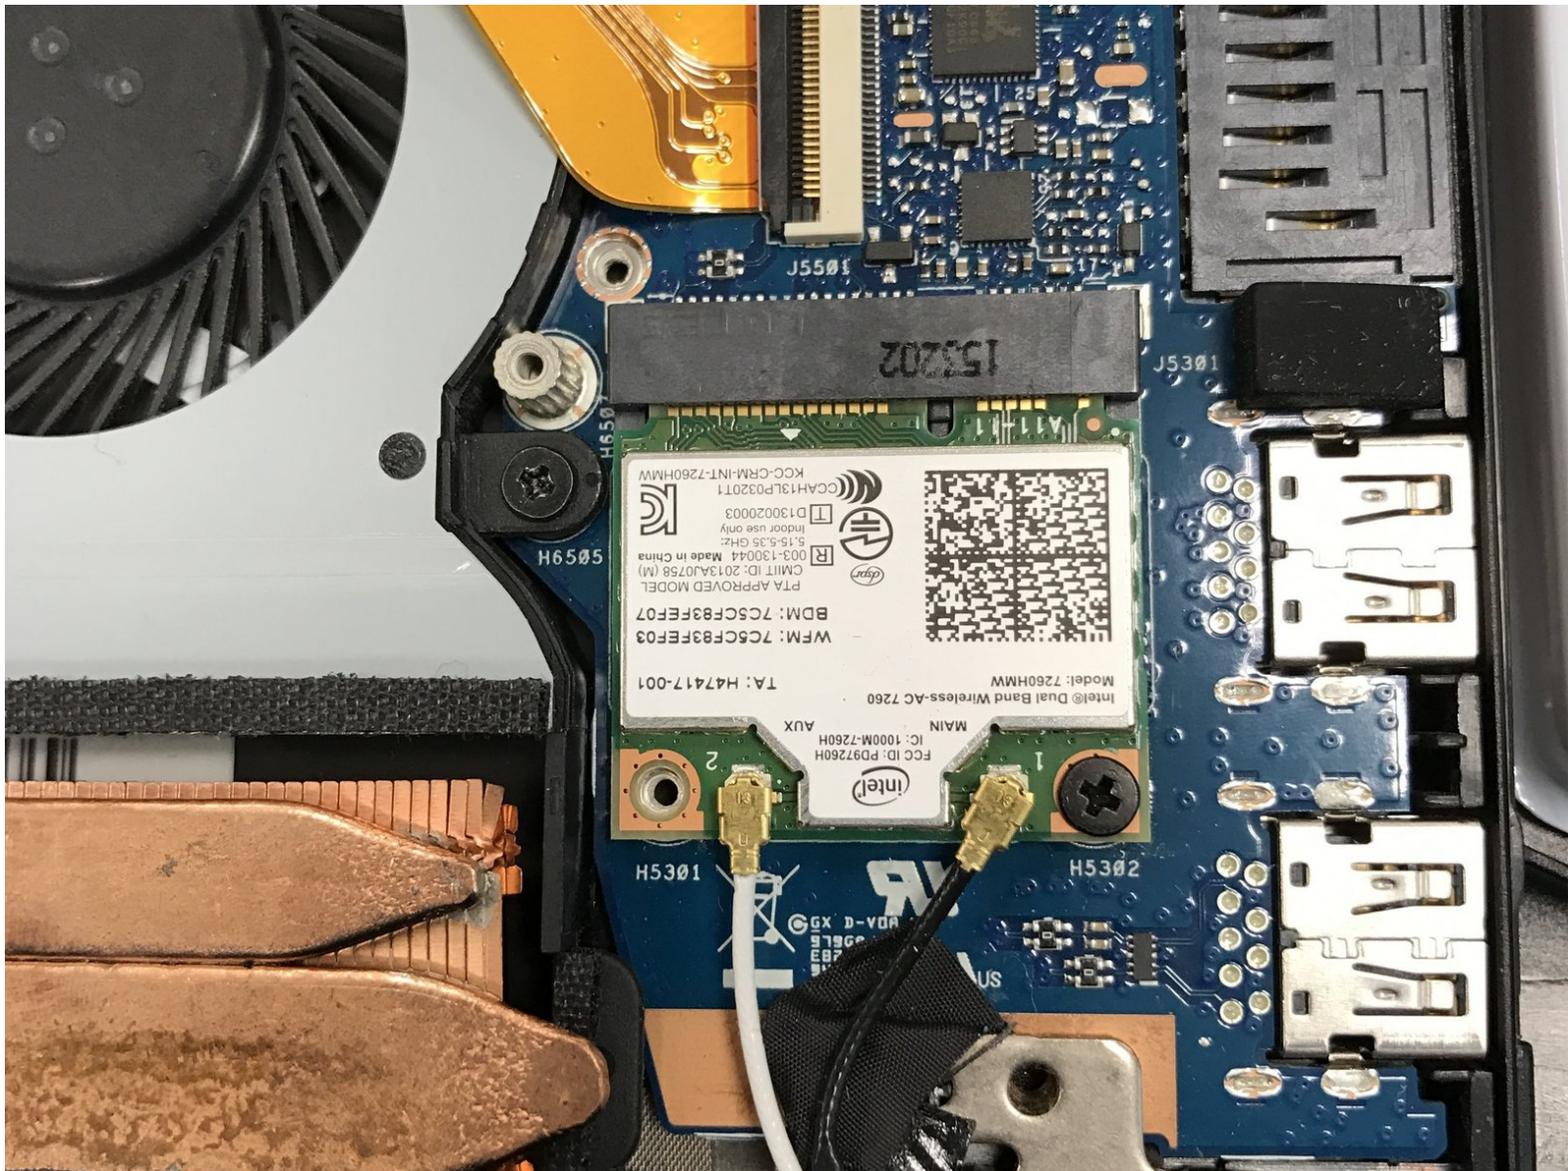

---

## INTRODUCTION

This guide will show you how to remove and replace the Wifi card for the Asus G501JW-BHI7N12. This could improve connections with Wifi networks and could also solve connections issues with other wireless devices.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [Anti-Static Wrist Strap](#) (1)
-

## Step 1 — Wifi Card



- Attach the Anti-Static Wrist Strap to a metal piece of the computer.
- Unscrew the two 4 mm Philips 0 screws from the wifi card.

## Step 2



- Remove the two black and white connectors from the Wifi card by gently pulling them up and away from the card.

## Step 3



- Pull the Wifi card away from the socket and remove it.

To reassemble your device, follow these instructions in reverse order.