




Asus ROG G751JL-DS71 Left and Right Track Pad Buttons Replacement

This guide will show you how to replace the left and right buttons on your Asus ROG G751JL-DS71 track pad. This is important for usability of the laptop.

Written By: D'Artagnan Scott Engle

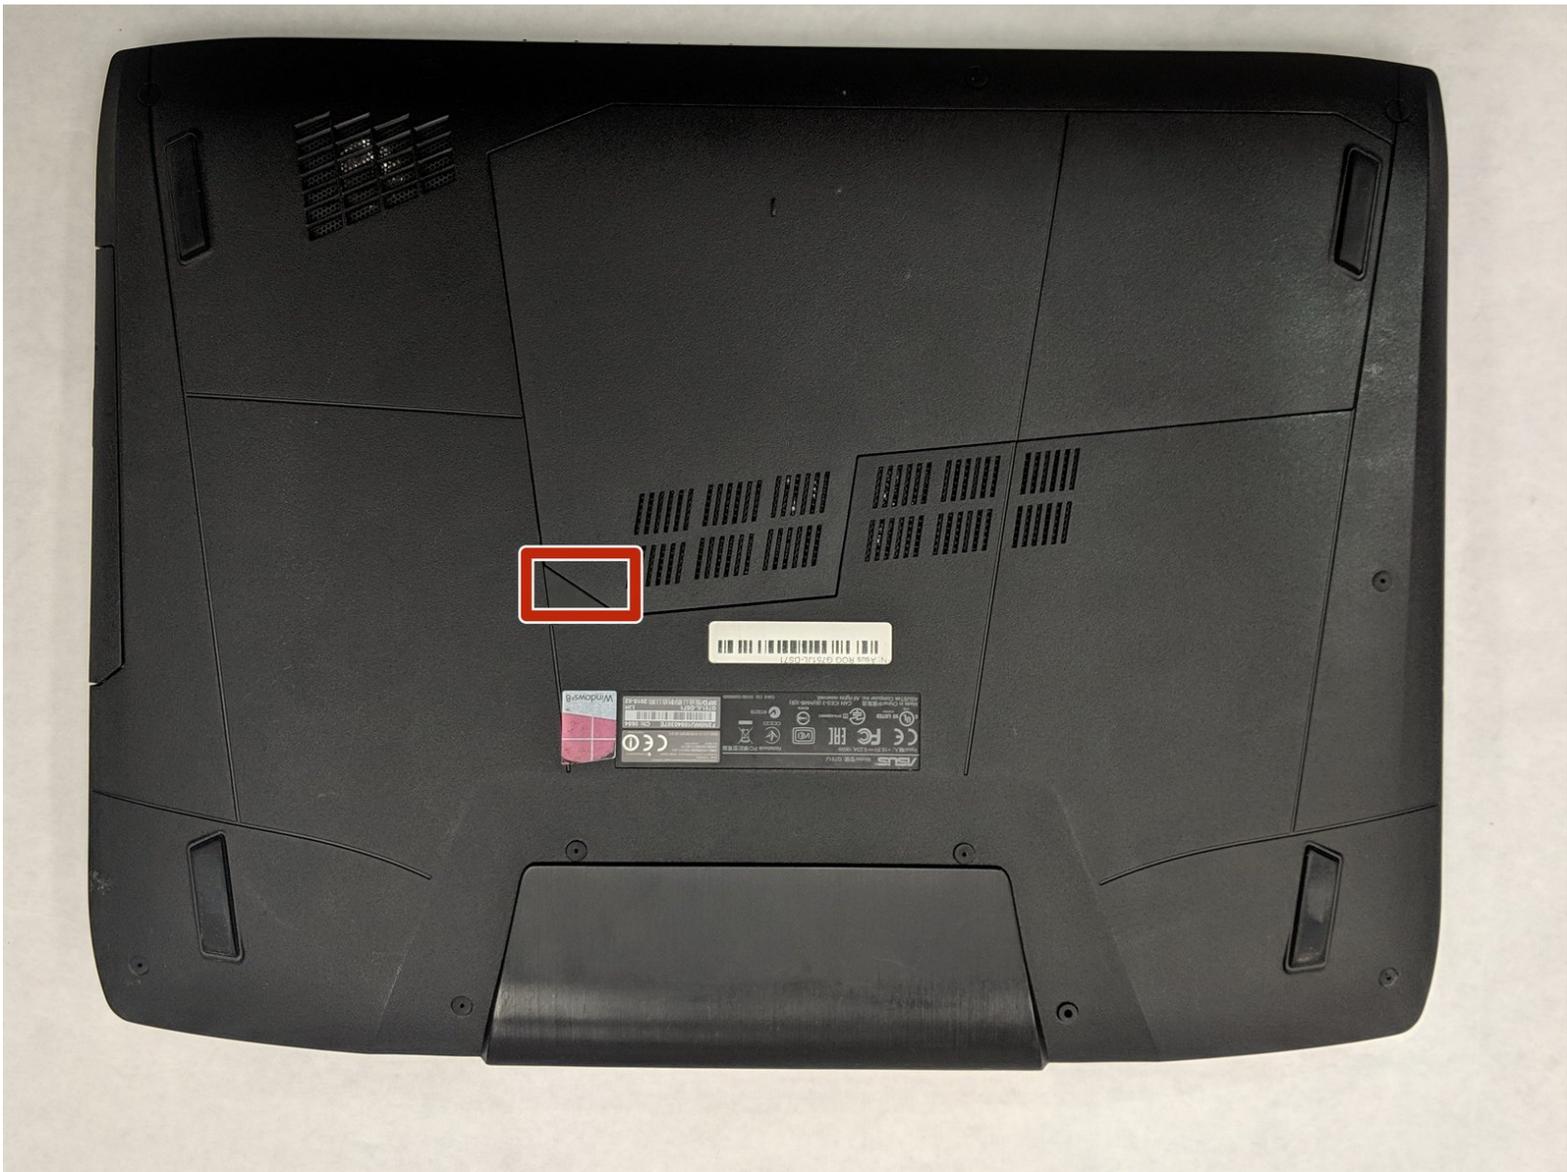

INTRODUCTION

This guide will show you how to replace the left and right buttons on your Asus ROG G751JL-DS71 track pad. This is important for usability of the laptop.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Metal Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Left and Right Track Pad Buttons



- Lift the rubber cover found on the bottom of the laptop.
- Remove the 5.2 mm screw with a Phillips 1 Screwdriver.

Step 2

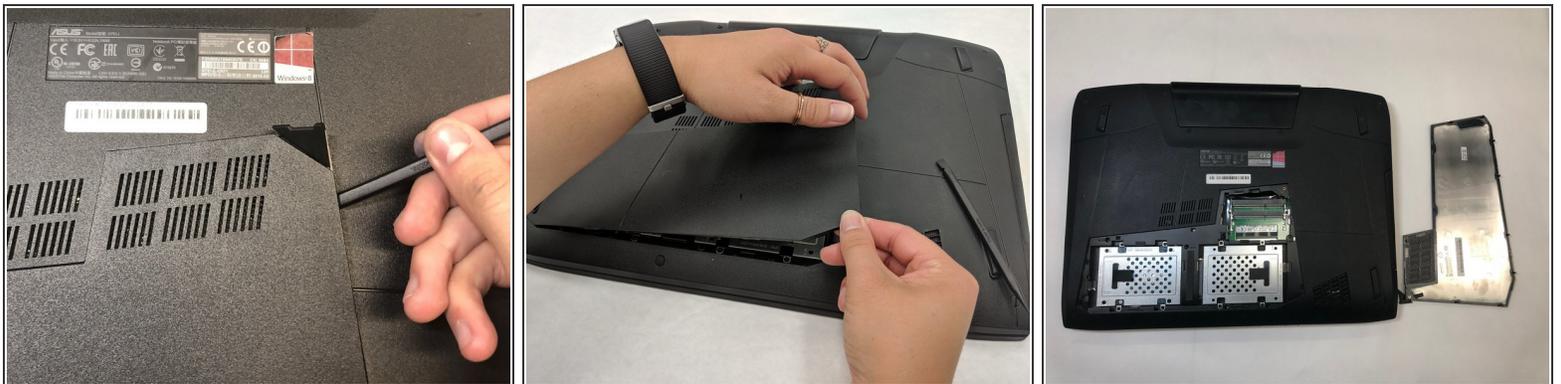


- Use the standard spudger to remove the back center panel.

Step 3




- Use a Phillips 1 Screwdriver to remove the 5 mm screw that is located underneath the back panel.

Step 4

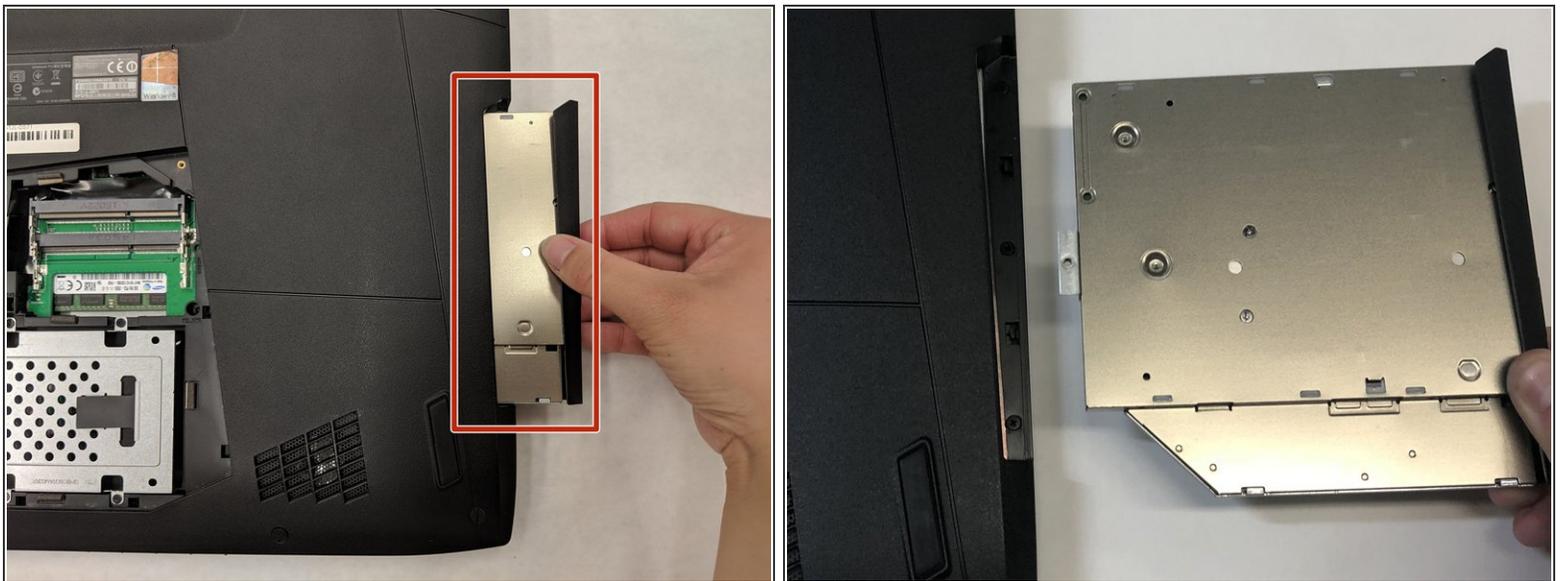

- Pull out the optical drive found on the side of the laptop.

Step 5

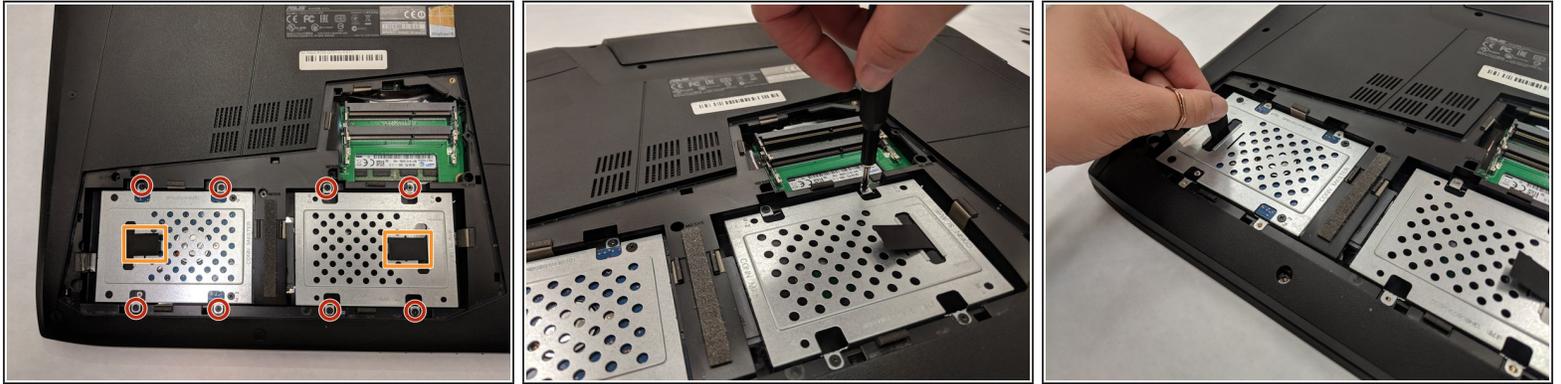


- Remove the screws holding the hard drives in place using a Phillips 1 screwdriver.
- Using the small flaps, remove the hard drives by hand.

Step 6



- Use a pair of tweezers to remove the top four rubber stoppers found on the bottom of the laptop.

Step 7

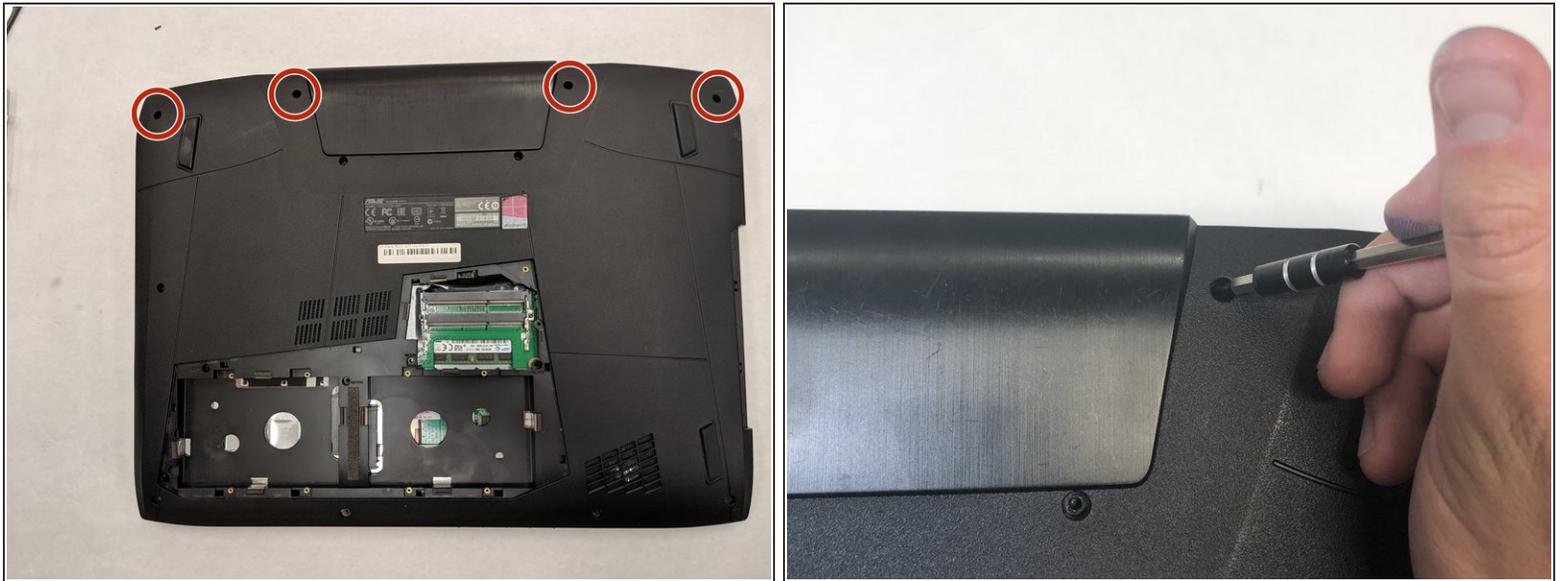

- Use a Phillips 1 Screwdriver to remove the top four 8.5 mm screws.

Step 8



- Use a metal spudger to carefully pry the top back panel off.
- ⚠ While removing the top back panel, be careful not to break the four pin connector located underneath.
- Disconnect the four-pin connector and remove the top back panel from the computer.

Step 9



- Use a Phillips 1 Screwdriver to remove the four 6.8 mm screws underneath the back panel.

Step 10




- Use a Phillips 1 Screwdriver to remove the ten 5.2 mm screws holding the main panel in place.

Step 11




- Use a metal spudger to pry the keyboard from the base of the laptop.
- ⚠ Lift the keyboard carefully so as to not tear or break the four ribbon connectors underneath the keyboard.

Step 12

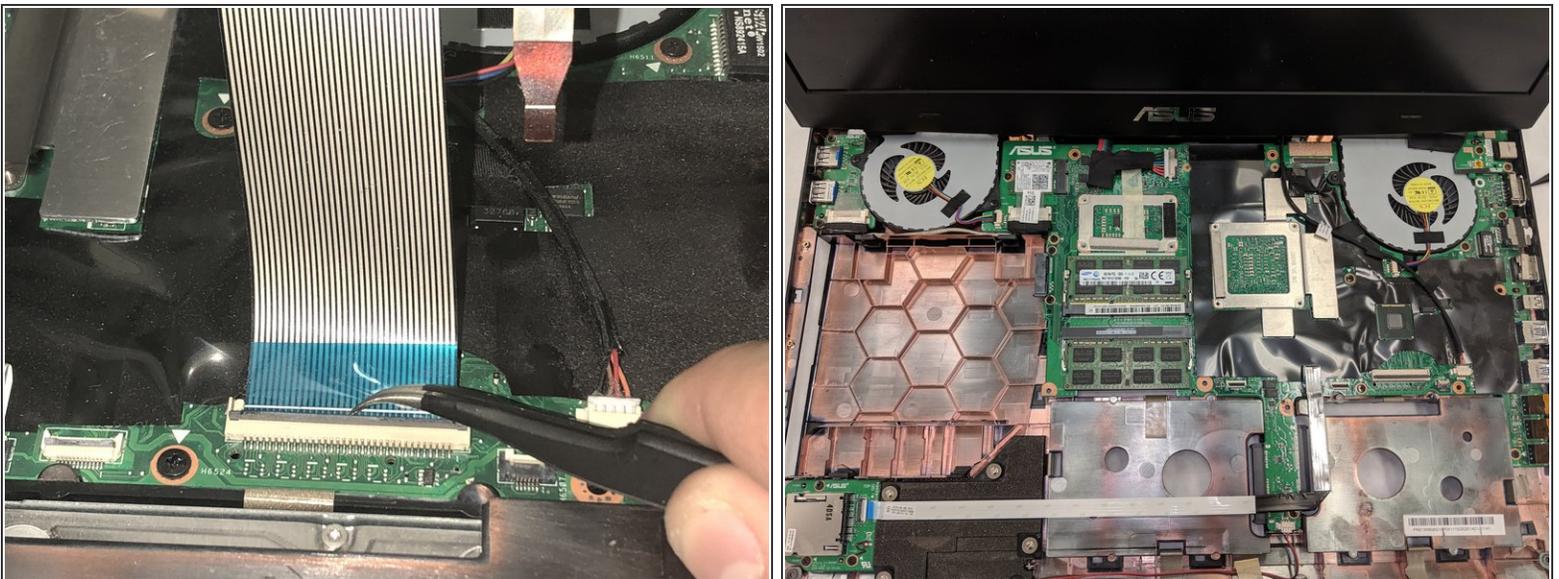

- Use a pair of tweezers to undo each of the four ribbon connectors.
- The keyboard is now completely disconnected from the laptop and you can remove it.

Step 13

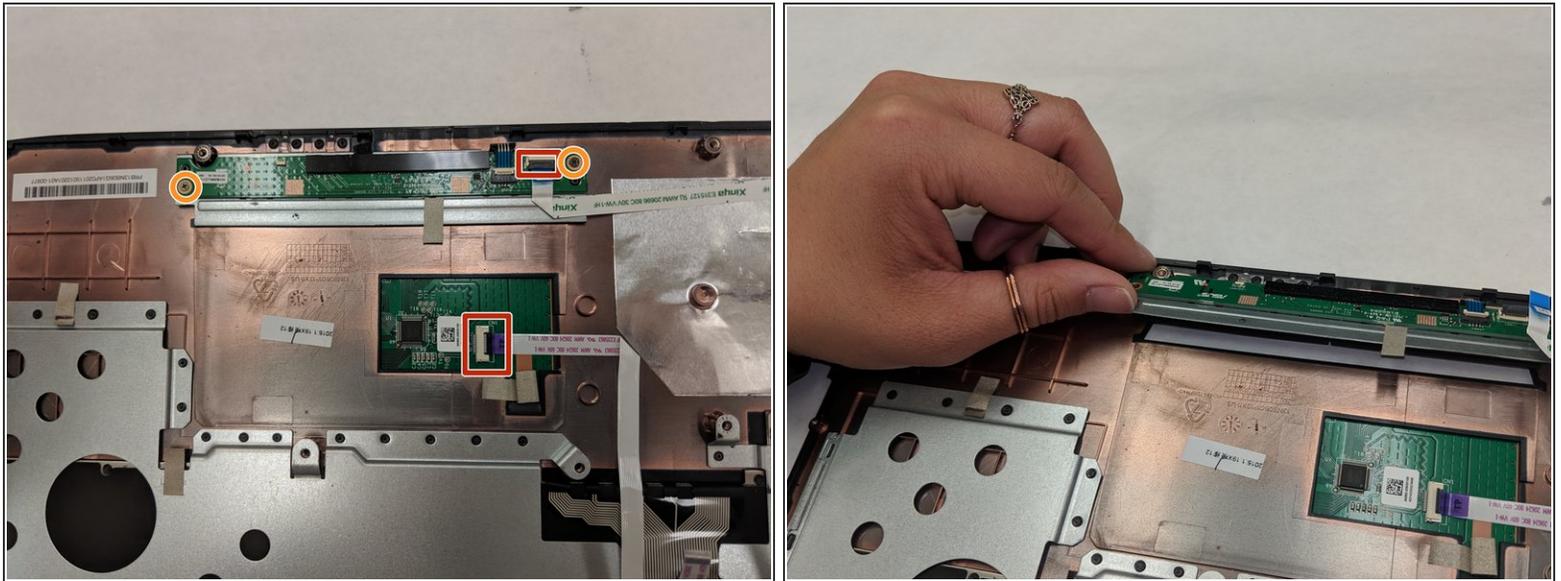

- Use a pair of tweezers to undo each of the two ribbon connectors.
- Use a Phillips 1 Screwdriver to remove the four 6.8 mm screws underneath the back panel.
- The Left and right button is now completely disconnected from the laptop and you can remove it.

To reassemble your device, follow these instructions in reverse order.