



Audiovox Tri-mode CDM-9000 Battery Replacement

Instructions on how to replace the battery for an Audiovox Tri-mode cell phone.

Written By: Summer Sines



INTRODUCTION


This will give step-by-step instruction on how to replace the battery in an Audiovox Tri-mode cell phone.

Step 1 — Replacing the Battery



- Flip your phone over so the screen is facing down.
- About half way down there is a small button with a few grooves. Push this button in an upward fashion. This will release the battery from the back of the cell phone.

Step 2 — Remove Battery

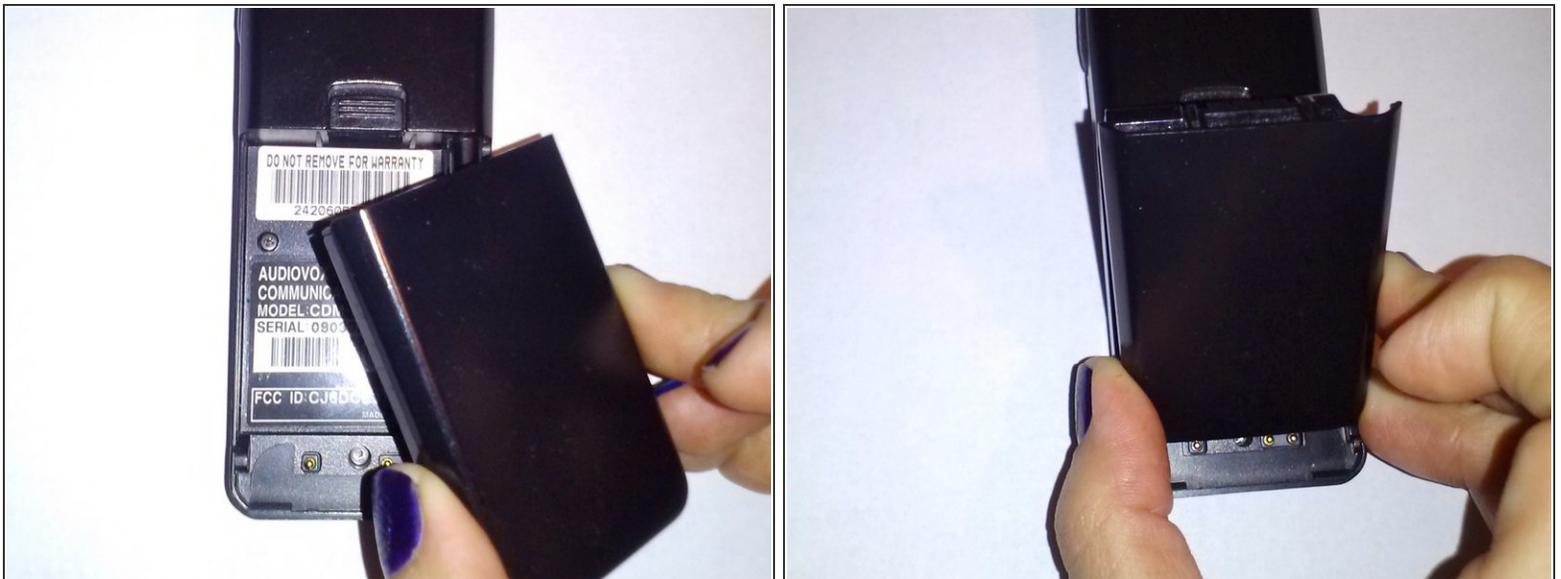

- Once the back piece is released, simply lift the battery up and away from the phone.
- Replace the battery by placing the bottom part of the battery in first and push down. You will hear a loud click sound when the battery is secure.

To reassemble your device, follow these instructions in reverse order.