



Billy Goat Brush Cutter BC2600HHF 2015 Belt Deck Cover Replacement

Remove or replace the belt cover above the main deck.

Written By: Jeff Suovanen



INTRODUCTION

Instructions for removing/replacing the belt cover, located above the blade deck.



TOOLS:

- [3/8" Socket](#) (1)
- [Socket Wrench](#) (1)



PARTS:

- [Billygoat Cover Belt Deck Wa Bc26 W/Label 501602](#) (1)

Step 1 — Belt Deck Cover



- Use a 3/8" socket or wrench to remove the four 21 mm bolts securing the cover to the deck—two at the front, and one on each side.

Step 2



- Lift and remove the belt deck cover.

To reassemble your device, follow these instructions in reverse order.