


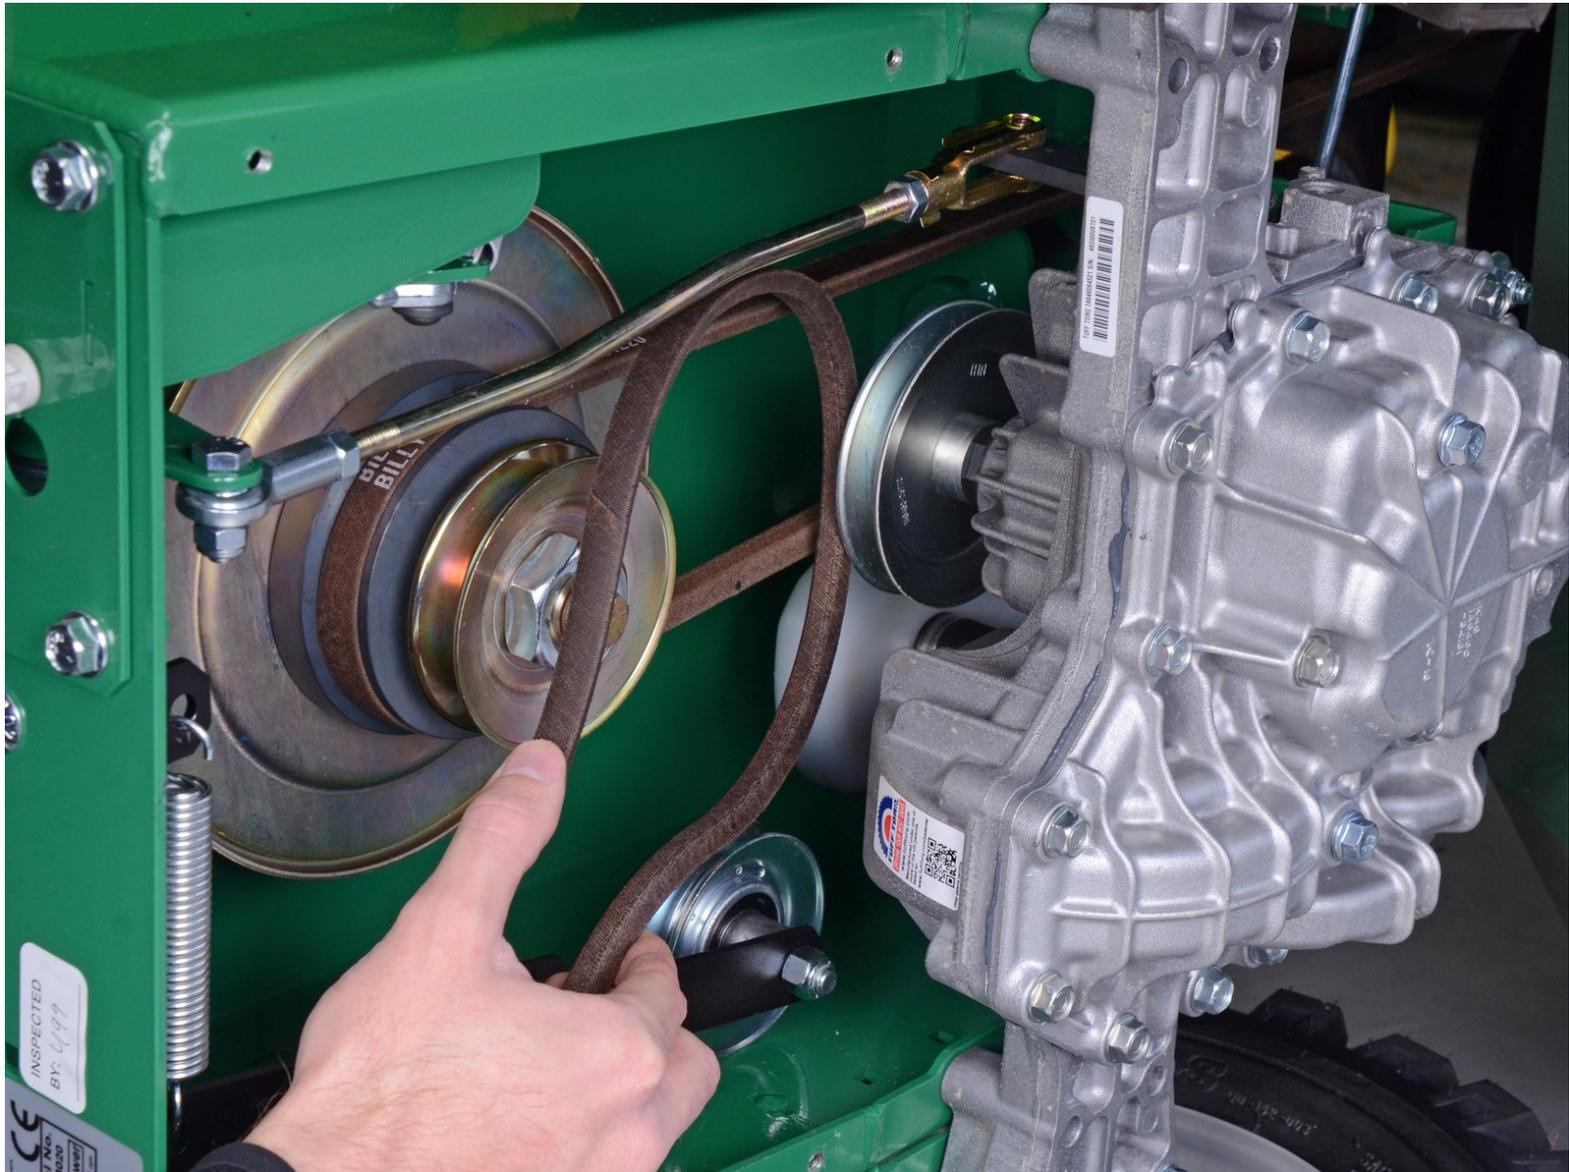

Billy Goat Brush Cutter BC2600HHF 2015 Transaxle Drive Belt Replacement

Remove or replace the smaller of the two belts, the transaxle drive belt (501268).

Written By: Jeff Suovanen



INTRODUCTION

Instructions for removing/replacing the small drive belt (transaxle belt). This belt must also be removed in order to service the larger blade/spindle belt.

TOOLS:

- [1/2" Socket](#) (1)
- [3/8" Socket](#) (1)
- [Socket Wrench](#) (1)

PARTS:

- [Billy Goat BELT HYDRO TRANSAXLE BC26 501268](#) (1)

Step 1 — Spark Plug Disconnection





- Grab the plastic housing at the end of the spark plug wire.
- Pull firmly to disconnect the wire from the spark plug.

Step 2 — Rear Guard






- Use a 1/2" socket or wrench to remove the two 26 mm bolts securing the rear guard to the back end of the brush cutter.

Step 3

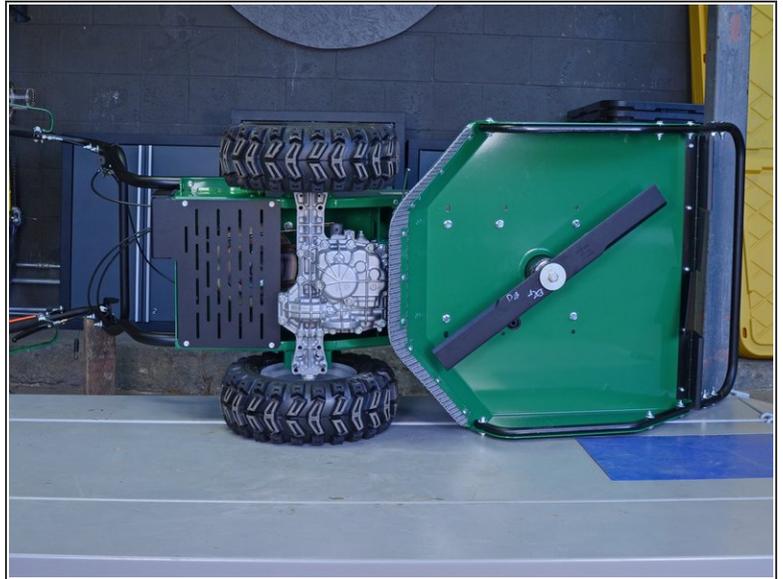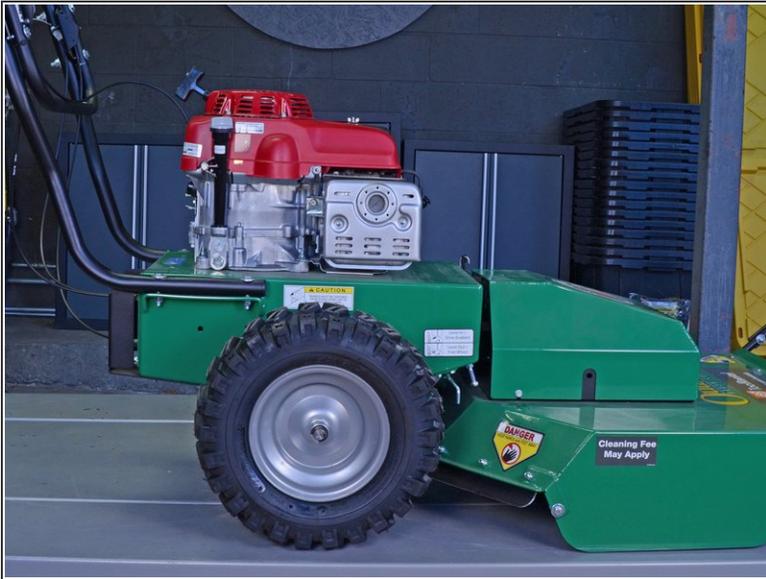


- ⚠ The brush cutter is heavy—get help before attempting to lift it.
- ⚠ If you choose to tip the brush cutter onto its side, first drain the oil and gas.
 - Raise and support the back end of the brush cutter—or tip it carefully onto its side—in order to access the bottom cover.

Step 4

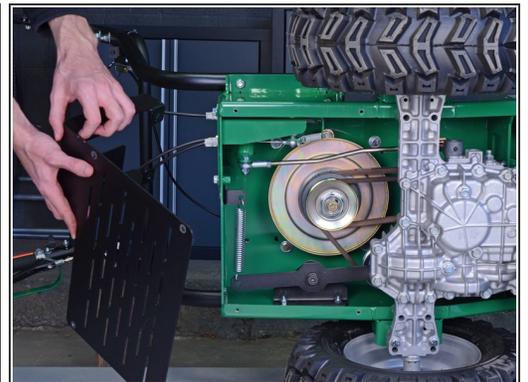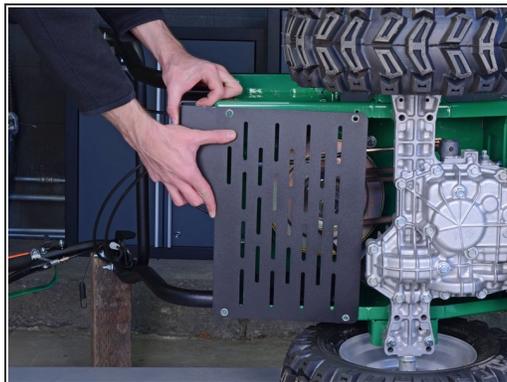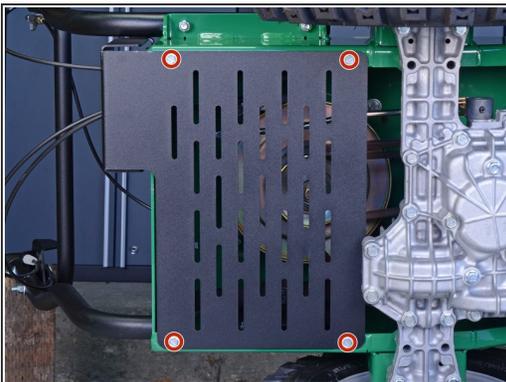

- Use a 3/8" socket or wrench to remove the four 21 mm bolts securing the rear guard.
- Remove the guard.

Step 5 — Transaxle Drive Belt

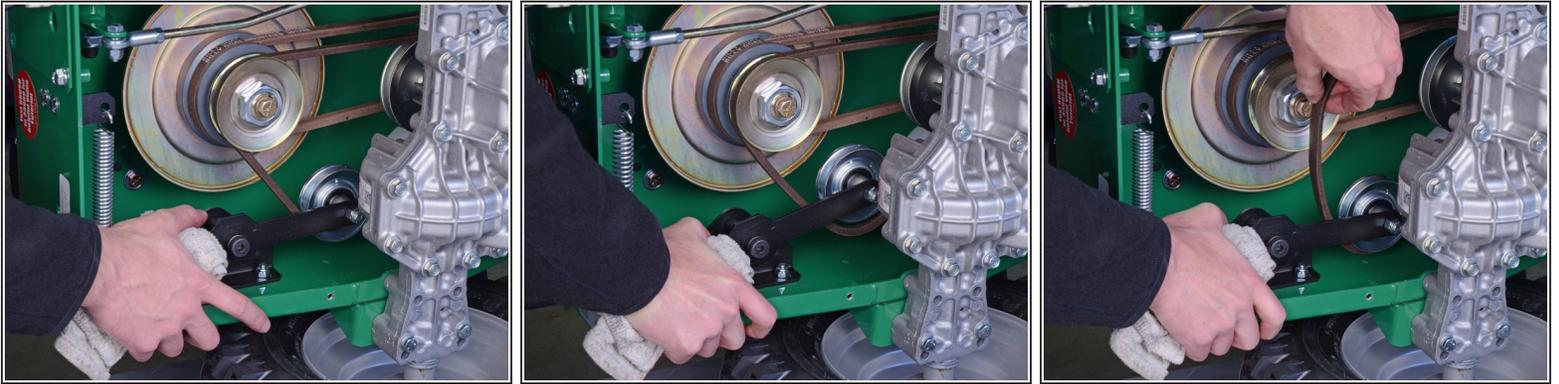

- Relieve the tension on the transaxle drive belt by pressing on the back end of the tensioning arm. (Alternatively, use a pry bar on the front end of the tensioning arm, or remove the tensioning spring.)
- Slip the transaxle drive belt off the drive pulley.

Step 6



- Free the belt by sliding it out between the transaxle pulley and the spindle belt.
- Remove the transaxle drive belt.

To reassemble your device, follow these instructions in reverse order.