



# Black and Decker DustBuster 15.6V Battery Pack Replacement

This guide will allow help you replace the battery pack located inside your DustBuster 15.6 V cordless vacuum.

Written By: Jordon Borges



This document was generated on 2019-09-18 09:23:46 AM (MST).

## INTRODUCTION

Overtime the battery pack located in your vacuum will hold less charge and might not charge at all. This can be remedied by replacing the battery pack.

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)

### PARTS:

- [Battery Pack](#) (1)

## Step 1 — Battery Pack



- Remove the six exterior 2 mm Phillips #0 screws securing the 2 halves of the white shell together.

## Step 2




- Remove nozzle by pressing two blue buttons on the side of the nozzle

### Step 3





- Remove the dustbin by pressing the blue button on the vacuum's handle and lift the bin from the vacuum.

### Step 4

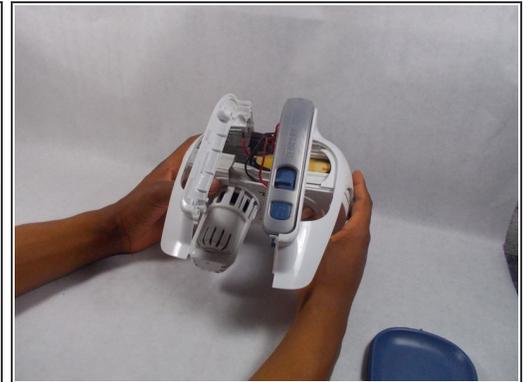

- Gently separate the two halves by pulling them apart, revealing the 14 cell battery pack behind the motor.

## Step 5

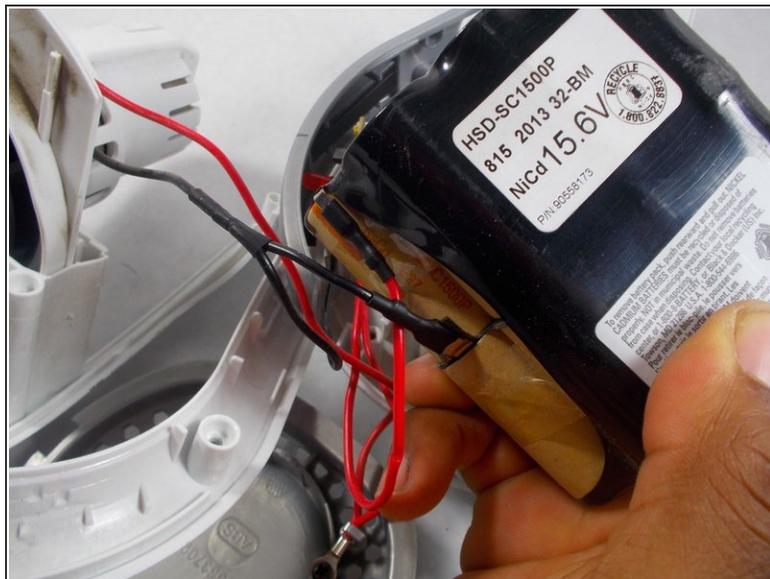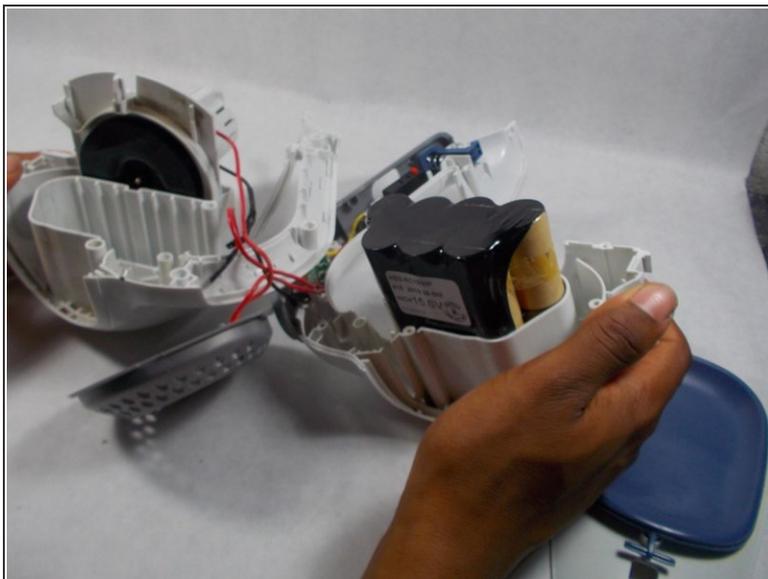

- Removal of the battery pack is a tool-less process, lift the battery pack out of the vacuum gently, notice there are two wires connected to the battery.

## Step 6



- Disconnect the red wire from the battery pack (pull do not twist!) and do the same with the black wire

To reassemble your device, follow these instructions in reverse order.