




# Black and Decker DustBuster 15.6V Power Button Assembly Replacement

Replacing a faulty power button switch.

Written By: luke Gauvin

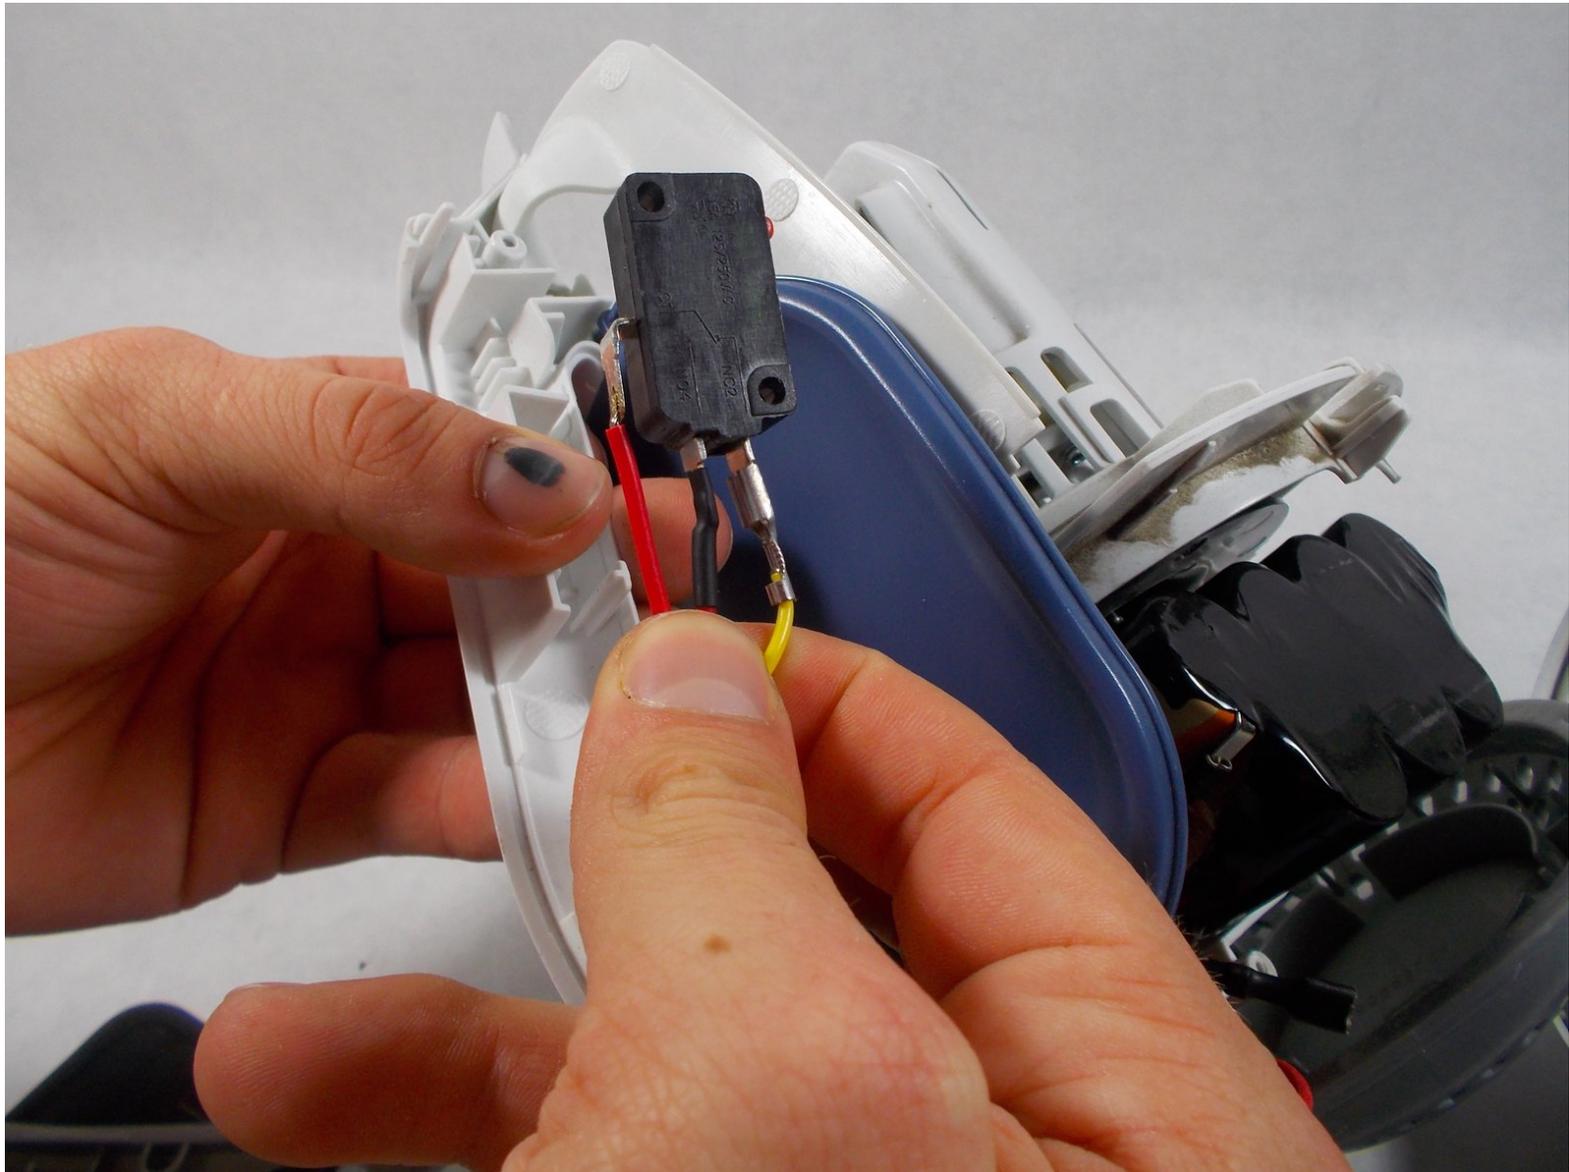

## INTRODUCTION

This guide shows how to disassemble your vacuum enough to remove and replace a faulty power switch. It is a fairly simple process requiring only a long neck Phillips head screwdriver.


### TOOLS:

- [Phillips #0 Screwdriver](#) (1)

### PARTS:


- [Replacement Power Switch](#) (1)

## Step 1 — Power Button Assembly

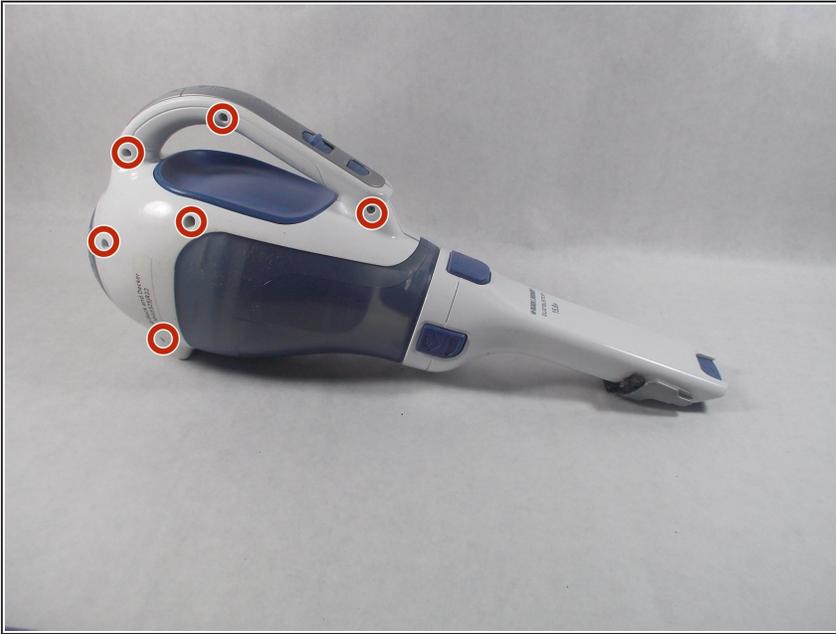

- Remove the six exterior 2mm Phillips#0 screws holding the two halves of the outer shell together.

## Step 2

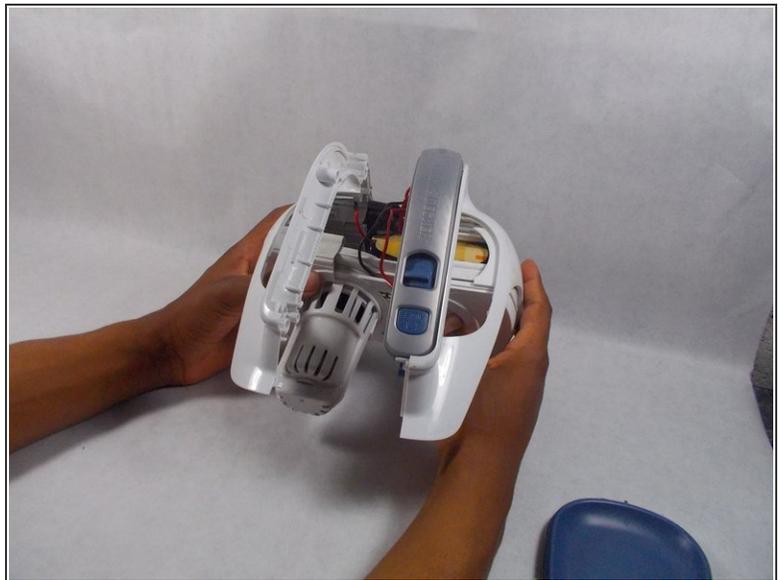


- Separate the two halves by pulling them apart.
- Once the assembly is open locate the switch assembly inside the handle.

### Step 3




- Remove the grey handle by lifting it towards yourself.
- ⚠ Be cognizant of the compressed spring located in this assembly to prevent it from ejecting.

### Step 4

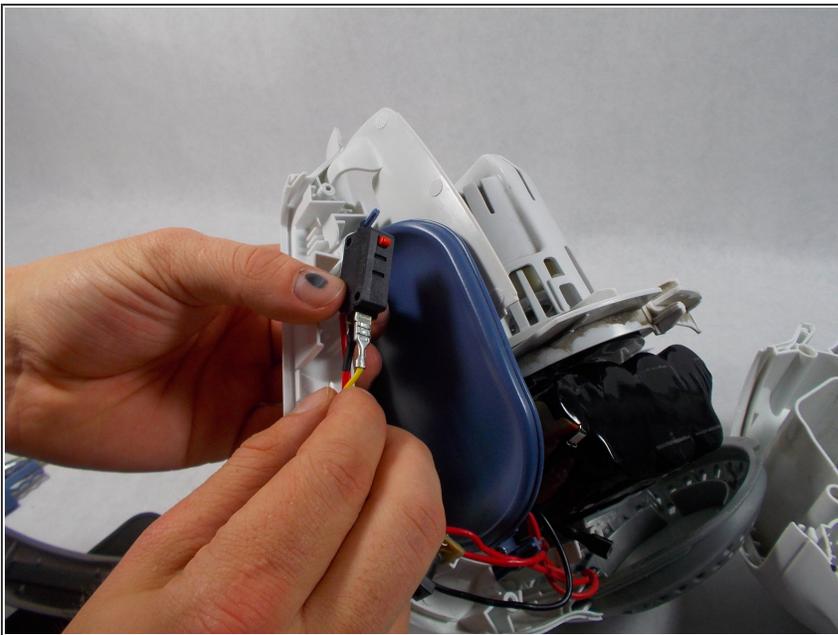

- Un-clip all three wire connectors attached to the assembly.
- ⓘ Note which wire connects to each tab to avoid confusion later.

## Step 5

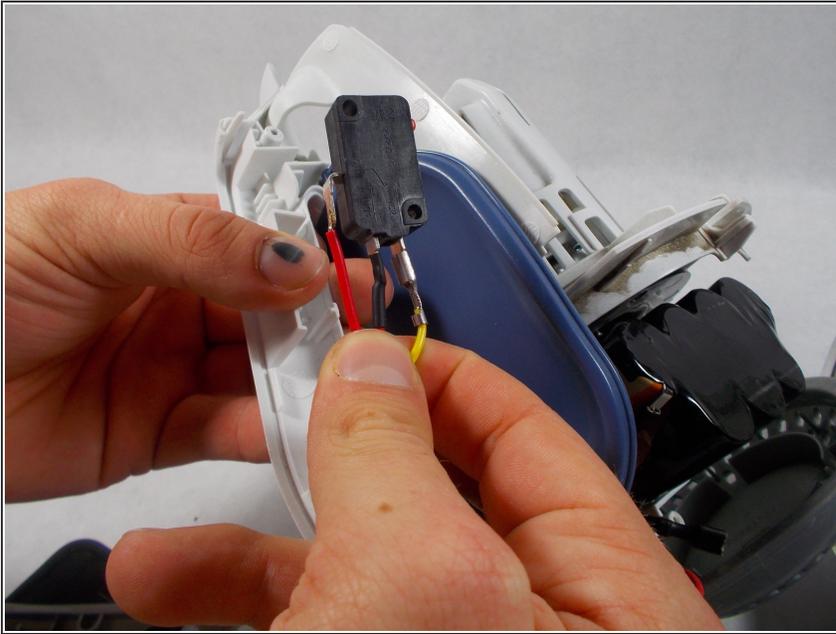

- Connect the new power button assembly to the appropriate wires.
- Slide the new power button assembly into position.

To reassemble your device, follow these instructions in reverse order.